

適用於RV016、RV042、RV042G和RV082 VPN路由器上的Windows 8的備選VPN設定

目標

在路由器上配置VPN時，必須在電腦上配置VPN客戶端軟體才能連線到VPN。Cisco提供QuickVPN，一種終端使用者連線到VPN隧道的軟體。在某些情況下，您無法使用或正確運行QuickVPN，因此您需要一種備用連線方法。

本文檔的目的是解釋如何在Windows 8上為RV系列VPN路由器設定備用VPN。

適用裝置

- RV016
- RV042
- RV042G
- RV082

軟體版本

- v4.2.2.08

Windows 8版VPN

步驟 1. 登入到電腦，然後選擇「開始」>「控制面板」>「網路和Internet」>「網路和共用中心」。將打開「網路和共用中心」頁面：

View your basic network information and set up connections



[See full map](#)

View your active networks

[Connect or disconnect](#)



Access type: Internet
Connections: Wireless Network Connection (Secure)

Change your networking settings



[Set up a new connection or network](#)

Set up a wireless, broadband, dial-up, ad hoc, or VPN connection; or set up a router or access point.



[Connect to a network](#)

Connect or reconnect to a wireless, wired, dial-up, or VPN network connection.



[Choose homegroup and sharing options](#)

Access files and printers located on other network computers, or change sharing settings.



[Troubleshoot problems](#)

Diagnose and repair network problems, or get troubleshooting information.

View your basic network information and set up connections



View your active networks

[Connect or disconnect](#)



Access type: Internet
Connections: Wireless Network Connection (Secure)

Change your networking settings



[Set up a new connection or network](#)

Set up a wireless, broadband, dial-up, ad hoc, or VPN connection; or set up a router or access point.



[Connect to a network](#)

Connect or reconnect to a wireless, wired, dial-up, or VPN network connection.



[Choose homegroup and sharing options](#)

Access files and printers located on other network computers, or change sharing settings.



[Troubleshoot problems](#)

Diagnose and repair network problems, or get troubleshooting information.

步驟 2. 按一下 [Set up a new connection or network](#) 以建立新的連線或網路。出現 [Set Up a Connection or Network](#) 視窗。



Set Up a Connection or Network

Choose a connection option

-  **Connect to the Internet**
Set up a wireless, broadband, or dial-up connection to the Internet.
-  **Set up a new network**
Configure a new router or access point.
-  **Manually connect to a wireless network**
Connect to a hidden network or create a new wireless profile.
-  **Connect to a workplace**
Set up a dial-up or VPN connection to your workplace.
-  **Set up a dial-up connection**
Connect to the Internet using a dial-up connection.

Next

Cancel



Set Up a Connection or Network

Choose a connection option


-  **Connect to the Internet**
Set up a wireless, broadband, or dial-up connection to the Internet.
-  **Set up a new network**
Configure a new router or access point.
-  **Manually connect to a wireless network**
Connect to a hidden network or create a new wireless profile.
-  **Connect to a workplace**
Set up a dial-up or VPN connection to your workplace.
-  **Set up a dial-up connection**
Connect to the Internet using a dial-up connection.

Next

Cancel

步驟 3.按一下Connect to a workplace以設定VPN連線。

步驟 4.按一下下一步繼續。出現Connect to a Workplace視窗。

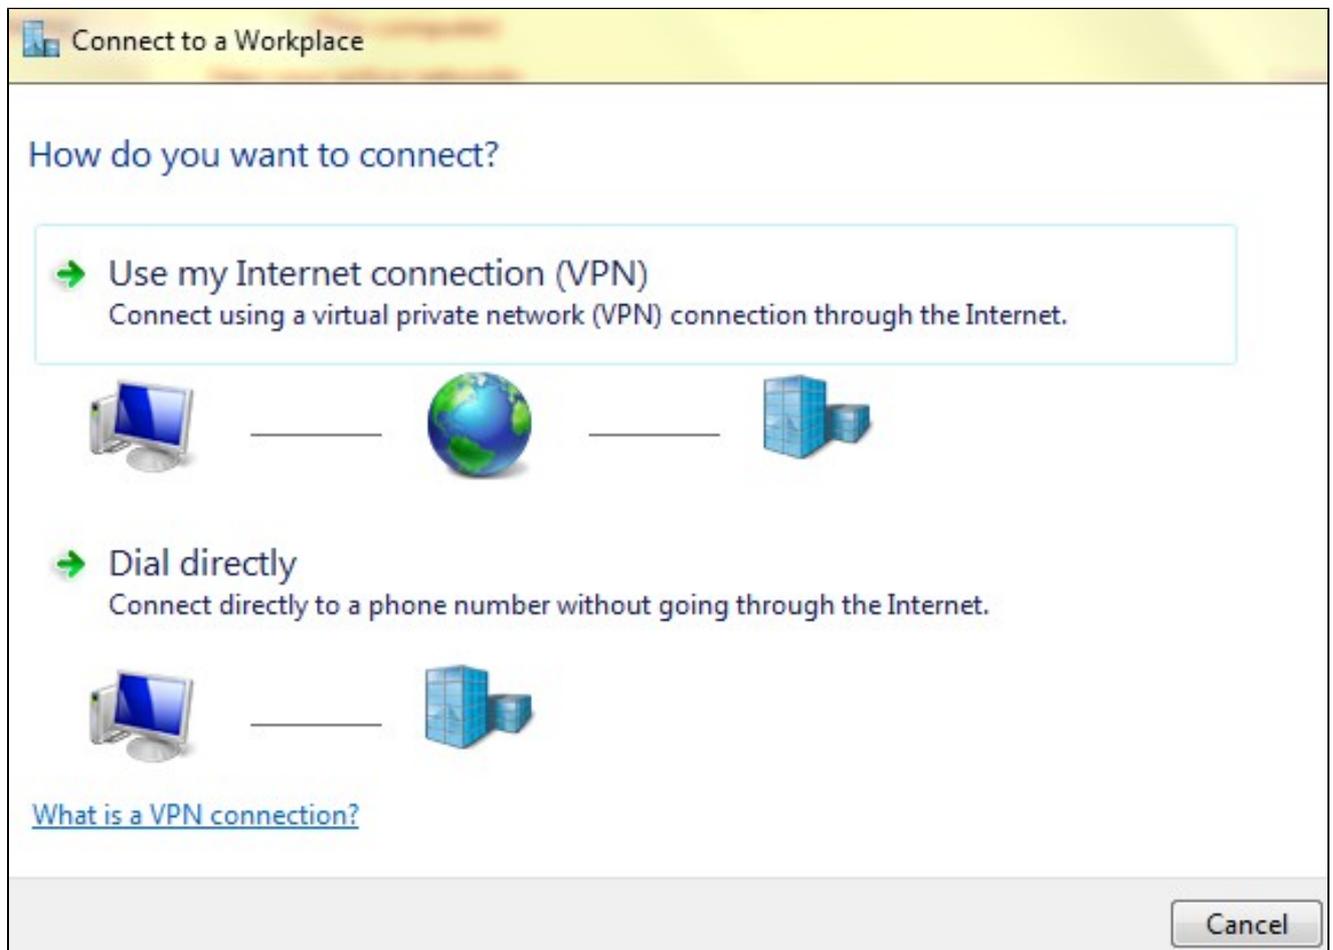

How do you want to connect?

- Use my Internet connection (VPN)
Connect using a virtual private network (VPN) connection through the Internet.




- Dial directly
Connect directly to a phone number without going through the Internet.



[What is a VPN connection?](#)

Cancel

步驟 5. 按一下 Use my Internet connection (VPN) 將您的 Internet 連線用於 VPN。

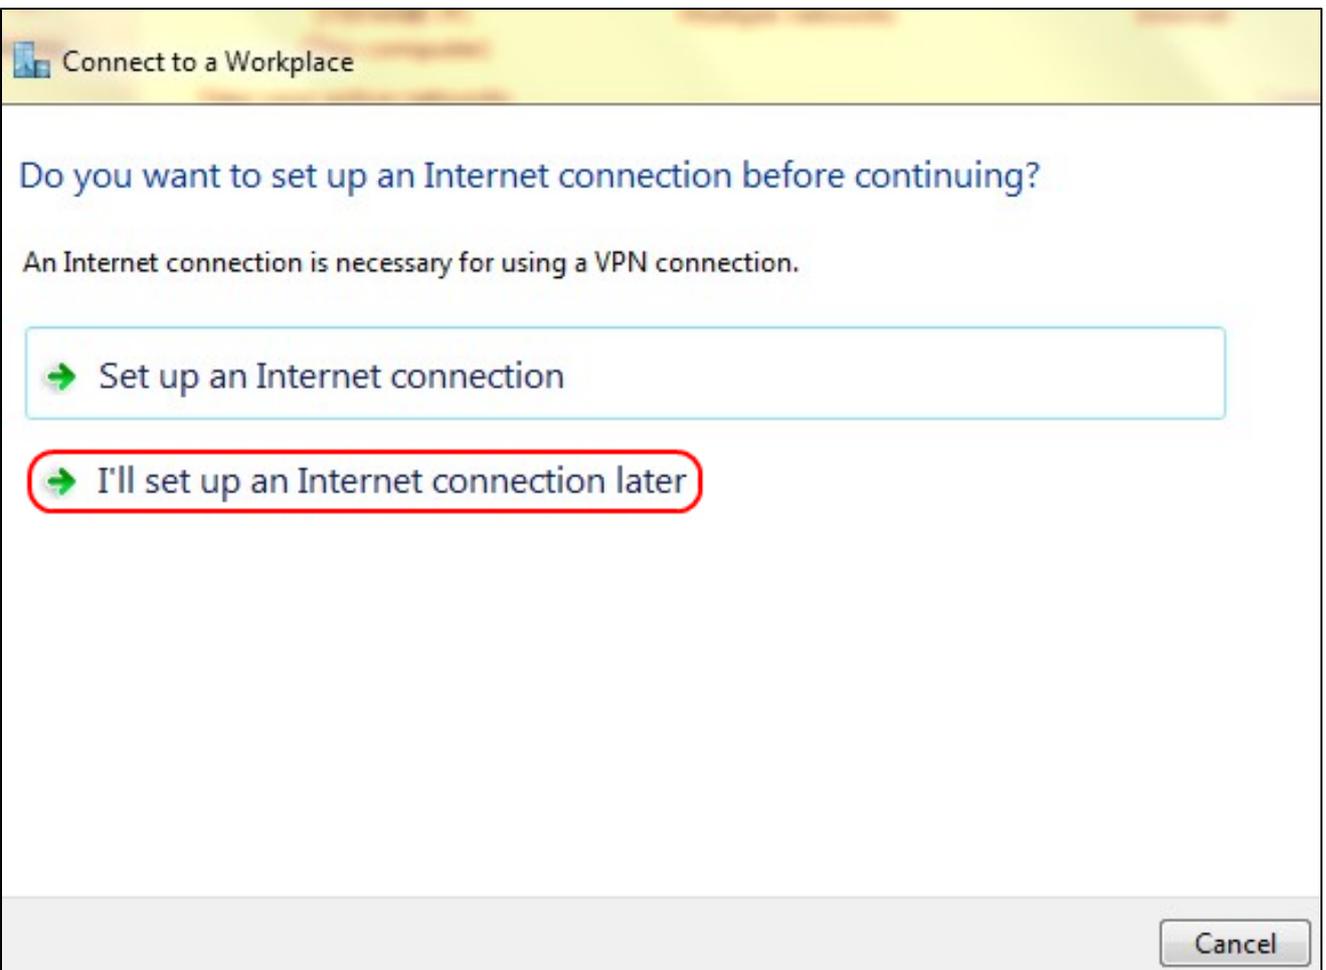

步驟 6.按一下 I'll set up an Internet connection later , 稍後配置網際網路連線。

← Connect to a Workplace

Type the Internet address to connect to

Your network administrator can give you this address.

Internet address: 192.168.1.1

Destination name: VPN Connection 2

Use a smart card

Remember my credentials

Allow other people to use this connection
This option allows anyone with access to this computer to use this connection.

Create Cancel

步驟 7. 在Internet Address欄位中輸入VPN路由器的IP地址。

步驟 8. 在Destination name欄位中輸入用於標識VPN連線的名稱。

步驟 9. 按一下「Create」。



步驟 10. 按一下工作列上的「網路」圖示。這顯示可用於連線到電腦的所有網路（無線、VPN和撥號）：

Connections

Network 6

Limited



VPN Connection 2



Connect

VPN Connection 3



Wi-Fi

Wi-Fi Secure

Connected



Wi-Fi Secure



步驟 11. 按一下Connect以連線特定連線。

Network Authentication



user_2



Domain:

OK

Cancel

第12步在Username欄位中輸入使用者名稱。這是為RV0xx系列VPN路由器上的VPN隧道配置的相同使用者名稱。有關如何為VPN隧道配置使用者的詳細資訊，請參閱管理RV016、RV042、RV042G和RV082 VPN路由器上的VPN使用者。

步驟 13.在「密碼」欄位中輸入密碼。此密碼與為RV0xx系列VPN路由器上的VPN隧道配置的密碼相同。有關如何為VPN隧道配置使用者的詳細資訊，請參閱管理RV016、RV042、RV042G和RV082 VPN路由器上的VPN使用者。

步驟 14.按一下「OK」（確定）。

關於此翻譯

思科已使用電腦和人工技術翻譯本文件，讓全世界的使用者能夠以自己的語言理解支援內容。請注意，即使是最佳機器翻譯，也不如專業譯者翻譯的內容準確。Cisco Systems, Inc. 對這些翻譯的準確度概不負責，並建議一律查看原始英文文件（提供連結）。