設定交換器上介面的連線埠虛擬區域網路 (VLAN)成員身分

目標

虛擬區域網路(VLAN)允許您以邏輯方式將區域網路(LAN)劃分為不同的廣播網域。在敏感資料 可能在網路上廣播的情況下,可以建立VLAN,通過將廣播指定到特定VLAN來增強安全性。 只有屬於VLAN的使用者才能訪問和操作該VLAN上的資料。VLAN還可用於通過將廣播和組播 傳送到不必要目的地的需要降低來提高效能。

VLAN允許未連線到同一台交換機的一組主機像在同一廣播域中一樣進行通訊。具有VLAN流 量的介面需要將VLAN分配給該介面,否則資料包可能會被丟棄。當為介面啟用通用屬性註冊 通訊協定(GARP)VLAN註冊通訊協定(GVRP)時,就可以動態分配VLAN,無需手動分配。

本文說明如何將連線埠指定給交換器中的一個或多個VLAN。

適用裝置

- Sx250系列
- Sx350系列
- SG350X系列
- Sx550X系列

軟體版本

• 2.2.5.68

配置介面的VLAN成員資格

步驟1.登入到交換機的基於Web的實用程式,然後選擇VLAN管理>埠VLAN成員資格。

 VLAN Management
VLAN Settings
Interface Settings
Port to VLAN
Port VLAN Membership
Private VLAN Settings
GVRP Settings
VLAN Groups

步驟2.選擇介面型別(埠或LAG),然後按一下Go。以下欄位將顯示選定型別的所有介面:

Port VLAN Membership

F - Forbidden member

T - Tagged member M - Multicast TV VLAN In - Internally used VLAN U - Untagged member

G - Guest VLAN

I - Inactive VLAN Pp - Private VLAN

Port VLAN Membership Table

Filte	er: Interface	<i>Type</i> equ	als to Port of Unit 2 🛊 Go		
	Interface	Mode	Administrative VLANs	Operational VLANs	LAG
	GE1	Access	20U, 40M	20U, 40U	
\circ	GE2	Access	1M	1U	
	GE3	Access	1U	1U	
0	GE4	Access	1U	1U	
	GE5	Access	1U	1U	
\circ	GE6	Access	1U	1U	
	GE7	Access	1U	1U	
\circ	GE8	Access	1U	1U	
	GE9	Access	1U	1U	

• Interface — 埠或LAG ID。

- 模式 在Interface Settings頁面中選擇的介面VLAN模式。
- 管理VLAN 顯示介面可能所屬的所有VLAN的下拉選單。
- 可操作的VLAN 顯示介面當前所屬的所有VLAN的下拉選單。
- LAG 如果選定的介面是Port,則顯示它所屬的LAG。

附註:在本示例中,選擇了裝置2的埠。

步驟3.按一下要配置的埠的單選按鈕。

\bigcirc	GE28	Access	1U	1	U
0	GE29	Access	1U	1	U
\odot	GE30	Access	1U	11	U
	GE31	Access	1U	1	U
\circ	GE32	Access	1U	1	U
	GE33	Access	1U	1	U
\circ	GE34	Access	1U	1	U

附註:在此示例中,選擇了GE30。

步驟4.向下滾動到頁面底部,然後點選Join VLAN按鈕。

0	GE28	Access	1U	1U
	GE29	Access	1U	1U
•	GE30	Access	10	1U
	GE31	Access	1U	1U
\circ	GE32	Access	1U	1U
	GE33	Access	1U	1U
\circ	GE34	Access	1U	1U
	GE35	Access	1U	1U
\circ	GE36	Access	1U	1U
	GE37	Access	1U	1U
\circ	GE38	Access	1U	1U
	GE39	Access	1U	1U
\circ	GE40	Access	1U	1U
	GE41	Access	1U	1U
\circ	GE42	Access	1U	1U
	GE43	Access	1U	1U
\circ	GE44	Access	1U	1U
	GE45	Access	1U	1U
\circ	GE46	Access	1U	1U
	GE47	Access	1U	1U
\circ	GE48	Access	1U	1U
	XG1	Trunk	1U, 2-19I, 20T, 21-29I, 30T, 31-39I, 40T, 41-4094I	1U, 20T, 30T, 40T
0	XG2	Access	1U	1U
Joi	n VLAN	Detail	s	

步驟5.確保在Interface區域選擇了正確的Port或LAG。

Interface:	O Unit 2 \$ Port GE30 \$ ○ LAG 1 \$
Current VLAN Mode:	Access

附註:當前VLAN模式顯示在介面設定頁面中選擇的埠VLAN模式。在本例中,模式設定為 Access。要詳細瞭解如何配置此功能,請按一下<u>此處</u>獲取說明。

步驟6.從下拉選單中選擇接入VLAN ID。當連線埠處於存取模式時,它將是存取VLAN的成員 。預設值為1。

Access Mode Membership (Active)

These are the VLAN membersh	i None	the
Access VLAN ID:	√ 20	
	30	

附註:在本範例中,選擇VLAN 20。

步驟7.從下拉選單中選擇一個組播TV VLAN。當連線埠處於存取模式時,它將是多點傳送TV VLAN的成員。預設值為None。



附註:此選項在Sx250交換機上不可用。

以下設定適用於非活動介面VLAN模式。這些效果將會儲存,但只有在VLAN介面設定頁面中 更改介面VLAN模式後,這些效果才會生效。要詳細瞭解如何配置此功能,請按一下<u>此處</u>獲取 說明。

步驟8.從下拉選單中選擇本徵VLAN ID。當連線埠處於主幹模式時,它將是本徵VLAN的成員。預設值為 1。

Trunk Mode Membership

Native	VL	AN	ID:



步驟9.當連線埠處於主幹模式時,它將是已標籤VLAN的成員。從以下選項中選擇:

- •所有VLAN 當連線埠處於主幹模式時,它將是所有VLAN的成員。
- 使用者定義 當連線埠處於主幹模式時,它將是此欄位中輸入的VLAN的成員。

Trunk Mode Membership

Native VLAN ID:	1 🗘
Tagged VLANs:	All VLANs
	 User Defined 30-40

附註:在本例中,選擇使用者定義並使用VLAN 30-40。

步驟10.在Untagged VLANs欄位中輸入VLAN ID。當連線埠處於一般模式時,它將是此

VLAN的無標籤成員。

General Mode Membership

Untagged VLANs:

(VLAN Range; Example: 1,3,5-10)

附註:本範例中使用的是VLAN 1。

步驟11.在*Tagged VLANs*欄位中輸入VLAN ID。當連線埠處於一般模式時,它將是此VLAN的 已標籤成員。

Tagged VLANs:

30	

1

附註:本範例中使用的是VLAN 30。

步驟12.在Forbidden VLANs欄位中輸入VLAN ID。當埠處於常規模式時,即使從GVRP註冊 ,介面也不允許加入VLAN。當連線埠不是任何其他VLAN的成員時,在連線埠上啟用該選項

,會讓連線埠成為內部VLAN 4095的一部分,而內部VLAN 4095是保留VLAN ID(VID)。

General Mode Membership

Untagged VLANs:	1	(VLAN Range; Example: 1,3,5-10)
Tagged VLANs:	30	(VLAN Range; Example: 1,3,5-10)
Forbidden VLANs:	40	(VLAN Range; Example: 1,3,5-10)

附註:本範例中使用的是VLAN 40。

步驟13.從General PVID下拉選單中選擇VLAN ID。當連線埠處於一般模式時,它將是這些 VLAN的成員。預設值為 1。

General PVID:	√ 1
Customer Mode Membership	20 30
	40

步驟14.(可選)從Customer VLAN ID下拉選單中選擇VLAN ID。當連線埠處於客戶模式時 ,它將是此VLAN的成員。

Customer Mode Membership

Customer VLAN ID:

Customer Multicast VLANs:

~	None 1	
	20	
	30	ļ

步驟15。(可選)在*Customer Multicast VLANs欄位中輸入VLAN ID*。當連線埠處於客戶模式 時,它將是此多點傳送TV VLAN的成員。

附註:此選項在Sx250交換機上不可用。

Interface:	• Unit 2 Port GE30 LAG 1 ↓							
Current VLAN Mode:	Access							
Access Mode Membership (Active)								
These are the VLAN membership settings for the current active VLAN interface mode.								
Access VLAN ID:	1 🗘							
Multicast TV VLAN:	None \$							
The following settings are for the inactive interface VLAN modes, these effects will be not take effect until the interface VLAN mode is changed in the VLAN Interface Setting								
Trunk Mode Membership								
Native VLAN ID:	1 🛊							
Tagged VLANs:								
	• User Defined 50-60 (VLAN							
General Mode Membership								
Untagged VLANs:	1 (VLAN Range; Example: 1							
Tagged VLANs:	30 (VLAN Range; Example: 1							
Forbidden VLANs:	40 (VLAN Range; Example: 1							
General PVID:	1 🛊							
Customer Mode Membership	>							
Customer VLAN ID:	20 🛟							
Customer Multicast VLANs:	(VLAN Range; Example: 1							
Apply Close								

附註:在本示例中,未輸入VLAN ID。

步驟16.按一下Apply,然後按一下Close。

步驟17。(可選)按一下Save將設定儲存到啟動配置檔案中。

4	18-F	Port Gi	gabit	PoE Stackable Ma	naged Sw	Save	cisco			
Port VLAN Membership										
	F - Fo M - M	ulticast TV	mber /LAN	T - Tagged member In - Internally used VLAN	U - Untagged me G - Guest VLAN	mber I - Inactiv Pp - Priv	ve VLAN ate VLAN			
	Port	t VLAN Mer	nbership	Table						
	Filte	Filter: Interface Type equals to Port of Unit 2 \$ Go								
		Interface	Mode	Administrative VLANs		Operational VLANs	LAG			
	0	GE1	Access	20U, 40M		20U, 40U				
	0	GE2	Access	1M		1U				
	0	GE3	Access	1U		1U				
	0	GE4	Access	1U		1U				
	0	GE5	Access	1U		1U				
	0	GE6	Access	1U		1U				
	0	GE7	Access	1U		1U				
	0	GE8	Access	1U		1U				
		GE9	Access	1U		1U				
	0	GE10	Access	1U		1U				
		GE11	Access	1U		1U				
	\odot	GE12	Access	1U		1U				
		GE13	Access	1U		1U				
	\odot	GE14	Access	1U		1U				
		GE15	Access	1U		1U				
	\odot	GE16	Access	1U		1U				
		GE17	Access	1U		1U				
	\circ	GE18	Access	1U		1U				
		GE19	Access	1U		1U				
	0	GE20	Access	10		1U				
		GE21	Access	1U		1U				
	0	GE22	Access	1U		1U				
		GE23	Access	10		1U				
	0	GE24	Access	10		10				
		GE25	Access	10		10				
		GE26	Access	10		10				
		GE27	Access	10		10				
		GE28	Access	10		10				
		GE29	Access	10		10				
		GE30	Access	200		200				
		GE31	Access	10		10				
		GE32	Access	10		10				