SG350X、Sx550X:無法更改交換機上的XG埠設 定

識別日期

2016年3月30日

解決日期

不適用

受影響的產品

型號	韌體版 本	修復位 置
SG350X、Sx550X	2.2.0.x	2.3.0.13 0

問題描述

不能通過交換機的基於Web的實用程式將XG埠設定更改為同時禁用協商和設定速度。

解析

將交換器的韌體升級為最新版本。有關說明,請按一下此處。

因應措施

如果由於某種原因不想升級交換機的韌體,可以執行以下解決方法:

步驟1.登入到交換機的基於Web的實用程式。預設使用者名稱和密碼為cisco/cisco。

附註:如果您已更改密碼或建立新帳戶,請輸入您的新憑據。

ahaha	Switch						
cisco	Cuntom	Application:	Switch Management				
		Username:	cisco				
		Password:					
		Language:	English				
			Log In Secure Browsing (HTTPS)				
			Log In Secure Browsing (HTTPS)				

步驟2.選擇Port Management > Port Settings。



步驟3.在「連線埠設定表」中,按一下與要設定的連線埠對應的單選按鈕,然後按一下「 Edit」。

Port Settings Table									
Filter: Interface Type equals to Port of Unit 1 \$ Go									
	Entry No.	Port	Description	Port Type	Operational Status	Port Speed	Duplex Mode	LAG	Protection State
\bigcirc	1	XG1		10G-Copper	Down				Unprotected
$\ \boxed{}$	2	XG2		10G-Copper	Up	10G	Full		Unprotected
$\overline{\bigcirc}$	3	XG3		10G-Copper	Up	10G	Full		Unprotected
\bigcirc	4	XG4		10G-Copper	Down				Unprotected
\bigcirc	5	XG5		10G-Copper	Down				Unprotected
\bigcirc	6	XG6		10G-Copper	Down				Unprotected
\bigcirc	7	XG7		10G-Copper	Down				Unprotected
\bigcirc	8	XG8		10G-Copper	Down				Unprotected
\bigcirc	9	XG9		10G-FiberOptics	Down				Unprotected
\bigcirc	10	XG10		10G-FiberOptics	Down				Unprotected
\bigcirc	11	XG11		10G-FiberOptics	Down				Unprotected
\bigcirc	12	XG12		10G-FiberOptics	Down				Unprotected
\bigcirc	13	XG13		10G-FiberOptics	Down				Unprotected
\bigcirc	14	XG14		10G-FiberOptics	Down				Unprotected
\bigcirc	15	XG15		10G-FiberOptics	Down				Unprotected
\bigcirc	16	XG16		10G-FiberOptics	Down				Unprotected
\bigcirc	17	OOB		1000M-Copper	Up	1000M	Full	N/A	N/A
	Copy Sett	ings	Ed	it					

附註:在此示例中,選擇了XG2。

步驟4.取消選中Auto Negotiation Enable覈取方塊以禁用自動協商,然後按一下Apply。

Auto Negotiation:	Enable	Operational Auto Negotiation:	Enabled
Administrative Port Speed:	 100M 1000M 10G 	Operational Port Speed:	10G
Auto Advertisement:	 ✓ Max Capability □ 1000 Full □ 1000 Full □ 10000 Full 	Operational Advertisement:	Max Capability
Preference Mode:	 Slave Master 		
Neighbor Advertisement:	100 Full 1000 Full 10000 Full		
Flow Control:	 Enable Disable Auto Negotiation 		
MDI/MDIX:	MDIX MDI • Auto	Operational MDI/MDIX:	MDIX
Protected Port:	Enable		
		Member in LAG:	
Apply Close			

步驟5.從Administrative Port Speed區域按一下埠速度。

Operational Auto Negotiation: Operational Port Speed:

附註:在此範例中選擇1000M。

步驟6.按一下 Apply ,	然後按一下 Close 。	
Auto Negotiation:	Enable	Operational Auto Negotiation:
Administrative Port Speed:	 100M 1000M 10G 	Operational Port Speed:
Auto Advertisement:	 Max Capability 1000 Full 1000 Full 10000 Full 	Operational Advertisement: Unknown
Preference Mode:	Slave Master	
Neighbor Advertisement:	Unknown	
Flow Control:	 Enable Disable Auto Negotiation 	
MDI/MDIX:	MDIX MDI • Auto	Operational MDI/MDIX:
Protected Port:	Enable	
		Member in LAG:
Apply Close		

步驟7。(可選)按一下Save按鈕將設定儲存到啟動配置檔案中。

				(😵 Save	cisco La	anguage:	English	0		
- 81	8T 16-Port 10G Stackable Managed Switch										
Por	Port Settings										
Jun	nbo Frames:	🗌 Ena	able								
Jun	nbo frames c	configurat	tion changes w	ill take effect after s	aving the configuratio	n and reb	poting the	switch.			
	Apply Cancel										
Por	t Settings T	able									
Filte	er: Interface	<i>Type</i> eq	uals to Port	of Unit 1 🛊 🛛 Go							
	Entry No.	Port	Description	Port Type	Operational Status	Port	Duplex	LAG	Protection		
						Speed	Mode		State		
\bigcirc	1	XG1		10G-Copper	Down				Unprotected		
\bigcirc	2	XG2		10G-Copper	Up	1000M	Full		Unprotected		
\bigcirc	3	XG3		10G-Copper	Up	10G	Full		Unprotected		
\bigcirc	4	XG4		10G-Copper	Down				Unprotected		

現在,您應該已經成功禁用了自動交涉,並通過交換機的基於Web的實用程式更改了埠速度設 定。