Sx500系列堆叠式交換機上的風暴控制配置

目標

當資料包泛洪LAN時,就會發生流量風暴,造成大量流量並降低網路效能。收到廣播、多點傳 送或未知的單點傳送訊框時,系統會將其複製並將副本傳送到多個或所有輸出連線埠。這樣一 來,一個資料包就會變成多個資料包,從而可能導致流量風暴。

流量風暴控制使用配置的閾值檢查傳入流量級別,達到此閾值後,埠將丟棄流量。連線埠會遭 到封鎖,直到流量層級降至閾值層級以下。之後,它再次正常轉發。本文旨在說明在Sx500系 列堆疊式交換機上配置風暴控制的步驟。

適用裝置

·Sx500系列堆疊式交換器

軟體版本

1

·v1.2.7.76

風暴控制配置

步驟1.登入到Web配置實用程式並選擇Security > Storm Control。Storm Control頁面隨即開啟

Storm Control Table								
Filter: Interface Type equals to Port of Unit 1/2 Go								
	Entry No.	Port	Storm Control	Storm Control Rate Threshold (Kbits/sec.)	Storm Control Rate Threshold (%)	Storm Control Mode		
\odot	1	FE1	Disabled	10000	10.0	Broadcast Only		
\odot	2	FE2	Disabled	10000	10.0	Broadcast Only		
\odot	3	FE3	Disabled	10000	10.0	Broadcast Only		
\odot	4	FE4	Disabled	10000	10.0	Broadcast Only		
0	5	FE5	Disabled	10000	10.0	Broadcast Only		
\odot	6	FE6	Disabled	10000	10.0	Broadcast Only		
\odot	7	FE7	Disabled	10000	10.0	Broadcast Only		
\odot	8	FE8	Disabled	10000	10.0	Broadcast Only		
\odot	9	FE9	Disabled	10000	10.0	Broadcast Only		
\odot	10	FE10	Disabled	10000	10.0	Broadcast Only		
Copy Settings		Edit						

	Entry No.	Port	Storm Control	Storm Control Rate Threshold (Kbits/sec.)	Storm Control Rate Threshold (%)	Storm Control Mode
۲		FE1	Disabled	10000	10.0	Broadcast Only
0	2	FE2	Disabled	10000	10.0	Broadcast Only
0	3	FE3	Disabled	10000	10.0	Broadcast Only
0	4	FE4	Disabled	10000	10.0	Broadcast Only
0	5	FE5	Disabled	10000	10.0	Broadcast Only
0	6	FE6	Disabled	10000	10.0	Broadcast Only
0	7	FE7	Disabled	10000	10.0	Broadcast Only
0	8	FE8	Disabled	10000	10.0	Broadcast Only
0	9	FE9	Disabled	10000	10.0	Broadcast Only
0	10	FE10	Disabled	10000	10.0	Broadcast Only
	Copy Settings		Edit			

步驟2.按一下連線埠,然後按一下Edit。螢幕上將顯示Edit Storm Control頁面。

Interface:	Unit/Slot 1/2 - Port	FE1 💌			
Storm Control:	Enable				
Storm Control Rate Threshold:	10000	kbits/sec. (Range: 70 - 100000, Default: 10000)			
Storm Control Mode:	 Unknown Unicast, Multicast & Broadcast Multicast & Broadcast Broadcast Only 				
Apply Close					

步驟3.(可選)從介面右側的下拉式清單中選擇連線埠以啟用風暴控制。

步驟4.選中Storm Control右側的Enable以啟用Storm Control。

步驟5.在「風暴控制速率閾值」欄位中輸入所需值。這是可以轉發資料包的最大速率,以千位 每秒為單位。對於FE裝置和GE裝置,此閾值的預設值為10,000。

步驟6.點選Storm Control Mode欄位中的一個單選按鈕,定義向閾值計數的流量。

·未知的單播、組播和廣播 — 廣播、組播和未知的單播流量計入頻寬閾值。

·組播和廣播 — 廣播和組播流量計入頻寬閾值。

·僅廣播 — 僅廣播流量計入頻寬閾值。

步驟7.按一下Apply,修改Storm Control並更新運行配置檔案。