通過Sx500系列堆疊式交換機上的 HTTP/HTTPS升級韌體

目標

韌體升級用於提高裝置的效能並使裝置保持最新。也可以應用語言檔案來更改Web配置實用程 式介面的本地語言。

本文檔旨在向您展示如何通過Sx500系列堆疊式交換機上的HTTP/HTTPS升級韌體。

適用裝置

• Sx500系列堆疊式交換器

軟體下載URL

• <u>Sx500系列堆疊式交換器</u>

附註:確保下載最新的韌體版本

升級韌體

安裝韌體/語言檔案

步驟1.登入到Web配置實用程式並選擇管理>檔案管理>升級/備份韌體/語言。 Upgrade/Backup Firmware/Language頁面開啟:

Upgrade/Backup Firmware/Language		
Tra	nsfer Method:	 via TFTP via HTTP/HTTPS via SCP (Over SSH)
Sav	e Action:	 Upgrade Backup
File	: Туре:	 Firmware Image Boot Code Language File
🗢 File	Name:	Browse No file selected.
The firmware is upgraded to the inactive image file. You must activate the firmware using the "Active Image" page.		
Арр	oly Ca	ncel

步驟2.在「*Transfer Method*」欄位中按一下「via HTTP/HTTPS」單選按鈕。此傳輸方法使用 您的Web瀏覽器,不需要其他軟體。

Upgrade/Backup Firmware/Language		
Transfer Metho	d: O via TFTP o via HTTP/HTTPS	
Save Action:	 Upgrade Backup 	
File Type:	 Firmware Image Boot Code Language File 	
🗳 File Name:	Choose File No file chosen	
The firmware is	s upgraded to the inactive image file. You must activate the firmware using the "Active Image" page.	
Apply	Cancel	

附註:如果您想使用簡單式檔案傳輸通訊協定(TFTP)伺服器應用程式將韌體傳輸至交換器 ,您還可以選擇透過TFTP。

步驟3.在Save Action欄位中按一下Upgrade單選按鈕。

Transfer Method:	 via TFTP via HTTP/HTTPS
Save Action:	 Upgrade Backup
File Type:	 Firmware Image Boot Code Language File
File Name:	Choose File No file chosen
The firmware is u	pgraded to the inactive image file. You must activate the firmware using the "Active Image" page.

附註:只有使用TFTP傳輸方法才能執行備份操作。

步驟4.在「File Type」欄位中按一下所需檔案型別的單選按鈕。

Upgrade/Backu	ıp Firmware/Language		
Transfer Method:	 via TFTP via HTTP/HTTPS 		
Save Action:	 Upgrade Backup 		
File Type:	 Firmware Image Boot Code Language File 		
🜣 File Name:	Choose File No file chosen		
The firmware is upgraded to the inactive image file. You must activate the firmware using the "Active Image"			
Apply Ca	incel		

可用的選項如下:

·韌體映像 — 用於控制交換機操作和功能的程式。

·語言檔案 — GUI將以所選語言顯示。

步驟5.按一下Choose File以從電腦中選擇檔案,或在鄰近欄位中輸入升級檔案的路徑和來源 名稱。

Upgrade/Backu	ıp Firmware/Language
Transfer Method:	 via TFTP via HTTP/HTTPS
Save Action:	 Upgrade Backup
File Type:	 Firmware Image Boot Code Language File
🌣 File Name:	Choose File No file chosen
The firmware is u	pgraded to the inactive image file. You must activate the firmware using the "Active Image" page.

步驟6.按一下Apply。出現警告視窗:



步驟7.按一下OK。出現進度條一段時間。

步驟8.幾分鐘後,進度條消失。系統將顯示傳輸中的統計資訊和任何錯誤。如果傳輸成功,請 按一下**完成**。

選擇活動韌體

步驟1.登入到Web配置實用程式並選擇管理>檔案管理>活動映像。將開啟Active Image頁面:

Active Image				
Active Image:	Image 1			
Active Image Version Number:	6.2.10.18			
Active Image After Reboot:	6.2.10.18 💌			
Active Image Version Number After Reboot:	6.2.10.18			
Apply Cancel				

步驟2.從Active Image After Reboot下拉選單中選擇所需的韌體版本。

Active Image				
Active Image:	Image 1			
Active Image Version Number:	6.2.10.18			
Active Image After Reboot:	6.2.10.18 💌			
Active Image Version Number After Reboot:	6.2.10.18 1.3.7.18			
Apply Cancel				

步驟3.按一下Apply,以選擇在交換器重新開機時使用的韌體。

重新啟動交換器

要應用升級的韌體版本,必須重新啟動交換機。如果更新的檔案只是一個語言檔案,則無需重 新啟動交換機。

步驟1.登入到Web配置實用程式,然後選擇Administration > Reboot。Reboot頁面隨即開啟:

Reboot
To reboot the device, click the 'Reboot' button.
Clear Startup Configuration File
To reboot the device and return to factory default settings, click the "Reboot to Factory Defaults" button. Reboot to Factory Defaults

步驟2.(可選)勾選Clear Startup Configuration File 覈取方塊,以在交換器重新開機後刪除 啟動組態。選擇此選項後,交換機實際上會執行出廠預設重置,因為運行配置和啟動配置都會 在重新啟動時被刪除。

步驟3.按一下Reboot。交換器重新開機並套用更新的韌體。