

# 配置SPA122的DMZ設定

## 目標

非軍事區(DMZ)是位於防火牆之後但仍對公眾開放的網路的一部分。DMZ對於電子郵件和Web伺服器非常有用。由於防火牆保護，管理員可以限制從LAN和WAN訪問DMZ中的某些服務和埠。由於DMZ與普通LAN分離，DMZ安全性受到損害並不表示LAN安全性受到損害。本文的目的是在SPA122裝置上啟用和配置DMZ (非軍事區) 設定。

## 適用裝置


·SPA122

## 軟體版本


·v1.1.0

## DMZ設定

步驟1. 登入到Web配置實用程式，然後選擇Network Setup > Application > DMZ。DMZ頁面隨即開啟：

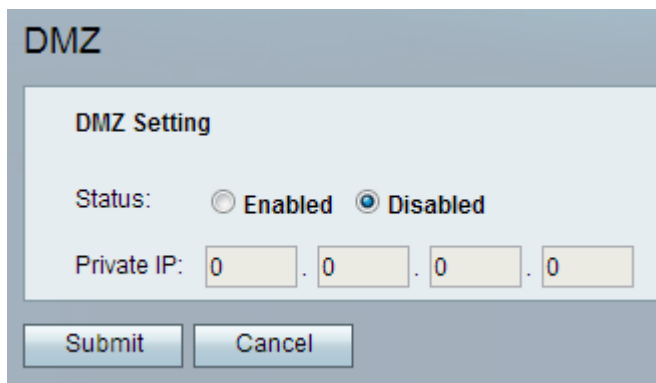

The screenshot shows the DMZ configuration interface. The title is "DMZ". Under "DMZ Setting", the "Status" is set to "Disabled" (indicated by a selected radio button). The "Private IP" is set to "0.0.0.0". There are "Submit" and "Cancel" buttons at the bottom.

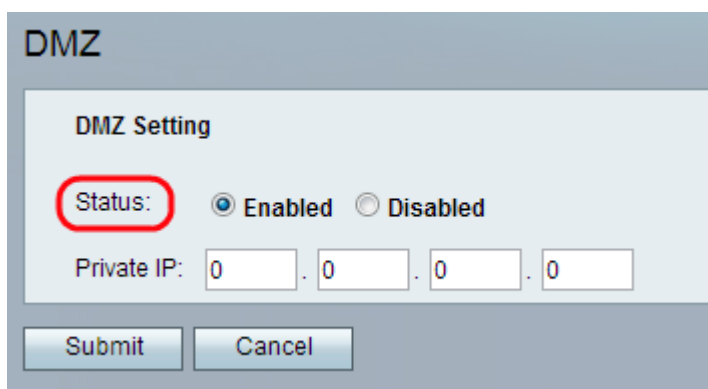

The screenshot shows the DMZ configuration interface. The title is "DMZ". Under "DMZ Setting", the "Status" is set to "Enabled" (indicated by a selected radio button, which is circled in red). The "Private IP" is set to "0.0.0.0". There are "Submit" and "Cancel" buttons at the bottom.

步驟2. 按一下**Enabled**單選按鈕，從Status欄位啟用裝置上的DMZ設定。DMZ的預設狀態設定為禁用。

**DMZ**

**DMZ Setting**

Status:  Enabled  Disabled

Private IP: 192 . 0 . 2 . 2

Submit Cancel

步驟3.在Private IP欄位中輸入可通過DMZ訪問的裝置的本地IP地址。

步驟4.按一下**Submit**儲存設定，或按一下**Cancel**放棄所有未儲存的條目。