# 配置模擬電話(ATA 190)的PLAR並對其進行故障 排除

### 目錄

<u>簡必需採背設網組驗</u>疑 <u>水開景定路態證難</u> <u>排</u>

# 簡介

本檔案介紹如何在Cisco Unified Communication Manager Solution(CUCM)中設定和疑難排解思科類比電話介面卡(ATA)190的公共線路自動振鈴(PLAR)。

作者:Sachin Kalekar,思科TAC工程師。

# 必要條件

#### 需求

思科建議您瞭解以下主題:

- ATA基本配置
- CUCM基本配置

#### 採用元件

- 思科整合通訊管理員11.5.1.12018-1
- ATA 190版本ATA190.1-2-2-003

本文中的資訊是根據特定實驗室環境內的裝置所建立。文中使用到的所有裝置皆從已清除(預設))的組態來啟動。如果您的網路正在作用,請確保您已瞭解任何指令可能造成的影響。

### 背景資訊

Cisco ATA 190系列模擬電話介面卡是基於標準的通訊裝置,可將傳統電話和傳真通訊裝置轉變為 IP裝置。這些介面卡從您的網路進行管理,滿足從雲連線到企業網路、小型辦公室或IP語音 (VoIP)服務的使用者的需求。 ATA 190是作業階段啟始通訊協定(SIP)裝置。PLAR是ATA裝置的常見功能。

PLAR是一種功能,可在摘機後將呼叫傳送到一個預配置的分機,稱為熱撥號配置。

### 設定

#### 網路圖表



#### 組態

步驟1.輸入值PT-Hotdial以建立新分割槽。

- Dartition Info	vrmation	
Name*	PT-Hotdial	
Description	PT-Hotdial	
Time Schedule	e < None > ▼	
Time Zone	Originating Device	
	Specific Time Zone (GMT) Etc/GMT ▼	
Save Del	lete Reset Apply Config Add New	

步驟2.輸入新的呼叫搜尋空間(CSS)值**CSS-Hotdial**,然後在**CSS-Hotdial**中新增分割槽**PT-**Hotdial,如下圖所示:

Calling Search Space Information		
Name*	CSS-Hotdial	
Description		

### Route Partitions for this Calling Search Space

**		
Available Partitions**	Directory URI	
	Global Learned E164 Numbers	=
	Global Learned E164 Patterns	_
	Global Learned Enterprise Numbers	
	Global Learned Enterprise Patterns	-
	~~	
Selected Partitions	PI-Hotdial	-
		~
		-
Savo Doloto	Copy Add Now	
Jave Delete	Copy Add New	

#### 步驟3.使用空白模式建立新的平移模式。

Pattern Definition		
Translation Pattern		
Partition	PT-Hotdial	-
Description		
Numbering Plan	< None >	r
Route Filter	< None >	r
MLPP Precedence *	Default •	·
Resource Priority Namespace Network Domain	< None >	·
Route Class*	Default •	·
Calling Search Space	CSS-Hotdial -	·
Use Originator's Calling Search Space		
External Call Control Profile	< None >	r
Route Option	Route this pattern	
	Block this pattern No Error	
✓ Provide Outside Dial Tone		

Urgent Priority

如圖所示,將**被叫方轉換掩碼**保留為目標號碼。

-Called Party Transformation		
called Farty Hallstonnation		
Discard Digits	< None >	•
Called Party Transform Mask	7777	
Prefix Digits (Outgoing Calls)		
Called Party Number Type*	Cisco CallManager 🔹	
Called Party Numbering Plan*	Cisco CallManager 🗸	
Save Delete Copy	Add New	

步驟4.要使用PLAR/熱撥號配置,您必須建立SIP撥號規則。

在Cisco Unified Communications Manager Administration中,導航到**Call Routing > Dial Rules >** SIP Dial Rules。

System 🔻	Cal	Routing Vedia Resources V	Adva	anced Features   Device   Application  User Management  Bulk Administration  Help
Find and		AAR Group		
占 Add N		Dial Rules	<b>۲</b>	Application Dial Rules
		Route Filter		Directory Lookup Dial Rules
Status —		Route/Hunt	•	SIP Dial Rules
i) 3 red		SIP Route Pattern	Т	
<u> </u>		Class of Control	▸┝	
Translat		Intercom	•	

現在Add New,在Dial Pattern下選擇7940\_7960\_OTHER,然後按一下Next,如下圖所示:

SIP Dial Rule Configuration
Next
Status
i Status: Ready
SIP Dial Rule Information
Dial Pattern* 7940_7960_OTHER
Next

輸入陣列名稱,然後按一下save。 例如,PLAR,如下圖所示:

SIP Dial Rule Configuration
Save
Status
i Status: Ready
SIP Dial Rule Information
Name* PLAR
Description Hotline Configuration
Dial Pattern 7940_7960_OTHER
Save
如圖所示,鍵入說明並按一下Add Plar,然後按一下Save。
-Pattern Addition
Pattern Description ATA Add Plar
Cause Delate Deast Apply Capfin Add New
Save Delete Reset Apply Config Add New
-Status
J Status: Ready
-SIP Dial Rule Information
Name* PLAR Description
Dial Pattern 7940_7960_OTHER
-Pattern Information
Description     Delete Pattern     Dial Parameter     Value     Delete Parameter       ATA     Pattern     Pattern     Add New Parameter     Delete Selected
-Pattern Addition
Pattern Description         Add Pattern         Add Plar
Save Delete Reset Apply Config Add New

**附註**:確保沒有在**Value下鍵入任何內容。** 它必須為空,在Dial Parameter下它必須是Pattern

步驟5.在ATA裝置上分配SIP撥號規則和CSS。

•在ATA裝置上分配CSS(DN — 行CSS)

- Directory Number Inform	ation	
Directory Number*	3010	Urgent Priority
Route Partition	PT-CUG	
Description	Phone B	
Alerting Name	Phone B	
ASCII Alerting Name	Phone B	
External Call Control Profile	< None >	▼
Associated Devices	ATA34DBFD180825	Edit Device Edit Line Appearance
	**	
Dissociate Devices		· ·
Directory Number Setting	15	
Voice Mail Profile	< None >	✓ (Choose <none> to use system default)</none>
Calling Search Space	CSS-Hotdial	,
BLF Presence Group*	Standard Presence group	•

#### • 在裝置配置頁面上分配SP撥號規則。

	<ul> <li>Protocol Specific Information —</li> </ul>		
I			
	Packet Capture Mode*	None	•
	Packet Capture Duration	0	
	BLF Presence Group*	Standard Presence group	•
	SIP Dial Rules	PLAR	•
	MTP Preferred Originating Codec*	711ulaw	•
	Device Security Profile*	Cisco ATA 190 - Standard SIP Non-Secure Profile	•
1			

### 驗證

在連線到ATA的模擬電話上摘機,您應該能夠看到目標電話振鈴。您還應該聽到模擬電話上的回鈴 音。

# 疑難排解

- 檢查PLAR配置支援的ATA韌體。
- 檢查註冊的ATA裝置和DN傳送/接收呼叫。
- •如果PLAR仍然無法正常工作,請從電話配置頁面中刪除SIP撥號規則並重新分配該規則。