Cisco Business VOIP路由器:重置為出廠預設設 定

目錄

<u>簡介</u> <u>如何將Linksys VOIP路由器重置為出廠預設設定?</u> <u>相關資訊</u>

簡介

本文是系列文章中的一篇,旨在協助安裝、疑難排解和維護Cisco Small Business產品。

問:如何將Linksys VOIP路由器重置為出廠預設設定?

Α.

通過按路由器的Reset(重置)按鈕並通過路由器基於Web的設定頁面進行重置,可以將路由器設 定為出廠預設設定。

使用重置按鈕重置路由器

按路由器背面的Reset按鈕30秒鐘,會將路由器重置為其出廠預設設定。路由器上的任何設定將被 擦除,路由器的IP地址將變為「192.168.15.1」,重置後使用者名稱和密碼將變為「admin」。

附註:在重置之前請注意裝置的當前設定。



要通過基於Web的設定頁重置路由器,請按照以下步驟操作。

使用基於Web的設定頁重置路由器

第1步:

訪問路由器的基於Web的設定頁。有關說明,請參閱<u>訪問VoIP路由器的基於Web的設定頁</u>。

第2步:

當路由器的基於Web的設定頁面出現時,按一下Administration,然後按一下Factory Defaults。

LINKSYS® A Division of Cisco Systems, Inc.						Click Administration		
Administration					_			
	Setup	Wireless	Security	Access Restrictions	Applications & Gaming	Administration	Status	Voice
	Management			Log	Factory	Defaults	Diagnostic	:3
					1			
					Click F Defa	actory ults.		

步驟3:

在Restore Router Factory Defaults選項中選擇Yes。

LINKSYS A Division of Cisco Systems, Inc.	
Administration	Access Applications
	Setup Wireless Security Access of a security Administration Status Voice Management Select Yes. Factory Defauts Diagnostics
Factory Defaults	Factory Default
	Restore Router Factory Defaults: Yes Yes C No Click Yes and Save Settings to reset the Router to factory defaults. You can also do this by holding the Reset button on the back of the Router for 5 seconds.
	Save Settings Cancel Changes at Itemeille

第4步:

按一下「Save Settings」。