

配置CUAC高級伺服器的日誌記錄路徑

目錄

[簡介](#)

[必要條件](#)

[需求](#)

[採用元件](#)

[如何更改日誌記錄位置](#)

[SRV記錄\(ICD.log\)](#)

[Web管理員日誌記錄](#)

[LDAP日誌記錄\(Idaptrace/Idapwarning.log\)](#)

[CUPS日誌記錄\(cupsplugin.log\)](#)

[CTI伺服器\(ctiserverlog\)](#)

[驗證](#)

[疑難排解](#)

[相關思科支援社群討論](#)

Cisco Unified Attendant Console Advanced(CUAC)C:\Program Files(x86)\Cisco\Logging

- CUAC

- Microsoft Windows 2008 Server


- CUAC 10.x

- Microsoft Windows 2008 Server

SRV(ICD.log)

1.

Computer\HKEY_LOCAL_MACHINE\SOFTWARE\Wow6432Node\Arc Solutions\Call Connect\Server\Runtime Logging

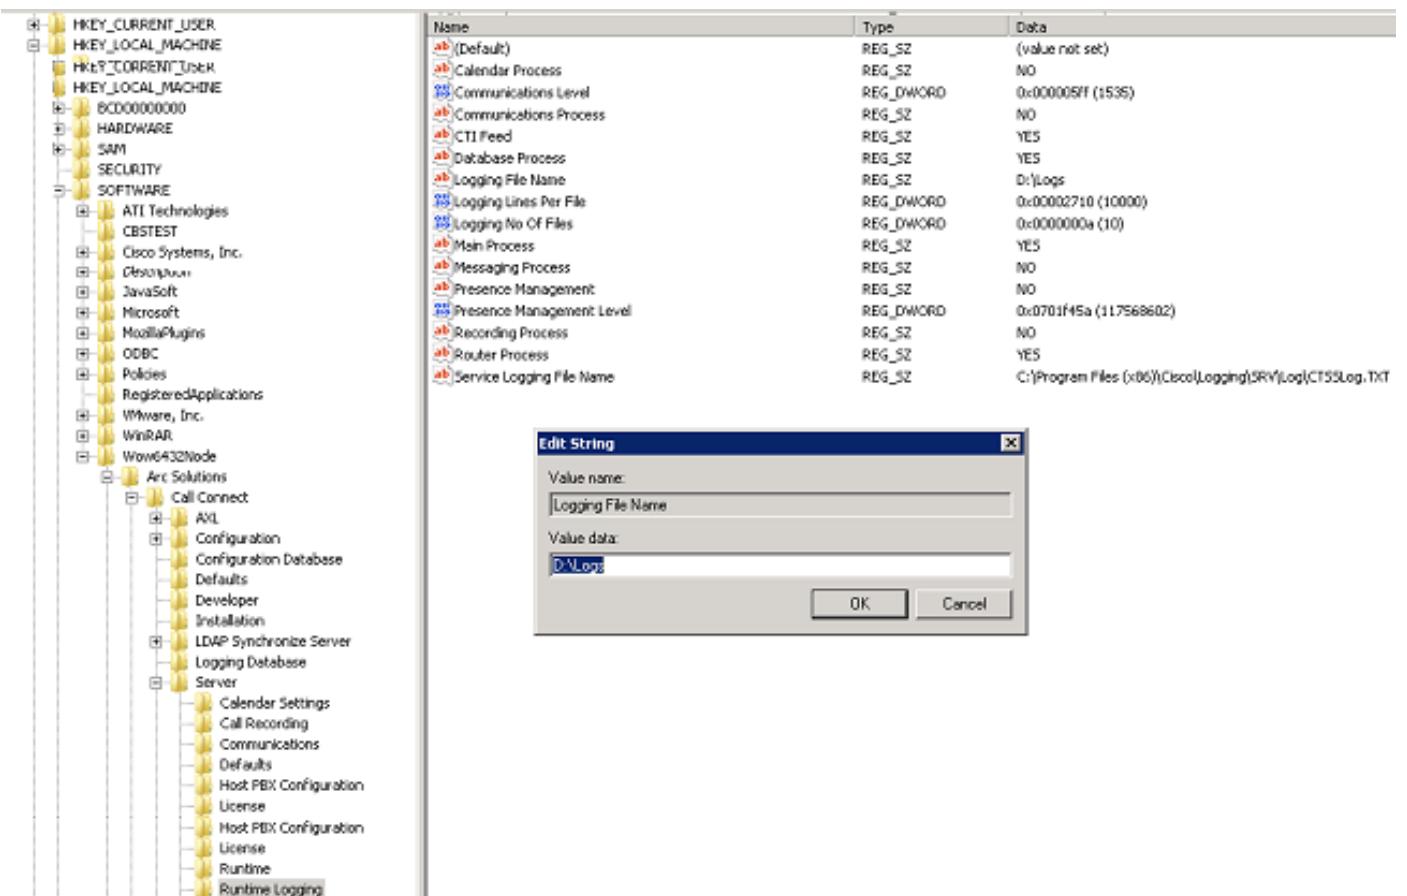


2.Logging File Name

Web

1.

Computer\HKEY_LOCAL_MACHINE\SOFTWARE\Wow6432Node\Arc Solutions\Call Connect\Web Admin\Runtime Logging

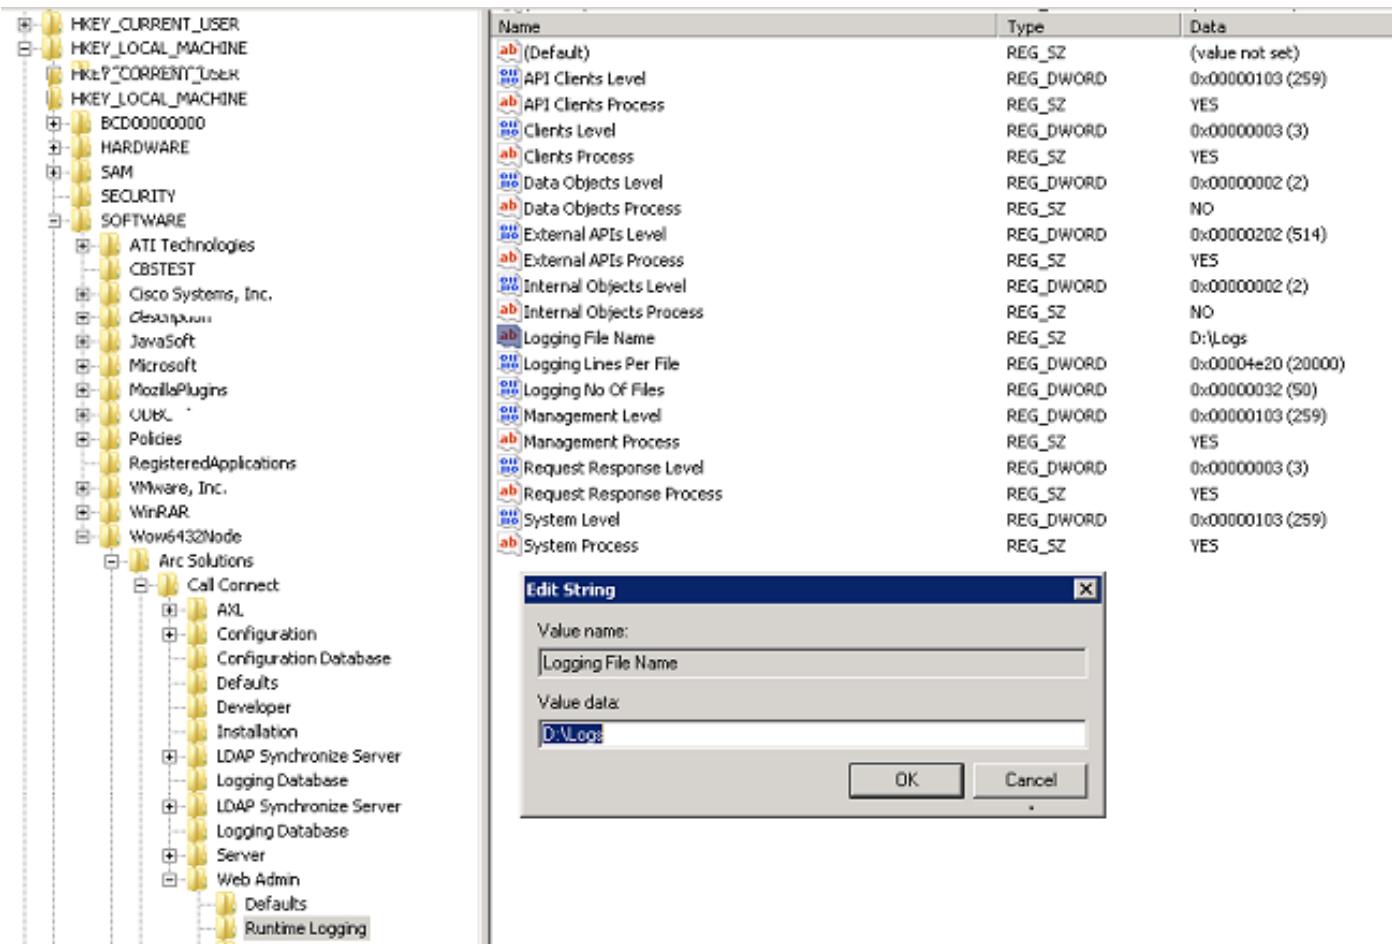


2. Logging File name

LDAP(Idaptrace/ldapwarning.log)

1. 導航到登錄檔編輯器中的指定位置。

Computer\HKEY_LOCAL_MACHINE\SOFTWARE\Wow6432Node\Arc\LDAP\

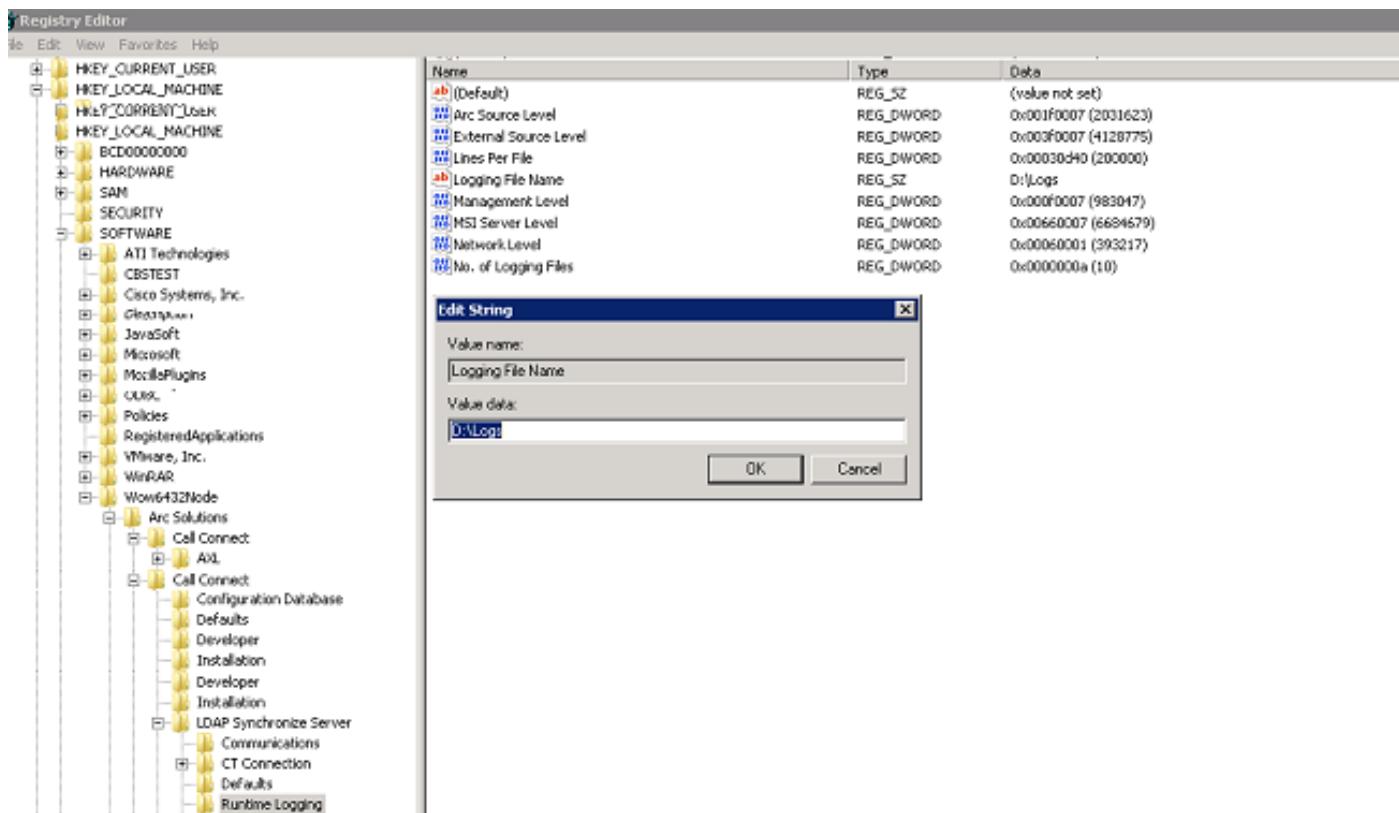


2. Logging File Name

CUPS(cupsplugin.log)

C:\Program(x86)\Cisco\CUPS

1. Cisco Presence Server Plug-in.exe.XML

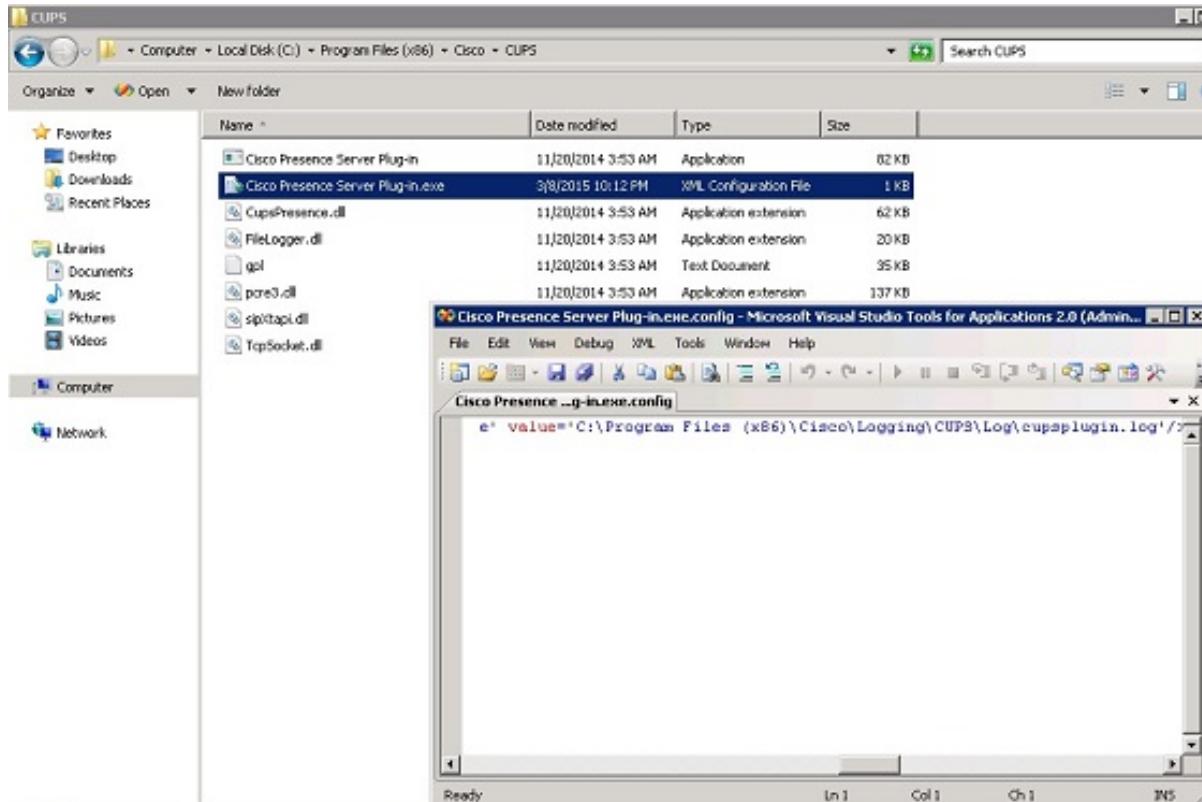


2. XML

CTI(ctiserverlog)

C:\Program(x86)\Cisco\CUPS

1.CTI Server.exeXML

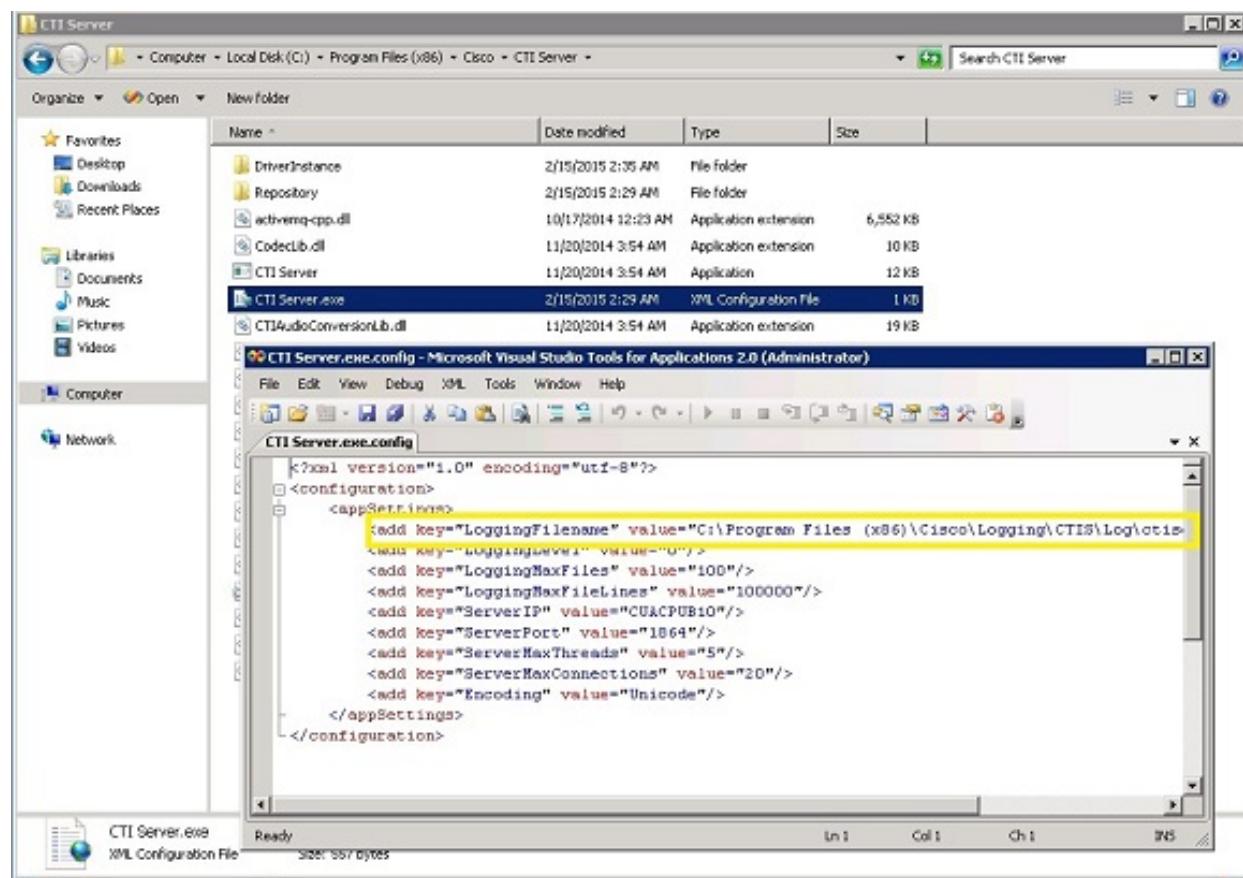

2.XML