## 小型企業VoIP路由器:連線到安全網站時出現問 題

## 目錄

<u>簡介</u> <u>如何使用Cisco Small Business VolP路由器訪問安全網站?</u> <u>相關資訊</u>

## <u>簡介</u>

本文是系列文章中的一篇,旨在協助安裝、疑難排解和維護Cisco Small Business產品。

<u>問:如何使用Cisco Small Business VolP路由器訪問安全網站?</u> A.

**附註**:這通常是因為最大傳輸單元(MTU)問題和某些安全站點需要開啟埠所致。若要在路由器上啟 用MTU,請完成本檔案中的步驟。

在路由器上啟用MTU

**第1步:** 確定網站的正確MTU大小。

第2步:

訪問路由器的基於Web的設定頁。有關說明,請按一下<u>此處</u>。

步驟3:

當路由器的基於Web的設定頁面出現時,將MTU設定為Manual,然後在Size欄位中輸入適當的 MTU值。

LINKSYS <sup>®</sup> A Division of Cisco Systems, Inc.								
Setup	Setup	Wireless	Security	Access Restrictions	Applications & Gaming	Administration	Status	¥oice
	Bas	ic Setup	1	DDNS	MAC Add	ress Clone	Advanced I	Routing
Internet Setup Internet Connection Type Optional Settings (required by some ISPs)	O Hos Dorr MTL	btain an IP a st Name: nain Name: J:	utomatically	Manual Size:		Ba The who is p (Int Enter t proper N size.	sic Setup Basic Setup re basic con erformed. So ernet Servic fill r e D ne The The ITU ned	screen is figuration ome ISPs equire that NS ese settings from your lave
			Select I	Manual.				

**附註**:以下是DSL和電纜連線的建議MT<u>U大小:**電纜連線**:1</u>500

PPPoE DSL連線:1492**第4步:** 按一下 Save Settings 。附註:如果這不起作用,請開啟路由 器上的埠。有關說明,請完成下一節中的步驟。 **為安全站點開啟埠** 

第1步:

訪問路由器的基於Web的設定頁。有關說明,請按一下<u>此處</u>。

第2步:

當路由器的基於Web的設定頁面出現時,按一下Applications & Gaming頁籤> Port Trigging。

A Division of Cisco Systems, Inc.					Click App & Ga	plication ming.	15		
Applications									
& Gaming	Setup	Wireless	Security	Access Restriction	Applie s & Gan	cations ning	Administration	Status	
	Port Range Forwa	ard   I	Port Triggering	DMZ	1	QoS			
			3 2						
		Т	Click <b>Port</b> riggering.						

步驟3:

在Application下,在Triggered Range和Forwarded Range欄位中鍵入「https」,然後鍵入「443」 (https使用的埠)。

A Division of Cisco Systems, Inc.						
Applications & Gaming						
	Setup Wireless Port Range Forward	<b>Security</b>	Access Restrictio Port Triggerin	Applica ns & Gan	ning Admi	nistration Status Voice QoS
Port Triggering						Port Triggering
Under Application		Triggere	ed Range	Forward	led Range	Port triggering will forward port based on the incoming
enter "https" then under Triggered and Forwarded Range,	Application	Start Port	End Port	Start port	End Port	port specified.Check with your software application
	https	443 to	443	443 to	443	to find out what is necessary to enter in these
enter "443" on both fields.		to		to		fields.
		to		to		To add a server using forwarding:
		to		to		1. Enter an Application
		to		to		name of the service
		to		to		2. Enter the Trigger Range for Start and End of the
		to		to		services to trigger forwarding.
		to		to		3. Enter the Forwarded Range for Start and End
		to		to		of the service you want to forward.
				to		Моке
						Cisco Systems
		9	ave Settin	gs Cance	el Changes	

第4步:

按一下 Save Settings



• 技術支援與文件 - Cisco Systems

.