在思科小型企業VoIP路由器上啟用遠端管理

目錄

<u>簡介</u> <u>如何遠端管理路由器?</u> <u>相關資訊</u>

<u>簡介</u>

本文是系列文章中的一篇,旨在協助安裝、疑難排解和維護Cisco Small Business產品。

<u>問:如何遠端管理路由器?</u>A.

遠端管理允許您通過網際網路從遠端位置管理路由器。從遠端位置管理思科S系列路由器類似於在 本地訪問路由器。主要區別在於,您必須鍵入路由器的網際網路IP地址,而不是在Web瀏覽器的 Address欄中鍵入路由器的LAN IP地址。

要在思科S系列路由器上啟用遠端管理,請完成以下步驟:

在思科S系列路由器上啟用遠端管理 檢查Cisco Small Business路由器的網際網路IP地址 從遠端位置管理思科S系列路由器

附註:繼續之前,請確保路由器已配置好,並且連線到路由器時您的電腦可以聯機。要啟用遠端管 理,請完成本文檔中概述的步驟。

在思科S系列路由器上啟用遠端管理

附註:啟用遠端管理功能後,知道路由器的Internet IP地址和密碼的任何人都可以更改路由器的設 定。

第1步:

訪問路由器的基於Web的設定頁。有關說明,請按一下<u>此處</u>。

第2步:

當路由器的基於Web的設定頁面開啟時,按一下Administration。

LINKSYS [®] A Division of Cisco Systems, Inc.						Click Administration		
Administration								
	Setup	Wireless	Security	Access Restrictions	Applicatio & Gamin	Administration	Status	¥oice
	Mar	nagement		Log	Fact	tory Defaults	Diagnost	cs

步驟3:

更改Router Password以提高安全性。有關說明,請按一下<u>此處</u>。

LINKSYS [®] A Division of Cisco Systems, Inc.		
Administration	Setup Wireless Security Access Applications Restrictions & Gaming Management Log Factory De	Administration Status Voice
Router Password		Management
Local Router Access	User Name: admin Router Password: Re-enter to confirm: Idle Timeout: 10 minutes	er your esired word on fields. fields. unter the password inter the password you inter th
Remote Router Access	Web: O Enabled Image: Secure Shell (SSH): Secure Shell (SSH): O Enabled Image: Secure Shell (SSH):	Re-enter to confirm Enter the password chosen above to confirm that you properly entered the password. <u>More</u>
UPnP	UPnP: O Enabled O Disabled	

第4步:

尋找「Remote Router Access(遠端路由器訪問)」,將Web設定為Enabled,並在提供的欄位中 將Administration Port保留為「8080」。

	Select Enabled.	
Remote Router Access	VVeb: Image: Constraint of the second seco	Utility. Re-enter to confirm Enter the password chosen above to confirm that you properly entered the password.
UPnP	UPnP: O Enabled O Disabled	<u>More</u>
Backup and Restore	Backup and Restore	
	Save Settings Can	Cisco Systems rel Changes

第5步:

按一下 Save Settings

在路由器上啟用遠端管理後,請檢查Internet IP地址。有關說明,請完成下一節中的步驟。

檢查Cisco Small Business路由器的網際網路IP地址

第1步:

訪問路由器的基於Web的設定頁。有關說明,請按一下<u>此處</u>。

第2步:

按一下Status,然後檢查路由器的Internet IP地址。

A Division of Cisco Systems, Inc.		Click Status .
Status	Setup Wireless Security Access Applications Adm	inistration Status Voice
Information Status	RouterLocal NetworkWirelessVoiceFirmware Version:Current Time:Not AvailableMAC Address:00:00:00:00:00:00Login Type:DHCPTake note of the Internet IP Address:Subnet Mask:0.0.0.0Take note of the Internet IP Address.Default Gateway:0.0.0.0DNS 1:0.0.0.0DNS 2:0.0.0.0DNS 3:0.0.0.0MTU:1500	Router Status This screen provides the Router's current status information in a read-only format. Login Type This field shows the Internet login status. When you choose PPPoE as the login method, you can click the Connect button to log in. If you click the Disconnect button, the Router will not dial up again until you click the Connect button. If your connection is DHCP or Static IP, the Status screen will show you the Internet IP Address, Subnet mask, More
	DHCP Release DHCP Renew	Morem

獲得路由器的Internet IP地址後,請完成下一節中的步驟,以便遠端訪問路由器。

從遠端位置管理思科S系列路由器



附註:路由器的映像可能因型號和版本號而異。

使用從遠端位置連線到Internet的電腦,啟動Internet Explorer並在「地址」欄位中鍵入「 http://0.0.0.0:8080」(0代表路由器的Internet IP地址,8080代表指定的埠)。



附註:0代表您之前記下的路由器的Internet IP地址。

第2步:

此時將出現一個新視窗,要求輸入用**戶名**和密**碼。**輸入路由器的使用者名稱和密碼(啟用遠端管理 之前已更改的新密碼),然後按一下**OK**。

Connect to 0.0.0	.0 ? 🔀	
	GF	
<u>U</u> ser name: <u>P</u> assword:	Remember my password	Enter the router's Username and Password (the new password you've changed before enabling remote management), then click OK .
	OK Cancel	

步驟3:

現在,您應該能夠訪問路由器的基於Web的設定頁面。

相關資訊

• 技術支援與文件 - Cisco Systems