將無線介面卡連線到思科小型企業VolP路由器

目錄

<u>簡介</u> <u>如何將無線介面卡連線到Cisco Small Business VolP路由器?</u> <u>相關資訊</u>

<u>簡介</u>

本文是系列文章中的一篇,旨在協助安裝、疑難排解和維護Cisco Small Business產品。

問:如何將無線介面卡連線到Cisco Small Business VolP路由器? A.

本文假定您的無線介面卡已在電腦上正確安裝和/或啟用。嘗試將無線介面卡連線到思科S系列無線 路由器之前,請瞭解以下資訊:SSID、無線安全和/或網路金鑰。如果您沒有這些設定,請按一下 <u>此處</u>。

將無線介面卡配置為連線到思科S系列無線路由器

附註:這些步驟適用於Windows XP Service Pack 2。

第1步:

按一下右鍵螢幕右下角的Wireless Network Connection —— Wireless Networks。



圖示,然後選擇View Available



第2步:

(19) Wireless Network Connection		
Network Tasks	Choose a wireless network	
🛃 Refresh network list	Click an item in the list below to connect to a <u>w</u> ireless network in range or to get more information.	
Set up a wireless network for a home or small office	(()) linksys Automatic 🖈 🗠	
Related Tasks	This network requires a network key. If you want to connect to this network, click Connect.	
 Learn about wireless networking Change the order of preferred networks Change advanced settings 	Select the name of your wireless network or SSID and click Connect .	
	⊆onnect]

如果在路由器上啟用WEP:

Wireless Network Conne	Enter your wireless network's			
The network 'linksys' requires key helps prevent unknown in	WEP key (26 character key) on both fields and click Connect .			
Type the key, and then click Connect.				
Network <u>k</u> ey:	•••••			
Confirm network key:	•••••			
	<u>Connect</u> Cancel			

如果在路由器上啟用WPA:

Wireless Network Conne	Enter vour wireless network's			
The network 'linksys' requires key helps prevent unknown in	WPA key on both fields and ne click Connect .			
Type the key, and then click Connect.				
Network <u>k</u> ey:	•••••			
Confirm network key:	•••••			
<u>Connect</u> Cancel				

步驟3:



相關資訊

• 技術支援與文件 - Cisco Systems