



## CHAPTER 23

# VXLANs

---

This chapter describes how to identify and resolve problems that might occur when implementing Virtual Extensible Local Area Networks (VXLANs).

This chapter includes the following sections:

- [Information About VXLANs, page 23-1](#)
- [VXLAN Troubleshooting Commands, page 23-3](#)
- [VEM Packet Path Debugging, page 23-6](#)
- [VEM Multicast Debugging, page 23-6](#)
- [VXLAN Datapath Debugging, page 23-7](#)

## Information About VXLANs

- [Overview, page 23-1](#)
- [VEM L3 IP Interface for VXLAN, page 23-2](#)
- [Fragmentation, page 23-2](#)
- [Scalability, page 23-3](#)
- [Supported Features, page 23-3](#)

## Overview

The VXLAN creates LAN segments by using an overlay approach with MAC in IP encapsulation. The encapsulation carries the original Layer 2 (L2) frame from the Virtual Machine (VM) which is encapsulated from within the Virtual Ethernet Module (VEM). Each VEM is assigned an IP address which is used as the source IP address when encapsulating MAC frames to be sent on the network. You can have multiple vmknics per VEM that are used as sources for this encapsulated traffic. The encapsulation carries the VXLAN identifier which is used to scope the MAC address of the payload frame.

The connected VXLAN is indicated within the port profile configuration of the vNIC and is applied when the VM connects. Each VXLAN uses an assigned IP multicast group to carry broadcast traffic within the VXLAN segment.

***Send document comments to [nexus1k-docfeedback@cisco.com](mailto:nexus1k-docfeedback@cisco.com).***

When a VM attaches to a VEM, if it is the first to join the particular VXLAN segment on the VEM, An IGMP join is issued for the VXLAN's assigned multicast group. When the VM transmits a packet on the network segment, a lookup is made in the L2 table using the destination MAC of the frame and the VXLAN identifier. If the result is a hit, the L2 table entry contains the remote IP address to use to encapsulate the frame and the frame is transmitted within an IP packet destined to the remote IP address. If the result is a miss (broadcast/multicast/unknown unicasts fall into this bucket), the frame is encapsulated with the destination IP address set to be the VXLAN segment's assigned IP multicast group.

When an encapsulated packet is received from the network, it is decapsulated and the source MAC address of the inner frame and VXLAN ID is added to the L2 table as the lookup key and the source IP address of the encapsulation header will be added as the remote IP address for the table entry.

## VEM L3 IP Interface for VXLAN

When a VEM has a vEthernet interface connected to a VXLAN, the VEM requires at least one IP/MAC pair to terminate VXLAN packets. In this regard, the VEM acts as an IP host. The VEM only supports IPv4 addressing for this purpose.

Similar to how the VEM Layer 3 (L3) control is configured, the IP address to use for VXLAN is configured by assigning a port profile to a vmknics that has the **capability vxlan** command in it.

To support carrying VXLAN traffic over multiple uplinks, or sub-groups, in server configurations where vPC-HM MAC-Pinning is required, up to four vmknics with **capability vxlan** may be configured. We recommend that all the VXLAN vmknics within the same ESX/ESXi host are assigned to the same port profile which must have the **capability vxlan** parameter.

VXLAN traffic sourced by local vEthernet interfaces is distributed between these vmknics based on the source MAC address in their frames. The VEM automatically pins the multiple VXLAN vmknics to separate uplinks. If an uplink fails, the VEM automatically repins the vmknics to a working uplink.

When encapsulated traffic is destined to a VEM connected to a different subnet, the VEM does not use the VMware host routing table. Instead, the vmknics initiates an ARP for the remote VEM IP addresses. The upstream router must be configured to respond by using the Proxy ARP feature.

## Fragmentation

The VXLAN encapsulation overhead is 50 bytes. In order to prevent performance degradation due to fragmentation, the entire interconnection infrastructure between all VEMs exchanging VXLAN packets should be configured to carry 50 bytes more than what the VM VNICS are configured to send. For example, using the default VNIC configuration of 1500 bytes, the VEM uplink port profile, upstream physical switch port, and interswitch links, and any routers if present, must be configured to carry an MTU of at least 1550 bytes. If that is not possible, it is suggested that the MTU within the guest VMs be configured to be smaller by 50 bytes, For example, 1450 bytes.

If this is not configured, the VEM attempts to notify the VM if it performs Path MTU (PMTU) Discovery. If the VM does not send packets with a smaller MTU, the VM fragments the IP packets. Fragmentation only occurs at the IP layer. If the VM sends a frame that is too large to carry, after adding the VXLAN encapsulation, and the frame does not contain an IP packet, the frame is dropped.

*Send document comments to [nexus1k-docfeedback@cisco.com](mailto:nexus1k-docfeedback@cisco.com).*

## Scalability

### Maximum Number of VXLANs

The Cisco Nexus 1000V supports a total of 2048 VLANs or VXLANs or any combination adding to no more than 2048. This number matches the maximum number of ports on the Cisco Nexus 1000V. Thereby, allowing every port to be connected to a different VLAN or VXLAN.

## Supported Features

This section contains the following topics:

- [Jumbo Frames, page 23-3](#)
- [Disabling the VXLAN Feature Globally, page 23-3](#)

### Jumbo Frames

Jumbo frames are supported by the Cisco Nexus 1000V to the extent that there is room leftover to accommodate the VXLAN encapsulation overhead, of at least 50 bytes, and the physical switch/router infrastructure can transport these jumbo sized IP packets.

### Disabling the VXLAN Feature Globally

As a safety precaution, the **no feature segmentation** command will not be allowed if there are any ports associated with a VXLAN port profile. You must remove all the associations before disabling the feature. The **no feature segmentation** command will cleanup all the VXLAN Bridge Domain configurations on the Cisco Nexus 1000V.

## VXLAN Troubleshooting Commands

Use the following commands to display VXLAN attributes.

This section contains the following topics:

- [VSM Commands, page 23-3](#)
- [VEM Commands, page 23-4](#)

### VSM Commands

To display ports belonging to a specific segment:

```
switch(config)# show system internal seg_bd info segment 10000
Bridge-domain: A
Port Count: 11
Veth1
Veth2
Veth3
```

To display the vEthernet bridge domain configuration:

***Send document comments to [nexus1k-docfeedback@cisco.com](mailto:nexus1k-docfeedback@cisco.com).***

```
switch(config)# show system internal seg_bd info port vethernet 1
Bridge-domain: A
segment_id = 10000
Group IP: 225.1.1.1
```

To display the vEthernet bridge configuration with ifindex as an argument:

```
switch(config)# show system internal seg_bd info port ifindex 0x1c000050
Bridge-domain: A
segment_id = 10000
Group IP: 225.1.1.1
```

To display the total number of bridge domain ports:

```
switch(config)# show system internal seg_bd info port_count
Number of ports: 11
```

To display the bridge domain internal configuration:

```
switch(config)# show system internal seg_bd info bd vxlan-home

Bridge-domain vxlan-home (2 ports in all)
Segment ID: 5555 (Manual/Active)
Group IP: 235.5.5.5
State: UP                      Mac learning: Enabled
is_bd_created: Yes
current state: SEG_BD_FSM_ST_READY
pending_delete: 0
port_count: 2
action: 4
hwbd: 28
pa_count: 0
Veth2, Veth5
switch(config)#
```

To display VXLAN vEthernet information:

```
switch# show system internal seg_bd info port
if_index = <0x1c000010>
Bridge-domain vxlan-pepsi
rid = 216172786878513168
swbd = 4098
```

```
if_index = <0x1c000040>
Bridge-domain vxlan-pepsi
rid = 216172786878513216
swbd = 4098
```

```
switch#
```

Additional **show** commands:

```
show system internal seg_bd info {pss | sdb | global | all}
```

```
show system internal seg_bd {event-history | errors | mem-stats | msgs}
```

## VEM Commands

To verify VXLAN vEthernet programming:

```
~ # vemcmd show port segments

          Native Seg
LTL   VSM Port  Mode  SegID  State
```

***Send document comments to [nexus1k-docfeedback@cisco.com](mailto:nexus1k-docfeedback@cisco.com).***

```

50      Veth5   A      5555   FWD
51      Veth9   A      8888   FWD
~ #

```

To verify VXLAN vmknics programming:

```

~ # vemcmd show vxlan interfaces
LTL      IP      Seconds since Last
              IGMP Query Received
(* Interface on which IGMP Joins are sent)
-----
49      10.3.3.3      50      *
52      10.3.3.6      50
~ #

```

Use "vemcmd show port vlans" to verify that the vmknics are in the correct transport VLAN.

To verify bridge domain creation on the VEM:

```

~ # vemcmd show bd bd-name vxlan-home
BD 31, vdc 1, segment id 5555, segment group IP 235.5.5.5, swbd 4098, 1 ports,
"vxlan-home"
Portlist:
    50 RedHat_VM1.eth0
~ #

```

To verify remote IP learning:

```

~ # vemcmd show l2 bd-name vxlan-home
Bridge domain 31 brtmax 4096, brtcnt 2, timeout 300
Segment ID 5555, swbd 4098, "vxlan-home"
Flags: P - PVLAN S - Secure D - Drop
      Type      MAC Address  LTL  timeout  Flags  PVLAN  Remote IP
      Dynamic   00:50:56:ad:71:4e  305      2      *      *      10.3.3.100
      Static    00:50:56:85:01:5b   50      0      *      *      0.0.0.0
~ #

```

To display statistics:

```

~ # vemcmd show vxlan-stats
LTL  Ucast  Mcast  Ucast  Mcast  Total
      Encaps  Encaps  Decaps  Decaps  Drops
49      5    14265    4      15      0
50      6    14261    4      15     213
51      1      15      0       0      10
52      0      11      0       0      15
~ #

```

To display detailed per-port statistics for a VXLAN vEthernet/vmknics:

```

~ # vemcmd show vxlan-stats ltl 51

```

To display detailed per-port-per-bridge domain statistics for a VXLAN vmknics for all bridge domains:

```

~ # vemcmd show vxlan-stats ltl <vxlan_vmknics_ltl> bd-all

```

To display detailed per-port-per-bridge domain statistics for a VXLAN vmknics for a specified bridge domain:

```

~ # vemcmd show vxlan-stats ltl vxlan_vmknics_ltl bd-name bd-name

```

***Send document comments to [nexus1k-docfeedback@cisco.com](mailto:nexus1k-docfeedback@cisco.com).***

## VEM Packet Path Debugging

Use the following commands to debug VXLAN traffic from a VM on VEM1 to a VM on VEM2.

- VEM1: Verify that packets are coming into the switch from the segment vEthernet.

```
vempkt capture ingress lt1 vxlan_veth
```

- VEM1: Verify VXLAN encapsulation.

```
vemlog debug sflisp all
vemlog debug sfvnsegment all
```

- VEM1: Verify remote IP is learned:

```
vemcmd show 12 bd-name segbdname
```

If the remote IP is not learned, packets are sent multicast encapsulated. For example, an initial ARP request from VM is sent in this manner.

- VEM1: Verify encapsulated packets go out uplink.

Use the **vemcmd show vxlan-encap lt1 ltl** command or the **vemcmd show l2lisp-encap mac mac** to find out which uplink is being used.

```
vempkt capture egress lt1 uplink
```

- VEM1: Look at statistics for any failures.

```
vemcmd show vxlan-stats all
vemcmd show vxlan-stats lt1 veth/vxlanvmkn1c
```

- VEM2: Verify encapsulated packets are arriving on the uplink.

```
vempkt capture ingress lt1 uplink
```

- VEM2: Verify VXLAN decapsulation.

```
"vemlog debug sflisp all"
"vemlog debug sfvnsegment all"
```

- VEM2: Verify decapsulated packets go out on VXLAN vEthernet.

```
vempkt capture egress lt1 vxlan_veth
```

- VEM2: Look at statistics for any failures:

```
vemcmd show vxlan-stats all
vemcmd show vxlan-stats lt1 veth/vxlanvmkn1c
```

## VEM Multicast Debugging

Use the following command to debug VEM multicast.

- IGMP state on the VEM:

```
vemcmd show igmp vxlan_transport_vlan detail
```



### Note

This command does not show any output for the segment multicast groups. To save multicast table space, segment groups are not tracked by IGMP snooping on the VEM.

- IGMP queries:

***Send document comments to [nexus1k-docfeedback@cisco.com](mailto:nexus1k-docfeedback@cisco.com).***

Use the **vemcmd show vxlan interfaces** command to verify that IGMP queries are being received.

- IGMP joins from vmknic:

Use the **vempkt capture ingress ltl first\_vxlan\_vmknic\_ltl** command to see if the VMware stack is sending joins.

Use the **vempkt capture egress ltl uplink\_ltl** command to see if the joins are being sent out to the upstream switch.

## VXLAN Datapath Debugging

Use the commands listed in this section to troubleshoot VXLAN problems.

This section contains the following topics:

- [Vemlog Debugging, page 23-7](#)
- [HR, page 23-8](#)
- [Vempkt, page 23-8](#)
- [Statistics, page 23-8](#)
- [Show Commands, page 23-9](#)

## Vemlog Debugging

To debug the bridge domain setup or configuration, use the following command:

```
vemlog debug sfbid all
```

To debug port configuration/CBL/vEthernet LTL pinning, use the following command:

```
vemlog debug sfporttable all
```

(for encap/decap setup and decisions)

```
vemlog debug sfvnsegment all
```

To debug for actual packet editing, VXLAN interface handling, and multicast handling, use the following command:

```
vemlog debug sf1isp all
```

To debug multicast joins or leaves on the DPA socket, use the following command:

```
echo "debug dpa_allplatform all" > /tmp/dpafifo
```

To debug the bridge domain configuration, use the following command:

```
echo "debug sf12agent all" > /tmp/dpafifo
```

To debug port configuration, use the following command:

```
echo "debug sfportagent all" > /tmp/dpafifo
```

To debug hitless reconnect (HR) for capability l2-lisp, use the following command:

```
echo "debug sfportl2lisp_cache all" > /tmp/dpafifo
```

To debug CBL programming.

***Send document comments to [nexus1k-docfeedback@cisco.com](mailto:nexus1k-docfeedback@cisco.com).***

```
echo "debug sfpixmagent all" > /tmp/dpafifo
```

## HR

To debug segment information for HR, use the following command:

```
echo "debug sfsegment_cache all" > /tmp/dpafifo (to debug segment info HR)
```

(now has details of cached and temp segment info list)

```
echo "show vsm cache vsm control mac" > /tmp/dpafifo
```

## Vempkt

Vempkt has been enhanced to display VLAN/SegmentID. Use vempkt to trace the packet path through VEM.

- Encap: Capture ingress on Seg-VEth LTL – Egress on uplink
- Decap: Capture ingress on uplink – Egress on Seg-VEth LTL

## Statistics

To display a summary of per-port statistics, use the following command:

```
vemcmd show vxlan-stats
```

To display detailed per-port statistics for VXLAN vmknics, use the following command:

```
vemcmd show vxlan-stats lt1 vxlan_vmknics_ltl
```

To display detailed per-port statistics for vEthernet in a VXLAN, use the following command:

```
vemcmd show vxlan-stats lt1 vxlan_veth_ltl
```

To display detailed per-port-per-bridge domain statistics for a VXLAN vmknics for all bridge domains, use the following command:

```
vemcmd show vxlan-stats lt1 vxlan_vmknics_ltl bd-all
```

To display detailed per-port-per-bridge domain statistics for a VXLAN vmknics for the specified bridge domain, use the following command:

```
vemcmd show vxlan-stats lt1 vxlan_vmknics_ltl bd-name bd-name
```

To display which VXLAN vmknics used for encap and subsequent pinning to uplink PC for static MAC learned on port, use the following command:

```
vemcmd show vxlan-encap lt1 vxlan_veth_ltl
```

To display which VXLAN vmknics used for encapsulation and subsequent pinning to uplink PC, use the following command:

```
vemcmd show vxlan-encap mac vxlan_vm_mac
```



***Send document comments to [nexus1k-docfeedback@cisco.com](mailto:nexus1k-docfeedback@cisco.com).***

## Show Commands

Table 23-1 lists available **vemcmd show** commands.

**Table 23-1** *vemcmd Show Commands*

Command	Result
<b>vemcmd show vxlan interfaces</b>	Displays the VXLAN encapsulated interfaces.
<b>vemcmd show port vlans</b>	Checks the port programming and CBL state for the bridge domain.
<b>vemcmd show bd</b>	Displays the bridge domain segmentId/group/list of ports.
<b>vemcmd show bd bd-name</b> <i>bd-name-string</i>	Displays one segment bridge domain.
<b>vemcmd show l2 all</b>	Displays the remote IP being learned.
<b>vemcmd show l2 bd-name</b> <i>bd-name-string</i>	Displays the Layer 2 table for one segment bridge domain.
<b>vemcmd show arp all</b>	Displays the IP-MAC mapping for the outer encapsulated header.

***Send document comments to [nexus1k-docfeedback@cisco.com](mailto:nexus1k-docfeedback@cisco.com).***