



Cisco Nexus 3000 Series NX-OS IP SLAs Configuration Guide, Release 7.x

First Published: August 31, 2015

Americas Headquarters

Cisco Systems, Inc. 170 West Tasman Drive San Jose, CA 95134-1706 USA http://www.cisco.com Tel: 408 526-4000

800 553-NETS (6387) Fax: 408 527-0883 THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental

This product includes cryptographic software written by Eric Young (eav@cryptsoft.com).

This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (http://www.openssl.org/)

This product includes software written by Tim Hudson (tjh@cryptsoft.com).

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: http://www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

© 2015 Cisco Systems, Inc. All rights reserved.



CONTENTS

Preface

Preface vii

Audience vii

Document Conventions vii

Related Documentation for Cisco Nexus 3000 Series NX-OS Software viii

Documentation Feedback ix

Obtaining Documentation and Submitting a Service Request x

CHAPTER 1

New and Changed Information 1

New and Changed Information 1

CHAPTER 2

IP SLAs Overview 3

Information About Cisco NX-OS IP SLAs 3

Network Performance Measurement Using Cisco NX-OS IP SLAs 5

Cisco NX-OS IP SLAs Operation Types 6

Cisco NX-OS IP SLAs Responder and IP SLAs Control Protocol 6

Cisco NX-OS IP SLAs Operation Scheduling 6

Cisco NX-OS IP SLAs Operation Threshold Monitoring 7

MPLS VPN Awareness 7

History Statistics 7

Guidelines and Limitations for IP SLAs 8

CHAPTER 3

Configuring IP SLAs UDP Jitter Operations 9

Information About the IP SLAs UDP Jitter Operation 9

Prerequisites for Configuring IP SLAs UDP Jitter Operations 10

Guidelines and Limitations for UDP Jitter Operations 11

Configuring CoPP for IP SLA Packets 11

Matching the Netstack Port Range 11

Configuring and Scheduling a UDP Jitter Operation on the Source Device 12

Configuring the IP SLAs Responder on the Destination Device 12

Configuring and Scheduling a Basic UDP Jitter Operation on the Source Device 13

Configuring and Scheduling a UDP Jitter Operation with Additional Characteristics 14

Configuration Example for a UDP Jitter Operation 18

CHAPTER 4 Configuring IP SLAs UDP Jitter Operations for VoIP 19

Guidelines and Limitations for IP SLAs UDP Jitter Operations for VoIP 20

Configuring CoPP for IP SLA Packets 20

Matching the Netstack Port Range 20

Calculated Planning Impairment Factor 21

Mean Opinion Scores 22

Voice Performance Monitoring Using IP SLAs 23

Codec Simulation Within IP SLAs 23

IP SLAs ICPIF Value 24

IP SLAs MOS Value 26

Configuring and Scheduling an IP SLAs VoIP UDP Jitter Operation 27

Configuration Examples for IP SLAs VoIP UDP Operation 30

Configuration Examples for IP SLAs VoIP UDP Operation Statistics Output 32

CHAPTER 5 Configuring IP SLAs UDP Echo Operations 33

UDP Echo Operation 33

Guidelines and Limitations for UDP Echo Operations 34

Configuring CoPP for IP SLA Packets 34

Matching the Netstack Port Range 34

Configuring the IP SLAs Responder on the Destination Device 35

Configuring a Basic UDP Echo Operation on the Source Device 36

Configuring a UDP Echo Operation with Optional Parameters on the Source Device 37

Scheduling IP SLAs Operations 39

Configuration Example for a UDP Echo Operation 41

CHAPTER 6 Configuring IP SLAs TCP Connect Operations 43

Information About the TCP Connect Operation 43

Guidelines and Limitations for Configuring IP SLAs TCP Connect Operations 44

Configuring CoPP for IP SLA Packets 44

Matching the Netstack Port Range 45

Configuring the IP SLAs Responder on the Destination Device 45

Configuring and Scheduling a TCP Connect Operation on the Source Device 46

Configuring and Scheduling a Basic TCP Connect Operation on the Source Device 46

Configuring and Scheduling a TCP Connect Operation with Optional Parameters on the Source

Device 48

Configuration Example for a TCP Connect Operation 53

CHAPTER 7 Configuring a Multioperations Scheduler 55

Information About the IP SLAs Multioperations Scheduler 55

Default Behavior of IP SLAs Multiple Operations Scheduling 56

Multiple Operations Scheduling with Scheduling Period Less Than Frequency 57

Multiple Operations Scheduling When the Number of IP SLAs Operations are Greater than the

Schedule Period 59

Multiple Operations Scheduling with Scheduling Period Greater Than Frequency 60

IP SLAs Random Scheduler 62

Prerequisites for an IP SLAs Multioperation Scheduler 62

Scheduling Multiple IP SLAs Operations 63

Enabling the IP SLAs Random Scheduler 64

Verifying IP SLAs Multiple Operations Scheduling 65

Configuration Example for Scheduling Multiple IP SLAs Operations 67

Configuration Example for Enabling the IP SLAs Random Scheduler 67

CHAPTER 8 Configuring Proactive Threshold Monitoring for IP SLAs Operations 69

Information About IP SLAs Reaction Configuration 69

IP SLAs Threshold Monitoring and Notifications 69

RTT Reactions for Jitter Operations 71

Configuring Proactive Threshold Monitoring 71

Configuration Example for an IP SLAs Reaction Configuration 73

Verification Example for an IP SLAs Reaction Configuration 74

Configuration Example for Triggering SNMP Notifications 74

CHAPTER 9 Configuring IP SLA PBR Object Tracking 77

IP SLA PBR Object Tracking 77

Object Tracking 77

CHAPTER 10

CHAPTER 11

```
IP SLA PBR Object Tracking Overview 77
    Configuring IP SLA PBR Object Tracking 78
    Example: Configuring IP SLA PBR Object Tracking 82
Configuring IP SLAs DNS Operations 83
    IP SLAs DNS Operations 83
      Guidelines and Limitations for IP SLA DNS Operations 83
      DNS Operation 83
    Configuring a Basic DNS Operation on the Source Device 84
    Configuring a DNS Operation with Optional Parameters on the Source Device 85
    Scheduling IP SLAs Operations 88
    Configuration Example for a DNS Operation 89
    Configuration Example for a Basic DNS Operation on the Source Device 89
    Configuration Example for a DNS Operation with Optional Parameters on the Source
       Device 90
    Configuration Example for Scheduling IP SLAs Operations 90
Configuring IP SLAs ICMP Echo Operations 91
    ICMP Echo Operation 91
      Guidelines and Limitations for IP SLAs ICMP Echo Operations 92
    Configuring an ICMP Echo Operation 92
      Configuring a Basic ICMP Echo Operation on a Source Device 93
```

ICMP Echo Operation 91
Guidelines and Limitations for IP SLAs ICMP Echo Operations 92
Configuring an ICMP Echo Operation 92
Configuring a Basic ICMP Echo Operation on a Source Device 93
Configuring an ICMP Echo Operation with Optional Parameters 93
Scheduling IP SLAs Operations 96
Troubleshooting Tips 97
What to Do Next 98
Configuration Examples for IP SLAs ICMP Echo Operations 98
Example: Configuring a Basic ICMP Echo Operation on a Source Device 98
Example: Configuring an ICMP Echo Operation with Optional Parameters 98

Example: Scheduling IP SLAs Operations 98

Glossary 99



Preface

This preface includes the following sections:

- Audience, page vii
- Document Conventions, page vii
- Related Documentation for Cisco Nexus 3000 Series NX-OS Software, page viii
- Documentation Feedback, page ix
- Obtaining Documentation and Submitting a Service Request, page x

Audience

This publication is for network administrators who configure and maintain Cisco Nexus devices.

Document Conventions

Command descriptions use the following conventions:

Convention	Description
bold	Bold text indicates the commands and keywords that you enter literally as shown.
Italic	Italic text indicates arguments for which the user supplies the values.
[x]	Square brackets enclose an optional element (keyword or argument).
[x y]	Square brackets enclosing keywords or arguments separated by a vertical bar indicate an optional choice.
{x y}	Braces enclosing keywords or arguments separated by a vertical bar indicate a required choice.

Convention	Description
[x {y z}]	Nested set of square brackets or braces indicate optional or required choices within optional or required elements. Braces and a vertical bar within square brackets indicate a required choice within an optional element.
variable	Indicates a variable for which you supply values, in context where italics cannot be used.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.

Examples use the following conventions:

Convention	Description
screen font	Terminal sessions and information the switch displays are in screen font.
boldface screen font	Information you must enter is in boldface screen font.
italic screen font	Arguments for which you supply values are in italic screen font.
<>	Nonprinting characters, such as passwords, are in angle brackets.
[]	Default responses to system prompts are in square brackets.
!,#	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

This document uses the following conventions:



Note

Means reader take note. Notes contain helpful suggestions or references to material not covered in the manual.



Means reader be careful. In this situation, you might do something that could result in equipment damage or loss of data.

Related Documentation for Cisco Nexus 3000 Series NX-OS Software

The entire Cisco NX-OS 3000 Series documentation set is available at the following URL:

http://www.cisco.com/en/US/products/ps11541/tsd products support series home.html

Release Notes

The release notes are available at the following URL:

http://www.cisco.com/en/US/products/ps11541/prod release notes list.html

Installation and Upgrade Guides

The installation and upgrade guides are available at the following URL:

http://www.cisco.com/en/US/products/ps11541/prod_installation_guides_list.html

License Information

For information about feature licenses in NX-OS, see the *Cisco NX-OS Licensing Guide*, available at the following URL: http://www.cisco.com/en/US/docs/switches/datacenter/sw/nx-os/licensing/guide/b_Cisco_NX-OS Licensing Guide.html.

For the NX-OS end user agreement and copyright information, see *License and Copyright Information for Cisco NX-OS Software*, available at the following URL: http://www.cisco.com/en/US/docs/switches/datacenter/sw/4 0/nx-os/license agreement/nx-ossw lisns.html.

Configuration Guides

The configuration guides are available at the following URL:

http://www.cisco.com/c/en/us/support/switches/nexus-3000-series-switches/products-installation-and-configuration-guides-list.html

Programming Guides

The XML Interface User Guide and other programming guides are available at the following URL: http://www.cisco.com/en/US/products/ps11541/products_programming_reference_guides_list.html

Technical References

The technical references are available at the following URL:

http://www.cisco.com/en/US/products/ps11541/prod technical reference list.html

Error and System Messages

The error and system message reference guides are available at the following URL:

http://www.cisco.com/en/US/products/ps11541/products_system_message_guides_list.html

Documentation Feedback

To provide technical feedback on this document, or to report an error or omission, please send your comments to: nexus3k-docfeedback@cisco.com.

We appreciate your feedback.

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, using the Cisco Bug Search Tool (BST), submitting a service request, and gathering additional information, see *What's New in Cisco Product Documentation*, at: http://www.cisco.com/c/en/us/td/docs/general/whatsnew/whatsnew.html.

Subscribe to *What's New in Cisco Product Documentation*, which lists all new and revised Cisco technical documentation as an RSS feed and delivers content directly to your desktop using a reader application. The RSS feeds are a free service.



New and Changed Information

This chapter provides release-specific information for each new and changed feature in the *Cisco Nexus* 9000 Series NX-OS IP SLAs Configuration Guide.

• New and Changed Information, page 1

New and Changed Information

This table summarizes the new and changed features for the Cisco Nexus 3000 Series NX-OS IP SLAs Configuration Guide.

Table 1: New and Changed Features

Feature	Description	Changed in Release
IP SLA support	Initial support	NX-OS 7.0(3)I2(1)

New and Changed Information



IP SLAs Overview

This chapter provides an overview of Cisco NX-OS IP Service Level Agreements (SLAs).

- Information About Cisco NX-OS IP SLAs, page 3
- Network Performance Measurement Using Cisco NX-OS IP SLAs, page 5
- Cisco NX-OS IP SLAs Operation Types, page 6
- Cisco NX-OS IP SLAs Responder and IP SLAs Control Protocol, page 6
- Cisco NX-OS IP SLAs Operation Scheduling, page 6
- Cisco NX-OS IP SLAs Operation Threshold Monitoring, page 7
- MPLS VPN Awareness, page 7
- History Statistics, page 7
- Guidelines and Limitations for IP SLAs, page 8

Information About Cisco NX-OS IP SLAs

Many companies conduct most of their business online and any loss of service can affect the profitability of the company. Internet service providers (ISPs) and even internal IT departments now offer a defined level of service--a service level agreement--to provide their customers with a degree of predictability.

The latest performance requirements for business-critical applications, voice over IP (VoIP) networks, audio and visual conferencing, Multiprotocol Label Switching (MPLS), and Virtual Private Networks (VPNs) are creating internal pressures on converged IP networks to become optimized for performance levels. Network administrators are increasingly required to support service level agreements that support application solutions. IP Service Level Agreements (SLAs) allow you to manage IP service levels for IP applications and services.

The Cisco NX-OS IP SLAs use active traffic monitoring—the generation of traffic in a continuous, reliable, and predictable manner—for measuring network performance. Cisco NX-OS IP SLAs send data across the network to measure performance between multiple network locations or across multiple network paths. It simulates network data and IP services and collects network performance information in real time. The information collected includes data about the response time, one-way latency, jitter (interpacket delay variance), packet loss, voice quality scoring, network resource availability, application performance, and server response time. Cisco NX-OS IP SLAs performs active monitoring by generating and analyzing traffic to measure

performance either between Cisco NX-OS devices or from a Cisco NX-OS device to a remote IP device such as a network application server. Measurement statistics provided by the various Cisco NX-OS IP SLAs operations can be used for troubleshooting, problem analysis, and designing network topologies.




IPSLA do not support rollback. The rollback is related to IPSLA configuration via CLI.

Cisco NX-OS IP SLAs provides the following improvements over a traditional service level agreement:

- End-to-end measurements—The ability to measure performance from one end of the network to the other allows a broader reach and more accurate representation of the end-user experience.
- Sophistication--Statistics such as delay, jitter, packet sequence, Layer 3 connectivity, and path and download time that are broken down into bidirectional and round-trip numbers provide more data than just the bandwidth of a Layer 2 link.
- Ease of deployment--Leveraging the existing Cisco devices in a large network makes Cisco NX-OS IP SLAs easier and cheaper to implement than the physical probes often required with traditional service level agreements.
- Application-aware monitoring--Cisco NX-OS IP SLAs can simulate and measure performance statistics generated by applications running over Layer 3 through Layer 7. Traditional service level agreements can only measure Layer 2 performance.
- Pervasiveness--Cisco NX-OS IP SLAs support exists in Cisco networking devices that range from low-end to high-end switches. This wide range of deployment gives Cisco NX-OS IP SLAs more flexibility over traditional service level agreements.

The following figure shows how Cisco NX-OS IP SLAs have taken the traditional concept of Layer 2 service level agreements and applied a broader scope to support end-to-end performance measurement, including support of applications.

Figure 1: Scope of Traditional Service Level Agreement Versus Cisco NX-OS IP SLAs

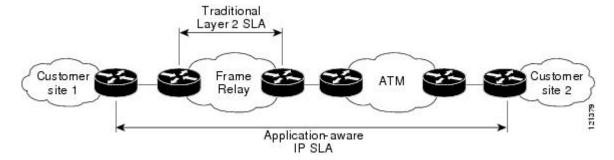

Using Cisco NX-OS IP SLAs, you can measure, provide, and verify service level agreements. You can also analyze and troubleshoot network performance for IP services and applications. Depending on the specific Cisco NX-OS IP SLAs operation, statistics of delay, packet loss, jitter, packet sequence, connectivity, path, server response time, and download time can be monitored within the Cisco device and stored in both CLI and SNMP MIBs. The packets have configurable IP and application layer options such as a source and destination IP address, User Datagram Protocol (UDP)/TCP port numbers, a type of service (ToS) byte (including Differentiated Services Code Point [DSCP] and IP prefix bits), a Virtual Private Network (VPN) routing/forwarding instance (VRF), and a URL web address.

Because Cisco NX-OS IP SLAs are accessible using SNMP, it also can be used by performance monitoring applications such as CiscoWorks Internetwork Performance Monitor (IPM) and other third-party, Cisco partner performance management products.

SNMP notifications based on the data gathered by a Cisco NX-OS IP SLAs operation allow the switch to receive alerts when performance drops below a specified level and when problems are corrected. Cisco NX-OS IP SLAs use the Cisco RTTMON MIB for interaction between external Network Management System (NMS) applications and the Cisco NX-OS IP SLAs operations running on the Cisco devices. For a complete description of the object variables referenced by the Cisco NX-OS IP SLAs feature, see the text of the CISCO-RTTMON-MIB.my file, available from the Cisco MIB website.

Network Performance Measurement Using Cisco NX-OS IP SLAs

Using Cisco NX-OS IP SLAs, you can monitor the performance between any area in the network: core, distribution, and edge. Monitoring can be done anytime, anywhere, without deploying a physical probe.

Cisco NX-OS IP SLAs use generated traffic to measure network performance between two networking devices such as switches. The following figure shows how Cisco NX-OS IP SLAs start when the Cisco NX-OS IP SLAs device sends a generated packet to the destination device. After the destination device receives the packet, and depending on the type of Cisco NX-OS IP SLAs operation, the device responds with time-stamp information for the source to make the calculation on performance metrics. A Cisco NX-OS IP SLAs operation performs a network measurement from the source device to a destination in the network using a specific protocol such as UDP.

Performance Any IP device management application IP SLA measurement and IP SLA responder to IP SLA responder SNMP IP network IP SLA responder IP SLA source IP SLA measurement 121381 and IP SLA responder to

Figure 2: Cisco NX-OS IP SLAs Operations

To implement a Cisco NX-OS IP SLAs network performance measurement, you must perform these tasks:

IP SLA responder

- 1 Enable the Cisco NX-OS IP SLAs Responder, if appropriate.
- 2 Configure the required Cisco NX-OS IP SLAs operation type.
- 3 Configure any options available for the specified Cisco NX-OS IP SLAs operation type.
- 4 Configure threshold conditions, if required.

- 5 Schedule the operation to run and then let the operation run for a period of time to gather statistics.
- 6 Display and interpret the results of the operation using Cisco NX-OS CLI or an network management system with SNMP.

Cisco NX-OS IP SLAs Operation Types

The various types of Cisco NX-OS IP SLAs operations include the following:

- UDP jitter
- UDP jitter for VoIP
- UDP echo
- Transmission Control Protocol (TCP) connect
- Multioperation Scheduler
- Proactive Threshold Monitoring

Cisco NX-OS IP SLAs Responder and IP SLAs Control Protocol

The responder is a component that is embedded in the destination Cisco routing device that allows the system to anticipate and respond to Cisco NX-OS IP SLAs request packets. The IP SLAs Responder provides accurate measurements without the need for dedicated probes and additional statistics that are not available via standard ICMP-based measurements. The Cisco NX-OS IP SLAs Control Protocol is used by the IP SLAs Responder to provide a mechanism through which the responder can be notified on which port it should listen and respond. Only a Cisco NX-OS device can be a source for a destination responder.

The IP SLAs Responder listens on a specific port for control protocol messages sent by a Cisco NX-OS IP SLAs operation. Upon receipt of the control message, the responder enables the specified UDP or TCP port for the specified duration. During this time, the responder accepts the requests and responds to them. The responder disables the port after it responds to the Cisco NX-OS IP SLAs packet or when the specified time expires.

Enabling the IP SLAs Responder on the destination device is not required for all IP SLAs operations. For example, if services that are already provided by the destination switch (such as Telnet or HTTP) are chosen, the IP SLAs Responder does not need to be enabled. For non-Cisco devices, the IP SLAs Responder cannot be configured and Cisco NX-OS IP SLAs can send operational packets only to services native to those devices.

Cisco NX-OS IP SLAs Operation Scheduling

After a Cisco NX-OS IP SLAs operation has been configured, you must schedule the operation to begin capturing statistics and collecting error information. When scheduling, an operation can start immediately or start at a certain month, day, and hour. There is a pending option to set the operation to start at a later time. The pending option is also an internal state of the operation visible through SNMP. The pending state is also used when an operation is a reaction (threshold) operation waiting to be triggered. You can schedule a single Cisco NX-OS IP SLAs operation or a group of operations at one time.

Multioperations scheduling allows you to schedule multiple Cisco NX-OS IP SLAs operations using a single command through the Cisco NX-OS CLI or the CISCO RTTMON-MIB. This feature allows you to control

the amount of IP SLAs monitoring traffic by scheduling the operations to run at evenly distributed times. This distribution of IP SLAs operations allows you to minimize the CPU utilization and enhance the scalability of the network.

For more details about the IP SLAs multioperations scheduling functionality, see the IP SLAs Multioperation Scheduler section.

Cisco NX-OS IP SLAs Operation Threshold Monitoring

To support successful service level agreement monitoring or to proactively measure network performance, threshold functionality is essential. Consistent reliable measurements immediately identify issues and can save troubleshooting time. To roll out a service level agreement, you must have mechanisms that notify you immediately of any possible violations. Cisco NX-OS IP SLAs can send SNMP traps that are triggered by events such as the following:

- Connection loss
- Timeout
- Round-trip time threshold
- · Average jitter threshold
- One-way packet loss
- · One-way jitter
- One-way mean opinion score (MOS)
- One-way latency

Alternately, a Cisco NX-OS IP SLAs threshold violation can trigger another Cisco NX-OS IP SLAs operation for further analysis.

For more details on using thresholds with Cisco NX-OS IP SLAs operations, see the Proactive Threshold Monitoring for IP SLAs Operations section.

MPLS VPN Awareness

The Cisco NX-OS IP SLAs MPLS VPN Awareness feature allows you to monitor IP service levels within Multiprotocol Label Switching (MPLS) Virtual Private Networks (VPNs). Using IP SLAs within MPLS VPNs allows service providers to plan, provision, and manage IP VPN services according to the service level agreement for a customer. IP SLAs operations can be configured for a specific VPN by specifying a VPN routing and forwarding (VRF) name.

History Statistics

Cisco NX-OS IP SLAs maintain the following three types of history statistics:

• Aggregated statistics--By default, IP SLAs maintain two hours of aggregated statistics for each operation. The value from each operation cycle is aggregated with the previously available data within a given

hour. The Enhanced History feature in IP SLAs allows for the aggregation interval to be shorter than an hour.

- Operation snapshot history--IP SLAs maintain a snapshot of data for each operation instance that matches
 a configurable filter, such as all, over threshold, or failures. The entire set of data is available and no
 aggregation takes place.
- Distribution statistics--IP SLAs maintain a frequency distribution over configurable intervals. Each time IP SLAs starts an operation, a new history bucket is created until the number of history buckets that matches the specified size or the lifetime of the operation expires. By default, the history for an IP SLAs operation is not collected. If history is collected, each bucket contains one or more history entries from the operation. History buckets do not wrap.

Guidelines and Limitations for IP SLAs

IP SLAs have the following guidelines and limitations:

• IP SLAs do not support the Cisco NX-OS rollback feature.



Configuring IP SLAs UDP Jitter Operations

This chapter describes how to configure an IP Service Level Agreements (SLAs) UDP jitter operation to analyze round-trip delay, one-way delay, one-way jitter, one-way packet loss, and connectivity in networks that carry UDP traffic in IPv4 networks. This chapter also demonstrates how the data gathered using the UDP jitter operation can be displayed and analyzed using the Cisco software commands.

This chapter includes the following sections:

- Information About the IP SLAs UDP Jitter Operation, page 9
- Prerequisites for Configuring IP SLAs UDP Jitter Operations, page 10
- Guidelines and Limitations for UDP Jitter Operations, page 11
- Configuring and Scheduling a UDP Jitter Operation on the Source Device, page 12
- Configuration Example for a UDP Jitter Operation, page 18

Information About the IP SLAs UDP Jitter Operation

The IP SLAs UDP jitter operation can diagnose network suitability for real-time traffic applications such as voice over IP (VoIP), video over IP, or real-time conferencing.

Jitter means inter-packet delay variance. When multiple packets are sent consecutively from source to destination, for example, 10 ms apart, and if the network is behaving ideally, the destination should be receiving them 10 ms apart. But if there are delays in the network (such as queuing, arriving through alternate routes, and so on), the arrival delay between packets might be greater than or less than 10 ms. Using this example, a positive jitter value indicates that the packets arrived greater than 10 ms apart. If the packets arrive 12 ms apart, then positive jitter is 2 ms; if the packets arrive 8 ms apart, then negative jitter is 2 ms. For delay-sensitive networks such as VoIP, positive jitter values are undesirable, and a jitter value of 0 is ideal.

However, the IP SLAs UDP jitter operation does more than just monitor jitter. As the UDP jitter operation includes the data returned by the IP SLAs UDP operation, the UDP jitter operation can be used as a multipurpose data gathering operation. The packets that IP SLAs generate carry packet sending sequence, receiving sequence information, and sending and receiving time stamps from the source and the operational target. UDP jitter operations can measure the following:

- Per-direction jitter (source to destination and destination to source)
- Per-direction packet-loss

- Per-direction delay (one-way delay)
- Round-trip delay (average round-trip time)

As the paths for the sending and receiving of data may be different (asymmetric), the per-direction data allow you to more readily identify where congestion or other problems are occurring in the network.

The UDP jitter operation functions by generating synthetic (simulated) UDP traffic. The UDP jitter operation sends N UDP packets, each of size S, sent T milliseconds apart, from a source switch to a target switch, at a given frequency of F. By default, ten packet-frames (N), each with a payload size of 10 bytes (S), are generated every 10 ms (T), and the operation is repeated every 60 seconds (F). Each of these parameters are user-configurable as shown in the following table.

Table 2: UDP Jitter Operation Parameters

UDP Jitter Operation Parameter	Default	Command
Number of packets (N)	10 packets	udp-jitter command, numpackets option
Payload size per packet (S)	32 bytes	request-data-size command
Time between packets, in milliseconds (T)	20 ms	udp-jitter command, interval option
Elapsed time before the operation repeats, in seconds (F)	60 seconds	frequency (IP SLA) command

Prerequisites for Configuring IP SLAs UDP Jitter Operations

The prerequisites for configuring IP SLAs UDP jitter operations are as follows:

- Time synchronization, such as that provided by NTP, is required between the source and the target device in order to provide accurate one-way delay (latency) measurements. Time synchronization is not required for the one-way jitter and packet loss measurements. If the time is not synchronized between the source and target devices, one-way jitter and packet loss data are returned, but values of "0" are returned for the one-way delay measurements provided by the UDP jitter operation.
- Before configuring any IP SLAs application, you can use the **show ip sla application** command to verify that the operation type is supported on your software image.

Guidelines and Limitations for UDP Jitter Operations

Configuring CoPP for IP SLA Packets

When using IP SLA operations on a large scale, a specific CoPP configuration to allow the IP SLA packets to pass through might be needed. Since IP SLA uses user defined UDP ports, there is no way to allow all IP SLA packets to the control plane. However, you can specify each destination/source port that IP SLA can use.

For more information about the verified scalability of the number of IP SLA probes, see the *Cisco Nexus 3000 Series NX-OS Verified Scalability Guide*.

The following shows an example of a CoPP configuration that allows IP SLA packets to pass through. It assumes destination ports and source ports in the range of 6500-7000.

```
ip access-list copp-system-sla-allow
  10 remark ### ALLOW SLA control packets from 1.1.1.0/24
  20 permit udp 1.1.1.0/24 any eq 1967
  30 remark ### ALLOW SLA data packets from 1.1.1.0/24 using ports 6500-7000
  40 permit udp 1.1.1.0/24 any range 6500 7000
  statistics per-entry
ip access-list copp-system-sla-deny
  10 remark ### this is a catch-all to match any other traffic
  20 permit ip any any
 statistics per-entry
class-map type control-plane match-any copp-system-class-management-allow
  match access-group name copp-system-sla-allow
class-map type control-plane match-any copp-system-class-management-deny
 match access-group name copp-system-sla-deny
policy-map type control-plane copp-system-policy
    class copp-system-class-management-allow
   police cir 4500 kbps bc 250 ms conform transmit violate drop
    class copp-system-class-management-deny
    police cir 4500~\mathrm{kbps} bc 250~\mathrm{ms} conform drop violate drop
control-plane
  service-policy input copp-system-policy
```

Matching the Netstack Port Range

IP SLA only accepts ports within the local netstack port range. The source and destination ports used in the probe's configuration must match the supported netstack ports on the SLA sender and the SLA responder.

You can use the **show sockets local-port-range** command to view the port range on the sender/responder.

The following is an example of viewing the netstack port range:

```
switch# show sockets local-port-range
Kstack local port range (15001 - 22002)
Netstack local port range (22003 - 65535)
```

Configuring and Scheduling a UDP Jitter Operation on the Source Device

This section describes how to configure and schedule a UDP jitter operation.

Configuring the IP SLAs Responder on the Destination Device

This section describes how to configure the responder on the destination device.



A responder should not configure a permanent port for the same sender. If the responder configures the permanent port for the same sender, even if the packets are successfully sent (no timeout or packet loss issues), the jitter values are zero.

Procedure

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example: switch> enable	Enter your password if prompted.
Step 2	configure terminal	Enters global configuration mode.
	Example: switch# configure terminal	
Step 3	feature sla responder	Enables the IP SLAs responder feature.
	<pre>Example: switch(config) # feature sla responder</pre>	
Step 4	Do one of the following:	-
	• ip sla responder Example: switch(config) # ip sla responder	 (Optional) Temporarily enables the responder functionality on a Cisco device in response to control messages from a source.
	• ip sla responder udp-echo ipaddress ip-address port port Example: switch(config) # ip sla responder udp-echo ipaddress 172.29.139.132 port 5000	• (Optional) Required only if protocol control is disabled on a source. Permanently enables the responder functionality on the specified IP addresses and port.
		Control is enabled by default.
Step 5	exit	(Optional) Exits global configuration mode and returns to privileged EXEC mode.
	<pre>Example: switch(config) # exit</pre>	

Configuring and Scheduling a Basic UDP Jitter Operation on the Source Device

This section describes how to configure and schedule a basic UDP jitter operation on the source device.



- If the IP SLAs operation is not running and generating statistics, add the **verify-data** command to the configuration of the operation (while configuring in IP SLA configuration mode) to enable data verification. When enabled, each operation response is checked for corruption. Use the **verify-data** command with caution during normal operations because it generates unnecessary overhead.
- Use the **debug ip sla sender trace** and **debug ip sla sender error** commands to help troubleshoot issues with an IP SLAs operation.

Procedure

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example: switch# enable	Enter your password if prompted.
Step 2	configure terminal	Enters global configuration mode.
	Example: switch# configure terminal	
Step 3	feature sla sender	Enables the IP SLAs operation feature.
	<pre>Example: switch(config) # feature sla sender</pre>	
Step 4	ip sla operation-number	Begins configuration for an IP SLAs operation and enters IP SLA configuration mode.
	<pre>Example: switch(config) # ip sla 10</pre>	, and the second
Step 5	<pre>udp-jitter {destination-ip-address destination-hostname} destination-port [source-ip {ip-address hostname}] [sourceport</pre>	Configures the IP SLAs operation as a UDP jitter operation and enters UDP jitter configuration submode.
	port-number] [control { enable disable}] [num-packets number-of-packets] [interval interpacket-interval]	Use the control disable keyword combination only if you disable the IP SLAs control protocol on both the source and target switches.
	Example: switch(config-ip-sla)# udp-jitter 172.29.139.134 5000	

	Command or Action	Purpose
Step 6	frequency seconds	(Optional) Sets the rate at which a specified IP SLAs operation repeats.
	<pre>Example: switch(config-ip-sla-jitter)# frequency 30</pre>	
Step 7	exit	Exits UDP jitter configuration submode and returns to global configuration mode.
	<pre>Example: switch(config-ip-sla-jitter)# exit</pre>	
Step 8	ip sla schedule operation-number [life {forever seconds}] [start-time {hh:mm[:ss] [month day day month] pending now after hh:mm:ss}] [ageout seconds] [recurring]	individual IP SLAs operation.
	<pre>Example: switch(config) # ip sla schedule 5 start-time now life forever</pre>	
Step 9	exit	(Optional) Exits global configuration mode and returns to privileged EXEC mode.
	<pre>Example: switch(config) # exit</pre>	
Step 10	show ip sla configuration [operation-number]	including all defaults for all IP SLAs operations
	Example: switch# show ip sla configuration 10	or a specified operation.

What to Do Next

To add proactive threshold conditions and reactive triggering for generating traps or for starting another operation, see the "Configuring Proactive Threshold Monitoring" section.

To view and interpret the results of an IP SLAs operation, use the **show ip sla statistics** command. Checking the output for fields that correspond to criteria in your service level agreement helps you to determine whether the service metrics are acceptable.

Configuring and Scheduling a UDP Jitter Operation with Additional Characteristics

This section describes how to configure and schedule a UDP jitter operation with additional characteristics.

• The IP SLAs UDP jitter operation does not support the IP SLAs History feature (statistics history buckets) because of the large data volume involved with UDP jitter operations, which means that the following commands are not supported for UDP jitter operations: history buckets-kept, history filter, historylives-kept, samples-of-history-kept, and show ip sla history.

• The MIB used by IP SLAs (CISCO-RTTMON-MIB) limits the hours-of-statistics kept for the UDP jitter operation to two hours. Configuring a larger value using the **history hours-of-statistics** global configuration change does not increase the value beyond two hours. However, the Data Collection MIB can be used to collect historical data for the operation. For information, see the CISCO-DATA-COLLECTION-MIB at http://www.cisco.com/go/mibs.



пр

- If the IP SLAs operation is not running and generating statistics, add the **verify-data** command to the configuration of the operation (while configuring in IP SLA configuration mode) to enable data verification. When enabled, each operation response is checked for corruption. Use the **verify-data** command with caution during normal operations because it generates unnecessary overhead.
- Use the **debug ip sla sender trace** and **debug ip sla sender error** commands to help troubleshoot issues with an IP SLAs operation.

Before You Begin

Before configuring a UDP jitter operation on the source device, the IP SLAs Responder must be enabled on the target device (the operational target). The IP SLAs Responder is available only on Cisco NX-OS software based devices. To enable the responder, perform the task in the "Configuring the IP SLAs Responder on the Destination Device" section.

Procedure

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Switch> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Switch# configure terminal	
Step 3	feature sla sender	Enables the IP SLAs operation feature.
	<pre>Example: switch(config) # feature sla sender</pre>	
Step 4	ip sla operation-number	Begins configuration for an IP SLAs operation and enters IP SLA configuration mode.
	Example:	C C
	Switch(config)# ip sla 10	
Step 5	udp-jitter {destination-ip-address destination-hostname} destination-port [source-ip {ip-address hostname}] [source-port port-number] [control {enable}]	Configures the IP SLAs operation as a UDP jitter operation and enters UDP jitter configuration submode.

	Command or Action	Purpose
	disable}] [num-packetsnumber-of-packets] [interval interpacket-interval]	Use the control disable keyword combination only if you disable the IP SLAs control protocol on both the source and target switches.
	Example:	and target switches.
	Switch(config-ip-sla)# udp-jitter 172.29.139.134 5000	
Step 6	history distributions-of-statistics-kept size	distributions kept per hop during an IP SLAs
	Example:	operation.
	Switch(config-ip-sla-jitter)# history distributions-of-statistics-kept 5	
Step 7	history enhanced [interval seconds] [buckets number-of-buckets]	(Optional) Enables enhanced history gathering for an IP SLAs operation.
	Example:	
	Switch(config-ip-sla-jitter)# history enhanced interval 900 buckets 100	
Step 8	frequency seconds	(Optional) Sets the rate at which a specified IP SLAs operation repeats.
	Example:	
	Switch(config-ip-sla-jitter)# frequency 30	
Step 9	history hours-of-statistics-kept hours	(Optional) Sets the number of hours for which statistics are maintained for an IP SLAs
	Example:	operation.
	Switch(config-ip-sla-jitter)# history hours-of-statistics-kept 4	
Step 10	owner owner-id	(Optional) Configures the Simple Network Management Protocol (SNMP) owner of an IP
	Example:	SLAs operation.
	Switch(config-ip-sla-jitter)# owner admin	
Step 11	request-data-size bytes	(Optional) Sets the protocol data size in the payload of an IP SLAs operation's request
	Example:	packet.
	<pre>Switch(config-ip-sla-jitter)# request-data-size 64</pre>	
Step 12	history statistics-distribution-interval milliseconds	(Optional) Sets the time interval for each statistics distribution kept for an IP SLAs operation.
	Example:	
	Switch(config-ip-sla-jitter)# history statistics-distribution-interval 10	

	Command or Action	Purpose
Step 13	tag text	(Optional) Creates a user-specified identifier for an IP SLAs operation.
	Example:	
	Switch(config-ip-sla-jitter)# tag TelnetPollServer1	
Step 14	threshold milliseconds	(Optional) Sets the upper threshold value for calculating network monitoring statistics created
	Example:	by an IP SLAs operation.
	Switch(config-ip-sla-jitter)# threshold 10000	
Step 15	timeout milliseconds	(Optional) Sets the amount of time an IP SLAs operation waits for a response from its request
	Example:	packet.
	Switch(config-ip-sla-jitter)# timeout 10000	
Step 16	tos number	(Optional) In an IPv4 network only, defines the ToS byte in the IPv4 header of an IP SLAs
	Example:	operation.
	Switch(config-ip-sla-jitter)# tos 160	
Step 17	verify-data	(Optional) Causes an IP SLAs operation to check each reply packet for data corruption.
	Example:	
	Switch(config-ip-sla-jitter)# verify-data	
Step 18	vrf vrf-name	(Optional) Allows monitoring within Multiprotocol Label Switching (MPLS) Virtual
	Example:	Private Networks (VPNs) using IP SLAs
	Switch(config-ip-sla-jitter)# vrf vpn-A	operations.
Step 19	exit	Exits UDP jitter configuration submode and returns to global configuration mode.
	Example:	
	Switch(config-ip-sla-jitter)# exit	
Step 20	ip sla schedule operation-number [life {forever seconds}] [start-time {hh:mm[:ss] [monthday daymonth] pending now afterhh:mm:ss}] [ageoutseconds] [recurring]	Configures the scheduling parameters for an individual IP SLAs operation.
	Example:	
	Switch(config)# ip sla schedule 5 start-time now life forever	

	Command or Action	Purpose
Step 21	exit	(Optional) Exits global configuration mode and returns to privileged EXEC mode.
	Example:	
	Switch(config)# exit	
Step 22	show ip sla configuration [operation-number]	(Optional) Displays configuration values including all defaults for all IP SLAs operations
	Example:	or a specified operation.
	Switch# show ip sla configuration 10	

What to Do Next

To add proactive threshold conditions and reactive triggering for generating traps or for starting another operation, see the Proactive Configuring Proactive Threshold Monitoring.

To view and interpret the results of IP SLAs operations, use the **show ip sla statistics** command. Checking the output for fields that correspond to criteria in your service level agreement will help you determine whether the service metrics are acceptable.

Configuration Example for a UDP Jitter Operation

This example shows two operations that are configured as UDP jitter operations, with operation 2 starting five seconds after the first operation. Both operations will run indefinitely.

```
feature sla sender
ip sla 1
udp-jitter 20.0.10.3 65051 num-packets 20
request-data-size 160
tos 128
frequency 30
ip sla schedule 1 start-time after 00:05:00
ip sla 2
udp-jitter 20.0.10.3 65052 num-packets 20 interval 10
request-data-size 20
tos 64
frequency 30
ip sla schedule 2 start-time after 00:05:05
```

On the target (destination) device:

```
feature sla responder ip sla responder
```



Configuring IP SLAs UDP Jitter Operations for VoIP

This chapter describes how to configure an IP Service Level Agreements (SLAs) User Datagram Protocol (UDP) jitter operation to proactively monitor Voice over IP (VoIP) quality levels in your network, allowing you to guarantee VoIP quality levels to your users in IPv4 networks. The IP SLAs VoIP UDP jitter operation accurately simulates VoIP traffic using common codecs and calculates consistent voice quality scores, such as Mean Opinion Score (MOS) and Calculated Planning and Improvement Factor (ICPIF), between Cisco devices in the network.



In this document, the term Voice refers to Internet telephony applications. The term Voice over IP can include the transmission of multimedia (both voice and video) over IP networks.

This chapter includes the following sections:

- Guidelines and Limitations for IP SLAs UDP Jitter Operations for VoIP, page 20
- Calculated Planning Impairment Factor, page 21
- Mean Opinion Scores, page 22
- Voice Performance Monitoring Using IP SLAs, page 23
- Codec Simulation Within IP SLAs, page 23
- IP SLAs ICPIF Value, page 24
- IP SLAs MOS Value, page 26
- Configuring and Scheduling an IP SLAs VoIP UDP Jitter Operation, page 27
- Configuration Examples for IP SLAs VoIP UDP Operation, page 30
- Configuration Examples for IP SLAs VoIP UDP Operation Statistics Output, page 32

Guidelines and Limitations for IP SLAs UDP Jitter Operations for VolP

- This feature uses UDP traffic to generate approximate Voice over IP scores. It does not provide support for the Real-Time Transport Protocol (RTP).
- The Calculated Planning Impairment Factor (ICPIF) and MOS values provided by this feature, while consistent within IP SLAs, are estimates only and are intended only for relative comparisons. The values may not match values that are determined using other methods.
- Predictions of customer opinion (such as those listed for the E-Model transmission rating factor R and derived Mean Opinion Scores) that are determined by any method are intended only for transmission planning and analysis purposes and should not be interpreted as reflecting actual customer opinions.

Configuring CoPP for IP SLA Packets

When using IP SLA operations on a large scale, a specific CoPP configuration to allow the IP SLA packets to pass through might be needed. Since IP SLA uses user defined UDP ports, there is no way to allow all IP SLA packets to the control plane. However, you can specify each destination/source port that IP SLA can use.

For more information about the verified scalability of the number of IP SLA probes, see the *Cisco Nexus 3000 Series NX-OS Verified Scalability Guide*.

The following shows an example of a CoPP configuration that allows IP SLA packets to pass through. It assumes destination ports and source ports in the range of 6500-7000.

```
ip access-list copp-system-sla-allow
  10 remark ### ALLOW SLA control packets from 1.1.1.0/24
  20 permit udp 1.1.1.0/24 any eq 1967
  30 remark ### ALLOW SLA data packets from 1.1.1.0/24 using ports 6500-7000
  40 permit udp 1.1.1.0/24 any range 6500 7000
  statistics per-entry
ip access-list copp-system-sla-deny
  10 remark ### this is a catch-all to match any other traffic
  20 permit ip any any
  statistics per-entry
class-map type control-plane match-any copp-system-class-management-allow
 match access-group name copp-system-sla-allow
class-map type control-plane match-any copp-system-class-management-deny
 match access-group name copp-system-sla-deny
policy-map type control-plane copp-system-policy
   class copp-system-class-management-allow
    set cos 7
   police cir 4500 kbps bc 250 ms conform transmit violate drop
   class copp-system-class-management-deny
   police cir 4500 kbps bc 250 ms conform drop violate drop
control-plane
  service-policy input copp-system-policy
```

Matching the Netstack Port Range

IP SLA only accepts ports within the local netstack port range. The source and destination ports used in the probe's configuration must match the supported netstack ports on the SLA sender and the SLA responder.

You can use the **show sockets local-port-range** command to view the port range on the sender/responder.

The following is an example of viewing the netstack port range:

```
switch# show sockets local-port-range

Kstack local port range (15001 - 22002)

Netstack local port range (22003 - 65535)
```

Calculated Planning Impairment Factor

The ICPIF originated in the 1996 version of ITU-T recommendation G.113, "Transmission impairments," as part of the formula Icpif = Itot - A. An ICPIF refers to the "calculated planning impairment factor." The ICPIF attempts to quantify, for comparison and planning purposes, the key impairments to voice quality that are encountered in the network.

The ICPIF is the sum of measured impairment factors (total impairments or Itot) minus a user-defined access Advantage Factor (A) that is intended to represent the user's expectations, based on how the call was placed (for example, a mobile call versus a land-line call). In its expanded form, the full formula is expressed as follows:

$$Icpif = Io + Iq + Idte + Idd + Ie - A$$

where

- Io represents impairments caused by nonoptimal loudness rating.
- Iq represents impairments caused by PCM quantizing distortion.
- *Idte* represents impairments caused by talker echo.
- *Idd* represents impairments caused by one-way transmission times (one-way delay).
- *Ie* represents impairments caused by equipment effects, such as the type of codec used for the call and packet loss.
- A represents an access Advantage Factor (also called the user Expectation Factor) that compensates for users who might accept some degradation in quality in return for ease of access.

ICPIF values are expressed in a typical range of 5 (very low impairment) to 55 (very high impairment). ICPIF values numerically less than 20 are generally considered "adequate." While intended to be an objective measure of voice quality, the ICPIF value is also used to predict the subjective effect of combinations of impairments.

The following table, taken from G.113 (02/96), shows how sample ICPIF values are expected to correspond to subjective quality judgement.

Upper Limit for ICPIF	Speech Communication Quality
5	Very good
10	Good
20	Adequate
30	Limiting case
45	Exceptional limiting case

Customers likely to react strongly (complaints, chang of network operator)	
or accompanies of commons	

For more details on the ICPIF, see the 1996 version of the G.113 specification.



The latest version of the ITU-T G.113 Recommendation (2001), no longer includes the ICPIF model. Instead, G.107 states "The Impairment Factor method, used by the E-model of ITU-T G.107, is now recommended. The earlier method that used Quantization Distortion Units is no longer recommended." The full E-Model (also called the ITU-T Transmission Rating Model), expressed as R = Ro - Is - Id - Ie + A, provides the potential for more accurate measurements of call quality by refining the definitions of impairment factors (see the 2003 version of the G.107 for details). Though the ICPIF shares terms for impairments with the E-Model, the two models are different. The IP SLAs VoIP UDP Operation feature takes advantage of observed correspondences between the ICPIF, transmission rating factor R, and MOS values, but does not support the E-Model.

Mean Opinion Scores

The quality of transmitted speech is a subjective response of the listener. Each codec used for transmission of VoIP provides a certain level of quality. A common benchmark used to determine the quality of sound produced by specific codecs is the mean opinion score (MOS). With MOS, a wide range of listeners have judged the quality of voice samples sent using particular codecs, on a scale of 1 (poor quality) to 5 (excellent quality). The opinion scores are averaged to provide the mean for each sample.

The following table shows MOS ratings and the corresponding description of quality for each value.

Table 3: MOS Ratings

Score	Quality	Description of Quality Impairment
5	Excellent	Imperceptible
4	Good	Just perceptible, but not annoying
3	Fair	Perceptible and slightly annoying
2	Poor	Annoying but not objectionable
1	Bad	Very annoying and objectionable

As the MOS ratings for codecs and other transmission impairments are known, an estimated MOS can be computed and displayed based on measured impairments. This estimated value is designated as MOS-CQE (Mean Opinion Score; Conversational Quality, Estimated) by the ITU in order to distinguish it from objective or subjective MOS values (see P.800.1 for details).

Voice Performance Monitoring Using IP SLAs

One of the key metrics in measuring voice and video quality over an IP network is jitter. Jitter indicates the variation in delay between arriving packets (inter-packet delay variance). Jitter affects voice quality by causing uneven gaps in the speech pattern of the person talking. Other key performance parameters for voice and video transmission over IP networks include latency (delay) and packet loss. IP SLAs allow you to simulate and measure these parameters in order to ensure your network is meeting or exceeding service-level agreements with your users.

IP SLAs provide a UDP jitter operation, which consists of UDP probe packets sent across the network from an origin device to a specific destination (called the operational target). This synthetic traffic is used to record the amount of jitter for the connection, as well as the round-trip time, per-direction packet loss, and one-way delay time (one-way latency). (Synthetic traffic indicates that the network traffic is simulated; that is, the traffic is generated by IP SLAs.) Data, in the form of collected statistics, can be displayed for multiple tests over a user-defined period of time, allowing you to see, for example, how the network performs at different times of the day or over the course of a week. The jitter probe can use the IP SLAs Responder to provide minimal latency at the receiving end.

The IP SLAs VoIP UDP jitter operation modifies the standard UDP jitter operation by adding the capability to return MOS and ICPIF scores in the data collected by the operation, in addition to the metrics already gathered by the UDP jitter operation. This VoIP-specific implementation allows you to determine the performance of your VoIP network.

Codec Simulation Within IP SLAs

The IP SLAs VoIP UDP jitter operation computes statistics by sending n UDP packets, each of size s, sent t milliseconds apart, from a given source switch to a given target switch, at a given frequency f. The target switch must be running the IP SLAs Responder in order to process the probe operations.

To generate MOS and ICPIF scores, you specify the codec type used for the connection when configuring the VoIP UDP jitter operation. Based on the type of codec that you configure for the operation, the number of packets (n), the size of each payload (s), the inter-packet time interval (t), and the operational frequency (f) are automatically configured with default values. However, you are given the option, if needed, to manually configure these parameters in the syntax of the **udp-jitter** command.

The following table shows the default parameters that are configured for the operation by codec.

Table 4: Default VoIP UDP Jitter Operation Parameters by Codec

Codec	Default Request Size (Packet Payload) (s)	Default Interval Between Packets (t)	Default Number of Packets (n)	Frequency of Probe Operations (f)
G.711 mu-Law (g711ulaw)	160 + 12 RTP bytes	20 ms	1000	Once every 1 minute
G.711 A-Law (g711alaw)	160 + 12 RTP bytes	20 ms	1000	Once every 1 minute
G.729A (g729a)	20 + 12 RTP bytes	20 ms	1000	Once every 1 minute

For example, if you configure the VoIP UDP jitter operation to use the characteristics for the g711ulaw codec, by default a probe operation is sent once a minute (**f**). Each probe operation consists of 1000 packets (**n**), each packet containing 180 bytes of synthetic data (**s**), sent 20 milliseconds apart (**t**).

IP SLAs ICPIF Value

ICPIF value computation with the Cisco NX-OS software is based primarily on the two main factors that can impair voice quality: delayed packets and lost packets. Because packet delay and packet loss can be measured by IP SLAs, the ICPIF formula, Icpif=Io+Iq+Idte+Idd+Ie-A, is simplified by assuming that the values of Io, Iq, and Idte are zero, as follows:

Total Impairment Factor (Icpif) = Delay Impairment Factor (Idd) + Equipment Impairment Factor (Ie) — Expectation/Advantage Factor (A)

The ICPIF value is computed by adding a Delay Impairment Factor, which is based on a measurement of delayed packets, and an Equipment Impairment Factor, which is based on a measurement of lost packets. From this sum of the total impairments measured in the network, an impairment variable (the Expectation Factor) is subtracted to yield the ICPIF.

Cisco gateways use this formula to calculate the ICPIF for received VoIP data streams.

Delay Impairment Factor

The Delay Impairment Factor (*Idd*) is a number based on two values. One value is fixed and is derived using the static values (as defined in the ITU standards) for Codec Delay, Look Ahead Delay, and Digital Signal Processing (DSP) Delay. The second value is a variable and is based on the measured one-way delay (round-trip time measurement divided by 2). The one-way delay value is mapped to a number using a mapping table that is based on a G.107 (2002 version) analytic expression.

The following table shows sample correspondences between the one-way delay measured by IP SLAs and Delay Impairment Factor values.

Table 5: Sample Correspondence of One-Way Delay to ICPIF Delay Impairment

One-Way Delay (ms)	Delay Impairment Factor
50	1
100	2
150	4
200	7

Equipment Impairment Factor

The Equipment Impairment Factor (*Ie*) is a number based on the amount of measured packet loss. The amount of measured packet loss, expressed as a percentage of total number of packets sent, corresponds with an Equipment Impairment Factor that is defined by the codec.

The following table shows sample correspondences between the packet loss measured by IP SLAs and Equipment Impairment Factor values corresponding with each other.

Table 6: Sample Correspondence of Measured Packet Loss to ICPIF Equipment Impairment

Packet Loss (as a percentage of total number of packets sent)	Equipment Impairment Value for PCM (G.711) Codecs	Equipment Impairment Value for the CS-ACELP (G.729A) Codec
2%	12	20
4%	22	30
6%	28	38
8%	32	42

Expectation Factor

The Expectation Factor, also called the Advantage Factor (A), represents the expectation that users might accept some degradation in quality in return for ease of access. For example, a mobile phone user in a hard-to-reach location might expect that the connection quality will not be as good as a traditional land-line connection. This variable is also called the Advantage Factor (short for Access Advantage Factor) because it attempts to balance an increased access advantage against a decline in voice quality.

The table below, adapted from ITU-T Rec. G.113, defines a set of provisional maximum values for A in terms of the service provided.

Table 7: Advantage Factor Recommended Maximum Values

Communication Service	Advantage/Expectation Factor: Maximum value of A
Conventional wire-line (land-line)	0
Mobility (cellular connections) within a building	5
Mobility within a geographical area or moving in a vehicle	10
Access to hard-to-reach location; (for example, via multi-hop satellite connections)	20

These values are only suggestions. To be meaningful, you should use the factor A and its selected value in a specific application consistently in any planning model that you adopt. However, the values in the table should be considered as the absolute upper limits for A.

The default Advantage Factor for IP SLAs VoIP UDP jitter operations is always zero.

IP SLAs MOS Value

IP SLAs use an observed correspondence between ICPIF and MOS values to estimate an MOS value.



The abbreviation MOS represents MOSCQE (Mean Opinion Score; Conversational Quality, Estimated).

The E model, as defined in G.107 (03/2003), predicts the subjective quality that is experienced by an average listener by combining the impairment caused by transmission parameters (such as loss and delay) into a single rating, the transmission rating factor R (the R Factor). This rating, expressed in a scale of 0 (worst) to 100 (best), can be used to predict subjective user reactions, such as the MOS. Specifically, the MOS can be obtained from the R Factor with a converting formula. Conversely, a modified inverted form can be used to calculate R Factors from MOS values.

There is also a relationship between the ICPIF value and the R Factor. IP SLAs takes advantage of this correspondence by deriving the approximate MOS score from an estimated R Factor, which, in turn, is derived from the ICPIF score.

The following table shows the MOS values that are generated for corresponding ICPIF values.

Table 8: Correspondence of ICPIF Values to MOS Values

ICPIF Range	MOS	Quality Category
0 - 3	5	Best
4 - 13	4	High
14 - 23	3	Medium
24 - 33	2	Low
34 - 43	1	Poor

IP SLAs always express the estimated MOS value as a number in the range of 1 to 5, with 5 being the best quality. A MOS value of 0 (zero) indicates that MOS data could not be generated for the operation.

Configuring and Scheduling an IP SLAs VoIP UDP Jitter Operation



Note

- Currently, IP SLAs supports only the following speech codecs (compression methods):
 - ° G.711 A Law (g711alaw: 64 kbps PCM compression method)
 - G.711 mu Law (g711ulaw: 64 kbps PCM compression method)
 - ° G.729A (g729a: 8 kbps CS-ACELP compression method)
- The following commands, available in UDP jitter configuration mode, are not valid for UDP jitter (codec) operations:
 - · history distributions-of-statistics-kept
 - history statistics-distribution-interval
 - ∘ request-data-size
- Specifying the codec-type will configure the appropriate default values for the **codec-interval**, **codec-size**, and **codec-numpacket** options. You should not specify values for the interval, size, and number of packet options unless you have a specific reason to override the defaults (for example, approximating a different codec).
- The **show ip sla configuration** command will list the values for the number of statistic distribution buckets kept and statistic distribution interval (microseconds), but these values do not apply to jitter (codec) operations.



Tip

- If the IP SLAs operation is not running and generating statistics, add the **verify-data** command to the configuration of the operation (while configuring in IP SLA configuration mode) to enable data verification. When enabled, each operation response is checked for corruption. Use the **verify-data** command with caution during normal operations because it generates unnecessary overhead.
- Use the debug ip sla trace and debug ip sla error commands to help troubleshoot issues with an IP SLAs operation.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	switch> enable	

	Command or Action	Purpose
Step 2	configure terminal	Enters global configuration mode.
	Example:	
C4 2	switch# configure terminal	Enables the ID CL As an enation feature
Step 3	feature sla sender	Enables the IP SLAs operation feature.
	<pre>Example: switch(config) # feature sla sender</pre>	
Step 4	ip sla operation-number	Begins configuration for an IP SLAs operation and enters IP SLA configuration mode.
	Example:	
	switch(config)# ip sla 10	
Step 5	udp-jitter {destination-ip-address destination-hostname} destination-port codec codec-type [codec-numpackets number-of-packets] [codec-size number-of-bytes] [codec-interval milliseconds] [advantage-factor value] [source-ip {ip-address hostname}] [source-port number-of-bytes] [control (control disable)]	Configures the operation as a jitter (codec) operation that will generate VoIP scores in addition to latency, jitter, and packet loss statistics.
	<pre>port-number] [control {enable disable}]</pre> Example:	
	switch(config-ip-sla)# udp-jitter 209.165.200.225 16384 codec g711alaw advantage-factor 10	
Step 6	history enhanced [interval seconds] [buckets number-of-buckets]	(Optional) Enables enhanced history gathering for an IP SLAs operation.
	Example:	
	switch(config-ip-sla-jitter)# history enhanced interval 900 buckets 100	
Step 7	frequency seconds	(Optional) Sets the rate at which a specified IP SLAs operation repeats.
	Example:	
	switch(config-ip-sla-jitter)# frequency 30	
Step 8	history hours-of-statistics-kept hours	(Optional) Sets the number of hours for which statistics are maintained for an IP SLAs
	Example:	operation.
	<pre>switch(config-ip-sla-jitter)# history hours-of-statistics-kept 4</pre>	

	Command or Action	Purpose
Step 9	owner owner-id	(Optional) Configures the Simple Network Management Protocol (SNMP) owner of an IP
	Example:	SLAs operation.
	<pre>switch(config-ip-sla-jitter)# owner admin</pre>	
Step 10	tag text	(Optional) Creates a user-specified identifier for an IP SLAs operation.
	Example:	
	<pre>switch(config-ip-sla-jitter)# tag TelnetPollServer1</pre>	
Step 11	threshold microseconds	(Optional) Sets the upper threshold value for calculating network monitoring statistics
	Example:	created by an IP SLAs operation.
	switch(config-ip-sla-jitter)# threshold 10000	
Step 12	timeout microseconds	(Optional) Sets the amount of time an IP SLAs operation waits for a response from its request
	Example:	packet.
	switch(config-ip-sla-jitter)# timeout 10000	
Step 13	tos number	(Optional) In an IPv4 network only, defines the ToS byte in the IPv4 header of an IP SLAs
	Example:	operation.
	switch(config-ip-sla-jitter)# tos 160	
Step 14	verify-data	(Optional) Causes an IP SLAs operation to check each reply packet for data corruption.
	Example:	
	<pre>switch(config-ip-sla-jitter)# verify-data</pre>	
Step 15	vrf vrf-name	(Optional) Allows monitoring within Multiprotocol Label Switching (MPLS) Virtual
	Example:	Private Networks (VPNs) using IP SLAs
	switch(config-ip-sla-jitter)# vrf vpn-A	operations.
Step 16	exit	Exits UDP jitter configuration submode and returns to global configuration mode.
	Example:	returns to grown configuration mode.
	switch(config-ip-sla-jitter)# exit	
Step 17	ip sla schedule operation-number [life {forever seconds}] [start-time {hh:mm[:ss] [monthday daymonth] pending now after hh:mm:ss}] [ageout seconds] [recurring]	Configures the scheduling parameters for an individual IP SLAs operation.

	Command or Action	Purpose
	Example:	
	<pre>switch(config)# ip sla schedule 5 start-time now life forever</pre>	
Step 18	exit	(Optional) Exits global configuration mode and returns to privileged EXEC mode.
	Example:	
	switch(config)# exit	
Step 19	show ip sla configuration [operation-number]	(Optional) Displays configuration values including all defaults for all IP SLAs operations
	Example:	or a specified operation.
	switch# show ip sla configuration 10	

What to Do Next

To add proactive threshold conditions and reactive triggering for generating traps or for starting another operation, see the Configuring Proactive Threshold Monitoring section.

To view and interpret the results of an IP SLAs operation use the **show ip sla statistics** command. Checking the output for fields that correspond to criteria in your service level agreement will help you determine whether the service metrics are acceptable.

Configuration Examples for IP SLAs VolP UDP Operation

This example assumes that the IP SLAs Responder is enabled on the device at 101.101.101.1:

```
switch# conf terminal
Enter configuration commands, one per line. End with {\tt CNTL/Z.}
switch(config) # feature sla sender
switch(config)# ip sla 10
switch (config-ip-sla) # udp-jitter 101.101.101.1 16384 codec g711alaw advantage-factor 2
switch(config-ip-sla-jitter)# owner admin_bofh
switch(config-ip-sla-jitter)# precision microseconds
switch(config-ip-sla-jitter)# exit
switch(config) # ip sla schedule 10 start-time now
switch(config)# exit
switch# show ip sla config 10
IP SLAs Infrastructure Engine-III
Entry number: 10
Owner: admin bofh
Taq:
Operation timeout (milliseconds): 5000
Type of operation to perform: udp-jitter
Target address/Source address: 101.101.101.1/0.0.0.0
Target port/Source port: 16384/0
Type Of Service parameter: 0x0
Codec type: g711alaw
Codec Number Of Packets: 1000
Codec Packet Size: 172
Codec Interval (milliseconds): 20
Advantage Factor: 2
Verify data: No
Operation Stats Precision: microseconds
```

```
Operation Packet Priority : normal
NTP Sync Tolerance : 0 percent
Vrf Name: default
Control Packets: enabled
Schedule:
   Operation frequency (seconds): 60 (not considered if randomly scheduled)
   Next Scheduled Start Time: Start Time already passed
   Group Scheduled : FALSE
   Randomly Scheduled : FALSE
   Life (seconds): 3600
   Entry Ageout (seconds): never
   Recurring (Starting Everyday): FALSE
   Status of entry (SNMP RowStatus): Active
Threshold (milliseconds): 5000
Distribution Statistics:
   Number of statistic hours kept: 2
   Number of statistic distribution buckets kept: 1
   Statistic distribution interval (microseconds): 20
switch#
switch# show running-config | begin "ip sla 10"
ip sla 10
  udp-jitter 101.101.101.1 16384 codec g711alaw advantage-factor 2
   precision microseconds
    owner admin bofh
ip sla schedule 10 start-time now
no logging console
switch# show ip sla configuration 10
Entry number: 10
Owner: admin bofh
Type of operation to perform: jitter
Target address: 101.101.101.1
Source address: 0.0.0.0
Target port: 16384
Source port: 0
Operation timeout (milliseconds): 5000
Codec Type: g711alaw
Codec Number Of Packets: 1000
Codec Packet Size: 172
Codec Interval (milliseconds): 20
Advantage Factor: 2
Type Of Service parameters: 0x0
Verify data: No
Vrf Name:
Control Packets: enabled
Operation frequency (seconds): 60
Next Scheduled Start Time: Start Time already passed
Life (seconds): 3600
Entry Ageout (seconds): never
Status of entry (SNMP RowStatus): Active
Connection loss reaction enabled: No
Timeout reaction enabled: No
Verify error enabled: No
Threshold reaction type: Never
Threshold (milliseconds): 5000
Threshold Falling (milliseconds): 3000
Threshold Count: 5
Threshold Count2: 5
Reaction Type: None
Number of statistic hours kept: 2
Number of statistic distribution buckets kept: 1
Statistic distribution interval (microseconds): 20
Enhanced History:
```

When a codec type is configured for a jitter operation, the standard jitter "Request size (ARR data portion)," "Number of packets," and "Interval (microseconds)" parameters do not be appear in the **show ip sla** configuration

command output. Instead, values for "Codec Packet Size," "Codec Number of Packets," and "Codec Interval (microseconds)" appear.

Configuration Examples for IP SLAs VoIP UDP Operation Statistics Output

This example shows how to display voice scores (ICPIF and MOS values) for the jitter (codec) operation:

```
switch# show ip sla st
IPSLAs Latest Operation Statistics
IPSLA operation id: 1
Type of operation: udp-jitter
        Latest RTT: 11999 microseconds
Latest operation start time: 02:39:33 UTC Sat May 05 2012
Latest operation return code: OK
Latest operation NTP sync state: NO SYNC
RTT Values:
        Number Of RTT: 10
RTT Min/Avg/Max: 9000/11999/17000 microseconds
Latency one-way time:
        Number of Latency one-way Samples: 0
        Source to Destination Latency one way \text{Min/Avg/Max: 0/0/0 microseconds}
        Destination to Source Latency one way Min/Avg/Max: 0/0/0 microseconds
Jitter Time:
        Number of SD Jitter Samples: 9
        Number of DS Jitter Samples: 9
        Source to Destination Jitter Min/Avg/Max: 0/223/2001 microseconds
        Destination to Source Jitter Min/Avg/Max: 0/2001/6001 microseconds
Packet Loss Values:
        Loss Source to Destination: 0
        Source to Destination Loss Periods Number: 0
```



Configuring IP SLAs UDP Echo Operations

This chapter describes how to configure an IP Service Level Agreements (SLAs) User Datagram Protocol (UDP) Echo operation to monitor end-to-end response time between a Cisco switch and devices using IPv4. UDP echo accuracy is enhanced by using the IP SLAs Responder at the destination Cisco switch. This module also demonstrates how the results of the UDP echo operation can be displayed and analyzed to determine how a UDP application is performing.


This chapter includes the following sections:

- UDP Echo Operation, page 33
- Guidelines and Limitations for UDP Echo Operations, page 34
- Configuring the IP SLAs Responder on the Destination Device, page 35
- Configuring a Basic UDP Echo Operation on the Source Device, page 36
- Configuring a UDP Echo Operation with Optional Parameters on the Source Device, page 37
- Scheduling IP SLAs Operations, page 39
- Configuration Example for a UDP Echo Operation, page 41

UDP Echo Operation

The UDP echo operation measures end-to-end response time between a Cisco switch and devices using IP. UDP is a transport layer (Layer 4) Internet protocol that is used for many IP services. UDP echo is used to measure response times and test end-to-end connectivity.

In the following figure, Switch A is configured as an IP SLAs Responder and Switch B is configured as the source IP SLAs device.

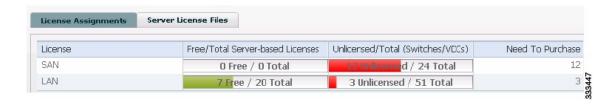

The response time (round-trip time) is computed by measuring the time taken between sending a UDP echo request message from Switch B to the destination switch--Switch A--and receiving a UDP echo reply from Switch A. UDP echo accuracy is enhanced by using the responder at Switch A, the destination Cisco switch. If the destination switch is a Cisco switch, the IP SLAs Responder sends a UDP datagram to any port number that you specified. Using the IP SLAs Responder is optional for a UDP echo operation when using Cisco devices. The IP SLAs Responder cannot be configured on non-Cisco devices.

The results of a UDP echo operation can be useful in troubleshooting issues with business-critical applications by determining the round-trip delay times and testing connectivity to both Cisco and non- Cisco devices.

Guidelines and Limitations for UDP Echo Operations

Configuring CoPP for IP SLA Packets

When using IP SLA operations on a large scale, a specific CoPP configuration to allow the IP SLA packets to pass through might be needed. Since IP SLA uses user defined UDP ports, there is no way to allow all IP SLA packets to the control plane. However, you can specify each destination/source port that IP SLA can use.

For more information about the verified scalability of the number of IP SLA probes, see the *Cisco Nexus 3000 Series NX-OS Verified Scalability Guide*.

The following shows an example of a CoPP configuration that allows IP SLA packets to pass through. It assumes destination ports and source ports in the range of 6500-7000.

```
ip access-list copp-system-sla-allow
  10 remark ### ALLOW SLA control packets from 1.1.1.0/24
  20 permit udp 1.1.1.0/24 any eq 1967
  30 remark ### ALLOW SLA data packets from 1.1.1.0/24 using ports 6500-7000
  40 permit udp 1.1.1.0/24 any range 6500 7000
  statistics per-entry
ip access-list copp-system-sla-deny
  10 remark ### this is a catch-all to match any other traffic
  20 permit ip any any
  statistics per-entry
class-map type control-plane match-any copp-system-class-management-allow
 match access-group name copp-system-sla-allow
class-map type control-plane match-any copp-system-class-management-deny
 match access-group name copp-system-sla-deny
policy-map type control-plane copp-system-policy
   class copp-system-class-management-allow
   police cir 4500 kbps bc 250 ms conform transmit violate drop
   class copp-system-class-management-deny
   police cir 4500 kbps bc 250 ms conform drop violate drop
control-plane
  service-policy input copp-system-policy
```

Matching the Netstack Port Range

IP SLA only accepts ports within the local netstack port range. The source and destination ports used in the probe's configuration must match the supported netstack ports on the SLA sender and the SLA responder.

You can use the **show sockets local-port-range** command to view the port range on the sender/responder.

The following is an example of viewing the netstack port range:

```
switch# show sockets local-port-range
Kstack local port range (15001 - 22002)
Netstack local port range (22003 - 65535)
```

Configuring the IP SLAs Responder on the Destination Device

Before You Begin

If you are using the IP SLAs Responder, ensure that the networking device to be used as the responder is a Cisco device and that you have connectivity to that device through the network.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode
	Example: switch> enable	Enter your password if prompted.
Step 2	configure terminal	Enters global configuration mode.
	Example: switch# configure terminal	
Step 3	feature sla responder	Enables the IP SLAs responder feature.
	<pre>Example: switch(config) # feature sla responder</pre>	
Step 4	Do one of the following:	-
	 ip sla responder	 Temporarily enables the IP SLAs Responder functionality on a Cisco device in response to control messages from the source. Required only if the protocol control is disabled on the source. This command permanently enables the IP SLAs Responder functionality on a specified IP address and port. Control is enabled by default.
Step 5	exit	Exits global configuration mode and returns to privileged EXEC mode.
	<pre>Example: switch(config) # exit</pre>	

Configuring a Basic UDP Echo Operation on the Source Device

This section describes how to configure a basic UDP echo operation on the source.



To add proactive threshold conditions and reactive triggering for generating traps, or for starting another operation, to an IP SLAs operation, see the "Configuring Proactive Threshold Monitoring" section.

Before You Begin

If you are using the IP SLAs Responder, ensure that you have completed the "Configuring the IP SLAs Responder on the Destination Device" section before you start this task.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	<pre>Example: switch> enable</pre>	Enter your password if prompted.
Step 2	configure terminal	Enters global configuration mode.
	Example: switch# configure terminal	
Step 3	ip sla operation-number	Begins configuration for an IP SLAs operation and enters IP SLA configuration mode.
	<pre>Example: switch(config) # ip sla 10</pre>	
Step 4	udp-echo {destination-ip-address destination-hostname} destination-port	Defines a UDP echo operation and enters IP SLA UDP configuration mode.
	[source-ip {ip-address hostname} sourceport port-number] [control {enable disable}]	Use the control disable keyword combination only if you disable the IP SLAs control protocol on both the source and target switches.
	Example: switch(config-ip-sla)# udp-echo 172.29.139.134 5000	
Step 5	frequency seconds	(Optional) Sets the rate at which a specified IP SLAs operation repeats.
	<pre>Example: switch(config-ip-sla-udp) # frequency 30</pre>	
Step 6	end	Returns to privileged EXEC mode.
	<pre>Example: switch(config-ip-sla-udp)# end</pre>	

Configuring a UDP Echo Operation with Optional Parameters on the Source Device

This section describes how to configure a UDP echo operation with optional parameters on the source device.



Note

To add proactive threshold conditions and reactive triggering for generating traps, or for starting another operation, to an IP SLAs operation, see the "Configuring Proactive Threshold Monitoring" section.

Before You Begin

If you are using an IP SLAs Responder in this operation, the responder must be configured on the destination device. See the "Configuring the IP SLAs Responder on the Destination Device" section.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example: switch> enable	Enter your password if prompted.
Step 2	configure terminal	Enters global configuration mode.
	Example: switch# configure terminal	
Step 3	ip sla operation-number	Begins configuration for an IP SLAs operation and enters IP SLA configuration mode.
	Example: switch(config)# ip sla 10	
Step 4	udp-echo {destination-ip-address destination-hostname} destination-port	Defines a UDP echo operation and enters IP SLA UDP configuration mode.
	[source-ip {ip-address hostname} source-port port-number] [control {enable disable}]	Use the control disable keyword combination
	Example: switch(config-ip-sla)# udp-echo 172.29.139.134 5000	
Step 5	history buckets-kept size	(Optional) Sets the number of history buckets that are kept during the lifetime of an IP SLAs
	Example: switch(config-ip-sla-udp)# history buckets-kept 25	operation.

	Command or Action	Purpose
Step 6	data-pattern hex-pattern	(Optional) Specifies the data pattern in an IP SLAs operation to test for data corruption.
	<pre>Example: switch (config-ip-sla-udp) # data-pattern</pre>	
Step 7	history distributions-of-statistics-kept <i>size</i> Example:	(Optional) Sets the number of statistics distributions kept per hop during an IP SLAs operation.
	switch(config-ip-sla-udp)# history distributionsof- statistics-kept 5	
Step 8	history enhanced [interval seconds] [buckets number-of-buckets]	(Optional) Enables enhanced history gathering for an IP SLAs operation.
	Example: switch(config-ip-sla-udp)# history enhanced interval 900 buckets 100	
Step 9	history filter {none all overThreshold failures}	(Optional) Defines the type of information kept in the history table for an IP SLAs operation.
	<pre>Example: switch(config-ip-sla-udp)# history filter failures</pre>	
Step 10	frequency seconds	(Optional) Sets the rate at which a specified IP SLAs operation repeats.
	<pre>Example: switch(config-ip-sla-udp)# frequency 30</pre>	
Step 11	history hours-of-statistics-kept hours	(Optional) Sets the number of hours for which statistics are maintained for an IP SLAs operation
	<pre>Example: switch(config-ip-sla-udp)# history hours-ofstatistics- kept 4</pre>	
Step 12	history lives-kept lives	(Optional) Sets the number of lives maintained in the history table for an IP SLAs operation.
	<pre>Example: switch(config-ip-sla-udp)# history lives-kept 5</pre>	
Step 13	owner owner-id	(Optional) Configures the Simple Network Management Protocol (SNMP) owner of an IP
	<pre>Example: switch(config-ip-sla-udp) # owner admin</pre>	SLAs operation.
Step 14	request-data-size bytes	(Optional) Sets the protocol data size in the payload of an IP SLAs operation's request packet.
	<pre>Example: switch(config-ip-sla-udp)# request-data-size 64</pre>	

	Command or Action	Purpose
Step 15	history statistics-distribution-interval milliseconds	(Optional) Sets the time interval for each statistics distribution kept for an IP SLAs operation.
	Example: switch(config-ip-sla-udp) # history statistics distribution- interval 10	
Step 16	tag text	(Optional) Creates a user-specified identifier for an IP SLAs operation.
	<pre>Example: switch(config-ip-sla-udp)# tag TelnetPollServer1</pre>	
Step 17	threshold milliseconds	(Optional) Sets the upper threshold value for calculating network monitoring statistics created
	Example: switch(config-ip-sla-udp)# threshold 10000	by an IP SLAs operation.
Step 18	timeout milliseconds	(Optional) Sets the amount of time an IP SLAs operation waits for a response from its request
	<pre>Example: switch(config-ip-sla-udp)# timeout 10000</pre>	packet.
Step 19	tos number	(Optional) In an IPv4 network only, defines the ToS byte in the IPv4 header of an IP SLAs
	Example:	operation.
	switch(config-ip-sla-jitter)# tos 160	
Step 20	verify-data	(Optional) Causes an IP SLAs operation to check each reply packet for data corruption.
	<pre>Example: switch(config-ip-sla-udp)# verify-data</pre>	
Step 21	exit	Exits UDP configuration submode and returns to global configuration mode.
	Example:	
	switch(config-ip-sla-udp)# exit	

Scheduling IP SLAs Operations

This section describes how to schedule IP SLAs operations.

Before You Begin



Note

- All IP SLAs operations to be scheduled must be already configured.
- The frequency of all operations scheduled in a multioperation group must be the same.
- The list of one or more operation ID numbers to be added to a multioperation group is limited to a maximum of 125 characters, including commas (,).



Tip

- If the IP SLAs operation is not running and generating statistics, add the **verify-data** command to the configuration of the operation (while configuring in IP SLA configuration mode) to enable data verification. When enabled, each operation response is checked for corruption. Use the **verify-data** command with caution during normal operations because it generates unnecessary overhead.
- Use the **debug ip sla trace** and **debug ip sla error**commands to help troubleshoot issues with an IP SLAs operation.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	<pre>Example: switch> enable</pre>	Enter your password if prompted.
Step 2	configure terminal	Enters global configuration mode.
	Example: switch# configure terminal	
Step 3	Do one of the following:	-
	• ip sla schedule operation-number [life forever { seconds}] [starttime { hh : mm[: ss] [month day day month] pending now after hh : mm : ss}] [ageout seconds] [recurring] Example: ip sla schedule operation-number [life {forever seconds}] [starttime { hh : mm[: ss] [month day day month] pending now after hh : mm : ss}] [ageout seconds] [recurring] • ip sla group schedule group-operation-number operation-id-numbers schedule-period schedule-period-range [ageout seconds] [frequency group-operation-frequency] [life {forever seconds}] [starttime { hh:mm[:ss]}]	parameters for an individual IP SLAs operation. • For the multioperations scheduler only: Specifies an IP SLAs operation group number and the range of operation numbers to be scheduled in global configuration mode.

	Command or Action	Purpose
	[month day day month] pending now after hh:mm:ss}] Example:	
	switch(config)# ip sla group schedule 1 3,4,6-9	
Step 4	exit	Exits to privileged EXEC mode.
	<pre>Example: switch(config)# exit</pre>	
Step 5	show ip sla group schedule	(Optional) Displays the IP SLAs group schedule details.
	Example: switch# show ip sla group schedule	
Step 6	show ip sla configuration	(Optional) Displays the IP SLAs configuration details.
	Example: switch# show ip sla configuration	

What to Do Next

To add proactive threshold conditions and reactive triggering for generating traps or for starting another operation, see the "Configuring Proactive Threshold Monitoring" section.

To view and interpret the results of an IP SLAs operation, use the **show ip sla statistics** command. Checking the output for fields that correspond to criteria in your service level agreement will help you determine whether the service metrics are acceptable.

Configuration Example for a UDP Echo Operation

This example shows how to configure an IP SLAs operation type of UDP echo that starts immediately and runs indefinitely:

```
ip sla 5
udp-echo 172.29.139.134 5000
frequency 30
request-data-size 160
tos 128
timeout 1000
tag FLL-RO
ip sla schedule 5 life forever start-time now
```

Configuration Example for a UDP Echo Operation



Configuring IP SLAs TCP Connect Operations

This chapter describes how to configure an IP Service Level Agreements (SLAs) TCP Connect operation to measure the response time taken to perform a TCP Connect operation between a Cisco switch and devices using IPv4. TCP Connect accuracy is enhanced by using the IP SLAs Responder at the destination Cisco switch. This chapter also describes how the results of the TCP Connect operation can be displayed and analyzed to determine how the connection times to servers and hosts within your network can affect IP service levels. The TCP Connect operation is useful for measuring response times for a server used for a particular application or connectivity testing for server availability.


This chapter includes these sections.

- Information About the TCP Connect Operation, page 43
- Guidelines and Limitations for Configuring IP SLAs TCP Connect Operations, page 44
- Configuring the IP SLAs Responder on the Destination Device, page 45
- Configuring and Scheduling a TCP Connect Operation on the Source Device, page 46
- Configuration Example for a TCP Connect Operation, page 53

Information About the TCP Connect Operation

The IP SLAs TCP Connect operation measures the response time taken to perform a TCP Connect operation between a Cisco switch and devices using IP. TCP is a transport layer (Layer 4) Internet protocol that provides reliable full-duplex data transmission. The destination device can be any device using IP or an IP SLAs Responder.

In the following figure, Switch B is configured as the source IP SLAs device and a TCP Connect operation is configured with the destination device as IP Host 1.

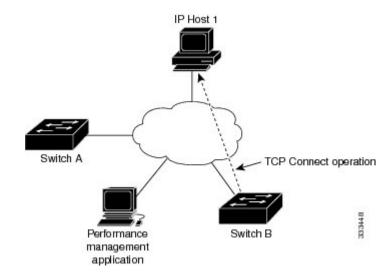

The connection response time is computed by measuring the time taken between sending a TCP request message from Switch B to IP Host 1 and receiving a reply from IP Host 1.

TCP Connect accuracy is enhanced by using the IP SLAs Responder at the destination Cisco device. If the destination switch is a Cisco switch, the IP SLAs Responder makes a TCP connection to any port number that you specified. If the destination is not a Cisco IP host, then you must specify a known destination port number such as 21 for FTP, 23 for Telnet, or 80 for an HTTP server.

Using the IP SLAs Responder is optional for a TCP Connect operation when using Cisco devices. The IP SLAs Responder cannot be configured on non-Cisco devices.

TCP Connect is used to test virtual circuit availability or application availability. Server and application connection performance can be tested by simulating Telnet, SQL, and other types of connections to help you verify your IP service levels.

Guidelines and Limitations for Configuring IP SLAs TCP Connect Operations

Configuring CoPP for IP SLA Packets

When using IP SLA operations on a large scale, a specific CoPP configuration to allow the IP SLA packets to pass through might be needed. Since IP SLA uses user defined UDP ports, there is no way to allow all IP SLA packets to the control plane. However, you can specify each destination/source port that IP SLA can use.

For more information about the verified scalability of the number of IP SLA probes, see the *Cisco Nexus 3000 Series NX-OS Verified Scalability Guide*.

The following shows an example of a CoPP configuration that allows IP SLA packets to pass through. It assumes destination ports and source ports in the range of 6500-7000.

```
ip access-list copp-system-sla-allow
  10 remark ### ALLOW SLA control packets from 1.1.1.0/24
  20 permit udp 1.1.1.0/24 any eq 1967
  30 remark ### ALLOW SLA data packets from 1.1.1.0/24 using ports 6500-7000
```

```
40 permit udp 1.1.1.0/24 any range 6500 7000
  statistics per-entry
ip access-list copp-system-sla-deny
 10 remark ### this is a catch-all to match any other traffic
  20 permit ip any any
  statistics per-entry
class-map type control-plane match-any copp-system-class-management-allow
 match access-group name copp-system-sla-allow
class-map type control-plane match-any copp-system-class-management-deny
 match access-group name copp-system-sla-deny
policy-map type control-plane copp-system-policy
   class copp-system-class-management-allow
   set cos 7
   police cir 4500 kbps bc 250 ms conform transmit violate drop
    class copp-system-class-management-deny
   police cir 4500 kbps bc 250 ms conform drop violate drop
  service-policy input copp-system-policy
```

Matching the Netstack Port Range

IP SLA only accepts ports within the local netstack port range. The source and destination ports used in the probe's configuration must match the supported netstack ports on the SLA sender and the SLA responder.

You can use the **show sockets local-port-range** command to view the port range on the sender/responder.

The following is an example of viewing the netstack port range:

```
switch# show sockets local-port-range
Kstack local port range (15001 - 22002)
Netstack local port range (22003 - 65535)
```

Configuring the IP SLAs Responder on the Destination Device

This section describes how to configure the IP SLAs Responder on the destination device.

Before You Begin

If you are using the IP SLAs Responder, ensure that the networking device to be used as the responder is a Cisco device and that you have connectivity to that device through the network.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	switch> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: switch# configure terminal	

	Command or Action	Purpose
Step 3	feature sla responder	Enables the IP SLAs responder feature.
	<pre>Example: switch(config) # feature sla responder</pre>	
Step 4	Do one of the following:	-
	• ip sla responder Example: switch(config) # ip sla responder • ip sla responder tcp-connect ipaddress ip-address port port Example: switch(config) # ip sla responder tcp-connect ipaddress 172.29.139.132 port 5000	 (Optional) Temporarily enables IP SLAs Responder functionality on a Cisco device in response to control messages from source. (Optional) Required only if protocol control is disabled on the source. The command permanently enables the IP SLAs Responder functionality on a specified IP address and port. Control is enabled by default.
Step 5	exit	(Optional) Exits global configuration mode and returns to privileged EXEC mode.
	Example:	
	switch(config)# exit	

Configuring and Scheduling a TCP Connect Operation on the Source Device

This section describes how to configure and schedule a TCP connect operation on the source device.

Perform only one of the following tasks to configure and schedule a TCP connect operation on the source device:

- Configuring and scheduling a basic TCP connect operation on the source device
- Configuring and scheduling a TCP connect operation with optional parameters on the source device

Configuring and Scheduling a Basic TCP Connect Operation on the Source Device

This section describes how to configure and schedule a basic TCP connect operation on a source device.



Note

If an IP SLAs Responder is permanently enabled on the destination IP address and port, use the **control disable** keywords with the **tcp-connect** command to disable control messages.



- If the IP SLAs operation is not running and generating statistics, add the **verify-data** command to the configuration of the operation (while configuring in IP SLA configuration mode) to enable data verification. When enabled, each operation response is checked for corruption. Use the **verify-data** command with caution during normal operations because it generates unnecessary overhead.
- Use the **debug ip sla sender trace** and **debug ip sla sender error** commands to help troubleshoot issues with an IP SLAs operation.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	switch> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	switch# configure terminal	
Step 3	feature sla sender	Enables the IP SLAs operation feature.
	<pre>Example: switch(config) # feature sla sender</pre>	
Step 4	ip sla operation-number	Begins configuration for an IP SLAs operation and enters IP SLA configuration mode.
	Example:	
	switch(config)# ip sla 10	
Step 5	tcp-connect {destination-ip-address destination-hostname} destination-port	Defines a TCP Connect operation and enters IP SLA TCP configuration mode.
	[source-ip {ip-address hostname}	
	source-portport-number] [control {enable disable}]	Use the control disable keyword combination only if you disable the IP SLAs control protocol on both the source and target switches.
		on both the source and target switches.
	Example:	
	switch(config-ip-sla)# tcp-connect 172.29.139.132 5000	

·	Command or Action	Purpose
Step 6	frequency seconds	(Optional) Sets the rate at which a specified IP SLAs operation repeats.
	Example:	
	switch(config-ip-sla-tcp)# frequency 60	
Step 7	exit	Exits IP SLA TCP configuration mode and returns to global configuration mode.
	Example:	
	switch(config-ip-sla-tcp)# exit	
Step 8	ip sla schedule operation-number [life {forever seconds}] [start-time {hh:mm[:ss] [monthday daymonth] pending now after hh:mm:ss] [ageout seconds] [recurring]	Configures the scheduling parameters for an individual IP SLAs operation.
	Example:	
	<pre>switch(config)# ip sla schedule 10 start-time now life forever</pre>	
Step 9	exit	(Optional) Exits the global configuration mode and returns to privileged EXEC mode.
	Example:	
	switch(config)# exit	

This example shows how to configure an IP SLAs operation type of TCP Connect that will start immediately and run indefinitely:

```
feature sla sender
ip sla 9
 tcp-connect 172.29.139.132 5000
 frequency 10
!
ip sla schedule 9 life forever start-time now
```

What to Do Next

To add proactive threshold conditions and reactive triggering for generating traps or for starting another operation, see the "Configuring Proactive Threshold Monitoring" section.

To view and interpret the results of an IP SLAs operation, use the **show ip sla statistics** command. Checking the output for fields that correspond to criteria in your service level agreement helps you to determine whether the service metrics are acceptable.

Configuring and Scheduling a TCP Connect Operation with Optional Parameters on the Source Device

This section describes how to configure and schedule a TCP connect operation with optional parameters on a source device.



Note

If an IP SLAs Responder is permanently enabled on the destination IP address and port, use the **control disable** keywords with the **tcp-connect** command to disable control messages.



- If the IP SLAs operation is not running and generating statistics, add the **verify-data** command to the configuration of the operation (while configuring in IP SLA configuration mode) to enable data verification. When enabled, each operation response is checked for corruption. Use the **verify-data** command with caution during normal operations because it generates unnecessary overhead.
- Use the **debug ip sla trace** and **debug ip sla error** commands to help troubleshoot issues with an IP SLAs operation.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	switch> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	switch# configure terminal	
Step 3	feature sla sender	Enables the IP SLAs operation feature.
	<pre>Example: switch(config) # feature sla sender</pre>	
Step 4	ip sla operation-number	Begins configuration for an IP SLAs operation and enters IP SLA configuration mode.
	Example:	
	switch(config)# ip sla 10	
Step 5	tcp-connect {destination-ip-address destination-hostname} destination-port	Defines a TCP Connect operation and enters IP SLA TCP configuration mode.
	[source-ip {ip-address hostname} source-port port-number] [control {enable disable}]	Use the control disable keyword combination only if you disable the IP SLAs control protocol on both the source and target switches.
	Example:	
	switch(config-ip-sla)# tcp-connect 172.29.139.132 5000	

	Command or Action	Purpose
Step 6	history buckets-kept size	(Optional) Sets the number of history buckets that are kept during the lifetime of an IP SLAs
	Example:	operation.
	<pre>switch(config-ip-sla-tcp)# history buckets-kept 25</pre>	
Step 7	history distributions-of-statistics-kept size	(Optional) Sets the number of statistics distributions kept per hop during an IP SLAs operation.
	Example: switch(config-ip-sla-tcp)# history distributions-of-statistics-kept 5	operation.
Step 8	history enhanced [interval seconds] [buckets number-of-buckets]	(Optional) Enables enhanced history gathering for an IP SLAs operation.
	Example:	
	switch(config-ip-sla-tcp)# history enhanced interval 900 buckets 100	
Step 9	history filter {none all overThreshold failures}	(Optional) Defines the type of information kept in the history table for an IP SLAs operation.
	Example:	
	<pre>switch(config-ip-sla-tcp)# history filter failures</pre>	
Step 10	frequency seconds	(Optional) Sets the rate at which a specified IP SLAs operation repeats.
	Example:	
	switch(config-ip-sla-tcp)# frequency 60	
Step 11	history hours-of-statistics-kept hours	(Optional) Sets the number of hours for which statistics are maintained for an IP SLAs
	Example:	operation.
	<pre>switch(config-ip-sla-tcp)# history hours-of-statistics-kept 4</pre>	
Step 12	history lives-kept lives	(Optional) Sets the number of lives maintained in the history table for an IP SLAs operation.
	Example:	
	<pre>switch(config-ip-sla-tcp)# history lives-kept 5</pre>	
Step 13	owner owner-id	(Optional) Configures the Simple Network Management Protocol (SNMP) owner of an IP
	Example:	SLAs operation.
	<pre>switch(config-ip-sla-tcp)# owner admin</pre>	

	Command or Action	Purpose
Step 14	history statistics-distribution-interval milliseconds	(Optional) Sets the time interval for each statistics distribution kept for an IP SLAs operation.
	Example:	
	<pre>switch(config-ip-sla-tcp)# history statistics-distribution-interval 10</pre>	
Step 15	tag text	(Optional) Creates a user-specified identifier for an IP SLAs operation.
	Example:	
	<pre>switch(config-ip-sla-tcp)# tag TelnetPollServer1</pre>	
Step 16	threshold milliseconds	(Optional) Sets the upper threshold value for calculating network monitoring statistics created
	Example:	by an IP SLAs operation.
	switch(config-ip-sla-tcp)# threshold 10000	
Step 17	timeout milliseconds	(Optional) Sets the amount of time an IP SLAs operation waits for a response from its request
	Example:	packet.
	switch(config-ip-sla-tcp)# timeout 10000	
Step 18	tos number	(Optional) In an IPv4 network only, defines the ToS byte in the IPv4 header of an IP SLAs
	Example:	operation.
	switch(config-ip-sla-jitter)# tos 160	
	Example:	
Step 19	exit	Exits TCP configuration submode and returns to global configuration mode.
	Example:	
	switch(config-ip-sla-tcp)# exit	
Step 20	ip sla schedule operation-number [life {forever seconds}] [start-time {hh:mm[:ss] [monthday daymonth] pending now after hh:mm:ss] [ageout seconds] [recurring]	Configures the scheduling parameters for an individual IP SLAs operation.
	Example:	
	<pre>switch(config)# ip sla schedule 10 start-time now life forever</pre>	

	Command or Action	Purpose
Step 21	exit	(Optional) Exits global configuration mode and returns to privileged EXEC mode.
	Example:	
	switch(config)# exit	
Step 22	show ip sla configuration [operation-number]	(Optional) Displays configuration values including all defaults for all IP SLAs operations
	Example:	or a specified operation.
	switch# show ip sla configuration 10	

This example shows how to configure all the IP SLAs parameters (including defaults) for the TCP Connect operation number 10:

```
switch# show ip sla configuration 10
IP SLAs Infrastructure Engine-III
Entry number: 10
Owner: admin
Tag: TelnetPollServer1
Operation timeout (milliseconds): 10000
Type of operation to perform: tcp-connect
Target address/Source address: 101.101.101.1/0.0.0.0
Target port/Source port: 5000/0
Type Of Service parameter: 0xa0
Vrf Name: default
Control Packets: enabled
Schedule:
   Operation frequency (seconds): 60 (not considered if randomly scheduled)
   Next Scheduled Start Time: Start Time already passed
   Group Scheduled : FALSE
   Randomly Scheduled : FALSE
   Life (seconds): Forever
   Entry Ageout (seconds): never
   Recurring (Starting Everyday): FALSE
   Status of entry (SNMP RowStatus): Active
Threshold (milliseconds): 10000
Distribution Statistics:
   Number of statistic hours kept: 4
   Number of statistic distribution buckets kept: 5
   Statistic distribution interval (milliseconds): 10
Enhanced History:
   Aggregation Interval: 900 Buckets: 100
History Statistics:
   Number of history Lives kept: 0
   Number of history Buckets kept: 25
   History Filter Type: Failures
```

What to Do Next

To add proactive threshold conditions and reactive triggering for generating traps or for starting another operation, see the "Configuring Proactive Threshold Monitoring" section.

To view and interpret the results of an IP SLAs operation, use the **show ip sla statistics** command. Checking the output for fields that correspond to criteria in your service level agreement helps you to determine whether the service metrics are acceptable.

Configuration Example for a TCP Connect Operation

This example shows how to configure a TCP Connect operation from Switch B to the Telnet port (TCP port 23) of IP Host 1 (IP address 10.0.0.1), as shown in the "TCP Connect Operation" figure in the "Information About the IP SLAs TCP Connect Operation" section. The operation is scheduled to start immediately. In this example, the control protocol is disabled on the source (Switch B). IP SLAs use the control protocol to notify the IP SLAs Responder to enable the target port temporarily. This action allows the Responder to reply to the TCP Connect operation. In this example, because the target is not a switch and a well-known TCP port is used, there is no need to send the control message.

Switch A Configuration

```
configure terminal
  feature sla responder
  ip sla responder tcp-connect ipaddress 10.0.0.1 port 23
```

Switch B Configuration

```
configure terminal
feature sla sender
ip sla 9
tcp-connect 10.0.0.1 23 control disable
frequency 30
tos 128
timeout 1000
tag FLL-RO
ip sla schedule 9 start-time now
```

This example shows how to configure a TCP Connect operation with a specific port, port 21, and without an IP SLAs Responder. The operation is scheduled to start immediately and run indefinitely.

```
configure terminal
  feature sla sender
ip sla 9
  tcp-connect 173.29.139.132 21 control disable
  frequency 30
ip sla schedule 9 life forever start-time now
```

Configuration Example for a TCP Connect Operation



Configuring a Multioperations Scheduler

This chapter describes how to schedule multiple operations using the IP Service Level Agreements (IP SLAs) Multioperations Scheduler.

This chapter includes the following sections:

- Information About the IP SLAs Multioperations Scheduler, page 55
- Default Behavior of IP SLAs Multiple Operations Scheduling, page 56
- Multiple Operations Scheduling with Scheduling Period Less Than Frequency, page 57
- Multiple Operations Scheduling When the Number of IP SLAs Operations are Greater than the Schedule Period, page 59
- Multiple Operations Scheduling with Scheduling Period Greater Than Frequency, page 60
- IP SLAs Random Scheduler, page 62
- Prerequisites for an IP SLAs Multioperation Scheduler, page 62
- Scheduling Multiple IP SLAs Operations, page 63
- Enabling the IP SLAs Random Scheduler, page 64
- Verifying IP SLAs Multiple Operations Scheduling, page 65
- Configuration Example for Scheduling Multiple IP SLAs Operations, page 67
- Configuration Example for Enabling the IP SLAs Random Scheduler, page 67

Information About the IP SLAs Multioperations Scheduler

Normal scheduling of IP SLAs operations allows you to schedule one operation at a time. If you have large networks with thousands of IP SLAs operations to monitor network performance, normal scheduling (scheduling each operation individually) is inefficient and time-consuming.

Multiple operations scheduling allows you to schedule multiple IP SLAs operations using a single command through the command-line interface (CLI) or the CISCO-RTTMON-MIB. This feature allows you to control the amount of IP SLAs monitoring traffic by scheduling the operations to run at evenly distributed times. You must specify the operation ID numbers to be scheduled and the time range over which all the IP SLAs operations should start. This feature automatically distributes the IP SLAs operations at equal intervals over a specified

time frame. The spacing between the operations (start interval) is calculated and the operations are started. This distribution of IP SLAs operations helps to minimize the CPU utilization and enhances the scalability of the network.

The IP SLAs multiple operations scheduling functionality allows you to schedule multiple IP SLAs operations as a group, using the following configuration parameters:

- Group operation number—Group configuration or group schedule number of the IP SLAs operation to be scheduled.
- Operation ID numbers—A list of IP SLAs operation ID numbers in the scheduled operation group.
- Schedule period—Amount of time for which the IP SLAs operation group is scheduled.
- Ageout—Amount of time to keep the operation in memory when it is not actively collecting information. By default, the operation remains in memory indefinitely.
- Frequency—Amount of time after which each IP SLAs operation is restarted. When the frequency option
 is specified, it overwrites the operation frequency of all operations that belong to the group. When the
 frequency option is not specified, the frequency for each operation is set to the value of the schedule
 period.
- Life—Amount of time in which the operation actively collects information. You can configure the
 operation to run indefinitely. By default, the lifetime of an operation is one hour.
- Start time—Time when the operation starts collecting information. You can specify an operation to start immediately or at an absolute start time using hours, minutes, seconds, day, and month.

The IP SLAs multiple operations scheduling functionality schedules the maximum number of operations possible without aborting. However, this functionality skips those IP SLAs operations that are already running or those operations that are not configured and therefore do not exist. The total number of operations are calculated based on the number of operations specified in the command, irrespective of the number of operations that are missing or already running. The IP SLAs multiple operations scheduling functionality displays a message that shows the number of active and missing operations. However, these messages are displayed only if you schedule operations that are not configured or are already running.

A main benefit for scheduling multiple IP SLAs operations is that the load on the network is reduced by distributing the operations equally over a scheduled period. This distribution helps you to achieve more consistent monitoring coverage. Consider configuring 60 operations to start during the same 1-second interval over a 60-second schedule period. If a network failure occurs 30 seconds after all 60 operations have started and the network is restored before the operations are due to start again (in another 30 seconds), this failure would never be detected by any of the 60 operations. However, if the 60 operations are distributed equally at 1-second intervals over a 60-second schedule period, then some of the operations would detect the network failure. Conversely, if a network failure occurs when all 60 operations are active, all 60 operations would fail, indicating that the failure is possibly more severe than it really is.


Operations of the same type and same frequency should be used for IP SLAs multiple operations scheduling. If you do not specify a frequency, the default frequency is the same as that of the schedule period. The schedule period is the period of time in which all the specified operations should run.

Default Behavior of IP SLAs Multiple Operations Scheduling

The IP SLAs Multiple Operations Scheduling feature allows you to schedule multiple IP SLAs operations as a group.

The following figure shows the scheduling of operation group 1 that includes operation 1 to operation 10. Operation group 1 has a schedule period of 20 seconds, which means that all operations in the group are started at equal intervals within a 20-second period. By default, the frequency is set to the same value as the configured schedule period. As shown in the figure, configuring the frequency is optional because 20 is the default.

Figure 3: Schedule Period Equals Frequency--Default Behavior

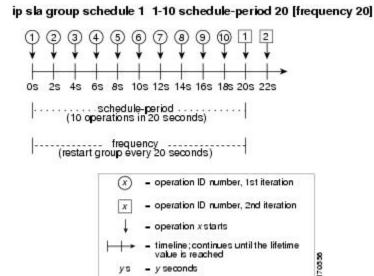

In this example, the first operation (operation 1) in operation group 1 starts at 0 seconds. All 10 operations in operation group 1 (operation 1 to operation 10) must be started in the schedule period of 20 seconds. The start time of each IP SLAs operation is evenly distributed over the schedule period by dividing the schedule period by the number of operations (20 seconds divided by 10 operations). Therefore, each operation starts 2 seconds after the previous operation.

The frequency is the period of time that passes before the operation group is started again (repeated). If the frequency is not specified, the frequency is set to the value of the schedule period. In the example shown in the figure, operation group 1 starts again every 20 seconds. This configuration provides optimal division (spacing) of operations over the specified schedule period.


Multiple Operations Scheduling with Scheduling Period Less Than Frequency

The frequency value is the amount of time that passes before the schedule group is restarted. If the schedule period is less than the frequency, there is a period of time in which no operations are started.

The following figure shows the scheduling of operation 1 to operation 10 within operation group 2. Operation group 2 has a schedule period of 20 seconds and a frequency of 30 seconds.

Figure 4: Schedule Period Is Less Than Frequency

ip sla group schedule 2 1-10 schedule-period 20 frequency 30

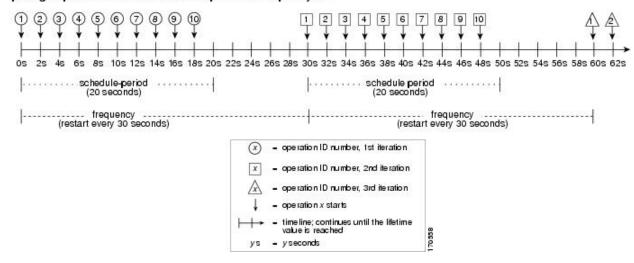

In this example, the first operation (operation 1) in operation group 2 starts at 0 seconds. All 10 operations in operation group 2 (operation 1 to operation 10) must be started in the schedule period of 20 seconds. The start time of each IP SLAs operation is evenly distributed over the schedule period by dividing the schedule period by the number of operations (20 seconds divided by 10 operations). Therefore, each operation starts 2 seconds after the previous operation.

In the first iteration of operation group 2, operation 1 starts at 0 seconds, and the last operation (operation 10) starts at 18 seconds. However, because the group frequency has been configured to 30 seconds, each operation in the operation group is restarted every 30 seconds. So, after 18 seconds, there is a gap of 10 seconds as no operations are started in the time from 19 seconds to 29 seconds. At 30 seconds, the second iteration of operation group 2 starts. As all ten operations in the operation group 2 must start at an evenly distributed interval in the configured schedule period of 20 seconds, the last operation (operation 10) in the operation group 2 always starts 18 seconds after the first operation (operation 1).

As shown in the figure, the following events occur:

- At 0 seconds, the first operation (operation 1) in operation group 2 is started.
- At 18 seconds, the last operation (operation 10) in operation group 2 is started, which means that the first iteration (schedule period) of operation group 1 ends here.
- From 19 to 29 seconds, no operations are started.
- At 30 seconds, the first operation (operation 1) in operation group 2 is started again. The second iteration of operation group 2 starts here.
- At 48 seconds (18 seconds after the second iteration started), the last operation (operation 10) in operation group 2 is started, and the second iteration of operation group 2 ends.
- At 60 seconds, the third iteration of operation group 2 starts.


This process continues until the lifetime of operation group 2 ends. The lifetime value is configurable. The default lifetime for an operation group is forever.

Multiple Operations Scheduling When the Number of IP SLAs Operations are Greater than the Schedule Period

The minimum time interval between the start of IP SLAs operations in a group operation is 1 second. Therefore, if the number of operations to be scheduled is greater than the schedule period, the IP SLAs multiple operations scheduling functionality schedules more than one operation to start within the same 1-second interval. If the number of operations getting scheduled does not equally divide into 1-second intervals, the operations are equally divided at the start of the schedule period with the remaining operations to start at the last 1-second interval.

The following figure shows the scheduling of operation 1 to operation 10 within operation group 3. Operation group 3 has a schedule period of 5 seconds and a frequency of 10 seconds.

Figure 5: Number of IP SLAs Operations Is Greater Than the Schedule Period—Even Distribution

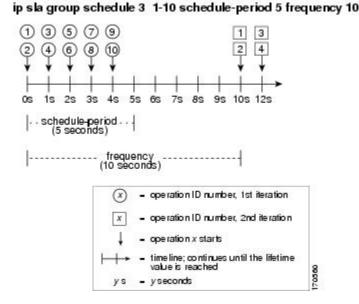


In this example, when dividing the schedule period by the number of operations (5 seconds divided by 10 operations, which equals one operation every 0.5 seconds), the start time of each IP SLAs operation is less than 1 second. Because the minimum time interval between the start of IP SLAs operations in a group operation is 1 second, the IP SLAs multiple operations scheduling functionality instead calculates how many operations it should start in each 1-second interval by dividing the number of operations by the schedule period (10 operations divided by 5 seconds). Therefore, as shown in the previous figure, two operations are started every 1 second.

As the frequency is set to 10 in this example, each iteration of operation group 3 will start 10 seconds after the start of the previous iteration. However, this distribution is not optimal as there is a gap of 5 seconds (frequency minus schedule period) between the cycles.

If the number of operations getting scheduled does not equally divide into 1-second intervals, then the operations are equally divided at the start of the schedule period with the remaining operations to start at the last 1-second interval.

The following figure shows the scheduling of operation 1 to operation 10 within operation group 4. Operation group 4 has a schedule period of 4 seconds and a frequency of 5 seconds.

Figure 6: Number of IP SLAs Operations Is Greater Than the Schedule Period—Uneven Distribution

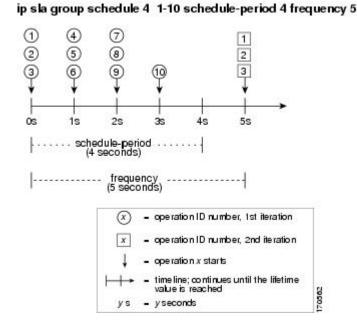


In this example, the IP SLAs multiple operations scheduling functionality calculates how many operations it should start in each 1-second interval by dividing the number of operations by the schedule period (10 operations divided by 4 seconds, which equals 2.5 operations every 1 second). Because the number of operations does not equally divide into 1-second intervals, this number will be rounded off to the next whole number (see the figure) with the remaining operations to start at the last 1-second interval.

Multiple Operations Scheduling with Scheduling Period Greater Than Frequency

The value of the frequency is the amount of time that passes before the schedule group is restarted. If the schedule period is greater than the frequency, there is a period of time in which the operations in one iteration of an operation group overlaps with the operations of the following iteration.

The following figure shows the scheduling of operation 1 to operation 10 within operation group 5. Operation group 5 has a schedule period of 20 seconds and a frequency of 10 seconds.

Figure 7: IP SLAs Group Scheduling with Schedule Period Greater Than Frequency

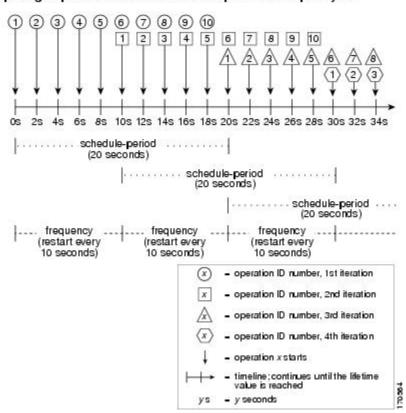

ip sla group schedule 5 1-10 schedule-period 20 frequency 10

In this example, the first operation (operation 1) in operation group 5 starts at 0 seconds. All 10 operations in operation group 5 (operation 1 to operation 10) must be started in the schedule period of 20 seconds. The start time of each IP SLAs operation is evenly distributed over the schedule period by dividing the schedule period by the number of operations (20 seconds divided by 10 operations). Therefore, each operation starts 2 seconds after the previous operation.

In the first iteration of operation group 5, operation 1 starts at 0 seconds, and operation 10, the last operation in the operation group, starts at 18 seconds. Because the operation group is configured to restart every 10 seconds (**frequency 10**), the second iteration of operation group 5 starts again at 10 seconds, before the first iteration is completed. Therefore, an overlap of operations 6 to 10 of the first iteration occurs with operations 1 to 5 of the second iteration during the time period of 10 to 18 seconds (see the previous figure). Similarly, there is an overlap of operations 6 to 10 of the second iteration with operations 1 to 5 of the third iteration during the time period of 20 to 28 seconds.

In this example, the start time of operation 1 and operation 6 does not need to be at exactly the same time, but will be within the same 2-second interval.

The configuration described in this section is not recommended because you can configure multiple operations to start within the same 1-second interval by configuring the number of operations greater than the schedule period.

IP SLAs Random Scheduler

The IP SLAs Multioperation Scheduler feature provides the capability to schedule multiple IP SLAs operations to begin at intervals equally distributed over a specified duration of time and to restart at a specified frequency. With the IP SLAs Random Scheduler feature, you can now schedule multiple IP SLAs operations to begin at random intervals uniformly distributed over a specified duration of time and to restart at uniformly distributed random frequencies within a specified frequency range. Random scheduling improves the statistical metrics for assessing network performance.



The IP SLAs Random Scheduler feature is not in compliance with RFC 2330 because it does not account for inter-packet randomness.

The random scheduler option is disabled by default. To enable the random scheduler option, you must set a frequency range when configuring a group schedule in global configuration mode. The group of operations restarts at uniformly distributed random frequencies within the specified frequency range. The following guidelines apply for setting the frequency range:

- The starting value of the frequency range should be greater than the timeout values of all the operations in the group operation.
- The starting value of the frequency range should be greater than the schedule period (amount of time for which the group operation is scheduled). This guideline ensures that the same operation does not get scheduled more than once within the schedule period.

The following guidelines apply if the random scheduler option is enabled:

- The individual operations in a group operation will be uniformly distributed to begin at random intervals
 over the schedule period.
- The group of operations restarts at uniformly distributed random frequencies within the specified frequency range.
- The minimum time interval between the start of each operation in a group operation is 100 milliseconds (0.1 seconds). If the random scheduler option is disabled, the minimum time interval is 1 second.
- Only one operation can be scheduled to begin at any given time. If the random scheduler option is disabled, multiple operations can begin at the same time.
- The first operation will always begins at 0 milliseconds of the schedule period.
- The order in which each operation in a group operation begins is random.

Prerequisites for an IP SLAs Multioperation Scheduler

- Configure the IP SLAs operations to be included in a group before scheduling the group.
- Determine the IP SLAs operations you want to schedule as a single group.
- Identify the network traffic type and the location of your network management station.
- Identify the topology and the types of devices in your network.

• Decide on the frequency of testing for each operation.

Scheduling Multiple IP SLAs Operations

This section describes how to schedule multiple IP SLAs operations.

Before You Begin



- The frequency of all operations scheduled in a multioperation group should be the same.
- The operation ID numbers are limited to a maximum of 125 characters. Do not give large integer values as operation ID numbers.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	switch> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	switch# configure terminal	
Step 3	ip sla group schedule group-operation-number operation-id-numbers schedule-period schedule-period-range [ageout seconds] [frequency group-operation-frequency] [life{forever seconds}] [start-time {hh:mm[:ss] [monthday daymonth] pending now after hh:mm:ss}]	Specifies an IP SLAs operation group number and the range of operation numbers to be scheduled in global configuration mode.
	Example:	
	switch(config)# ip sla group schedule 1 3,4,6-9	
Step 4	exit	Returns to the privileged EXEC mode.
	Example:	
	switch(config)# exit	

	Command or Action	Purpose
Step 5	show ip sla group schedule	(Optional) Displays the IP SLAs group schedule details.
	Example:	
	switch# show ip sla group schedule	
Step 6	show ip sla configuration	(Optional) Displays the IP SLAs configuration details.
	Example:	
	switch# show ip sla configuration	

Enabling the IP SLAs Random Scheduler

This section describes how to enable the IP SLAs Random Scheduler.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	switch> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	switch# configure terminal	
Step 3	ip sla group schedule group-operation-number operation-id-numbers schedule-period seconds [ageout seconds] [frequency [seconds range random-frequency-range]] [life{forever seconds}] [start-time{hh:mm[:ss] [monthday daymonth] pending now afterhh:mm:ss}]	Specifies the scheduling parameters of a group of IP SLAs operations. To enable the random scheduler option, you must configure the frequency range random-frequency-range keywords and argument.
	Example:	
	switch(config)# ip sla group schedule 2 1-3 schedule-period 50 frequency range 80-100	
Step 4	exit	Exits global configuration mode and returns to privileged EXEC mode.
	Example:	
	switch(config)# exit	

Verifying IP SLAs Multiple Operations Scheduling

This section describes how to verify IP SLAs multiple operations scheduling.

Procedure

	Command or Action	Purpose
Step 1	show ip sla statistics	(Optional) Displays the IP SLAs operation details.
	Example:	
	switch# show ip sla statistics	
Step 2	show ip sla group schedule	(Optional) Displays the IP SLAs group schedule details.
	Example:	
	switch# show ip sla group schedule	
Step 3	show ip sla configuration	(Optional) Displays the IP SLAs configuration details.
	Example:	
	switch# show ip sla configuration	

Examples

After you schedule the multiple IP SLAs operations, you can verify the latest operation details using the appropriate **show** commands.

This example shows how to schedule IP SLAs operations 1 through 20 in the operation group 1 with a schedule period of 60 seconds and a life value of 1200 seconds. By default, the frequency is equivalent to the schedule period. In this example, the start interval is 3 seconds (schedule period divided by number of operations).

```
switch (config)# ip sla group schedule 1 1-20 schedule-period 60 life 1200
```

This example shows how to display the details of the scheduled multiple IP SLAs operation:

```
switch# show ip sla group schedule
Group Entry Number: 1
Probes to be scheduled: 1-20
Total number of probes: 20
Schedule period: 60
Group operation frequency: Equals schedule period
Status of entry (SNMP RowStatus): Active
Next Scheduled Start Time: Start Time already passed
Life (seconds): 1200
Entry Ageout (seconds): never
```

This example shows how to display the details of the scheduled multiple IP SLAs operation. The example shows that the IP SLAs operations are multiple scheduled (TRUE).

```
switch# show ip sla config 1
IP SLAs Infrastructure Engine-III
Entry number: 1
Owner:
Tag:
Operation timeout (milliseconds): 5000
Type of operation to perform: udp-jitter
Target address/Source address: 101.101.101.1/0.0.0.0
Target port/Source port: 5000/0
Type Of Service parameter: 0x0
Request size (ARR data portion): 32
Packet Interval (milliseconds)/Number of packets: 20/10
Verify data: No
Vrf Name: default
Control Packets: enabled
Schedule:
   Operation frequency (seconds): 60 (not considered if randomly scheduled)
   Next Scheduled Start Time: Start Time already passed
   Group Scheduled : TRUE
   Randomly Scheduled : FALSE
   Life (seconds): 3600
   Entry Ageout (seconds): never
   Recurring (Starting Everyday): FALSE
   Status of entry (SNMP RowStatus): Active
Threshold (milliseconds): 5000
Distribution Statistics:
   Number of statistic hours kept: 2
   Number of statistic distribution buckets kept: 1
   Statistic distribution interval (milliseconds): 20
```

This example shows how to display the latest operation start time of the scheduled multiple IP SLAs operation, when the operations are scheduled at equal intervals:

```
switch# show ip sla statistics | include Latest operation start time
Latest operation start time: *03:06:21.760 UTC Tue Oct 21 2003
Latest operation start time: *03:06:24.754 UTC Tue Oct 21 2003
Latest operation start time: *03:06:27.751 UTC Tue Oct 21 2003
Latest operation start time: *03:06:30.752 UTC Tue Oct 21 2003
Latest operation start time: *03:06:33.754 UTC Tue Oct 21
                                                          2003
Latest operation start time: *03:06:36.755 UTC Tue Oct 21 2003
Latest operation start time: *03:06:39.752 UTC Tue Oct 21 2003
Latest operation start time: *03:06:42.753 UTC Tue Oct 21
                                                          2003
Latest operation start time: *03:06:45.755 UTC Tue Oct 21 2003
Latest operation start time: *03:06:48.752 UTC Tue Oct 21 2003
Latest operation start time: *03:06:51.753 UTC Tue Oct 21 2003
Latest operation start time: *03:06:54.755 UTC Tue Oct 21 2003
Latest operation start time: *03:06:57.752 UTC Tue Oct 21
Latest operation start time: *03:07:00.753 UTC Tue Oct 21 2003
Latest operation start time: *03:07:03.754 UTC Tue Oct 21
                                                          2003
Latest operation start time: *03:07:06.752 UTC Tue Oct 21 2003
Latest operation start time: *03:07:09.752 UTC Tue Oct 21 2003
Latest operation start time: *03:07:12.753 UTC Tue Oct 21
Latest operation start time: *03:07:15.755 UTC Tue Oct 21 2003
Latest operation start time: *03:07:18.752 UTC Tue Oct 21 2003
```

Configuration Example for Scheduling Multiple IP SLAs Operations

This example shows how to schedule IP SLAs operations 1 to 10 in the operation group 1 with a schedule period of 20 seconds. By default, the frequency is equivalent to the schedule period.

```
switch# ip sla group schedule 1 1-10 schedule-period 20
```

This example shows how to display the scheduled multiple IP SLAs operation. The last line in the example indicates that the IP SLAs operations are multiple scheduled (TRUE).

switch# show ip sla group schedule Multi-Scheduling Configuration: Group Entry Number: 1 Probes to be scheduled: 1-10 Schedule period: 20 Group operation frequency: 20 Multi-scheduled: TRUE

Configuration Example for Enabling the IP SLAs Random Scheduler

This example shows how to schedule IP SLAs operations 1 to 3 as a group (identified as group 2). In this example, the operations are scheduled to begin at uniformly distributed random intervals over a schedule period of 50 seconds. The first operation is scheduled to start immediately. The interval is chosen from the specified range upon every invocation of the probe. The random scheduler option is enabled and the uniformly distributed random frequencies at which the group of operations will restart is chosen within the range of 80-100 seconds.

ip sla group schedule 2 1-3 schedule-period 50 frequency range 80-100 start-time now

Configuration Example for Enabling the IP SLAs Random Scheduler



Configuring Proactive Threshold Monitoring for IP SLAs Operations

This chapter describes the proactive monitoring capabilities of IP Service Level Agreements (SLAs) using thresholds and reaction triggering.

This chapter includes the following sections:

- Information About IP SLAs Reaction Configuration, page 69
- IP SLAs Threshold Monitoring and Notifications, page 69
- Configuring Proactive Threshold Monitoring, page 71
- Configuration Example for an IP SLAs Reaction Configuration, page 73
- Verification Example for an IP SLAs Reaction Configuration, page 74
- Configuration Example for Triggering SNMP Notifications, page 74

Information About IP SLAs Reaction Configuration

IP SLAs reactions are configured to trigger when a monitored value exceeds or falls below a specified level or when a monitored event, such as a timeout or connection loss, occurs. If IP SLAs measure too high or too low of any configured reaction, IP SLAs can generate a notification to a network management application or trigger another IP SLA operation to gather more data.

IP SLAs Threshold Monitoring and Notifications

IP SLAs support proactive threshold monitoring and notifications for performance parameters such as average jitter, unidirectional latency, bidirectional round-trip time (RTT), and connectivity for most IP SLAs operations. The proactive monitoring capability also provides options for configuring reaction thresholds for important VoIP related parameters including unidirectional jitter, unidirectional packet loss, and unidirectional VoIP voice quality scoring.

Notifications for IP SLAs are configured as a triggered reaction. Packet loss, jitter, and Mean Operation Score (MOS) statistics are specific to IP SLAs jitter operations. Notifications can be generated for violations in

either direction (source-to-destination and destination-to-source) or for out-of-range RTT values for packet loss and jitter. Events, such as traps, are triggered when the RTT value rises above or falls below a specified threshold.

IP SLAs can generate system logging (syslog) messages when a reaction condition occurs. System logging messages can be sent as Simple Network Management Protocol (SNMP) traps (notifications) using the CISCO-RTTMON-MIB. SNMP traps for IP SLAs are supported by the CISCO-RTTMON-MIB and CISCO-SYSLOG-MIB.


Severity levels in the CISCO-SYSLOG-MIB are SyslogSeverity INTEGER {emergency(1), alert(2), critical(3), error(4), warning(5), notice(6), info(7), debug(8)}.

The values for severity levels are defined differently for the system logging process in the Cisco NX-OS software. Severity levels for the system logging process in the Cisco NX-OS software are: {emergency (0), alert (1), critical (2), error (3), warning (4), notice (5), informational (6), debugging (7)}.

IP SLAs threshold violations are logged as level 6 (informational) within the Cisco NX-OS system logging process but are sent as level 7 (info) traps from the CISCO-SYSLOG-MIB.

Notifications are not issued for every occurrence of a threshold violation. The following figure shows the sequence for a triggered reaction that occurs when the monitored element exceeds the upper threshold. An event is sent and a notification is issued when the rising threshold is exceeded for the first time. Subsequent threshold-exceeded notifications are issued only after the monitored value falls below the falling threshold before exceeding the rising threshold again.

Figure 8: IP SLAs Triggered Reaction Condition and Notifications for Threshold Exceeded

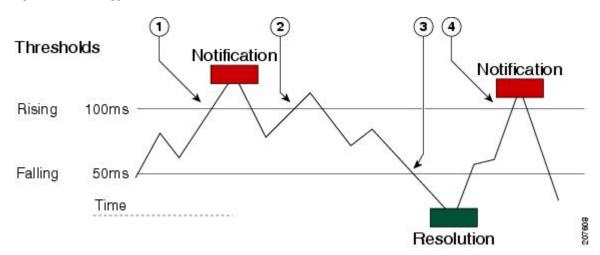

1	An event is sent and a threshold-exceeded notification is issued when the rising threshold is exceeded for the first time.
2	Consecutive over-rising threshold violations occur without issuing additional notifications.
3	The monitored value goes below the falling threshold.
4	Another threshold-exceeded notification is issued when the rising threshold is exceeded only after the monitored value first fell below the falling threshold.



Note

A lower-threshold notification is also issued the first time that the monitored element falls below the falling threshold (3). Subsequent notifications for lower-threshold violations are issued only after the rising threshold is exceeded before the monitored value falls below the falling threshold again.

RTT Reactions for Jitter Operations

RTT reactions for jitter operations are triggered only at the end of the operation and use the latest value for the return-trip time (LatestRTT), which matches the value of the average return-trip time (RTTAvg).

SNMP traps for RTT for jitter operations are based on the value of the average return-trip time (RTTAvg) for the whole operation and do not include RTT values for each individual packet sent during the operation. For example, if the average is below the threshold, up to half of the packets can actually be above the threshold, but this detail is not included in the notification because the value is for the whole operation only.

Only syslog messages are supported for RTTAvg threshold violations. Syslog nmessages are sent from the CISCO-RTTMON-MIB.

Configuring Proactive Threshold Monitoring

This section describes how to configure thresholds and reactive triggering for generating traps or starting another operation.

Before You Begin

• Configure IP SLAs operations to be started when violation conditions are met.



- RTT reactions for jitter operations are triggered only at the end of the operation and use the latest value for the return-trip time (LatestRTT).
- SNMP traps for RTT for jitter operations are based on the average value for the return-trip time (RTTAvg) for the whole operation only and do not include return-trip time values for individual packets sent during the operation. Only syslog messages are supported for RTTAvg threshold violations.
- Only syslog messages are supported for RTT violations during jitter operations.
- Only SNMP traps are supported for RTT violations during nonjitter operations.
- Only syslog messages are supported for non-RTT violations other than timeout, connectionLoss, or verifyError.
- Both SNMP traps and syslog messages are supported for timeout, connectionLoss, or verifyError violations only.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example: switch> enable	Enter your password if prompted.
Step 2	configure terminal	Enters global configuration mode.
	Example: switch# configure terminal	
Step 3	ip sla reaction-configuration operation-number react monitored-element [action-type option] [threshold-type {average [number-of-measurements] consecutive [occurrences] immediate never xofy [x-valuey-value]}] [threshold-value upper-thresholdlower-threshold]	Configures the action (SNMP trap or IP SLAs trigger) that is to occur based on violations of specified thresholds.
	<pre>Example: switch(config) # ip sla reaction-configuration 10 react jitterAvg threshold-type immediate threshold-value 5000 3000 action-type trapAndTrigger</pre>	
Step 4	ip sla reaction-trigger operation-number target-operation	(Optional) Starts another IP SLAs operation when the violation conditions are met.
	<pre>Example: switch(config) # ip sla reaction-trigger 10 2</pre>	Required only if the ip sla reaction-configuration command is configured with either the trapAndTrigger or triggerOnly keyword.
Step 5	ip sla logging traps	(Optional) Enables IP SLAs syslog messages from CISCO-RTTMON-MIB.
	<pre>Example: switch(config) # ip sla logging traps</pre>	
Step 6	snmp-server enable traps ip sla	(Optional) Enables system to generate CISCO-RTTMON-MIB traps.
	<pre>Example: switch(config) # snmp-server enable traps ip sla</pre>	
Step 7	snmp-server host {hostname ip-address} [vrf vrf-name] [traps informs] [version {1 2c 3 [auth noauth priv]}] community-string [udp-port port] [notification-type]	(Optional) Sends traps to a remote host. Required if the snmp-server enable traps command is configured.
	<pre>Example: switch(config) # snmp-server host 10.1.1.1 public</pre>	

	Command or Action	Purpose
Step 8	exit	Exits global configuration mode and returns to privileged EXEC mode.
	<pre>Example: switch(config) # exit</pre>	
Step 9	show ip sla reaction configuration [operation-number]	(Optional) Displays the configuration of proactive threshold monitoring.
	Example: switch# show ip sla reaction configuration 10	
Step 10	show ip sla reaction trigger [operation-number]	(Optional) Displays the configuration status and operational state of target operations to
	Example: switch# show ip sla reaction trigger 2	be triggered.

Configuration Example for an IP SLAs Reaction Configuration

This example shows how to configure IP SLAs operation 10 to send an SNMP logging trap when the MOS value either exceeds 4.9 (best quality) or falls below 2.5 (poor quality):

switch(config)# ip sla reaction-configuration 10 react mos threshold-type immediate threshold-value 490 250 action-type trapOnly
This example shows how to display the default configuration:

```
\verb| switch# | \textbf{show ip sla reaction-configuration 1}|\\
Entry number: 1
Index: 1
Reaction: mos
Threshold Type: Immediate
Rising: 490
Falling: 250
Action Type: Trap only
switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
switch(confiq) # ip sla reaction-configuration 10 react mos threshold-type immediate
threshold-value 490 250 action-type trapOnly
switch(config)# show ip sla reaction-configuration 1
Entry number: 1
Reaction: rtt
Threshold Type: Never
Rising (milliseconds): 5000
Falling (milliseconds): 3000
Threshold Count: 5
Threshold Count2: 5
Action Type: None
```

Verification Example for an IP SLAs Reaction Configuration

This example shows that multiple monitored elements are configured for the IP SLAs operation (1), as indicated by the values of Reaction: in the output:

switch# show ip sla reaction-configuration Entry Number: 1 Reaction: RTT Threshold type: Never Rising (milliseconds): 5000 Falling (milliseconds): 3000 Threshold Count: 5 Threshold Count2: 5 Action Type: None Reaction: jitterDSAvg
Threshold type: average Rising (milliseconds): 5 Falling (milliseconds): 3 Threshold Count: 5 Threshold Count2: 5 Action Type: triggerOnly Reaction: jitterDSAvg Threshold type: immediate Rising (milliseconds): 5 Falling (milliseconds): 3 Threshold Count: 5 Threshold Count2: 5 Action Type: trapOnly Reaction: PacketLossSD Threshold type: immediate Rising (milliseconds): 5 Threshold Falling (milliseconds): 3 Threshold Count: 5 Threshold Count2: 5 Action Type: trapOnly

Configuration Example for Triggering SNMP Notifications

This example shows how to configure proactive threshold monitoring so that CISCO-SYSLOG-MIB traps are sent to the remote host at 10.1.1.1 if the threshold values for RTT or VoIP MOS are violated:

```
! Configure the operation on source.
switch(config) # ip sla 1

switch(config-ip-sla) # udp-jitter 10.1.1.1 3000 codec g711alaw
switch(config-ip-sla-jitter) # exit

switch(config) # ip sla schedule 1 start now life forever

! Configure thresholds and reactions.
switch(config) # ip sla reaction-configuration 1 react rtt threshold-type immediate
threshold-value 3000 2000 action-type trapOnly

switch(config) # ip sla reaction-configuration 1 react MOS threshold-type consecutive 4
threshold-value 390 220 action-type trapOnly

switch(config) # ip sla logging traps

! The following command sends traps to the specified remote host.
switch(config) # snmp-server host 10.1.1.1 version 2c public
```

```
! The following command is needed for the system to generate CISCO-SYSLOG-MIB traps. switch(config) \# snmp-server enable traps
```

This example shows that IP SLAs threshold violation notifications are generated as level 6 (informational) in the Cisco NX-OS system logging process:

```
3d18h:%RTT-6-SAATHRESHOLD:RTR(11):Threshold exceeded for MOS
```

This example shows an SNMP notification from the CISCO-SYSLOG-MIB for the same violation is a level 7 (info) notification:

```
3d18h:SNMP:V2 Trap, reqid 2, errstat 0, erridx 0 sysUpTime.0 = 32613038 snmpTrapOID.0 = ciscoSyslogMIB.2.0.1 clogHistoryEntry.2.71 = RTT clogHistoryEntry.3.71 = 7 clogHistoryEntry.4.71 = SAATHRESHOLD clogHistoryEntry.5.71 = RTR(11):Threshold exceeded for MOS clogHistoryEntry.6.71 = 32613037
```

Configuration Example for Triggering SNMP Notifications



Configuring IP SLA PBR Object Tracking

This chapter describes the PBR object tracking capabilities of IP Service Level Agreements (SLAs). This chapter includes the following sections:

- IP SLA PBR Object Tracking, page 77
- Configuring IP SLA PBR Object Tracking, page 78
- Example: Configuring IP SLA PBR Object Tracking, page 82

IP SLA PBR Object Tracking

This feature allows you to make sure that the next hop is reachable before that route is used. If the next hop is not reachable, another route is used as defined in the policy-based routing (PBR) configuration. If no other route is present in the route map, the routing table is used.

Object Tracking

Object tracking monitors objects such as the following:

- State of the line protocol of an interface
- Existence of an entry in the routing table

Clients, such as PBR, can register their interest in specific, tracked objects and then take action when the state of the objects changes.

IP SLA PBR Object Tracking Overview

The PBR Object Tracking feature gives policy-based routing (PBR) access to all the objects that are available through the tracking process. The tracking process enables you to track individual objects—such as ICMP ping reachability, routing adjacency, an application running on a remote device, a route in the Routing Information Base (RIB)—or to track the state of an interface line protocol.

Object tracking functions in the following manner: PBR informs the tracking process that a certain object should be tracked, and the tracking process then notifies PBR when the state of that object changes.

Configuring IP SLA PBR Object Tracking

	Command or Action	Purpose	
Step 1	configure terminal	Enters global	configuration mode.
	Example:		
	switch# configure terminal		
Step 2	ip sla operation-number	(SLA) operation	IOS IP Service Level Agreement on configuration and enters IP SLA
	Example:	configuration	mode.
	switch(config)# ip sla 1		
Step 3	icmp-echo destination-ip-address	-	IP SLA Internet Control Message (IP) echo probe operation.
	Example:		
	<pre>switch(config-ip-sla)# icmp-echo 10.3.3.2</pre>		
Step 4	exit		configuration mode and returns the al configuration mode.
	Example:		
	switch(config-ip-sla)# exit		
Step 5	ip sla schedule operation-number life forever start-time now	-	e scheduling parameters for a single SLA operation.
	Example:		cample, the time parameters for the operation are configured.
	<pre>switch(config)# ip sla schedule 1 life forever start-time now</pre>		at Steps 2 to 5 to configure and dule other IP SLA operations.
Step 6	track object-number ip sla entry-number reachability		chability of an object and enters guration mode.
	Example:		at this step to track other ations.
	<pre>switch(config)# track 1 ip sla 1 reachability</pre>		

mode and returns tion mode.
s control list (ACL) r packets.
(ACL) rule that onditions.
CL in order to
(ACL) rule that onditions.
de and returns the mode.
ters route-map
eve a destination s that is permitted
1

	Command or Action	Purpose
Step 15	match ipv6 address access-list-name Example: switch(config-route-map) # match ipv6 address IPv6ACL	Distributes any routes that have a destination IPv6 network number address that is permitted by a standard access list.
Step 16	set ip next-hop verify-availability next-hop-address track object	Configures the route map to verify the reachability of the tracked object.
	Example: switch(config-route-map)# set ip next-hop verify-availability 198.51.100.2 track 1	Note Repeat this step to configure the route map to verify the reachability of other tracked objects.
Step 17	set ipv6 next-hop verify-availability next-hop-address track object	Configures the route map to verify the reachability of the tracked object.
	Example: switch(config-route-map)# set ipv6 next-hop verify-availability 2001:DB8:1::1 track 1	Note Repeat this step to configure the route map to verify the reachability of other tracked objects.
Step 18	<pre>set ip default next-hop verify-availability next-hop-address track object Example: switch(config-route-map)# set ip default next-hop verify-availability 192.0.2.2 track 1</pre>	Configures the route map to verify the reachability of the default next hop.
Step 19	<pre>set ipv6 default next-hop verify-availability next-hop-address track object Example: switch (config-route-map) # set ipv6 default next-hop verify-availability 2001:DB8:0:ABCD::1 track 1</pre>	Configures the route map to verify the reachability of the default next hop.
Step 20	<pre>exit Example: switch(config-route-map)# exit</pre>	Exits route-map configuration mode and returns the router to global configuration mode.
Step 21	<pre>interface type number Example: switch(config) # interface ethernet 0/0</pre>	Specifies an interface type and number and enters interface configuration mode.

	Command or Action	Purpose
Step 22	ip address ip-address mask	Specifies a primary IP address for an interface.
	Example:	
	switch(config-if)# ip address 10.2.2.1 255.255.255.0	
Step 23	ipv6 address ip-address mask	Specifies a primary IPv6 address for an interface.
	Example:	
	switch(config-if)# ipv6 address 2001:DB8::/48	
Step 24	ip policy route-map map-tag	Enables policy routing and identifies a route map to be used for policy routing.
	Example:	
	switch(config-if)# ip policy route-map PBR	
Step 25	ipv6 policy route-map map-tag	Enables IPv6 policy routing and identifies a route map to be used for policy routing.
	Example:	
	<pre>switch(config-if)# ipv6 policy route-map PBR</pre>	
Step 26	end	Exits interface configuration mode and returns the router to privileged EXEC mode.
	Example:	
	switch(config-if)# end	
Step 27	show track object-number	(Optional) Displays tracking information.
	Example:	Use this command to verify the configuration.
	switch# show track 1	
Step 28	show route-map map-name	(Optional) Displays route map information.
	Example:	
	switch# show route-map PBR	

Example: Configuring IP SLA PBR Object Tracking

This example shows that object tracking is configured for PBR:

```
! Configure and schedule IP SLA operations
ip sla 1
icmp-echo 10.3.3.2
ip sla schedule 1 life forever start-time now
ip sla 2
udp-echo 10.4.4.2
ip sla schedule 2 life forever start-time now
ip sla 3
 icmp-echo 10.5.5.2
ip sla schedule 3 life forever start-time now
 icmp-echo 10.6.6.2
ip sla schedule 4 life forever start-time now
ip sla 5
icmp-echo 10.7.7.2
ip sla schedule 5 life forever start-time now
! Configure Object Tracking to track the operations
track 1 ip sla 1 reachability
track 2 ip sla 2 reachability
track 3 ip sla 3 reachability
track 4 ip sla 4 reachability
track 5 ip sla 5 reachability
! Configure ACL
ip access-list standard ACL
permit ip 10.2.2.0/24 10.1.1.1/32
! Configure PBR policing on the router
route-map PBR
match ip address ACL
set ip next-hop verify-availability 10.3.3.2 track 1
set ip next-hop verify-availability 10.4.4.2 track 2 set ip next-hop verify-availability 10.5.5.2 track 3
! Apply PBR policy on the incoming interface of the router.
interface ethernet 0/0
ip address 10.2.2.1 255.255.255.0
  ip policy route-map PBR
! Display PBR related information
show route-map
show track brief
show ip sla stat
show ip sla application
```



Configuring IP SLAs DNS Operations

This chapter describes the DNS operations capabilities of IP Service Level Agreements (SLAs). This chapter includes the following sections:

- IP SLAs DNS Operations, page 83
- Configuring a Basic DNS Operation on the Source Device, page 84
- Configuring a DNS Operation with Optional Parameters on the Source Device, page 85
- Scheduling IP SLAs Operations, page 88
- Configuration Example for a DNS Operation, page 89
- Configuration Example for a Basic DNS Operation on the Source Device, page 89
- Configuration Example for a DNS Operation with Optional Parameters on the Source Device, page 90
- Configuration Example for Scheduling IP SLAs Operations, page 90

IP SLAs DNS Operations

This section describes how to configure the IP SLAs DNS operations to measure the difference between the time taken to send a DNS request and receive a reply.

Guidelines and Limitations for IP SLA DNS Operations


• IPv6 is not supported for IP SLA DNS operations.

DNS Operation

The DNS operation measures the difference between the time taken to send a DNS request and receive a reply. DNS is used in the Internet for translating names of network nodes into addresses. The IP SLAs DNS operation queries for an IP address if you specify a hostname or queries for a hostname if you specify an IP address.

In the following figure, Device B is configured as the source IP SLAs device and a DNS operation is configured with the DNS server as the destination device.

Figure 9: DNS Operation

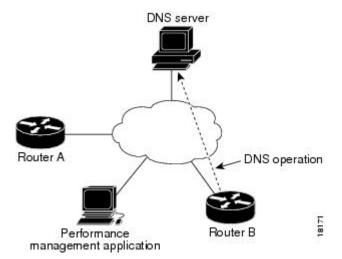

The connection response time is computed by measuring the difference between the time taken to send a request to the DNS server and the time a reply is received by Device B. The resulting DNS lookup time can help you analyze your DNS performance. Faster DNS lookup times translate to a faster web server access experience.

Configuring a Basic DNS Operation on the Source Device

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example:	
	switch# configure terminal	
Step 2	feature sla sender	Enables the IP SLAs operation feature.
	<pre>Example: switch(config) # feature sla sender</pre>	
Step 3	ip sla operation-number	Begins configuration for an IP SLAs operation and enters IP SLA configuration
	Example:	mode.
	switch(config)# ip sla 10	

	Command or Action	Purpose
Step 4	dns {destination-ip-address destination-hostname} name-server ip-address source-ip {ip-address hostname} source-port port-number]	Defines a DNS operation and enters IP SLA DNS configuration mode.
	Example:	
	switch(config-ip-sla)# dns host1 name-server 172.20.2.132	
Step 5	frequency seconds	(Optional) Sets the rate at which a specified IP SLAs operation repeats.
	Example:	
	switch(config-ip-sla-dns)# frequency 60	
Step 6	end	Exits to privileged EXEC mode.
	Example:	
	switch(config-ip-sla-dns)# end	

Configuring a DNS Operation with Optional Parameters on the Source Device

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example:	
	switch# configure terminal	
Step 2	feature sla sender	Enables the IP SLAs operation feature.
	<pre>Example: switch(config)# feature sla sender</pre>	
Step 3	ip sla operation-number	Begins configuration for an IP SLAs operation and enters IP SLA configuration mode.
	Example:	
	switch(config)# ip sla 10	

	Command or Action	Purpose
Step 4	dns {destination-ip-address destination-hostname} name-server ip-address source-ip {ip-address hostname} source-port port-number]	
	Example:	
	switch(config-ip-sla)# dns host1 name-server 172.20.2.132	
Step 5	history buckets-kept size	(Optional) Sets the number of history buckets that are kept during the lifetime of an IP SLAs
	Example:	operation.
	<pre>switch(config-ip-sla-dns)# history buckets-kept 25</pre>	
Step 6	history distributions-of-statistics-kept size	(Optional) Sets the number of statistics distributions kept per hop during an IP SLAs
	Example:	operation.
	<pre>switch(config-ip-sla-dns)# history distributions-of-statistics-kept 5</pre>	
Step 7	history filter{none all overThreshold failures}	(Optional) Defines the type of information kept in the history table for an IP SLAs operation.
	Example:	
	<pre>switch(config-ip-sla-dns)# history filter failures</pre>	
Step 8	frequency seconds	(Optional) Sets the rate at which a specified IP SLAs operation repeats.
	Example:	
	switch(config-ip-sla-dns)# frequency 30	
Step 9	history hours-of-statistics-kept hours	(Optional) Sets the number of hours for which statistics are maintained for an IP SLAs
	Example:	operation.
	<pre>switch(config-ip-sla-dns)# history hours-of-statistics-kept 4</pre>	
Step 10	history lives-kept lives	(Optional) Sets the number of lives maintained in the history table for an IP SLAs operation.
	Example:	
	<pre>switch(config-ip-sla-dns)# history lives-kept 2</pre>	

(Optional) Configures the Simple Network Management Protocol (SNMP) owner of an IP
, ,
SLAs operation.
owner admin
n-interval (Optional) Sets the time interval for each statistics distribution kept for an IP SLAs operation.
history nterval 10
(Optional) Creates a user-specified identifier for an IP SLAs operation.
tag
(Optional) Sets the upper threshold value for calculating network monitoring statistics
created by an IP SLAs operation.
threshold
(Optional) Sets the amount of time an IP SLAs operation waits for a response from its request
packet.
timeout 10000
Exits to privileged EXEC mode.
end

Scheduling IP SLAs Operations



Note

- All IP SLAs operations that you want to be scheduled must be already configured.
- The frequency of all operations scheduled in a multioperation group must be the same.
- The list of one or more operation ID numbers to be added to a multioperation group is limited to a maximum of 125 characters in length, including commas (,).

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example:	
	switch# configure terminal	
Step 2	 ip sla schedule operation-number [life {forever seconds}] [start-time {[hh:mm:ss] [month day day month] pending now after hh:mm:ss}] [ageout seconds] [recurring] ip sla group schedule group-operation-number operation-id-numbers {schedule-period schedule-period-range schedule-together} [ageout seconds] [frequency group-operation-frequency] [life {forever seconds}] [start-time {hh:mm[:ss] [month day day month] pending now after hh:mm[:ss]}] 	Configures the scheduling parameter for an individual IP SLAs operation. Specifies an IP SLAs operation grounumber and the range of operation numbers for a multioperation scheduler.
	<pre>Example: switch(config) # ip sla schedule 10 life forever start-time now</pre>	
	Example:	
	<pre>switch(config)# ip sla group schedule 1 3,4,6-9 life forever start-time now</pre>	
Step 3	exit	Exits to privileged EXEC mode.
	Example:	
	switch(config)# exit	

	Command or Action	Purpose
Step 4	show ip sla group schedule	(Optional) Displays IP SLAs group schedule details.
	Example:	
	switch# show ip sla group schedule	
Step 5	show ip sla configuration	(Optional) Displays IP SLAs configuration details.
	Example:	
	switch# show ip sla configuration	

Configuration Example for a DNS Operation

This example shows how to configure a DNS operation from Device B to the DNS server (IP address 172.20.2.132) as shown in the "DNS Operation" figure in the "DNS Operation" section. The operation is scheduled to start immediately. In this example, the target address is a hostname and the DNS operation will query the DNS server for the IP address associated with the hostname host1. No configuration is required at the DNS server.

```
feature sla sender
ip sla 11
dns host1 name-server 172.20.2.132
frequency 50
timeout 8000
tag DNS-Test
ip sla schedule 11 start-time now
```

Configuration Example for a Basic DNS Operation on the Source Device

This example shows how to configure a basic DNS operation on the source device:

```
switch# configure terminal
switch(config)# feature sla sender
switch(config)# ip sla 10
switch(config-ip-sla)# dns host1 name-server 172.20.2.132
switch(config-ip-sla-dns)# frequency 60
switch(config-ip-sla-dns)# end
```

Configuration Example for a DNS Operation with Optional Parameters on the Source Device

This example shows how to configure a DNS operation with optimal parameters on the source device:

```
switch# configure terminal
switch(config)# feature sla sender
switch(config-ip-sla) # dns host1 name-server 172.20.2.132
switch (config) # ip sla 10
switch (config-ip-sla) # dns host1 name-server 172.20.2.132
switch (config-ip-sla-dns) # history buckets-kept 25
switch(config-ip-sla-dns)# history distributions-of-statistics-kept 5
switch(config-ip-sla-dns)# history filter failures
switch(config-ip-sla-dns)# frequency 30
switch(config-ip-sla-dns)# history hours-of-statistics-kept 4
switch(config-ip-sla-dns)# history lives-kept 2
switch(config-ip-sla-dns)# owner admin
switch(config-ip-sla-dns)# history statistics-distribution-interval 10
switch(config-ip-sla-dns)# tag TelnetPollServer1
switch(config-ip-sla-dns)# threshold 9000
switch(config-ip-sla-dns)# timeout 10000
switch(config-ip-sla-dns)# end
```

Configuration Example for Scheduling IP SLAs Operations

This example shows how to schedule IP SLAs operations:

```
switch# configure terminal
switch(config)# feature sla sender
switch(config)# ip sla schedule 10 life forever start-time now
switch(config)# exit
switch# show ip sla group schedule
switch# show ip sla configuration
```



Configuring IP SLAs ICMP Echo Operations

This module describes how to configure an IP Service Level Agreements (SLAs) Internet Control Message Protocol (ICMP) Echo operation to monitor end-to-end response time between two devices using IPv4.

This chapter includes the following sections:


- ICMP Echo Operation, page 91
- Configuring an ICMP Echo Operation, page 92
- Configuration Examples for IP SLAs ICMP Echo Operations, page 98

ICMP Echo Operation

The Internet Control Message Protocol (ICMP) Echo operation measures the end-to-end response time between two devices that use IPv4. The response time is computed by measuring the time taken between sending an ICMP Echo request message to the destination and receiving an ICMP Echo reply. An ICMP Echo is useful for troubleshooting network connectivity issues. The results of the ICMP Echo operation can be displayed and analyzed to determine how the network IP connections are performing.

In the following figure, the ICMP Echo operation uses the ping test to measure the response time between the source IP SLAs device and the destination IP device. Many customers use IP SLAs ICMP-based operations, in-house ping testing, or ping-based dedicated probes for response time measurements.

Figure 10: ICMP Echo Operation

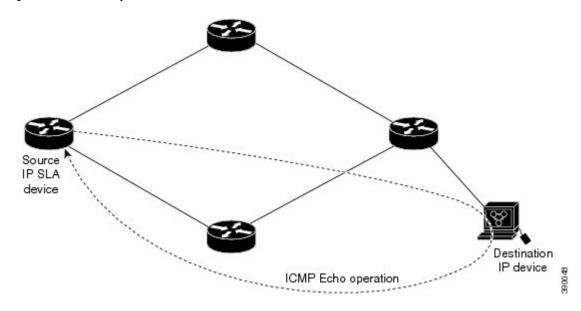

The IP SLAs ICMP Echo operation conforms to the same IETF specifications for ICMP ping testing and the two methods result in the same response times.

Guidelines and Limitations for IP SLAs ICMP Echo Operations

We recommend that you use a Cisco networking device as the destination device although you can use any networking device that supports RFC 862, the Echo protocol.

Configuring an ICMP Echo Operation



Perform one of the following tasks:

• Configuring a basic ICMP Echo operation on the source device

You do not need to configure an IP SLAs Responder on the destination device.

• Configuring an ICMP Echo operation with optional parameters

Configuring a Basic ICMP Echo Operation on a Source Device

Procedure

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example: switch# configure terminal	
Step 2	feature sla sender	Enables the IP SLAs operation feature.
	<pre>Example: switch(config) # feature sla sender</pre>	
Step 3	<pre>ip sla operation-number Example: switch (config) # ip sla 6</pre>	Begins configuration for an IP SLAs operation and enters IP SLA configuration mode.
Step 4	icmp-echo {destination-ip-address destination-hostname} [source-ip {ip-address hostname} source-interface interface-name]	Defines an ICMP Echo operation and enters IP SLA ICMP Echo configuration mode.
	Example: switch(config-ip-sla) # icmp-echo 192.0.2.134	
Step 5	end	Exits IP SLA ICMP Echo configuration mode and returns to privileged EXEC mode.
	Example: switch(config-ip-sla-echo)# end	

What to Do Next

To add proactive threshold conditions and reactive triggering to an IP Service Level Agreements (SLAs) operation for the purpose of generating traps or for starting another operation, see the "Configuring Proactive Threshold Monitoring" section in the "Configuring Proactive Threshold Monitoring for IP SLAs Operations" chapter.

Configuring an ICMP Echo Operation with Optional Parameters

Before You Begin

Perform this task on the source device.

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example: switch# configure terminal	
Step 2	feature sla sender	Enables the IP SLAs operation feature.
	Example: switch(config)# feature sla sender	
Step 3	ip sla operation-number	Begins configuration for an IP SLAs operation and enters IP SLA configuration mode.
	<pre>Example: switch(config) # ip sla 6</pre>	
Step 4	icmp-echo {destination-ip-address destination-hostname} [source-ip {ip-address hostname} source-interface interface-name]	Defines an Echo operation and enters IP SLA Echo configuration mode.
	Example: switch(config-ip-sla) # icmp-echo 192.0.2.134 source-ip 192.0.2.132	
Step 5	history buckets-kept size Example: switch (config-ip-sla-echo) # history buckets-kept 25	(Optional) Sets the number of history buckets that are kept during the lifetime of an IP SLAs operation.
Step 6	history distributions-of-statistics-kept size Example: switch(config-ip-sla-echo)# history	(Optional) Sets the number of statistics distributions that are kept per hop during an IP SLAs operation.
Step 7	history enhanced [interval seconds] [buckets number-of-buckets	(Optional) Enables enhanced history gathering for an IP SLAs operation.
	Example: switch(config-ip-sla-echo)# history enhanced interval 900 buckets 100	
Step 8	history filter {none all overThreshold failures}	(Optional) Defines the type of information kept in the history table for an IP SLAs operation.
	<pre>Example: switch(config-ip-sla-echo) # history filter failures</pre>	

	Command or Action	Purpose
Step 9	<pre>frequency seconds Example: switch(config-ip-sla-echo) # frequency 30</pre>	(Optional) Sets the rate at which a specified IP SLAs operation repeats.
Step 10	history hours-of-statistics-kept hours Example: switch(config-ip-sla-echo)# history hours-of-statistics-kept 4	(Optional) Sets the number of hours for which statistics are maintained for an IP SLAs operation.
Step 11	history lives-kept lives Example: switch(config-ip-sla-echo)# history lives-kept 5	(Optional) Sets the number of lives maintained in the history table for an IP SLAs operation.
Step 12	<pre>owner owner-id Example: switch(config-ip-sla-echo)# owner admin</pre>	(Optional) Configures the Simple Network Management Protocol (SNMP) owner of an IP SLAs operation.
Step 13	request-data-size bytes Example: switch(config-ip-sla-echo)# request-data-size 64	(Optional) Sets the protocol data size in the payload of an IP SLAs operation's request packet.
Step 14	history statistics-distribution-interval milliseconds Example: switch(config-ip-sla-echo) # history statistics-distribution-interval 10	(Optional) Sets the time interval for each statistics distribution kept for an IP SLAs operation.
Step 15	<pre>tag text Example: switch(config-ip-sla-echo)# tag TelnetPollServer1</pre>	(Optional) Creates a user-specified identifier for an IP SLAs operation.
Step 16	<pre>threshold milliseconds Example: switch(config-ip-sla-echo) # threshold 10000</pre>	(Optional) Sets the upper threshold value for calculating network monitoring statistics created by an IP SLAs operation.
Step 17	<pre>timeout milliseconds Example: switch(config-ip-sla-echo) # timeout 10000</pre>	(Optional) Sets the amount of time an IP SLAs operation waits for a response from its request packet.

	Command or Action	Purpose
Step 18	tos number Example: switch(config-ip-sla-echo) # tos 160	(Optional) Defines a type of service (ToS) byte in the IPv4 header of an IP SLAs operation.
Step 19	<pre>verify-data Example: switch(config-ip-sla-echo) # verify-data</pre>	(Optional) Causes an IP SLAs operation to check each reply packet for data corruption.
Step 20	<pre>vrf {vrf-name default management} Example: switch (config-ip-sla-echo) # vrf vpn-A</pre>	(Optional) Allows monitoring within Multiprotocol Label Switching (MPLS) Virtual Private Networks (VPNs) using IP SLAs operations.
Step 21	<pre>end Example: switch(config-ip-sla-echo)# end</pre>	Exits IP SLA Echo configuration mode and returns to privileged EXEC mode.

What to Do Next

To add proactive threshold conditions and reactive triggering to an IP Service Level Agreements (SLAs) operation for the purpose of generating traps or for starting another operation, see the "Configuring Proactive Threshold Monitoring" section in the "Configuring Proactive Threshold Monitoring for IP SLAs Operations" chapter.

Scheduling IP SLAs Operations



Note

- All IP SLAs operations that you want to be scheduled must be already configured.
- The frequency of all operations scheduled in a multioperation group must be the same.
- The list of one or more operation ID numbers to be added to a multioperation group is limited to a maximum of 125 characters in length, including commas (,).

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example: switch# configure terminal	

	Command or Action	Purpose
Step 2	Perform one of the following tasks: • ip sla schedule operation-number [life {forever seconds}] [start-time {[hh:mm:ss] [month day day month] pending now after hh:mm:ss}] [ageout seconds] [recurring] • ip sla group schedule group-operation-number operation-id-numbers {schedule-period schedule-period-range schedule-together} [ageout seconds] [frequency group-operation-frequency] [life {forever seconds}] [start-time {hh:mm[:ss]} [month day day month] pending now after hh:mm[:ss]}]	numbers for a multioperation scheduler.
	<pre>Example: switch(config) # ip sla schedule 10 life forever start-time now Example: switch(config) # ip sla group schedule 1 3,4,6-9 life forever start-time now</pre>	
Step 3	exit Example: switch(config)# exit	Exits global configuration mode and returns to privileged EXEC mode.
Step 4	show ip sla group schedule Example: switch# show ip sla group schedule	Displays IP SLAs group schedule details.
Step 5	show ip sla configuration Example: switch# show ip sla configuration	Displays IP SLAs configuration details.

Troubleshooting Tips

- If the IP SLAs operation is not running and not generating statistics, add the **verify-data** command to the configuration of the operation (while configuring in IP SLA configuration mode) to enable data verification. When data verification is enabled, each operation response is checked for corruption. Use the **verify-data** command with caution during normal operations because it generates unnecessary overhead.
- Use the **debug ip sla trace** and **debug ip sla error** commands to help troubleshoot issues with an IP SLAs operation.

What to Do Next

To add proactive threshold conditions and reactive triggering to an IP Service Level Agreements (SLAs) operation for the purpose of generating traps or for starting another operation, see the "Configuring Proactive Threshold Monitoring" section in the "Configuring Proactive Threshold Monitoring for IP SLAs Operations" chapter.

Configuration Examples for IP SLAs ICMP Echo Operations

Example: Configuring a Basic ICMP Echo Operation on a Source Device

This example shows how to configure a basic ICMP Echo Operation on a source device:

```
switch# configure terminal
switch(config)# feature sla sender
switch(config)# ip sla 6
switch(config-ip-sla)# icmp-echo 192.0.2.134 source-ip 192.0.2.132
switch(config-ip-sla-echo)# end
```

Example: Configuring an ICMP Echo Operation with Optional Parameters

This example shows how to configure an IP SLAs operation type of ICMP Echo that will start immediately and run indefinitely:

```
switch# configure terminal
switch(config)# feature sla sender
switch(config)# ip sla 6
switch(config-ip-sla)# icmp-echo 192.0.2.134 source-ip 192.0.2.132
switch(config-ip-sla-echo)# frequency 300
switch(config-ip-sla-echo)# request-data-size 38
switch(config-ip-sla-echo)# tos 160
switch(config-ip-sla-echo)# timeout 6000
switch(config-ip-sla-echo)# tag SFO-RO
switch(config-ip-sla-echo)# end
```

Example: Scheduling IP SLAs Operations

This example shows how to schedule an IP SLAs operation that is already configured:

```
switch# configure terminal
switch(config)# feature sla sender
switch(config)# ip sla schedule 6 life forever start-time now
switch(config)# exit
```



Glossary

Term	Definition
codec	In the context of IP Telephony, a codec is a compression and decompression algorithm used to transfer voice and video data more efficiently. Voice codec types are typically referred to using the ITU recommendation number that defines the algorithm (for example, "G.711" instead of "PCM").
CS-ACELP	The codec type defined in the reference documents G.729 and G.729A, Coding of speech at 8 kbit/s using conjugate-structure algebraic-code-excited linear-prediction (CS-ACELP).
ITU	The International Telecommunication Union. The ITU is an international organization within the United Nations System where governments and the private sector coordinate global telecom networks and services. The ITU Telecommunication Standardization Sector (ITU-T), responsible for defining standards (Recommendations) covering all fields of telecommunications, is one of the three operational sectors of the ITU. The ITU website address is http://www.itu.int.
ITU-T	ITU Telecommunication Standardization Sector. The ITU-T is one of the three operational sectors of the ITU and is responsible for defining standards (called ITU-T Recommendations) covering all fields of telecommunications.
MOS-CQE (Mean Opinion Score; Conversational Quality, Estimated)	The score calculated by a network planning model that aims at predicting the quality in a conversational application situation. Estimates of conversational quality carried out according to ITU-T Rec. G.107, when transformed to a mean opinion score (MOS), give results in terms of MOS-CQE. ¹
PCM	The codec type defined in the reference document G.711, <i>Pulse code modulation (PCM) of voice frequencies</i> .

 $^{{\}small 1}\\ {\small \ \, Definition\ from\ ITU-T\ Recommendation\ P.800.1.\ Used\ in\ accordance\ with\ the\ ITU\ Copyright\ and\ Disclaimer\ Notice.}$