



INDEX

A

aaa accounting default command **6-2**
aaa authentication login console command **6-3**
aaa authentication login default command **6-5**
aaa authentication login error-enable command **6-7**
aaa authentication login mschap command **6-8**
aaa authorization commands default command **6-9**
aaa authorization config-commands default command **6-11**
aaa group server radius command **6-13**
aaa user default-role command **6-14**
abort (session) command **7-2**
action command **6-15**
attach fex command **4-2**

B

bandwidth (interface) command **2-2**
bandwidth (QoS) command **5-2**
banner motd command **1-2**
beacon command **4-3**
boot command **1-3**

C

cd command **1-5**
cdp command **2-4**
cdp enable command **2-6**
cfs distribute command **8-2**
cfs ipv4 distribute command **8-3**
cfs ipv4 mcast-address command **8-5**
cfs ipv6 distribute command **8-7**

cfs ipv6 mcast-address command **8-9**
cfs region command **8-11**
cfs staggered-merge command **8-12**
channel-group (Ethernet) command **2-7**
class (policy map type qos) command **5-3**
class-map command **5-7**
class-map type network-qos command **5-9**
class type network-qos command **5-5**
class type queuing command **5-6**
clear access-list counters command **6-16**
clear accounting log command **6-17**
clear cli history command **1-6**
clear cores command **1-7**
clear debug-logfile command **1-8**
clear device-alias command **8-13**
clear fcdomain command **8-14**
clear fcflow stats command **8-15**
clear fcns statistics command **8-16**
clear fc-port-security command **8-21**
clear fcsm log command **8-17**
clear fcs statistics command **8-18**
clear fctimer session command **8-19**
clear fspf counters command **8-20**
clear install failure-reason command **1-9**
clear ip arp command **6-18**
clear license command **1-10**
clear logging logfile command **7-3**
clear logging nvram command **7-4**
clear logging onboard command **7-5**
clear logging session command **7-6**
clear mac access-list counters command **2-10**
clear mac address-table dynamic command **2-11**
clear ntp session command **7-7**

Send comments to nx5000-docfeedback@cisco.com

clear ntp statistics command **7-8**
 clear rlir command **8-23**
 clear rscn session command **8-24**
 clear rscn statistics command **8-25**
 clear spanning-tree counters command **2-13**
 clear spanning-tree detected-protocol command **2-14**
 clear user command **1-11**
 clear zone command **8-26**
 cli var name command **1-12**
 clock set command **1-14**
 clock summer-time command **1-15**
 clock timezone command **1-17**
 commit (session) command **7-9**
 configure session command **1-18**
 configure terminal command **1-19**
 copy command **1-20**
 copy running-config startup-config command **1-24**

D

databits command **1-25**
 deadtime command **6-19**
 debug logfile command **1-26**
 debug logging command **1-27**
 delay (interface) command **2-15**
 delete command **1-28**
 deny (IPv4) command **6-21**
 deny (IPv6) command **6-31**
 deny (MAC) command **6-39**
 description (fex) command **4-4**
 description (interface) command **2-16**
 description (user role) command **6-42**
 description command **5-10**
 device-alias abort command **8-27**
 device-alias commit command **8-28**
 device-alias database command **8-29**
 device-alias distribute command **8-30**
 device-alias import command **8-31**
 device-alias mode command **8-32**

device-alias name command **8-33**
 device-alias rename command **8-34**
 diagnostic bootup level command **7-10**
 dir command **1-30**
 discover custom-list command **8-35**
 discover scsi-target command **8-36**

E

echo command **1-32**
 end command **1-33**
 errdisable detect cause command **2-17**
 errdisable recovery cause command **2-18**
 errdisable recovery interval command **2-19**
 exec-timeout command **1-34**
 exit (EXEC) command **1-36**
 exit (global) command **1-37**

F

fabric-binding activate command **8-39**
 fabric-binding database command **8-40**
 fabric-binding database diff command **8-41**
 fabric-binding database vsan command **8-42**
 fabric-binding enable command **8-44**
 fabric profile command **8-38**
 fcalias clone command **8-52**
 fcalias name command **8-53**
 fcalias rename command **8-54**
 fcdomain abort vsan command **8-57**
 fcdomain command **8-55**
 fcdomain commit vsan command **8-58**
 fcdomain distribute command **8-59**
 fcdomain rfc-reject command **8-60**
 fcdroplatency command **8-61**
 fcflow stats command **8-62**
 fcid-allocation command **8-64**
 fcinterop fcid-allocation command **8-65**

Send comments to nx5000-docfeedback@cisco.com

fcns no-auto-poll command **8-66**
 fcns proxy-port command **8-67**
 fcns reject-duplicate-pwvn command **8-68**
 fcoe fcf-priority command **8-69**
 fcoe fcmap command **8-70**
 fcoe fka-adv-period command **8-71**
 fcoe vsan command **8-72**
 fcping command **8-74**
 fc-port-security abort command **8-47**
 fc-port-security command **8-45**
 fc-port-security commit command **8-48**
 fc-port-security database command **8-49**
 fc-port-security distribute command **8-51**
 fcroute command **8-76**
 fcsp command **8-81**
 fcsp dhchap command **8-83**
 fcs plat-check-global command **8-78**
 fcsp reauthenticate command **8-85**
 fcsp timeout command **8-86**
 fcs register command **8-79**
 fcs virtual-device-add command **8-80**
 fctimer abort command **8-88**
 fctimer command **8-87**
 fctimer commit command **8-89**
 fctimer distribute command **8-90**
 fctrace command **8-91**
 fdmi suppress-updates command **8-92**
 feature (user role feature group) command **6-43**
 feature fcoe command **1-38**
 feature fcsp command **8-94**
 feature fex command **1-39**
 feature interface-vlan command **1-40**
 feature lacp command **1-41**
 feature lldp command **1-42**
 feature npiv command **8-95**
 feature npv command **8-96**
 feature port-security command **8-93**
 feature port-track command **8-97**
 feature private-vlan command **1-43**

feature tacacs+ command **1-44**
 feature udld command **1-45**
 feature vpc command **1-46**
 feature vtp command **2-20**
 fex associate command **4-7**
 fex command **4-5**
 fex pinning redistribute command **4-9**
 fex queue-limit command **4-10**
 find command **1-47**
 flowcontrol command **5-11**
 format command **1-48**
 fspf config command **8-98**
 fspf cost command **8-100**
 fspf dead-interval command **8-101**
 fspf enable command **8-102**
 fspf hello-interval command **8-103**
 fspf passive command **8-104**
 fspf retransmit-interval command **8-105**

G

gunzip command **1-49**
 gzip command **1-50**

H

hardware buffer-threshold command **4-11**
 hardware multicast hw-hash command **2-21**
 hardware queue-limit command **4-13**
 hostname command **1-51**

I

in-order-guarantee command **8-106**
 install all command **1-52**
 install license command **1-55**
 instance vlan command **2-22**
 interface ethernet command **2-24**

Send comments to nx5000-docfeedback@cisco.com

interface fc command **8-107**
 interface policy deny command **6-44**
 interface port-channel command **2-25**
 interface san-port-channel command **8-109**
 interface vfc command **8-111**
 ip access-list (session) command **7-11**
 ip access-list command **6-45**
 ip igmp snooping (EXEC) command **2-27**
 ip igmp snooping (VLAN) command **2-28**
 ip port access-group (session) command **7-12**
 ip port access-group command **6-47**
 ipv6 access-list command **6-49**
 ipv6 port traffic-filter command **6-50**

L

lacp port-priority command **2-30**
 lacp rate fast command **2-31**
 lacp system-priority command **2-33**
 line console command **1-56**
 line vty command **1-57**
 link debounce command **2-34**
 lldp (interface) command **8-115**
 lldp command **8-113**
 locator-led fex command **4-15**
 logging abort command **7-13, 8-116**
 logging commit command **7-14, 8-117**
 logging console command **7-15**
 logging distribute command **7-16, 8-118**
 logging event command **7-17**
 logging event port command **7-18**
 logging fex command **4-16**
 logging level command **7-19**
 logging logfile command **7-21**
 logging module command **7-22**
 logging monitor command **7-23**
 logging server command **7-24**
 logging timestamp command **7-26**

M

maatch cos command **5-13**
 mac access-list command **6-52**
 mac address-table aging-time command **2-36**
 mac address-table notification command **2-38**
 mac address-table static command **2-39**
 mac port access-group command **6-54**
 match access-group command **5-12**
 match command **6-56**
 match dscp command **5-14**
 match ip rtp command **5-16**
 match precedence command **5-17**
 match protocol command **5-19**
 match qos-group command **5-21**
 member (fcalias configuration mode) command **8-119**
 member (zone configuration mode) command **8-121**
 member (zoneset configuration mode) command **8-123**
 modem in command **1-58**
 modem init-string command **1-59**
 modem set-string user-input command **1-61**
 monitor session command **2-41**
 move command **1-62**
 mtu command **5-23**
 multicast-optimize command **5-24**

N

name (MST configuration) command **2-44**
 name (VLAN configuration) command **2-43**
 npv auto-load-balance disruptive command **8-124**
 npv traffic-map command **8-125**
 ntp abort command **7-28**
 ntp command **7-27**
 ntp commit command **7-29**
 ntp distribute command **7-30**
 ntp sync-retry command **7-31**

Send comments to nx5000-docfeedback@cisco.com

P

parity command **1-64**
 pause no-drop command **5-25**
 peer-config-check-bypass command **10-2**
 peer-keepalive command **10-4**
 permit (IPv4) command **6-57**
 permit (IPv6) **6-67**
 permit (MAC) command **6-75**
 permit interface command **6-78**
 permit vlan command **6-80**
 permit vrf command **6-82**
 permit vsan command **6-83**
 ping6 command **1-67**
 ping command **1-65**
 pinning max-links command **4-17**
 policy-map type network-qos command **5-27**
 policy-map type qos command **5-28**
 policy-map type queuing command **5-29**
 port-channel load-balance ethernet command **2-45**
 port-track force-shut command **8-126**
 port-track interface command **8-127**
 priority command **5-30**
 priority-flow-control command **5-31**
 private-vlan association command **2-49**
 private-vlan command **2-47**
 private-vlan synchronize command **2-51**
 purge fcdomain fcid command **8-128**

Q

queue-limit command **5-32**

R

radius-server deadtime command **6-84**
 radius-server directed-request command **6-85**
 radius-server host command **6-86**
 radius-server key command **6-88**

radius-server retransmit command **6-89**
 radius-server timeout command **6-90**
 reload command **1-69**
 remark command **6-91**
 resequence command **6-93**
 revision command **2-52**
 rlir preferred-cond fcid command **8-129**
 rmdir command **1-71**
 role command **10-7**
 role feature-group name command **6-95**
 role name command **6-96**
 rscn abort command **8-132**
 rscn command **8-131**
 rscn commit command **8-133**
 rscn distribute command **8-134**
 rscn event-tov command **8-135**
 rule command **6-97**
 run-script command **1-72**

S

san-port-channel persistent command **8-136**
 save command **1-73**
 scsi-target command **8-137**
 send command **1-74**
 serial command **4-19**
 server command **6-99**
 service-policy command **5-33**
 session-limit command **1-76**
 set cos (policy map type network-qos) command **5-35**
 set qos-group command **5-36**
 setup command **1-75**
 show aaa accounting command **6-101**
 show aaa authentication command **6-102**
 show aaa authorization command **6-103**
 show aaa groups command **6-104**
 show aaa user command **6-105**
 show access-lists command **6-106**
 show accounting log command **6-107**

Send comments to nx5000-docfeedback@cisco.com

- show banner motd command **1-77**
- show boot command **1-78**
- show cfs command **9-2**
- show class-map type network-qos command **5-37**
- show class-map type qos command **5-39**
- show class-map type queuing command **5-44**
- show cli alias command **1-79**
- show cli history command **1-80**
- show cli variables command **1-81**
- show clock command **1-82**
- show configuration session command **1-83**
- show copyright command **1-85**
- show debug logfile command **1-86**
- show debug npv command **9-4**
- show device-alias command **9-5**
- show diagnostic bootup level command **7-32**
- show diagnostic result command **7-33**
- show diagnostic result fex command **4-21**
- show environment command **1-87**
- show environment fex command **4-23**
- show fabric-binding command **9-7**
- show fc2 command **9-9**
- show fcalias command **9-13**
- show fcdomain command **9-14**
- show fcdroplatency command **9-16**
- show fcflow stats command **9-17**
- show fcid-allocation command **9-18**
- show fcns database command **9-20**
- show fcns statistics command **9-22**
- show fcoe command **9-23**
- show fcoe database command **9-24**
- show fc-port-security command **9-11**
- show fcroute command **9-26**
- show fcs command **9-28**
- show fcsp command **9-30**
- show fctimer command **9-32**
- show fdmi command **9-34**
- show feature command **1-90, 10-8**
- show fex command **4-25**
- show fex detail command **4-27**
- show fex transceiver command **4-30**
- show fex version command **4-32**
- show file command **1-91**
- show flogi command **9-35**
- show fsfp command **9-37**
- show hardware internal command **1-92**
- show hostname command **1-93**
- show incompatibility system command **1-94**
- show in-order-guarantee command **9-38**
- show install all command **1-95**
- show interface brief command **3-2**
- show interface capabilities command **3-4**
- show interface debounce command **3-6**
- show interface ethernet command **3-8**
- show interface fcoe command **9-39**
- show interface fex-fabric command **4-33**
- show interface fex-intf command **4-34**
- show interface flowcontrol command **5-46**
- show interface mac-address command **3-12**
- show interface port-channel command **3-10**
- show interface priority-flow-control command **5-48**
- show interface private-vlan mapping command **3-14**
- show interface status err-disabled command **3-15**
- show interface switchport command **3-17**
- show interface transceiver command **3-19**
- show interface transceiver fex-fabric command **4-35**
- show interface untagged-cos command **5-49**
- show interface vlan command **3-21**
- show inventory command **1-96**
- show inventory fex command **4-37**
- show ip access-lists command **6-108**
- show ip arp command **6-110**
- show ip igmp snooping command **3-23**
- show ipv6 access-lists command **6-112**
- show lacp command **3-25**
- show license command **1-98**
- show license host-id command **1-100**
- show license usage command **1-101**

Send comments to nx5000-docfeedback@cisco.com

- show line command **1-103**
- show lldp command **9-42**
- show loadbalancing command **9-45**
- show locator-led command **4-38**
- show logging console command **7-35**
- show logging info command **7-36**
- show logging last command **7-37**
- show logging level command **7-38**
- show logging logfile command **7-39**
- show logging module command **7-40**
- show logging monitor command **7-41**
- show logging nvram command **7-42**
- show logging onboard command **7-43**
- show logging pending command **7-48**
- show logging pending-diff command **7-49**
- show logging server command **7-51**
- show logging session status command **7-50**
- show logging status command **7-52**
- show logging timestamp command **7-53**
- show mac access-lists command **6-114**
- show mac address-table aging-time command **3-27**
- show mac address-table command **3-31**
- show mac address-table count command **3-29**
- show mac address-table notification command **3-30**
- show module command **1-105, 10-9**
- show module fex command **4-39**
- show monitor session command **3-33**
- show npv flogi-table command **9-46**
- show npv status command **9-47**
- show npv traffic-map command **9-48**
- show ntp peers command **7-55**
- show ntp peer-status command **7-54**
- show ntp statistics command **7-56**
- show ntp timestamp-status command **7-57**
- show policy-map command **5-50**
- show policy-map interface brief command **5-55**
- show policy-map interface command **5-52**
- show policy-map system command **5-57**
- show port-channel capacity command **3-34, 10-10**
- show port-channel compatibility-parameters command **3-35**
- show port-channel database command **3-37**
- show port-channel load-balance command **3-39**
- show port-channel summary command **3-43**
- show port-channel traffic command **3-45**
- show port-channel usage command **3-47**
- show port index-allocation command **9-49**
- show processes command **1-108**
- show processes cpu command **1-110**
- show processes log command **1-112**
- show processes memory command **1-115**
- show queuing interface command **4-41, 5-61**
- show radius-server command **6-115**
- show resource command **3-48**
- show rlir command **9-50**
- show role command **6-117**
- show role feature command **6-118**
- show role feature-group command **6-119**
- show rscn command **9-51**
- show running-config aaa command **6-120**
- show running-config command **1-117, 3-49**
- show running-config diff command **1-119**
- show running-config fex command **4-44**
- show running-config interface command **10-11**
- show running-config radius command **6-121**
- show running-config security command **6-122**
- show running-config spanning-tree command **3-50**
- show running-config vlan command **3-51**
- show running-config vpc command **10-13**
- show san-port-channel command **9-53**
- show scsi-target command **9-55**
- show snmp community command **7-58**
- show snmp context command **7-59**
- show snmp engineID command **7-60**
- show snmp group command **7-61**
- show snmp host command **7-63**
- show snmp sessions command **7-64**
- show snmp trap command **7-65**

Send comments to nx5000-docfeedback@cisco.com

- show spanning-tree active command **3-56**
- show spanning-tree bridge command **3-57**
- show spanning-tree brief command **3-59**
- show spanning-tree command **3-52**
- show spanning-tree detail command **3-61**
- show spanning-tree interface command **3-62**
- show spanning-tree mst command **3-64**
- show spanning-tree root command **3-66**
- show spanning-tree summary command **3-68**
- show spanning-tree vlan command **3-69**
- show srom command **1-121**
- show srom fex command **4-46**
- show ssh key command **6-123**
- show ssh server command **6-124**
- show startup-config aaa command **6-125**
- show startup-config command **1-124, 3-72**
- show startup-config interface command **10-15**
- show startup-config radius command **6-126**
- show startup-config security command **6-127**
- show startup-config vpc command **10-16**
- show switchname command **1-126**
- show system cores command **1-127**
- show system reset-reason command **1-128**
- show system reset-reason fex command **4-50**
- show system resources command **1-130**
- show system uptime command **1-131**
- show tacacs-server command **6-128**
- show tech-support command **1-132**
- show tech-support port-channel command **3-73**
- show tech-support vpc command **10-17**
- show telnet server command **6-130**
- show terminal command **1-135**
- show topology command **9-57**
- show trunk protocol command **9-58**
- show udld command **3-75**
- show user-account command **6-131**
- show users command **6-132**
- show version command **1-136**
- show version fex command **4-51**
- show vlan access-list command **6-133**
- show vlan access-map command **6-134**
- show vlan command **3-78**
- show vlan dot1Q native command **3-80**
- show vlan fcoe command **9-59**
- show vlan filter command **6-135**
- show vlan id command **3-81**
- show vlan private-vlan command **3-82**
- show vpc brief command **10-22**
- show vpc command **10-20**
- show vpc consistency-parameters command **10-25**
- show vpc orphan-ports command **10-28**
- show vpc peer-keepalive command **10-30**
- show vpc role command **10-32**
- show vpc statistics command **10-34**
- show vsan command **9-60**
- show vtp status command **3-83**
- show wwn command **9-62**
- show zone analysis command **9-66**
- show zone command **9-63**
- show zoneset command **9-69**
- shutdown (VLAN configuration) command **2-53**
- shutdown lan (FCoE) command **8-139**
- sleep command **1-138**
- snmp-server community command **7-67**
- spanning-tree bpdufilter command **2-55**
- spanning-tree bpduguard command **2-56**
- spanning-tree cost command **2-58**
- spanning-tree guard command **2-60**
- spanning-tree link-type command **2-61**
- spanning-tree loopguard default command **2-62**
- spanning-tree mode command **2-63**
- spanning-tree mst configuration command **2-64**
- spanning-tree mst cost command **2-66**
- spanning-tree mst forward-time command **2-68**
- spanning-tree mst hello-time command **2-69**
- spanning-tree mst max-age command **2-70**
- spanning-tree mst max-hops command **2-71**
- spanning-tree mst port-priority command **2-72**

Send comments to nx5000-docfeedback@cisco.com

spanning-tree mst priority command **2-73**
 spanning-tree mst root command **2-74**
 spanning-tree mst simulate pvst command **2-76**
 spanning-tree mst simulate pvst global command **2-78**
 spanning-tree pathcost method command **2-80**
 spanning-tree port-priority command **2-93**
 spanning-tree port type edge bpdufilter default command **2-83**
 spanning-tree port type edge bpduguard default command **2-85**
 spanning-tree port type edge command **2-81**
 spanning-tree port type edge default command **2-87**
 spanning-tree port type network command **2-89**
 spanning-tree port type network default command **2-91**
 spanning-tree vlan command **2-94**
 speed (Ethernet) command **2-96**
 speed command **1-139**
 ssh6 command **6-137**
 ssh command **6-136**
 ssh key command **6-138**
 ssh server enable command **6-140**
 state command **2-97**
 stopbits command **1-140**
 storm-control level command **6-141**
 svi enable command **2-98**
 switchname command **1-141**
 switchport access vlan command **2-99**
 switchport block command **2-100**
 switchport command **8-140**
 switchport host command **2-108**
 switchport ignore bit-errors command **8-143**
 switchport mode command **2-109**
 switchport mode fex-fabric command **4-52**
 switchport mode private-vlan host command **2-101**
 switchport mode private-vlan promiscuous command **2-102**
 switchport mode private-vlan trunk command **2-103**
 switchport private-vlan association trunk command **2-104**
 switchport private-vlan host-association command **2-110**
 switchport private-vlan mapping command **2-112**

switchport private-vlan trunk allowed vlan command **2-105**
 switchport private-vlan trunk native command **2-107**
 system cores command **1-142**
 system default switchport command **8-145**
 system default zone default-zone permit command **8-147**
 system default zone distribute full command **8-148**
 system jumbomtu command **5-65**
 system-mac command **10-36**
 system-priority command **10-37**
 system qos command **5-66**
 system startup-config unlock command **1-143**

T

tacacs-server deadtime command **6-143**
 tacacs-server directed-request command **6-144**
 tacacs-server host command **6-145**
 tacacs-server key command **6-147**
 tacacs-server timeout command **6-148**
 tail command **1-144**
 telnet6 command **6-151**
 telnet command **6-149**
 telnet server enable command **6-150**
 terminal length command **1-145**
 terminal session-timeout command **1-146**
 terminal terminal-type command **1-147**
 terminal width command **1-148**
 traceroute6 command **1-150**
 traceroute command **1-149**
 trunk protocol enable command **8-149**
 type command **4-53**

U

udld (configuration mode) command **2-114**
 udld (Ethernet) command **2-116**
 untagged cos command **5-67**
 update license command **1-151**

Send comments to nx5000-docfeedback@cisco.com

username command **6-154**

use-vrf command **6-152**

zone name (zone set configuration mode) command **8-166**

zone rename command **8-167**

zoneset (configuration mode) command **8-168**

zoneset (EXEC mode) command **8-170**

V

verify (session) command **7-71**

vlan (EXEC mode) command **2-118**

vlan access-map command **6-156**

vlan dot1Q tag native command **2-120**

vlan filter command **6-157**

vlan policy deny command **6-159**

vpc command **10-38**

vpc domain command **10-40**

vpc peer-link command **10-42**

vrf context command **2-122**

vrf policy deny command **6-160**

vsan database command **8-150, 8-153**

vsan policy deny command **6-161**

vtp domain command **2-124**

vtp mode command **2-125**

vtp version command **2-126**

W

write erase command **1-152**

wwn secondary-mac command **8-154**

wwn vsan command **8-155**

Z

zone clone command **8-156**

zone commit command **8-157**

zone compact command **8-158**

zone copy command **8-159**

zone default-zone command **8-161**

zone merge-control restrict vsan command **8-162**

zone mode enhanced command **8-163**

zone name (configuration mode) command **8-164**