



Maintenance

- [Restart or Reset the Conference Phone, on page 1](#)
- [Voice Quality Monitoring, on page 2](#)
- [Cisco IP Phone Cleaning, on page 4](#)

Restart or Reset the Conference Phone

You perform a basic reset of a phone to recover if the phone experiences an error. You can also restore configuration and security settings to factory default settings.

Restart the Conference Phone

When you restart the phone, any user and network setup changes that aren't committed to the flash memory in the phone are lost.

Procedure

Press **Settings** > **Admin Settings** > **Reset settings** > **Reset device**.

Related Topics

[Text and Menu Entry From the Phone](#)

Reset the Conference Phone Settings from the Phone Menu

Procedure

- Step 1** Press **Settings**.
- Step 2** Choose **Admin Settings** > **Reset Settings**.
- Step 3** Select the type of reset.
- **All**—Restores the factory settings.
 - **Reset device**—Resets the device. The existing settings don't change.

- **Network**—Resets the network configuration to default settings.
- **Service mode**—Clears the current service mode, deactivates the VPN and restarts the phone.
- **Security**—Resets the security configuration to default settings. This option deletes the CTL file.

Step 4 Press **Reset** or **Cancel**.

Related Topics

[Text and Menu Entry From the Phone](#)

Reset the Conference Phone to Factory Defaults from the Keypad

When you reset the phone from the keypad, the phone reverts to the factory settings.

Procedure

- Step 1** Unplug the phone:
- If using PoE, unplug the LAN cable.
 - If using the power adapter, unplug the adapter.
- Step 2** Wait 5 seconds.
- Step 3** Press and hold #, and plug the phone back in.
- Step 4** When the phone boots up, the LED strip lights up. As soon as the LED strip turns on, press **123456789*0#** in sequence.

After you press these buttons, the phone goes through the factory reset process.

If you press the buttons out of sequence, the phone powers on normally.

Caution Do not power down the phone until it completes the factory reset process, and the main screen appears.

Related Topics

[Text and Menu Entry From the Phone](#)

Voice Quality Monitoring

To measure the voice quality of calls that are sent and received within the network, Cisco IP Phones use these statistical metrics that are based on concealment events. The DSP plays concealment frames to mask frame loss in the voice packet stream.

- **Concealment Ratio metrics**—Show the ratio of concealment frames over total speech frames. An interval conceal ratio is calculated every 3 seconds.
- **Concealed Second metrics**—Show the number of seconds in which the DSP plays concealment frames due to lost frames. A severely “concealed second” is a second in which the DSP plays more than five percent concealment frames.



Note Concealment ratio and concealment seconds are primary measurements based on frame loss. A Conceal Ratio of zero indicates that the IP network is delivering frames and packets on time with no loss.

You can access voice quality metrics from the Cisco IP Phone using the Call Statistics screen or remotely by using Streaming Statistics.

Voice Quality Troubleshooting Tips

When you observe significant and persistent changes to metrics, use the following table for general troubleshooting information.

Table 1: Changes to Voice Quality Metrics

Metric Change	Condition
Conceal Ratio and Conceal Seconds increase significantly	Network impairment from packet loss or high jitter.
Conceal Ratio is near or at zero, but the voice quality is poor.	<ul style="list-style-type: none"> Noise or distortion in the audio channel such as echo or audio levels. Tandem calls that undergo multiple encode/decode such as calls to a cellular network or calling card network. Acoustic problems coming from a speakerphone, handsfree cellular phone or wireless headset. <p>Check packet transmit (TxCnt) and packet receive (RxCnt) counters to verify that voice packets are flowing.</p>
MOS LQK scores decrease significantly	<p>Network impairment from packet loss or high jitter levels:</p> <ul style="list-style-type: none"> Average MOS LQK decreases may indicate widespread and uniform impairment. Individual MOS LQK decreases may indicate bursty impairment. <p>Cross-check the conceal ratio and conceal seconds for evidence of packet loss and jitter.</p>
MOS LQK scores increase significantly	<ul style="list-style-type: none"> Check to see if the phone is using a different codec than expected (RxType and TxType). Check to see if the MOS LQK version changed after a firmware upgrade.



Note Voice quality metrics do not account for noise or distortion, only frame loss.

Cisco IP Phone Cleaning

To clean your Cisco IP Phone, use only a dry soft cloth to gently wipe the phone and the phone screen. Do not apply liquids or powders directly to the phone. As with all non-weatherproof electronics, liquids and powders can damage the components and cause failures.

When the phone is in sleep mode, the screen is blank and the Select button is not lit. When the phone is in this condition, you can clean the screen, as long as you know that the phone will remain asleep until after you finish cleaning.