



-
- A**
- activating the PMC buttons [3-30](#)
 - activation button [3-31](#)
 - application recovery [5-5](#)
 - audio quality [2-11](#)
 - audio settings configuration [2-11](#)
 - automatic update process [2-22](#)
-
- B**
- browser support [1-9](#)
-
- C**
- CallManager
 - documentation [xii](#)
 - caution, described [xiv](#)
 - channel interaction [1-17](#)
 - channel name [3-10](#)
 - channels
 - activated [1-8](#)
 - dispatcher policy channel [3-12](#)
 - interactions [3-25](#)
 - latch [3-4](#)
 - locations [3-13](#)
 - maximum channel support [3-27](#)
 - policies [3-12](#)
 - terminology [3-9](#)
 - traffic activity indicators [3-33](#)
 - VTGs [1-6](#)
 - channel states [3-28](#)
 - channel traffic activity
 - administratively stopping transmission [3-35](#)
 - implicit floor control [3-35](#)
 - indicators [3-33](#)
 - interaction [3-35](#)
 - receive and transmit indicators [3-33](#)
 - checking the microphone [2-15](#)
 - Cisco IOS
 - documentation [xiii](#)
 - Cisco IPICS
 - benefits [1-2](#)
 - browser support [1-9](#)
 - components [1-3](#)
 - deployment [1-11](#)
 - overview [1-2](#)
 - server [1-3](#)
 - server interactions [1-15](#)
 - user interactions [1-16](#)

- Cisco IPICS user roles [1-4](#)
- Cisco IP Phones
 - documentation [xii](#)
- Cisco IP Phone support [1-4](#)
- Cisco Land Mobile Radio (LMR)
 - documentation [xiii](#)
- Cisco Security Agent
 - documentation [xiii](#)
- codec support [3-15](#)
- communications
 - multicast [3-11](#)
 - unicast [3-11](#)
- communications interruptions [5-4](#)
- components
 - Cisco IPICS server [1-3](#)
 - Cisco IP Phone [1-4](#)
 - gateways [1-4](#)
 - PMC [1-4](#)
 - router media service [1-4](#)
- configuring audio settings [2-11](#)
- conventions, document [xiii](#)
- critical upgrades [2-24](#)
- customizing the PMC application [4-1](#)

D

- disconnected mode [3-20](#)
- dispatcher role [1-5](#)
- documentation

- CallManager [xii](#)
- Cisco IOS [xiii](#)
- Cisco IP Phones [xii](#)
- Cisco Land Mobile Radio (LMR) [xiii](#)
- Cisco Security Agent [xiii](#)
 - conventions [xiii](#)
 - MCS servers [xii](#)
- downloading the PMC update [2-25](#)
- dynamic configuration [3-24](#)

E

- echo
 - multiple channels [3-4](#)
- error messages [7-22](#)

F

- feature support
 - channels [3-8](#)
 - implementing policies [3-12](#)
 - interoperability [3-7](#)
 - locations [3-13](#)

G

- gateways
 - LMR [1-4](#)
 - router media service [1-4](#)

H

HTTPS [2-3](#)

Hypertext Transfer Protocol over Secure
Sockets Layer

See HTTPS

I

implementing policies [3-12](#)

incident management scenario [3-5](#)

installing the PMC application [2-2](#)

interactions

 Cisco Security Agent [2-9](#)

 client-server [2-1](#)

 server [1-15](#)

 system [1-15](#)

 user [1-16](#)

J

joining a VTG [3-30](#)

L

Land Mobile Radio

See LMR

latching the PTT button [1-10](#)

license requirements [3-17](#)

LMR

channel representation [3-9](#)

gateway [1-4](#)

PTT audio application [3-7](#)

location [3-13](#)

log files [6-1](#)

logging in to the PMC

 local login [3-19](#)

 login caveats [3-16](#)

 login information [3-16](#)

logging out of the PMC [3-36](#)

M

MCS servers

 documentation [xii](#)

microphone setup [2-15](#)

multicast communications [3-11](#)

multicast connection [3-13](#)

N

non-critical upgrades [2-24](#)

note, described [xiii](#)

O

operator role [1-5](#)

optimizing audio [2-11](#)

optional settings submenus [4-11](#)

overview

Cisco IPICS 1-2

PMC 1-6

P

PMC

application recovery 5-5

automatic update process 2-22

buttons 3-30

caveats 1-10

channels

interactions 3-25

latch 3-4

states 3-28

support 3-8

terminology 3-9

traffic activity indicators 3-33

checking for updates 2-23

client application 1-4

communications interruptions 5-4

configuration customization 1-8

customizing the application 4-1

disconnected mode 3-20

downloading the update 2-25

GUI 1-8

illustration 1-6

installation

caveats 2-3

installing the application 2-2

interactions

Cisco Security Agent 2-9

client-server 2-1

interface 1-6

interoperability features 3-7

joining a VTG 3-30

key assignments 3-32

license requirements 3-17

locations 3-13

logging in

caveats 3-16

local login 3-19

logging out 3-36

logs

accessing the logs 6-3

accessing the submenu 6-2

caveats 6-6

describing the logs 6-7

examples 6-8

files 6-1

identifying the logs 6-1

using the logs 6-5

managing version numbers 2-21

offline mode 3-18

recovering the system 5-1

recovery caveats 5-3

recovery scenarios 5-3

reverting to a previous version 2-28

- scenarios
 - incident management [3-5](#)
 - interactions [3-1](#)
 - PMC user interaction [3-6](#)
- skin
 - caveats [4-5](#)
 - mismatch [4-5](#)
- system requirements [1-13](#)
- troubleshooting
 - application [7-1](#)
 - audio settings [7-5](#)
 - caveats [7-21](#)
 - channel activation issues [7-18](#)
 - Cisco Security Agent [7-7](#)
 - codec misconfiguration [7-19](#)
 - coexistence [7-8](#)
 - configuration file changes [7-4](#)
 - connectivity issues [7-12](#)
 - DNS issues [7-18](#)
 - error messages [7-22](#)
 - execution [7-2](#)
 - headset [7-6](#)
 - headset issues [7-9](#)
 - microphone [7-6](#)
 - multicast connections [7-16](#)
 - offline mode [7-17](#)
 - one-way audio [7-8](#)
 - optional settings menu [7-5](#)
 - resolving IP address changes [7-10](#)
 - right-to-left language support [7-20](#)
 - voice quality [7-11](#)
 - VPN issues [7-12](#)
 - winsock corruption [7-17](#)
- uninstalling the application [2-29](#)
- upgrading the application
 - critical upgrades [2-24](#)
 - messages [2-26](#)
 - non-critical upgrades [2-24](#)
 - process [2-20](#)
 - types of upgrades [2-23](#)
- user privileges [3-11](#)
- using the logs [6-1](#)
- using the optional settings [4-11](#)
- version number management [2-21](#)
- voice quality tips [2-16](#)
- PMC ID [1-15](#)
- PMC installation caveats [2-3](#)
- PTT button [3-31](#)
- Push-to-Talk Management Center
 - See* PMC

R

- recovery scenarios [5-3](#)
- remote connection [3-13](#)
- reverting to a previous version of the PMC [2-28](#)
- right-to-left language support [7-20](#)

S

scenarios [3-1](#)

server

 commands [3-26](#)

 dynamic configuration [3-24](#)

 location support [3-13](#)

 role [3-10](#)

server commands

 channel list [3-26](#)

 disable channel [3-26](#)

 disable user [3-26](#)

 mute user [3-26](#)

 retrieve logs [3-26](#)

 set logging level [3-26](#)

server-PMC login sequence [3-17](#)

skin caveats [4-5](#)

skin mismatch [4-5](#)

supported codecs [3-15](#)

supported features [3-7](#)

supported user roles [1-4](#)

system administrator role [1-5](#)

system interactions [1-15](#)

system recovery [5-1](#)

system recovery caveats [5-3](#)

T

TAC Case Collection Tool [7-12](#)

traffic activity indicators [3-33](#)

troubleshooting the PMC application [7-1](#)

U

unicast communications [3-11](#)

unicast connection [3-13](#)

uninstalling the PMC application [2-29](#)

updating the PMC application [2-23](#)

upgrading the PMC

 critical upgrade [2-27](#)

 non-critical upgrade [2-25](#)

 types of upgrades [2-23](#)

user channel activity interaction [3-35](#)

user privileges [3-11](#)

user role [1-5](#)

using the microphone [2-14](#)

using the PMC buttons [3-30](#)

V

version number management [2-21](#)

Virtual Talk Groups

See VTGs

voice quality issues [7-11](#)

voice quality tips [2-16](#)

volume down button [3-31](#)

volume up button [3-31](#)

VTGs

 channel [1-6](#)

server-PMC interaction [3-30](#)
states [1-17](#)
user interaction states [3-28](#)