



## INDEX

<b>AR</b>	Cisco IOS XR Advanced System Command Reference
<b>HR</b>	Cisco IOS XR Interface and Hardware Component Command Reference
<b>IR</b>	Cisco IOS XR IP Addresses and Services Command Reference
<b>MCR</b>	Cisco IOS XR Multicast Command Reference
<b>MNR</b>	Cisco IOS XR System Monitoring Command Reference
<b>MPR</b>	Cisco IOS XR MPLS Command Reference
<b>QR</b>	Cisco IOS XR Modular Quality of Service Command Reference
<b>RR</b>	Cisco IOS XR Routing Command Reference
<b>SBR</b>	Cisco IOS XR Session Border Controller Command Reference
<b>SMR</b>	Cisco IOS XR System Management Command Reference
<b>SR</b>	Cisco IOS XR System Security Command Reference

### A

abort command [SMR-104](#)  
absolute-timeout command [SMR-834](#)  
access-class command [SMR-836](#)  
access-group (NTP) command [SMR-554](#)  
admin command [SMR-106](#)  
affinity location-set command [SMR-630](#)  
affinity location-type command [SMR-632](#)  
affinity program command [SMR-634](#)  
affinity self command [SMR-636](#)  
alias command [SMR-108](#)  
apply template command [SMR-111](#)  
authenticate (NTP) command [SMR-556](#)  
authentication-key (NTP) command [SMR-558](#)  
autocommand command [SMR-838](#)

### B

banner exec command [SMR-841](#)  
banner incoming command [SMR-843](#)  
banner login command [SMR-845](#)

banner motd command [SMR-847](#)  
banner prompt-timeout command [SMR-849](#)  
broadcast client command [SMR-562](#)  
broadcast command [SMR-560](#)  
broadcastdelay command [SMR-564](#)

### C

cd command [SMR-298](#)  
cdp advertise v1 command [SMR-56](#)  
cdp command [SMR-54](#)  
cdp holdtime command [SMR-58](#)  
cdp log adjacency changes command [SMR-60](#)  
cdp timer command [SMR-62](#)  
ce tftp server command [SMR-340](#)  
cfs check command [SMR-300](#)  
clear (exec) command [SMR-113](#)  
clear (global) command [SMR-115](#)  
clear cdp counters command [SMR-64](#)  
clear cdp table command [SMR-66](#)  
clear-classic-config command [SMR-302](#)  
clear comment command [SMR-117](#)  
clear configuration commits command [SMR-119](#)  
clear configuration inconsistency command [SMR-121](#)  
clear configuration inconsistency replica command [SMR-124](#)  
clear configuration sessions command [SMR-126](#)  
clear context command [SMR-638](#)  
clear delay command [SMR-594](#)  
clear install boot-options command [SMR-448](#)  
clear install label command [SMR-450](#)  
clear install log-history oldest command [SMR-452](#)  
clear install rollback oldest command [SMR-454](#)

---

clear interface (track) command [SMR-596](#)  
 clear license command [SMR-252](#)  
 clear license log command [SMR-253](#)  
 clear line command [SMR-851](#)  
 clear line vty command [SMR-853](#)  
 clear mbus-statistics location command [SMR-341](#)  
 clear object command [SMR-598](#)  
 clear route ipv4 command [SMR-600](#)  
 clear snmp counters command [SMR-730](#)  
 clear type line-protocol state command [SMR-602](#)  
 clear type list boolean command [SMR-603](#)  
 clear type route reachability command [SMR-605](#)  
 clear vrf (track) command [SMR-606](#)  
 cli interactive syntax check command [SMR-855](#)  
 cli whitespace completion command [SMR-857](#)  
 clock read-calendar command [SMR-84](#)  
 clock set command [SMR-86](#)  
 clock summer-time command [SMR-88](#)  
 clock timezone command [SMR-90](#)  
 clock update-calendar command [SMR-94](#)  
 commit command [SMR-128](#)  
 config-register command [SMR-14](#)  
 configuration commit auto-save command [SMR-132](#)  
 configure command [SMR-134](#)  
 copy command [SMR-303](#)

---

**D**

databits command [SMR-859](#)  
 delay command [SMR-608](#)  
 delete command [SMR-309](#)  
 description (interface) command [SMR-137](#)  
 dir command [SMR-311](#)  
 disconnect-character command [SMR-862](#)  
 disconnect command [SMR-861](#)  
 do command [SMR-139](#)  
 dsc serial command [SMR-342](#)  
 dumpcore command [SMR-640](#)

**E**


---

end command [SMR-141](#)  
 end-template command [SMR-143](#)  
 env disable command [SMR-344](#)  
 env power-supply command [SMR-346](#)  
 erase nvram  
     command [SMR-313](#)  
 erase nvram-raw  
     command [SMR-315](#)  
 escape-character command [SMR-864](#)  
 exception filepath command [SMR-643](#)  
 exception pakmem command [SMR-647](#)  
 exception sparse command [SMR-649](#)  
 exception sprsize command [SMR-651](#)  
 exec-timeout command [SMR-866](#)  
 exit command [SMR-145](#)

---

**F**


---

facility-alarm contacts command [SMR-348](#)  
 flowcontrol hardware command [SMR-868](#)  
 follow command [SMR-653](#)  
 format command [SMR-317](#)  
 fsck command [SMR-320](#)

---

**H**


---

hostname command [SMR-147](#)  
 http server command [SMR-440](#)  
 hw-module boot override command [SMR-350](#)  
 hw-module linecard throughput (Cisco XR 12000 Series Router) command [SMR-255](#)  
 hw-module linecard throughput (CRS-1) command [SMR-257](#)  
 hw-module location (Cisco CRS-1) command [SMR-354](#)  
 hw-module location (Cisco XR 12000 Series Router) command [SMR-352](#)  
 hw-module port command [SMR-356](#)

hw-module power command **SMR-358**  
 hw-module power disable command **SMR-360**  
 hw-module reset auto command **SMR-362**  
 hw-module reset auto disable command **SMR-364**  
 hw-module shutdown command **SMR-366**  
 hw-module subslot reload command **SMR-368**  
 hw-module subslot shutdown command **SMR-370**

---

index persistence command **SMR-731**  
 install abort command **SMR-456**  
 install activate command **SMR-458**  
 install add command **SMR-466**  
 install attach command **SMR-472**  
 install auto-abort-timer stop command **SMR-474**  
 install boot-options command **SMR-476**  
 install commit command **SMR-478**  
 install deactivate command **SMR-480**  
 install label command **SMR-485**  
 install remove command **SMR-488**  
 install rollback to command **SMR-492**  
 install verify healthcheck command **SMR-496**  
 install verify packages command **SMR-499**  
 interface (NTP) command **SMR-566**  
 interface (track) command **SMR-610**

---

length command **SMR-870**  
 license add command **SMR-259**  
 license backup command **SMR-261**  
 license move command **SMR-263**  
 license move slot command **SMR-265**  
 license pool create command **SMR-267**  
 license pool remove command **SMR-269**  
 license restore command **SMR-271**  
 line command **SMR-872**

line-protocol track command **SMR-612**  
 load command **SMR-148**  
 load commit changes command **SMR-150**  
 load configuration failed command **SMR-152**  
 load configuration removed command **SMR-154**  
 load rollback changes command **SMR-155**  
 locale country command **SMR-95**  
 locale language command **SMR-97**  
 location (drp) command **SMR-246**  
 location (sdr) command **SMR-718**

---

**M**

man command **SMR-157**  
 master command **SMR-568**  
 max-associations command **SMR-570**  
 mirror command **SMR-17**  
 mirror pause command **SMR-19**  
 mirror resume command **SMR-21**  
 mirror verify command **SMR-23**  
 mkdir command **SMR-322**  
 monitor processes command **SMR-660**  
 monitor threads command **SMR-664**  
 more command **SMR-160**

---

**N**

notifications linkupdown disable command **SMR-733**  
 ntp clear command **SMR-574**  
 ntp command **SMR-572**

---

**O**

object command **SMR-614**

---

**P**

package

addition, introduction **SMR-468**  
 pair (SDR) command **SMR-721**  
 pairing (drp) command **SMR-248**  
 parity command **SMR-874**  
 peer (NTP) command **SMR-575**  
 placement memory command **SMR-668**  
 placement program command **SMR-670**  
 placement reoptimize command **SMR-672**  
 process command **SMR-674**  
 process core command **SMR-677**  
 process mandatory command **SMR-679**  
 pwd (config) command **SMR-164**  
 pwd command **SMR-324**

---

**R**

redundancy switchover command **SMR-372**  
 reload (administration EXEC) command **SMR-27**  
 reload command **SMR-25**  
 resume command **SMR-876**  
 rmdir command **SMR-326**  
 rollback configuration command **SMR-165**  
 root command **SMR-168**  
 route ipv4 command **SMR-616**

---

**S**

save configuration changes command **SMR-172**  
 save configuration command **SMR-170**  
 save configuration commit changes command **SMR-174**  
 save configuration failed command **SMR-176**  
 save configuration merge command **SMR-178**  
 save configuration removed command **SMR-180**  
 save rollback changes command **SMR-182**  
 sdr command **SMR-723**  
 send command **SMR-878**  
 server (NTP) command **SMR-577**  
 session-limit command **SMR-880**

session-timeout command **SMR-881**  
 set default-afi command **SMR-184**  
 set default-safi command **SMR-186**  
 set default-vrf command **SMR-188**  
 show aliases command **SMR-193**  
 show bcdl command **SMR-2**  
 show bcdl consumers command **SMR-4**  
 show bcdl queu command **SMR-6**  
 show bcdl tables command **SMR-8**  
 show bcdl trace command **SMR-10**  
 show calendar command **SMR-579**  
 show cdp command **SMR-68**  
 show cdp entry command **SMR-70**  
 show cdp interface command **SMR-73**  
 show cdp neighbors command **SMR-76**  
 show cdp traffic command **SMR-80**  
 show clock command **SMR-99**  
 show clock sync command **SMR-101**  
 show command **SMR-190**  
 show configuration (config) command **SMR-195**  
 show configuration changes command **SMR-198**  
 show configuration commit changes command **SMR-200**  
 show configuration commit list command **SMR-203**  
 show configuration failed (config) command **SMR-206**  
 show configuration failed incompatible  
command **SMR-208**  
 show configuration failed remove command **SMR-209**  
 show configuration failed rollback command **SMR-211**  
 show configuration failed startup command **SMR-213**  
 show configuration history command **SMR-215**  
 show configuration inconsistency replica  
command **SMR-219**  
 show configuration persistent command **SMR-221**  
 show configuration removed command **SMR-223**  
 show configuration rollback changes command **SMR-225**  
 show configuration running command **SMR-227**  
 show configuration running-config command **SMR-229**  
 show configuration sessions command **SMR-232**  
 show context command **SMR-681**

show default-afi-safi-vrf command **SMR-234**  
 show dll command **SMR-684**  
 show dsc command **SMR-374**  
 show environment command **SMR-376**  
 show epm trace boot **SMR-29**  
 show exception command **SMR-687**  
 show facility-alarm contacts command **SMR-379**  
 show filesystem command **SMR-328**  
 show fpd package command **SMR-381**  
 show history command **SMR-236**  
 show hw-module fpd command **SMR-385**  
 show hw-module linecard throughput command **SMR-273**  
 show hw-module subslot brief command **SMR-388**  
 show hw-module subslot config command **SMR-390**  
 show hw-module subslot counters command **SMR-393**  
 show hw-module subslot errors command **SMR-396**  
 show hw-module subslot plim-subblock  
command **SMR-399**  
 show hw-module subslot registers command **SMR-401**  
 show hw-module subslot status command **SMR-404**  
 show install active command **SMR-505**  
 show install audit command **SMR-510**  
 show install auto-abort-timer command **SMR-513**  
 show install boot-options command **SMR-514**  
 show install command **SMR-502**  
 show install committed command **SMR-516**  
 show install inactive command **SMR-520**  
 show install log command **SMR-524**  
 show install package command **SMR-530**  
 show install pie-info command **SMR-534**  
 show install requests command **SMR-541**  
 show install rollback command **SMR-543**  
 show install which command **SMR-548**  
 show inventory command **SMR-406**  
 show led command **SMR-409**  
 show license active command **SMR-278**  
 show license allocated command **SMR-280**  
 show license available command **SMR-282**  
 show license backup command **SMR-284**  
 show license command **SMR-275**  
 show license evaluation command **SMR-286**  
 show license expired command **SMR-288**  
 show license log command **SMR-290**  
 show license pools command **SMR-292**  
 show license udi command **SMR-294**  
 show line command **SMR-883**  
 show mbus command **SMR-411**  
 show media command **SMR-330**  
 show memory command **SMR-689**  
 show memory compare command **SMR-692**  
 show memory heap command **SMR-695**  
 show mirror command **SMR-31**  
 show ntp associations command **SMR-581**  
 show ntp status command **SMR-584**  
 show operational command **SMR-414**  
 show placement location command **SMR-699**  
 show placement policy command **SMR-701**  
 show placement program command **SMR-705**  
 show placement reoptimize command **SMR-707**  
 show platform command **SMR-416**  
 show processes command **SMR-709**  
 show reboot command **SMR-34**  
 show redundancy command **SMR-418**  
 show running-config command **SMR-238**  
 show screddrv command **SMR-422**  
 show sdr command **SMR-725**  
 show sessions command **SMR-886**  
 show snmp command **SMR-735**  
 show snmp engineID command **SMR-738**  
 show snmp group command **SMR-740**  
 show snmp host command **SMR-742**  
 show snmp interface command **SMR-744**  
 show snmp mib command **SMR-746**  
 show snmp users command **SMR-749**  
 show snmp view command **SMR-751**  
 show system backup command **SMR-38**  
 show terminal command **SMR-888**  
 show track command **SMR-618**

show users command **SMR-890**  
 show variables boot command **SMR-42**  
 show variables system command **SMR-44**  
 show version command **SMR-424**  
 show xml schema command **SMR-241**  
 slow-migration-interval command **SMR-714**  
 snmp-server chassis-id command **SMR-753**  
 snmp-server community command **SMR-755**  
 snmp-server community-map command **SMR-758**  
 snmp-server contact command **SMR-760**  
 snmp-server context command **SMR-762**  
 snmp-server engineID command **SMR-764**  
 snmp-server group command **SMR-766**  
 snmp-server host command **SMR-769**  
 snmp-server ifindex persist command **SMR-773**  
 snmp-server ifmib ifalias long command **SMR-775**  
 snmp-server ifmib stats cache command **SMR-777**  
 snmp-server interface command **SMR-778**  
 snmp-server ipv4 dscp command **SMR-780**  
 snmp-server ipv4 precedence command **SMR-781**  
 snmp-server location command **SMR-783**  
 snmp-server packetsize command **SMR-787**  
 snmp-server queue-length command **SMR-788**  
 snmp-server target list command **SMR-790**  
 snmp-server trap link ietf command **SMR-793**  
 snmp-server traps bgp command **SMR-798**  
 snmp-server traps command **SMR-795**  
 snmp-server traps mpls l3vpn command **SMR-800**  
 snmp-server traps ospf errors command **SMR-802**  
 snmp-server traps ospf lsa command **SMR-804**  
 snmp-server traps ospf retransmit command **SMR-806**  
 snmp-server traps ospf state-change neighbor-state-change command **SMR-808**  
 snmp-server trap-source command **SMR-822**  
 snmp-server traps pim interface-state-change command **SMR-810**  
 snmp-server traps pim invalid-message-received command **SMR-812**  
 snmp-server traps pim neighbor-change command **SMR-814**

snmp-server traps pim rp-mapping-change command **SMR-816**  
 snmp-server traps snmp command **SMR-818**  
 snmp-server traps syslog command **SMR-820**  
 snmp-server trap-timeout command **SMR-824**  
 snmp-server user command **SMR-826**  
 snmp-server view command **SMR-829**  
 snmp-server vrf command **SMR-831**  
 source (NTP) command **SMR-586**  
 squeeze command **SMR-333**  
 stopbits command **SMR-892**  
 system backup command **SMR-46**  
 system boot-sequence command **SMR-49**

---

**T**

template command **SMR-243**  
 terminal exec command **SMR-894**  
 terminal length command **SMR-896**  
 terminal monitor command **SMR-898**  
 terminal width command **SMR-899**  
 track command **SMR-620**  
 transport input command **SMR-901**  
 transport output command **SMR-903**  
 transport preferred command **SMR-905**  
 trusted-key command **SMR-588**  
 type line-protocol state command **SMR-622**  
 type list boolean command **SMR-624**  
 type route reachability command **SMR-626**

---

**U**

undelete command **SMR-335**  
 unmount command **SMR-337**  
 update-calendar command **SMR-590**  
 upgrade all command **SMR-427**  
 upgrade cputrlbits command **SMR-429**  
 upgrade fabric-downloader command **SMR-431**  
 upgrade hw-module fpd command **SMR-433**

upgrade mbus command [SMR-436](#)

utility bc command [SMR-912](#)

utility cut command [SMR-915](#)

utility date command [SMR-919](#)

utility date set command [SMR-921](#)

utility df command [SMR-923](#)

utility du command [SMR-927](#)

utility egrep command [SMR-930](#)

utility fgrep command [SMR-933](#)

utility find command [SMR-935](#)

utility head command [SMR-937](#)

utility less command [SMR-939](#)

utility mv command [SMR-941](#)

utility sort command [SMR-943](#)

utility tail command [SMR-946](#)

utility uniq command [SMR-949](#)

utility wc command [SMR-951](#)

utility which command [SMR-953](#)

utility xargs command [SMR-955](#)

---

## V

vrf (track) command [SMR-628](#)

vty-pool command [SMR-907](#)

---

## W

width (terminal) command [SMR-909](#)

---

## X

xml agent corba command [SMR-442](#)

xml agent corba hostname command [SMR-444](#)

xml agent tty command [SMR-446](#)

