



## Example of Wireless LAN Controller Initial Setup

---

```
Use the '-' character to backup
System Name [Cisco_40:3d:c3]: AeS_4402_1
Enter Administrative User Name (24 characters max): admin
Enter Administrative Password (24 characters max): *****

Service Interface IP Address Configuration [none][DHCP]: none
Service Interface IP Address: 192.168.0.40
Service Interface Netmask: 255.255.255.0

Enable Link Aggregation (LAG) [yes][NO]: NO

Management Interface IP Address: 10.1.56.16
Management Interface Netmask: 255.255.252.0
Management Interface Default Router: 10.1.56.2
Management Interface VLAN Identifier (0 = untagged): 0
Management Interface Port Num [1 to 2]: 1
Management Interface DHCP Server IP Address: 10.1.56.1

AP Transport Mode [layer2][LAYER3]: LAYER3
AP Manager Interface IP Address: 10.1.56.17

AP-Manager is on Management subnet, using same values
AP Manager Interface DHCP Server (10.1.56.1): 10.1.56.1

Virtual Gateway IP Address: 1.1.1.1

Mobility/RF Group Name: Mobility Group 1

Network Name (SSID): testuser
Allow Static IP Addresses [YES][no]: YES

Configure a RADIUS Server now? [YES][no]: no

Enter Country Code (enter 'help' for a list of countries) [US]: US

Enable 802.11b Network [YES][no]: YES
Enable 802.11a Network [YES][no]: YES
Enable 802.11g Network [YES][no]: YES
Enable Auto-RF [YES][no]: YES

Configuration saved!
Resetting system with new configuration...
```

