



Send documentation comments to mdsfeedback-doc@cisco.com.

CHAPTER

2

A Commands

The commands in this chapter apply to the Cisco MDS 9000 Family of multilayer directors and fabric switches. All commands are shown here in alphabetical order regardless of command mode. Please see the Command Mode section to determine the appropriate mode for each command. For more information, see the *Cisco MDS 9000 Family Configuration Guide*.

- aaa accounting
- aaa authentication
- arp
- attach module

aaa accounting

Send documentation comments to mdsfeedback-doc@cisco.com.

aaa accounting

To set the size of the local accounting log file, use **aaa accounting logsize** command.

aaa accounting logsize *integer* method local | radius

Syntax Description

aaa accounting	Sets the size of the log file on the local disk.
logsize	Configures Local Accounting Log File Size(in bytes)
<i>integer</i>	Size limit of the local accounting log file (0-300K) in bytes.
method	Configures method to be used for accounting
local	Enables local accounting
radius	Enables RADIUS to be used as accounting method

Defaults

None.

Command Modes

Configuration mode.

Usage Guidelines

None.

Examples

```
switch# config t
switch(config)# aaa accounting logsize 29000
switch# config t
switch(config)# aaa accounting method radius
```

Related Commands

Command	Description
show accounting config	Displays configured accounting parameters.
show accounting logsize	Displays configured log size.
show accounting log	Displays the entire log file.

Send documentation comments to mdsfeedback-doc@cisco.com.

aaa authentication

To configure the authentication method, use the aaa authentication command.

aaa authentication login local [console | telnet] none [console | telnet] radius [console | telnet]

Syntax Description	authentication Sets the size of the log file on the local disk. login Configure authentication method local Local authentication method console Apply this authentication method for console logins telnet Apply this authentication method for remote access(SSH/TELNET) none No authentication, everyone permitted radius RADIUS authentication method
---------------------------	---

Defaults	Disabled
Command Modes	Available in all command modes.
Usage Guidelines	The local option disables other authentication methods and configures local authentication to be used exclusively.

Examples	<pre>switch# config t switch(config)# aaa authentication login radius telnet switch(config)# switch(config)# aaa authentication login radius console switch(config)# switch(config)# aaa authentication login local telnet switch(config)# aaa authentication login none console</pre>
-----------------	--

Related Commands	Command	Description
	show authentication	Displays the configured authentication methods

arp

Send documentation comments to mdsfeedback-doc@cisco.com.

arp

To configure the Address Resolution Protocol (ARP) for the switch, use the **arp** command.

arp *hostname*

no form of this command disables the protocol.

Syntax Description

arp	Configure the Address Resolution Protocol (ARP).
<i>hostname</i>	Hostname (Max Size - 20)

Defaults

Enabled

Command Modes

Available in all command modes.

Usage Guidelines

None.

Examples

```
switch# arp host1
arp configured for host1
switch#
```

Related Commands

Command	Description
show arp	Display the ARP table
no arp	Remove an ARP entry from the ARP table
clear arp	Delete a specific entry or all entries from the ARP table

Send documentation comments to mdsfeedback-doc@cisco.com.

attach module

To connect to a specific module, use the **attach module** command. To disconnect, use the **exit** command at the module-## prompt, or type **\$.** to forcibly abort the attach session.

attach module *module-number*

Syntax Description	<i>module-number</i> Specifies slot number of the module you want to connect to. Slot numbers range from 1 to 13 for Cisco 9500 Series switches.				
Defaults	None				
Command Modes	EXEC				
Usage Guidelines	<p>You can use the attach module command to view the standby supervisor module information, but you can not configure the standby supervisor module using this command.</p> <p>You can also use the attach module command on the switching module portion of the Cisco MDS 9216 supervisor module which resides on slot 1 of this 2-slot switch.</p>				
Examples	<p>The following example connects to the module in slot 2. Note that after you connect to the image on the module using the attach module command, the prompt changes to module-##</p> <pre>switch# attach module 2 Attaching to module 2 ... To exit type 'exit', to abort type '\$.' module-2# exit switch#</pre>				
Related Commands	<table border="1"> <thead> <tr> <th>Command</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>show module</td> <td>Shows the status of a module.</td> </tr> </tbody> </table>	Command	Description	show module	Shows the status of a module.
Command	Description				
show module	Shows the status of a module.				