



## CHAPTER 25

# Monitoring System Processes and Logs

---

This chapter provides details on monitoring the health of the switch. It includes the following sections:

- [Displaying System Processes, page 25-2](#)
- [Displaying System Status, page 25-5](#)
- [Configuring Core and Log Files, page 25-6](#)
- [Configuring HA Policy, page 25-7](#)
- [Resetting HA Statistics, page 25-7](#)
- [Configuring Heartbeat Checks, page 25-8](#)
- [Configuring Watchdog Checks, page 25-8](#)
- [Configuring Upgrade Resets, page 25-8](#)

[Send documentation comment to mdsfeedback-doc@cisco.com](mailto:mdsfeedback-doc@cisco.com)

## Displaying System Processes

Use the **show processes** command to obtain general information about all processes (see Examples 25-1 to 25-6).

### Example 25-1 Displays System Processes

```
switch# show processes
PID      State  PC          Start_cnt  TTY  Process
-----  -----  -----  -
868      S      2ae4f33e   1          -    snmpd
869      S      2acee33e   1          -    rscn
870      S      2ac36c24   1          -    qos
871      S      2ac44c24   1          -    port-channel
872      S      2ac7a33e   1          -    ntp
-        ER      -          1          -    mdog
-        NR      -          0          -    vbuilder
```

Where:

- PID = process ID.
- State = process state
  - D = uninterruptible sleep (usually IO)
  - R = runnable (on run queue)
  - S = sleeping
  - T = traced or stopped
  - Z = defunct (“zombie”) process
- NR = not-running
- ER = should be running but currently not-running
- PC = current program counter in hex format
- Start\_cnt = how many times a process has been started (or restarted).
- TTY = terminal that controls the process. A “-” usually means a daemon not running on any particular TTY.
- Process = name of the process.

### Example 25-2 Displays CPU Utilization Information

```
switch# show processes cpu
PID      Runtime(ms)  Invoked  uSecs  1Sec  Process
-----  -
842      3807         137001   27     0.0   sysmgr
1112     1220         67974    17     0.0   syslogd
1269     220          13568    16     0.0   fcfwd
1276     2901         15419    188    0.0   zone
1277     738          21010    35     0.0   xbar_client
1278     1159         6789     170    0.0   wwn
1279     515          67617    7      0.0   vsan
```

Where:

- Runtime(ms) = CPU time the process has used, expressed in milliseconds
- Invoked = number of times the process has been invoked.

***Send documentation comment to [mdsfeedback-doc@cisco.com](mailto:mdsfeedback-doc@cisco.com)***

- uSecs = microseconds of CPU time in average for each process invocation.
- 1Sec = CPU utilization in percentage for the last one second.

**Example 25-3 Displays Process Log Information**

```
switch# show processes log
Process          PID      Normal-exit  Stack-trace  Core      Log-create-time
-----
fspf             1339     N            Y            N         Jan  5 04:25
lcm              1559     N            Y            N         Jan  2 04:49
rib              1741     N            Y            N         Jan  1 06:05
```

Where:

- Normal-exit = whether or not the process exited normally.
- Stack-trace = whether or not there is a stack trace in the log.
- Core = whether or not there exists a core file.
- Log-create-time = when the log file got generated.

**Example 25-4 Displays Detail Log Information About a Process**

```
switch# show processes log pid 1339
Service: fspf
Description: FSPF Routing Protocol Application

Started at Sat Jan  5 03:23:44 1980 (545631 us)
Stopped at Sat Jan  5 04:25:57 1980 (819598 us)
Uptime: 1 hours 2 minutes 2 seconds

Start type: SRV_OPTION_RESTART_STATELESS (23)
Death reason: SYSMGR_DEATH_REASON_FAILURE_SIGNAL (2)
Exit code: signal 9 (no core)
CWD: /var/sysmgr/work

Virtual Memory:

CODE      08048000 - 0809A100
DATA      0809B100 - 0809B65C
BRK       0809D988 - 080CD000
STACK     7FFFFFFD20
TOTAL     23764 KB

Register Set:

EBX 00000005      ECX 7FFFF8CC      EDX 00000000
ESI 00000000      EDI 7FFFF6CC      EBP 7FFFF95C
EAX FFFFFFFDFF    XDS 8010002B      XES 0000002B
EAX 0000008E (orig) EIP 2ACE133E      XCS 00000023
EFL 00000207      ESP 7FFFF654      XSS 0000002B

Stack: 1740 bytes. ESP 7FFFF654, TOP 7FFFFFFD20

0x7FFFF654: 00000000 00000008 00000003 08051E95 .....
0x7FFFF664: 00000005 7FFFF8CC 00000000 00000000 .....
0x7FFFF674: 7FFFF6CC 00000001 7FFFF95C 080522CD .....\"..
0x7FFFF684: 7FFFF9A4 00000008 7FFFFC34 2AC1F18C .....4.....*
```

**Send documentation comment to [mdsfeedback-doc@cisco.com](mailto:mdsfeedback-doc@cisco.com)**

**Example 25-5 Displays All Process Log Details**

```
switch# show processes log details
=====
Service: snmpd
Description: SNMP Agent

Started at Wed Jan  9 00:14:55 1980 (597263 us)
Stopped at Fri Jan 11 10:08:36 1980 (649860 us)
Uptime: 2 days 9 hours 53 minutes 53 seconds

Start type: SRV_OPTION_RESTART_STATEFUL (24)
Death reason: SYSMGR_DEATH_REASON_FAILURE_SIGNAL (2)
Exit code: signal 6 (core dumped)
CWD: /var/sysmgr/work

Virtual Memory:

      CODE      08048000 - 0804C4A0
      DATA      0804D4A0 - 0804D770
      BRK         0804DFC4 - 0818F000
      STACK      7FFFFCE0
      TOTAL      26656 KB
.....
```

**Example 25-6 Displays Memory Information About Processes**

```
switch# show processes memory
PID      MemAlloc  StackBase/Ptr  Process
-----  -
1277     120632   7ffffcd0/7ffffefe4  xbar_client
1278      56800   7ffffce0/7ffffb5c   wwn
1279    1210220  7ffffce0/7ffffbac   vsan
1293     386144  7ffffcf0/7ffffebd4  span
1294    1396892  7ffffce0/7ffffdff4  snmpd
1295     214528  7ffffcf0/7ffff904   rscn
1296      42064  7ffffce0/7ffffb5c   qos
```

Where:

- MemAlloc = total memory allocated by the process.
- StackBase/Ptr = process stack base and current stack pointer in hex format

[Send documentation comment to mdsfeedback-doc@cisco.com](mailto:mdsfeedback-doc@cisco.com)

## Displaying System Status

Use the **show system** command to display system-related status information (Example 25-7 to Example 25-10).

### **Example 25-7** Displays Default Switch Port States

```
switch# show system default switchport
System default port state is down
System default trunk mode is on
```

### **Example 25-8** Displays Error Information for a Specified ID

```
switch# show system error-id 0x401D0019
Error Facility: module
Error Description: Failed to stop Linecard Async Notifciation.
```

### **Example 25-9** Displays the System Reset Information

```
switch# Show system reset-reason
1) No time
   Reason: Watchdog Timeout
   Service:
   Version: 1.0(0.253e)

2) At 125982 usecs after Tue Jan  1 06:45:55 1980
   Reason: Reset Requested CLI command reload
   Service:
   Version: 1.0(0.253e)
```

### **Example 25-10** Displays System Uptime

```
switch# show system uptime
Start Time: Sun Oct 13 18:09:23 2030
Up Time:    0 days, 9 hours, 46 minutes, 26 seconds
```

[Send documentation comment to mdsfeedback-doc@cisco.com](mailto:mdsfeedback-doc@cisco.com)

## Configuring Core and Log Files

You can save cores (from the active supervisor module, the standby supervisor module, or any switching module) to an external flash (slot 0) or to a TFTP server in one of two ways:

- On demand—to copy a single file based on the provided process ID.
- Periodically—to copy core files periodically as configured by the user.

To copy the core and log files on demand, follow this step:

	Command	Purpose
Step 1	switch# <b>copy core:7407 slot0:coreSample</b>	Copies the core file with the process ID 7407 as coreSample in slot 0.
	switch# <b>copy core://5/1524 tftp://1.1.1.1/abcd</b>	Copies cores (if any) of a process with pid 1524 generated on slot 5 to tftp server.

- If the core file for the specified process ID is not available, you will see the following response:

```
switch# copy core:133 slot0:foo
No core file found with pid 133
```

- If two core files exist with same process ID, only one file will be copied:

```
switch# copy core:7407 slot0:foo1
2 core files found with pid 7407
Only "/isan/tmp/logs/calculator_log.7407.tar.gz" will be copied to the destination.
```

To copy the core and log files periodically, follow these steps:

	Command	Purpose
Step 1	switch# <b>config t</b>	Enters configuration mode.
Step 2	switch(config)# <b>system cores slot0:coreSample</b>	Copies the core files coreSample to slot 0.
	switch(config)# <b>no system cores</b>	Disable the core files copying feature.

A new scheme overwrites any previously-issued scheme. For example, if you issue a new system core command, the cores are periodically saved to the new location or file.



### Tip

Be sure to create any required directory before issuing this command. If the directory specified by this command does not exist, the switch software logs a syslog message each time a copy cores is attempted.)

## Clearing the Core Directory

Use the **clear cores** command to clean out the core directory. The software keeps the last few cores per service and per slot and clears all other cores present on the active supervisor module.

```
switch# clear cores
```

**[Send documentation comment to mdsfeedback-doc@cisco.com](mailto:mdsfeedback-doc@cisco.com)**

## Displaying Cores Status

Use the **show system cores** command to display the currently configured scheme for copying cores. See Examples 25-11 to 25-13.

### Example 25-11 Displays the status of System Cores

```
switch# show system cores
Transfer of cores is enabled
```

### Example 25-12 Displays All Cores Available for Upload from the Active Supervisor Module

```
switch# show cores
Module-num Process-name PID Core-create-time
-----
5          fspf          1524   Jan 9 03:11
6          fcc             919   Jan 9 03:09
8          acltcam        285   Jan 9 03:09
8          fib             283   Jan 9 03:08
```

Where:

module-num shows the slot number on which the core was generated. In this example, the `fsfp` core was generated on the active supervisor module (slot 5), `fcc` was generated on the standby supervisor module (slot 6), and `acltcam` and `fib` were generated on the switching module (slot 8).

### Example 25-13 Displays Logs on the Local System

```
switch# show processes log
Process PID      Normal-exitStack-traceCore Log-create-time
-----
fsfp   1524   N          Y          Y   Jan 9 03:11
```

## Configuring HA Policy

You can disable the HA policy supervisor reset feature (enabled by default) for debugging and troubleshooting purposes.

To configure HA policies, follow this step:

	Command	Purpose
Step 1	switch# <b>system no hap-reset</b>	Disables supervisor reset HA policy.
	switch# <b>system hap-reset</b>	Enables Supervisor Reset HA policy whenever a critical service runs out of HA policies (default) and reverts it to factory default.

## Resetting HA Statistics

The system statistics reset feature resets the high availability statistics collected by the system.

```
switch# system statistics reset
```

*Send documentation comment to [mdsfeedback-doc@cisco.com](mailto:mdsfeedback-doc@cisco.com)*

## Configuring Heartbeat Checks

The software monitors every service to verify if heartbeats are sent at regular intervals. If not, the software restarts that service. This feature helps locate situations when a service is stuck in an infinite loop.

You can disable the heartbeat checking feature (enabled by default) for debugging and troubleshooting purposes like attaching a GDB to a specified process.

To configure heartbeat checks, follow this step:

	Command	Purpose
Step 1	switch# <b>system no heartbeat</b>	Disables heartbeat checks.
	switch# <b>system heartbeat</b>	Enables heartbeat checks (default) and reverts it to factory default.

## Configuring Watchdog Checks

If a watchdog is not logged at every 8 seconds by the software, the supervisor module reboots the switch.

You can disable the watchdog checking feature (enabled by default) for debugging and troubleshooting purposes like attaching a GDB or a kernel GDB (KGDB) to a specified process.

To configure watchdog checks, follow this step:

	Command	Purpose
Step 1	switch# <b>system no watchdog</b>	Disables watchdog checks.
	switch# <b>system watchdog</b>	Enables watchdog checks (default) and reverts it to factory default.

## Configuring Upgrade Resets

This feature enables supervisor module resets when an upgrade has failed. If the upgrade fails for any reason, the software reboots the switch since the file system may be in an unstable state.

You can disable the upgrade-reset feature (enabled by default) for debugging and troubleshooting purposes.

To configure supervisor upgrade resets, follow this step:

	Command	Purpose
Step 1	switch# <b>system no upgrade-reset</b>	Disables the upgrade reset feature.
	switch# <b>system upgrade-reset</b>	Enables the upgrade reset feature (default) and reverts it to factory default.