



A

access control **5-1**
activating
 zone sets **3-5**
active zone set **3-2**
adding
 Fibre Channel routes **10-1**
 IP route **4-4**
 PortChannels **7-5**
 RADIUS servers **5-6**
 route flows **10-2**
 SNMP communities **5-2**
 SNMP user **5-2**
 syslog servers **8-11**
 VSANs **4-2**
zone members **3-4**
zones **3-3**
administrator access
 configuring **5-1**
 users and roles **1-6**
advanced features **11-1**
alarms
 RMON attributes **8-6**
 See RMON
alerts
 configuring Call Home **8-10**
application management **1-2**
authentication
 See SNMP authentication

B

beacon mode
 disabling **7-4**
 enabling **7-4**
bytes, monitoring **7-6**

C

Call Home **8-9**
 alerts **8-10**
 destinations **8-9**
 e-mail **8-10**
 events **8-1**
 profiles **8-10**
 capability attributes **7-4**
 charting
 from Summary View **2-16**
Class 2 errors, monitoring **7-7**
class of service
 See CoS
CLI
 launching from Fabric View **2-13**
 security **5-6**
 using **1-3**
community strings
 required for discovery **2-7**
SNMP **5-1**
configuration file
 startup **6-1**
connectivity
 controlling in-band management **4-3**
 verifying **2-9**

Send documentation comments to mdsfeedback-doc@cisco.com.

copying

 zones **3-4**

CoS

 displaying for Fx ports **7-2**

 displaying for xE ports **7-2**

creating

 PortChannels **2-17**

D

data management **1-2**

default configuration **1-4**

default gateway **4-4**

default zone **3-2**

 default zone policy **3-7**

 defining, user roles **5-4**

 deleting zones **3-6**

 destinations, Call Home **8-9**

device

 status, legend **2-15**

devices

 managing **1-2**

Device View

 described **1-1, 1-6**

 launching **2-15**

disabling, ports **2-17, 7-2**

discards

 monitoring **7-7**

discovering network fabric **1-4**

Domain Manager

 viewing statistics **11-3**

domains

 configuring interfaces **11-3, 11-4**

 managing attributes **11-2**

 viewing information **11-3**

downloading

 switch software **6-1**

E

editing zone information **3-2**

ELP attributes **7-3**

e-mail, Call Home **8-10**

 attributes **8-9**

enabling

 PortChannels **7-8**

 ports **2-17, 7-2**

 trunking **2-17, 7-8**

end node loop ports

 See NL ports

end-to-end connectivity

 See connectivity

errors

 See Class 2 errors

 See frame errors

events

 configuring filters **8-4**

 configuring RMON **8-7**

 viewing RMON **8-7**

 viewing SNMP **8-3**

Events tab **2-6**

exchange link parameter attributes

 See ELP attributes

expansion ports

 See xEports

F

fabric

 login attributes **7-2**

 management **1-2**

 fabric configuration, analyzing **2-10**

 fabric login attributes

 See FLOGI attributes

fabric loop ports

 See Fx ports

fabric ports

Send documentation comments to mdsfeedback-doc@cisco.com.

See Fx ports
Fabric Shortest Path First
See FSPF
Fabric View **1-1**
main window described **2-1**
Fibre Channel routes **10-1**
FLOGI attributes **7-2**
frames
monitoring **7-7**
FSPF
described **10-1**
interfaces **10-3**
interface statistics **10-3**
links **10-4**
link state records **10-3**
statistics **10-3**
Fx ports
defined **7-1**
managing interface attributes **7-2**
managing physical attributes **7-4**
viewing FLOGI attributes **7-2**

H

health
See switch health
hosts, viewing **2-14**

I
ICMP statistics **4-6**
images, downloading
See downloading images
in-band management
routing **4-3**
Information pane
defined **2-2**
described **2-3**

initial setup **1-3**
installing
switch software **6-1**
Inter-Switch Links
See ISL statistics
See ISL trunks
IP addresses
viewing **4-5**
IPFC
defined **1-3**
managing connectivity **4-5**
IP over Fibre Channel
See IPFC
IP routing **4-3**
ISL trunks **2-14**

K

kickstart image
function **6-1**

L

launching
CLI **2-13**
Device View **2-15**
link errors, monitoring **7-7**
links
FSPF **10-4**
link state records **10-3**
local console port **1-3**
logical unit numbers
See LUNs
logs
configuring syslog **8-11**
viewing RMON **8-7**
viewing SNMP **8-3**
Log tab **2-6**

Send documentation comments to mdsfeedback-doc@cisco.com.

LSRs viewing [10-3](#)

LUNs, viewing [2-14](#)

M

management access [1-6](#)

management traffic, routing [4-3](#)

managing ports [2-17](#)

Map pane

defined [2-2](#)

described [2-6](#)

members

adding to zones [3-4](#)

deleting [3-7](#)

displaying zones [3-6](#)

menu bar

Fabric View [2-2](#)

options [2-2](#)

merging zones [2-11](#)

message bar

Fabric View [2-2](#)

monitoring

bytes [7-6](#)

Class 2 errors [7-7](#)

discards [7-7](#)

frame errors [7-8](#)

port sequence errors [7-7](#)

port statistics [7-6](#)

SNMP traffic [4-7](#)

traffic [2-16](#)

multiple switches

managing with Fabric View [1-2](#)

N

name server

advanced attributes [11-6](#)

general attributes [11-5](#)

proxy ports [11-6](#)

statistics [11-6](#)

NL ports [7-1](#)

Nx registrations

viewing [11-8](#)

O

of [5-1](#)

opening, fabric [2-7](#)

P

panes

See Information pane

See Map pane

See VSAN/Switches pane

physical alarms, RMON [8-5](#)

policies

default zone [3-2](#)

setting for default zone [3-7](#)

PortChannels

creating from Device View [2-17](#)

interface attributes [7-5](#)

managing [7-4, 7-8](#)

ports

enabling [7-2](#)

FLOGI attributes [7-2](#)

link errors [7-7](#)

managing general attributes [7-1](#)

managing interface attributes [7-2](#)

monitoring bytes [7-6](#)

monitoring frames [7-7](#)

monitoring statistics [7-6](#)

PortChannels [7-4](#)

sequence errors [7-7](#)

trunking information [7-3](#)

types defined [7-1](#)

Send documentation comments to mdsfeedback-doc@cisco.com.

viewing capability attributes [7-4](#)
 viewing ELP attributes [7-3](#)
 viewing FLOGI attributes [7-2](#)
 principal attributes [11-2](#)
 priorities
 syslog [8-12](#)
 private loop devices [7-1](#)
 profiles, Call Home [8-10](#)
 proxy ports, name server [11-6](#)

R

RADIUS
 authentication [5-6](#)
 registered state change notification
 see RSCN
 remote monitoring
 See RMON logs
 reports, Fabric View [2-13](#)
 resizing panes [2-2](#)
 resource management [1-2](#)
 RMON alarms
 attributes [8-6](#)
 by port [8-4](#)
 defined [8-1](#)
 for VSANs [8-5](#)
 physical [8-5](#)
 RMON events [8-7](#)
 RMON logs [8-7](#)
 roles
 configuring SNMP [5-4](#)
 described [5-1](#)
 routing
 FSPF [10-2](#)
 IP management traffic [4-3](#)
 RSCN
 viewing Nx Registration [11-8](#)
 viewing statistics [11-8](#)

S

SAN operating system
 See SAN-OS [6-1](#)
 SAN-OS [6-1](#)
 searching zones [3-5](#)
 security
 configuring CLI administrator access [1-6, 5-1, 5-6](#)
 configuring SNMP access [1-6, 5-1](#)
 event destinations [8-4](#)
 seed switch
 described [1-4](#)
 IP routing [4-4](#)
 sequence errors [7-7](#)
 setup dialog [1-3](#)
 SNMP
 monitoring traffic [4-7](#)
 SNMP communities
 configuring [5-1](#)
 SNMP events
 defined [8-1](#)
 filters [8-4](#)
 software images
 downloading [6-1](#)
 upgrading [6-1](#)
 static routes [4-4](#)
 statistics
 FSPF [10-3](#)
 ports [7-5](#)
 status bar [2-2](#)
 storage, viewing [2-14](#)
 Summary View
 attributes [2-16](#)
 described [1-1, 1-6](#)
 using [2-16](#)
 supervisor module
 connecting to [1-3](#)
 switch health [2-9](#)
 syslog

Send documentation comments to mdsfeedback-doc@cisco.com.

configuring **8-11**

events **8-1**

priorities **8-12**

servers **8-11**

system image

function **6-1**

T

threshold manager, RMON **8-4**

timers **11-8**

TL ports **7-1**

toolbar **2-2**

traceroute **2-13**

traffic statistics

charting **2-16**

translative loop ports

See TL ports

troubleshooting

with traceroute **2-13**

trunking

enabling **2-17, 7-8**

expansion ports **7-1**

information **7-3**

U

UDP, viewing **4-6**

user roles

configuring **5-4**

creating **5-4**

users, SNMP **5-1**

V

verifying

fabric configuration **2-10**

zone configuration **2-11**

viewing

domain information **11-3**

hosts **2-14**

ICMP statistics **4-6**

IP addresses **4-5**

IPFC information **4-5**

ISL trunks **2-14**

LUNs **2-14**

network fabric **1-4**

port capability **7-4**

SNMP events **8-3**

storage **2-14**

switches **2-14**

trunking information **7-3**

UDP information **4-6**

zone statistics **3-7**

VSAN/Switches pane

described **2-3**

location **2-2**

VSANs

benefits **4-1**

configuring **4-1**

IP routing **4-4**

RMON alarms **8-5**

W

world wide names

See WWN

X

xE ports

managing general attributes **7-1**

managing interface attributes **7-2**

managing physical attributes **7-4**

viewing ELP attributes **7-3**

viewing port capability attributes **7-4**

Send documentation comments to mdsfeedback-doc@cisco.com.

viewing trunking information [7-3](#)

Z

zones

 adding members [3-4](#)

 cloning [3-4](#)

 deleting [3-6](#)

 managing [3-1](#)

 merging [2-11](#)

 statistics [3-7](#)

zone sets

 activating [3-5](#)

 adding zones [3-3](#)

 creating [3-2](#)