



ocfeedback@cisco.com

Preface

Audience

To use this guide, you must be familiar with IP and routing technology.

Command descriptions use these conventions:

Convention	Description
boldface font	Commands and keywords are in boldface.
italic font	Arguments for which you supply values are in italics.
[]	Elements in square brackets are optional.
[x y z]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string includes the quotation marks.

Screen examples use these conventions:

screen font	Terminal sessions and information that the device displays are in screen font.
boldface screen font	Information that you must enter is in boldface screen font.
italic screen font	Arguments for which you supply values are in italic screen font.
< >	Nonprinting characters, such as passwords, are in angle brackets.
[]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

This document uses the following conventions:



Means reader *take note*. Notes contain helpful suggestions or references to material not covered in the manual.

Send comments to nexus5k-docfeedback@cisco.com



Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

Related Documentation

The following are related Cisco Nexus 5000 Series and Cisco Nexus 2000 Series Fabric Extender documents:

Documentation for Cisco Nexus 5000 Series Switches is available at the following URL:

 $http://www.cisco.com/en/US/products/ps9670/tsd_products_support_series_home.html$

Documentation for Cisco Nexus 2000 Series Fabric Extender is available at the following URL:

http://www.cisco.com/en/US/products/ps10110/tsd_products_support_series_home.html

Release Notes

Cisco Nexus 5000 Series and Cisco Nexus 2000 Series Release Notes

Cisco Nexus 5000 Series Switch Release Notes

Configuration Guides

Cisco Nexus 5000 Series Configuration Limits for Cisco NX-OS Release 5.0(3)N1(1)

Cisco Nexus 5000 Series NX-OS Fibre Channel over Ethernet Configuration Guide

Cisco Nexus 5000 Series NX-OS Layer 2 Switching Configuration Guide

Cisco Nexus 5000 Series NX-OS Multicast Routing Configuration Guide

Cisco Nexus 5000 Series NX-OS Quality of Service Configuration Guide

Cisco Nexus 5000 Series NX-OS SAN Switching Configuration Guide

Cisco Nexus 5000 Series NX-OS Security Configuration Guide

Cisco Nexus 5000 Series NX-OS System Management Configuration Guide

Cisco Nexus 5000 Series NX-OS Unicast Routing Configuration Guide

Cisco Nexus 5000 Series Switch NX-OS Software Configuration Guide

Cisco Nexus 5000 Series Fabric Manager Configuration Guide

Cisco Nexus 7000 Series NX-OS Fundamentals Configuration Guide

Cisco Nexus 2000 Series Fabric Extender Software Configuration Guide

Maintain and Operate Guides

Cisco Nexus 5000 Series NX-OS Operations Guide

Send comments to nexus5k-docfeedback@cisco.com

Installation and Upgrade Guides

Cisco Nexus 5000 Series and Cisco Nexus 5500 Platform Hardware Installation Guide

Cisco Nexus 2000 Series Hardware Installation Guide

Cisco Nexus 5000 Series NX-OS Software Upgrade and Downgrade Guide, Release 4.2(1)N1(1)

Regulatory Compliance and Safety Information for the Cisco Nexus 5000 Series Switches and Cisco Nexus 2000 Series Fabric Extenders

Licensing Guide

Cisco NX-OS Licensing Guide

Command References

Cisco Nexus 5000 Series Command Reference

Technical References

Cisco Nexus 5000 Series and Cisco Nexus 2000 Series Fabric Extender MIBs Reference

Error and System Messages

Cisco NX-OS System Messages Reference

Troubleshooting Guide

Cisco Nexus 5000 Troubleshooting Guide

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html

Subscribe to the *What's New in Cisco Product Documentation* as an RSS feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service. Cisco currently supports RSS Version 2.0.

Send comments to nexus5k-docfeedback@cisco.com