



Subscriber Traffic Management for the Cisco CMTS Routers

First Published: February 14, 2008
Last Updated: November 29, 2010



Note

Cisco IOS Release 12.2(33)SCA integrates support for Subscriber Traffic Management feature on the Cisco CMTS routers. This feature is also supported in Cisco IOS Release 12.3BC, and this document contains information that references many legacy documents related to Cisco IOS Release 12.3BC. In general, references to Cisco IOS Release 12.3BC also apply to Cisco IOS Release 12.2SC. The updates to this feature in Cisco IOS Release 12.3(23)BC2 are now supported in Cisco IOS Release 12.2(33)SCB and later.

For the latest information on Cisco CMTS router support in Cisco IOS Release 12.2SC, refer to the [Cross-Platform Release Notes for Cisco Universal Broadband Routers in Cisco IOS Release 12.2SC](#).

This document describes the Subscriber Traffic Management (STM) feature Version 1.3. STM feature supports all DOCSIS-compliant cable modems.

The STM feature allows a service provider to configure a maximum bandwidth threshold over a fixed period for a specific service class (or quality of service [QoS] profile). The subscribers who exceed this configured threshold can then be identified and allocated reduced QoS. STM works as a low-CPU alternative to Network-Based Application Recognition (NBAR) and access control lists (ACLs). However, using STM does not mean that NBAR and ACLs have to be turned off; STM can be applied along with NBAR and ACLs. STM also works in conjunction with the Cisco Broadband Troubleshooter to support additional network management and troubleshooting functions in the Cisco CMTS.

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the [“Feature Information for Subscriber Traffic Management for the Cisco CMTS Routers” section on page 36](#).



Americas Headquarters:
Cisco Systems, Inc., 170 West Tasman Drive, San Jose, CA 95134-1706 USA

Use Cisco Feature Navigator to find information about platform support and Cisco IOS, Catalyst OS, and Cisco IOS XE software image support. To access Cisco Feature Navigator, go to <http://www.cisco.com/go/cfn>. An account on Cisco.com is not required.

Contents

- [Prerequisites for Subscriber Traffic Management on the Cisco CMTS Routers, page 2](#)
- [Restrictions for Subscriber Traffic Management on the Cisco CMTS Routers, page 3](#)
- [Information About Subscriber Traffic Management on the Cisco CMTS Routers, page 4](#)
- [How to Configure the Subscriber Traffic Management Feature on the Cisco CMTS Routers, page 10](#)
- [Monitoring the Subscriber Traffic Management Feature on the Cisco CMTS Routers, page 27](#)
- [Configuration Examples for Subscriber Traffic Management on the Cisco CMTS Routers, page 30](#)
- [Additional References, page 34](#)
- [Feature Information for Subscriber Traffic Management for the Cisco CMTS Routers, page 36](#)

Prerequisites for Subscriber Traffic Management on the Cisco CMTS Routers

The Subscriber Traffic Management feature is supported on the Cisco CMTS routers in Cisco IOS Release 12.3BC and 12.2SC. [Table 1](#) shows the hardware compatibility prerequisites for this feature.



Note

The hardware components introduced in a given Cisco IOS Release are supported in all subsequent releases unless otherwise specified.

Table 1 Cable Hardware Compatibility Matrix for the Subscriber Traffic Management feature

CMTS Platform	Processor Engine	Cable Interface Line Cards
Cisco uBR10012 Universal Broadband Router	Cisco IOS Release 12.2(33)SCB and later releases <ul style="list-style-type: none"> • PRE2 • PRE4 	Cisco IOS Release 12.2(33)SCB and later releases <ul style="list-style-type: none"> • Cisco uBR10-MC5X20U/H Cisco IOS Release 12.2(33)SCC and later releases <ul style="list-style-type: none"> • Cisco UBR-MC20X20V Cisco IOS Release 12.2(33)SCE and later <ul style="list-style-type: none"> • Cisco uBR-MC3GX60V¹
Cisco uBR7246VXR Universal Broadband Routers	Cisco IOS Release 12.3(21)BC and later releases <ul style="list-style-type: none"> • NPE-G1 Cisco IOS Release 12.2(33)SCD and later releases <ul style="list-style-type: none"> • Network Processing Engine G2 (NPE-G2) 	Cisco IOS Release 12.3(21)BC and later releases <ul style="list-style-type: none"> • Cisco uBR-MC28U/X Cisco IOS Release 12.2(33)SCD and later releases <ul style="list-style-type: none"> • Cisco uBR-MC88V²
Cisco uBR7225VXR Universal Broadband Router	Cisco IOS Release 12.2(33)SCA and later releases <ul style="list-style-type: none"> • NPE-G1 Cisco IOS Release 12.2(33)SCD and later releases <ul style="list-style-type: none"> • NPE-G2 	Cisco IOS Release 12.2(33)SCD and later releases <ul style="list-style-type: none"> • Cisco uBR-MC28U/X • Cisco uBR-MC88V

1. Cisco uBR3GX60V cable interface line card is not compatible with PRE2. You must use PRE4 with the Cisco uBR3GX60V cable interface line card.
2. Cisco uBR-MC88V cable interface line card is not compatible with NPE-G1. You must use NPE-G2 with the Cisco uBR-MC88V cable interface line card.

Restrictions for Subscriber Traffic Management on the Cisco CMTS Routers



Note

In this document, the phrase QoS profile is synonymously used to indicate a service class for a DOCSIS 1.1 cable modem. However, QoS profile applies only to DOCSIS 1.0 operations. In instances where QoS profile is mentioned to indicate DOCSIS 1.1 operations, the QoS profile should be treated as a service class.

The STM feature has the following restrictions and limitations:

- Cisco IOS Release 12.2(15)BC1 supports monitoring and controlling only cable modems that have registered for DOCSIS 1.0 operations (using the quality of service [QoS] profile or service ID [SID] model).

- Cisco IOS Release 12.3(9a)BC supports monitoring and controlling cable modems that have registered for DOCSIS1.0 or DOCSIS 1.1 operations (using the QoS profile ID or service ID [SID] model).
- In STM version 1.1 (refer to CSCef53390), the sampling rate range (duration) is calculated using the monitoring duration rather than the constant range (10 to 30 minutes) used in STM 1.0.

The following is an example of a sampling rate calculation:

- The maximum memory to be used per line card for STM is 10 megabytes.
 - The maximum number of modems that can be supported is 6000 per line card.
 - Per-sample memory consumption is 8 bytes.
 - The maximum number of samples that can be allowed is $10 * 10^6 / (6 * 10^3 * 2 * 8) \sim 100$
 - The duration sample rate is calculated as duration / 100 = sample rate, only if the duration is more than 1440. For a monitoring duration of less than 1440, the sample rate range would be 10 to 30 minutes.
 - If you are using STM 1.0 with a duration of two days and a sample rate of 20 minutes, and you try to restore that configuration in STM 1.1, the command fails because now the range is 28 to 86 minutes. The feature to convert the STM 1.0 configuration to STM 1.1 was committed through CSCee58978.
- For DOCSIS1.0, the registered QoS profile specified by an enforce-rule must match exactly a QoS profile that exists on the Cisco CMTS. To manage a cable modem that is using a modem-created QoS profile, you must first create that same exact QoS profile on the Cisco CMTS. All parameters in the QoS profile must match before the cable modem can be managed by the enforce-rule.
 - The Cisco CMTS routers support a certain maximum number of enforce-rules depending on your Cisco IOS software release. If you have created the maximum number of enforce-rules and want to create another rule, you must first delete one of the existing rules.
 - Cisco IOS Release 12.2(15)BC1 and later—Supports a maximum of 20 enforce-rules.
 - Beginning in Cisco IOS Release 12.3(23)BC2—Supports a maximum of 40 enforce-rules.
 - Changing the configuration of an enforce-rule automatically resets all byte counters for the subscribers who are mapped to that enforce-rule.
 - When specifying a QoS profile to be enforced when users violate their registered QoS profiles, both the originally provisioned QoS profile and the enforced QoS profile must be created on the Cisco CMTS.
 - The Subscriber Traffic Management feature calculates duration based on the time set on the router, not uptime. Therefore, if you use the **clock set** command to change the time on the router, you might affect the STM monitoring behavior.

Information About Subscriber Traffic Management on the Cisco CMTS Routers

The following sections describe the Subscriber Traffic Management feature:

- [Feature Overview, page 5](#)
- [Feature List, page 5](#)
- [Sliding Window for Monitoring Service Flows, page 6](#)

- [Weekend Monitoring, page 7](#)
- [SNMP Trap Notifications, page 7](#)
- [Cable Modem Interaction with the Subscriber Traffic Management Feature, page 9](#)

Feature Overview

The STM feature allows service providers to configure a maximum bandwidth threshold over a fixed period, for a specific service class (or QoS profile). The subscribers who exceed this configured threshold can then be identified and allocated a reduced QoS. This feature supplements current techniques such as NBAR and ACLs, to ensure that a minority of users do not consume a majority of a cable network's bandwidth.

Current subscriber controls, such as NBAR and ACLs, examine all packets coming into the CMTS. These techniques can curb a large volume of problem traffic, but they are not as effective in dealing with the latest generation of peer-to-peer file-sharing applications that can place heavy demands on a network's available bandwidth. The STM feature allows service providers to focus on a minority of potential problem users without impacting network performance or other users who are abiding by their service agreements.

The STM feature supports two types of monitoring:

- **Legacy Monitoring**—Legacy monitoring allows you to set up a single monitoring duration without the ability to choose the time of day when that monitoring is performed. The configured monitoring parameters remain constant throughout the day.
- **Peak-Offpeak Monitoring**—Peak-Offpeak monitoring allows you to specify up to two high-traffic periods in a day for monitoring, in addition to the ability to continue monitoring during the remaining (or off-peak) periods. By combining the peak time option with weekend monitoring, you can identify and limit the bandwidth usage of certain subscribers for up to two peak network usage periods during weekdays, and during a different set of peak usage periods on weekends.

When a cable modem goes offline and remains offline for 24 hours, the Cisco CMTS router deletes its service flow IDs from its internal databases, and also deletes the modem's traffic counters. This can allow some users to exceed their bandwidth limits, go offline, and come back online with new counters. The Subscriber Traffic Management feature helps to thwart these types of theft-of-service attacks by implementing a penalty period for cable modems that violate their service level agreements (SLAs). Even if a cable modem goes offline, its counters are still reset, and the CMTS continues to enforce the penalty period.

Feature List

The Subscriber Traffic Management feature has the following operational features:

- Subscriber Traffic Management 1.1 (STM 1.1) supports cable modems that have registered for DOCSIS 1.1 operations (using the service class/service flow ID [SFID] model).
- Up to 20 enforce-rules can be created on each CMTS in Cisco IOS software releases prior to Cisco IOS Release 12.3(23)BC2. Beginning in Cisco IOS Release 12.3(23)BC2, you can create up to 40 enforce-rules.
- Separate enforce-rules can be used for downstream traffic and for upstream traffic. However, the limit on the total number of enforce-rules that can be configured includes the upstream and downstream rules combined.

- Each enforce-rule uses a subscriber's registered QoS profile to identify which users should be monitored for excessive traffic. The registered QoS profile must exist on the Cisco CMTS. If you want to manage cable modems that are using QoS profiles that were created by the cable modem, you must first manually create a QoS profile with the exact same QoS parameters on the Cisco CMTS, and then allow the cable modem to come online using the manually created profile.
- Each enforce-rule specifies the maximum number of kilobytes a user can transmit during a specified window.
- Subscribers who exceed the maximum bandwidth that is specified by their enforce-rule can be automatically switched to a separate enforced QoS profile that limits their network use for a customizable penalty period. The enforced QoS profile can change the guaranteed bandwidth, priority, or any other aspect of the traffic that the service provider considers an acceptable response to subscribers who violate their service agreements.
- Subscribers are automatically switched back to their registered QoS profile at the end of their penalty period. A technician at the service provider's network operations center (NOC) can also switch them back before the penalty period expires.
- This feature also supports a **no-persistence** option, so that the enforced QoS profile does not remain in effect when a cable modem reboots. This option is particularly useful when the feature is initially implemented, so that the service providers can identify problem subscribers and applications, without creating a major impact on the entire user base. When repeat offenders are found, they can then be switched to an enforce-rule that does keep the enforced QoS profile in effect even when the cable modem reboots.
- Service providers can display a list of all subscribers' current usage statistics. Service providers can also display a list of just those subscribers who are overconsuming bandwidth.
- The penalty period persists across reboots of the cable modem, so subscribers cannot avoid the enforced QoS profile by resetting their modems and reregistering on the cable network. This allows service providers to set an appropriate penalty for those users that consistently exceed the maximum bandwidth they have been allocated. Service providers also can specify a time of day when CMs that are identified for penalty can be released from the penalty period.
- If a user that is using excessive bandwidth decides to upgrade to a higher level of service, the service provider can reconfigure the provisioning system to assign a new QoS profile to the cable modem. The user can then reboot the cable modem and come online using the new level of service.
- Service providers can change subscriber service classes for a particular modem using the **cable modem service-class-name** command.
- Different subscriber monitoring parameters can be configured for weekends, including peak and offpeak monitoring windows. You can also establish the same monitoring windows for every day of the week, or turn off monitoring altogether on the weekends as desired.

Sliding Window for Monitoring Service Flows


When an enforce-rule is activated, the CMTS periodically checks the bandwidth being used by subscribers to determine whether any subscribers are consuming more bandwidth than that specified by their registered QoS profiles. The CMTS keeps track of the subscribers using a sliding window that begins at each sample-rate interval and continues for the monitoring-duration period.

Each sample-rate interval begins a new sliding window period for which the CMTS keeps track of the total bytes transmitted. At the end of each sliding window period, the CMTS examines the byte counters to determine if any subscriber is currently overconsuming bandwidth on the network.

For example, with the default sample-rate interval of 15 minutes and the default monitoring-duration window of 360 minutes (6 hours), the CMTS samples the bandwidth usage every 15 minutes and determines the total bytes transmitted at the end of each 360-minute window. Therefore, every 15 minutes, the CMTS determines each subscriber's usage statistics for the preceding 6-hour period.

Figure 1 illustrates how this process works, with a new sliding window beginning at the beginning of each sample-rate interval period.

Figure 1 Monitoring-Duration Windows

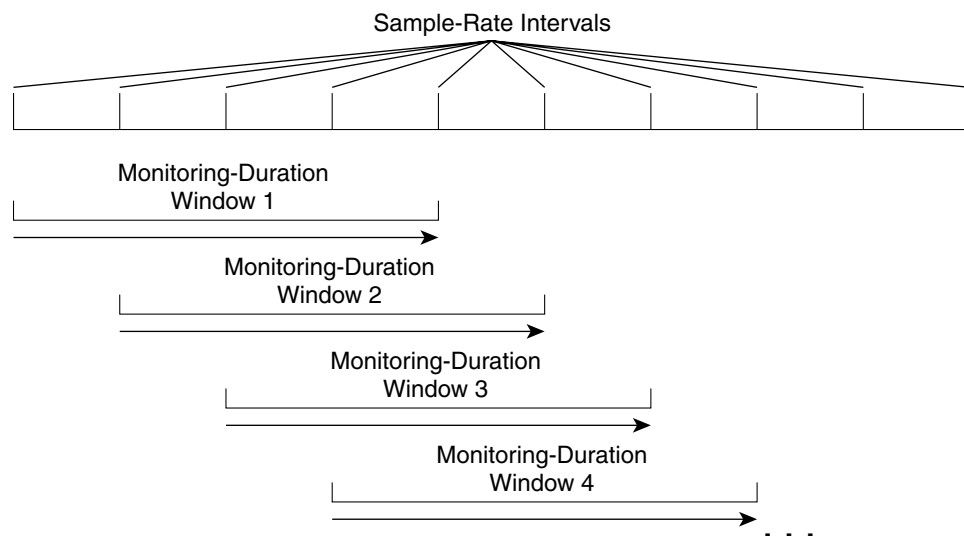

88817

Weekend Monitoring

With standard legacy and peak-offpeak monitoring configuration, monitoring continues to occur on the weekends, but in releases prior to Cisco IOS Release 12.3(23)BC2, there was not an ability to establish different monitoring criteria during the weekend days.

Beginning in Cisco IOS Release 12.3(23)BC2 for STM version 1.2, support for configuration of different monitoring conditions on weekends is introduced. Weekend monitoring options support the same parameters that are available in the existing monitoring options, but use a separate set of commands to configure alternate monitoring on weekend days. This includes configuration of peak and offpeak weekend monitoring windows.

In addition, the CLI supports the ability to turn off any monitoring on the weekend, or to use the same monitoring conditions for every day of the week.

SNMP Trap Notifications

Cisco IOS Release 12.2(15)BC1 (for the Cisco uBR10012 router) and Cisco IOS Release 12.3(9a)BC (for the Cisco uBR7246VXR router and the Cisco uBR7100 series routers) support a Simple Network Management Protocol (SNMP) trap notification that can be sent whenever a subscriber violates the enforce-rule. This trap is defined in the CISCO-CABLE-QOS-MONITOR-MIB and is enabled using the **snmp-server enable traps cable** command.

Each SNMP trap notification contains the following information:

- MAC address of the subscriber's cable modem
- Name of the enforce-rule being applied to this subscriber
- Total bytes sent by the subscriber during the monitoring-duration window
- Time at which the subscriber's penalty period expires

The CISCO-CABLE-QOS-MONITOR-MIB also contains the following tables that provide information about the Subscriber Traffic Management configuration and about subscribers who violate their enforce-rules:

- `ccqmCmtsEnforceRuleTable`—Contains the attributes of the enforce-rules that are currently configured on the Cisco CMTS.
- `ccqmEnfRuleViolateTable`—Provides a snapshot list of the subscribers who violated their enforce-rules over the sliding monitoring-duration window.

Beginning in Cisco IOS Release 12.3(23)BC2, the following new objects are introduced to support feature enhancements in STM Version 1.2:

- `ccqmCmtsEnfRulePenaltyEndTime`
- `ccqmCmtsEnfRuleWkndOff`
- `ccqmCmtsEnfRuleWkndMonDuration`
- `ccqmCmtsEnfRuleWkndAvgRate`
- `ccqmCmtsEnfRuleWkndSampleRate`
- `ccqmCmtsEnfRuleWkndFirstPeakTime`
- `ccqmCmtsEnfRuleWkndFirstDuration`
- `ccqmCmtsEnfRuleWkndFirstAvgRate`
- `ccqmCmtsEnfRuleWkndSecondPeakTime`
- `ccqmCmtsEnfRuleWkndSecondDuration`
- `ccqmCmtsEnfRuleWkndSecondAvgRate`
- `ccqmCmtsEnfRuleWkndOffPeakDuration`
- `ccqmCmtsEnfRuleWkndOffPeakAvgRate`
- `ccqmCmtsEnfRuleWkndAutoEnforce`

Beginning in Cisco IOS Release 12.3(33)SCD2, the following new objects are introduced to support feature enhancements in STM Version 1.3:

- `ccqmCmtsEnfRuleFirstPeakTimeMin`
- `ccqmCmtsEnfRuleSecondPeakTimeMin`
- `ccqmCmtsEnfRuleWkndFirstPeakTimeMin`
- `ccqmCmtsEnfRuleWkndSecondPeakTimeMin`
- `ccqmCmtsEnfRulePenaltyEndTimeMin`
- `ccqmCmtsEnfRuleWkPenaltyPeriod`
- `ccqmCmtsEnfRuleWkndPenaltyPeriod`
- `ccqmCmtsEnfRuleRelTimeMonitorOn`

Restrictions for SNMP Trap Notifications

In Cisco IOS Release 12.3(23)BC2, the MIB objects for weekend monitoring support only the SNMP GET and GETMANY operations.

Cable Modem Interaction with the Subscriber Traffic Management Feature

The Subscriber Traffic Management feature ensures that users cannot bypass the QoS restrictions by rebooting their cable modems or performing other configuration changes. The service provider, however, continues to be able to change the modems' profiles and other configuration parameters as desired.

When the Subscriber Traffic Management feature is enabled, the following behavior is in effect:

- The primary service flow counters for downstream and upstream traffic are preserved when the cable modem reboots. The service provider, however, can reset the counters by changing the QoS profile for the cable modem using the **cable modem qos profile** command and resetting the cable modem.
- Secondary service flow counters are reset whenever the cable modem reboots. This happens regardless of the enforce-rule configuration.
- The cable modem retains its current primary downstream and upstream service flows when it reboots. If the cable modem is in an enforced QoS profile penalty period when it reboots, it continues using the enforced QoS profile after the reboot. Service providers can manually change the profile by assigning a new QoS profile using the **cable modem qos profile** command.



Note Changing the QoS profile for a cable modem using the **cable modem qos profile** command, also changes the enforce-rule for the cable modem when it reboots. When the cable modem comes back online, it begins operating under the enforce-rule whose registered QoS profile (see the **qos-profile registered** command) matches the new QoS profile the modem is using.

- Service providers can also change the enforce-rule configuration. The following happens when the provider changes the enforce-rule configuration:
 - If the enforce-rule is disabled (using the **no enabled** command), all cable modems using that rule's registered QoS profile are no longer managed by the Subscriber Traffic Management feature. Configuring **no enabled**, deactivates the enforce-rule and moves all the modems in penalty to its registered QoS.
 - If the registered QoS profile for the rule is changed (using the **qos-profile registered** command), the cable modems that are using the previous registered QoS profile are no longer managed by the Subscriber Traffic Management feature. Instead, any cable modems that use the new registered QoS profile begin being managed by this rule.
 - If the enforced QoS profile for the rule is changed (using the **qos-profile enforced** command), any cable modems using this rule that are currently in the penalty period continue using the previously configured enforced QoS profile. Any cable modems that enter the penalty period after this configuration change, however, use the new enforced QoS profile.
- Service providers also have the option of making an enforce-rule nonpersistent, so that the enforced QoS profile does not remain in force when a cable modem reboots. Instead, when the cable modem reboots and reregisters with the Cisco CMTS, the CMTS assigns it the QoS profile that is specified in its DOCSIS configuration file.

How to Configure the Subscriber Traffic Management Feature on the Cisco CMTS Routers

This section describes the following required and optional procedures:

- [Creating and Configuring an Enforce-Rule, page 10](#) (required)
- [Configuring Weekend Monitoring, page 18](#) (optional)
- [Disabling an Enforce-Rule, page 25](#) (optional)
- [Removing an Enforce-Rule, page 25](#) (optional)
- [Changing a Cable Modem Service Class, page 26](#) (optional)

Creating and Configuring an Enforce-Rule

Every service class name that needs to be monitored will be linked with an enforce-rule. An enforce-rule defines the monitoring duration, the sample rate, the penalty period, and the registered service class name that the enforce-rule is linked to and the enforced service class name.

Use the procedure given below to create and configure an enforce-rule. An enforce-rule does not become active until the **enabled** command is given.

Prerequisites

- The registered and enforced service (QoS) profiles must be created on the CMTS before creating an enforce-rule that uses those profiles. If you want to manage a cable modem that currently uses a modem-created QoS profile, you must first manually create a new QoS profile on the CMTS with the same QoS parameters as the modem-created profile. Then allow the modem to come online using the manually created profile before beginning this procedure.
 - To display quality of service (QoS) profiles for a Cisco CMTS, use the **show cable qos profile** command in privileged EXEC mode.
 - To configure a QoS profile, use the **cable qos profile** command in global configuration mode. To set a particular value to its default, or to delete the profile when no specific parameters have been set, use the **no** form of this command.

For additional information about these commands, refer to the *Cisco IOS CMTS Cable Command Reference* on Cisco.com:

http://www.cisco.com/en/US/docs/ios/cable/command/reference/cbl_book.html

- For monitoring of DOCSIS 1.1 cable modems:
 - Only DOCSIS 1.1 modems that register with a service class name are monitored.
 - To ensure that the DOCSIS 1.1 service flow counters remain across a reboot of the CM, configure the **cable primary-sflow-qos11 keep all** global configuration command.
- Only primary upstream and downstream service flows are supported.

Restrictions


- When configuring peak-offpeak monitoring, you can define a maximum of two peak durations within a day, and also monitoring of the remaining hours, if you configure the offpeak duration. The monitoring duration and threshold for first peak, second peak, and offpeak, can be different. However, the monitoring duration for any peak or offpeak configuration cannot be more than a day.
- The parameters defined by the named service class should always be a compatible subset of the registered set of parameters for the CM. Only certain options can be changed using a CMTS router service class, such as the **max-rate**, **priority**, or **tos-overwrite** options. The **max-burst** option in both the enforced and registered CMTS router service classes must strictly match the value for **max-burst** in the registered DOCSIS configuration file. If the service class value does not match, either the cable modem registration will fail with a reject-c state, or the enforced class will fail.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **cable qos enforce-rule** *name*
4. **monitoring-basics** {**legacy** | **peak-offpeak**} {**docsis10** | **docsis11**}
5. **qos-profile registered** *profile-id*
6. **qos-profile enforced** *profile-id* [**no-persistence**]
7. **service-class** {**enforced** | **registered**} *name*
8. **duration** *minutes* **avg-rate** *rate* **sample-interval** *minutes* [**penalty** *minutes*] {**downstream** | **upstream**} [**enforce**]
9. **peak-time1** {*hour* | *hour:minutes*} **duration** *minutes* **avg-rate** *rate* [**peak-time2** {*hour* | *hour:minutes*} **duration** *minutes* **avg-rate** *rate*] [**duration** *offpeak-minutes* **avg-rate** *offpeak-rate*] **sample-interval** *minutes* [**penalty** *minutes*] {**downstream** | **upstream**} [**enforce**]
10. **penalty-period** *minutes* [**time-of-day** {*hour* | *hour:minutes*}] [**monitoring-on**]
11. **enabled**
12. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. Enter your password if prompted.
Step 2	configure terminal Example: Router# configure terminal	Enters the global configuration mode.

Command or Action	Purpose
<p>Step 3</p> <p><code>cable qos enforce-rule name</code></p> <p>Example: Router(config)# cable qos enforce-rule test</p>	<p>Creates an enforce-rule with the specified <i>name</i> and enters the enforce-rule configuration mode. The <i>name</i> parameter can be any arbitrary and unique string that is from 1 to 15 characters in length.</p> <p> Note Each enforce-rule can be created by giving it a name.</p>
<p>Step 4</p> <p><code>monitoring-basics {legacy peak-offpeak} {docsis10 docsis11}</code></p> <p>Example: Router(enforce-rule)# monitoring-basics peak-offpeak docsis11</p>	<p>Defines the kind of monitoring desired and the type of modems to be monitored, where:</p> <ul style="list-style-type: none"> • legacy—Provides only one threshold and one monitoring duration. • peak-offpeak—Allows the selection of two peak durations within a day. • docsis10—Specifies application of the enforce-rule to DOCSIS 1.0 cable modems. • docsis11—Specifies application of the enforce-rule to DOCSIS 1.1 cable modems. <p>The default is legacy and DOCSIS 1.0.</p>
<p>Step 5</p> <p><code>qos-profile registered profile-id</code></p> <p>Example: Router(enforce-rule)# qos-profile registered 1</p>	<p>Specifies the registered quality of service (QoS) profile that should be used for this enforce-rule, where <i>profile-id</i> is a number from 0 to 16383.</p> <p>Note If you want to manage a cable modem that currently uses a modem-created QoS profile, you must first manually create a new QoS profile on the CMTS with the same QoS parameters as the modem-created profile. Then allow the modem to come online using the manually created profile before using this command.</p>
<p>Step 6</p> <p><code>qos-profile enforced profile-id [no-persistence]</code></p> <p>Example: Router(enforce-rule)# qos-profile enforced 4</p>	<p>Specifies the quality of service (QoS) profile that should be enforced when users violate their registered QoS profiles, where:</p> <ul style="list-style-type: none"> • <i>profile-id</i>—Number from 0 to 16383. • no-persistence—(Optional) Configures the rule so that the enforced QoS profile does not remain in effect when a cable modem reboots.

Command or Action	Purpose
<p>Step 7</p> <pre>service-class {enforced registered} name</pre> <p>Example: Router(enforce-rule)# service-class enforced test</p>	<p>Identifies a particular service class with the specified <i>name</i> for cable modem monitoring in an enforce-rule, where:</p> <ul style="list-style-type: none"> • enforced—Specifies an enforced service class. • registered—Specifies the service class using which the cable modem registered. <p>Note This command is applicable only for DOCSIS 1.1 (or later) cable modems.</p>
<p>Step 8</p> <pre>duration minutes avg-rate rate sample-interval minutes [penalty minutes] {downstream upstream} [enforce]</pre> <p>Example: Router(enforce-rule)# duration 10 avg-rate 500 sample-interval 10 penalty 120 downstream enforce</p>	<p>Specifies the time period and sample rate used for monitoring subscribers when legacy monitoring is configured (Step 4) where:</p> <ul style="list-style-type: none"> • minutes—Specifies the size of the sliding window (in minutes) during which subscriber usage is monitored. The valid range is 10 to 44640, with a default of 360 (6 hours). • avg-rate rate—Specifies the average sampling rate in kilobits per second for the specified duration. The valid range is 1 to 400000 with no default. • sample-interval minutes—Specifies how often (in minutes) the CMTS router should sample a service flow to get an estimate of subscriber usage. The valid range is 1 to 30 minutes, with a default value of 15 minutes. • penalty—(Optional) Specifies the period (in minutes) during which a cable modem can be under penalty. This weekday penalty duration, if configured, takes precedence over the duration specified using the penalty-period command. The valid range is 1 to 10080. • downstream—Specifies monitoring of traffic in the downstream direction. • upstream—Specifies monitoring of traffic in the upstream direction. • enforce—(Optional) Specifies that the enforce-rule QoS profile should be applied automatically if a user violates their registered QoS profile.

Command or Action	Purpose
<p>Step 9</p> <pre> peak-time1 {hour hour:minutes} duration minutes avg-rate rate [peak-time2 {hour hour:minutes} duration minutes avg-rate rate] [duration <i>offpeak</i>-minutes avg-rate <i>offpeak</i>-rate] sample-interval minutes [penalty minutes] {downstream upstream} [enforce] Example: Router(enforce-rule)# peak-time1 6 duration 180 avg-rate 2 peak-time2 18 duration 180 avg-rate 2 duration 120 avg-rate 3 sample-interval 10 upstream enforce Router(enforce-rule)# peak-time1 6:30 duration 180 avg-rate 2 peak-time2 18:40 duration 180 avg-rate 2 duration 120 avg-rate 3 sample-interval 10 penalty 120 upstream enforce </pre>	<p>Specifies peak monitoring periods when peak-offpeak monitoring is configured (Step 4) where:</p> <ul style="list-style-type: none"> • peak-time1 {hour hour:minutes}—Specifies the time of day during which monitoring occurs for the first peak time. This value can be specified in hour (hh) or hour:minutes (hh:mm) format. The valid range for hour is 0 to 23 using a 24-hour clock. The valid range for minutes is 0 to 59. • duration <i>minutes</i>—Specifies the size of the sliding window during which the subscriber usage is monitored for the first peak time, and optionally for a second peak time when used with the peak-time2 keyword. Valid range is 60 to 1440 minutes. • avg-rate <i>rate</i>—Specifies the average sampling rate in kilobytes per second for the specified duration. The valid range is 1 to 400000 with no default. • peak-time2 {hour hour:minutes}—(Optional) Specifies the time of day during which monitoring occurs for a second peak time. This value can be specified in hour (hh) or hour:minutes (hh:mm) format. The valid range for hours is 0 to 23 using a 24-hour clock. The valid range for minutes is 0 to 59. • duration <i>offpeak</i>-minutes—(Optional) Specifies the size of the sliding window during which the subscriber usage is monitored for the remaining offpeak time (time not specified for peak monitoring). The valid range is 60 to 1440 minutes. • avg-rate <i>offpeak</i>-rate—(Optional) Specifies the average sampling rate in kilobytes per second for the specified offpeak duration. The valid range is 1 to 400000 with no default. • sample-interval <i>minutes</i>—Specifies how often (in minutes) the CMTS router should sample a service flow to get an estimate of subscriber usage. The valid range is 1 to 30 minutes, with a default value of 15 minutes. • penalty—(Optional) Specifies the period (in minutes) during which a CM can be under penalty. This weekday penalty duration, if configured, takes precedence over the duration specified using the penalty-period command. The valid range is 1 to 10080.

Command or Action	Purpose
<p>Step 10 <code>penalty-period minutes [time-of-day {hour hour:minutes}] [monitoring-on]</code></p> <p>Example: Router(enforce-rule)# penalty-period 10</p>	<ul style="list-style-type: none"> • downstream—Specifies monitoring of traffic in the downstream direction. • upstream—Specifies monitoring of traffic in the upstream direction. • enforce—(Optional) Specifies that the enforce-rule QoS profile should be applied automatically if a user violates the registered QoS profile. <p>(Optional) Specifies the period for which an enforced QoS profile should be in effect for subscribers who violate their registered QoS profiles, where:</p> <ul style="list-style-type: none"> • <i>minutes</i>—Number from 1 to 10080 minutes, with a default value of 10080 minutes (7 days). • time-of-day {hour hour:minutes}—(Optional) Specifies the time of day when a penalized cable modem can be released from its enforced profile. The time can be specified in the hh (hours) or hh:mm (hours:minutes) format. The valid range for hours is 0 to 23 using a 24-hour clock. The valid range for minutes is 0 to 59. • monitoring-on—(Optional) Specifies that the monitoring should be turned on after the cable modem is released from the penalty, that is, after time-of-day. If this keyword is not specified, by default, monitoring is turned off after the release time.
<p>Step 11 <code>enabled</code></p> <p>Example: Router(enforce-rule)# enabled</p>	<p>(Optional) Activates the enforce-rule and begins subscriber traffic management.</p>
<p>Step 12 <code>end</code></p> <p>Example: Router(enforce-rule)# end</p>	<p>Exits enforce-rule configuration mode and returns to privileged EXEC mode.</p>

Examples

This section provides command-line interface (CLI) examples, including the help feature for some of the enforce-rule commands.

Legacy Monitoring Configuration Example

The following example shows a sample configuration of an enforce-rule for legacy monitoring:

```
Router(config)# cable qos enforce-rule test
Router(enforce-rule)# monitoring-basics ?
  legacy          Enable legacy (same average rate for all day)  monitoring
  peak-offpeak    Enable peak-offpeak monitoring
```

```

Router(enforce-rule)# monitoring-basics legacy ?
  docsis10  Enforce-rule will map to docsis 1.0 modems
  docsis11  Enforce-rule will map to docsis 1.1 modems

Router(enforce-rule)# monitoring-basics legacy docsis11
Router(enforce-rule)# service-class ?
  enforced   Enforced service class
  registered  Registered service class

Router(enforce-rule)# service-class registered ?
  WORD       Registered service class name

Router(enforce-rule)# service-class registered BEUS
Router(enforce-rule)# service-class enforced test

Router(enforce-rule)# duration ?
  <10-10080> Duration in minutes

Router(enforce-rule)# duration 10 ?
  avg-rate   Average rate for the duration in kbits/sec

Router(enforce-rule)# duration 10 avg-rate ?
  <1-4294967> average rate in kbits/sec

Router(enforce-rule)# duration 10 avg-rate 2 ?
  sample-interval Rate of sampling in Minutes

Router(enforce-rule)# duration 10 avg-rate 2 sample-interval ?
  <1-30>      Sampling rate in Minutes
Router(enforce-rule)# duration 10 avg-rate 2 sample-interval 10 ?
  downstream  downstream
  upstream    upstream
Router(enforce-rule)# duration 10 avg-rate 2 sample-interval 10 upstream ?
  enforce     enforce the qos-profile automatically
  <cr>

Router(enforce-rule)# duration 10 avg-rate 2 sample-interval 10 upstream enf
Router(enforce-rule)# $ avg-rate 2 sample-interval 10 upstream enforce
Router(enforce-rule)# enabled
Router(enforce-rule)# end

```

Peak-offpeak Monitoring Configuration Example

The following example shows a sample configuration of an enforce-rule for peak-offpeak monitoring:

```

Router(config)# cable qos enforce-rule test
Router(enforce-rule)# monitoring-basics peak-offpeak
Router(enforce-rule)# monitoring-basics peak-offpeak docsis10
Router(enforce-rule)# qos-profile ?
  enforced   Enforced qos profile
  registered  QoS profile index

Router(enforce-rule)# qos-profile registered ?
  <1-255>    Registered QoS profile index

Router(enforce-rule)# qos-profile registered 5
Router(enforce-rule)# qos-profile enforced 4
Router(enforce-rule)# peak-time1 6 ?
  duration   First peak duration

Router(enforce-rule)# peak-time1 6 duration ?
  <60-1440>  Duration in minutes

```

```

Router(enforce-rule)# peak-time1 6 duration 180 ?
    avg-rate  First peak average rate in kbits/sec

Router(enforce-rule)# peak-time1 6 duration 180 avg-rate ?
    <1-4294967>  Average rate in kbits/sec

Router(enforce-rule)# peak-time1 6 duration 180 avg-rate 2 ?
    duration          Off-peak duration
    peak-time2        Second peak time
    sample-interval   Rate of sampling in minutes

Router(enforce-rule)# peak-time1 6 duration 180 avg-rate 2 peak-time2 ?
    <10-1440>  Start of second peak time

Router(enforce-rule)# peak-time1 6 duration 180 avg-rate 2 peak-time2 18 ?
    duration  Second peak duration

Router(enforce-rule)# $6 duration 180 avg-rate 2 peak-time2 18 duration ?
    <10-1440>  Duration in minutes

Router(enforce-rule)# $6 duration 180 avg-rate 2 peak-time2 18 duration 240 ?
    avg-rate  Second peak average rate in kbits/sec

Router(enforce-rule)# $ 180 avg-rate 2 peak-time2 18 duration 240 avg-rate ?
    <1-4294967>  Average rate in kbits/sec

Router(enforce-rule)# $ 180 avg-rate 2 peak-time2 18 duration 240 avg-rate 3 ?
    duration          Off-peak duration
    sample-interval   Rate of sampling in minutes

Router(enforce-rule)# $ 180 avg-rate 2 peak-time2 18 duration 240 avg-rate 3 d
Router(enforce-rule)# -$-time2 18 duration 240 avg-rate 3 duration 120 ?
    avg-rate  Off-peak average rate in kbits/sec

Router(enforce-rule)# -$duration 240 avg-rate 3 duration 120 avg-rate 1 ?
    sample-interval  Rate of sampling in minutes

Router(enforce-rule)# -$40 avg-rate 3 duration 120 avg-rate 1 sample-interval ?
    <1-30>  Sampling rate in Minutes

Router(enforce-rule)# -$e 3 duration 120 avg-rate 1 sample-interval 10 ?
    downstream  downstream
    upstream    upstream

Router(enforce-rule)# -$e 3 duration 120 avg-rate 1 sample-interval 10 upstream ?
    enforce  enforce the qos-profile automatically
    <cr>

Router(enforce-rule)# -$on 120 avg-rate 1 sample-interval 10 upstream enforce
Router(enforce-rule)# enabled
Router(enforce-rule)# end

```

CLI Help for peak-time Command Example

The following example shows output from the CLI help for the **peak-time** command:

```

Router(enforce-rule)# peak-time ?
    <0-23>  Start of first peak time, use 24 hour clock

Router(enforce-rule)# peak-time 1 ?
    duration  First peak duration

```

```

Router(enforce-rule)# peak-time 1 d ?
    <60-1440> Duration in minutes

Router(enforce-rule)# peak-time 1 d 65 ?
    First peak average rate in kbits/sec

Router(enforce-rule)# peak-time 1 d 65 a ?
    <1-400000> Average rate in kbits/sec

Router(enforce-rule)# peak-time 1 d 65 a 1000 ?
    duration          Off-peak duration
    peak-time2        Second peak time
    sample-interval   Rate of sampling in minutes

Router(enforce-rule)# peak-time 1 d 65 a 1000 d ?
    <60-1440> Duration in minutes

Router(enforce-rule)# peak-time 1 d 65 a 1000 d 65 ?
    avg-rate Off-peak average rate in kbits/sec

Router(enforce-rule)# peak-time 1 d 65 a 1000 d 65 a ?
    <1-400000> Average rate in kbits/sec

Router(enforce-rule)# peak-time 1 d 65 a 1000 d 65 a 1000 ?
    sample-interval Rate of sampling in minutes

Router(enforce-rule)# peak-time 1 d 65 a 1000 d 65 a 1000 s ?
    <1-30> Sampling rate in Minutes

Router(enforce-rule)# peak-time 1 d 65 a 1000 d 65 a 1000 s 5 ?
    downstream downstream
    upstream upstream

Router(enforce-rule)# peak-time 1 d 65 a 1000 d 65 a 1000 s 5 d ?
    enforce enforce the qos-profile automatically
    <cr>

Router(enforce-rule)# peak-time 1 d 65 a 1000 d 65 a 1000 s 5 d

```

Configuring Weekend Monitoring

This section describes the tasks required to configure weekend monitoring for STM on a Cisco CMTS router.

Prerequisites

You must first configure the weekday monitoring parameters for an enforce-rule before configuring weekend monitoring. See the [“Creating and Configuring an Enforce-Rule”](#) section on page 10.

Restrictions

- Up to 40 total enforce-rules across both upstream and downstream configurations are supported.
- When using SNMP for weekend monitoring, only SNMP GET and GETMANY operations are supported.

Configuring Different Legacy Monitoring Conditions for Weekends

Use the following procedure if you want to establish different legacy monitoring conditions for subscribers for either upstream or downstream traffic on weekend days.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **cable qos enforce-rule** *name*
4. **weekend duration** *minutes* **avg-rate** *rate* **sample-interval** *minutes* [**penalty** *minutes*] **{ downstream | upstream }** [**enforce**]
5. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. Enter your password if prompted.
Step 2	configure terminal Example: Router# configure terminal	Enters global configuration mode.
Step 3	cable qos enforce-rule <i>name</i> Example: Router(config)# cable qos enforce-rule test	Accesses the enforce-rule with the specified <i>name</i> and enters enforce-rule configuration mode.

Command or Action	Purpose
<p>Step 4</p> <pre>weekend duration minutes avg-rate rate sample-interval minutes {downstream upstream} [penalty minutes] [enforce]</pre> <p>Example:</p> <pre>Router(enforce-rule)# weekend duration 15 avg-rate 500 sample-interval 10 penalty 120 downstream enforce</pre>	<p>Specifies the time period and sample rate used for monitoring subscribers on weekends, where:</p> <ul style="list-style-type: none"> • <i>minutes</i>—Specifies the size of the sliding window (in minutes) during which subscriber usage is monitored. The valid range is 10 to 44640, with a default of 360 (6 hours). • avg-rate rate—Specifies the average sampling rate in kilobits per second for the specified duration. The valid range is 1 to 400000 with no default. • sample-interval minutes—Specifies how often (in minutes) the CMTS router should sample a service flow to get an estimate of subscriber usage. The valid range is 1 to 30, with a default value of 15. • penalty—(Optional) Specifies the period (in minutes) during which a CM can be under penalty. This weekend penalty duration, if configured, takes precedence over the duration specified using the penalty-period command. The valid range is 1 to 10080. • downstream—Specifies monitoring of traffic in the downstream direction. • upstream—Specifies monitoring of traffic in the upstream direction. • enforce—(Optional) Specifies that the enforce-rule QoS profile should be applied automatically if a user violates their registered QoS profile.
<p>Step 5</p> <pre>end</pre> <p>Example:</p> <pre>Router(enforce-rule)# end</pre>	<p>Exits enforce-rule configuration mode and returns to privileged EXEC mode.</p>

Configuring Different Peak-Offpeak Monitoring Conditions for Weekends

Use the following procedure if you want to establish different peak and offpeak monitoring conditions for subscribers for either upstream or downstream traffic on weekend days.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **cable qos enforce-rule name**
4. **weekend peak-time1 {hour | hour:minutes} duration minutes avg-rate rate [peak-time2 {hour | hour:minutes} duration minutes avg-rate rate][duration offpeak-minutes avg-rate offpeak-rate] sample-interval minutes [penalty minutes] {downstream | upstream} [enforce]**
5. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. Enter your password if prompted.
Step 2	configure terminal Example: Router# configure terminal	Enters global configuration mode.
Step 3	cable qos enforce-rule <i>name</i> Example: Router(config)# cable qos enforce-rule test	Accesses the enforce-rule with the specified <i>name</i> and enters enforce-rule configuration mode.

Command or Action	Purpose
<p>Step 4</p> <pre>weekend peak-time1 {hour hour:minutes} duration minutes avg-rate rate [peak-time2 hour duration minutes avg-rate rate] [duration offpeak-minutes avg-rate offpeak-rate] sample-interval minutes [penalty minutes] {downstream upstream}[enforce]</pre> <p>Example:</p> <pre>Router(enforce-rule)# weekend peak-time1 9 duration 180 avg-rate 2 peak-time2 16 duration 180 avg-rate 2 duration 120 avg-rate 3 sample-interval 10 upstream enforce</pre> <pre>Router(enforce-rule)# weekend peak-time1 9:30 duration 180 avg-rate 2 peak-time2 16:58 duration 180 avg-rate 2 duration 120 avg-rate 3 sample-interval 10 penalty 120 upstream enforce</pre>	<p>Specifies peak and offpeak monitoring times on weekends, where:</p> <ul style="list-style-type: none"> • peak-time1 {<i>hour</i> <i>hour:minutes</i>}—Specifies the time of day during which monitoring occurs for the first peak time. This value can be specified in hour (hh) or hour:minutes (hh:mm) format. The valid range for hours is 0 to 23 using a 24-hour clock. The valid range for minutes is 0 to 59. • duration <i>minutes</i>—Specifies the size of the sliding window during which subscriber usage is monitored for the first peak time, and optionally for a second peak time when used with the peak-time2 keyword. The valid range is 60 to 1440 minutes. • avg-rate <i>rate</i>—Specifies the average sampling rate in kilobytes per second for the specified duration. The valid range is 1 to 400000 with no default. • peak-time2 {<i>hour</i> <i>hour:minutes</i>}—(Optional) Specifies the time of day during which monitoring occurs for a second peak time. This value can be specified in hour (hh) or hour:minutes (hh:mm) format. The valid range for hour is 0 to 23 using a 24-hour clock. The valid range for minutes is 0 to 59. • duration <i>offpeak-minutes</i>—(Optional) Specifies the size of the sliding window during which the subscriber usage is monitored for the remaining offpeak time (time not specified for peak monitoring). The valid range is 60 to 1440 minutes. • avg-rate <i>offpeak-rate</i>—(Optional) Specifies the average sampling rate in kb/sec for the specified offpeak duration. The valid range is 1 to 400000 with no default. • sample-interval <i>minutes</i>—Specifies how often (in minutes) the CMTS router should sample a service flow to get an estimate of subscriber usage. The valid range is 1 to 30 minutes, with a default value of 15 minutes. • penalty—(Optional) Specifies the period (in minutes) during which a CM can be under penalty. This weekend penalty duration, if configured, takes precedence over the duration specified using the penalty-period command. The valid range is 1 to 10080. • downstream—Specifies monitoring of traffic in the downstream direction. • upstream—Specifies monitoring of traffic in the upstream direction.

Command or Action	Purpose
Step 5 end Example: Router(enforce-rule)# end	<ul style="list-style-type: none"> enforce—(Optional) Specifies that the enforce-rule QoS profile should be applied automatically if a users violate their registered QoS profile. Exits enforce-rule configuration mode and returns to privileged EXEC mode.

Disabling Weekend Monitoring

Use the following procedure to turn off the weekend monitoring configuration and monitor on weekdays only.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **cable qos enforce-rule** *name*
4. **weekend off**
5. **end**

DETAILED STEPS

Command or Action	Purpose
Step 1 enable Example: Router> enable	Enables privileged EXEC mode. Enter your password if prompted.
Step 2 configure terminal Example: Router# configure terminal	Enters global configuration mode.
Step 3 cable qos enforce-rule <i>name</i> Example: Router(config)# cable qos enforce-rule test	Accesses the enforce-rule with the specified <i>name</i> and enters enforce-rule configuration mode.
Step 4 weekend off Example: Router(enforce-rule)# weekend off	Disables monitoring on weekends.

	Command or Action	Purpose
Step 5	end Example: Router(enforce-rule)# end	Exits enforce-rule configuration mode and returns to privileged EXEC mode.

Removing Weekend Monitoring Conditions and Use the Same Monitoring Criteria Every Day

Use the following procedure to remove the specified weekend monitoring conditions and use the same monitoring criteria all week (including weekends).

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **cable qos enforce-rule** *name*
4. **no weekend**
5. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. Enter your password if prompted.
Step 2	configure terminal Example: Router# configure terminal	Enters global configuration mode.
Step 3	cable qos enforce-rule <i>name</i> Example: Router(config)# cable qos enforce-rule test	Accesses the enforce-rule with the specified <i>name</i> and enters enforce-rule configuration mode.
Step 4	no weekend Example: Router(enforce-rule)# no weekend	Performs monitoring on the weekends using the same parameters for weekdays and weekends.
Step 5	end Example: Router(enforce-rule)# end	Exits enforce-rule configuration mode and returns to privileged EXEC mode.

Disabling an Enforce-Rule

Use the following procedure to disable an enforce-rule. The enforce-rule remains in the CMTS configuration file, but any subscriber traffic management that uses this enforce-rule ends.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **cable qos enforce-rule *name***
4. **no enabled**
5. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. Enter your password if prompted.
Step 2	configure terminal Example: Router# configure terminal	Enters global configuration mode.
Step 3	cable qos enforce-rule <i>name</i> Example: Router(config)# cable qos enforce-rule test	Creates an enforce-rule with the specified <i>name</i> and enters enforce-rule configuration mode.
Step 4	no enabled Example: Router(enforce-rule)# no enabled	Disables the enforce-rule and ends subscriber traffic management for users with the rule's registered QoS profile. It moves all modems in penalty to its registered QoS.
Step 5	end Example: Router(enforce-rule)# end	Exits enforce-rule configuration mode and returns to privileged EXEC mode.

Removing an Enforce-Rule

Use the following procedure to delete an enforce-rule and remove it from the CMTS configuration file. Any subscriber traffic management that uses this rule also ends.

SUMMARY STEPS

1. **enable**

2. **configure terminal**
3. **no cable qos enforce-rule** *name*
4. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. Enter your password if prompted.
Step 2	configure terminal Example: Router# configure terminal	Enters global configuration mode.
Step 3	no cable qos enforce-rule <i>name</i> Example: Router(config)# no cable qos enforce-rule ef-rule	Deletes the enforce-rule with the specified <i>name</i> . This enforce-rule and its configuration are removed from the CMTS configuration, and any subscriber traffic management that uses this rule ends.
Step 4	end Example: Router(config)# end	Exits global configuration mode and returns to privileged EXEC mode.

Changing a Cable Modem Service Class

Use the following procedure to change a QoS service class for a particular DOCSIS 1.1 cable modem.

Restrictions

- The command is supported only on DOCSIS 1.1 CM primary service flows.
- You can specify the **cable modem service-class-name** command only after the CM has been online for at least 200 seconds.
- The parameters defined by the named service class should always be a compatible subset of the registered set of parameters for the CM. Only certain options can be changed using a CMTS router service class, such as the **max-rate**, **priority**, or **tos-overwrite** options. The **max-burst** option in both the enforced and registered CMTS router service classes must strictly match the value for **max-burst** in the registered DOCSIS configuration file. If the service class value does not match, then CM registration will fail with a reject-c state, or the enforced class will fail.

SUMMARY STEPS

1. **enable**
2. **cable modem** {*ip-address* | *mac-address*} **service-class-name** *name*

3. end

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. Enter your password if prompted.
Step 2	cable modem { <i>ip-address</i> <i>mac-address</i> } service-class-name <i>name</i> Example: Router(config)# cable modem aaaa.bbbb.cccc service-class-name test	Changes a QoS service class for a particular cable modem, where: <ul style="list-style-type: none"> • <i>ip-address</i>—Specifies the IP address of the CM to be assigned the named service class. • <i>mac-address</i>—Specifies the MAC address of the CM to be assigned the named service class. • <i>name</i>—Specifies the name of the QoS service class.
Step 3	end Example: Router(config)# end	Exits global configuration mode and returns to privileged EXEC mode.

Monitoring the Subscriber Traffic Management Feature on the Cisco CMTS Routers

This section describes the following tasks that can be used to monitor the Subscriber Traffic Management feature:

- [Displaying the Currently Defined Enforce-Rules, page 27](#)
- [Displaying the Current Subscriber Usage, page 29](#)

Displaying the Currently Defined Enforce-Rules

To display all enforce-rules that are currently defined on the Cisco CMTS router, or the definitions for a particular enforce-rule, use the **show cable qos enforce-rule** command in privileged EXEC mode.

For offpeak monitoring, use the **show cable qos enforce-rule** command to display the monitoring duration and average-rate values applicable for that time of day. If no monitoring is taking place, 0 is displayed.

The following example shows sample output from the **show cable qos enforce-rule** command for all configured enforce-rules:

```
Router# show cable qos enforce-rule
```

Name	Dur (min)	Dir	byte-cnt (kbytes)	Auto enf	rate (min)	penalty (min)	Reg QoS	Enf QoS	Ena	Persist
residential	10	us	5	act	1	10080	5	10	Yes	Yes
ef-q11d	30	ds	150	act	1	20	11	99	Yes	Yes

ef-q11u	30	us	60	act	1	20	11	99	Yes	Yes
ef-q21	720	us	60	act	1	10	21	81	Yes	Yes
ef-q21d	300	ds	150	act	1	10	21	81	Yes	Yes
ef-q22	720	us	60	act	1	10	22	82	Yes	Yes
ef-q22d	300	ds	150	act	1	10	22	82	Yes	No
ef-q23	720	us	60	act	1	10	23	83	Yes	Yes
ef-q23d	300	ds	150	act	1	10	23	83	Yes	Yes
ef-q24	720	us	60	act	1	10	24	84	Yes	Yes
ef-q24d	300	ds	150	act	1	10	24	84	Yes	Yes
ef-q25	720	us	60	act	1	10	25	85	Yes	Yes
ef-q25d	300	ds	150	act	1	10	25	85	Yes	Yes
ef-q26	720	us	60	act	1	10	26	86	Yes	Yes
ef-q26d	300	ds	150	act	1	10	26	86	Yes	Yes
ef-q27	720	us	60	act	1	10	27	87	Yes	Yes
ef-q27d	300	ds	150	act	1	10	27	87	Yes	Yes
ef-q28	720	us	60	act	1	10	28	88	Yes	Yes
ef-q28d	300	ds	150	act	1	10	28	88	Yes	No
ef-q5d	300	ds	150	act	1	10	5	99	Yes	Yes
ef-q5u	720	us	600	act	1	10	5	99	Yes	Yes

The following example shows sample output from the **show cable qos enforce-rule** command for a particular enforce-rule named “test”:

```
Router# show cable qos enforce-rule test
      Name          Type Dur  Dir Avg-rate Auto rate  Reg      Enf      En Per
      (min)         (min)  kbits/s  enf (min)
test          p-off 120  us 1      act 10    255      4        Y  Y
```

The following example shows the sample output from the **show cable qos enforce-rule verbose** command for an enforce-rule named “test”:

```
Router# show cable qos enforce-rule test verbose
Name                : test
Version             : docsis11
Monitoring Type     : peak-offpeak
Registered          : REG-DS
Enforced            : ENF-DS
Monitoring Duration : 70 (in minutes)
Sample-rate         : 10 (in minutes)
Average-rate        : 3 kbits/sec
Direction           : downstream
Auto Enforce       : Yes
Current Penalty Duration : 10 (in minutes)
Default Penalty Duration : 10 (in minutes)
Penalty End-time    : 23:0 (time of day)
Rule Enabled        : Yes
Persistence         : Yes
Weekend             : No
Penalty Off         : No
Monitor Weekend     : Yes
Monitoring after RelTime : Off

First Peak Time     : 10:0
Duration            : 60 (in minutes)
First Average-rate  : 1 kbits/sec
Second Peak Time    : 19:0
Duration            : 65 (in minutes)
Second Average-rate : 2 kbits/sec
Offpeak Duration    : 70 (in minutes)
Offpeak Average-rate : 3 kbits/sec
Auto Enforce        : Yes
Sample Rate         : 10
Penalty-Period for week-days : 0
```

```

Weekend First Peak Time      : 11:0
Weekend Duration            : 75 (in minutes)
Weekend First Average-rate  : 4 kbits/sec
Weekend Second Peak Time    : 20:0
Weekend Duration            : 80 (in minutes)
Weekend Second Average-rate : 5 kbits/sec
Weekend Offpeak Duration    : 85 (in minutes)
Weekend Offpeak Average-rate : 6 kbits/sec
Weekend Auto Enforce       : Yes
Weekend Sample Rate        : 12
Penalty-Period for week-ends : 0
router#sh clock
*17:30:50.259 UTC Mon Apr 19 2010

```

The following example shows sample output from the **show cable qos enforce-rule verbose** command for a particular enforce-rule named “test” that has specified peak-offpeak weekend monitoring options:

```

Router# show cable qos enforce-rule test verbose
Name : test
Version : docsis10
Monitoring Type : peak-offpeak
Registered : 255
Enforced : 4
Monitoring Duration : 120 (in minutes)
Sample-rate : 10 (in minutes)
Average-rate : 1 kbits/sec
Direction : upstream
Penalty Time : 10080 (in minutes)
Penalty End-time : 23 (time of day in hrs)
Rule Enabled : Yes
Persistence : Yes
Week-end : Yes
First Peak Time : 6
Duration : 180 (in minutes)
First Average-rate : 2 kbits/sec
Second Peak Time : 18
Duration : 240 (in minutes)
Second Average-rate : 3 kbits/sec
Offpeak Duration : 120 (in minutes)
Offpeak Average-rate : 1 kbits/sec
Auto-enforce : active
Weekend First Peak Time : 8
Weekend First Duration : 120 (in minutes)
Weekend First Average-rate : 2 kbits/sec
Weekend Second Peak Time : 18
Weekend Second Duration : 180 (in minutes)
Weekend Second Average-rate : 5 kbits/sec
Weekend Offpeak Duration : 240 (in minutes)
Weekend Offpeak Average-rate : 4 kbits/sec
Weekend Auto-enforce : active

```

Displaying the Current Subscriber Usage

To display the usage for all subscribers on a cable interface, use the **show cable subscriber-usage** command in privileged EXEC mode without any options.

To display the usage for just those subscribers who are violating their registered quality of service (QoS) profiles, use the **show cable subscriber-usage over-consume** form of the command.

The following example shows sample output from the **show cable subscriber-usage** command for all users on the specified cable interface:

```
Router# show cable subscriber-usage cable 6/1/0
```

Sfid	Mac Address	Enforce-rule Name	Total-Kbyte Count	Last-detect time	Last-penalty time	Pen Flag
3	0007.0e03.110d	efrule-q5	121944817	Jan1 03:44:08	Jan1 03:54:08	Act
4	0007.0e03.110d	efrule-q5d	1879076068	Jan1 03:35:05	Jan1 03:45:06	Act
5	0007.0e03.1431	efrule-q5	120052387	Jan1 03:44:18	Jan1 03:54:18	Act
6	0007.0e03.1431	efrule-q5d	1838493626	Jan1 03:34:55	Jan1 03:44:55	Act
7	0007.0e03.1445	efrule-q5	120919427	Jan1 03:44:08	Jan1 03:54:08	Act
8	0007.0e03.1445	efrule-q5d	1865955172	Jan1 03:35:06	Jan1 03:45:06	Act
9	0007.0e03.1225	efrule-q5	120200155	Jan1 03:44:18	Jan1 03:54:18	Act
10	0007.0e03.1225	efrule-q5d	1839681070	Jan1 03:34:55	Jan1 03:44:55	-
11	0007.0e03.0cb1	efrule-q5	122941643	Jan1 03:43:58	Jan1 03:53:58	Act
12	0007.0e03.0cb1	efrule-q5d	1889107176	Jan1 03:35:06	Jan1 03:45:06	Act
13	0007.0e03.1435	efrule-q5	119504795	Jan1 03:44:18	Jan1 03:54:18	Act
14	0007.0e03.1435	efrule-q5d	1835164034	Jan1 03:34:55	Jan1 03:44:55	-

By default, the display is sorted by the service flow ID (SFID). To sort the display by the subscriber byte count, with the largest byte counts listed first, use the **sort-byte-count** option. The following example shows sample output for **show cable subscriber-usage sort-byte-count** form of the command:


Note

The **sort-byte-count** option was replaced by the **sort-avg-rate** option.

```
Router# show cable subscriber-usage sort-byte-count
```

Sfid	Mac Address	Enforce-rule Name	Total-Kbyte Count	Last-detect time	Last-penalty time	Pen Flag
7	0007.0e03.2cad	test1	65157114	Feb24 11:36:34	Mar3 11:36:34	Act
9	0007.0e03.2c45	test1	16381014			-
5	0007.0e03.2c25	test1	13440960			-

Configuration Examples for Subscriber Traffic Management on the Cisco CMTS Routers

This section lists sample configurations for the Subscriber Traffic Management feature on a CMTS router:

- [DOCSIS Configuration File and STM Service Classes: Example, page 30](#)
- [Downstream Configuration: Example, page 32](#)
- [Upstream Configuration: Example, page 32](#)
- [Downstream and Upstream Configuration: Example, page 32](#)
- [Weekend Monitoring Configuration: Example, page 33](#)

DOCSIS Configuration File and STM Service Classes: Example

The following example shows a sample DOCSIS configuration file along with sample registered and enforced QoS service classes that you could define on a Cisco CMTS router to perform subscriber traffic management.

DOCSIS Configuration File Options

This is an example of a very basic set of options that you can configure for a cable modem in your DOCSIS configuration file that supports a successful configuration of new QoS service class options on the Cisco CMTS router.



Note

There are certain QoS parameters that cannot be changed from the registered QoS parameter set and a new service class. For example, the **max-burst** value must match the originally registered in the DOCSIS configuration file, and the registered and enforced QoS service classes on the Cisco CMTS router. If the **max-burst** value differs from the registered CMTS service class and the DOCSIS configuration file, the CM might go into reject-c state, or the enforced class could fail.

The following example shows the configuration of two service classes named “BE-STM-US-1” and “BE-STM-DS-1” in a DOCSIS configuration file to define a basic set of upstream and downstream parameters:

```
03 (Net Access Control) = Yes
17 (Baseline Privacy Block)
S01 (Authorize Wait Timeout) = 10
18 (Maximum Number of CPE) = 10
24 (Upstream Service Flow Block)
S01 (Flow Reference) = 1
S04 (Service Class Name) = BE-STM-US-1
S06 (QoS Parameter Set Type) = 7
25 (Downstream Service Flow Block)
S01 (Flow Reference) = 2
S04 (Service Class Name) = BE-STM-DS-1
S06 (QoS Parameter Set Type) = 7
29 (Privacy Enable) = Yes
```

The following example shows sample **cable service class** commands on the Cisco CMTS router for configuration of subscriber traffic management that correspond to the service class names in the DOCSIS configuration file of “BE-STM-US-1” and “BE-STM-DS-1.” These service classes correspond to the registered service classes configured by the **service-class registered** command for the QoS enforce-rules shown later in this example:

```
cable service class 2 name BE-STM-US-1
cable service class 2 upstream
cable service class 2 max-rate 2000000
cable service class 2 max-burst 3044
cable service class 3 name BE-STM-DS-1
cable service class 3 downstream
cable service class 3 max-rate 30000000
```

The following example shows sample **cable service class** commands on the Cisco CMTS router that configure new QoS parameters for identified subscribers to limit bandwidth using the **max-rate** parameter. These service classes correspond to the enforced service classes configured by the **service-class enforced** command for the QoS enforce rules shown later in this example:

```
cable service class 102 name BEUS-1
cable service class 102 upstream
cable service class 102 max-rate 48888
cable service class 102 max-burst 3044
cable service class 103 name BEDS-1
cable service class 103 downstream
cable service class 103 max-rate 988888
```

The following example shows configuration of the corresponding enforce-rules for upstream and downstream monitoring, which identifies the registered and enforced service classes:

```
cable qos enforce-rule US-1
  monitoring-basics legacy docsis11
  penalty-period 10
  service-class registered BE-STM-US-1
  service-class enforced BEUS-1
  duration 10 avg-rate 1 sample-interval 10 up enf
  enabled
!
cable qos enforce-rule DS-1
  monitoring-basics legacy docsis11
  penalty-period 10
  service-class registered BE-STM-DS-1
  service-class enforced BEDS-1
  duration 10 avg-rate 1 sample-interval 10 do enf
  enabled
```

Downstream Configuration: Example

The following example shows a typical enforce-rule configuration for traffic in the downstream direction:

```
!
cable qos enforce-rule downstream-rule
  monitoring-basics legacy docsis11
  penalty-period 10
  service-class registered 5
  service-class enforced 99
  duration 30 avg-rate 1 sample-interval 10 downstream enforce
  enabled
```

Upstream Configuration: Example

The following example shows a typical enforce-rule configuration for traffic in the upstream direction:

```
!
cable qos enforce-rule upstream-rule
  monitoring-basics legacy docsis11
  penalty-period 10
  service-class registered 5
  service-class enforced 99
  duration 30 avg-rate 1 sample-interval 10 upstream enforce
  enabled
```

Downstream and Upstream Configuration: Example

The following example shows a typical enforce-rule configuration for traffic in both the downstream and upstream directions. Two separate rules are created, using the identical configuration, except for the keywords **upstream** and **downstream** in the **duration** command.



Note

The enforce rules for the upstream and downstream directions can use either an identical configuration, or they can use their own individual configurations.

```

!
cable qos enforce-rule upstream-rule
  monitoring-basics legacy docsis11
  penalty-period 10
  service-class registered 5
  service-class enforced 99
  duration 30 avg-rate 5 sample-interval 10 upstream enforce
  enabled
cable qos enforce-rule downstream-rule
  monitoring-basics legacy docsis11
  penalty-period 10
  service-class registered 5
  service-class enforced 99
  duration 30 avg-rate 5 sample-interval 10 downstream enforce
  enabled

```

The following example shows an enforce-rule configuration for traffic in upstream direction. A unique penalty duration is configured for upstream, with monitoring turned on after the penalty release time.


Note

For upstream direction, a unique penalty duration (120 minutes) is configured, which takes precedence over the duration configured using the **penalty-period** command (60 minutes). A fresh monitoring starts after the penalty release time (23:00), when all the traffic counters are reset to 0.

```

!
cable qos enforce-rule upstream_rule
  monitoring-basics peak-offpeak docsis10
  penalty-period 60 time-of-day 23:00 monitoring-on
  qos-profile registered 6
  qos-profile enforced 100
  peak-time1 10:30 duration 120 avg-rate 10 peak-time2 22:10 duration 60 avg-rate 10
  sample-interval 10 penalty 120 upstream enforce
  enabled

```

Weekend Monitoring Configuration: Example

The following example shows a sample configuration of peak-offpeak weekend monitoring for DOCSIS 1.0 cable modems:

```

cable qos enforce-rule monitoring
  monitoring-basics peak-offpeak docsis10
  penalty-period 60
  qos-profile registered 6
  qos-profile enforced 100
  peak-time1 10 duration 120 avg-rate 10 peak-time2 23 duration 60 avg-rate 10
  sample-interval 10 upstream enforce
  weekend peak-time1 8 duration 60 avg-rate 100 peak-time2 20 duration 60 avg-rate 10000
  duration 90 avg-rate 20000 sample-interval 20 downstream enforce
  enabled

```

Additional References

For additional information related to the Subscriber Traffic Management feature, refer to the following references:

Related Documents

Related Topic	Document Title
Cable commands	Cisco IOS CMTS Cable Command Reference

Standards

Standards ¹	Title
SP-RFIV1.1-I09-020830	<i>Data-over-Cable Service Interface Specifications Radio Frequency Interface Specification, version 1.1</i> (http://www.cablemodem.com)
draft-ietf-ipcdn-docs-rfmibv2-06	<i>Radio Frequency (RF) Interface Management Information Base for DOCSIS 2.0 Compliant RF Interfaces</i>

1. Not all supported standards are listed.

MIBs

MIBs ¹	MIBs Link
<ul style="list-style-type: none"> CISCO-CABLE-QOS-MONITOR-MIB DOSCIS-QOS-MIB 	To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL: http://www.cisco.com/go/mibs

1. Not all supported MIBs are listed.

RFCs

RFCs ¹	Title
RFC 2233	DOCSIS OSSI Objects Support
RFC 2665	DOCSIS Ethernet MIB Objects Support
RFC 2669	Cable Device MIB

1. Not all supported RFCs are listed.

Technical Assistance

Description	Link
<p>The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.</p> <p>To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.</p> <p>Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.</p>	<p>http://www.cisco.com/cisco/web/support/index.html</p>

Feature Information for Subscriber Traffic Management for the Cisco CMTS Routers

Table 2 lists the release history for this feature.

Not all commands may be available in your Cisco IOS software release. For release information about a specific command, see the command reference documentation.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS and Catalyst OS software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <http://www.cisco.com/go/cfn>. An account on Cisco.com is not required.


Note

Table 2 lists only the Cisco IOS software release that introduced support for a given feature in a given Cisco IOS software release. Unless noted otherwise, subsequent releases of that Cisco IOS software release also support that feature.

Table 2 Feature Information for Subscriber Traffic Management for the Cisco CMTS Routers

Feature Name	Releases	Feature Information
Subscriber Traffic Monitoring 1.0	12.2(15)BC1	This feature was introduced on the Cisco uBR7100 series routers, Cisco uBR7200 series routers, and Cisco uBR10012 router.
Subscriber Traffic Management Version 1.1	12.3(9a)BC	This feature was modified on the Cisco uBR7200 series routers and the Cisco uBR10012 router to extend the earlier STM functions and monitor a subscriber's traffic on the DOCSIS 1.1 primary service flows, and support these additional features: <ul style="list-style-type: none"> • Cisco STM Version 1.1 supports Cisco Broadband Troubleshooter 3.2. • Cisco STM Version 1.1 supports DOCSIS 1.1 cable modems. • Cisco STM Version 1.1 monitors and applies traffic management policies on a service-flow basis. • Cisco STM Version 1.1 increases the available monitoring window from 7 to 30 days.
Subscriber Traffic Management Version 1.1	12.2(33)SCA	This feature was integrated into Cisco IOS Release 12.2(33)SCA to support the Cisco uBR7246VXR router, Cisco uBR7225VXR router, and Cisco uBR10012 router.

Table 2 Feature Information for Subscriber Traffic Management for the Cisco CMTS Routers (continued)

Feature Name	Releases	Feature Information
Subscriber Traffic Management Version 1.2	12.3(23)BC2	<p>This feature was enhanced with the following support on the Cisco uBR7246VXR and Cisco uBR10012 routers:</p> <ul style="list-style-type: none"> • Support was added for the Cisco Wideband SPA (Cisco uBR10012 router only). • Support for suspension of the cable modem (CM) penalty period at a certain time of day. • Support for weekday and weekend traffic monitoring. • Support of up to 40 enforce-rules. • Support for service providers to change subscriber service classes for a particular modem using the cable modem service-class-name command. • Addition of the following SNMP objects to the CISCO-CABLE-QOS-MONITOR-MIB: <ul style="list-style-type: none"> – ccqmCmtsEnfRulePenaltyEndTime – ccqmCmtsEnfRuleWkndOff – ccqmCmtsEnfRuleWkndMonDuration – ccqmCmtsEnfRuleWkndAvgRate – ccqmCmtsEnfRuleWkndSampleRate – ccqmCmtsEnfRuleWkndFirstPeakTime – ccqmCmtsEnfRuleWkndFirstDuration – ccqmCmtsEnfRuleWkndFirstAvgRate – ccqmCmtsEnfRuleWkndSecondPeakTime – ccqmCmtsEnfRuleWkndSecondDuration – ccqmCmtsEnfRuleWkndSecondAvgRate – ccqmCmtsEnfRuleWkndOffPeakDuration – ccqmCmtsEnfRuleWkndOffPeakAvgRate – ccqmCmtsEnfRuleWkndAutoEnforce • The following commands are new or modified: <ul style="list-style-type: none"> – cable modem service-class-name – penalty-period – show cable qos enforce-rule verbose – weekend duration – weekend off – weekend peak-time1

Table 2 Feature Information for Subscriber Traffic Management for the Cisco CMTS Routers (continued)

Feature Name	Releases	Feature Information
Subscriber Traffic Management Version 1.2	12.2(33)SCB	This feature enhancement was integrated into Cisco IOS Release 12.2(33)SCB to bring feature parity with Cisco IOS Release 12.3(23)BC2.
Subscriber Traffic Management Version 1.3	12.2(33)SCD2	<p>This feature was enhanced with the following support on the Cisco uBR7246VXR, Cisco uBR7225VXR, and Cisco uBR10012 routers:</p> <ul style="list-style-type: none"> • Support for configuring minute-level peak time—Peak time can now be configured in the hh:mm format, which enables a user to pinpoint the exact time at which monitoring should start. • Support for configuring minute-level penalty end time—Penalty end time can now be configured in the hh:mm format, which enables a user to pinpoint the exact time at which monitoring should stop. • Ability to configure a unique penalty duration for weekdays and weekends. • Ability to specify whether monitoring should be turned on after the CM is released from penalty. • Addition of the following SNMP objects to the CISCO-CABLE-QOS-MONITOR-MIB: <ul style="list-style-type: none"> – ccqmCmtsEnfRuleFirstPeakTimeMin – ccqmCmtsEnfRuleSecondPeakTimeMin – ccqmCmtsEnfRuleWkndFirstPeakTimeMin – ccqmCmtsEnfRuleWkndSecondPeakTimeMin – ccqmCmtsEnfRulePenaltyEndTimeMin – ccqmCmtsEnfRuleWkPenaltyPeriod – ccqmCmtsEnfRuleWkndPenaltyPeriod – ccqmCmtsEnfRuleRelTimeMonitorOn • The following commands are modified: <ul style="list-style-type: none"> – duration – peak-time1 – penalty-period – show cable qos enforce-rule verbose – weekend duration – weekend peak-time1

Cisco and the Cisco Logo are trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and other countries. A listing of Cisco's trademarks can be found at www.cisco.com/go/trademarks. Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1005R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental.

© 2008-2011 Cisco Systems, Inc. All rights reserved.

