



# **Cisco BroadWorks**

## **Partner Configuration Guide**

### Cisco Multi-Platform Phones

June 2024

Document Version 1.34

## Copyright Notice

Copyright© 2024 Cisco Systems, Inc. All rights reserved.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/c/en/us/about/legal/trademarks.html>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

## Document Revision History

Version	Reason for Change
1.1	Introduced document for Cisco MPP Series version 11.2.1 validation with Cisco BroadWorks Release 22.0.
1.2	Edited and published the document.
1.3	Added CP-6821-3PCC model v11.2.2 to the Cisco MPP Series validation with Cisco BroadWorks Release 22.0.
1.4	Edited changes and published the document.
1.5	Added CP-8832-3PCC model and completed Cisco MPP Series version 11.2.3 validation with Cisco BroadWorks Release 22.0. Also, edited with new 11.2.3 features.
1.6	Edited changes and published the document.
1.7	Added CP-6861-3PCC model v11.2.4 to the Cisco MPP Series validation with Cisco BroadWorks Release 22.0.
1.8	Edited changes and published the document.
1.9	Updated the <code>&lt;mac-address&gt;_CiscoDev.xml</code> example in Appendix A.
1.10	Added comment for XSI Authentication tags.
1.11	Edited changes, rebranded and published the document.
1.12	Added the CP-6871-3PCC model and updated document for Cisco MPP Series version 11.3.1 validation with Cisco BroadWorks Release 22.0.
1.13	Edited changes, rebranded and published the document.
1.14	Updated document for Cisco MPP Series version 11.3.2 validation with Cisco BroadWorks Release 23.0.
1.15	Updated document for Cisco MPP Series version 11.3.3 validation with Cisco BroadWorks Release 24.0.
1.16	Updated document for Cisco MPP Series version 11.3.4 validation with Cisco BroadWorks Release 24.0.
1.17	Updated document for Cisco MPP Series version 11.3.5 validation with Cisco BroadWorks Release 24.0.
1.18	Edited changes and published the document.
1.19	Updated document for Cisco MPP Series version 11.3.6 validation with Cisco BroadWorks Release 24.0. This version includes Cloud Onboarding of MPP phones.
1.20	Edited changes and published the document.
1.21	Updated document for Cisco MPP Series version 11.3.7 validation with Cisco BroadWorks Release 24.0. This version includes Cloud Onboarding of MPP phones.
1.22	Edited changes and published the document.
1.23	Updated document for Cisco Video Phone 8875. Added the locale file list for Video Phone 8875. Updated the example file CisoDev-3PCC_Bootstrap.xml.
1.24	Edited changes and published the document.
1.25	Updated document for Cisco MPP Series version 12.0.1 validation with Cisco BroadWorks Release 24.0. This version includes Cloud Onboarding of MPP phones.
1.26	Edited changes and published the document.

Version	Reason for Change
1.27	Updated document for Cisco MPP Series version 12.0.2 validation with Cisco BroadWorks Release 24.0. This version includes Cloud Onboarding of MPP phones.
1.28	Edited changes and published the document.
1.29	Updated document for Cisco MPP Series version 12.0.3 validation with Cisco BroadWorks Release RI. This version includes Cloud Onboarding of MPP phones.
1.30	Edited changes and published the document.
1.31	Updated document for Cisco MPP Series version 12.0.4 validation with Cisco BroadWorks Release RI. This version includes Cloud Onboarding of MPP phones.
1.32	Edited changes and published the document.
1.33	Updated document for Cisco Desk Phone 9800 Series version PhoneOS 3.0.1.
1.34	Edited changes and published the document.



## Table of Contents

<b>1</b>	<b>Overview .....</b>	<b>9</b>
<b>2</b>	<b>Interoperability Status.....</b>	<b>10</b>
2.1	Verified Versions.....	10
2.2	Interface Capabilities Supported.....	11
2.2.1	SIP Interface Capabilities .....	11
2.2.2	Other Interface Capabilities.....	17
2.3	Known Issues .....	19
<b>3</b>	<b>Cisco BroadWorks Configuration.....</b>	<b>20</b>
3.1	Cisco BroadWorks Device Profile Type Configuration.....	20
3.2	Cisco BroadWorks Configuration Steps.....	21
<b>4</b>	<b>MPP Series Configuration.....</b>	<b>22</b>
4.1	Configuration Method.....	22
4.2	System Level Configuration.....	23
4.3	Subscriber Level Configuration.....	29
4.4	SIP Advanced Feature Configuration.....	30
4.4.1	Shared Call Appearance Configuration.....	30
4.4.2	Hybrid Key System Configuration.....	37
4.4.3	Busy Lamp Field Configuration.....	39
4.4.4	Feature Key Synchronization Configuration .....	41
4.4.5	Call Center Feature Configuration .....	42
4.4.6	Hoteling Feature Configuration .....	48
4.4.7	Call Park Feature Configuration .....	50
4.4.8	Accessibility with Voice Feedback Configuration.....	53
4.4.9	Call Recording Feature Configuration .....	55
4.4.10	Executive/Executive-Assistant Feature .....	56
4.4.11	OPUS Codec Narrowband.....	63
4.4.12	Enable SIP 110rel without Enabling Preconditions .....	63
4.4.13	Synchronization of Call Waiting and Anonymous Call Rejection Through XSI Service .....	64
4.4.14	Line Key LED Behavior Customization .....	66
4.4.15	Security Classification Feature Configuration .....	79
4.4.16	Emergency Call Configuration .....	79
4.4.17	Advice of Charge Configuration.....	79
4.4.18	Conference Event Configuration.....	79
4.5	Xtended Services Interface Feature Configuration.....	79
4.5.1	XSI Authentication Method .....	79
4.5.2	XSI Single Sign-On Feature Configuration .....	81
4.5.3	Cisco BroadWorks User Service Configuration.....	84
4.5.4	Cisco BroadWorks Call Logs Configuration.....	86

4.5.5	Cisco BroadWorks Directory Configuration .....	87
4.5.6	DND and Call Forwarding Status Sync via XSI Service.....	95
4.5.7	Cisco BroadWorks Visual Voice Mail Configuration .....	98
4.6	Instant Message and Presence Configuration.....	98
4.7	Phone Onboarding to Cloud .....	99
4.7.1	Enable Phone Onboarding to Cloud.....	99
4.7.1	Phone Issues Reporting from Control Hub .....	99
4.7.2	Phone Reboot from Control Hub .....	101
4.7.3	Webex Contact Support Configuration.....	101
4.7.4	Webex Call Log Configuration .....	102
<b>5</b>	<b>Device Management.....</b>	<b>104</b>
5.1	Device Management Capabilities Supported .....	104
5.2	Device Management Configuration .....	106
5.2.1	Configure Cisco BroadWorks Tags .....	106
5.2.2	Configure Cisco BroadWorks Device Profile Type .....	126
5.2.3	Create Device Profile Instance .....	147
5.2.4	Configure Cisco BroadWorks User .....	147
5.2.5	Customize Tags.....	148
5.2.6	File Authentication Using MAC Address from Client Certificate .....	149
5.2.7	Configure Cisco MPP Series .....	151
5.3	Upgrade from Previous CPE Kits .....	157
	<b>Appendix A: Reference MPP Series Configuration Files .....</b>	<b>158</b>
	<b>References.....</b>	<b>239</b>

## Table of Figures

Figure 1 Device Identity/Profile Type.....	21
Figure 2 Shared Call Appearance Configuration.....	31
Figure 3 Shared Line Park .....	33
Figure 4 Shared Call Appearance (Multiple Call Arrangement).....	37
Figure 5 Line Key Mapping .....	38
Figure 6 Line ID Mapping.....	38
Figure 7 Busy Lamp Field Configuration – Server.....	40
Figure 8 Busy Lamp Field Configuration – Device .....	41
Figure 9 Call Control → Call Center Page .....	42
Figure 10 Cisco MPP Series BroadSoft ACD.....	42
Figure 11 ACD Status on Web User Interface.....	45
Figure 12 Phone ACD Status Available .....	46
Figure 13 ACD Status to Unavailable.....	46
Figure 14 ACD Status (Last Local Status) .....	46
Figure 15 Set Auto Available After Sign-in .....	46
Figure 16 ACD State to Sign-Out .....	47
Figure 17 ACD Status (Before AgtSignin Press).....	48
Figure 18 ACD Status (On AgtSignin Press).....	48
Figure 19 ACD State Updates to Available.....	48
Figure 20 Call Control → Hoteling Guest.....	48
Figure 21 Cisco MPP Series BroadSoft Hoteling .....	49
Figure 22 Cisco MPP Series Call Park Service.....	50
Figure 23 Cisco MPP Series Call Park Feature Access Code .....	50
Figure 24 One-button Call Park .....	52
Figure 25 One-button Call Park from Web.....	52
Figure 26 Configure Voice Feedback.....	53
Figure 27 Cisco MPP Series Call Recording Protocol .....	55
Figure 28 Cisco MPP Series Call Recording Serv .....	55
Figure 29 Cisco BroadWorks Executive Service .....	56
Figure 30 Cisco BroadWorks Executive-Assistant .....	57
Figure 31 Cisco BroadWorks Exec Admin – Assign Assistant to Exec.....	57
Figure 32 Exec Admin Feature Key Sync.....	57
Figure 33 Exec Admin Programmable Softkeys.....	58
Figure 34 Exec Admin Feature Access Code.....	58
Figure 35 Exec Admin Dial Plan.....	58
Figure 36 Feature Key Sync Enabling.....	60
Figure 37 XSI Host Server Synchronization .....	60
Figure 38 Assistant Call Filter .....	60
Figure 39 Assign Executive Service .....	61
Figure 40 Assistants to an Executive .....	62
Figure 41 Configure Call Filtering .....	62
Figure 42 Executive-assistant Service .....	62
Figure 43 Executive-assistant Configuration.....	62
Figure 44 Executive Settings Modification .....	63
Figure 45 OPUS Codec Narrowband.....	63
Figure 46 Preconditions Feature Configuration .....	64
Figure 47 Call Waiting .....	64
Figure 48 Anonymous Call Rejection .....	65
Figure 49 Anonymous Call Rejection and Call Waiting Enabling .....	65
Figure 50 XSI Host Server Synchronization .....	65
Figure 51 Line Key LED Behavior .....	76
Figure 52 Att Console LED Behavior .....	77
Figure 53 Cisco MPP Series XSI Authentication SIP Credentials.....	79

Figure 54	XSI Authentication Login Credentials .....	80
Figure 55	Profile Account Authentication on Cisco BroadWorks Server.....	82
Figure 56	Cisco MPP Series Profile Authentication Type .....	82
Figure 57	XSI Host Server and XSI Authentication Type Configuration .....	83
Figure 58	BroadWorks Anywhere Service for User.....	84
Figure 59	BroadWorks Anywhere Password Page .....	84
Figure 60	BroadWorks Anywhere Authentication Page.....	84
Figure 61	BroadWorks Anywhere XSI Authentication – Login Credentials .....	85
Figure 62	BroadWorks Anywhere XSI Authentication – SIP Credentials .....	85
Figure 63	Cisco MPP Series Call Log Enabled .....	86
Figure 64	Configure Enterprise and Enterprise Common Directory.....	89
Figure 65	Configure Group Directory Contacts .....	89
Figure 66	Add Users to Group Directory .....	90
Figure 67	Configuring Group Common Directory .....	90
Figure 68	Configure Personal Directory .....	91
Figure 69	User Credentials .....	91
Figure 70	Directory Service.....	91
Figure 71	XSI Login Credentials with Cisco BroadWorks .....	96
Figure 72	XSI SIP Credentials with Cisco BroadWorks .....	96
Figure 73	DND and Call Forwarding Status Synchronization .....	97
Figure 74	Cisco MPP Series XMPP Settings .....	98
Figure 75	Webex Onboarding of Phone .....	99
Figure 76	PRT Upload to Cloud.....	100
Figure 77	Webex Contacts Support .....	101
Figure 78	Webex Call Log Support .....	102
Figure 79	System Default Tag Settings.....	107
Figure 80	Device Type-specific Tag Settings .....	125
Figure 81	Device Access FQDN.....	127
Figure 82	CiscoDev-3PCC_Bootstrap.xml File Settings.....	131
Figure 83	<MAC>_CiscoDev.xml File Setting .....	132
Figure 84	Upload File Settings.....	133
Figure 85	Static Load File .....	135
Figure 86	Language File .....	145
Figure 87	Language File – Language Selection .....	145
Figure 88	Cisco BroadWorks User Language Definition .....	146
Figure 89	Device Profile Instance.....	147
Figure 90	Device Profile Type Update for MAC-Based Auth Using Client Certificate.....	150
Figure 91	Authentication Mode set to MAC-Based and Sourced from Client Certificate .....	150
Figure 92	Example Update Screen .....	151
Figure 93	Device Access FQDN.....	152
Figure 94	Default Device Profile Type.....	153
Figure 95	Configure Advanced Options .....	153
Figure 96	Device Management Options Settings .....	154
Figure 97	Default 7841-3PCC.xml.....	156

## 1 Overview

---

This guide describes the configuration procedures required for the Cisco MultiPlatform Phones (MPP) Series to be interoperable with Cisco BroadWorks. This includes the following MPP Series phone models:

- CP-6821-3PCC
- CP-6841-3PCC
- CP-6851-3PCC
- CP-6861-3PCC
- CP-6871-3PCC
- CP-7811-3PCC
- CP-7821-3PCC
- CP-7832-3PCC
- CP-7841-3PCC
- CP-7861-3PCC
- CP-8811-3PCC
- CP-8841-3PCC
- CP-8845-3PCC
- CP-8851-3PCC
- CP-8861-3PCC
- CP-8865-3PCC
- CP-8875
- CP-8832-3PCC
- DP-9841
- DP-9851

The MPP Series uses the Session Initiation Protocol (SIP) to communicate with Cisco BroadWorks for call control.

This guide describes the specific configuration items that are important for use with Cisco BroadWorks. It does not describe the purpose and use of all configuration items on the MPP Series. For those details, see the *Cisco IP Desk Phone with Multiplatform Firmware (MPP) — Administration Guide*, *Cisco IP Conference Phone Multiplatform Phone Administration Guide*, and *Help articles for IP Phone 9800 Series* from <https://help.webex.com/en-us/landing/ld-n0mkki8-CiscoDeskPhone9800Series/BroadWorks> supplied by Cisco Systems.

## 2 Interoperability Status

This section provides the known interoperability status of the Cisco MPP Series with Cisco BroadWorks. This includes the version(s) tested, the capabilities supported, and known issues.

Interoperability testing validates that the device interfaces properly with Cisco BroadWorks via the SIP interface. Qualitative aspects of the device or device capabilities not affecting the SIP interface such as display features, performance, and audio qualities are not covered by interoperability testing. Requests for information and/or issues regarding these aspects should be directed to Cisco.

### 2.1 Verified Versions

The following table identifies the verified Cisco MPP Series and Cisco BroadWorks versions and the month/year the testing occurred. If the device has undergone more than one test cycle, versions for each test cycle are listed, with the most recent listed first.

*Compatible Versions* in the following table identify specific MPP Series versions that the partner has identified as compatible so should interface properly with Cisco BroadWorks. Generally, maintenance releases of the validated version are considered compatible and may not be specifically listed here. For any questions concerning maintenance and compatible releases, contact Cisco.

**NOTE:** Interoperability testing is usually performed with the latest generally available (GA) device firmware/software and the latest GA Cisco BroadWorks release and service pack at the time the testing occurs. If there is a need to use a non-verified mix of Cisco BroadWorks and device software versions, customers can mitigate their risk by self-testing the combination themselves using the *BroadWorks SIP Phone Interoperability Test Plan*.

Verified Versions			
Date (mm/yyyy)	Cisco BroadWorks Release	MPP Series Verified Version	MPP Series Compatible Versions
03/2024	Release RI	12.0.4	Any maintenance release of the verified versions.
08/2023	Release RI	12.0.3	Any maintenance release of the verified versions.
07/2023	Release 24.0	12.0.2	Any maintenance release of the verified versions.
01/2023	Release 24.0	12.0.1	Any maintenance release of the verified versions.
06/2022	Release 24.0	11.3.7	Any maintenance release of the verified versions.
01/2022	Release 24.0	11.3.6	Any maintenance release of the verified versions.

Verified Versions			
Date (mm/yyyy)	Cisco BroadWorks Release	MPP Series Verified Version	MPP Series Compatible Versions
09/2021	Release 24.0	11.3.5	Any maintenance release of the verified versions.
06/2021	Release 24.0	11.3.4	Any maintenance release of the verified versions.
09/2020	Release 24.0	11.3.3	Any maintenance release of the verified versions.
11/2019	Release 22.0	11.3.1	Any maintenance release of the verified versions.
05/2019	Release 22.0	CP-6861: 11.2.4 Rest of MPP: 11.2.3	Any maintenance release of the verified versions.
01/2019	Release 22.0	11.2.3	Any maintenance release of the verified versions.
09/2018	Release 22.0	CP-6821: 11.2.2 Rest of MPP: 11.2.1	Any maintenance release of the verified versions.
07/2018	Release 22.0	11.2.1	Any maintenance release of the verified versions.

## 2.2 Interface Capabilities Supported

This section identifies interface capabilities that have been verified through testing as supported by Cisco MPP Series.

The *Supported* column in the tables in this section identifies the Cisco MPP Series' support for each of the items covered in the test plan, with the following designations:

- Yes Test item is supported.
- No Test item is not supported.
- NA Test item is not applicable to the device type.
- NT Test item was not tested.
- Yes\* Test item may differ from Cisco BroadWorks feature design.

Caveats and clarifications are identified in the *Comments* column.

### 2.2.1 SIP Interface Capabilities

The Cisco MPP Series has completed interoperability testing with Cisco BroadWorks using the *BroadWorks SIP Phone Interoperability Test Plan*. The results are summarized in the following table.

The Cisco BroadWorks test plan is composed of packages, each covering distinct interoperability areas, such as “Basic” call scenarios and “Redundancy” scenarios. Each package is composed of one or more test items, which in turn are composed of one or more test cases. The test plan exercises the SIP interface between the device and Cisco BroadWorks with the intent to ensure interoperability sufficient to support the Cisco BroadWorks feature set.

**NOTE:** *DUT* in the following table refers to the *Device Under Test*, which in this case is the Cisco MPP Series.

Cisco BroadWorks SIP Phone Interoperability Test Plan Support Table			
Test Plan Package	Test Plan Package Items	Supported	Comments
Basic	Call Origination	Yes	
	Call Termination	Yes	
	Session Audit	Yes	
	Session Timer	No	
	Ringback	Yes	
	Forked Dialog	Yes	
	181 Call Being Forwarded	Yes	
	Dial Plan	Yes	
	DTMF – Inband	Yes	
	DTMF – RFC 2833	Yes	
	DTMF – DTMF Relay	Yes	
	Codec Negotiation	Yes	
	Codec Renegotiation	Yes	
BroadWorks Services	Third-Party Call Control – Basic	Yes	Except for the 8875 phones
	Third-Party Call Control – Advanced	Yes	Except for the 8875 phones
	Voice Message Deposit/Retrieval	Yes	
	Message Waiting Indicator – Unsolicited	Yes	
	Message Waiting Indicator – Solicited	Yes	
	Message Waiting Indicator – Detail	Yes	
	Voice Portal Outcall	Yes	
	Advanced Alerting – Ringing	Yes	
	Advanced Alerting – Call Waiting	Yes	
	Advanced Alerting – Ring Splash	Yes	
	Advanced Alerting – Silent Alerting	Yes	
	Calling Line ID	Yes	



Cisco BroadWorks SIP Phone Interoperability Test Plan Support Table			
Test Plan Package	Test Plan Package Items	Supported	Comments
	Calling Line ID with Unicode Characters	Yes	
	Connected Line ID	Yes	
	Connected Line ID with Unicode Characters	Yes	
	Connected Line ID on UPDATE	Yes	
	Connected Line ID on Re-INVITE	Yes	
	Diversion Header	Yes	
	History-Info Header	Yes	
	Advice of Charge	No	
	Meet-Me Conferencing	Yes	
	Meet-Me Conferencing – G722	Yes	
	Meet-Me Conferencing – AMR-WB	Yes	
	Meet-Me Conferencing – OPUS	Yes	
	Collaborate – Audio	Yes	
	Collaborate – Audio – G722	Yes	
	Collaborate – Audio – OPUS	Yes	
	Call Decline Policy	Yes	
<b>DUT Services – Call Control Services</b>	Call Waiting	Yes	
	Call Hold	Yes	
	Call Transfer	Yes	
	Three-Way Calling	Yes	
	Network-Based Conference	Yes	
<b>DUT Services – Registration and Authentication</b>	Register Authentication	Yes	
	Maximum Registration	Yes	
	Minimum Registration	Yes	
	Invite Authentication	Yes	
	Re-INVITE/Update Authentication	Yes	
	Refer Authentication	Yes	
	Device Authenticating BroadWorks	Yes	
<b>DUT Services – Emergency Call</b>	Emergency Call	No	
	Emergency Call with Ringback	No	
<b>DUT Services – P-Access-Network-Info Header</b>	REGISTER with P-Access-Network-Info Header	No	
	INVITE with P-Access-Network-Info Header	No	

Cisco BroadWorks SIP Phone Interoperability Test Plan Support Table			
Test Plan Package	Test Plan Package Items	Supported	Comments
<b>DUT Services – Miscellaneous</b>	Do Not Disturb	Yes	
	Call Forwarding Always	Yes	
	Call Forwarding Always Diversion Inhibitor	No	
	Anonymous Call	Yes	
	Anonymous Call Block	Yes	
	Remote Restart Via Notify	Yes	
<b>Advanced Phone Services – Busy Lamp Field</b>	Busy Lamp Field	Yes	Except for the 7811, 7832, and 8832 models
	Call Park Notification	Yes	
<b>Advanced Phone Services – Feature Key Synchronization, Private Line</b>	Do Not Disturb	Yes	Except Multiline
	Do Not Disturb Ring Splash	Yes	
	Call Forwarding	Yes	
	Call Forwarding Always Ring Splash	Yes	
	Call Forwarding Always Diversion Inhibitor	No	
	Call Center Agent Logon/Logoff	Yes	Except for the 8875 phones
	Call Center Agent Unavailable Code	Yes	Except for the 8875 phones
	Executive – Call Filtering	Yes	Only MPP 88xx models, except for the 8875 phone and the 8832 conference phone
	Executive-Assistant – Call Filtering	Yes	Only MPP 88xx models, except for the 8875 phone and the 8832 conference phone
	Executive-Assistant – Diversion	Yes	Only MPP 88xx models, except for the 8875 phone and the 8832 conference phone
	Call Recording	Yes	
	Security Classification	No	
<b>Advanced Phone Services – Feature Key Synchronization, Shared Line</b>	Do Not Disturb	Yes	
	Do Not Disturb Ring Splash	Yes	
	Call Forwarding	Yes	
	Call Forwarding Always Ring Splash	Yes	
	Call Forwarding Always Diversion Inhibitor	No	
	Security Classification	No	
<b>Advanced Phone Services – Missed Calls Display Synchronization</b>	Missed Calls Display Sync	Yes	

Cisco BroadWorks SIP Phone Interoperability Test Plan Support Table			
Test Plan Package	Test Plan Package Items	Supported	Comments
Advanced Phone Services – Shared Call Appearance using Call-Info	Line-Seize	Yes	
	Call-Info/Lamp Management	Yes	
	Public Hold	Yes	
	Private Hold	Yes*	DUT removes retrieve button when call is privately held
	Hybrid Key System	Yes	Except for the 7811, 7821, 8875, and 6821 models
	Multiple Call Arrangement	Yes	
	Bridge Active Line	Yes	
	Bridge Active Line – Silent Monitor	Yes	
	Call Park Notification	Yes	
Advanced Phone Services – Call Park Notification	Call Park Notification	Yes	
Advanced Phone Services – Call Center	Hold Reminder	Yes	
	Call Information	Yes	
	Hoteling Event	Yes	
	Status Event	Yes	
	Disposition Code	Yes	Except for the 8875 phones
	Emergency Escalation	Yes	
	Customer Originated Trace	Yes	
Advanced Phone Services – Call Recording Controls	Pause/Resume	Yes	Except for the 8875 phones
	Start/Stop	Yes	Except Mid-Call Except for the 8875 phones
	Record Local Conference	Yes	Except for the 8875 phones
	Record Network Conference	Yes	Except for the 8875 phones
Advanced Phone Services – Call Recording Video	Basic Call	No	
	Record Local Conference	No	
	Record Network Conference	No	
Advanced Phone Services – Security Classification	Security Classification	No	
Advanced Phone Services – Conference Event	Network-Based Conference Creator	No	
	Network-Based Conference Participant	No	
	Meet-Me Conference Participant	No	
Redundancy	DNS SRV Lookup	Yes	
	Register Failover/Failback	Yes	

Cisco BroadWorks SIP Phone Interoperability Test Plan Support Table			
Test Plan Package	Test Plan Package Items	Supported	Comments
	Invite Failover/Failback	Yes	
	Bye Failover	Yes	
SBC/ALG – Basic	Register	Yes	
	Outgoing Invite	Yes	
	Incoming Invite	Yes	
SBC/ALG – Failover/Failback	Register Failover/Failback	Yes	
	Invite Failover/Failback	Yes	
Video – Basic Video Calls	Call Origination	Yes	Only 8845, 8865, and 8875
	Call Termination	Yes	Only 8845, 8865, and 8875
	Call Hold	Yes	Only 8845, 8865, and 8875
	Call Waiting	Yes	Only 8845, 8865, and 8875
	Call Transfer	Yes	Only 8845, 8865, and 8875
Video – BroadWorks Video Services	Auto Attendant	No	
	Auto Attendant – HD	Yes	Only 8845 and 8865
	Voice Messaging	No	
	Voice Messaging – HD	Yes	Only 8845 and 8865
	Custom Ringback	Yes	Only 8845 and 8865
Video – BroadWorks Video Conference	Network-based Conference	No	
	Network-based Conference – HD	Yes	Only 8845 and 8865
	Collaborate – Video	No	
	Collaborate – Video – HD	Yes	Only 8845 and 8865
Video – BroadWorks WebRTC Client	Call from WebRTC Client	Yes	Only 8845 and 8865
	Call to WebRTC Client	Yes	Only 8845 and 8865
TCP	Register	Yes	
	Outgoing Invite	Yes	
	Incoming Invite	Yes	
IPv6	Call Origination	Yes	
	Call Termination	Yes	
	Session Audit	Yes	
	Ringback	Yes	
	Codec Negotiation/Renegotiation	Yes	
	Voice Message Deposit/Retrieval	Yes	
	Call Control	Yes	
	Registration with Authentication	Yes	

Cisco BroadWorks SIP Phone Interoperability Test Plan Support Table			
Test Plan Package	Test Plan Package Items	Supported	Comments
	Busy Lamp Field	Yes	Except for the 7811, 7832, and 8832 models
	Redundancy	Yes	
	SBC	Yes	
	Video	Yes	Only for the 8845, 8865, and 8875 models
	Dual Stack with Alternate Connectivity	Yes*	

## 2.2.2 Other Interface Capabilities

This section identifies whether the Cisco MPP Series has implemented support for the following:

- Cisco BroadWorks Xtended Services Interface (Xsi)
- Extensible Messaging and Presence Protocol (XMPP) (BroadCloud/Cisco BroadWorks Collaborate Instant Messaging and Presence [IM&P])

Support for these interfaces is demonstrated by completing the *Cisco BroadWorks SIP Phone Xsi and XMPP Test Plan*. Support for these interfaces is summarized in the following table.

Cisco BroadWorks Xtended Services Interface (Xsi) and BroadCloud IM&P Support Table			
Interface	Feature	Supported	Comments
<b>Xsi Features – Authentication</b>	Authenticate with SIP Credentials	Yes	
	Authenticate with BroadWorks User Login Credentials	Yes	
	Authenticate with BroadWorks User Directory Number	No	
<b>Xsi Features – User Service Configuration</b>	Remote Office	No	
	BroadWorks Anywhere	Yes	
	Simultaneous Ringing	No	
	Caller ID Blocking	Yes	
	Call Forwarding Always	Yes	
	Call Forwarding Busy	Yes	
	Call Forwarding No Answer	Yes	
	Do Not Disturb	Yes	
<b>Xsi Features – Directories</b>	Enterprise Directory	Yes	
	Enterprise Common Phone List	Yes	
	Group Directory	Yes	
	Group Common Phone List	Yes	
	Personal Phone List	Yes	

Cisco BroadWorks Xtended Services Interface (Xsi) and BroadCloud IM&P Support Table			
Interface	Feature	Supported	Comments
	Search All Directories	Yes	
<b>Xsi Features – Call Logs</b>	Placed Calls	Yes	
	Received Calls	Yes	
	Missed Calls	Yes	
	All Calls	Yes	
	Sort by Name	Yes	
<b>Xsi Features – Visual Voice Mail</b>	View Messages	No	
	Listen to Audio Message	No	
	Watch Video Message	No	
	Mark Message Read/Unread	No	
	Delete Message	No	
	Mark All Messages Read/Unread	No	
<b>Xsi Features – Push Notification</b>	Register/Deregister for Push Notifications	No	
	Incoming Call via Push Notification	No	
	Call Update via Push Notification	No	
	Incoming Call via Push Notification; Second Incoming Call	No	
	MWI via Push Notification	No	
	Ring Splash via Push Notification	No	
<b>Xsi Features – Call Recording Configurations</b>	Call Record Mode Get	No	
	Set Record Mode	No	
	Set Play Call Recording to Start and Stop Announcement	No	
	Set Record Voice Messaging	No	
	Set Pause and Resume Notification	No	
	Set Recording Notification	No	
<b>Xsi Features – Call Recording Controls</b>	Record Mode set to Never	No	
	Record Mode set to Always	No	
	Record Mode set to Always with Pause/Resume	No	
	Start Recording Mid-Call with Record Mode set to On Demand	No	
	Start Recording During Call Setup with Record Mode set to On Demand	No	
	Perform User Initiated Start with Record Mode set to On Demand	No	

Cisco BroadWorks Xtended Services Interface (Xsi) and BroadCloud IM&P Support Table			
Interface	Feature	Supported	Comments
	Perform Mid-Call Start Recording after Placing Call on Hold	No	
	Perform Mid-Call Change to Call Recording Mode	No	
	Record Local Three-Way Call	No	
	Record Network Three-Way Call	No	
<b>XMPP Features – Contact/Buddy List</b>	Contacts	Yes	
	Favorites	Yes	
	Groups	Yes	
	Non-XMPP Contacts	Yes	
	Conferences	No	
<b>XMPP Features – Presence</b>	Login Invisible	Yes	
	Presence State	Yes	
	Presence Status	No	
	Contact's Presence State	Yes	

## 2.3 Known Issues

This section lists the known interoperability issues between Cisco BroadWorks and specific partner release(s). Issues identified during interoperability testing and known issues identified in the field are listed.

The following table provides a description of each issue and, where possible, identifies a workaround. The verified partner device versions are listed with an “X” indicating that the issue occurs in the specific release. The issues identified are device deficiencies or bugs and are typically not Cisco BroadWorks release dependent.

The *Issue Number* is a tracking number for the issue. If it is a Cisco issue, the issue number is from Cisco's tracking system. If it is a Cisco BroadWorks issue, the issue number is from Cisco's tracking system.

For more information on any issues related to the particular partner device release, see the partner release notes.

Issue Number	Issue Description	Version				
		11.3.3	11.3.1	11.2.3	11.2.1	
	None.					

### 3 Cisco BroadWorks Configuration

This section identifies the required Cisco BroadWorks device profile type for the Cisco MPP Series as well as any other unique Cisco BroadWorks configuration required for interoperability with the MPP Series models listed previously.

#### 3.1 Cisco BroadWorks Device Profile Type Configuration

This section identifies the device profile type settings to use when deploying the Cisco MPP Series with Cisco BroadWorks.

Create a Common PhoneOS-MPP(98-88-78-68xx) device profile type for the Cisco MPP Series with settings as shown in the following example. Common IDT removes the need for separate device profile type to be created for each Cisco MPP Series model. The settings shown are recommended for use when deploying the Cisco MPP-3PCC with Cisco BroadWorks. For an explanation of the profile parameters, see the *Cisco BroadWorks Device Management Configuration Guide* [2].

The device profile type shows the *Number of Ports* (number of SIP lines) setting for Common Cisco MPP-3PCC models. The number of SIP lines for MPP Series per model is as shown in the following table.

Model	Number of Lines
CP-6821-3PCC	2
CP-6841-3PCC	4
CP-6851-3PCC	4
CP-6861-3PCC	4
CP-6871-3PCC	6
CP-7811-3PCC	1
CP-7821-3PCC	2
CP-7832-3PCC	1
CP-7841-3PCC	4
CP-7861-3PCC	16
CP-8811-3PCC	10
CP-8841-3PCC	10
CP-8845-3PCC	10
CP-8851-3PCC	10
CP-8861-3PCC	10
CP-8865-3PCC	10
CP-8875	16
CP-8832-3PCC	1
DP-9841	4
DP-9851	6



### Identity/Device Profile Type Modify

Modify an existing identity/device profile type.

OK Apply Delete Export Cancel

Identity/Device Profile Type: Cisco-CP-78xx-88xx-68xx-3PCC  
 Signaling Address Type: Intelligent Proxy Addressing  
☐ Obsolete

Standard Options

Number of Ports: ☐ Unlimited ☒ Limited To

Ringback Tone/Early Media Support: ☐ RTP - Session  
☐ RTP - Early Session  
☒ Local Ringback - No Early Media

Authentication: ☒ Enabled  
☐ Disabled

Hold Normalization: ☐ Unspecified Address  
☐ Inactive  
☒ RFC3264

☒ Registration Capable ☒ Authenticate REFER  
☐ Static Registration Capable ☒ Video Capable  
☒ E164 Capable ☐ Use History Info Header  
☐ Trusted

Advanced Options

<input type="checkbox"/> Route Advance	<input type="checkbox"/> Forwarding Override
<input type="checkbox"/> Wireless Integration	<input type="checkbox"/> Conference Device
<input type="checkbox"/> PBX Integration	<input type="checkbox"/> Mobility Manager Device
<input type="checkbox"/> Add P-Called-Party-ID	<input type="checkbox"/> Music On Hold Device
<input type="checkbox"/> Auto Configuration Soft Client	<input type="checkbox"/> Requires BroadWorks Digit Collection
<input type="checkbox"/> Requires BroadWorks Call Waiting Tone	<input type="checkbox"/> Requires MMI Subscription
<input type="checkbox"/> Advice of Charge Capable	<input checked="" type="checkbox"/> Support Call Center MIME Type
<input type="checkbox"/> Support Emergency Disconnect Control	<input checked="" type="checkbox"/> Support Identity In UPDATE and Re-INVITE
<input type="checkbox"/> Enable Monitoring	<input type="checkbox"/> Support RFC 3398
<input type="checkbox"/> Static Line/Port Ordering	<input type="checkbox"/> Support Client Session Info
<input type="checkbox"/> Support Call Info Conference Subscription URI	<input type="checkbox"/> Support Remote Party Info
<input type="checkbox"/> Support Visual Device Management	<input type="checkbox"/> Bypass Media Treatment
<input type="checkbox"/> Support Cause Parameter	

Reset Event: ☒ reSync ☐ checkSync ☐ Not Supported

Trunk Mode: ☒ User ☐ Pilot ☐ Proxy

Hold Announcement Method: ☐ Inactive ☒ Bandwidth Attributes

Unscreened Presentation Identity Policy: ☒ Profile Presentation Identity  
☐ Unscreened Presentation Identity  
☐ Unscreened Presentation Identity With Profile Domain

Web Based Configuration URL Extension:

Device Configuration Options: ☐ Not Supported ☒ Device Management ☐ Legacy

Figure 1 Device Identity/Profile Type

## 3.2 Cisco BroadWorks Configuration Steps

No other steps are needed on Cisco BroadWorks for setting up the device.

## 4 MPP Series Configuration

This section describes the configuration settings required for the MPP Series integration with Cisco BroadWorks, primarily focusing on the SIP interface configuration. The MPP Series configuration settings identified in this section have been derived and verified through interoperability testing with Cisco BroadWorks. For configuration details not covered in this section, see the *Cisco Multiplatform IP Phones Administration Guide* [1] for the appropriate MPP Series.

### 4.1 Configuration Method

#### Configuration Files

MPP Series Configuration Files	Level	Description
<i>CiscoDev_Type68xx.xml</i>	Per-Type	Contains the 6800 family-specific configurable parameters that apply to Upgrade rule, logo download.
<i>CiscoDev_Type6821.xml</i>	Per-Type	Contains the 6821 specific configurable parameters that apply to Upgrade rule, logo download.
<i>CiscoDev_Type6861.xml</i>	Per-Type	Contains the 6861 specific configurable parameters that apply to Upgrade rule, logo download.
<i>CiscoDev_Type6871.xml</i>	Per-Type	Contains the 6871 specific configurable parameters that apply to Upgrade rule, logo download.
<i>CiscoDev_Type78xx.xml</i>	Per-Type	Contains the 7800 family-specific configurable parameters that apply to Upgrade rule, logo download.
<i>CiscoDev_Type7832.xml</i>	Per-Type	Contains model 7832 specific configurable parameters that apply to Upgrade rule, logo download.
<i>CiscoDev_Type88xx.xml</i>	Per-Type	Contains the 8800 family-specific configurable parameters that apply to Upgrade rule, logo download.
<i>CiscoDev_Type88x5.xml</i>	Per-Type	Contains model 88x5 specific configurable parameters that apply to Upgrade rule, logo download.
<i>CiscoDev_Type8875.xml</i>	Per-Type	Contains model 8875 specific configurable parameters that apply to Upgrade rule, logo download.
<i>CiscoDev_Type8832.xml</i>	Per-Type	Contains model 8832 specific configurable parameters that apply to Upgrade rule, logo download.
<i>CiscoDev_Type9841.xml</i>	Per-Type	Contains the 9841 specific configurable parameters that apply to Upgrade rule, logo download.
<i>CiscoDev_Type9851.xml</i>	Per-Type	Contains the 9851 specific configurable parameters that apply to Upgrade rule, logo download.
<i>CiscoDev_System.xml</i>	Per-Type	System-level settings of device type.
<i>CiscoDev-3PCC_Bootstrap.xml</i>	Per-Type	These files are referred to as the default template files. They contain the

		Profile Rule settings for the MPP-3PCC phone models.
%BWMACADDRESS%_CiscoDev.xml	Per-Device	Contains configurable parameters that apply to an individual device in a deployment.

## 4.2 System Level Configuration

This section describes system-wide configuration items that are generally required for each MPP Series to work with Cisco BroadWorks. Subscriber-specific settings are described in the next section.

Step	Command	Description
<b>System Configuration File &lt;CiscoDev-3PCC_Bootstrap.xml&gt;</b>		
Step 1	<p>Set the DNS Settings.</p> <p><b>Web :</b></p> <p><u>System Tab:</u></p> <p>Primary DNS = 8.8.8.8</p> <p>Secondary DNS = 8.8.4.4</p> <p><b>XML :</b></p> <pre>&lt;Primary_DNS ua="rw"&gt;8.8.8.8&lt;/Primary_DNS&gt; &lt;Secondary_DNS ua="rw"&gt;8.8.4.4&lt;/Secondary_DNS&gt;</pre>	Optional: Sets the MPP Series DNS Settings if the Cisco BroadWorks Fully Qualified Domain Name (FQDN) is not resolvable in the public network.
Step 2	<p>Set the Profile Resync Timers.</p> <p><b>Web :</b></p> <p><u>System Tab:</u></p> <p>Resync At Random Delay: 1</p> <p>Resync Periodic: 60 (1 minutes/60 seconds)</p> <p>Resync Error Retry Delay: 300</p> <p>Forced Resync Delay: 600</p> <p><b>XML :</b></p> <pre>&lt;Resync_At_Random_Delay ua="na"&gt;1&lt;/Resync_At_Random_Delay&gt; &lt;Resync_Periodic ua="na"&gt;60&lt;/Resync_Periodic&gt; &lt;Resync_Error_Retry_Delay ua="na"&gt;300&lt;/Resync_Error_Retry_Delay&gt; &lt;Forced_Resync_Delay ua="na"&gt;600&lt;/Forced_Resync_Delay&gt;</pre>	<p>Sets the MPP Series Profile Resync values to a minimum value.</p> <p>This allows for instantaneous loading of the configuration files.</p>

Step	Command	Description
Step 3	<p>Set the Configuration file paths.</p> <p><b>Web :</b></p> <p><u>Prov Tab:</u></p> <p>Profile Rule:</p> <p>http://10.74.121.56:80/dms/CP-7841-3PCC/7841System.xml</p> <p>Profile Rule B:</p> <p>http://10.74.121.56:80/dms/CP-7841-3PCC/\$MA_7841.xml</p> <p>Profile Rule C:</p> <p>http://10.74.121.56:80/dms/CP-7841-3PCC/\$MA_7841_Keys.xml</p> <p><b>XML :</b></p> <pre>&lt;Profile_Rule ua="na"&gt;%ACCESS_PROTOCOL%%BWDEVIC EACCESSFQDN%:%BWDEVICEACCESSPORT% /%BWDMSCONTEXT%/%BWDEVICEACCESSUR I%7841System.xml&lt;/Profile_Rule&gt;  &lt;Profile_Rule_B ua="na"&gt;%ACCESS_PROTOCOL%%BWDEVIC EACCESSFQDN%:%BWDEVICEACCESSPORT% /%BWDMSCONTEXT%/%BWDEVICEACCESSUR I%\$MA_7841.xml&lt;/Profile_Rule_B&gt;  &lt;Profile_Rule_C ua="na"&gt;%ACCESS_PROTOCOL%%BWDEVIC EACCESSFQDN%:%BWDEVICEACCESSPORT% /%BWDMSCONTEXT%/%BWDEVICEACCESSUR I%\$MA_7841_Keys.xml&lt;/Profile_Rule _C&gt;</pre>	Sets the profile rules of the device.
Step 4	<p>Enable the Provisioning Authority/Extension Mobility.</p> <p><b>Web :</b></p> <p><u>Phone Tab:</u></p> <p>EM Enable: Yes</p> <p>Set EM User Domain</p> <p><b>XML :</b></p> <pre>&lt;EM_Enable ua="na"&gt;Yes&lt;/EM_Enable&gt;</pre>	Enables Extension Mobility to facilitate provisioning authority/hot desking.

Step	Command	Description
<b>System Configuration File &lt;CiscoDev_System.xml&gt;</b>		
Step 1	<p>Set the SIP Proxy/Domain.</p> <p><b>Web :</b></p> <p><u>Ext 1 Tab:</u></p> <p>Proxy = as.broadworks.net</p> <p><b>XML :</b></p> <pre>&lt;Proxy_1_ ua="na"&gt;as.broadworks.net&lt;/Proxy_ 1_&gt;</pre> <p>Optional SRST Proxy Config</p> <p><b>Web :</b></p> <p><u>Ext Tab -&gt; Proxy and Registration:</u></p> <p>Alternate Proxy = 192.168.1.1</p> <p>Dual Registration = Yes</p> <p><b>XML Example:</b></p> <pre>&lt;Alternate_Proxy_1_ ua="na"&gt;192.168.1.1&lt;/Alternate_Pr oxy_1_&gt; &lt;Dual_Registration_1_ ua="na"&gt;Yes&lt;/Dual_Registration_1_ &gt;</pre>	<p>Sets the MMP series phone SIP Proxy to the Fully Qualified Domain Name (FQDN) for the Cisco BroadWorks Application Server cluster.</p> <p>The domain must match the domain configured for the Cisco BroadWorks subscriber's line/port domain.</p> <p>For more information, see the <i>Cisco 3PCC IP Phone Administration Guide</i>.</p>
Step 2	<p>Configure the Outbound Proxy/SBC.</p> <p><b>Web :</b></p> <p><u>Voice Tab-&gt;Extension Tab:</u></p> <p>Outbound</p> <p>Proxy=sbciop1.broadworks.net</p> <p>Outbound Proxy=199.19.193.9</p> <p><b>XML :</b></p> <pre>&lt;Outbound_Proxy_1_ ua="na"&gt;%SBC_ADDRESS_1%&lt;/Outbound_ Proxy_1_&gt; &lt;Alternate_Outbound_Proxy_ 1_ ua="na"&gt;%SBC_ADDRESS_2%&lt;/Alternat e_Outbound_Proxy_1_&gt;</pre>	<p>Sets the Outbound Proxy/SBC if one is used between Cisco BroadWorks and Cisco MMP Series.</p> <p>If the SBC is redundant, use an FQDN to represent the SBC cluster within the Outbound Proxy field.</p> <p>Otherwise, enter the Primary SBC for custom tag SBC_ADDRESS_1 and the Secondary SBC for custom tag SBC_ADDRESS_2.</p>
Step 3	<p>Enable the DNS SRV lookup.</p> <p><b>Web :</b></p> <p><u>Ext 1 Tab:</u></p> <p>Use DNS SRV = "Yes"</p> <p><b>XML :</b></p> <pre>&lt;Use_DNS_SRV_1_ ua="na"&gt;Yes&lt;/Use_DNS_SRV_1_&gt;</pre>	<p>Enable the DNS SRV lookup when deploying redundant SBC/Cisco BroadWorks Application Servers.</p>

Step	Command	Description
Step 4	<p>Set SIP Timers.</p> <p><b>Web Example:</b></p> <p><u>SIP Tab:</u></p> <pre>SIP T1           ".5" ; SIP T2           "4" ; INVITE Expires   "240" ; ReINVITE Expires "30" ; Reg_Retry_Intvl  "30" ; Reg_Retry_Long_Intvl "600" ;</pre> <p><b>XML Example:</b></p> <pre>&lt;SIP_T1 ua="na"&gt;.5&lt;/SIP_T1&gt; &lt;SIP_T2 ua="na"&gt;4&lt;/SIP_T2&gt; &lt;INVITE_Expires ua="na"&gt;240&lt;/INVITE_Expires&gt; &lt;ReINVITE_Expires ua="na"&gt;30&lt;/ReINVITE_Expires&gt; &lt;Reg_Retry_Intvl ua="na"&gt;30&lt;/Reg_Retry_Intvl&gt;     &lt;Reg_Retry_Long_Intvl ua="na"&gt;600&lt;/Reg_Retry_Long_Intvl &gt;</pre>	<p>The SIP Timers should be set to levels short enough to support a timely failover when there is no server response.</p> <p>The suggested registration period (Reg Max Expires) is one day or 86400 seconds.</p> <p>The Reg Retry Long Intvl timer should be set to "600" (10 minutes) to limit the frequency of Register retries after a 403 Forbidden response.</p>
Step 5	<p>Enable reliable response.</p> <p><b>Web:</b></p> <p><u>Ext N Tab:</u></p> <p>SIP 100REL Enable = "Yes"</p> <p><b>XML:</b></p> <pre>&lt;SIP_100REL_Enable_1_ ua="na"&gt;Yes&lt;/SIP_100REL_Enable_1_ &gt;</pre>	<p>Reliable provisional response (PRACK) should be enabled.</p>
Step 6	<p>Enable negotiated DTMF type.</p> <p><b>Web:</b></p> <p><u>Ext 1 Tab:</u></p> <p>DTMF Tx Method = "Auto"</p> <p><b>XML:</b></p> <pre>&lt;DTMF_Tx_Method_1_ ua="na"&gt;Auto&lt;/DTMF_Tx_Method_N_&gt;</pre> <p><b>XML Example:</b></p> <pre>&lt;DTMF_Tx_Method_1_ ua="na"&gt;Auto&lt;/DTMF_Tx_Method_1_&gt;</pre>	<p>Set <i>Auto</i> to enable inband or RFC 2833 negotiated DTMF.</p>
Step 7	<p>Set the hold implementation type.</p> <p><b>Web:</b></p> <p><u>SIP Tab:</u></p> <p>RFC 2543 Call Hold = no</p> <p><b>XML:</b></p> <pre>&lt;RFC_2543_Call_Hold ua="na"&gt;No&lt;/RFC_2543_Call_Hold&gt;</pre>	<p>It is recommended to set the hold implementation to "RFC 3264".</p>

Step	Command	Description
Step 8	<p>Configure dial plan.</p> <p><b>Web :</b></p> <p><u>Ext 1 Tab:</u></p> <pre>Dial_Plan = ( [2346789]11S0   [0-1][2-9]11S0   0   00S0   01[2-9]xx.   [*#]xx[*#]   *xx.   *xxxxxxS0   *xxxxxxxxxxxx   [2-9]#   011x.   [0-1]xxxxxxxx   [0-1][2-9]xxxxxxxxS0   [2-9]xxxxxxxxS0   [2- 9]xxxxxx   101xxxx.   11S0   [2-9]x. )</pre> <p><b>XML :</b></p> <pre>&lt;Dial_Plan_1_ ua="na"&gt; ( [2346789]11S0   [0- 1][2-9]11S0   0   00S0   01[2-9]xx.   [*#]xx[*#]   *xx.   *xxxxxxS0   *xxxxxxxxxxxx   [2-9]#   011x.   [0-1]xxxxxxxx   [0-1][2- 9]xxxxxxxxS0   [2-9]xxxxxxxxS0   [2- 9]xxxxxx   101xxxx.   11S0   [2-9]x. ) &lt;/Dial_Plan_1_&gt;</pre>	Configures the MPP Series dial plan according to the locale. The dial plan shown is an example of a typical North American dial plan.
Step 9	<p>Enable supplementary services.</p> <p><b>Web :</b></p> <p>Phone Tab:</p> <p>Conference Serv = "yes"</p> <p>Attn Transfer Serv = "yes"</p> <p>Blind Transfer Serv = "yes"</p> <p><b>XML :</b></p> <pre>&lt;Conference_Serv ua="na"&gt;Yes&lt;/Conference_Serv&gt; &lt;Attn_Transfer_Serv ua="na"&gt;Yes&lt;/Attn_Transfer_Serv&gt; &lt;Blind_Transfer_Serv ua="na"&gt;Yes&lt;/Blind_Transfer_Serv&gt;</pre>	Enables Conference, Attended Transfer, and Blind Transfer services.
Step 10	<p>Enable reliable redundancy.</p> <p><b>Web :</b></p> <p><u>Ext 1 Tab:</u></p> <pre>Proxy Fallback Intvl = 1800</pre> <p><b>XML :</b></p> <pre>&lt;Proxy_Fallback_Intvl_1_ ua="na"&gt;1800&lt;/Proxy_Fallback_Intv l_1_&gt;</pre>	Setting forces fallback of redundant registration, overriding any value received from Cisco BroadWorks Application Server.
Step 11	<p>Schedule Profile Rule Resynchronize Time.</p> <p><b>Web :</b></p> <p>Provisioning Tab-&gt;"Configuration Profile Section"</p> <p>Field: "Resync At (HHmm):"</p> <p><b>XML Example:</b></p> <pre>&lt;Resync_At__HHmm_ ua="na"&gt;0200&lt;/Resync_At__HHmm_&gt;</pre>	The value is in 24-hour format.

Step	Command	Description
Step 12	<p>Configure the Calls Appearances/Line.</p> <p><b>Web Example:</b></p> <p>Phone Tab-&gt;Miscellaneous Line Key Settings-&gt;Call Appearance Per Line: 3</p> <p><b>XML Example:</b></p> <pre>&lt;Call_Appearances_Per_Line group="Phone/Miscellaneous_Line_Key_Settings"&gt;10&lt;/Call_Appearance_Per_Line&gt; &lt;!-- options: 2-10 --&gt;</pre>	Appearances/Line value can be set to any value between 2 and 10.
Step 13	<p>Configure NAT Support.</p> <pre>&lt;!-- NAT Support Parameters --&gt; &lt;Handle_VIA_received ua="na"&gt;Yes&lt;/Handle_VIA_received&gt; &lt;Handle_VIA_rport ua="na"&gt;No&lt;/Handle_VIA_rport&gt; &lt;Insert_VIA_received ua="na"&gt;Yes&lt;/Insert_VIA_received&gt; &lt;Insert_VIA_rport ua="na"&gt;No&lt;/Insert_VIA_rport&gt; &lt;Substitute_VIA_Addr ua="na"&gt;Yes&lt;/Substitute_VIA_Addr&gt; &lt;Send_Resp_To_Src_Port ua="na"&gt;Yes&lt;/Send_Resp_To_Src_Port&gt; &lt;STUN_Enable ua="na"&gt;Yes&lt;/STUN_Enable&gt; &lt;STUN_Test_Enable ua="na"&gt;No&lt;/STUN_Test_Enable&gt; &lt;STUN_Server ua="na"&gt;%STUN_SERVER%&lt;/STUN_Server&gt; &lt;EXT_IP ua="na"/&gt; &lt;EXT_RTP_Port_Min ua="na"&gt;0&lt;/EXT_RTP_Port_Min&gt; &lt;NAT_Keep_Alive_Intvl ua="na"&gt;15&lt;/NAT_Keep_Alive_Intvl&gt;</pre>	<p>Optional:</p> <p>The MPP Series device can be enabled with STUN support for deployments where the device is within a NAT environment and no SBC/SIP ALG is desired or available.</p>
Step 14	<p>Configure for Solicited VM.</p> <p><b>Web:</b></p> <p><i>Example:</i></p> <p><u>Ext 1 Tab</u></p> <p>"Call Feature Settings"</p> <p>Voice Mail Server = <a href="mailto:1111@as.mycompany.com">1111@as.mycompany.com</a></p> <p>Voice Mail Subscribe Interval = "3600"</p> <p><b>XML:</b></p> <p><i>Example:</i></p> <pre>&lt;Voice_Mail_Server_1_ ua="na"&gt;&lt;/Voice_Mail_Server_1_&gt; &lt;Voice_Mail_Subscribe_Interval_1_ ua="na"&gt;3600&lt;/Voice_Mail_Subscribe_Interval_1_&gt;</pre>	Optional: This setting within the Subscriber level configuration allows for Solicited Voicemail Updates.



## 4.3 Subscriber Level Configuration

This section identifies the device-specific parameters, including registration and authentication. These settings must be unique across devices to be matched with the settings for a Cisco BroadWorks SIP trunk or subscriber. SIP Registration requires that a unique address of record (AoR) be provisioned on Cisco BroadWorks and the device.

Step	Command	Description
<b>Configuration File &lt;mac-address&gt;.xml</b>		
Step 1	<p>Enable phone lines.</p> <p><b>Web :</b></p> <p><u>Ext 1 Tab</u></p> <p>Line Enable = "Yes"</p> <p><b>XML :</b></p> <p>Example:</p> <pre>&lt;Line_Enable_1_ ua="na"&gt;Yes &lt;/Line_Enable_1_&gt;</pre>	Enables each line on the Cisco IP Phones in use.
Step 2	<p>Configure SIP UA credentials.</p> <p><b>Web :</b></p> <p><u>Voice-&gt;Extension</u></p> <p>Proxy: as.mycompany.com</p> <p>UserID: 1111</p> <p><b>XML :</b></p> <pre>&lt;Proxy_1_ ua="na"&gt;as.mycompany.com&lt;/Proxy_1_&gt; &lt;User_ID_1_ ua="na"&gt;1111&lt;/User_ID_1_&gt;</pre>	Configures the Extension UserID and Proxy values to match the Cisco BroadWorks Application Server line/port setting.
Step 3	<p>Enable SIP Authentication for each line.</p> <p><b>Web :</b></p> <p>Example:</p> <p><u>Ext 1 Tab</u></p> <p>Auth_ID = "1111@as.mycompany.com"</p> <p>Password = "welcome"</p> <p><b>XML :</b></p> <p><u>Ext1/Line1</u></p> <pre>&lt;Auth_ID_1_ ua="na"&gt;1111@as.mycompany.com&lt;/Auth_ID_1_&gt; &lt;Password_1_ ua="na"&gt;welcome &lt;/Password_1_&gt;</pre>	If the Authentication service is configured on Cisco BroadWorks, these parameters must be configured to match the Cisco BroadWorks settings.
Step 4	<p>Configure display name for each line.</p> <p><b>Web :</b></p> <p><u>Ext 1 Tab</u></p> <p>Display_Name = "Claire Smith"</p> <p><b>XML :</b></p> <p><u>Ext1/Line1</u></p> <pre>&lt;Display_Name_1_ ua="na"&gt;Claire Smith&lt;/Display_Name_1_&gt;</pre>	For each line, configure the name to be displayed on the device.

Step	Command	Description
Step 5	<p>Configure for N-Way Calling.</p> <p><b>Web :</b></p> <p>Example:</p> <p><u>Ext 1 Tab</u></p> <p>Conference Bridge URL = <a href="mailto:conference@broadworks.net">conference@broadworks.net</a></p> <p><b>XML :</b></p> <pre>&lt;Conference_Bridge_URL_1_ua="na"&gt;conference@broadworks.net&lt;/Conference_Bridge_URL_1_&gt;</pre>	This setting within the Subscriber level configuration allows for network-based conference calls instead of device-based conference.
Step 6	<p><b>Configure for Solicited VM.</b></p> <p><b>Web:</b></p> <p>Example:</p> <p><u>Ext 1 Tab</u></p> <p>"Call Feature Settings"</p> <p>Voice Mail Server = <a href="mailto:1111@as.mycompany.com">1111@as.mycompany.com</a></p> <p>Voice Mail Subscribe Interval = "3600"</p> <p><b>XML :</b></p> <p>Example:</p> <pre>&lt;Voice_Mail_Server_1_ua="na"&gt;&lt;/Voice_Mail_Server_1_&gt; &lt;Voice_Mail_Subscribe_Interval_1_ua="na"&gt;3600&lt;/Voice_Mail_Subscribe_Interval_1_&gt;</pre>	Optional: This setting within the Subscriber level configuration allows for Solicited Voicemail Updates.
Step 7	<p>Configure PTT/Intercom Extensions.</p> <p><b>Web :</b></p> <p>Ext Tab-&gt;Call Feature Settings</p> <p>Auto Ans Page On Active Call: no</p> <p><b>XML :</b></p> <pre>&lt;Auto_Ans_Page_On_Active_Call_N_ua="na"&gt;Yes&lt;/Auto_Ans_Page_On_Active_Call_N_&gt;</pre> <p>Example :</p> <pre>&lt;Auto_Ans_Page_On_Active_Call_1_ua="na"&gt;Yes&lt;/Auto_Ans_Page_On_Active_Call_1_&gt;</pre>	<p>Optional: Applicable to Extension/Lines configured with the BroadWorks PTT feature with Auto Answer = yes.</p> <p>Subsequent call attempts to that extension will be treated as a call waiting scenario.</p> <p>Note that the N=1-16 depends on the phone's supported number of lines.</p>

## 4.4 SIP Advanced Feature Configuration

This section provides configuration instructions for advanced SIP features supported by the phone including but not limited to Shared Call Appearance, Busy Lamp Field, Feature Key Synchronization, Call Center, Emergency Call, Advice of Charge, Call Recording, and Security Classification.

### 4.4.1 Shared Call Appearance Configuration

The Shared Call Appearance (SCA) feature allows the administrator to add multiple locations to a given line. Any of the locations can be used to originate or receive calls.

When a call comes into an idle line, all the provisioned locations for that line are alerted. The first location to answer the call is connected to the originator. If the line is already active in a call, only the active location is alerted.

A subscriber can originate calls from any of the configured locations. All other locations are unable to originate calls until all calls are released.

It is recommended to use the phone number plus an index (<phoneNumber>\_<index>) when provisioning the unique AoR for each shared line, for example: 2405551111\_2. If a phone number does not exist, use the Media Access Control (MAC) address plus an index (<macAddress>\_<index>).

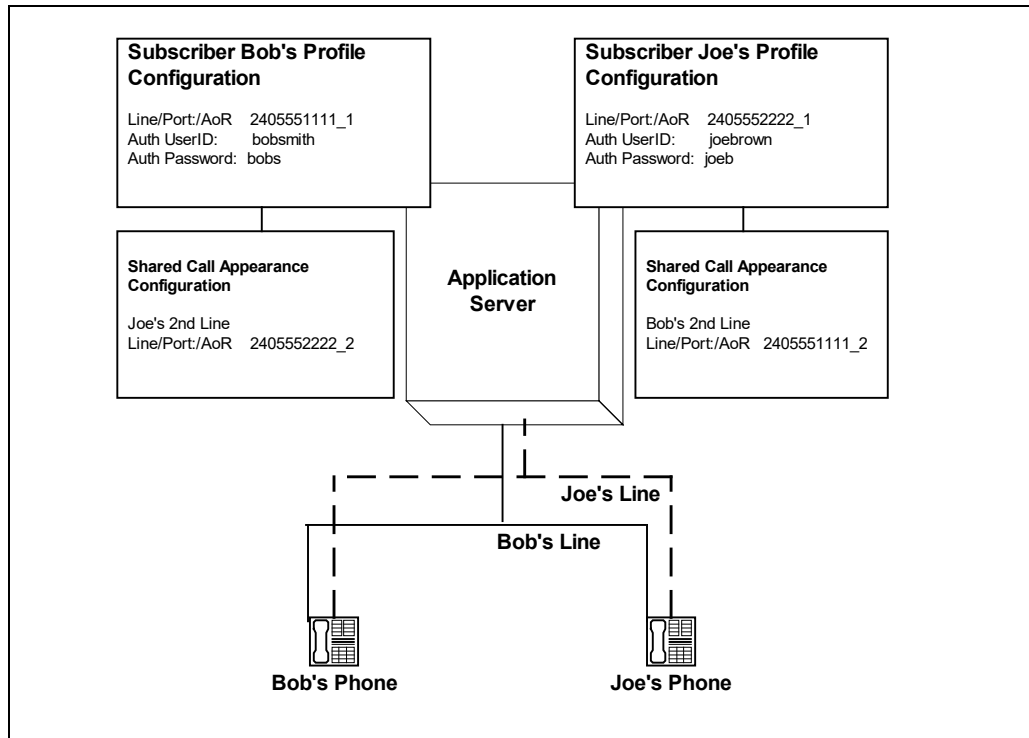


Figure 2 Shared Call Appearance Configuration

Figure 2 shows that Bob and Joe each have two lines and that Bob shares a line with Joe and Joe shares a line with Bob. The figure also shows the applicable Subscriber Profile and Shared Call Appearance configuration data for subscribers Bob and Joe.

When Bob (2405551111) is called, Bob's first line and Joe's second line ring. When Joe (2405552222) is called, Joe's first line and Bob's second line ring.

The following steps show how to configure both phones for this Shared Call Appearance configuration.


#### 4.4.1.1 Bob's Phone Configuration – <mac-address\_CiscoDev.xml>

The following steps are used to configure line 1 for Bob's phone. This line rings when Bob is called, and it has Bob's authentication information.

Step	Command	Purpose
<b>Configuration File &lt;mac-address&gt;_CiscoDev.xml</b>		
Step 1	<p>Configure line 1 as shared.</p> <p><b>Web :</b></p> <p>Example:</p> <p>Phone Tab:</p> <p>"Line Key 1"</p> <p>Share Call Appearance = "shared"</p> <p>Ext 1:</p> <p>"Share Line Appearance"</p> <p>Share Ext = "Yes"</p> <p><b>XML :</b></p> <p>Example:</p> <pre>&lt;Share_Call_Appearance_1_ua="na"&gt;shared&lt;/Share_Call_Appearance_1_&gt; &lt;Share_Ext_1_ua="na"&gt;Yes Share_Ext_1_&gt;</pre>	Configures the line as "shared" (as opposed to "private").
Step 2	<p>Set Register User ID.</p> <p><b>Web :</b></p> <p>Example:</p> <p>Ext 1 Tab:</p> <p>User ID = "2405551111_1"</p> <p><b>XML :</b></p> <p>Example:</p> <pre>&lt;User_ID_1_ua="na"&gt;2405551111_1 &lt;/User_ID_1_&gt;</pre>	The register user ID must correspond with the line/port setting on Cisco BroadWorks.
Step 3	<p>Enable SIP Authentication.</p> <p><b>Web :</b></p> <p>Example:</p> <p>Ext 1 Tab:</p> <p>Auth_ID = "bobsmith"</p> <p>Password = "bobs"</p> <p><b>XML :</b></p> <p>Example:</p> <pre>&lt; Auth_ID_1_ua="na"&gt;bobsmith &lt;/ Auth_ID_1_&gt; &lt;Password_1_ua="na"&gt;bobs &lt;/Password_1_&gt;</pre>	<p>If the Authentication service is configured on Cisco BroadWorks, these parameters must be configured to match the Cisco BroadWorks settings.</p> <p>This line rings when Bob is called, and it has Bob's authentication information.</p>
Step 4	<p>Configure display name.</p> <p><b>Web :</b></p> <p>Example:</p> <p>Ext 1 Tab:</p> <p>Display Name = "Bob Smith"</p> <p><b>XML :</b></p> <p>Example:</p> <pre>&lt;Display_Name_1_ua="na"&gt;Bob Smith &lt;/Display_Name_1_&gt;</pre>	Configure the name to be displayed on the device for this line.

Step	Command	Purpose
<b>Configuration File &lt;mac-address&gt;_CiscoDev.xml</b>		
Step 5	<p>Enable Call Park.</p> <p><b>Web :</b></p> <p>Example:</p> <p><u>Phone Tab:</u></p> <p>Extension 2: Disabled</p> <p>Extended Function 2:</p> <pre>fnc=prk;sub=4085282222a@\$PROXY;nm e=Park;orbit=4085282222</pre> <p><b>XML :</b></p> <p>Example:</p> <pre>Extension_2_&gt;Disabled&lt;/Extension_ 3&gt; Extended_Function_2_&gt; fnc=prk;sub=4085282222a@\$PROXY;nm e=Park;orbit=4085282222&lt;/Extended _Function_2_&gt;</pre>	Optional: Enable Call Park via unused Programmable Line Key.

On the phone, validate the data so the values match. Go to *Voice* → *Phone Tab* → *Line Key2*.

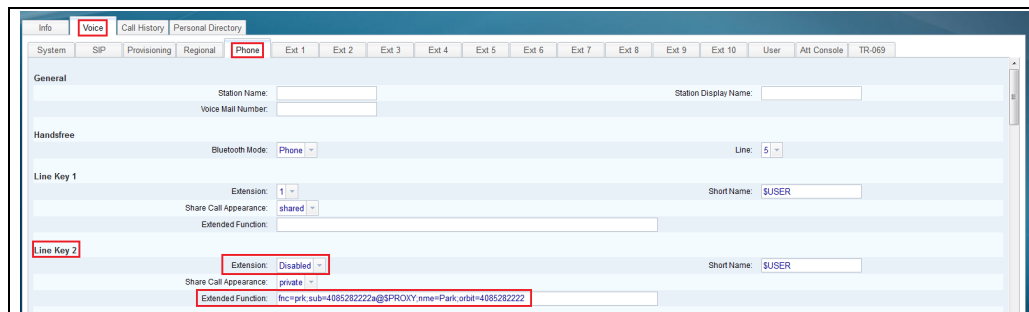

The screenshot shows the CUCM Phone Configuration page. The 'Voice' tab is selected, and the 'Phone' sub-tab is active. The 'Line Key 2' section is highlighted with a red box. The 'Extension' dropdown is set to 'Disabled', and the 'Extended Function' field contains the XML configuration: 'fnc=prk;sub=4085282222a@\$PROXY;nm=Park;orbit=4085282222'.

Figure 3 Shared Line Park

The following steps are used to configure line 2 for Bob's phone. This line rings when Joe is called, and it has Joe's authentication information.

Step	Command	Purpose
Step 1	<p>Configure line 2 as shared.</p> <p><b>Web :</b></p> <p>Example:</p> <p><u>Phone Tab:</u></p> <p>"Line Key 2"</p> <p>Share Call Appearance = "shared"</p> <p><u>Ext 2:</u></p> <p>"Share Line Appearance"</p> <p>Share Ext = "Yes"</p> <p><b>XML :</b></p> <p>Example:</p> <pre>&lt;Share_Call_Appearance_2_ua="na"&gt;shared&lt;/Share_Call_Appearance_2_&gt; &lt;Share_Ext_2_ua="na"&gt;Yes Share_Ext_2_&gt;</pre>	Configures the line as "shared" (as opposed to "private").
Step 2	<p>Set Register User ID.</p> <p><b>Web :</b></p> <p>Example:</p> <p><u>Ext 2 Tab:</u></p> <p>User ID = "2405551111_2"</p> <p><b>XML :</b></p> <p>Example:</p> <pre>&lt;User_ID_2_ua="na"&gt;2405551111_2 &lt;/User_ID_2_&gt;</pre>	The register user ID must correspond with the line/port setting on Cisco BroadWorks.
Step 3	<p>Enable SIP Authentication.</p> <p><b>Web :</b></p> <p>Example:</p> <p><u>Ext 1 Tab:</u></p> <p>Auth_ID = "joebrown"</p> <p>Password = "joeb"</p> <p><b>XML :</b></p> <p>Example:</p> <pre>&lt;Auth_ID_1_ua="na"&gt;joebrown &lt;/Auth_ID_1_&gt; &lt;Password_1_ua="na"&gt;joeb &lt;/Password_1_&gt;</pre>	<p>If the Authentication service is configured on Cisco BroadWorks, these parameters must be configured to match the Cisco BroadWorks settings.</p> <p>This line rings when Joe is called, and it has Joe's authentication information.</p>
Step 4	<p>Configure display name.</p> <p><b>Web :</b></p> <p>Example:</p> <p><u>Ext 1 Tab:</u></p> <p>Display Name = "Joe Brown"</p> <p><b>XML :</b></p> <p>Example:</p> <pre>&lt;Display_Name_1_ua="na"&gt;Joe Brown&lt;/Display_Name_1_&gt;</pre>	Configures the name to be displayed on the device for this line.

Step	Command	Purpose
Step 5	<p>Enable Call Park.</p> <p><b>Web :</b></p> <p>Example:</p> <p><u>Phone Tab:</u></p> <p>Extension 2: Disabled</p> <p>Extended Function 2:</p> <p>fnc=prk;sub=4085282222b@\$PROXY;nm e=Park;orbit=4085282222</p> <p><b>XML :</b></p> <p>Example:</p> <p>Extension_2_&gt;Disabled&lt;/Extension_2_&gt;</p> <p>Extended_Function_2_&gt; fnc=prk;sub=4085282222b@\$PROXY;nm e=Park;orbit=4085282222 &lt;/Extended_Function_2_&gt;</p>	Optional: Enables Call Park via unused Programmable Line Key (PLK).

#### 4.4.1.2 Joe's Phone Configuration – <mac-address\_CiscoDev.xml>

The following steps are used to configure line 1 for Joe's phone. This line rings when Joe is called, and it has Joe's authentication information.

Step	Command	Purpose
Step 1	<p>Configure line as shared.</p> <p><b>Web :</b></p> <p>Example:</p> <p><u>Phone Tab:</u></p> <p>"Line Key 1"</p> <p>Share Call Appearance = "shared"</p> <p><u>Ext 1:</u></p> <p>"Share Line Appearance"</p> <p>Share Ext = "Yes"</p> <p><b>XML :</b></p> <p>Example:</p> <p>&lt;Share_Call_Appearance_1_ua="na"&gt;shared&lt;/Share_Call_Appearance_1_&gt;</p> <p>&lt;Share_Ext_1_ua="na"&gt;Yes Share_Ext_1_&gt;</p>	Configures the line as "shared" (as opposed to "private").
Step 2	<p>Set Register User ID.</p> <p><b>Web :</b></p> <p>Example:</p> <p><u>Ext 1 Tab:</u></p> <p>User ID = "2405552222_1"</p> <p><b>XML :</b></p> <p>Example:</p> <p>&lt;User_ID_1_ua="na"&gt;2405552222_1&lt;/User_ID_1_&gt;</p>	The register user ID must correspond with the line/port setting on Cisco BroadWorks.

Step	Command	Purpose
Step 3	<p>Enable SIP Authentication.</p> <p><b>Web :</b></p> <p>Example:</p> <p><u>Ext 1 Tab:</u></p> <p>Auth_ID = "joebrown"</p> <p>Password = "joeb"</p> <p><b>XML :</b></p> <p>Example:</p> <pre>&lt;Auth_ID_1_ ua="na"&gt;joebrown &lt;/Auth_ID_1_&gt; &lt;Password_1_ ua="na"&gt;joeb &lt;/Password_1_&gt;</pre>	<p>If the Authentication service is configured on Cisco BroadWorks, these parameters must be configured to match the Cisco BroadWorks settings.</p> <p>This line rings when Joe is called, and it has Joe's authentication information.</p>
Step 4	<p>Configure display name.</p> <p><b>Web :</b></p> <p>Example:</p> <p><u>Ext 1 Tab:</u></p> <p>Display Name = "Joe Brown"</p> <p><b>XML :</b></p> <p>Example:</p> <pre>&lt;Display_Name_1_ ua="na"&gt;Joe Brown&lt;/Display_Name_1_&gt;</pre>	<p>Configure the name to be displayed on the device for this line.</p>

The following steps are used to configure line 2 for Joe's phone. This line rings when Bob is called, and it has Bob's authentication information.

Step	Command	Purpose
Step 1	<p>Configure line as shared.</p> <p><b>Web :</b></p> <p>Example:</p> <p><u>Phone Tab:</u></p> <p>"Line Key 2"</p> <p>Share Call Appearance = "shared"</p> <p><u>Ext 2:</u></p> <p>"Share Line Appearance"</p> <p>Share Ext = "Yes"</p> <p><b>XML :</b></p> <p>Example:</p> <pre>&lt;Share_Call_Appearance_2_ ua="na"&gt;shared&lt;/Share_Call_Appear ance 2 &gt; &lt;Share_Ext_2_ ua="na"&gt;Yes Share_Ext_2_&gt;</pre>	<p>Configure the line as "shared" (as opposed to "private").</p>
Step 2	<p>Set Register User ID.</p> <p><b>Web :</b></p> <p>Example:</p> <p><u>Ext 2 Tab:</u></p> <p>User ID = "2405552222_2"</p> <p><b>XML :</b></p> <p>Example:</p> <pre>&lt;User ID 2 ua="na"&gt;2405552222_2&lt;/User_ID_2_&gt;</pre>	<p>The register user ID must correspond with the line/port setting on Cisco BroadWorks.</p>



Step	Command	Purpose
Step 3	<p>Enable SIP Authentication.</p> <p><b>Web :</b></p> <p>Example:</p> <p><u>Ext 2 Tab:</u></p> <p>Auth_ID = "bobsmith"</p> <p>Password = "bobs"</p> <p><b>XML :</b></p> <p>Example:</p> <pre>&lt;Auth_ID_2_ ua="na"&gt;bobsmith &lt;/Auth_ID_2_&gt; &lt;Password_2_ ua="na"&gt;bobs &lt;/Password_2_&gt;</pre>	<p>If the Authentication service is configured on Cisco BroadWorks, these parameters must be configured to match the Cisco BroadWorks settings.</p> <p>This line rings when Bob is called, and it has Bob's authentication information.</p>
Step 4	<p>Configure display name.</p> <p><b>Web :</b></p> <p>Example:</p> <p><u>Ext 2 Tab:</u></p> <p>Display Name = "Bob Smith"</p> <p><b>XML :</b></p> <p>Example:</p> <pre>&lt;Display_Name_2_ ua="na"&gt;Bob Smith &lt;/Display_Name_2_&gt;</pre>	<p>Configures the name to be displayed on the device for this line.</p>

#### 4.4.2 Hybrid Key System Configuration

Hybrid Key System emulation requires the phone to support assignment of multiple line keys to a single registering line on the phone. It also requires the phone to limit each line key to a single call appearance or provide the configurability to roll a new call over to the next free line key. Any of the locations can be used to originate or receive calls.

From the Shared Call Appearance configuration web page, select Add to add a second appearance.

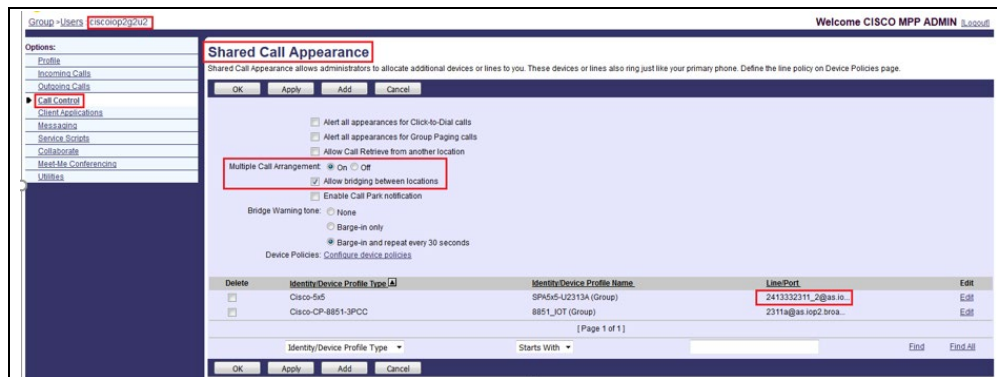


Figure 4 Shared Call Appearance (Multiple Call Arrangement)

## Enable Hybrid Key System on phone.

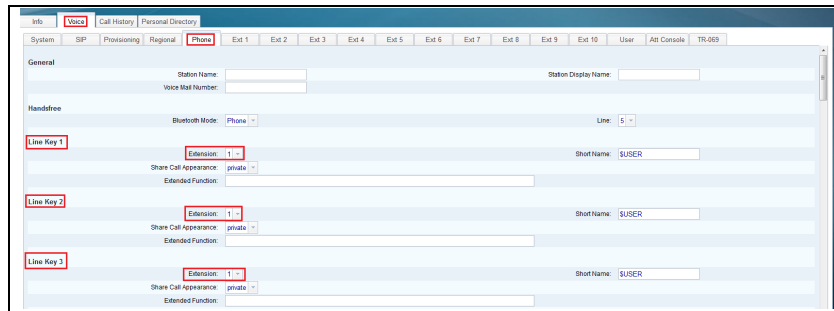


Figure 5 Line Key Mapping

## Enable Line ID mapping (Vertical/Horizontal) on phone.




Figure 6 Line ID Mapping

Step	Command	Purpose
<b>System Configuration File &lt;mac-address_CiscoDev&gt;.xml</b>		
Step 1	<p>Configure the phone to enable line keys and associate them with the registering line.</p> <p>1) Web Portal -&gt; Phone Tab</p> <p>Line Key 1:</p> <p>Extension: 1</p> <p>Share Call Appearance: Shared</p> <p>Line Key 2:</p> <p>Extension: 1</p> <p>Share Call Appearance: Shared</p> <p>2) XML</p> <pre>&lt;Extension_1_ ua="na"&gt;%PLK-1%&lt;/Extension_1_&gt; &lt;Share_Call_Appearance_1_ ua="na"&gt;%BWSHAREDLINE-1%&lt;/Share_Call_Appearance_1_&gt;  &lt;Extension_2_ ua="na"&gt;%PLK-2%&lt;/Extension_2_&gt; &lt;Share_Call_Appearance_2_ ua="na"&gt;%BWSHAREDLINE-2%&lt;/Share_Call_Appearance_2_&gt;</pre> <p><b>Example:</b></p>	Hybrid Key System maps the registered line to the other available lines on the phone.

Step	Command	Purpose
<b>System Configuration File &lt;mac-address_CiscoDev&gt;.xml</b>		
	<pre> &lt;Extension_1_ ua="na"&gt;1&lt;/Extension_1_&gt;  &lt;Share_Call_Appearance_1_ ua="na"&gt;shared&lt;/Share_Call_Appea rance_1_&gt;  &lt;Extension_2_ ua="na"&gt;1&lt;/Extension_2_&gt;  &lt;Share_Call_Appearance_2_ ua="na"&gt;shared&lt;/Share_Call_Appea rance_2_&gt; </pre>	
Step 2	<p>Configure phone for Line ID mapping.</p> <p>Web Portal Voice -&gt; Phone Tab</p> <p>Line ID Mapping: Vertical</p>	<p>Phone behavior for incoming calls.</p> <p>Vertical: First incoming call on first line key and second incoming call on second line key.</p> <p>Horizontal: Incoming calls will display on line key 1 until it reaches call appearance.</p>

#### 4.4.3 Busy Lamp Field Configuration

The Busy Lamp Field implementation provides an attendant console function. Configuration of the phone to enable Busy Lamp Field is described in the following table.

Step	Command	Purpose
<b>System Configuration File &lt;mac-address_CiscoDev&gt;.xml</b>		
Step 1	<p>Set the BLF List URI for the primary line.</p> <p><b>Example:</b></p> <p>1) Web Portal -&gt; Att Console Tab</p> <p>BLF List URI: CiscoBLFList@as.iopl.broadworks.net</p> <p>2) XML</p> <pre> &lt;BLF_List_URI ua="na"&gt;%BWBLF- URI-1%&lt;/BLF_List_URI&gt;  &lt;BLF_List_URI ua="na"&gt;CiscoBLFList@as.iopl.broa dworks.net&lt;/BLF_List_URI&gt; </pre>	<p>The BLF List URI must be configured to match the Cisco BroadWorks User settings.</p>

On the Cisco BroadWorks server, configure as follows:

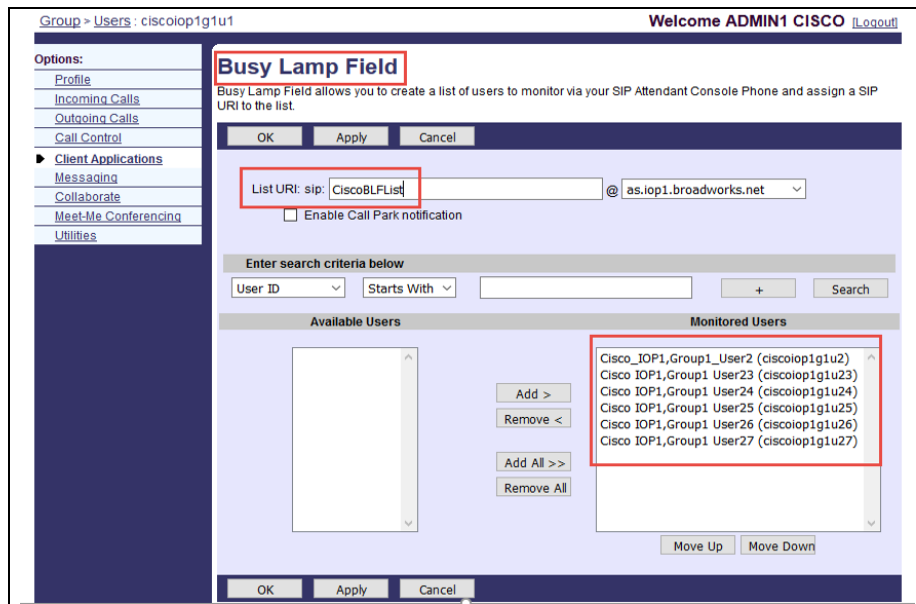


Figure 7 Busy Lamp Field Configuration – Server

Step	Command	Purpose
Step 2	<p>Set the BLF Call Pickup Codes.</p> <p><b>Example:</b></p> <p>1) Web Portal -&gt; Att Console Tab Call Pickup: *97</p> <p>2) XML</p> <pre>&lt;Call_Pickup_Code_ ua="rw"&gt;%BWFAC-CALL-PICKUP- x%&lt;/Call_Pickup_Code_&gt;</pre> <p>Example)</p> <pre>&lt;Call_Pickup_Code_ ua="rw"&gt;*97&lt;/Call_Pickup_Code_&gt;</pre>	<p>The BLF List URI must be configured to match the Cisco BroadWorks User settings.</p>

On the phone, validate that the data values match. Go to *Voice* → *Attendant Console*.

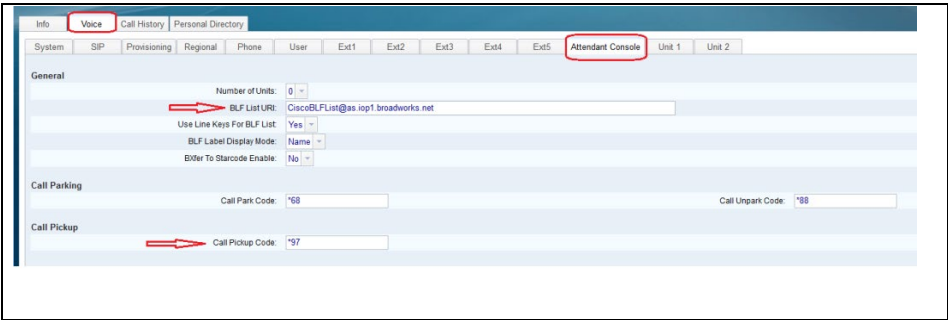


Figure 8 Busy Lamp Field Configuration – Device

#### 4.4.4 Feature Key Synchronization Configuration

The Feature Key Synchronization provides synchronization of phone services, such as Call Forwarding and Do Not Disturb, with the settings on Cisco BroadWorks for the analogous services. Configuration of the phone to enable Feature Key Synchronization is described as shown in the following table.

Step	Command	Description
<b>Configuration File &lt;mac-address_CiscoDev&gt;.xml</b>		
Step 1	<p>Configure Feature Key Sync.</p> <p><b>Web :</b> Example: <u>Ext X:-&gt;Call Feature Settings</u> Feature Key Sync: Yes</p> <p><b>XML :</b> Example: &lt;Feature_Sync_1_ ua="na"&gt;Yes&lt;/Feature_Sync_1_&gt;</p>	Enable each line on the MPP Series in use.

## 4.4.5 Call Center Feature Configuration

**NOTE:** The Cisco Desk Phone 9800 Series does not support this feature.

This section provides configuration instructions to configure the phone to enable integration with Call Center features including but not limited to call information and status.

- 1) Browse to the *Call Centers* configuration page.

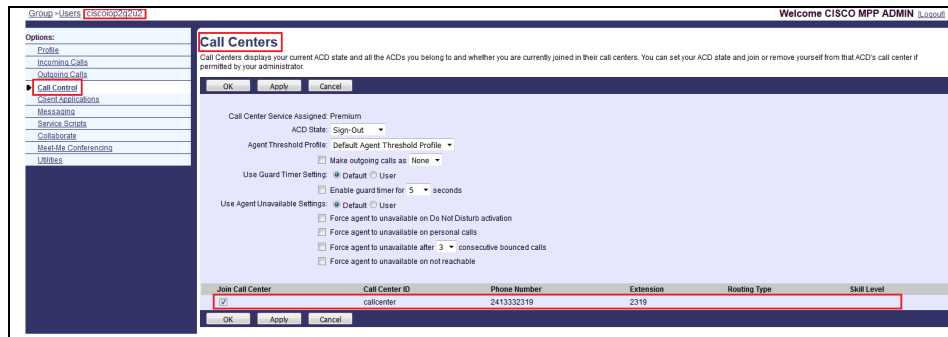


Figure 9 Call Control → Call Center Page

- 2) Enable the Call Center feature on the phone. Then go to *Voice* → *Ext Tab* → *ACD Settings*.

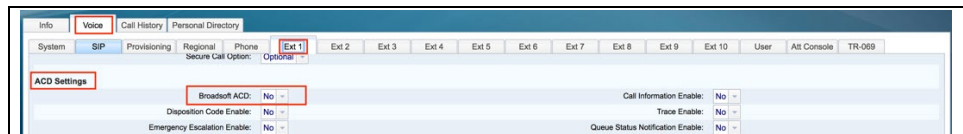
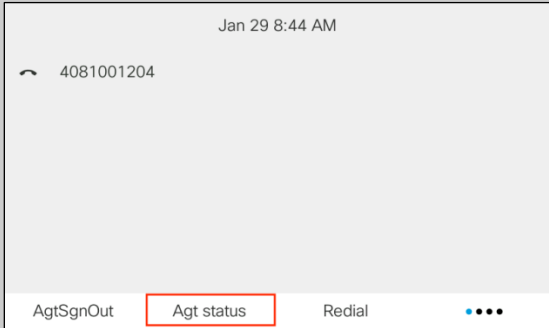
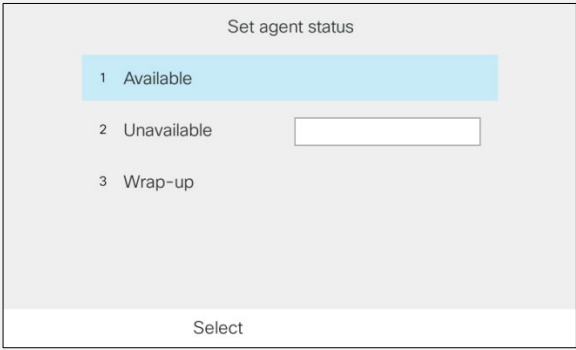
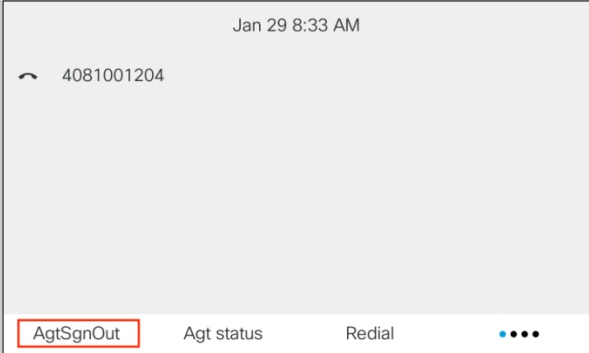


Figure 10 Cisco MPP Series BroadSoft ACD

- 3) To configure the Call Center features, use the list in the following table.

Step	Command	Purpose
Step 1	<p>Agent Sign-in.</p> 	Signing in Agent.

Step	Command	Purpose
Step 2	<p>Set the Agent status after Agent Sign-in.</p> 	Sets the status of Agent after signing in.
Step 3	<p>Set Agent to Available/Unavailable/Wrap-up status.</p> 	Sets the Agent Status to Available or Unavailable or Wrap-up.
Step 4	<p>Agent Sign-out.</p> 	Signs out Agent from phone.

## Configuration of Call Center on phone

Step	Command	Description
<b>Configuration File &lt;mac-address_CiscoDev&gt;.xml</b>		
Step 1	<p>Enable BroadSoft ACD on phone.</p> <p><b>Web:</b>  <b>Example:</b>            Voice -&gt; Ext Tab -&gt; ACD            Settings</p> <p>BroadSoft ACD: Yes</p> <p><b>XML:</b>            &lt;Broadsoft_ACD_1_            ua="na"&gt;%BROADSOFT_ACD_ENABLE-            1%&lt;/Broadsoft_ACD_1_&gt;</p> <p><b>Example:</b>            &lt;Broadsoft_ACD_1_            ua="na"&gt;Yes&lt;/Broadsoft_ACD_1_&gt;</p>	<p>Enables BroadSoft_ACD on the phone.            LCD shows the Agent Sign-in softkey.</p>



#### 4.4.5.1 ACD Status Synchronization

This section provides information on how to enable a phone to restore the ACD status to the last value that is used before the reboot of the phone.

To configure the ACD Status Sync from the web user interface, see the following figure.

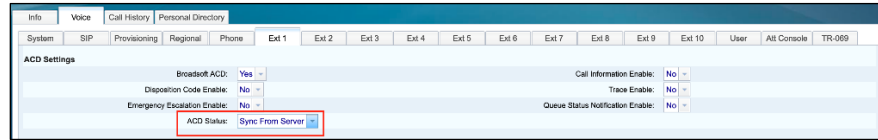


Figure 11 ACD Status on Web User Interface

Step	Command	Purpose
<b>System Configuration File _&lt;CiscoDev_System.xml&gt;</b>		
Step 1	<b>Web Portal:</b> Voice → Ext(n) → ACD Settings. BroadSoft ACD: No <b>XML:</b> <pre>&lt;Broadsoft_ACD_n_ua="na"&gt;%BROADSOFT_ACD_ENABLE-n%&lt;/Broadsoft_ACD_n_&gt;</pre> Where n=1-16 <b>Note:</b> %BROADSOFT_ACD_ENABLE-n% has two options, Yes No <b>Example:</b> <pre>&lt;Broadsoft_ACD_1_ua="na"&gt;No&lt;/Broadsoft_ACD_1_&gt;</pre>	Enables BroadSoft ACD on the phone. Options: Yes No Default value: No
Step 2	<b>Web Portal:</b> Voice → Ext(n) → ACD Settings. ACD Status: Sync From Local <b>XML:</b> <pre>&lt;ACD_Status_n_ua="na"&gt;%ACD_STATUS n%&lt;/ACD_Status n_&gt;</pre> Where n=1-16 <b>Note:</b> %ACD_STATUS_n% has two options: Sync From Server   Sync From Local <b>Example:</b> <pre>&lt;ACD_Status_1_ua="na"&gt;Sync From Local&lt;/ACD_Status_1_&gt;</pre>	Allows the phone to use the last local value as the ACD status. Options: Sync From Server/Sync From Local <b>Sync From Server:</b> Enables to get ACD initial status from the server. <b>Sync From Local:</b> Restores the last local status as ACD status when the phone boots up, status is changed to "Registered" from "Unregistered" or "Registration failed", or registration destination IP address is changed due to failover, fallback or DNS response is changed. Default value: Sync From Server

To use the feature:

- 1) On the web user interface, go to *Voice* → *Ext(n)* → *ACD Settings* and set BroadSoft ACD to "Yes" and ACD Status to "Sync From Local".
- 2) Make sure the current status of the phone is "Available".

The following figure shows the current status of the phone when available.

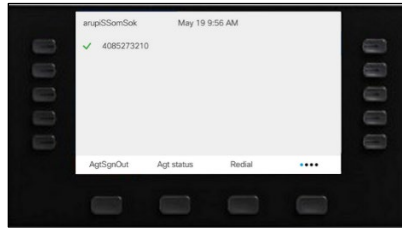


Figure 12 Phone ACD Status Available

- 3) Power down the phone.
- 4) On the Cisco BroadWorks server, browse to the *Call Centers* configuration page as follows and set *Call Centers ACD State* to “Unavailable”.

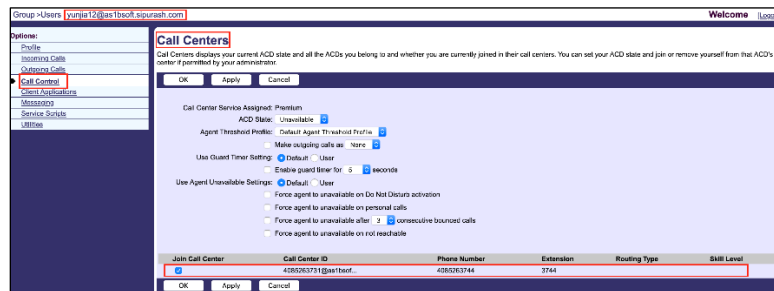


Figure 13 ACD Status to Unavailable

- 5) Power up the phone.
- The phone uses the last local status as the ACD initial value.

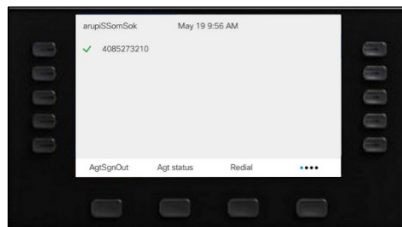


Figure 14 ACD Status (Last Local Status)

#### 4.4.5.2 ACD Status Set Automatically to Available

This section provides information on how to automatically set the ACD status to “Available” after the phone signs in.

To configure the ACD status and set to “Available” from the web user interface, see the following figure.



Figure 15 Set Auto Available After Sign-in

Step	Command	Purpose
<b>System Configuration File &lt;mac-address&gt;_CiscoDev_System.xml</b>		
Step 1	<p><b>Web Portal:</b> Voice → Ext (n) → ACD Settings. BroadSoft ACD: No</p> <p><b>XML:</b> &lt;Broadsoft_ACD_n_ua="na"&gt;%BROADSOFT_ACD_ENABLE-n%&lt;/Broadsoft_ACD_n&gt; Where n=1-16</p> <p><b>Note:</b> %BROADSOFT_ACD_ENABLE-n% has two options, Yes No</p> <p><b>Example:</b> &lt;Broadsoft_ACD_1_ua="na"&gt;No&lt;/Broadsoft_ACD_1_&gt;</p>	<p>Enables BroadSoft ACD on the phone.</p> <p>Options: Yes/No Default value: No</p>
Step 2	<p><b>Web Portal:</b> Voice → Ext (n) → ACD Settings. <b>Auto Available After Sign-in: Yes</b></p> <p><b>XML:</b> &lt;Auto_Available_After_Sign-In_n_ua="na"&gt;%AUTO_AVAILABLE_AFTER_SIGN-IN_n%&lt;/Auto_Available_After_Sign-In_n_&gt; Where n=1-16</p> <p><b>Note:</b> %AUTO_AVAILABLE_AFTER_SIGN-IN_n% has two options: Yes No</p> <p><b>Example:</b> &lt;Auto_Available_After_Sign-In_1_ua="na"&gt;Yes&lt;/Auto_Available_After_Sign-In_1_&gt;</p>	<p>Allows the phone to set the ACD status to Available automatically, after sign-in.</p> <p>Options: Yes/No <b>Yes:</b> After sign-in, phone ACD status will be automatically set to available. <b>No:</b> Phone retains the old behavior. Default value: No</p>

#### Usage of the Feature:

- 1) On the web user interface, go to *Voice → Ext (n) → ACD Settings* and set *BroadSoft ACD* to “Yes” and *Auto Available After Sign-in* to “Yes”.
- 2) On the Cisco BroadWorks server, browse to the Call Centers configuration page and set *ACD State* to “Sign-out”.

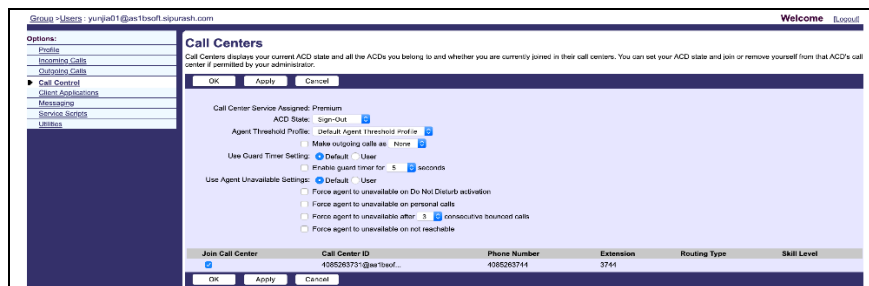


Figure 16 ACD State to Sign-Out

- 3) On the phone, press the **AggSignIn** softkey. The ACD status is set to available.

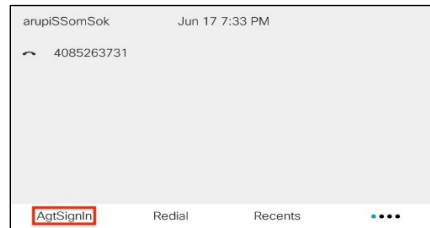


Figure 17 ACD Status (Before AgtSignin Press)



Figure 18 ACD Status (On AgtSignin Press)

The following figure shows that the ACD State value on the Cisco BroadWorks server updates to “Available”.

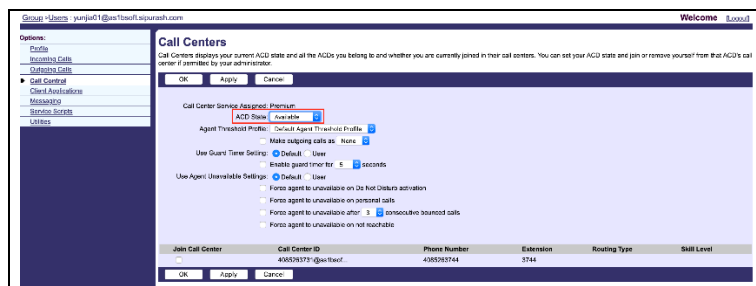


Figure 19 ACD State Updates to Available

## 4.4.6 Hoteling Feature Configuration

Cisco BroadWorks provides the capability to synchronize the hoteling guest user address between the phone and Cisco BroadWorks. This enables the phone to display hoteling guest identity on the phone as well as provides the signaling basis for the phone to allow a hoteling guest to log in via the phone interface.

- 1) Browse to the *Hoteling Guest* page.

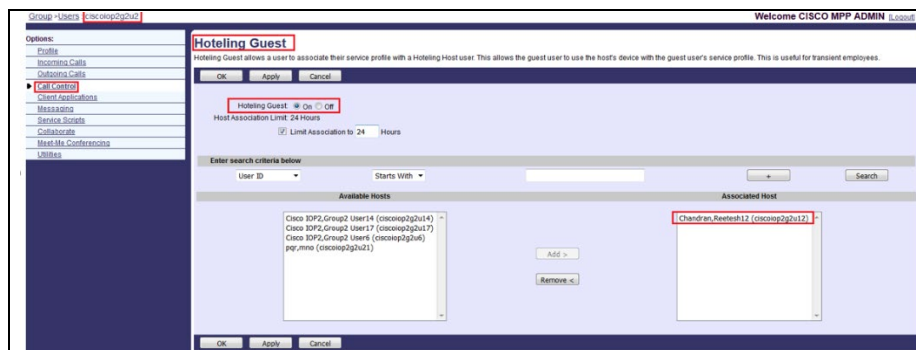


Figure 20 Call Control → Hoteling Guest

### Enable Hoteling on phone.

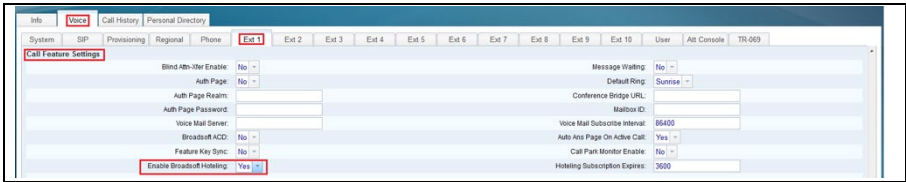
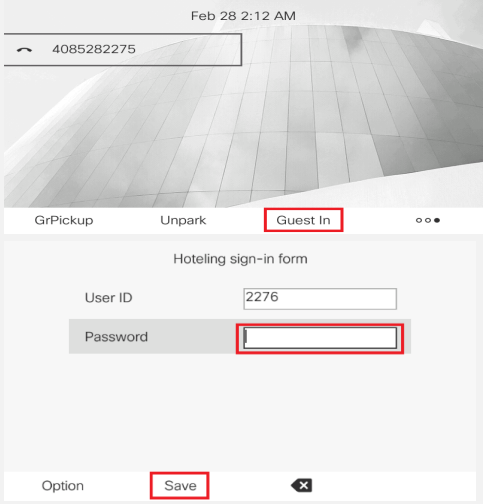
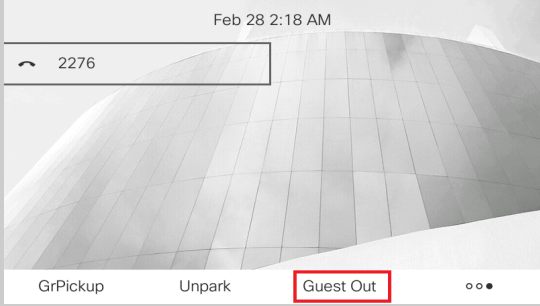


Figure 21 Cisco MPP Series BroadSoft Hoteling

### 2) To configure BroadSoft Hoteling feature.

Step	Command	Purpose
Step 1	<p>Guest Sign-in.</p> 	<p>Sign in as a Guest.</p> <p>Using the guest extension and voice portal password.</p>
Step 2	<p>Guest Sign-out.</p> 	<p>Signing out the guest from Host phone.</p>

### Configuration of Hoteling feature on phone.

Step	Command	Description
<b>Configuration File &lt;mac-address&gt;_CiscoDev.xml</b>		
Step 1	<p>Enable BroadSoft Hoteling on phone.</p> <p><b>Web :</b></p> <p>Voice -&gt; Ext Tab -&gt; call feature Settings</p> <p>Enable BroadSoft Hoteling: Yes</p> <p><b>XML :</b></p> <pre>&lt;Enable_Broadsoft_Hoteling_1_ ua="na"&gt;%BROADSOFT_HOTELING_ENA BLE- 1%&lt;/Enable_Broadsoft_Hoteling_1 _&gt;</pre> <p><b>Example :</b></p> <pre>&lt;Enable_Broadsoft_Hoteling_1_ ua="na"&gt;Yes&lt;/Enable_Broadsoft_Hot eling_1_&gt;</pre>	<p>Enables BroadSoft Hoteling on the phone.</p> <p>LCD will show Guest-in softkey.</p>

#### 4.4.7 Call Park Feature Configuration

This section provides configuration instructions to configure the phone to enable integration with Cisco BroadWorks Call Park feature.


Enable Call Park service on phone (default value is "Yes").



The screenshot shows the 'Supplementary Services' configuration page for a Cisco MPP Series phone. The 'Call Park Serv.' checkbox is checked, indicating that the Call Park service is enabled. Other services like 'Conference Serv.', 'Blind Transfer Serv.', and 'Secure Call Serv.' are also listed with their respective status checkboxes.

Figure 22 Cisco MPP Series Call Park Service

##### 4.4.7.1 Configure Call Park Feature Access Code

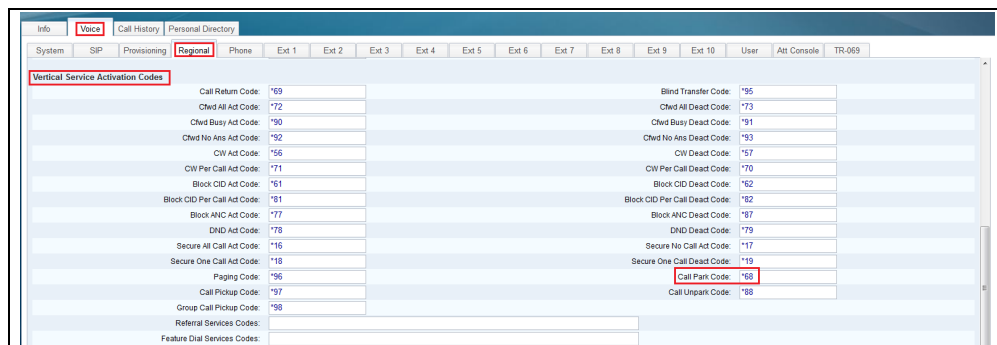

The screenshot shows the 'Vertical Service Activation Codes' configuration page for a Cisco MPP Series phone. The 'Call Park Code' is set to \*68, and the 'Call Unpark Code' is set to \*88. Other codes like 'Call Return Code', 'Chwd All Act Code', and 'Block CID Act Code' are also listed with their respective values.

Figure 23 Cisco MPP Series Call Park Feature Access Code

Step	Command	Purpose
<b>System Configuration File &lt;mac-address_CiscoDev&gt;.xml</b>		
Step 1	<p>Enable Call Park service: Web Portal Voice → Phone Tab → Supplementary Services</p> <p>Call Park Serv: Yes</p> <p><b>XML</b></p> <pre>&lt;Call_Park_Code_ ua="rw"&gt;%BWFAC- CALL-PARK-1%&lt;/Call_Park_Code_&gt; &lt;Call_Unpark_Code_ ua="rw"&gt;%BWFAC- CALL-PARK-RETRIEVE- 1%&lt;/Call_Unpark_Code_&gt;</pre> <p><b>Example:</b></p> <pre>&lt;Call_Park_Code ua="na"&gt;*68&lt;/Call_Park_Code&gt; &lt;Call_Park_Serv ua="na"&gt;Yes&lt;/Call_Park_Serv&gt;</pre>	<p>Enables Call Park service. Default value: Yes.</p>

#### 4.4.7.2 Configure One-button Call Park

This section provides information on how to configure One-button Call Park feature that allows a user to park an active call to a specific extension by pressing a line key that monitors the extension. Users can retrieve a parked call from any phone or any extension. With One-button Call Park, there is no need to enter a combination of keystrokes for parking and unparking a call.

To unpark a call, users can do one of three things:

- Press the monitored extension **PLK** that displays the parked call.
- Press the extension line key, then press the monitored extension **PLK** that displays the parked call.
- Use the navigation button to focus on the extension line key, then press the monitored extension **PLK** that displays the parked call.

To configure One-button Call Park on the Cisco BroadWorks server, see the following figure.

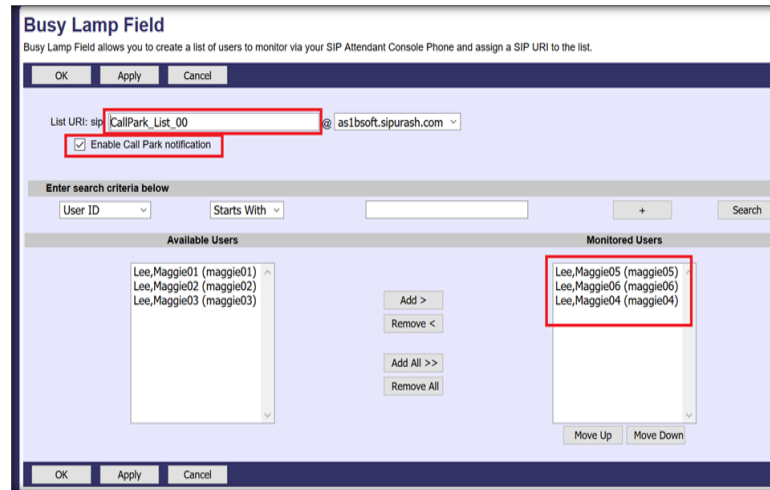


Figure 24 One-button Call Park

- 1) Log in with a group account and access *User* → *Client Applications* → *Busy Lamp Field*.
- 2) Configure the *BLF List URI*.
- 3) Select the *Enable Call Park notification* to enable Call Park notification on the Cisco BroadWorks server.

To configure the One-button Call Park from the web user interface, see the following figure.

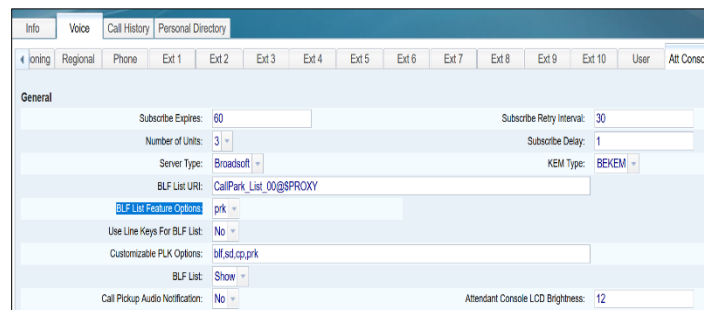


Figure 25 One-button Call Park from Web




Step	Command	Purpose
<b>System Configuration File &lt;mac-address&gt;_CiscoDev_System.xml</b>		
Step 1	<p>Configure One-button Call Park: Web Portal <b>Voice</b> → <b>Att Console</b> <b>BLF List URI:</b> enter uri name@server</p> <p><b>Note:</b> The BLF List URI field must have the same value as that configured for the List URI:sip parameter on the Cisco server.</p> <p><b>BLF List Feature Options: prk</b></p> <p><b>XML</b></p> <pre>&lt;BLF_List_Feature_Options ua="na"&gt;%BLF_LIST_FEATURE_OPTIONS%&lt; /BLF_List_Feature_Options&gt;</pre> <p><b>Note:</b> %BLF_LIST_FEATURE_OPTIONS% have two types: prk and blf+sd+cp</p> <p><b>Example:</b></p> <pre>&lt; BLF_List_Feature_Options ua="na"&gt;prk&lt;/ BLF_List_Feature_Options&gt;</pre>	<p>Allows user a one-button stroke for parking and unparking a call.</p> <p>Options: prk and blf+sd+cp</p> <p>Default value: blf+sd+cp</p> <p>If set to "blf+sd+cp", the <i>BLF List URI</i> auto assigned line key supports BLF, speed dial, and call pickup.</p> <p>If set to "prk", the <i>BLF List URI</i> auto assigned line key only supports Call Park or unpark.</p>

#### 4.4.8 Accessibility with Voice Feedback Configuration

**NOTE:** Only Cisco IP Phone 8800 Series Multiplatform Phones support this feature. The Cisco IP Phone 8832 Multiplatform Phone does not support this feature.

**NOTE:** The Cisco Desk Phone 9800 Series does not support this feature.

This section provides configuration instructions to configure voice feedback on Cisco IP Phone 8800 Series Multiplatform Phones. Voice feedback helps people who have trouble seeing use their Cisco IP phone. When enabled, a voice prompt helps the user navigate phone buttons and use and configure phone features. The voice feedback also reads incoming caller IDs, displayed screens, settings, and button functions.

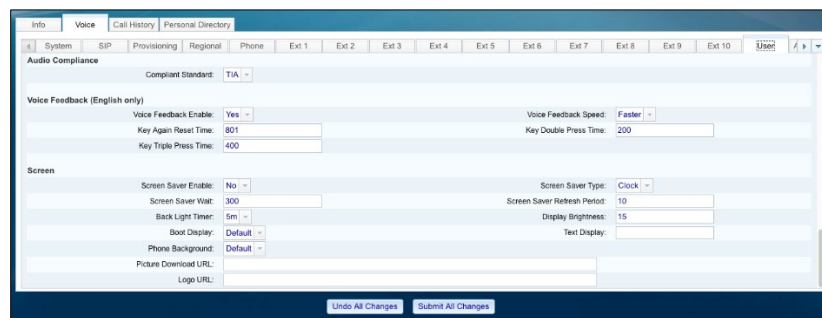

The screenshot shows the 'Voice' configuration page for a Cisco IP Phone. Under the 'Audio Compliance' section, 'Voice Feedback (English only)' is enabled. The 'Voice Feedback Speed' is set to 'Faster'. Other settings include 'Key Again Reset Time' (901), 'Key Triple Press Time' (400), 'Key Double Press Time' (200), 'Screen Saver Enable' (No), 'Screen Saver Wait' (300), 'Screen Saver Type' (Clock), 'Screen Saver Refresh Period' (10), 'Back Light Timer' (5m), 'Display Brightness' (15), 'Boot Display' (Default), 'Text Display' (Default), 'Phone Background' (Default), 'Picture Download URL', and 'Logo URL'. At the bottom, there are buttons for 'Undo All Changes' and 'Submit All Changes'.

Figure 26 Configure Voice Feedback

Step	Command	Purpose
<b>System Configuration File &lt;mac-address_CiscoDev&gt;.xml</b>		
Step 1	<p>Enable Voice Feedback:</p> <p><b>Web Portal</b></p> <p>Voice → User → Voice Feedback (English Only)</p> <p>Voice Feedback Enable: Yes</p> <p>Voice Feedback Speed: Slowest/Slower/Normal/Faster/Fastest</p> <p>Key Again Reset Time: 100-2000</p> <p>Key Double Press Time: 100-2000</p> <p>Key Triple Press Time: 100-2000</p> <p>Voice Feedback Volume: Lowest/Low/Normal/High/Highest</p> <p><b>XML</b></p> <pre>&lt;Voice_Feedback_Enable ua="na"&gt;%Voice_Feedback_Enable%/Voice_Feedback_Enable&gt; &lt;Voice_Feedback_Speed ua="na"&gt;Normal&lt;/Voice_Feedback_Speed&gt; &lt;!--available options: Slowest Slower Normal Faster Fastest --&gt; &lt;Key_Again_Reset_Time ua="na"&gt;800&lt;/Key_Again_Reset_Time&gt; &lt;Key_Double_Press_Time ua="na"&gt;200&lt;/Key_Double_Press_Time&gt; &lt;Key_Triple_Press_Time ua="na"&gt;400&lt;/Key_Triple_Press_Time&gt; &lt;Voice_Feedback_Volume ua="na"&gt;Normal&lt;/Voice_Feedback_Volume&gt; &lt;!-- available options: Lowest Low Normal High Highest --&gt;</pre> <p><b>Example:</b></p> <pre>&lt;Voice_Feedback_Enable ua="na"&gt;Yes&lt;/Voice_Feedback_Enable&gt; &lt;Voice_Feedback_Speed ua="na"&gt;Normal&lt;/Voice_Feedback_Speed&gt; &lt;!--available options: Slowest Slower Normal Faster Fastest --&gt; &lt;Key_Again_Reset_Time ua="na"&gt;800&lt;/Key_Again_Reset_Time&gt; &lt;Key_Double_Press_Time ua="na"&gt;200&lt;/Key_Double_Press_Time&gt; &lt;Key_Triple_Press_Time ua="na"&gt;400&lt;/Key_Triple_Press_Time&gt; &lt;Voice_Feedback_Volume ua="na"&gt;Normal&lt;/Voice_Feedback_Volume&gt; &lt;!-- available options: Lowest Low Normal High Highest --&gt;</pre>	<p>Enables accessibility with voice feedback.</p> <p>Default values are as follows:</p> <p>Voice Feedback: No</p> <p>Voice Feedback Speed: Normal</p> <p>Key Again Reset Time: 1200</p> <p>Key Double Press Time: 600</p> <p>Key Triple Press Time: 1000</p> <p>Voice Feedback Volume: Normal</p>

## 4.4.9 Call Recording Feature Configuration

This section provides configuration instructions to configure the phone to enable integration with Call Recording features including but not limited to Call Recording controls.

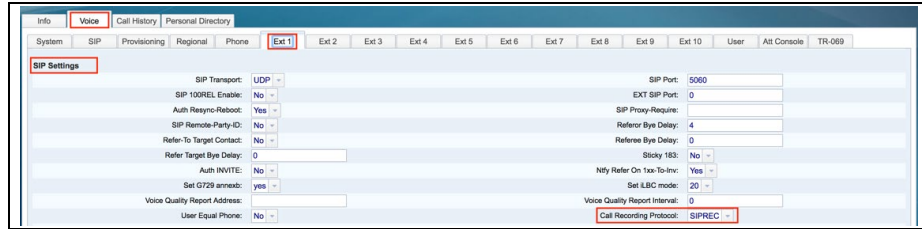


Figure 27 Cisco MPP Series Call Recording Protocol

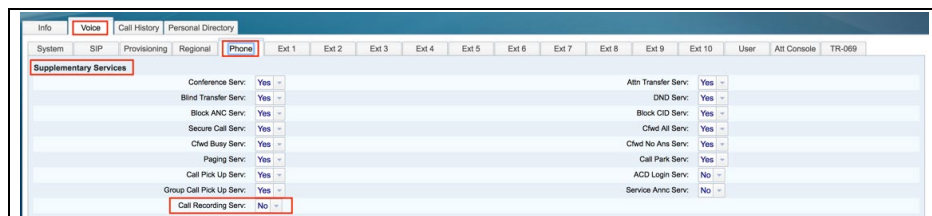


Figure 28 Cisco MPP Series Call Recording Serv

Step	Command	Purpose
<b>System Configuration File &lt;mac-address_CiscoDev&gt;.xml</b>		
Step 1	<p>Enable Call Recording:</p> <p>Web Portal Voice → Ext 1 → SIP Settings</p> <p>Call Recording Protocol: SIPREC</p> <p>Web Portal Voice → Phone → Supplementary Services</p> <p>Call Recording Serv: No</p> <p><b>XML</b></p> <pre>&lt;Call_Recording_Protocol_1_ua="na"&gt;SIPREC&lt;/Call_Recording_Protocol_1_&gt; &lt;Call_Recording_Serv ua="na"&gt;No&lt;/Call_Recording_Serv&gt;</pre> <p><b>Example:</b></p> <pre>&lt;Call_Recording_Protocol_1_ua="na"&gt;SIPREC&lt;/Call_Recording_Protocol_1_&gt; &lt;Call_Recording_Serv ua="na"&gt;No&lt;/Call_Recording_Serv&gt;</pre>	<p>Enable Call Recording.</p> <p>Default value: SIPREC</p> <p>Default value: No</p> <p>To enable: Yes</p>

#### 4.4.10 Executive/Executive-Assistant Feature

**NOTE:** Feature is supported by MPP 88x1, 8845, 8865, and 6871 models only.

**NOTE:** The Cisco Desk Phone 9800 Series does not support this feature.

This section provides configuration instructions for configuration of Executive/Executive-Assistant feature supported by the MPP Series phone.

This feature enables an assistant device to:

- Receive executive calls
- Initiate/push calls for executives
- Divert executive calls

Executive device can Retrieve/Bridge-In into calls received/placed by assistant on filtered line. Call Filtering should be enabled on the line for this feature to work. Call Filtering can be enabled/disabled either from Cisco BroadWorks portal or device LCD user interface (UI). Executive can enable/disable call screening from Cisco BroadWorks portal.

##### Cisco BroadWorks configuration for the feature

- 1) Configure *Executive* service for the user.

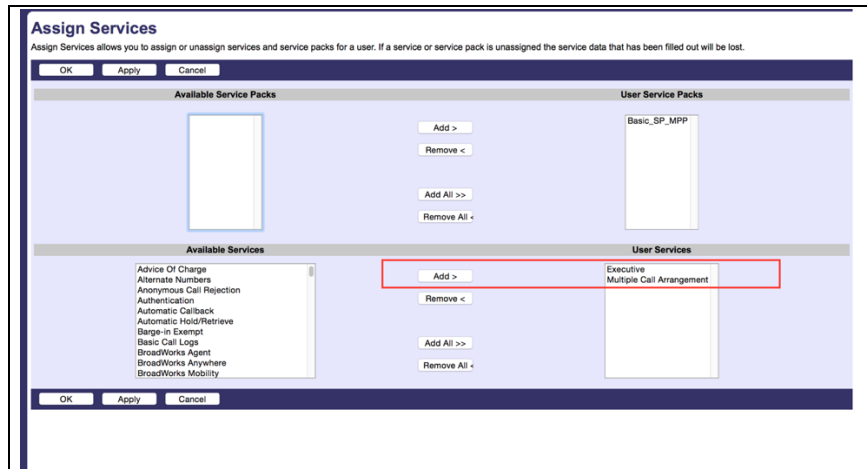


Figure 29 Cisco BroadWorks Executive Service

- 2) Configure Executive-Assistant service for the user.

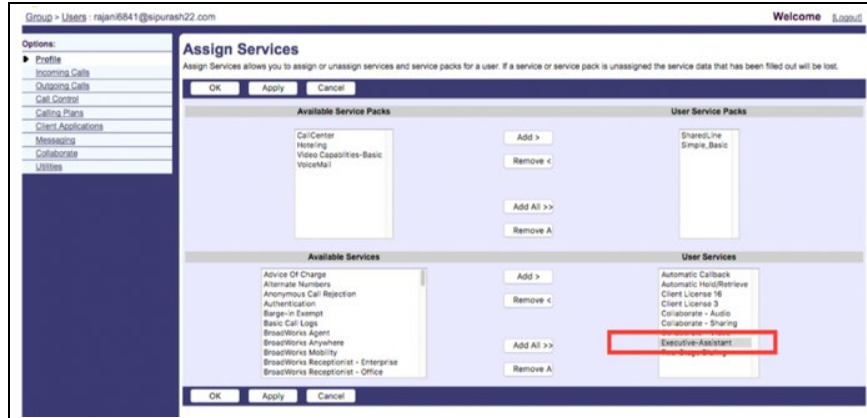


Figure 30 Cisco BroadWorks Executive-Assistant

### 3) Configure Assistant to an Executive.

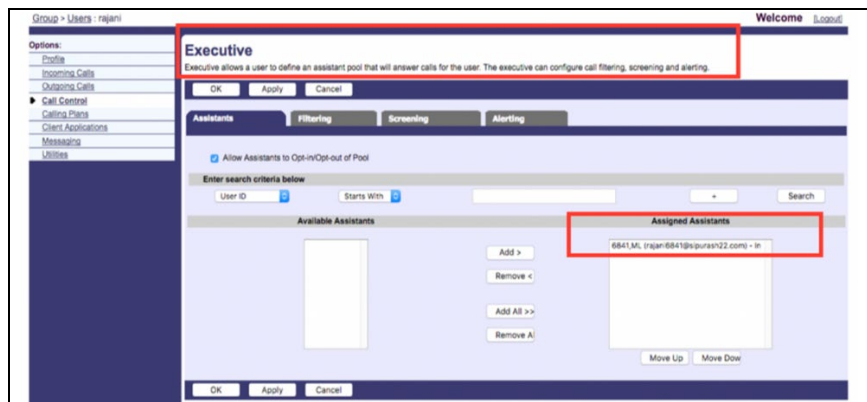


Figure 31 Cisco BroadWorks Exec Admin – Assign Assistant to Exec

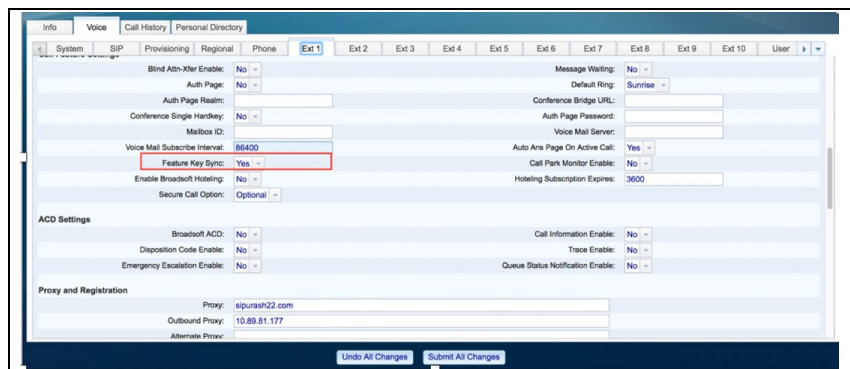


Figure 32 Exec Admin Feature Key Sync

Info Voice Call History Personal Directory

System SIP Provisioning Regional Phone Ext 1 Ext 2 Ext 3 Ext 4 Ext 5 Ext 6 Ext 7 Ext 8 Ext 9 Ext 10 User Att Console

**Programmable Softkeys**

Programmable Softkey Enable: No

Idle Key List: `nvaj:redial;recents;cfwd;dnd;orpickup;gpickup;unpark;em_logout;questin;questout;callretrieve;bridgein;`

Missed Call Key List: `or1;miss4;`

Off Hook Key List: `option:redial;cancel;dir;cfwd;dnd;orunpark;gpickup;gpickup;`

Dialing Input Key List: `option1;call2;delchar3;cancel4;`

Progressing Key List: `endcall2;`

Connected Key List: `hold1;endcall2;conf3;vder4;bxfer;conf;lxfer;lxpark;phold;ordstart;ordpause;ordresume;ordstop;dnd;`

Start-Xfer Key List: `hold1;endcall2;vder3;dnd;`

Start-Conf Key List: `hold1;endcall2;conf3;dnd;`

Conferencing Key List: `hold1;endcall2;join4;phold;ordstart5;ordpause5;ordresume5;ordstop6;dnd;`

Releasing Key List: `endcall2;`

Hold Key List: `resume1;endcall2;newcall3;redial;dir;cfwd;dnd;calpush;`

Ring Key List: `answer1;ignore2;ignore3;`

Shared Active Key List: `newcall1;bxfer2;bxfer3;cfwd4;dnd5;callretrieve;bridgein`

Shared Held Key List: `resume1;bxfer2;cfwd3;dnd4;`

Exec Assistant Key List: `proxycall3;divert2;`

PSK 1:

PSK 2:

Undo All Changes Submit All Changes

Figure 33 Exec Admin Programmable Softkeys

Info Voice Call History Personal Directory

System SIP Provisioning Regional Phone Ext 1 Ext 2 Ext 3 Ext 4 Ext 5 Ext 6 Ext 7 Ext 8 Ext 9 Ext 10 User

**Feature Access Code**

CW Per Call Act Code: \*71

Block CID Act Code: \*61

Block CID Per Call Act Code: \*61

Block ANC Act Code: \*77

DND Act Code: \*78

Secure All Call Act Code: \*16

Secure One Call Act Code: \*18

Paging Code: \*96

Call Pickup Code: \*97

Group Call Pickup Code: \*98

Exec Call Filter Act Code: #61

Exec Assistant Call Push Code: #63

Exec Call Bridge Code: \*15

CW Per Call Deact Code: \*70

Block CID Deact Code: \*62

Block CID Per Call Deact Code: \*62

Block ANC Deact Code: \*67

DND Deact Code: \*79

Secure No Call Act Code: \*17

Secure One Call Deact Code: \*19

Call Park Code: \*68

Call Unpark Code: \*68

Exec Assistant Call Initiate Code: #64

Exec Call Filter Deact Code: #62

Exec Call Retrieve Code: \*11

Referral Services Codes:

Feature Dial Services Codes:

Vertical Service Announcement Codes

Service Announcement Number:

Service Announcement Extension:

Undo All Changes Submit All Changes

© 2000-2018 Cisco Systems, Inc. All Rights Reserved. Cisco IP Phone for 3rd Party Call Control

Figure 34 Exec Admin Feature Access Code

**Dial Plan**

Dial Plan: `(*xx|[3469]11|0|00|[2-9]xxxxxx|1xxx(2-9)xxxxxxS0|xxxxxxxxxxxxxx,|xx|)#xx+xxxxxxxxxxxxxx*xxxxxxxxxxxxxx)`

Figure 35 Exec Admin Dial Plan

Step	Command	Purpose
<b>System Configuration File &lt;mac-address_CiscoDev&gt;.xml</b>		
Step 1	<p>Enable Feature Key Sync.</p> <p>Web Portal Voice → Ext 1 → Call Feature Settings</p> <p>Feature Key Sync: Yes</p> <p>Example:</p> <pre>&lt;Feature_Key_Sync_1_ua="na"&gt;Yes&lt;/Feature_Key_Sync_1_&gt;</pre> <p><b>For PLK setup</b></p> <p>Voice → Phone → Line Key &lt;#&gt; → Extended Function</p>	<p>Enable Feature Key Sync.</p> <p>Default value: No</p> <p>To enable: Yes</p>


Step	Command	Purpose
<b>System Configuration File &lt;mac-address_CiscoDev&gt;.xml</b>		
	<p>Syntax for PLK - "fnc=bw-exec-assist"</p> <p><b>Programmable softkeys config</b></p> <p>Voice-&gt;Phone-&gt;Programmable Softkeys</p> <p>Check Figure 21 Programmable Softkeys</p> <p><b>Feature Access code</b></p> <p>Voice-&gt;Regional</p> <p>Check Figure 22 Feature Access Code</p> <p><b>Update the dial plan</b></p> <p>Check Figure 23 Dial Plan</p> <p><b>XML</b></p> <pre> &lt;Exec_Assistant_Call_Initiate_Code ua="na"&gt;%Exec_Assistant_Call_Initia te_Code%/Exec_Assistant_Call_Initi ate_Code&gt;  &lt;Exec_Call_Filter_Act_Code ua="na"&gt;%Exec_Call_Filter_Act_Code% &lt;/Exec_Call_Filter_Act_Code&gt;  &lt;Exec_Call_Filter_Deact_Code ua="na"&gt;%Exec_Call_Filter_Deact_Cod e%/Exec_Call_Filter_Deact_Code&gt;  &lt;Exec_Assistant_Call_Push_Code ua="na"&gt;%Exec_Assistant_Call_Push_C ode%/Exec_Assistant_Call_Push_Code &gt;  &lt;Exec_Call_Retrieve_Code ua="na"&gt;%Exec_Call_Retrieve_Code%/ Exec_Call_Retrieve_Code&gt;  &lt;Exec_Call_Bridge_Code ua="na"&gt;%Exec_Call_Bridge_Code%/Ex ec_Call_Bridge_Code&gt;  &lt;Exec_Assistant_Key_List ua="na"&gt;%Exec_Assistant_Key_List%/ Exec_Assistant_Key_List&gt; </pre> <p><b>Example:</b></p> <pre> &lt;Exec_Assistant_Call_Initiate_Code ua= "na"&gt;#64&lt;/Exec_Assistant_Call_Initiate _Code&gt;  &lt;Exec_Call_Filter_Act_Code ua="na"&gt;#61 &lt;/Exec_Call_Filter_Act_Code&gt;  &lt;Exec_Call_Filter_Deact_Code ua="na"&gt;# 62&lt;/Exec_Call_Filter_Deact_Code&gt;  &lt;Exec_Assistant_Call_Push_Code ua="na" &gt;#63&lt;/Exec_Assistant_Call_Push_Code&gt;  &lt;Exec_Call_Retrieve_Code ua="na"&gt;*11&lt;/ Exec_Call_Retrieve_Code&gt; &lt;Exec_Call_Bridge_Code ua="na"&gt;*15&lt;/Ex ec_Call_Bridge_Code&gt;  &lt;Exec_Assistant_Key_List ua="na"&gt;pro xycall 2;divert 3;&lt;/Exec_Assistant_K ey_List&gt; </pre>	

#### 4.4.10.1 Assistant Call Filter

You can show or hide the Call filter menu item on the phone for the users of the assistant role using the *Assistant Call Filter* menu.

To configure the Assistant Call Filter from the web user interface:


##### 1) Enable Feature Key Sync:

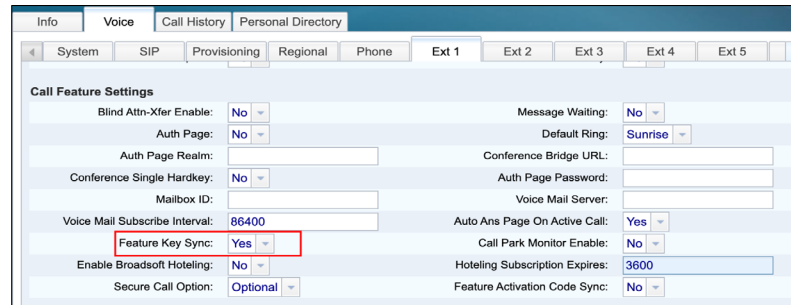

The screenshot shows the 'Call Feature Settings' section of the Cisco Dev System web interface. The 'Feature Key Sync' option is highlighted with a red box and set to 'Yes'. Other settings include 'Blind Attn-Xfer Enable' (No), 'Auth Page' (No), 'Auth Page Realm' (empty), 'Conference Single Hardkey' (No), 'Mailbox ID' (empty), 'Voice Mail Subscribe Interval' (86400), 'Enable Broadsoft Hoteling' (No), 'Secure Call Option' (Optional), 'Message Waiting' (No), 'Default Ring' (Sunrise), 'Conference Bridge URL' (empty), 'Auth Page Password' (empty), 'Voice Mail Server' (empty), 'Auto Ans Page On Active Call' (Yes), 'Call Park Monitor Enable' (No), 'Hoteling Subscription Expires' (3600), and 'Feature Activation Code Sync' (No).

Figure 36 Feature Key Sync Enabling


##### 2) Synchronize XSI host server.

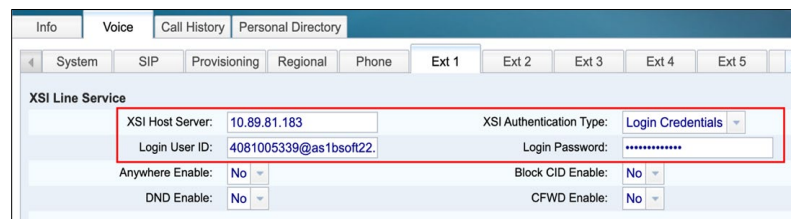

The screenshot shows the 'XSI Line Service' section of the Cisco Dev System web interface. The 'XSI Host Server' (10.89.81.183), 'Login User ID' (4081005339@as1bsoft22), and 'XSI Authentication Type' (Login Credentials) fields are highlighted with a red box. Other settings include 'Anywhere Enable' (No), 'DND Enable' (No), 'Block CID Enable' (No), and 'CFWD Enable' (No).

Figure 37 XSI Host Server Synchronization

##### 3) Control Executive-Assistant menu and enable Assistant Call Filter menu.

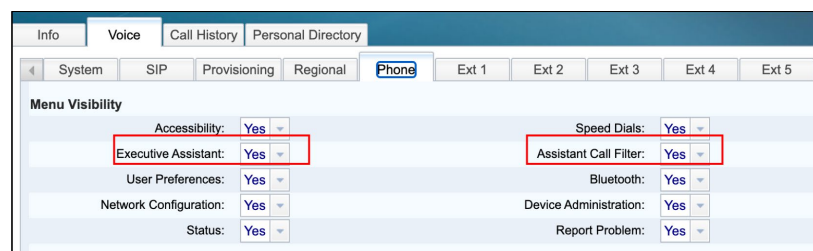

The screenshot shows the 'Menu Visibility' section of the Cisco Dev System web interface. The 'Executive Assistant' and 'Assistant Call Filter' options are highlighted with red boxes and set to 'Yes'. Other settings include 'Accessibility' (Yes), 'Speed Dials' (Yes), 'User Preferences' (Yes), 'Network Configuration' (Yes), 'Status' (Yes), 'Bluetooth' (Yes), 'Device Administration' (Yes), and 'Report Problem' (Yes).

Figure 38 Assistant Call Filter

Step	Command	Purpose
<b>System Configuration File CiscoDev_System.xml.template</b>		
Step 1	<p><i>Web Portal Voice</i> → <i>Ext(n)</i> → <i>Call Feature Settings</i></p> <p>Feature Key Sync: Yes</p> <p><b>XML :</b></p> <p>Example:</p> <pre>&lt;Feature_Key_Sync_1_ ua="na"&gt;Yes&lt;/Feature_Key_Sync_1_&gt;</pre>	<p>Enables feature key sync.</p> <p>Options: Yes and No</p> <p>Default value: No</p>



Step	Command	Purpose
<b>System Configuration File CiscoDev_System.xml.template</b>		
Step 2	Set XSI Host Server, XSI Authentication Type, Login User ID, Login Password parameters to configure the XSI host server for the line.  For more information, see <a href="#">Figure 50 XSI Host Server Synchronization</a> .	
Step 3	<b>Web Portal Voice → Phone → Menu Visibility</b> Executive Assistant: No Assistant Call Filter: No  <b>XML</b> <pre>&lt;Assistant_Call_Filter ua="na"&gt;Yes&lt;/Assistant_Call_Filter&gt;</pre>	Controls Assistant – Call filter menu in Assistant menu on the phone.  <b>Executive Assistant</b> Options: Yes: Show the Executive-Assistant menu in Setting menu list. No: Hide the Executive-Assistant menu in Setting menu list.  <b>Assistant Call Filter</b> Options: Yes: Show the Assistant - Call Filter menu in Assistant menu. No: Hide the Assistant - Call Filter menu in Assistant menu. Default value: Yes

To configure the feature for an executive from Cisco BroadWorks, see the following.

- 1) Assign executive service to a user. Select a User and navigate to *Profile → Assign Services* as described in [Figure 39](#).

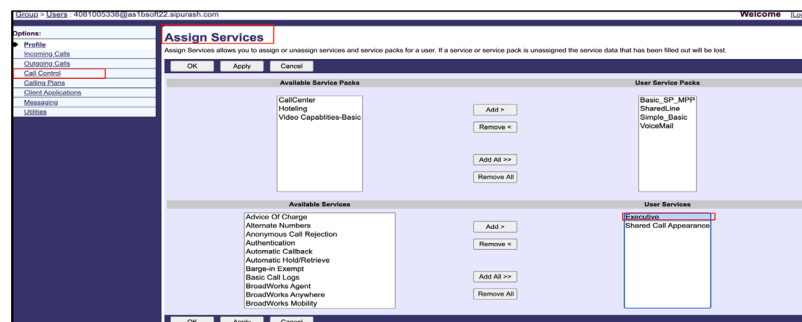


Figure 39 Assign Executive Service

- 2) Configure a list of assistants for an executive and assign the permission.



Figure 40 Assistants to an Executive

3) Configure call filtering.

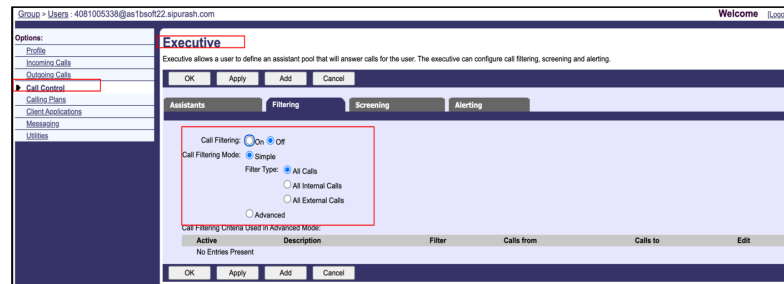


Figure 41 Configure Call Filtering

To configure the feature for an assistant level from Cisco BroadWorks, see the following.

4) Assign the executive – assistant service to a user.



Figure 42 Executive-assistant Service

5) Configure executive – assistant feature.

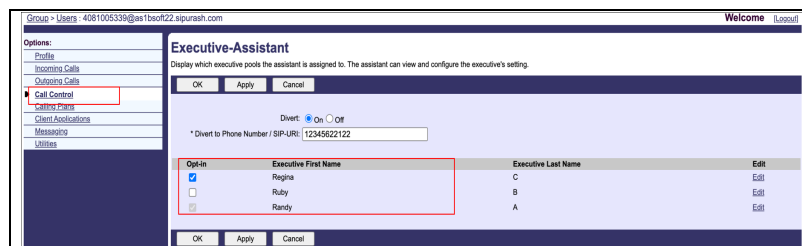


Figure 43 Executive-assistant Configuration

**NOTE:** The Opt-in box is non-editable when the executive does not allow assistant to opt-in or opt-out. Only list the executive which had select it as his assistant.

6) Change executive settings by assigning assistants. Select *Call Control* → *Executive Assistant*, then select an executive and select **Edit**.

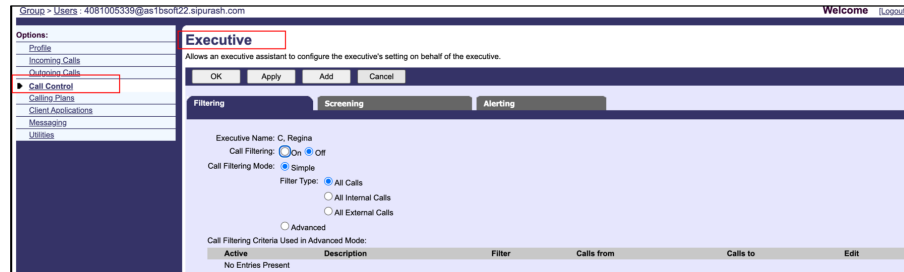


Figure 44 Executive Settings Modification

#### 4.4.11 OPUS Codec Narrowband

To improve bandwidth in your network, you can set up your phones to use the narrowband OPUS codec. The narrowband codec does not conflict with the wideband codec.

To configure the OPUS codec narrowband support from the web user interface, see the following figure.

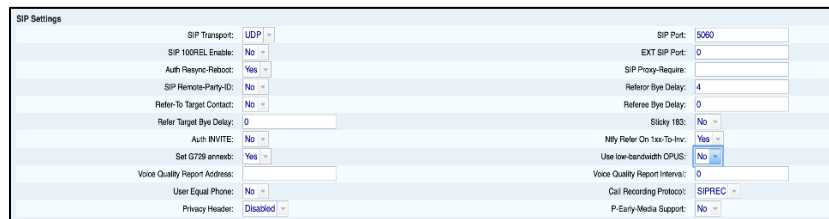


Figure 45 OPUS Codec Narrowband

Step	Command	Purpose
<b>System Configuration File CiscoDev_System.xml.template</b>		
Step 1	<p><i>Web Portal Voice</i> → <i>Ext(n)</i> → <i>SIP Settings</i></p> <p>Use low-bandwidth OPUS: No</p> <p><b>XML</b></p> <pre>&lt;Use_low-bandwidth_OPUS_#_ua="na"&gt;%USE_LOW_BANDWIDTH_OPUS_#%&lt;/Use_low-bandwidth_OPUS_#_&gt;</pre> <p><b>Note:</b> %USE_LOW_BANDWIDTH_OPUS_#% has two options: Yes and No.</p> <p><b>Example:</b></p> <pre>&lt;Use_low-bandwidth_OPUS_#_ua="na"&gt;No&lt;/Use_low-bandwidth_OPUS_#_&gt;</pre>	<p>Used to select low-bandwidth OPUS for phone calls. It saves on network bandwidth.</p> <p>Options: Yes and No</p> <p>Default value: No</p>

#### 4.4.12 Enable SIP 110rel without Enabling Preconditions

You can enable the phone to control the precondition tag (defined in *RFC 3312*) in the Supported header field. This helps to work normal calls well.

To configure preconditions, feature from the web user interface, see the following figure.

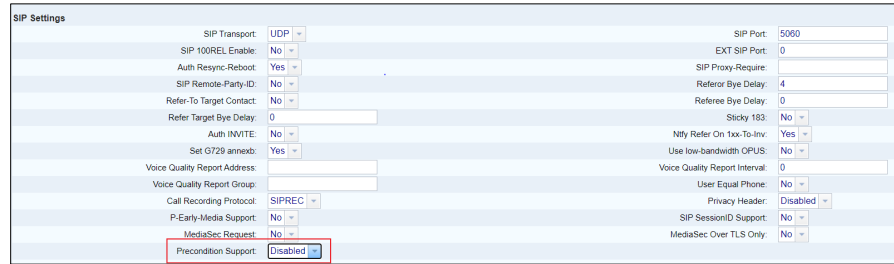


Figure 46 Preconditions Feature Configuration

Step	Command	Purpose
<b>System Configuration File CiscoDev_System.xml.template</b>		
Step 1	<p>Web Portal Voice → Ext(n) → SIP Settings Precondition Support: Disabled</p> <p><b>XML</b></p> <pre>&lt;Precondition_Support_x_ua="na"&gt;%PRECONDITION_SUPPORT_x%/Precondition_Support_x_&gt;</pre> <p>Where, x=extension line number from 1-16</p> <p><b>Note:</b> %PRECONDITION_SUPPORT_x% has two options: Enabled and Disabled.</p> <p><b>Example:</b></p> <pre>&lt;Precondition_Support_x_ua="na"&gt;Disabled&lt;/Precondition_Support_x_&gt;</pre>	<p>Determines whether the phone includes the precondition tag (defined in <i>RFC 3312</i>) in the Supported header field.</p> <p><b>Options:</b></p> <p>Disabled: Preconditions feature is disabled.</p> <p>Enabled: Phone will keep the legacy behavior.</p> <p>Default value: Disabled</p>

#### 4.4.13 Synchronization of Call Waiting and Anonymous Call Rejection Through XSI Service

**NOTE:** The Cisco Desk Phone 9800 Series does not support this feature.

You can enable synchronization of the Call Waiting and the Anonymous Call Rejection functions between a specific line and a Cisco BroadWorks server.

To enable Call Waiting and Anonymous Call Rejection on the Cisco BroadWorks server, see the following figures.

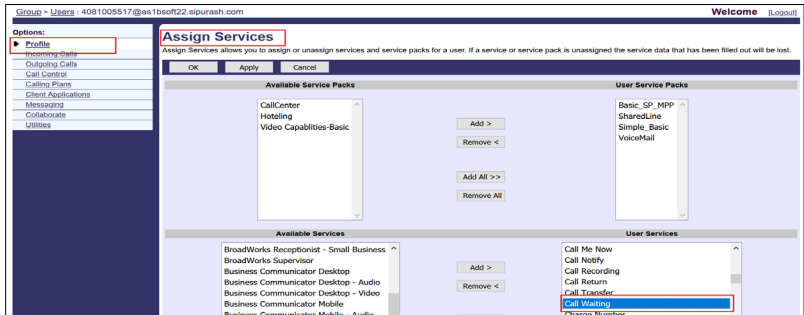


Figure 47 Call Waiting

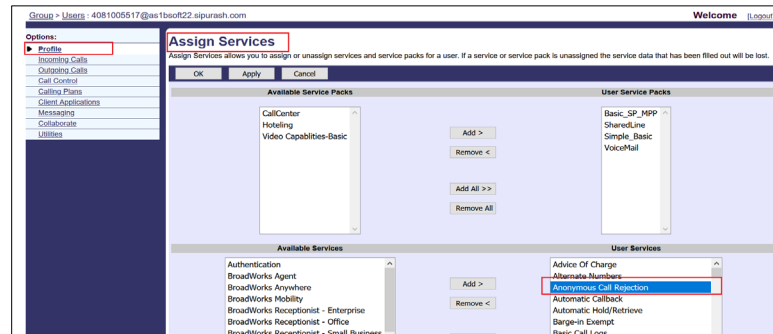


Figure 48 Anonymous Call Rejection

- 1) Log in with a group account and access User.
- 2) Select a user and navigate *Profile* → *Assign Services*.
- 3) In the Assign Services window, Select *Call Waiting* and *Anonymous Call Rejection* from the Available Services list and add to the User Services list.
- 4) Click **OK**.

To enable Call Waiting and Anonymous Call Rejection from the phone web interface, see the following figures.



Figure 49 Anonymous Call Rejection and Call Waiting Enabling

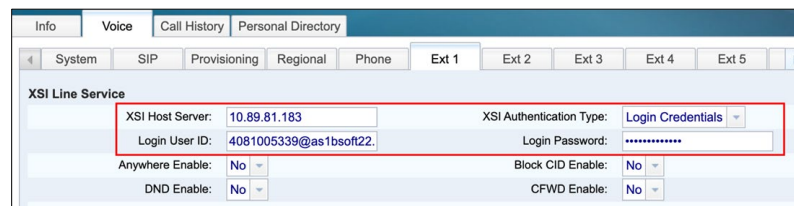


Figure 50 XSI Host Server Synchronization

Step	Command	Purpose
<b>System Configuration File CiscoDev_System.xml.template</b>		
Step 1	<p><i>Web Portal Voice → Ext(n) → XSI Line Service</i></p> <p>Block Anonymous Call Enable: No Call Waiting Enable: No</p> <p><b>XML</b></p> <pre>&lt;Block_Anonymous_Call_Enable_n_ua="na"&gt;%Block_Anonymous_Call_Enable_n%&lt;/Block_Anonymous_Call_Enable_n_&gt; &lt;Call_Waiting_Enable_n_ua="na"&gt;%Call_Waiting_Enable_n%&lt;/Call_Waiting_Enable_n_&gt;</pre> <p>Where, n=extension line number from 1-16</p> <p><b>Note:</b> %Block_Anonymous_Call_Enable_n%: Yes and No. %Call_Waiting_Enable_n%: Yes and No</p> <p><b>Example:</b></p> <pre>&lt;Block_Anonymous_Call_Enable_x_ua="na"&gt;No&lt;/Block_Anonymous_Call_Enable_n_&gt; &lt;Call_Waiting_Enable_n_ua="na"&gt;No&lt;/Call_Waiting_Enable_n_&gt;</pre>	<p><b>Block Anonymous Call Enable:</b></p> <p>Options: Yes/No</p> <p>When set to Yes, it enables synchronization of the block anonymous enable function for the line through the XSI service. Rejects calls from callers who have blocked the display of their number.</p> <p>Default value: No</p> <p><b>Call Waiting Enable:</b></p> <p>Options: Yes/No</p> <p>When set to Yes, it enables synchronization of the call waiting function for the line through the XSI service. Allows the user to receive incoming calls while on another call.</p> <p>Default value: No</p>
Step 2	<p>Set XSI Host Server, XSI Authentication Type, Login User ID, Login Password parameters to configure the XSI host server for the line.</p> <p>For more information, see <a href="#">Figure 50</a>.</p>	

#### 4.4.14 Action Button Configuration

**NOTE:** The Cisco Desk Phone 9800 Series supports this feature.

Action button allows phone users to quickly access the designated service, such as emergency service. You can associate the button with a service for users. The Action button can be found as the red button located at the top-right of the phone.

To configure the Action button from the web user interface, see the following figure.

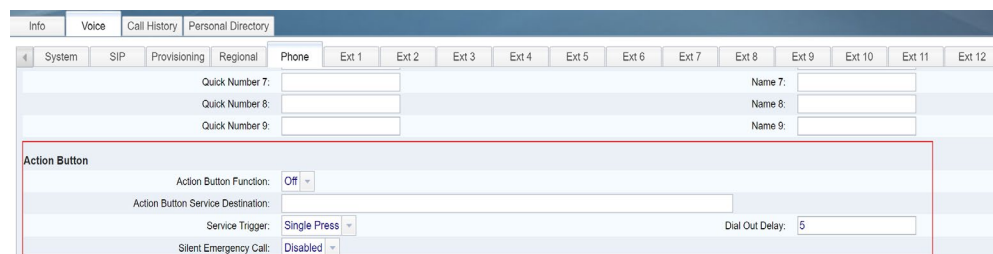


Figure 51: Action Button Configuration

Step	Command	Purpose
<b>System Configuration File CiscoDev_System.xml.template</b>		
Step 1	<p>Web Portal Voice → Phone → Action Button</p> <p>Action Button Function: Off</p> <p><b>XML :</b></p> <pre>&lt;Action_Button_Function ua="na"&gt;%ACTION_BUTTON_FUNCTION%/Action_Button_Function&gt; %ACTION_BUTTON_FUNCTION% has options: Off and Emergency Call</pre> <p><b>Example :</b></p> <pre>&lt;Action_Button_Function ua="na"&gt;Off&lt;/Action_Button_Function&gt;</pre>	<p>Allows users to quickly access the designated service.</p> <p>Options:</p> <p>Emergency Call:</p> <ul style="list-style-type: none"> <li>When you set the field to Emergency Call, make sure that you enter the phone number or URI of the emergency service.</li> </ul> <p>Off:</p> <ul style="list-style-type: none"> <li>When set to Off, the Action button doesn't function.</li> </ul> <p>Default: Off</p>
	<p><b>Action Button Service Destination: Empty</b></p> <p><b>XML</b></p> <pre>&lt;Action_Button_Service_Destination ua="na"&gt;%ACTION_BUTTON_SERVICE_DEST%/Action_Button_Service_Destination&gt;</pre> <p><b>Example :</b></p> <pre>&lt;Action_Button_Service_Destination ua="na"&gt;Empty&lt;/Action_Button_Service_Destination&gt;</pre>	<p>Provide the phone number or the URI for the service.</p> <p>If you enable the Action button without setting the service destination, the user on the phone will see a message prompting for configuration. After the user closes this notification, the warning icon will persist in the header of the phone screen until the button is properly configured or disabled.</p>
	<p><b>Service Trigger: Single Press</b></p> <p><b>XML :</b></p> <pre>&lt;Service_Trigger ua="na"&gt;%ACTION_BUTTON_SERVICE_TRIGGER%/Service_Trigger&gt; %ACTION_BUTTON_SERVICE_TRIGGER% has options: Single Press Long Press Press 3 times</pre> <p><b>Example :</b></p> <pre>&lt;Service_Trigger ua="na"&gt;Single Press&lt;/Service_Trigger&gt;</pre>	<p>Choose how users can initiate a service call using the phone's Action button.</p> <p><b>Options:</b></p> <p>Single Press: Press the Action button once.</p> <p>Long Press: Press the Action button down for at least 2 seconds to make a call.</p> <p>Press 3 times: Press the Action button three times with intervals of less than 2 seconds between each press.</p> <p>Default: Single Press</p>
	<p><b>Dial Out Delay : 5</b></p> <p><b>XML :</b></p> <pre>&lt;Dial_Out_Delay ua="na"&gt;%ACTION_BUTTON_DIAL_DELAY%/Dial_Out_Delay&gt;</pre> <p>%ACTION_BUTTON_DIAL_DELAY% ranges from 0 to 30</p> <p><b>Example :</b></p> <pre>&lt;Dial_Out_Delay ua="na"&gt;5&lt;/Dial_Out_Delay&gt;</pre>	<p>Sets the timeout period, in seconds, for the phone to initiate the service call after the Action button is pressed.</p> <p>Set it to 0 if you prefer the phone to place the call immediately upon detecting the trigger, as specified by a single press, long press, or triple press on the button.</p> <p>Default: 5 seconds</p>

Step	Command	Purpose
<b>System Configuration File CiscoDev_System.xml.template</b>		
	Silent Emergency Call : Disabled <b>XML :</b> <pre>&lt;Silent_Emergency_Call ua="na"&gt;%ACTION_BUTTON_SILENT_EMERGENCY_CALL%&lt;/Silent_Emergency_Call&gt;  %ACTION_BUTTON_SILENT_EMERGENCY_CALL% options are: Enabled Disabled</pre>	This setting works only when the Action Button Function is set to Emergency Call.  Silent emergency call is designed for discreet assistance in dangerous situations. It enables users to seek help without making any noise. Default: Disabled. Options: Enabled: Users can place one-way calls with the Action button. Disabled: The emergency call functions as a two-way call, similar to other outgoing calls.

#### 4.4.15 Power Saving Configuration (Office Hours)


**NOTE:** The Cisco Desk Phone 9800 Series supports this feature.

To reduce power consumption during periods of inactivity, two power-saving options available on the phone.

- Deep Sleep Mode
- Display-Off Mode

By default, the Office Hours feature is enabled on your phone. The default office hours are set to 7:00 to 19:00 from Monday to Friday. The phone turns off the screen outside of the designated hours. You can customize working hours, workdays, and the power-saving mode outside of office hours.

To customize working hours and workdays to reflect the business hours of your users, configure the Office hours from the web user interface, see the following figure.

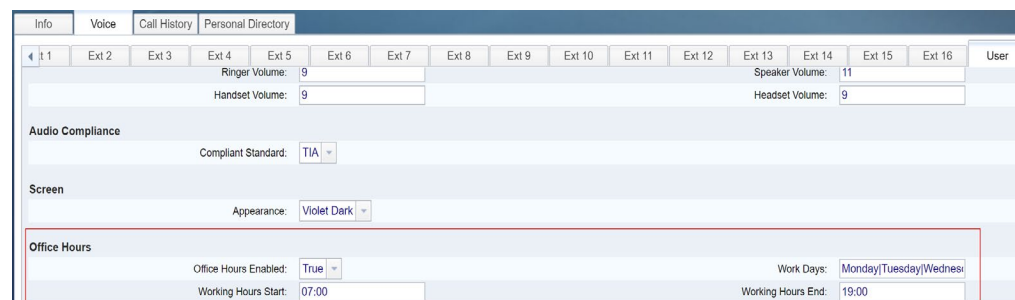

The screenshot shows the Cisco web user interface with the 'Office Hours' section highlighted. The 'Office Hours Enabled' checkbox is checked. The 'Working Hours Start' is set to 07:00 and the 'Working Hours End' is set to 19:00. The 'Work Days' are set to Monday, Tuesday, Wednesday, Thursday, and Friday.

Figure 52: Office Hours Enable




Step	Command	Purpose
<b>System Configuration File CiscoDev_System.xml.template</b>		
Step 1	<p>Web Portal Voice → User → Office Hours</p> <p>Office Hours Enabled: True</p> <p><b>XML :</b></p> <pre>&lt;Office_Hours_Enabled ua="na"&gt;%OFFICE_HOURS_ENABLED%/Office_Hours_Enabled&gt; %OFFICE_HOURS_ENABLED% has options: False True</pre> <p><b>Example :</b></p> <pre>&lt;Office_Hours_Enabled ua="na"&gt;True&lt;/Office_Hours_Enabled&gt;</pre>	<p>Enables the Office Hours feature for Cisco Desk Phone 9800 Series.</p> <p>Options:</p> <p>True: Enables Office hours.</p> <p>False: Disables the feature.</p> <p>Default: True</p> <p>Office Hours, when enabled, minimizes power usage during inactivity periods on the phone. You can configure the phone to automatically turn off the screen (Display-Off Mode) or power off (Deep Sleep Mode) outside of the designated working periods.</p>
	<p>Work Days: Monday through Friday</p> <p><b>XML</b></p> <pre>&lt;Work_Days ua="na"&gt;%WORK_DAYS%/Work_Days&gt;</pre> <p>%WORK_DAYS% ranges from Monday through Friday</p> <p><b>Example :</b></p> <pre>&lt;Work_Days ua="na"&gt;Monday&lt;/Work_Days&gt;</pre>	<p>Customize the workdays by specifying the desired days.</p> <p>During non-workdays, the phone will automatically turn off the screen. By default, workdays are set from Monday to Friday.</p> <p>This also applies to Deep Sleep Mode, if enabled. If you choose to enable Deep Sleep Mode exclusively for non-workdays, the phone will power off during those days. If you enable Deep Sleep Mode for all days, the phone will power off during both non-workdays and non-working hours on workdays.</p> <p>Sets working hours for workdays using the Working Hours Start and Working Hours End fields.</p> <p>Default: Monday through Friday</p>
	<p>Working Hours Start: 07:00</p> <p><b>XML :</b></p> <pre>&lt;Working_Hours_Start ua="na"&gt;%WORKING_HOURS_START%/Working_Hours_Start&gt;</pre> <p>%WORKING_HOURS_START% can be any hours of the day in 24-hour format</p> <p><b>Example :</b></p> <pre>&lt;Working_Hours_Start ua="na"&gt;07:00&lt;/Working_Hours_Start&gt;</pre>	<p>Set the start time for working hours using the 24-hour format.</p> <p>Outside of the specified working hours, the phone will automatically turn off the screen, or enter Deep Sleep Mode only when Deep Sleep Enabled is set to All Days.</p> <p>Examples: 09:00 for 09:00 am; 17:30 for 05:30 pm</p> <p>Default: 07:00</p>
	<p>Working Hours End : 19:00</p> <p><b>XML :</b></p> <pre>&lt;Working_Hours_End ua="na"&gt;%WORKING_HOURS_End%/Working_Hours_End&gt;</pre> <p>%WORKING_HOURS_End% can be any hours of the day in 24-hour format</p>	<p>Set the start time for working hours using the 24-hour format.</p> <p>Outside of the specified working hours, the phone will automatically turn off the screen, or enter Deep Sleep Mode only when Deep Sleep Enabled is set to All Days.</p>

Step	Command	Purpose
<b>System Configuration File CiscoDev_System.xml.template</b>		
	<b>Example:</b> <pre>&lt;Working_Hours_End ua="na"&gt;19:00&lt;/Working_Hours_End&gt;</pre>	Examples: 09:00 for 09:00 am; 17:30 for 05:30 pm Default: 19:00 Ensure that the interval between the start and end time longer than 60 minutes.

#### 4.4.15.1 Outside Office Hours (Deep Sleep) Configuration

You can customize the settings for non-working hours. You can customize the Deep Sleep Mode settings as needed.

To configure Outside Office Hours from the web user interface, see the following figure.

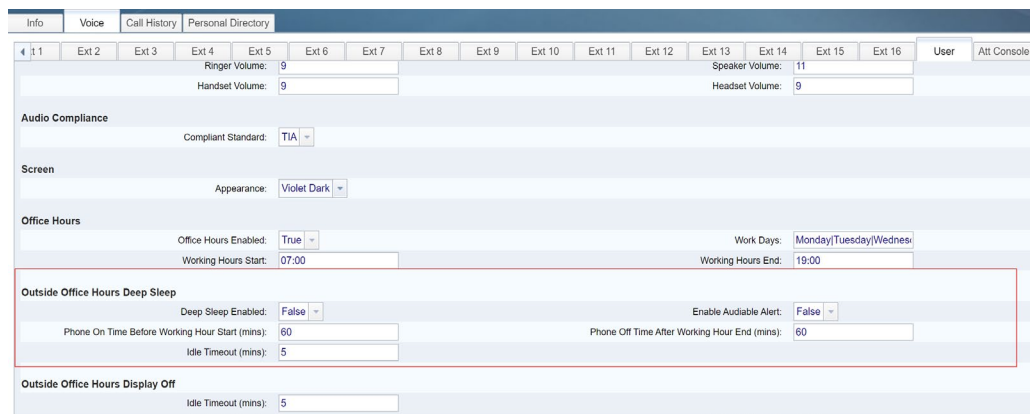

Step	Command	Purpose
<b>System Configuration File CiscoDev_System.xml.template</b>		
Step 1	Web Portal Voice → User → Outside Office Hours Deep Sleep Deep Sleep Enabled: False <b>XML:</b> <pre>&lt;Deep_Sleep_Enabled ua="rw"&gt;%Deep_Sleep_ENABLED%&lt;/Deep_Sleep_Enabled&gt;</pre> %Deep_Sleep_ENABLED% has options: False Non-work Day Only All Days <b>Example:</b> <pre>&lt;Deep_Sleep_Enabled ua="rw"&gt;False&lt;/Deep_Sleep_Enabled&gt;</pre>	Enable or disable Deep Sleep Mode on the phone. When enabled, this feature automatically powers off the phone outside of the designated office hours. This option works only when you enable the Office Hours. Options: False: The phone will not enter into Deep Sleep Mode. Non-work Day Only: The phone powers off on non-workdays. For the specified workdays, the phone will turn off the screen outside of the specified working hours. All Days: The phone powers off during both non-workdays and non-working hours on workdays. Default: False Set working hours for workdays using the <b>Working Hours Start</b> and <b>Working Hours End</b> fields.


Step	Command	Purpose
<b>System Configuration File CiscoDev_System.xml.template</b>		
	<p>Phone Off Time After Working Hour End : 60</p> <p><b>XML</b></p> <pre>&lt;Phone_Off_Time_After_Working_Hour_End_mins_ua="rw"&gt;%Phone_Off_Time_After_Working_Hour_End_mins%/Phone_Off_Time_After_Working_Hour_End_mins_&gt;</pre> <p>%Phone_Off_Time_After_Working_Hour_End_mins% ranges from 0 to 360 minutes</p> <p><b>Example :</b></p> <pre>&lt;Phone_Off_Time_After_Working_Hour_End_mins_ua="rw"&gt;60&lt;/Phone_Off_Time_After_Working_Hour_End_mins_&gt;</pre>	<p>Set the timeout period, in minutes, for the phone to automatically power off after the time specified in the <b>Working Hours End</b> field. If you want the phone to enter <b>Deep Sleep Mode</b> immediately after working hours, set it to 0.</p> <p>Default: 60 minutes</p>
	<p>Phone Off Time After Working Hour Start : 60</p> <p><b>XML</b></p> <pre>&lt;Phone_Off_Time_After_Working_Hour_Start_mins_ua="rw"&gt;%Phone_Off_Time_After_Working_Hour_Start_mins%/Phone_Off_Time_After_Working_Hour_Start_mins_&gt;</pre> <p>%Phone_Off_Time_After_Working_Hour_Start_mins% ranges from 0 to 360 minutes</p> <p><b>Example :</b></p> <pre>&lt;Phone_Off_Time_After_Working_Hour_Start_mins_ua="rw"&gt;60&lt;/Phone_Off_Time_After_Working_Hour_Start_mins_&gt;</pre>	<p>Set the timeout period for the phone to wake up from <b>Deep Sleep Mode</b> before the time specified in the <b>Working Hours Start</b> field. If you want the phone to wake up until working hours start, set it to 0.</p> <p>Default: 60 minutes</p>
	<p>Enable Audible Alert : False</p> <p><b>XML :</b></p> <pre>&lt;Enable_Audiable_Alert ua="rw"&gt;%Enable_Audiable_Alert%/&gt;</pre> <p>%Enable_Audiable_Alert% has options False True</p> <p><b>Example :</b></p> <pre>&lt;Enable_Audiable_Alert ua="rw"&gt;False&lt;/Enable_Audiable_Alert&gt;</pre>	<p>Enable or disable the phone to play audio tone to alert the user before it enters Deep Sleep Mode.</p> <p>Options:</p> <p>True: Enables the audio tone alert.</p> <p>False: Disables the audio tone alert.</p> <p>Default: False</p>
	<p>Idle Timeout (mins): 30 (for <b>Deep Sleep Mode</b>)</p> <p><b>XML :</b></p> <pre>&lt;Idle_Timeout_mins_ua="rw"&gt;%Idle_Timeout_mins%/Idle_Timeout_mins_&gt;</pre> <p>%Idle_Timeout_mins% ranges from 1 to 60 minutes</p> <p><b>Example :</b></p>	<p>This setting applies to the following two scenarios:</p> <p><b>Before the phone enters a scheduled Deep Sleep Mode</b></p> <p>Ten minutes before the scheduled deep sleep, a message pops up to notify the user that the phone will power off in ten minutes, and a</p>

Step	Command	Purpose
<b>System Configuration File CiscoDev_System.xml.template</b>		
	<pre>&lt;Idle_Timeout_mins_ ua="rw"&gt;60&lt;/Idle_Timeout__mins_&gt;</pre>	<p>countdown starts. When it times out, the phone powers off.</p> <p>During the countdown period, if there is any activity such as an incoming call, firmware upgrade, or provisioning resync, the countdown will restart. For example, if you have set this field to 20, the countdown will restart in 20 minutes after the activities are completed.</p> <p><b>After being manually awakened from Deep Sleep Mode</b></p> <p>For example, if you have set this field to 20, after being idle for 20 minutes, a message pops up to notify the user that the phone will power off in ten minutes, and a countdown starts. When it times out, the phone powers off.</p> <p>During the countdown period, if there is any activity such as an incoming call, firmware upgrade, or provisioning resync, the countdown will restart in 20 minutes after the activities are completed.</p> <p>If a user interacts with the phone during the countdown period, such as answering or declining calls or pressing keys, the phone will not enter <b>Deep Sleep Mode</b> for the rest of the day.</p>

#### 4.4.15.2 Outside Office Hours Display Off Configuration

You can set up the idle timeout for Display-Off Mode.

To configure Outside Office Hours for display-off mode from the web user interface, see the following figure.

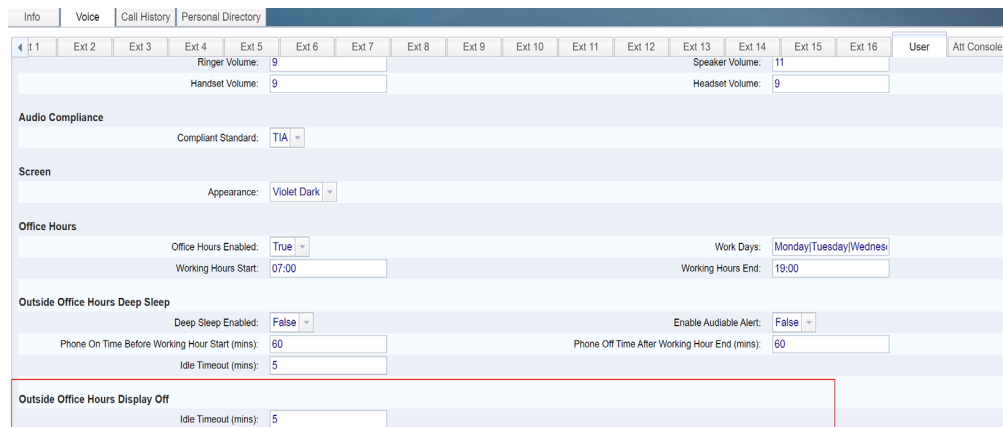

The screenshot shows the Cisco Unified Communications Manager (CUCM) web interface for configuring a phone. The 'Outside Office Hours Deep Sleep' section is expanded, showing the following settings:

- Deep Sleep Enabled: ☐ False
- Phone On Time Before Working Hour Start (mins): 60
- Idle Timeout (mins): 5
- Enable Audible Alert: ☐ False
- Phone Off Time After Working Hour End (mins): 60

The 'Outside Office Hours Display Off' section is also visible, showing the following setting:


- Idle Timeout (mins): 5

Step	Command	Purpose
<b>System Configuration File CiscoDev_System.xml.template</b>		
Step 1	<p>Web Portal Voice → User → Outside Office Hours Display Off</p> <p>Idle Timeout (mins): 5 (for <b>Display-Off Mode</b>)</p> <p><b>XML:</b></p> <pre>&lt;Idle_Timeout__mins_ ua="rw"&gt;%Idle_Timeout__mins%&lt;/Idle_Ti meout__mins_&gt;</pre> <p>%Idle_Timeout__mins% ranges from 1 to 60 minutes</p> <p><b>Example:</b></p> <pre>&lt;Idle_Timeout__mins_ ua="rw"&gt;5&lt;/Idle_Timeout__mins_&gt;</pre>	<p>Set the timeout period in minutes for the phone to automatically turn off the screen after being awakened during <b>Display-Off Mode</b>.</p> <p>Default: 5 minutes</p>

#### 4.4.16 Help Desk Configuration

This feature enables users to quickly dial out the quick numbers by using the Favorite button.

To configure Help Desk from the web user interface, see the following figure.

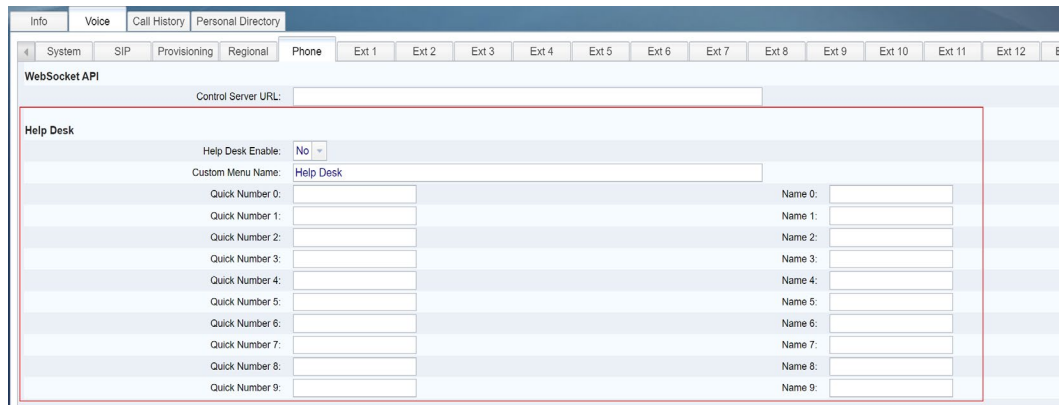

The screenshot shows the Cisco WUI configuration page for a phone. The 'Phone' tab is selected, and the 'Help Desk' configuration section is visible. The 'Help Desk Enable' dropdown is set to 'No'. The 'Custom Menu Name' is 'Help Desk'. There are two columns of input fields: 'Quick Number' (0-9) and 'Name' (0-9). The 'Quick Number' field for '0' is highlighted with a red box.


Step	Command	Purpose
<b>System Configuration File CiscoDev_System.xml.template</b>		
Step 1	<p>Web Portal Voice → Phone → Help Desk</p> <p>Help Desk Enable: No</p> <p><b>XML:</b></p> <pre>&lt;Help_Desk_Enable ua="na"&gt; %Help_Desk_Enable%/Help_Desk_Enable&gt;</pre> <p>%Help_Desk_Enable% has options Yes No</p> <p><b>Example:</b></p> <pre>&lt;Help_Desk_Enable ua="na"&gt;No&lt;/Help_Desk_Enable&gt;</pre>	<p>Enables the Help Desk feature.</p> <p>Options: Yes and No</p> <p>Default: No</p>
	<p>Custom Menu Name: Empty</p> <p><b>XML:</b></p> <pre>&lt;Custom_Menu_Name ua="na"&gt; %Custom_Menu_Name% &lt;/Custom_Menu_Name&gt;</pre> <p>%Custom_Menu_Name% represents a string</p> <p><b>Example:</b></p> <pre>&lt;Custom_Menu_Name ua="na"&gt;Help Desk&lt;/Custom_Menu_Name&gt;</pre>	<p>Customizes the help desk display name.</p> <p>Default: Empty.</p> <p>If the parameter is empty, the display name is "Help Desk".</p>
	<p>Quick Number (n)</p> <p><b>XML:</b></p> <pre>&lt;Quick_Number_1_Number ua="na"&gt;Name 1&lt;/Quick_Number_1_Number&gt;</pre> <pre>&lt;Quick_Number_2_Name ua="na"&gt;&lt;/Quick_Number_2_Name&gt;</pre>	<p>&lt;n&gt; represents the sequence number of the number.</p> <p>&lt;n&gt; ranges from 0 to 10.</p> <p>If the name is empty and only the quick number is configured, the phone will repeatedly display the quick number as the name.</p>

#### 4.4.17 Header and Line Session Display

**NOTE:** The Cisco Desk Phone 9800 Series supports this feature.

You can customize the phone to display the header and the line label.

To customize the behavior from the web user interface, see the following figure.

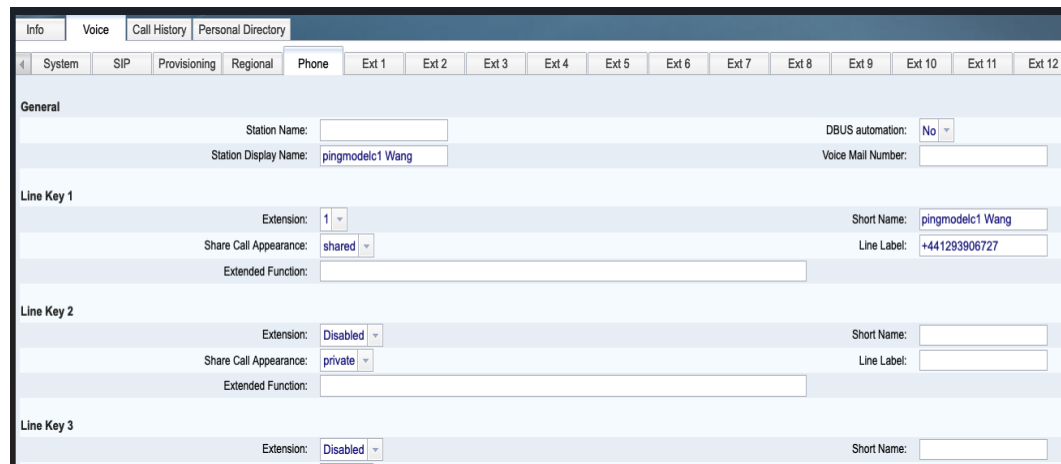

Step	Command	Purpose
<b>System Configuration File CiscoDev_System.xml.template</b>		
Step 1	<p>Web Portal Voice → Phone → Line Key [n]</p> <p><b>XML :</b></p> <pre>&lt;Line_Label_2_ua="na"&gt;%LINE_LABEL-(n)%&lt;/Line_Label_2_&gt;</pre> <p>%LINE_LABEL-(n)% can be user phone number or location number</p> <p><b>Example:</b></p> <pre>&lt;Line_Label_2_ua="na"&gt;408902345&lt;/Line_Label_2_&gt;</pre>	Displays header and line session.

#### 4.4.18 Line Key LED Behavior Customization

**NOTE:** The Cisco Desk Phone 9800 Series does not support this feature.

You can customize line key LED behavior. You can choose one of the following options:

- Default
- Preset 1

## ■ Custom

To customize the line key LED behavior from the web user interface, see the following figure.

Line Key LED Pattern	
Custom LED Type: Preset 1	Disabled LED: c=o
Idle LED: c=o	Remote Undefined LED: c=o
Local Seized LED: c=g	Remote Seized LED: c=r
Local Progressing LED: c=g	Remote Progressing LED: c=r
Local Ringing LED: c=a,p=b	Remote Ringing LED: c=a,p=b
Local Active LED: c=g	Remote Active LED: c=r
Local Held LED: c=g,p=b	Remote Held LED: c=r,p=b
Register Failed LED: c=o	Registering LED: c=o

Figure 53 Line Key LED Behavior

Step	Command	Purpose
<b>System Configuration File CiscoDev_System.xml.template</b>		
Step 1	<p><i>Web Portal Voice → Phone → Line Key LED Pattern</i></p> <p>Custom LED Type: Default</p> <p><b>XML</b></p> <pre>&lt;Custom_LED_Type ua="na"&gt;%CUSTOM_LED_TYPE%&lt;/Custom_LED_Type&gt;</pre> <p><b>Example:</b></p> <pre>&lt;Custom_LED_Type ua="na"&gt;Default&lt;/Custom_LED_Type&gt;</pre>	<p>Used to customize LED behavior.</p> <p>Options:</p> <p>Default:</p> <ul style="list-style-type: none"> <li>Choose this option to use system default behavior, which is the current MPP Series behavior.</li> <li>After the web page refreshes, all configuration fields for LED patterns are left as blank to set the LED behavior to the system default for the phones with firmware earlier than Release 11.3.1.</li> </ul> <p>Preset 1:</p> <ul style="list-style-type: none"> <li>Choose this option to retain the pre-configured settings.</li> <li>After the web page refreshes, all fields are populated with preset values.</li> </ul> <p>Custom:</p> <ul style="list-style-type: none"> <li>Choose this option if you want to customize the LED behavior.</li> <li>Any field that you leave blank uses the system default.</li> </ul> <p>Default value: Default</p>
	<p><b>XML</b></p> <pre>&lt;Disabled_LED ua="na"&gt;%DISABLED_LED%&lt;/Disabled_LED&gt; &lt;Idle_LED ua="na"&gt;%IDLE_LED%&lt;/Idle_LED&gt; &lt;Remote_Undefined_LED ua="na"&gt;%REMOTE_UNDEFINED_LED%&lt;/Remote_Undefined_LED&gt; &lt;Local_Seized_LED ua="na"&gt;%LOCAL_SEIZED_LED%&lt;/Local_Seized_LED&gt; &lt;Remote_Seized_LED ua="na"&gt;%REMOTE_SEIZED_LED%&lt;/Remote_Seized_LED&gt; &lt;Local_Progressing_LED ua="na"&gt;%LOCAL_PROGRESSING_LED%&lt;/Local_Progressing_LED&gt;</pre>	<p>Customizes LED behavior.</p> <p>Options:</p> <ul style="list-style-type: none"> <li>blank</li> <li>string_pattern</li> </ul> <p>String_pattern format is:</p> <ul style="list-style-type: none"> <li>c=&lt;COLOR&gt; [: p=&lt;PATTERN&gt;]</li> </ul> <p>COLOR choices are:</p> <ul style="list-style-type: none"> <li>o is OFF</li> <li>g is GREEN</li> <li>r is RED</li> <li>a is AMBER</li> </ul> <p>PATTERN choices are:</p> <p>n is for no blink with solid color.</p>



Step	Command	Purpose
<b>System Configuration File CiscoDev_System.xml.template</b>		
	<pre> &lt;Remote_Progressing_LED ua="na"&gt;%R EMOTE_PROGRESSING_LED%&lt;/Remote_Pro gressing_LED&gt;  &lt;Local_Ringing_LED ua="na"&gt;%LOCAL_ RINGING_LED%&lt;/Local_Ringing_LED&gt;  &lt;Remote_Ringing_LED ua="na"&gt;%REMOT E_RINGING_LED%&lt;/Remote_Ringing_LED &gt;  &lt;Local_Active_LED ua="na"&gt;%LOCAL_A CTIVE_LED%&lt;/Local_Active_LED&gt;  &lt;Remote_Active_LED ua="na"&gt;%REMOT E_ACTIVE_LED%&lt;/Remote_Active_LED&gt;  &lt;Local_Held_LED ua="na"&gt;%LOCAL_HEL D_LED%&lt;/Local_Held_LED&gt;  &lt;Remote_Held_LED ua="na"&gt;%REMOT E_HELD_LED%&lt;/Remote_Held_LED&gt;  &lt;Register_Failed_LED ua="na"&gt;%REGI STER_FAILED_LED%&lt;/Register_Failed_ LED&gt;  &lt;Registering_LED ua="na"&gt;%REGISTER ING_LED%&lt;/Registering_LED&gt; </pre>	<p>b is for blink with color (equivalent of system default "slow blink").</p> <p>Example:</p> <p>LED shows solid red: c=r;p=n or c=r</p> <p>LED shows blinking amber: c=a;p=b</p> <p>LED turns off: c=o</p>

#### 4.4.18.1 Attendant Console LED Behavior

When you make your selection in the Custom LED Type drop-down list, changes also occur in the Att Console tab. This only happens when you configure simultaneous LED behavior for phone line keys and key expansion module line keys.

To view the key expansion module LED behavior from the web user interface, see the following figure.

Att Console Key LED Pattern			
Application LED:	<input type="text" value="c=o"/>	Serv Subscribe Failed LED:	<input type="text" value="c=o"/>
Serv Subscribing LED:	<input type="text" value="c=o"/>	Parking Lot Idle LED:	<input type="text" value="c=o"/>
Parking Lot Busy LED:	<input type="text" value="c=r"/>	BLF Idle LED:	<input type="text" value="c=o"/>
BLF Ringing LED:	<input type="text" value="c=a;p=b"/>	BLF Busy LED:	<input type="text" value="c=r"/>
BLF Held LED:	<input type="text" value="c=r"/>		

Figure 54 Att Console LED Behavior

Step	Command	Purpose
<b>System Configuration File CiscoDev_System.xml.template</b>		
Step 1	<p><i>Web Portal Voice → Att Console → Att Console Key LED Pattern</i></p> <p>Custom LED Type: Default</p> <p><b>XML</b></p> <pre> &lt;Application_LED ua="na"&gt;%APPLICATION_LED%&lt;/Applicat ion_LED&gt;  &lt;Serv_Subscribe_Failed_LED ua="na"&gt;%SERV_SUBSCRIBE_FAILED_LED% &lt;/Serv_Subscribe_Failed_LED&gt; </pre>	<p>Used to view key expansion module LED behavior.</p> <p>Options:</p> <ul style="list-style-type: none"> <li>blank</li> <li>string_pattern</li> </ul> <p>String_pattern format is:</p> <ul style="list-style-type: none"> <li>c=&lt;COLOR&gt; [: p=&lt;PATTERN&gt;]</li> </ul> <p>COLOR choices are:</p> <ul style="list-style-type: none"> <li>o is OFF</li> <li>g is GREEN</li> <li>r is RED</li> </ul>

Step	Command	Purpose
<b>System Configuration File CiscoDev_System.xml.template</b>		
	<pre> &lt;Serv_Subscribing_LED ua="na"&gt;%SERV_SUBSCRIBING_LED%&lt;/Serv_Subscribing_LED&gt;  &lt;Parking_Lot_Idle_LED ua="na"&gt;%PARKING_LOT_IDLE_LED%&lt;/Parking_Lot_Idle_LED&gt;  &lt;Parking_Lot_Busy_LED ua="na"&gt;%PARKING_LOT_BUSY_LED%&lt;/Parking_Lot_Busy_LED&gt;  &lt;BLF_Idle_LED ua="na"&gt;%BLF_IDLE_LED%&lt;/BLF_Idle_LED&gt;  &lt;BLF_Ringing_LED ua="na"&gt;%BLF_RINGING_LED%&lt;/BLF_Ringing_LED&gt;  &lt;BLF_Busy_LED ua="na"&gt;%BLF_BUSY_LED%&lt;/BLF_Busy_LED&gt;  &lt;BLF_Held_LED ua="na"&gt;%BLF_HELD_LED%&lt;/BLF_Held_LED&gt; </pre>	<ul style="list-style-type: none"> <li>▪ a is AMBER</li> </ul> <p>PATTERN choices are:</p> <ul style="list-style-type: none"> <li>▪ n is for no blink with solid color.</li> <li>▪ b is for blink with color (equivalent of system default "slow blink").</li> </ul> <p>Example:</p> <p>LED shows solid red: c=r;p=n or c=r</p> <p>LED shows blinking amber: c=a;p=b</p> <p>LED turns off: c=o</p>

#### 4.4.18.2 Assign an Extension Number to a Key Expansion Module Line Key (8800 only)

You can assign an extension number to a key expansion module line key so that the line key can be used as a SIP line. For a line key, you can enable an extension number that ranges from 1 to 16. You can use this line key for phone features such as make a call, answer a call, or add more than one person to a conference call. Only audio key expansion module and video key expansion module support this feature.

Phone line keys support 16 extensions.

To assign an extension number to KEM Line Key from the web user interface, see the following figure:



Figure 54 KEM Key

Step	Command	Purpose
<b>System Configuration File CiscoDev_System.xml.template</b>		
Step 1	<p><i>Web Portal Voice → Att Console → Unit [m] Line key [n]</i></p> <p><b>XML</b></p> <pre>&lt;Unit_n_Extension_m_ua="na"&gt; %Unit_n_Extension_m_%&lt;/Unit_n_Extension_m_&gt; &lt;Unit_n_Extension_m_ua="na"&gt;Disabled&lt;/Unit_n_Extension_m_&gt;</pre> <p>Where, n is the unit number of the KEM (1-2 for 8851, 1-3 for 8861 and 8865), and m is the key number (1-28).</p>	<p>Use the KEM Line Key for SIP line. Options:</p> <p>1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 Disabled</p> <p>The maximum number of KEM that phone supports is 2 for 8851 and 3 for 8861 and 8865. Default: Disabled.</p>

#### 4.4.19 Security Classification Feature Configuration

Cisco MPP Series currently does not support this feature.

#### 4.4.20 Emergency Call Configuration

Cisco MPP Series currently does not support this feature.

#### 4.4.21 Advice of Charge Configuration

Cisco MPP Series currently does not support this feature.

#### 4.4.22 Conference Event Configuration

Cisco MPP Series currently does not support this feature.

### 4.5 Xtended Services Interface Feature Configuration

This section provides configuration instructions for configuration of Xtended Services Interface (Xsi) features supported by the phone, including but not limited to Cisco BroadWorks Directory and Cisco BroadWorks Call Logs.

#### 4.5.1 XSI Authentication Method

The phone must authenticate with the Xsi interface to access the available features. This section identifies the authentication method(s) supported by the phone and the configuration required.

- 1) Authenticate with SIP Authentication Credentials.



Figure 55 Cisco MPP Series XSI Authentication SIP Credentials

Step	Command	Purpose
<b>System Configuration File &lt;mac-address&gt;_CiscoDev.xml</b>		
Step 1	<p>Set XSI Authentication Type: Web Portal Voice → Phone Tab → XSI Service</p> <p>XSI Authentication Type: SIP Credentials</p> <p><b>XML</b></p> <pre>&lt;XSI_Authentication_Type ua="na"&gt;SIP Credentials&lt;/XSI_Authentication_Typ e&gt;</pre> <p><b>Example:</b></p> <pre>&lt;XSI_Authentication_Type ua="na"&gt;SIP Credentials&lt;/XSI_Authentication_Typ e&gt;</pre>	<p>Sets the XSI Authentication Type. Default value: Login Credentials.</p>

## 2) Authenticate with Cisco BroadWorks User Login Credentials.



Figure 56 XSI Authentication Login Credentials

Step	Command	Purpose
<b>System Configuration File &lt;mac-address&gt;_CiscoDev.xml</b>		
Step 1	<p>Set XSI Authentication Type: Web Portal Voice → Phone Tab → XSI Service</p> <p>XSI Authentication Type: Login Credentials</p> <p><b>XML</b></p> <pre>&lt;XSI_Authentication_Type ua="na"&gt;Login Credentials&lt;/XSI_Authentication_Type&gt;</pre> <p><b>Example:</b></p> <pre>&lt;XSI_Authentication_Type ua="na"&gt;Login Credentials&lt;/XSI_Authentication_Type&gt;</pre>	<p>Set the XSI Authentication Type. Default value: Login Credentials.</p>

#### 4.5.2 XSI Single Sign-On Feature Configuration

This section provides configuration instructions to configure the phone to enable the profile account authentication feature that supports a temporary login token as an alternative to the Device Management user name and password. When this feature is enabled, the phone will prompt for Xsi user name and Xsi password. Profile account authentication enables the phone to resynchronize the provisioning profile.

When you enable this feature, the Profile account setup screen is displayed on the phone for the following cases:

- When the HTTP or HTTPs 401 authentication error occurs during first-time provisioning after the phone reboots.
- When the Profile account username and password are empty.
- When there are no username and password in the Profile Rule.

To configure the Profile Account Authentication on the Cisco BroadWorks server, see the following figure.

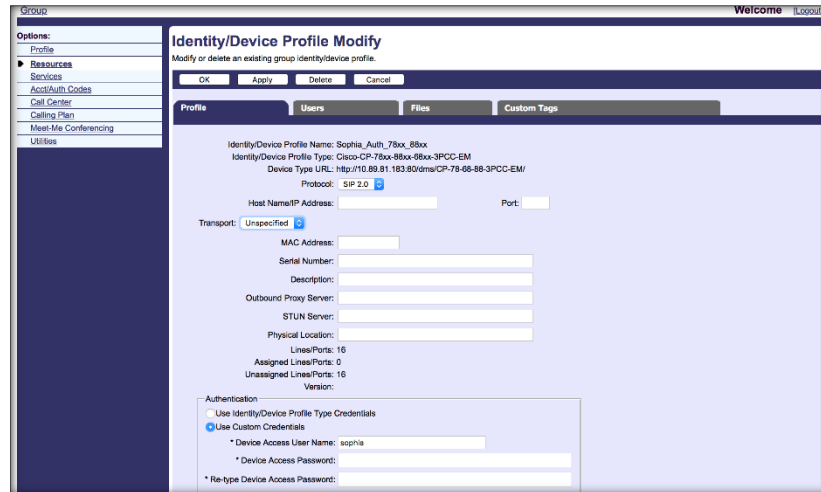


Figure 57 Profile Account Authentication on Cisco BroadWorks Server

- 1) Log in as an admin and access *Admin* → *Device Profile Type*. Enable User Name/Password authentication.
- 2) Log in with a group account and access *Admin* → *Resources* → *Identity/Device Profile Modify*.
- 3) Choose the correct Device Profile Type and set the Device Access User Name/Password.
- 4) Associate the Xsi user with the Auth Device Profile.

To enable the Profile Account Authentication Type, see the following figure.

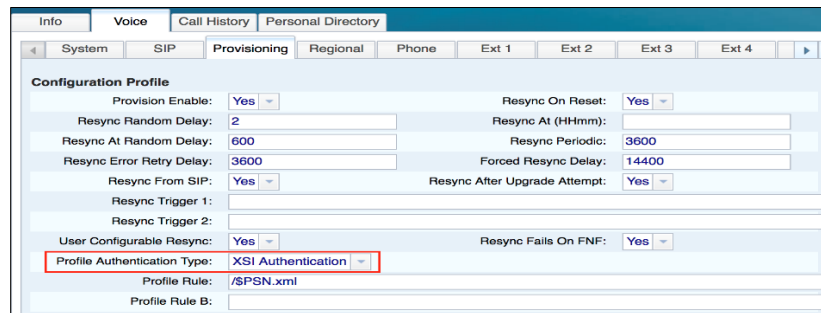


Figure 58 Cisco MPP Series Profile Authentication Type

Step	Command	Purpose
<b>System Configuration File &lt;mac-address&gt;_CiscoDev.xml</b>		
Step 1	<p>Set Profile Authentication Type: Web Portal Voice → Provisioning → Configuration Profile Profile Authentication Type: XSI Authentication</p> <p><b>XML</b></p> <pre>&lt;Profile_Authentication_Type ua="na"&gt;%PROFILE_AUTH_TYPE%&lt;/Profile_Authentication_Type&gt;</pre> <p><b>Note:</b> %Profile_AUTH_Type% have three types: Disabled, Basic HTTP Authentication, XSI Authentication</p> <p><b>Example:</b></p> <pre>&lt;Profile_Authentication_Type ua="na"&gt;XSI Authentication&lt;/Profile_Authentication_Type&gt;</pre>	<p>Set the Profile Authentication Type Default value: Basic HTTP Authentication</p>

To configure XSI Host Server and XSI Authentication Type, see the following figure.



Figure 59 XSI Host Server and XSI Authentication Type Configuration

Step	Command	Purpose
<b>System Configuration File &lt;mac-address&gt;_CiscoDev.xml</b>		
Step 1	<p>Set XSI Host Server. Web Portal Voice → Phone → XSI Host Server XSI Host Server: xsp.broadworks.net</p>	<p>Sets the XSI Host Server.</p>
Step 2	<p>Set XSI Authentication Type. Web Portal Voice → Phone → XSI Host Server XSI Authentication Types:</p> <ol style="list-style-type: none"> <li>1) Login Credentials - For account information, see Authenticate with SIP Authentication Credentials.</li> <li>2) SIP Credentials - For account information, see Authenticate with Cisco BroadWorks User Login Credentials.</li> </ol>	<p>Sets the XSI Authentication Type. Default value: Login Credentials. Note that if the user does not fill in the account information, the single sign-on dialog will appear to prompt the user to enter the account information.</p>

### 4.5.3 Cisco BroadWorks User Service Configuration

Cisco MPP Series currently does support BroadWorks Anywhere and Caller ID Blocking. BroadWorks Anywhere is a solution of seamlessly moving a call from a location (for example, desk phone number) to another location (for example, mobile phone). This feature is to display the BroadWorks Anywhere locations (phone numbers) on phone, and to support add, modify, and delete operations from the GUI. The BroadWorks Anywhere service should be assigned to the user from the Cisco BroadWorks portal for this feature to work. BroadWorks Anywhere should be enabled and configured from the phone web page by the administrator.

#### Cisco BroadWorks Configuration

- 1) To configure the BroadWorks Anywhere service for the user, go to *User → Assign Services*.

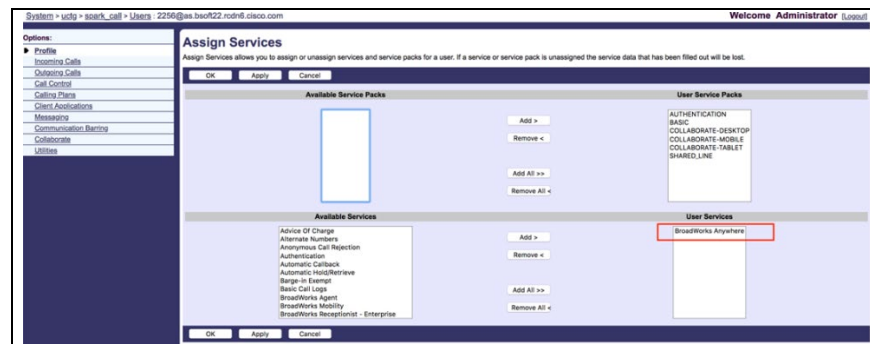


Figure 60 BroadWorks Anywhere Service for User

- 2) Configure the password for the user.
  - If you set the *XSI Authentication Type* to “Login Credentials” from the phone web page, you need to configure the User’s Passwords from the Cisco BroadWorks portal. It is identical to “Login Password” on the phone web page.

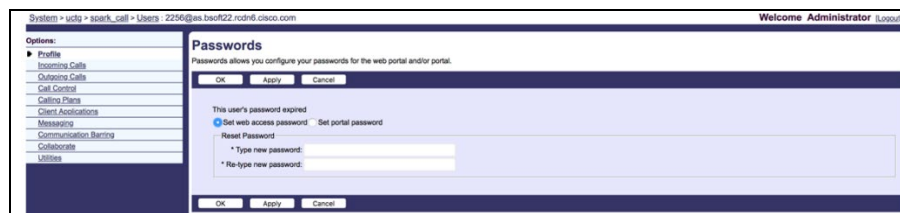


Figure 61 BroadWorks Anywhere Password Page

- If you set the *XSI Authentication Type* to “SIP Credentials” from the phone web page, you need to assign an Authentication service to the user, and then configure *User → Utilities → Authentication* from the Cisco BroadWorks portal. They are identical to the *Auth ID* and the *Password* on the phone web page.


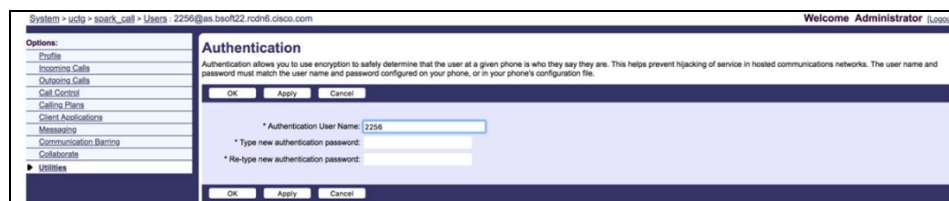


Figure 62 BroadWorks Anywhere Authentication Page




## Device Webpage Configuration

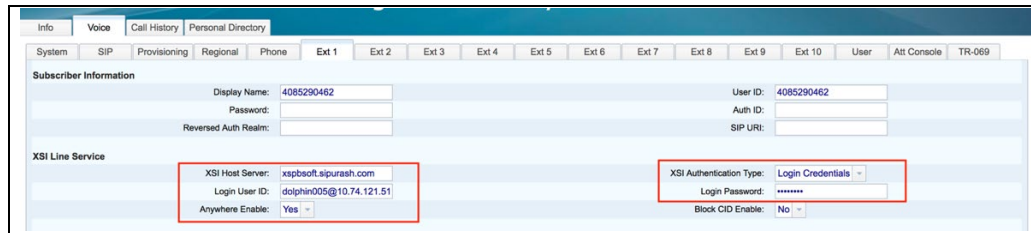

The screenshot shows the 'Subscriber Information' and 'XSI Line Service' sections of the configuration page. The 'Subscriber Information' section includes fields for Display Name (4085290462), User ID (4085290462), Password (masked), Auth ID (masked), Reversed Auth Realm (empty), and SIP URI (empty). The 'XSI Line Service' section includes fields for XSI Host Server (xspbsoft.sipurash.com), Login User ID (dolphin005@10.74.121.51), XSI Authentication Type (Login Credentials), Login Password (masked), Anywhere Enable (Yes), and Block CID Enable (No).

Figure 63 BroadWorks Anywhere XSI Authentication – Login Credentials

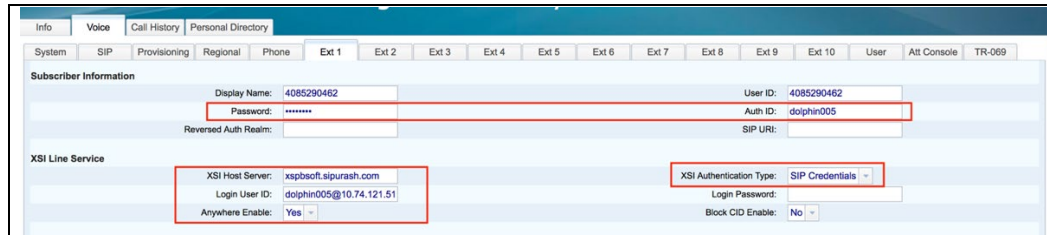

The screenshot shows the 'Subscriber Information' and 'XSI Line Service' sections of the configuration page. The 'Subscriber Information' section includes fields for Display Name (4085290462), User ID (4085290462), Password (masked), Auth ID (dolphin005), Reversed Auth Realm (empty), and SIP URI (empty). The 'XSI Line Service' section includes fields for XSI Host Server (xspbsoft.sipurash.com), Login User ID (dolphin005@10.74.121.51), XSI Authentication Type (SIP Credentials), Login Password (empty), Anywhere Enable (Yes), and Block CID Enable (No).

Figure 64 BroadWorks Anywhere XSI Authentication – SIP Credentials

Step	Command	Description
<b>Configuration File &lt;mac-address_CiscoDev&gt;.xml</b>		
Step 1	<p>Set the "Anywhere Enable". Voice Tab → Ext &lt;#&gt;: Anywhere Enable to yes</p> <p>Set "XSI Host Server" Voice Tab → Ext &lt;#&gt; → XSI Line Settings: Check Figure 29 and Figure 30</p> <p>Set "Login User ID" Voice Tab → Ext &lt;#&gt; → XSI Line Settings: Check Figure 29 and Figure 30</p> <p><b>XML</b></p> <pre> &lt;XSI_Host_Server_1_ua="na"&gt;% XSI_Host_Server_1_%&lt;/XSI_Host_ Server_1_&gt; &lt;XSI_Authentication_Type_1_ ua="na"&gt;% XSI_Authentication_Type_1_%&lt;/X SI_Authentication_Type_1_&gt; &lt;Login_User_ID_1_ua="na"&gt;% Login_User_ID_1_%&lt;/Login_User_ ID_1_&gt; &lt;Login_Password_1_ua="na"&gt;% Login_Password_1_%&lt;/Login_Pass word_1_&gt; &lt;Anywhere_Enable_1_ua="na"&gt;% Anywhere_Enable_1_%&lt;/Anywhere_ Enable_1_&gt; </pre>	These device settings allow the user to use BroadWorks Anywhere.

#### 4.5.4 Cisco BroadWorks Call Logs Configuration

Integration with the Cisco BroadWorks Xtended Services Interface for Call Logs enables the phone to get a call log history (all calls) from Cisco BroadWorks and make them available to a user via the phone menus.

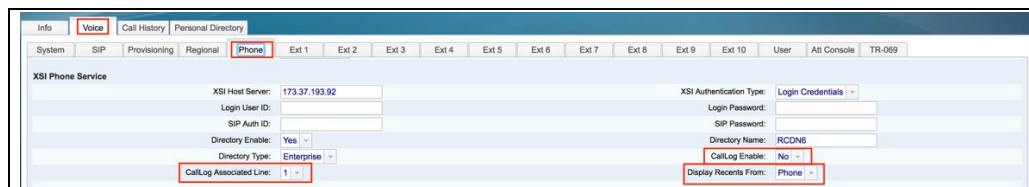


Figure 65 Cisco MPP Series Call Log Enabled

Step	Command	Description
<b>Configuration File &lt;mac-address_CiscoDev&gt;.xml</b>		
Step 1	<p>Set Cisco BroadWorks Call Log</p> <p><b>Web Example:</b></p> <p>Phone Tab → XSI Service: CallLog_Enable: Yes</p> <p><b>XML</b></p> <pre>&lt;CallLog_Enable ua="na"&gt; %CallLog_Enable% &lt;/CallLog_Enable&gt;  &lt;CallLog_Associated_Line ua="na"&gt;%CallLog_Associated_Line% &lt;/CallLog_Associated_Line&gt;  &lt;Display_Recents_From ua="na"&gt;%Display_Recents_From %&lt;/Display_Recents_From&gt;  <b>XML Example:</b> &lt;CallLog_Enable ua="na"&gt;Yes&lt;/CallLog_Enable&gt; &lt;CallLog_Associated_Line ua="na"&gt;1&lt;/CallLog_Associated_Line&gt; &lt;Display_Recents_From ua="na"&gt;Server&lt;/Display_Recents_From&gt; &lt;Exec_Call_Bridge_Code ua="na"&gt;*15&lt;/Exec_Call_Bridge_Code&gt;</pre>	These device settings allow the user to use Cisco BroadWorks Call Logging.

#### 4.5.5 Cisco BroadWorks Directory Configuration

Integration with the Cisco BroadWorks Xtended Services Interface for Directories enables the phone to download personal, group, and enterprise directories from Cisco BroadWorks and make them available to a user via the phone menus. To enable this feature, follow these instructions.

Step	Command	Description
<b>Configuration File &lt;mac-address_CiscoDev&gt;.xml</b>		
Step 1	<p>Set BroadSoft Directory Settings.</p> <p><b>Web Example:</b></p> <p><u>Phone Tab:</u></p> <p>Directory Enable: Yes</p> <p>XSI Host Server: xsp.broadworks.net</p> <p>Directory Name: Broadsoft</p> <p><b>XML:</b></p> <pre>&lt;Directory_Enable ua="na"&gt;Yes&lt;/Directory_Enable&gt; &lt;XSI_Host_Server ua="na"&gt;%XSI_SERVER%&lt;/XSI_Host_Server&gt; &lt;Directory_Name ua="na"&gt;%BROADSOFT_DIR_NAME%&lt;/Directory_Name&gt; &lt;Directory_Type ua="na"&gt;%DIRECTORY_TYPE%&lt;/Directory_Type&gt; <b>XML Example:</b> &lt;Directory_Enable ua="na"&gt;Yes&lt;/Directory_Enable&gt; &lt;XSI_Host_Server ua="na"&gt;xsp.broadworks.net&lt;/XSI_Host_Server&gt; &lt;Directory_Name ua="na"&gt;Broadsoft&lt;/Directory_Name&gt; &lt;Directory_Type ua="na"&gt;Enterprise&lt;/Directory_Type&gt;</pre>	These device settings allow the user to use BroadSoft Directory lookups via the Xtended Services Platform server.

Searches are based upon directory hierarchy. For more information, see the *Cisco Multiplatform Series Phones Administration Guide* [1].

#### 4.5.5.1 Cisco BroadWorks All Contacts Display Configuration

This section provides configuration instructions on how to enable Cisco BroadWorks directory to view all Cisco BroadWorks contacts without performing any search operation, enable or disable five Cisco BroadWorks directories (Enterprise, Enterprise Common, Group, Group Common, and Personal) individually. Also, maximum number of contacts displayed on the screen can be configured.

To configure the feature, you must create a user account which can access the five Cisco BroadWorks directories.

Configure a Cisco BroadWorks Account to Access Five BroadWorks Directories.

#### 4.5.5.2 Configure a Cisco BroadWorks Account to Access Five BroadWorks Directories

To configure the Cisco BroadWorks account, see the following figures.

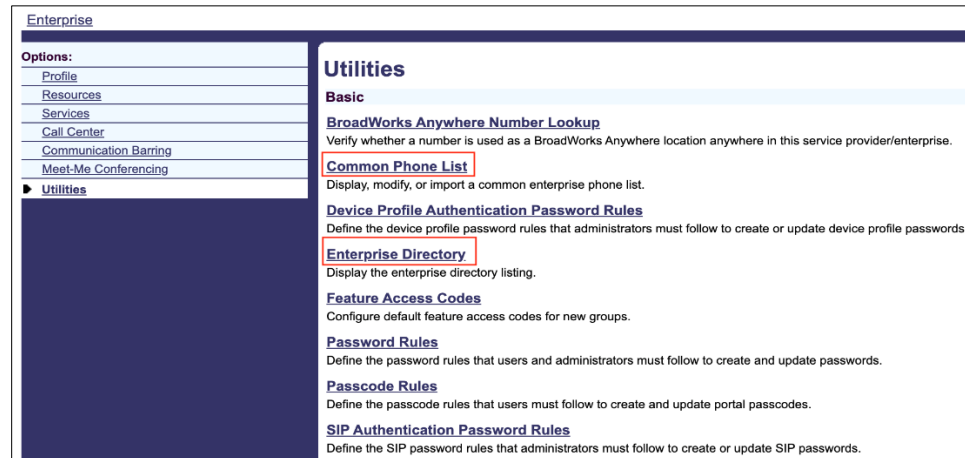


Figure 66 Configure Enterprise and Enterprise Common Directory

- 3) Log in to your Enterprise level account that your administrator has created for you in the Cisco BroadWorks server.
- 4) Select *Enterprise* → *Utilities*.
- 5) Configure Enterprise Common Directory and Enterprise Directory respectively to view the Enterprise directory listing from Common Phone List and Enterprise Directory menus, respectively.

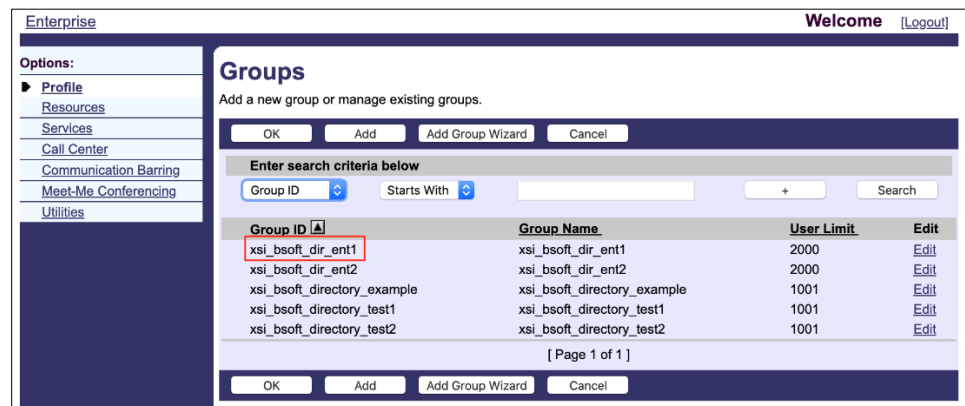


Figure 67 Configure Group Directory Contacts

- 6) Select *Enterprise* → *Profiles* → *Groups*.

You can see the groups available in the enterprise directory. In the above example, you can select the group *xsi\_bsoft\_dire\_ent1* and modify. Select the group and access it.

Enterprise > xsi\_bsoft\_dir\_ent1

**Options:**  
[Profile](#)  
[Resources](#)  
[Services](#)  
[Call Center](#)  
[Communication Barring](#)  
[Meet-Me Conferencing](#)  
[Utilities](#)

## Users

Add a new user or manage existing users in your department or group.

OK Add Cancel

Enter search criteria below

User ID Starts With

User ID	Last Name	First Name	Phone Number	Extension
AveryGee@sipurash22.com	Avery	Gee	+1-5081001010	1010
<u>bsdirtest@sipurash22.com</u>	test	bsdir	+1-5081001018	1018
Hamilton@sipurash22.com	Hamilton	Alexander	+1-5081001090	1090
skasisub@sipurash22.com	Subramanian	Kasi Subramanian	+1-5081001043	1043
tculbertEnterprise6851@sipurash22.com	Culbertson	Tony	+1-5081001003	
tculbertEnterprise8851@sipurash22.com	Culbertson	Tony	+1-5081001001	1001
tfloryan8851HE@sipurash22.com	Group	John	+1-5081001040	1040
tfloryan8851WE@sipurash22.com	Bellon	Lorraine	+1-5081001041	1041
tfloryanHost@sipurash22.com	Floryanzia	Tyrone	+1-5081001042	1042
willalex@sipurash22.com	Alexander	William	+1-5081001047	1047
wmoorefield@sipurash22.com	Moorefield	Wayne	+1-5081001015	1015

[ Page 1 of 1 ]

OK Add Cancel

Figure 68 Add Users to Group Directory

- 7) Go to *Profile* → *Users*.

You can see all users in the group directory contacts list.

- 8) To add a new user, click **Add**.

For example, you can add a new user (*bsdirtest@sipurash22.com*) as shown in [Figure 68](#).

Select *Enterprise* → *xsi\_bsoft\_dir\_ent1* → *Utilities*.

Enterprise > xsi\_bsoft\_dir\_ent1

**Options:**  
[Profile](#)  
[Resources](#)  
[Services](#)  
[Call Center](#)  
[Communication Barring](#)  
[Meet-Me Conferencing](#)  
**Utilities**

## Utilities

### Basic

#### BroadWorks Anywhere Number Lookup

Verify whether a number is used as a BroadWorks Anywhere location in this group.

#### Common Phone List

Display or modify common group phone lists.

#### Custom Contact Directories

Define new custom contact directories that contain a subset of the users in the group or enterprise.

Figure 69 Configuring Group Common Directory

- 9) Select *Common Phone List*.

Common Phone List menu represents Group Common directory. You can configure the directory using this menu.

- 10) Go to *Enterprise* → *xsi\_bsoft\_dir\_ent1* → *Users* → *Outgoing Calls* → *Personal Phone List*.

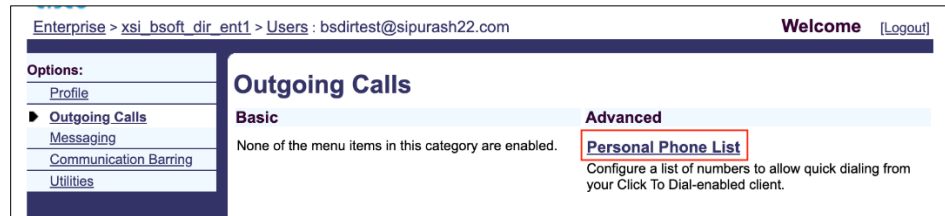


Figure 70 Configure Personal Directory

You can configure personal directory here.

11) Select *Enterprise* → *xsi\_bsoft\_dir\_ent1* → *Users* → *Profile* → *Passwords* to set the user credentials.

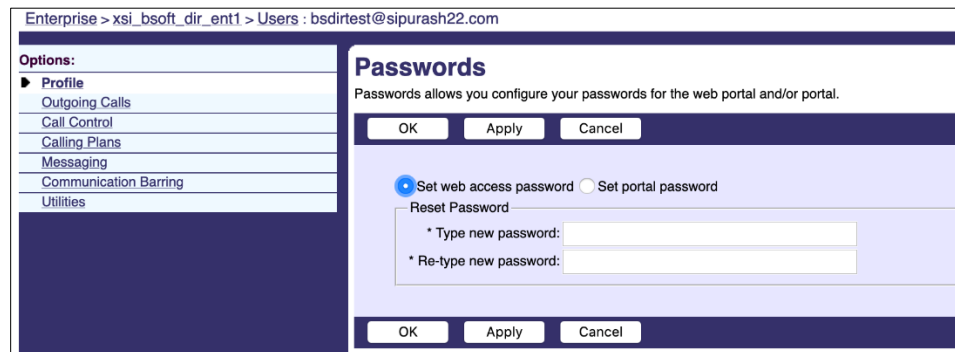


Figure 71 User Credentials

The user account is created.

To configure the Directory services from the phone web interface, see the following figure.

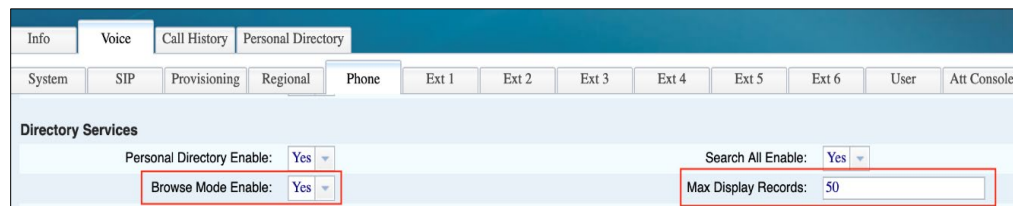


Figure 72 Directory Service

Step	Command	Description
<b>Configuration File &lt;mac-address_CiscoDev&gt;.xml</b>		
Step 1	<p>Set Enterprise User Account</p> <p><b>Web Example:</b></p> <p>Voice → Phone → Directory Services:</p> <p>Browse Mode Enable: Yes</p> <p>Max Display Records: 50</p> <p><b>XML</b></p> <pre>&lt;Browse_Mode_Enable ua="na"&gt;%BROWSE_MODE_ENABLE%/Browse_Mode_Enable&gt;</pre> <p><b>Note:</b> %BROWSE_MODE_ENABLE% has two options: Yes and No</p> <pre>&lt;Max_Display_Records ua="na"&gt;%MAX_DISPLAY_RECORDS%/Max_Display_Records&gt;</pre> <p><b>Note:</b> %MAX_DISPLAY_RECORDS% has a value range from 50 to 999</p> <p><b>XML Example:</b></p> <pre>&lt;Browse_Mode_Enable ua="na"&gt;Yes&lt;/Browse_Mode_Enable&gt;</pre> <pre>&lt;Max_Display_Records ua="na"&gt;50&lt;/Max_Display_Records&gt;</pre>	<p><b>Browse Mode Enable:</b></p> <p>Determines whether to trigger an auto search operation to show the contacts when you enter a directory in the phone.</p> <p>Default: Yes</p> <p><b>Max Display Records:</b></p> <p>Sets up the maximum number of contacts that display in the All, BroadSoft, and LDAP directories.</p> <p>Default: 50</p>
Step 2	<p><b>Web Example:</b></p> <p>Voice → Phone → XSI Phone Services:</p> <p>Directory Individual Mode Enable : No</p> <p><b>XML</b></p> <pre>&lt;XsiDir_Individual_Mode_Enable ua="na"&gt;%XSIDIR_INDIVIDUAL_MODE_ENABLE%/XsiDir_Individual_Mode_Enable&gt;</pre> <p><b>Note:</b> %XSIDIR_INDIVIDUAL_MODE_ENABLE% has two options: Yes and No.</p> <p><b>XML Example:</b></p> <pre>&lt;XsiDir_Individual_Mode_Enable ua="na"&gt;No&lt;/XsiDir_Individual_Mode_Enable&gt;</pre>	<p>Enables the individual mode for the Cisco BroadWorks directories. The parameter is valid only when the <i>Directory Enable</i> is set to "Yes". When this mode is enabled, the individual Cisco BroadWorks directories (such as, Enterprise, Group, Personal, and so on) can display on the phone.</p> <p>Default: No</p>



Step	Command	Description
<b>Configuration File &lt;mac-address_CiscoDev&gt;.xml</b>		
	<p>Directory Personal Enable : No</p> <p><b>XML:</b></p> <pre>&lt;XsiDir_Personal_Enable ua="na"&gt;%XSIDIR_PERSONAL_ENAB LE%&lt;/XsiDir_Personal_Enable&gt;</pre> <p><b>Note:</b></p> <p>%XSIDIR_PERSONAL_ENABLE% has two options: Yes and No.</p> <p><b>XML Example:</b></p> <pre>&lt;XsiDir_Personal_Enable ua="na"&gt;%XSIDIR_PERSONAL_ENAB LE%&lt;/XsiDir_Personal_Enable&gt;</pre>	<p>Enables the Cisco BroadWorks personal directory for the phone user. Select "Yes" to enable the directory and select "No" to disable it. The parameter is valid only when both "Directory Enable" and "Directory Individual Mode Enable" are set to "Yes".</p> <p>Default: No</p>
	<p>Directory Personal Name : Empty</p> <p><b>XML:</b></p> <pre>&lt;XsiDir_Personal_Name ua="na"&gt;%XSIDIR_PERSONAL_NAME %&lt;/XsiDir_Personal_Name&gt;</pre> <p><b>XML Example:</b></p> <pre>&lt;XsiDir_Personal_Name ua="na"&gt;Empty&lt;/XsiDir_Persona l_Name&gt;</pre>	<p>Name of the Cisco BroadWorks personal directory. Displays on the phone as a directory choice.</p> <p>Default: Empty.</p> <p>If the value is empty, the directory name is "Personal" on the phone.</p>
	<p>Directory Group Enable: No</p> <p><b>XML:</b></p> <pre>&lt;XsiDir_Group_Enable ua="na"&gt;%XSIDIR_GROUP_ENABLE% &lt;/XsiDir_Group_Enable&gt;</pre> <p><b>Note:</b></p> <p>%XSIDIR_GROUP_ENABLE% has two options: Yes and No</p> <p><b>XML Example:</b></p> <pre>&lt;XsiDir_Group_Enable ua="na"&gt;No&lt;/XsiDir_Group_Enab le&gt;</pre>	<p>Enables the Cisco BroadWorks group directory for the user.</p> <p>The parameter is valid only when both <i>Directory Enable</i> and <i>Directory Individual Mode Enable</i> are set to "Yes".</p> <p>Default: No</p>
	<p>Directory Group Name</p> <p><b>XML:</b></p> <pre>&lt;XsiDir_Group_Name ua="na"&gt;%XSIDIR_GROUP_NAME%&lt;/ XsiDir_Group_Name&gt;</pre> <p><b>XML Example:</b></p> <pre>&lt;XsiDir_Group_Name ua="na"&gt;- &lt;/XsiDir_Group_Name&gt;</pre>	<p>Name of the Cisco BroadWorks group directory. Displays on the phone as a directory choice.</p> <p>Default: Empty</p> <p>If the value is empty, the directory name is "Group" on the phone.</p>


Step	Command	Description
<b>Configuration File &lt;mac-address_CiscoDev&gt;.xml</b>		
	<p>Directory Enterprise Enable: No</p> <p><b>XML:</b></p> <pre>&lt;XsiDir_Enterprise_Enable ua="na"&gt;%XSIDIR_ENTERPRISE_EN ABLE%&lt;/XsiDir_Enterprise_Enab le&gt;</pre> <p><b>Note:</b></p> <p>%XSIDIR_ENTERPRISE_ENABLE% has two options: Yes and No</p> <p><b>XML Example:</b></p> <pre>&lt;XsiDir_Enterprise_Enable ua="na"&gt;No&lt;/XsiDir_Enterprise _Enable&gt;</pre>	<p>Enables the Cisco BroadWorks enterprise directory for the phone user.</p> <p>The parameter is valid only when both <i>Directory Enable</i> and <i>Directory Individual Mode Enable</i> are set to "Yes".</p> <p>Default: No</p>
	<p>Directory Enterprise Name: Empty</p> <p><b>XML:</b></p> <pre>&lt;XsiDir_Enterprise_Name ua="na"&gt;%XSIDIR_ENTERPRISE_NA ME%&lt;/XsiDir_Enterprise_Name&gt;</pre> <p><b>XML Example:</b></p> <pre>&lt;XsiDir_Enterprise_Name ua="na"&gt;DirenterpriseName&lt;/Xs iDir_Enterprise_Name&gt;</pre>	<p>Name of the Cisco BroadWorks enterprise directory. Displays on the phone as a directory choice.</p> <p>Default: Empty.</p> <p>If the value is empty, the directory name is "Enterprise" on the phone.</p>
	<p>Directory GroupCommon Enable: No</p> <p><b>XML:</b></p> <pre>&lt;XsiDir_GroupCommon_Enable ua="na"&gt;%XSIDIR_GROUPCOMMON_E NABLE%&lt;/XsiDir_GroupCommon_En able&gt;</pre> <p><b>Note:</b></p> <p>%XSIDIR_GROUPCOMMON_ENABLE% has two options: Yes and No</p> <p><b>XML Example:</b></p> <pre>&lt;XsiDir_GroupCommon_Enable ua="na"&gt;No&lt;/XsiDir_GroupCommo n_Enable&gt;</pre>	<p>Enables the Cisco BroadWorks GroupCommon directory for the phone user.</p> <p>The parameter is valid only when both <i>Directory Enable</i> and <i>Directory Individual Mode Enable</i> are set to "Yes".</p> <p>Default: No</p>
	<p>Directory GroupCommon Name: DirGroupCommon</p> <p><b>XML:</b></p> <pre>&lt;XsiDir_GroupCommon_Name ua="na"&gt;%XSIDIR_GROUPCOMMON_N AME%&lt;/XsiDir_GroupCommon_Name &gt;</pre> <p><b>XML Example:</b></p> <pre>&lt;XsiDir_GroupCommon_Name ua="na"&gt; DirGroupCommon &lt;/XsiDir_GroupCommon_Name&gt;</pre>	<p>Name of the Cisco BroadWorks Group Common directory.</p> <p>Displays on the phone as a directory choice.</p> <p>Default: Empty</p> <p>If the value is empty, the directory name is "Group Common" on the phone.</p>

Step	Command	Description
<b>Configuration File &lt;mac-address_CiscoDev&gt;.xml</b>		
	<p>Directory EnterpriseCommon Enable</p> <p><b>XML:</b></p> <pre>&lt;XsiDir_EnterpriseCommon_Enable ua="na"&gt;%XSIDIR_ENTERPRISECOMMON_ENABLE%/XsiDir_EnterpriseCommon_Enable&gt;</pre> <p><b>Note:</b></p> <p>%XSIDIR_ENTERPRISECOMMON_ENABLE% has two options: Yes and No</p> <p><b>XML Example:</b></p> <pre>&lt;XsiDir_EnterpriseCommon_Enable ua="na"&gt;No/XsiDir_EnterpriseCommon_Enable&gt;</pre>	<p>Enables the Cisco BroadWorks EnterpriseCommon directory for the phone user.</p> <p>The parameter is valid only when both <i>Directory Enable</i> and <i>Directory Individual Mode Enable</i> are set to "Yes".</p> <p>Default: No</p>
	<p>Directory EnterpriseCommon Name: DirEnterpriseComm</p> <p><b>XML:</b></p> <pre>&lt;XsiDir_EnterpriseCommon_Name ua="na"&gt;%XSIDIR_ENTERPRISECOMMON_NAME%/XsiDir_EnterpriseCommon_Name&gt;</pre> <p><b>XML Example:</b></p> <pre>&lt;XsiDir_EnterpriseCommon_Name ua="na"&gt;DirEnterpriseComm/XsiDir_EnterpriseCommon_Name&gt;</pre>	<p>Name of the Cisco BroadWorks Enterprise Common directory.</p> <p>Displays on the phone as a directory choice.</p> <p>Default: Empty</p> <p>If the value is empty, the directory name is "Enterprise Common" on the phone.</p>

#### 4.5.6 DND and Call Forwarding Status Sync via XSI Service

This section provides configuration instructions to configure the settings on the phone to enable status synchronization of do not disturb (DND) and call forwarding between the phone and the server. Phone uses XSI service to get or set the DND or call forward functions on the Cisco BroadWorks server. When user changes the settings on the server, the server uses XSI-Events to notify the phone. There are two ways to synchronize the feature status.

- Feature Key Synchronization (FKS)
  - XSI Synchronization
- 1) To configure the XSI Login Credentials on the Cisco BroadWorks server, see the following figure.

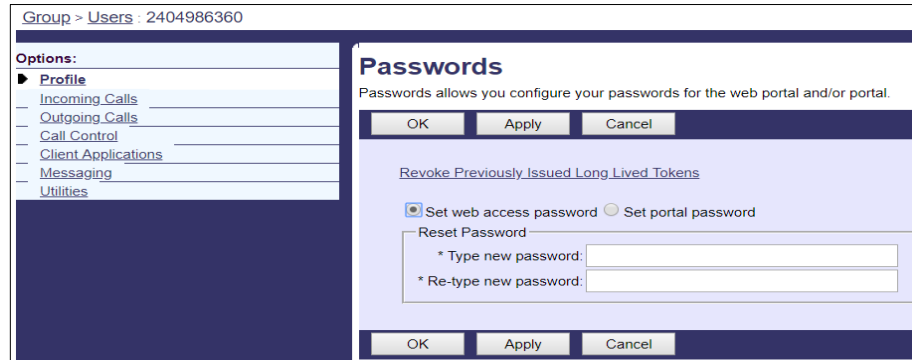

Group > Users : 2404986360

**Options:**

- Profile
- Incoming Calls
- Outgoing Calls
- Call Control
- Client Applications
- Messaging
- Utilities

**Passwords**

Passwords allows you configure your passwords for the web portal and/or portal.

OK Apply Cancel

[Revoke Previously Issued Long Lived Tokens](#)

☒ Set web access password ☐ Set portal password

Reset Password

\* Type new password:


\* Re-type new password:

OK Apply Cancel

Figure 73 XSI Login Credentials with Cisco BroadWorks

- 1) Log in with a Group account.
- 2) Select *Group* → *Profile* → *Users*.
- 3) Click **Search** and choose a user account that you want to modify.
- 4) From the *Profile* page, click **Passwords** and set the Web access password as shown in [Figure 73](#).
- 5) If the login user ID does not contain a server domain, extend it as follows: "<user id>@<server domain>".

To configure XSI SIP Credentials on the Cisco BroadWorks server, see the following figure.

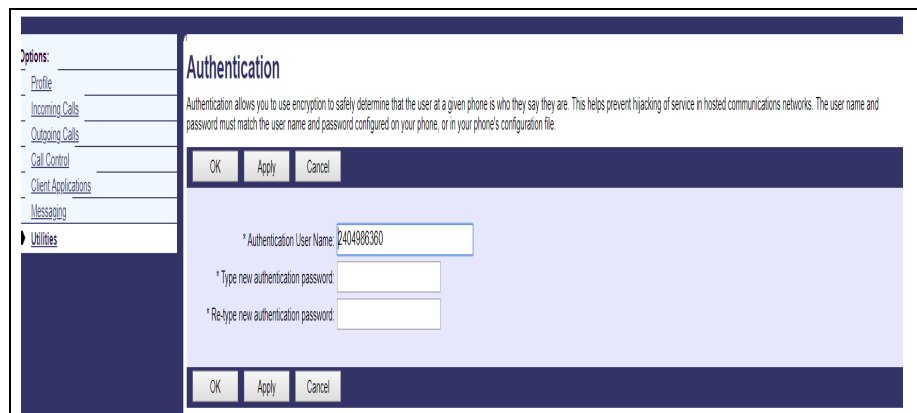

**Options:**

- Profile
- Incoming Calls
- Outgoing Calls
- Call Control
- Client Applications
- Messaging
- Utilities

**Authentication**

Authentication allows you to use encryption to safely determine that the user at a given phone is who they say they are. This helps prevent hijacking of service in hosted communications networks. The user name and password must match the user name and password configured on your phone, or in your phone's configuration file.

OK Apply Cancel

\* Authentication User Name:

\* Type new authentication password:

\* Re-type new authentication password:

OK Apply Cancel

Figure 74 XSI SIP Credentials with Cisco BroadWorks

- 1) Log in with a Group account.
- 2) Go to *Group* → *Profile* → *Users*.
- 3) Click **Search** and choose a user account that you want to modify.
- 4) In the *Profile* page, click **Assign Services**.
- 5) From the *Assign Services* page, from *Available Services*, add Authentication to the User Service and click **OK**.
- 6) Access the page *Utilities* → *Authentication*.
- 7) Set the SIP Authentication account as shown in [Figure 74](#).

8) Enable DND and Call Forwarding Status Synchronization via XSI Service from Web Portal.

<b>Subscriber Information</b>	
Display Name: <input type="text"/>	User ID: 4085273152
Password: <input type="password"/>	Auth ID: 4085273152
Reversed Auth Realm: <input type="text"/>	SIP URI: <input type="text"/>
<b>XSI Line Service</b>	
XSI Host Server: xspbsoft.sipurash.com	XSI Authentication Type: Login Credentials
Login User ID: gtle02@as1bsoft.sipurash.com	Login Password: <input type="password"/>
Anywhere Enable: No	Block CID Enable: No
DND Enable: Yes	CFWD Enable: Yes

Figure 75 DND and Call Forwarding Status Synchronization

Step	Command	Purpose
<b>System Configuration File &lt;mac-address&gt;_CiscoDev.xml</b>		
Step 1	<p>Set XSI Host Server and XSI Authentication Type:</p> <p><b>Set XSI host server:</b></p> <p>Web Portal Voice → Ext(n) → XSI Line Service</p> <p>XSI Authentication Type: Login Credentials or SIP Credentials</p> <p><b>Authentication with Login Credentials:</b></p> <p>Web Portal Voice → Ext(n) → XSI Line Service</p> <p>Login User ID and Login Password</p> <p><b>OR</b></p> <p><b>Authenticate with SIP Credentials:</b></p> <p>Web Portal Voice → Ext(n) → Subscriber Information</p> <p>Auth ID and Password</p>	Set the XSI Host Server and XSI Authentication Type.
Step 2	<p>Enable Call Forward and DND Status Sync via XSI Service:</p> <p>Web Portal Voice → Ext(n) → XSI Line Service</p> <p>DND Enable: Yes/No</p> <p>CFWD Enable: Yes/No</p> <p><b>XML</b></p> <pre>&lt;DND_Enable_1_ua="na"&gt;%XSI_DND_ENABLE_N%&lt;/DND_Enable_1_&gt; &lt;CFWD_Enable_1_ua="na"&gt;%XSI_CFWD_ENABLE_N%&lt;/CFWD_Enable_1_&gt;</pre> <p>Tags:</p> <pre>%XSI_DND_ENABLE_N% %XSI_CFWD_ENABLE_N%</pre> <p>Range of N% is 1-16</p>	Enable Call Forwarding and DND Status Sync via XSI Service. Default Value: No.

#### 4.5.7 Cisco BroadWorks Visual Voice Mail Configuration

Cisco MPP Series currently does not support this feature.

#### 4.6 Instant Message and Presence Configuration

**NOTE:** The Cisco Desk Phone 9800 Series does not support this feature.

This section provides configuration instructions for configuration of a phone for integration with BroadCloud Instant Message and Presence.

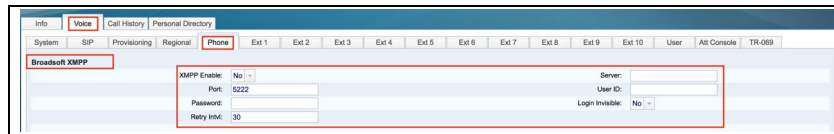


Figure 76 Cisco MPP Series XMPP Settings

Step	Command	Description
<b>Configuration File &lt;mac-address_CiscoDev&gt;.xml</b>		
Step 1	<p>Set BroadSoft XMPP.</p> <p><b>Web Example:</b></p> <p><u>Phone Tab:</u></p> <p>XMPP Enable: Yes</p> <p>Server: xsp.broadworks.net</p> <p>Port: Broadsoft</p> <p>UserID: user1</p> <p>Password: password</p> <p>Login Invisible: No</p> <p>Retry Intvl: 50</p> <p><b>XML Example:</b></p> <p>XML Example</p> <pre> &lt;!-- Broadsoft XMPP --&gt;       &lt;XMPP_Enable ua="na"&gt;Yes&lt;/XMPP_Enable&gt;       &lt;XMPP_Server ua="na"&gt;%BW_IMP_SERVICE_NET_AD DRESS-1%&lt;/XMPP_Server&gt;       &lt;XMPP_Port ua="na"&gt;%BW_IMP_SERVICE_PORT- 1%&lt;/XMPP_Port&gt;       &lt;XMPP_User_ID ua="na"&gt;%BW_USER_IMP_ID- 1%&lt;/XMPP_User_ID&gt;       &lt;XMPP_Password ua="na"&gt;%BW_USER_IMP_PWD- 1%&lt;/XMPP_Password&gt; </pre>	<p>These device settings allow the user to use Cisco BroadWorks Instant Message and Presence.</p>

## 4.7 Phone Onboarding to Cloud

Phone onboarding provides a simple and secure way to onboard Webex-aware phones to Cloud either by using activation code onboarding (GDS) or phone MAC address (EDOS device activation). Onboarding to Cloud enables the phone with additional functionalities, such as reboot and PRT generation from the Control Hub, support for Webex contacts, and support for Webex call logs.

For more information on phone onboarding, see the *Webex for Cisco BroadWorks Solution Guide* available [here](#).

### 4.7.1 Enable Phone Onboarding to Cloud

You can enable a phone to onboard to Cloud while SIP line is registered to a Cisco BroadWorks server.

To enable onboarding from the web user interface, see the following figure.

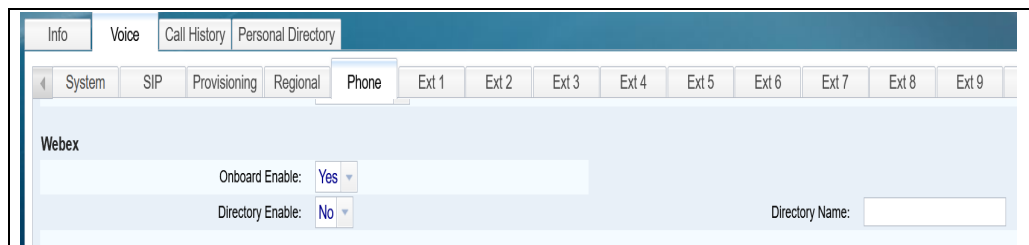


Figure 77 Webex Onboarding of Phone

Step	Command	Purpose
<b>System Configuration File CiscoDev_System.xml</b>		
Step 1	<p>Configure Cloud Onboarding: Web Portal <b>Voice</b> → <b>Phone</b> → <b>Webex</b> <b>Onboard Enable:</b> Yes or No</p> <p><b>XML</b></p> <pre>&lt;Webex_Onboard_Enable ua="na"&gt;%WEBEX_ONBOARD_ENABLE%&lt;/Web ex_Onboard_Enable&gt;</pre> <p><b>Note:</b> %WEBEX_ONBOARD_ENABLE% has two types: Yes or No</p> <p><b>Example:</b></p> <pre>&lt;Webex Onboard Enable ua="na"&gt;Yes&lt;/Webex_Onboard_Enable&gt;</pre>	<p>Enables Cloud onboarding of the phone. Default value: "Yes". When set to "No", the phone does not onboard to Cloud.</p>

### 4.7.1 Phone Issues Reporting from Control Hub

You can issue a problem report of a phone remotely from the Control Hub, after the phone successfully onboards to Cloud. For more information, see the following guides:

- *Cisco IP Phone 6800 Series Multiplatform Phones Administration Guide*
- *Cisco IP Phone 7800 Series Multiplatform Phones Administration Guide*
- *Cisco IP Phone 8800 Series Multiplatform Phones Administration Guide*
- *Cisco IP Conference Phone 7832 Series Multiplatform Phones Administration Guide*
- *Cisco IP Conference Phone 8832 Series Multiplatform Phones Administration Guide*

To enable uploading of Phone Issues Reporting (PRT) to Cloud on the web user interface, see the following figure.

Problem Report Tool	
PRT Upload Rule:	<input type="text" value="https://cisco-int.bclld.webex.com/dms/spa8841-3PCC/"/>
PRT Upload Method:	<input type="text" value="PUT"/> PRT Max Timer: <input type="text"/>
PRT Name:	<input type="text" value="prt-log"/>
PRT HTTP Header:	<input type="text"/>
PRT HTTP Header Value:	<input type="text"/>

Figure 78 PRT Upload to Cloud

Step	Command	Purpose
<b>System Configuration File CiscoDev_System.xml</b>		
Step 1	<p>Upload PRT to Cloud:</p> <p>Web Portal <b>Voice</b> → <b>Provisioning</b> → <b>Problem Report Tool</b></p> <p><b>PRT Upload Rule:</b> Valid URL</p> <p><b>PRT Upload Method:</b> PUT or POST</p> <p><b>PRT Name:</b> Any String with "prt-" as a prefix</p> <p><b>XML</b></p> <pre>&lt;PRT_Upload_Rule ua="na"&gt;%ACCESS_PROTOCOL%%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEACCESSURI%/PRT_Upload_Rule&gt;</pre> <pre>&lt;PRT_Upload_Method ua="na"&gt;%PRT_UPLOAD_METHOD%/PRT_Upload_Method&gt;</pre> <p><b>Note:</b> %PRT_UPLOAD_METHOD% has two options: PUT and POST</p> <pre>&lt;PRT_Name ua="na"&gt;%PRT_NAME%/PRT_Name&gt;</pre> <p><b>Example:</b></p> <pre>&lt;PRT_Upload_Rule ua="na"&gt;https://cisco-int.bclld.webex.com/dms/spa8841-3pcc/&lt;/PRT_Upload_Rule&gt;</pre> <pre>&lt;PRT_Upload_Method ua="na"&gt;PUT&lt;/PRT_Upload_Method&gt;</pre> <pre>&lt;PRT_Name ua="na"&gt;prt-log&lt;/PRT_Name&gt;</pre>	<p>Generates problem report from Control Hub and uploads the report to the Cloud.</p> <p><b>PRT Upload Rule:</b> Any valid path to the PRT upload script.</p> <p><b>PRT Upload Method:</b> Method used to upload PRT logs to the Cloud server. Default: POST.</p> <p><b>PRT Name:</b> A name for the generated PRT file.</p> <p><b>Value:</b> Any String.</p>



#### 4.7.2 Phone Reboot from Control Hub

You can reboot the phone from the Control Hub remotely, after the phone successfully onboards to Cloud. You can only reboot a phone that is in an idle state. If it is in use, such as in a call, the phone does not reboot. For more information, see the following guides:

- *Cisco IP Phone 6800 Series Multiplatform Phones Administration Guide*
- *Cisco IP Phone 7800 Series Multiplatform Phones Administration Guide*
- *Cisco IP Phone 8800 Series Multiplatform Phones Administration Guide*
- *Cisco IP Conference Phone 7832 Series Multiplatform Phones Administration Guide*
- *Cisco IP Conference Phone 8832 Series Multiplatform Phones Administration Guide*
- *Cisco IP Phone 9800 Series* <https://help.webex.com/en-us/landing/ld-n0mkkj8-CiscoDeskPhone9800Series/BroadWorks#Administration>

#### 4.7.3 Webex Contact Support Configuration

You can enable a phone to support Webex contacts. You can also modify the display name of the Webex directory. To enable this support, the phone must onboard to Cloud successfully.

To enable Webex contact support, the phone must have the following configuration on the server.

- Successful onboarding to Cloud.
- Directory sync: Webex for Cisco BroadWorks users can use the Webex directory to call any calling number from the Cisco BroadWorks server. When this feature is enabled, the full calling directory from the Cisco BroadWorks server gets synced to the Webex directory. Users can access the directory from the phone and can place a call to any contact entry from the Cisco BroadWorks server.

To turn *Directory Sync* on, available [here](#). For more information, see the *Webex for Cisco BroadWorks Solution Guide* available [here](#). To enable support for Webex contacts from the web user interface, see the following figure.

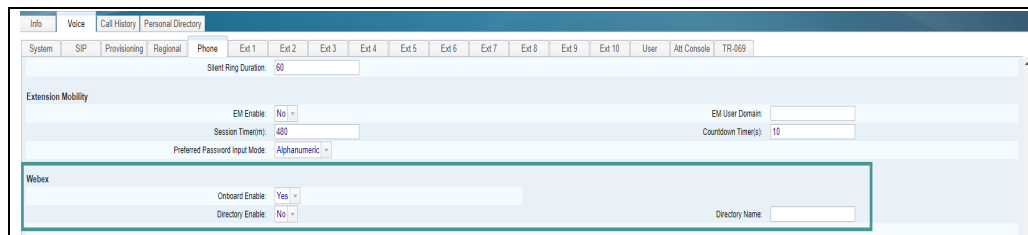


Figure 79 Webex Contacts Support

Step	Command	Purpose
<b>System Configuration File CiscoDev_System.xml</b>		
Step 1	<p>Enable Webex Contact: Web Portal <b>Voice</b> → <b>Phone</b> → <b>Webex</b> <b>Directory Enable:</b> Yes or No <b>Directory Name:</b> Any string <b>XML</b></p> <pre>&lt;Webex_Directory_Enable ua="na"&gt;%WEBEX_DIRECTORY_ENABLE%/Webex_Directory_Enable&gt;</pre> <pre>&lt;Webex_Directory_Name ua="na"&gt;%WEBEX_DIRECTORY_NAME%/Webex_Directory_Name&gt;</pre> <p>Example:</p> <pre>&lt;Webex_Directory_Enable ua="na"&gt;No&lt;/Webex_Directory_Enable&gt;</pre> <pre>&lt;Webex_Directory_Name ua="na"&gt;%WEBEX_DIRECTORY_NAME%/Webex_Directory_Name&gt;</pre>	<p>Enables the phone to support Webex contacts.</p> <p>Directory Enable: Set to "Yes" to enable Webex directory.</p> <p>Default: No.</p> <p>Directory Name: Displays the name of the Webex directory. Name can be modified.</p> <p>Default: Empty.</p>

#### 4.7.4 Webex Call Log Configuration

You can enable phone to support Webex call logs when the phone successfully onboards to Cloud.

To enable the support, the phone must have the following configuration on the server.

- Successful onboarding to Cloud.

Call log sync: Webex for Cisco BroadWorks uses the Webex call log to call any contact entry from the Cisco BroadWorks server. When this feature is enabled, the full call log from the Cisco BroadWorks server gets synched to the Webex call log. Users can access the call log from the phone and can place a call to any contact entry from the Cisco BroadWorks server.

To turn *Call log Sync* on, *Webex for Cisco BroadWorks Solution Guide* available [here](#). To enable support for Webex call log from the web user interface, see the following figure.

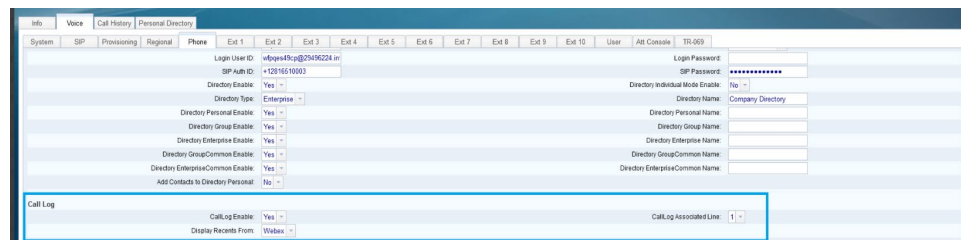


Figure 80 Webex Call Log Support

Step	Command	Purpose
<b>System Configuration File &lt;mac-address&gt;_CiscoDev_System.xml</b>		
Step 1	<p>Enable Webex call logs:</p> <p>Web Portal <b>Voice</b> → <b>Phone</b> → <b>Call Log</b></p> <p><b>CallLog Enable:</b> Yes or No</p> <p><b>CallLog Associated Line:</b> 1 to 10</p> <p><b>Display Recents From:</b> Phone or Server or Webex</p> <p><b>XML</b></p> <pre>&lt;CallLog_Enable ua="na"&gt; %CallLog_Enable%&lt;/CallLog_Enable&gt;  &lt;CallLog_Associated_Line ua="na"&gt;%C allLog_Associated_Line% &lt;/CallLog_Associated_Line&gt;  &lt;Display_Recents_From ua="na"&gt;% Display_Recents_From %&lt;/Display_Recents_From&gt;</pre> <p><b>Example:</b></p> <pre>&lt;CallLog_Enable ua="na"&gt;Yes&lt;/CallLo g_Enable&gt;  &lt;CallLog_Associated_Line ua="na"&gt;1&lt; /CallLog_Associated_Line&gt;  &lt;Display_Recents_From ua="na"&gt;Webex&lt;/Display_Recents_From &gt;</pre>	<p>Enables the phone to support Webex call logs.</p> <p>CallLog Enable: Allows the user to use call logs from the Xsi server or Webex.</p> <p>Default: No.</p> <p>CallLog Associated Line: Allows you to select a phone line for which you want to display the recent call logs.</p> <p>Default: 1.</p> <p>Display Recents From: To enable Webex Call log, set the value as Webex.</p> <p>In the XML configuration file, set the <i>Display_Recents_From</i> parameter to "Webex".</p> <p>Default: Phone.</p>

## 5 Device Management

The Cisco BroadWorks Device Management feature provides the capability to automate generation of device configuration files to support mass deployment of devices. This section identifies the Device Management capabilities supported by the Cisco MPP Series and the configuration steps required. For Device Management configuration details not covered here, see the *BroadWorks Device Management Configuration Guide* [2] and the *Cisco BroadWorks CPE Kit Usage Guide* [2].

### 5.1 Device Management Capabilities Supported

The Cisco MPP Series has completed Device Management interoperability testing with Cisco BroadWorks using the *BroadWorks Device Management Interoperability Test Plan*. The results are summarized in the following table.

The Cisco BroadWorks test plan is composed of packages, each covering distinct interoperability areas. Each package is composed of one or more test items, which in turn, are composed of one or more test cases. The test plan exercises the Device Management interface between the device and Cisco BroadWorks with the intent to ensure interoperability.

The *Supported* column in the following table identifies the Cisco MPP Series support for each of the items covered in the test plan packages, with the following designations:

- Yes Test item is supported.
- No Test item is not supported.
- NA Test item is not applicable.
- NT Test item was not tested.
- No\* Test item is not fully compliant with Cisco BroadWorks feature design.

Caveats and clarifications are identified in the *Comments* column.

**NOTE:** *DUT* in the following table refers to the *Device Under Test*, which in this case is the Cisco MPP Series.

Cisco BroadWorks Device Management Interoperability Test Plan Support Table			
Test Plan Package	Test Plan Package Items	Supported	Comments
HTTP File Download	HTTP Download Using XSP IP Address	Yes	
	HTTP Download Using XSP FQDN	Yes	
	HTTP Download Using XSP Cluster FQDN	Yes	
	HTTP Download with Double Slash	Yes	
HTTPS File Download	HTTPS Download Using XSP IP Address	Yes	
	HTTPS Download Using XSP FQDN	Yes	
	HTTPS Download Using XSP Cluster FQDN	Yes	

Cisco BroadWorks Device Management Interoperability Test Plan Support Table			
Test Plan Package	Test Plan Package Items	Supported	Comments
HTTPS File Download with Client Authentication	HTTPS Download with Client Authentication Using XSP FQDN	Yes	
	HTTPS Download with Client Authentication Using XSP Cluster FQDN	Yes	
Time Zone Mapping	Inspect Time Zone Setting	Yes	
Language Mapping	Inspect Language Setting	Yes	
File Inspection	Inspect System Config File	Yes	
	Inspect Device-Specific Config File	Yes	
	Inspect Other Config Files	Yes	
	Inspect Static Files	Yes	
Device Inspection	Inspect SIP Settings	Yes	
	Inspect Line Settings	Yes	
	Inspect Service Settings	Yes	
HTTP File Upload	HTTP Upload Using XSP IP Address	Yes	
	HTTP Upload Using XSP FQDN	Yes	
	HTTP Upload Using XSP Cluster FQDN	Yes	
Call Processing Sanity Tests	Register with Authentication	Yes	
	Call Origination	Yes	
	Call Termination	Yes	
	Remote Restart	Yes	
	Shared Line Origination	Yes	
	Shared Line Termination	Yes	
	Shared Line Status	Yes	
	Busy Lamp Field	Yes	Except 7811, 7832, and 8832 model.
	Network-Based Conference	Yes	
Flexible Seating	Association via Voice Portal	Yes	
	Association via Phone	Yes	Except lock and unlock.
No Touch Provisioning	Provision via DHCP Options Field	Yes	
	No Touch Provision via DM redirect	Yes	
	No Touch Provision via Vendor redirect	Yes	

## 5.2 Device Management Configuration

This section identifies the steps required to enable the Cisco MPP Series for Device Management. For Device Management configuration details not covered here, see the *Cisco BroadWorks Device Management Configuration Guide* [2] and the *Cisco BroadWorks CPE Kit Usage Guide* [2].

### 5.2.1 Configure Cisco BroadWorks Tags

The template files in Device Management use tags to represent the data stored on Cisco BroadWorks. When a configuration changes for a user, Device Management parses the template files and replaces the Device Management tags with the associated data stored on Cisco BroadWorks. There are default tags defined in the Device Management software and there are custom tags that the service provider can create and define via the web portal for use by Device Management. There are two types of custom tags that can be defined: system default tags that are common to all devices on the system and device type-specific tags that are common to Cisco device models only.

The Cisco MPP Series makes use of custom tags, which can be configured by a Cisco BroadWorks administrator as either system default or device type-specific tags. This section identifies the required tags.

#### 5.2.1.1 Create System Default Tags

Browse to *System* → *Resources* → *Device Management Tag Sets* and select the *System Default* tag set. The Cisco configuration templates make use of the tags in the following table. Add the tags if they do not already exist.

Tag Name	Valid Settings	Description
%DNS_SERVER_1%	IP address	DNS server address.
%DNS_SERVER_2%	IP address	DNS server address alternate.
%XSP_ADDRESS%	IP address/FQDN	XSP server address.
%SNTP_SERVER_1%	IP address/FQDN	Network Time Protocol (NTP) server address.
%SNTP_SERVER_2%	IP address/FQDN	NTP server address alternate.

## Example System Default Tag Settings

Device Management Tag Sets Modify

Display all the device management tags defined in the tag set. Tags can be added to the set or deleted from the set.

OK

Apply

Add

Cancel

Tag Set: System Default

Delete	Tag Name	Tag Value
<input type="checkbox"/>	%APPLICATION_DOMAIN%	as.iop2.broadworks.net
<input type="checkbox"/>	%DNS_SERVER_1%	199.19.193.13
<input type="checkbox"/>	%DNS_SERVER_2%	199.19.193.29
<input type="checkbox"/>	%DNS_SERVER%	199.19.193.12
<input type="checkbox"/>	%KWS300_XSP_PATH%	http://xsp1.iop2.broadworks.net/dms/kws300
<input type="checkbox"/>	%SBC_ADDRESS%	199.19.193.9
<input type="checkbox"/>	%SBC_PORT%	5060
<input type="checkbox"/>	%SIP_TRANSPORT%	0
<input type="checkbox"/>	%SNTP_SERVER_1%	time.nist.gov
<input type="checkbox"/>	%SNTP_SERVER_2%	time.windows.com
<input type="checkbox"/>	%SNTP_SERVER%	time-b.nist.gov
<input type="checkbox"/>	%SNTP_SERVERIP%	192.5.41.41
<input type="checkbox"/>	%USE_SBC_BOOL%	true
<input type="checkbox"/>	%USE_SBC_BOOLEAN%	1
<input type="checkbox"/>	%XSP_ADDRESS_XSI_ACTIONS%	xsp1.iop2.broadworks.net
<input type="checkbox"/>	%XSP_ADDRESS%	xsp1.iop2.broadworks.net

Figure 81 System Default Tag Settings

### 5.2.1.2 Create Device Type-specific Tags

Browse to *System* → *Resources* → *Device Management Tag Sets* and then click **Add** to add a new tag set. Configure the tag set name using the device name appended by *Tags*: *Cisco-3PCC-IP-Phones Tags*. Add the device type-specific tags in the following table to the device tag set. If the tag set already exists, make sure the following tags are defined.

Tag Name	Valid Settings	Description
%3RD_PARTY_CA_ROOT%	File Name of root CA	The file name of the 3 <sup>rd</sup> Party Root CA.
%7800_LOGO_PIC%	File Name of Logo Picture	The file name of the Logo Picture.
%ACCESS_PROTOCOL%	TFTP/HTTP/HTTPS	Default protocol to receive configuration files.
%AUTH_INVITE%	Yes/No	Optional: Enforce SIP authentication for additional call security.
%AUTO_ANSWER_PAGE%	Yes/No	Optional: Enable/Disable auto answer (Global).
%AUTO_ANS_ON_CALL-x%	Yes/No	Optional: Enable total hands-free mode when “Yes”. When “No”, device will prompt for user interaction.

Tag Name	Valid Settings	Description
%BLF_DISPLAY_MODE%	Name/Ext/Both	Information displayed from BLF subscription URI. Valid options are: <ul style="list-style-type: none"> <li>Name</li> <li>Extension (Ext)</li> <li>Both</li> </ul>
%BLOCK_ANC_ACTIVATE%	String or blank, that is, *001	Optional: Unique star code to activate on-device Block Anonymous Calls.
%BLOCK_ANC_DEACTIVATE%	String or blank, that is, *002	Optional: Unique star code to deactivate on-device Block Anonymous Calls.
%BLOCK_CID_ACTIVATE%	String or blank, that is, *003	Optional: Unique star code to activate on-device Block Caller ID.
%BLOCK_CID_DEACTIVATE%	String or blank, that is, *004	Optional: Unique star code to deactivate on-device Block Caller ID.
%BROADSOFT_DIR_NAME%	String or blank	Cisco BroadWorks Directory Name. String value of to 255 characters in length.
%CALL_APPEARANCE%	2-10	Default setting should be set to "2".
%CALL_BACK_ACTIVATE%	String or blank, that is, *005	Optional: Unique star code to activate on-device Block Caller ID.
%CALL_BACK_DEACTIVATE%	String or blank, that is, *006	Optional: Unique star code to deactivate on-device Block Caller ID.
%CALL_HISTORY_KEY_LIST%	Default: hold 1;endcall 2;join 4	Programmable Soft Keys (PSK) settings for "Call History". For more information, see the <i>Cisco IP Phone MPP Series Multiplatform Phones Administration Guide</i> .
%CONFERENCING_KEY_LIST%	Default: hold 1;endcall 2;join 4	PSK settings for "Conferencing" call state. For more information, see the <i>Cisco IP Phone MPP Series Multiplatform Phones Administration Guide</i> .
%CONNECTED_KEY_LIST%	Default: hold 1;endcall 2;conf 3;xfer 4;toggle;bxfer;confLx;xferLx;park;phold;flash;	PSK settings for "Connected" call state. For more information, see the <i>Cisco IP Phone MPP Series Multiplatform Phones Administration Guide</i> .
%RELEASING_KEY_LIST%	Default: endcall 2;home;	PSK settings for "Connected" call state.



Tag Name	Valid Settings	Description
%CONNECTED_MEETING_LIST%	Default: endcall 2;home 3;	PSK settings for “Connected” call state.  For more information, see the <i>Cisco IP Phone MPP Series Multiplatform Phones Administration Guide</i> .
%DAYLIGHT_SAVING_TIME_ENABLE%	Yes/No	Enable/Yes to observe daylight savings time.
%DAYLIGHT_SAVING_TIME%	Default: start=3/-1/7/2;end=10/-1/7/2;save=1	Daylight Savings Settings.  For more information, see the <i>Cisco IP Phone MPP Series Multiplatform Phones Administration Guide</i> .
%DIAL_PLAN%	= ( [2346789]11S0   [0- 1][2-9]11S0   0   00S0   01[2-9]xx.   [*#]xx[*#]   *xx.   *xxxxxxS0   *xxxxxxxxxxxx   [2-9]#   011x.   [0-1]xxxxxx   [0-1][2-9]xxxxxxxxS0   [2-9]xxxxxxxxS0   [2- 9]xxxxxx   101xxxx.   11S0   [2-9]x. )	This is a default U.S. dial plan that supports most forms of dialing.
%DIALING_CONSULT_KEY_LIST%	Default: delchar 1;endcall 2;dial 3;	PSK settings for “Consult Transfer” call state.  For more information, see the <i>Cisco IP Phone MPP Series Multiplatform Phones Administration Guide</i> .
%DIALING_INPUT_KEY_LIST%	Default: dial 1;delchar 2;clear 3;cancel 4;left 5;right 6;starcode 7;alpha 8;dir	PSK settings for “Dialing” call state.  For more information, see the <i>Cisco IP Phone MPP Series Multiplatform Phones Administration Guide</i> .
%DICTIONARY_SERVER_SCRIPT%	Example: d1=Spanish;l1=es-ES;x1=es-ES.tar;d2=French;l2=fr-FR;x2=fr-FR.tar	Localization settings.  For more information, see the <i>Cisco IP Phone MPP Series Multiplatform Phones Administration Guide</i> .
%DICTIONARY_SERVER_SCRIPT_8875%	Example: d1=Spanish;l1=es-ES;x1=es-ES.tar;d2=French;l2=fr-FR;x2=fr-FR.tar	Localization settings.
%DISPLAY_DIVERSION_INFO%	Yes/No	Set to “Yes” to display the Diversion Header Info.
%DNS_CACHE_TTL%	Yes/No	Ability of the device to honor the TTL value received for a DNS response value.
%DNS_SERVER_ORDER%	Default: Manual-DHCP	Configurable DNS Search settings.
%EM_ENABLED%	Yes/No	Enable device for provisioning authority and ability to facilitate hot desking.

Tag Name	Valid Settings	Description
%FAILBACK_INTVL%	Default: 3600	Interval to force SIP Registration failback.  For more information, see the <i>Cisco IP Phone MPP Series Multiplatform Phones Administration Guide</i> .
%INVITE_RETRY_ATTEMPTS%	String (0-6) Recommend: 3	Number of re-transmissions of Call Requests.
%NON-INVITE_RETRY_ATTEMPTS%	String (0-6) Recommend: 3	Number of re-transmissions of Non-Call Requests (REGISTER, SUBSCRIBE) Recommend: 3
%FAILBACK_INTVL%	String (0-65535) Default: 3600	Failback Interval timer.
%FIRMWARE_VERSION_C P-7800-3PCC%	File name of the loads file	Firmware load filename: Example: sip78xx.11-2-3MPP-398.loads Note that the Firmware files cannot be renamed.
%HOLD_KEY_LIST%	Default: resume 1;endcall 2;newcall 3; redial;dir;cfwd;dnd	PSK settings for Hold call state. For more information, see the <i>Cisco IP Phone MPP Series Multiplatform Phones Administration Guide</i> .
%IDLE_KEY_LIST%	Default: redial 1;newcall 2;dnd 3;unpark 4;pickup 5;cfwd 6	PSK settings for Idle call state. For more information, see the <i>Cisco IP Phone MPP Series Multiplatform Phones Administration Guide</i> .
%INVITE_RETRY_ATTEMPTS%	Default: 3 Range: 1-6	Number of attempts a SIP line will retransmit a SIP INVITE/Call Request.
%LINE_ID_MAPPING%	Default: Vertical First Options: Vertical First/Horizontal First	PLK line call appearance mapping.
%NEW_CALL_RECENTS_KEY_LIST%	Default: cancel 1;call 2;	PSK settings for "New Call" call state.  For more information, see the <i>Cisco IP Phone MPP Series Multiplatform Phones Administration Guide</i> .
%NON-INVITE_RETRY_ATTEMPTS%	Default: 3 Range: 1-6	Number of attempts a SIP line will retransmit a SIP REGISTER/SUBSCRIBE Request.
%OFF_HOOK_CONSULT_KEY_LIST%	Default: redial 1;cancel 2;	PSK settings for "Consult Transfer" call state.  For more information, see the <i>Cisco IP Phone MPP Series Multiplatform Phones Administration Guide</i> .

Tag Name	Valid Settings	Description
%OFF_HOOK_KEY_LIST%	Default: redial 1;dir 2;cfwd 3;dnd 4;lcr 5;unpark 6;pickup 7;gpickup 8;starcode 11;alpha 12	PSK settings for "New Call" call state.  For more information, see the <i>Cisco IP Phone MPP Series Multiplatform Phones Administration Guide</i> .
%ON_HOOK_DIAL_KEY_LIST%	Default: cancel 1;call 2;delchar 3;	PSK settings for "On Hook" call state.  For more information, see the <i>Cisco IP Phone MPP Series Multiplatform Phones Administration Guide</i> .
%PLK-x%	Default: PLK-1 = 1 PLK-2 = 2 Options: Depends on model.	Programmable Line Key (PLK) settings for non-Bluetooth enabled devices (7821, 7841, 7861).  Example tag: <ul style="list-style-type: none"> <li>PLK-1</li> <li>PLK-2</li> </ul> Note: "x" represents the number of lines supported on the device. <ul style="list-style-type: none"> <li>7821 supports 2 lines</li> <li>7841 supports 4 lines</li> <li>7861 supports 16 lines</li> </ul>
%PREFERRED_CODEC%	Default: G722 Values: G722/G722.2/G711u/G711a/G729a/G729ab/iLBC	Preferred Codec: G722/G722.2/G711u/G711a/G729a/G729ab/iLBC
%PROGRESSING_KEY_LIST%	Default: endcall 2	PSK settings for "New Call" call state.  For more information, see the <i>Cisco IP Phone MPP Series Multiplatform Phones Administration Guide</i> .
%PSK_ENABLE%	Default: Yes Options: Yes/No	Enables the addition of customized programmable soft keys.
%RESYNC_AT_RANDOM_DELAY%	String (0-65535) Default: 600	Random delay following boot-up sequence specified in seconds.
%RESYNC_ERROR%	String (0-65535) Default: 3600	Delay resyncing after a failed resync attempt.
%RESYNC_FORCED%	String (0-65535) Default: 14400	Forced resync delay after initial resync timer has expired.
%RESYNC_PERIODIC%	String (0-65535) Default: 3600	Time in seconds between periodic resyncs.
%RESYNC_RANDOM%	String (0-65535) Default: 2	Random resync time to reboot.
%RESYNC_TIME%	HHmm or blank Example: 0100	Optional: Time in 24-hour format to force the device to resync with Cisco BroadWorks Device Manager.

Tag Name	Valid Settings	Description
%RETRY_REG_RSC%	Default: 5??,6?? Options: Null, {SIP Response Value)	This tag is optional. This value controls failover events for SIP Registration. This tag is optional. When setting to blank, the device does not failover Register based SIP Register final response. When setting to final response value, the device could failover Register based on SIP Register final response.
%RINGING_KEY_LIST%	Default: answer 1;ignore 2;toggle 4	PSK settings for "New Call" call state. For more information, see the <i>Cisco IP Phone MPP Series Multiplatform Phones Administration Guide</i> .
%RFC_2543_HOLD%	Default: No Options: Yes/No	Ability to support RFC 2543 Hold.
%SCREEN_SAVER_ENAB LED%	Default: Yes Options: Yes/No	Ability to set screen saver on device.
%SCREEN_SAVER_ICON %	Default: Clock Options: Download Picture/Logo/Clock	Ability to set screen saver type.
%SCREEN_SAVER_REFR ESH_PERIOD%	Default: 6 Range: 1-999999	Optional. Time in seconds to refresh the screen saver.
%SCREEN_SAVER_WAIT %	Default: 300 Range: 30-65535	Optional: Time in seconds to wait to display screen saver.
%SBC_ADDRESS_1%	IP address/FQDN or blank	SBC FQDN/IP server address or Primary AS IP Address.
%SBC_ADDRESS_2%	IP address/FQDN or blank	Alternate SBC IP address or Alternate AS IP Address.
%SECOND_PREFERRED_ CODED%	Default: G722 Values: G722/G722.2/G711u/G711a/ G729a/G729ab/iLBC	Secondary Codec Offered/Preferred: G722/G722.2/G711u/G711a/G729a/G729ab/iLBC.
%SHARED_ACTIVE_KEY_ LIST%	Default: newcall 1;barge 2;cfwd 3;dnd  4	PSK settings for "Shared Call Active" call state. For more information, see the <i>Cisco IP Phone MPP Series Multiplatform Phones Administration Guide</i> .
%SHARED_HELD_KEY_LI ST%	Default: resume 1;barge 2;cfwd 3;dnd  4	PSK settings for "Shared Call Held" call state. For more information, see the <i>Cisco IP Phone MPP Series Multiplatform Phones Administration Guide</i> .
%SHARED-LINE-DND- CFWD-ENABLE%	Default: Yes Options: Yes/No	Enable/Disable the ability to display DND/CFWD soft keys. Note: ONLY valid for 10.3.1.

Tag Name	Valid Settings	Description
%SIP_AUTH_REALM%	BroadWorks Default Realm Value	If SIP Auth Realm is enabled on BroadWorks AS, value should be equal to: AS_CLI/Interface/SIP/defaultRealm
%SIP_TCP_MAX%	Default: 5080 Range: 1-65535	SIP TCP max port range used.
%SIP_TCP_MIN%	Default: 5060 Range: 1-65535	SIP TCP min port range used.
%SIP_TRANSPORT-x%	Default: UDP Options: UDP/TCP/TLS	SIP transport per line. Example Tag: <ul style="list-style-type: none"> <li>SIP_TRANSPORT-1</li> <li>SIP_TRANSPORT-2</li> </ul> Note: x represents number of lines supported on device. <ul style="list-style-type: none"> <li>7821 supports 2 lines</li> <li>7841 supports 4 lines</li> <li>7861 supports 16 lines</li> </ul>
%SIP_UDP_PORT-x%	Default: UDP Range: 1-65535	Extension SIP UDP Listening Port. Example Tag: <ul style="list-style-type: none"> <li>SIP_UDP_PORT-1</li> <li>SIP_UDP_PORT-2</li> </ul> Note: x represents number of lines supported on device. <ul style="list-style-type: none"> <li>7821 supports 2 lines</li> <li>7841 supports 4 lines</li> <li>7861 supports 16 lines</li> </ul>
%START-CONF_KEY_LIST%	Default: hold 1;endcall 2;conf 3;toggle;	PSK settings for "Conference Call" call state. For more information, see the <i>Cisco IP Phone MPP Series Multiplatform Phones Administration Guide</i> .
%START-XFER_KEY_LIST%	Default: hold 1;endcall 2;xfer 4;toggle;	PSK settings for "Call Transfer" call state. For more information, see the <i>Cisco IP Phone MPP Series Multiplatform Phones Administration Guide</i> .
%STUN_SERVER%	String	Optional: Use if device is deployed in environment without SBC or SIP ALG.
%TEXT_LOGO%	Branding Text Logo	This tag is optional. Add for 3 <sup>rd</sup> Party Branding allowing for text logos to appear on device. String value of to 255 characters in length.
%THIRD_PREFERRED_CODEC%	Default: G722 Values: G722/G722.2/G711u/G711a/G729a/G729ab/iLBC	Secondary Codec Offered/Preferred: G722/G722.2/G711u/G711a/G729a/G729ab/iLBC.

Tag Name	Valid Settings	Description
%TRY_BACKUP_RSC%	Set it SIP INVITE final response values to trigger failover, for example, 5??,6??. Or Leave blank	This tag is optional. When setting to blank, the device does not failover based SIP final response. When setting to final response value, the device could failover based on SIP final response.
%USE_LINE_KEYS_FOR_BLF%	Default: Yes Options: Yes/No	Ability to control auto indexing of BLK Programmable Line Keys. When "Yes", use the device's unused PLK. When "No", use an attached KEM.
%USE_PREFERRED_CODECS_ONLY%	Default: No Options: Yes/No	Control how a SIP line negotiates audio. When "Yes", use only defined codecs.
%VM_SUBSCRIBE_INTERVAL%	String (0-65535) Default: 3600	Time in seconds for VM Subscription interval.
%XSIPASSWORD-x%	String (0-65535) Default: Leave Blank	XSI server user password.
%BROADSOFT_HOTELING_ENABLE-x%	Options: Yes/No	Ability to control the DUT support for Cisco BroadWorks Hoteling feature.
%BROADSOFT_ACD_ENABLE-x%	Options: Yes/No	Ability to control the DUT support for Cisco BroadWorks ACD feature.
%FIRMWARE_VERSION_C P-7832-3PCC%	File name of the loads file	Firmware load filename: Example: sip7832.11-2-3MPP-398.loads Note: Firmware files cannot be renamed.
%8800_LOGO_PIC%	File name of the logo picture	Filename of logo picture.
%FIRMWARE_VERSION_C P-8800-3PCC%	File name of the loads file	Firmware load filename: Example: sip88xx.11-2-3MPP-398.loads Note: Firmware files cannot be renamed.
%FIRMWARE_VERSION_C P-6800-3PCC%	File name of the loads file	Firmware load filename: Example: sip68xx.11-2-3MPP-398.loads Note: Firmware files cannot be renamed.
%6800_LOGO_PIC%	File name of the logo picture	File name of logo picture.
%FIRMWARE_VERSION_C P-88x5-3PCC%	File name of the loads file	Firmware load filename: Example: sip8845_65.11-2-3MPP-398.loads Note: Firmware files cannot be renamed.

Tag Name	Valid Settings	Description
%FIRMWARE_VERSION_C P-8875-3PCC%	File name of the loads file	Firmware load filename: Example: sip8875_135bb96c52dev.pkg Note: Firmware files cannot be renamed.
%ANYWHERE_ENABLE_1 %	Options: Yes/No	To enable BroadWorks Anywhere feature.
%BLOCK_CID_ENABLE_1_ %	Options: Yes/No	To enable Caller ID/Line ID Blocking Feature.
%BLOCK_NONPROXY_SIP %	Options: Yes/No	To block Non-Proxy SIP messages.
%CALLLOG_ASSOCIATED _LINE%	Options: 1 to 10	Specify Line associated with CallLog.
%CALLLOG _ ENABLED%	Options: Yes/No	To enable CallLog.
%DISPLAY_RECENTS_FR OM%	Options: Phone/Server	Shows CallLog Recents from.
%LOG_MISSED_CALLS_x %	X Ranges from 1 to 16	Shows missed calls list.
%EXEC_ASSISTANT_CALL _INITIATE_CODE%	The # or * code that you want to be used for the function. Default: #64	Initiates a call on behalf of an executive from the user's (assistants) extension.
%EXEC_ASSISTANT_CALL _PUSH_CODE%	The # or * code that you want to be used for the function.	For assistants to transfer an ongoing call to an executive.
%EXEC_ASSISTANT_KEY _LIST%	proxycall	Enables assistants to initiate calls on behalf of executives, from the <i>Settings</i> → <i>Executive menu</i> .
%EXEC_CALL_BRIDGE_C ODE%	The # or * code that you want to be used for the function. Default: *15	For executives who have assistants: Joins the user (executive) to an ongoing call with an assistant.  For executive assistants: Joins the user (assistant) to an ongoing call with an executive.
%EXEC_CALL_FILTER_AC T_CODE%	The # or * code that you want to be used for the function. Default: #61	For executives who have assistants: Activates call filtering. When call filtering is on, assistants receive incoming calls for executives.
%EXEC_CALL_FILTER_DE ACT_CODE%	The # or * code that you want to be used for the function. Default: #62	For executives who have assistants: Deactivates call filtering.
%EXEC_CALL _RETRIEVE_CODE%	The # or * code that you want to be used for the function. Default: *11	For executives who have assistants: Transfers an ongoing call from an assistant to the user (executive).  For executive assistants: Transfers an ongoing call from the executive to the user (assistant).
%LOGIN_PASSWORD_1_ %	Standard BroadWorks Password Guidelines	BroadWorks Anywhere Password.

Tag Name	Valid Settings	Description
%LOGIN_USER_ID_1_%	Standard BroadWorks Password Guidelines	BroadWorks Anywhere Username.
%MICROPHONE_GAIN%	Slider (softer to louder)	Microphone Gain.
%PEER_FIRMWARE_SHARING_LOG_SERVER%	IP Address	PFS Log Server.
%PEER_FIRMWARE_SHARING%	Options: Yes/No	To enable PFS. For more information, see the <i>Cisco IP Phone 8800 Series Multiplatform Phone Administration Guide</i> .
%PRIVACY_HEADER_1_%	Disabled/none/header/session/user/id	To configure network-provided privacy.
%PROFILE_ACCOUNT_ENABLED%	Options: Yes/No	To configure authentication for 401 challenges.
%SIDETONE%	Very Low/Low/High	Audible feedback to a user speaking on headset or handset during a call.
%SIP_TRANSPORT_1_%	UDP/TCP/TLS/Auto	SIP Transport Setting.
%TUNE_SPEAKER%	Slider (Warmer to Brighter)	User can increase/decrease speaker EQ levels.
%VIDEO_RTP_TOS_DIFFSERV_VALUE_1_%	Default: 0xb8	Allows video packets to carry configurable TOS/DSCP value from 88xx video MPP phones.
%XSI_AUTHENTICATION_TYPE_1%	Options: SIP Credentials/Login Credentials	Authentication Method.
%XSI_HOST_SERVER_1%	IP Address	XSI Host Server Address.
%Voice_Feedback_Enable%	Options: Yes/No Default: No	
%DIRECTORY_TYPE%	Options: Enterprise/Group/Personal/Enterprise Common/Group Common Default: Enterprise	Directory types.
%P_EARLY_MEDIA_SUPPORT_N%	Options: Yes/No Default: No	N must be 1 to 16
%XSI_DND_ENABLE_1%	Options: Yes/No Default: No	
%XSI_CFWD_ENABLE_1%	Options: Yes/No Default: No	
%PROFILE_AUTH_TYPE%	Options: Disabled/Basic HTTP Authentication/XSI Authentication Default: Basic HTTP Authentication	



Tag Name	Valid Settings	Description
%FIRMWARE_VERSION_C P-6821-3PCC%	File name of the 6821 file.	Firmware load filename: Example: sip6821.11-2-3MPP-398.loads Note that the Firmware files cannot be renamed.
%FIRMWARE_VERSION_C P-8832-3PCC%	File name of the 8832 loads file	Firmware load filename: Example: Sip8832.11-2-3MPP-398.loads Note that the Firmware files cannot be renamed.
%FIRMWARE_VERSION_C P-6861-3PCC%	File name of the 6861 loads file	Firmware load filename: Example: sip6861.11-2-4MPP-246.loads Note that the Firmware files cannot be renamed.
%FIRMWARE_VERSION_C P-6871-3PCC%	File name of the 6871 loads file	Firmware load filename: Example: sip6871.11-3-1MPP-697.loads Note that the Firmware files cannot be renamed.
%BLF_LIST_FEATURE_OPTIONS%	Options: prk blf+sd+cp Default: blf+sd+cp	
%MEDIASEC_REQUEST_x%	Options: Yes and No Default: No	Where "x" is the extension line number (ranges from 1 to 16).
%MEDIASEC_OVER_TLS_ONLY_x%	Options: Yes and No Default: No	Where "x" is the extension line number (ranges from 1 to 16).
%SIP_SESSIONID_SUPPORT_x%	Options: Yes and No Default: Yes	Where "x" is the extension line number (ranges from 1 to 16).
%CALL_STATISTICS%	Options: Yes and No Default: Yes	
%USE_LOW_BANDWIDTH_OPUS_#%	Options: Yes and No Default: No	Where "#" is extension line number (ranges from 1 to 16).
%GROUP_#_NAME%	Default: Blank	Where "#" is extension line number (ranges from 1 to 16).
%PAGING_GRP_1%	Default: pggrp=224.168.168.168:34560;name=All;num=800;listen=yes;	

Tag Name	Valid Settings	Description
%CUSTOM_LED_TYPE%	Options: Default, Preset 1, Custom Default: Default	
%DISABLED_LED% %IDLE_LED% %REMOTE_UNDEFINED_LED% %LOCAL_SEIZED_LED% %REMOTE_SEIZED_LED% %LOCAL_PROGRESSING_LED% %REMOTE_PROGRESSING_LED% %LOCAL_RINGING_LED% %REMOTE_RINGING_LED% %LOCAL_ACTIVE_LED% %REMOTE_ACTIVE_LED% %LOCAL_HELD_LED% %REMOTE_HELD_LED% %REGISTER_FAILED_LED% %REGISTERING_LED%	Options blank and string_pattern Default: blank	
%APPLICATION_LED% %SERV_SUBSCRIBE_FAILED_LED% %SERV_SUBSCRIBING_LED% %PARKING_LOT_IDLE_LED% %PARKING_LOT_BUSY_LED% %BLF_IDLE_LED% %BLF_RINGING_LED% %BLF_BUSY_LED% %BLF_HELD_LED%	Options blank and string_pattern Default: blank	
%CONF_UPLOAD_NAME%	String format: \$MA-confup.xml	
%HTTP_REPORT_METHOD%	Options: PUT, POST Default: POST	
%REPORT_TO_SERVER%	Options: On Request, On Local Change, Periodically Default: On Request	
%PERIODIC_UPLOAD_TIMER%	The value (in seconds) ranges from 600 to 259200. Default: 3600	

Tag Name	Valid Settings	Description
%UPLOAD_DELAY_ON_LOCAL_CHANGE%	An integer ranging between 10 and 900. Default: 60	
%PRT_UPLOAD_METHOD%	Options: PUT, POST Example: PUT	
%PRT_NAME%	String format: prt-\$MA-up	
%BROWSE_MODE_ENABLE%	Options: Yes, No Default: Yes	
%MAX_DISPLAY_RECORDS%	Range: 50 to 999 Default: 50	
%XSIDIR_INDIVIDUAL_MODE_ENABLE%	Options: Yes, No Default: No	
%XSIDIR_PERSONAL_ENABLE%	Options: Yes, No Default: No	
%XSIDIR_PERSONAL_NAME%	Default: Empty	
%XSIDIR_GROUP_ENABLE%	Options: Yes, No Default: No	
%XSIDIR_GROUP_NAME%	Default: Empty	
%XSIDIR_ENTERPRISE_ENABLE%	Options: Yes, No Default: No	
%XSIDIR_ENTERPRISE_NAME%	Default: Empty	
%XSIDIR_GROUPCOMMON_ENABLE%	Options: Yes, No Default: No	
%XSIDIR_GROUPCOMMON_NAME%	Default: Empty	
%XSIDIR_ENTERPRISECOMMON_ENABLE%	Options: Yes, No Default: No	
%XSIDIR_ENTERPRISECOMMON_NAME%	Default: Empty	
%ACD_STATUS_1%	Options: Sync From Server Sync From Local Default: Sync From Server	

Tag Name	Valid Settings	Description
%AUTO_AVAILABLE_AFTER_SIGN-IN_1%	Options: Yes, No Default: No	
%PRECONDITION_SUPPORT_x%	Options: Disabled, Enabled Default: Disabled	
%BLOCK_ANONYMOUS_CALL_ENABLE_1%	Options: Yes, No Default: No	
%CALL_WAITING_ENABLE_1%	Options: Yes, No Default: No	
%WEBEX_ONBOARD_ENABLE%	Options: Yes, No Default: Yes	Enable onboarding of the phone to Cloud.
%WEBEX_DIRECTORY_ENABLE%	Options: Yes, No Default: No	Enables Webex directory.
%WEBEX_DIRECTORY_NAME%	Default: Empty	Modifies Webex directory name.
%BB_ICE_STUN_ENABLE_D%	Options: Yes, No	Use STUN to discover the NAT mapping.
%ICE_STUN_ENABLED%	Options: Yes, No	Use ICE STUN to discover the NAT mapping.
%SECURE_CALL_OPTION-1%	Options: Optional, Required, Strict Default: Optional	Configure an extension to only accept secure calls.
%SECURE_CALL_SERVICE%	Options: Yes, No Default: Yes	Enable secure call service.
%UNIT_N_EXTENSION_M_%	Options; 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 Disabled	
%ACTION_BUTTON_FUNCTION%	Options: Off, Emergency Calls	
%ACTION_BUTTON_SERVICE_TRIGGER%	Options: Single Press Long Press Press 3 times Default: Single press	Choose how users can initiate a service call using the phone's Action button.
%ACTION_BUTTON_DIAL_DELAY%	Ranges from 0 to 30 seconds Default: 5 secs	Sets the timeout period, in seconds, for the phone to initiate the service call after the Action button is pressed.

Tag Name	Valid Settings	Description
%ACTION_BUTTON_SILENT_EMERGENCY_CALL%	Options: Enabled Disabled Default: Disabled	This setting works only when the Action Button Function is set to Emergency Call.
%ACTION_BUTTON_SERVICE_DEST%	Phone number or URI. Default: Empty	Provide the phone number or the URI for the service.
%OFFICE_HOURS_ENABLED%	Options: True, False	
%WORK_DAYS%	Options: Monday through Friday	
%WORKING_HOURS_START%	Options: Any hours of the day in 24-hour format	
%WORKING_HOURS_END%	Options: Any hours of the day in 24-hour format	
%DEEP_SLEEP_ENABLED%	Options: False, Non-work Day Only, All Days	
%Phone_OFF_TIME_AFTER_WORKING_HOURS%	Options: 0 to 360 minutes	
%PHONE_ON_TIME_BEFORE_WORKING_HOURS%	Options: 0 to 360 minutes	
%ENABLE_AUDIBLE_ALERT_WHEN_DEEP_SLEEP%	Options: True, False	
%IDLE_TIMEOUT_FOR_DEEP_SLEEP_OUTSIDE_OFFICE_HOURS%	Options: 0 to 60 minutes	
%IDLE_TIMEOUT_FOR_DISPLAY_OFF_OUTSIDE_OFFICE_HOURS%	Options: 0 to 60 minutes	
%HELP_DESK_ENABLE%	Options: Yes, No	
%HELP_DESK_QUICK_NUMBER_X%	Ranges from 0 to 9	
%HELP_DESK_NAME_X%	Ranges from 0 to 9	
%HELP_DESK_CUSTOM_MENU_NAME%	Options: Any string	
%LINE_LABEL-n%	n ranges from 1 to 6	



Device Management Tag Sets Modify

Display all the device management tags defined in the tag set. Tags can be added to the set or deleted from the set.

OK

Apply

Add

Cancel

\* Tag Set Name: Cisco-3PCC-Tags

Delete	Tag Name <a href="#">A</a>	Tag Value	Edit
<input type="checkbox"/>	%3rd_Party_CA_ROOT%		<a href="#">Edit</a>
<input type="checkbox"/>	%3RD_PARTY_CA_ROOT%		<a href="#">Edit</a>
<input type="checkbox"/>	%6800_LOGO_PIC_URL%		<a href="#">Edit</a>
<input type="checkbox"/>	%7800_WALLPAPER_PIC_URL%		<a href="#">Edit</a>
<input type="checkbox"/>	%6800_LOGO_PIC%		<a href="#">Edit</a>
<input type="checkbox"/>	%ACCESS_PROTOCOL%	http://	<a href="#">Edit</a>
<input type="checkbox"/>	%AMRWB_ENABLE%	Yes	<a href="#">Edit</a>
<input type="checkbox"/>	%AUTH_INVITE%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%AUTO_ANS_ON_CALL-1%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%AUTO_ANS_ON_CALL-10%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%AUTO_ANS_ON_CALL-11%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%AUTO_ANS_ON_CALL-12%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%AUTO_ANS_ON_CALL-13%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%AUTO_ANS_ON_CALL-14%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%AUTO_ANS_ON_CALL-15%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%AUTO_ANS_ON_CALL-16%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%AUTO_ANS_ON_CALL-2%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%AUTO_ANS_ON_CALL-3%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%AUTO_ANS_ON_CALL-4%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%AUTO_ANS_ON_CALL-5%	No	<a href="#">Edit</a>

[ Page 1 of 10 ]

[Next](#) [Last](#)

Device Management Tag Sets Modify

Display all the device management tags defined in the tag set. Tags can be added to the set or deleted from the set.

OK

Apply

Add

Cancel

\* Tag Set Name: Cisco-3PCC-Tags

Delete	Tag Name <a href="#">A</a>	Tag Value	Edit
<input type="checkbox"/>	%AUTO_ANS_ON_CALL-6%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%AUTO_ANS_ON_CALL-7%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%AUTO_ANS_ON_CALL-8%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%AUTO_ANS_ON_CALL-9%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%AUTO_ANSWER_PAGE%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BLF_DISPLAY_MODE%	BOTH	<a href="#">Edit</a>
<input type="checkbox"/>	%BLOCK_ANC_ACTIVATE%	*001	<a href="#">Edit</a>
<input type="checkbox"/>	%BLOCK_ANC_DEACTIVATE%	*002	<a href="#">Edit</a>
<input type="checkbox"/>	%BLOCK_CID_ACTIVATE%	*003	<a href="#">Edit</a>
<input type="checkbox"/>	%BLOCK_CID_DEACTIVATE%	*004	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_ACD_ENABLE-1%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_ACD_ENABLE-10%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_ACD_ENABLE-11%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_ACD_ENABLE-12%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_ACD_ENABLE-13%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_ACD_ENABLE-14%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_ACD_ENABLE-15%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_ACD_ENABLE-16%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_ACD_ENABLE-2%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_ACD_ENABLE-3%	No	<a href="#">Edit</a>

[First](#) [Previous](#)

[ Page 2 of 10 ]

[Next](#) [Last](#)

Device Management Tag Sets Modify

Display all the device management tags defined in the tag set. Tags can be added to the set or deleted from the set.

OK

Apply

Add

Cancel

\* Tag Set Name: Cisco-3PCC-Tags

Delete	Tag Name <a href="#">A</a>	Tag Value	Edit
<input type="checkbox"/>	%BROADSOFT_ACD_ENABLE-4%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_ACD_ENABLE-5%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_ACD_ENABLE-6%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_ACD_ENABLE-7%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_ACD_ENABLE-8%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_ACD_ENABLE-9%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_ACD_ENABLED%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_DIR_NAME%	RCON6	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_HOTELING_ENABLE-1%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_HOTELING_ENABLE-10%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_HOTELING_ENABLE-11%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_HOTELING_ENABLE-12%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_HOTELING_ENABLE-13%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_HOTELING_ENABLE-14%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_HOTELING_ENABLE-15%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_HOTELING_ENABLE-16%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_HOTELING_ENABLE-2%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_HOTELING_ENABLE-3%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_HOTELING_ENABLE-4%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_HOTELING_ENABLE-5%	No	<a href="#">Edit</a>

[First](#) [Previous](#)

[ Page 3 of 10 ]

[Next](#) [Last](#)

## Device Management Tag Sets Modify

Display all the device management tags defined in the tag set. Tags can be added to the set or deleted from the set.

\* Tag Set Name:

Delete	Tag Name [A]	Tag Value	Edit
<input type="checkbox"/>	%BROADSOFT_HOTELING_ENABLE-6%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_HOTELING_ENABLE-7%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_HOTELING_ENABLE-8%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_HOTELING_ENABLE-9%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%BROADSOFT_HOTELING_ENABLED%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%CALL_APPEARANCE%	2	<a href="#">Edit</a>
<input type="checkbox"/>	%CALL_BACK_ACTIVATE%	*005	<a href="#">Edit</a>
<input type="checkbox"/>	%CALL_BACK_DEACTIVATE%	*006	<a href="#">Edit</a>
<input type="checkbox"/>	%CALL_HISTORY_KEY_LIST%	hold 1,encall 2,join 4	<a href="#">Edit</a>
<input type="checkbox"/>	%CFWD_ENABLE_1_1_1%	Yes	<a href="#">Edit</a>
<input type="checkbox"/>	%CFWD_ENABLE_16_1_1%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%CFWD_ENABLE_2_1_1%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%CFWD_ENABLE_3_1_1%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%CONFERENCE_KEY_LIST%	hold 1,encall 2,join 4	<a href="#">Edit</a>
<input type="checkbox"/>	%CONNECTED_KEY_LIST%	hold 1,encall 2,conf 3,xfer 4,toggle,bxfer,confLx,xferLx,park;phold,flash;	<a href="#">Edit</a>
<input type="checkbox"/>	%DAYLIGHT_SAVING_TIME_ENABLED%	Yes	<a href="#">Edit</a>
<input type="checkbox"/>	%DAYLIGHT_SAVING_TIME%	start=3/-1/7/2,end=10/-1/7/2,save=1	<a href="#">Edit</a>
<input type="checkbox"/>	%DIAL_PLAN%	( [2346789]11S0   [0-1][2-9]11S0   0   00S0   01[2-9]xx   [*#]xx[*#]   *xx   *xxxxxxS0   *xxxxxxxxxxxx   [2-9]#   011x   [0-1]xxxxxx   [0-1][2-9]xxxxxxxxxxS0   [2-9]xxxxxxxxxxS0   [2-9]xxxxxx   101xxxx   11S0   [2-9]x. )	<a href="#">Edit</a>
<input type="checkbox"/>	%DIALING_CONSULT_KEY_LIST%	delchar 1,encall 2,sla 3;	<a href="#">Edit</a>
<input type="checkbox"/>	%DIALING_INPUT_KEY_LIST%	dial 1,delchar 2,clear 3,cancel 4,left 5,right 6,starcode 7,alpha 8,dir	<a href="#">Edit</a>

## Device Management Tag Sets Modify

Display all the device management tags defined in the tag set. Tags can be added to the set or deleted from the set.

\* Tag Set Name:

Delete	Tag Name [A]	Tag Value	Edit
<input type="checkbox"/>	%DICTIONARY_SERVER_SCRIPT%	d1=English;x1=en-US.xml;d2=Spanish;x2=es-ES.xml;d3=France;x3=fr-FR.xml;	<a href="#">Edit</a>
<input type="checkbox"/>	%DISPLAY_DIVERSION_INFO%	Yes	<a href="#">Edit</a>
<input type="checkbox"/>	%DND_ENABLE_1_1_1%	Yes	<a href="#">Edit</a>
<input type="checkbox"/>	%DND_ENABLE_16_1_1%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%DND_ENABLE_2_1_1%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%DND_ENABLE_3_1_1%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%DNS_CACHE_TTL%	Yes	<a href="#">Edit</a>
<input type="checkbox"/>	%DNS_SERVER_1%	10.89.81.187	<a href="#">Edit</a>
<input type="checkbox"/>	%DNS_SERVER_ORDER%	Manual-Dhcp	<a href="#">Edit</a>
<input type="checkbox"/>	%EM_ENABLED%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%EMERGENCY_NUMBER%	911	<a href="#">Edit</a>
<input type="checkbox"/>	%FAILBACK_INTVL%	3600	<a href="#">Edit</a>
<input type="checkbox"/>	%FIRMWARE_VERSION_CP-8800-3PCC%	sp68xx.11-0-2MPP-55devloads	<a href="#">Edit</a>
<input type="checkbox"/>	%FIRMWARE_VERSION_CP-7800-3PCC%		<a href="#">Edit</a>
<input type="checkbox"/>	%FIRMWARE_VERSION_CP-8800-3PCC%	sp68xx.11-1-1MSR1-1.loads	<a href="#">Edit</a>
<input type="checkbox"/>	%G711A_ENABLED%	Yes	<a href="#">Edit</a>
<input type="checkbox"/>	%G711U_ENABLED%	Yes	<a href="#">Edit</a>
<input type="checkbox"/>	%G722_ENABLED%	Yes	<a href="#">Edit</a>
<input type="checkbox"/>	%G729A_ENABLED%	Yes	<a href="#">Edit</a>
<input type="checkbox"/>	%HOLD_KEY_LIST%	resume 1,encall 2,newcall 3,redial;dir;cfwd;dnd	<a href="#">Edit</a>

[First](#)
[Previous](#)
( Page 5 of 10 )
[Next](#)
[Last](#)

## Device Management Tag Sets Modify

Display all the device management tags defined in the tag set. Tags can be added to the set or deleted from the set.

\* Tag Set Name:

Delete	Tag Name [A]	Tag Value	Edit
<input type="checkbox"/>	%IDLE_KEY_LIST%	redial 1,newcall 2,dnd 3,unpark 4,pickup 5,cfwd 6	<a href="#">Edit</a>
<input type="checkbox"/>	%IKM_HTTP_ENCRYPT_CONTENT%		<a href="#">Edit</a>
<input type="checkbox"/>	%ILBC_ENABLED%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%INVITE_RETRY_ATTEMPTS%	3	<a href="#">Edit</a>
<input type="checkbox"/>	%KEY_AGAIN_RESET_TIME%	800	<a href="#">Edit</a>
<input type="checkbox"/>	%KEY_DOUBLE_PRESS_TIME%	200	<a href="#">Edit</a>
<input type="checkbox"/>	%KEY_TRIPLE_PRESS_TIME%	400	<a href="#">Edit</a>
<input type="checkbox"/>	%LINE_ID_MAPPING%	Vertical First	<a href="#">Edit</a>
<input type="checkbox"/>	%NEW_CALL_RECENTS_KEY_LIST%	cancel 1,call 2;	<a href="#">Edit</a>
<input type="checkbox"/>	%NON-INVITE_RETRY_ATTEMPTS%	3	<a href="#">Edit</a>
<input type="checkbox"/>	%OFF_HOOK_CONSULT_KEY_LIST%	redial 1,cancel 2;	<a href="#">Edit</a>
<input type="checkbox"/>	%OFF_HOOK_KEY_LIST%	redial 1,dir 2,cfwd 3,dnd 4,lor 5,unpark 6,pickup 7,gpickup 8,starcode 11,alpha 12	<a href="#">Edit</a>
<input type="checkbox"/>	%OK_HOOK_DIAL_KEY_LIST%	cancel 1,call 2,delchar 3;	<a href="#">Edit</a>
<input type="checkbox"/>	%OPUS_ENABLED%	Yes	<a href="#">Edit</a>
<input type="checkbox"/>	%P_EARLY_MEDIA_SUPPORT_1%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%P_EARLY_MEDIA_SUPPORT_10%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%P_EARLY_MEDIA_SUPPORT_11%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%P_EARLY_MEDIA_SUPPORT_12%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%P_EARLY_MEDIA_SUPPORT_13%	No	<a href="#">Edit</a>
<input type="checkbox"/>	%P_EARLY_MEDIA_SUPPORT_14%	No	<a href="#">Edit</a>

[First](#)
[Previous](#)
( Page 6 of 10 )
[Next](#)
[Last](#)



### Device Management Tag Sets Modify

Display all the device management tags defined in the tag set. Tags can be added to the set or deleted from the set.

OK Apply Add Cancel			
* Tag Set Name: Cisco-3PCC-Tags			
Delete	Tag Name	Tag Value	Edit
<input type="checkbox"/>	%P_EARLY_MEDIA_SUPPORT_15%	No	Edit
<input type="checkbox"/>	%P_EARLY_MEDIA_SUPPORT_16%	No	Edit
<input type="checkbox"/>	%P_EARLY_MEDIA_SUPPORT_2%	No	Edit
<input type="checkbox"/>	%P_EARLY_MEDIA_SUPPORT_3%	No	Edit
<input type="checkbox"/>	%P_EARLY_MEDIA_SUPPORT_4%	No	Edit
<input type="checkbox"/>	%P_EARLY_MEDIA_SUPPORT_5%	No	Edit
<input type="checkbox"/>	%P_EARLY_MEDIA_SUPPORT_6%	No	Edit
<input type="checkbox"/>	%P_EARLY_MEDIA_SUPPORT_7%	No	Edit
<input type="checkbox"/>	%P_EARLY_MEDIA_SUPPORT_8%	No	Edit
<input type="checkbox"/>	%P_EARLY_MEDIA_SUPPORT_9%	No	Edit
<input type="checkbox"/>	%P_TIME%	0.020	Edit
<input type="checkbox"/>	%PERIODIC_UPLOAD_TO_SERVER%	3600	Edit
<input type="checkbox"/>	%PLK-1%	1	Edit
<input type="checkbox"/>	%PLK-2%	2	Edit
<input type="checkbox"/>	%PREFERRED_CODEC%	G722	Edit
<input type="checkbox"/>	%PROCESSING_KEY_LIST%	endcall2	Edit
<input type="checkbox"/>	%PROFILE_AUTH_TYPE%	Basic Http Authentication	Edit
<input type="checkbox"/>	%PROFILE_AUTHENTICATION_TYPE%	Basic Http Authentication	Edit
<input type="checkbox"/>	%PSK_ENABLED%	Yes	Edit
<input type="checkbox"/>	%REPORT_TO_SERVER%	On Request	Edit
First Previous [ Page 7 of 10 ] Next Last			

### Device Management Tag Sets Modify

Display all the device management tags defined in the tag set. Tags can be added to the set or deleted from the set.

OK Apply Add Cancel			
* Tag Set Name: Cisco-3PCC-Tags			
Delete	Tag Name	Tag Value	Edit
<input type="checkbox"/>	%RESYNC_AT_RANDOM_DELAY%	600	Edit
<input type="checkbox"/>	%RESYNC_ERROR%		Edit
<input type="checkbox"/>	%RESYNC_FORCED%	14400	Edit
<input type="checkbox"/>	%RESYNC_PERIODIC%	3600	Edit
<input type="checkbox"/>	%RESYNC_RANDOM%	2	Edit
<input type="checkbox"/>	%RESYNC_TIME%	0100	Edit
<input type="checkbox"/>	%RETRY_REG_RSC%	555.555	Edit
<input type="checkbox"/>	%RFC_2543_HOLD%	No	Edit
<input type="checkbox"/>	%RINGING_KEY_LIST%	answer[1;ignore[2;toggle]4	Edit
<input type="checkbox"/>	%SBC_ADDRESS_1%	10.89.81.177	Edit
<input type="checkbox"/>	%SBC_ADDRESS_2%	10.89.81.178	Edit
<input type="checkbox"/>	%SCREEN_SAVER_ENABLED%	Yes	Edit
<input type="checkbox"/>	%SCREEN_SAVER_ICON%	Clock	Edit
<input type="checkbox"/>	%SCREEN_SAVER_REFRESH_PERIOD%	6	Edit
<input type="checkbox"/>	%SCREEN_SAVER_WAIT%	300	Edit
<input type="checkbox"/>	%SECOND_PREFERRED_CODEC%	G722	Edit
<input type="checkbox"/>	%SHARED_ACTIVE_KEY_LIST%	newcall[1;target[2;cfwd[3;dn]4	Edit
<input type="checkbox"/>	%SHARED_HOLD_KEY_LIST%	resume[1;target[2;cfwd[3;dn]4	Edit
<input type="checkbox"/>	%SHARED-LINE-ON-D-CFWD-ENABLE%	Yes	Edit
<input type="checkbox"/>	%SIP_AUTH_REALM%		Edit
First Previous [ Page 8 of 10 ] Next Last			

### Device Management Tag Sets Modify

Display all the device management tags defined in the tag set. Tags can be added to the set or deleted from the set.

OK Apply Add Cancel			
* Tag Set Name: Cisco-3PCC-Tags			
Delete	Tag Name	Tag Value	Edit
<input type="checkbox"/>	%SIP_T1%	4	Edit
<input type="checkbox"/>	%SIP_T2%	4	Edit
<input type="checkbox"/>	%SIP_T4%	4	Edit
<input type="checkbox"/>	%SIP_TCP_MAX%	5080	Edit
<input type="checkbox"/>	%SIP_TCP_MIN%	5080	Edit
<input type="checkbox"/>	%SIP_TIMER_B1%	4	Edit
<input type="checkbox"/>	%SIP_TIMER_F1%	4	Edit
<input type="checkbox"/>	%SIP_TRANSPORT-1%	UDP	Edit
<input type="checkbox"/>	%SIP_TRANSPORT-10%	UDP	Edit
<input type="checkbox"/>	%SIP_TRANSPORT-2%	UDP	Edit
<input type="checkbox"/>	%SIP_TRANSPORT-3%	UDP	Edit
<input type="checkbox"/>	%SIP_TRANSPORT-4%	UDP	Edit
<input type="checkbox"/>	%SIP_TRANSPORT-5%	UDP	Edit
<input type="checkbox"/>	%SIP_TRANSPORT-6%	UDP	Edit
<input type="checkbox"/>	%SIP_TRANSPORT-7%	UDP	Edit
<input type="checkbox"/>	%SIP_TRANSPORT-8%	UDP	Edit
<input type="checkbox"/>	%SIP_TRANSPORT-9%	UDP	Edit
<input type="checkbox"/>	%SIP_UDF_PORT-1%		Edit
<input type="checkbox"/>	%SIP_UDF_PORT-2%		Edit
<input type="checkbox"/>	%START-CONF_KEY_LIST%	hold[1;endcall[2;conf[3;toggle;	Edit
First Previous [ Page 9 of 10 ] Next Last			



Device Management Tag Sets Modify

Display all the device management tags defined in the tag set. Tags can be added to the set or deleted from the set.

OK

Apply

Add

Cancel

\* Tag Set Name: Cisco-SPCC-Tags

Delete	Tag Name (A)	Tag Value	Edit
<input type="checkbox"/>	%START-XFER_KEY_LIST%	hold[1, endcall[2,xfer[4,toggle,	Edit
<input type="checkbox"/>	%STUN_SERVER%		Edit
<input type="checkbox"/>	%SYSLOG_IDENTIFIER%	None	Edit
<input type="checkbox"/>	%TEXT_LOGO%		Edit
<input type="checkbox"/>	%THIRD_PREFERRED_CODEC%	G711u	Edit
<input type="checkbox"/>	%TRY_BACKUP_RSC%	\$\$\$,\$\$\$	Edit
<input type="checkbox"/>	%UPLOAD_DELAY_ON_LOCAL_CHANGE%	60	Edit
<input type="checkbox"/>	%USE_LINE_KEYS_FOR_BLF%	Yes	Edit
<input type="checkbox"/>	%USE_PREFERRED_CODEC_ONLY%	No	Edit
<input type="checkbox"/>	%VM_SUBSCRIBE_INTERVAL%	1800	Edit
<input type="checkbox"/>	%Voice_Feedback_Enable%	No	Edit
<input type="checkbox"/>	%VOICE_FEEDBACK_ENABLE%	Yes	Edit
<input type="checkbox"/>	%VOICE_FEEDBACK_SPEED%	Normal	Edit
<input type="checkbox"/>	%XSI_CFWD_ENABLE_1%	No	Edit
<input type="checkbox"/>	%XSI_OND_ENABLE_1%	No	Edit
<input type="checkbox"/>	%XSI_HOST_SERVER%	10.89.81.163	Edit
<input type="checkbox"/>	%XSI_SERVER%	10.89.81.163	Edit
<input type="checkbox"/>	%XSIPASSWORD-1%	Cisco123!	Edit

First

Previous

[ Page 10 of 10 ]

Figure 82 Device Type-specific Tag Settings

## 5.2.2 Configure Cisco BroadWorks Device Profile Type

The device profile type is a system-level structure that defines how the device interfaces with Cisco BroadWorks. It also identifies the default configuration files and other files, such as firmware, which are required for the device to operate correctly. The system administrator creates the device profile type. Group administrators use the device profile type to create a device profile. The device profile is an instance of the device profile type that is associated with a physical device.

There are two Cisco BroadWorks device profile configuration methods described: import and manual. The import method takes a DTAF as input and builds the Cisco BroadWorks device profile type(s) automatically. The manual method takes the administrator through the steps to manually add and configure the device profile type(s).

The import method should be used if the following prerequisites are met:

- The BroadWorks Release is 17.0 or later.
- The device profile type(s) being imported do not already exist on the system. (If either a previous import or manual configuration was done, then the import fails).
- There is a DTAF file available for import with a Cisco BroadWorks release level that is the same as or prior to the release to which it is being imported. If the DTAF file is at a release level later than the release being imported to, then the import can fail.

Otherwise, use the manual method.

For more detailed instructions, see the *Cisco BroadWorks CPE Kit Usage Guide* [2] and the *Cisco BroadWorks Device Management Configuration Guide* [2].

### 5.2.2.1 Configuration Method 1: Import


This section identifies the steps necessary to make use of the Device Management import feature to configure Cisco BroadWorks to add the Cisco MPP Series as a Device Management-enabled device type. Also, see the *Cisco BroadWorks CPE Kit Usage Guide* [2].

Download the Cisco Common IDT for Cisco MPP Series phones, that is, *CP-78xx-88xx-68xx-3PCC* CPE kit from [cisco.com](http://cisco.com). Extract the DTAF file(s) from the CPE kit. These are the import files. Repeat the following steps for each model you wish to import.

- 1) Log in to Cisco BroadWorks as an administrator.
- 2) Browse to *System* → *Resources* → *Identity/Device Profile Types* and then click **Import**.
- 3) Select *Browse* to find the extracted DTAF file for the model and then click **OK** to start the import.

After the import finishes, complete the following post-import configuration steps:

- 4) Browse to *System* → *Resources* → *Identity/Device Profile Types*.
- 5) Perform a search to find the imported Cisco device profile type, *Cisco-CP-78xx-88xx-68xx-3PCC*.
- 6) Browse to the *Profile* page and change the Device Management Device Access FQDN to your Xtended Services Platform (Xsp) or Xtended Services Platform cluster address.

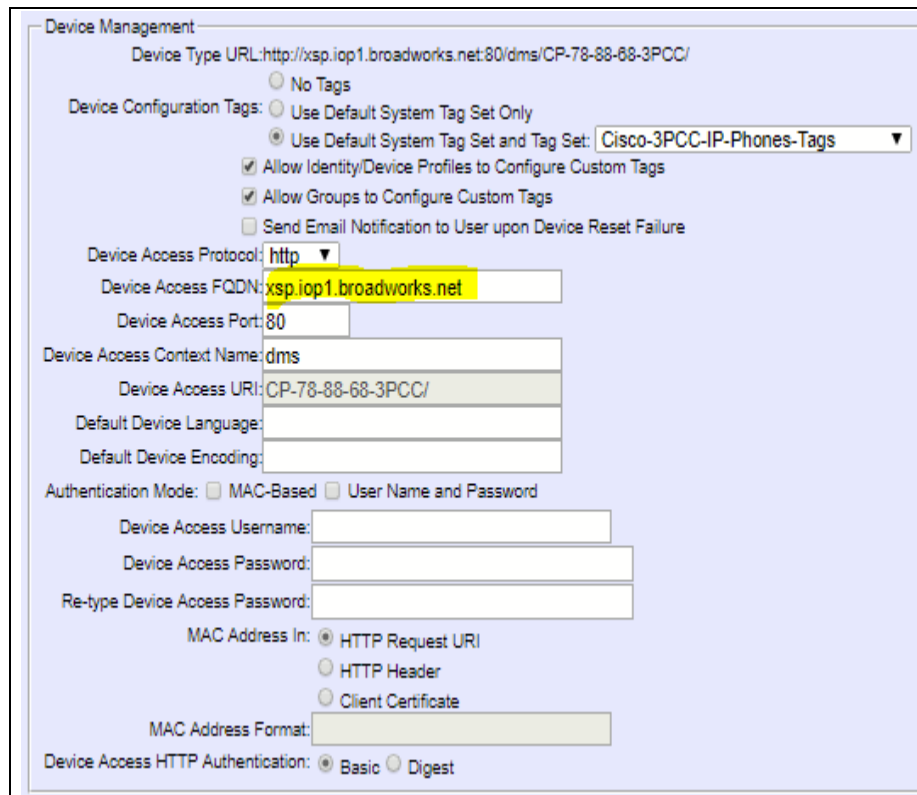

Device Management

Device Type URL: <http://xsp.iop1.broadworks.net:80/dms/CP-78-88-68-3PCC/>

Device Configuration Tags: ☐ No Tags ☐ Use Default System Tag Set Only ☒ Use Default System Tag Set and Tag Set: **Cisco-3PCC-IP-Phones-Tags**

☒ Allow Identity/Device Profiles to Configure Custom Tags

☒ Allow Groups to Configure Custom Tags

☐ Send Email Notification to User upon Device Reset Failure

Device Access Protocol: **http**

Device Access FQDN: **xsp.iop1.broadworks.net**

Device Access Port: 80

Device Access Context Name: dms

Device Access URI: CP-78-88-68-3PCC/

Default Device Language:

Default Device Encoding:

Authentication Mode: ☐ MAC-Based ☐ User Name and Password

Device Access Username:

Device Access Password:

Re-type Device Access Password:

MAC Address In: ☒ HTTP Request URI ☐ HTTP Header ☐ Client Certificate

MAC Address Format:

Device Access HTTP Authentication: ☒ Basic ☐ Digest

Figure 83 Device Access FQDN

- 7) Click the **Files and Authentication** link and then select the option to rebuild all the system files.

Firmware files must be obtained from Cisco. These files are not included in the import. Complete the steps in section [5.2.2.2.2 Define Device Profile Type Files](#) to define the static firmware files and to upload the firmware.

**NOTE:** The non-firmware static files in section [5.2.2.2.2 Define Device Profile Type Files](#) are normally included in the import.

- 8) After importing the DTAFs, restart the Application Server to load the *TimeZoneAlias* files.
- 9) Update the device profile type language setting according to instructions provided in section [5.2.2.2.6.1 Language Mapping](#).

## 5.2.2.2 Configuration Method 2: Manual

This section identifies the basic steps necessary for an administrator to manually configure Cisco BroadWorks to add the Cisco MPP Series as a Device Management-enabled device type. This method should not be used except in special cases as described in the opening to section [5.2.2 Configure Cisco BroadWorks Device Profile Type](#).

For more detailed instruction on manual configuration, see the *Cisco BroadWorks CPE Kit Usage Guide* [2] and the *Cisco BroadWorks Device Management Configuration Guide* [2].

The steps in this section can also be followed to update previously imported or configured device profile type(s) with new configuration files and firmware.

If there are DTAFs for more than one device model, these steps must be completed for each model.

### 5.2.2.2.1 Create or Modify Device Profile Type

This section identifies the Cisco BroadWorks device profile type settings relevant to Device Management for the Cisco Common Profile type covering MPP Series.

Browse to *System* → *Resources* → *Identity/Device Profile Types* and perform a search to find the Cisco device profile type(s) created in section [3.1 Cisco BroadWorks Device Profile Type Configuration](#) or add the device profile type for each model using the settings from section [3.1 Cisco BroadWorks Device Profile Type Configuration](#) if they do not exist.

Configure the device profile type *Signaling Address Type*, *Standard* and *Advanced* options settings to match the settings in section [3.1 Cisco BroadWorks Device Profile Type Configuration](#).

Configure the device profile type *Device Management Options* as shown in section [5.2.2.1 Configuration Method 1: Import](#).

The following subsections identify the required settings specific to Device Management.

#### 5.2.2.2.2 Define Device Profile Type Files

This section describes the Cisco BroadWorks Device Management configuration necessary to identify the configuration files and other files that the Cisco MPP Series downloads.

Configuration templates, firmware, and other files the MPP Series uses must be uploaded to Cisco BroadWorks. Download the common *Cisco-CP-78xx-88xx-68xx-3PCC* CPE kit from [cisco.com](http://cisco.com). Extract the configuration files from the *Configuration Files* folder of CPE kit. Obtain the firmware files directly from Cisco.

The following table identifies the Cisco configuration files distributed with the 11.2.3 CPE kit.

File Name	CPE Kit Template File Name	File Type	Description
<i>CiscoDev-3PCC_Bootstrap.xml</i>	<i>CiscoDev-3PCC_Bootstrap.xml</i>	System-level	These files are referred to as the default template files. They contain the Profile Rule settings for the MPP Series phone models.

File Name	CPE Kit Template File Name	File Type	Description
<i>CiscoDev_Type&lt;Family&gt;.xml</i>	<i>CiscoDev_Type68xx.xml</i> <i>CiscoDev_Type6821.xml</i> <i>CiscoDev_Type6861.xml</i> <i>CiscoDev_Type6871.xml</i> <i>CiscoDev_Type78xx.xml</i> <i>CiscoDev_Type7832.xml</i> <i>CiscoDev_Type88xx.xml</i> <i>CiscoDev_Type8832.xml</i> <i>CiscoDev_Type88x5.xml</i> <i>CiscoDev_Type8875.xml</i> <i>CiscoDev_Type9841.xml</i> <i>CiscoDev_Type9851.xml</i>	Family/System-level	These files contain the family-specific parameters. This includes the upgrade rule.
<i>CiscoDev_System.xml</i>	<i>CiscoDev_System.xml</i>	System-level	These files are referred to as the system template files. They contain the system settings common to the phone model type.
<i>%BWMACADDRESS%_CiscoDev.xml</i>	<i>&lt;MAC&gt;_CiscoDev.xml</i>	Device-specific	This file is referred to as the user template file. It contains the phone or user-specific settings for the phone. There is a MAC template file in the CPE kit for each Cisco phone mode.  These files are referred to as the line key template files. They contain the line key data for the specific phone.
<i>TimeZoneAliasLabels_&lt;model&gt;.properties</i>	<i>TimeZoneAliasLabels_ - CiscoDev.properties</i>	Time Zone Alias	The time zone alias file is a BroadWorks Device Management file used to map time zone identifiers between Cisco BroadWorks and Cisco devices. A time zone alias file is required for each model.
<i>%BWMACADDRESS%-confup.xml</i>	<i>&lt;MAC&gt;-confup.xml</i>	Device-specific	The device-specific file documents the current settings used by the phone.  These phone configuration files will be uploaded onto the server using HTTP PUT message on local change, request or periodically depending on parameter <Report To Server>.
<i>prt-%BWMACADDRESS%-up.tar.gz</i>	<i>prt-&lt;MAC&gt;-up.tar.gz</i>	Device-specific	These PRT files are generated by the PRT option on LCD or Web interface.

The firmware files that the Cisco MPP Series Phone downloads from the server are not provided in the CPE kit and must be obtained from Cisco. For list of firmware files, see section [5.2.2.2.2.4 Static Files](#) 5.2.2.2.3.

Browse to *System* → *Resources* → *Identity/Device Profile Types* → *Files* and Authentication to add the files as described in the following subsections.

#### 5.2.2.2.2.1 System Files


This section identifies the system-level files used by Cisco MPP Series and provides instructions for defining the files and uploading for Device Management.

This section covers the following system-level Device Per-Type files:

- *CiscoDev-3PCC\_Bootstrap.xml*
- *CiscoDev\_System.xml*
- *CiscoDev\_Type68xx.xml*
- *CiscoDev\_Type6821.xml*
- *CiscoDev\_Type6861.xml*
- *CiscoDev\_Type6871.xml*
- *CiscoDev\_Type78xx.xml*
- *CiscoDev\_Type7832.xml*
- *CiscoDev\_Type88xx.xml*
- *CiscoDev\_Type88x5.xml*
- *CiscoDev\_Type8875.xml*
- *CiscoDev\_Type8832.xml*
- *CiscoDev\_Type9841.xml*
- *CiscoDev\_Type9851.xml*

Add the system files to the device profile type with the settings shown in [Figure 84](#).

After creating the device profile type file, upload *the file* extracted from the CPE kit. Use the **Browse** button on the file definition screen. Be sure to click **Apply** after uploading the file.

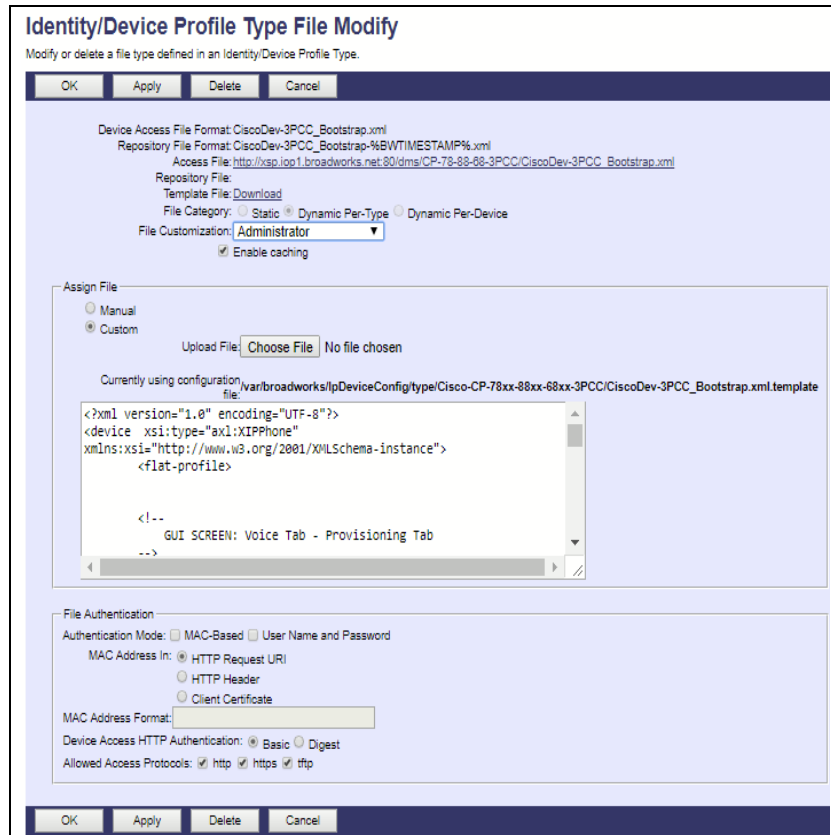

**Identity/Device Profile Type File Modify**  
Modify or delete a file type defined in an Identity/Device Profile Type.

OK Apply Delete Cancel

Device Access File Format: CiscoDev-3PCC\_Bootstrap.xml  
Repository File Format: CiscoDev-3PCC\_Bootstrap-%BWTIMESTAMP%.xml  
Access File: [http://xsp.1001.broadworks.net:80/dms/CP-78-88-68-3PCC/CiscoDev-3PCC\\_Bootstrap.xml](http://xsp.1001.broadworks.net:80/dms/CP-78-88-68-3PCC/CiscoDev-3PCC_Bootstrap.xml)  
Repository File:  
Template File: [Download](#)  
File Category: ☐ Static ☒ Dynamic Per-Type ☐ Dynamic Per-Device  
File Customization: Administrator  
☒ Enable caching

Assign File  
☐ Manual  
☒ Custom  
Upload File: [Choose File](#) No file chosen

Currently using configuration file:  
/var/broadworks/lpDeviceConfig/type/Cisco-CP-78xx-88xx-68xx-3PCC/CiscoDev-3PCC\_Bootstrap.xml.template

```
<?xml version="1.0" encoding="UTF-8"?>
<device xsi:type="axl:XIPPhone"
xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance">
  <flat-profile>

  <!--
    GUI SCREEN: Voice Tab - Provisioning Tab
  -->
```

File Authentication  
Authentication Mode: ☐ MAC-Based ☐ User Name and Password  
MAC Address In: ☒ HTTP Request URI  
☐ HTTP Header  
☐ Client Certificate  
MAC Address Format:  
Device Access HTTP Authentication: ☒ Basic ☐ Digest  
Allowed Access Protocols: ☒ http ☒ https ☒ tftp

OK Apply Delete Cancel

Figure 84 CiscoDev-3PCC\_Bootstrap.xml File Settings

#### 5.2.2.2.2.2 Device-Specific Files


This section identifies the device-specific files used by Cisco MPP Series and provides instructions for defining and uploading the files for Device Management.

This section covers the following system-level files and topics:

- **<MAC>\_CiscoDev.xml**

Add the **<MAC>\_CiscoDev.xml** file to the device profile type with the settings shown in [Figure 85](#).

After defining the device-specific file type, upload the corresponding device-specific file extracted from the CPE kit. Use the **Browse** button on the file definition screen. Be sure to click **Apply** after uploading the file.

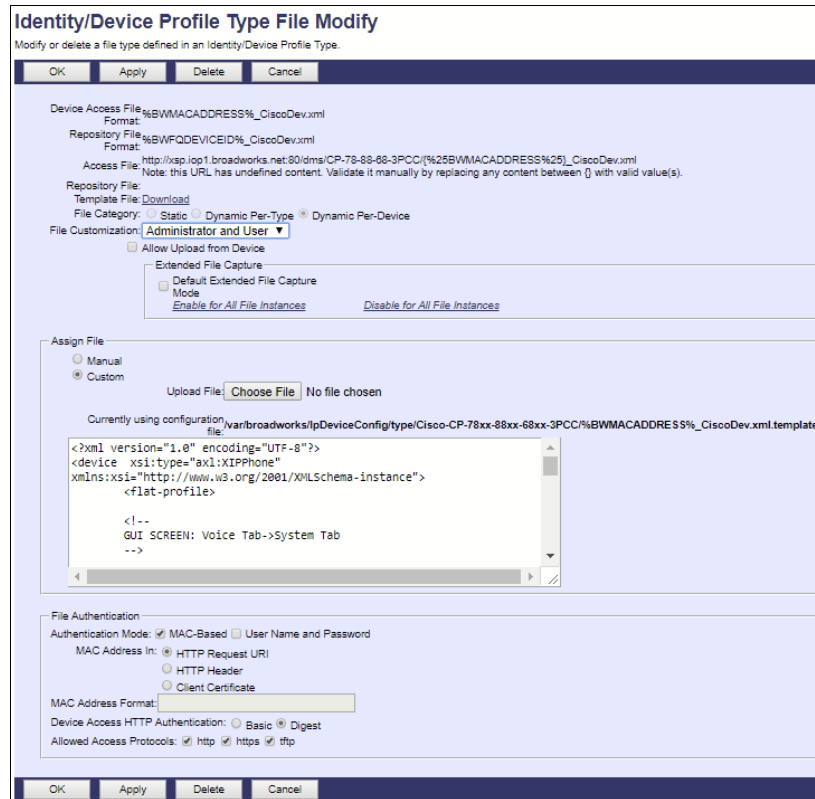

**Identity/Device Profile Type File Modify**  
Modify or delete a file type defined in an Identity/Device Profile Type.

OK Apply Delete Cancel

Device Access File: %BWMACADDRESS%\_CiscoDev.xml  
Format: %BWMACADDRESS%\_CiscoDev.xml

Repository File: %BWMACADDRESS%\_CiscoDev.xml  
Format: %BWMACADDRESS%\_CiscoDev.xml

Access File: http://isp.log1.broadworks.net:80/dms/CP-78-88-68-3PCC(%25BWMACADDRESS%25)\_CiscoDev.xml  
(Note: this URL has undefined content. Validate it manually by replacing any content between {} with valid value(s).)

Repository File: Download

Template File: Download

File Category: ☐ Static ☐ Dynamic Per-Type ☒ Dynamic Per-Device

File Customization: Administrator and User

☐ Allow Upload from Device

Extended File Capture  
☐ Default Extended File Capture  
Mode: Enable for All File Instances Disable for All File Instances

Assign File  
☐ Manual  
☒ Custom  
Upload File: Choose File No file chosen

Currently using configuration file: /var/broadworks/lpDeviceConfig/type/Cisco-CP-78xx-88xx-68xx-3PCC/%BWMACADDRESS%\_CiscoDev.xml.template

```
<?xml version="1.0" encoding="UTF-8"?>
<device xsi:type="axl:XIPPhone"
xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance">
  <flat-profile>

    <!--
      GUI SCREEN: Voice Tab->System Tab
    -->
```

File Authentication  
Authentication Mode: ☒ MAC-Based ☐ User Name and Password  
MAC Address In: ☒ HTTP Request URI  
☐ HTTP Header  
☐ Client Certificate  
MAC Address Format:

Device Access HTTP Authentication: ☐ Basic ☒ Digest

Allowed Access Protocols: ☒ http ☒ https ☐ tftp

OK Apply Delete Cancel

Figure 85 <MAC>\_CiscoDev.xml File Setting

#### 5.2.2.2.3 Upload Files

The Cisco phone uploads files to the server via HTTP PUT message.

- <MAC>-confup.xml

The configuration file that the phone is currently using can be uploaded on local change, request, or periodically configured by the parameter <Report To Server>.

- prt-<MAC>-up.tar.gz

The file (prt-<MAC>-up.tar.gz) can be uploaded by the generation of problem report tool (PRT).

Add a Cisco BroadWorks device profile type file to the Cisco device profile for both the %BWMACADDRESS%-confup.xml and prt-%BWMACADDRESS%-up.tar.gz files using the settings described in the following figure in case there is none in the CPE kit.



### Identity/Device Profile Type File Modify

Modify or delete a file type defined in an Identity/Device Profile Type.

OK Apply Delete Cancel

Device Access: %BWMACADDRESS%-confup.xml  
 File Format: %BWMACADDRESS%-confup.xml  
 Repository: %BWMACADDRESS%-confup.xml  
 File Format: %BWMACADDRESS%-confup.xml  
 Access File: http://10.89.81.183:80/dms/CP-78-68-68-3PCC/{%25BWMACADDRESS%25}-confup.xml  
 Note: this URL has undefined content. Validate it manually by replacing any content between {} with valid value(s).  
 Repository: %BWMACADDRESS%-confup.xml  
 File: %BWMACADDRESS%-confup.xml  
 Template File: %BWMACADDRESS%-confup.xml  
 File Category: ☐ Static ☐ Dynamic Per-Type ☐ Dynamic Per-Device  
 File: Administrator  
 Customization: ☒ Allow Upload from Device  
 Extended File Capture  
☐ Default Extended File Capture Mode  
 Enable for All File Instances Disable for All File Instances

Assign File  
☒ Manual  
☐ Custom  
 Upload File: Browse... No file selected.

File Authentication  
 Authentication Mode: ☒ MAC-Based ☐ User Name and Password  
 MAC Address In: ☒ HTTP Request URI  
☐ HTTP Header  
☐ Client Certificate  
 MAC Address Format:   
 Device Access HTTP Authentication: ☒ Basic ☐ Digest  
 Allowed Access Protocols: ☒ http ☒ https ☒ tftp

OK Apply Delete Cancel

### Identity/Device Profile Type File Modify

Modify or delete a file type defined in an Identity/Device Profile Type.

OK Apply Delete Cancel

Device Access: prt-%BWMACADDRESS%-up.tar.gz  
 File Format: prt-%BWMACADDRESS%-up.tar.gz  
 Repository: prt-%BWMACADDRESS%-up.tar.gz  
 File Format: prt-%BWMACADDRESS%-up.tar.gz  
 Access File: http://10.89.81.183:80/dms/CP-78-68-68-3PCC/prt-{%25BWMACADDRESS%25}-up.tar.gz  
 Note: this URL has undefined content. Validate it manually by replacing any content between {} with valid value(s).  
 Repository: prt-%BWMACADDRESS%-up.tar.gz  
 File: prt-%BWMACADDRESS%-up.tar.gz  
 Template File: prt-%BWMACADDRESS%-up.tar.gz  
 File Category: ☐ Static ☐ Dynamic Per-Type ☐ Dynamic Per-Device  
 File: Administrator  
 Customization: ☒ Allow Upload from Device  
 Extended File Capture  
☐ Default Extended File Capture Mode  
 Enable for All File Instances Disable for All File Instances

Assign File  
☒ Manual  
☐ Custom  
 Upload File: Browse... No file selected.

File Authentication  
 Authentication Mode: ☒ MAC-Based ☐ User Name and Password  
 MAC Address In: ☒ HTTP Request URI  
☐ HTTP Header  
☐ Client Certificate  
 MAC Address Format:   
 Device Access HTTP Authentication: ☒ Basic ☐ Digest  
 Allowed Access Protocols: ☒ http ☒ https ☒ tftp

OK Apply Delete Cancel

Figure 86 Upload File Settings

#### 5.2.2.2.4 Static Files

Static files are files such as firmware and media files that are not configurable and/or do not make use of the dynamic Cisco BroadWorks Device Management tags.

The Cisco MPP Series requires the following static firmware files. (This is for reference only; latest firmware file names can be different. For up-to-date firmware file versions see the following links):

- sip68xx.12-0-4MPP0001-195.loads (for the 6800 Devices)
- sip6821.12-0-4MPP0001-195.loads (for the 6821 Devices)
- sip78xx.12-0-4MPP0001-195.loads (for the 7800 Devices)
- sip7832.12-0-4MPP0001-195.loads (for the 7832 Devices)
- sip88xx.12-0-4MPP0001-195.loads (for the 8800 Devices)
- sip8845\_65.12-0-4MPP0001-195.loads (for the 8845 and 8865 Devices)
- PHONEOS-8875.2-3-1-0001-26.loads (for Cisco Video Phone 8875)
- PHONEOS-8875.2-3-1-0001-26.pkg (for Cisco Video Phone 8875)
- sip8832.12-0-4MPP0001-195.loads (for the 8832 Devices)
- PHONEOS.3-0-1-0001-213.loads (for Cisco Desk Phone 9800 Series)

Add the static files to the device profile type with the settings shown in [Figure 87](#).

After creating the device profile type file, upload *static files* obtained from Cisco.

To get the static files (Firmware Files for IP Phones), see the following links.

- Cisco IP Phones 6800 Series: <https://www.cisco.com/c/en/us/support/collaboration-endpoints/ip-phone-6800-series-multiplatform-firmware/tsd-products-support-series-home.html>
- Cisco IP Phones 7800 Series: <https://www.cisco.com/c/en/us/support/collaboration-endpoints/ip-phone-7800-series-multiplatform-firmware/tsd-products-support-series-home.html>
- Cisco IP Phones 8800 Series: <https://www.cisco.com/c/en/us/support/collaboration-endpoints/ip-phone-8800-series-multiplatform-firmware/tsd-products-support-series-home.html>
- Cisco Video Phone 8875: <https://www.cisco.com/c/en/us/support/collaboration-endpoints/unified-ip-phone-8800-series/series.html>
- Cisco IP Phone 9800 Series: [https://help.webex.com/en-us/article/n1trwjh/Release-Notes-for-Cisco-Desk-Phone-9800-Series#task-template\\_e3253095-4716-4259-b84c-efb2cc6e7668](https://help.webex.com/en-us/article/n1trwjh/Release-Notes-for-Cisco-Desk-Phone-9800-Series#task-template_e3253095-4716-4259-b84c-efb2cc6e7668)

Use the **Browse** button on the file definition screen. Be sure to click **Apply** after uploading the file.



**Identity/Device Profile Type File Modify**  
Modify or delete a file type defined in an Identity/Device Profile Type.

OK Apply Delete Cancel

Device Access File Format: sip78xx.11-1-1MPP-897.loads  
Repository File Format: sip78xx.11-1-1MPP-897.loads  
Access File: <http://xsp.iop1.broadworks.net:80/dms/CP-78-88-68-3PCC/sip78xx.11-1-1MPP-897.loads>  
Repository File: [Download](#)  
Template File: [Download](#)  
File Category: ☒ Static ☐ Dynamic Per-Type ☐ Dynamic Per-Device  
File Customization: Administrator  
☒ Enable caching

Assign File  
☐ Manual  
☒ Custom  
Upload File: [Choose File](#) No file chosen

Currently using configuration file: /var/broadworks/tpDeviceConfig/type/Cisco-CP-78xx-88xx-68xx-3PCC/sip78xx.11-1-1MPP-897.loads.template  
\*\*\*\*\* Temporary File \*\*\*\*\*  
The Content of this file should be obtained from the vendor.

File Authentication  
Authentication Mode: ☐ MAC-Based ☐ User Name and Password  
MAC Address In: ☒ HTTP Request URI  
☐ HTTP Header  
☐ Client Certificate  
MAC Address Format:   
Device Access HTTP Authentication: ☒ Basic ☐ Digest  
Allowed Access Protocols: ☒ http ☒ https ☒ ttp

OK Apply Delete Cancel

Figure 87 Static Load File

Note that Cisco MPP Series also requires the following static files. Contact Cisco for the files.

- kernel6821.12-0-4MPP0001-195.sbn
- miniroot6821.12-0-4MPP0001-195.sbn
- prelo6821.AL128m-01-03P.sbn
- rootfs6821.12-0-4MPP0001-195.sbn
- sboot6821.AL-01-10P.sbn
- kernel2.68xx.12-0-4MPP0001-195.sbn
- kernel2.6861.12-0-4MPP0001-195.sbn
- kernel2.6871.12-0-4MPP0001-195.sbn
- rootfs2.68xx.12-0-4MPP0001-195.sbn
- rootfs2.6861.12-0-4MPP0001-195.sbn
- rootfs2.6871.12-0-4MPP0001-195.sbn
- sboot2.68xx.12-0-4MPP0001-195.sbn
- sboot2.6861.12-0-4MPP0001-195.sbn
- sboot2.6871.12-0-4MPP0001-195.sbn

- kernel2.78xx.12-0-4MPP0001-195.sbn
- rootfs2.78xx.12-0-4MPP0001-195.sbn
- sboot2.78xx.12-0-4MPP0001-195.sbn
- kernel7832.12-0-4MPP0001-195.sbn
- prelo7832.BR-01-06P.sbn
- rootfs7832.12-0-4MPP0001-195.sbn
- sboot7832.BR-01-11P.sbn
- boot1288xx.BE-01-007P.sbn
- fbi88xx.BE-01-011P.sbn
- kern88xx.12-0-4MPP0001-195.sbn
- kernel288xx.12-0-4MPP0001-195.sbn
- kernel388xx.12-0-4MPP0001-195.sbn
- m0patch288xx.BE-01-001P.sbn
- preloader88xx.BE-01-008P.sbn
- rootfs88xx.12-0-4MPP0001-195.sbn
- rootfs288xx.12-0-4MPP0001-195.sbn
- rootfs388xx.12-0-4MPP0001-195.sbn
- sb288xx.BE-01-028P.sbn
- sb2288xx.BE-01-015P.sbn
- sb2388xx.BE-01-032P.sbn
- ssb288xx.BE-01-007P.sbn
- vc488xx.12-0-4MPP0001-195.sbn
- fbi8845\_65.BEV-01-006P.sbn
- kern8845\_65.12-0-4MPP0001-195.sbn
- rootfs8845\_65.12-0-4MPP0001-195.sbn
- sb28845\_65.BEV-01-020P.sbn
- vc48845\_65.12-0-4MPP0001-195.sbn
- firmware28832.12-0-4MPP0001-195.sbn
- kernel8832.12-0-4MPP0001-195.sbn
- kernel28832.12-0-4MPP0001-195.sbn
- key28832.12-0-4MPP0001-195.sbn
- loader8832.VO-01-004P.sbn
- loader28832.VO0-00-003P.sbn
- oemloader28832.12-0-4MPP0001-195.sbn
- rootfs8832.12-0-4MPP0001-195.sbn
- rootfs28832.12-0-4MPP0001-195.sbn

- sb28832.VO-01-015P.sbn
- sb228832.12-0-4MPP0001-195.sbn
- trustzone28832.12-0-4MPP0001-195.sbn

Note that the Cisco Desk Phone 9800 Series also requires the following static files.  
Contact Cisco for the files.

- kernel-9841\_51.3-0-1-0001-213.sbn
- preloader-9841\_51.EM-01-007.sbn
- rootfs-9841\_51.3-0-1-0001-213.sbn
- sb2-9841\_51.EM-01-034.sbn

#### 5.2.2.2.5 Time Zone Alias File

To properly map the Cisco BroadWorks configured user time zone to the Cisco MPP Series device setting, a mapping file must be created on the Cisco BroadWorks system. This file maps the Cisco BroadWorks user time zone settings to the device's time zone settings. For information about time zone mapping for the device profile type, see the *BroadWorks Device Management Configuration Guide* [2].

This time zone mapping file must be added to the `/usr/local/broadworks/bw_base/conf/dms` directory on the Application Server using the following file name format:

- TimeZoneAliasLabels\_Cisco-CP-78xx-88xx-68xx-3PCC.properties

The file must contain the mapping of Cisco BroadWorks time zones values to Cisco MPP Series time zone values. The following is an example of the file contents.

```
US_HAWAII=GMT-10:00
US_ALASKA=GMT-09:00
CANADA_PACIFIC_TIME=GMT-08:00
MEXICO_PACIFIC_TIME=GMT-08:00
US_PACIFIC_TIME=GMT-08:00
US_ARIZONA=GMT-07:00
CANADA_MOUNTAIN_TIME=GMT-07:00
MEXICO_MOUNTAIN_TIME=GMT-07:00
US_MOUNTAIN_TIME=GMT-07:00
CANADA_CENTRAL_TIME=GMT-06:00
US_CENTRAL_TIME=GMT-06:00
US_INDIANA=GMT-06:00
CANADA_EASTERN_TIME=GMT-05:00
US_EASTERN_TIME=GMT-05:00
CANADA_ALTANTIC_TIME=GMT-04:00
CANADA_NEWFOUNDLAND=GMT-03:30
VENEZUELA_TIME=GMT-04:30
CHILE_TIME=GMT-03:00
ARGENTINA_TIME=GMT-03:00
GREENWICH_MEAN_TIME=GMT-00:00
CENTRAL_EUROPEAN_TIME=GMT+01:00
EASTERN_EUROPEAN_TIME=GMT+02:00
EAST_AFRICAN_TIME=GMT+03:00
IRAN_TIME=GMT+03:30
AZERBAIJAN_TIME=GMT+04:00
AFGHANISTAN_TIME=GMT+04:30
PAKISTAN_TIME=GMT+05:00
```

```
INDIA_TIME=GMT+05:30
EASTERN_KAZAKHSTAN_TIME=GMT+06:00
MYANMAR_TIME=GMT+06:30
THAILAND_TIME=GMT+07:00
CHINA_TIME=GMT+08:00
JAPAN_TIME=GMT+09:00
AUSTRALIAN_CENTRAL_STANDARD_TIME=GMT+09:30
AUSTRALIAN_EASTERN_STANDARD_TIME=GMT+10:00
NEWZEALAND_TIME=GMT+13:00
```

**NOTE:** You must restart the Application Server for the TimeZoneAlias files to be picked up by the system.

#### 5.2.2.2.6 Language Provisioning

Language provisioning is necessary if using languages other than English. There are two aspects to language provisioning. First, the Cisco phone must be enabled to download the Cisco language files. Second, a mapping is required between the Cisco BroadWorks and Cisco language identifiers.

The following are example language files for 68xx and 78xx:

- ar-SA\_78xx\_68xx-12.0.4.0002.ttf (Arabic)
- ar-SA\_78xx\_68xx-12.0.4.0002.xml (Arabic)
- ar-SA\_78xx\_BMP-12.0.4.0002.ttf (Arabic)
- ar-SA\_6821-12.0.4.0002.ttf (Arabic)
- ar-SA\_6821-12.0.4.0002.xml (Arabic)
- ar-SA\_6861-12.0.4.0002.ttf (Arabic)
- bg-BG\_78xx\_68xx-12.0.4.0002.xml (Bulgarian)
- bg-BG\_6821-12.0.4.0002.xml (Bulgarian)
- ca-ES\_78xx\_68xx-12.0.4.0002.xml (Catalan-Spain)
- ca-ES\_6821-12.0.4.0002.xml (Catalan-Spain)
- cs-CZ\_78xx\_68xx-12.0.4.0002.xml (Czech)
- cs-CZ\_6821-12.0.4.0002.xml (Czech)
- da-DK\_78xx\_68xx-12.0.4.0002.xml (Dutch)
- da-DK\_6821-12.0.4.0002.xml (Dutch)
- de-DE\_78xx\_68xx-12.0.4.0002.xml (German)
- de-DE\_6821-12.0.4.0002.xml (German)
- el-GR\_78xx\_68xx-12.0.4.0002.xml (Greek)
- el-GR\_6821-12.0.4.0002.xml (Greek)

- en-GB\_78xx\_68xx-12.0.4.0002.xml (English-UK)
- en-GB\_6821-12.0.4.0002.xml (English-UK)
- en-US\_78xx\_68xx-12.0.4.0002.xml (English-US)
- en-US\_6821-12.0.4.0002.xml (English-US)
- es-CO\_78xx\_68xx-12.0.4.0002.xml (Spanish-Colombia)
- es-CO\_6821-12.0.4.0002.xml (Spanish-Colombia)
- es-ES\_78xx\_68xx-12.0.4.0002.xml (Spanish-Spain)
- es-ES\_6821-12.0.4.0002.xml (Spanish-Spain)
- fi-FI\_78xx\_68xx-12.0.4.0002.xml (Finnish)
- fi-FI\_6821-12.0.4.0002.xml (Finnish)
- fr-CA\_78xx\_68xx-12.0.4.0002.xml (French-Canada)
- fr-CA\_6821-12.0.4.0002.xml (French-Canada)
- fr-FR\_78xx\_68xx-12.0.4.0002.xml (French)
- fr-FR\_6821-12.0.4.0002.xml (French)
- he-IL\_78xx\_68xx-12.0.4.0002.ttf (Hebrew)
- he-IL\_78xx\_BMP-12.0.4.0002.ttf (Hebrew)
- he-IL\_78xx\_68xx-12.0.4.0002.xml (Hebrew)
- he-IL\_6821-12.0.4.0002.ttf (Hebrew)
- he-IL\_6821-12.0.4.0002.xml (Hebrew)
- he-IL\_6861-12.0.4.0002.ttf (Hebrew)
- hr\_HR\_78xx\_68xx-12.0.4.0002.xml (Croatia)
- hr\_HR\_6821-12.0.4.0002.xml (Croatia)
- hu-HU\_78xx\_68xx-12.0.4.0002.xml (Hungarian)
- hu-HU\_6821-12.0.4.0002.xml (Hungarian)
- it-IT\_78xx\_68xx-12.0.4.0002.xml (Italian)
- it-IT\_6821-12.0.4.0002.xml (Italian)
- ja-JP\_78xx\_68xx-12.0.4.0002.ttf (Japanese)
- ja-JP\_78xx\_68xx-12.0.4.0002.xml (Japanese)
- ja-JP\_78xx\_BMP-12.0.4.0002.ttf (Japanese)
- ja-JP\_6821-12.0.4.0002.ttf (Japanese)
- ja-JP\_6821-12.0.4.0002.xml (Japanese)
- ja-JP\_6861-12.0.4.0002.ttf (Japanese)
- ko-KR\_78xx\_BMP-12.0.4.0002.ttf (Korean)
- ko-KR\_78xx\_68xx-12.0.4.0002.ttf (Korean)
- ko-KR\_78xx\_68xx-12.0.4.0002.xml (Korean)
- ko-KR\_6821-12.0.4.0002.ttf (Korean)



- ko-KR\_6861-12.0.4.0002.ttf (Korean)
- ko-KR\_6821-12.0.4.0002.xml (Korean)
- nb-NO\_78xx\_68xx-12.0.4.0002.xml (Norwegian)
- nb-NO\_6821-12.0.4.0002.xml (Norwegian)
- nl-NL\_78xx\_68xx-12.0.4.0002.xml (Netherlands)
- nl-NL\_6821-12.0.4.0002.xml (Netherlands)
- pl-PL\_78xx\_68xx-12.0.4.0002.xml (Polish)
- pl-PL\_6821-12.0.4.0002.xml (Polish)
- pt-PT\_78xx\_68xx-12.0.4.0002.xml (Portuguese)
- pt-PT\_6821-12.0.4.0002.xml (Portuguese)
- ru-RU\_78xx\_68xx-12.0.4.0002.xml (Russian)
- ru-RU\_6821-12.0.4.0002.xml (Russian)
- sk-SK\_78xx\_68xx-12.0.4.0002.xml (Slovakian)
- sk-SK\_6821-12.0.4.0002.xml (Slovakian)
- sl-SI\_78xx\_68xx-12.0.4.0002.xml (Slovenian)
- sl-SI\_6821-12.0.4.0002.xml (Slovenian)
- sv-SE\_78xx\_68xx-12.0.4.0002.xml (Swedish)
- sv-SE\_6821-12.0.4.0002.xml (Swedish)
- tr-TR\_78xx\_68xx-12.0.4.0002.xml (Turkey)
- tr-TR\_6821-12.0.4.0002.xml (Turkey)
- uk-UA\_78xx\_68xx-12.0.4.0002.xml (Ukraine)
- uk-UA\_6821-12.0.4.0002.xml (Ukraine)
- zh-CN\_78xx\_68xx-12.0.4.0002.ttf (Mandarin)
- zh-CN\_78xx\_68xx-12.0.4.0002.xml (Mandarin)
- zh-CN\_78xx\_BMP-12.0.4.0002.ttf (Mandarin)
- zh-CN\_6821-12.0.4.0002.ttf (Mandarin)
- zh-CN\_6821-12.0.4.0002.xml (Mandarin)
- zh-CN\_6861-12.0.4.0002.ttf (Mandarin)
- zh-HK\_78xx\_68xx-12.0.4.0002.ttf ((Cantonese)
- zh-HK\_78xx\_68xx-12.0.4.0002.xml (Cantonese)
- zh-HK\_78xx\_BMP-12.0.4.0002.ttf (Cantonese)
- zh-HK\_6821-12.0.4.0002.xml (Cantonese)
- zh-HK\_6821-12.0.4.0002.ttf (Cantonese)
- zh-HK\_6861-12.0.4.0002.ttf (Cantonese)

The following are example language files for 88xx:

- ar-SA\_88xx-12.0.4.0002.ttf (Arabic)

- ar-SA\_88xx-12.0.4.0002.xml (Arabic)
- bg-BG\_88xx-12.0.4.0002.xml (Bulgarian)
- ca-ES\_88xx-12.0.4.0002.xml (Catalan-Spain)
- cs-CZ\_88xx-12.0.4.0002.xml (Czech)
- cs-DZ\_88xx-12.0.4.0002.xml (Czech)
- da-DK\_88xx-12.0.4.0002.xml (Dutch)
- de-DE\_88xx-12.0.4.0002.xml (German)
- el-GR\_88xx-12.0.4.0002.xml (Greek)
- en-GB\_88xx-12.0.4.0002.xml (English-UK)
- en-US\_88xx-12.0.4.0002.xml (English-US)
- es-CO\_88xx-12.0.4.0002.xml (Spanish)
- es-ES\_88xx-12.0.4.0002.xml (Spanish-Spain)
- fi-FI\_88xx-12.0.4.0002.xml (Finnish)
- fr-CA\_88xx-12.0.4.0002.xml (French-Canada)
- fr-FR\_88xx-12.0.4.0002.xml (French)
- he-IL\_88xx-12.0.4.0002.ttf (Hebrew)
- he-IL\_88xx-12.0.4.0002.xml (Hebrew)
- hr\_HR\_88xx-12.0.4.0002.xml (Croatia)
- hu-HU\_88xx-12.0.4.0002.xml (Hungarian)
- it-IT\_88xx-12.0.4.0002.xml (Italian)
- ja-JP\_88xx-12.0.4.0002.ttf (Japanese)
- ja-JP\_88xx-12.0.4.0002.xml (Japanese)
- ko-KR\_88xx-12.0.4.0002.ttf (Korean)
- ko-KR\_88xx-12.0.4.0002.xml (Korean)
- nb-NO\_88xx-12.0.4.0002.xml (Norwegian)
- nl-NL\_88xx-12.0.4.0002.xml (Netherlands)
- pl-PL\_88xx-12.0.4.0002.xml (Polish)
- pt-PT\_88xx-12.0.4.0002.xml (Portuguese)
- ru-RU\_88xx-12.0.4.0002.xml (Russian)
- sk-SK\_88xx-12.0.4.0002.xml (Slovakian)
- sl-SI\_88xx-12.0.4.0002.xml (Slovenian)
- sv-SE\_88xx-12.0.4.0002.xml (Swedish)
- tr-TR\_88xx-12.0.4.0002.xml (Turkey)
- uk-UA\_88xx-12.0.4.0002.xml (Ukraine)
- zh-CN\_88xx-12.0.4.0002.ttf (Mandarin)
- zh-CN\_88xx-12.0.4.0002.xml (Mandarin)

- zh-HK\_88xx-12.0.4.0002.ttf (Cantonese)
- zh-HK\_88xx-12.0.4.0002.xml (Cantonese)

The following are example language files for Cisco Video Phone 8875:

- ar-SA\_8875-2.3.1.0001.xml (Arabic)
- ca-ES\_8875-2.3.1.0001.xml (Catalan-Spain)
- cs-CZ\_8875-2.3.1.0001.xml (Czech)
- da-DK\_8875-2.3.1.0001.xml (Danish)
- de-DE\_8875-2.3.1.0001.xml (German)
- el-GR\_8875-2.3.1.0001.xml (Greek)
- en-GB\_8875-2.3.1.0001.xml (English-UK)
- en-US\_8875-2.3.1.0001.xml (English-US)
- es-CO\_8875-2.3.1.0001.xml (Spanish-Colombia)
- es-ES\_8875-2.3.1.0001.xml (Spanish-Spain)
- fi-FI\_8875-2.3.1.0001.xml (Finnish)
- fr-CA\_8875-2.3.1.0001.xml (French-Canada)
- fr-FR\_8875-2.3.1.0001.xml (French)
- he-IL\_8875-2.3.1.0001.xml (Hebrew)
- hu-HU\_8875-2.3.1.0001.xml (Hungarian)
- it-IT\_8875-2.3.1.0001.xml (Italian)
- ja-JP\_8875-2.3.1.0001.xml (Japanese)
- ko-KR\_8875-2.3.1.0001.xml (Korean)
- nb-NO\_8875-2.3.1.0001.xml (Norwegian)
- nl-NL\_8875-2.3.1.0001.xml (Dutch-Netherlands)
- pl-PL\_8875-2.3.1.0001.xml (Polish)
- pt-BR\_8875-2.3.1.0001.xml (Portuguese-Brazil)
- pt-PT\_8875-2.3.1.0001.xml (Portuguese-Portugal)
- ru-RU\_8875-2.3.1.0001.xml (Russian)
- sv-SE\_8875-2.3.1.0001.xml (Swedish)
- tr-TR\_8875-2.3.1.0001.xml (Turkish)
- uk-UA\_8875-2.3.1.0001.xml (Ukrainian)
- zh-CN\_8875-2.3.1.0001.xml (Mandarin)
- zh-HK\_8875-2.3.1.0001.xml (Cantonese)
- zh-TW\_8875-2.3.1.0001.xml (Chinese-Taiwan)

The following are example language files for Cisco Desk Phone 9800 Series:

- ca-ES\_9841\_9851-3.0.1.0001.xml (Catalan-Spain)
- cs-CZ\_9841\_9851-3.0.1.0001.xml (Czech)

- da-DK\_9841\_9851-3.0.1.0001.xml (Dutch)
- de-DE\_9841\_9851-3.0.1.0001.xml (German)
- el-GR\_9841\_9851-3.0.1.0001.xml (Greek)
- en-GB\_9841\_9851-3.0.1.0001.xml (English-UK)
- en-US\_9841\_9851-3.0.1.0001.xml (English-US)
- es-CO\_9841\_9851-3.0.1.0001.xml (Spanish-Colombia)
- es-ES\_9841\_9851-3.0.1.0001.xml (Spanish-Spain)
- fi-FI\_9841\_9851-3.0.1.0001.xml (Finnish)
- fr-CA\_9841\_9851-3.0.1.0001.xml (French-Canada)
- fr-FR\_9841\_9851-3.0.1.0001.xml (French)
- hu-HU\_9841\_9851-3.0.1.0001.xml (Hungarian)
- it-IT\_9841\_9851-3.0.1.0001.xml (Italian)
- ja-JP\_9841\_9851-3.0.1.0001.xml (Japanese)
- ja-JP\_9841\_9851-3.0.1.0001.ttf (Japanese)
- ko-KR\_9841\_9851-3.0.1.0001.xml (Korean)
- ko-KR\_9841\_9851-3.0.1.0001.ttf (Korean)
- nb-NO\_9841\_9851-3.0.1.0001.xml (Norwegian)
- nl-NL\_9841\_9851-3.0.1.0001.xml (Dutch-Netherlands)
- pl-PL\_9841\_9851-3.0.1.0001.xml (Polish)
- pt-BR\_9841\_9851-3.0.1.0001.xml (Portuguese-Brazil)
- pt-PT\_9841\_9851-3.0.1.0001.xml (Portuguese-Portugal)
- ru-RU\_9841\_9851-3.0.1.0001.xml (Russian)
- sv-SE\_9841\_9851-3.0.1.0001.xml (Swedish)
- tr-TR\_9841\_9851-3.0.1.0001.xml (Turkish)
- uk-UA\_9841\_9851-3.0.1.0001.xml (Ukrainian)
- zh-CN\_9841\_9851-3.0.1.0001.xml (Mandarin)
- zh-CN\_9841\_9851-3.0.1.0001.ttf (Mandarin)
- zh-HK\_9841\_9851-3.0.1.0001.xml (Cantonese)
- zh-HK\_9841\_9851-3.0.1.0001.ttf (Cantonese)
- zh-TW\_9841\_9851-3.0.1.0001.xml (Chinese-Taiwan)
- zh-TW\_9841\_9851-3.0.1.0001.ttf (Chinese-Taiwan)

Add the language files to the device profile type with the settings shown in the following figure.

After creating the language file, upload *static language files* obtained from Cisco. Use the **Browse** button on the file definition screen. Be sure to click **Apply** after uploading the file.

### Identity/Device Profile Type File Modify

Modify or delete a file type defined in an Identity/Device Profile Type.

Device Access File Format: ca-ES\_6821-11.2.3.0009.xml  
 Repository File Format: ca-ES\_6821-11.2.3.0009.xml  
 Access File: [http://xsp.iop1.broadworks.net:80/dms/CP-78-88-68-3PCC/ca-ES\\_6821-11.2.3.0009.xml](http://xsp.iop1.broadworks.net:80/dms/CP-78-88-68-3PCC/ca-ES_6821-11.2.3.0009.xml)  
 Repository File: [Download](#)  
 Template File: [Download](#)  
 File Category: ☒ Static ☐ Dynamic Per-Type ☐ Dynamic Per-Device  
 File Customization:   
☒ Enable caching

Assign File

☐ Manual  
☒ Custom

Upload File:  No file chosen

Currently using configuration file: /var/broadworks/lpDeviceConfig/type/Cisco-CP-78xx-88xx-68xx-3PCC/ca-ES\_6821-11.2.3.0009.xml.template

```

<?xml version="1.0" encoding="UTF-8"?>
<!-- Max number of parsable phrases is capped at 4096 in csstringrepo.c -->
<phrases>
<trkLocaleName>AnglÃ's_Estats_Units</trkLocaleName>
<trkBaseClearcaseVersion></trkBaseClearcaseVersion>
<trkTranslationVersion></trkTranslationVersion>

<!-- ##### Conference Microphones ##### -->

<phrase id="L_WirelessPairing_info" t="Mantenu premuda la tecla de silenci al
  
```

File Authentication

Authentication Mode: ☐ MAC-Based ☐ User Name and Password  
 MAC Address In: ☒ HTTP Request URI  
☐ HTTP Header  
☐ Client Certificate  
 MAC Address Format:   
 Device Access HTTP Authentication: ☒ Basic ☐ Digest  
 Allowed Access Protocols: ☒ http ☒ https ☒ tftp

Figure 88 Language File

The Dictionary Server Script entry: "serv=" is required with the host name and PATH ended by a ",". The label "d1=" is the name label for the language. The label "x1=" is the file name with the language information. The label "f1=1" is for the asian languages and the RTL languages. There can only be one f1 label. The x1 and d1 labels can have multiple entries.

Info **Voice** Call History Personal Directory

System SP Provisioning **Register** Phone Ext 1 Ext 2 Ext 3 Ext 4 User All Console TR-069

Feature Dial Services Codes:

Vertical Service Announcement Codes

Service Area Base Number:

Service Area Extension Codes:

Outbound Call Codes Selection Codes

Pref 0711a Code	"07110"	Force 0711a Code	"07110"
Pref 0711a Code	"07111"	Force 0711a Code	"07111"
Pref 0722 Code	"07122"	Force 0722 Code	"07122"
Pref 0722.2 Code	"07124"	Force 0722.2 Code	"07124"
Pref 0729 Code	"07129"	Force 0729 Code	"07129"
Pref 6.BC Code	"07016"	Force 6.BC Code	"07016"
Pref 0FUS Code	"07056"	Force 0FUS Code	"07056"

Time

Set Local Date (mm/dd/yyyy):

Set Local Time (hh:mm):

Time Zone: GMT-05:00

Time Offset (hh:mm):

Ignore DHCP Time Offset: Yes ☐

Daylight Saving Time Rule: start=3-1/2, and=5-1/2, save=1

Daylight Saving Time Enable: Yes ☐

Language

Dictionary Server Script: serv=http://10.0.0.1:8080/CP-78-88-68-3PCC/d1=Spanish,x1=ca-ES\_78xx\_88xx\_11.1.1.1002.xml,

Language Selection: Spanish

Locale: en-ES

Figure 89 Language File – Language Selection


#### 5.2.2.2.6.1 Language Mapping

To enable Device Management control of the phone language for languages other than English, the languages defined on the Cisco BroadWorks Application Server must be

mapped to the Cisco definitions. To perform the mapping, select the Cisco MPP Series device profile type and from there select the *Languages* link. The defined Cisco BroadWorks languages are listed in a table. If languages other than English do not appear, they have not been defined. The supported languages and required mapping are:

Cisco BroadWorks Language	Cisco Language Setting
English	English-US
Russian	Russian
Hungarian	Hungarian
French	French
German	German
Italian	Italian
Spain_Spanish	Spanish

The language applied to an individual phone is determined by the language defined for the user on the *Cisco BroadWorks User's Profile* page.

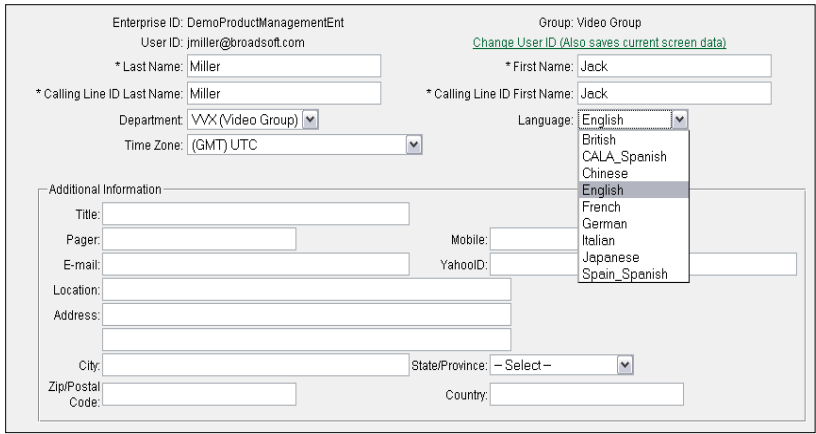

The screenshot shows the 'Cisco BroadWorks User's Profile' page. At the top, it displays 'Enterprise ID: DemoProductManagementEnt' and 'User ID: jrmiller@broadsoft.com'. Below this, there are fields for 'Last Name' (Miller), 'First Name' (Jack), 'Calling Line ID Last Name' (Miller), and 'Calling Line ID First Name' (Jack). A 'Department' dropdown is set to 'VXX (Video Group)' and a 'Time Zone' dropdown is set to '(GMT) UTC'. A 'Language' dropdown menu is open, showing options: English (selected), British, CALA\_Spanish, Chinese, French, German, Italian, Japanese, and Spain\_Spanish. Below these fields is an 'Additional Information' section with fields for Title, Pager, E-mail, Location, Address, City, State/Province (a dropdown set to '- Select -'), Zip/Postal Code, Mobile, YahooID, and Country.

Figure 90 Cisco BroadWorks User Language Definition

There are other languages that the Cisco MPP phone supports that Cisco BroadWorks may not support. The phone can manually download these languages from Device Management via the Language Preferences menu on the phone. To access this menu, press the **Setup** button on the phone and select *Device Administration* → *Language*. Then from this page, select the desired language for the phone to use on the display.

### 5.2.3 Create Device Profile Instance

The previous sections defined the device profile type such that the system is ready to mass deploy device profiles. A device profile is an instance of the device profile type and defines the Cisco BroadWorks interface to a Cisco MPP Series device.

Browse to the Cisco BroadWorks <group> → *Resources* → *Identity/Device Profiles* page and then select **Add** to add a new Cisco MPP Series device profile. Configure the device profile as shown in the [Figure 91](#) example.

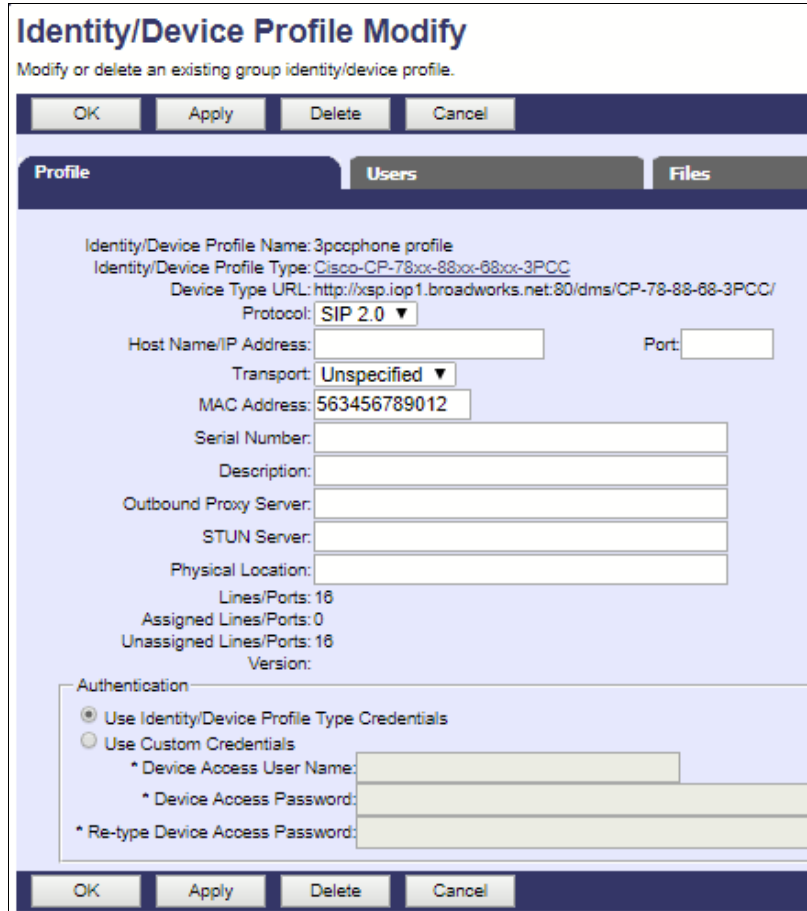


Figure 91 Device Profile Instance

### 5.2.4 Configure Cisco BroadWorks User

Configure the user with the desired Cisco BroadWorks configuration and services. Any services that require a specific configuration on the device are managed via Device Management and are defined in the device configuration files if the template files are created with the correct Device Management tags.

The device profile created in the previous section must be assigned to the Cisco BroadWorks user. Assigning the device profile to the user automatically causes the Device Management feature to generate the device configuration files for this user's device.

To assign the device profile to the user, browse to the *BroadWorks* <user> → *Addresses*.

## 5.2.5 Customize Tags

This section identifies custom tags used by the Cisco MPP Series that may need to be customized at the group or device profile. Customizing a tag at the group level overrides the setting on the device profile type for the device profiles created within the group. Customizing a tag at the device profile level overrides the setting at the device profile type and/or group level for the individual device profile.

### 5.2.5.1 Configure Edge Device

In many deployments, an edge device is deployed on the enterprise edge. Configure the edge device SIP server setting with the service provider's SBC IP address or FQDN.

To integrate the edge device with Device Management, the SBC address tag (%SBC\_ADDRESS\_1%) defined in section [5.2.1.1 Create System Default Tags](#) must be overridden at the group level with the LAN address of the edge device. At the *Group* → *Utilities* → *Configure Device* page, select the Cisco MPP Series device profile. Perform the following steps.

- 1) Click on the *Custom Tags* tab.
- 2) Click **Add**.
- 3) Add the SBC tag.
- 4) For the tag, enter "SBC\_ADDRESS\_1".
- 5) For the value, enter the IP address (that is, the edge device LAN IP address).
- 6) To save the tag data, click **OK**.

### 5.2.5.2 Xtended Services Interface Password

For the Xtended Services Interface (Xsi) feature to be authenticated, it is necessary to override the (Xsi) password for each of the lines at the device profile instance level. To override custom tags at the device profile instance level, click on the *Custom Tags* tab.

Then click **Add** to add a custom tag with the following parameters.

Parameter	Value	Description/Notes
Tag Name	XSIPASSWORD-<line number>	This tag provides the Xsi password of the user for the line that is assigned to the phone. Line number is an integer corresponding to the phone line in assignment.
Tag Value	The user's Xsi password. Example: 123456	

Repeat the tag adding process for each of the lines provisioned on the device.

**NOTE:** The Device Management configuration for Xsi has capability to support both Login and SIP Credentials for authentication. If you do not want Login Credentials, then you can change the XSI authentication to "SIP Credentials" instead of "Login Credentials". The previous example shows settings for Login Credentials.



## 5.2.6 File Authentication Using MAC Address from Client Certificate

This section describes the steps necessary to configure Cisco BroadWorks to perform Device Management file authentication using the MAC address obtained from the phone's HTTPS client certificate. This secure authentication method based on MAC address is a new feature available from Cisco BroadWorks Release 22.0.

Prior to configuring for the MAC address authentication, mutual HTTPS authentication must be established among the MPP Series phones and Cisco BroadWorks. That is by the implication of client certificate authentication, HTTPS must be enabled on the phones to trust Cisco BroadWorks server certificate. Furthermore, HTTPS client certificates offered by the MPP Series devices containing the phone's MAC address must also be trusted by Cisco BroadWorks.

The public certificates of MPP Series device certificate authority can be obtained from Cisco. The Cisco MPP Series certificate should be installed on the Device Management deploying Xtended Services Platform.

Use the instructions detailed in the following subsections to manually alter files in the existing device profile types and device profile instances to switch the file authentication mode.

### 5.2.6.1 Update Device Management Authentication Mode on the Device Profile Type

Instructions in this section are only applicable to updating Cisco BroadWorks systems with existing Cisco MPP-3PCC device profile types. Perform the changes as shown on the device profile type to be updated with MAC address authentication using MAC in Client Certificate.

Parameter	Value	Description
Device Access Protocol	https	HTTPS protocol is necessary when using client mutual authentication with signed certificates.
Device Access Port	Xsp's listening port of HTTPS mutual authentication. For example, 4433.	Enter the corresponding TCP port.
Authentication Mode	MAC-Based checked	MAC-Based authentication method is used.
MAC Address in	Client Certificate radio button selected	MAC address used for authentication is to be obtained from the client certificate to compare to the provisioned values on the device profiles.
MAC Address Format	.*SEP([0-9a-fA-F]{12}).*\$	Regular expression used to parse the MAC address from the CN field of the client certificate.

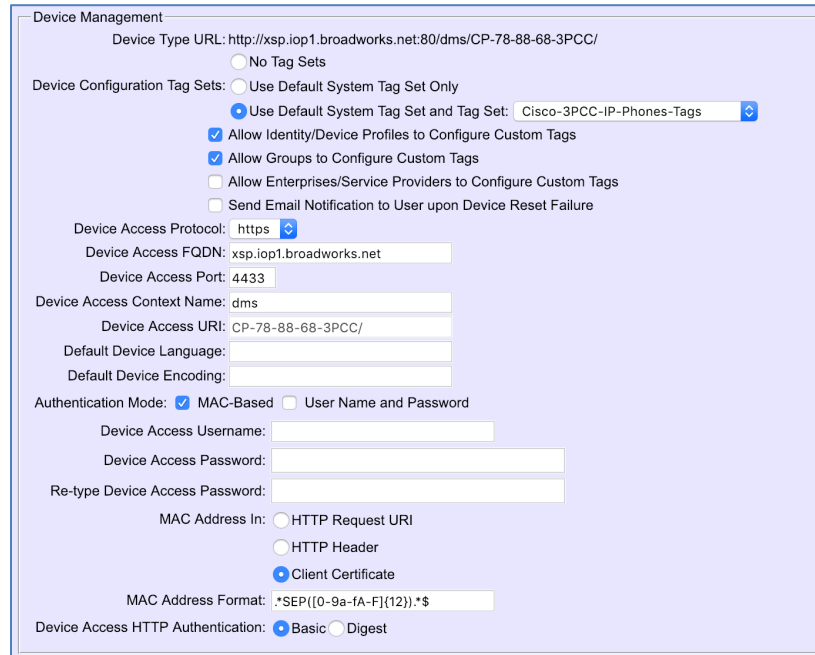


Figure 92 Device Profile Type Update for MAC-Based Auth Using Client Certificate

#### 5.2.6.2 Change File Authentication Mode to MAC Address in Client Certificate

Instructions in this section are only applicable to updating Cisco BroadWorks systems with existing Cisco MPP-3PCC device profile types. Perform corresponding changes on the authentication mode of all device-specific files as shown in the following figure.

The regular expression used in MAC Address Format is as follows:

.\*SEP([0-9a-fA-F]{12}).\*\$

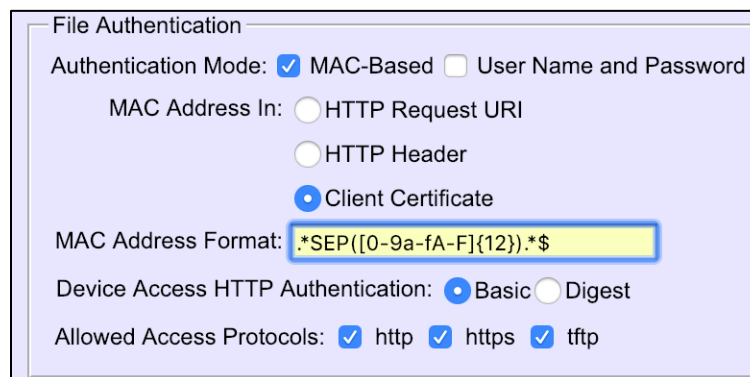


Figure 93 Authentication Mode set to MAC-Based and Sourced from Client Certificate

## 5.2.7 Configure Cisco MPP Series

This section describes the steps necessary to configure the Cisco MPP Series to integrate with Cisco BroadWorks Device Management.

The phone must be configured with the Device Management URL and authentication user name and password. This configuration can be done as described in the following sections:

- [5.2.7.1 Manual Provisioning](#)
- [5.2.7.2 No Touch Provisioning via BroadWorks Device Management](#)
- [5.2.7.2 No Touch Provisioning via BroadWorks Device Management](#)

### 5.2.7.1 Manual Provisioning

Fields	Setting	Description/Notes
Profile Rule	Example: <a href="https://bwri1-alpha.broadcloudpbx.net:443/dms/Cisco-PhoneOS301-MPP1204-98-88-78-68xx/CiscoDev-3PCC_Bootstrap.xml">https://bwri1-alpha.broadcloudpbx.net:443/dms/Cisco-PhoneOS301-MPP1204-98-88-78-68xx/CiscoDev-3PCC_Bootstrap.xml</a>	Configure Profile Rule field with DM URL address for downloading <i>CiscoDev-3PCC_Bootstrap.xml</i> .

- 1) Log in to the web user interface (UI) for the device.
- 2) Check the admin guide on *Web Access Policy* enforcement.
- 3) Browse to the *Provisioning* page.
- 4) Fill in the Device Management server address URL within the *Profile Rule* field.

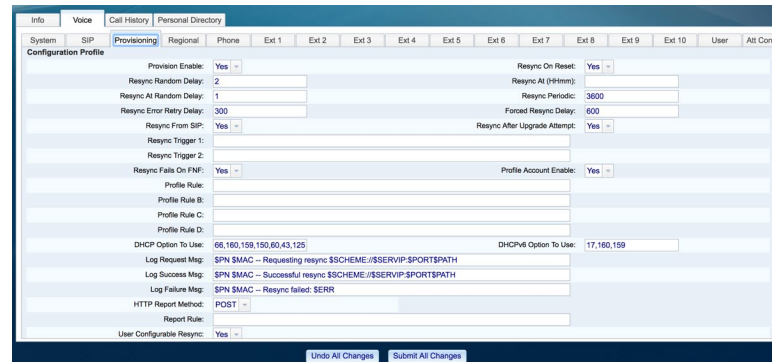


Figure 94 Example Update Screen

### 5.2.7.2 No Touch Provisioning via BroadWorks Device Management

#### 5.2.7.2.1 Default Device Management Configuration

Device Management must be configured to facilitate the No Touch Provisioning method. Configuration can be performed using the Device Management import function or done manually. Each method is described in the following subsections.

##### 5.2.7.2.1.1 Configuration Method 1: Import

This section identifies the steps necessary to make use of the Device Management import feature to configure Cisco BroadWorks to add the Device Management Defaults device type for No Touch Provisioning.

The import method is available in BroadWorks Release 17.0 and later. For previous releases, use the manual configuration method described in the next section.


Download the Cisco MPP Series CPE kit from Cisco at [cisco.com](http://cisco.com). Extract the *DeviceManagementDefaults.DTAF.zip* file from the CPE kit. This is the import file.

Log in to Cisco BroadWorks as an administrator. Browse to *System* → *Resources* → *Identity/Device Profile Types* and select *Import*. Select *Browse* to find the extracted DTAF file and click **OK** to start the import.

After the import finishes, the following post-import configuration steps must be completed.

Browse to *System* → *Resources* → *Identity/Device Profile Types* and perform a search to find the imported *DeviceManagementDefaults* device profile type. Browse to the *Profile* page and change the Device Management Device Access FQDN to your Xtended Services Platform or Xtended Services Platform cluster address.

Example:

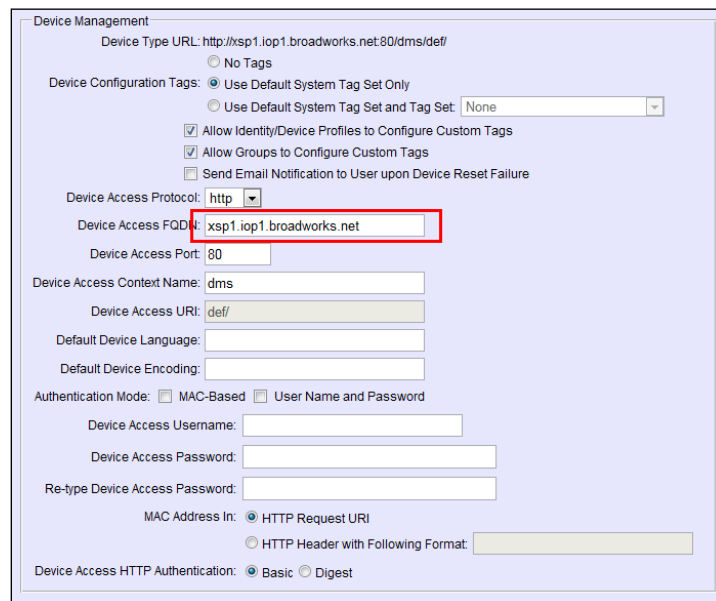

The screenshot shows the 'Device Management' configuration page. The 'Device Type URL' is set to 'http://xsp1.iop1.broadworks.net:80/dms/def/'. Under 'Device Configuration Tags', 'Use Default System Tag Set Only' is selected. 'Allow Identity/Device Profiles to Configure Custom Tags' and 'Allow Groups to Configure Custom Tags' are checked. 'Device Access Protocol' is set to 'http'. The 'Device Access FQDN' field is highlighted with a red box and contains 'xsp1.iop1.broadworks.net'. Other fields include 'Device Access Port' (80), 'Device Access Context Name' (dms), 'Device Access URI' (def/), 'Default Device Language', 'Default Device Encoding', 'Authentication Mode' (MAC-Based), 'Device Access Username', 'Device Access Password', 'Re-type Device Access Password', 'MAC Address In' (HTTP Request URI), and 'Device Access HTTP Authentication' (Basic).

Figure 95 Device Access FQDN

Next, using the *Files and Authentication* link, select the option to rebuild all the system files.

#### 5.2.7.2.1.2 Configuration Method 2: Manual

This section identifies the manual steps necessary to configure Cisco BroadWorks to add the Device Management Defaults device type for No Touch Provisioning.

The manual method must be used for Cisco BroadWorks releases prior to Release 17.0. It is an optional method in Release 17.0 and later. The steps in this section can also be followed to update previously imported or configured device profile type(s) with new configuration files and firmware.

##### 5.2.7.2.1.2.1 Create Default Device Profile Type

A Device Management default device profile type must be created. This device profile type can be configured to serve default provisioning files to Cisco MPP Series endpoints, as well as other vendor devices.

Create a default device profile type as shown in the following figure. Only the Device Management settings are important in this context since the profile type is used only to serve default provisioning files. The standard and advanced settings do not matter.

#### 5.2.7.2.1.2.1.1 Configure Standard Options

The device profile type name and standard options do not matter, but an example is provided for reference. All settings can be left with their default values.

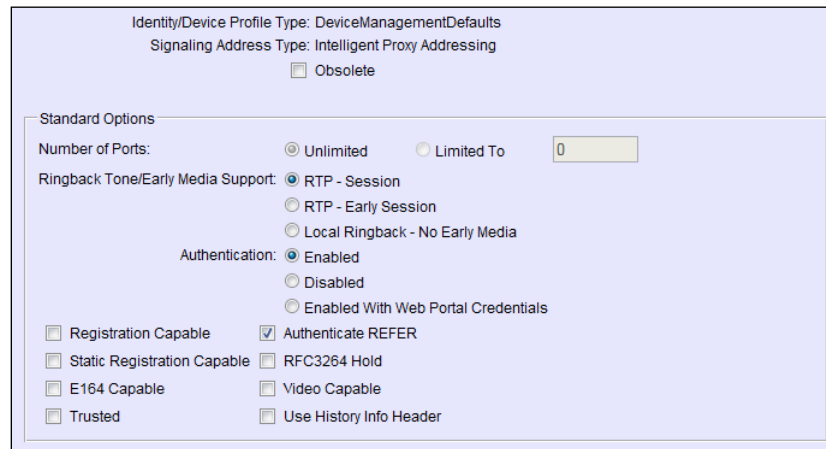


Figure 96 Default Device Profile Type

#### 5.2.7.2.1.2.1.2 Configure Advanced Options

All settings can be left with their default values.

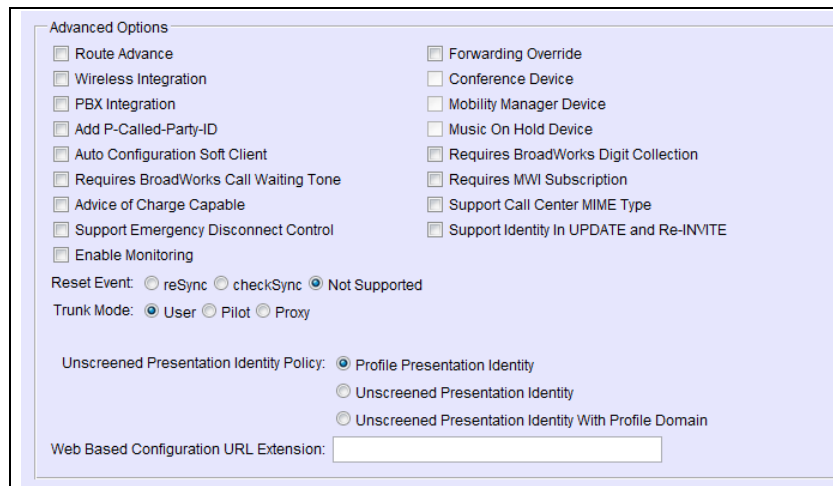


Figure 97 Configure Advanced Options

#### 5.2.7.2.1.2.1.3 Configure Device Management Options

Configure the device profile type *Device Management Options* as directed in the following table. These are common settings, which apply to all devices enabled for Device Management.

Parameters not identified in the following table can usually be left with their default values.

Device Management

Device Type URL:

☐ No Tags

Device Configuration Tags: ☒ Use Default System Tag Set Only

☐ Use Default System Tag Set and Tag Set:

☒ Allow Identity/Device Profiles to Configure Custom Tags

☒ Allow Groups to Configure Custom Tags

☐ Send Email Notification to User upon Device Reset Failure

Device Access Protocol:

Device Access FQDN:

Device Access Port:

Device Access Context Name:

Device Access URI:

Default Device Language:

Default Device Encoding:

Authentication Mode: ☐ MAC-Based ☐ User Name and Password

Device Access Username:

Device Access Password:

Re-type Device Access Password:

MAC Address In: ☒ HTTP Request URI

☐ HTTP Header with Following Format:

Device Access HTTP Authentication: ☒ Basic ☐ Digest

Cisco Confidential

#### 5.2.7.2.1.2.2 Define Device Profile Type Files

This section describes the Cisco BroadWorks Device Management configuration necessary to identify the configuration files used to enable the *DeviceManagementDefaults* device type for Cisco MPP Series. The files must be defined as described in the following sections:

- *6821-3PCC.xml*
- *6841-3PCC.xml*
- *6851-3PCC.xml*
- *6861-3PCC.xml*
- *6871-3PCC.xml*
- *7811-3PCC.xml*
- *7821-3PCC.xml*
- *7832-3PCC.xml*
- *7841-3PCC.xml*
- *7861-3PCC.xml*
- *8811-3PCC.xml*
- *8841-3PCC.xml*
- *8845-3PCC.xml*
- *8851-3PCC.xml*
- *8861-3PCC.xml*
- *8865-3PCC.xml*
- *8875-3PCC.xml*
- *8832-3PCC.xml*
- *CiscoDev-3PCC\_Bootstrap.xml*
- *CiscoDev\_Type9841.xml*
- *CiscoDev\_Type9851.xml*

Add the files to the device profile type with the settings shown in the following figure.

Identity/Device Profile Type File Modify

Modify or delete a file type defined in an Identity/Device Profile Type.

OK

Apply

Delete

Cancel

Device Access File Format: 7841-3PCC.xml

Repository File Format: 7841-3PCC-%BWTIMESTAMP%.xml

Access File: <http://xsp1.iop1.broadworks.net:80/dms/def/7841-3PCC.xml>

Repository File: [Download](#)

Template File: [Download](#)

File Category: ☐ Static ☒ Dynamic Per-Type ☐ Dynamic Per-Device

File Customization: 

Disallow

☒ Enable caching

Assign File

☐ Manual
 ☒ Custom

Upload File:

Browse...

Currently using configuration file: /var/broadworks/lpDeviceConfig/type/DeviceManagementDefaults/7841-3PCC.xml.template

```

<?xml version="1.0" encoding="UTF-8"?>
<device xsi:type="axl:XIPPhone"
xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance">
  <flat-profile>

    <!--
      GUI SCREEN: Voice Tab - System Tab
    -->

    <!-- DNS Settings-->
          
```

File Authentication

Authentication Mode: ☐ MAC-Based ☐ User Name and Password

MAC Address In: ☒ HTTP Request URI

☐ HTTP Header

☐ Client Certificate

MAC Address Format:

Device Access HTTP Authentication: ☒ Basic ☐ Digest

Allowed Access Protocols: ☒ http ☒ https ☒ tftp

OK

Apply

Delete

Cancel

Figure 99 Default 7841-3PCC.xml

#### 5.2.7.2.2 DHCP Configuration for Cisco BroadWorks Based No-Touch

No Touch Provisioning allows MPP Series to be deployed with minimal user input. To put the endpoint in service, the MPP Series can be simply taken out of the box and plugged into the LAN.

MPP Series supports BroadWorks Device Management Redirect where the default Cisco BroadWorks configuration URL can be obtained through *DHCP Options 66/159/160*.

With DHCP Option 66, the default configuration file(s) supplies the default URL to MPP Series endpoint. Then the MPP Series follows the normal process for requesting configuration files.

Example: [xsp1.iop1.broadworks.net/dms/def/](http://xsp1.iop1.broadworks.net/dms/def/)

With DHCP Options 159/160, the device uses the provided URL to request its configuration files directly from Cisco BroadWorks. The MPP Series then follows the normal process for requesting configuration files. Use the provisioning macros to define this URL.

Example: [https://bwri1-alpha.broadcloudpbx.net:443/dms/Cisco-PhoneOS301-MPP1204-98-88-78-68xx/CiscoDev-3PCC\\_Bootstrap.xml](https://bwri1-alpha.broadcloudpbx.net:443/dms/Cisco-PhoneOS301-MPP1204-98-88-78-68xx/CiscoDev-3PCC_Bootstrap.xml).



#### 5.2.7.3 No Touch Provisioning via Cisco Redirect Service

Cisco Redirect is a web redirect service hosted by Cisco. It works in conjunction with the BroadWorks Device Management Redirect. Hence, prior to device deployment, the administrator is required to log in to Cisco's web portal to associate each device based on the MAC address to the redirect profile containing default BroadWorks Device Management URL. At boot time, the MPP Series phones automatically queries the Cisco Device Management Redirect service for the associated profile containing Cisco BroadWorks URL. The MPP Series phones finally completes the provisioning process as detailed in the previous section. For more information about the Cisco Device Management Redirect service, go to <https://webapps.cisco.com/software/edos/home>.

### 5.3 Upgrade from Previous CPE Kits

The previous configuration sections are primarily structured around importing or manually configuring the MPP Series device profile types for the first time. Many of those steps are unnecessary when upgrading to a new firmware release or CPE kit version.

For general instructions on upgrading, see the *Cisco BroadWorks CPE Kit Usage Guide* [2].

## Appendix A: Reference MPP Series Configuration Files

**NOTE:** The following samples are examples and should be used as a reference only. DO NOT CUT AND PASTE THESE EXAMPLES TO GENERATE YOUR CONFIGURATION FILES. Use the configuration files obtained from Cisco with the specific release to generate your configuration files.

### System File: CiscoDev-3PCC\_Bootstrap.xml

**NOTE:** This is an example file and should be used for reference only.

```
<device xmlns:xsi="http://www.w3.org/2001/XMLSchema-
instance" xsi:type="axl:XIPPhone">
<flat-profile>
<!--
      GUI SCREEN: Voice Tab - Provisioning Tab
-->
<!-- Profile Rule Resync Timers -->
<Resync_On_Reset ua="na">Yes</Resync_On_Reset>
<Resync_At_HHmm ua="na">3600</Resync_At_HHmm>
<Resync_At_Random_Delay ua="na">2</Resync_At_Random_Delay>
<Resync_Periodic ua="na">3600</Resync_Periodic>
<Resync_Error_Retry_Delay ua="na">3600</Resync_Error_Retry_Del
ay>
<Forced_Resync_Delay ua="na">14400</Forced_Resync_Delay>
<!-- Resync_At_Random_Delay ua="na">1</Resync_At_Random_Delay>
      <Resync_Periodic ua="na">60</Resync_Periodic>
      <Resync_Error_Retry_Delay
ua="na">300</Resync_Error_Retry_Delay>
      <Forced_Resync_Delay ua="na">600</Forced_Resync_Delay
-->
<!-- Configuration Profile current -->
<!-- Profile_Rule_B ua="na">($PSN eq "7841-3PCC") ? $K | ($PSN
eq "8832-3PCC") ? $J | ($PSN eq "7821-3PCC") ? $K | ($PSN eq
"7811-3PCC") ? $K | ($PSN eq "7832-3PCC") ? $L | $M
</Profile_Rule_B -->
<GPP_G ua="na">http://10.74.10.26:80/dms/CP-78-68-88-
3PCC/CiscoDev_Type8875.xml</GPP_G>
<GPP_H ua="na">http://10.74.10.26:80/dms/CP-78-68-88-
3PCC/CiscoDev_Type6871.xml</GPP_H>
<GPP_I ua="na">http://10.74.10.26:80/dms/CP-78-68-88-
3PCC/CiscoDev_Type6861.xml</GPP_I>
<GPP_J ua="na">http://10.74.10.26:80/dms/CP-78-68-88-
3PCC/CiscoDev_Type8832.xml</GPP_J>
<GPP_K ua="na">http://10.74.10.26:80/dms/CP-78-68-88-
3PCC/CiscoDev_Type78xx.xml</GPP_K>
<GPP_L ua="na">http://10.74.10.26:80/dms/CP-78-68-88-
3PCC/CiscoDev_Type7832.xml</GPP_L>
<GPP_M ua="na">http://10.74.10.26:80/dms/CP-78-68-88-
3PCC/CiscoDev_Type88xx.xml</GPP_M>
<GPP_N ua="na">http://10.74.10.26:80/dms/CP-78-68-88-
3PCC/CiscoDev_Type68xx.xml</GPP_N>
<GPP_O ua="na">http://10.74.10.26:80/dms/CP-78-68-88-
3PCC/CiscoDev_Type88x5.xml</GPP_O>
<GPP_P ua="na">http://10.74.10.26:80/dms/CP-78-68-88-
3PCC/CiscoDev_Type6821.xml</GPP_P>
```

```
<Profile_Rule_B ua="na">($PSN eq "7861-3PCC")? $K | ($PSN eq
"7841-3PCC")? $K | ($PSN eq "7821-3PCC") ? $K | ($PSN eq
"7811-3PCC") ? $K | ($PSN eq "7832-3PCC") ? $L | ($PSN eq
"6841-3PCC")? $N | ($PSN eq "6851-3PCC") ? $N | ($PSN eq "6821-
3PCC")? $P | ($PSN eq "6861-3PCC")? $I | ($PSN eq "6871-
3PCC")? $H | ($PSN eq "8832-3PCC")? $J | ($PSN eq "8845-3PCC")
? $O | ($PSN eq "8865-3PCC") ? $O | ($PSN eq "8875") ? $G |
($PSN eq "8875NR") ? $G | $M</Profile_Rule_B>
<Profile_Rule ua="na">http://10.74.10.26:80/dms/CP-78-68-88-
3PCC/CiscoDev_System.xml</Profile_Rule>
<!-- 3rd Party ROOT CA Settings: (HTTPS/TLS/SRTP) - OPTIONAL
-->
<!--
    <Custom_CA_Rule
ua="na">http://xsp.iopl.broadworks.net:80/dms/CP-78-88-68-
3PCC/</Custom_CA_Rule>
    -->
<!--
    GUI SCREEN: Voice Tab - Phone Tab
    -->
</flat-profile>
</device>
```

#### System File: CiscoDev-3PCC\_Bootstrap.xml

**NOTE:** This is an example file and should be used for reference only.

```
<?xml version="1.0" encoding="UTF-8"?>
<device xsi:type="axl:XIPPhone"
xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance">
    <flat-profile>
        <!-- GUI SCREEN: Voice Tab - Provisioning Tab -->
        <!-- Profile Rule Resync Timers -->
        <Resync_On_Reset ua="na">Yes</Resync_On_Reset>
        <Resync_At_HH:mm_ ua="na">3600</Resync_At_HH:mm_>
        <Resync_At_Random_Delay
ua="na">2</Resync_At_Random_Delay>
        <Resync_Periodic ua="na">3600</Resync_Periodic>
        <Resync_Error_Retry_Delay
ua="na">3600</Resync_Error_Retry_Delay>
        <Forced_Resync_Delay
ua="na">14400</Forced_Resync_Delay>
        <!-- Configuration Profile current -->

        <GPP_E
ua="na">%ACCESS_PROTOCOL%%BWDEVICEACCESSFQDN%%BWDEVICEACCE
SSPORT%%BWDMSCONTEXT%%BWDEVICEACCESSURI%CiscoDev_Type9851
.xml</GPP_E>
        <GPP_F
ua="na">%ACCESS_PROTOCOL%%BWDEVICEACCESSFQDN%%BWDEVICEACCE
SSPORT%%BWDMSCONTEXT%%BWDEVICEACCESSURI%CiscoDev_Type9841
.xml</GPP_F>
        <GPP_G
ua="na">%ACCESS_PROTOCOL%%BWDEVICEACCESSFQDN%%BWDEVICEACCE
SSPORT%%BWDMSCONTEXT%%BWDEVICEACCESSURI%CiscoDev_Type8875
.xml</GPP_G>
        <GPP_H
ua="na">%ACCESS_PROTOCOL%%BWDEVICEACCESSFQDN%%BWDEVICEACCE
```

```

SSPORT%/BWDMSCONTEXT%/BWDEVICEACCESSURI%CiscoDev_Type6871
.xml</GPP_H>
    <GPP_I
ua="na">%ACCESS_PROTOCOL%BWDEVICEACCESSFQDN%:BWDEVICEACCE
SSPORT%/BWDMSCONTEXT%/BWDEVICEACCESSURI%CiscoDev_Type6861
.xml</GPP_I>
    <GPP_J
ua="na">%ACCESS_PROTOCOL%BWDEVICEACCESSFQDN%:BWDEVICEACCE
SSPORT%/BWDMSCONTEXT%/BWDEVICEACCESSURI%CiscoDev_Type8832
.xml</GPP_J>
    <GPP_K
ua="na">%ACCESS_PROTOCOL%BWDEVICEACCESSFQDN%:BWDEVICEACCE
SSPORT%/BWDMSCONTEXT%/BWDEVICEACCESSURI%CiscoDev_Type78xx
.xml</GPP_K>
    <GPP_L
ua="na">%ACCESS_PROTOCOL%BWDEVICEACCESSFQDN%:BWDEVICEACCE
SSPORT%/BWDMSCONTEXT%/BWDEVICEACCESSURI%CiscoDev_Type7832
.xml</GPP_L>
    <GPP_M
ua="na">%ACCESS_PROTOCOL%BWDEVICEACCESSFQDN%:BWDEVICEACCE
SSPORT%/BWDMSCONTEXT%/BWDEVICEACCESSURI%CiscoDev_Type88xx
.xml</GPP_M>
    <GPP_N
ua="na">%ACCESS_PROTOCOL%BWDEVICEACCESSFQDN%:BWDEVICEACCE
SSPORT%/BWDMSCONTEXT%/BWDEVICEACCESSURI%CiscoDev_Type68xx
.xml</GPP_N>
    <GPP_O
ua="na">%ACCESS_PROTOCOL%BWDEVICEACCESSFQDN%:BWDEVICEACCE
SSPORT%/BWDMSCONTEXT%/BWDEVICEACCESSURI%CiscoDev_Type88x5
.xml</GPP_O>
    <GPP_P
ua="na">%ACCESS_PROTOCOL%BWDEVICEACCESSFQDN%:BWDEVICEACCE
SSPORT%/BWDMSCONTEXT%/BWDEVICEACCESSURI%CiscoDev_Type6821
.xml</GPP_P>
    <Profile_Rule
ua="na">%ACCESS_PROTOCOL%BWDEVICEACCESSFQDN%:BWDEVICEACCE
SSPORT%/BWDMSCONTEXT%/BWDEVICEACCESSURI%CiscoDev_System.x
ml</Profile_Rule>
        <Profile_Rule_B ua="na">($PSN eq "7861-3PCC") ? $K
| ($PSN eq "7841-3PCC") ? $K | ($PSN eq "7821-3PCC") ? $K |
($PSN eq "7811-3PCC") ? $K | ($PSN eq "7832-3PCC") ? $L |
($PSN eq "6841-3PCC") ? $N | ($PSN eq "6851-3PCC") ? $N
| ($PSN eq "6821-3PCC") ? $P | ($PSN eq "6861-3PCC") ? $I |
($PSN eq "6871-3PCC") ? $H | ($PSN eq "8832-3PCC") ? $J |
($PSN eq "8845-3PCC") ? $O | ($PSN eq "8865-3PCC") ? $O |
($PSN eq "8875") ? $G | ($PSN eq "8875NR") ? $G | ($PSN eq
"9851") ? $E | ($PSN eq "9841") ? $F | $M</Profile_Rule_B>
    <Profile_Rule_C
ua="na">%ACCESS_PROTOCOL%BWDEVICEACCESSFQDN%:BWDEVICEACCE
SSPORT%/BWDMSCONTEXT%/BWDEVICEACCESSURI%$MA_CiscoDev.xml<
/Profile_Rule_C>
    <!-- 3rd Party ROOT CA Settings: (HTTPS/TLS/SRTP) -
OPTIONAL -->
    <!-- Custom_CA Rule
ua="na">http://xsp.iopl.broadworks.net:80/dms/Cisco-
PhoneOS301-MPP1203-98-88-78-68xx/</Custom_CA_Rule -->
    <!-- GUI SCREEN: Voice Tab - Phone Tab -->
</flat-profile>
</device>

```

**System File for 9841 and 9851 : CiscoDev-3PCC\_Bootstrap.xml**

**NOTE:** This is an example file and should be used for reference only.

```
<device xmlns:xsi="http://www.w3.org/2001/XMLSchema-
instance" xsi:type="axl:XIPPhone">
<flat-profile>
<!--
    GUI SCREEN: Voice Tab - Provisioning Tab
-->
<!-- Profile Rule Resync Timers -->
<Resync_On_Reset ua="na">Yes</Resync_On_Reset>
<Resync_At_HHmm ua="na">3600</Resync_At_HHmm>
<Resync_At_Random_Delay ua="na">2</Resync_At_Random_Delay>
<Resync_Periodic ua="na">3600</Resync_Periodic>
<Resync_Error_Retry_Delay ua="na">3600</Resync_Error_Retry_Del
ay>
<Forced_Resync_Delay ua="na">14400</Forced_Resync_Delay>

<!-- Configuration Profile current -->
<GPP_O ua="na">%ACCESS_PROTOCOL_HTTPS%%BWDEVICEACCESSFQDN%:%BW
DEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEACCESSURI%CiscoDev_T
ype9851.xml</GPP_O>
<GPP_P ua="na">%ACCESS_PROTOCOL_HTTPS%%BWDEVICEACCESSFQDN%:%BW
DEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEACCESSURI%CiscoDev_T
ype9841.xml</GPP_P>
<Profile_Rule_B ua="na">($PSN eq "9841") ? $P | ($PSN eq
"9851") ? $O</Profile_Rule_B>
<Profile_Rule ua="na">%ACCESS_PROTOCOL_HTTPS%%BWDEVICEACCESSFQ
DN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEACCESSURI%Cis
coDev_System.xml</Profile_Rule>

<!-- 3rd Party ROOT CA Settings: (HTTPS/TLS/SRTP) - OPTIONAL
-->
<!--
    <Custom_CA_Rule
ua="na">http://xsp.iopl.broadworks.net:80/dms/Cisco-DP-
9800</Custom_CA_Rule>
-->
<!--
    GUI SCREEN: Voice Tab - Phone Tab
-->
</flat-profile>
</device>
```

## System File: CisoDev\_System.xml

**NOTE:** This is an example file and should be used for reference only.

```
<?xml version="1.0" encoding="UTF-8"?>
<device xsi:type="axl:XIPPhone"
xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance">
  <flat-profile>
    <!--
      GUI SCREEN: Voice Tab - System Tab
    -->
```

```

<!-- DNS Settings-->
<Primary_DNS ua="rw">%DNS_SERVER_1%/Primary_DNS>
<Secondary_DNS ua="rw">%DNS_SERVER_2%/Secondary_DNS>
<DNS_Server_Order
ua="na">%DNS_SERVER_ORDER%/DNS_Server_Order>
<DNS_Caching_Enable
ua="na">%DNS_CACHE%/DNS_Caching_Enable>

<!-- System Time Server -->
<Primary_NTP_Server
ua="na">%SNTP_SERVER_1%/Primary_NTP_Server>
<Secondary_NTP_Server
ua="na">%SNTP_SERVER_2%/Secondary_NTP_Server>

<!-- Block NonProxy SIP -->
<Block_Nonproxy_SIP
ua="na">%Block_Nonproxy_SIP%/Block_Nonproxy_SIP>

<!--
GUI SCREEN: Voice Tab->SIP Tab
-->

<!-- SIP Parameters -->
<RFC_2543_Call_Hold
ua="na">%RFC_2543_HOLD%/RFC_2543_Call_Hold>
<Display_Diversion_Info
ua="na">%DISPLAY_DIVERSION_INFO%/Display_Diversion_Info>
<!-- RTP Parameters -->
<Call_Statistics
ua="na">%CALL_STATISTICS%/Call_Statistics>

<!-- Response Status Code Handling -->
<Try_Backup_RSC
ua="na">%TRY_BACKUP_RSC%/Try_Backup_RSC>
<Retry_Reg_RSC ua="na">%RETRY_REG_RSC%/Retry_Reg_RSC>

<!-- BroadWork Advance Call Control -->
<Talk_Package ua="na">Yes</Talk_Package>
<Hold_Package ua="na">Yes</Hold_Package>
<Conference_Package ua="na">Yes</Conference_Package>

<!-- Extension Mobility -->
<EM_Enable ua="na">%EM_ENABLED%/EM_Enable>

<!-- XSI Single SignOn -->
<Profile_Authentication_Type
ua="na">%PROFILE_AUTH_TYPE%/Profile_Authentication_Type>

<!--
*****
-->

<!-- Broadsoft XSI Directory and CallLog
-->

<!--
*****
-->

<!-- Optional: Broadsoft Directory Settings -->
<Directory_Enable ua="na">Yes</Directory_Enable>
<XSI_Host_Server
ua="na">%XSI_SERVER%/XSI_Host_Server>

```

```

        <Directory_Name
ua="na">%BROADSOFT_DIR_NAME%</Directory_Name>

        <CallLog_Enable ua="na">Yes</CallLog_Enable>

        <XSI_Authentication_Type ua="na">Login
Credentials</XSI_Authentication_Type>
        <Directory_Type
ua="na">%DIRECTORY_TYPE%</Directory_Type>

        <!-- Broadsoft XMPP -->
        <XMPP_Enable ua="na">Yes</XMPP_Enable>

        <Call_Recording_Serv
ua="na">%CISCO_CALL_RECORDING_ENABLED%</Call_Recording_Serv>
        <!--
*****
-->

        <!--
        GUI SCREEN: Voice Tab->Provisioning Tab
        -->
        <Peer_Firmware_Sharing
ua="na">%Peer_Firmware_Sharing%</Peer_Firmware_Sharing>
        <Peer_Firmware_Sharing_Log_Server ua="na"/>

        <!-- Upload Configuration Options -->
        <Report_Rule
ua="na">%ACCESS_PROTOCOL%%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSP
ORT%/%BWDMSCONTEXT%/%BWDEVICEACCESSURI%/%CONF_UPLOAD_NAME%</Re
port_Rule>
        <HTTP_Report_Method
ua="na">%HTTP_REPORT_METHOD%</HTTP_Report_Method>
        <Report_To_Server
ua="na">%REPORT_TO_SERVER%</Report_To_Server>
        <Periodic_Upload_To_Server
ua="na">%PERIODIC_UPLOAD_TIMER%</Periodic_Upload_To_Server>
        <Upload_Delay_On_Local_Change
ua="na">%UPLOAD_DELAY_ON_LOCAL_CHANGE%</Upload_Delay_On_Local_
Change>

        <!-- Problem Report Tool -->
        <PRT_Upload_Rule
ua="na">%ACCESS_PROTOCOL%%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSP
ORT%/%BWDMSCONTEXT%/%BWDEVICEACCESSURI%</PRT_Upload_Rule>
        <PRT_Upload_Method
ua="na">%PRT_UPLOAD_METHOD%</PRT_Upload_Method>
        <PRT_Name ua="na">%PRT_NAME%</PRT_Name>

        <!--
        GUI SCREEN: Voice Tab->Regional Tab
        -->

        <!-- Vertical Service Activation Codes -->
        <Block_CID_Act_Code
ua="na">%BLOCK_CID_ACTIVATE%</Block_CID_Act_Code>
        <Block_CID_Deact_Code
ua="na">%BLOCK_CID_DEACTIVATE%</Block_CID_Deact_Code>
        <Block_ANC_Act_Code
ua="na">%BLOCK_ANC_ACTIVATE%</Block_ANC_Act_Code>
        <Block_ANC_Deact_Code
ua="na">%BLOCK_ANC_DEACTIVATE%</Block_ANC_Deact_Code>

```

```

        <!--
            GUI SCREEN: Voice Tab ->Phone Tab
        -->
        <!-- XSI Call Log -->
        <CallLog_Enable
ua="na">%CallLog_Enable%</CallLog_Enable>
        <CallLog_Associated_Line
ua="na">%CallLog_Associated_Line%</CallLog_Associated_Line>
        <Display_Recents_From
ua="na">%Display_Recents_From%</Display_Recents_From>

        <!-- Multiple Paging Group Parameters -->

<Group_1_Paging_Script>%PAGING_GRP_1%</Group_1_Paging_Script>
    <Group_2_Paging_Script></Group_2_Paging_Script>
    <Group_3_Paging_Script></Group_3_Paging_Script>
    <Group_4_Paging_Script></Group_4_Paging_Script>
    <Group_5_Paging_Script></Group_5_Paging_Script>
    <Group_6_Paging_Script></Group_6_Paging_Script>
    <Group_7_Paging_Script></Group_7_Paging_Script>
    <Group_8_Paging_Script></Group_8_Paging_Script>
    <Group_9_Paging_Script></Group_9_Paging_Script>
    <Group_10_Paging_Script></Group_10_Paging_Script>

    <!--
        GUI SCREEN: Voice Tab ->User Tab
    -->

    <!-- Screen Saver -->
    <Text_Logo ua="na">%TEXT_LOGO%</Text_Logo>
    <Boot_Display ua="rw">%BOOT_DISPLAY%</Boot_Display>
<!-- Options: Default/Download Picture/Logo/Text -->
    <Phone_Background
ua="rw">%PHONE_BACKGROUND%</Phone_Background> <!-- Options:
Default/Download Picture/Logo-->
    <Screen_Saver_Enable
ua="rw">%SCREEN_SAVER_ENABLED%</Screen_Saver_Enable>
    <Screen_Saver_Wait
ua="rw">%SCREEN_SAVER_WAIT%</Screen_Saver_Wait>
    <Screen_Saver_Refresh_Period
ua="rw">%SCREEN_SAVER_REFRESH_PERIOD%</Screen_Saver_Refresh_Period>

    <Screen_Saver_Type
ua="rw">%SCREEN_SAVER_TYPE%</Screen_Saver_Type> <!-- Options:
Clock/Download Picture/Logo -->

    <!--
        GUI SCREEN: Ext1 Tab
    -->

    <!-- LINE1 SIP Settings -->
    <SIP_100REL_Enable_1_
ua="na">Yes</SIP_100REL_Enable_1_>
    <Auth_INVITE_1_ ua="na">%AUTH_INVITE%</Auth_INVITE_1_>
<!-- Enable Yes if Device Auth is desired -->
    <SIP_Remote-Party-ID_1_ ua="na">No</SIP_Remote-Party-ID_1_>
    <Privacy_Header_1_
ua="na">%Privacy_Header_1_%</Privacy_Header_1_>

```



```

        <P-Early-Media_Support_1_
ua="na">%P_EARLY_MEDIA_SUPPORT_1%</P-Early-Media_Support_1_>
        <SIP_SessionID_Support_1_
ua="na">%SIP_SESSIONID_SUPPORT_1%</SIP_SessionID_Support_1_>
        <Use_low-bandwidth_OPUS_1_
ua="na">%USE_LOW_BANDWIDTH_OPUS_1%</Use_low-bandwidth_OPUS_1_>
        <MediaSec_Request_1_
ua="na">%MEDIASEC_REQUEST_1%</MediaSec_Request_1_>
        <MediaSec_Over_TLS_Only_1_
ua="na">%MEDIASEC_OVER_TLS_ONLY_1%</MediaSec_Over_TLS_Only_1_>

        <!-- LINE1 Call Feature Settings -->
        <Voice_Mail_Subscribe_Interval_1_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval_1_>

        <!-- LINE1 Proxy and Registration -->
        <Outbound_Proxy_1_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_1_>
        <Alternate_Outbound_Proxy_1_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_1_>
        <Use_DNS_SRV_1_ ua="na">Yes</Use_DNS_SRV_1_>
        <DNS_SRV_Auto_Prefix_1_
ua="na">Yes</DNS_SRV_Auto_Prefix_1_>
        <Proxy_Fallback_Intvl_1_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_1_>

        <!-- LINE1 Audio Configuration -->
        <Preferred_Codec_1_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_1_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Second_PREFERRED_Codec_1_
ua="na">%SECOND_PREFERRED_CODEC%</Second_PREFERRED_Codec_1_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Third_PREFERRED_Codec_1_
ua="na">%THIRD_PREFERRED_CODEC%</Third_PREFERRED_Codec_1_> <!--
- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Use_Pref_Codec_Only_1_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_1_>
        <Codec_Negotiation_1_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_1_>

        <!-- LINE1 Dial Plan -->
        <Dial_Plan_1_ ua="na">%DIAL_PLAN%</Dial_Plan_1_>

        <!-- LINE1 ACD Settings 11.0.2 wodennis-->
        <Broadsoft_ACD_1_ ua="na">%BROADSOFT_ACD_ENABLE-
1%</Broadsoft_ACD_1_>
        <Enable_Broadsoft_Hoteling_1_
ua="na">%BROADSOFT_HOTELING_ENABLE-
1%</Enable_Broadsoft_Hoteling_1_>
        <Call_Information_Enable_1_
ua="na">Yes</Call_Information_Enable_1_>
        <Disposition_Code_Enable_1_
ua="na">Yes</Disposition_Code_Enable_1_>
        <Trace_Enable_1_ ua="na">Yes</Trace_Enable_1_>
        <Emergency_Escalation_Enable_1_
ua="na">Yes</Emergency_Escalation_Enable_1_>
        <Queue_Status_Notification_Enable_1_
ua="na">Yes</Queue_Status_Notification_Enable_1_>

        <!-- XSI Line Service -->

```

```

        <XSI_Host_Server_1_
ua="na">%XSI_Host_Server_1%</XSI_Host_Server_1_>
        <XSI_Authentication_Type_1_
ua="na">%XSI_Authentication_Type_1_</XSI_Authentication_Type_
1_>
        <Anywhere_Enable_1_
ua="na">%Anywhere_Enable_1_</Anywhere_Enable_1_>
        <Block_CID_Enable_1_
ua="na">%Block_CID_Enable_1_</Block_CID_Enable_1_>
        <DND_Enable_1_
ua="na">%XSI_DND_ENABLE_1%</DND_Enable_1_>
        <CFWD_Enable_1_
ua="na">%XSI_CFWD_ENABLE_1%</CFWD_Enable_1_>
        <Block_Anonymous_Call_Enable_1_
ua="na">%Block_Anonymous_Call_Enable_1%</Block_Anonymous_Call_
Enable>
        <Call_Waiting_Enable_1_
ua="na">%Call_Waiting_Enable_1%</Call_Waiting_Enable_1_>
        <!--
            GUI_SCREEN: Ext2 Tab
        -->

        <!-- LINE2 SIP Settings -->
        <SIP_100REL_Enable_2_
ua="na">Yes</SIP_100REL_Enable_2_>
        <Auth_INVITE_2_ ua="na">%AUTH_INVITE%</Auth_INVITE_2_>
        <!-- Enable Yes if Device Auth is desired -->
        <SIP_Remote-Party-ID_2_ ua="na">No</SIP_Remote-Party-
ID_2_>
        <P-Early-Media_Support_2_
ua="na">%P_EARLY_MEDIA_SUPPORT_2%</P-Early-Media_Support_2_>
        <SIP_SessionID_Support_2_
ua="na">%SIP_SESSIONID_SUPPORT_2%</SIP_SessionID_Support_2_>
        <Use_low-bandwidth_OPUS_2_
ua="na">%USE_LOW_BANDWIDTH_OPUS_2%</Use_low-bandwidth_OPUS_2_>
        <MediaSec_Request_2_
ua="na">%MEDIASEC_REQUEST_2%</MediaSec_Request_2_>
        <MediaSec_Over_TLS_Only_2_
ua="na">%MEDIASEC_OVER_TLS_ONLY_2%</MediaSec_Over_TLS_Only_2_>

        <!-- LINE2 Call Feature Settings -->
        <Voice_Mail_Subscribe_Interval_2_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval
_2_>

        <!-- LINE2 Proxy and Registration -->
        <Outbound_Proxy_2_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_2_>
        <Alternate_Outbound_Proxy_2_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_2_>
        <Use_DNS_SRV_2_ ua="na">Yes</Use_DNS_SRV_2_>
        <DNS_SRV_Auto_Prefix_2_
ua="na">Yes</DNS_SRV_Auto_Prefix_2_>
        <Proxy_Fallback_Intvl_2_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_2_>

        <!-- LINE2 Audio Configuration -->
        <Preferred_Codec_2_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_2_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->

```

```

        <Second_Preferred_Codec_2_
ua="na">%SECOND_PREFERRED_CODEC%</Second_Preferred_Codec_2_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Third_Preferred_Codec_2_
ua="na">%THIRD_PREFERRED_CODEC%</Third_Preferred_Codec_2_> <!--
- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Use_Pref_Codec_Only_2_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_2_>
        <Codec_Negotiation_2_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_2_>

        <!-- LINE2 Dial Plan -->
        <Dial_Plan_2_ ua="na">%DIAL_PLAN%</Dial_Plan_2_>

        <!-- LINE2 ACD Settings 11.0.2 wodennis-->
        <Broadsoft_ACD_2_ ua="na">%BROADSOFT_ACD_ENABLE-
2%</Broadsoft_ACD_2_>
        <Enable_Broadsoft_Hoteling_2_
ua="na">%BROADSOFT_HOTELING_ENABLE-
2%</Enable_Broadsoft_Hoteling_2_>
        <Call_Information_Enable_2_
ua="na">Yes</Call_Information_Enable_2_>
        <Disposition_Code_Enable_2_
ua="na">Yes</Disposition_Code_Enable_2_>
        <Trace_Enable_2_ ua="na">Yes</Trace_Enable_2_>
        <Emergency_Escalation_Enable_2_
ua="na">Yes</Emergency_Escalation_Enable_2_>
        <Queue_Status_Notification_Enable_2_
ua="na">Yes</Queue_Status_Notification_Enable_2_>

        <!--
        GUI SCREEN: Ext3 Tab
        -->

        <!-- LINE3 SIP Settings -->
        <SIP_100REL_Enable_3_
ua="na">Yes</SIP_100REL_Enable_3_>
        <Auth_INVITE_3_ ua="na">%AUTH_INVITE%</Auth_INVITE_3_>
<!-- Enable Yes if Device Auth is desired -->
        <SIP_Remote-Party-ID_3_ ua="na">No</SIP_Remote-Party-
ID_3_>
        <P-Early-Media_Support_3_
ua="na">%P_EARLY_MEDIA_SUPPORT_3%</P-Early-Media_Support_3_>
        <SIP_SessionID_Support_3_
ua="na">%SIP_SESSIONID_SUPPORT_3%</SIP_SessionID_Support_3_>
        <Use_low-bandwidth_OPUS_3_
ua="na">%USE_LOW_BANDWIDTH_OPUS_3%</Use_low-bandwidth_OPUS_3_>
        <MediaSec_Request_3_
ua="na">%MEDIASEC_REQUEST_3%</MediaSec_Request_3_>
        <MediaSec_Over_TLS_Only_3_
ua="na">%MEDIASEC_OVER_TLS_ONLY_3%</MediaSec_Over_TLS_Only_3_>

        <!-- LINE3 Call Feature Settings -->
        <Voice_Mail_Subscribe_Interval_3_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval
_3_>

        <!-- LINE3 Proxy and Registration -->
        <Outbound_Proxy_3_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_3_>
        <Alternate_Outbound_Proxy_3_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_3_>

```

```

        <Use_DNS_SRV_3_ua="na">Yes</Use_DNS_SRV_3_>
        <DNS_SRV_Auto_Prefix_3_
ua="na">Yes</DNS_SRV_Auto_Prefix_3_>
        <Proxy_Fallback_Intvl_3_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_3_>

        <!-- LINE3 Audio Configuration -->
        <Preferred_Codec_3_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_3_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Second_PREFERRED_Codec_3_
ua="na">%SECOND_PREFERRED_CODEC%</Second_PREFERRED_Codec_3_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Third_PREFERRED_Codec_3_
ua="na">%THIRD_PREFERRED_CODEC%</Third_PREFERRED_Codec_3_> <!--
- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Use_Pref_Codec_Only_3_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_3_>
        <Codec_Negotiation_3_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_3_>

        <!-- LINE3 Dial Plan -->
        <Dial_Plan_3_ua="na">%DIAL_PLAN%</Dial_Plan_3_>

        <!-- LINE3 ACD Settings 11.0.2 wodennis-->
        <Broadsoft_ACD_3_ua="na">%BROADSOFT_ACD_ENABLE-
3%</Broadsoft_ACD_3_>
        <Enable_Broadsoft_Hoteling_3_
ua="na">%BROADSOFT_HOTELING_ENABLE-
3%</Enable_Broadsoft_Hoteling_3_>
        <Call_Information_Enable_3_
ua="na">Yes</Call_Information_Enable_3_>
        <Disposition_Code_Enable_3_
ua="na">Yes</Disposition_Code_Enable_3_>
        <Trace_Enable_3_ua="na">Yes</Trace_Enable_3_>
        <Emergency_Escalation_Enable_3_
ua="na">Yes</Emergency_Escalation_Enable_3_>
        <Queue_Status_Notification_Enable_3_
ua="na">Yes</Queue_Status_Notification_Enable_3_>

        <!--
        GUI SCREEN: Ext4 Tab
        -->

        <!-- LINE4 SIP Settings -->
        <SIP_100REL_Enable_4_
ua="na">Yes</SIP_100REL_Enable_4_>
        <Auth_INVITE_4_ua="na">%AUTH_INVITE%</Auth_INVITE_4_>
<!-- Enable Yes if Device Auth is desired -->
        <SIP_Remote-Party-ID_4_ua="na">No</SIP_Remote-Party-
ID_4_>
        <P-Early-Media_Support_4_
ua="na">%P_EARLY_MEDIA_SUPPORT_4%</P-Early-Media_Support_4_>
        <SIP_SessionID_Support_4_
ua="na">%SIP_SESSIONID_SUPPORT_4%</SIP_SessionID_Support_4_>
        <Use_low-bandwidth_OPUS_4_
ua="na">%USE_LOW_BANDWIDTH_OPUS_4%</Use_low-bandwidth_OPUS_4_>
        <MediaSec_Request_4_
ua="na">%MEDIASEC_REQUEST_4%</MediaSec_Request_4_>
        <MediaSec_Over_TLS_Only_4_
ua="na">%MEDIASEC_OVER_TLS_ONLY_4%</MediaSec_Over_TLS_Only_4_>

```

```

<!-- LINE4 Call Feature Settings -->
<Voice_Mail_Subscribe_Interval_4_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval
_4_>

<!-- LINE4 Proxy and Registration -->
<Outbound_Proxy_4_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_4_>
<Alternate_Outbound_Proxy_4_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_4_>
<Use_DNS_SRV_4_ ua="na">Yes</Use_DNS_SRV_4_>
<DNS_SRV_Auto_Prefix_4_
ua="na">Yes</DNS_SRV_Auto_Prefix_4_>
<Proxy_Fallback_Intvl_4_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_4_>

<!-- LINE4 Audio Configuration -->
<Preferred_Codec_4_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_4_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
<Second_PREFERRED_Codec_4_
ua="na">%SECOND_PREFERRED_CODEC%</Second_PREFERRED_Codec_4_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
<Third_PREFERRED_Codec_4_
ua="na">%THIRD_PREFERRED_CODEC%</Third_PREFERRED_Codec_4_> <!--
- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
<Use_Pref_Codec_Only_4_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_4_>
<Codec_Negotiation_4_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_4_>

<!-- LINE4 Dial Plan -->
<Dial_Plan_4_ ua="na">%DIAL_PLAN%</Dial_Plan_4_>

<!-- LINE4 ACD Settings 11.0.2 wodennis-->
<Broadsoft_ACD_4_ ua="na">%BROADSOFT_ACD_ENABLE-
4%</Broadsoft_ACD_4_>
<Enable_Broadsoft_Hoteling_4_
ua="na">%BROADSOFT_HOTELING_ENABLE-
4%</Enable_Broadsoft_Hoteling_4_>
<Call_Information_Enable_4_
ua="na">Yes</Call_Information_Enable_4_>
<Disposition_Code_Enable_4_
ua="na">Yes</Disposition_Code_Enable_4_>
<Trace_Enable_4_ ua="na">Yes</Trace_Enable_4_>
<Emergency_Escalation_Enable_4_
ua="na">Yes</Emergency_Escalation_Enable_4_>
<Queue_Status_Notification_Enable_4_
ua="na">Yes</Queue_Status_Notification_Enable_4_>

<!--
GUI SCREEN: Ext5 Tab
-->

<!-- LINE5 SIP Settings -->
<SIP_100REL_Enable_5_
ua="na">Yes</SIP_100REL_Enable_5_>
<Auth_INVITE_5_ ua="na">%AUTH_INVITE%</Auth_INVITE_5_>
<!-- Enable Yes if Device Auth is desired -->
<SIP_Remote-Party-ID_5_ ua="na">No</SIP_Remote-Party-
ID_5_>

```

```

        <P-Early-Media_Support_5_
ua="na">%P_EARLY_MEDIA_SUPPORT_5%</P-Early-Media_Support_5_>
        <SIP_SessionID_Support_5_
ua="na">%SIP_SESSIONID_SUPPORT_5%</SIP_SessionID_Support_5_>
        <Use_low-bandwidth_OPUS_5_
ua="na">%USE_LOW_BANDWIDTH_OPUS_5%</Use_low-bandwidth_OPUS_5_>
        <MediaSec_Request_5_
ua="na">%MEDIASEC_REQUEST_5%</MediaSec_Request_5_>
        <MediaSec_Over_TLS_Only_5_
ua="na">%MEDIASEC_OVER_TLS_ONLY_5%</MediaSec_Over_TLS_Only_5_>

        <!-- LINE5 Call Feature Settings -->
        <Voice_Mail_Subscribe_Interval_5_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval_5_>

        <!-- LINE5 Proxy and Registration -->
        <Outbound_Proxy_5_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_5_>
        <Alternate_Outbound_Proxy_5_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_5_>
        <Use_DNS_SRV_5_ ua="na">Yes</Use_DNS_SRV_5_>
        <DNS_SRV_Auto_Prefix_5_
ua="na">Yes</DNS_SRV_Auto_Prefix_5_>
        <Proxy_Fallback_Intvl_5_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_5_>

        <!-- LINE5 Audio Configuration -->
        <Preferred_Codec_5_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_5_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Second_Preferred_Codec_5_
ua="na">%SECOND_PREFERRED_CODEC%</Second_Preferred_Codec_5_>
        <!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Third_Preferred_Codec_5_
ua="na">%THIRD_PREFERRED_CODEC%</Third_Preferred_Codec_5_> <!--
- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Use_Pref_Codec_Only_5_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_5_>
        <Codec_Negotiation_5_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_5_>

        <!-- LINE5 Dial Plan -->
        <Dial_Plan_5_ ua="na">%DIAL_PLAN%</Dial_Plan_5_>

        <!-- LINE5 ACD Settings 11.0.2 wodennis-->
        <Broadsoft_ACD_5_ ua="na">%BROADSOFT_ACD_ENABLE-
5%</Broadsoft_ACD_5_>
        <Enable_Broadsoft_Hoteling_5_
ua="na">%BROADSOFT_HOTELING_ENABLE-
5%</Enable_Broadsoft_Hoteling_5_>
        <Call_Information_Enable_5_
ua="na">Yes</Call_Information_Enable_5_>
        <Disposition_Code_Enable_5_
ua="na">Yes</Disposition_Code_Enable_5_>
        <Trace_Enable_5_ ua="na">Yes</Trace_Enable_5_>
        <Emergency_Escalation_Enable_5_
ua="na">Yes</Emergency_Escalation_Enable_5_>
        <Queue_Status_Notification_Enable_5_
ua="na">Yes</Queue_Status_Notification_Enable_5_>

        <!--

```

```

GUI SCREEN: Ext6 Tab
-->

<!-- LINE6 SIP Settings -->
<SIP_100REL_Enable_6_
ua="na">Yes</SIP_100REL_Enable_6_>
  <Auth_INVITE_6_ ua="na">%AUTH_INVITE%</Auth_INVITE_6_>
<!-- Enable Yes if Device Auth is desired -->
  <SIP_Remote-Party-ID_6_ ua="na">No</SIP_Remote-Party-
ID_6_>
  <P-Early-Media_Support_6_
ua="na">%P_EARLY_MEDIA_SUPPORT_6%</P-Early-Media_Support_6_>
  <SIP_SessionID_Support_6_
ua="na">%SIP_SESSIONID_SUPPORT_6%</SIP_SessionID_Support_6_>
  <Use_low-bandwidth_OPUS_6_
ua="na">%USE_LOW_BANDWIDTH_OPUS_6%</Use_low-bandwidth_OPUS_6_>
  <MediaSec_Request_6_
ua="na">%MEDIASEC_REQUEST_6%</MediaSec_Request_6_>
  <MediaSec_Over_TLS_Only_6_
ua="na">%MEDIASEC_OVER_TLS_ONLY_6%</MediaSec_Over_TLS_Only_6_>

<!-- LINE6 Call Feature Settings -->
<Voice_Mail_Subscribe_Interval_6_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval
_6_>

<!-- LINE6 Proxy and Registration -->
<Outbound_Proxy_6_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_6_>
  <Alternate_Outbound_Proxy_6_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_6_>
  <Use_DNS_SRV_6_ ua="na">Yes</Use_DNS_SRV_6_>
  <DNS_SRV_Auto_Prefix_6_
ua="na">Yes</DNS_SRV_Auto_Prefix_6_>
  <Proxy_Fallback_Intvl_6_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_6_>

<!-- LINE6 Audio Configuration -->
<Preferred_Codec_6_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_6_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
  <Second_Preferred_Codec_6_
ua="na">%SECOND_PREFERRED_CODEC%</Second_Preferred_Codec_6_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
  <Third_Preferred_Codec_6_
ua="na">%THIRD_PREFERRED_CODEC%</Third_Preferred_Codec_6_> <!--
- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
  <Use_Pref_Codec_Only_6_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_6_>
  <Codec_Negotiation_6_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_6_>

<!-- LINE6 Dial Plan -->
<Dial_Plan_6_ ua="na">%DIAL_PLAN%</Dial_Plan_6_>

<!-- LINE6 ACD Settings 11.0.2 wodennis-->
<Broadsoft_ACD_6_ ua="na">%BROADSOFT_ACD_ENABLE-
6%</Broadsoft_ACD_6_>
  <Enable_Broadsoft_Hoteling_6_
ua="na">%BROADSOFT_HOTELING_ENABLE-
6%</Enable_Broadsoft_Hoteling_6_>

```

```

        <Call_Information_Enable_6_
ua="na">Yes</Call_Information_Enable_6_>
        <Disposition_Code_Enable_6_
ua="na">Yes</Disposition_Code_Enable_6_>
        <Trace_Enable_6_ ua="na">Yes</Trace_Enable_6_>
        <Emergency_Escalation_Enable_6_
ua="na">Yes</Emergency_Escalation_Enable_6_>
        <Queue_Status_Notification_Enable_6_
ua="na">Yes</Queue_Status_Notification_Enable_6_>

        <!--
            GUI SCREEN: Ext7 Tab
        -->

        <!-- LINE7 SIP Settings -->
        <SIP_100REL_Enable_7_
ua="na">Yes</SIP_100REL_Enable_7_>
        <Auth_INVITE_7_ ua="na">%AUTH_INVITE%</Auth_INVITE_7_>
        <!-- Enable Yes if Device Auth is desired -->
        <SIP_Remote-Party-ID_7_ ua="na">No</SIP_Remote-Party-
ID_7_>
        <P-Early-Media_Support_7_
ua="na">%P_EARLY_MEDIA_SUPPORT_7%</P-Early-Media_Support_7_>
        <SIP_SessionID_Support_7_
ua="na">%SIP_SESSIONID_SUPPORT_7%</SIP_SessionID_Support_7_>
        <Use_low-bandwidth_OPUS_7_
ua="na">%USE_LOW_BANDWIDTH_OPUS_7%</Use_low-bandwidth_OPUS_7_>
        <MediaSec_Request_7_
ua="na">%MEDIASEC_REQUEST_7%</MediaSec_Request_7_>
        <MediaSec_Over_TLS_Only_7_
ua="na">%MEDIASEC_OVER_TLS_ONLY_7%</MediaSec_Over_TLS_Only_7_>

        <!-- LINE7 Call Feature Settings -->
        <Voice_Mail_Subscribe_Interval_7_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval
_7_>

        <!-- LINE7 Proxy and Registration -->
        <Outbound_Proxy_7_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_7_>
        <Alternate_Outbound_Proxy_7_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_7_>
        <Use_DNS_SRV_7_ ua="na">Yes</Use_DNS_SRV_7_>
        <DNS_SRV_Auto_Prefix_7_
ua="na">Yes</DNS_SRV_Auto_Prefix_7_>
        <Proxy_Fallback_Intvl_7_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_7_>

        <!-- LINE7 Audio Configuration -->
        <Preferred_Codec_7_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_7_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Second_PREFERRED_Codec_7_
ua="na">%SECOND_PREFERRED_CODEC%</Second Preferred Codec_7_>
        <!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Third_PREFERRED_Codec_7_
ua="na">%THIRD_PREFERRED_CODEC%</Third Preferred Codec_7_> <!--
- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Use_Pref_Codec_Only_7_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_7_>
        <Codec_Negotiation_7_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_7_>

```



```

<!-- LINE7 Dial Plan -->
<Dial_Plan_7_ ua="na">%DIAL_PLAN%</Dial_Plan_7_>

<!-- LINE7 ACD Settings 11.0.2 wodennis-->
<Broadsoft_ACD_7_ ua="na">%BROADSOFT_ACD_ENABLE-
7%</Broadsoft_ACD_7_>
<Enable_Broadsoft_Hoteling_7_
ua="na">%BROADSOFT_HOTELING_ENABLE-
7%</Enable_Broadsoft_Hoteling_7_>
<Call_Information_Enable_7_
ua="na">Yes</Call_Information_Enable_7_>
<Disposition_Code_Enable_7_
ua="na">Yes</Disposition_Code_Enable_7_>
<Trace_Enable_7_ ua="na">Yes</Trace_Enable_7_>
<Emergency_Escalation_Enable_7_
ua="na">Yes</Emergency_Escalation_Enable_7_>
<Queue_Status_Notification_Enable_7_
ua="na">Yes</Queue_Status_Notification_Enable_7_>

<!--
GUI SCREEN: Ext8 Tab
-->

<!-- LINE8 SIP Settings -->
<SIP_100REL_Enable_8_
ua="na">Yes</SIP_100REL_Enable_8_>
<Auth_INVITE_8_ ua="na">%AUTH_INVITE%</Auth_INVITE_8_>
<!-- Enable Yes if Device Auth is desired -->
<SIP_Remote-Party-ID_8_ ua="na">No</SIP_Remote-Party-
ID_8_>
<P-Early-Media_Support_8_
ua="na">%P_EARLY_MEDIA_SUPPORT_8%</P-Early-Media_Support_8_>
<SIP_SessionID_Support_8_
ua="na">%SIP_SESSIONID_SUPPORT_8%</SIP_SessionID_Support_8_>
<Use_low-bandwidth_OPUS_8_
ua="na">%USE_LOW_BANDWIDTH_OPUS_8%</Use_low-bandwidth_OPUS_8_>
<MediaSec_Request_8_
ua="na">%MEDIASEC_REQUEST_8%</MediaSec_Request_8_>
<MediaSec_Over_TLS_Only_8_
ua="na">%MEDIASEC_OVER_TLS_ONLY_8%</MediaSec_Over_TLS_Only_8_>

<!-- LINE8 Call Feature Settings -->
<Voice Mail Subscribe Interval_8_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval
_8_>

<!-- LINE8 Proxy and Registration -->
<Outbound_Proxy_8_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_8_>
<Alternate_Outbound_Proxy_8_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_8_>
<Use_DNS_SRV_8_ ua="na">Yes</Use_DNS_SRV_8_>
<DNS_SRV_Auto_Prefix_8_
ua="na">Yes</DNS_SRV_Auto_Prefix_8_>
<Proxy_Fallback_Intvl_8_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_8_>

<!-- LINE8 Audio Configuration -->
<Preferred_Codec_8_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_8_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->

```

```

        <Second_Preferred_Codec_8_
ua="na">%SECOND_PREFERRED_CODEC%</Second_Preferred_Codec_8_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Third_Preferred_Codec_8_
ua="na">%THIRD_PREFERRED_CODEC%</Third_Preferred_Codec_8_> <!--
- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Use_Pref_Codec_Only_8_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_8_>
        <Codec_Negotiation_8_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_8_>

        <!-- LINE8 Dial Plan -->
        <Dial_Plan_8_ ua="na">%DIAL_PLAN%</Dial_Plan_8_>

        <!-- LINE8 ACD Settings 11.0.2 wodennis-->
        <Broadsoft_ACD_8_ ua="na">%BROADSOFT_ACD_ENABLE-
8%</Broadsoft_ACD_8_>
        <Enable_Broadsoft_Hoteling_8_
ua="na">%BROADSOFT_HOTELING_ENABLE-
8%</Enable_Broadsoft_Hoteling_8_>
        <Call_Information_Enable_8_
ua="na">Yes</Call_Information_Enable_8_>
        <Disposition_Code_Enable_8_
ua="na">Yes</Disposition_Code_Enable_8_>
        <Trace_Enable_8_ ua="na">Yes</Trace_Enable_8_>
        <Emergency_Escalation_Enable_8_
ua="na">Yes</Emergency_Escalation_Enable_8_>
        <Queue_Status_Notification_Enable_8_
ua="na">Yes</Queue_Status_Notification_Enable_8_>

        <!--
        GUI SCREEN: Ext9 Tab
        -->

        <!-- LINE9 SIP Settings -->
        <SIP_100REL_Enable_9_
ua="na">Yes</SIP_100REL_Enable_9_>
        <Auth_INVITE_9_ ua="na">%AUTH_INVITE%</Auth_INVITE_9_>
<!-- Enable Yes if Device Auth is desired -->
        <SIP_Remote-Party-ID_9_ ua="na">No</SIP_Remote-Party-
ID_9_>
        <P-Early-Media_Support_9_
ua="na">%P_EARLY_MEDIA_SUPPORT_9%</P-Early-Media_Support_9_>
        <SIP_SessionID_Support_9_
ua="na">%SIP_SESSIONID_SUPPORT_9%</SIP_SessionID_Support_9_>
        <Use_low-bandwidth_OPUS_9_
ua="na">%USE_LOW_BANDWIDTH_OPUS_9%</Use_low-bandwidth_OPUS_9_>
        <MediaSec_Request_9_
ua="na">%MEDIASEC_REQUEST_9%</MediaSec_Request_9_>
        <MediaSec_Over_TLS_Only_9_
ua="na">%MEDIASEC_OVER_TLS_ONLY_9%</MediaSec_Over_TLS_Only_9_>

        <!-- LINE9 Call Feature Settings -->
        <Voice_Mail_Subscribe_Interval_9_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval
_9_>

        <!-- LINE9 Proxy and Registration -->
        <Outbound_Proxy_9_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_9_>
        <Alternate_Outbound_Proxy_9_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_9_>

```

```

        <Use_DNS_SRV_9_ua="na">Yes</Use_DNS_SRV_9_>
        <DNS_SRV_Auto_Prefix_9_
ua="na">Yes</DNS_SRV_Auto_Prefix_9_>
        <Proxy_Fallback_Intvl_9_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_9_>

        <!-- LINE9 Audio Configuration -->
        <Preferred_Codec_9_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_9_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Second_PREFERRED_Codec_9_
ua="na">%SECOND_PREFERRED_CODEC%</Second_PREFERRED_Codec_9_>
        <!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Third_PREFERRED_Codec_9_
ua="na">%THIRD_PREFERRED_CODEC%</Third_PREFERRED_Codec_9_> <!--
- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Use_Pref_Codec_Only_9_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_9_>
        <Codec_Negotiation_9_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_9_>

        <!-- LINE9 Dial Plan -->
        <Dial_Plan_9_ua="na">%DIAL_PLAN%</Dial_Plan_9_>

        <!-- LINE8 ACD Settings 11.0.2 wodennis-->
        <Broadsoft_ACD_9_ua="na">%BROADSOFT_ACD_ENABLE-
9%</Broadsoft_ACD_9_>
        <Enable_Broadsoft_Hoteling_9_
ua="na">%BROADSOFT_HOTELING_ENABLE-
9%</Enable_Broadsoft_Hoteling_9_>
        <Call_Information_Enable_9_
ua="na">Yes</Call_Information_Enable_9_>
        <Disposition_Code_Enable_9_
ua="na">Yes</Disposition_Code_Enable_9_>
        <Trace_Enable_9_ua="na">Yes</Trace_Enable_9_>
        <Emergency_Escalation_Enable_9_
ua="na">Yes</Emergency_Escalation_Enable_9_>
        <Queue_Status_Notification_Enable_9_
ua="na">Yes</Queue_Status_Notification_Enable_9_>

        <!--
        GUI SCREEN: Ext10 Tab
        -->

        <!-- LINE10 SIP Settings -->
        <SIP_100REL_Enable_10_
ua="na">Yes</SIP_100REL_Enable_10_>
        <Auth_INVITE_10_
ua="na">%AUTH_INVITE%</Auth_INVITE_10_> <!-- Enable Yes if
Device Auth is desired -->
        <SIP_Remote-Party-ID_10_ua="na">No</SIP_Remote-Party-
ID_10_>
        <P-Early-Media_Support_10_
ua="na">%P_EARLY_MEDIA_SUPPORT_10%</P-Early-Media_Support_10_>
        <SIP_SessionID_Support_10_
ua="na">%SIP_SESSIONID_SUPPORT_10%</SIP_SessionID_Support_10_>
        <Use_low-bandwidth_OPUS_10_
ua="na">%USE_LOW_BANDWIDTH_OPUS_10%</Use_low-
bandwidth_OPUS_10_>
        <MediaSec_Request_10_
ua="na">%MEDIASEC_REQUEST_10%</MediaSec_Request_10_>

```

```

        <MediaSec_Over_TLS_Only_10_
ua="na">%MEDIASEC_OVER_TLS_ONLY_10%</MediaSec_Over_TLS_Only_10_
_>

        <!-- LINE10 Call Feature Settings -->
        <Voice_Mail_Subscribe_Interval_10_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval_
10_>

        <!-- LINE10 Proxy and Registration -->
        <Outbound_Proxy_10_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_10_>
        <Alternate_Outbound_Proxy_10_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_10_>
        <Use_DNS_SRV_10_ ua="na">Yes</Use_DNS_SRV_10_>
        <DNS_SRV_Auto_Prefix_10_
ua="na">Yes</DNS_SRV_Auto_Prefix_10_>
        <Proxy_Fallback_Intvl_10_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_10_>

        <!-- LINE10 Audio Configuration -->
        <Preferred_Codec_10_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_10_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Second_PREFERRED_Codec_10_
ua="na">%SECOND_PREFERRED_CODEC%</Second_PREFERRED_Codec_10_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Third_PREFERRED_Codec_10_
ua="na">%THIRD_PREFERRED_CODEC%</Third_PREFERRED_Codec_10_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Use_Pref_Codec_Only_10_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_10_>
        <Codec_Negotiation_10_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_10_>

        <!-- LINE10 Dial Plan -->
        <Dial_Plan_10_ ua="na">%DIAL_PLAN%</Dial_Plan_10_>

        <!-- LINE10 ACD Settings 11.0.2 wodennis-->
        <Broadsoft_ACD_10_ ua="na">%BROADSOFT_ACD_ENABLE-
10%</Broadsoft_ACD_10_>
        <Enable_Broadsoft_Hoteling_10_
ua="na">%BROADSOFT_HOTELING_ENABLE-
10%</Enable_Broadsoft_Hoteling_10_>
        <Call_Information_Enable_10_
ua="na">Yes</Call_Information_Enable_10_>
        <Disposition_Code_Enable_10_
ua="na">Yes</Disposition_Code_Enable_10_>
        <Trace_Enable_10_ ua="na">Yes</Trace_Enable_10_>
        <Emergency_Escalation_Enable_10_
ua="na">Yes</Emergency_Escalation_Enable_10_>
        <Queue_Status_Notification_Enable_10_
ua="na">Yes</Queue_Status_Notification_Enable_10_>

        <!--
        GUI SCREEN: Ext11 Tab
        -->

        <!-- LINE11 SIP Settings -->
        <SIP_100REL_Enable_11_
ua="na">Yes</SIP_100REL_Enable_11_>

```

```

    <Auth_INVITE_11_
ua="na">%AUTH_INVITE%</Auth_INVITE_11_> <!-- Enable Yes if
Device Auth is desired -->
    <SIP_Remote-Party-ID_11_ ua="na">No</SIP_Remote-Party-
ID_11_>
    <P-Early-Media_Support_11_
ua="na">%P_EARLY_MEDIA_SUPPORT_11%</P-Early-Media_Support_11_>
    <SIP_SessionID_Support_11_
ua="na">%SIP_SESSIONID_SUPPORT_11%</SIP_SessionID_Support_11_>
    <Use_low-bandwidth_OPUS_11_
ua="na">%USE_LOW_BANDWIDTH_OPUS_11%</Use_low-
bandwidth_OPUS_11_>
    <MediaSec_Request_11_
ua="na">%MEDIASEC_REQUEST_11%</MediaSec_Request_11_>
    <MediaSec_Over_TLS_Only_11_
ua="na">%MEDIASEC_OVER_TLS_ONLY_11%</MediaSec_Over_TLS_Only_11_
_>

    <!-- LINE11 Call Feature Settings -->
    <Voice_Mail_Subscribe_Interval_11_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval
_11_>

    <!-- LINE11 Proxy and Registration -->
    <Outbound_Proxy_11_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_11_>
    <Alternate_Outbound_Proxy_11_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_11_>
    <Use_DNS_SRV_11_ ua="na">Yes</Use_DNS_SRV_11_>
    <DNS_SRV_Auto_Prefix_11_
ua="na">Yes</DNS_SRV_Auto_Prefix_11_>
    <Proxy_Fallback_Intvl_11_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_11_>

    <!-- LINE11 Audio Configuration -->
    <Preferred_Codec_11_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_11_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
    <Second_PREFERRED_Codec_11_
ua="na">%SECOND_PREFERRED_CODEC%</Second_PREFERRED_Codec_11_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
    <Third_PREFERRED_Codec_11_
ua="na">%THIRD_PREFERRED_CODEC%</Third_PREFERRED_Codec_11_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
    <Use_Pref_Codec_Only_11_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_11_>
    <Codec_Negotiation_11_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_11_>

    <!-- LINE11 Dial Plan -->
    <Dial_Plan_11_ ua="na">%DIAL_PLAN%</Dial_Plan_11_>

    <!-- LINE11 ACD Settings 11.0.2 wodennis-->
    <Broadsoft_ACD_11_ ua="na">%BROADSOFT_ACD_ENABLE-
11%</Broadsoft_ACD_11_>
    <Enable_Broadsoft_Hoteling_11_
ua="na">%BROADSOFT_HOTELING_ENABLE-
11%</Enable_Broadsoft_Hoteling_11_>
    <Call_Information_Enable_11_
ua="na">Yes</Call_Information_Enable_11_>
    <Disposition_Code_Enable_11_
ua="na">Yes</Disposition_Code_Enable_11_>

```

```

        <Trace_Enable_11_ ua="na">Yes</Trace_Enable_11_>
        <Emergency_Escalation_Enable_11_
ua="na">Yes</Emergency_Escalation_Enable_11_>
        <Queue_Status_Notification_Enable_11_
ua="na">Yes</Queue_Status_Notification_Enable_11_>

        <!--
        GUI SCREEN: Ext12 Tab
        -->

        <!-- LINE12 SIP Settings -->
        <SIP_100REL_Enable_12_
ua="na">Yes</SIP_100REL_Enable_12_>
        <Auth_INVITE_12_
ua="na">%AUTH_INVITE%</Auth_INVITE_12_> <!-- Enable Yes if
Device Auth is desired -->
        <SIP_Remote-Party-ID_12_ ua="na">No</SIP_Remote-Party-
ID_12_>
        <P-Early-Media_Support_12_
ua="na">%P_EARLY_MEDIA_SUPPORT_12%</P-Early-Media_Support_12_>
        <SIP_SessionID_Support_12_
ua="na">%SIP_SESSIONID_SUPPORT_12%</SIP_SessionID_Support_12_>
        <Use_low-bandwidth_OPUS_12_
ua="na">%USE_LOW_BANDWIDTH_OPUS_12%</Use_low-
bandwidth_OPUS_12_>
        <MediaSec_Request_12_
ua="na">%MEDIASEC_REQUEST_12%</MediaSec_Request_12_>
        <MediaSec_Over_TLS_Only_12_
ua="na">%MEDIASEC_OVER_TLS_ONLY_12%</MediaSec_Over_TLS_Only_12_
_>

        <!-- LINE12 Call Feature Settings -->
        <Voice_Mail_Subscribe_Interval_12_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval
_12_>

        <!-- LINE12 Proxy and Registration -->
        <Outbound_Proxy_12_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_12_>
        <Alternate_Outbound_Proxy_12_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_12_>
        <Use_DNS_SRV_12_ ua="na">Yes</Use_DNS_SRV_12_>
        <DNS_SRV_Auto_Prefix_12_
ua="na">Yes</DNS_SRV_Auto_Prefix_12_>
        <Proxy_Fallback_Intvl_12_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_12_>

        <!-- LINE12 Audio Configuration -->
        <Preferred_Codec_12_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_12_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Second_PREFERRED_Codec_12_
ua="na">%SECOND_PREFERRED_CODEC%</Second_PREFERRED_Codec_12_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Third_PREFERRED_Codec_12_
ua="na">%THIRD_PREFERRED_CODEC%</Third_PREFERRED_Codec_12_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Use_Pref_Codec_Only_12_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_12_>
        <Codec_Negotiation_12_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_12_>

```

```

<!-- LINE12 Dial Plan -->
<Dial_Plan_12_ ua="na">%DIAL_PLAN%</Dial_Plan_12_>

<!-- LINE12 ACD Settings 11.0.2 wodennis-->
<Broadsoft_ACD_12_ ua="na">%BROADSOFT_ACD_ENABLE-
12%</Broadsoft_ACD_12_>
<Enable_Broadsoft_Hoteling_12_
ua="na">%BROADSOFT_HOTELING_ENABLE-
12%</Enable_Broadsoft_Hoteling_12_>
<Call_Information_Enable_12_
ua="na">Yes</Call_Information_Enable_12_>
<Disposition_Code_Enable_12_
ua="na">Yes</Disposition_Code_Enable_12_>
<Trace_Enable_12_ ua="na">Yes</Trace_Enable_12_>
<Emergency_Escalation_Enable_12_
ua="na">Yes</Emergency_Escalation_Enable_12_>
<Queue_Status_Notification_Enable_12_
ua="na">Yes</Queue_Status_Notification_Enable_12_>

<!--
GUI SCREEN: Ext13 Tab
-->

<!-- LINE13 SIP Settings -->
<SIP_100REL_Enable_13_
ua="na">Yes</SIP_100REL_Enable_13_>
<Auth_INVITE_13_
ua="na">%AUTH_INVITE%</Auth_INVITE_13_> <!-- Enable Yes if
Device Auth is desired -->
<SIP_Remote-Party-ID_13_ ua="na">No</SIP_Remote-Party-
ID_13_>
<P-Early-Media_Support_13_
ua="na">%P_EARLY_MEDIA_SUPPORT_13%</P-Early-Media_Support_13_>
<SIP_SessionID_Support_13_
ua="na">%SIP_SESSIONID_SUPPORT_13%</SIP_SessionID_Support_13_>
<Use_low-bandwidth_OPUS_13_
ua="na">%USE_LOW_BANDWIDTH_OPUS_13%</Use_low-
bandwidth_OPUS_13_>
<MediaSec_Request_13_
ua="na">%MEDIASEC_REQUEST_13%</MediaSec_Request_13_>
<MediaSec_Over_TLS_Only_13_
ua="na">%MEDIASEC_OVER_TLS_ONLY_13%</MediaSec_Over_TLS_Only_13_
_>

<!-- LINE13 Call Feature Settings -->
<Voice_Mail_Subscribe_Interval_13_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval
_13_>

<!-- LINE13 Proxy and Registration -->
<Outbound_Proxy_13_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_13_>
<Alternate_Outbound_Proxy_13_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_13_>
<Use_DNS_SRV_13_ ua="na">Yes</Use_DNS_SRV_13_>
<DNS_SRV_Auto_Prefix_13_
ua="na">Yes</DNS_SRV_Auto_Prefix_13_>
<Proxy_Fallback_Intvl_13_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_13_>

<!-- LINE13 Audio Configuration -->

```

```

        <Preferred_Codec_13_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_13_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Second_Preferred_Codec_13_
ua="na">%SECOND_PREFERRED_CODEC%</Second_Preferred_Codec_13_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Third_Preferred_Codec_13_
ua="na">%THIRD_PREFERRED_CODEC%</Third_Preferred_Codec_13_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Use_Pref_Codec_Only_13_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_13_>
        <Codec_Negotiation_13_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_13_>

        <!-- LINE13 Dial Plan -->
        <Dial_Plan_13_ ua="na">%DIAL_PLAN%</Dial_Plan_13_>

        <!-- LINE13 ACD Settings 11.0.2 wodennis-->
        <Broadsoft_ACD_13_ ua="na">%BROADSOFT_ACD_ENABLE-
13%</Broadsoft_ACD_13_>
        <Enable_Broadsoft_Hoteling_13_
ua="na">%BROADSOFT_HOTELING_ENABLE-
13%</Enable_Broadsoft_Hoteling_13_>
        <Call_Information_Enable_13_
ua="na">Yes</Call_Information_Enable_13_>
        <Disposition_Code_Enable_13_
ua="na">Yes</Disposition_Code_Enable_13_>
        <Trace_Enable_13_ ua="na">Yes</Trace_Enable_13_>
        <Emergency_Escalation_Enable_13_
ua="na">Yes</Emergency_Escalation_Enable_13_>
        <Queue_Status_Notification_Enable_13_
ua="na">Yes</Queue_Status_Notification_Enable_13_>

        <!--
                GUI SCREEN: Ext14 Tab
        -->

        <!-- LINE14 SIP Settings -->
        <SIP_100REL_Enable_14_
ua="na">Yes</SIP_100REL_Enable_14_>
        <Auth_INVITE_14_
ua="na">%AUTH_INVITE%</Auth_INVITE_14_> <!-- Enable Yes if
Device Auth is desired -->
        <SIP_Remote-Party-ID_14_ ua="na">No</SIP_Remote-Party-
ID_14_>
        <P-Early-Media_Support_14_
ua="na">%P_EARLY_MEDIA_SUPPORT_14%</P-Early-Media_Support_14_>
        <SIP_SessionID_Support_14_
ua="na">%SIP_SESSIONID_SUPPORT_14%</SIP_SessionID_Support_14_>
        <Use_low-bandwidth_OPUS_14_
ua="na">%USE_LOW_BANDWIDTH_OPUS_14%</Use_low-
bandwidth_OPUS_14_>
        <MediaSec_Request_14_
ua="na">%MEDIASEC_REQUEST_14%</MediaSec_Request_14_>
        <MediaSec_Over_TLS_Only_14_
ua="na">%MEDIASEC_OVER_TLS_ONLY_14%</MediaSec_Over_TLS_Only_14_
_>

        <!-- LINE14 Call Feature Settings -->

```



```

<Voice Mail Subscribe Interval_14_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval_14_>

<!-- LINE14 Proxy and Registration -->
<Outbound_Proxy_14_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_14_>
<Alternate_Outbound_Proxy_14_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_14_>
<Use_DNS_SRV_14_ ua="na">Yes</Use_DNS_SRV_14_>
<DNS_SRV_Auto_Prefix_14_
ua="na">Yes</DNS_SRV_Auto_Prefix_14_>
<Proxy_Fallback_Intvl_14_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_14_>

<!-- LINE14 Audio Configuration -->
<Preferred_Codec_14_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_14_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
<Second_PREFERRED_Codec_14_
ua="na">%SECOND_PREFERRED_CODEC%</Second_PREFERRED_Codec_14_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
<Third_PREFERRED_Codec_14_
ua="na">%THIRD_PREFERRED_CODEC%</Third_PREFERRED_Codec_14_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
<Use_Pref_Codec_Only_14_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_14_>
<Codec_Negotiation_14_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_14_>

<!-- LINE14 Dial Plan -->
<Dial_Plan_14_ ua="na">%DIAL_PLAN%</Dial_Plan_14_>

<!-- LINE14 ACD Settings 11.0.2 wodennis-->
<Broadsoft_ACD_14_ ua="na">%BROADSOFT_ACD_ENABLE-14%</Broadsoft_ACD_14_>
<Enable_Broadsoft_Hoteling_14_
ua="na">%BROADSOFT_HOTELING_ENABLE-14%</Enable_Broadsoft_Hoteling_14_>
<Call_Information_Enable_14_
ua="na">Yes</Call_Information_Enable_14_>
<Disposition_Code_Enable_14_
ua="na">Yes</Disposition_Code_Enable_14_>
<Trace_Enable_14_ ua="na">Yes</Trace_Enable_14_>
<Emergency_Escalation_Enable_14_
ua="na">Yes</Emergency_Escalation_Enable_14_>
<Queue_Status_Notification_Enable_14_
ua="na">Yes</Queue_Status_Notification_Enable_14_>

<!--
GUI SCREEN: Ext15 Tab
-->

<!-- LINE15 SIP Settings -->
<SIP_100REL_Enable_15_
ua="na">Yes</SIP_100REL_Enable_15_>
<Auth_INVITE_15_
ua="na">%AUTH_INVITE%</Auth_INVITE_15_> <!-- Enable Yes if
Device Auth is desired -->

```

```

        <SIP_Remote-Party-ID_15_ ua="na">No</SIP_Remote-Party-
ID_15_>
        <P-Early-Media_Support_15_
ua="na">%P_EARLY_MEDIA_SUPPORT_15%</P-Early-Media_Support_15_>
        <SIP_SessionID_Support_15_
ua="na">%SIP_SESSIONID_SUPPORT_15%</SIP_SessionID_Support_15_>
        <Use_low-bandwidth_OPUS_15_
ua="na">%USE_LOW_BANDWIDTH_OPUS_15%</Use_low-
bandwidth_OPUS_15_>
        <MediaSec_Request_15_
ua="na">%MEDIASEC_REQUEST_15%</MediaSec_Request_15_>
        <MediaSec_Over_TLS_Only_15_
ua="na">%MEDIASEC_OVER_TLS_ONLY_15%</MediaSec_Over_TLS_Only_15_
_>

        <!-- LINE15 Call Feature Settings -->
        <Voice_Mail_Subscribe_Interval_15_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval
_15_>

        <!-- LINE15 Proxy and Registration -->
        <Outbound_Proxy_15_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_15_>
        <Alternate_Outbound_Proxy_15_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_15_>
        <Use_DNS_SRV_15_ ua="na">Yes</Use_DNS_SRV_15_>
        <DNS_SRV_Auto_Prefix_15_
ua="na">Yes</DNS_SRV_Auto_Prefix_15_>
        <Proxy_Fallback_Intvl_15_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_15_>

        <!-- LINE15 Audio Configuration -->
        <Preferred_Codec_15_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_15_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Second_PREFERRED_Codec_15_
ua="na">%SECOND_PREFERRED_CODEC%</Second Preferred Codec_15_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Third_PREFERRED_Codec_15_
ua="na">%THIRD_PREFERRED_CODEC%</Third Preferred Codec_15_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Use_Pref_Codec_Only_15_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_15_>
        <Codec_Negotiation_15_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_15_>

        <!-- LINE15 Dial Plan -->
        <Dial_Plan_15_ ua="na">%DIAL_PLAN%</Dial_Plan_15_>

        <!-- LINE15 ACD Settings 11.0.2 wodennis-->
        <Broadsoft_ACD_15_ ua="na">%BROADSOFT_ACD_ENABLE-
15%</Broadsoft_ACD_15_>
        <Enable_Broadsoft_Hoteling_15_
ua="na">%BROADSOFT_HOTELING_ENABLE-
15%</Enable_Broadsoft_Hoteling_15_>
        <Call_Information_Enable_15_
ua="na">Yes</Call_Information_Enable_15_>
        <Disposition_Code_Enable_15_
ua="na">Yes</Disposition_Code_Enable_15_>
        <Trace_Enable_15_ ua="na">Yes</Trace_Enable_15_>
        <Emergency_Escalation_Enable_15_
ua="na">Yes</Emergency_Escalation_Enable_15_>

```

```

        <Queue_Status_Notification_Enable_15_
ua="na">Yes</Queue_Status_Notification_Enable_15_>

        <!--
            GUI_SCREEN: Ext16 Tab
        -->

        <!-- LINE16 SIP Settings -->
        <SIP_100REL_Enable_16_
ua="na">Yes</SIP_100REL_Enable_16_>
        <Auth_INVITE_16_
ua="na">%AUTH_INVITE%</Auth_INVITE_16_> <!-- Enable Yes if
Device Auth is desired -->
        <SIP_Remote-Party-ID_16_ ua="na">No</SIP_Remote-Party-
ID_16_>
        <P-Early-Media_Support_16_
ua="na">%P_EARLY_MEDIA_SUPPORT_16%</P-Early-Media_Support_16_>
        <SIP_SessionID_Support_16_
ua="na">%SIP_SESSIONID_SUPPORT_16%</SIP_SessionID_Support_16_>
        <Use_low-bandwidth_OPUS_16_
ua="na">%USE_LOW_BANDWIDTH_OPUS_16%</Use_low-
bandwidth_OPUS_16_>
        <MediaSec_Request_16_
ua="na">%MEDIASEC_REQUEST_16%</MediaSec_Request_16_>
        <MediaSec_Over_TLS_Only_16_
ua="na">%MEDIASEC_OVER_TLS_ONLY_16%</MediaSec_Over_TLS_Only_16_
_>

        <!-- LINE1 Call Feature Settings -->
        <Voice_Mail_Subscribe_Interval_16_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval_
16_>

        <!-- LINE16 Proxy and Registration -->
        <Outbound_Proxy_16_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_16_>
        <Alternate_Outbound_Proxy_16_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_16_>
        <Use_DNS_SRV_16_ ua="na">Yes</Use_DNS_SRV_16_>
        <DNS_SRV_Auto_Prefix_16_
ua="na">Yes</DNS_SRV_Auto_Prefix_16_>
        <Proxy_Fallback_Intvl_16_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_16_>

        <!-- LINE16 Audio Configuration -->
        <Preferred_Codec_16_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_16_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Second_Preferred_Codec_16_
ua="na">%SECOND_PREFERRED_CODEC%</Second Preferred Codec_16_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Third_Preferred_Codec_16_
ua="na">%THIRD_PREFERRED_CODEC%</Third Preferred Codec_16_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Use_Pref_Codec_Only_16_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_16_>
        <Codec_Negotiation_16_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_16_>

        <!-- LINE16 Dial Plan -->
        <Dial_Plan_16_ ua="na">%DIAL_PLAN%</Dial_Plan_16_>

```

```

        <!-- LINE16 ACD Settings 11.0.2 wodennis-->
        <Broadsoft_ACD_16_ ua="na">%BROADSOFT_ACD_ENABLE-
16%</Broadsoft_ACD_16_>
        <Enable_Broadsoft_Hoteling_16_
ua="na">%BROADSOFT_HOTELING_ENABLE-
16%</Enable_Broadsoft_Hoteling_16_>
        <Call_Information_Enable_16_
ua="na">Yes</Call_Information_Enable_16_>
        <Disposition_Code_Enable_16_
ua="na">Yes</Disposition_Code_Enable_16_>
        <Trace_Enable_16_ ua="na">Yes</Trace_Enable_16_>
        <Emergency_Escalation_Enable_16_
ua="na">Yes</Emergency_Escalation_Enable_16_>
        <Queue_Status_Notification_Enable_16_
ua="na">Yes</Queue_Status_Notification_Enable_16_>

        <!--
        GUI SCREEN: Voice Tab - Att Console
        -->

        <!-- BLF List Feature Options -->
        <BLF_List_Feature_Options
ua="na">%BLF_LIST_FEATURE_OPTIONS%</BLF_List_Feature_Options>

        </flat-profile>
</device>

```

#### System File: CisoDev\_System.xml

**NOTE:** This is an example file and should be used for reference only.

```

<?xml version="1.0" encoding="UTF-8"?>
<device xsi:type="axl:XIPPhone"
xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance">
  <flat-profile>
    <!--
      GUI SCREEN: Voice Tab - System Tab
    -->

    <!-- DNS Settings-->
    <Primary_DNS ua="rw">%DNS_SERVER_1%</Primary_DNS>
    <Secondary_DNS ua="rw">%DNS_SERVER_2%</Secondary_DNS>
    <DNS_Server_Order
ua="na">%DNS_SERVER_ORDER%</DNS_Server_Order>
    <DNS_Caching_Enable
ua="na">%DNS_CACHE%</DNS_Caching_Enable>

    <!-- System Time Server -->
    <Primary_NTP_Server
ua="na">%SNTP_SERVER_1%</Primary_NTP_Server>
    <Secondary_NTP_Server
ua="na">%SNTP_SERVER_2%</Secondary_NTP_Server>

    <!-- Block NonProxy SIP -->
    <Block_Nonproxy_SIP
ua="na">%Block_Nonproxy_SIP%</Block_Nonproxy_SIP>

```

```

<!--
    GUI SCREEN: Voice Tab->SIP Tab
-->

<!-- SIP Parameters -->
<RFC_2543_Call_Hold
ua="na">%RFC_2543_HOLD%/RFC_2543_Call_Hold>
<Display_Diversion_Info
ua="na">%DISPLAY_DIVERSION_INFO%/Display_Diversion_Info>
<!-- RTP Parameters -->
<Call_Statistics
ua="na">%CALL_STATISTICS%/Call_Statistics>

<!-- Response Status Code Handling -->
<Try_Backup_RSC
ua="na">%TRY_BACKUP_RSC%/Try_Backup_RSC>
<Retry_Reg_RSC ua="na">%RETRY_REG_RSC%/Retry_Reg_RSC>

<!-- Supplementary Services -->
<Secure_Call_Serv
ua="na">%SECURE_CALL_SERVICE%/Secure_Call_Serv>

<!-- BroadWork Advance Call Control -->
<Talk_Package ua="na">Yes</Talk_Package>
<Hold_Package ua="na">Yes</Hold_Package>
<Conference_Package ua="na">Yes</Conference_Package>

<!-- NAT Support Parameters -->
<ICE_STUN_Enable
ua="na">%ICE_STUN_ENABLED%/ICE_STUN_Enable>

<!-- Extension Mobility -->
<EM_Enable ua="na">%EM_ENABLED%/EM_Enable>

<!--
*****
-->
<!-- Webex On-boarding, Directory and CallLog
-->
<!--
*****
-->
<!-- Optional: Webex Features Settings -->
<Webex_Onboard_Enable
ua="na">%WEBEX_ONBOARD_ENABLE%/Webex_Onboard_Enable>
<Webex_Directory_Enable
ua="na">%WEBEX_DIRECTORY_ENABLE%/Webex_Directory_Enable>
<Webex_Directory_Name
ua="na">%WEBEX_DIRECTORY_NAME%/Webex_Directory_Name>

<!-- XSI Single SignOn -->
<Profile_Authentication_Type
ua="na">%PROFILE_AUTH_TYPE%/Profile_Authentication_Type>

<!--
*****
-->
<!-- Broadsoft XSI Directory and CallLog
-->
<!--
*****
-->

```

```

        <!-- Optional: Broadsoft Directory Settings -->
        <Directory_Enable ua="na">Yes</Directory_Enable>
        <XSI_Host_Server
ua="na">%XSI_SERVER%</XSI_Host_Server>
        <Browse_Mode_Enable
ua="na">%BROWSE_MODE_ENABLE%</Browse_Mode_Enable>
        <Max_Display_Records
ua="na">%MAX_DISPLAY_RECORDS%</Max_Display_Records>
        <XsiDir_Individual_Mode_Enable
ua="na">%XSIDIR_INDIVIDUAL_MODE_ENABLE%</XsiDir_Individual_Mod
e_Enable>
        <XsiDir_Personal_Enable
ua="na">%XSIDIR_PERSONAL_ENABLE%</XsiDir_Personal_Enable>
        <XsiDir_Group_Enable
ua="na">%XSIDIR_GROUP_ENABLE%</XsiDir_Group_Enable>
        <XsiDir_Enterprise_Enable
ua="na">%XSIDIR_ENTERPRISE_ENABLE%</XsiDir_Enterprise_Enable>
        <XsiDir_GroupCommon_Enable
ua="na">%XSIDIR_GROUPCOMMON_ENABLE%</XsiDir_GroupCommon_Enable
>
        <XsiDir_EnterpriseCommon_Enable
ua="na">%XSIDIR_ENTERPRISECOMMON_ENABLE%</XsiDir_EnterpriseCom
mon_Enable>
        <XsiDir_Personal_Name
ua="na">%XSIDIR_ENTERPRISE_NANME%</XsiDir_Personal_Name>
        <XsiDir_Group_Name
ua="na">%XSIDIR_GROUP_NAME%</XsiDir_Group_Name>
        <XsiDir_Enterprise_Name
ua="na">%XSIDIR_ENTERPRISE_NANME%</XsiDir_Enterprise_Name>
        <XsiDir_GroupCommon_Name
ua="na">%XSIDIR_GROUPCOMMON_NAME%</XsiDir_GroupCommon_Name>
        <XsiDir_EnterpriseCommon_Name
ua="na">%XSIDIR_ENTERPRISECOMMON_NAME%</XsiDir_EnterpriseCommo
n_Name>
        <Directory_Name
ua="na">%BROADSOFT_DIR_NAME%</Directory_Name>

        <CallLog_Enable ua="na">Yes</CallLog_Enable>
        <XSI_Authentication_Type ua="na">Login
Credentials</XSI_Authentication_Type>
        <Directory_Type
ua="na">%DIRECTORY_TYPE%</Directory_Type>

        <!-- Broadsoft XMPP -->
        <XMPP_Enable ua="na">Yes</XMPP_Enable>

        <Call_Recording_Serv
ua="na">%CISCO_CALL_RECORDING_ENABLED%</Call_Recording_Serv>
        <!--
*****
-->

        <!--
        GUI SCREEN: Voice Tab->Provisioning Tab
        -->
        <Peer_Firmware_Sharing
ua="na">%Peer_Firmware_Sharing%</Peer_Firmware_Sharing>
        <Peer_Firmware_Sharing_Log_Server ua="na"/>

        <!-- Upload Configuration Options -->
        <Report_Rule
ua="na">%ACCESS_PROTOCOL%BWDEVICEACCESSFQDN%:BWDEVICEACCESSP

```

```

ORT%/%BWDMSCONTEXT%/%BWDEVICEACCESSURI%/%CONF_UPLOAD_NAME%/<Report_Rule>
    <HTTP_Report_Method
ua="na">%HTTP_REPORT_METHOD%/<HTTP_Report_Method>
    <Report_To_Server
ua="na">%REPORT_TO_SERVER%/<Report_To_Server>
    <Periodic_Upload_To_Server
ua="na">%PERIODIC_UPLOAD_TIMER%/<Periodic_Upload_To_Server>
    <Upload_Delay_On_Local_Change
ua="na">%UPLOAD_DELAY_ON_LOCAL_CHANGE%/<Upload_Delay_On_Local_Change>

    <!-- Problem Report Tool -->
    <PRT_Upload_Rule
ua="na">%ACCESS_PROTOCOL%/%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEACCESSURI%/<PRT_Upload_Rule>
    <PRT_Upload_Method
ua="na">%PRT_UPLOAD_METHOD%/<PRT_Upload_Method>
    <PRT_Name ua="na">%PRT_NAME%/<PRT_Name>

    <!--
        GUI SCREEN: Voice Tab->Regional Tab
    -->

    <!-- Vertical Service Activation Codes -->
    <Block_CID_Act_Code
ua="na">%BLOCK_CID_ACTIVATE%/<Block_CID_Act_Code>
    <Block_CID_Deact_Code
ua="na">%BLOCK_CID_DEACTIVATE%/<Block_CID_Deact_Code>
    <Block_ANC_Act_Code
ua="na">%BLOCK_ANC_ACTIVATE%/<Block_ANC_Act_Code>
    <Block_ANC_Deact_Code
ua="na">%BLOCK_ANC_DEACTIVATE%/<Block_ANC_Deact_Code>

    <!--
        GUI SCREEN: Voice Tab ->Phone Tab
    -->
    <!-- XSI Call Log -->
    <CallLog_Enable
ua="na">%CallLog_Enable%/<CallLog_Enable>
    <CallLog_Associated_Line
ua="na">%CallLog_Associated_Line%/<CallLog_Associated_Line>
    <Display_Recents_From
ua="na">%Display_Recents_From%/<Display_Recents_From>

    <!-- Help Desk -->
    <Help_Desk_Enable
ua="na">%HELP_DESK_ENABLE%/<Help_Desk_Enable>
    <Custom_Menu_Name
ua="na">%HELP_DESK_CUSTOM_MENU_NAME%/<Custom_Menu_Name>
    <Quick_Number_0_Number
ua="na">%HELP_DESK_QUICK_NUMBER_0%/<Quick_Number_0_Number>
    <Quick_Number_0_Name
ua="na">%HELP_DESK_NAME_0%/<Quick_Number_0_Name>
    <Quick_Number_1_Number
ua="na">%HELP_DESK_QUICK_NUMBER_1%/<Quick_Number_1_Number>
    <Quick_Number_1_Name
ua="na">%HELP_DESK_NAME_1%/<Quick_Number_1_Name>
    <Quick_Number_2_Number
ua="na">%HELP_DESK_QUICK_NUMBER_2%/<Quick_Number_2_Number>
    <Quick_Number_2_Name
ua="na">%HELP_DESK_NAME_2%/<Quick_Number_2_Name>

```

```

        <Quick_Number_3_Number
ua="na">%HELP_DESK_QUICK_NUMBER_3%/Quick_Number_3_Number>
        <Quick_Number_3_Name
ua="na">%HELP_DESK_NAME_3%/Quick_Number_3_Name>
        <Quick_Number_4_Number
ua="na">%HELP_DESK_QUICK_NUMBER_4%/Quick_Number_4_Number>
        <Quick_Number_4_Name
ua="na">%HELP_DESK_NAME_4%/Quick_Number_4_Name>
        <Quick_Number_5_Number
ua="na">%HELP_DESK_QUICK_NUMBER_5%/Quick_Number_5_Number>
        <Quick_Number_5_Name
ua="na">%HELP_DESK_NAME_5%/Quick_Number_5_Name>
        <Quick_Number_6_Number
ua="na">%HELP_DESK_QUICK_NUMBER_6%/Quick_Number_6_Number>
        <Quick_Number_6_Name
ua="na">%HELP_DESK_NAME_6%/Quick_Number_6_Name>
        <Quick_Number_7_Number
ua="na">%HELP_DESK_QUICK_NUMBER_7%/Quick_Number_7_Number>
        <Quick_Number_7_Name
ua="na">%HELP_DESK_NAME_7%/Quick_Number_7_Name>
        <Quick_Number_8_Number
ua="na">%HELP_DESK_QUICK_NUMBER_8%/Quick_Number_8_Number>
        <Quick_Number_8_Name
ua="na">%HELP_DESK_NAME_8%/Quick_Number_8_Name>
        <Quick_Number_9_Number
ua="na">%HELP_DESK_QUICK_NUMBER_9%/Quick_Number_9_Number>
        <Quick_Number_9_Name
ua="na">%HELP_DESK_NAME_9%/Quick_Number_9_Name>

        <!-- Action Button -->
        <Action_Button_Function
ua="na">%ACTION_BUTTON_FUNCTION%/Action_Button_Function>
        <!-- available options: Emergency Call|Off -->
        <Action_Button_Service_Destination
ua="na">%ACTION_BUTTON_SERVICE_DEST%/Action_Button_Service_De
stination>
        <Service_Trigger
ua="na">%ACTION_BUTTON_SERVICE_TRIGGER%/Service_Trigger>
        <!-- available options: Single Press|Long Press|Press
3 times -->
        <Dial_Out_Delay
ua="na">%ACTION_BUTTON_DIAL_DELAY%/Dial_Out_Delay>
        <Silent_Emergency_Call
ua="na">%ACTION_BUTTON_SILENT_EMERGENCY_CALL%/Silent_Emergenc
y_Call>
        <!-- available options: Enabled|Disabled -->

        <!-- Office Hours -->
        <Office_Hours_Enabled
ua="na">%OFFICE_HOURS_ENABLED%/Office_Hours_Enabled>
        <!-- available options: False|True -->
        <Work_Days ua="na">%WORK_DAYS%/Work_Days>
        <!-- available options:
Saturday|Sunday|Monday|Tuesday|Wednesday|Thursday|Friday -->
        <Working_Hours_Start
ua="na">%WORKING_HOURS_START%/Working_Hours_Start>
        <Working_Hours_End
ua="na">%WORKING_HOURS_END%/Working_Hours_End>

        <!-- Outside Office Hours Deep Sleep -->
        <Deep_Sleep_Enabled
ua="na">%DEEP_SLEEP_ENABLED%/Deep_Sleep_Enabled>

```



```

        <!-- available options: False|Non-work Day Only|All
Days -->
        <Enable_Audible_Alert
ua="na">%ENABLE_AUDIBLE_ALERT_WHEN_DEEP_SLEEP%</Enable_Audible
_Alert>
        <!-- available options: False|True -->
        <Phone_On_Time_Before_Working_Hour_Start_mins_
ua="na">%PHONE_ON_TIME_BEFORE_WORKING_HOURS%</Phone_On_Time_Be
fore_Working_Hour_Start_mins_>
        <Phone_Off_Time_After_Working_Hour_End_mins_
ua="na">%PHONE_OFF_TIME_AFTER_WORKING_HOURS%</Phone_Off_Time_A
fter_Working_Hour_End_mins_>
        <Idle_Timeout_mins_
ua="na">%IDLE_TIMEOUT_FOR_DEEP_SLEEP_OUTSIDE_OFFICE_HOURS%</Id
le_Timeout_mins_>

        <!-- Outside Office Hours Display Off -->
        <Display_Off_Idle_Timeout_mins_
ua="na">%IDLE_TIMEOUT_FOR_DISPLAY_OFF_OUTSIDE_OFFICE_HOURS%</D
isplay_Off_Idle_Timeout_mins_>

        <!-- Multiple Paging Group Parameters -->

<Group_1_Paging_Script>%PAGING_GRP_1%</Group_1_Paging_Script>
<Group_2_Paging_Script></Group_2_Paging_Script>
<Group_3_Paging_Script></Group_3_Paging_Script>
<Group_4_Paging_Script></Group_4_Paging_Script>
<Group_5_Paging_Script></Group_5_Paging_Script>
<Group_6_Paging_Script></Group_6_Paging_Script>
<Group_7_Paging_Script></Group_7_Paging_Script>
<Group_8_Paging_Script></Group_8_Paging_Script>
<Group_9_Paging_Script></Group_9_Paging_Script>
<Group_10_Paging_Script></Group_10_Paging_Script>

<!--
GUI SCREEN: Voice Tab ->User Tab
-->

<!-- Screen Saver -->
<Text_Logo ua="na">%TEXT_LOGO%</Text_Logo>
<Boot_Display ua="rw">%BOOT_DISPLAY%</Boot_Display>
<!-- Options: Default/Download Picture/Logo/Text -->
<Phone_Background
ua="rw">%PHONE_BACKGROUND%</Phone_Background> <!-- Options:
Default/Download Picture/Logo-->
<Screen_Saver_Enable
ua="rw">%SCREEN_SAVER_ENABLED%</Screen_Saver_Enable>
<Screen_Saver_Wait
ua="rw">%SCREEN_SAVER_WAIT%</Screen_Saver_Wait>
<Screen_Saver_Refresh_Period
ua="rw">%SCREEN_SAVER_REFRESH_PERIOD%</Screen_Saver_Refresh_Pe
riod>
<Screen_Saver_Type
ua="rw">%SCREEN_SAVER_TYPE%</Screen_Saver_Type> <!-- Options:
Clock/Download Picture/Logo -->

<!--
GUI SCREEN: Ext1 Tab
-->

<!-- LINE1 SIP Settings -->

```

```

        <SIP_100REL_Enable_1_
ua="na">Yes</SIP_100REL_Enable_1_>
        <Precondition_Support_1_
ua="na">%PRECONDITION_SUPPORT_1%</Precondition_Support_1_>
        <Auth_INVITE_1_ ua="na">%AUTH_INVITE%</Auth_INVITE_1_>
<!-- Enable Yes if Device Auth is desired -->
        <SIP_Remote-Party-ID_1_ ua="na">No</SIP_Remote-Party-
ID_1_>
        <Privacy_Header_1_
ua="na">%Privacy_Header_1_%</Privacy_Header_1_>
        <P-Early-Media_Support_1_
ua="na">%P_EARLY_MEDIA_SUPPORT_1%</P-Early-Media_Support_1_>
        <SIP_SessionID_Support_1_
ua="na">%SIP_SESSIONID_SUPPORT_1%</SIP_SessionID_Support_1_>
        <Use_low-bandwidth_OPUS_1_
ua="na">%USE_LOW_BANDWIDTH_OPUS_1%</Use_low-bandwidth_OPUS_1_>
        <MediaSec_Request_1_
ua="na">%MEDIASEC_REQUEST_1%</MediaSec_Request_1_>
        <MediaSec_Over_TLS_Only_1_
ua="na">%MEDIASEC_OVER_TLS_ONLY_1%</MediaSec_Over_TLS_Only_1_>

        <!-- LINE1 Call Feature Settings -->
        <Voice_Mail_Subscribe_Interval_1_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval
_1_>
        <Log_Missed_Calls_1_
ua="na">%LOG_MISSED_CALLS_1%</Log_Missed_Calls_1_>

        <!-- LINE1 Proxy and Registration -->
        <Outbound_Proxy_1_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_1_>
        <Alternate_Outbound_Proxy_1_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_1_>
        <Use_DNS_SRV_1_ ua="na">Yes</Use_DNS_SRV_1_>
        <DNS_SRV_Auto_Prefix_1_
ua="na">Yes</DNS_SRV_Auto_Prefix_1_>
        <Proxy_Fallback_Intvl_1_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_1_>

        <!-- LINE1 Audio Configuration -->
        <Preferred_Codec_1_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_1_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Second_PREFERRED_Codec_1_
ua="na">%SECOND_PREFERRED_CODEC%</Second_PREFERRED_Codec_1_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Third_PREFERRED_Codec_1_
ua="na">%THIRD_PREFERRED_CODEC%</Third_PREFERRED_Codec_1_> <!--
options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Use_Pref_Codec_Only_1_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_1_>
        <Codec_Negotiation_1_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_1_>

        <!-- LINE1 Dial Plan -->
        <Dial_Plan_1_ ua="na">%DIAL_PLAN%</Dial_Plan_1_>

        <!-- LINE1 ACD Settings -->
        <Broadsoft_ACD_1_ ua="na">%BROADSOFT_ACD_ENABLE-
1%</Broadsoft_ACD_1_>
        <ACD_Status_1_ ua="na">%ACD_STATUS_1%</ACD_Status_1_>

```

```

        <Auto_Available_After_Sign-In_1_
ua="na">%AUTO_AVAILABLE_AFTER_SIGN-
IN_1%</Auto_Available_After_Sign-In_1_>
        <Enable_Broadsoft_Hoteling_1_
ua="na">%BROADSOFT_HOTELING_ENABLE-
1%</Enable_Broadsoft_Hoteling_1_>
        <Call_Information_Enable_1_
ua="na">Yes</Call_Information_Enable_1_>
        <Disposition_Code_Enable_1_
ua="na">Yes</Disposition_Code_Enable_1_>
        <Trace_Enable_1_ ua="na">Yes</Trace_Enable_1_>
        <Emergency_Escalation_Enable_1_
ua="na">Yes</Emergency_Escalation_Enable_1_>
        <Queue_Status_Notification_Enable_1_
ua="na">Yes</Queue_Status_Notification_Enable_1_>

        <!-- XSI Line Service -->
        <XSI_Host_Server_1_
ua="na">%XSI_Host_Server_1%</XSI_Host_Server_1_>
        <XSI_Authentication_Type_1_
ua="na">%XSI_Authentication_Type_1_%</XSI_Authentication_Type_
1_>
        <Anywhere_Enable_1_
ua="na">%Anywhere_Enable_1_%</Anywhere_Enable_1_>
        <Block_CID_Enable_1_
ua="na">%Block_CID_Enable_1_%</Block_CID_Enable_1_>
        <DND_Enable_1_
ua="na">%XSI_DND_ENABLE_1%</DND_Enable_1_>
        <CFWD_Enable_1_
ua="na">%XSI_CFWD_ENABLE_1%</CFWD_Enable_1_>
        <Block_Anonymous_Call_Enable_1_
ua="na">%Block_Anonymous_Call_Enable_1%</Block_Anonymous_Call_
Enable_1_>
        <Call_Waiting_Enable_1_
ua="na">%Call_Waiting_Enable_1%</Call_Waiting_Enable_1_>

        <!--
        GUI SCREEN: Ext2 Tab
        -->

        <!-- LINE2 SIP Settings -->
        <SIP_100REL_Enable_2_
ua="na">Yes</SIP_100REL_Enable_2_>
        <Precondition_Support_2_
ua="na">%PRECONDITION_SUPPORT_2%</Precondition_Support_2_>
        <Auth_INVITE_2_ ua="na">%AUTH_INVITE%</Auth_INVITE_2_>
        <!-- Enable Yes if Device Auth is desired -->
        <SIP_Remote-Party-ID_2_ ua="na">No</SIP_Remote-Party-
ID_2_>
        <P-Early-Media_Support_2_
ua="na">%P_EARLY_MEDIA_SUPPORT_2%</P-Early-Media_Support_2_>
        <SIP_SessionID_Support_2_
ua="na">%SIP_SESSIONID_SUPPORT_2%</SIP_SessionID_Support_2_>
        <Use_low-bandwidth_OPUS_2_
ua="na">%USE_LOW_BANDWIDTH_OPUS_2%</Use_low-bandwidth_OPUS_2_>
        <MediaSec_Request_2_
ua="na">%MEDIASEC_REQUEST_2%</MediaSec_Request_2_>
        <MediaSec_Over_TLS_Only_2_
ua="na">%MEDIASEC_OVER_TLS_ONLY_2%</MediaSec_Over_TLS_Only_2_>

        <!-- LINE2 Call Feature Settings -->

```

```

    <Voice_Mail_Subscribe_Interval_2_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval
_2_>
    <Log_Missed_Calls_2_
ua="na">%LOG_MISSED_CALLS_2%</Log_Missed_Calls_2_>

    <!-- LINE2 Proxy and Registration -->
    <Outbound_Proxy_2_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_2_>
    <Alternate_Outbound_Proxy_2_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_2_>
    <Use_DNS_SRV_2_ ua="na">Yes</Use_DNS_SRV_2_>
    <DNS_SRV_Auto_Prefix_2_
ua="na">Yes</DNS_SRV_Auto_Prefix_2_>
    <Proxy_Fallback_Intvl_2_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_2_>

    <!-- LINE2 Audio Configuration -->
    <Preferred_Codec_2_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_2_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
    <Second_PREFERRED_Codec_2_
ua="na">%SECOND_PREFERRED_CODEC%</Second_PREFERRED_Codec_2_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
    <Third_PREFERRED_Codec_2_
ua="na">%THIRD_PREFERRED_CODEC%</Third_PREFERRED_Codec_2_> <!--
- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
    <Use_Pref_Codec_Only_2_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_2_>
    <Codec_Negotiation_2_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_2_>

    <!-- LINE2 Dial Plan -->
    <Dial_Plan_2_ ua="na">%DIAL_PLAN%</Dial_Plan_2_>

    <!-- LINE2 ACD Settings -->
    <Broadsoft_ACD_2_ ua="na">%BROADSOFT_ACD_ENABLE-
2%</Broadsoft_ACD_2_>
    <ACD_Status_2_ ua="na">%ACD_STATUS_2%</ACD_Status_2_>
    <Auto_Available_After_Sign-In_2_
ua="na">%AUTO_AVAILABLE_AFTER_SIGN-
IN_2%</Auto_Available_After_Sign-In_2_>
    <Enable_Broadsoft_Hoteling_2_
ua="na">%BROADSOFT HOTELING_ENABLE-
2%</Enable_Broadsoft_Hoteling_2_>
    <Call_Information_Enable_2_
ua="na">Yes</Call_Information_Enable_2_>
    <Disposition_Code_Enable_2_
ua="na">Yes</Disposition_Code_Enable_2_>
    <Trace_Enable_2_ ua="na">Yes</Trace_Enable_2_>
    <Emergency_Escalation_Enable_2_
ua="na">Yes</Emergency_Escalation_Enable_2_>
    <Queue_Status_Notification_Enable_2_
ua="na">Yes</Queue_Status_Notification_Enable_2_>

    <!--
    GUI SCREEN: Ext3 Tab
    -->

    <!-- LINE3 SIP Settings -->
    <SIP_100REL_Enable_3_
ua="na">Yes</SIP_100REL_Enable_3_>

```

```

        <Precondition_Support_3_
ua="na">%PRECONDITION_SUPPORT_3%</Precondition_Support_3_>
        <Auth_INVITE_3_ ua="na">%AUTH_INVITE%</Auth_INVITE_3_>
<!-- Enable Yes if Device Auth is desired -->
        <SIP_Remote-Party-ID_3_ ua="na">No</SIP_Remote-Party-
ID_3_>
        <P-Early-Media_Support_3_
ua="na">%P_EARLY_MEDIA_SUPPORT_3%</P-Early-Media_Support_3_>
        <SIP_SessionID_Support_3_
ua="na">%SIP_SESSIONID_SUPPORT_3%</SIP_SessionID_Support_3_>
        <Use_low-bandwidth_OPUS_3_
ua="na">%USE_LOW_BANDWIDTH_OPUS_3%</Use_low-bandwidth_OPUS_3_>
        <MediaSec_Request_3_
ua="na">%MEDIASEC_REQUEST_3%</MediaSec_Request_3_>
        <MediaSec_Over_TLS_Only_3_
ua="na">%MEDIASEC_OVER_TLS_ONLY_3%</MediaSec_Over_TLS_Only_3_>

        <!-- LINE3 Call Feature Settings -->
        <Voice_Mail_Subscribe_Interval_3_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval
_3_>
        <Log_Missed_Calls_3_
ua="na">%LOG_MISSED_CALLS_3%</Log_Missed_Calls_3_>

        <!-- LINE3 Proxy and Registration -->
        <Outbound_Proxy_3_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_3_>
        <Alternate_Outbound_Proxy_3_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_3_>
        <Use_DNS_SRV_3_ ua="na">Yes</Use_DNS_SRV_3_>
        <DNS_SRV_Auto_Prefix_3_
ua="na">Yes</DNS_SRV_Auto_Prefix_3_>
        <Proxy_Fallback_Intvl_3_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_3_>

        <!-- LINE3 Audio Configuration -->
        <Preferred_Codec_3_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_3_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Second_PREFERRED_Codec_3_
ua="na">%SECOND_PREFERRED_CODEC%</Second Preferred Codec_3_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Third_PREFERRED_Codec_3_
ua="na">%THIRD_PREFERRED_CODEC%</Third Preferred Codec_3_> <!--
- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Use_Pref_Codec_Only_3_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_3_>
        <Codec_Negotiation_3_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_3_>

        <!-- LINE3 Dial Plan -->
        <Dial_Plan_3_ ua="na">%DIAL_PLAN%</Dial_Plan_3_>

        <!-- LINE3 ACD Settings -->
        <Broadsoft_ACD_3_ ua="na">%BROADSOFT_ACD_ENABLE-
3%</Broadsoft_ACD_3_>
        <ACD_Status_3_ ua="na">%ACD_STATUS_3%</ACD_Status_3_>
        <Auto_Available_After_Sign-In_3_
ua="na">%AUTO_AVAILABLE_AFTER_SIGN-
IN 3%</Auto Available After Sign-In 3_>

```

```

        <Enable_Broadsoft_Hoteling_3_
ua="na">%BROADSOFT_HOTELING_ENABLE-
3%/Enable_Broadsoft_Hoteling_3_>
        <Call_Information_Enable_3_
ua="na">Yes</Call_Information_Enable_3_>
        <Disposition_Code_Enable_3_
ua="na">Yes</Disposition_Code_Enable_3_>
        <Trace_Enable_3_ ua="na">Yes</Trace_Enable_3_>
        <Emergency_Escalation_Enable_3_
ua="na">Yes</Emergency_Escalation_Enable_3_>
        <Queue_Status_Notification_Enable_3_
ua="na">Yes</Queue_Status_Notification_Enable_3_>

        <!--
        GUI SCREEN: Ext4 Tab
        -->

        <!-- LINE4 SIP Settings -->
        <SIP_100REL_Enable_4_
ua="na">Yes</SIP_100REL_Enable_4_>
        <Precondition_Support_4_
ua="na">%PRECONDITION_SUPPORT_4%/Precondition_Support_4_>
        <Auth_INVITE_4_ ua="na">%AUTH_INVITE%/Auth_INVITE_4_>
<!-- Enable Yes if Device Auth is desired -->
        <SIP_Remote-Party-ID_4_ ua="na">No</SIP_Remote-Party-
ID_4_>
        <P-Early-Media_Support_4_
ua="na">%P_EARLY_MEDIA_SUPPORT_4%/P-Early-Media_Support_4_>
        <SIP_SessionID_Support_4_
ua="na">%SIP_SESSIONID_SUPPORT_4%/SIP_SessionID_Support_4_>
        <Use_low-bandwidth_OPUS_4_
ua="na">%USE_LOW_BANDWIDTH_OPUS_4%/Use_low-bandwidth_OPUS_4_>
        <MediaSec_Request_4_
ua="na">%MEDIASEC_REQUEST_4%/MediaSec_Request_4_>
        <MediaSec_Over_TLS_Only_4_
ua="na">%MEDIASEC_OVER_TLS_ONLY_4%/MediaSec_Over_TLS_Only_4_>

        <!-- LINE4 Call Feature Settings -->
        <Voice_Mail_Subscribe_Interval_4_
ua="na">%VM_SUBSCRIBE_INTERVAL%/Voice_Mail_Subscribe_Interval
_4_>
        <Log_Missed_Calls_4_
ua="na">%LOG_MISSED_CALLS_4%/Log_Missed_Calls_4_>

        <!-- LINE4 Proxy and Registration -->
        <Outbound_Proxy_4_
ua="na">%SBC_ADDRESS_1%/Outbound_Proxy_4_>
        <Alternate_Outbound_Proxy_4_
ua="na">%SBC_ADDRESS_2%/Alternate_Outbound_Proxy_4_>
        <Use_DNS_SRV_4_ ua="na">Yes</Use_DNS_SRV_4_>
        <DNS_SRV_Auto_Prefix_4_
ua="na">Yes</DNS_SRV_Auto_Prefix_4_>
        <Proxy_Fallback_Intvl_4_
ua="na">%FAILBACK_INTVL%/Proxy_Fallback_Intvl_4_>

        <!-- LINE4 Audio Configuration -->
        <Preferred_Codec_4_
ua="na">%PREFERRED_CODEC%/Preferred_Codec_4_> <!-- options:
G711u/G711a/G729a/G729ab/G722/G722.2/iLBC -->
        <Second_PREFERRED_Codec_4_
ua="na">%SECOND_PREFERRED_CODEC%/Second Preferred Codec_4_>
<!-- options: G711u/G711a/G729a/G729ab/G722/G722.2/iLBC -->

```

```

<Third_Preferred_Codec_4_
ua="na">%THIRD_PREFERRED_CODEC%</Third_Preferred_Codec_4_> <!--
- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
  <Use_Pref_Codec_Only_4_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_4_>
  <Codec_Negotiation_4_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_4_>

  <!-- LINE4 Dial Plan -->
  <Dial_Plan_4_ ua="na">%DIAL_PLAN%</Dial_Plan_4_>

  <!-- LINE4 ACD Settings -->
  <Broadsoft_ACD_4_ ua="na">%BROADSOFT_ACD_ENABLE-
4%</Broadsoft_ACD_4_>
    <ACD_Status_4_ ua="na">%ACD_STATUS_4%</ACD_Status_4_>
    <Auto_Available_After_Sign-In_4_
ua="na">%AUTO_AVAILABLE_AFTER_SIGN-
IN_4%</Auto_Available_After_Sign-In_4_>
    <Enable_Broadsoft_Hoteling_4_
ua="na">%BROADSOFT_HOTELING_ENABLE-
4%</Enable_Broadsoft_Hoteling_4_>
    <Call_Information_Enable_4_
ua="na">Yes</Call_Information_Enable_4_>
    <Disposition_Code_Enable_4_
ua="na">Yes</Disposition_Code_Enable_4_>
    <Trace_Enable_4_ ua="na">Yes</Trace_Enable_4_>
    <Emergency_Escalation_Enable_4_
ua="na">Yes</Emergency_Escalation_Enable_4_>
    <Queue_Status_Notification_Enable_4_
ua="na">Yes</Queue_Status_Notification_Enable_4_>

  <!--
    GUI SCREEN: Ext5 Tab
  -->

  <!-- LINE5 SIP Settings -->
  <SIP_100REL_Enable_5_
ua="na">Yes</SIP_100REL_Enable_5_>
  <Precondition_Support_5_
ua="na">%PRECONDITION_SUPPORT_5%</Precondition_Support_5_>
  <Auth_INVITE_5_ ua="na">%AUTH_INVITE%</Auth_INVITE_5_>
  <!-- Enable Yes if Device Auth is desired -->
  <SIP_Remote-Party-ID_5_ ua="na">No</SIP_Remote-Party-
ID_5_>
  <P-Early-Media_Support_5_
ua="na">%P_EARLY_MEDIA_SUPPORT_5%</P-Early-Media_Support_5_>
  <SIP_SessionID_Support_5_
ua="na">%SIP_SESSIONID_SUPPORT_5%</SIP_SessionID_Support_5_>
  <Use_low-bandwidth_OPUS_5_
ua="na">%USE_LOW_BANDWIDTH_OPUS_5%</Use_low-bandwidth_OPUS_5_>
  <MediaSec_Request_5_
ua="na">%MEDIASEC_REQUEST_5%</MediaSec_Request_5_>
  <MediaSec_Over_TLS_Only_5_
ua="na">%MEDIASEC_OVER_TLS_ONLY_5%</MediaSec_Over_TLS_Only_5_>

  <!-- LINE5 Call Feature Settings -->
  <Voice_Mail_Subscribe_Interval_5_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval
_5_>
  <Log_Missed_Calls_5_
ua="na">%LOG_MISSED_CALLS_5%</Log_Missed_Calls_5_>

```

```

<!-- LINE5 Proxy and Registration -->
<Outbound_Proxy_5_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_5_>
<Alternate_Outbound_Proxy_5_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_5_>
<Use_DNS_SRV_5_ ua="na">Yes</Use_DNS_SRV_5_>
<DNS_SRV_Auto_Prefix_5_
ua="na">Yes</DNS_SRV_Auto_Prefix_5_>
<Proxy_Fallback_Intvl_5_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_5_>

<!-- LINE5 Audio Configuration -->
<Preferred_Codec_5_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_5_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
<Second_PREFERRED_Codec_5_
ua="na">%SECOND_PREFERRED_CODEC%</Second_PREFERRED_Codec_5_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
<Third_PREFERRED_Codec_5_
ua="na">%THIRD_PREFERRED_CODEC%</Third_PREFERRED_Codec_5_> <!--
- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
<Use_Pref_Codec_Only_5_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_5_>
<Codec_Negotiation_5_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_5_>

<!-- LINE5 Dial Plan -->
<Dial_Plan_5_ ua="na">%DIAL_PLAN%</Dial_Plan_5_>

<!-- LINE5 ACD Settings -->
<Broadsoft_ACD_5_ ua="na">%BROADSOFT_ACD_ENABLE-
5%</Broadsoft_ACD_5_>
<ACD_Status_5_ ua="na">%ACD_STATUS_5%</ACD_Status_5_>
<Auto_Available_After_Sign-In_5_
ua="na">%AUTO_AVAILABLE_AFTER_SIGN-
IN_5%</Auto_Available_After_Sign-In_5_>
<Enable_Broadsoft_Hoteling_5_
ua="na">%BROADSOFT_HOTELING_ENABLE-
5%</Enable_Broadsoft_Hoteling_5_>
<Call_Information_Enable_5_
ua="na">Yes</Call_Information_Enable_5_>
<Disposition_Code_Enable_5_
ua="na">Yes</Disposition_Code_Enable_5_>
<Trace_Enable_5_ ua="na">Yes</Trace_Enable_5_>
<Emergency_Escalation_Enable_5_
ua="na">Yes</Emergency_Escalation_Enable_5_>
<Queue_Status_Notification_Enable_5_
ua="na">Yes</Queue_Status_Notification_Enable_5_>

<!--
GUI SCREEN: Ext6 Tab
-->

<!-- LINE6 SIP Settings -->
<SIP_100REL_Enable_6_
ua="na">Yes</SIP_100REL_Enable_6_>
<Precondition_Support_6_
ua="na">%PRECONDITION_SUPPORT_6%</Precondition_Support_6_>
<Auth_INVITE_6_ ua="na">%AUTH_INVITE%</Auth_INVITE_6_>
<!-- Enable Yes if Device Auth is desired -->
<SIP_Remote-Party-ID_6_ ua="na">No</SIP_Remote-Party-
ID_6_>

```



```

        <P-Early-Media_Support_6_
ua="na">%P_EARLY_MEDIA_SUPPORT_6%</P-Early-Media_Support_6_>
        <SIP_SessionID_Support_6_
ua="na">%SIP_SESSIONID_SUPPORT_6%</SIP_SessionID_Support_6_>
        <Use_low-bandwidth_OPUS_6_
ua="na">%USE_LOW_BANDWIDTH_OPUS_6%</Use_low-bandwidth_OPUS_6_>
        <MediaSec_Request_6_
ua="na">%MEDIASEC_REQUEST_6%</MediaSec_Request_6_>
        <MediaSec_Over_TLS_Only_6_
ua="na">%MEDIASEC_OVER_TLS_ONLY_6%</MediaSec_Over_TLS_Only_6_>

        <!-- LINE6 Call Feature Settings -->
        <Voice_Mail_Subscribe_Interval_6_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval_6_>
        <Log_Missed_Calls_6_
ua="na">%LOG_MISSED_CALLS_6%</Log_Missed_Calls_6_>

        <!-- LINE6 Proxy and Registration -->
        <Outbound_Proxy_6_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_6_>
        <Alternate_Outbound_Proxy_6_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_6_>
        <Use_DNS_SRV_6_ ua="na">Yes</Use_DNS_SRV_6_>
        <DNS_SRV_Auto_Prefix_6_
ua="na">Yes</DNS_SRV_Auto_Prefix_6_>
        <Proxy_Fallback_Intvl_6_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_6_>

        <!-- LINE6 Audio Configuration -->
        <Preferred_Codec_6_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_6_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Second_PREFERRED_Codec_6_
ua="na">%SECOND_PREFERRED_CODEC%</Second_PREFERRED_Codec_6_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Third_PREFERRED_Codec_6_
ua="na">%THIRD_PREFERRED_CODEC%</Third_PREFERRED_Codec_6_> <!--
- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Use_Pref_Codec_Only_6_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_6_>
        <Codec_Negotiation_6_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_6_>

        <!-- LINE6 Dial Plan -->
        <Dial_Plan_6_ ua="na">%DIAL_PLAN%</Dial_Plan_6_>

        <!-- LINE6 ACD Settings -->
        <Broadsoft_ACD_6_ ua="na">%BROADSOFT_ACD_ENABLE-
6%</Broadsoft_ACD_6_>
        <ACD_Status_6_ ua="na">%ACD_STATUS_6%</ACD_Status_6_>
        <Auto_Available_After_Sign-In_6_
ua="na">%AUTO_AVAILABLE_AFTER_SIGN-
IN_6%</Auto_Available_After_Sign-In_6_>
        <Enable_Broadsoft_Hoteling_6_
ua="na">%BROADSOFT_HOTELING_ENABLE-
6%</Enable_Broadsoft_Hoteling_6_>
        <Call_Information_Enable_6_
ua="na">Yes</Call_Information_Enable_6_>
        <Disposition_Code_Enable_6_
ua="na">Yes</Disposition_Code_Enable_6_>
        <Trace_Enable_6_ ua="na">Yes</Trace_Enable_6_>

```

```

        <Emergency_Escalation_Enable_6_
ua="na">Yes</Emergency_Escalation_Enable_6_>
        <Queue_Status_Notification_Enable_6_
ua="na">Yes</Queue_Status_Notification_Enable_6_>

        <!--
            GUI_SCREEN: Ext7 Tab
        -->

        <!-- LINE7 SIP Settings -->
        <SIP_100REL_Enable_7_
ua="na">Yes</SIP_100REL_Enable_7_>
        <Precondition_Support_7_
ua="na">%PRECONDITION_SUPPORT_7%</Precondition_Support_7_>
        <Auth_INVITE_7_ ua="na">%AUTH_INVITE%</Auth_INVITE_7_>
<!-- Enable Yes if Device Auth is desired -->
        <SIP_Remote-Party-ID_7_ ua="na">No</SIP_Remote-Party-
ID_7_>
        <P-Early-Media_Support_7_
ua="na">%P_EARLY_MEDIA_SUPPORT_7%</P-Early-Media_Support_7_>
        <SIP_SessionID_Support_7_
ua="na">%SIP_SESSIONID_SUPPORT_7%</SIP_SessionID_Support_7_>
        <Use_low-bandwidth_OPUS_7_
ua="na">%USE_LOW_BANDWIDTH_OPUS_7%</Use_low-bandwidth_OPUS_7_>
        <MediaSec_Request_7_
ua="na">%MEDIASEC_REQUEST_7%</MediaSec_Request_7_>
        <MediaSec_Over_TLS_Only_7_
ua="na">%MEDIASEC_OVER_TLS_ONLY_7%</MediaSec_Over_TLS_Only_7_>

        <!-- LINE7 Call Feature Settings -->
        <Voice_Mail_Subscribe_Interval_7_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval
_7_>
        <Log_Missed_Calls_7_
ua="na">%LOG_MISSED_CALLS_7%</Log_Missed_Calls_7_>

        <!-- LINE7 Proxy and Registration -->
        <Outbound_Proxy_7_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_7_>
        <Alternate_Outbound_Proxy_7_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_7_>
        <Use_DNS_SRV_7_ ua="na">Yes</Use_DNS_SRV_7_>
        <DNS_SRV_Auto_Prefix_7_
ua="na">Yes</DNS_SRV_Auto_Prefix_7_>
        <Proxy_Fallback_Intvl_7_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_7_>

        <!-- LINE7 Audio Configuration -->
        <Preferred_Codec_7_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_7_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Second_PREFERRED_Codec_7_
ua="na">%SECOND_PREFERRED_CODEC%</Second_PREFERRED_Codec_7_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Third_PREFERRED_Codec_7_
ua="na">%THIRD_PREFERRED_CODEC%</Third_PREFERRED_Codec_7_> <!--
- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Use_Pref_Codec_Only_7_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_7_>
        <Codec_Negotiation_7_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_7_>

```

```

<!-- LINE7 Dial Plan -->
<Dial_Plan_7_ ua="na">%DIAL_PLAN%</Dial_Plan_7_>

<!-- LINE7 ACD Settings -->
<Broadsoft_ACD_7_ ua="na">%BROADSOFT_ACD_ENABLE-
7%</Broadsoft_ACD_7_>
<ACD_Status_7_ ua="na">%ACD_STATUS_7%</ACD_Status_7_>
<Auto_Available_After_Sign-In_7_
ua="na">%AUTO_AVAILABLE_AFTER_SIGN-
IN_7%</Auto_Available_After_Sign-In_7_>
<Enable_Broadsoft_Hoteling_7_
ua="na">%BROADSOFT_HOTELING_ENABLE-
7%</Enable_Broadsoft_Hoteling_7_>
<Call_Information_Enable_7_
ua="na">Yes</Call_Information_Enable_7_>
<Disposition_Code_Enable_7_
ua="na">Yes</Disposition_Code_Enable_7_>
<Trace_Enable_7_ ua="na">Yes</Trace_Enable_7_>
<Emergency_Escalation_Enable_7_
ua="na">Yes</Emergency_Escalation_Enable_7_>
<Queue_Status_Notification_Enable_7_
ua="na">Yes</Queue_Status_Notification_Enable_7_>

<!--
GUI SCREEN: Ext8 Tab
-->

<!-- LINE8 SIP Settings -->
<SIP_100REL_Enable_8_
ua="na">Yes</SIP_100REL_Enable_8_>
<Precondition_Support_8_
ua="na">%PRECONDITION_SUPPORT_8%</Precondition_Support_8_>
<Auth_INVITE_8_ ua="na">%AUTH_INVITE%</Auth_INVITE_8_>
<!-- Enable Yes if Device Auth is desired -->
<SIP_Remote-Party-ID_8_ ua="na">No</SIP_Remote-Party-
ID_8_>
<P-Early-Media_Support_8_
ua="na">%P_EARLY_MEDIA_SUPPORT_8%</P-Early-Media_Support_8_>
<SIP_SessionID_Support_8_
ua="na">%SIP_SESSIONID_SUPPORT_8%</SIP_SessionID_Support_8_>
<Use_low-bandwidth_OPUS_8_
ua="na">%USE_LOW_BANDWIDTH_OPUS_8%</Use_low-bandwidth_OPUS_8_>
<MediaSec_Request_8_
ua="na">%MEDIASEC_REQUEST_8%</MediaSec_Request_8_>
<MediaSec_Over_TLS_Only_8_
ua="na">%MEDIASEC_OVER_TLS_ONLY_8%</MediaSec_Over_TLS_Only_8_>

<!-- LINE8 Call Feature Settings -->
<Voice_Mail_Subscribe_Interval_8_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval
_8_>
<Log_Missed_Calls_8_
ua="na">%LOG_MISSED_CALLS_8%</Log_Missed_Calls_8_>

<!-- LINE8 Proxy and Registration -->
<Outbound_Proxy_8_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_8_>
<Alternate_Outbound_Proxy_8_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_8_>
<Use_DNS_SRV_8_ ua="na">Yes</Use_DNS_SRV_8_>
<DNS_SRV_Auto_Prefix_8_
ua="na">Yes</DNS_SRV_Auto_Prefix_8_>

```

```

        <Proxy_Fallback_Intvl_8_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_8_>

        <!-- LINE8 Audio Configuration -->
        <Preferred_Codec_8_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_8_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Second_Preferred_Codec_8_
ua="na">%SECOND_PREFERRED_CODEC%</Second_Preferred_Codec_8_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Third_Preferred_Codec_8_
ua="na">%THIRD_PREFERRED_CODEC%</Third_Preferred_Codec_8_> <!--
- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Use_Pref_Codec_Only_8_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_8_>
        <Codec_Negotiation_8_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_8_>

        <!-- LINE8 Dial Plan -->
        <Dial_Plan_8_ ua="na">%DIAL_PLAN%</Dial_Plan_8_>

        <!-- LINE8 ACD Settings -->
        <Broadsoft_ACD_8_ ua="na">%BROADSOFT_ACD_ENABLE-
8%</Broadsoft_ACD_8_>
        <ACD_Status_8_ ua="na">%ACD_STATUS_8%</ACD_Status_8_>
        <Auto_Available_After_Sign-In_8_
ua="na">%AUTO_AVAILABLE_AFTER_SIGN-
IN_8%</Auto_Available_After_Sign-In_8_>
        <Enable_Broadsoft_Hoteling_8_
ua="na">%BROADSOFT_HOTELING_ENABLE-
8%</Enable_Broadsoft_Hoteling_8_>
        <Call_Information_Enable_8_
ua="na">Yes</Call_Information_Enable_8_>
        <Disposition_Code_Enable_8_
ua="na">Yes</Disposition_Code_Enable_8_>
        <Trace_Enable_8_ ua="na">Yes</Trace_Enable_8_>
        <Emergency_Escalation_Enable_8_
ua="na">Yes</Emergency_Escalation_Enable_8_>
        <Queue_Status_Notification_Enable_8_
ua="na">Yes</Queue_Status_Notification_Enable_8_>

        <!--
        GUI SCREEN: Ext9 Tab
        -->

        <!-- LINE9 SIP Settings -->
        <SIP_100REL_Enable_9_
ua="na">Yes</SIP_100REL_Enable_9_>
        <Precondition_Support_9_
ua="na">%PRECONDITION_SUPPORT_9%</Precondition_Support_9_>
        <Auth_INVITE_9_ ua="na">%AUTH_INVITE%</Auth_INVITE_9_>
<!-- Enable Yes if Device Auth is desired -->
        <SIP_Remote-Party-ID_9_ ua="na">No</SIP_Remote-Party-
ID_9_>
        <P-Early-Media_Support_9_
ua="na">%P_EARLY_MEDIA_SUPPORT_9%</P-Early-Media_Support_9_>
        <SIP_SessionID_Support_9_
ua="na">%SIP_SESSIONID_SUPPORT_9%</SIP_SessionID_Support_9_>
        <Use_low-bandwidth_OPUS_9_
ua="na">%USE_LOW_BANDWIDTH_OPUS_9%</Use_low-bandwidth_OPUS_9_>
        <MediaSec_Request_9_
ua="na">%MEDIASEC_REQUEST_9%</MediaSec_Request_9_>

```

```

<MediaSec_Over_TLS_Only_9_
ua="na">%MEDIASEC_OVER_TLS_ONLY_9%</MediaSec_Over_TLS_Only_9_>

<!-- LINE9 Call Feature Settings -->
<Voice_Mail_Subscribe_Interval_9_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval_9_>

<Log_Missed_Calls_9_
ua="na">%LOG_MISSED_CALLS_9%</Log_Missed_Calls_9_>

<!-- LINE9 Proxy and Registration -->
<Outbound_Proxy_9_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_9_>
<Alternate_Outbound_Proxy_9_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_9_>
<Use_DNS_SRV_9_ ua="na">Yes</Use_DNS_SRV_9_>
<DNS_SRV_Auto_Prefix_9_
ua="na">Yes</DNS_SRV_Auto_Prefix_9_>
<Proxy_Fallback_Intvl_9_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_9_>

<!-- LINE9 Audio Configuration -->
<Preferred_Codec_9_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_9_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
<Second_PREFERRED_Codec_9_
ua="na">%SECOND_PREFERRED_CODEC%</Second_PREFERRED_Codec_9_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
<Third_PREFERRED_Codec_9_
ua="na">%THIRD_PREFERRED_CODEC%</Third_PREFERRED_Codec_9_> <!--
- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
<Use_Pref_Codec_Only_9_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_9_>
<Codec_Negotiation_9_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_9_>

<!-- LINE9 Dial Plan -->
<Dial_Plan_9_ ua="na">%DIAL_PLAN%</Dial_Plan_9_>

<!-- LINE9 ACD Settings -->
<Broadsoft_ACD_9_ ua="na">%BROADSOFT_ACD_ENABLE-
9%</Broadsoft_ACD_9_>
<ACD_Status_9_ ua="na">%ACD_STATUS_9%</ACD_Status_9_>
<Auto_Available_After_Sign-In_9_
ua="na">%AUTO_AVAILABLE_AFTER_SIGN-
IN_9%</Auto_Available_After_Sign-In_9_>
<Enable_Broadsoft_Hoteling_9_
ua="na">%BROADSOFT HOTELING ENABLE-
9%</Enable_Broadsoft_Hoteling_9_>
<Call_Information_Enable_9_
ua="na">Yes</Call_Information_Enable_9_>
<Disposition_Code_Enable_9_
ua="na">Yes</Disposition_Code_Enable_9_>
<Trace_Enable_9_ ua="na">Yes</Trace_Enable_9_>
<Emergency_Escalation_Enable_9_
ua="na">Yes</Emergency_Escalation_Enable_9_>
<Queue_Status_Notification_Enable_9_
ua="na">Yes</Queue_Status_Notification_Enable_9_>

<!--
GUI SCREEN: Ext10 Tab
-->

```

```

        <!-- LINE10 SIP Settings -->
        <SIP_100REL_Enable_10_
ua="na">Yes</SIP_100REL_Enable_10_
        <Precondition_Support_10_
ua="na">%PRECONDITION_SUPPORT_10%</Precondition_Support_10_
        <Auth_INVITE_10_
ua="na">%AUTH_INVITE%</Auth_INVITE_10_ <!-- Enable Yes if
Device Auth is desired -->
        <SIP_Remote-Party-ID_10_ ua="na">No</SIP_Remote-Party-
ID_10_
        <P-Early-Media_Support_10_
ua="na">%P_EARLY_MEDIA_SUPPORT_10%</P-Early-Media_Support_10_
        <SIP_SessionID_Support_10_
ua="na">%SIP_SESSIONID_SUPPORT_10%</SIP_SessionID_Support_10_
        <Use_low-bandwidth_OPUS_10_
ua="na">%USE_LOW_BANDWIDTH_OPUS_10%</Use_low-
bandwidth_OPUS_10_
        <MediaSec_Request_10_
ua="na">%MEDIASEC_REQUEST_10%</MediaSec_Request_10_
        <MediaSec_Over_TLS_Only_10_
ua="na">%MEDIASEC_OVER_TLS_ONLY_10%</MediaSec_Over_TLS_Only_10
_>

        <!-- LINE10 Call Feature Settings -->
        <Voice_Mail_Subscribe_Interval_10_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval
_10_>
        <Log_Missed_Calls_10_
ua="na">%LOG_MISSED_CALLS_10%</Log_Missed_Calls_10_>

        <!-- LINE10 Proxy and Registration -->
        <Outbound_Proxy_10_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_10_>
        <Alternate_Outbound_Proxy_10_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_10_>
        <Use_DNS_SRV_10_ ua="na">Yes</Use_DNS_SRV_10_>
        <DNS_SRV_Auto_Prefix_10_
ua="na">Yes</DNS_SRV_Auto_Prefix_10_>
        <Proxy_Fallback_Intvl_10_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_10_>

        <!-- LINE10 Audio Configuration -->
        <Preferred_Codec_10_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_10_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Second_PREFERRED_Codec_10_
ua="na">%SECOND_PREFERRED_CODEC%</Second_PREFERRED_Codec_10_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Third_PREFERRED_Codec_10_
ua="na">%THIRD_PREFERRED_CODEC%</Third_PREFERRED_Codec_10_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Use_Pref_Codec_Only_10_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_10_>
        <Codec_Negotiation_10_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_10_>

        <!-- LINE10 Dial Plan -->
        <Dial_Plan_10_ ua="na">%DIAL_PLAN%</Dial_Plan_10_>

        <!-- LINE10 ACD Settings -->

```

```

        <Broadsoft_ACD_10_ ua="na">%BROADSOFT_ACD_ENABLE-
10%</Broadsoft_ACD_10_>
        <ACD_Status_10_
ua="na">%ACD_STATUS_10%</ACD_Status_10_>
        <Auto_Available_After_Sign-In_10_
ua="na">%AUTO_AVAILABLE_AFTER_SIGN-
IN_10%</Auto_Available_After_Sign-In_10_>
        <Enable_Broadsoft_Hoteling_10_
ua="na">%BROADSOFT_HOTELING_ENABLE-
10%</Enable_Broadsoft_Hoteling_10_>
        <Call_Information_Enable_10_
ua="na">Yes</Call_Information_Enable_10_>
        <Disposition_Code_Enable_10_
ua="na">Yes</Disposition_Code_Enable_10_>
        <Trace_Enable_10_ ua="na">Yes</Trace_Enable_10_>
        <Emergency_Escalation_Enable_10_
ua="na">Yes</Emergency_Escalation_Enable_10_>
        <Queue_Status_Notification_Enable_10_
ua="na">Yes</Queue_Status_Notification_Enable_10_>

        <!--
        GUI SCREEN: Ext11 Tab
        -->

        <!-- LINE11 SIP Settings -->
        <SIP_100REL_Enable_11_
ua="na">Yes</SIP_100REL_Enable_11_>
        <Precondition_Support_11_
ua="na">%PRECONDITION_SUPPORT_11%</Precondition_Support_11_>
        <Auth_INVITE_11_
ua="na">%AUTH_INVITE%</Auth_INVITE_11_> <!-- Enable Yes if
Device Auth is desired -->
        <SIP_Remote-Party-ID_11_ ua="na">No</SIP_Remote-Party-
ID_11_>
        <P-Early-Media_Support_11_
ua="na">%P_EARLY_MEDIA_SUPPORT_11%</P-Early-Media_Support_11_>
        <SIP_SessionID_Support_11_
ua="na">%SIP_SESSIONID_SUPPORT_11%</SIP_SessionID_Support_11_>
        <Use_low-bandwidth_OPUS_11_
ua="na">%USE_LOW_BANDWIDTH_OPUS_11%</Use_low-
bandwidth_OPUS_11_>
        <MediaSec_Request_11_
ua="na">%MEDIASEC_REQUEST_11%</MediaSec_Request_11_>
        <MediaSec_Over_TLS_Only_11_
ua="na">%MEDIASEC_OVER_TLS_ONLY_11%</MediaSec_Over_TLS_Only_11_
_>

        <!-- LINE11 Call Feature Settings -->
        <Voice_Mail_Subscribe_Interval_11_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval
_11_>
        <Log_Missed_Calls_11_
ua="na">%LOG_MISSED_CALLS_11%</Log_Missed_Calls_11_>

        <!-- LINE11 Proxy and Registration -->
        <Outbound_Proxy_11_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_11_>
        <Alternate_Outbound_Proxy_11_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_11_>
        <Use_DNS_SRV_11_ ua="na">Yes</Use_DNS_SRV_11_>
        <DNS_SRV_Auto_Prefix_11_
ua="na">Yes</DNS_SRV_Auto_Prefix_11_>

```

```

        <Proxy_Fallback_Intvl_11_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_11_>

        <!-- LINE11 Audio Configuration -->
        <Preferred_Codec_11_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_11_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Second_Preferred_Codec_11_
ua="na">%SECOND_PREFERRED_CODEC%</Second_Preferred_Codec_11_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Third_Preferred_Codec_11_
ua="na">%THIRD_PREFERRED_CODEC%</Third_Preferred_Codec_11_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Use_Pref_Codec_Only_11_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_11_>
        <Codec_Negotiation_11_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_11_>

        <!-- LINE11 Dial Plan -->
        <Dial_Plan_11_ ua="na">%DIAL_PLAN%</Dial_Plan_11_>

        <!-- LINE11 ACD Settings -->
        <Broadsoft_ACD_11_ ua="na">%BROADSOFT_ACD_ENABLE-
11%</Broadsoft_ACD_11_>
        <ACD_Status_11_
ua="na">%ACD_STATUS_11%</ACD_Status_11_>
        <Auto_Available_After_Sign-In_11_
ua="na">%AUTO_AVAILABLE_AFTER_SIGN-
IN_11%</Auto_Available_After_Sign-In_11_>
        <Enable_Broadsoft_Hoteling_11_
ua="na">%BROADSOFT_HOTELING_ENABLE-
11%</Enable_Broadsoft_Hoteling_11_>
        <Call_Information_Enable_11_
ua="na">Yes</Call_Information_Enable_11_>
        <Disposition_Code_Enable_11_
ua="na">Yes</Disposition_Code_Enable_11_>
        <Trace_Enable_11_ ua="na">Yes</Trace_Enable_11_>
        <Emergency_Escalation_Enable_11_
ua="na">Yes</Emergency_Escalation_Enable_11_>
        <Queue_Status_Notification_Enable_11_
ua="na">Yes</Queue_Status_Notification_Enable_11_>

        <!--
        GUI SCREEN: Ext12 Tab
        -->

        <!-- LINE12 SIP Settings -->
        <SIP_100REL_Enable_12_
ua="na">Yes</SIP_100REL_Enable_12_>
        <Precondition_Support_12_
ua="na">%PRECONDITION_SUPPORT_12%</Precondition_Support_12_>
        <Auth_INVITE_12_
ua="na">%AUTH_INVITE%</Auth_INVITE_12_> <!-- Enable Yes if
Device Auth is desired -->
        <SIP_Remote-Party-ID_12_ ua="na">No</SIP_Remote-Party-
ID_12_>
        <P-Early-Media_Support_12_
ua="na">%P_EARLY_MEDIA_SUPPORT_12%</P-Early-Media_Support_12_>
        <SIP_SessionID_Support_12_
ua="na">%SIP_SESSIONID_SUPPORT_12%</SIP_SessionID_Support_12_>

```



```

        <Use_low-bandwidth_OPUS_12_
ua="na">%USE_LOW_BANDWIDTH_OPUS_12%</Use_low-
bandwidth_OPUS_12_>
        <MediaSec_Request_12_
ua="na">%MEDIASEC_REQUEST_12%</MediaSec_Request_12_>
        <MediaSec_Over_TLS_Only_12_
ua="na">%MEDIASEC_OVER_TLS_ONLY_12%</MediaSec_Over_TLS_Only_12_
_>

        <!-- LINE12 Call Feature Settings -->
        <Voice_Mail_Subscribe_Interval_12_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval_
12_>
        <Log_Missed_Calls_12_
ua="na">%LOG_MISSED_CALLS_12%</Log_Missed_Calls_12_>

        <!-- LINE12 Proxy and Registration -->
        <Outbound_Proxy_12_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_12_>
        <Alternate_Outbound_Proxy_12_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_12_>
        <Use_DNS_SRV_12_ ua="na">Yes</Use_DNS_SRV_12_>
        <DNS_SRV_Auto_Prefix_12_
ua="na">Yes</DNS_SRV_Auto_Prefix_12_>
        <Proxy_Fallback_Intvl_12_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_12_>

        <!-- LINE12 Audio Configuration -->
        <Preferred_Codec_12_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_12_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Second_PREFERRED_Codec_12_
ua="na">%SECOND_PREFERRED_CODEC%</Second Preferred_Codec_12_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Third_PREFERRED_Codec_12_
ua="na">%THIRD_PREFERRED_CODEC%</Third Preferred_Codec_12_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Use_Pref_Codec_Only_12_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_12_>
        <Codec_Negotiation_12_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_12_>

        <!-- LINE12 Dial Plan -->
        <Dial_Plan_12_ ua="na">%DIAL_PLAN%</Dial_Plan_12_>

        <!-- LINE12 ACD Settings -->
        <Broadsoft_ACD_12_ ua="na">%BROADSOFT_ACD_ENABLE-
12%</Broadsoft_ACD_12_>
        <ACD_Status_12_
ua="na">%ACD_STATUS_12%</ACD_Status_12_>
        <Auto_Available_After_Sign-In_12_
ua="na">%AUTO_AVAILABLE_AFTER_SIGN-
IN_12%</Auto_Available_After_Sign-In_12_>
        <Enable_Broadsoft_Hoteling_12_
ua="na">%BROADSOFT_HOTELING_ENABLE-
12%</Enable_Broadsoft_Hoteling_12_>
        <Call_Information_Enable_12_
ua="na">Yes</Call_Information_Enable_12_>
        <Disposition_Code_Enable_12_
ua="na">Yes</Disposition_Code_Enable_12_>
        <Trace_Enable_12_ ua="na">Yes</Trace_Enable_12_>

```

```

        <Emergency_Escalation_Enable_12_
ua="na">Yes</Emergency_Escalation_Enable_12_>
        <Queue_Status_Notification_Enable_12_
ua="na">Yes</Queue_Status_Notification_Enable_12_>

        <!--
            GUI SCREEN: Ext13 Tab
        -->

        <!-- LINE13 SIP Settings -->
        <SIP_100REL_Enable_13_
ua="na">Yes</SIP_100REL_Enable_13_>
        <Precondition_Support_13_
ua="na">%PRECONDITION_SUPPORT_13%</Precondition_Support_13_>
        <Auth_INVITE_13_
ua="na">%AUTH_INVITE%</Auth_INVITE_13_> <!-- Enable Yes if
Device Auth is desired -->
        <SIP_Remote-Party-ID_13_ ua="na">No</SIP_Remote-Party-
ID_13_>
        <P-Early-Media_Support_13_
ua="na">%P_EARLY_MEDIA_SUPPORT_13%</P-Early-Media_Support_13_>
        <SIP_SessionID_Support_13_
ua="na">%SIP_SESSIONID_SUPPORT_13%</SIP_SessionID_Support_13_>
        <Use_low-bandwidth_OPUS_13_
ua="na">%USE_LOW_BANDWIDTH_OPUS_13%</Use_low-
bandwidth_OPUS_13_>
        <MediaSec_Request_13_
ua="na">%MEDIASEC_REQUEST_13%</MediaSec_Request_13_>
        <MediaSec_Over_TLS_Only_13_
ua="na">%MEDIASEC_OVER_TLS_ONLY_13%</MediaSec_Over_TLS_Only_13_
_>

        <!-- LINE13 Call Feature Settings -->
        <Voice_Mail_Subscribe_Interval_13_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval
_13_>
        <Log_Missed_Calls_13_
ua="na">%LOG_MISSED_CALLS_13%</Log_Missed_Calls_13_>

        <!-- LINE13 Proxy and Registration -->
        <Outbound_Proxy_13_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_13_>
        <Alternate_Outbound_Proxy_13_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_13_>
        <Use_DNS_SRV_13_ ua="na">Yes</Use_DNS_SRV_13_>
        <DNS_SRV_Auto_Prefix_13_
ua="na">Yes</DNS_SRV_Auto_Prefix_13_>
        <Proxy_Fallback_Intvl_13_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_13_>

        <!-- LINE13 Audio Configuration -->
        <Preferred_Codec_13_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_13_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Second_PREFERRED_Codec_13_
ua="na">%SECOND_PREFERRED_CODEC%</Second_PREFERRED_Codec_13_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Third_PREFERRED_Codec_13_
ua="na">%THIRD_PREFERRED_CODEC%</Third_PREFERRED_Codec_13_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Use_Pref_Codec_Only_13_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_13_>

```

```

        <Codec_Negotiation_13_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_13_>

        <!-- LINE13 Dial Plan -->
        <Dial_Plan_13_ ua="na">%DIAL_PLAN%</Dial_Plan_13_>

        <!-- LINE13 ACD Settings -->
        <Broadsoft_ACD_13_ ua="na">%BROADSOFT_ACD_ENABLE-
13%</Broadsoft_ACD_13_>
        <ACD_Status_13_
ua="na">%ACD_STATUS_13%</ACD_Status_13_>
        <Auto_Available_After_Sign-In_13_
ua="na">%AUTO_AVAILABLE_AFTER_SIGN-
IN_13%</Auto_Available_After_Sign-In_13_>
        <Enable_Broadsoft_Hoteling_13_
ua="na">%BROADSOFT_HOTELING_ENABLE-
13%</Enable_Broadsoft_Hoteling_13_>
        <Call_Information_Enable_13_
ua="na">Yes</Call_Information_Enable_13_>
        <Disposition_Code_Enable_13_
ua="na">Yes</Disposition_Code_Enable_13_>
        <Trace_Enable_13_ ua="na">Yes</Trace_Enable_13_>
        <Emergency_Escalation_Enable_13_
ua="na">Yes</Emergency_Escalation_Enable_13_>
        <Queue_Status_Notification_Enable_13_
ua="na">Yes</Queue_Status_Notification_Enable_13_>
        <!--
        GUI SCREEN: Ext14 Tab
        -->

        <!-- LINE14 SIP Settings -->
        <SIP_100REL_Enable_14_
ua="na">Yes</SIP_100REL_Enable_14_>
        <Precondition_Support_14_
ua="na">%PRECONDITION_SUPPORT_14%</Precondition_Support_14_>
        <Auth_INVITE_14_
ua="na">%AUTH_INVITE%</Auth_INVITE_14_> <!-- Enable Yes if
Device Auth is desired -->
        <SIP_Remote-Party-ID_14_ ua="na">No</SIP_Remote-Party-
ID_14_>
        <P-Early-Media_Support_14_
ua="na">%P_EARLY_MEDIA_SUPPORT_14%</P-Early-Media_Support_14_>
        <SIP_SessionID_Support_14_
ua="na">%SIP_SESSIONID_SUPPORT_14%</SIP_SessionID_Support_14_>
        <Use_low-bandwidth_OPUS_14_
ua="na">%USE_LOW_BANDWIDTH_OPUS_14%</Use_low-
bandwidth_OPUS_14_>
        <MediaSec_Request_14_
ua="na">%MEDIASEC_REQUEST_14%</MediaSec_Request_14_>
        <MediaSec_Over_TLS_Only_14_
ua="na">%MEDIASEC_OVER_TLS_ONLY_14%</MediaSec_Over_TLS_Only_14_
_>

        <!-- LINE14 Call Feature Settings -->
        <Voice_Mail_Subscribe_Interval_14_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval
_14_>
        <Log_Missed_Calls_14_
ua="na">%LOG_MISSED_CALLS_14%</Log_Missed_Calls_14_>

        <!-- LINE14 Proxy and Registration -->

```

```

        <Outbound_Proxy_14_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_14_>
        <Alternate_Outbound_Proxy_14_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_14_>
        <Use_DNS_SRV_14_ ua="na">Yes</Use_DNS_SRV_14_>
        <DNS_SRV_Auto_Prefix_14_
ua="na">Yes</DNS_SRV_Auto_Prefix_14_>
        <Proxy_Fallback_Intvl_14_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_14_>

        <!-- LINE14 Audio Configuration -->
        <Preferred_Codec_14_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_14_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Second_PREFERRED_Codec_14_
ua="na">%SECOND_PREFERRED_CODEC%</Second_PREFERRED_Codec_14_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Third_PREFERRED_Codec_14_
ua="na">%THIRD_PREFERRED_CODEC%</Third_PREFERRED_Codec_14_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Use_Pref_Codec_Only_14_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_14_>
        <Codec_Negotiation_14_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_14_>

        <!-- LINE14 Dial Plan -->
        <Dial_Plan_14_ ua="na">%DIAL_PLAN%</Dial_Plan_14_>

        <!-- LINE14 ACD Settings -->
        <Broadsoft_ACD_14_ ua="na">%BROADSOFT_ACD_ENABLE-
14%</Broadsoft_ACD_14_>
        <ACD_Status_14_
ua="na">%ACD_STATUS_14%</ACD_Status_14_>
        <Auto_Available_After_Sign-In_14_
ua="na">%AUTO_AVAILABLE_AFTER_SIGN-
IN_14%</Auto_Available_After_Sign-In_14_>
        <Enable_Broadsoft_Hoteling_14_
ua="na">%BROADSOFT_HOTELING_ENABLE-
14%</Enable_Broadsoft_Hoteling_14_>
        <Call_Information_Enable_14_
ua="na">Yes</Call_Information_Enable_14_>
        <Disposition_Code_Enable_14_
ua="na">Yes</Disposition_Code_Enable_14_>
        <Trace_Enable_14_ ua="na">Yes</Trace_Enable_14_>
        <Emergency_Escalation_Enable_14_
ua="na">Yes</Emergency_Escalation_Enable_14_>
        <Queue_Status_Notification_Enable_14_
ua="na">Yes</Queue_Status_Notification_Enable_14_>

        <!--
        GUI SCREEN: Ext15 Tab
        -->

        <!-- LINE15 SIP Settings -->
        <SIP_100REL_Enable_15_
ua="na">Yes</SIP_100REL_Enable_15_>
        <Precondition_Support_15_
ua="na">%PRECONDITION_SUPPORT_15%</Precondition_Support_15_>
        <Auth_INVITE_15_
ua="na">%AUTH_INVITE%</Auth_INVITE_15_> <!-- Enable Yes if
Device Auth is desired -->

```

```

        <SIP_Remote-Party-ID_15_ ua="na">No</SIP_Remote-Party-
ID_15_>
        <P-Early-Media_Support_15_
ua="na">%P_EARLY_MEDIA_SUPPORT_15%</P-Early-Media_Support_15_>
        <SIP_SessionID_Support_15_
ua="na">%SIP_SESSIONID_SUPPORT_15%</SIP_SessionID_Support_15_>
        <Use_low-bandwidth_OPUS_15_
ua="na">%USE_LOW_BANDWIDTH_OPUS_15%</Use_low-
bandwidth_OPUS_15_>
        <MediaSec_Request_15_
ua="na">%MEDIASEC_REQUEST_15%</MediaSec_Request_15_>
        <MediaSec_Over_TLS_Only_15_
ua="na">%MEDIASEC_OVER_TLS_ONLY_15%</MediaSec_Over_TLS_Only_15_
_>

        <!-- LINE15 Call Feature Settings -->
        <Voice_Mail_Subscribe_Interval_15_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval
_15_>
        <Log_Missed_Calls_15_
ua="na">%LOG_MISSED_CALLS_15%</Log_Missed_Calls_15_>

        <!-- LINE15 Proxy and Registration -->
        <Outbound_Proxy_15_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_15_>
        <Alternate_Outbound_Proxy_15_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_15_>
        <Use_DNS_SRV_15_ ua="na">Yes</Use_DNS_SRV_15_>
        <DNS_SRV_Auto_Prefix_15_
ua="na">Yes</DNS_SRV_Auto_Prefix_15_>
        <Proxy_Fallback_Intvl_15_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_15_>

        <!-- LINE15 Audio Configuration -->
        <Preferred_Codec_15_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_15_> <!-- options:
G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Second_PREFERRED_Codec_15_
ua="na">%SECOND_PREFERRED_CODEC%</Second_PREFERRED_Codec_15_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Third_PREFERRED_Codec_15_
ua="na">%THIRD_PREFERRED_CODEC%</Third_PREFERRED_Codec_15_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
        <Use_Pref_Codec_Only_15_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_15_>
        <Codec_Negotiation_15_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_15_>

        <!-- LINE15 Dial Plan -->
        <Dial_Plan_15_ ua="na">%DIAL_PLAN%</Dial_Plan_15_>

        <!-- LINE15 ACD Settings -->
        <Broadsoft_ACD_15_ ua="na">%BROADSOFT_ACD_ENABLE-
15%</Broadsoft_ACD_15_>
        <ACD_Status_15_
ua="na">%ACD_STATUS_15%</ACD_Status_15_>
        <Auto_Available_After_Sign-In_15_
ua="na">%AUTO_AVAILABLE_AFTER_SIGN-
IN_15%</Auto_Available_After_Sign-In_15_>
        <Enable_Broadsoft_Hoteling_15_
ua="na">%BROADSOFT HOTELING ENABLE-
15%</Enable_Broadsoft_Hoteling_15_>

```

```

        <Call_Information_Enable_15_
ua="na">Yes</Call_Information_Enable_15_>
        <Disposition_Code_Enable_15_
ua="na">Yes</Disposition_Code_Enable_15_>
        <Trace_Enable_15_ ua="na">Yes</Trace_Enable_15_>
        <Emergency_Escalation_Enable_15_
ua="na">Yes</Emergency_Escalation_Enable_15_>
        <Queue_Status_Notification_Enable_15_
ua="na">Yes</Queue_Status_Notification_Enable_15_>

        <!--
            GUI SCREEN: Ext16 Tab
        -->

        <!-- LINE16 SIP Settings -->
        <SIP_100REL_Enable_16_
ua="na">Yes</SIP_100REL_Enable_16_>
        <Precondition_Support_16_
ua="na">%PRECONDITION_SUPPORT_16%</Precondition_Support_16_>
        <Auth_INVITE_16_
ua="na">%AUTH_INVITE%</Auth_INVITE_16_> <!-- Enable Yes if
Device Auth is desired -->
        <SIP_Remote-Party-ID_16_ ua="na">No</SIP_Remote-Party-
ID_16_>
        <P-Early-Media_Support_16_
ua="na">%P_EARLY_MEDIA_SUPPORT_16%</P-Early-Media_Support_16_>
        <SIP_SessionID_Support_16_
ua="na">%SIP_SESSIONID_SUPPORT_16%</SIP_SessionID_Support_16_>
        <Use_low-bandwidth_OPUS_16_
ua="na">%USE_LOW_BANDWIDTH_OPUS_16%</Use_low-
bandwidth_OPUS_16_>
        <MediaSec_Request_16_
ua="na">%MEDIASEC_REQUEST_16%</MediaSec_Request_16_>
        <MediaSec_Over_TLS_Only_16_
ua="na">%MEDIASEC_OVER_TLS_ONLY_16%</MediaSec_Over_TLS_Only_16_
_>

        <!-- LINE16 Call Feature Settings -->
        <Voice_Mail_Subscribe_Interval_16_
ua="na">%VM_SUBSCRIBE_INTERVAL%</Voice_Mail_Subscribe_Interval_
16_>
        <Log_Missed_Calls_16_
ua="na">%LOG_MISSED_CALLS_16%</Log_Missed_Calls_16_>

        <!-- LINE16 Proxy and Registration -->
        <Outbound_Proxy_16_
ua="na">%SBC_ADDRESS_1%</Outbound_Proxy_16_>
        <Alternate_Outbound_Proxy_16_
ua="na">%SBC_ADDRESS_2%</Alternate_Outbound_Proxy_16_>
        <Use_DNS_SRV_16_ ua="na">Yes</Use_DNS_SRV_16_>
        <DNS_SRV_Auto_Prefix_16_
ua="na">Yes</DNS_SRV_Auto_Prefix_16_>
        <Proxy_Fallback_Intvl_16_
ua="na">%FAILBACK_INTVL%</Proxy_Fallback_Intvl_16_>

        <!-- LINE16 Audio Configuration -->
        <Preferred_Codec_16_
ua="na">%PREFERRED_CODEC%</Preferred_Codec_16_> <!-- options:
G711u/G711a/G729a/G729ab/G722/G722.2/iLBC -->
        <Second_PREFERRED_Codec_16_
ua="na">%SECOND_PREFERRED_CODEC%</Second Preferred Codec_16_>
        <!-- options: G711u/G711a/G729a/G729ab/G722/G722.2/iLBC -->

```

```

    <Third_Preferred_Codec_16_
ua="na">%THIRD_PREFERRED_CODEC%</Third_Preferred_Codec_16_>
<!-- options: G711u/G711a/G729a/G792ab/G722/G722.2/iLBC -->
    <Use_Pref_Codec_Only_16_
ua="na">%USE_PREFERRED_CODEC_ONLY%</Use_Pref_Codec_Only_16_>
    <Codec_Negotiation_16_
ua="na">%CODEC_NEGOTIATION%</Codec_Negotiation_16_>

    <!-- LINE16 Dial Plan -->
    <Dial_Plan_16_ ua="na">%DIAL_PLAN%</Dial_Plan_16_>

    <!-- LINE16 ACD Settings -->
    <Broadsoft_ACD_16_ ua="na">%BROADSOFT_ACD_ENABLE-
16%</Broadsoft_ACD_16_>
    <ACD_Status_16_
ua="na">%ACD_STATUS_16%</ACD_Status_16_>
    <Auto_Available_After_Sign-In_16_
ua="na">%AUTO_AVAILABLE_AFTER_SIGN-
IN_16%</Auto_Available_After_Sign-In_16_>
    <Enable_Broadsoft_Hoteling_16_
ua="na">%BROADSOFT_HOTELING_ENABLE-
16%</Enable_Broadsoft_Hoteling_16_>
    <Call_Information_Enable_16_
ua="na">Yes</Call_Information_Enable_16_>
    <Disposition_Code_Enable_16_
ua="na">Yes</Disposition_Code_Enable_16_>
    <Trace_Enable_16_ ua="na">Yes</Trace_Enable_16_>
    <Emergency_Escalation_Enable_16_
ua="na">Yes</Emergency_Escalation_Enable_16_>
    <Queue_Status_Notification_Enable_16_
ua="na">Yes</Queue_Status_Notification_Enable_16_>

    <!--
        GUI SCREEN: Voice Tab - Att Console
    -->

    <!-- BLF List Feature Options -->
    <BLF_List_Feature_Options
ua="na">%BLF_LIST_FEATURE_OPTIONS%</BLF_List_Feature_Options>

    </flat-profile>
</device>

```

#### Family-Specific-file: CiscoDev\_Type9841.xml

```

<?xml version="1.0" encoding="UTF-8"?>
<device xsi:type="axl:XIPPhone"
xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance">
    <flat-profile>

        <!--
            GUI SCREEN: Voice Tab->SIP Tab
        -->

        <!-- NAT Support Parameters -->
        <ICE_STUN_Enable
ua="na">%BB_ICE_STUN_ENABLED%</ICE_STUN_Enable>

        <!--
            GUI SCREEN: Voice Tab->Provisioning Tab
        -->
    </flat-profile>
</device>

```

```

-->

    <!-- Device Profile Folder (Opt1) -->
    <Upgrade_Rule
ua="na">%ACCESS_PROTOCOL%BWDEVICEACCESSFQDN%:BWDEVICEACCESSP
ORT%/%BWDMSCONTEXT%/%BWDEVICEACCESSURI%FIRMWARE_VERSION_DP-
9800%</Upgrade_Rule>
    <Profile_Rule_C
ua="na">%ACCESS_PROTOCOL%BWDEVICEACCESSFQDN%:BWDEVICEACCESSP
ORT%/%BWDMSCONTEXT%/%BWDEVICEACCESSURI%$MA_CiscoDev.xml</Profi
le_Rule_C>

    <!-- Localization -->
    <!--
        Example Script supporting English/French/Spanish.
        Device supports up to 10 language indexes. 512
        character string length max.

    <Dictionary_Server_Script
ua="na">serv=http://%BWDEVICEACCESSFQDN%:BWDEVICEACCESSPORT%/
%BWDMSCONTEXT%/%BWDEVICEACCESSURI%;d1=Spanish;l1=es-ES;x1=es-
ES.tar;d2=French;l2=fr-FR;x2=fr-
FR.tar</Dictionary_Server_Script>
-->
    <Dictionary_Server_Script
ua="na">serv=%ACCESS_PROTOCOL%BWDEVICEACCESSFQDN%:BWDEVICEAC
CESSPORT%/%BWDMSCONTEXT%/%BWDEVICEACCESSURI%;%DICTIONARY_SERVE
R_SCRIPT_9800%</Dictionary_Server_Script>

    <!--
        GUI SCREEN: Voice Tab->Regional Tab
    -->

    <!-- Vertical Service Activation Codes -->

    <!--
        GUI SCREEN: Voice Tab ->Phone Tab
    -->

    <!--
        GUI SCREEN: Voice Tab ->User Tab
    -->

    <!--
        GUI SCREEN: Ext1 Tab
    -->

    <!--
        GUI SCREEN: Voice Tab->Att Console Tab
    -->

    </flat-profile>
</device>

```



# Family-Specific-file: CiscoDev\_Type9851.xml

```
<?xml version="1.0" encoding="UTF-8"?>
<device xsi:type="axl:XIPPhone"
xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance">
  <flat-profile>

    <!--
      GUI SCREEN: Voice Tab->SIP Tab
    -->

    <!-- NAT Support Parameters -->
    <ICE_STUN_Enable
ua="na">%BB_ICE_STUN_ENABLED%/ICE_STUN_Enable>

    <!--
      GUI SCREEN: Voice Tab->Provisioning Tab
    -->

    <!-- Device Profile Folder (Opt1) -->
    <Upgrade_Rule
ua="na">%ACCESS_PROTOCOL%%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEACCESSURI%%FIRMWARE_VERSION_DP-9800%/Upgrade_Rule>
    <Profile_Rule_C
ua="na">%ACCESS_PROTOCOL%%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEACCESSURI%%$MA_CiscoDev.xml</Profile_Rule_C>

    <!-- Localization -->
    <!--
      Example Script supporting English/French/Spanish.
      Device supports up to 10 language indexes. 512
      character string length max.

    <Dictionary_Server_Script
ua="na">serv=http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEACCESSURI%;d1=Spanish;l1=es-ES;x1=es-ES.tar;d2=French;l2=fr-FR;x2=fr-FR.tar</Dictionary_Server_Script>
    -->
    <Dictionary_Server_Script
ua="na">serv=%ACCESS_PROTOCOL%%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEACCESSURI%;%DICTIONARY_SERVER_SCRIPT_9800%</Dictionary_Server_Script>

    <!--
      GUI SCREEN: Voice Tab->Regional Tab
    -->

    <!-- Vertical Service Activation Codes -->

    <!--
      GUI SCREEN: Voice Tab ->Phone Tab
    -->
```

```

<!--
  GUI SCREEN: Voice Tab ->User Tab
-->

<!--
  GUI SCREEN: Ext1 Tab
-->

<!--
  GUI SCREEN: Voice Tab->Att Console Tab
-->

</flat-profile>
</device>

```

### Family-Specific-file: CiscoDev\_Type78xx.xml

```

<?xml version="1.0" encoding="UTF-8"?>
<device xsi:type="axl:XIPPhone"
xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance">
  <flat-profile>

    <!--
      GUI SCREEN: Voice Tab->SIP Tab
    -->

    <!--
      GUI SCREEN: Voice Tab->Provisioning Tab
    -->

    <!-- Device Profile Folder (Opt1) -->
    <Upgrade_Rule
      ua="na">%ACCESS_PROTOCOL%BWDEVICEACCESSFQDN%:BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEACCESSURI%FIRMWARE_VERSION_CP-7800-3PCC%/Upgrade_Rule>
    <Profile_Rule_C
      ua="na">%ACCESS_PROTOCOL%BWDEVICEACCESSFQDN%:BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEACCESSURI%$MA_CiscoDev.xml/Profile_Rule_C>

    <!-- Screen Saver -->
    <Logo_URL ua="rw">%7800_LOGO_PIC_URL%/Logo_URL>
    <Picture_Download_URL
      ua="rw">%7800_WALLPAPER_PIC_URL%/Picture_Download_URL>

    <!-- Localization -->
    <!--
      Example Script supporting English/French/Spanish.
      Device supports up to 10 language indexes. 512
      character string length max.

    <Dictionary_Server_Script
      ua="na">serv=http://%BWDEVICEACCESSFQDN%:BWDEVICEACCESSPORT%/
      %BWDMSCONTEXT%/%BWDEVICEACCESSURI%;dl=Spanish;ll=es-ES;xl=es-

```

```

ES.tar;d2=French;l2=fr-FR;x2=fr-
FR.tar</Dictionary_Server_Script>
-->
<Dictionary_Server_Script
ua="na">serv=%ACCESS_PROTOCOL%BWDEVICEACCESSFQDN%:BWDEVICEAC
CESSPORT%/%BWDMSCONTEXT%/%BWDEVICEACCESSURI%;%DICTIONARY_SERVE
R_SCRIPT_7800%</Dictionary_Server_Script>

<!--
    GUI SCREEN: Voice Tab->Regional Tab
-->

<!-- Vertical Service Activation Codes -->

<!--
    GUI SCREEN: Voice Tab ->Phone Tab
-->

<!-- Line Key LED Pattern (Not Applicable for 7832) --
>
    <Custom_LED_Type
ua="na">%CUSTOM_LED_TYPE%</Custom_LED_Type>
    <Disabled_LED ua="na">%DISABLED_LED%</Disabled_LED>
    <Idle_LED ua="na">%IDLE_LED%</Idle_LED>
    <Remote_Undefined_LED
ua="na">%REMOTE_UNDEFINED_LED%</Remote_Undefined_LED>
    <Local_Seized_LED
ua="na">%LOCAL_SEIZED_LED%</Local_Seized_LED>
    <Remote_Seized_LED
ua="na">%REMOTE_SEIZED_LED%</Remote_Seized_LED>
    <Local_Progressing_LED
ua="na">%LOCAL_PROGRESSING_LED%</Local_Progressing_LED>
    <Remote_Progressing_LED
ua="na">%REMOTE_PROGRESSING_LED%</Remote_Progressing_LED>
    <Local_Ringing_LED
ua="na">%LOCAL_RINGING_LED%</Local_Ringing_LED>
    <Remote_Ringing_LED
ua="na">%REMOTE_RINGING_LED%</Remote_Ringing_LED>
    <Local_Active_LED
ua="na">%LOCAL_ACTIVE_LED%</Local_Active_LED>
    <Remote_Active_LED
ua="na">%REMOTE_ACTIVE_LED%</Remote_Active_LED>
    <Local_Held_LED
ua="na">%LOCAL_HELD_LED%</Local_Held_LED>
    <Remote_Held_LED
ua="na">%REMOTE_HELD_LED%</Remote_Held_LED>
    <Register_Failed_LED
ua="na">%REGISTER_FAILED_LED%</Register_Failed_LED>
    <Registering_LED
ua="na">%REGISTERING_LED%</Registering_LED>

    <!--
        GUI SCREEN: Voice Tab ->User Tab
    -->

    <!--
        GUI SCREEN: Ext1 Tab
    -->

```

```

        <!--
        GUI SCREEN: Voice Tab->Att Console Tab
        -->

        <!-- Att Console Key LED Pattern (Not Applicable for
        7832) -->
        <Application_LED
        ua="na">%APPLICATION_LED%/Application_LED>
        <Serv_Subscribe_Failed_LED
        ua="na">%SERV_SUBSCRIBE_FAILED_LED%/Serv_Subscribe_Failed_LED
        >
        <Serv_Subscribing_LED
        ua="na">%SERV_SUBSCRIBING_LED%/Serv_Subscribing_LED>
        <Parking_Lot_Idle_LED
        ua="na">%PARKING_LOT_IDLE_LED%/Parking_Lot_Idle_LED>
        <Parking_Lot_Busy_LED
        ua="na">%PARKING_LOT_BUSY_LED%/Parking_Lot_Busy_LED>
        <BLF_Idle_LED ua="na">%BLF_IDLE_LED%/BLF_Idle_LED>
        <BLF_Ringing_LED
        ua="na">%BLF_RINGING_LED%/BLF_Ringing_LED>
        <BLF_Busy_LED ua="na">%BLF_BUSY_LED%/BLF_Busy_LED>
        <BLF_Held_LED ua="na">%BLF_HELD_LED%/BLF_Held_LED>

        </flat-profile>
</device>

```

#### Phone-Specific File: <mac-address>\_CiscoDev.xml

**NOTE:** This is an example file and should be used for reference only.

```

<?xml version="1.0" encoding="UTF-8"?>
<device xsi:type="axl:XIPPhone"
xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance">
  <flat-profile>

    <!--
    GUI SCREEN: Voice Tab->System Tab
    -->

    <!-- DNS Settings-->
    <Primary_DNS ua="rw">%DNS_SERVER_1%/Primary_DNS>
    <Secondary_DNS ua="rw">%DNS_SERVER_2%/Secondary_DNS>

    <!--
    GUI SCREEN: Voice Tab->SIP Tab
    -->

    <!-- SIP Parameters -->
    <SIP_TCP_Port_Min
    ua="na">%SIP_TCP_MIN%/SIP_TCP_Port_Min>
    <SIP_TCP_Port_Max
    ua="na">%SIP_TCP_MAX%/SIP_TCP_Port_Max>

    <!-- Profile Rule Resync Timers -->
    <Resync_On_Reset ua="na">Yes</Resync_On_Reset>

```

```

        <Resync_At_HHmm_
ua="na">%RESYNC_TIME%</Resync_At_HHmm_>
        <Resync_At_Random_Delay
ua="na">%RESYNC_AT_RANDOM_DELAY%</Resync_At_Random_Delay>

        <Resync_Periodic
ua="na">%RESYNC_PERIODIC%</Resync_Periodic>
        <Resync_Error_Retry_Delay
ua="na">%RESYNC_ERROR%</Resync_Error_Retry_Delay>
        <Forced_Resync_Delay
ua="na">%RESYNC_FORCED%</Forced_Resync_Delay>

        <!--
*****
-->
        <!-- Broadsoft XSI Directory and CallLog
-->
        <!--
*****
-->
        <Login_User_ID ua="na">%BWLOGIN-ID-1%</Login_User_ID>
        <Login_Password ua="na">%XSIPASSWORD-
1%</Login_Password>

        <SIP_Auth_ID ua="na">%BWAUTHUSER-1%</SIP_Auth_ID>
        <SIP_Password ua="na">%BWAUTHPASSWORD-
1%</SIP_Password>

        <!-- Broadsoft XMPP -->
        <XMPP_Server ua="na">%BW_IMP_SERVICE_NET_ADDRESS-
1%</XMPP_Server>
        <XMPP_Port ua="na">%BW_IMP_SERVICE_PORT-1%</XMPP_Port>
        <XMPP_User_ID ua="na">%BW_USER_IMP_ID-
1%</XMPP_User_ID>
        <XMPP_Password ua="na">%BW_USER_IMP_PWD-
1%</XMPP_Password>

        <!--
GUI SCREEN: Voice Tab->Provisioning Tab
-->

        <!-- Profile Rule Resync Timers -->

        <!--
GUI SCREEN: Voice Tab->Regional Tab
-->

        <!-- Call Parking -->
        <Call_Park_Code ua="na">%BWFAC-CALL-PARK-
1%</Call_Park_Code>
        <Call_Unpark_Code ua="na">%BWFAC-CALL-PARK-RETRIEVE-
1%</Call_Unpark_Code>
        <!-- Call Pickup -->
        <Call_Pickup_Code ua="na">%BWFAC-DIRECTED-CALL-PICKUP-
1%</Call_Pickup_Code>
        <Group_Call_Pickup_Code ua="na">%BWFAC-CALL-PICKUP-
1%</Group_Call_Pickup_Code>
        <!-- Secure Call -->
        <Secure_Call_Option_1 ua="na">%SECURE_CALL_OPTION-
1%</Secure_Call_Option_1> <!-- Options:
Optional|Required|Strict -->

```

```

<!-- Time Zone -->
<Time_Zone ua="na">%BWTIMEZONE-1%</Time_Zone>

<!-- Daylight Savings Time -->
<Daylight_Saving_Time_Rule
ua="na">%DAYLIGHT_SAVING_TIME%</Daylight_Saving_Time_Rule> <!--
- options: Setting for North America Only; Refer to Admin
Guide for setting in your region -->
<Daylight_Saving_Time_Enable
ua="na">%DAYLIGHT_SAVING_TIME_ENABLE%</Daylight_Saving_Time_Enable>

<Language_Selection ua="na">%BWLLANGUAGE-
1%</Language_Selection> <!-- 88xx/78xx/68xx -->

<Phone_Language ua="na">%BWLLANGUAGE-
1%</Phone_Language>
<!-- available options:
Catalan|Chinese|Chinese_HongKong|Chinese_Taiwan|Czech|Danish|D
utch|English|English-US|Finnish|French|French_Canada|German

|Greek_Greece|Hungarian|Italian|Japanese|Korean|Norwegian|Pol
ish|Portuguese|Portuguese_Brazil|Russian|Spanish|Spanish_Colomb
ia|Swedish|Turkish|Ukrainian -->

<!-- Vertical Service Activation Codes -->
<!-- Exec Admin -->
<Exec_Assistant_Call_Initiate_Code
ua="na">%Exec_Assistant_Call_Initiate_Code%</Exec_Assistant_Ca
ll_Initiate_Code>
<Exec_Call_Filter_Act_Code
ua="na">%Exec_Call_Filter_Act_Code%</Exec_Call_Filter_Act_Code
>
<Exec_Call_Filter_Deact_Code
ua="na">%Exec_Call_Filter_Deact_Code%</Exec_Call_Filter_Deact_
Code>
<Exec_Assistant_Call_Push_Code
ua="na">%Exec_Assistant_Call_Push_Code%</Exec_Assistant_Call_P
ush_Code>
<Exec_Call_Retrieve_Code
ua="na">%Exec_Call_Retrieve_Code%</Exec_Call_Retrieve_Code>
<Exec_Call_Bridge_Code
ua="na">%Exec_Call_Bridge_Code%</Exec_Call_Bridge_Code>

<!--
GUI SCREEN: Voice Tab->Phone Tab
-->

<!-- Audio Settings -->
<Tune_speaker ua="rw">%Tune_speaker%</Tune_speaker>
<Microphone_Gain
ua="rw">%Microphone_Gain%</Microphone_Gain>
<Sidetone ua="rw">%Sidetone%</Sidetone>

<!-- General -->
<Station_Display_Name ua="na">%BWNAME-
1%</Station_Display_Name>

<!-- Voicemail Number-->
<Voice_Mail_Number ua="na">%BWVOICE-PORTAL-NUMBER-
1%</Voice_Mail_Number>

```

```

        <!-- Call Appearances Per Line -->
        <Call_Appearances_Per_Line
ua="na">%CALL_APPEARANCE%/Call_Appearances_Per_Line>

        <!--
        GUI SCREEN: Voice Tab->Ext1 Tab
        -->

        <!-- LINE1 SIP Settings -->
        <SIP_Transport_1_ ua="na">%SIP_TRANSPORT-
1%/SIP_Transport_1_>
        <SIP_UDP_Port_1_ ua="na">%SIP_UDP_PORT-
1%/SIP_UDP_Port_1_>

        <!-- LINE1 Share Line Appearance -->
        <Share_Ext_1_ ua="na">%BWSHAREDLINE-ENABLED-
1%/Share_Ext_1_>
        <Shared_User_ID_1_ ua="na">%BWLINERPORT-
1%/Shared_User_ID_1_>
        <Subscription_Expires_1_
ua="na">3600</Subscription_Expires_1_>

        <!-- LINE1 Call Feature Settings -->
        <Feature_Key_Sync_1_ ua="na">%BWDFS-ENABLED-
1%/Feature_Key_Sync_1_>
        <Auto_Ans_Page_On_Active_Call_1_
ua="na">%AUTO_ANS_ON_CALL-1%/Auto_Ans_Page_On_Active_Call_1_>
        <!-- Enable Yes for Advanced Call Control Hands free mode -->

        <!-- LINE1 Proxy and Registration -->
        <Proxy_1_ ua="na">%BWHOST-1%/Proxy_1_>

        <!-- LINE1 Subscriber Information -->
        <Display_Name_1_ ua="na">%BWNAME-1%/Display_Name_1_>
        <User_ID_1_ ua="na">%BWLINERPORT-1%/User_ID_1_>
        <Password_1_ ua="na">%BWAUTHPASSWORD-1%/Password_1_>
        <Auth_ID_1_ ua="na">%BWAUTHUSER-1%/Auth_ID_1_>
        <Reversed_Auth_Realm_1_
ua="na">%SIP_AUTH_REALM%/Reversed_Auth_Realm_1_>

        <!-- LINE1 Call Feature Settings -->
        <Conference_Bridge_URL_1_ ua="na">%BWNETWORK-
CONFERENCE-SIPURI-1%/Conference_Bridge_URL_1_>
        <Broadsoft_ACD_1_ ua="na">%BROADSOFT_ACD_ENABLE-
1%/Broadsoft_ACD_1_>
        <Enable_Broadsoft_Hoteling_1_
ua="na">%BROADSOFT_HOTELING_ENABLE-
1%/Enable_Broadsoft_Hoteling_1_>

        <!-- XSI Line Service -->
        <Login_User_ID_1_ ua="na"/>
        <Login_Password_1_ ua="na"/>

        <!-- RTP TOS Settings -->
        <Video_RTP_TOS_DiffServ_Value_1_
ua="na">%Video_RTP_TOS_DiffServ_Value_1_%/Video_RTP_TOS_Diffs
erv_Value_1_>

        <!--
        GUI SCREEN: Voice Tab->Ext2 Tab
        -->

```

```

        <!-- LINE2 SIP Settings -->
        <SIP_Transport_2_ ua="na">%SIP_TRANSPORT-
2%</SIP_Transport_2_>
        <SIP_UDP_Port_2_ ua="na">%SIP_UDP_PORT-
2%</SIP_UDP_Port_2_>

        <!-- LINE2 Share Line Appearance -->
        <Share_Ext_2_ ua="na">%BWSHAREDLINE-ENABLED-
2%</Share_Ext_2_>
        <Shared_User_ID_2_ ua="na">%BWLINPORT-
2%</Shared_User_ID_2_>
        <Subscription_Expires_2_
ua="na">3600</Subscription_Expires_2_>

        <!-- LINE2 Call Feature Settings -->
        <Feature_Key_Sync_2_ ua="na">%BWDFS-ENABLED-
2%</Feature_Key_Sync_2_>
        <Auto_Ans_Page_On_Active_Call_2_
ua="na">%AUTO_ANS_ON_CALL-2%</Auto_Ans_Page_On_Active_Call_2_>
<!-- Enable Yes for Advanced Call Control Hands free mode -->

        <!-- LINE2 Proxy and Registration -->
        <Proxy_2_ ua="na">%BWHOST-2%</Proxy_2_>

        <!-- LINE2 Subscriber Information -->
        <Display_Name_2_ ua="na">%BWNAME-2%</Display_Name_2_>
        <User_ID_2_ ua="na">%BWLINPORT-2%</User_ID_2_>
        <Password_2_ ua="na">%BWAUTHPASSWORD-2%</Password_2_>
        <Auth_ID_2_ ua="na">%BWAUTHUSER-2%</Auth_ID_2_>
        <Reversed_Auth_Realm_2_
ua="na">%SIP_AUTH_REALM%</Reversed_Auth_Realm_2_>

        <!-- LINE2 Call Feature Settings -->
        <Conference_Bridge_URL_2_ ua="na">%BWNWORK-
CONFERENCE-SIPURI-2%</Conference_Bridge_URL_2_>
        <Broadsoft_ACD_2_ ua="na">%BROADSOFT_ACD_ENABLE-
2%</Broadsoft_ACD_2_>
        <Enable_Broadsoft_Hoteling_2_
ua="na">%BROADSOFT_HOTELING_ENABLE-
2%</Enable_Broadsoft_Hoteling_2_>

        <!--
        GUI SCREEN: Voice Tab->Ext3 Tab
        -->

        <!-- LINE3 SIP Settings -->
        <SIP_Transport_3_ ua="na">%SIP_TRANSPORT-
3%</SIP_Transport_3_>
        <SIP_UDP_Port_3_ ua="na">%SIP_UDP_PORT-
3%</SIP_UDP_Port_3_>

        <!-- LINE3 Share Line Appearance -->
        <Share_Ext_3_ ua="na">%BWSHAREDLINE-ENABLED-
3%</Share_Ext_3_>
        <Shared_User_ID_3_ ua="na">%BWLINPORT-
3%</Shared_User_ID_3_>
        <Subscription_Expires_3_
ua="na">3600</Subscription_Expires_3_>

        <!-- LINE3 Call Feature Settings -->

```



```

        <Feature_Key_Sync_3_ ua="na">%BWDFS-ENABLED-
3%</Feature_Key_Sync_3_>
        <Auto_Ans_Page_On_Active_Call_3_
ua="na">%AUTO_ANS_ON_CALL-3%</Auto_Ans_Page_On_Active_Call_3_>

        <!-- LINE3 Proxy and Registration -->
        <Proxy_3_ ua="na">%BWHOST-3%</Proxy_3_>

        <!-- LINE3 Subscriber Information -->
        <Display_Name_3_ ua="na">%BWNAME-3%</Display_Name_3_>
        <User_ID_3_ ua="na">%BWLINEPORT-3%</User_ID_3_>
        <Password_3_ ua="na">%BWAUTHPASSWORD-3%</Password_3_>
        <Auth_ID_3_ ua="na">%BWAUTHUSER-3%</Auth_ID_3_>
        <Reversed_Auth_Realm_3_
ua="na">%SIP_AUTH_REALM%</Reversed_Auth_Realm_3_>

        <!-- LINE3 Call Feature Settings -->
        <Conference_Bridge_URL_3_ ua="na">%BWNETWORK-
CONFERENCE-SIPURI-3%</Conference_Bridge_URL_3_>
        <Broadsoft_ACD_3_ ua="na">%BROADSOFT_ACD_ENABLE-
3%</Broadsoft_ACD_3_>
        <Enable_Broadsoft_Hoteling_3_
ua="na">%BROADSOFT_HOTELING_ENABLE-
3%</Enable_Broadsoft_Hoteling_3_>

        <!--
        GUI SCREEN: Voice Tab->Ext4 Tab
        -->

        <!-- LINE4 SIP Settings -->
        <SIP_Transport_4_ ua="na">%SIP_TRANSPORT-
4%</SIP_Transport_4_>
        <SIP_UDP_Port_4_ ua="na">%SIP_UDP_PORT-
4%</SIP_UDP_Port_4_>

        <!-- LINE4 Share Line Appearance -->
        <Share_Ext_4_ ua="na">%BWSHAREDLINE-ENABLED-
4%</Share_Ext_4_>
        <Shared_User_ID_4_ ua="na">%BWLINEPORT-
4%</Shared_User_ID_4_>
        <Subscription_Expires_4_
ua="na">3600</Subscription_Expires_4_>

        <!-- LINE4 Call Feature Settings -->
        <Feature_Key_Sync_4_ ua="na">%BWDFS-ENABLED-
4%</Feature_Key_Sync_4_>
        <Auto_Ans_Page_On_Active_Call_4_
ua="na">%AUTO_ANS_ON_CALL-4%</Auto_Ans_Page_On_Active_Call_4_>

        <!-- LINE4 Proxy and Registration -->
        <Proxy_4_ ua="na">%BWHOST-4%</Proxy_4_>

        <!-- LINE4 Subscriber Information -->
        <Display_Name_4_ ua="na">%BWNAME-4%</Display_Name_4_>
        <User_ID_4_ ua="na">%BWLINEPORT-4%</User_ID_4_>
        <Password_4_ ua="na">%BWAUTHPASSWORD-4%</Password_4_>
        <Auth_ID_4_ ua="na">%BWAUTHUSER-4%</Auth_ID_4_>
        <Reversed_Auth_Realm_4_
ua="na">%SIP_AUTH_REALM%</Reversed_Auth_Realm_4_>

        <!-- LINE4 Call Feature Settings -->

```

```

        <Conference_Bridge_URL_4_ ua="na">%BWNWORK-
CONFERENCE-SIPURI-4%</Conference_Bridge_URL_4_>
        <Broadsoft_ACD_4_ ua="na">%BROADSOFT_ACD_ENABLE-
4%</Broadsoft_ACD_4_>
        <Enable_Broadsoft_Hoteling_4_
ua="na">%BROADSOFT_HOTELING_ENABLE-
4%</Enable_Broadsoft_Hoteling_4_>

        <!--
        GUI SCREEN: Voice Tab->Ext5 Tab
        -->

        <!-- LINE5 SIP Settings -->
        <SIP_Transport_5_ ua="na">%SIP_TRANSPORT-
5%</SIP_Transport_5_>
        <SIP_UDP_Port_5_ ua="na">%SIP_UDP_PORT-
5%</SIP_UDP_Port_5_>

        <!-- LINE5 Share Line Appearance -->
        <Share_Ext_5_ ua="na">%BWSHAREDLINE-ENABLED-
5%</Share_Ext_5_>
        <Shared_User_ID_5_ ua="na">%BWLINPORT-
5%</Shared_User_ID_5_>
        <Subscription_Expires_5_
ua="na">3600</Subscription_Expires_5_>

        <!-- LINE5 Call Feature Settings -->
        <Feature_Key_Sync_5_ ua="na">%BWDFS-ENABLED-
5%</Feature_Key_Sync_5_>
        <Auto_Ans_Page_On_Active_Call_5_
ua="na">%AUTO_ANS_ON_CALL-5%</Auto_Ans_Page_On_Active_Call_5_>
        <!-- Enable Yes for Advanced Call Control Hands free mode -->

        <!-- LINE5 Proxy and Registration -->
        <Proxy_5_ ua="na">%BWHOST-5%</Proxy_5_>

        <!-- LINE5 Subscriber Information -->
        <Display_Name_5_ ua="na">%BWNAME-5%</Display_Name_5_>
        <User_ID_5_ ua="na">%BWLINPORT-5%</User_ID_5_>
        <Password_5_ ua="na">%BWAUTHPASSWORD-5%</Password_5_>
        <Auth_ID_5_ ua="na">%BWAUTHUSER-5%</Auth_ID_5_>
        <Reversed_Auth_Realm_5_
ua="na">%SIP_AUTH_REALM%</Reversed_Auth_Realm_5_>

        <!-- LINE5 Call Feature Settings -->
        <Conference_Bridge_URL_5_ ua="na">%BWNWORK-
CONFERENCE-SIPURI-5%</Conference_Bridge_URL_5_>
        <Broadsoft_ACD_5_ ua="na">%BROADSOFT_ACD_ENABLE-
5%</Broadsoft_ACD_5_>
        <Enable_Broadsoft_Hoteling_5_
ua="na">%BROADSOFT_HOTELING_ENABLE-
5%</Enable_Broadsoft_Hoteling_5_>

        <!--
        GUI SCREEN: Voice Tab->Ext6 Tab
        -->

        <!-- LINE6 SIP Settings -->
        <SIP_Transport_6_ ua="na">%SIP_TRANSPORT-
6%</SIP_Transport_6_>
        <SIP_UDP_Port_6_ ua="na">%SIP_UDP_PORT-
6%</SIP_UDP_Port_6_>

```

```

        <!-- LINE6 Share Line Appearance -->
        <Share_Ext_6_ ua="na">%BWSHAREDLINE-ENABLED-
6%</Share_Ext_6_>
        <Shared_User_ID_6_ ua="na">%BWLINEPORT-
6%</Shared_User_ID_6_>
        <Subscription_Expires_6_
ua="na">3600</Subscription_Expires_6_>

        <!-- LINE6 Call Feature Settings -->
        <Feature_Key_Sync_6_ ua="na">%BWDFS-ENABLED-
6%</Feature_Key_Sync_6_>
        <Auto_Ans_Page_On_Active_Call_6_
ua="na">%AUTO_ANS_ON_CALL-6%</Auto_Ans_Page_On_Active_Call_6_>
<!-- Enable Yes for Advanced Call Control Hands free mode -->

        <!-- LINE6 Proxy and Registration -->
        <Proxy_6_ ua="na">%BWHOST-6%</Proxy_6_>

        <!-- LINE6 Subscriber Information -->
        <Display_Name_6_ ua="na">%BWNAME-6%</Display_Name_6_>
        <User_ID_6_ ua="na">%BWLINEPORT-6%</User_ID_6_>
        <Password_6_ ua="na">%BWAUTHPASSWORD-6%</Password_6_>
        <Auth_ID_6_ ua="na">%BWAUTHUSER-6%</Auth_ID_6_>
        <Reversed_Auth_Realm_6_
ua="na">%SIP_AUTH_REALM%</Reversed_Auth_Realm_6_>

        <!-- LINE6 Call Feature Settings -->
        <Conference_Bridge_URL_6_ ua="na">%BWNETWORK-
CONFERENCE-SIPURI-6%</Conference_Bridge_URL_6_>
        <Broadsoft_ACD_6_ ua="na">%BROADSOFT_ACD_ENABLE-
6%</Broadsoft_ACD_6_>
        <Enable_Broadsoft_Hoteling_6_
ua="na">%BROADSOFT_HOTELING_ENABLE-
6%</Enable_Broadsoft_Hoteling_6_>

        <!--
        GUI SCREEN: Voice Tab->Ext7 Tab
        -->

        <!-- LINE7 SIP Settings -->
        <SIP_Transport_7_ ua="na">%SIP_TRANSPORT-
7%</SIP_Transport_7_>
        <SIP_UDP_Port_7_ ua="na">%SIP_UDP_PORT-
7%</SIP_UDP_Port_7_>

        <!-- LINE7 Share Line Appearance -->
        <Share_Ext_7_ ua="na">%BWSHAREDLINE-ENABLED-
7%</Share_Ext_7_>
        <Shared_User_ID_7_ ua="na">%BWLINEPORT-
7%</Shared_User_ID_7_>
        <Subscription_Expires_7_
ua="na">3600</Subscription_Expires_7_>

        <!-- LINE7 Call Feature Settings -->
        <Feature_Key_Sync_7_ ua="na">%BWDFS-ENABLED-
7%</Feature_Key_Sync_7_>
        <Auto_Ans_Page_On_Active_Call_7_
ua="na">%AUTO_ANS_ON_CALL-7%</Auto_Ans_Page_On_Active_Call_7_>
<!-- Enable Yes for Advanced Call Control Hands free mode -->

        <!-- LINE7 Proxy and Registration -->

```

```

<Proxy_7_ ua="na">%BWHOST-7%/Proxy_7_>

<!-- LINE7 Subscriber Information -->
<Display_Name_7_ ua="na">%BWNAME-7%/Display_Name_7_>
<User_ID_7_ ua="na">%BWLINEPORT-7%/User_ID_7_>
<Password_7_ ua="na">%BWAUTHPASSWORD-7%/Password_7_>
<Auth_ID_7_ ua="na">%BWAUTHUSER-7%/Auth_ID_7_>
<Reversed_Auth_Realm_7_
ua="na">%SIP_AUTH_REALM%/Reversed_Auth_Realm_7_>

<!-- LINE7 Call Feature Settings -->
<Conference_Bridge_URL_7_ ua="na">%BWNETWORK-
CONFERENCE-SIPURI-7%/Conference_Bridge_URL_7_>
<Broadsoft_ACD_7_ ua="na">%BROADSOFT_ACD_ENABLE-
7%/Broadsoft_ACD_7_>
<Enable_Broadsoft_Hoteling_7_
ua="na">%BROADSOFT_HOTELING_ENABLE-
7%/Enable_Broadsoft_Hoteling_7_>

<!--
GUI SCREEN: Voice Tab->Ext8 Tab
-->

<!-- LINE8 SIP Settings -->
<SIP_Transport_8_ ua="na">%SIP_TRANSPORT-
8%/SIP_Transport_8_>
<SIP_UDP_Port_8_ ua="na">%SIP_UDP_PORT-
8%/SIP_UDP_Port_8_>

<!-- LINE8 Share Line Appearance -->
<Share_Ext_8_ ua="na">%BWSHAREDLINE-ENABLED-
8%/Share_Ext_8_>
<Shared_User_ID_8_ ua="na">%BWLINEPORT-
8%/Shared_User_ID_8_>
<Subscription_Expires_8_
ua="na">3600</Subscription_Expires_8_>

<!-- LINE8 Call Feature Settings -->
<Feature_Key_Sync_8_ ua="na">%BWDFS-ENABLED-
8%/Feature_Key_Sync_8_>
<Auto_Ans_Page_On_Active_Call_8_
ua="na">%AUTO_ANS_ON_CALL-8%/Auto_Ans_Page_On_Active_Call_8_>
<!-- Enable Yes for Advanced Call Control Hands free mode -->

<!-- LINE8 Proxy and Registration -->
<Proxy_8_ ua="na">%BWHOST-8%/Proxy_8_>

<!-- LINE8 Subscriber Information -->
<Display_Name_8_ ua="na">%BWNAME-8%/Display_Name_8_>
<User_ID_8_ ua="na">%BWLINEPORT-8%/User_ID_8_>
<Password_8_ ua="na">%BWAUTHPASSWORD-8%/Password_8_>
<Auth_ID_8_ ua="na">%BWAUTHUSER-8%/Auth_ID_8_>
<Reversed_Auth_Realm_8_
ua="na">%SIP_AUTH_REALM%/Reversed_Auth_Realm_8_>

<!-- LINE8 Call Feature Settings -->
<Conference_Bridge_URL_8_ ua="na">%BWNETWORK-
CONFERENCE-SIPURI-8%/Conference_Bridge_URL_8_>
<Broadsoft_ACD_8_ ua="na">%BROADSOFT_ACD_ENABLE-
8%/Broadsoft_ACD_8_>

```

```

        <Enable_Broadsoft_Hoteling_8_
ua="na">%BROADSOFT_HOTELING_ENABLE-
8%</Enable_Broadsoft_Hoteling_8_>

        <!--
        GUI_SCREEN: Voice Tab->Ext9 Tab
        -->

        <!-- LINE9 SIP Settings -->
        <SIP_Transport_9_ ua="na">%SIP_TRANSPORT-
9%</SIP_Transport_9_>
        <SIP_UDP_Port_9_ ua="na">%SIP_UDP_PORT-
9%</SIP_UDP_Port_9_>

        <!-- LINE9 Share Line Appearance -->
        <Share_Ext_9_ ua="na">%BWSHAREDLINE-ENABLED-
9%</Share_Ext_9_>
        <Shared_User_ID_9_ ua="na">%BWLINEPORT-
9%</Shared_User_ID_9_>
        <Subscription_Expires_9_
ua="na">3600</Subscription_Expires_9_>

        <!-- LINE9 Call Feature Settings -->
        <Feature_Key_Sync_9_ ua="na">%BWDFS-ENABLED-
9%</Feature_Key_Sync_9_>
        <Auto_Ans_Page_On_Active_Call_9_
ua="na">%AUTO_ANS_ON_CALL-9%</Auto_Ans_Page_On_Active_Call_9_>
<!-- Enable Yes for Advanced Call Control Hands free mode -->

        <!-- LINE9 Proxy and Registration -->
        <Proxy_9_ ua="na">%BWHOST-9%</Proxy_9_>

        <!-- LINE9 Subscriber Information -->
        <Display_Name_9_ ua="na">%BWNAME-9%</Display_Name_9_>
        <User_ID_9_ ua="na">%BWLINEPORT-9%</User_ID_9_>
        <Password_9_ ua="na">%BWAUTHPASSWORD-9%</Password_9_>
        <Auth_ID_9_ ua="na">%BWAUTHUSER-9%</Auth_ID_9_>
        <Reversed_Auth_Realm_9_
ua="na">%SIP_AUTH_REALM%</Reversed_Auth_Realm_9_>

        <!-- LINE9 Call Feature Settings -->
        <Conference_Bridge_URL_9_ ua="na">%BWNETWORK-
CONFERENCE-SIPURI-9%</Conference_Bridge_URL_9_>
        <Broadsoft_ACD_9_ ua="na">%BROADSOFT_ACD_ENABLE-
9%</Broadsoft_ACD_9_>
        <Enable_Broadsoft_Hoteling_9_
ua="na">%BROADSOFT_HOTELING_ENABLE-
9%</Enable_Broadsoft_Hoteling_9_>

        <!--
        GUI_SCREEN: Voice Tab->Ext10 Tab
        -->

        <!-- LINE10 SIP Settings -->
        <SIP_Transport_10_ ua="na">%SIP_TRANSPORT-
10%</SIP_Transport_10_>
        <SIP_UDP_Port_10_ ua="na">%SIP_UDP_PORT-
10%</SIP_UDP_Port_10_>

        <!-- LINE10 Share Line Appearance -->
        <Share_Ext_10_ ua="na">%BWSHAREDLINE-ENABLED-
10%</Share_Ext_10_>

```

```

        <Shared_User_ID_10_ ua="na">%BWLINEPORT-
10%/Shared_User_ID_10_>
        <Subscription_Expires_10_
ua="na">3600</Subscription_Expires_10_>

        <!-- LINE10 Call Feature Settings -->
        <Feature_Key_Sync_10_ ua="na">%BWDFS-ENABLED-
10%/Feature_Key_Sync_10_>
        <Auto_Ans_Page_On_Active_Call_10_
ua="na">%AUTO_ANS_ON_CALL-
10%/Auto_Ans_Page_On_Active_Call_10_> <!-- Enable Yes for
Advanced Call Control Hands free mode -->

        <!-- LINE10 Proxy and Registration -->
        <Proxy_10_ ua="na">%BWHOST-10%</Proxy_10_>

        <!-- LINE10 Subscriber Information -->
        <Display_Name_10_ ua="na">%BWNAME-
10%/Display_Name_10_>
        <User_ID_10_ ua="na">%BWLINEPORT-10%</User_ID_10_>
        <Password_10_ ua="na">%BWAUTHPASSWORD-
10%/Password_10_>
        <Auth_ID_10_ ua="na">%BWAUTHUSER-10%</Auth_ID_10_>
        <Reversed_Auth_Realm_10_
ua="na">%SIP_AUTH_REALM%</Reversed_Auth_Realm_10_>

        <!-- LINE10 Call Feature Settings -->
        <Conference_Bridge_URL_10_ ua="na">%BWNETWORK-
CONFERENCE-SIPURI-10%</Conference_Bridge_URL_10_>
        <Broadsoft_ACD_10_ ua="na">%BROADSOFT_ACD_ENABLE-
10%/Broadsoft_ACD_10_>
        <Enable_Broadsoft_Hoteling_10_
ua="na">%BROADSOFT_HOTELING_ENABLE-
10%/Enable_Broadsoft_Hoteling_10_>

        <!--
        GUI SCREEN: Voice Tab->Ext11 Tab
        -->

        <!-- LINE11 SIP Settings -->
        <SIP_Transport_11_ ua="na">%SIP_TRANSPORT-
11%/SIP_Transport_11_>
        <SIP_UDP_Port_11_ ua="na">%SIP_UDP_PORT-
11%/SIP_UDP_Port_11_>

        <!-- LINE11 Share Line Appearance -->
        <Share_Ext_11_ ua="na">%BWSHAREDLINE-ENABLED-
11%/Share_Ext_11_>
        <Shared_User_ID_11_ ua="na">%BWLINEPORT-
11%/Shared_User_ID_11_>
        <Subscription_Expires_11_
ua="na">3600</Subscription_Expires_11_>

        <!-- LINE11 Call Feature Settings -->
        <Feature_Key_Sync_11_ ua="na">%BWDFS-ENABLED-
11%/Feature_Key_Sync_11_>
        <Auto_Ans_Page_On_Active_Call_11_
ua="na">%AUTO_ANS_ON_CALL-
11%/Auto_Ans_Page_On_Active_Call_11_> <!-- Enable Yes for
Advanced Call Control Hands free mode -->

        <!-- LINE11 Proxy and Registration -->

```

```

        <Proxy_11_ ua="na">%BWHOST-11%</Proxy_11_>

        <!-- LINE11 Subscriber Information -->
        <Display_Name_11_ ua="na">%BWNAME-
11%</Display_Name_11_>
        <User_ID_11_ ua="na">%BWLINEPORT-11%</User_ID_11_>
        <Password_11_ ua="na">%BWAUTHPASSWORD-
11%</Password_11_>
        <Auth_ID_11_ ua="na">%BWAUTHUSER-11%</Auth_ID_11_>
        <Reversed_Auth_Realm_11_
ua="na">%SIP_AUTH_REALM%</Reversed_Auth_Realm_11_>

        <!-- LINE11 Call Feature Settings -->
        <Conference_Bridge_URL_11_ ua="na">%BWNETWORK-
CONFERENCE-SIPURI-11%</Conference_Bridge_URL_11_>
        <Broadsoft_ACD_11_ ua="na">%BROADSOFT_ACD_ENABLE-
11%</Broadsoft_ACD_11_>
        <Enable_Broadsoft_Hoteling_11_
ua="na">%BROADSOFT_HOTELING_ENABLE-
11%</Enable_Broadsoft_Hoteling_11_>

        <!--
        GUI SCREEN: Voice Tab->Ext12 Tab
        -->

        <!-- LINE12 SIP Settings -->
        <SIP_Transport_12_ ua="na">%SIP_TRANSPORT-
12%</SIP_Transport_12_>
        <SIP_UDP_Port_12_ ua="na">%SIP_UDP_PORT-
12%</SIP_UDP_Port_12_>

        <!-- LINE12 Share Line Appearance -->
        <Share_Ext_12_ ua="na">%BWSHAREDLINE-ENABLED-
12%</Share_Ext_12_>
        <Shared_User_ID_12_ ua="na">%BWLINEPORT-
12%</Shared_User_ID_12_>
        <Subscription_Expires_12_
ua="na">3600</Subscription_Expires_12_>

        <!-- LINE12 Call Feature Settings -->
        <Feature_Key_Sync_12_ ua="na">%BWDFS-ENABLED-
12%</Feature_Key_Sync_12_>
        <Auto_Ans_Page_On_Active_Call_12_
ua="na">%AUTO_ANS_ON_CALL-
12%</Auto_Ans_Page_On_Active_Call_12_> <!-- Enable Yes for
Advanced Call Control Hands free mode -->

        <!-- LINE12 Proxy and Registration -->
        <Proxy_12_ ua="na">%BWHOST-12%</Proxy_12_>

        <!-- LINE12 Subscriber Information -->
        <Display_Name_12_ ua="na">%BWNAME-
12%</Display_Name_12_>
        <User_ID_12_ ua="na">%BWLINEPORT-12%</User_ID_12_>
        <Password_12_ ua="na">%BWAUTHPASSWORD-
12%</Password_12_>
        <Auth_ID_12_ ua="na">%BWAUTHUSER-12%</Auth_ID_12_>
        <Reversed_Auth_Realm_12_
ua="na">%SIP_AUTH_REALM%</Reversed_Auth_Realm_12_>

        <!-- LINE12 Call Feature Settings -->

```

```

        <Conference_Bridge_URL_12_ ua="na">%BWNWORK-
CONFERENCE-SIPURI-12%</Conference_Bridge_URL_12_>
        <Broadsoft_ACD_12_ ua="na">%BROADSOFT_ACD_ENABLE-
12%</Broadsoft_ACD_12_>
        <Enable_Broadsoft_Hoteling_12_
ua="na">%BROADSOFT_HOTELING_ENABLE-
12%</Enable_Broadsoft_Hoteling_12_>

        <!--
        GUI SCREEN: Voice Tab->Ext13 Tab
        -->

        <!-- LINE13 SIP Settings -->
        <SIP_Transport_13_ ua="na">%SIP_TRANSPORT-
13%</SIP_Transport_13_>
        <SIP_UDP_Port_13_ ua="na">%SIP_UDP_PORT-
13%</SIP_UDP_Port_13_>

        <!-- LINE13 Share Line Appearance -->
        <Share_Ext_13_ ua="na">%BWSHAREDLINE-ENABLED-
13%</Share_Ext_13_>
        <Shared_User_ID_13_ ua="na">%BWLINEPORT-
13%</Shared_User_ID_13_>
        <Subscription_Expires_13
ua="na">3600</Subscription_Expires_13_>

        <!-- LINE13 Call Feature Settings -->
        <Feature_Key_Sync_13_ ua="na">%BWDFS-ENABLED-
13%</Feature_Key_Sync_13_>
        <Auto_Ans_Page_On_Active_Call_13_
ua="na">%AUTO_ANS_ON_CALL-
13%</Auto_Ans_Page_On_Active_Call_13_> <!-- Enable Yes for
Advanced Call Control Hands free mode -->

        <!-- LINE13 Proxy and Registration -->
        <Proxy_13_ ua="na">%BWHOST-13%</Proxy_13_>

        <!-- LINE13 Subscriber Information -->
        <Display_Name_13_ ua="na">%BWNAME-
13%</Display_Name_13_>
        <User_ID_13_ ua="na">%BWLINEPORT-13%</User_ID_13_>
        <Password_13_ ua="na">%BWAUTHPASSWORD-
13%</Password_13_>
        <Auth_ID_13_ ua="na">%BWAUTHUSER-13%</Auth_ID_13_>
        <Reversed_Auth_Realm_13_
ua="na">%SIP_AUTH_REALM%</Reversed_Auth_Realm_13_>

        <!-- LINE13 Call Feature Settings -->
        <Conference_Bridge_URL_13_ ua="na">%BWNWORK-
CONFERENCE-SIPURI-13%</Conference_Bridge_URL_13_>
        <Broadsoft_ACD_13_ ua="na">%BROADSOFT_ACD_ENABLE-
13%</Broadsoft_ACD_13_>
        <Enable_Broadsoft_Hoteling_13_
ua="na">%BROADSOFT_HOTELING_ENABLE-
13%</Enable_Broadsoft_Hoteling_13_>

        <!--
        GUI SCREEN: Voice Tab->Ext14 Tab
        -->

        <!-- LINE14 SIP Settings -->

```



```

        <SIP_Transport_14_ ua="na">%SIP_TRANSPORT-
14%/SIP_Transport_14_>
        <SIP_UDP_Port_14_ ua="na">%SIP_UDP_PORT-
14%/SIP_UDP_Port_14_>

        <!-- LINE14 Share Line Appearance -->
        <Share_Ext_14_ ua="na">%BWSHAREDLINE-ENABLED-
14%/Share_Ext_14_>
        <Shared_User_ID_14_ ua="na">%BWLINEPORT-
14%/Shared_User_ID_14_>
        <Subscription_Expires_14_
ua="na">3600</Subscription_Expires_14_>

        <!-- LINE14 Call Feature Settings -->
        <Feature_Key_Sync_14_ ua="na">%BWDFS-ENABLED-
14%/Feature_Key_Sync_14_>
        <Auto_Ans_Page_On_Active_Call_14_
ua="na">%AUTO_ANS_ON_CALL-
14%/Auto_Ans_Page_On_Active_Call_14_> <!-- Enable Yes for
Advanced Call Control Hands free mode -->

        <!-- LINE14 Proxy and Registration -->
        <Proxy_14_ ua="na">%BWHOST-14%/Proxy_14_>

        <!-- LINE14 Subscriber Information -->
        <Display_Name_14_ ua="na">%BWNAME-
14%/Display_Name_14_>
        <User_ID_14_ ua="na">%BWLINEPORT-14%/User_ID_14_>
        <Password_14_ ua="na">%BWAUTHPASSWORD-
14%/Password_14_>
        <Auth_ID_14_ ua="na">%BWAUTHUSER-14%/Auth_ID_14_>
        <Reversed_Auth_Realm_14_
ua="na">%SIP_AUTH_REALM%/Reversed_Auth_Realm_14_>

        <!-- LINE14 Call Feature Settings -->
        <Conference_Bridge_URL_14_ ua="na">%BWNETWORK-
CONFERENCE-SIPURI-14%/Conference_Bridge_URL_14_>
        <Broadsoft_ACD_14_ ua="na">%BROADSOFT_ACD_ENABLE-
14%/Broadsoft_ACD_14_>
        <Enable_Broadsoft_Hoteling_14_
ua="na">%BROADSOFT_HOTELING_ENABLE-
14%/Enable_Broadsoft_Hoteling_14_>

        <!--
        GUI SCREEN: Voice Tab->Ext15 Tab
        -->

        <!-- LINE15 SIP Settings -->
        <SIP_Transport_15_ ua="na">%SIP_TRANSPORT-
15%/SIP_Transport_15_>
        <SIP_UDP_Port_15_ ua="na">%SIP_UDP_PORT-
15%/SIP_UDP_Port_15_>

        <!-- LINE15 Share Line Appearance -->
        <Share_Ext_15_ ua="na">%BWSHAREDLINE-ENABLED-
15%/Share_Ext_15_>
        <Shared_User_ID_15_ ua="na">%BWLINEPORT-
15%/Shared_User_ID_15_>
        <Subscription_Expires_15_
ua="na">3600</Subscription_Expires_15_>

        <!-- LINE15 Call Feature Settings -->

```

```

        <Feature_Key_Sync_15_ ua="na">%BWDFS-ENABLED-
15%/Feature_Key_Sync_15_>
        <Auto_Ans_Page_On_Active_Call_15_
ua="na">%AUTO_ANS_ON_CALL-
15%/Auto_Ans_Page_On_Active_Call_15_> <!-- Enable Yes for
Advanced Call Control Hands free mode -->

        <!-- LINE15 Proxy and Registration -->
        <Proxy_15_ ua="na">%BWHOST-15%/Proxy_15_>

        <!-- LINE15 Subscriber Information -->
        <Display_Name_15_ ua="na">%BWNAME-
15%/Display_Name_15_>
        <User_ID_15_ ua="na">%BWLINEPORT-15%/User_ID_15_>
        <Password_15_ ua="na">%BWAUTHPASSWORD-
15%/Password_15_>
        <Auth_ID_15_ ua="na">%BWAUTHUSER-15%/Auth_ID_15_>
        <Reversed_Auth_Realm_15_
ua="na">%SIP_AUTH_REALM%/Reversed_Auth_Realm_15_>

        <!-- LINE15 Call Feature Settings -->
        <Conference_Bridge_URL_15_ ua="na">%BWNETWORK-
CONFERENCE-SIPURI-15%/Conference_Bridge_URL_15_>
        <Broadsoft_ACD_15_ ua="na">%BROADSOFT_ACD_ENABLE-
15%/Broadsoft_ACD_15_>
        <Enable_Broadsoft_Hoteling_15_
ua="na">%BROADSOFT_HOTELING_ENABLE-
15%/Enable_Broadsoft_Hoteling_15_>

        <!--
        GUI SCREEN: Voice Tab->Ext16 Tab
        -->

        <!-- LINE16 SIP Settings -->
        <SIP_Transport_16_ ua="na">%SIP_TRANSPORT-
16%/SIP_Transport_16_>
        <SIP_UDP_Port_16_ ua="na">%SIP_UDP_PORT-
16%/SIP_UDP_Port_16_>

        <!-- LINE16 Share Line Appearance -->
        <Share_Ext_16_ ua="na">%BWSHAREDLINE-ENABLED-
16%/Share_Ext_16_>
        <Shared_User_ID_16_ ua="na">%BWLINEPORT-
16%/Shared_User_ID_16_>
        <Subscription_Expires_16_
ua="na">3600</Subscription_Expires_16_>

        <!-- LINE16 Call Feature Settings -->
        <Feature_Key_Sync_16_ ua="na">%BWDFS-ENABLED-
16%/Feature_Key_Sync_16_>
        <Auto_Ans_Page_On_Active_Call_16_
ua="na">%AUTO_ANS_ON_CALL-
16%/Auto_Ans_Page_On_Active_Call_16_> <!-- Enable Yes for
Advanced Call Control Hands free mode -->

        <!-- LINE16 Proxy and Registration -->
        <Proxy_16_ ua="na">%BWHOST-16%/Proxy_16_>

        <!-- LINE16 Subscriber Information -->
        <Display_Name_16_ ua="na">%BWNAME-
16%/Display_Name_16_>
        <User_ID_16_ ua="na">%BWLINEPORT-16%/User_ID_16_>

```

```

        <Password_16_ ua="na">%BWAUTHPASSWORD-
16%</Password_16_>
        <Auth_ID_16_ ua="na">%BWAUTHUSER-16%</Auth_ID_16_>
        <Reversed_Auth_Realm_16_
ua="na">%SIP_AUTH_REALM%</Reversed_Auth_Realm_16_>

        <!-- LINE16 Call Feature Settings -->
        <Conference_Bridge_URL_16_ ua="na">%BWNWORK-
CONFERENCE-SIPURI-16%</Conference_Bridge_URL_16_>
        <Broadsoft_ACD_16_ ua="na">%BROADSOFT_ACD_ENABLE-
16%</Broadsoft_ACD_16_>
        <Enable_Broadsoft_Hoteling_16_
ua="na">%BROADSOFT_HOTELING_ENABLE-
16%</Enable_Broadsoft_Hoteling_16_>

        <!--
%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%
Start of Keys
%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%-->

        <!--
GUI SCREEN: Voice Tab->System Tab
-->

        <!--
GUI SCREEN: Voice Tab->SIP Tab
-->

        <!--
GUI SCREEN: Voice Tab->Regional Tab
-->

        <!--
GUI SCREEN: Voice Tab->Phone Tab
-->

        <!-- Programmable Line Keys (PLK)
                Note: Line Keys can be assigned as a
                        1) Extension/Multiple Line Appearance
Key
                        2) Function Key
                                A) Speed Dial
                                Example)

fnc=sd;ext=*55@$PROXY;nme=Direct VM Transfer
                                B) BLF
                                C) Monitored Call Park

-->

        <!-- Line Key 1 -->
        <Extension_1_ ua="na">%PLK-1%</Extension_1_> <!--
available options:
1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|Disabled -->
        <Short_Name_1_ ua="na">%USER%</Short_Name_1_>
        <Line_Label_1_ ua="na">%LINE_LABEL-1%</Line_Label_1_>
        <Share_Call_Appearance_1_ ua="na">%BWSHAREDLINE-
1%</Share_Call_Appearance_1_> <!-- options: private/shared -->
        <Extended_Function_1_ ua="na">%LINE_FUNCTION-
1%</Extended_Function_1_>

```

```

        <!-- Line Key 2 -->
        <Extension_2_ ua="na">%PLK-2%/Extension_2_ <!--
available options:
1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|Disabled -->
        <Short_Name_2_ ua="na">$USER</Short_Name_2_>
        <Line_Label_2_ ua="na">%LINE_LABEL-2%/Line_Label_2_>
        <Share_Call_Appearance_2_ ua="na">%BWSHAREDLINE-
2%/Share_Call_Appearance_2_ <!-- options: private/shared -->
        <Extended_Function_2_ ua="na">%LINE_FUNCTION-
2%/Extended_Function_2_>
        <!-- Line Key 3 -->
        <Extension_3_ ua="na">%PLK-3%/Extension_3_ <!--
available options:
1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|Disabled -->
        <Short_Name_3_ ua="na">$USER</Short_Name_3_>
        <Line_Label_3_ ua="na">%LINE_LABEL-3%/Line_Label_3_>
        <Share_Call_Appearance_3_ ua="na">%BWSHAREDLINE-
3%/Share_Call_Appearance_3_ <!-- options: private/shared -->
        <Extended_Function_3_ ua="na">%LINE_FUNCTION-
3%/Extended_Function_3_>
        <!-- Line Key 4 -->
        <Extension_4_ ua="na">%PLK-4%/Extension_4_ <!--
available options:
1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|Disabled -->
        <Short_Name_4_ ua="na">$USER</Short_Name_4_>
        <Line_Label_4_ ua="na">%LINE_LABEL-4%/Line_Label_4_>
        <Share_Call_Appearance_4_ ua="na">%BWSHAREDLINE-
4%/Share_Call_Appearance_4_ <!-- options: private/shared -->
        <Extended_Function_4_ ua="na">%LINE_FUNCTION-
4%/Extended_Function_4_>
        <!-- Line Key 5 -->
        <Extension_5_ ua="na">%PLK-5%/Extension_5_ <!--
available options:
1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|Disabled -->
        <Short_Name_5_ ua="na">$USER</Short_Name_5_>
        <Line_Label_5_ ua="na">%LINE_LABEL-5%/Line_Label_5_>
        <Share_Call_Appearance_5_ ua="na">%BWSHAREDLINE-
5%/Share_Call_Appearance_5_ <!-- options: private/shared -->
        <Extended_Function_5_ ua="na">%LINE_FUNCTION-
5%/Extended_Function_5_>
        <!-- Line Key 6 -->
        <Extension_6_ ua="na">%PLK-6%/Extension_6_ <!--
available options:
1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|Disabled -->
        <Short_Name_6_ ua="na">$USER</Short_Name_6_>
        <Line_Label_6_ ua="na">%LINE_LABEL-6%/Line_Label_6_>
        <Share_Call_Appearance_6_ ua="na">%BWSHAREDLINE-
6%/Share_Call_Appearance_6_ <!-- options: private/shared -->
        <Extended_Function_6_ ua="na">%LINE_FUNCTION-
6%/Extended_Function_6_>
        <!-- Line Key 7 -->
        <Extension_7_ ua="na">%PLK-7%/Extension_7_ <!--
available options:
1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|Disabled -->
        <Short_Name_7_ ua="na">$USER</Short_Name_7_>
        <Line_Label_7_ ua="na">%LINE_LABEL-7%/Line_Label_7_>
        <Share_Call_Appearance_7_ ua="na">%BWSHAREDLINE-
7%/Share_Call_Appearance_7_ <!-- options: private/shared -->
        <Extended_Function_7_ ua="na">%LINE_FUNCTION-
7%/Extended_Function_7_>
        <!-- Line Key 8 -->

```

```

        <Extension_8_ ua="na">%PLK-8%/Extension_8_> <!--
available options:
1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|Disabled -->
        <Short_Name_8_ ua="na">$USER</Short_Name_8_>
        <Line_Label_8_ ua="na">%LINE_LABEL-8%/Line_Label_8_>
        <Share_Call_Appearance_8_ ua="na">%BWSHAREDLINE-
8%/Share_Call_Appearance_8_> <!-- options: private/shared -->
        <Extended_Function_8_ ua="na">%LINE_FUNCTION-
8%/Extended_Function_8_>
        <!-- Line Key 9 -->
        <Extension_9_ ua="na">%PLK-9%/Extension_9_> <!--
available options:
1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|Disabled -->
        <Short_Name_9_ ua="na">$USER</Short_Name_9_>
        <Line_Label_9_ ua="na">%LINE_LABEL-9%/Line_Label_9_>
        <Share_Call_Appearance_9_ ua="na">%BWSHAREDLINE-
9%/Share_Call_Appearance_9_> <!-- options: private/shared -->
        <Extended_Function_9_ ua="na">%LINE_FUNCTION-
9%/Extended_Function_9_>
        <!-- Line Key 10 -->
        <Extension_10_ ua="na">%PLK-10%/Extension_10_> <!--
available options:
1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|Disabled -->
        <Short_Name_10_ ua="na">$USER</Short_Name_10_>
        <Line_Label_10_ ua="na">%LINE_LABEL-
10%/Line_Label_10_>
        <Share_Call_Appearance_10_ ua="na">%BWSHAREDLINE-
10%/Share_Call_Appearance_10_> <!-- options: private/shared -
->
        <Extended_Function_10_ ua="na">%LINE_FUNCTION-
10%/Extended_Function_10_>
        <!-- Line Key 11 -->
        <Extension_11_ ua="na">%PLK-11%/Extension_11_> <!--
available options:
1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|Disabled -->
        <Short_Name_11_ ua="na">$USER</Short_Name_11_>
        <Line_Label_11_ ua="na">%LINE_LABEL-
11%/Line_Label_11_>
        <Share_Call_Appearance_11_ ua="na">%BWSHAREDLINE-
11%/Share_Call_Appearance_11_> <!-- options: private/shared -
->
        <Extended_Function_11_ ua="na">%LINE_FUNCTION-
11%/Extended_Function_11_>
        <!-- Line Key 12 -->
        <Extension_12_ ua="na">%PLK-12%/Extension_12_> <!--
available options:
1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|Disabled -->
        <Short_Name_12_ ua="na">$USER</Short_Name_12_>
        <Line_Label_12_ ua="na">%LINE_LABEL-
12%/Line_Label_12_>
        <Share_Call_Appearance_12_ ua="na">%BWSHAREDLINE-
12%/Share_Call_Appearance_12_> <!-- options: private/shared -
->
        <Extended_Function_12_ ua="na">%LINE_FUNCTION-
12%/Extended_Function_12_>
        <!-- Line Key 13 -->
        <Extension_13_ ua="na">%PLK-13%/Extension_13_> <!--
available options:
1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|Disabled -->
        <Short_Name_13_ ua="na">$USER</Short_Name_13_>
        <Line_Label_13_ ua="na">%LINE_LABEL-
13%/Line_Label_13_>

```

```

    <Share_Call_Appearance_13_ ua="na">%BWSHAREDLINE-
13%/Share_Call_Appearance_13_> <!-- options: private/shared -
->
    <Extended_Function_13_ ua="na">%LINE_FUNCTION-
13%/Extended_Function_13_>
    <!-- Line Key 14 -->
    <Extension_14_ ua="na">%PLK-14%/Extension_14_> <!--
available options:
1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|Disabled -->
    <Short_Name_14_ ua="na">$USER</Short_Name_14_>
    <Line_Label_14_ ua="na">%LINE_LABEL-
14%/Line_Label_14_>
    <Share_Call_Appearance_14_ ua="na">%BWSHAREDLINE-
14%/Share_Call_Appearance_14_> <!-- options: private/shared -
->
    <Extended_Function_14_ ua="na">%LINE_FUNCTION-
14%/Extended_Function_14_>
    <!-- Line Key 15 -->
    <Extension_15_ ua="na">%PLK-15%/Extension_15_> <!--
available options:
1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|Disabled -->
    <Short_Name_15_ ua="na">$USER</Short_Name_15_>
    <Line_Label_15_ ua="na">%LINE_LABEL-
15%/Line_Label_15_>
    <Share_Call_Appearance_15_ ua="na">%BWSHAREDLINE-
15%/Share_Call_Appearance_15_> <!-- options: private/shared -
->
    <Extended_Function_15_ ua="na">%LINE_FUNCTION-
15%/Extended_Function_15_>
    <!-- Line Key 16 -->
    <Extension_16_ ua="na">%PLK-16%/Extension_16_> <!--
available options:
1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|Disabled -->
    <Short_Name_16_ ua="na">$USER</Short_Name_16_>
    <Line_Label_16_ ua="na">%LINE_LABEL-
16%/Line_Label_16_>
    <Share_Call_Appearance_16_ ua="na">%BWSHAREDLINE-
16%/Share_Call_Appearance_16_> <!-- options: private/shared -
->
    <Extended_Function_16_ ua="na">%LINE_FUNCTION-
16%/Extended_Function_16_>
    <!-- KEM Key 1 -->
    <Unit_1_Extension_1_
ua="na">Disabled</Unit_1_Extension_1_> <!-- available options:
1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|Disabled -->
    <Unit_1_Short_Name_1_
ua="na">$USER</Unit_1_Short_Name_1_>
    <Unit_1_Share_Call_Appearance_1_
ua="na">private</Unit_1_Share_Call_Appearance_1_> <!--
available options: private|shared -->
    <Unit_1_Key_1_ ua="na"></Unit_1_Key_1_>

    <!-- Miscellaneous Line Key Settings -->
    <Line_ID_Mapping
ua="na">%LINE_ID_MAPPING%</Line_ID_Mapping> <!-- Options:
Veritcal/Horizontal -->

    <!-- Shared Call Appearance Barge-in; Based Upon Ext1
User Settings. Change Index if required -->
    <SCA_Barge-In_Enable ua="na">%BWSCA-BRIDGING-ENABLED-
1%/SCA_Barge-In_Enable>

```

```

        <!-- Programmable Soft Keys (PSK)
            Note: PSK Keys can be assigned as a
                1) Speed Dial

                Example)
                    PSK_1:

fnc=sd;ext=*55@PROXY;nme="VM Xfer"
-->

        <!-- Extension Mobility-->
        <EM_Enable ua="na">%EM_ENABLED%/EM_Enable>

        <!-- Programmable Soft-Keys (PSK) -->
        <Programmable_Softkey_Enable
ua="na">%PSK_ENABLE%/Programmable_Softkey_Enable>

        <!-- PSK CallState List -->
        <Device_Key_List
ua="na">%DEVICE_KEY_LIST%/Device_Key_List>
        <Idle_Key_List ua="na">%IDLE_KEY_LIST%/Idle_Key_List>
        <Connected_Meeting_Key_List
ua="na">%CONNECTED_MEETING_LIST%/Connected_Meeting_Key_List>
        <Dialing_Input_Key_List
ua="na">%DIALING_INPUT_KEY_LIST%/Dialing_Input_Key_List>
        <Progressing_Key_List
ua="na">%PROGRESSING_KEY_LIST%/Progressing_Key_List>
        <Connected_Key_List
ua="na">%CONNECTED_KEY_LIST%/Connected_Key_List>
        <Start-Xfer_Key_List ua="na">%START-
XFER_KEY_LIST%/Start-Xfer_Key_List>
        <Start-Conf_Key_List ua="na">%START-
CONF_KEY_LIST%/Start-Conf_Key_List>
        <Conferencing_Key_List
ua="na">%CONFERENCING_KEY_LIST%/Conferencing_Key_List>
        <Releasing_Key_List
ua="na">%RELEASING_KEY_LIST%/Releasing_Key_List>
        <Hold_Key_List ua="na">%HOLD_KEY_LIST%/Hold_Key_List>
        <Ringing_Key_List
ua="na">%RINGING_KEY_LIST%/Ringing_Key_List>
        <Shared_Active_Key_List
ua="na">%SHARED_ACTIVE_KEY_LIST%/Shared_Active_Key_List>
        <Shared_Held_Key_List
ua="na">%SHARED_HELD_KEY_LIST%/Shared_Held_Key_List>
        <Off_Hook_Key_List
ua="na">%OFF_HOOK_KEY_LIST%/Off_Hook_Key_List>
        <New_Call_Recents_Key_List
ua="na">%NEW_CALL_RECENTS_KEY_LIST%/New_Call_Recents_Key_List
>
        <On_Hook_Dial_Key_List
ua="na">%ON_HOOK_DIAL_KEY_LIST%/On_Hook_Dial_Key_List>

        <!-- Custom PSK Functions -->
        <PSK_1 ua="na">%PSK-1%/PSK_1>
        <PSK_2 ua="na">%PSK-2%/PSK_2>
        <PSK_3 ua="na">%PSK-3%/PSK_3>
        <PSK_4 ua="na">%PSK-4%/PSK_4>
        <PSK_5 ua="na">%PSK-5%/PSK_5>
        <PSK_6 ua="na">%PSK-6%/PSK_6>
        <PSK_7 ua="na">%PSK-7%/PSK_7>
        <PSK_8 ua="na">%PSK-8%/PSK_8>

```

```

<PSK_9 ua="na">%PSK-9%/PSK_9>
<PSK_10 ua="na">%PSK-10%/PSK_10>
<PSK_11 ua="na">%PSK-11%/PSK_11>
<PSK_12 ua="na">%PSK-12%/PSK_12>
<PSK_13 ua="na">%PSK-13%/PSK_13>
<PSK_14 ua="na">%PSK-14%/PSK_14>
<PSK_15 ua="na">%PSK-15%/PSK_15>
<PSK_16 ua="na">%PSK-16%/PSK_16>

<!--
GUI SCREEN: Voice Tab->User Tab
-->
<Auto_Answer_Page
ua="na">%AUTO_ANSWER_PAGE%/Auto_Answer_Page>

<!-- Shared Line - Hide DND/CFWD SoftKeys (Optional) -
->
<Shared_Line_DND_Cfwd_Enable ua="na">%SHARED-LINE-DND-
CFWD-ENABLE%/Shared_Line_DND_Cfwd_Enable>

<!--
GUI SCREEN: Voice Tab->Att Console Tab
-->

<!-- BLF LIST Management -->
<BLF_List_URI ua="na">%BWBLF-URI-1%/BLF_List_URI>
<Use_Line_Keys_For_BLF_List
ua="na">%USE_LINE_KEYS_FOR_BLF%/Use_Line_Keys_For_BLF_List>
<BLF_Label_Display_Mode
ua="na">%BLF_DISPLAY MODE%/BLF_Label_Display_Mode> <!--
Options: Name, Ext, Both -->
</flat-profile>
</device>

```

### System File: Default <model>-3PCC.xml

**NOTE:** This is an example file and should be used for reference only.

```

<?xml version="1.0" encoding="UTF-8"?>
<device xsi:type="axl:XIPPhone"
xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance">
  <flat-profile>

    <!--
      GUI SCREEN: Voice Tab - Provisioning Tab
    -->

    <!-- Profile Rule Resync Timers -->
    <Resync_On_Reset ua="na">Yes</Resync_On_Reset>
    <Resync_At_HHmn ua="na"></Resync_At_HHmn>
    <Resync_At_Random_Delay ua="na">2</Resync_At_Random_Delay>
    <Resync_Periodic ua="na">300</Resync_Periodic>
    <Resync_Error_Retry_Delay
ua="na">600</Resync_Error_Retry_Delay>
    <Forced_Resync_Delay ua="na">1800</Forced_Resync_Delay>

    <!-- Profile Rule -->

```



```
<Profile_Rule
ua="na">http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDM
SCONTEXT%/CP-78-88-68-3PCC/CiscoDev-
3PCC_Bootstrap.xml</Profile_Rule>

</flat-profile>
</device>
```

## System File: Default CiscoDev-3PCC\_Bootstrap\_def.xml

**NOTE:** This is an example file and should be used for reference only.

```
<?xml version="1.0" encoding="UTF-8"?>
<device xsi:type="axl:XIPPhone"
xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance">
  <flat-profile>

    <!--
      GUI SCREEN: Voice Tab - Provisioning Tab
    -->

    <!-- Profile Rule Resync Timers -->
    <Resync_On_Reset ua="na">Yes</Resync_On_Reset>
    <Resync_At_Random_Delay
ua="na">600</Resync_At_Random_Delay>

    <Resync_At_Random_Delay
ua="na">1</Resync_At_Random_Delay>
    <Resync_Periodic ua="na">60</Resync_Periodic>
    <Resync_Error_Retry_Delay
ua="na">300</Resync_Error_Retry_Delay>
    <Forced_Resync_Delay ua="na">600</Forced_Resync_Delay>

    <!-- Configuration Profile current -->
    <!-- ex:      http://10.89.81.183:80/dms/Cisco-CP-
78xx-88xx-68xx-3PCC/CiscoDev-3PCC_Bootstrap.xml -->
    <Profile_Rule
ua="na">https://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWD
MSCONTEXT%/CP-78-88-68-3PCC/CiscoDev-
3PCC_Bootstrap.xml</Profile_Rule>

    <!-- 3rd Party ROOT CA Settings: (HTTPS/TLS/SRTP) -
OPTIONAL -->
    <!--
    <Custom_CA_Rule
ua="na">%ACCESS_PROTOCOL%BWDEVICEACCESSFQDN%:BWDEVICEACCESSP
ORT%/%BWDMSCONTEXT%/BWDEVICEACCESSURI%%3RD_PARTY_CA_ROOT%</Cu
stom_CA_Rule>
    -->

  </flat-profile>
</device>t-profile>
</device>
```

## References

---

- [1] Cisco Systems, Inc. 2022. *Cisco IP Phone 6800/7800/8800 Series Multiplatform Phones Administration Guide*. Available from Cisco at [cisco.com](https://www.cisco.com).
- [2] Cisco Systems, Inc. 2024. Cisco IP Phone 9800 Series Administration. Available from <https://help.webex.com/en-us/landing/ld-n0mkkj8-CiscoDeskPhone9800Series/BroadWorks#Administration>
- [3] Cisco Systems, Inc. 2022. *Cisco BroadWorks Device Management Configuration Guide, Release 23.0*. Available from Cisco at [BW-DeviceManagementConfigGuide](#).
- [4] Cisco Systems, Inc. 2022. *Cisco BroadWorks Redundancy Guide, Release 22.0*. Available from Cisco at [BW-RedundancyGuide](#).
- [5] Cisco Systems, Inc. 2022. *Cisco BroadWorks CPE Kit Usage Guide, Release 22.0*. Available from Cisco by request.