

# Catalyst 4500 Series Switch VSS Member Replacement Configuration Example



Document ID: 117640

Contributed by Sunny Singh and Luke Primm, Cisco TAC Engineers.  
Apr 22, 2014

## Contents

### Introduction

#### Prerequisites

Components Used

#### Configure

Step 1 – Identify Switch Roles

Step 2 – Failover

Step 3 – Verify failover

Step 4 – Switch Removal

Step 5 – Stage and Install the Replacement Switch

Step 6 – Configure and Join the VSS

#### Verify

#### Common Problems

VSL Remains Down

#### Troubleshoot

#### Related Information:

## Introduction

This document describes the switch replacement procedure for Cisco Catalyst 4500 Series Switches that run in Virtual Switching System (VSS) mode.

## Prerequisites

Cisco recommends that you have knowledge of these topics:

- Cisco VSS
- VSS Active and VSS Standby Switch
- Virtual Switch Link (VSL)

## Components Used

The information in this document is based on the WS-C4500X-32 with Cisco IOS® Version 03.05.01. However, the same process can be applied to a 4500 chassis with a Supervisor 7 Engine (Sup7).

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, make sure that you understand the potential impact of any command.



## Configure

*Note:* Cisco recommends that conversion to VSS is done in a maintenance window if possible.

### Step 1 – Identify Switch Roles

The first step is to identify the switch that must be replaced. In this example, the active switch (Switch 1) must be replaced. The *show switch virtual* command provides the active and standby information.


```
4500X-VSS#show switch virtual
```

Executing the command on VSS member switch role = VSS Active, id = 1

```
Switch mode          : Virtual Switch
Virtual switch domain number : 100
Local switch number  : 1
Local switch operational role: Virtual Switch Active
Peer switch number   : 2
Peer switch operational role : Virtual Switch Standby
```

Executing the command on VSS member switch role = VSS Standby, id = 2

```
Switch mode          : Virtual Switch
Virtual switch domain number : 100
Local switch number  : 2
Local switch operational role: Virtual Switch Standby
Peer switch number   : 1
Peer switch operational role : Virtual Switch Active
```

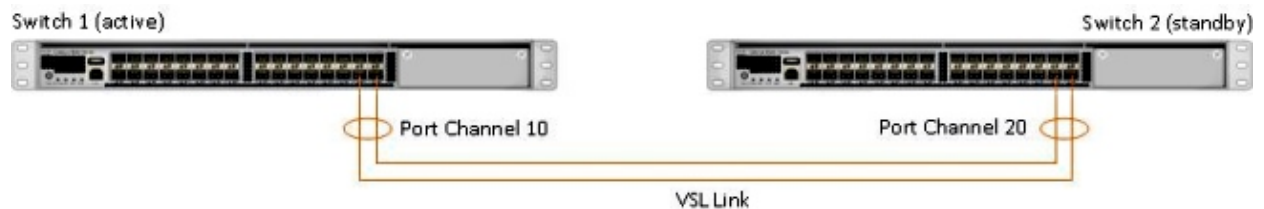

### Step 2 – Failover

Now, you understand which switch is active (Switch 1) and which switch is in the standby state (Switch 2). The next step is to failover the control plane responsibilities to Switch 2 so that you can prepare for the replacement of Switch 1. The *redundancy force-switchover* command performs the needed operation.

*Note:* Redundancy failover can cause downtime dependent upon the operational redundancy state. Realize that this step fully reloads the current active (Switch 1) in order to pass control responsibilities to the peer (Switch 2).

```
4500X-VSS#redundancy force-switchover
```

```
This will reload the active unit and force switchover to standby[confirm]
Preparing for switchover..
```

```
*Mar  2 13:38:06.553: %SYS-5-SWITCHOVER: Switchover requested by Exec. Reason:
Stateful Switchover.
```

<Sun Mar 2 13:38:09 2014> Message from sysmgr: Reason Code:[3] Reset Reason:  
Reset/Reload requested by [console]. [Reload command]

### Step 3 – Verify failover

Before you remove the faulty switch, you must verify that the system has fully failed over. In order to verify the redundancy state, enter the *show redundancy* command.

```
4500X-VSS#show redundancy
```

```
Redundant System Information :
```

```
-----  
Available system uptime = 1 week, 3 days, 22 hours, 37 minutes  
Switchovers system experienced = 8  
Standby failures = 0  
Last switchover reason = user_forced
```

```
Hardware Mode = Duplex  
Configured Redundancy Mode = Stateful Switchover  
Operating Redundancy Mode = Stateful Switchover  
Maintenance Mode = Disabled  
Communications = Up
```

```
Current Processor Information :
```

```
-----  
Active Location = slot 2/1  
Current Software state = ACTIVE  
Uptime in current state = 55 minutes  
Image Version = Cisco IOS Software, IOS-XE Software, Catalyst  
4500 L3 Switch Software (cat4500e-UNIVERSAL-M),  
Version 03.05.01.E RELEASE SOFTWARE (fc2)  
Technical Support: http://www.cisco.com/techsupport  
Copyright (c) 1986-2013 by Cisco Systems, Inc.  
Compiled Sat 23-Nov-13 00:46 by prod_re  
BOOT = bootflash:cat4500e-universal.SPA.03.05.01.E.152-1.E1.bin,1;  
Configuration register = 0x2102
```

```
Peer Processor Information :
```


```
-----  
Standby Location = slot 1/1  
Current Software state = STANDBY HOT  
Uptime in current state = 0 minute  
Image Version = Cisco IOS Software, IOS-XE Software,  
Catalyst 4500 L3 Switch Software (cat4500e-UNIVERSAL-M),  
Version 03.05.01.E RELEASE SOFTWARE (fc2)  
Technical Support: http://www.cisco.com/techsupport  
Copyright (c) 1986-2013 by Cisco Systems, Inc.  
Compiled Sat 23-Nov-13 00:46 by prod_  
BOOT = bootflash:cat4500e-universal.SPA.03.05.01.E.152-1.E1.bin,1;  
Configuration register = 0x2102
```

In the output, the *Current Software state = STANDBY HOT* shows that the system has stabilized and is fully synced at this time. You can now proceed with the physical removal of the switch.

### Step 4 – Switch Removal

At this time, the failed switch is ready for physical removal. It is very important to realize that if your topology is not fully redundant upon removal, you will sustain a service impact. Cisco recommends that you implement Multichassis EtherChannel (MEC) in order to help ensure that links remain active.

## Simple Multichassis EtherChannel® (MEC) Example

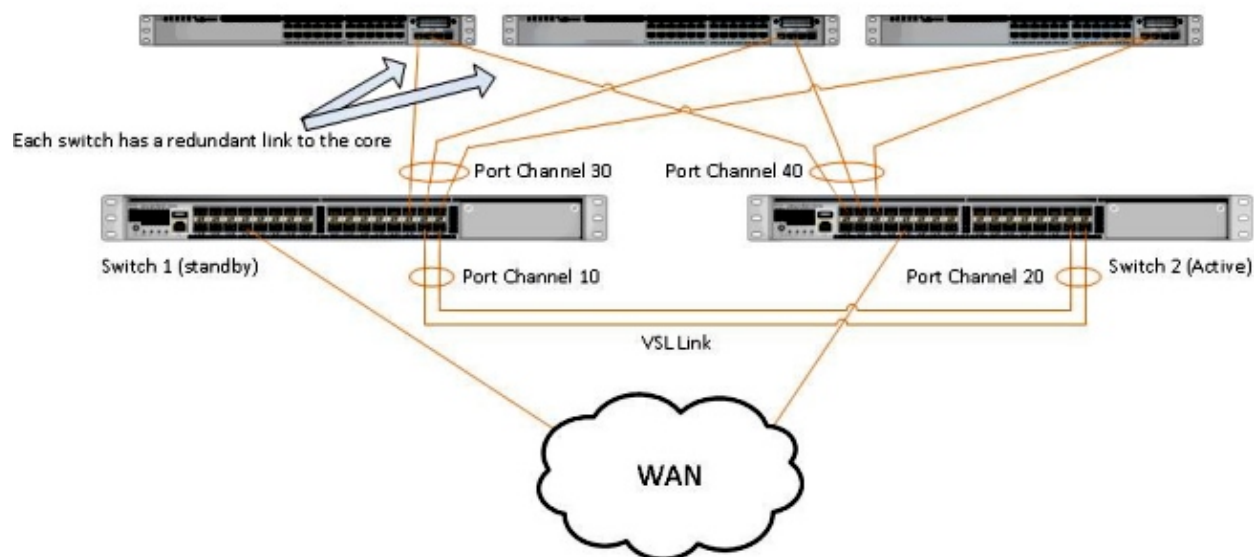

**Note:** MEC is an EtherChannel with ports that terminate on both switches of the VSS. A VSS MEC can connect to any network element that supports EtherChannel (such as a host, server, router, or switch).

## Step 5 – Stage and Install the Replacement Switch

You must use the same Cisco IOS image and license feature-set in the standby chassis for this chassis in order to properly join the current VSS domain. This example involves the download and install of Version 03.05.01 in order to match the current peer. Once installed, the physical links must be connected in the exact placement of the switch that was replaced and then the switch must be booted. The switch should now come online with a blank configuration and in a *standalone* state since it has not been configured as a VSS member yet.

## Step 6 – Configure and Join the VSS

You must set the VSS domain and the switch number.

**Note:** This is the same information that the previous switch would have used. In this example, the domain is **100** and the switch number is **1**.

```
4500X-VSS(config)#switch virtual domain 100
4500X-VSS(config-vs-domain)#switch 1
```

Next you must set up the physical interfaces and port-channels that are used for the VSL link.

```
4500X-VSS(config)# interface Port-channel 10
4500X-VSS(config-if)#switchport
4500X-VSS(config-if)#switch virtual link 1
4500X-VSS(config)# int range tenGigabitEthernet 1/1/15-16
4500X-VSS(config-if-range) channel-group 10 mode on
```

Lastly, you must convert the switch mode from *standalone* to *virtual*. Once this configuration has been made, the switch will be reloaded.

```
4500X-VSS# switch convert mode virtual
```

When Switch 1 completes its reload, it detects the current active VSS switch from the VSL link and

automatically syncs the configuration.

## Verify

Your switches should now be back in a fully redundant VSS. The *show switch virtual* command ensures that each switch is in the correct state. In order to verify that you are back in stateful switchover (SSO), or the *hot standby* state, enter another *show redundancy* command.

```
4500X-VSS#show switch virtual
```

```
Executing the command on VSS member switch role = VSS Active, id = 2
```

```
Switch mode                : Virtual Switch
Virtual switch domain number : 100
Local switch number        : 2
Local switch operational role: Virtual Switch Active
Peer switch number         : 1
Peer switch operational role: Virtual Switch Standby
```

```
Executing the command on VSS member switch role = VSS Standby, id = 1
```

```
Switch mode                : Virtual Switch
Virtual switch domain number : 100
Local switch number        : 1
Local switch operational role: Virtual Switch Standby
Peer switch number         : 2
Peer switch operational role: Virtual Switch Active
```

```
4500X-VSS#show redundancy
```

```
Redundant System Information :
```

```
-----
Available system uptime = 1 week, 4 days, 9 hours, 27 minutes
Switchovers system experienced = 8
Standby failures = 0
Last switchover reason = user_forced
```

```
Hardware Mode = Duplex
Configured Redundancy Mode = Stateful Switchover
Operating Redundancy Mode = Stateful Switchover
Maintenance Mode = Disabled
Communications = Up
```

```
Current Processor Information :
```

```
-----
Active Location = slot 2/1
Current Software state = ACTIVE
Uptime in current state = 1 hours, 3 minutes
Image Version = Cisco IOS Software, IOS-XE Software, Catalyst 4500
L3 Switch Software (cat4500e-UNIVERSAL-M), Version
03.05.01.E RELEASE SOFTWARE (fc2)
```

```
Technical Support: http://www.cisco.com/techsupport
```

```
Copyright (c) 1986-2013 by Cisco Systems, Inc.
```

```
Compiled Sat 23-Nov-13 00:46 by prod_re
```

```
BOOT = bootflash:cat4500e-universal.SPA.03.05.01.E.152-1.E1.bin,1;
```

```
Configuration register = 0x2102
```

```
Peer Processor Information :
```

```
-----
Standby Location = slot 1/1
Current Software state = STANDBY HOT
Uptime in current state = 1 hours, 3 minutes
Image Version = Cisco IOS Software, IOS-XE Software, Catalyst 4500
```

## Common Problems

### VSL Remains Down

If the VSL remains down while one or both of the switches finish booting, you might enter a dual active situation if there is no dual active detection mechanism in place. The system remains dual active until a peer supervisor is detected (often by bringing up the VSL link after the switch has booted). Once the dual active condition is detected, one of the supervisors is put into recovery mode, and shuts down all local interfaces to the chassis it is in. Once the VSL link is fully restored, the switch/supervisor in recovery mode must be reloaded so that it can properly renegotiate as a standby in the VSS.

## Troubleshoot

In order to verify the VSL link, enter:

```
4500X-VSS#show switch virtual link
```

```
Executing the command on VSS member switch role = VSS Active, id = 2
```

```
VSL Status : UP  
VSL Uptime : 11 hours, 53 minutes  
VSL Control Link : Te2/1/1  
VSL Encryption : Configured Mode - Off, Operational Mode - Off
```

```
Executing the command on VSS member switch role = VSS Standby, id = 1
```

```
VSL Status : UP  
VSL Uptime : 11 hours, 53 minutes  
VSL Control Link : Te1/1/1  
VSL Encryption : Configured Mode - Off, Operational Mode - Off
```

For the VSS to operate with SSO redundancy, the VSS must meet these conditions:

- Identical software versions on both switches
- VSL configuration consistency

In the startup sequence, the VSS Standby switch sends virtual switch information from the startup-config file to the VSS Active switch.

The VSS Active switch ensures that this information matches correctly on both switches:

- Switch virtual domain
- Switch virtual node
- Switch priority (optional)
- VSL port channel: switch virtual link identifier
- VSL ports: channel-group number, shutdown, total number of VSL ports

## Related Information:

- *Catalyst 4500 Series Switch Cisco IOS Release XE 3.5.0E and 15.2.1*
- *Technical Support & Documentation – Cisco Systems*

---

Updated: Apr 22, 2014

Document ID: 117640

---