



Configuring Application Visibility and Control

Use configuration templates in Cisco Prime Infrastructure to design the set of device configurations that you need to set up the devices in a branch or change the feature configuration for a device from the Device Work Center.

- [Configuring the Device using WSMA](#)
- [Configuring Application Visibility](#)
- [Creating a VPN Component Template](#)
- [Configuring an Easy VPN Server](#)
- [Redirecting HTTP and HTTPS Traffic](#)
- [Configuring Interfaces](#)
- [Configuring Cellular WAN Interfaces](#)
- [Configuring Network Address Translation \(NAT\)](#)
- [Configuring DMVPN](#)
- [Configuring GETVPN](#)
- [Configuring Network Address Translation \(NAT\)](#)
- [Creating a Zone-Based Firewall](#)
- [Creating a Routing Protocol](#)

Configuring the Device using WSMA

Prime Infrastructure mainly uses the CLI method (over Telnet or SSHv2) to configure the devices. In Cisco Prime Infrastructure 2.2, you can use WSMA (over SSHv2) for configuring specific features on the ASR and ISR devices. Cisco Web Services Management Agent is a more efficient and more robust method to configure the devices. Prime Infrastructure supports Zone Based Firewall and Application Visibility configuration via WSMA on the ASR and ISR devices.

To configure Zone Based Firewall or Application Visibility via WSMA, follow these steps:

-
- Step 1** Add or edit the device in Prime Infrastructure to use SSHv2 (rather than Telnet) as the management transport protocol.
- a. When you add the device with automatic discovery, enter the SSH credentials. ([Adding Devices Using Discovery](#).)

- b. When you add the devices manually ([Adding Devices Manually](#)), in Step 2, select SSH2 as the protocol.

Step 2 If the device is also managed by Prime Infrastructure which is not configured to use SSH2, edit the device credentials:

- a. Choose **Inventory > Device Management > Network Devices**.
- b. Select the device and click **Edit**.
- c. Change the protocol to **SSH2**.
- d. Click **Update**.

Step 3 Activate a WSMA profile on the device by configuring a WSMA configuration profile as follows:

```
#configure terminal
wsma agent config profile PIwsmaConfigServiceSSH
#exit

#wsma profile listener PIwsmaConfigServiceSSH
no wsse authorization level 15
transport ssh subsystem wsma-config
#exit
```

For more information about WSMA, see the [WSMA Configuration Guide](#).

Step 4 Configure a configuration archive, which will be used by WSMA for handling transactional configurations and rollbacks by using the following CLI commands on the device:

```
#configure terminal
archive
log config
hidekeys
path flash:roll
maximum 5
#end
```

For more information about configuration archives, see the [Cisco IOS Configuration Fundamentals Command Reference Guide](#).

Configuring Application Visibility

The Application Visibility feature allows you to monitor traffic on specific interfaces and generate performance and bandwidth-statistics reports that supply information to the various dashlets and reports in Prime Infrastructure. Devices send these reports to Prime Infrastructure, and each report supplies information to a subset of the Prime Infrastructure dashlets and reports. Prime Infrastructure can configure Application Visibility either through CLI (over Telnet or SSH) or through WSMA. Application Visibility can be configured through WSMA in a more efficient and robust method and we recommend that you use the WSMA protocols for configuring Application Visibility. For more information on using WSMA with Prime Infrastructure, see the section [Configuring the Device using WSMA](#).

The Application Visibility feature is supported on the following platforms:

- ASR 1000 series platform from Cisco IOS-XE Release 15.3(1)S1 or later
- ISR G2 platform from Cisco IOS Release 15.2(4)M2 or later
- ISR 4300 and 4400 series platform from Cisco IOS-XE Release 15.3(2)S or later

- CSR platform from Cisco IOS-XE Release 15.3(2)S or later

Application Visibility is configured differently on different platforms and IOS releases. Newer IOS releases provide new mechanisms with better performance for setting up the Application Visibility and Control (AVC). Thus when upgrading an ASR 1000, CSR or ISR 4400 platforms running IOS-XE release prior to 15.4(1)S to an IOS-XE release 15.4(1)S or later, or when upgrading an ISR-G2 platform running IOS release prior to 15.4(1)T to IOS release 15.4(1)T or later, we recommend that you re-configure the AVC on these devices.

To simplify configuration, the Application Visibility feature is split into four types of metric and NetFlow reports:

Report	Description
Traffic Statistics	Sends the statistics on the bandwidth consumed by each of the NBAR-recognized applications on a per-user and per-interface basis. This report supplies information to the various application bandwidth dashlets and reports in Cisco Prime Infrastructure as “Top N Applications”, “Application Bandwidth reports”, “Top N clients”, and so on.
HTTP URL Visibility	Sends performance and bandwidth reports for HTTP-based traffic, and this report supplies information to various URL dashlets and reports in Cisco Prime Infrastructure as “Top N URL by hits” and “Top N URL by response time”. Note The HTTP URL Visibility tool is not supported on the ISR-G2 device.
Application Response Time	Sends performance-related information for TCP traffic, and this report supplies information to various response time dashlets and reports in Cisco Prime Infrastructure as “applications ART analysis”, “worst N clients by transaction time”, and so on.
Voice/Video Metrics	Sends various RTP key-performance indicators for RTP-based voice/video traffic, and supplies information to dashlets and reports in Cisco Prime Infrastructure under the voice/video category as “worst N RTP streams by packet lost.”

Activating the Application Visibility feature can impact device performance. To minimize the potential impact, the template allows you to select the traffic interfaces to monitor and the reports to generate.

To configure application visibility in your network:

1. (Optional) Set up WSMA on the devices to assure that the devices is configured via the WSMA protocol, rather than CLI (for more information, see [Configuring the Device using WSMA](#)). WSMA provides a more robust configuration mechanism.
2. Make sure that your devices are running an up-to-date NBAR protocol packs (see [NBAR Protocol Packs](#)).
3. Estimate the potential resources impact on the device (CPU and memory) before activating application visibility on the device (for more information, see [Activating or Deactivating a Troubleshooting Session](#)).

Activate application visibility on the device, either by creating a template and pushing it across the network (for more information, see [Creating an Application Visibility Template](#)), or by enabling AVC on an interface from the Device Work Center (see [Enabling Default Application Visibility on an Interface](#)).

Estimating CPU, Memory and NetFlow Resources on ASR Devices

The Readiness Assessment feature allows you to estimate CPU consumption, memory usage, and NetFlow export traffic when you deploy application visibility features on an ASR device. DRE helps you analyze the demands for these resources on ASR devices based on typical predefined traffic profiles and device interface speeds.

DRE is supported on all ASRs running Cisco IOS-XE Release 15.3(1)S1 or later with one or more of these modules installed:

- cevModuleASR1000ESP5
- cevModuleASR1000ESP10
- cevModuleASR1000ESP20
- cevModuleASR1001ESP
- cevModuleASR1002FESP

To estimate the resource utilization on a specific device, follow these steps:

-
- Step 1** Choose **Services > Application Visibility and Control > Readiness Assessment**.
 - Step 2** In the Interface column for the device that you want estimates on, click the down arrow icon.
The list shows only those interfaces supporting Application Visibility capability.
 - Step 3** Select **Internet Profile** or **Enterprise Profile**. The device resource estimation is based on a typical traffic profile. Select “Internet Profile” for typical service-provider traffic, or “Enterprise Profile” for a typical enterprise-traffic.
 - Step 4** Select the interfaces for which you want to estimate the resource utilization.
Speeds shown are those currently configured for each interface. If you want to base the estimate on a different speed, click **Speed (Mbps)** and enter a different value.
 - Step 5** Click **Get Estimates**.

The Estimated Resource Usage graph displays the current, additional, and total usage of the CPU and memory, along with the threshold limit for these resources. The estimated and maximum NetFlow export traffic are also given. For devices on which AVC is already enabled, only the current and additional usage is shown.

If resource usage is crossing threshold limits, optimize the problem device by:

- Decreasing current CPU utilization
 - Increasing configured memory
 - Reduce configured interface speed
 - Redirecting traffic to another device
-

NBAR Protocol Packs

The ability of the device to produce application visibility reports is based on the NBAR technology; NBAR, or Network-Based Application Recognition, is a classification engine that recognizes and classifies a wide variety of protocols and applications, including web-based and other difficult-to-classify applications and protocols that use dynamic TCP/User Datagram Protocol (UDP) port assignments.

NBAR is updated frequently to support new applications and protocols, the software update for an NBAR is called a Protocol Pack.

Further information on NBAR protocol packs and information on how to upgrade NBAR protocol pack, see the [NBAR Protocol Packs Guide](#).

When you upgrade an NBAR protocol pack on the device, a corresponding Prime Infrastructure update should be performed to update Prime Infrastructure with the supported protocols/applications on the devices.

To achieve that there is a periodic Prime Infrastructure software update (UBF file) issues when new protocol packs are released. Once you upgrade the NBAR protocol pack on the device, you should use Prime Infrastructure software upgrade to make sure Prime is also updated with the latest protocols.

At every point of time the network may contain various platforms (ISR-G2/ASR) running different Cisco IOS software releases and different protocol pack releases. While we do not recommend that you have different protocol pack releases installed on different devices reporting application visibility reports simultaneously, Prime Infrastructure will be able to support this, by configuring only the supported subset of protocols/applications, defined as filtering conditions in your template, on each of the devices, when deploying an application visibility template across multiple devices running different versions of NBAR protocol packs.

Creating an Application Visibility Template

An application visibility monitoring policy is defined on a selected group of interfaces. When you define the template, ensure that you have defined an interface-role object which matches the group of interfaces on which you would like to monitor the traffic and generate NetFlow reports. See [Creating an Interface Role](#).

To create an Application Visibility template, follow these steps:

- Step 1** Choose **Configuration > Templates > Features & Technologies > Application Visibility > AVC Configuration**.
- Step 2** In the Template Basic area, enter a unique name and a description in the appropriate fields.
- Step 3** In the Validation Criteria area, choose a device type from the list and enter the OS version.
- Step 4** In the Template Detail area, choose an Interface Role from the drop-down list. The interface role designates the group of interfaces on which you can monitor the traffic and produce Application-Visibility reports. See the [Creating an Interface Role](#) section for information about creating an interface role.
- Step 5** In the Traffic Statistics area, you can determine which traffic should be monitored to produce the traffic statistics reports, select the **Off** radio button if you do not want to collect the statistics on data packets.
 - a.** Select the IP address/subnets. You can generate the report only on IPv4 traffic. We recommend to configure the required minimal set of filter.

- Step 6** In the HTTP URL Visibility area, you can select the traffic that should be monitored to produce the report. Select the **Off** radio button if you do not want to collect URL statistics.
- Select the IP address/subnets. You can select a specific set of IPv4 addresses or subnets to be monitored.
 - Select the application from the drop-down list. You can select a specific set of applications that should be monitored (there could be up to 32 monitored applications). By default, all of the enterprise related http-based applications are include in the list.
- Step 7** In the Application Response Time area, you can determine the traffic that should be monitored to produce the application response time reports. Also, optionally set a sampling option for the reports. Select the **Off** radio button if you do not want to collect ART metrics.
- Select the IP address/subnets. You can select a specific set of IPv4 addresses or subnets to be monitored.
 - Choose the Application from the drop-down list. You can select a specific set of applications that should be monitored (there could be up to 32 monitored applications). By default, all of TCP traffic is monitored.
 - In the Advanced Options, choose the Sampling Rate from the drop-down list. In High scale environments, collecting performance indicators for every TCP conversation can lead to high resources consumption on the device. The sampling option provides the ability to further optimize the resource consumption by collecting the performance indicators for “1” out of every “n” TCP conversation. This advanced option can be used to activate sampling and select the sampling rate for the tool. It is not recommended to activate sampling as activating sampling leads to less accurate results. Sampling should be used when it is necessary to limit the resource consumption on the devices.



Note Sampling option is not applicable for ISR-G2 routers. This option will be ignored for the n ISR-G2.

- Step 8** In the Voice/Video metrics area, you can determine the traffic that should be monitored to produce the voice/video reports. Select the **Off** radio button if you do not want to collect the voice/video metrics.
- Choose the IP address/subnets. You can choose a specific set of IPv4 addresses or subnets to be monitored.



Note IP filtering is not supported on the ISR-G2 routers until all UDP traffic is monitored.

- Choose the Voice/Video Application from the drop-down list. You can choose a specific set of applications that should be monitored (there could be up to 32 monitored applications). By default, all RTP enterprise-related applications are monitored.

- Step 9** Click **Save as New Template**.

Enabling Default Application Visibility on an Interface

From the Device Work Center, you can view the reports that are generated on each of the interfaces and enable or disable a default Application Visibility configuration on selected interfaces.

When a device does not have an application visibility configuration deployed on it, or it has a default application visibility configuration deployed on it (if all metrics are collected with a set of default parameters), the Device Work Center allows you to enable or disable a default application visibility configuration on the device by selecting interfaces on the device and enabling or disabling the default configuration on the interfaces.

**Note**

When you deploy an application visibility template to the device, the application visibility template configuration will overwrite the default application visibility configuration that was enabled from the Device Work Center.

The default configuration collects all the possible visibility metrics on all applicable IPv4 traffic.

**Note**

The Application Visibility feature is supported on the following platforms:

- ASR platform from Cisco IOS-XE Release 15.3(1)S1 or later
- ISR G2 platform from Cisco IOS Release 15.2(4)M2 or later
- ISR G3 platform from Cisco IOS-XE Release 15.3(2)S later
- CSR platform from Cisco IOS-XE Release 15.3(2)S later

**Note**

Application Visibility is configured differently on the ASR platform running Cisco IOS-XE15.3(1)S1 in comparison to Cisco IOS-XE15.3(2)S or later releases. After an ASR platform Cisco IOS release is upgraded from Cisco IOS-XE15.3(1)S1 to Cisco IOS-XE Releases 15.3(2)S and later, we recommend that you reconfigure Application Visibility on those devices.

To change the default application visibility configuration profile configured on the device, first disable the Application Visibility policy on all interfaces and then re-enable it on the selected interfaces with the new profile.

To enable or disable the default application visibility configuration on the specific interface, follow these steps:

- Step 1** Choose **Inventory > Device Management > Network Devices**.
- Step 2** After choosing the device from list, click **Configuration**. The Feature Configuration pane appears.
- Step 3** Expand the **App Visibility & control** folder and choose **App Visibility**.
- Step 4** Do one of the following:
 - To activate an out-of-the-box AVC profile on an interface, select one or more interfaces then click **Enable App Visibility** and select the required profile. If at least one of the non-selected interface is attached to a different profile, a warning message will be displayed such that all non-selected interfaces that are attached to a different profile will be detached from that profile.
 - Use the interfaces list to view the current App Visibility configuration on the device. The column **App Visibility Policy** displays the current profile/policy attached to the interface.

**Note**

In Cisco Prime Infrastructure Release 2.2, the application visibility feature displays the user defined AVC policy per interface on the application visibility interfaces.

There are several options that can be displayed:

- If the application visibility control is configured on the interface using the Application Visibility Template, the template-name will be displayed.
- If the application visibility control is configured on interface using the “one-click” option, the name of the AVC Profile that was configured will be displayed.
- If the application visibility control is configured manually out-of-band by the user via CLI, the name of the policy-map or performance monitor context that was configured will be displayed.



Note

In Cisco Prime Infrastructure Release 2.2, a visual indication column (App Visibility Status) provides indication on whether AVC is currently activated on the interface. The column will also indicate cases when the interface is INCAPABLE of running AVC and cases when AVC is mis-configured on the interface (e.g. AVC configured to send netflows to servers other than prime infrastructure).

- To Disable any of the Activated AVC profiles on an selected interface, click **Disable App Visibility**, check **Deactivate App Visibility Troubleshooting** if you also wish to deactivate an AVC troubleshooting policy if such is active on the interface.



Note

When Enabling/Disabling AVC a pop up message will appear before the actual provisioning takes place. Selecting the **CLI preview** tab on that popup message will generate the list of CLIs to be pushed to the device.

Application Visibility Troubleshooting Sessions

You can collect application visibility data on every flow that goes through the monitored interface. However, because this can have a significant impact on the device performance, application visibility data is collected in an aggregated manner. To further troubleshoot specific flows, you can activate the Application Visibility troubleshooting sessions on the device. The sessions are activated on specific interfaces and on specific traffic. They allow you to collect the non aggregated information on a flow-based level that supplies a raw-NetFlow report in Prime Infrastructure. This information can be used later to analyze specific flows.

The Application Visibility Troubleshooting feature allows you to:

- Create and activate a troubleshooting session on a specific interface
- Deactivate and delete a troubleshooting session on a specific interface



Caution

To avoid overloading the server, we recommend that you configure no more than ten active troubleshooting sessions. Application troubleshooting is not supported on the ISR-G2 platforms.



Note

Troubleshooting sessions are configured differently on the ASR platform running Cisco IOS-XE Release 15.3(1)S1 in comparison to Cisco IOS-XE Release 15.3(2)S or later releases. After, an ASR platform Cisco IOS Release is upgraded from Cisco IOS-XE Release 15.3(1)S1 to Cisco IOS-XE Release 15.3(2)S or later, we recommend that you deactivate and reactivate active troubleshooting sessions on those devices.

To troubleshoot Application Visibility, follow these steps:

-
- Step 1** Choose **Services > Application Visibility & Control > Application Troubleshooting**.
 - Step 2** In the AVC Troubleshooting Session page, click **Add** and enter a session name.
 - Step 3** In the Source/Destination IPs field, click **Edit**, and choose the source and destination IP addresses from the drop-down list. You can select the IP traffic and collect Application Visibility troubleshooting information for that specific IP traffic. The options are: on all IPv6 traffic or on all IPv4 traffic or on specific IPv4 addresses/subnets. Also, you can select a list of IP constraint pairs. Each such pair designates a bi-directional symmetric condition on the source and destination IPs of the traffic. For example, the pair: Any IPv4 <=> IPv4 subnet 192.168.0.0/16 matches all of the flows from 192.168.0.0/16 to any other IP and vice-versa (all of the flows from any IP address to 192.168.0.0/16). You can add multiple pair conditions.
 - Step 4** To add more IP constraints in the format of IP source/destination pairs, click the + icon in the Select Source Destination dialog box.
-  **Note** The IP addresses on both sides of the pairs should be of the same IP version.
-
- Step 5** Click **OK**.
 - Step 6** Choose the device from the Device Table list.
 - Step 7** Choose the interface from the Interface Table list.
 - Step 8** Choose the application from the object selector dialog box. When you choose the applications, you can have a combination of Categories, Sub-categories, Encrypted Applications, and Tunneled Applications from the available list. A maximum of 32 applications or categories or attributes can be selected
 - Step 9** Click **Save** to automatically activate the session.
 - Step 10** After the troubleshooting session is activated, click **Launch Report** to generate the Raw NetFlow report.
-

Activating or Deactivating a Troubleshooting Session

You can activate an inactive troubleshooting session or deactivate an existing troubleshooting session.

To activate or deactivate a troubleshooting session, follow these steps:

-
- Step 1** Choose **Services > Application Visibility & Control > Application Troubleshooting**.
 - Step 2** Choose a troubleshooting session from the list and click **Activate** or **Deactivate**.
 - Step 3** Click **Save**.
-

Editing or Deleting a Troubleshooting Session

You can edit or delete an inactive troubleshooting session. (To edit or delete an active session, you must deactivate it first.)

To edit or delete a troubleshooting session, follow these steps:

Step 1 Choose **Services > Application Visibility & Control > Application Troubleshooting**.

Step 2 Do either of the following:

- a. Choose a session from the list and click **Edit**.



Caution

To avoid overloading the server, we recommend that you configure no more than ten active troubleshooting sessions.

- b. Edit and save the troubleshooting session, then click **Activate**.

- c. To delete a troubleshooting session, choose a session from the list and click **Delete**.
-

Creating a VPN Component Template

This section describes how to create various VPN component template.

Creating an IKE Policies Template

To create an IKE policies template, follow these steps:

-
- Step 1** Choose **Configuration > Templates > Features & Technologies > Security > VPN Components > IKE Policies**.
 - Step 2** In the Template Basic area, enter a name, description, and tag for your template in the appropriate text boxes.
 - Step 3** In the Validation Criteria area, choose a Device Type from the drop-down list and enter the OS version. For more information about the required field descriptions, see the [Cisco Prime Infrastructure 2.2 Reference Guide](#).
 - Step 4** Click **Save as New Template**. After you save the template, apply it to your devices using the procedures in [Creating Feature-Level Configuration Templates](#).
-

Creating an IKE Settings Template

To create an IKE settings template, follow these steps:

-
- Step 1** Choose **Configuration > Templates > Features & Technologies > Security > VPN Components > IKE Settings**.
 - Step 2** In the Template Basic area, enter a name, description, and tag for your template in the appropriate text boxes.
 - Step 3** In the Validation Criteria area, choose a device type from the drop-down list and enter the OS version. For more information about the required field descriptions, see the [Cisco Prime Infrastructure 2.2 Reference Guide](#).

- Step 4** Click **Save as New Template**. After you save the template, apply it to your devices using the procedures in [Creating Feature-Level Configuration Templates](#).
-

Creating an IPsec Profile Template

To create an IPsec profile template, follow these steps:

- Step 1** Choose **Configuration > Templates > Features & Technologies > Security > VPN Components > IPSec Profile**.
- Step 2** In the Template Basic area, enter a name, description, and tag for your template in the appropriate text boxes.
- Step 3** In the Validation Criteria area, choose a device type from the drop-down list and enter the OS version.
- Step 4** In the Template Detail area, click **Add Row** and enter the required information. A transform set represents a certain combination of security protocols and algorithms. During the IPsec negotiation, the peers agree to use a particular transform set for protecting a particular data flow. A transform set describes a particular security protocol with its corresponding algorithms. For more information about the required field descriptions, see the [Cisco Prime Infrastructure 2.2 Reference Guide](#).
- Step 5** Click **Save as New Template**. After you save the template, apply it to your devices using the procedures in [Creating Feature-Level Configuration Templates](#).
-

Creating a Preshared Keys Template

To create a preshared keys template, follow these steps:

- Step 1** Choose **Configuration > Templates > Features & Technologies > Security > VPN Components > Preshared Keys**.
- Step 2** In the Template Basic area, enter a name, description, and tag for your template in the appropriate text boxes.
- Step 3** In the Validation Criteria area, choose a Device Type from the drop-down list and enter the OS Version.
- Step 4** In the Template Detail area, click **Add Row** and enter the required information.
- Step 5** Click **Save as New Template**. After you save the template, apply it to your devices using the procedures in [Creating Feature-Level Configuration Templates](#).
-

Creating RSA Keys Template

To create RSA keys template, follow these steps:

- Step 1** Choose **Configuration > Templates > Features & Technologies > Security > VPN Components > RSA Keys**.

- Step 2** In the Template Basic area, enter a name, description, and tag for your template in the appropriate text boxes.
 - Step 3** In the Validation Criteria area, choose a device type from the drop-down list and enter the OS version.
 - Step 4** In the Template Detail area, click **Add** and enter the required information.
 - Step 5** Select the **Exportable** box to generate RSA as an exportable key, then click **OK**.
 - Step 6** Click **Save as New Template**. After you save the template, apply it to your devices using the procedures in [Creating Feature-Level Configuration Templates](#).
-

Creating a Transform Sets Template

To create a transform sets template, follow these steps:

- Step 1** Choose **Configuration > Templates > Features & Technologies > Security > VPN Components > Transform Sets**.
- Step 2** In the Template Basic area, enter a name, description, and tag for your template in the appropriate text boxes.
- Step 3** In the Validation Criteria area, choose a device type from the drop-down list and enter the OS version.
- Step 4** In the Template Detail area, click **Add Row** and enter the required information.



Note The ESP encryption algorithm is used to encrypt the payload, and the integrity algorithm is used to check the integrity of the payload.

- Step 5** Click **Save as New Template**. After you save the template, apply it to your devices using the procedures in [Creating Feature-Level Configuration Templates](#).
-

Configuring an Easy VPN Server

Cable modems, xDSL routers, and other forms of broadband access provide high-performance connections to the Internet, but many applications also require the security of VPN connections that perform a high level of authentication and that encrypt the data between two particular endpoints. However, establishing a VPN connection between two routers can be complicated and typically requires tedious coordination between network administrators to configure the VPN parameters of the two routers.

The Cisco Easy VPN Remote feature eliminates much of this tedious work by implementing Cisco Unity Client Protocol, which allows most VPN parameters to be defined at a Cisco IOS Easy VPN server. This server can be a dedicated VPN device; for example, any of the following:

- Cisco VPN 3000 concentrator
- Cisco PIX Firewall
- Cisco IOS router that supports the Cisco Unity Client Protocol

After the Cisco Easy VPN server is configured, a VPN connection is created with minimal configuration on an Easy VPN remote, such as a Cisco 800 series or 2800 series router. When the Easy VPN remote initiates the VPN tunnel connection, the Cisco Easy VPN server pushes the IPsec policies to the Easy VPN remote and creates the corresponding VPN tunnel connection.

Creating an Easy VPN Server Proxy Setting Template

The Easy VPN Server Proxy feature allows you to specify the settings for Easy VPN clients. Using this feature, you do not have to manually modify the proxy settings of the web browser when you connect to the corporate network using the Cisco IOS VPN client or manually revert the proxy settings when you disconnect from the network.

To create an Easy VPN Server Proxy template, follow these steps:

-
- Step 1** Choose **Configuration > Templates > Features & Technologies > Security > Easy VPN Server Proxy Setting**.
 - Step 2** Enter the basic template information.
 - Step 3** From the Device Type drop-down list, choose **Routers**.
 - Step 4** In the Template detail area enter a name, and choose the settings that you want to associate with the group.
 - Step 5** Choose the No Proxy Server option or Automatically Detect Proxy Settings option if you want the clients in this group to automatically detect a proxy server when they use the VPN tunnel.
 - Step 6** Choose the Manual Configuration option to manually configure a proxy server for clients in this group. If you choose this option, you should manually configure a proxy server.
 - Step 7** Select the **Bypass proxy server for local addresses** check box to prevent the clients from using the proxy server for local (LAN) addresses.
 - Step 8** Click **Save as New Template**. After you save the template, apply it to your devices using the procedures in [Creating Feature-Level Configuration Templates](#).
-

Creating an Easy VPN Remote Template

The Cisco Easy VPN Remote feature eliminates much of this tedious work by implementing Cisco Unity Client Protocol, which allows most VPN parameters to be defined at a Cisco IOS Easy VPN server.

Before You Begin

Create an ACL template and publish the ACL template.

To create a Easy VPN Remote template, follow these steps:

-
- Step 1** Choose **Configuration > Templates > Features & Technologies > Security > Easy VPN Remote**.
 - Step 2** Enter the basic template information.
 - Step 3** From the Device Type drop-down list, choose **Routers**.
 - Step 4** In the Easy VPN Remote Interface Configuration area, enter the required information. For more information about the required field descriptions, see the [Cisco Prime Infrastructure 2.2 Reference Guide](#).

- Step 5** In the Easy VPN Remote connection characteristics area, enter the required information. For more information about the required field descriptions, see the [Cisco Prime Infrastructure 2.2 Reference Guide](#).
-  **Note** If you enable identical addressing, you must first configure Easy VPN Remote in network extension mode.
-
- Step 6** In the Remote Authentication Mechanisms area, choose the authentication method.
- Step 7** In the Remote Firewall Settings area, set the firewall settings for the Easy VPN Remote connection.
- Step 8** Click **Save As New Template**.
- Step 9** Navigate to the My Templates folder and choose the template that you just saved.
- Step 10** Click the **Publish** icon in the top-right corner, then click **OK**.
- Step 11** Create a composite template ([Creating Composite Templates](#)), and add the ACL and Easy VPN Remote templates to the composite template.
- Step 12** Use the arrows buttons to arrange the templates in the order in which they should be deployed to the devices. For example, to create an ACL and associate it with an interface, put the ACL template first, followed by the EasyVPN Remote template.
- Step 13** Click **Save as New Template**. After you save the template, apply it to your devices using the procedures in [Creating Feature-Level Configuration Templates](#).
-

Creating an Easy VPN Server Template

The Easy VPN Server feature introduces server support for the Cisco VPN software client Release 3.x and later and Cisco VPN hardware clients (such as the Cisco 800, Cisco 900, Cisco 1700, VPN 3002, and PIX 501 devices). Using IP Security (IPsec), Easy VPN Server allows a remote end user to communicate with any Cisco IOS Virtual Private Network (VPN) gateway. Also, centrally managed IPsec policies are pushed to the client device by the server and helps the end user to minimize the configuration.

Before You Begin

Do the following:

- Create AAA method list for the group and the user by using the CLI template
- Create an IPsec Profile template
- If you will use Crypto Map, create a Transform Set template
- (Optional) Create a CLI template for RADIUS server group creation or configure the RADIUS server while creating the AAA method list
- (Optional) Create an ACL template for the split tunnel ACL in the ISAKMP Group configuration
- Create a Browser Proxy template for ISAKMP group configuration

To create an Easy VPN Remote template, follow these steps:

- Step 1** Choose **Configuration > Templates > Features & Technologies > Security > Easy VPN Server**.
- Step 2** Enter the basic template information.
- Step 3** From the Device Type drop-down list, choose **Routers**.

- Step 4** In the Interface Configuration area, choose the configuration methods and complete the fields of the interface that is configured on the device.
 - Step 5** In VPN Components Assembly area, enter the Transform Set profile name that you created in the Transform Set template ([Configuring Transform Sets](#)) and complete the fields in this area.
 - Step 6** In the Group Authorization area, enter the Method List profile name that you created in the CLI template and complete the fields in this area.
 - Step 7** In the User Authorization area, enter the same Method List profile name that you created in the CLI template, and complete the fields in this area.
 - Step 8** In the ISAKMP Group configuration area, click **Add Row** to add the ISAKMP Group configuration.
 - Step 9** In the ISAKMP Group configuration dialog box, enter the ACL profile name that you created in the ACL template and the Browser Proxy profile name that you created in the Browser Proxy template, and complete the fields in this area.
 - Step 10** Click **Save as New Template**. After you save the template, apply it to your devices using the procedures in [Creating Feature-Level Configuration Templates](#).
 - Step 11** Create a composite template ([Creating Composite Templates](#)) and add the AAA Method List and Radius server, IPsec Profile ([Creating an IPsec Profile Template](#)), ACL Browser Proxy ([Creating an Easy VPN Server Proxy Setting Template](#)), and EasyVPN_Remote templates in the composite template.
 - Step 12** Using the arrow icons to arrange the templates in a order in which they should be deployed to the devices. For example, to create an ACL and associate it with an interface, arrange the ACL template first, followed by the EasyVPN_Remote template.
 - Step 13** Click **Save as New Template**. After you save the template, apply it to your devices using the procedures in [Creating Feature-Level Configuration Templates](#).
-

Creating a GSM Profile Template

To create a GSM Profile template, follow these steps:

- Step 1** Click **Configuration > Templates > Features & Technologies > Interfaces > Cellular > GSM Profile**.
 - Step 2** Enter the basic template information.
 - Step 3** From the Device Type drop-down list, choose **Routers**.
 - Step 4** In the Template Detail area, enter an Access Point Name and choose a profile number from the drop-down list.
 - Step 5** Choose the type of authentication that your service provider uses. (CHAP authentication is more secure than PAP authentication.)
 - Step 6** Enter the username given to you by your ISP or your network administrator, and enter a password.
 - Step 7** Click **Save as New Template**. After you save the template, apply it to your devices using the procedures in [Creating Feature-Level Configuration Templates](#).
 - Step 8** Click **OK**.
-

Creating a Cellular Profile Template

To create a Cellular Profile template, follow these steps:



Note

To deploy the Cellular Profile template on any GSM HSPA, HSPA+R7, and LTE-Verizon modem, you should have the GSM profile ([Creating a GSM Profile Template](#)) created on the router.

- Step 1** Choose **Configuration > Templates > Features & Technologies > Interfaces > Cellular > Cellular Profile**.
- Step 2** Enter the basic template information.
- Step 3** From the Device Type drop-down list, choose **Routers**.
- Step 4** In the Template Detail area, define the interface as Primary WAN Interface or Backup WAN Interface and complete the fields.
- Step 5** In the Dialer Configuration area, choose **Yes** to enable the persistent data connection and complete the fields.
- Step 6** Click **Save as New Template**. After you save the template, apply it to your devices using the procedures in [Creating Feature-Level Configuration Templates](#).
- Step 7** Click **OK**.

Redirecting HTTP and HTTPS Traffic

ScanSafe Software as a Service (SaaS) Web Security allows you to scan the content of HTTP and HTTPS traffic. When ScanSafe Web Security is integrated with a router, selected HTTP and HTTPS traffic is redirected to the ScanSafe cloud for content scanning and malware detection.

When Cisco Integrated Services Router (ISR) Web Security with Cisco ScanSafe is enabled and the ISR is configured to redirect web traffic to ScanSafe, the Integrated Services Router (ISR) transparently redirects HTTP and HTTPS traffic to the ScanSafe proxy servers based on the IP address and port. You can configure the ISR to relay web traffic directly to the originally requested web server without being scanned by ScanSafe.

Whitelisting Traffic

You can configure the ISR so that some approved web traffic is not redirected to ScanSafe for scanning. When you bypass ScanSafe scanning, the ISR retrieves the content directly from the originally requested web server without contacting ScanSafe. When ISR receives the response from the web server, it sends the data to the client. This is called *whitelisting* traffic.

See the [Cisco ISR Web Security with Cisco ScanSafe Solution Guide](#) for more information about ScanSafe.

Creating a ScanSafe Template

To create a ScanSafe template, you must specify:

- The ScanSafe server and interface information
- Whitelist information

To create a ScanSafe template, follow these steps:

-
- Step 1** Choose **Configuration > Templates > Features & Technologies > Security > ScanSafe**.
 - Step 2** In the Template Basic area, enter a name and a description in the appropriate fields.
 - Step 3** In the Validation Criteria area, choose a device type from the list and enter the OS version.
 - Step 4** In the Template Detail area, enter the required information. For more information about the required field descriptions, see the *Cisco Prime Infrastructure 2.2 Reference Guide*.
 - Step 5** Click **Save as New Template**. After you save the template, apply it to your devices using the procedures in [Creating Feature-Level Configuration Templates](#).
-

Configuring Interfaces

The Interfaces feature helps in setting up physical and logical interfaces. Physical interfaces on a device depend on the device type and its interface processors or port adapters. IPv4 addressing is supported for all interfaces including service modules such as WAN, LAN, and logical interfaces. The following interfaces are supported in this release:

WAN Interfaces

- [Configuring a Serial Interface](#)
- [Configuring POS Interface](#)
- [Configuring a Service Module](#)
- [Configuring Controllers](#)

LAN Interfaces

- [Creating a Gigabit Ethernet or Fast Ethernet Interface](#)

Logical Interfaces

- [Creating a Loopback Interface](#)
- [Creating a VLAN Interface](#)
- [Creating a Tunnel Interface](#)
- [Creating a Virtual Template Interface](#)

Configuring a Serial Interface

To edit or delete the Serial interface, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** After choosing the device from list, click **Configuration**. The Feature Configuration pane appears.
 - Step 3** In the Feature Configuration pane, expand the **Interface folder**, then click **Interfaces**.
 - Step 4** In the Interface page, select the serial interface in the Interface Summary area and click **Edit**.
 - Step 5** In the Create or Edit Serial Interface page, enter the basic configuration information.

- Step 6** Select the encapsulation type as High Level Data Link Control (**HDLC**) or Point-to-Point Protocol (**PPP**) or **Frame Relay**. Use the Advance Configuration area to configure the encapsulations.



Note For controller-based serial interfaces, only interface configurations are supported.

- Step 7** Enter an IPv4 address.

- Step 8** For Frame Relay encapsulation, use the IETF option to connect to non-Cisco routers. (The Autosense feature is supported only on Frame Relay.)



Note The Autosense feature allows the router to detect the LMI type that is being used, by communicating with the switch and then uses the same type of LMI.

- Step 9** For PPP encapsulation, specify the CHAP and PAP configurations with directions.

- Step 10** Click **Save**. The Interface Summary page displays the modified interfaces.

- Step 11** Click **Save** to save the changes in the device.

Configuring POS Interface

To edit and delete the POS interface, follow these steps:

- Step 1** Choose **Inventory > Device Management > Network Devices**.
- Step 2** After choosing the device from the list, click **Configuration**. The Feature Configuration pane appears.
- Step 3** In the Feature Configuration pane, expand the **Interface folder**, then click **Interfaces**.
- Step 4** In the Interface page, select the POS interface from the Interface Summary area and click **Edit**.
- Step 5** In the Create or Edit POS Interface page, enter the basic configuration information.
- Step 6** Select the **Enable SPE Scrambling** check box to enable the SPE scrambling.
- Step 7** Select the **Send LAIS when Shutdown** check box to send the Line Alarm Indication Signal (LAIS) when the POS interface is in administrative shut down state.
- Step 8** Select the encapsulation type as **HDLC** or **PPP** or **Frame Relay** and use the Advance Configuration area to configure the encapsulations.
- Step 9** Enter an IPv4 address.
- Step 10** In the Advanced Configuration area, select the alarm reporting and alarm reporting threshold options to receive alarms when there is any event.
- Step 11** Repeat [Step 9](#) through [Step 11](#) in the [Configuring a Serial Interface](#) area.

Configuring a Service Module

To edit or delete the Service Module interface, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** After choosing the device from the list, click **Configuration**. The Feature Configuration pane appears.
 - Step 3** In the Feature Configuration pane, expand the **Interface folder**, then click **Interfaces**.
 - Step 4** Select the service module interface from the Interface Summary area and click **Edit**.
 - Step 5** In the Fast Ethernet interface pane, complete the basic configuration information.
 - Step 6** Click **OK** to save the changes in the device.
-

Configuring Controllers

To create or edit the DSL, SHDSL, and VDSL controllers interface, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** After choosing the device from the list, click **Configuration**. The Feature Configuration pane appears.
 - Step 3** In the Feature Configuration pane, expand the **Interface folder**, then click **Interfaces**.
 - Step 4** Select the **DSL, SHDSL or VDSL** controller from the interface summary area and click **Edit**.
 - Step 5** In the Edit Controller page, enter the required information.
 - Step 6** Click **OK**. After you configure the controller, you must configure the DSL, SHDSL or VDSL subinterface.
 - Step 7** To configure the DSL subinterface, select an ATM interface in the Interface Summary page, and click **Add Subinterface**.
 - a. In the Create ATM Sub Interface page, choose the encapsulation from the drop-down list.
 - b. Configure the Permanent Virtual Circuit (PVC) settings.
 - c. Select a dialer to be associated to the ATM subinterface by using the **Create** or **Associate** dialer options.
 - d. Click **OK**.
 - Step 8** To configure the SHDL subinterface, select a SHDSL interface in the Interface Summary page, and click **Add Subinterface**.
 - a. In the Create SHDSL subinterface page, add the DSL Group and select the DSL pair.
 - b. Choose the Group Type from the drop-down list.
 - c. Click **OK**.
 - Step 9** To configure the VDSL subinterface, select a VDSL interface in the Interface Summary area, and click **Add Subinterface**.
 - a. In the Create VDSL subinterface page, choose the Operating Mode from the drop-down list.
 - b. Select the **Annex A mode** check box.
 - c. Click **OK**.
-

Creating a Gigabit Ethernet or Fast Ethernet Interface

To create a Gigabit Ethernet or Fast Ethernet interface, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** After choosing the device from the list, click **Configuration**. The Feature Configuration pane appears.
 - Step 3** In the Feature Configuration pane, expand the **Interface folder**, then click **Interfaces**.
 - Step 4** Select the Gigabit Ethernet or Fast Ethernet in the Interface Summary area, and click **Edit**.
 - Step 5** In the Edit Ethernet Interface, complete the basic configuration information.
 - Step 6** Choose the Primary IP address from the drop-down list.
 - Step 7** Click **Add Row** and add the Secondary IP address.
 - Step 8** Click **OK** to save the changes in the device.
-

Creating a Loopback Interface

To create a Loopback interface, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** After choosing the device from the list, click **Configuration**. The Feature Configuration pane appears.
 - Step 3** In the Feature Configuration pane, expand the **Interface folder**, then click **Interfaces**.
 - Step 4** On the Interface page, choose **Add Logical Interface > Loopback**.
 - Step 5** In the Create or Edit Loopback Interface area, enter the basic configuration information.
 - Step 6** Enter an IPv4 address.
 - Step 7** Click **OK**.
 - Step 8** Click **Save** to save the changes in the device.
-

Creating a VLAN Interface

To create a VLAN interface, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** After choosing the device from the list, click **Configuration**. The Feature Configuration pane appears.
 - Step 3** In the Feature Configuration pane, expand the **Interface folder**, then click **Interfaces**.
 - Step 4** In the Interface page, click **Add Logical Interface > VLAN**.
 - Step 5** In the Create or Edit VLAN Interface page, complete the basic configuration information.
 - Step 6** Choose the Primary IP address from the drop-down list.
 - Step 7** Click **Add Row** and add the Secondary IP address.

- Step 8** Click **OK** to save the changes in the device.
-

Editing a VLAN Interface

To edit the VLAN interface, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
- Step 2** After choosing the device from the list, click **Configuration**. The Feature Configuration pane appears.
- Step 3** In the Feature Configuration pane, expand the **Interface folder**, then click **Interfaces**.
- Step 4** Select the VLAN interface from the Interface Summary area, and click **Edit**.
- Step 5** In the Create or Edit VLAN Interface page, complete the basic configuration information.
- Step 6** Choose the Primary IP address from the drop-down list.
- Step 7** Click **Add Row** and add the Secondary IP address.
- Step 8** Click **OK** to save the changes in the device.
-

Creating a Tunnel Interface

To create a Tunnel interface, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
- Step 2** Choose the device from the list or click **Add** to create a new device, then configure the device.
- Step 3** After choosing the device, choose **Configuration**. The Feature Configuration pane appears.
- Step 4** Expand the **Interface folder**, then choose the **Interfaces**.
- Step 5** In the Interface page, choose **Add Logical Interface > Tunnel**.
- Step 6** In the Create or Edit Tunnel Interface page, complete the basic configuration information.
- Step 7** Choose the Primary IP address from the drop-down list.
- Step 8** Click **Add Row** and add the Secondary IP address.
- Step 9** Click **OK** to save the changes in the device.
-

Editing an Existing Tunnel Interface

To edit a Tunnel interface, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
- Step 2** After choosing the device from the list, click **Configuration**. The Feature Configuration pane appears.
- Step 3** In the Feature Configuration pane, expand the **Interface folder**, then click **Interfaces**.

- Step 4** Select the Tunnel interface in the Interface Summary page, and click **Edit**.
 - Step 5** In the Create or Edit Tunnel Interface page, complete the basic configuration information.
 - Step 6** Choose the Primary IP address from the drop-down list.
 - Step 7** Click **Add Row** and add the Secondary IP address.
 - Step 8** Click **OK** to save the changes in the device.
-

Creating a Virtual Template Interface

To create a Virtual Template interface, follow these steps:

- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** After choosing the device from the list, click **Configuration**. The Feature Configuration pane appears.
 - Step 3** In the Feature Configuration pane, expand the **Interface folder**, then click **Interfaces**.
 - Step 4** In the Interface page, click **Add Logical Interface Virtual Template**.
 - Step 5** In the Create or Edit Virtual Template Interface page, complete the basic configuration information.
 - Step 6** Choose the Primary IP address from the drop-down list.
 - Step 7** Click **Add Row** and add the Secondary IP address.
 - Step 8** Click **OK** to save the changes in the device.
-

Editing an Existing Virtual Template Interface

To edit a Virtual Template interface, follow these steps:

- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** After choosing the device from the list, click **Configuration**. The Feature Configuration pane appears.
 - Step 3** In the Feature Configuration pane, expand the **Interface folder**, then click **Interfaces**.
 - Step 4** Select the Virtual Template interface in the Interface Summary page, and click **Edit**.
 - Step 5** In the Create or Edit Virtual Template Interface page, complete the basic configuration information.
 - Step 6** Choose the Primary IP address from the drop-down list.
 - Step 7** Click **Add Row** and add the Secondary IP address.
 - Step 8** Click **OK** to save the changes in the device.
-

Configuring Cellular WAN Interfaces

The Cisco ISRs provide a third-generation (3G) wireless interface that can be used over GSM and Code Division Multiple Access (CDMA) networks. Its primary application is WAN connectivity as a backup data link for critical data applications. However, the 3G wireless interface can also function as the primary WAN connection for the router. The 4G wireless interface is supported only on the 4G-LTE-V modem.

Configuring a CDMA Interfaces

To configure a CDMA interface, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** After choosing the device from the list, click **Configuration**. The Feature Configuration pane appears.
 - Step 3** In the Feature Configuration pane, expand the **Interface folder**, then click **Cellular WAN Interfaces**.
 - Step 4** For a CDMA Sprint modem:
 - a. Select a cellular interface with CDMA Sprint modem, and click **Manage Modem**.
 - b. In the Manage Modem dialog box, select the **OMA-DM** or **Manual** radio button. If you choose the Manual option, complete the fields to manually configure the CDMA Sprint modem, then click **OK**.
 - Step 5** For a CDMA Verizon modem:
 - a. Select a cellular interface with CDMA Verizon modem, and click **Manage Modem**.
 - b. In the Manage Modem dialog box, enter the **Account Activation Information**, then click **OK**.
 - Step 6** For a CDMA Generic modem:
 - a. Select a cellular interface with CDMA Generic modem, and click **Manage Modem**.
 - b. In the Manage Modem dialog box, complete the fields to configure the CDMA Generic Modem, then click **OK**.
-

Configuring a GSM Interfaces

To configure a GSM interface, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** Choose the device from the list or click **Add** to add a new device, then configure the device.
 - Step 3** After choosing the device, click **Configuration**. The Feature Configuration pane appears.
 - Step 4** Expand the **Interface folder**, then choose **Cellular WAN Interfaces**.
 - Step 5** Select the GSM interface and click **Manage Modem**.
 - Step 6** In the Manage Modem dialog box, click **Add Row**.
 - Step 7** Choose the Profile Number from the drop-down list, and enter the Access Point Name, then click **OK**.
-

Configuring Network Address Translation (NAT)

Network Address Translation (NAT) is a process where a network device, usually a firewall, assigns a public address to a computer (or group of computers) inside a private network. NAT helps to limit the number of public IP addresses used by an organization or company, for both economy and security purposes.

The NAT feature allows organizations to resolve the problem of IP address depletion when they have existing networks and need to access the Internet. NAT allows the IP network of an organization to use different IP address space for the outside network. Thus, NAT allows an organization that does not have globally routable addresses to connect to the Internet by translating those addresses into globally routable address space. NAT also allows a more graceful renumbering strategy for organizations that are changing service providers or voluntarily renumbering into Classless Inter Domain Routing (CIDR) blocks. NAT is described in RFC 1631.

A router configured with NAT will have at least one interface to the inside network and one to the outside network. In a typical environment, NAT is configured at the exit router between a subdomain and a backbone. When a packet leaves the domain, the NAT translates the locally significant source address into a globally unique address. When a packet enters the domain, NAT translates the globally unique destination address into a local address. If more than one exit point exists, each NAT must have the same translation table. If NAT cannot allocate an address because it has run out of addresses, it drops the packet and sends an Internet Control Message Protocol (ICMP) host unreachable packet.

For more information on NAT, see [IP Addressing: NAT Configuration Guide, Cisco IOS XE Release 3S](#).

NAT Types

NAT operates on a router—generally connecting only two networks together—and translates your private (inside local) addresses within the internal network, into public (inside global) addresses before any packets are forwarded to another network. This functionality gives you the option to configure the NAT so that it will advertise only a single address for your entire network to the outside world. Doing this effectively hides the internal network from the world, giving you additional security.

NAT types include:

- **Static Address Translation (SAT)**—Allows one-to-one mapping between local and global addresses.
- **Dynamic Address Translation (DAT)**—Maps unregistered IP addresses to registered IP addresses from a pool of registered IP addresses.
- **Overloading**—A form of dynamic NAT that maps multiple unregistered IP addresses to a single registered IP address (many to one) using different ports. This method is also known as Port Address Translation (PAT). With PAT, thousands of users can be connected to the Internet using only one real global IP address.

Configuring NAT for IP Address Conservation

To configure NAT, perform the following steps:

1. [Creating NAT IP Pools](#) (required for Dynamic NAT)
2. Create an ACL template and configure the ACL
3. [Creating NAT44 Rules](#)

4. [Configuring Interfaces](#) and assign rules on them
5. [Setting Up NAT MAX Translation](#) (Optional)

**Note**

The NAT feature is supported on the following: ASR platform from Cisco IOS Release 3.5 or later and ISR platform from Cisco IOS Release 12.4(24)T or later.

**Caution**

CLI changes that begin with “EMS_” are not supported and might cause unexpected behavior.

Creating NAT IP Pools

The IP Pool is a device object that represents IP ranges to be used with Dynamic NAT. The NAT IP Pools feature allows you to create a new pool that can be used with Dynamic NAT, change the existing pool, and delete the pool from the device.

To create an IP pool, follow these steps:

- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** After choosing the device from the list, click **Configuration**. The Feature Configuration pane appears.
 - Step 3** In the Feature Configuration pane, expand the **Security**, expand the **NAT** subfolder, and then click **IP Pools**. The NAT Pools page appears.
 - Step 4** Click **Add IP Pool > IP+Prefix** or **IP Range + Prefix**, and enter the Name, IP Address/Range, Prefix Length, and Description. You cannot change the name of the pool after creating the pool.
-
-  **Note** A valid IPv4 address consists of 4 octets separated by a period (.).
-
- Step 5** Click **Save** to deploy the IP pool to the device, or **Cancel** to cancel your editing.
 - Step 6** To edit the existing IP Pool, in the NAT IP Pools page do the following:
 - a. Click in the selected IP Pools parameters row, and edit the parameters. or
 - b. Select the IP Pools, and click **Edit**. The selected IP Pools opens for editing. You can edit all of the parameters except the pool name.
 - Step 7** Click **Save** to deploy the changes to the device.

Creating NAT44 Rules

The NAT44 feature allows you to create, delete, and change NAT44 rules.

There are three types of NAT rules:

- Static
- Dynamic
- Dynamic PAT

To create the NAT44 rule, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
- Step 2** After choosing the device from the list, click **Configuration**. The Feature Configuration pane appears.
- Step 3** In the Feature Configuration pane, expand the **Security**, expand the **NAT** subfolder, and then click **NAT44 Rules**.
- Step 4** In the NAT 44 page, click the down arrow icon next to the **Add NAT Rule** button.
- Click **Static** to create Static Rule. For a description of the elements, see the [Cisco Prime Infrastructure 2.2 Reference Guide](#).
 - Click **Dynamic** to create Dynamic NAT Rule. For a description of the elements, see the [Cisco Prime Infrastructure 2.2 Reference Guide](#).
 - Click **Dynamic PAT** to create Dynamic PAT Rule. For a description of the elements, see the [Cisco Prime Infrastructure 2.2 Reference Guide](#).
- Step 5** Click **Save** to save and deploy the changes to the device.
- Step 6** To edit the existing NAT44 rule in the NAT44 page, do one of the following:
- Click the selected NAT44 rules parameters row, and edit the parameters.
 - Select the NAT44 rule, and click **Edit**. The selected NAT44 rule opens for editing. You can edit all of the parameters.
- Step 7** You can change the Source and Destination according to the creation rules. You can also change the Options selection according to the creation rules.
- Step 8** Click **Save** to save the changes in the server.
-

Configuring Interfaces

A virtual interface is a logical interface configured with generic information for a specific purpose or for specific users, plus router-dependent information.

To configure a virtual interface, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
- Step 2** After choosing the device from list, click **Configuration**. The Feature Configuration pane appears.
- Step 3** In the Feature Configuration pane, expand the **Security**, expand the **NAT** subfolder, and then click **Interfaces**.
- In the Interface page, select the interface that you want to change and choose the association from the drop-down list. The options are: Inside, Outside, and None.
- Step 4** Click **Save** to save the changes in the server.
-

Setting Up NAT MAX Translation

The NAT MAX Translation feature provides the ability to limit the maximum number of concurrent NAT operations on a router. In addition, the NAT MAX feature gives users additional control to use the NAT addresses. The Rate Limiting NAT Translation feature can be used to limit the effects of viruses, worms, and denial-of-service attacks. For more information on Configuring the Rate Limiting NAT Translation Feature, see [Configuring NAT for IP Address Conservation](#) in *IP Addressing: NAT Configuration Guide, Cisco IOS XE Release 3S*.

The NAT MAX Translation feature allows you to reset the global translation attribute values.

To set up the MAX Translation, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** Choose the device from the list or click **Add** to create a new device, then configure the device.
 - Step 3** After choosing the device, click **Configuration**. The Feature Configuration pane appears.
 - Step 4** Expand the **Security**, expand the **NAT** subfolder, and then click **Advanced Settings > Max. Translation**.
 - Step 5** Reset the parameter values. Configure the maximum number of NAT entries that are allowed for all of the parameters. A typical range for a NAT rate limit is from 100 to 300 entries.
 - Step 6** Click **Save** to save the changes in the server.
-

Configuring DMVPN

The DMVPN feature allows you to scale large and small IP Security (IPsec) VPNs by combining generic routing encapsulation (GRE) tunnels, IPsec encryption, and Next Hop Resolution Protocol (NHRP).

A typical VPN connection is a point-to-point IPsec tunnel connecting two routers. DMVPN enables you to create a network with a central hub that connects other remote routers, referred to as spokes, using a GRE over an IPsec tunnel. IPsec traffic is routed through the hub to the spokes in the network.

See [Dynamic Multipoint IPsec VPNs \(Using Multipoint GRE/NHRP to Scale IPsec VPNs\)](#) for more information about DMVPN (requires a Cisco.com login ID).

Cisco Network Control System allows you to configure your router as a DMVPN hub, DMVPN spoke or cluster. You can configure the router in the following ways:

- [Configuring Hub and Spoke Topology](#)
- [Configuring a DMVPN Fully Meshed Topology](#)
- [Configuring a Cluster Topology](#)

Creating a DMVPN Tunnel

To create a DMVPN tunnel, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** After choosing the device from the list, click **Configuration**. The Feature Configuration pane appears.

- Step 3** In the Feature Configuration pane, expand the **Security** folder, and then click **DMVPN**. Click **Add** to create the DMVPN.
- Step 4** In the Device Role and Topology Type area, select the topology and the device role. The options are: Spoke, Hub, and Dynamic Connection between Spokes.
- Step 5** In the Multipoint GRE Interface Information area, choose the WAN interface that connects to the Internet from the drop-down list.
- Step 6** Enter the IP address of the Tunnel Interface, and Subnet Mask.
- Step 7** Complete the fields in the NHRP and Tunnel Parameters area.

**Note**

The Network ID is a unique 32-bit network identifier from a Non Broadcast Multiaccess (NBMA) network. The tunnel key is used to enable a key ID for a particular tunnel interface. The MTU size of IP packets that are sent on a particular interface.

**Note**

The default MTU value for Ethernet and the serial interface is 1500. The default value varies depending upon the media type. The Tunnel throughput delay is used to set the delay value for a particular interface.

- Step 8** In the Encryption policy field, click the anchored plus button (+) to add the Transform Set Profile (see Security > VPN Components > Transform Sets in the *Cisco Prime Infrastructure 2.1 Reference Guide*).
- Step 9** In the Transform Set Profile dialog box, enter the Name and choose the acceptable combination of security protocols and algorithm from the drop-down list to configure the transform set.
- Step 10** Select the IP Compression check box to enable the IP compression for the transform set.
- Step 11** Choose the mode for the transform set. The options are: Tunnel mode or Transport mode.
- Step 12** In the NHS Server Information area, enter the IP address for the physical interface of the hub and tunnel and the Fallback Time. If the device supports the cluster then add the next hop server information, such as Cluster ID, Max Connection, Hub IP address, and Priority.

**Note**

The NHS server information is required only for spoke configuration. If you select the Use Cluster for NHS check box, add the information, such as Cluster ID, Max Connection, and Next Hub Server. The template with the NHS cluster configuration will be applied only to the device running Cisco IOS Software Release 15.1(2)T or later.

- Step 13** In the Routing Information area, choose the routing information. The options are: EIGR, RIPV2, and Other.

**Note**

The routing information is required only for hub configuration.

- Step 14** Choose the existing EIGRP number from the drop-down list or enter an EIGRP number. Use the Other option to configure the other protocols.
- Step 15** Click **Save** to save the single NHS server entry details and the priority of the server, save the entire group of server, and save the NHS cluster information. when you save the NHS cluster information, the NHS server will be populated in the non-editable field.
- Step 16** Click **OK** to save the configuration to the device.

Configuring Hub and Spoke Topology

To configure the hub and spoke topology, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** After choosing the device from the list, click **Configuration**. The Feature Configuration pane appears.
 - Step 3** In the Feature Configuration pane, expand the **Security** folder, and then click **DMVPN**. Click the **Add** button to create the **DMVPN** tunnel.
 - Step 4** In the Device Type and Topology area, choose Hub and Spoke as the topology, and select either Hub or Spoke as a device role.
 - Step 5** Choose the WAN interface from the drop-down list, and then configure the Multipoint GRE IP Address and the subnet mask for the tunnel interface.
 - Step 6** Configure the NHRP and the Tunnel Interface parameters, such as the IP address, NHRP parameters and map, MTU value, Source of the Tunnel, Tunnel Mode, and Tunnel Key.
 - Step 7** Create the transform-set for protecting the data flow between the devices. You can specify up to four transforms: One Authentication Header (AH), one Encapsulating Security Payload (ESP) encryption, one ESP authentication, and one compression. These transforms define the IPsec protocols and the algorithms.
 - Step 8** Configure the routing protocol to be used.
 - Step 9** Click **Save** to save the configuration to the device.
-

Configuring a DMVPN Fully Meshed Topology

The dynamic spoke-to-spoke option allows you to configure a DMVPN fully meshed topology. In this topology, you can configure the router as a spoke, capable of establishing a directIPsec tunnel to other spokes in the network.

To configure a DMVPN Fully Meshed topology, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** Choose the device from the list or click **Add** to create a new device, then configure the device.
 - Step 3** After selecting the device, click **Configuration**. The Feature Configuration pane appears.
 - Step 4** Expand the Security folder, and then click **DMVPN**. Click the **Add** to create the DMVPN tunnel with fully meshed topology.
 - Step 5** In the Create DMVPN Tunnel configuration page, select the **Full Mesh** radio button to configure the network type as full mesh topology.
 - Step 6** Repeat [Step 6](#) through [Step 8](#) in the [Configuring Hub and Spoke Topology](#) section.
 - Step 7** For Fully Mesh spoke topology, in the NHS Server Information area, add the next hub server information, such as the IP Address of Hub's physical interface and the IP address of Hub's tunnel interface.
 - Step 8** Click **Save** to save the configuration to the device.
-

Configuring a Cluster Topology

To configure a cluster topology, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** After choosing the device from the list, click **Configuration**. The Feature Configuration pane appears.
 - Step 3** Feature Configuration pane, expand the **Security** folder, and then click **DMVPN**. Click **Add** to create the DMVPN tunnel.
 - Step 4** From the Create DMVPN Tunnel configuration page, select **Spoke** radio button to configure the device role as a spoke.
 - Step 5** Repeat [Step 6](#) through [Step 8](#) from in the [Configuring Hub and Spoke Topology](#) section.



Note The device must be running IOS version of 15.1(2)T or later.

- Step 6** Click **Add Row** to configure the cluster related information, and add the Cluster-ID and Maximum Connection values.
 - Step 7** Click **Expand Row** (next to the radio button) and click **Add Row** to add the NHS server information.
 - Step 8** Enter the NHS server, the GRE Tunnel IP addresses, and the Priority of this NHS server. Click **Save** to save the NHS server entry configuration.
 - Step 9** Click **Save** to save the NHS server group information.
 - Step 10** Click **Save** again to save the NHS group information with the cluster configuration. This will automatically populate the NHS server IP address in the table.
-

Editing a DMVPN

To edit a DMVPN tunnel, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** Choose the device from the list or click **Add** to create a new device, then configure the device.
 - Step 3** After selecting the device, click **Configuration**. The Feature Configuration pane appears.
 - Step 4** Expand the Security folder, and then click **DMVPN**. The available tunnel is displayed.
 - Step 5** Select the tunnel, and click **Edit**. The Edit DMVPN Tunnel page opens.
 - Step 6** In the Edit DMVPN Tunnel page, you can edit the DMVPN parameters.
 - Step 7** Click **OK** to send the edited DMVPN tunnel configuration to the device.
 - Step 8** Click **Cancel** to close the Edit DMVPN Tunnel page without applying the configuration to the device.
-

Deleting a DMVPN

To delete a DMVPN tunnel, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** Choose the device from the list to delete the DMVPN tunnel. If the device is not added, click **Add** to add the device.
 - Step 3** After selecting the device, click **Configuration**. The Feature Configuration pane appears.
 - Step 4** **Expand the Security folder, and then click DMVPN. The available tunnel is displayed.**
 - Step 5** Select the tunnel, and click **Delete**.
 - Step 6** Click **Yes** on the warning message to delete the selected tunnel.
 - Step 7** Click **No** on the warning message if you do not want to delete the selected tunnel.
 - Step 8** Click **Cancel** to cancel all of the changes that you have made without sending them to the router.
-

Configuring GETVPN

A Group Encrypted Transport VPN (GETVPN) deployment has three primary components: Group Member, Key Server, and Group Domain of Interpretation protocol. Group Members encrypt and decrypt the traffic, and Key Server distributes the encryption key to all group members. The Key Server decides on a single data encryption key for a given lifetime. Because all Group Members use the same key, any Group Member can decrypt the traffic encrypted by any other Group Member. GDOI protocol is used between the Group Member and Key Server for group key and group Security Association (SA) management. A minimum one Key Server is required for a GETVPN deployment.

Unlike traditional IPsec encryption solutions, GETVPN uses the concept of group SA. All members in the GETVPN group can communicate with each other using a common encryption policy and a shared SA. Therefore, there is no need to negotiate IPsec between Group Members on a peer-to-peer basis, thereby reducing the resource load on the Group Member routers.

Group Member

The Group Member registers with the Key Server to get the IPsec SA that is necessary to encrypt data traffic within the group. The Group Member provides the group identification number to the Key Server to get the respective policy and keys for this group. These keys are refreshed periodically by the Key Server, before the current IPsec SAs expire, so that there is no traffic loss.

Key Server

The Key Server is responsible for maintaining security policies, authenticating Group Members and providing a session key for encrypting traffic. Key Server authenticates the individual Group Members at the time of registration. Only after successful registration can the Group Members participate in a group SA.

A Group Member can register at any time and receive the most current policy and keys. When a Group Member registers with the Key Server, the Key Server verifies the group identification number of the Group Member. If this identification number is valid, and the Group Member has provided valid Internet Key Exchange (IKE) credentials, the Key Server sends the SA policy and the keys to the group member.

The keys sends two types to Group Member: the Key Encryption Key (KEK) and the Traffic Encryption Key (TEK). The TEK becomes part of the IPsec SA with which the group members within the same group encrypt the data. The KEK is used to secure rekey messages between the Key Server and the Group Members.

The Key Server sends out rekey messages either because of an impending IPsec SA expiration or because the security policy has changed on the Key Server. Keys can be distributed during rekey using either multicast or unicast transport. the multicast method is more scalable because keys need not be transmitted to each group member individually. Unlike in unicast, The Key Server will not receive acknowledgment from the Group Member about the success of the rekey reception using the multicast rekey method. Using the unicast rekey method, the Key Server will delete a Group Member from its database if the Group Member does not acknowledge three consecutive rekeys.

Group Domain of Interpretation

Group Domain of Interpretation protocol is used for Group key and group SA management. Group Domain of Interpretation uses Internet Security Association Key Management Protocol (ISAKMP) for authenticating the Group Members and Key Servers. All of the standard ISAKMP authentication schemes like RSA Signature (certificates) and preshared key can be used for GETVPN.

For more information on GETVPN, See

http://www.cisco.com/en/US/prod/collateral/iosswrel/ps6537/ps6586/ps6635/ps7180/deployment_guide_c07_554713.html.

Creating a GETVPN Group Member

Use the Add GroupMember configuration page to configure a GETVPN group member.

To create a GETVPN group member, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** After choosing the device from the list, click **Configuration**. The Feature Configuration pane appears.
 - Step 3** In the Feature Configuration pane, expand the **Security** folder, and then click **GETVPN-GroupMember**. Click **Add** to create the GET VPN group member.
 - Step 4** In the Add GroupMember dialog box, choose the **General** tab, and enter the Group Name and Group Identity. Choose the Registration Interface from the drop-down list.
 - Step 5** Enter the Primary Key Server and Secondary Key Server IP addresses. Click **Add Row** or **Delete** to add or delete the secondary key server IP addresses.



Note The primary key server is responsible for creating and distributing group policies to all group members and periodically synchronizes with the secondary key servers. The server with the highest priority is elected as a primary key server.

- Step 6** Click the **row** or **field** to edit the secondary key server IP address.
- Step 7** Click **Save** to save the configuration.
- Step 8** In the Add Group Member dialog box, choose the **Advanced** tab, and choose the Local Exception ACL and Fail Close ACL from the drop-down list.

If the Fail Close feature is configured, all of the traffic passing through the group member will be dropped until the group member is registered successfully. Once the group member registers successfully and SAs are downloaded, this feature turns off by itself.

- Step 9** Choose the **Migration** tab, and select the **Enable Passive SA** check box to enable passive SA. Use this option to turn on the Passive SA mode for this group member.
- Step 10** Click **OK** to add the Group member in the table. To display the commands, click **CLI** preview. After the scheduled deploy is completed, the configuration is applied on the device.
-

Creating a GETVPN Key Server

Use the Add KeyServer configuration page to configure the GETVPN key server.

To create a GETVPN key server, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
- Step 2** After choosing the device from the list, click **Configuration**. The Feature Configuration pane appears.
- Step 3** In the Feature Configuration pane, expand the **Security** folder, and then click **GETVPN-KeyServer**. Click **Add** to create the GETVPN key server.
- Step 4** In the Add Key Server dialog box, choose the **General** tab, and enter the Group Name, Group Identity, WAN IP address, and Priority of this key server.
- Step 5** Enter the Co-operative Key Servers IP address. Click **Add Row** or **Delete** to add or delete the Co-operative key server IP address. Click the **row** or **field**, and edit the IP address.
- Step 6** In the Add KeyServer dialog box, choose the **Rekey** tab, and choose the Distribution method from the drop-down list.
- The distribution method is used to send the rekey information from key server to group members. When you choose the distribution method as multicast, specify the multicast address to which the rekey needs to be transmitted.
- Step 7** In the Add KeyServer dialog box, choose the **GETVPN Traffic** tab, and enter the Traffic to be encrypted, Encryption Policy, and Anti Replay.
- The access list defines the traffic to be encrypted. Only the traffic which matches the “permit” lines will be encrypted. Be sure not to encrypt certain traffic that should always be permitted even if the crypto sessions are not active.
- Step 8** Click **OK** to add the Group member in the table. To display the commands, click **CLI** preview. After the scheduled deployment is completed, the configuration is applied on the device.
-

Editing a GETVPN Group Member or Key Server

To edit a GETVPN group member or a GETVPN key server, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
- Step 2** After choosing the device from the list, click **Configuration**. The Feature Configuration pane appears.
- Step 3** In Feature Configuration pane, expand the **Security** folder, and then click **GETVPN-Group Member** or **GETVPN-KeyServer**. The GETVPN-GroupMember or GETVPN-KeyServer summary page opens.

- Step 4** In the GETVPN summary page, select the group name and click **Edit**. The Edit GETVPN-GroupMember or GETVPN-Keyserver page appears.
 - Step 5** In the Edit GETVPN-GroupMember or GETVPN-KeyServer page, you can edit the GETVPN parameters.
 - Step 6** Click **OK** to save the configurations.
-

Deleting a GETVPN Group Member or Key Server

To delete a GETVPN group member or GETVPN key server, follow these steps:

- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** Choose the device from the list or click **Add** to add a new device, then configure the device. The device details appear on the lower part of the page.
 - Step 3** After choosing the device, click **Configuration**. The Feature Configuration pane appears.
 - Step 4** In the Feature Configuration pane, expand the **Security** folder, and then click **GETVPN-Group Member** or **GETVPN-KeyServer**. The GETVPN-GroupMember or GETVPN-KeyServer summary page opens.
 - Step 5** In the GETVPN summary page, select the group name and click **Delete**.
 - Step 6** Click **OK** to save the configurations.
-

Configuring VPN Components

The Internet Key Exchange (IKE) is a standard method for arranging secure and authenticated communications. The IKE establishes session keys (and associated cryptographic and networking configuration) between two hosts across network. IKE policies protect the identities of peers during authentication.

IKE negotiations must be protected; therefore, each IKE negotiation begins by each peer agreeing on a common (shared) IKE policy. This policy states the security parameters that will be used to protect subsequent IKE negotiations. After the peers agree on a policy, the security parameters of the policy are identified by a security association established at each peer. These security associations are applied to all subsequent IKE traffic during the negotiation.

When negotiation begins, IKE looks for an IKE policy that is the same on both peers. The peer that initiates negotiation sends all of its policies to the remote peer. The remote peer looks for a match by comparing its own highest priority policy against the other peer's received policies. A match is found when policies from both peers contain the same encryption, hash, authentication, and Diffie-Hellman (D-H) parameter values, and when the remote peer's policy specifies a lifetime that is less than or equal to the lifetime of the policy it is being compared to. If the lifetimes are not identical, the shorter lifetime from the remote peer's policy is used.

The VPN components primarily include the following:

- [Configuring IKE Policies](#)
- [Configuring IKE Settings](#)

- [Configuring IPsec Profiles](#)
- [Creating Preshared Keys](#)
- [Creating RSA Keys](#)
- [Configuring Transform Sets](#)

Configuring IKE Policies

To configure IKE policies, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** After choosing the device from the list, click **Configuration**. The Feature Configuration pane appears.
 - Step 3** In the Feature Configuration pane, Expand the **Security** folder, and then choose **VPN Components > IKE Policies**.
 - Step 4** Click **Add Row** to create the IKE policies.
 - Step 5** In the IKE Policies page, enter the Priority, Authentication, D-H Group, Encryption, Hash, and Lifetime.
For a description of the elements on the IKE Policies page, see Security > VPN Components > IKE Policies in the *Cisco Prime Infrastructure 2.1 Reference Guide*.
 - Step 6** Click **Save** to save the configuration, then click **Save** again to generate the CLI commands.
-

Configuring IKE Settings

The IKE Settings feature allows you to globally enable IKE for your peer router.

To configure IKE settings, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** After choosing the device from the list, click **Configuration**. The Feature Configuration pane appears.
 - Step 3** In the Feature Configuration pane, expand the **Security** folder, and then choose **VPN Components > IKE Settings**.
 - Step 4** Select the **Enable IKE** and **Enable Aggressive Mode** check box to enable the IKE policies and the aggressive mode.
 - Step 5** Choose the IKE Identity from the drop-down list.
 - Step 6** Enter the **Dead Peer Detection Keepalive** and **Dead Peer Detection Retry** time in seconds.
For a description of the elements on the IKE Settings page, see Security > VPN Components > IKE Settings in the *Cisco Prime Infrastructure 2.1 Reference Guide*.
 - Step 7** Click **Save** to save the configuration.
-

Configuring IPsec Profiles

The IPsec profiles, also called ISAKMP profiles, enable you to define a set of IKE parameters that you can associate with one or more IPsec tunnels. An IPsec profile applies parameters to an incoming IPsec connection identified uniquely through its concept of matching identity criteria. These criteria are based on the IKE identity that is presented by incoming IKE connections and includes IP address, Fully Qualified Domain Name (FQDN), and group the VPN remote client grouping.

The IKE Profile feature allows you to create an IPsec profile.

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** After choosing the device from the list, click **Configuration**. The Feature Configuration pane appears.
 - Step 3** In the Feature Configuration pane, expand the **Security** folder, and then choose **VPN Components > IPsec Profile**.
 - Step 4** Click **Add Row** to create the IPsec profile.
 - Step 5** In the IPsec Profile page, enter the information such as Name, Description, and Transform Set, and the IPsec SA Lifetime.



Note When you edit a profile, you cannot edit the name of the IPsec profile. A transform set represents a certain combination of security protocols and algorithms. During the IPsec security association negotiation, the peers agree to use a particular transform set for protecting a particular data flow. A transform describes a particular security protocol with its corresponding algorithms

- Step 6** Enter the IPsec SA Lifetime in seconds to establish a new SA after the set period of time elapses.
 - Step 7** To edit the IPsec profile parameters, click **Field** and edit the parameter of that IPsec profile.
 - Step 8** To delete the IPsec profile, select the IPsec Profile from the list, and click **Delete**.
 - Step 9** Click **Save** to save the configuration, then click **Save** again to generate the CLI commands.
-

Creating Preshared Keys

The preshared Keys feature allows you to share a secret key between two peers. This key is used by the IKE during the authentication phase.

To create a preshared key, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** Select a device or click **Add** to add a new device, and then configure the device. The device details appear in the lower part of the page.
 - Step 3** After selecting the device, click **Configuration**. The Feature Configuration pane appears.
 - Step 4** Expand the Security folder, and then choose **VPN Components > Preshared Keys**.
 - Step 5** Click **Add Row** to create the preshared key.
 - Step 6** In the Preshared Keys page, enter the IP Address, Host Name, Subnet Mask, and Preshared Keys.
 - Step 7** To edit the preshared key parameters, click the **Field** and edit the parameter of that preshared key.

- Step 8** To delete the preshared key, choose the preshared key from the list, and click **Delete**.
- Step 9** Click **Save** to save the configuration, then click **Save** again to generate the CLI commands.
-

Creating RSA Keys

An RSA key pair consists of a public key and a private key. When setting up your Public Key Infrastructure (PKI), you must include the public key in the certificate enrollment request. After the certificate is granted, the public key is included in the certificate so that peers can use it to encrypt the data that is sent to the router. The private key is kept on the router and used both to decrypt the data sent by the peers and to digitally sign transactions when negotiating with the peers.

RSA key pairs contain a key modulus value. The modulus determines the size of the RSA key. The larger the modulus, the more secure the RSA key. However, it takes longer to generate, encrypt, and decrypt keys with large modulus values.

To create an RSA keys, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
- Step 2** After choosing the device from the list, click **Configuration**. The Feature Configuration pane appears.
- Step 3** In the Feature Configuration pane, expand the **Security** folder, and then choose **VPN Components > RSAKeys**.
- Step 4** Click **Add Row** to create the RSA keys.
- Step 5** The Add RSA Keys dialog box appears.
- Step 6** In the Add RSA Keys dialog box, enter the Label, Modulus, and Type.



Note For a modulus value between 512 and 1024, enter an integer value that is a multiple of 64. If you want a value higher than 1024, you can enter 1536 or 2048. If you enter a value greater than 512, key generation may take a minute or longer. The modulus determines the size of the key. The larger the modulus, the more secure the key, but keys with a large modulus take longer to generate, and encryption/decryption operations take longer with larger keys.

- Step 7** Select the **Make the Key exportable** check box to generate the RSA as a exportable key.
- Step 8** Click **OK** to save the configuration.
- Step 9** To import the RSA key, click **Import**. The Import RSA Key dialog box appears.
- Step 10** In the Import RSA Key dialog box, enter the label of the RSA key, Key type, and password to decrypt the key. If the key type is general-keys, signature or encryption, copy and paste the public and private key data that was saved.
- Step 11** To import usage-key, enter the public and private key data of both the signature and encryption keys.
- Step 12** Click **Import** to import the RSA key.
- Step 13** To export the RSA key, choose the RSA key from the list and click **Export**. The Export RSA Key Pair dialog box appears.
- Step 14** In the Export RSA Key Pair dialog box, enter the password to encrypt the RSA key and choose the encryption algorithm from the drop-down list.
- Step 15** Click **OK** to display the exported keys.

Step 16 To delete the RSA key, choose the RSA key from the list, and click **Delete**.

Configuring Transform Sets

To define a transform set, specify one to three transforms. Each transform represents an IPsec security protocol (AH or ESP) plus the algorithm that you want to use. When the particular transform set is used during negotiations for IPsec security associations, the entire transform set (the combination of protocols, algorithms, and other settings) must match a transform set at the remote peer.

To configure a transform sets, follow these steps:

Step 1 Choose **Inventory > Device Management > Network Devices**.

Step 2 After choosing the device from the list, click **Configuration**. The Feature Configuration pane appears.

Step 3 **In the** Feature Configuration pane, expand the **Security** folder, and then choose **VPN Components > Transform Sets**.

Step 4 Click **Add Row** to create the transform sets.

Step 5 In the Transform Sets page, enter the Name and select the acceptable combination of security protocols and algorithm to configure the transform set.



Note The ESP encryption algorithm is used to encrypt the payload and the integrity algorithm is used to check the integrity of the payload.

Step 6 Specify the mode for a transform set:

- **Transport**—Encrypt data only. Transport mode is used when both endpoints support IPsec. Transport mode places the authentication header or encapsulated security payload after the original IP header; thus, only the IP payload is encrypted. This method allows users to apply network services such as quality-of-service (QoS) controls to encrypted packets.
- **Tunnel**—Encrypt data and IP header. Tunnel mode provides stronger protection than transport mode. Because the entire IP packet is encapsulated within AH or ESP, a new IP header is attached, and the entire datagram can be encrypted. Tunnel mode allows network devices such as a router to act as an IPsec proxy for multiple VPN users; tunnel mode should be used in those configurations.

Step 7 Click **Save** to save the configuration, then click **Save** again to save the configuration changes.

Creating a Zone-Based Firewall

The Zone-Based Firewall feature allows you to easily manage Cisco IOS unidirectional firewall policy between groups of interfaces known as *zones*.


A zone is a group of interfaces that have similar functions or features. For example, on a router, Gigabit Ethernet interface 0/0/0 and Gigabit Ethernet interface 0/0/1 may be connected to the LAN. These two interfaces are similar because they represent the internal network, so they can be grouped into a zone for firewall configurations.

By default, the traffic between interfaces in the same zone is not subjected to any policy. The traffic passes freely.

When an interface is a member of a security zone, all traffic to and from that interface (except traffic going to the router or traffic going to another interface on the same zone) is dropped.

To permit traffic between interfaces that belong to different zones, a firewall policy with concrete rules must be pushed to the device. If the policy permits the traffic between these two zones (through inspect or pass actions) traffic can flow through the zones. [Figure 28-1](#) describes the security zone.

Figure 28-1 Security Zone Diagram

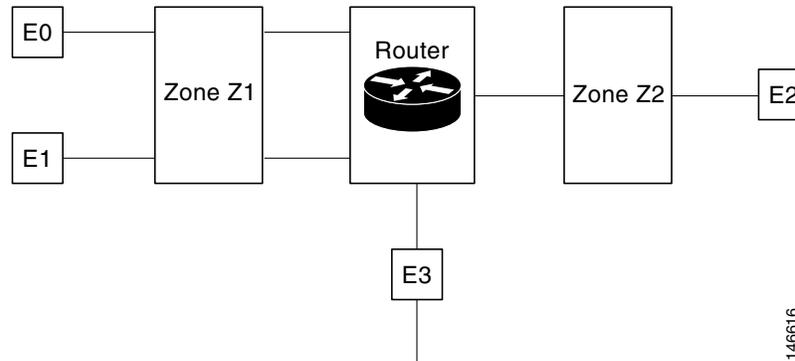

The following describe the relationships between the interfaces and security zones shown in [Figure 28-1](#).

- Interfaces E0 and E1 are members of the security zone Z1.
- Interface E2 is a member of the security zone Z2.
- Interface E3 is not a member of any of the security zone.

In this scenario, the following situations exist:

- Traffic flows freely between interfaces E0 and E1 because they are members of the same security zone (Z1).
- If no policies are configured, traffic will not flow between zones (for example, E0 and E2, E1 and E2, E3 and E1, and E3 and E2).
- Traffic can flow between interface E0 or E1 and E2 only when an explicit policy is configured to permit the traffic between zone Z1 and zone Z2.

Traffic can never flow between E3 and interface E0, E1 or E2 because E3 is not a part of any security zone.

Prime Infrastructure supports the zone-based firewall feature on Cisco ASR, ISR, and CSR routers. Using Prime Infrastructure, you can configure a zone-based firewall policy template and deploy it to multiple devices. After you deploy the zone-based configuration, you can navigate to the Device Work Center to view the deployed firewall configuration on a specific device.

To monitor the zone-based firewall, check the Zone-Based Firewall Monitor Hits capability on the Device Work Center or the Prime Infrastructure syslog feature, which supports zone-based firewall syslog messages.

Prime Infrastructure can configure Zone-Based Firewall either through CLI (over Telnet or SSH) or through WSMA. Zone-Based Firewall can be configured through WSMA in a more efficient and robust method and we recommend that you use the WSMA protocols for configuring Zone-Based Firewall. For more information on using WSMA with Prime Infrastructure, see [Configuring the Device using WSMA](#).

Configuring a Zone-Based Firewall Template

To configure a zone-based firewall on more than one device, use a zone-based template to make the changes. For zone-based firewall templates, you must first design the zone-based firewall in the network by defining the zones in the network. In Prime Infrastructure, zones are represented by interface role global object, which dynamically selects the list of interfaces that belong to the zone. Next, define and create network objects in the firewall environment. The Zone-based firewall feature supports only IPv4 network in Prime Infrastructure 2.2. (IPv6 is not supported.)



Note

The Zone-Based Firewall feature is supported on the following: ASR platform from Cisco IOS-XE Release 15.2(2)S or later, ISR G2 platform from Cisco IOS Release 15.0(1)M or later, ISR G3 platform from Cisco IOS-XE 15.3(2)S Release or later, and CSR platform from Cisco IOS-XE 15.3(1)S Release or later.

To configure a zone-based firewall template:

1. Define the zones. A security zone is defined as an interface role (see [Creating an Interface Role](#)).
2. Define the IPv4 network objects (see [Creating an IPv4 Network Object](#)).



Note

Cisco Prime Infrastructure 2.0 supports only IPv4 network objects.

3. Design a firewall policy and deploy it to multiple devices (for more information, see [Creating a Policy Rule](#)).
4. Validate the configuration for a specific device (see [Creating a Zone-Based Firewall](#)).
5. Modify the global objects and template configuration (see [Creating a Zone-Based Firewall Policy Rules Template](#)).
6. Monitor the policy rules (see [Monitoring Policy Rules](#)).
7. Monitor the syslog messages (for more information, see [Where to Find Syslogs](#)).

To modify security zones, IPv4 network objects, and firewall policies, edit the firewall policy and redeploy it to the relevant devices.

Creating an Interface Role

An Interface role allows you to dynamically select a group of interfaces without having to manually define explicitly interfaces on each device. For example, you can use interface roles to define the zones in a zone-based firewall configuration template. You might define an interface role with a naming pattern of DMZ*. When you include this interface role in a template and deploy the template, the configuration is applied to all interfaces whose names begin with “DMZ” on the selected devices. As a result, you can, for example, assign a policy that enables anti-spoof checking on all DMZ interfaces to all relevant device interfaces with a single action.

For information to create an interface role, see [Creating Interface Roles](#).

Creating an IPv4 Network Object

Network objects are logical collections of IP addresses or subnets that represent networks. Using network objects simplifies policy management.

For information to create an IPv4 network object, see [Creating Network Objects](#).

Defining Device Override

Use the device override feature when a specific device is differed from the general network design.

To define the device override, follow these steps:

-
- Step 1** Choose **Configuration > Templates > Shared Policy Objects > Shared > Interface Role** or **IPv4 Network Object**.
 - Step 2** In the Create/Edit Network Object or Interface Role page, select the Allow Value Override Per Device check box and define the values per specific device. The defined values will override the regular values defined for the Interface Role \ Network Object.
 - Step 3** Click **OK** to save the configurations.
-

Creating a Zone-Based Firewall Policy Rules Template

After you create a shared policy objects, create a zone-based firewall policy rules template.

To create a Zone-Based Firewall Policy Rules template, follow these steps:

-
- Step 1** Choose **Configuration > Templates > Features & Technologies > Security > Zone Based Firewall > Policy Rules**.
 - Step 2** In the Template Basic area, enter a name and a description in the appropriate fields.
 - Step 3** In the Validation Criteria area, choose a Device Type from the list and enter the OS Version.
 - Step 4** Enter the required fields. For descriptions of the template parameters, see the [Cisco Prime Infrastructure 2.1 Reference Guide](#).
 - Step 5** Click **Save as New Template**. After you save the template, deploy it to your devices using the procedures in [Creating Feature-Level Configuration Templates](#).
-

Configuring a Zone-Based Firewall on a Single Device

To configure a zone-based firewall on a single device, use Device Work Center zone-based configuration to make the changes.

Creating a Security Zone

To create a security zone, follow these steps:

**Note**

The Zone Based Firewall feature is supported on the ASR platform on Cisco IOS-XE Release 15.2 (2)S or later, ISR G2 platform on Cisco IOS release 15.0 (1) M or later, ISR G3 platform on Cisco IOS-XE Release 15.3(2)S or later, and CSR platform on Cisco IOS-XE Release 15.3(1)S.

-
- Step 1** Choose **Inventory > Device Management > Network Devices**, then select a device.
- Step 2** In the Feature Configuration pane, expand the **Security** subfolder.
- Step 3** In the Security subfolder, expand the **Zone Based Firewall > Common Building Blocks**, and then click **Zones**.
- Step 4** Click **Add Zone** to create the security zone.
- Step 5** Select a **Zone Name**.
- Step 6** Select the VRF of the zone.
- Select a VRF before assigning interfaces to the security zone. Only the interfaces that are assigned to the selected VRF can be assigned to the zone.
 - If the user selects the “global VRF”, only interfaces which are not assigned to any VRF can be assigned to the zone.
- Step 7** To assign the interfaces to the security zone, click the down arrow icon. The Interface Object Selector dialog box appears.
- In the Interface selector dialog box, select the **Interface** check box to select the interface from the list (can be multiple selection).
 - Click **OK** to save the configuration or click **Cancel** to cancel all of the changes that you have made without sending them to the router.
- Step 8** In the Advanced options column, click **Configure**. The Advanced Parameters Configuration dialog box appears.
- Step 9** Define a set of advanced parameters which would be applicable for the inspected traffic that goes through the interfaces that belongs to the zone. For each parameter, select the check box to the left of the parameter name to override the default value for the parameter and then select the new value for the parameter. (Optional) In the Advanced Parameters Configuration dialog box, do the following:
-  **Note** Advanced Parameters option is supported only on ASR1K series devices.
-
- Select the **Alert** check box and select the **On** radio button to set the alert.
 - Select the **Maximum Destination** check box to set the maximum destination.
 - Select the **TCP SYN-Flood Rate per Destination** check box to set the TCP flood rate.
 - Select the **Basic Threat Detection Parameters** check box and select the **On** radio button to configure the FW drop threat detection rate, FW inspect threat detection rate, and FW SYN attack threat detection rate.
- Step 10** Click:
- OK** to save the configuration.
 - Cancel** to exit without saving.
- Step 11** To edit the existing security zone parameters, select the zone, and click **Edit** in the Advance options column. The Advanced Parameters Configuration dialog box appears.
- Step 12** In the Advanced Parameters Configuration dialog box, edit the values and click **Save** to save the changes. When you hover your mouse over the Advanced Options icon, the configured parameters will be displayed in the quick view window.
- Step 13** Enter the description for the zone, then click **Save**.
-

Editing a Security Zone

To edit a security zone, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**, then select a device.
 - Step 2** In the Feature Configuration pane, expand the **Security** subfolder.
 - Step 3** In the Security subfolder, expand the **Zone Based Firewall > Common Building Blocks**, and then click **Zones**.
 - Step 4** In the Zones page, choose one of the following options:
 - a. Click the Zone parameters row, and edit the parameters. or
 - b. Select the zone, and click **Edit**. The selected Zone entity opens for editing.
 - Step 5** Click the **add** icon to assign the interface to the zone or to un-assign the existing interfaces from the zone. You can also change the Description of the zone and edit the advanced parameters of the zone.
 - Step 6** Click **Save** to save the configuration.
-

Configuring a Default-Zone

A default zone is a zone that is automatically assigned to all interfaces that are not assigned to any other zone on device.

To configure a default zone, follow these steps:



Note The Default-Zone feature is supported only on the ASR platform.

- Step 1** Choose **Inventory > Device Management > Network Devices**, then select a device.
 - Step 2** From the Feature Configuration pane, expand the **Security** subfolder.
 - Step 3** From the Security subfolder, expand the **Zone Based Firewall > Common Building Blocks**, and then click **Zones**.
 - Step 4** In the Zones page, click **Enable Default** to enable or disable the default security zone in the device. The default zone will host all of the interfaces that are not related to any zone.
 - Step 5** Click **OK** to save the configuration.
-

Creating a Policy Rule

To create a policy rule, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**, then select a device.
 - Step 2** In the Feature Configuration pane, expand the **Security** subfolder.
 - Step 3** In the Security subfolder, expand the **Zone Based Firewall** and then click **Policy Rules**. The Policy Rules page appears.

- Step 4** From the Policy Rules page, click **Add Rule** and complete the fields. When you add a rule, you can place a rule at the top or bottom of the policy or after/before an existing rule. Firewall Rules are processed according to their order. To control the order of the rules, select the location of the rule in the table and use Add Top or Add Bottom option to add the rule to the top or the bottom of the table. Select a rule and use Add After or Add Before option to add the rule before or after an existing rule. You can place a rule at any given location and later use drag and drop to change its location.
- Step 5** (Optional) Enter the firewall rule name. If you do not provide the name for the firewall rule, the system generates a name for the firewall rule. You cannot use these formats rule_<number> or EMS_rule_<number> to create the firewall rule name (For example, rule_1). These are system reserved formats.
- Step 6** Select the source and destination zones for the rule, the rule is applicable only for traffic that flows from the source zone to the destination zone. Note that the source and destination zones must be different.
- Step 7** To add the source and the destination IP address, click the **add** icon. The Source/Destination IP address dialog box appears.
- In the Source/Destination IP address dialog box, select the **Any** check box to set the value to any.
 - Enter the Source/ Destination IP addresses.
 - Click the + button to add the new IP address and the subnet.
 - Click the - button to remove an IP/subnet.
 - Click **OK** to save the configurations or click **Cancel** to cancel all of the changes that you have made without sending them to the router.
- Step 8** (Optional) Set the Service values. To add or remove the service, click the down arrow icon. The Firewall Service dialog box appears. You can also select a predefined Service. For creating services, see [Creating a Service Group](#).
- In the Firewall Service dialog box, select the service or port-based application check box to select the application or the service for the rule.
 - Select specific TCP / UDP ports by selecting TCP or UDP, close the window and enter the list of ports to be used in the text box that appears next to the TCP or UDP icon. For viewing port-based applications, see [Assigning TCP/UDP Ports on an Application](#).
 - Use the navigation arrow buttons to navigate backward.
 - Click **OK** to save the configurations.
- Step 9** Select the appropriate action. The options are: **Drop**, **Drop and Log**, **Inspect**, **Pass**, and **Pass and Log**.
- Step 10** If you select the action to inspect, click **Configure** in the Advance options column. The Advanced Parameters Configuration dialog box appears.
- Step 11** In the Advanced Parameters Configuration dialog box, do the following:
- To customize the device default value, select the Parameter check box and set the new value.
 - To apply the device default value, unselect the Parameter check box.
 - To view the firewall rule default parameters, see [Configuring a Default Parameters Map](#).
 - When you hover your mouse cursor over the Advanced Options icon, the configured parameters are displayed in the quick view window.
- [Table 28-1](#) lists the elements on the policy rule page.
- Step 12** Click **Save** to apply the rule to the device. For description of the elements, see the [Cisco Prime Infrastructure 2.2 Reference Guide](#).

Monitoring Policy Rules

The monitoring feature allows you to monitor policy rules. You can identify the most-used rules, and you can troubleshoot a specific rule and verify hits for the selected rule.

To monitor policy rules, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**, then select a device.
 - Step 2** In the Feature Configuration pane, expand the **Security** subfolder.
 - Step 3** In the Security subfolder, expand the **Zone Based Firewall** and then click **Policy Rules**. The Firewall Rules page appears.
 - Step 4** In the Firewall Rules page, click **Hit Counters** and use one of the following options to analyze the sessions and packets hit counters for the firewall rules.
 - Step 5** Click the **Show all** option to view the packets and sessions counters for all firewall rules. The packets and sessions counters are displayed in two separate columns.



Note When you select the **Show all** option, the system will display a warning message stating that it may take more time to complete this operation. Sessions hit counters are not applicable for Drop/Pass rules. Similarly, packet hit counters are not applicable for Inspection rules.

- Step 6** To know the time of the last update for the rules, hover the mouse cursor over the column names or click the **Last Update Time** option in the Hit Counters.
 - Step 7** Click the **Show for selected rules** option to show the hit counters for a specific rule or a couple of selected rules. The hit counters would be displayed in a popup dialog box with a refresh button that allows quick refresh of the data.
 - Step 8** Use the predefined filters options available in the top-right corner of the table to display the rules at the top or bottom based on the packets/sessions counts.
 - Step 9** Click **Reset All Counters** to discard all of the rules counters on the device. The application will display a warning message before resetting the rules counters.
-

Editing a Policy Rule

To edit a policy rule, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**, then select a device.
 - Step 2** In the Feature Configuration pane, expand the **Security** subfolder.
 - Step 3** In the Security subfolder, expand the **Zone Based Firewall** and then click **Policy Rules**. The Firewall Rules page appears.
 - Step 4** In the Firewall Rules page, choose one of the following options:
 - Click the Rules parameters row and edit the parameters.
 - Select the check box to select the rule, and then click **Edit**. The selected Rule opens for edit. You cannot edit the name of the policy rule.

**Note**

In Cisco Prime Infrastructure Release 2.2, you can specify the Transmission Control Protocol (TCP) / User Datagram Protocol (UDP) port range in the firewall rule service. When you add a new rule or edit an existing rule under the Service column, click object selector to assign the TCP / UDP, and click **OK**. You can define the port numbers in the text box that appears near the protocol icon. Also, you can define the port range in the format of <start-port-number>-<end-port-number>, and this range can be configured for that specific protocol (TCP or UDP).

- You can re-order firewall rules by dragging a rule and dropping it in a different location.

Step 5 Click **Save** to apply the changes in the device.

Creating a Service Group

You can create, update or delete a service groups. Service group provides an option to group together several port-based applications to logical groups which could be used in firewall policies.

For example, you can define a browsing service-group object and assign both HTTP and HTTPS applications to it. Then you can use this browsing service-group in firewall rules to permit or deny browsing traffic, rather than selecting both HTTP and HTTPS in those rules.

To create a service group, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**, then select a device.
- Step 2** In the Feature Configuration pane, expand the **Security** subfolder.
- Step 3** In the Security subfolder, expand the **Zone Based Firewall > Common Building Blocks**, and then click **Service Groups**. The Service Groups page appears.
- Step 4** To create the Service Group:
- In the Service Group page, click **Add Service Group** and enter the Service Group Name. You cannot change the name after creating the Service Group. Also, you cannot create a service group without an application (see [Creating Custom Applications](#)).
 - To assign Applications, click the down arrow icon.
 - In the Applications dialog box, select the **Applications** check box to select one or more applications from the list, then click **OK**.
- Step 5** To edit an existing Service Group, do one of the following:
- In the Service Groups page, click the Service Group parameters row and edit the parameters.
 - Select the service group and click **Edit**. You can add new applications or remove an already selected application.
 - To remove an application from the selected list, hover your mouse cursor over the application name and click **X**.
- Step 6** Click **Save** to apply your changes to the device.
-

Assigning TCP/UDP Ports on an Application

You can assign or unassign the Transmission Control Protocol (TCP) / User Datagram Protocol (UDP) ports to an application.

**Note**

When you click **Save** in the following procedure, your changes are deployed on the device. You cannot review the requested operation or remove the request from the pending changes queue.

To assign or unassign TCP/UDP ports for an application, follow these steps:

- Step 1** Choose **Inventory > Device Management > Network Devices**, then select a device.
- Step 2** In the Feature Configuration pane, expand the **Security** subfolder.
- Step 3** In the Security subfolder, expand the **Zone Based Firewall > Common Building Blocks**, and then click **Port Mappings**. The Port Application Mapping page appears.

**Note**

Displays the application name that is driven from the device.

- Step 4** To assign or unassign the TCP/UDP ports to an application, click the application and update its TCP/UDP ports value. The TCP/UDP Port values are assigned to the specific application.
 - a. Assign port(s) by defining one or more ports separated by comma (For example: 1234, 2222 and so on).
 - b. Assign port(s) by defining the port range (For example: 1111-1118). You can also assign a combination of ports and port ranges.
 - c. Unassign port(s) by deleting the existing port values.
- Step 5** Click **Save** to save the configurations.

Configuring a Default Parameters Map

To configure a default parameters, follow these steps:

- Step 1** Choose **Inventory > Device Management > Network Devices**, then select a device.
- Step 2** In the Feature Configuration pane, expand the **Security** subfolder.
- Step 3** In the Security subfolder, expand the **Zone Based Firewall** and then click **Default Parameters**. The Default Parameters page appears.
- Step 4** In the Default Parameters page, change the parameters value.

**Note**

You can change the default parameters only on ISR devices.

- Step 5** Click **Save** to save the configuration.

Assigning an Interface for a Zone

The interfaces view gives an overview of the interfaces on the device which are applicable for firewall inspection. The view allows viewing and modifying the assignment of those interfaces to security zones.

To assign or unassign an interface for a zone, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**, then select a device.
 - Step 2** In the Feature Configuration pane, expand the **Security** subfolder.
 - Step 3** In the Security subfolder, expand the **Zone Based Firewall** and then click **Interfaces**.
 - Step 4** In the Interface page, select the interface that you want to change and click the down arrow icon. The Zone dialog box appears.
 - Step 5** In the Zone dialog box, select the new security zone for the interface. If the selected interface is already assigned to a zone, you will get a warning message.
 - Step 6** Click **Yes** on the warning message if you want to change the assignment of that interface.
 - Step 7** To un-assign the interface from the specific zone, select the interface and delete the zone information.
 - Step 8** Click **Save** to save and apply your changes.
-

Creating a Routing Protocol

A routing protocol specifies how routers:

- Communicate with other routers in a network
- Select routing paths to transmit data between nodes in a computer network
- Share network information with other routers

The following sections describe the routing protocols supported by Prime Infrastructure.

Creating a Static Route

Static routing is the simplest form of routing, where the network administrator manually enters routes into a routing table. The route does not change until the network administrator changes it. Static routing is normally used when there are very few devices to be configured and the administrator is very sure that the routes do not change. The main drawback of static routing is that a change in the network topology or a failure in the external network cannot be handled, because routes that are configured manually must be updated to fix any lost connectivity.

To create a static route, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** Choose the device from the list or click **Add Device** to create a new device, then configure the device.
 - Step 3** After selecting the device, click **Configuration**. The Feature Configuration pane appears.
 - Step 4** Expand the **Routing** folder, and then click **Static**. The Static Routing page appears with options to configure IPv4 static routes.

- Step 5** To configure an IPv4 static route, do the following:
- a. In the **IPv4 Static Routes** page, click **Add Row**, and then complete the fields.
For Permanent Route, choose either of the following:
 - **True** to specify that the route will not be removed from the routing table, even if the next-hop interface shuts down or the next-hop IP address is not reachable.
 - **False** to specify that the route will be removed from the routing table, even if the next-hop interface shuts down or the next-hop IP address is not reachable.
 - b. Click **Save**.
 - c. Click **Save** to save the configuration.
-

Creating a RIP Route

Routing Information Protocol (RIP) is a distance-vector routing protocol that uses hop count as a routing metric. RIP implements a limit of 15 hops in a path from source to a destination, to prevent routing loops. The hop-count limit also limits the size of the networks that RIP supports. RIP sends its routing table every 30 seconds.

The variants of RIP are RIP version 1 (described in RFC1058) and RIP version 2 (described in RFC2453). RIP uses the split horizon, route poisoning, and holddown mechanisms to prevent incorrect routing information from being propagated.

To create a RIP route, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
- Step 2** Choose the device from the list or click **Add Device** to create a new device, then configure the device.
- Step 3** After selecting the device, click **Configuration**. The Feature Configuration pane appears.
- Step 4** Expand the **Routing** folder, and then click **RIP**. The RIP Routing page appears with options to configure IPv4 RIP routes.
- Step 5** To configure an IPv4 RIP route, do the following:
- a. In the **IPv4 RIP Routes** page, select the RIP version.
 - b. Click **Add Row**, and then complete the fields.
 - c. Click **Save**.
 - d. Click **Passive Interface** to select the passive interface that you want to add.
 - e. Click **Save** to save the configuration.
-

Creating an EIGRP Route

In EIGRP (an enhanced Interior Gateway Routing Protocol) when an entry in the routing table changes in any of the routers, it notifies its neighbors of the change only, rather than sending the entire routing table. Every router in the network sends a “hello” packet periodically so that all routers on the network understand the states of their neighbors. If a “hello” packet is not received from a router during a certain period of time, it is assumed that the router is inoperative.

EIGRP uses the Diffusing Update Algorithm (DUAL) to determine the most efficient route to a destination and provides a mechanism for fast convergence. Routers using EIGRP and IGRP can interoperate because the routing metric used with one protocol can be easily translated into the routing metric of the other protocol.

To create an EIGRP route, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** Choose the device from the list or click **Add Device** to create a new device, then configure the device.
 - Step 3** After selecting the device, click **Configuration**. The Feature Configuration pane appears.
 - Step 4** Expand the **Routing** folder, and then click **EIGRP**. The EIGRP Routing page appears with options to configure IPv4 EIGRP routes.
 - Step 5** To configure an IPv4 EIGRP route, do the following:
 - a. In the **IPv4 EIGRP Routes** page, click **Add Row**, and then complete the fields.
 - b. Click **Save**.
 - c. Click **Add Interface** to select the passive interface that you want to associate to the Autonomous System (AS) number created.
 - d. Click **Save** to save the configuration.
-

Creating an OSPF Route

Open Shortest Path First (OSPF) is a standards-based routing protocol that uses the Shortest Path First (SPF) algorithm to determine the best route to its destination. OSPF sends Link State Advertisements (LSAs) to all other routers within the same area. OSPF only sends routing updates for the changes only; it does not send the entire routing table.

To create an OSPF route, follow these steps:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
 - Step 2** Choose the device from the list or click **Add Device** to create a new device, then configure the device.
 - Step 3** After selecting the device, click **Configuration**. The Feature Configuration pane appears.
 - Step 4** Expand the **Routing** folder, and then click **OSPF**. The OSPF Processes page appears with options to configure IPv4 OSPF processes.
 - Step 5** To configure an IPv4 OSPF process, do the following:
 - a. In the **IPv4 OSPF Processes** page, click **Add Row**, and then complete the fields.
 - b. Click **Save**.
 - c. Click **Passive Interfaces** to select the passive interface that you want to associate to the process created.
 - d. Click **Advanced**. The Advanced OSPF IPv4 Configuration dialog box appears.
 - e. Click **Networks > Add Row**, and then complete the fields.
 - f. Click **Route Summarization > Add Row**, and then complete the fields.
 - g. Click **OK**.

- h. Click **Save** to save the configuration.
-

