



## Before You Begin

---

Configure an ASA using ASDM.



---


**Note** The Secure Firewall 4200 runs in appliance mode only; it does not support platform mode, which uses FXOS as the chassis manager. Appliance mode lets you configure all settings in the ASA. Only advanced troubleshooting commands are available from the FXOS CLI.

---

- [Cable the Firewall, on page 1](#)
- [Power On the Firewall, on page 2](#)
- [Which Application is Installed: Threat Defense or ASA?, on page 3](#)
- [Access the ASA CLI, on page 3](#)
- [Obtain Licenses, on page 5](#)

## Cable the Firewall

- (Optional) Obtain a console cable—The firewall does not ship with a console cable by default, so you will need to buy a third-party USB-to-RJ-45 serial cable, for example.
- Install SFPs into the data interfaces and optional Management ports—The built-in ports are 1/10/25-Gb SFP28 ports that require SFP/SFP+/SFP28 modules.
- See the [hardware installation guide](#) for more information.

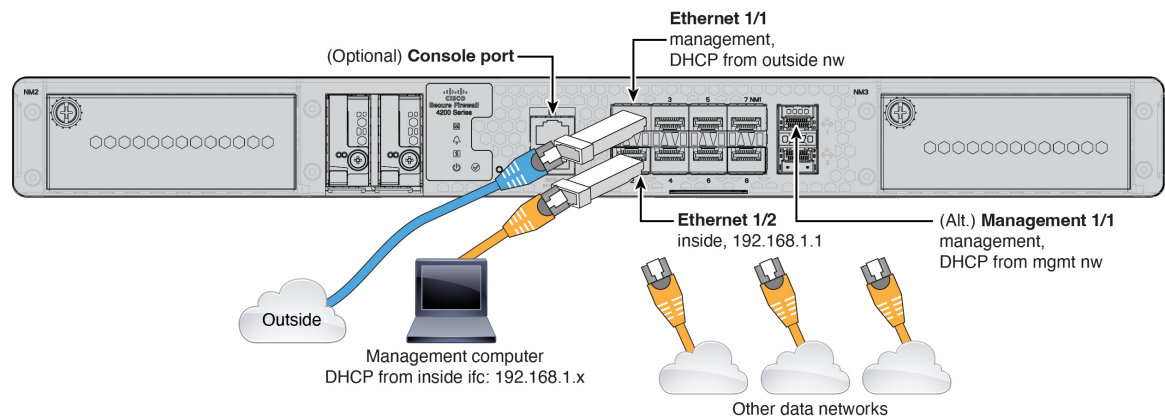


## Power On the Firewall

System power is controlled by a rocker power switch located on the rear of the firewall. The rocker power switch provides a soft notification that supports graceful shutdown of the system to reduce the risk of system software and data corruption.

### Procedure

- Step 1** Attach the power cord to the firewall, and connect it to an electrical outlet.
- Step 2** Turn the power on using the rocker power switch located on the rear of the chassis, adjacent to the power cord.


**Figure 1: Power Button**

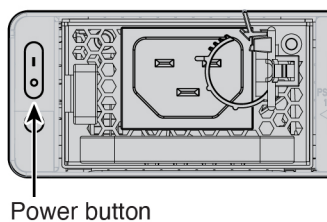

Power button

- Step 3** Check the Power LED on the back of the firewall; if it is solid green, the firewall is powered on.

**Figure 2: System and Power LEDs**

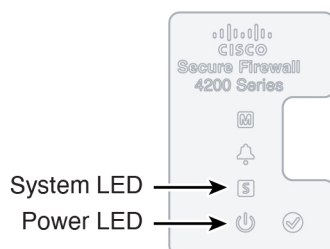

System LED  
Power LED

**Step 4** Check the System LED on the back of the firewall; after it is solid green, the system has passed power-on diagnostics.

---

## Which Application is Installed: Threat Defense or ASA?


Both applications, threat defense or ASA, are supported on the hardware. Connect to the console port and determine which application was installed at the factory.

### Procedure

---

**Step 1** Connect to the console port.

*Figure 3: Console Port*

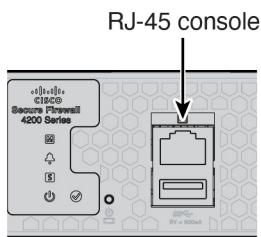

**Step 2** See the CLI prompts to determine if your firewall is running threat defense or ASA.

#### Threat Defense

You see the firepower login (FXOS) prompt. You can disconnect without logging in and setting a new password.

```
firepower login:
```

#### ASA

You see the ASA prompt.

```
ciscoasa>
```

**Step 3** If you are running the wrong application, see [Cisco Secure Firewall ASA and Secure Firewall Threat Defense Reimage Guide](#).

---


## Access the ASA CLI

You might need to access the CLI for configuration or troubleshooting.

## Procedure

**Step 1** Connect to the console port.

**Figure 4: Console Port**

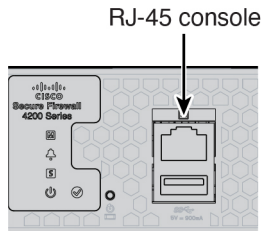

**Step 2** You connect to the ASA CLI in user EXEC mode. This mode lets you use many **show** commands.

```
ciscoasa>
```

**Step 3** Access privileged EXEC mode. This password-protected mode lets you perform many actions, including accessing configuration modes.

**enable**

You are prompted to change the password the first time you enter the **enable** command.

**Example:**

```
ciscoasa> enable
Password:
The enable password is not set. Please set it now.
Enter Password: *****
Repeat Password: *****
ciscoasa#
```

**Step 4** Access global configuration mode.

**configure terminal**

**Example:**

```
ciscoasa# configure terminal
ciscoasa(config)#
```

**Step 5** Access the FXOS CLI. Use this CLI for troubleshooting at the hardware level.

**connect fxos [admin]**

- **admin**—Provides admin-level access. Without this option, you have read-only access. Note that no configuration commands are available even in admin mode.

You are not prompted for user credentials. The current ASA username is passed through to FXOS, and no additional login is required. To return to the ASA CLI, enter **exit** or type **Ctrl-Shift-6, x**.

**Example:**

```
ciscoasa# connect fxos admin
Connecting to fxos.
Connected to fxos. Escape character sequence is 'CTRL-^X'.
firepower#
firepower# exit
Connection with FXOS terminated.
Type help or '?' for a list of available commands.
ciscoasa#
```

## Obtain Licenses


When you bought your device from Cisco or a reseller, your licenses should have been linked to your Smart Software License account. If you don't have an account on the [Smart Software Manager](#), click the link to [set up a new account](#).

The ASA has the following licenses:

- Essentials—Required
- Security Contexts
- Carrier—Diameter, GTP/GPRS, M3UA, SCTP
- Cisco Secure Client

1. If you need to add licenses yourself, go to [Cisco Commerce Workspace](#) and use the **Search All** field.

**Figure 5: License Search**

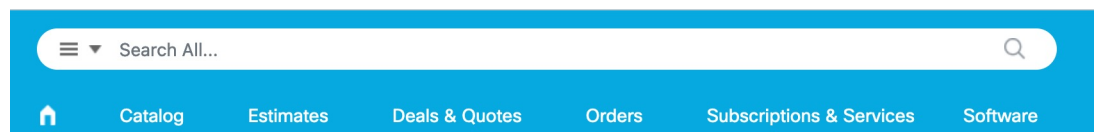

2. Search for the following license PIDs.



**Note** If a PID is not found, you can add the PID manually to your order.

- Essentials—*Included automatically.*
- 5 context—L-FPR4200-ASASC-5=. Context licenses are additive; buy multiple licenses.
- 10 context—L-FPR4200-ASASC-10=. Context licenses are additive; buy multiple licenses.
- Carrier (Diameter, GTP/GPRS, M3UA, SCTP)—L-FPR4200-ASA-CAR=
- Cisco Secure Client—See the [Cisco Secure Client Ordering Guide](#). You do not enable this license directly in the ASA.

3. Choose **Products & Services** from the results.

*Figure 6: Results*

