



# Precision Time Protocol

Precision Time Protocol (PTP) is a time synchronization protocol defined in IEEE 1588 for nodes distributed across a network. With PTP, it is possible to synchronize distributed clocks with an accuracy of less than 1 microsecond via Ethernet networks. In addition, PTP's hardware timestamping feature provides timestamp information in the ERSPAN Type III header that can be used to calculate packet latency among edge, aggregate, and core switches.

PTP is a distributed protocol that specifies how real-time PTP clocks in the system synchronize with each other. These clocks are organized into a master-slave synchronization hierarchy with the grandmaster clock, which is the clock at the top of the hierarchy, determining the reference time for the entire system. Synchronization is achieved by exchanging PTP timing messages, with the members using the timing information to adjust their clocks to the time of their master in the hierarchy. PTP operates within a logical scope called a PTP domain.

A PTP system can consist of a combination of PTP and non-PTP devices. PTP devices include ordinary clocks, boundary clocks, and transparent clocks. Non-PTP devices include ordinary network switches, routers, and other infrastructure devices.

- [Functionality, on page 1](#)
- [Guidelines and limitations for PTP, on page 10](#)
- [Default PTP Parameters, on page 18](#)
- [Configure PTP, on page 18](#)
- [Enable PTP Unicast-Negotiation, on page 52](#)
- [Enhanced Multicast Scale, on page 55](#)
- [Timestamp Tagging, on page 55](#)
- [Verify PTP Configuration, on page 59](#)
- [Configuration Examples, on page 64](#)
- [Additional References, on page 67](#)

## Functionality

PTP supports the following functionality:

- Multicast and unicast PTP transport—In the multicast transport mode, PTP uses multicast destination IP address 224.0.1.129 as per IEEE 1588 standards for communication between devices. For the source IP address, it uses the user configurable global IP address under the PTP domain. In the unicast transport mode, PTP uses configurable unicast source and destination IP addresses that can be configured under

an interface. In both, the unicast and the multicast modes, PTP uses UDP ports, 319 for event messages and 320 for general messages communication between devices.

- PTP multicast configuration is supported only under physical interface for L2 or L3. Unicast PTP configuration supported only under L3 physical interface. PTP is supported for virtual interfaces such as Port-channel, SVI, and tunnel.
- PTP encapsulation over UDP over IP—PTP uses UDP as the transport protocol over IP. In both, the unicast and multicast modes, PTP uses UDP ports 319 for event messages and 320 for general messages communication between devices. L2 encapsulation mode is not supported.
- PTP profiles—PTP supports default (1588), AES67, and SMPTE 2059-2 profiles. They all have different ranges of sync and delay request intervals. For information on the default profile, refer to IEEE 1588. For more information on AES67 and SMPTE 2059-2, refer to the respective specifications.
- Path delay measurement—We support delay request and response mechanism to measure the delay between the master and slave devices. Peer delay request and response mechanism is not supported.
- Message intervals—You can configure the interval at which the announce, sync, and delay request messages need to be sent between devices.
- Best master clock (BMC) selection—BMC algorithm is used to select master, slave, and passive states of the PTP enabled interfaces based on the Announce message received as per 1588 specification.
- PTP Offload - This feature distributes the PTP functionality to the line cards and allows scaling of the number of PTP sessions that are supported on the system. This feature is available for Cisco Nexus 9500 platform switches with N9K-X97160YC-EX line card, 9700-FX, 9636C-R, 9636Q-R, 9624D-R2, and 9636C-RX line cards.
- Dynamic Unicast - This feature allows BMCA to select roles dynamically as follows, rather than assigning static roles.
  - Use the **ptp peer** <ipv4>/<ipv6> command to configure Peer IPs.
  - Port remains in a Listening state until the Peer IP is reachable, when it transitions to Master state.
  - Announce packets are sent as soon as the peer is reachable.
  - Based on Announce packet (using BMCA), Role will be decided. Port state transitions accordingly.
- PTP Time Distribution Hold - In a properly synchronized PTP network, when any PTP node goes down and comes up, the PTP clock is synchronized to its primary time source (GM). During this process, the local node has significant correction and it tries to correct its local clock. At that time, the node can send incorrect time to the downstream nodes and cause issues for all downstream nodes. The Time Distribution (TD) hold feature, introduced in Cisco NX-OS Release 10.5(1)F, resolves this issue by ensuring that the node is properly synchronized to its primary source and distributes time to the downstream nodes during boot up.

The TD hold feature holds the time distribution until a Boundary Clock (BC) node locks to the primary time source and settles down to the target correction value. The TD hold enabled node receives all PTP packets, does the normal state change, and synchronizes time, but it does not send any PTP packets out.

**Note**

If all nodes reboot at the same time (with a difference of few seconds), each node will be in active hold time, which sometimes results in no nodes having secondary port. This leads to the BMC taking a long time to find the best clock. Hence, the user needs to take this into account when enabling this feature.

- High Availability - Stateful restarts are not supported for PTP. After a reboot or a supervisor switchover, the running configuration is applied. For more information on high availability, see the [Cisco Nexus 9000 Series NX-OS High Availability and Redundancy Guide](#).
- Mixed Mode - PTP supports Mixed mode for delivering PTP messages, which is detected automatically by Cisco Nexus device, based on the type of **delay\_req** message received from connected client and no configuration is required. In this mode when slave sends **delay\_req** in unicast message, master also replies with unicast **delay\_resp** message.

## PTP Offload

This feature distributes the PTP functionality to the line cards and allows scaling of the number of PTP sessions that are supported on the system. This feature is available for Cisco Nexus 9500 platform switches with 9700-EX, 9700-FX, 9636C-R, 9636Q-R, 9624D-R2, and 9636C-RX line cards.

## Dynamic Unicast

This feature allows BMCA to select roles dynamically as follows, rather than assigning static roles.

- Use the **ptp peer** <ipv4>/<ipv6> command to configure Peer IPs.
- Port remains in a Listening state until the Peer IP is reachable, when it transitions to Master state.
- Announce packets are sent as soon as the peer is reachable.
- Based on Announce packet (using BMCA), Role will be decided. Port state transitions accordingly.

## PTP Time Distribution Hold

In a properly synchronized PTP network, when any PTP node goes down and comes up, the PTP clock is synchronized to its primary time source (GM). During this process, the local node has significant correction and it tries to correct its local clock. At that time, the node can send incorrect time to the downstream nodes and cause issues for all downstream nodes. The Time Distribution (TD) hold feature, introduced in Cisco NX-OS Release 10.5(1)F, resolves this issue by ensuring that the node is properly synchronized to its primary source and distributes time to the downstream nodes during boot up.

The TD hold feature holds the time distribution until a Boundary Clock (BC) node locks to the primary time source and settles down to the target correction value. The TD hold enabled node receives all PTP packets, does the normal state change, and synchronizes time, but it does not send any PTP packets out.



**Note** If all nodes reboot at the same time (with a difference of few seconds), each node will be in active hold time, which sometimes results in no nodes having secondary port. This leads to the BMC taking a long time to find the best clock. Hence, the user needs to take this into account when enabling this feature.

## Clocks

### Clock Types

The PTP device type is configurable and can be used to set the clock type. The following clocks are common PTP devices:

- Ordinary clock - Communicates with the network based on a single physical port, similar to an end host. An ordinary clock can function as a grandmaster clock.
- Boundary clock - Typically has several physical ports, with each port behaving like a port of an ordinary clock. However, each port shares the local clock, and the clock data sets are common to all ports. Each port decides its individual state, either master (synchronizing other ports connected to it) or slave (synchronizing to a downstream port), based on the best clock available to it through all of the other ports on the boundary clock. Messages related to synchronization and establishing the master-slave hierarchy terminate in the protocol engine of a boundary clock and are not forwarded.
- Transparent clock - Forwards all PTP messages like an ordinary switch or router but measures the residence time of a packet in the switch (the time that the packet takes to traverse the transparent clock) and in some cases the link delay of the ingress port for the packet. The ports have no state because the transparent clock does not need to synchronize to the grandmaster clock. There are two kinds of transparent clocks:
  - End-to-end transparent clock - Measures the residence time of a PTP message and accumulates the times in the correction field of the PTP message or an associated follow-up message.
  - Peer-to-peer transparent clock - Measures the residence time of a PTP message and computes the link delay between each port and a similarly equipped port on another node that shares the link. For a packet, this incoming link delay is added to the residence time in the correction field of the PTP message or an associated follow-up message.
- Grandmaster clock - In a single PTP domain, the Grandmaster (GM) node acts as a primary clock source for the entire PTP network. The primary source for GM node will be taken either from internal GNSS system or external GNSS system. GM node can't synchronize time or frequency from other PTP node i.e. GM node can't have any slave ports, all ports act as only Master role.



**Note** PTP operates only in boundary clock mode. Cisco recommends deployment of a Grand Master Clock (10 MHz) upstream, with servers containing clocks requiring synchronization connected to the switch. End-to-end transparent clock and peer-to-peer transparent clock modes are not supported.

### Clock Modes

The IEEE 1588 standard specifies two clock modes for the PTP supporting devices to operate in: one-step and two-step.

#### One-Step Mode:

In one-step mode the clock synchronization messages include the time at which the master port sends the message. The ASIC adds the timestamp to the synchronization message as it leaves the port. The master port operating in one-step mode is available for Cisco Nexus 9508-FM-R and 9504-FM-R fabric modules and Cisco Nexus 9636C-R, 9636Q-R, 9624D-R2, and 9636C-RX line cards.

The slave port uses the timestamp that comes as part of the synchronization messages.

#### Two-Step Mode:

In two-step mode the time at which the synchronization message leaves the port is sent in a subsequent follow-up message. This is the default mode.

## Clocks

The following clocks are common PTP devices:

#### Ordinary clock

Communicates with the network based on a single physical port, similar to an end host. An ordinary clock can function as a grandmaster clock.

#### Boundary clock

Typically has several physical ports, with each port behaving like a port of an ordinary clock. However, each port shares the local clock, and the clock data sets are common to all ports. Each port decides its individual state, either master (synchronizing other ports connected to it) or slave (synchronizing to a downstream port), based on the best clock available to it through all of the other ports on the boundary clock. Messages related to synchronization and establishing the master-slave hierarchy terminate in the protocol engine of a boundary clock and are not forwarded.

#### Transparent clock

Forwards all PTP messages like an ordinary switch or router but measures the residence time of a packet in the switch (the time that the packet takes to traverse the transparent clock) and in some cases the link delay of the ingress port for the packet. The ports have no state because the transparent clock does not need to synchronize to the grandmaster clock.

There are two kinds of transparent clocks:

##### End-to-end transparent clock

Measures the residence time of a PTP message and accumulates the times in the correction field of the PTP message or an associated follow-up message.

##### Peer-to-peer transparent clock

Measures the residence time of a PTP message and computes the link delay between each port and a similarly equipped port on another node that shares the link. For a packet, this incoming link delay is added to the residence time in the correction field of the PTP message or an associated follow-up message.



**Note** PTP operates only in boundary clock mode. Cisco recommends deployment of a Grand Master Clock (10 MHz) upstream, with servers containing clocks requiring synchronization connected to the switch.

End-to-end transparent clock and peer-to-peer transparent clock modes are not supported.

### Grandmaster clock

In a single PTP domain, the Grandmaster (GM) node acts as a primary clock source for the entire PTP network. The primary source for GM node will be taken either from internal GNSS system or external GNSS system. GM node can't synchronize time or frequency from other PTP node i.e. GM node can't have any slave ports, all ports act as only Master role.

## Clock Modes

The IEEE 1588 standard specifies two clock modes for the PTP supporting devices to operate in: one-step and two-step.

### One-Step Mode:

In one-step mode the clock synchronization messages include the time at which the master port sends the message. The ASIC adds the timestamp to the synchronization message as it leaves the port. The master port operating in one-step mode is available for Cisco Nexus 9508-FM-R and 9504-FM-R fabric modules and Cisco Nexus 9636C-R, 9636Q-R, 9624D-R2, and 9636C-RX line cards.

The slave port uses the timestamp that comes as part of the synchronization messages.

### Two-Step Mode:

In two-step mode the time at which the synchronization message leaves the port is sent in a subsequent follow-up message. This is the default mode.

## Process

The PTP process consists of two phases: establishing the master-slave hierarchy and synchronizing the clocks.

Within a PTP domain, each port of an ordinary or boundary clock follows this process to determine its state:

- Examines the contents of all received announce messages (issued by ports in the master state)
- Compares the data sets of the foreign master (in the announce message) and the local clock for priority, clock class, accuracy, and so on
- Determines its own state as either master or slave

The ordinary and boundary clocks use **Sync**, **Delay\_Req**, **Follow\_Up**, **Delay\_Resp** event messages to generate and communicate timing information.


These messages are sent in the following sequence:

1. The master sends a **Sync** message to the slave and notes the time,  $t_1$  at which it was sent. For one-step **Sync** message carries the time when the message leaves the master and for two-step this time is sent in the subsequent **Follow-Up** event message.
2. The slave receives the **Sync** message and notes the time of reception,  $t_2$ .

3. The master conveys to the slave the timestamp,  $t_1$  by embedding the timestamp in a **Follow\_Up** event message.
4. The slave sends a **Delay\_Req** message to the master and notes the time,  $t_3$  at which it was sent.
5. The master receives the **Delay\_Req** message and notes the time of reception,  $t_4$ .
6. The master conveys to the slave the timestamp,  $t_4$  by embedding it in a **Delay\_Resp** message.
7. After this sequence, the slave possesses all four timestamps. These timestamps can be used to compute the offset of the slave clock relative to the master, and the mean propagation time of messages between the two clocks.

The following figure describes the event messages in the PTP process that generate and communicate timing information.

**Figure 1: PTP Process**

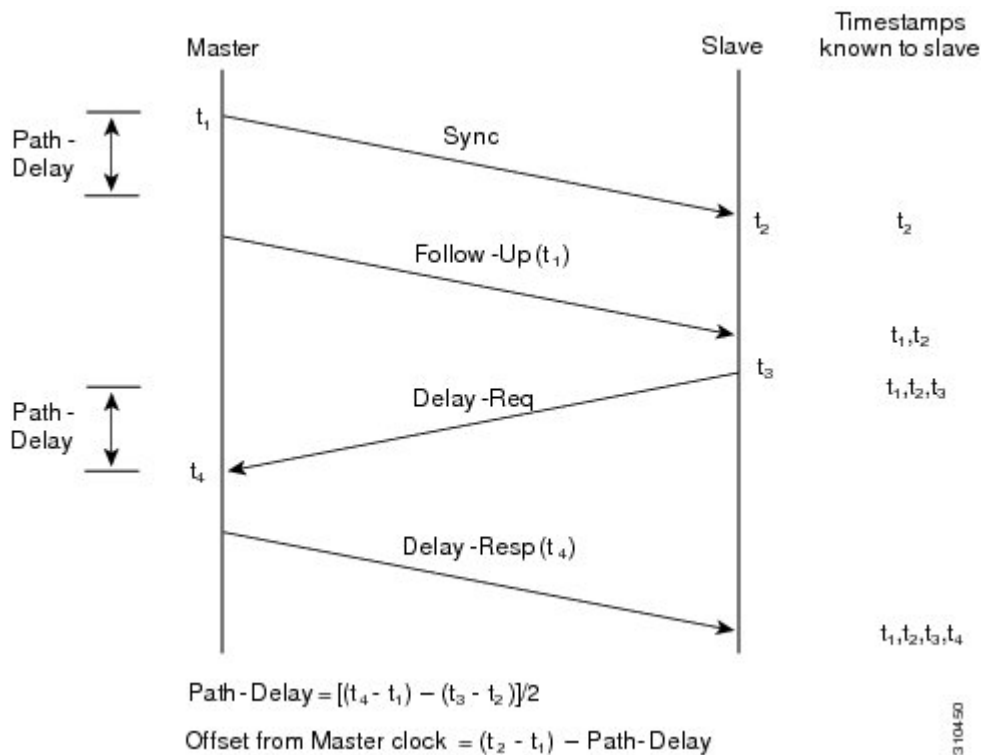

## ITU-T Telecom Profiles

Cisco NX-OS software supports ITU-T Telecom Profiles for PTP as defined in the ITU-T recommendation. A profile consists of PTP configuration options applicable only to a specific application.

Separate profiles can be defined to incorporate PTP in different scenarios based on the IEEE 1588-2008 standard. A telecom profile differs in several ways from the default behavior defined in the IEEE 1588-2008 standard and the key differences are mentioned in the subsequent sections.

The following sections describe the ITU-T Telecom Profiles that are supported for PTP:

## Telecom Profile G.8275.1

Cisco's Telecom Profile G.8275.1 feature supports the ITU-T *G.8275.1 : Precision time protocol telecom profile for phase/time synchronization with full timing support from the network* standard. The G.8275.1 profile fulfills the time-of-day and phase synchronization requirements in telecom networks with all network devices participating in the PTP protocol. The G.8275.1 profile with SyncE provides better frequency stability for the time-of-day and phase synchronization.

Features of the G.8275.1 profile are:

- Synchronization Model: G.8275.1 profile adopts hop-by-hop synchronization model. Each network device in the path from master to slave synchronizes its local clock to upstream devices and provides synchronization to downstream devices.
- Clock Selection: G.8275.1 profile also defines an alternate BMCA that selects a clock for synchronization and port states for the local ports of all devices in the network. The parameters defined as a part of the BMCA are:
  - Clock Class
  - Clock Accuracy
  - Offset Scaled Log Variance
  - Priority 2
  - Local Priority
  - Clock Identity
  - Steps Removed
  - Port Identity
- Port State Decision: The port states are selected based on the alternate BMCA.
- Alternate BMCA: It follows the alternate BMCA dataset comparison algorithm as defined in Rec. ITU-T G.8275.1/Y.1369.1 to select the GM for the node.
- Packet Rates: The nominal packet rate for Announce packets is 8 packets-per-second and 16 packets-per-second for Sync/Follow-Up and Delay-Request/Delay-Response packets.
- Transport Mechanism: G.8275.1 profile only supports Ethernet PTP transport mechanism.
- Mode: G.8275.1 profile supports transport of data packets only in multicast mode. The forwarding is done based on forwardable or non-forwardable multicast MAC address.
- Clock Type: G.8275.1 profile supports the following clock types:
  - Telecom Grandmaster (T-GM): Provides timing for other network devices and does not synchronize its local clock to other network devices.
  - Telecom Time Slave Clock (T-TSC): A slave clock synchronizes its local clock to another PTP clock, but does not provide PTP synchronization to any other network devices.
  - Telecom Boundary Clock (T-BC): Synchronizes its local clock to a T-GM or an upstream T-BC clock and provides timing information to downstream T-BC or T-TSC clocks.





**Note** Telecom Boundary Clock (T-BC) is the only clock type supported in Cisco NX-OS Release 9.3(5).

- Domain Numbers: The domain numbers that can be used in a G.8275.1 profile network ranges from 24 to 43. The default domain number is 24.

## Telecom Profile G.8275.2

Cisco's Telecom Profile G.8275.2 feature supports the ITU-T G.8275.2 : *Precision time protocol telecom profile for phase/time synchronization with partial timing support from the network* standard. The G.8275.2 is a PTP profile for use in telecom networks where phase or time-of-day synchronization is required. It differs from G.8275.1 in that it is not required that each device in the network participates in the PTP protocol. Also, G.8275.2 uses PTP over IPv4 and IPv6 in unicast mode.

The G.8275.2 profile is based on the partial timing support from the network. Hence, nodes using G.8275.2 are not required to be directly connected. The G.8275.2 profile is used in mobile cellular systems that require accurate synchronization of time and phase. For example, the fourth generation (4G) of mobile telecommunications technology.

With upcoming technologies such as LTE-TDD, LTE-A CoMP, LTE MBSFN and Location-based services, eNodeBs (base station devices) are required to be accurately synchronized in phase and time. Having GNSS systems at each node is not only expensive, but also introduces vulnerabilities. The G.8275.2 profile meets the synchronization requirements of these new technologies.

### PTP Ports

A port can be configured to change its role dynamically. If no role is assigned to a port, it can dynamically assume a primary, passive, or subordinate role based on the BMCA.

In G.8275.2, PTP ports are not tied to any specific physical interfaces, but are tied to a loopback (virtual) interface. Traffic from a PTP port is routed through any physical interface based on the routing decision. For a dynamic port, only one clock source can be configured.

### Alternate BPCA

The BPCA (Best Primary Clock Algorithm, which is also known as Best Master Clock Algorithm (BMCA [RFC 7273])) implementation in G.8275.2 is different from that in the default PTP profile. The G.8275.2 implementation specifies an alternate best primary clock algorithm (ABPCA), which is used by each device to select a clock to synchronize to, and to decide the port states of its local ports.

The following consideration apply to the G.8275.2 implementation of the BPCA:

- PrimaryOnly—A per port attribute, PrimaryOnly defines the state of the port. If this attribute is true, the port is never placed in the subordinate state.
- Priority 1—Priority 1 is always static in this profile and is set to 128. Priority 1 is not used in BPCA.
- Priority 2—Priority 2 is a configurable value and its range is from 0 to 255.
- Local Priority—Local priority is configured locally on clock ports to set the priority on nominated clocks. The default value is 128 and valid range is from 1 to 255.

### Restrictions for Using the G.8275.2 Profile

- In the G.8275.2 profile, PTP is supported only in the none mode (default).
- A G.8275.2 PTP clock can have redundant clock sources configured (through multiple PTP ports). However, at any given time, a G.8275.2 PTP clock synchronizes to only one clock source, which is selected by BMCA.
- The G.8275.2 does not provide any recommendations for performance analysis and network limits for the clocks.

## High Availability for PTP

Stateful restarts are not supported for PTP. After a reboot or a supervisor switchover, the running configuration is applied. For more information on high availability, see the [Cisco Nexus 9000 Series NX-OS High Availability and Redundancy Guide](#).

## Guidelines and limitations for PTP



### Note

- For scale information, see the release-specific *Cisco Nexus 9000 Series NX-OS Verified Scalability Guide*.
- For PTP to function properly, you must use the latest SUP and line card FPGA versions. For information on upgrading FPGAs, access the [Release Notes landing page](#) and go to the FPGA/EPLD Upgrade Release Notes (NX-OS Mode Switches) section and locate the FPGA/EPLD Upgrade Release Notes for your software version. Refer to the Installation Guidelines topic.

### General Guidelines

- PTP domain limits to a single domain per network.
- PTP can be enabled on the port-channel member ports.
- All management messages that are received from a slave port are forwarded to all PTP enabled ports. The management messages that are received from a slave port are not handled.
- To match PTP control packets using RACL, enable PIM on the L3 interface.
- When configuring PTP to Cisco Nexus 9000 Series switches, set the clock protocol to use PTP through the clock protocol ptp vdc 1 command.
- PTP is not available for all Cisco Nexus 9000 series and 3164Q hardware except for the 100G 9408PC line card and the 100G M4PC Generic Expansion Module (GEM).
- Before downgrading from Cisco NX-OS Release 9.3(1) to Release 7.0(3)I7, you must unconfigure PTP offload. PTP offloading is not supported for Cisco Nexus 9000 platform switches on 9636PQ, 9564PX, 9464PX, and 9536PQ line cards for Cisco NX-OS Release 7.0(3)I7.
- PTP-capable ports do not identify PTP packets and do not time-stamp or redirect those packets unless you enable PTP on those ports.

- The Cisco Nexus 9504 and 9508 platform switches with 9636C-R, 9636C-RX, or 9636Q-R line cards, the master ports can operate in one-step mode.
- In a topology where PTP is enabled, when a profile is set on a GrandMaster device, and the redundant GrandMasters are deployed in the network; to change the profile on the GrandMaster, you must first shut down the port that is configured on the GrandMaster to the switches, then change the profile, and then re-enable the port. For example, moving from an AES7 profile to an SMPTE profile or conversely.
- The QoS TCAM region Ingress SUP [ingress-sup] must be set to 768 or higher for PTP IPv6 transport to work.
- There is no CLI profile command for 8275.2. This will be added only when the APTS is supported. The functions for this release work only in default mode.
- Beginning with Cisco NX-OS Release 10.4(3)F, transmit and receive scope for PTP over IPv6 multicast configuration is supported.

### Release Specific Guidelines

- *Cisco NX-OS Release 10.5(1)F*
  - The PTP Time Distribution (TD) hold feature is introduced. This feature allows for holding the time distribution until a Boundary Clock node locks to the primary time source and settles down to the target correction value.
  - The following attributes are added to the PTP high-correction notification:
    - lastHighCorrectionMPD
    - maxHighCorrectionTime
    - maxHighCorrectionValue
    - maxHighCorrectionMPD
- *Cisco NX-OS Release 10.4(3)F*
  - New global and interface commands are introduced to set the transmit and receive scope for PTP over IPv6 multicast configuration. If upgrading the devices to 10.4(3)F or higher, peer devices running NX-OS should also be upgraded to 10.4(3)F or higher for PTP over IPv6 multicast to work.



**Note** If any devices are not upgraded, then configure the workaround CLI **test system internal ptp ipv6-mcast-ipv4-dmac int-name** in the devices which are upgraded to 10.4(3)F.

- The following PTP profiles are supported on Cisco Nexus 9364C-H1 switch:
  - Default profile
  - Media profiles (AES67 and SMPTE 2059-2)
  - PTP telecom profile (only 8275-2)
- *Cisco NX-OS Release 10.4(2)F*

- 8275.2 PTP profile is supported on Cisco Nexus 9300-FX3, 9332D-H2R, 93400LD-H1, and 9408 platform switches. The guidelines for this profile are as follows:
  - Supports Unicast negotiation (simple unicast is not supported)
  - Default role for a dynamic unicast port is dynamic. The negotiation is triggered by state transitions. Only one PTP peer can be configured
  - Introduced a new command - **ptp peer** <ipv4>/<ipv6> - to configure a ptp peer when the role is dynamic.
  - For information about DME, see [Cisco Nexus NX-API References](#).
- PTP Class C is now supported on N9K-C93400LD-H1 switches. The guidelines and limitations for this platform switches are as follows:
  - Only One-Step Mode is supported.
  - System can take a maximum of 30 minutes to achieve Class C level corrections
  - Both G.8275.1 and G.8275.2 Telecom profiles are supported, However, only Telecom Boundary Clock (T-BC) mode is supported.
- Default PTP is supported on Cisco Nexus C93108TC-FX3 switch.
- *Cisco NX-OS Release 10.4(1)F*
  - PTP is supported on the Cisco Nexus 9804 switches and the following guidelines and limitations apply:
    - Only IPv4 transport is supported.
    - Only media profile is supported.
    - Only supported clock distribution mode is one step. Two step mode is not supported.
    - Other PTP features such as unicast and unicast negotiation are not supported.
  - Cisco Nexus X98900CD-A and X9836DM-A line cards with Cisco Nexus 9808 and 9804 switches
  - PTP is not supported on Cisco Nexus C9348GC-FX3PH switch.
  - PTP is supported on Cisco Nexus C9348GC-FX3 switch.

**Note**

Make sure that you increase COPP limit to have PTP state stable across PTP interfaces. For more information on configuration, see *CoPP Configuration Example* section in *Cisco Nexus 9000 Series NX-OS Security Configuration Guide*.

- ASIC-based time stamping on 1G PTP enabled ports is supported on N9K-C931806C-FX3 and N9K-C93108TC-FX3P platform switches. Thus, both 1G and 10G ports can run on ASIC mode now. However, all the 1G ports must be either in PHY mode (default) or in ASIC mode. A global command is introduced to enable this feature.

- PTP on media profile is supported on N9K-C9332D-H2R platform switch. A few guidelines and limitations for this platform switch are as follows:
  - Only multicast PTP with one-step is supported.
  - Unicast is not supported.
  - PTP is not supported on interface Ethernet 1/33 and Ethernet 1/34.
- PTP v1 packet forwarding feature is supported on Cisco Nexus N9K-C9408 and N9K-C9332D-H2R platform switches.
- The PTP Class C support for G.8275.1 Telecom profile feature is supported on Cisco Nexus 9408 and N9K-C9332D-H2R platform switches. A few guidelines and limitations for this platform switches are as follows:
  - The platform switches provide Class C support
  - Only One-Step Mode is supported
  - Ethernet transport is supported
  - System can take up to 30 minutes to achieve Class C level corrections
  - The G.8275.1 Telecom profile is supported, except the following:
    - Telecom Transparent Clock (T-TC)
    - Telecom Grand Master (T-GM)
- *Cisco NX-OS Release 10.3(5)M*
  - New global and interface commands are introduced to set the transmit and receive scope for PTP over IPv6 multicast configuration. If upgrading the devices to 10.3(5)M or higher, peer devices running NX-OS should also be upgraded to 10.3(5)M or higher for PTP over IPv6 multicast to work.

**Note**

If any devices are not upgraded, then configure the workaround CLI **test system internal ptp ipv6-mcast-ipv4-dmac int-name** in the devices which are upgraded to 10.3(5)M.

- *Cisco NX-OS Release 10.3(3)F*
  - 8275.2 Telecom profile is supported on Cisco Nexus 9300-FX3 platform switches. The following guidelines and limitations apply:
    - This feature allows ITU-T precision time protocol (PTP) profile for phase/time distribution with partial timing support from the network (unicast mode).
    - A command for G.8275.2 is added as the APTS is supported.
    - This feature also supports multiple unicast followers. Among the unicast followers, one is picked as an active unicast follower, while the rest configured unicast followers act as passive.
    - From this release onwards, dynamic role with unicast ports is supported.

- For dynamic PTP unicast ports, the unicast-negotiation feature must be enabled.
- *Cisco NX-OS Release 10.3(2)F*
  - PTP GM functionality is supported on the Cisco Nexus N9K-C93180YC-FX3 platform switches.
  - PTP on media profile is supported on Cisco Nexus 9408 platform switches. A few guidelines and limitations for this platform switches are as follows:
    - Only multicast PTP with one-step is supported.
    - Other PTP features such as unicast and unicast negotiation are not supported.
- *Cisco NX-OS Release 10.3(1)F*
  - PTP Media Profile and One-Step Mode are supported on the Cisco Nexus 9808 platform switches. A few guidelines and limitations for this platform switches are as follows:
    - Only IPv4 transport is supported.
    - Only multicast PTP with one step is supported.
    - Other PTP features such as unicast and unicast negotiation are not supported.
- *Cisco NX-OS Release 10.2(3)F*
  - The PTP Support of up to 2000 Secondary Devices per Switch feature provides an option to support a maximum of 100 multicast secondary devices per port, with a system-wide support for a maximum of 2000 multicast secondary devices per switch. This feature is only supported on Cisco Nexus 9000-FX2 and 9000-FX3 platform switches.
  - N9K-C9364D-GX2A - PTP is not supported on 1/65 and 1/66 ports
  - N9K-C9348D-GX2A - PTP is not supported on 1/49 and 1/50 ports
- *Cisco NX-OS Release 10.2(2)F*
  - The PTPv1 and v2 co-existence feature is supported on the Cisco Nexus 9300-GX, 9300-GX2, and 9300-FX3 platform switches.
  - The PTP with jitter fix for 1G ports feature is supported on the Cisco N9K-C93108TC-FX3P platform switches.
  - The PTP unicast negotiation feature is also supported on Cisco Nexus 9300-EX, 9300-FX, 9300-FX2, 9300-GX, and 9300-GX2 platform switches.
  - The PTP IPv6 UDP transport feature is supported on the Cisco Nexus 9300-FX, 9300-FX2, 9300-GX, and 9300-GX2 platform switches.
- *Cisco NX-OS Release 10.2(1)F*
  - Unicast-negotiation is supported for IPv4 and IPv6 addresses with default profile on N9K-C93180YC-FX3S platform.
  - PTP IPv6 transport is supported on N9K-C93180YC-FX3S platform.

- PTP is supported on the N9K-C9332D-GX2B platform switches. However, PTP is not supported on 1/33 and 1/34 ports.
- *Cisco NX-OS Release 10.1(2)F*
  - PTP is supported on the N9K-X9624D-R2 line cards.
  - PTP (IEEE 1588) is supported on the N9K-C9700-GX line card, as well as N9K-X97160YC-EX line card and N9K-C9700-FX line cards, used with N9K-C9504-FM-G and N9K-C9508-FM-G fabric modules.
  - PTP (IEEE 1588) is supported on the N9K-C9504-FM-G and N9K-C9508-FM-G platform switches.
  - Explicit carving of ing-sup (size of the ingress supervisor TCAM region) to 768 is not required for the PTP profile 8275-1.
- *Cisco NX-OS Release 9.3(7)F*
  - PTP G.8275.1 Telecom profile is supported on N9K-C93180YC-FX3 platform switch.
- *Cisco NX-OS Release 9.3(5)F*
  - CLI behavior for PTP commands has changed as follows:
    - Most PTP commands do not return errors if the same command is applied again.
    - Most PTP commands do not validate the parameters that are entered as "no" commands. For example, if the currently configured command is "ptp sync interval -3", "no ptp sync interval -1" is accepted for negation.
  - PTP is supported on Cisco Nexus 9300-GX platform switches.
  - PTP G.8275.1 Telecom profile is supported on N9K-C93180YC-FX3S platform switch.
  - PTP is supported on N9K-C93108TC-FX3P platform switch. However, syncE is not supported.
- *Cisco NX-OS Release 9.3(3)F*
  - PTP is supported on Cisco Nexus 93360YC-FX2 and 93216TC-FX2 switches.
- *Cisco NX-OS Release 9.3(2)F*
  - For Cisco Nexus 9636C-R, 9636Q-R, 9636C-RX, and 96136YC-R line cards, the following PTP configuration commands are defaults:
    - **ptp offload**
    - **ptp clock-operation one-step**

These default commands enable PTP to be distributed on the line cards and enable all PTP configured ports to run in one-step. We recommend using the default configuration for performance and scalability.




---

**Note** Changing the **ptp clock-operation** command to two step will disable the offload and PTP will then run centralized on the supervisor card.

---

- PTP offload is automatically enabled when one-step mode is configured.
- *Cisco NX-OS Release 9.2(3)F*
  - PTP is available for Cisco Nexus 9504-FM-R platform switches.
- *Cisco NX-OS Release 9.2(1)F*
  - Cisco Nexus 9732C-EX, 9736C-EX, and 97160YC-EX line cards support PTP offloading.

### Telcom Profile Guidelines

- PTP Telecom Profile is supported only on the Cisco Nexus 93180YC-FX3S switch and N9K-C93180YC-FX3 switch.
- Only PTP class B is supported for 25G and above port speed.
- Only Telecom Boundary Clock (T-BC) is supported.
- Cisco's Telecom Profile G.8273.2 feature is compliant with the ITU-T *G.8273.2 : Timing characteristics of telecom boundary clocks and telecom time slave clocks* standard with the exception that 1PPS output is not aligned with PTP.




---

**Note** Time of Day and PTP GM are not supported in Cisco NX-OS Release 9.3(5).

---

- Beginning with Cisco NX-OS Release 10.4(3)F, PTP Telecom Profile over MACsec is supported on Cisco Nexus 9300-H2R/H1 platform switches.

### Timestamp Tagging (TTAG) Support for Platform Switches

- Cisco Nexus 9200 platform switches: beginning with Cisco NX-OS Release 7.0(3)I6(1)
- Cisco Nexus 9364C: beginning with Cisco NX-OS Release 7.0(3)I7(2)
- Cisco Nexus 9332C: beginning with Cisco NX-OS Release 9.2(3)
- Cisco Nexus 9300-EX platform switches: beginning with Cisco NX-OS Release 7.0(3)I6(1)
- Cisco Nexus 9300-FX platform switches: beginning with Cisco NX-OS Release 7.0(3)I7(3)
- Cisco Nexus 9300-FX2 platform switches: beginning with Cisco NX-OS Release 9.3(3)
- Cisco Nexus 9300-FX3 and -GX platform switches: beginning with Cisco NX-OS Release 9.3(5)
- Cisco Nexus 9500 platform switches with -EX and -FX line cards

### PTP Support

- PTP transport over User Datagram Protocol (UDP) is supported. PTP over Ethernet is supported only on Cisco Nexus 9300-FX3 platform switches.
- PTP supports the multicast communication. PTP also supports the unicast communication and the unicast mode is optional.
- PTP supports boundary clock mode.



- The PTP correction-range, PTP correction-range logging, and PTP mean-path-delay commands are supported on the Cisco Nexus 9508-R line cards.
- Cisco Nexus 9000 series switches support mixed non-negotiated mode of operation on master PTP ports. That means when a slave client sends unicast delay request PTP packet, the Cisco Nexus 9000 responds with a unicast delay response packet. And, if the slave client sends multicast delay request PTP packet, the Cisco Nexus 9000 responds with a multicast delay response packet. For mixed non-negotiated mode to work, the source IP address used in the `ptp source IP address` configuration on the BC device must also be configured on any physical or logical interface of the BC device. The recommended best practice is to use the loopback interface of the device.
- Cisco Nexus 93108TC-EX and 93180YC-EX switches support PTP in mixed mode and unicast mode. The Cisco Nexus 9396 switch supports PTP mixed mode.
- PTP is supported with sync interval -3 only on Cisco Nexus 9508-R family line cards. Higher sync intervals are not supported.
- PTP unicast is supported only on the default vrf.
- PTP supports mixed mode for delivering PTP messages, which is detected automatically by a Cisco Nexus device based on the type of delay request message that is received from a connected client and no configuration is required.
- PTP supports unicast communication on Cisco Nexus 9508 switches with 9636C-R, 9636C-RX, and 9636Q-R line cards.
- PTP one-step mode is supported only in PTP offload mode for the Cisco Nexus 9504 and 9508 platform switches with 9636C-R, 9636C-RX, 9624D-R2, or 9636Q-R line cards.
- Each port can be individually configured with any of the supported PTP profiles. Different PTP profiles can coexist on an interface. Combination of the default of 1588 and SMPTE-2059-2 or AES67 profiles is supported.
- The platform switches are supported only on Class B and do not meet Class C support.
- One-step PTP is only supported on Cisco Nexus 9000-R series platform switches.

### PTP Not Supported

- PTPv1 forwarding and feature VMCT are not supported if enabled at the same time.
- 1 Pulse per Second (1PPS) output is enabled by default. UTC/SMB port is in output mode. Note that 1PPS output is not supported.
- End-to-end transparent clock and peer-to-peer transparent clock modes are not supported.
- For Cisco Nexus 31108PC-V and 31108TC-V switches, PTP is not supported on ports running at 100G speed.
- PTP is not supported for stateful high availability.
- PTP is not supported for management interfaces.
- PTP unicast is not supported in offload mode.
- PTP configuration with UC and MC on either side is not supported on Cisco Nexus 9508 switches with 9636C-R, 9636C-RX, and 9636Q-R line cards.

- PTP is not supported on FEX interfaces.
- A combination of SMPTE-2059-2 and AES67 profiles is not supported on the same interface.
- PTP is not supported on N9K-C92348GC-X.

## Default PTP Parameters

The following table lists the default settings for PTP parameters.

**Table 1: Default PTP Parameters**

Parameters	Default
PTP	Disabled
PTP version	2
PTP domain	0
PTP priority 1 value when advertising the clock	255
PTP priority 2 value when advertising the clock	255
PTP announce interval	1 log second
PTP announce timeout	3 announce intervals
PTP delay-request interval	<ul style="list-style-type: none"><li>• 0 log seconds</li><li>• -1 log seconds for Cisco Nexus 3232C, 3264Q, and 9500 platform switches</li></ul>
PTP sync interval	<ul style="list-style-type: none"><li>• -2 log seconds</li><li>• -3 log seconds for Cisco Nexus 3232C, 3264Q, and 9500 platform switches</li></ul>
PTP VLAN	gPTP supports only default vlan 1, and no other user configured VLANs.

## Configure PTP

### Configure PTP Globally

You can enable or disable PTP globally on a device. You can also configure various PTP clock parameters to help determine which clock in the network has the highest priority to be selected as the grandmaster.



**Note** For PTP to function properly, you must use the latest SUP and LC FPGA versions. For information on upgrading FPGAs, access the [Release Notes landing page](#) and go to the FPGA/EPLD Upgrade Release Notes (NX-OS Mode Switches) section and locate the FPGA/EPLD Upgrade Release Notes for your software version. Refer to the Installation Guidelines topic.



**Note** You must always set the clock protocol PTP vdc1 for the local clock to be updated by the PTP protocol, irrespective of the one-step or the two-step mode. You can verify the configuration using the **show running-config clock\_manager** command.

## SUMMARY STEPS

1. **configure terminal**
2. **[no] feature ptp**
3. (Optional) **[no] ptp scale-on-1G**
4. **[no] ptp device-type [generalized-ptp | boundary-clock | ordinary-clock-grandmaster]**
5. **[no] ptp source { <ipv4 address> | <ipv6 address> } [ vrf <vrf-name>]**
6. (Optional) **[no] ptp domain *number***
7. (Optional) **[no] ptp offload**
8. (Optional) **[no] ptp clock-operation one-step**
9. (Optional) **[no] ptp priority1 *value***
10. (Optional) **[no] ptp priority2 *value***
11. **[ no ] ptp management**
12. (Optional) **[no] ptp delay tolerance { mean-path | reverse-path } *variation***
13. (Optional) **ptp forward-version1**
14. (Optional) **ptp unicast-negotiation**
15. (Optional) **ptp ipv6 multicast scope tx <scope>**
16. (Optional) **ptp ipv6 multicast scope rx <scope>**
17. (Optional) **[no] ptp time distribution-hold [correction-threshold <corr\_limit>] [delay-threshold <max\_delay\_time>]**
18. (Optional) **copy running-config startup-config**

## DETAILED STEPS

### Procedure

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
Step 2	<b>[no] feature ptp</b>	Enables or disables PTP on the device.

	Command or Action	Purpose
	<b>Example:</b> <pre>switch(config)# feature ptp</pre>	<b>Note</b> Enabling PTP on the switch does not enable PTP on each interface.  Make sure that only one of these features is configured: dot1x ( <b>feature dot1x</b> ) or NV overlay ( <b>feature nv overlay</b> ). A dynamic ifacl label is reserved when these features are configured. However, only two dynamic ifacl label bits are available. If both of these features are already configured, a dynamic ifacl label will not be available for PTP, and the feature cannot be enabled.
<b>Step 3</b>	(Optional) <b>[no] ptp scale-on-1G</b>  <b>Example:</b> <pre>switch(config)# ptp scale-on-1G</pre>	Enables time stamping on ASIC for 1G ports (by default, PHY mode is enabled).  <b>Note</b> Disable PTP on the each 1G interface[s] before enabling or disabling global CLI - ptp scale-on-1G. Otherwise both rollback config and config replace will fail. This is required for both when moving PHY based time stamping to ASIC based time stamping and vice versa. Global CLI is applicable to N9K-C93108TC-FX3P only.
<b>Step 4</b>	<b>[no] ptp device-type [generalized-ptp   boundary-clock   ordinary-clock-grandmaster]</b>  <b>Example:</b> <pre>switch(config)# ptp device-type generalized-ptp</pre>	Configures the device type as gPTP or boundary clock or ordinary clock grandmaster.  <b>Note</b> The <b>generalized-ptp</b> option is available only for Cisco Nexus 9508 switches with an -R series line card.  <b>Note</b> Beginning with Cisco NX-OS Release 10.3(2)F, the <b>ordinary clock grandmaster</b> is available only for Cisco Nexus N9K-C93180YC-FX3 platform switches. For more information, refer to <a href="#">Configure PTP GM, on page 24</a> .
<b>Step 5</b>	<b>[no] ptp source {&lt;ipv4 address&gt;   &lt;ipv6 address&gt;} [ vrf &lt;vrf-name&gt;]</b>  <b>Example:</b> <pre>switch(config)# ptp source 10.10.10.1</pre>	Configures the source IPv4/IPv6 address for all the PTP packets in the multicast PTP mode.  If the IP address is in non-default VRF, use the <b>vrf</b> parameter to configure the VRF.  Corresponding source address (IPv4/IPv6) is needed before enabling PTP IPv4/IPv6 transport on an interface.  <b>Note</b> IPv6 source is supported on Cisco Nexus 93180TC-FX3S switch starting with 10.2(1)F release. Beginning with Cisco NX-OS Release 10.2(2)F, this option is also available on Cisco Nexus 9300-FX, 9300-FX2, 9300-GX, and 9300-GX2 platform switches.

	Command or Action	Purpose
<b>Step 6</b>	(Optional) [no] <b>ptp domain</b> <i>number</i> <b>Example:</b> <pre>switch(config)# ptp domain 1</pre>	Configures the domain number to use for this clock. PTP domains allow you to use multiple independent PTP clocking subdomains on a single network.  The range for the <i>number</i> is from 0 to 127.
<b>Step 7</b>	(Optional) [no] <b>ptp offload</b> <b>Example:</b> <pre>switch(config)# ptp offload</pre>	Increases the number of PTP sessions by offloading some timers to the line card.  This step is required for one-step mode and optional for two-step mode.  <b>Note</b> Make sure that neither of these features are already configured: dot1x ( <b>feature dot1x</b> ) and NV overlay ( <b>feature nv overlay</b> ). A dynamic ifacl label is reserved when these features are configured. However, only two dynamic ifacl label bits are available. If either of these features are already configured, a dynamic ifacl label will not be available for PTP offload, and the feature cannot be enabled. Note that PTP ( <b>feature ptp</b> ) consumes one ifacl label.  <b>Note</b> Beginning with Cisco NX-OS Release 9.3(3), Cisco Nexus 9504 and 9508 platform switches with 9636C-R, 9636C-RX, or 9636Q-R line cards support offload only with one-step clock operation. PTP offload is automatically enabled or disabled when the one-step clock operation is enabled or disabled.
<b>Step 8</b>	(Optional) [no] <b>ptp clock-operation one-step</b> <b>Example:</b> <pre>switch(config)# ptp clock-operation one-step</pre>	Configures the PTP clock operation to the one-step mode. In this case, the timestamp message is sent as a part of the sync message. A followup message is not sent in this mode.
<b>Step 9</b>	(Optional) [no] <b>ptp priority1</b> <i>value</i> <b>Example:</b> <pre>switch(config)# ptp priority1 1</pre>	Configures the priority1 value to use when advertising this clock. This value overrides the default criteria (clock quality, clock class, and so on) for best master clock selection. Lower values take precedence.  The range for the <i>value</i> is from 0 to 255.  <b>Note</b> For the switch to synchronize with an external Grand Master clock, the local switch PTP priority value must be configured higher than that of external Grand Master Clock priority.
<b>Step 10</b>	(Optional) [no] <b>ptp priority2</b> <i>value</i> <b>Example:</b> <pre>switch(config)# ptp priority2 1</pre>	Configures the priority2 value to use when advertising this clock. This value is used to decide between two devices that are otherwise equally matched in the default criteria.

	Command or Action	Purpose
		<p>For example, you can use the <code>priority2</code> value to give a specific switch priority over other identical switches.</p> <p>The range for the <i>value</i> is from 0 to 255.</p> <p><b>Note</b> For the switch to synchronize with an external Grand Master clock, the local switch PTP priority value must be configured higher than that of external Grand Master Clock priority.</p>
<b>Step 11</b>	<p><b>[ no ] ptp management</b></p> <p><b>Example:</b></p> <pre>switch(config)# ptp management switch(config-ptp-profile)#</pre>	<p>Configures support for PTP management packets. This command is enabled by default.</p> <p><b>no:</b> Disables support for management packets.</p>
<b>Step 12</b>	<p>(Optional) <b>[no] ptp delay tolerance { mean-path   reverse-path } variation</b></p> <p><b>Example:</b></p> <pre>switch(config)# ptp delay tolerance mean-path 50.5 switch(config)#</pre>	<p>Configures the PTP delay mean path/reverse path tolerance variation.</p> <p><b>mean-path:</b> Ignore spikes in Mean Path Delay (MPD) as calculated by the PTP BMC algorithm.</p> <p><b>reverse-path:</b> Ignore spikes in (t4-t3) as calculated by the PTP BMC algorithm.</p> <p><b>variation:</b> Percentage that defines the tolerance for spikes. Use numeric values with a single decimal. Range is from 1.0 through 100.0.</p> <p><b>Note</b> This command is supported beginning with Cisco NX-OS Release 9.3(5).</p>
<b>Step 13</b>	<p>(Optional) <b>ptp forward-version1</b></p> <p><b>Example:</b></p> <pre>switch(config)# ptp forward-version1 switch(config)#</pre>	<p>Configures the switch to forward all PTPv1 packets based on the forwarding rule.</p> <p><b>Note</b> If you do not enable this command, all PTPv1 packets are passed on to the CPU and ultimately dropped.</p> <p>This command is supported beginning with Cisco NX-OS Release 9.3(6).</p>
<b>Step 14</b>	(Optional) <b>ptp unicast-negotiation</b>	<p>This configuration is introduced in Cisco Nexus NX-OS Release 10.2(1)F and is supported on 93180YC-FX3S. From Cisco NX-OS Release 10.2(2)F onwards, this configuration is supported on Cisco Nexus 9300-EX, 9300-FX, 9300-FX2, 9300-GX, and 9300-GX2 platform switches.</p> <p>When enabled, all PTP unicast sessions will transition to negotiated mode.</p>

	Command or Action	Purpose
		For more information, refer to the PTP Unicast-Negotiation section.
<b>Step 15</b>	(Optional) <b>ptp ipv6 multicast scope tx</b> <scope> <b>Example:</b> <pre>switch(config)# ptp ipv6 multicast scope tx 0x2</pre>	Sets the transmit scope for PTP over IPv6 multicast configuration. <b>Note</b> <ul style="list-style-type: none"> <li>• Transmit scope is a single value. This determines the scope of IPv6 multicast destination address (FF0:X') used by PTP packets transmitted by the switch.</li> <li>• The default value is 1 (0x1).</li> <li>• When interface level configuration is applied, it takes precedence over the corresponding global configuration.</li> </ul>
<b>Step 16</b>	(Optional) <b>ptp ipv6 multicast scope rx</b> <scope> <b>Example:</b> <pre>switch(config)# ptp ipv6 multicast scope rx 0x1-0x5,0x8,0xA-0xE</pre>	Sets the receive scope for PTP over IPv6 multicast configuration. <b>Note</b> <ul style="list-style-type: none"> <li>• Receive scope can be a single value or multiple values or a range of values. This determines the acceptable scope (FF0:X') for received IPv6 multicast PTP packets.</li> <li>• The default value is 1 through 0xE (0x1-0xE).</li> <li>• When interface level configuration is applied, it takes precedence over the corresponding global configuration.</li> </ul>
<b>Step 17</b>	(Optional) <b>[no] ptp time distribution-hold</b> <b>[correction-threshold</b> <corr_limit> <b>]</b> <b>[delay-threshold</b> <max_delay_time> <b>]</b> <b>Example:</b> <pre>switch(config)# ptp time distribution-hold correction-threshold 90000ns delay threshold 4000s</pre>	Enables the PTP time distribution hold feature. <b>correction-threshold</b> — Holds the time distribution until the correction settles down to the specified correction value in nanoseconds. <b>delay-threshold</b> — Sets the maximum time limit in seconds to hold the time-distribution. However, if correction threshold is met before the delay threshold, the time distribution resumes. Default correction threshold is 300 nanoseconds. Default delay threshold is 300 seconds for TOR and 900 seconds for modular chassis. The maximum correction threshold is 100000 nanoseconds. The maximum delay threshold is 5000 seconds.
<b>Step 18</b>	(Optional) <b>copy running-config startup-config</b> <b>Example:</b>	Copies the running configuration to the startup configuration.

	Command or Action	Purpose
	<code>switch(config)# copy running-config startup-config</code>	

## Configure PTP GM

Beginning with Cisco NX-OS Release 10.3(2)F, the following are the newly added CLIs to support PTP GM functionality:

### SUMMARY STEPS

1. **[no] ptp device-type ordinary-clock-grandmaster**
2. (Optional) **ptp utc-offset** <leap-seconds> [ **next-leapevent** <date> <time> **new-offset** <new-leap-seconds>]
3. **clock protocol gnss**
4. For external GNSS configuration, refer to *Configuring GPS Settings for the Grandmaster Clock* section. For internal GNSS configuration, refer to [Enabling the GNSS Receiver](#) section.

### DETAILED STEPS

#### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>[no] ptp device-type ordinary-clock-grandmaster</b>  <b>Example:</b> <pre>switch(config)# ptp device-type ordinary-clock-grandmaster</pre>	Configures the device type as ordinary clock grandmaster.
<b>Step 2</b>	(Optional) <b>ptp utc-offset</b> <leap-seconds> [ <b>next-leapevent</b> <date> <time> <b>new-offset</b> <new-leap-seconds>]  <b>Example:</b> <pre>switch(config)# ptp utc-offset 37 next-leap-event 2022-04-30 23:59:59 new-offset 38</pre>	Configures the <b>utc-offset</b> value for the PTP GM functionality. Default value is 37 seconds. <ul style="list-style-type: none"> <li>• <b>utc-offset</b>: UTC offset value to be added to GM clock.</li> </ul> <p><i>leap-seconds</i>: Leap seconds value, range is 0–125 seconds. The default value is 37 seconds.</p> <p><b>next-leapevent</b>: Optional keyword to configure time at which leap seconds change.</p> <p><i>date</i>: Date at which leap seconds value changes in YYYY-MM-DD format.</p> <p><i>time</i>: Time at which leap seconds value will change in HH:MM:SS format</p> <p><b>new-offset</b>: New UTC offset value to be used after above configured <b>utc-offset</b> value.</p> <p><i>new-leap-seconds</i>: New leap seconds value, range is 0–125 seconds. It can only be <math>\pm 1</math> of the configured <b>utc-offset</b> value.</p>



	Command or Action	Purpose
<b>Step 3</b>	<b>clock protocol gnss</b>  <b>Example:</b> <pre>switch(config)# clock protocol gnss</pre>	Enables the GNSS Time of Day (ToD) sync to system clock on the device.
<b>Step 4</b>	For external GNSS configuration, refer to <i>Configuring GPS Settings for the Grandmaster Clock</i> section. For internal GNSS configuration, refer to <a href="#">Enabling the GNSS Receiver</a> section.	

## Configure PTP on an Interface

After you globally enable PTP, it is not enabled on all supported interfaces by default. You must enable PTP interfaces individually.

### Before you begin

Make sure that you have globally enabled PTP on the switch and configured the source IP address for PTP communication.

### SUMMARY STEPS

1. **configure terminal**
2. **interface ethernet *slot/port***
3. **[no] ptp**
4. (Optional) **ptp transport {ethernet | ipv4 | ipv6 }**
5. (Optional) **ptp transmission {multicast | unicast [negotiation-schema <schema-name>]}**
6. (Optional) **ptp role { dynamic | master | slave }**
7. (Optional) **[no] ptp master {<ipv4-addr> | <ipv6-addr>} { negotiation-schema <schema-name>}**
8. (Optional) **[ no ] ptp slave {<ipv4-addr> | <ipv6-addr>}**
9. (Optional) **ptp peer *ipv4-address* [ vrf *vrf-name* ]**
10. **ptp multicast master-only**
11. (Optional) **ptp ucast-source {<ipv4-addr> | <ipv6-addr>} [ vrf <vrf-name> ]**
12. (Optional) **[no] ptp announce {interval *log-seconds* | timeout *count*}**
13. (Optional) **[no] ptp delay-request minimum interval *log-seconds***
14. (Optional) **[no] ptp delay-request minimum interval [aes67-2015 | smpte-2059-2] *log-seconds***
15. (Optional) **[no] ptp sync interval *log-seconds***
16. (Optional) **[no] ptp sync interval [aes67-2015 | smpte-2059-2] *log-seconds***
17. (Optional) **[no] ptp vlan *vlan-id***
18. (Optional) **ptp destination-mac non-forwardable rx-no-match accept**
19. (Optional) **show ptp brief**
20. (Optional) **show ptp port interface *interface slot/port***
21. (Optional) **ptp ipv6 multicast scope tx <scope>**
22. (Optional) **ptp ipv6 multicast scope rx <scope>**
23. (Optional) **copy running-config startup-config**

## DETAILED STEPS

## Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>interface ethernet <i>slot/port</i></b> <b>Example:</b> <pre>switch(config)# interface ethernet 2/1 switch(config-if)#</pre>	Specifies the interface on which you are enabling PTP and enters the interface configuration mode.
<b>Step 3</b>	<b>[no] ptp</b> <b>Example:</b> <pre>switch(config-if)# ptp</pre>	Enables or disables PTP on an interface.
<b>Step 4</b>	<b>(Optional) ptp transport {ethernet   ipv4   ipv6 }</b> <b>Example:</b> <pre>switch(config-if)# ptp transport ipv4 switch(config-if)#  switch(config-if)# ptp transport ipv6 switch(config-if)#</pre>	<p>Specifies the transport mechanism that is used to send PTP packets.</p> <p><b>ethernet:</b> PTP packets are carried only in Eth frame (Eth/ptp). This option is only available for PTP Telecom Profile on the Cisco Nexus 93180YC-FX3S switch.</p> <p><b>ipv4:</b> PTP packets are carried over IPv4. This is the default setting.</p> <p><b>ipv6:</b> PTP packets are carried over IPv6. This option is available on Cisco Nexus 93180YC-FX3S switch starting with 10.2(1)F release. Beginning with Cisco NX-OS Release 10.2(2)F, this option is also available on Cisco Nexus 9300-FX, 9300-FX2, 9300-GX, and 9300-GX2 platform switches.</p> <p><b>Note</b> This command is supported beginning with Cisco NX-OS Release 9.3(5).</p>
<b>Step 5</b>	<b>(Optional) ptp transmission {multicast   unicast [negotiation-schema &lt;schema-name&gt;]}</b> <b>Example:</b> <pre>switch(config-if)# ptp transmission multicast switch(config-if)#</pre>	<p>Configures the PTP transmission method that is used by the interface.</p> <p><b>multicast:</b> PTP uses multicast destination IP address 224.0.1.129 as per IEEE 1588 standards for communication between devices. This is the default setting.</p> <p><b>unicast:</b> PTP messages are unicast to a particular PTP peer node.</p> <p><b>negotiation schema &lt;schema-name&gt;:</b> This option can be used when unicast-negotiation is enabled globally and can</p>

	Command or Action	Purpose
		<p>be used set the negotiation schema to be used on the interface.</p> <p>This option is available on the Cisco Nexus 93180YC-FX3S switch beginning with Cisco NX-OS Release 10.2(1)F. Beginning with Cisco NX-OS Release 10.2(2)F, this option is also available on Cisco Nexus 9300-FX, 9300-FX2, 9300-GX, and 9300-GX2 platform switches.</p> <p><b>Note</b> This command is supported beginning with Cisco NX-OS Release 9.3(5).</p>
<b>Step 6</b>	<p>(Optional) <b>ptp role</b> { <b>dynamic</b>   <b>master</b>   <b>slave</b> }</p> <p><b>Example:</b></p> <pre>switch(config-if)# ptp role dynamic switch(config-if)#</pre>	<p>Configures the PTP role of the interface.</p> <p><b>dynamic:</b> The best master clock algorithm (BMCA) assigns the role. This is the default setting for the default PTP profile and the only allowed setting for the G.8275.1 PTP profile.</p> <p>Beginning with Cisco NX-OS Release 10.3(3)F, if the PTP transmission is unicast, and the PTP role is set to dynamic, enable PTP unicast-negotiation.</p> <p><b>master:</b> The master clock is assigned as the PTP role of the interface.</p> <p><b>slave:</b> The slave clock is assigned as the PTP role of the interface.</p> <p>Beginning with Cisco NX-OS Release 10.3(3)F, PTP role <b>slave</b> can be configured on multiple unicast ports.</p> <p><b>Note</b> This command is supported beginning with Cisco NX-OS Release 9.3(5).</p>
<b>Step 7</b>	<p>(Optional) [<b>no</b>] <b>ptp master</b> {&lt;ipv4-addr&gt; / &lt;ipv6-addr&gt;} { <b>negotiation-schema</b> &lt;schema-name&gt; }</p> <p><b>Example:</b></p> <pre>switch(config-if)# ptp master 10.10.10.1 switch(config-if)#</pre>	<p>(Optional) Sets the IP address of the master clock when the PTP role of the interface is set to "slave".</p> <p><b>negotiation-schema :</b> This can be used to set specific negotiation schema for the master when unicast-negotiation is enabled globally. This option is available on the Cisco Nexus 93180YC-FX3S switch beginning with Cisco NX-OS Release 10.2(1)F. Beginning with Cisco NX-OS Release 10.2(2)F, this option is also available on Cisco Nexus 9300-EX, 9300-FX, 9300-FX2, 9300-GX, and 9300-GX2 platform switches.</p> <p><b>Note</b> This command configures the unicast master and is used when transmission is set to unicast.</p>

	Command or Action	Purpose
		<p>This command is supported beginning with Cisco NX-OS Release 9.3(5).</p> <p>IPv6 is supported on Cisco Nexus 93180YC-FX3S beginning with Cisco NX-OS Release 10.2(1)F. Beginning with Cisco NX-OS Release 10.2(2)F, IPv6 is also supported on Cisco Nexus 9300-FX, 9300-FX2, 9300-GX, and 9300-GX2 platform switches.</p>
<b>Step 8</b>	<p>(Optional) [ <b>no</b> ] <b>ptp slave</b> {&lt;ipv4-addr&gt; / &lt;ipv6-addr&gt;}</p> <p><b>Example:</b></p> <pre>switch(config-if)# ptp slave 10.10.10.2 switch(config-if)#</pre>	<p>(Optional) Sets the IP address of the slave clock when the PTP role of the interface is set to "master".</p> <p><b>Note</b></p> <p>This command configures the unicast slave and is used when transmission is set to unicast.</p> <p>This command is supported beginning with Cisco NX-OS Release 9.3(5).</p> <p>IPv6 is supported on Cisco Nexus 93180YC-FX3S beginning with Cisco NX-OS Release 10.2(1)F. Beginning with Cisco NX-OS Release 10.2(2)F, IPv6 is supported on Cisco Nexus 9300-FX, 9300-FX2, 9300-GX, and 9300-GX2 platform switches.</p>
<b>Step 9</b>	<p>(Optional) <b>ptp peer</b> <i>ipv4-address</i> [ <b>vrf</b> <i>vrf-name</i> ]</p> <p><b>Example:</b></p> <pre>switch(config-if)# ptp peer 10.10.10.2 switch(config-if)#</pre>	<p>Sets the IP address of the peer clock when the PTP role of the interface is set to dynamic.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• You can configure only one peer.</li> <li>• This command configures the unicast peer and is used when transmission is set to unicast and role is set to dynamic.</li> <li>• This command is introduced in Cisco NX-OS Release 10.3(3)F.</li> </ul>
<b>Step 10</b>	<p><b>ptp multicast master-only</b></p> <p><b>Example:</b></p> <pre>switch(config)# ptp multicast master-only switch(config)#</pre>	<p>Configures the master clock that is assigned as the PTP role of the interface.</p> <p><b>Note</b></p> <p>This command is deprecated in Cisco NX-OS Release 9.3(5) and is not supported in future releases. Please use commands in Steps 4-8 as applicable.</p>
<b>Step 11</b>	<p>(Optional) <b>ptp ucast-source</b> {&lt;ipv4-addr&gt;   &lt;ipv6-addr&gt;} [ <b>vrf</b> &lt;<i>vrf-name</i>&gt; ]</p> <p><b>Example:</b></p> <pre>switch(config)# ptp ucast-source 10.1.1.40</pre>	<p>(Optional) Configures the source IP address for unicast messages.</p> <p><i>ipv4-address</i>: The IPv4 address of the unicast source. This is used when transport is set to IPv4.</p>

	Command or Action	Purpose												
		<p><i>ipv6-address</i>: The IPv6 address of the unicast source. This is used when transport is set to IPv6.</p> <p><i>vrf vrf-name</i>: The name of the VRF used for hello messages.</p> <p><b>Note</b> IPv6 is supported on Cisco Nexus 93180YC-FX3S beginning with Cisco NX-OS Release 10.2(1)F. Beginning with Cisco NX-OS Release 10.2(2)F, IPv6 is also supported on Cisco Nexus 9300-FX, 9300-FX2, 9300-GX, and 9300-GX2 platform switches.</p>												
<b>Step 12</b>	<p>(Optional) <b>[no] ptp announce {interval log-seconds   timeout count}</b></p> <p><b>Example:</b></p> <pre>switch(config-if)# ptp announce interval 3</pre>	<p>Configures the interval between PTP announce messages on an interface or the number of PTP intervals before a timeout occurs on an interface.</p> <p>The range for the PTP announcement interval is from 0 to 4 log seconds, and the range for the interval timeout is from 2 to 4 intervals.</p>												
<b>Step 13</b>	<p>(Optional) <b>[no] ptp delay-request minimum interval log-seconds</b></p> <p><b>Example:</b></p> <pre>switch(config-if)# ptp delay-request minimum interval -1</pre>	<p>Configures the minimum interval allowed between PTP delay messages when the port is in the master state.</p> <p>The range is from log(–1) to log(6) seconds, where log(–1) = 2 frames every second.</p>												
<b>Step 14</b>	<p>(Optional) <b>[no] ptp delay-request minimum interval [aes67-2015   smpte-2059-2] log-seconds</b></p> <p><b>Example:</b></p> <pre>switch(config-if)# ptp delay-request minimum interval aes67-2015-1</pre>	<p>Configures the minimum interval allowed between PTP delay messages when the port is in the master state.</p> <p><b>Table 2: PTP Delay-Request Minimum Interval Range and Default Values</b></p> <table> <tr> <th>Option</th><th>Range</th><th>Default Value</th></tr> <tr> <td><b>aes67-2015</b></td><td>–4 to 5 log seconds</td><td>0 log seconds</td></tr> <tr> <td><b>smpte-2059-2</b></td><td>–4 to 5 log seconds</td><td>0 log seconds</td></tr> <tr> <td>Without the <b>aes67-2015</b> or <b>smpte-2059-2</b> option</td><td>–1 to 6 log seconds (where –1 = 2 frames every second)</td><td>0 log seconds</td></tr> </table>	Option	Range	Default Value	<b>aes67-2015</b>	–4 to 5 log seconds	0 log seconds	<b>smpte-2059-2</b>	–4 to 5 log seconds	0 log seconds	Without the <b>aes67-2015</b> or <b>smpte-2059-2</b> option	–1 to 6 log seconds (where –1 = 2 frames every second)	0 log seconds
Option	Range	Default Value												
<b>aes67-2015</b>	–4 to 5 log seconds	0 log seconds												
<b>smpte-2059-2</b>	–4 to 5 log seconds	0 log seconds												
Without the <b>aes67-2015</b> or <b>smpte-2059-2</b> option	–1 to 6 log seconds (where –1 = 2 frames every second)	0 log seconds												
<b>Step 15</b>	<p>(Optional) <b>[no] ptp sync interval log-seconds</b></p> <p><b>Example:</b></p> <pre>switch(config-if)# ptp sync interval 1</pre>	<p>Configures the interval between PTP synchronization messages on an interface.</p> <p>The range is from log(–3) to log(1) seconds. For the media-related profile information, see the <a href="#">Cisco NX-OS IP Fabric for Media Solution Guide</a> when configuring PTP for media.</p>												

	Command or Action	Purpose									
<b>Step 16</b>	(Optional) <b>[no] ptp sync interval [aes67-2015   smpte-2059-2] log-seconds</b>  <b>Example:</b> <pre>switch(config-if)# ptp sync interval aes67 1</pre>	Configures the interval between PTP synchronization messages on an interface.  <b>Table 3: PTP Synchronization Interval Range and Default Values</b> <table border="1"> <thead> <tr> <th>Option</th><th>Range</th><th>Recommended Value</th></tr> </thead> <tbody> <tr> <td><b>aes67-2015</b></td><td>–7 to 0 log seconds</td><td>–3 log seconds</td></tr> <tr> <td><b>smpte-2059-2</b></td><td>–7 to –0 log seconds</td><td>–3 log seconds</td></tr> </tbody> </table>	Option	Range	Recommended Value	<b>aes67-2015</b>	–7 to 0 log seconds	–3 log seconds	<b>smpte-2059-2</b>	–7 to –0 log seconds	–3 log seconds
Option	Range	Recommended Value									
<b>aes67-2015</b>	–7 to 0 log seconds	–3 log seconds									
<b>smpte-2059-2</b>	–7 to –0 log seconds	–3 log seconds									
<b>Step 17</b>	(Optional) <b>[no] ptp vlan vlan-id</b>  <b>Example:</b> <pre>switch(config-if)# ptp vlan 1</pre>	Specifies the VLAN for the interface where PTP is being enabled. You can only enable PTP on one VLAN on an interface.  The range is from 1 to 4094.									
<b>Step 18</b>	(Optional) <b>ptp destination-mac non-forwardable rx-no-match accept</b>  <b>Example:</b> <pre>switch(config-if)# ptp destination-mac non-forwardable rx-no-match accept switch(config-if)#</pre>	Accepts and responds to nonforwardable destination MAC address packets. These destination MAC addresses are used in the PTP messages that are exchanged between the GM clock, PTP-master clock, and PTP-slave clocks.  This command is supported beginning with Cisco NX-OS Release 9.3(5) and only on the Cisco Nexus 93180YC-FX3S switch.									
<b>Step 19</b>	(Optional) <b>show ptp brief</b>  <b>Example:</b> <pre>switch(config-if)# show ptp brief</pre>	Displays the PTP status.									
<b>Step 20</b>	(Optional) <b>show ptp port interface interface slot/port</b>  <b>Example:</b> <pre>switch(config-if)# show ptp port interface ethernet 2/1</pre>	Displays the status of the PTP port.									
<b>Step 21</b>	(Optional) <b>ptp ipv6 multicast scope tx &lt;scope&gt;</b>  <b>Example:</b> <pre>switch(config)# ptp ipv6 multicast scope tx 0x2</pre>	Sets the transmit scope for PTP over IPv6 multicast configuration.  <b>Note</b> <ul style="list-style-type: none"> <li>• Transmit scope is a single value. This determines the scope of IPv6 multicast destination address (FF0:X) used by PTP packets transmitted by the switch.</li> <li>• The default value is 1 (0x1).</li> <li>• When interface level configuration is applied, it takes precedence over the corresponding global configuration.</li> </ul>									

	Command or Action	Purpose
<b>Step 22</b>	(Optional) <b>ptp ipv6 multicast scope rx</b> <scope>  <b>Example:</b> <pre>switch(config)# ptp ipv6 multicast scope rx 0x1-0x5,0x8,0xA-0xE</pre>	Sets the receive scope for PTP over IPv6 multicast configuration.  <b>Note</b> <ul style="list-style-type: none"> <li>• Receive scope can be a single value or multiple values or a range of values. This determines the acceptable scope (FF0'X') for received IPv6 multicast PTP packets.</li> <li>• The default value is 1 through 0xE (0x1-0xE).</li> <li>• When interface level configuration is applied, it takes precedence over the corresponding global configuration.</li> </ul>
<b>Step 23</b>	(Optional) <b>copy running-config startup-config</b>  <b>Example:</b> <pre>switch(config-if)# copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.

## Configure PTP in Unicast Mode

### Configure Unicast Mode for IPv4 or IPv6

Traditional PTP messages are delivered to the nodes that are capable of receiving PTP multicast messages. (For example, **announce**, **sync**, **delay\_req**, **delay\_resp** and **follow\_up**). In Unicast mode, all PTP messages are delivered only to a particular PTP node. Multicast address is not used. In unicast mode, you can configure master/slave role and assign corresponding peer slave/master IP addresses.

Up to 8 master IPs can be configured for a slave unicast port and 64 slave IPs can be configured for a master port with a maximum 256 slave IP total for all ports. The following commands are used to configure the unicast slave IPs and unicast master IPs. Unicast packets are only sent to and received from these IPs. Packets received from other IPs are ignored.

For Cisco NX-OS Release 10.2(1)F and later:

```
IPv4 config
interface Ethernet1/34
 ptp
 ptp transport ipv4
 ptp transmission unicast
 ptp role master
 ptp slave 10.10.10.2
 ptp ucast-source 10.10.10.1

interface Ethernet1/35
 ptp
 ptp transport ipv4
 ptp transmission unicast
 ptp role slave
 ptp master 10.10.10.1
 ptp ucast-source 10.10.10.2
```

```

IPv6 config
interface Ethernet1/34
 ptp
 ptp transport ipv6
 ptp transmission unicast
 ptp role master
 ptp slave 2012:a1:0:0:0:0:2
 ptp ucast-source 2012:a1:0:0:0:0:1

interface Ethernet1/35
 ptp
 ptp transport ipv6
 ptp transmission unicast
 ptp role slave
 ptp master 2012:a1:0:0:0:0:1
 ptp ucast-source 2012:a1:0:0:0:0:2

```

For Cisco NX-OS Release 9.3(5) and later:

```

switch(config-if)# ptp
switch(config-if)# ptp transmission unicast
switch(config-if)# ptp role master
switch(config-if)# ptp slave 10.10.10.2

switch(config-if)# ptp
switch(config-if)# ptp transmission unicast
switch(config-if)# ptp role slave
switch(config-if)# ptp master 10.10.10.1

```

For Cisco NX-OS Release 9.3(4) and earlier:

```

switch(config-if)# ptp transport ipv4 ucast master
switch(config-if-ptp-master)# slave ipv4 10.10.10.2

switch(config-if)# ptp transport ipv4 ucast slave
switch(config-if-ptp-slave)# master ipv4 10.10.10.1

```

## Assign Dynamic Role

Complete the following steps to assign a dynamic role:

### SUMMARY STEPS

1. **configure terminal**
2. **interface ethernet *slot/port***
3. **[no] ptp**
4. **ptp transmission unicast**
5. **ptp role dynamic**
6. **ptp peer *ipv4-address***

### DETAILED STEPS

#### Procedure

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example:	



	Command or Action	Purpose
	switch# configure terminal switch(config)#	
<b>Step 2</b>	<b>interface ethernet <i>slot/port</i></b>  <b>Example:</b> switch(config)# interface ethernet 2/1 switch(config-if)#	Specifies the interface on which you are enabling PTP and enters the interface configuration mode.
<b>Step 3</b>	<b>[no] ptp</b>  <b>Example:</b> switch(config-if)# ptp switch(config-if)#	Enables or disables PTP on an interface.  <b>Note</b> This command is required prior to applying below unicast configuration commands on the interface.
<b>Step 4</b>	<b>ptp transmission unicast</b>  <b>Example:</b> switch(config-if)# ptp transmission unicast switch(config-if)#	Configures the PTP transmission method that is used by the interface.
<b>Step 5</b>	<b>ptp role dynamic</b>  <b>Example:</b> switch(config-if)# ptp role dynamic switch(config-if)#	Configures the PTP role of the interface.  <b>dynamic:</b> The dynamic clock is assigned as the PTP role of the interface.
<b>Step 6</b>	<b>ptp peer <i>ipv4-address</i></b>  <b>Example:</b> switch(config-if)# ptp peer 10.10.10.1 switch(config-if)#	Sets the IP address of the peer clock when the PTP role of the interface is set to dynamic.

## Assign Master Role

Complete the following steps to assign a master role:

### SUMMARY STEPS

1. **configure terminal**
2. **interface ethernet *slot/port***
3. **[no] ptp transport ipv4 ucast master**
4. **slave ipv4 <IP\_address>**
5. **[no] ptp**
6. **ptp transmission unicast**
7. **ptp role master**
8. **ptp slave *ipv4-address***

## DETAILED STEPS

## Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>interface ethernet slot/port</b>  <b>Example:</b> <pre>switch(config)# interface ethernet 2/1 switch(config-if)#</pre>	Specifies the interface on which you are enabling PTP and enters the interface configuration mode.  <b>Note</b> After configuring this command, for Cisco NX-OS Release 9.3(5) and later, skip to step 5. For Cisco NX-OS Release 9.3(4) and earlier, continue with step 3.
<b>Step 3</b>	<b>[no] ptp transport ipv4 ucast master</b>  <b>Example:</b> <pre>switch(config-if)# ptp transport ipv4 ucast master switch(config-if-ptp-master)#</pre>	Enables PTP master on a particular port (Layer 3 interface). In the master sub-mode, you can enter the slave IPv4 addresses.
<b>Step 4</b>	<b>slave ipv4 &lt;IP_address&gt;</b>  <b>Example:</b> <pre>switch-1(config)# interface ethernet 1/1 switch-1(config-if)# ptp transport ipv4 ucast master switch-1(config-if-ptp-master)# slave ipv4 1.2.3.1 switch-1(config-if-ptp-master)# slave ipv4 1.2.3.2 switch-1(config-if-ptp-master)# slave ipv4 1.2.3.3 switch-1(config-if-ptp-master)# slave ipv4 1.2.3.4 switch-1(config-if-ptp-master)#</pre>	Enters the slave IPv4 addresses. Maximum of 64 IP addresses are allowed per master, but this number varies and it depends on the sync interval configuration. The master sends announce, sync, follow-up, and delay_resp only to these slave addresses. You must make sure that the slave IP is reachable.  <b>Note</b> For Cisco NX-OS Release 9.3(4) and earlier, this concludes the procedure.
<b>Step 5</b>	<b>[no] ptp</b>  <b>Example:</b> <pre>switch(config-if)# ptp switch(config-if)#</pre>	Enables or disables PTP on an interface.  <b>Note</b> Starting with 9.3(5), this command is required prior to applying below unicast configuration commands on the interface.
<b>Step 6</b>	<b>ptp transmission unicast</b>  <b>Example:</b> <pre>switch(config-if)# ptp transmission unicast switch(config-if)#</pre>	Configures the PTP transmission method that is used by the interface.  <b>Note</b> This command is supported beginning with Cisco NX-OS Release 9.3(5).
<b>Step 7</b>	<b>ptp role master</b>  <b>Example:</b>	Configures the PTP role of the interface.

	Command or Action	Purpose
	<pre>switch(config-if)# ptp role master switch(config-if)#</pre>	<p><b>master:</b> The master clock is assigned as the PTP role of the interface.</p> <p><b>Note</b> This command is supported beginning with Cisco NX-OS Release 9.3(5).</p>
<b>Step 8</b>	<p><b>ptp slave</b> <i>ipv4-address</i></p> <p><b>Example:</b></p> <pre>switch(config-if)# ptp slave 10.10.10.2 switch(config-if)#</pre>	<p>Sets the IP address of the slave clock when the PTP role of the interface is set to "master".</p> <p><b>Note</b> This command is supported beginning with Cisco NX-OS Release 9.3(5).</p>

## Assign Slave Role

Complete the following steps to assign a slave role:

### SUMMARY STEPS

1. **configure terminal**
2. **interface ethernet** *slot/port*
3. **[no] ptp transport ipv4 ucast slave**
4. **master ipv4** *<IP\_address>*
5. **[no] ptp**
6. **ptp transmission unicast**
7. **ptp role slave**
8. **ptp master** *ipv4-address*

### DETAILED STEPS

#### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<p><b>configure terminal</b></p> <p><b>Example:</b></p> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<p><b>interface ethernet</b> <i>slot/port</i></p> <p><b>Example:</b></p> <pre>switch(config)# interface ethernet 2/1 switch(config-if)#</pre>	<p>Specifies the interface on which you are enabling PTP and enters the interface configuration mode.</p> <p><b>Note</b> After configuring this command, for Cisco NX-OS Release 9.3(5) and later, skip to step 5. For Cisco NX-OS Release 9.3(4) and earlier, continue with step 3.</p>

	Command or Action	Purpose
<b>Step 3</b>	<b>[no] ptp transport ipv4 ucast slave</b> <b>Example:</b> <pre>switch(config-if)# ptp transport ipv4 ucast slave switch(config-if-ptp-slave)#</pre>	Enables PTP slave on a particular port (Layer 3 interface). In the slave sub-mode, you can enter the master IPv4 addresses.
<b>Step 4</b>	<b>master ipv4 &lt;IP_address&gt;</b> <b>Example:</b> <pre>switch-1(config)# interface ethernet 1/1 switch-1(config-if)# ptp transport ipv4 ucast slave switch-1(config-if-ptp-slave)# master ipv4 4.4.4.1 switch-1(config-if-ptp-slave)# master ipv4 4.4.4.2 switch-1(config-if-ptp-slave)# master ipv4 4.4.4.3</pre>	Enters the master IPv4 addresses.  <b>Note</b> For Cisco NX-OS Release 9.3(4) and earlier, this concludes the procedure.
<b>Step 5</b>	<b>[no] ptp</b> <b>Example:</b> <pre>switch(config-if)# ptp switch(config-if)#</pre>	Enables or disables PTP on an interface.  <b>Note</b> Starting with 9.3(5), this command is required prior to applying below unicast configuration commands on the interface
<b>Step 6</b>	<b>ptp transmission unicast</b> <b>Example:</b> <pre>switch(config-if)# ptp transmission unicast switch(config-if)#</pre>	Configures the PTP transmission method that is used by the interface.  <b>Note</b> This command is supported beginning with Cisco NX-OS Release 9.3(5).
<b>Step 7</b>	<b>ptp role slave</b> <b>Example:</b> <pre>switch(config-if)# ptp role slave switch(config-if)#</pre>	Configures the PTP role of the interface.  <b>slave:</b> The slave clock is assigned as the PTP role of the interface.  <b>Note</b> This command is supported beginning with Cisco NX-OS Release 9.3(5).
<b>Step 8</b>	<b>ptp master ipv4-address</b> <b>Example:</b> <pre>switch(config-if)# ptp master 10.10.10.1 switch(config-if)#</pre>	Sets the IP address of the master clock when the PTP role of the interface is set to "slave".  <b>Note</b> This command is supported beginning with Cisco NX-OS Release 9.3(5).

## Configure Unicast Source Address



**Note** For all releases up to, and including Cisco NX-OS Release 9.3(4), if the PTP configuration on the interface is changed from unicast to multicast or unicast slave to unicast master, you must reconfigure the unicast source address.

Beginning with Cisco NX-OS Release 9.3(5), if the PTP configuration on the interface is changed from unicast to multicast or unicast slave to unicast master, you do not need to reconfigure the unicast source address.

Complete the following steps to configure unicast source address:

### SUMMARY STEPS

1. **configure terminal**
2. **interface ethernet *slot/port***
3. **[no] ptp ucast-source {<ipv4-addr> / <ipv6-addr>} [vrf <vrf-name>]**

### DETAILED STEPS

#### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>interface ethernet <i>slot/port</i></b>  <b>Example:</b> <pre>switch(config)# interface ethernet 2/1 switch(config-if)#</pre>	Specifies the interface on which you are enabling PTP and enters the interface configuration mode.
<b>Step 3</b>	<b>[no] ptp ucast-source {&lt;ipv4-addr&gt; / &lt;ipv6-addr&gt;} [vrf &lt;vrf-name&gt;]</b>  <b>Example:</b> <pre>switch(config-if)# ptp ucast-source 10.10.10.20 switch(config-if)#</pre>	<p>Configure PTP source address per interface level. This IP address is used only for unicast PTP messages. The PTP unicast source IP address must be reachable.</p> <p><i>ipv4-address</i>: The IPv4 address of the unicast source. This is used when transport is set to IPv4.</p> <p><i>ipv6-address</i>: The IPv6 address of the unicast source. This is used when transport is set to IPv6.</p> <p><b>vrf</b><i>vrf-name</i>: If the IP address is in non-default VRF, use the vrf parameter to configure the VRF.</p>

# Configure PTP Telecom Profile

## Configure Global PTP Telecom Profile

This procedure describes the steps involved to configure PTP telecom profile including the clock and its settings to be consistent with ITU-T Telecom Profiles for Frequency.

### Before you begin

The QoS TCAM region Ingress SUP [ingress-sup] must be set to 768 or higher. Follow these steps:

1. Check the TCAM region by using the **show hardware access-list tcam region** command.
2. If the Ingress SUP region is not set to 768 or higher, then configure the Ingress SUP TCAM region using the command **hardware access-list tcam region ing-sup 768**. Copy the running configuration to the startup configuration (**copy running-config startup-config**) and reload the switch.

### SUMMARY STEPS

1. **configure terminal**
2. **feature ptp**
3. **ptp profile { default | 8275-1 | 8275-2 }**
4. Profile Default: **mode { hybrid | non-hybrid | none }**
5. **exit**
6. **ptp source ip-address**
7. Profile Default: **ptp priority1 value**
8. Profile Default: **ptp priority2 value**
9. **ptp pdelay-req-interval value**
10. Profile Default: **ptp domain value**

### DETAILED STEPS

#### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	Required: <b>feature ptp</b>  <b>Example:</b> <pre>switch(config)# feature ptp switch(config)#</pre>	Enables the global PTP feature.
<b>Step 3</b>	Required: <b>ptp profile { default   8275-1   8275-2 }</b>  <b>Example:</b>	Enables a PTP profile and enters the PTP profile configuration mode. For more information about the

	Command or Action	Purpose
	<pre>switch(config)# ptp profile 8275-1 switch(config-ptp-profile)#</pre>	<p>commands supported through the profile types in this command, see</p> <p><b>Note</b> 8275-1 and 8275-2 support the PTP Telecom Profile configuration.</p> <p>For Cisco NX-OS Release 9.3(5), only the Cisco Nexus 93180YC-FX3S switch supports either option in this command.</p>
<b>Step 4</b>	<p>Profile Default: <b>mode { hybrid   non-hybrid   none }</b></p> <p><b>Example:</b></p> <pre>switch(config)# mode hybrid switch(config-ptp-profile)#</pre>	<p>Configures the PTP operational mode for the switch:</p> <p><b>hybrid:</b> The SyncE source acts as the PTP source.</p> <p><b>default:</b> The local/1588 clock acts as the PTP source.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• This command is automatically configured when the <b>ptp profile</b> command is set. The configuration value cannot be changed. See <a href="#">Step 3, on page 38</a> for more information.</li> <li>• The only mode that the 8275-2 profile supports is non-hybrid.</li> <li>• The profile default mode is hybrid.</li> </ul>
<b>Step 5</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>switch(config-ptp-profile)# exit switch(config)#</pre>	<p>Exits the PTP profile configuration mode and returns to the global configuration mode.</p>
<b>Step 6</b>	<p><b>ptp source ip-address</b></p> <p><b>Example:</b></p> <pre>switch(config)# ptp source 10.10.10.20 switch(config)#</pre>	<p>Configures the source IPv4 address for all the PTP packets in the multicast PTP mode.</p>
<b>Step 7</b>	<p>Profile Default: <b>ptp priority1 value</b></p> <p><b>Example:</b></p> <pre>switch(config)# ptp priority1 128 switch(config)#</pre>	<p>Configures the priority1 value to use when advertising this clock. This value overrides the default criteria (clock quality, clock class, etc.) for best master clock selection. Lower values take precedence.</p> <p><b>Note</b> This command is automatically configured when the <b>ptp profile 8275-1 or 8275-2</b> global command is set. The configuration value cannot be changed. See <a href="#">Step 3, on page 38</a>.</p>
<b>Step 8</b>	<p>Profile Default: <b>ptp priority2 value</b></p> <p><b>Example:</b></p>	<p>Configures the priority2 value to use when advertising this clock. This value overrides the default criteria (clock</p>

	Command or Action	Purpose
	<pre>switch(config)# ptp priority2 128 switch(config)#</pre>	<p>quality, clock class, etc.) for best master clock selection. Lower values take precedence.</p> <p>Default: 128</p> <p>Range: 0 through 255</p> <p><b>Note</b> This command is automatically configured when the <b>ptp profile 8275-1</b> or <b>8275-2</b> global command is set. See <a href="#">Step 3, on page 38</a>.</p>
<b>Step 9</b>	<p><b>ptp pdelay-req-interval</b> <i>value</i></p> <p><b>Example:</b></p> <pre>switch(config)# ptp pdelay-req-interval 0 switch(config)#</pre>	<p>Configures the peer delay request interval.</p> <p><i>value</i>: Range is from 0 through 5.</p>
<b>Step 10</b>	<p>Profile Default: <b>ptp domain</b> <i>value</i></p> <p><b>Example:</b></p> <pre>switch(config)# ptp domain 24 switch(config)#</pre>	<p>Specifies the PTP clock domain value. The allowed domain number range for G.8275.1 profile is between 24 and 43. Default is 24. The allowed domain number range for G.8275.2 profile is between 44 and 63. Default is 44.</p> <p><b>Note</b> This command is automatically configured when the <b>ptp profile 8275-1</b> or <b>8275-2</b> global command is set. See <a href="#">Step 3, on page 38</a>.</p>

## Configure PTP Telecom Profile 8275-1 on an Interface

This procedure describes the steps that are involved to configure PTP telecom profile 8275-1 for interfaces.



**Note** Some commands that are described in this procedure are automatically enabled and configured when the **ptp profile 8275-1** global command is set and PTP is enabled on the interface. See [Configure Global PTP Telecom Profile, on page 38](#) for more information.

### Before you begin

This procedure along with configuring frequency synchronization on the interface, constitutes the required interface settings for the "hybrid PTP" platform. For more information about the interface frequency synchronization configuration, see [Configuring Frequency Synchronization on an Interface](#).

### SUMMARY STEPS

1. **configure terminal**
2. **interface ethernet** *slot / port*
3. **[ no ] ptp**
4. Profile Default: **ptp transport ethernet**
5. Profile Default: **ptp transmission multicast**



6. Profile Default: **ptp role dynamic**
7. (Optional) **ptp destination-mac non-forwardable rx-no-match accept**
8. Profile Default: **ptp cost value**
9. Profile Default: **ptp delay-request minimum interval log-seconds**
10. Profile Default: **ptp announce interval log-seconds**
11. Profile Default: **ptp sync interval log-seconds**
12. (Optional) [ no ] **ptp announce timeout count**
13. (Optional) [ no ] **ptp profile-override**

## DETAILED STEPS

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>interface ethernet slot / port</b>  <b>Example:</b> <pre>switch(config)# interface ethernet 1/5 switch(config-if)#</pre>	Specifies the interface on which you are configuring PTP telecom profile parameters and enters the interface configuration mode.
<b>Step 3</b>	<b>[ no ] ptp</b>  <b>Example:</b> <pre>switch(config-if)# ptp switch(config-if)#</pre>	Enables PTP on the interface.
<b>Step 4</b>	Profile Default: <b>ptp transport ethernet</b>  <b>Example:</b> <pre>switch(config-if)# ptp transport ethernet switch(config-if)#</pre>	Specifies the transport mechanism that is used to send PTP packets. For <b>ethernet</b> , PTP packets are carried only in Eth frame (Eth/ptp).  <b>Note</b> This command is automatically configured when the <b>ptp profile 8275-1</b> global command is set. For more information about the <b>ptp profile 8275-1</b> command, see <a href="#">Configure Global PTP Telecom Profile, on page 38</a> .
<b>Step 5</b>	Profile Default: <b>ptp transmission multicast</b>  <b>Example:</b> <pre>switch(config-if)# ptp transmission multicast switch(config-if)#</pre>	Configures the PTP transmission method that is used by the interface. For <b>multicast</b> , PTP uses multicast destination IP address 224.0.1.129 as per IEEE 1588 standards for communication between devices.  <b>Note</b> This command is automatically configured when the <b>ptp profile 8275-1</b> global command is set. For more information about the <b>ptp profile 8275-1</b> command, see <a href="#">Configure Global PTP Telecom Profile, on page 38</a> .

	Command or Action	Purpose
<b>Step 6</b>	Profile Default: <b>ptp role dynamic</b> <b>Example:</b> <pre>switch(config-if)# ptp role dynamic switch(config-if)#</pre>	Configures the PTP role of the interface. For <b>dynamic</b> , the best master clock algorithm (BMCA) assigns the role.  <b>Note</b> This command is automatically configured when the <b>ptp profile 8275-1</b> global command is set. For more information about the <b>ptp profile 8275-1</b> command, see <a href="#">Configure Global PTP Telecom Profile, on page 38</a> .
<b>Step 7</b>	(Optional) <b>ptp destination-mac non-forwardable rx-no-match accept</b> <b>Example:</b> <pre>switch(config-if)# ptp destination-mac non-forwardable rx-no-match accept switch(config-if)#</pre>	Accepts and responds to nonforwardable destination MAC address packets. These destination MAC addresses are used in the PTP messages that are exchanged between the GM clock, PTP-master clock, and PTP-slave clocks.
<b>Step 8</b>	Profile Default: <b>ptp cost value</b> <b>Example:</b> <pre>switch(config-if)# ptp cost 128 switch(config-if)#</pre>	Configures the value used in the BMCA's selection of the best master clock. If all the parameters mentioned in the standard are the same, then this local priority is used.  <b>Note</b> This command is automatically configured when the <b>ptp profile 8275-1</b> global command is set. For more information about the <b>ptp profile 8275-1</b> command, see <a href="#">Configure Global PTP Telecom Profile, on page 38</a> .
<b>Step 9</b>	Profile Default: <b>ptp delay-request minimum interval log-seconds</b> <b>Example:</b> <pre>switch(config-if)# ptp delay-request minimum interval -4</pre>	Configures the minimum interval that is allowed between PTP delay messages when the port is in the master state.  <b>Note</b> This command is automatically configured when the <b>ptp profile 8275-1</b> global command is set. For more information about the <b>ptp profile 8275-1</b> command, see <a href="#">Configure Global PTP Telecom Profile, on page 38</a> .
<b>Step 10</b>	Profile Default: <b>ptp announce interval log-seconds</b> <b>Example:</b> <pre>switch(config-if)# ptp announce interval -3</pre>	Configures the interval between PTP announce messages on an interface or the number of PTP intervals before a timeout occurs on an interface.  <b>Note</b> This command is automatically configured when the <b>ptp profile 8275-1</b> global command is set. For more information about the <b>ptp profile 8275-1</b> command, see <a href="#">Configure Global PTP Telecom Profile, on page 38</a> .
<b>Step 11</b>	Profile Default: <b>ptp sync interval log-seconds</b> <b>Example:</b> <pre>switch(config-if)# ptp sync interval -4</pre>	Configures the interval between PTP synchronization messages on an interface.  <b>Note</b> This command is automatically configured when the <b>ptp profile 8275-1</b> global command is set. For more

	Command or Action	Purpose
		information about the <b>ptp profile 8275-1</b> command, see <a href="#">Configure Global PTP Telecom Profile, on page 38</a> .
<b>Step 12</b>	(Optional) [ <b>no</b> ] <b>ptp announce timeout</b> <i>count</i> <b>Example:</b> <pre>switch(config-if)# ptp announce timeout 3</pre>	Configures the number of PTP intervals before a timeout occurs on an interface.  The range for the PTP announcement interval timeout is from 2 to 4 intervals.
<b>Step 13</b>	(Optional) [ <b>no</b> ] <b>ptp profile-override</b> <b>Example:</b> <pre>switch(config-if)# ptp profile-override switch(config-if)#</pre>	Disabled by default, when enabled, allows you to change the following commands in this interface configuration: <ul style="list-style-type: none"> <li>• <b>ptp transport</b></li> <li>• <b>ptp announce interval</b></li> <li>• <b>ptp delay-request minimum interval</b></li> <li>• <b>ptp sync interval</b></li> <li>• <b>ptp cost</b> (8275-1 profile only)</li> </ul> <p><b>Note</b> When enabled, changes to the commands will not be reset to default if the global PTP profile is changed. Removing <b>ptp profile-override</b> resets the PTP configuration on the interface to the default values corresponding to the global profile.</p>

## Configure PTP Telecom Profile 8275-2 on an Interface

This procedure describes the steps that are involved to configure PTP telecom profile 8275-2 for interfaces.



**Note** Some commands that are described in this procedure are automatically enabled and configured when the **ptp profile 8275-2** global command is set and PTP is enabled on the interface. See [Configure Global PTP Telecom Profile, on page 38](#) for more information.

### Before you begin

This procedure along with configuring frequency synchronization on the interface, constitutes the required interface settings for the "hybrid PTP" platform. For more information about the interface frequency synchronization configuration, see [Configuring Frequency Synchronization on an Interface](#).

### SUMMARY STEPS

1. **configure terminal**
2. **interface ethernet** *slot / port*
3. [ **no** ] **ptp**
4. Profile Default: **ptp transport ipv4**

5. Profile Default: **ptp transmission unicast**
6. Profile Default: **ptp role dynamic**
7. (Optional) **ptp destination-mac non-forwardable rx-no-match accept**
8. Profile Default: **ptp cost value**
9. Profile Default: **ptp delay-request minimum interval log-seconds**
10. Profile Default: **ptp announce interval log-seconds**
11. Profile Default: **ptp sync interval log-seconds**
12. (Optional) **[no] ptp announce timeout count**
13. (Optional) **[ no ] ptp profile-override**

## DETAILED STEPS

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>interface ethernet slot / port</b> <b>Example:</b> <pre>switch(config)# interface ethernet 1/5 switch(config-if)#</pre>	Specifies the interface on which you are configuring PTP telecom profile parameters and enters the interface configuration mode.
<b>Step 3</b>	<b>[no] ptp</b> <b>Example:</b> <pre>switch(config-if)# ptp switch(config-if)#</pre>	Enables PTP on the interface.
<b>Step 4</b>	Profile Default: <b>ptp transport ipv4</b> <b>Example:</b> <pre>switch(config-if)# ptp transport ipv4 switch(config-if)#</pre>	Specifies the transport mechanism that is used to send PTP packets.  <b>Note</b> This command is automatically configured when the <b>ptp profile 8275-2</b> global command is set. For more information about the <b>ptp profile 8275-2</b> command, see <a href="#">Configure Global PTP Telecom Profile, on page 38</a> .
<b>Step 5</b>	Profile Default: <b>ptp transmission unicast</b> <b>Example:</b> <pre>switch(config-if)# ptp transmission unicast switch(config-if)#</pre>	Configures the PTP transmission method that is used by the interface. For <b>unicast</b> , PTP uses the configured master/slave/peer IP.  <b>Note</b> This command is automatically configured when the <b>ptp profile 8275-2</b> global command is set. For more information about the <b>ptp profile 8275-2</b> command, see <a href="#">Configure Global PTP Telecom Profile, on page 38</a> .

	Command or Action	Purpose
<b>Step 6</b>	Profile Default: <b>ptp role dynamic</b> <b>Example:</b> <pre>switch(config-if)# ptp role dynamic switch(config-if)#</pre>	Configures the PTP role of the interface. For <b>dynamic</b> , the best master clock algorithm (BMCA) assigns the role.  <b>Note</b> This command is automatically configured when the <b>ptp profile 8275-2</b> global command is set. For more information about the <b>ptp profile 8275-2</b> command, see <a href="#">Configure Global PTP Telecom Profile, on page 38</a> .
<b>Step 7</b>	(Optional) <b>ptp destination-mac non-forwardable rx-no-match accept</b> <b>Example:</b> <pre>switch(config-if)# ptp destination-mac non-forwardable rx-no-match accept switch(config-if)#</pre>	Accepts and responds to non-forwardable destination MAC address packets. These destination MAC addresses are used in the PTP messages that are exchanged between the GM clock, PTP-master clock, and PTP-slave clocks.
<b>Step 8</b>	Profile Default: <b>ptp cost value</b> <b>Example:</b> <pre>switch(config-if)# ptp cost 128 switch(config-if)#</pre>	Configures the value used in the BMCA's selection of the best master clock. If all the parameters mentioned in the standard are the same, then this local priority is used.  <b>Note</b> This command is automatically configured when the <b>ptp profile 8275-2</b> global command is set. For more information about the <b>ptp profile 8275-2</b> command, see <a href="#">Configure Global PTP Telecom Profile, on page 38</a> .
<b>Step 9</b>	Profile Default: <b>ptp delay-request minimum interval log-seconds</b> <b>Example:</b> <pre>switch(config-if)# ptp delay-request minimum interval -4</pre>	Configures the minimum interval that is allowed between PTP delay messages when the port is in the master state.  <b>Note</b> This command is automatically configured when the <b>ptp profile 8275-2</b> global command is set. For more information about the <b>ptp profile 8275-2</b> command, see <a href="#">Configure Global PTP Telecom Profile, on page 38</a> .
<b>Step 10</b>	Profile Default: <b>ptp announce interval log-seconds</b> <b>Example:</b> <pre>switch(config-if)# ptp announce interval -3</pre>	Configures the interval between PTP announce messages on an interface or the number of PTP intervals before a timeout occurs on an interface.  <b>Note</b> This command is automatically configured when the <b>ptp profile 8275-2</b> global command is set. For more information about the <b>ptp profile 8275-2</b> command, see <a href="#">Configure Global PTP Telecom Profile, on page 38</a> .
<b>Step 11</b>	Profile Default: <b>ptp sync interval log-seconds</b> <b>Example:</b> <pre>switch(config-if)# ptp sync interval -4</pre>	Configures the interval between PTP synchronization messages on an interface.  <b>Note</b> This command is automatically configured when the <b>ptp profile 8275-2</b> global command is set. For more

	Command or Action	Purpose
		information about the <b>ptp profile 8275-2</b> command, see <a href="#">Configure Global PTP Telecom Profile, on page 38</a> .
<b>Step 12</b>	(Optional) <b>[no] ptp announce timeout</b> <i>count</i>  <b>Example:</b> <code>switch(config-if)# ptp announce timeout 3</code>	Configures the number of PTP intervals before a timeout occurs on an interface.  The range for the PTP announcement interval timeout is from 2 to 4 intervals.
<b>Step 13</b>	(Optional) <b>[ no ] ptp profile-override</b>  <b>Example:</b> <code>switch(config-if)# ptp profile-override</code> <code>switch(config-if)#</code>	Disabled by default, when enabled, allows you to change the following commands in this interface configuration: <ul style="list-style-type: none"> <li>• <b>ptp transport</b></li> <li>• <b>ptp announce interval</b></li> <li>• <b>ptp delay-request minimum interval</b></li> <li>• <b>ptp sync interval</b></li> <li>• <b>ptp cost</b> (8275-2 profile only)</li> </ul> <p><b>Note</b> When enabled, changes to the commands will not be reset to default if the global PTP profile is changed. Removing <b>ptp profile-override</b> resets the PTP configuration on the interface to the default values corresponding to the global profile.</p>

## Profile Defaults

The following table lists the ranges and default values for the commands that are automatically configured when the global command **ptp profile** is set. You cannot change the range for the affected global commands beyond those allowed by the configured profile. However, in the interface mode, they can be changed if the **ptp profile-override** command is set.



**Note** For Cisco NX-OS Release 9.3(5), only the Cisco Nexus 93180YC-FX3S switch supports either option in this command.

The default profile (default PTP) configurations work with an interval of 4 packets per second (pps). However, on Cisco Nexus 9408, 9808, 9804, N9K-C93400LD-H1, and N9K-C9332D-H2R platform switches, in default and media profile, minimum sync and delay interval supported is 8 pps. When syncing with time source the minimum supported rate for sync and delay req interval is 8 pps.

Table 4: Range and Default Values

Parameter	Scope or Configuration Mode	Default Profile's Supported Range of Values	Default Profile's Default Value	8275-1 Profile's Supported Range of Values	8275-1 Profile's Default Value	8275-2 Profile's Supported Range of Values	8275-2 Profile's Default Value	With 'ptp profile-override' Configured on an Interface Supported Range of Values (Default is Based on Configured Profile)
mode	global	none	none	hybrid	hybrid	non-hybrid	non-hybrid	no change
domain	global	0 to 63	0	24 to 43	24	44 to 63	44	no change
priority1	global	0 to 255	255	128	128	128	128	no change
priority2	global	0 to 255	255	0 to 255	128	0 to 255	128	no change
cost	interface	Not configurable	Not configurable	0 to 255	128	0 to 255	128	0 to 255
transport	interface	ipv4, ipv6	ipv4	ethernet	ethernet	ipv4, ipv6	ipv4	ethernet, ipv4
transmission	interface	multicast, unicast	multicast	multicast	multicast	unicast	unicast	no change
role	interface	dynamic, master, slave	dynamic	dynamic	dynamic	dynamic, slave	dynamic	no change
announce interval	interface	0 to 4 0 to 4 with aes67 -3 to 1 with smpte-2059-2	1	-3	-3	-3 to 0	-3	-3 to 4 0 to 4 with aes67 -3 to 1 with smpte-2059-2
delay-request minimum interval	interface	-1 to 6 -4 to 5 with aes67 -4 to 5 with smpte-2059-2	0	-4	-4	-4 to 0	-4	-4 to 6 -4 to 5 with aes67 -4 to 5 with smpte-2059-2

Parameter	Scope or Configuration Mode	Default Profile's Supported Range of Values	Default Profile's Default Value	8275-1 Profile's Supported Range of Values	8275-1 Profile's Default Value	8275-2 Profile's Supported Range of Values	8275-2 Profile's Default Value	With 'ptp profile-override' Configured on an Interface Supported Range of Values (Default is Based on Configured Profile)
sync interval	interface	-3 to 1 -4 to 1 with aes67 -7 to 0 with smpte-2059-2	-2	-4	-4	-4 to 0	-4	-4 to 1 -4 to 1 with aes67 -7 to 0 with smpte-2059-2

## Configure PTP Notifications

### Before you begin

You can enable, disable, and customize notifications for the following significant PTP events:

- Change in the Grand Master (GM) clock
- Change in the Parent clock
- Change in the PTP state on a port
- High PTP clock corrections

The notifications are generated by the DME infrastructure based on information it receives from PTP.

### SUMMARY STEPS

1. [ no ] **ptp notification type gm-change**
2. [ no ] **ptp notification type parent-change**
3. [ no ] **ptp notification type port-state-change** [ category { all | master-slave-only } ] [ interval { immediate | seconds [ periodic-notification { disable | enable } ] } ]
4. [ no ] **ptp notification type high-correction** [ interval { seconds [ periodic-notification { disable | enable } ] } | immediate ]
5. (Optional) [ no ] **ptp correction-range** { nanoseconds | logging }



## DETAILED STEPS

## Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>[ no ] ptp notification type gm-change</b>  <b>Example:</b> <pre>switch(config)# ptp notification type gm-change switch(config)#</pre>	Configures the system to send a change notification if the PTP grand master clock changes.
<b>Step 2</b>	<b>[ no ] ptp notification type parent-change</b>  <b>Example:</b> <pre>switch(config)# ptp notification type parent-change switch(config)#</pre>	Configures the system to send a change notification if the PTP parent clock changes.
<b>Step 3</b>	<b>[ no ] ptp notification type port-state-change [ category { all   master-slave-only } ] [ interval { immediate   seconds [ periodic-notification { disable   enable } ] ]</b>  <b>Example:</b> <pre>switch(config)# ptp notification type port-state-change category master-slave-only switch(config)#</pre>	<p>Configures the system to send a notification if a port state change event occurs.</p> <ul style="list-style-type: none"> <li>• <b>category:</b> Specifies which state changes must occur for a notification to be sent. <ul style="list-style-type: none"> <li>• <b>all:</b> Every port state change is reported.</li> </ul> </li> <li>• <b>Note</b> Using the <b>all</b> option results in many notifications.</li> <li>• <b>master-slave-only:</b> Port state changes from and to the master-slave state are only reported.</li> <li>• <b>interval seconds:</b> Port state change notifications are sent at the configured interval: from 1-300 seconds with a granularity of 1 sec. <ul style="list-style-type: none"> <li>• <b>periodic-notification:</b> Determines if periodic notifications are sent even if a port state change has not occurred during the configured interval.</li> <li>• <b>disable:</b> A port state change notification is reported only if the current state is not the same as the previously reported state. Any intermediate state changes during the configured periodic interval are ignored. For example, if a port is a MASTER at time X, and changes to DISABLED and then back to MASTER by the time X+periodic-interval occurs, then no notification is generated for the intervening events.</li> <li>• <b>enable:</b> Port state change notifications are sent at the configured interval, irrespective of a change in the port state.</li> </ul> </li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>interval immediate</b>: A port State Change Notification is sent when the state changes.</li> </ul>
<b>Step 4</b>	<p>[ no ] <b>ptp notification type high-correction</b> [ interval { seconds [ periodic-notification { disable   enable } ]   immediate } ]</p> <p><b>Example:</b></p> <pre>switch(config)# ptp notification type high-correction interval immediate switch(config)#</pre>	<p>Configures the system to send a high-correction notification if a PTP high correction event occurs. A high correction event is when the correction exceeds the value that is configured in the <b>ptp correction-range</b> command (see the following optional step).</p> <ul style="list-style-type: none"> <li>• <b>interval seconds</b>: High-correction notifications are sent at the configured interval: 1–300 seconds with a granularity of 1 second. <ul style="list-style-type: none"> <li>• <b>periodic-notification</b>: Determines if periodic notifications are sent even if any high correction has not occurred during the configured interval.</li> <li><b>disable</b>: Send a notification only if high correction events occurred during the configured periodic interval. This is the default setting.</li> <li><b>enable</b>: Send a notifications irrespective of the number of high correction events during the configured periodic interval. If there are no such events, the payload indicates zero high correction events during the periodic interval.</li> </ul> </li> <li>• <b>interval immediate</b>: Send a notification as soon as a high correction event occurs.</li> </ul> <p>The high correction notification contains the following attributes:</p> <ul style="list-style-type: none"> <li>• highCorrectionCount</li> <li>• lastHighCorrectionTime</li> <li>• lastHighCorrectionValue</li> <li>• lastHighCorrectionMPD</li> <li>• maxHighCorrectionTime</li> <li>• maxHighCorrectionValue</li> <li>• maxHighCorrectionMPD</li> </ul>
<b>Step 5</b>	<p>(Optional) [ no ] <b>ptp correction-range</b> { nanoseconds   logging }</p> <p><b>Example:</b></p> <pre>switch(config)# ptp correction-range 200000 switch(config)#</pre>	<p>Configures a threshold that, once exceeded, indicates that a PTP high correction has occurred. Range is 10–1000000000. The default is 100000 (100 microseconds).</p>

## PTP Mixed Mode

PTP supports Mixed mode for delivering PTP messages, which is detected automatically by Cisco Nexus device, based on the type of **delay\_req** message received from connected client and no configuration is required. In this mode when slave sends **delay\_req** in unicast message, master also replies with unicast **delay\_resp** message.

## Configure PTP Interface to Stay in Master State

This procedure describes how to prevent an endpoint from causing a port to transition to a slave state.

### Before you begin

- Make sure that you have globally enabled PTP on the switch and configured the source IP address for PTP communication.
- After you globally enable PTP, it is not enabled on all supported interfaces by default. You must enable PTP interfaces individually.

### SUMMARY STEPS

1. switch # **configure terminal**
2. switch(config) # **interface ethernet slot/port**
3. switch(config-if) # **ptp**
4. switch(config-if) # **ptp multicast master-only**
5. **ptp role master**

### DETAILED STEPS

Procedure		
	Command or Action	Purpose
<b>Step 1</b>	switch # <b>configure terminal</b>	Enters global configuration mode.
<b>Step 2</b>	switch(config) # <b>interface ethernet slot/port</b>	Specifies the interface on which you are enabling PTP and enters interface configuration mode.
<b>Step 3</b>	switch(config-if) # <b>ptp</b>	Enables or disables PTP on an interface.  <b>Note</b> After configuring this command, for Cisco NX-OS Release 9.3(5) and later, skip to step 5. For Cisco NX-OS Release 9.3(4) and earlier, continue with step 4.
<b>Step 4</b>	switch(config-if) # <b>ptp multicast master-only</b>	Configures the port to maintain the master state.  <b>Note</b> This command is supported in Cisco NX-OS Release 9.3(4) and earlier. It is deprecated in Cisco NX-OS Release 9.3(5) and later.

	Command or Action	Purpose
		For Cisco NX-OS Release 9.3(4) and earlier, this concludes the procedure.
<b>Step 5</b>	<b>ptp role master</b>	Configures the port to maintain the master state.  <b>Note</b> This command is supported beginning with Cisco NX-OS Release 9.3(5).

### Example

This example shows how to configure PTP on an interface and configure the interface to maintain the Master state:

```
switch(config)# show ptp brief

PTP port status
-----
Port                State
-----
Eth1/1              Slave
switch(config)# interface ethernet 1/1
switch(config-if)# ptp multicast master-only
2001 Jan  7 07:50:03 A3-MTC-CR-1 %$ VDC-1 %$ %PTP-2-PTP_GM_CHANGE: Grandmaster clock has changed
from 60:73:5c:ff:fe:62:a1:41 to 58:97:bd:ff:fe:0d:54:01 for the PTP protocol
2001 Jan  7 07:50:03 A3-MTC-CR-1 %$ VDC-1 %$ %PTP-2-PTP_STATE_CHANGE: Interface Eth1/1 change from
PTP_BMC_STATE_SLAVE to PTP_BMC_STATE_PRE_MASTER
2001 Jan  7 07:50:03 A3-MTC-CR-1 %$ VDC-1 %$ %PTP-2-PTP_TIMESYNC_LOST: Lost sync with master clock
2001 Jan  7 07:50:07 A3-MTC-CR-1 %$ VDC-1 %$ %PTP-2-PTP_STATE_CHANGE: Interface Eth1/1 change from
PTP_BMC_STATE_PRE_MASTER to PTP_BMC_STATE_MASTER
```

## Enable PTP Unicast-Negotiation

Enabling PTP unicast transmission is a pre-requisite for using unicast-negotiation.

Beginning with Cisco NX-OS 10.2(1)F release, the following are the newly added CLIs:

### SUMMARY STEPS

1. **switch (config-ptp-ucast-negotiation)# schema <schema-name>**
2. (Optional) **switch (config-ptp-ucast-nego-schema)# announce interval <log-seconds>**
3. (Optional) **switch (config-ptp-ucast-nego-schema)# sync interval <log-seconds>**
4. **switch (config-ptp-ucast-nego-schema)# delay-response interval <log-seconds>**
5. **switch (config-ptp-ucast-nego-schema)# announce duration <seconds> [renew-offset <seconds>]**
6. **switch (config-ptp-ucast-nego-schema)# sync duration <seconds> [renew-offset <seconds>]**
7. **switch (config-ptp-ucast-nego-schema)# delay response duration <seconds> [renew-offset <seconds>]**
8. **switch (config-ptp-ucast-nego-schema)# announce interval range <minimum-log-val> <maximum-log-val>**

9. **switch (config-ptp-ucast-nego-schema)# sync interval range** *<minimum-log-val>* *<maximum-log-val>*
10. **switch (config-ptp-ucast-nego-schema)# delay-response interval range** *<minimum-log-val>* *<maximum-log-val>*
11. **switch (config-ptp-ucast-nego-schema)# announce duration range** *<minimum-seconds>* *<maximum-seconds>*
12. **switch (config-ptp-ucast-nego-schema)# sync duration range** *<minimum-seconds>* *<maximum-seconds>*
13. **switch (config-ptp-ucast-nego-schema)# delay-response duration range** *<minimum-seconds>* *<maximum-seconds>*
14. **show ptp unicast-negotiation** [*interface ethernet slot/port*]

## DETAILED STEPS

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>switch (config-ptp-ucast-negotiation)# schema</b> <i>&lt;schema-name&gt;</i>	A default schema will be created when unicast-negotiation is enabled and will be applied to all interfaces that have PTP-unicast enabled and to the master IPs currently configured.  Schema name can be any string up to 31 characters.
<b>Step 2</b>	(Optional) <b>switch (config-ptp-ucast-nego-schema)# announce interval</b> <i>&lt;log-seconds&gt;</i>	Configures the interval between PTP announce messages.  The range varies from -3 to 0.  Default value is -1.
<b>Step 3</b>	(Optional) <b>switch (config-ptp-ucast-nego-schema)# sync interval</b> <i>&lt;log-seconds&gt;</i>	Configures the interval between PTP synchronization messages.  The range varies from -4 to 0.  Default value is -3.
<b>Step 4</b>	<b>switch (config-ptp-ucast-nego-schema)# delay-response interval</b> <i>&lt;log-seconds&gt;</i>	Configures the interval allowed between PTP delay messages when the port is in master state.  The range varies from -4 to 0.  Default value is -2.
<b>Step 5</b>	<b>switch (config-ptp-ucast-nego-schema)# announce duration</b> <i>&lt;seconds&gt;</i> [ <b>renew-offset</b> <i>&lt;seconds&gt;</i> ]	(Optional) Configures duration of announce session.  <b>renew-offset&lt;seconds&gt;</b> :  This can be used to set how soon the slave sends renewal request for the session. Default value is 10 which means, it will send renewal request 10 seconds before expiry of session (granted duration).  The range is 60 to 1000.  Default value is 300.

	Command or Action	Purpose
<b>Step 6</b>	<b>switch (config-ptp-ucast-nego-schema)# sync duration</b> <i>&lt;seconds&gt;</i> [ <b>renew-offset</b> <i>&lt;seconds&gt;</i> ]	(Optional) Configures duration of sync session.  <b>renew-offset</b> <i>&lt;seconds&gt;</i> :  This can be used to set how soon the slave sends renewal request for the session. Default value is 10 which means, it will send renewal request 10 seconds before expiry of session (granted duration).  The range is 60 to 1000.  Default value is 300.
<b>Step 7</b>	<b>switch (config-ptp-ucast-nego-schema)# delay response duration</b> <i>&lt;seconds&gt;</i> [ <b>renew-offset</b> <i>&lt;seconds&gt;</i> ]	(Optional) Configures duration of delay-response session.  <b>renew-offset</b> <i>&lt;seconds&gt;</i> :  This can be used to set how soon the slave sends renewal request for the session. Default value is 10 which means, it will send renewal request 10 seconds before expiry of session (granted duration).  The range is 60 to 1000.  Default value is 300.
<b>Step 8</b>	<b>switch (config-ptp-ucast-nego-schema)# announce interval range</b> <i>&lt;minimum-log-val&gt;</i> <i>&lt;maximum-log-val&gt;</i>	(Optional) Configures acceptable range of values for announce interval requests from slave.  Default for minimum-log-val is -3. Default for maximum-log-val is 0.
<b>Step 9</b>	<b>switch (config-ptp-ucast-nego-schema)# sync interval range</b> <i>&lt;minimum-log-val&gt;</i> <i>&lt;maximum-log-val&gt;</i>	(Optional) Configures acceptable range of values for sync interval requests from slave.  Default for minimum-log-val is -4. Default for maximum-log-val is 0.
<b>Step 10</b>	<b>switch (config-ptp-ucast-nego-schema)# delay-response interval range</b> <i>&lt;minimum-log-val&gt;</i> <i>&lt;maximum-log-val&gt;</i>	(Optional) Configures acceptable range of values for delay-response interval requests from slave.  Default for minimum-log-val is -4. Default for maximum-log-val is 0.
<b>Step 11</b>	<b>switch (config-ptp-ucast-nego-schema)# announce duration range</b> <i>&lt;minimum-seconds&gt;</i> <i>&lt;maximum-seconds&gt;</i>	(Optional) Configures acceptable range of values for announce session duration requests from slave.  Default for minimum-seconds is 60.  Default for maximum-seconds is 1000.
<b>Step 12</b>	<b>switch (config-ptp-ucast-nego-schema)# sync duration range</b> <i>&lt;minimum-seconds&gt;</i> <i>&lt;maximum-seconds&gt;</i>	(Optional) Configures acceptable range of values for sync session duration requests from slave.  Default for minimum-seconds is 60.  Default for maximum-seconds is 1000.

	Command or Action	Purpose
Step 13	<b>switch (config-ptp-ucast-nego-schema)# delay-response duration range</b> <minimum-seconds> <maximum-seconds>	(Optional) Configures acceptable range of values for delay-response session duration requests from slave.  Default for minimum-seconds is 60.  Default for maximum-seconds is 1000.
Step 14	<b>show ptp unicast-negotiation</b> [interface ethernet slot/port]	Shows the status of unicast-negotiation.

## Enhanced Multicast Scale

This feature is to be used only in specific deployment scenarios where higher scaling of PTP multicast secondary devices is required even though the ability to debug is very limited.

This feature has the following limitations:

- The high scale in the number of PTP slaves implies very high PTP control packet rate. As a result, copp rate needs to be increased appropriately. For more information about Configuring Control Plane Policing, refer to the appropriate version of the *Cisco Nexus 9000 Series NX-OS Security Configuration Guide* on [cisco.com](http://cisco.com).
- PTP debugs should be completely disabled using the **no ptp debug all** command, along with various internal logs, for example, PTP internal syslogs. As a result, ability to debug issues will be very limited.
- We recommend that PTP secondary port should not share hardware MAC (port fifo) with any of the scaled PTP primary ports. Additionally, not more than 2 primary ports should be enabled per hardware MAC. The hardware MAC for ports on any given switch can be checked using the following command:  
  
**show interface hardware-mappings**
- In rare occasions, the corrections can spike to the milliseconds range.

Perform the following command to enable the scaling of PTP multicast secondary devices:

**ptp enhanced-client-scale**

To view the status of the above command, run the following command:

switch# **show run ptp | grep enhanced**

## Timestamp Tagging

The timestamp tagging feature provides precision time information to track in real time when packets arrive at remote devices. Packets are truncated and timestamped using PTP with nanosecond accuracy. Using the TAP aggregation functionality on the switch, along with the Cisco Nexus Data Broker, you can copy the network traffic using SPAN, filter and timestamp the traffic, and send it for recording and analysis.

If you configure **ttag** on an interface, all incoming traffic will be tagged. If you configure **ttag-strip** on an interface all outgoing traffic with ttag will be removed.

## Configure Timestamp Tagging


**Note**

Configuring timestamp tagging is not supported on Cisco Nexus 9508 switches with 9636C-R, 9636C-RX, and 9636Q-R line cards.


**Note**

- When you use the ttag feature in a VXLAN EVPN multisite deployment, make sure that the ttag is stripped (**ttag-strip**) on BGW's DCI interfaces that connect to the cloud. To elaborate, if the ttag is attached to non-Nexus 9000 devices that do not support ether-type 0x8905, stripping of ttag is required. If no stripping is done, the non-Nexus devices will drop the packet.
- BGW back-to-back model of DCI does not require ttag stripping.
- For Cloudscale platforms, if a packet is received with a TTAG header (ethertype 0x8905), it will be preserved, unless **ttag-strip** is configured on the outgoing interface. After switching or routing, the packet egressing the switch will also have a TTAG header. For this to happen, the switch does not need to have any PTP or TTAG-related configuration. If the next hop would be a non-Cloudscale platform, such as a Catalyst switch - it might not recognize ether-type 0x8905, and could drop the packet.
- Cisco Nexus 9800 switches do not support routing of ether-type 0x8905 packets.

**Before you begin**

Make sure that you have globally enabled PTP offloading.

**SUMMARY STEPS**

1. **configure terminal**
2. **interface type slot/port**
3. **[no] ttag**

**DETAILED STEPS**
**Procedure**

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>interface type slot/port</b>  <b>Example:</b> <pre>switch(config)# interface ethernet 2/2 switch(config-if)#</pre>	Enters interface configuration mode for the specified interface.



	Command or Action	Purpose
Step 3	<b>[no] ttag</b>  <b>Example:</b> <pre>switch(config-if)# ttag</pre>	Configures timestamp tagging on the Layer 2 or Layer 3 egress interface. This is required on the ingress port for the traffic that needs to be tagged when egressing the switch. This is not required on the egress port.

## Configure TTAG Marker Packets and Time Interval

The ttag timestamp field attaches a 48-bit timestamp on the marker packet. This 48-bit timestamp is not a human familiar ASCII based timestamp. To make this 48-bit timestamp human readable, the ttag marker packet can be used to provide additional information to decode the 48-bit timestamp information.

Field	Position (byte:bit)	Length	Definition
Magic		16	By default, this field displays A6A6. This enables to identify ttag-marker packets on the packet stream.
Version		8	Version number. The default version is 1.
Granularity		16	This field represents the granularity of the 48-bit timestamp size. By default, the value is 04, which is 100 picoseconds or 0.1. nanoseconds.
UTc_offset		8	The utc_offset between the ASIC and the UTC clocks. The default value is 0.
Timestamp_hi		32	The high 16-bit of 48- bit ASIC hardware timestamp.  <b>Note</b> Add Correction_hi and Correction_lo to Timestamp_hi and Timestamp_lo fields to get the 64-bit ASIC hardware timestamp.
Timestamp_lo		32	The low 32-bit of 48- bit ASIC hardware timestamp.  <b>Note</b> Add Correction_hi and Correction_lo to Timestamp_hi and Timestamp_lo fields to get the 64-bit ASIC hardware timestamp.
UTC sec		32	The seconds part of UTC timestamp from the CPU clock of the Cisco Nexus 9000 Series switch.

UTC nsec		32	The nanoseconds part of UTC timestamp from the CPU clock of the Cisco Nexus 9000 Series switch.
Reserved		32	Reserved for future use.
Correction_hi		32	The high 32-bit of cumulative PTP correction on the Cisco Nexus 9000 Series switch.  <b>Note</b> Add Correction_hi and Correction_lo to Timestamp_hi and Timestamp_lo fields to get the 64-bit ASIC hardware timestamp.
Correction_lo		32	The low 32-bit of cumulative PTP correction on the Cisco Nexus 9000 Series switch.  <b>Note</b> Add Correction_hi and Correction_lo to Timestamp_hi and Timestamp_lo fields to get the 64-bit ASIC hardware timestamp.
Signature		32	The default value is 0xA5A5A5A5. This allows a forward search of marker packet and provide references to the UTC timestamp, so the client software can use that reference UTC to recover the 32-bit hardware timestamp in each packet header.
Pad		8 64	This is align byte to convert the ttag-marker align to 4 byte boundary.

**Before you begin**

Make sure that you have globally enabled PTP offloading.

**SUMMARY STEPS**

1. **configure terminal**
2. **ttag-marker-interval** *seconds*
3. **interface** *type slot/port*
4. **[no] ttag-marker enable**
5. **ttag-strip**

## DETAILED STEPS

## Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
<b>Step 2</b>	<b>ttag-marker-interval</b> <i>seconds</i>  <b>Example:</b> switch(config-if)# ttag-marker-interval 90	Configures the seconds that a switch will take to send a ttag-marker packet to the outgoing ports. This is a global setting to the switch. By default, it sends a ttag-marker packet every 60 seconds. The range for seconds is from 1 to 25200.
<b>Step 3</b>	<b>interface</b> <i>type slot/port</i>  <b>Example:</b> switch(config)# interface ethernet 2/2 switch(config-if)#	Enters interface configuration mode for the specified interface.
<b>Step 4</b>	<b>[no] ttag-marker enable</b>  <b>Example:</b> switch(config-if)# ttag-marker enable	Sends the ttag-marker packets to the outgoing port.
<b>Step 5</b>	<b>ttag-strip</b>  <b>Example:</b> switch(config-if)# ttag-strip	Removes TTAG from egress packets on the interface.

## Verify PTP Configuration

Use one of the following commands to verify the configuration:

**Table 5: PTP Show Commands**

Command	Purpose
<b>show ptp brief</b>	Displays the PTP status.
<b>show ptp clock</b>	Displays the properties of the local clock, including clock identity.
<b>show ptp clock foreign-masters-record</b>	Displays the state of foreign masters known to the PTP process. For each foreign master, the output displays the clock identity, basic clock properties, and whether the clock is being used as a grandmaster.
<b>show ptp corrections</b>	Displays the last few PTP corrections.

Command	Purpose
<b>show ptp counters</b> [all   interface ethernet <i>slot/port</i> ]	Displays the PTP packet counters for all interfaces or for a specified interface.
<b>show ptp parent</b>	Displays the properties of the PTP parent.
<b>show ptp port interface ethernet</b> <i>slot/port</i>	Displays the status of the PTP port on the switch.
<b>show ptp time-property</b>	Displays the PTP clock properties.
<b>show running-config ptp</b> [all]	Displays the running configuration for PTP.
<b>clear ptp counters</b> [all   interface ethernet <i>slot/port</i> ]	Clears all PTP messages that are received and transmitted on a specific interface or on all interfaces that has PTP enabled.
<b>show ptp detail</b>	Displays the list of all connected peers for each PTP port and indicates whether the role is static or dynamic.

## Verify PTP Telecom Profile Configuration

After performing the PTP telecom profile configuration tasks, use this reference to verify the configuration.

### show running-config ptp all

The output of this command displays global and interface configurations for PTP telecom profile.

The following is an example of the output of the **show running-config ptp all** command:

```
switch# show running-config ptp all
!Command: show running-config ptp all
!Running configuration last done at: Fri Feb 21 20:09:55 2020
!Time: Fri Feb 21 21:10:19 2020

version 9.3(5) Bios:version 01.00
feature ptp

ptp profile 8275-1
  mode hybrid
ptp source 0.0.0.0
ptp device-type boundary-clock
ptp priority1 128
ptp priority2 10
ptp pdelay-req-interval 0
no ptp notification type parent-change
no ptp notification type gm-change
no ptp notification type high-correction
no ptp notification type port-state-change
ptp correction-range 100000
no ptp correction-range logging
ptp management
ptp mean-path-delay 1000000000
ptp domain 24
ttag-marker-interval 60
```

```

interface Ethernet1/1
    ptp
    no ptp profile-override
    ptp destination-mac non-forwardable rx-no-match accept
    ptp transport ethernet
    ptp transmission multicast
    ptp role dynamic
    ptp cost 128
    ptp delay-request minimum interval -4
    ptp announce interval -3
    ptp sync interval -4
    ptp announce timeout 3

interface Ethernet1/6
    ptp
    no ptp profile-override
    ptp destination-mac non-forwardable rx-no-match accept
    ptp transport ethernet
    ptp transmission multicast
    ptp role dynamic
    ptp cost 128
    ptp delay-request minimum interval -4
    ptp announce interval -3
    ptp sync interval -4
    ptp announce timeout 3

interface Ethernet1/7
    ptp
    no ptp profile-override
    ptp destination-mac non-forwardable rx-no-match accept
    ptp transport ethernet
    ptp transmission multicast
    ptp role dynamic
    ptp cost 128
    ptp delay-request minimum interval -4
    ptp announce interval -3
    ptp sync interval -4
    ptp announce timeout 3

interface Ethernet1/8
    ptp
    no ptp profile-override
    ptp destination-mac non-forwardable rx-no-match accept
    ptp transport ethernet
    ptp transmission multicast
    ptp role dynamic
    ptp cost 128
    ptp delay-request minimum interval -4
    ptp announce interval -3
    ptp sync interval -4
    ptp announce timeout 3

```




---

**Note** The output of the **show running-config ptp all** command displays a complete list of all the PTP configured interfaces.

---

### show ptp parent

The output of this command displays the properties of a PTP parent.

The following is an example of the output of the **show ptp parent** command:

```

switch# show ptp parent
PTP PARENT PROPERTIES

Parent Clock:
Parent Clock Identity: 10:b3:d6:ff:fe:bf:a8:63
Parent Port Number: 0
Observed Parent Offset (log variance): N/A
Observed Parent Clock Phase Change Rate: N/A

Grandmaster Clock:
Grandmaster Clock Identity: 10:b3:d6:ff:fe:bf:a8:63
Grandmaster Clock Quality:
    Class: 248
    Accuracy: 254
    Offset (log variance): 65535
    Priority1: 128
    Priority2: 10

```

### show ptp corrections

The output of this command displays up to the last 2000 correction details for each PTP slave port.

The following is an example of the output of the **show ptp corrections** command:

```

switch# show ptp corrections
PTP past corrections
-----
Slave Port      SUP Time          Correction(ns)    MeanPath Delay(ns)
-----
Eth1/3          Thu Feb 20 22:51:02 2020 861523           4             260
Eth1/3          Thu Feb 20 22:51:02 2020 735961           4             260
Eth1/3          Thu Feb 20 22:51:02 2020 610170           4             268
Eth1/3          Thu Feb 20 22:51:02 2020 483106           0             280
Eth1/3          Thu Feb 20 22:51:02 2020 355745           0             280
Eth1/3          Thu Feb 20 22:51:02 2020 229924          -4             268
Eth1/3          Thu Feb 20 22:51:02 2020 104819          -4             268
Eth1/3          Thu Feb 20 22:51:01 2020 979604           8             272

```

### show ptp clock

The output of this command displays the properties of the local clock, including clock identity.

The following is an example of the output of the **show ptp clock** command:

```

switch# show ptp clock
PTP Device Type : boundary-clock
PTP Device Encapsulation : NA
PTP Source IP Address : 0.0.0.0
Clock Identity : 10:b3:d6:ff:fe:bf:a8:63
Clock Domain: 24
Slave Clock Operation : Unknown
Master Clock Operation : Two-step
Slave-Only Clock Mode : Disabled
Number of PTP ports: 35
Priority1 : 128
Priority2 : 10
Clock Quality:
    Class : 248
    Accuracy : 254
    Offset (log variance) : 65535
Offset From Master : 0
Mean Path Delay : 0
Steps removed : 0
Correction range : 100000

```

```
MPD range : 1000000000
Local clock time : Wed Feb 26 17:08:34 2020
Hardware frequency correction : NA
PTP Clock state           : Free-Run
```

### show ptp brief

The output of this command displays the PTP clock state for each configured port.

The following is an example of the output of the **show ptp brief** command:

```
switch# show ptp brief
PTP port status
-----
Port                State
-----
Eth1/1              Slave
Eth1/6              Disabled
Eth1/7              Disabled
Eth1/8              Disabled
Eth1/10             Master
Eth1/11             Disabled
Eth1/12             Disabled
Eth1/13             Master
Eth1/14             Disabled
Eth1/15             Disabled
Eth1/16             Disabled
Eth1/17             Disabled
Eth1/18             Disabled
Eth1/19             Disabled
Eth1/20             Disabled
Eth1/21             Disabled
Eth1/22             Disabled
Eth1/23             Disabled
Eth1/24             Disabled
Eth1/25             Disabled
Eth1/26             Disabled
Eth1/27             Disabled
Eth1/28             Disabled
Eth1/29             Disabled
Eth1/30             Disabled
Eth1/31             Disabled
Eth1/32             Disabled
Eth1/33             Disabled
Eth1/34             Disabled
Eth1/35             Disabled
Eth1/36             Disabled
Eth1/37             Disabled
Eth1/38             Disabled
Eth1/39             Disabled
Eth1/40             Disabled
```

### show ptp clock foreign-masters record

The output of this command displays the state of foreign masters known to the PTP process. For each foreign master, the output displays the clock identity, basic clock properties, and whether the clock is being used as a grandmaster..

The following is an example of the output of the **show ptp clock foreign-master-record** command:

```
switch# show ptp port status
P1=Priority1, P2=Priority2, C=Class, A=Accuracy,
OSLV=Offset-Scaled-Log-Variance, SR=Steps-Removed
```

```
GM=Is grandmaster
```

Interface	Clock-ID	P1	P2	C	A	OSLV	SR
Eth1/1	00:00:00:00:00:00:00:01	128	128	6	33	65535	0 GM

### show ptp detail

The output of this command displays the list of all connected peers for each PTP port and indicates whether the role is static or dynamic.

```
switch(config-if)# show ptp detail
```

```
PTP port details:
```

```
Flags: (S) Static, (D) Dynamic
```

```
Connected Peer details: IP clock-id
```

Port	State	Transmission	Transport	Flags
Eth1/27/1	Slave	Unicast	IPV4	(S)
Connected Peers:				
10.10.1.36		00:fd:22:ff:fe:8d:1a:a5-0x1901		
Eth1/27/2	Passive	Unicast	IPV4	(D)
Connected Peers:				
10.10.2.36		00:00:00:00:00:00:00:00-0x0		
Eth1/27/3	Master	Multicast	IPV4	(D)
Connected Peers:				

## Configuration Examples

This example shows how to configure PTP globally on the device, specify the source IP address for PTP communications, and configure a preference level for the clock:

```
switch# configure terminal
switch(config)# feature ptp
switch(config)# ptp source 10.10.10.1
switch(config)# ptp priority1 1
switch(config)# ptp priority2 1
switch(config)# show ptp brief
PTP port status
-----
Port State
-----
switch(config)# show ptp clock
PTP Device Type: Boundary clock
Clock Identity : 0:22:55:ff:ff:79:a4:c1
Clock Domain: 0
Number of PTP ports: 0
Priority1 : 1
Priority2 : 1
Clock Quality:
  Class : 248
  Accuracy : 254
  Offset (log variance) : 65535
Offset From Master : 0
Mean Path Delay : 0
Steps removed : 0
```



Local clock time: Mon Dec 22 14:13:24 2014

This example shows how to configure PTP on an interface and configure the intervals for the announce, delay-request, and synchronization messages:

```
switch# configure terminal
switch(config)# interface Ethernet 1/1
switch(config-if)# ptp
switch(config-if)# ptp announce interval 3
switch(config-if)# ptp announce timeout 2
switch(config-if)# ptp delay-request minimum interval smpte-2059-2 -3
switch(config-if)# ptp sync interval smpte-2059-2 -3
switch(config-if)# no shutdown
switch(config-if)# show ptp brief
PTP port status
-----
Port State
-----
Eth2/1 Master
switch(config-if)# show ptp port interface ethernet 2/1
PTP Port Dataset: Eth2/1
Port identity: clock identity: 0:22:55:ff:ff:79:a4:c1
Port identity: port number: 1028
PTP version: 2
Port state: Master
Delay request interval(log mean): 4
Announce receipt time out: 2
Peer mean path delay: 0
Announce interval(log mean): 3
Sync interval(log mean): 1
Delay Mechanism: End to End
Peer delay request interval(log mean): 0
```

This example shows how to configure master/slave role and assign corresponding peer slave/master IP addresses.

For Cisco NX-OS Release 9.3(5) and later:

```
switch# configure terminal
switch(config)# interface ethernet 1/1
switch(config-if)# ptp
switch(config-if)# ptp transmission unicast
switch(config-if)# ptp role master
switch(config-if)# ptp slave 10.1.1.2
switch(config-if)# ptp ucast-source 11.0.0.1
switch(config-if)# ip address 11.0.0.1/24
switch(config-if)# no shutdown
```

```
switch# configure terminal
switch(config)# interface ethernet 1/1
switch(config-if)# ptp
switch(config-if)# ptp transmission unicast
switch(config-if)# ptp role slave
switch(config-if)# ptp master 10.1.1.2
switch(config-if)# ptp ucast-source 11.0.0.1
switch(config-if)# ip address 11.0.0.1/24
switch(config-if)# no shutdown
```

For Cisco NX-OS Release 9.3(4) and earlier:

```
switch-1(config)# interface ethernet 1/1
switch-1(config-if)# ptp transport ipv4 ucast master
```

```

switch-1(config-if-ptp-master)# slave ipv4 1.2.3.1
switch-1(config-if-ptp-master)# slave ipv4 1.2.3.2
switch-1(config-if-ptp-master)# slave ipv4 1.2.3.3
switch-1(config-if-ptp-master)# slave ipv4 1.2.3.4
switch-1(config-if-ptp-master)#

switch-1(config-if)# ptp transport ipv4 ucast slave
switch-1(config-if-ptp-slave)# master ipv4 4.4.4.1
switch-1(config-if-ptp-slave)# master ipv4 4.4.4.2
switch-1(config-if-ptp-slave)# master ipv4 4.4.4.3

switch-1(config-if-ptp-slave)# ptp ucast-source 9.9.9.9

switch-1(config-if)# sh running-config ptp

!Command: show running-config ptp
!Time: Tue Feb  7 17:37:09 2017

version 7.0(3)I4(6)
feature ptp

ptp source 1.1.1.1

interface Ethernet1/1
 ptp transport ipv4 ucast master
  slave ipv4 1.2.3.1
  slave ipv4 1.2.3.2
  slave ipv4 1.2.3.3
  slave ipv4 1.2.3.4

interface Ethernet1/2
 ptp transport ipv4 ucast slave
  master ipv4 4.4.4.1
  master ipv4 4.4.4.2
  master ipv4 4.4.4.3
 ptp ucast-source 9.9.9.9

switch-1(config-if)#

```

This example shows how to configure PTP in clock operation mode with master or slave ports.

```

PLTFM-A(config)# show ptp clock
PTP Device Type : boundary-clock
PTP Device Encapsulation : layer-3
PTP Source IP Address : 1.1.1.1
Clock Identity : 74:26:ac:ff:fe:fd:de:ff
Clock Domain: 0
Slave Clock Operation : One-step
Master Clock Operation : One-step
Slave-Only Clock Mode : Disabled
Number of PTP ports: 142
Priority1 : 200
Priority2 : 200
Clock Quality:
  Class : 248
  Accuracy : 254
  Offset (log variance) : 65535
Offset From Master : -32
Mean Path Delay : 105
Steps removed : 1

```

Correction range : 200  
MPD range : 100  
Local clock time : Wed Jul 3 18:57:23 2019  
Hardware frequency correction : NA

## Additional References

### Related Documents

Related Topic	Document Title
1588 IEEE	<a href="#">1588 IEEE standards</a>

