



## FCoE Over FEX

---

- [Overview, on page 1](#)
- [Guidelines and Limitations for FCoE Over FEX, on page 4](#)
- [Information Before Configuring FCoE Over FEX , on page 5](#)
- [Configuring FCoE Over FEX, on page 6](#)

## Overview

The Fibre Channel over Ethernet (FCoE) over Fabric Extenders (FEX) feature allows Fibre Channel traffic to be carried on a FEX port. The FEX is connected to a Cisco Nexus 9000 device that is in FCoE NPV mode through a Fabric Port Channel (FPC). FCoE over FEX enables the provisioning of FCoE on host connections.

For more information about FEX, see the *Cisco Nexus 2000 Series NX-OS Fabric Extender Configuration Guide for Cisco Nexus 9000 Series Switches*.

## FCoE Over FEX with vPC

FCoE over FEX with virtual Port Channel (vPC) allows Fibre Channel traffic to be carried over a FEX using a virtual Port Channel (vPC).

## LAN Shutdown

The LAN shutdown feature detects the capability of the FCoE host to support Data Center Bridging (DCBX). DCBX allows the switch to send the LAN Logical Link status (LLS) messages in a type-length-value (TLV) format. The LAN shutdown feature enables bring up and bring down of LAN links on a unified link carrying both FCoE and LAN traffic. When you use the **shutdown lan** command, only the LAN traffic stops while the FCoE traffic continues.


The **shutdown lan** command is supported for FEX HIF ports and port-channels.

## FCoE Over FEX Topologies

FCoE over FEX is supported in the following topologies:


## Straight Through FEX with Host Topology

The straight through FEX with host topology is supported with Cisco NX-OS Release 9.3(3) and later.

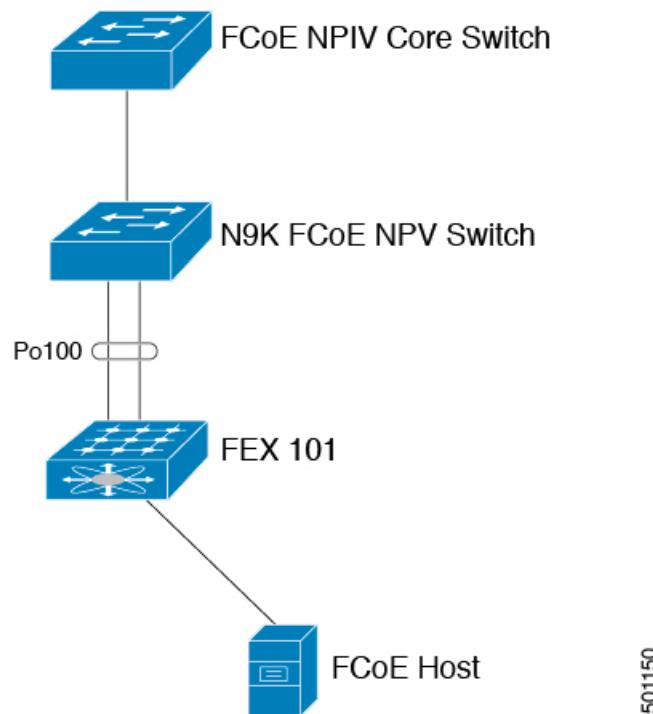

## Straight Through FEX with Host VPC Topology

The straight through FEX with host VPC topology is supported with Cisco NX-OS Release 9.3(3) and later.

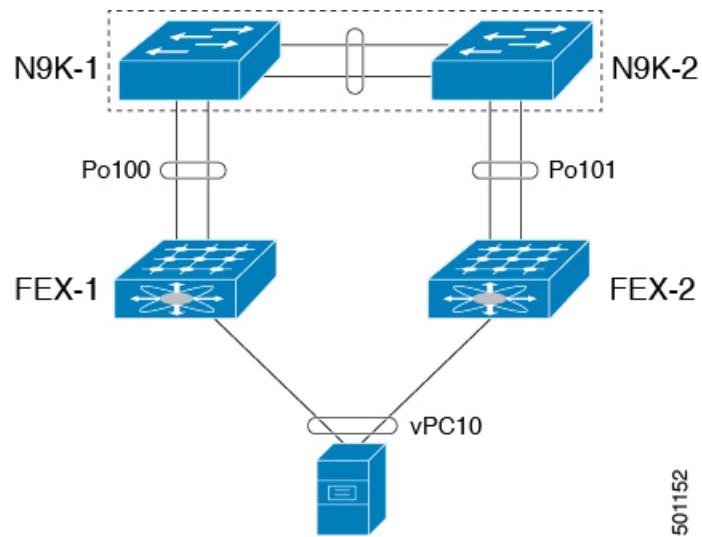

## Dual-Homed FEX Topology (Active/Active FEX Topology)


The dual-homed FEX topology is supported with Cisco NX-OS Release 9.3(3) and later with Cisco Nexus 9300-EX and 9300-FX Series switches.

The following topology shows that each FEX is dual-homed with two Cisco Nexus 9000 Series switches. The FEX-fabric interfaces for each FEX are configured as a vPC on both peer switches. The host interfaces on the FEX appear on both peer switches.



**Note** The host interfaces configuration should be the same on both switches.

*Figure 1: Dual-Homed FEX Topology*

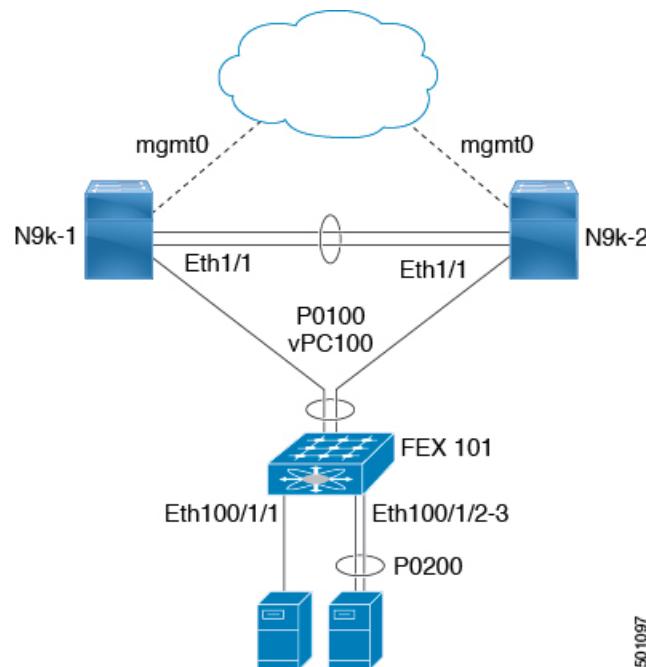

Operational vPC is mandatory for the dual-homed FEX topology. In the Dual-Homed FEX Active/Active Topology, the vPC is already operational. FEX 101 is dual-homed to both parent switches: N9k-1 and N9k-2 on FEX-fabric interfaces Ethernet 1/1.



**Note** Only the following support an active-active FEX topology:

- N2K-C2232PP
- N2K-C2348UPQ
- NB22IBM
- NB22HP

**Note**

A port channel within the same FEX is supported on Cisco Nexus 2200 Series Fabric Extenders.

## Guidelines and Limitations for FCoE Over FEX

- SAN boot via FEX HIF port is not supported on the following platforms when the HIF port is member of a port-channel and the channel mode is active:
  - N9K-C9332PQ
  - N9K-C9372PX
  - N9K-C9372PX-E
  - N9K-C9396PX
  - N9K-X9464PX line cards
  - N9K-X9564PX line cards
- In FEX AA configuration, if FCoE pinning is done on the secondary switch, the FCoE traffic is disrupted when the peer link is flapped.
- FCoE host connected to the FEX can login via both FC and FCoE NP uplinks in N9K-C93180YC-FX.
- If a traffic map is configured for HIF ports for Cisco Nexus 93180YC-FX switches, make sure that all the hosts in the same FEX are mapped to the same NP link. For other Cisco Nexus (older) switches, traffic maps for the FEX HIF ports work the same way as before.
- Any or all VSANs that are configured as port VSAN of HIFs should be allowed on all the NP links (external interfaces).
- N9K-C93180LC-EX supports FCoE over FEX only on the N2K-C2348UPQ. Other FEX models are not supported with this device.
- FEX HIF ports only support vFC in F mode. NP mode vFCs are not supported over FEX HIF ports.
- A Fabric Port Channel cannot exceed a maximum of eight member ports.
- 4q policies are supported on FCoE over FEX.
- 8q policies are not supported on FCoE over FEX.
- FC ports are not supported on FEX.

**Note**

For information about scalability, see the Cisco Nexus 9000 Series NX-OS Verified Scalability Guide.

# Information Before Configuring FCoE Over FEX

**Note**

This information is applicable only for Cisco Nexus 9500 switches and the following specific Cisco Nexus 9300 switches (not applicable to other Cisco Nexus 9000 switches):

- N9K-C93180LC-EX
- N9K-C9332PQ
- N9K-C9372PX
- N9K-C9372PX-E
- N9K-C9396PX

---

- Enable the Configuration

Using the **fcoe enable-fex** command results in disabling any load-balancing (based on SID, DID, OXID) on the switch.

The **fcoe enable-fex** command is needed for the FCOE host logins to work properly when connected to the FEX HIF ports. This command is supported and required only on the following Cisco Nexus 9000 FCoE NPVswitches: (N9K-C9332PQ, N9K-C9372PX-E, N9K-C9372PX, N9K-C9396PX, N9K-X9464PX line cards, and N9K-X9564PX line cards).

```
switch(config)# fcoe enable-fex  
Warning: Enabling FCoE over FEX may cause traffic drop. Continue [y/n]?
```

- Disable the Configuration

Using the **no fcoe enable-fex** command results in enabling any load-balancing (based on SID, DID, OXID) on the switch.

```
switch(config)# no fcoe enable-fex  
Warning: Enabling FCoE over FEX may cause traffic drop. Continue [y/n]?
```

# Configuring FCoE Over FEX

## Configuring Straight Through FEX with Host



**Note** Considerations for FEX Fabric Port Channel (FPC):

- Priority flow control (PFC) requires to be enabled explicitly for Pause to work.

```
interface "port-channel"
  priority-flow-control mode on
```

- If the switch is connected to a host that does not have DCBX support, PFC needs to be enabled explicitly on HIF interfaces.

```
interface "hif interface"
  priority-flow-control mode on
```

- The LLDP feature should be enabled on the switch with the **feature lldp** command.
- First attach the interfaces to the fex-fabric port-channel and then enable the priority-flow-control mode with the **priority-flow-control mode on** command.
- The **fcoe enable-fex** command is required for the FCoE host logins to work properly when connected to the FEX HIF ports. This command is supported and required only on the following Cisco Nexus 9000 series switches such as N9K-C9332PQ, N9K-C9372PX-E, N9K-C9372PX, N9K-C9396PX, N9K-X9464PX line cards, and N9K-X9564PX line cards.

### Before you begin

- Ensure configuration of FEX. For more information, see the *Cisco Nexus 2000 Series NX-OS Fabric Extender Configuration Guide for Cisco Nexus 9000 Series Switches*.
- Ensure the configuration of FCoE NPV. For more information, see the section: *Configuring FCoE NPV*.
- You must apply the QoS policy at the system (global) level and to the Host Interfaces (HIF's) to honor the pause frames in the FCoE traffic.

```
switch(config)# system qos
switch(config-sys-qos)# service-policy type queueing input policy-name
switch(config-sys-qos)# service-policy type queueing output policy-name
switch(config-sys-qos)# service-policy type network-qos policy-name
switch(config-sys-qos)# service-policy type qos input policy-name
```

### SUMMARY STEPS

1. **configure terminal**
2. **interface port-channel <port\_num>**
3. **switchport**

4. **switchport mode fex-fabric**
5. **fex associate <fex\_id>**
6. **mtu 9216**
7. **no shutdown**
8. **exit**
9. **interface ethernet slot/port**
10. **switchport**
11. **switchport mode fex-fabric**
12. **fex associate <fex\_id>**
13. **mtu 9216**
14. **channel-group <port\_number>**
15. **no shutdown**
16. **exit**
17. **interface ethernet chassis\_id/slot/port\_number**
18. **switchport mode trunk**
19. **service-policy type qos input fcoe**
20. **no shutdown**
21. **exit**

## DETAILED STEPS

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config) #</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>interface port-channel &lt;port_num&gt;</b> <b>Example:</b> <pre>switch(config)#interface port-channel 101</pre>	Creates port-channel and enters the interface configuration mode.
<b>Step 3</b>	<b>switchport</b> <b>Example:</b> <pre>switch(config-if)#switchport</pre>	Sets Layer 2 switching port.
<b>Step 4</b>	<b>switchport mode fex-fabric</b> <b>Example:</b> <pre>switch(config-if)#switchport mode fex-fabric</pre>	Sets the interface type to be a uplink port for a Fabric extender (FEX).
<b>Step 5</b>	<b>fex associate &lt;fex_id&gt;</b> <b>Example:</b> <pre>switch(config-if)#fex associate 101</pre>	Associates a Fabric Extender (FEX) to a Fabric interface.

## Configuring Straight Through FEX with Host

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 6</b>	<b>mtu 9216</b>  <b>Example:</b>  switch(config-if)#mtu 9216	Configures the MTU value to that of jumbo frames to carry FCoE traffic through the NIF ports.
<b>Step 7</b>	<b>no shutdown</b>  <b>Example:</b>  switch(config-if)#no shutdown	Sets the port-channel to up (administratively).
<b>Step 8</b>	<b>exit</b>  <b>Example:</b>  switch(config-if)#exit	Exits the interface configuration mode.
<b>Step 9</b>	<b>interface ethernet slot/port</b>  <b>Example:</b>  switch(config)#interface Ethernet1/1	Enters interface configuration mode.
<b>Step 10</b>	<b>switchport</b>  <b>Example:</b>  switch(config-if)#switchport	Sets Layer 2 switching port.
<b>Step 11</b>	<b>switchport mode fex-fabric</b>  <b>Example:</b>  switch(config-if)#switchport mode fex-fabric	Sets the interface type to be an uplink port for a fabric extender (FEX).
<b>Step 12</b>	<b>fex associate &lt;fex_id&gt;</b>  <b>Example:</b>  switch(config-if)#fex associate 101	Associates a Fabric Extender (FEX) to a Fabric interface.
<b>Step 13</b>	<b>mtu 9216</b>  <b>Example:</b>  switch(config-if)#mtu 9216	Configures the MTU value to that of jumbo frames to carry FCoE traffic through the NIF ports.
<b>Step 14</b>	<b>channel-group &lt;port_number&gt;</b>  <b>Example:</b>  switch(config-if) channel-group 101	Sets the Fabric interface a member of the Fabric port channel.
<b>Step 15</b>	<b>no shutdown</b>  <b>Example:</b>	Sets the port-channel to up (administratively).

	<b>Command or Action</b>	<b>Purpose</b>
	switch(config-if) #no shutdown	
<b>Step 16</b>	<b>exit</b> <b>Example:</b> <pre>switch(config-if) #exit</pre>	Exits the interface configuration mode.
<b>Step 17</b>	<b>interface ethernet chassis_id/slot/port_number</b> <b>Example:</b> <pre>switch(config) interface ethernet 101/1/1</pre>	Configures a FEX satellite interface or HIF (host interface) port and enters interface configuration mode.
<b>Step 18</b>	<b>switchport mode trunk</b> <b>Example:</b> <pre>switch(config-if) #switchport mode trunk</pre>	Sets interface type to be a trunk port.
<b>Step 19</b>	<b>service-policy type qos input fcoe</b> <b>Example:</b> <pre>switch(config-if) # service-policy type qos input fcoe</pre>	Sets the QoS policy on the HIF port channel to a no drop policy. <b>Note</b> For more information about queuing policy configurations, see the section: <i>Configuring QoS for no-drop support</i> .
<b>Step 20</b>	<b>no shutdown</b> <b>Example:</b> <pre>switch(config-if) #no shutdown</pre>	Sets the port-channel to up (administratively).
<b>Step 21</b>	<b>exit</b> <b>Example:</b> <pre>switch(config-if) #exit</pre>	Exits the interface configuration mode.

**Example**

The following is an example of FEX bring up in straight through mode with a host.

```
install feature-set fex
feature-set fex

fex 101
pinning max-links 1
description "2232PP-1"

interface port-channel101
switchport
switchport mode fex-fabric
fex associate 101
```

## Binding vFC to FEX Interface Explicitly

```

mtu 9216

interface Ethernet1/1
  switchport
  switchport mode fex-fabric
  fex associate 101
  mtu 9216
  channel-group 101
  no shutdown

interface Ethernet101/1/1
  switchport mode trunk
  service-policy type qos input fcoe-qo-policy
  no shutdown

```

# Binding vFC to FEX Interface Explicitly

## SUMMARY STEPS

1. **configure terminal**
2. **interface vfc < vfc-id>**
3. **bind interface ethernet [chassis-id/slot/port]**
4. **no shutdown**
5. **end**

## DETAILED STEPS

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b>  switch# configure terminal switch(config)#	Enters global configuration mode.
<b>Step 2</b>	<b>interface vfc &lt; vfc-id&gt;</b> <b>Example:</b>  N9k(config)# interface vfc 1	Creates a virtual Fibre Channel interface and enters the interface configuration mode. The chassis-id range is from 101 to 199.
<b>Step 3</b>	<b>bind interface ethernet [chassis-id/slot/port]</b> <b>Example:</b>  N9k(config-if)# bind interface ethernet101/1/1	Explicitly binds the virtual fibre channel interface to the specified interface. Use the <b>no</b> form of the command to unbind the interface. Chassis id range is from 101 to 199.
<b>Step 4</b>	<b>no shutdown</b> <b>Example:</b>  switch(config-if)#no shutdown	Brings up the interface (administratively).

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 5</b>	<b>end</b> <b>Example:</b> <pre>N9k(config-if)#end</pre>	Returns to exec mode.

**Example**

```
interface vfc1
  bind interface ethernet 101/1/1
  switchport trunk mode on
  no shutdown
```

## Binding VFC to FEX Interface Implicitly

### SUMMARY STEPS

1. **configure terminal**
2. **interface vfc <chassis-id>/<slot>/<port>**
3. **no shutdown**
4. **end**

### DETAILED STEPS

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config) #</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>interface vfc &lt;chassis-id&gt;/&lt;slot&gt;/&lt;port&gt;</b> <b>Example:</b> <pre>switch(config)# interface vfc 101/1/1</pre>	Creates a virtual fibre Channel Interface and enters interface configuration mode; implicitly binding it to the underlying Ethernet interface (ethernet chassis-id/slot/port). The chassis-id range is from 101 to 199.
<b>Step 3</b>	<b>no shutdown</b> <b>Example:</b> <pre>switch(config-if)#no shutdown</pre>	Brings up the interface (administratively).
<b>Step 4</b>	<b>end</b> <b>Example:</b> <pre>switch(config-if)#end</pre>	Returns to exec mode.

## Binding vFC to MAC Address

### Example

```
interface vfc101/1/1
  switchport trunk mode on
  no shutdown
```

## Binding vFC to MAC Address

A MAC address bound vFC can also be created for a FEX host interface (HIF) port.



**Note** A MAC bound vFC can be configured to a host sitting behind a FIP Snooping Bridge (FSB).

When both MAC bound vFC and port-bound vFC are configured for the same interface, the port-bound vFC takes precedence.

As a best practice, you should have either a MAC bound vFC or a port- bound vFC for a physical Ethernet port or a port-channel. However, you cannot have both.

## SUMMARY STEPS

1. **configure terminal**
2. **interface vfc <number>**
3. **bind mac-address <mac-address>**

## DETAILED STEPS

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure terminal</b>	Enters global configuration mode.
<b>Step 2</b>	<b>interface vfc &lt;number&gt;</b>	Creates a virtual fibre Channel Interface.
<b>Step 3</b>	<b>bind mac-address &lt;mac-address&gt;</b>	Binds the MAC address.

### Example

The following example shows how to bind a virtual Fibre Channel interface to a MAC address:

```
switch# configure terminal
switch(config)# interface vfc 2
switch(config-if)# bind mac-address 00:0a:00:00:00:36
```

# Configuring Straight Through FEX with Host vPC

## Before you begin

- Ensure configuration of vPC between two Cisco Nexus 9000 Series switches. For more information, see the *Cisco Nexus 9000 Series NX-OS Interfaces Configuration Guide*.
- Ensure configuration of FEX. For more information, see the *Cisco Nexus 2000 Series NX-OS Fabric Extender Configuration Guide for Cisco Nexus 9000 Series Switches*.
- Ensure the configuration of FCoE NPV. For more information, see the section: *Configuring FCoE NPV*.

## SUMMARY STEPS

1. **configure terminal**
2. **interface port-channel <port\_num>**
3. **switchport**
4. **switchport mode fex-fabric**
5. **fex associate <fex\_id>**
6. **mtu 9216**
7. **no shutdown**
8. **exit**
9. **interface ethernet slot/port**
10. **switchport**
11. **switchport mode fex-fabric**
12. **fex associate <fex\_id>**
13. **mtu 9216**
14. **channel-group <port\_number>**
15. **no shutdown**
16. **exit**
17. **interface ethernet chassis\_id/slot/port\_number**
18. **switchport mode trunk**
19. **channel group <host\_port\_num>**
20. **no shutdown**
21. **exit**
22. **interface port-channel <host\_port\_number>**
23. **switchport**
24. **switchport mode trunk**
25. **service-policy type qos input fcoe**
26. **vpc 3**
27. **no shutdown**
28. **exit**

## Configuring Straight Through FEX with Host vPC

### DETAILED STEPS

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config) #</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>interface port-channel &lt;port_num&gt;</b> <b>Example:</b> <pre>switch(config)#interface port-channel 101</pre>	Creates port-channel and enters the interface configuration mode.
<b>Step 3</b>	<b>switchport</b> <b>Example:</b> <pre>switch(config-if)#switchport</pre>	Sets Layer 2 switching port.
<b>Step 4</b>	<b>switchport mode fex-fabric</b> <b>Example:</b> <pre>switch(config-if)#switchport mode fex-fabric</pre>	Sets the interface type to be a uplink port for a Fabric extender (FEX).
<b>Step 5</b>	<b>fex associate &lt;fex_id&gt;</b> <b>Example:</b> <pre>switch(config-if)#fex associate 101</pre>	Associates a Fabric Extender (FEX) to a Fabric interface.
<b>Step 6</b>	<b>mtu 9216</b> <b>Example:</b> <pre>switch(config-if)#mtu 9216</pre>	Configures the MTU value to that of jumbo frames to carry FCoE traffic through the NIF ports.
<b>Step 7</b>	<b>no shutdown</b> <b>Example:</b> <pre>switch(config-if)#no shutdown</pre>	Sets the port-channel to up (administratively).
<b>Step 8</b>	<b>exit</b> <b>Example:</b> <pre>switch(config-if)#exit</pre>	Exits the interface configuration mode.
<b>Step 9</b>	<b>interface ethernet slot/port</b> <b>Example:</b> <pre>switch(config)#interface Ethernet1/1</pre>	Enters the interface configuration mode.

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 10</b>	<b>switchport</b>  <b>Example:</b>  switch(config-if)#switchport	Sets Layer 2 switching port.
<b>Step 11</b>	<b>switchport mode fex-fabric</b>  <b>Example:</b>  switch(config-if)#switchport mode fex-fabric	Sets the interface type to be an uplink port for a fabric extender (FEX).
<b>Step 12</b>	<b>fex associate &lt;fex_id&gt;</b>  <b>Example:</b>  switch(config-if)#fex associate 101	Associates a Fabric Extender (FEX) to a Fabric interface.
<b>Step 13</b>	<b>mtu 9216</b>  <b>Example:</b>  switch(config-if)#mtu 9216	Configures the MTU value to that of jumbo frames to carry FCoE traffic through the NIF ports.
<b>Step 14</b>	<b>channel-group &lt;port_number&gt;</b>  <b>Example:</b>  switch(config-if)channel-group 101	Sets the Fabric interface a member of the Fabric port channel.
<b>Step 15</b>	<b>no shutdown</b>  <b>Example:</b>  switch(config-if)#no shutdown	Sets the port-channel to up (administratively).
<b>Step 16</b>	<b>exit</b>  <b>Example:</b>  switch(config-if)#exit	Exits the interface configuration mode.
<b>Step 17</b>	<b>interface ethernet chassis_id/slot/port_number</b>  <b>Example:</b>  switch(config)interface ethernet 101/1/1	Configures a FEX satellite interface or HIF (host interface) port and enters interface configuration mode.
<b>Step 18</b>	<b>switchport mode trunk</b>  <b>Example:</b>  switch(config-if)#switchport mode trunk	Sets interface type to be a trunk port.
<b>Step 19</b>	<b>channel group &lt;host_port_num&gt;</b>  <b>Example:</b>	Makes the HIF port a member of a port-channel

## Configuring Straight Through FEX with Host vPC

	<b>Command or Action</b>	<b>Purpose</b>
	switch(config-if)# channel group 1	
<b>Step 20</b>	<b>no shutdown</b>  <b>Example:</b>  switch(config-if)#no shutdown	Sets the port-channel to up (administratively).
<b>Step 21</b>	<b>exit</b>  <b>Example:</b>  switch(config-if)#exit	Exits the interface configuration mode.
<b>Step 22</b>	<b>interface port-channel &lt;host_port_number&gt;</b>  <b>Example:</b>  switch(config)#interface port-channel 1	Creates a HIF port-channel.
<b>Step 23</b>	<b>switchport</b>  <b>Example:</b>  switch(config-if)#switchport	Sets Layer 2 switching port.
<b>Step 24</b>	<b>switchport mode trunk</b>  <b>Example:</b>  switch(config-if)#switchport mode trunk	Sets the interface to be a trunk port.
<b>Step 25</b>	<b>service-policy type qos input fcoe</b>  <b>Example:</b>  switch(config-if)# service-policy type qos input fcoe	Sets the QoS policy on the HIF port channel to a no drop policy.  <b>Note</b> For more information about queuing policy configurations, see the section: <i>Configuring QoS for no-drop support</i> .
<b>Step 26</b>	<b>vpc 3</b>	Configures VPC on the HIF port-channel. The VPC id on both the peers should be same for this Host VPC.
<b>Step 27</b>	<b>no shutdown</b>  <b>Example:</b>  switch(config-if)#no shutdown	Sets the port-channel to up (administratively).
<b>Step 28</b>	<b>exit</b>  <b>Example:</b>  switch(config-if)#exit	Exits the interface configuration mode.

## Example

The following is an example of FEX bring up in straight through mode with a host vPC.

- Configuration on Peer-1

```

install feature-set fex
feature-set fex

fex 101
  pinning max-links 1
  description "2232PP-1"

interface port-channel101
  switchport mode fex-fabric
  fex associate 101

interface port-channel101
  switchport
  switchport mode fex-fabric
  fex associate 101
  mtu 9216

interface Ethernet1/1
  switchport
  switchport mode fex-fabric
  fex associate 101
  mtu 9216
  channel-group 101
  no shutdown

interface Ethernet101/1/1
  switchport mode trunk
  channel-group 1
  no shutdown

interface port-channel1
  switchport
  switchport mode trunk
  service-policy type qos input fcoe
  vpc 3

interface vfc-pol      /*** Implicit binding with VFC bound to port-channel ***/
  bind interface port-channel1
  switchport trunk mode on
  no shutdown

interface vfc101/1/1   /*** Implicit binding with VFC bound to member port ***/
  bind interface ethernet101/1/1
  switchport trunk mode on
  no shutdown

```

- Configuration on Peer-2

```

install feature-set fex
feature-set fex

fex 102
  pinning max-links 1
  description "2348UPQ-2"

```

## Configuring Dual-Homed FEX

```

interface port-channel102
  switchport
  switchport mode fex-fabric
  fex associate 102
  mtu 9216

interface Ethernet102/1/1
  switchport mode trunk
  channel-group 1
  no shutdown

interface port-channel11
  switchport
  switchport mode trunk
  service-policy type qos input fcoe
  vpc 3

interface vfc1    /** Explicit binding with VFC bound to port-channel **/
  bind interface port-channel11
  switchport trunk mode on
  no shutdown

interface vfc2    /** Explicit binding with VFC bound to member port **/
  bind interface ethernet102/1/1
  switchport trunk mode on
  no shutdown

```



**Note** The vFC binding should be either to the port-channel or to the member host interface.

# Configuring Dual-Homed FEX

## SUMMARY STEPS

1. **configure terminal**
2. **fex fex-chassis\_ID**
3. **fcoe**
4. **interface port-channel <port\_num>**
5. **switchport**
6. **switchport mode fex-fabric**
7. **fex associate <fex\_id>**
8. **mtu 9216**
9. **vpc 1**
10. **no shutdown**
11. **exit**
12. **interface ethernet slot/port**
13. **switchport**
14. **switchport mode trunk**
15. **service-policy type qos input fcoe-qo-policy**
16. **no shutdown**

**17. exit**

### DETAILED STEPS

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b>  switch# configure terminal switch(config) #	Enters global configuration mode.
<b>Step 2</b>	<b>fex fex-chassis_ID</b>  <b>Example:</b>  switch# fex 101 switch(config) #	Enters the configuration mode for the specified FEX. The range for fex-chassis_ID is from 101 to 199.
<b>Step 3</b>	<b>fcoe</b>  <b>Example:</b>  switch# fcoe switch(config) #	Configures the FEX to send FCoE traffic only to this switch.  <b>Note</b> Cisco recommends that FCOE pinning is configured on the primary vPC switch in case of dual homed FEX.
<b>Step 4</b>	<b>interface port-channel &lt;port_num&gt;</b>  <b>Example:</b>  switch(config)#interface port-channel170	Creates port-channel and enters the interface configuration mode.
<b>Step 5</b>	<b>switchport</b>  <b>Example:</b>  switch(config-if)#switchport	Sets Layer 2 switching port.
<b>Step 6</b>	<b>switchport mode fex-fabric</b>  <b>Example:</b>  switch(config-if)#switchport mode fex-fabric	Sets the interface type to be a uplink port for a Fabric extender (FEX).
<b>Step 7</b>	<b>fex associate &lt;fex_id&gt;</b>  <b>Example:</b>  switch(config-if)#fex associate 170	Associates a Fabric Extender (FEX) to a Fabric interface.
<b>Step 8</b>	<b>mtu 9216</b>  <b>Example:</b>  switch(config-if)#mtu 9216	Configures the MTU value to that of jumbo frames to carry FCoE traffic through the NIF ports.
<b>Step 9</b>	<b>vpc 1</b>	Configures VPC on the HIF port-channel.

## Configuring Dual-Homed FEX

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 10</b>	<b>no shutdown</b>  <b>Example:</b>  switch(config-if)#no shutdown	Sets the port-channel to up (administratively).
<b>Step 11</b>	<b>exit</b>  <b>Example:</b>  switch(config-if)#exit	Exits the interface configuration mode.
<b>Step 12</b>	<b>interface ethernet slot/port</b>  <b>Example:</b>  switch(config)#interface Ethernet170/1/18	Enters interface configuration mode.
<b>Step 13</b>	<b>switchport</b>  <b>Example:</b>  switch(config-if)#switchport	Sets Layer 2 switching port.
<b>Step 14</b>	<b>switchport mode trunk</b>  <b>Example:</b>  switch(config-if)#switchport mode trunk	Sets the interface to be a trunk port.
<b>Step 15</b>	<b>service-policy type qos input fcoe-qo-policy</b>  <b>Example:</b>  switch(config-if)# service-policy type qos input fcoe	Sets the QoS policy on the HIF port channel to a no drop policy.  <b>Note</b> For more information about queuing policy configurations, see the section: <i>Configuring QoS for no-drop support</i> .
<b>Step 16</b>	<b>no shutdown</b>  <b>Example:</b>  switch(config-if)#no shutdown	Sets the port-channel to up (administratively).
<b>Step 17</b>	<b>exit</b>  <b>Example:</b>  switch(config-if)#exit	Exits the interface configuration mode.  <b>Note</b> The same configuration should be performed on the other side for the Active-Active FEX to be up on both the sides.

## Example

**Note**

Cisco recommends that FCOE pinning is configured on the primary vPC switch in case of dual homed FEX.

- Peer 1

```
fex 170
  pinning max-links 1
  description "2232PP-3 AA"
  fcoe

  interface port-channel170
    switchport
    switchport mode fex-fabric
    fex associate 170
    mtu 9216
    vpc 1

  interface Ethernet170/1/18
    switchport mode trunk
    service-policy type qos input fcoe-qo-policy
    no shutdown

  interface vfc1718      /*** Explicit binding ***/
    bind interface Ethernet170/1/18
    switchport trunk mode on
    no shutdown

  interface vfc170/1/18 /*** Implicit binding ***/
    bind interface Ethernet170/1/18
    switchport trunk mode on
    no shutdown
```

- Peer 2

```
fex 170
  pinning max-links 1
  description "2232PP-3 AA"

  interface port-channel170
    switchport
    switchport mode fex-fabric
    fex associate 170
    mtu 9216
    vpc 1

  interface Ethernet170/1/18
    switchport mode trunk
    service-policy type qos input fcoe-qo-policy
    no shutdown
```

**Note**

- The vFC binding must be either to port-channel or to member host interface. vFC cannot be bound to port channel if it has more than one member. vFC cannot be bound to host interface if it is part of a multi member port channel.