



CHAPTER 14

Configuring Layer 3 Virtualization

This chapter describes how to configure Layer 3 virtualization on the Cisco NX-OS device.

This chapter includes the following sections:

- [Layer 3 Virtualization, page 14-1](#)
- [Licensing Requirements for VRFs, page 14-5](#)
- [Prerequisites for VRF, page 14-6](#)
- [Guidelines and Limitations for VRFs, page 14-6](#)
- [Default Settings, page 14-6](#)
- [Configuring VRFs, page 14-6](#)
- [Verifying the VRF Configuration, page 14-13](#)
- [Configuration Examples for VRF, page 14-13](#)
- [Additional References, page 14-14](#)
- [Feature History for VRF, page 14-15](#)

Layer 3 Virtualization

This section contains the following topics:

- [Overview of Layer 3 Virtualization, page 14-1](#)
- [VRF and Routing, page 14-3](#)
- [VRF-Aware Services, page 14-3](#)

Overview of Layer 3 Virtualization


Cisco NX-OS supports a hierarchy of virtualization that can divide the physical system resources into multiple virtual device contexts (VDCs). Each VDC acts as a standalone device with both Layer 2 and Layer 3 services available. You can configure up to 4 VDCs, including the default VDC. See the *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 5.x*, for more information on VDCs.

Cisco NX-OS further virtualizes each VDC to support virtual routing and forwarding instances (VRFs). You can configure multiple VRFs in a VDC. Each VRF contains a separate address space with unicast and multicast route tables for IPv4 and IPv6 and makes routing decisions independent of any other VRF.

Send document comments to nexus7k-docfeedback@cisco.com.

Figure 14-1 shows multiple independent VRFs in two different VDCs.

Figure 14-1 Multiple VRFs in VDCs

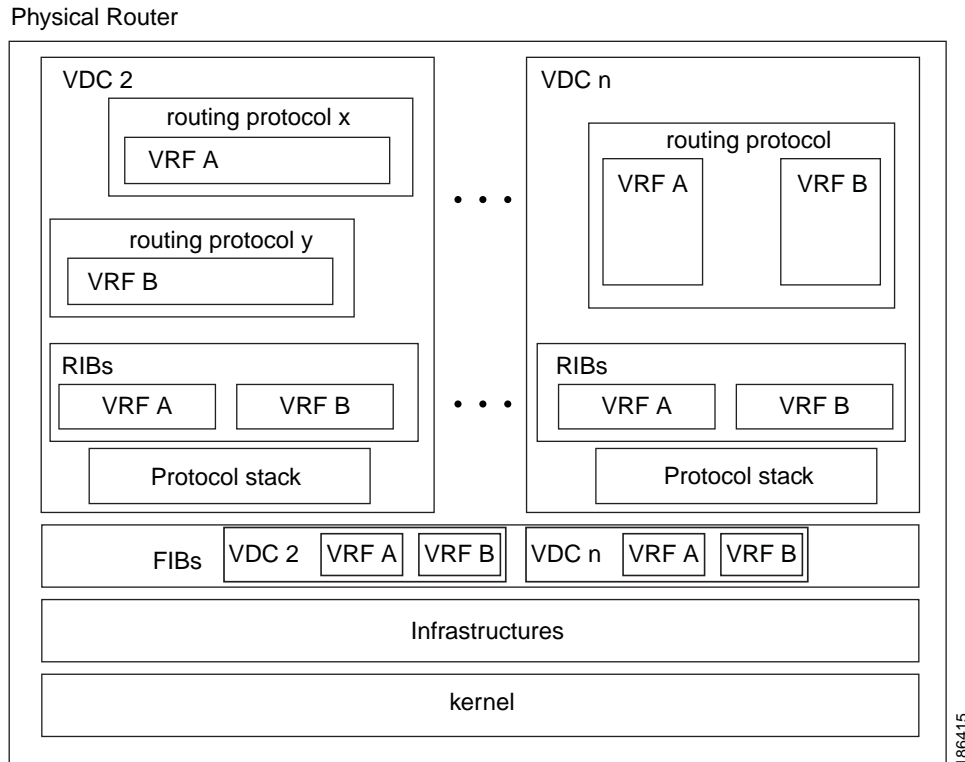

A VRF name is local to a VDC, so you can configure two VRFs with the same name if the VRFs exist in different VDCs. In Figure 14-1, VRF A in VDC 2 is independent of VRF B and VRF A in VDC n.

Each router has a management VRF and a default VRF:

Management VRF

- The management VRF is for management purposes only.
- Only the mgmt 0 interface can be in the management VRF.
- The mgmt 0 interface cannot be assigned to another VRF.
- The mgmt 0 interface is shared among multiple VDCs.
- No routing protocols can run in the management VRF (static only).

Default VRF

- All Layer 3 interfaces exist in the default VRF until they are assigned to another VRF.
- Routing protocols run in the default VRF context unless another VRF context is specified.
- The default VRF uses the default routing context for all **show** commands.
- The default VRF is similar to the global routing table concept in Cisco IOS.


Send document comments to nexus7k-docfeedback@cisco.com.

VRF and Routing

All unicast and multicast routing protocols support VRFs. When you configure a routing protocol in a VRF, you set routing parameters for the VRF that are independent of routing parameters in another VRF for the same routing protocol instance.

You can assign interfaces and route protocols to a VRF to create virtual Layer 3 networks. An interface exists in only one VRF. [Figure 14-2](#) shows one physical network split into two virtual networks with two VRFs. Routers Z, A, and B exist in VRF Red and form one address domain. These routers share route updates that do not include Router C because Router C is configured in a different VRF.

Figure 14-2 VRFs in a Network

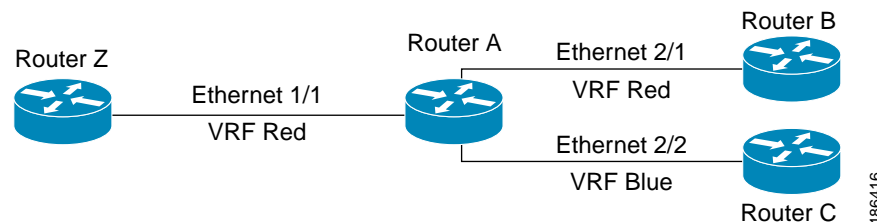

By default, Cisco NX-OS uses the VRF of the incoming interface to select which routing table to use for a route lookup. You can configure a route policy to modify this behavior and set the VRF that Cisco NX-OS uses for incoming packets. See [Chapter 17, “Configuring Policy-Based Routing,”](#) for more information.

Cisco NX-OS supports route leaking (import or export) between VRFs, both in VRF lite and MPLS VPN scenarios. For more information on route leaking, see the *Cisco Nexus 7000 Series NX-OS MPLS Configuration Guide*.

VRF-Aware Services

A fundamental feature of the Cisco NX-OS architecture is that every IP-based feature is VRF aware.

The following VRF-aware services can select a particular VRF to reach a remote server or to filter information based on the selected VRF:

- AAA—See the *Cisco Nexus 7000 Series NX-OS Security Configuration Guide, Release 5.x* for more information.
- Call Home—See the *Cisco Nexus 7000 Series NX-OS System Management Configuration Guide, Release 5.x* for more information.
- DNS—See [Chapter 4, “Configuring DNS,”](#) for more information.
- GLBP—See [Chapter 18, “Configuring GLBP,”](#) for more information.
- HSRP—See [Chapter 19, “Configuring HSRP,”](#) for more information.
- HTTP—See the *Cisco Nexus 7000 Series NX-OS Fundamentals Configuration Guide, Release 5.x*, for more information.
- NetFlow—See the *Cisco Nexus 7000 Series NX-OS System Management Configuration Guide, Release 5.x*, for more information.
- NTP—See the *Cisco Nexus 7000 Series NX-OS System Management Configuration Guide, Release 5.x*, for more information.

Send document comments to nexus7k-docfeedback@cisco.com.

- RADIUS—See the *Cisco Nexus 7000 Series NX-OS Security Configuration Guide, Release 5.x*, for more information.
- Ping and Traceroute —See the *Cisco Nexus 7000 Series NX-OS Fundamentals Configuration Guide, Release 5.x*, for more information.
- SSH—See the *Cisco Nexus 7000 Series NX-OS Fundamentals Configuration Guide, Release 5.x*, for more information.
- SNMP—See the *Cisco Nexus 7000 Series NX-OS System Management Configuration Guide, Release 5.x*, for more information.
- Syslog—See the *Cisco Nexus 7000 Series NX-OS System Management Configuration Guide, Release 5.x*, for more information.
- TACACS+—See the *Cisco Nexus 7000 Series NX-OS Security Configuration Guide, Release 5.x*, for more information.
- TFTP—See the *Cisco Nexus 7000 Series NX-OS Fundamentals Configuration Guide, Release 5.x*, for more information.
- VRRP—See [Chapter 20, “Configuring VRRP,”](#) for more information.
- XML—See the *Cisco NX-OS XML Management Interface User Guide, Release 5.x*, for more information.

See the appropriate configuration guide for each service for more information on configuring VRF support in that service.

This section contains the following topics:


- [Reachability, page 14-4](#)
- [Filtering, page 14-5](#)
- [Combining Reachability and Filtering, page 14-5](#)

Reachability

Reachability indicates which VRF contains the routing information needed to get to the server providing the service. For example, you can configure an SNMP server that is reachable on the management VRF. When you configure that server address on the router, you also configure which VRF that Cisco NX-OS must use to reach the server.

[Figure 14-3](#) shows an SNMP server that is reachable over the management VRF. You configure Router A to use the management VRF for the SNMP server host 192.0.2.1.

Figure 14-3 Service VRF Reachability

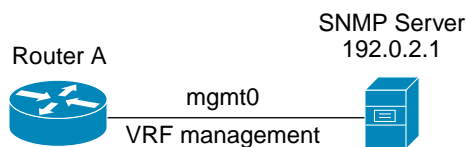


186417

Send document comments to nexus7k-docfeedback@cisco.com.

Filtering

Filtering allows you to limit the type of information that goes to a VRF-aware service based on the VRF. For example, you can configure a syslog server to support a particular VRF. Figure 14-4 shows two syslog servers with each server supporting one VRF. Syslog server A is configured in VRF Red, so Cisco NX-OS sends only system messages generated in VRF Red to syslog server A.

Figure 14-4 Service VRF Filtering

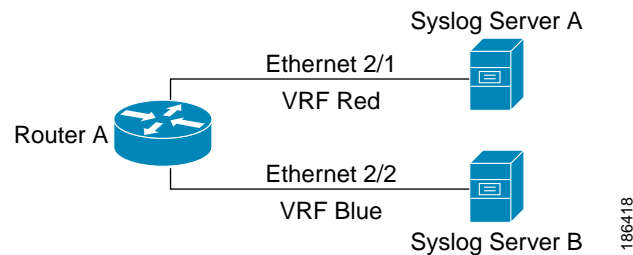


Combining Reachability and Filtering

You can combine reachability and filtering for VRF-aware services. You can configure the VRF that Cisco NX-OS uses to connect to that service as well as the VRF that the service supports. If you configure a service in the default VRF, you can optionally configure the service to support all VRFs.

Figure 14-5 shows an SNMP server that is reachable on the management VRF. You can configure the SNMP server to support only the SNMP notifications from VRF Red, for example.

Figure 14-5 Service VRF Reachability Filtering

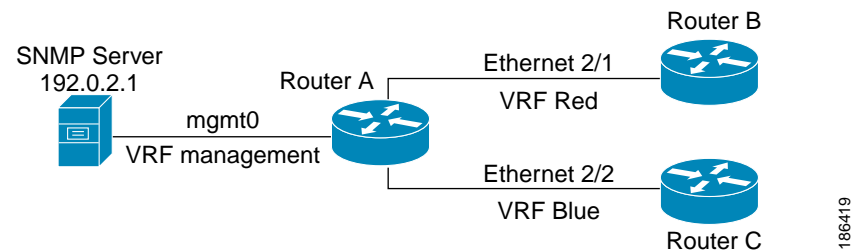

Licensing Requirements for VRFs

The following table shows the licensing requirements for this feature:

Product	License Requirement
Cisco NX-OS	VRFs require no license. Any feature not included in a license package is bundled with the Cisco NX-OS system images and is provided at no extra charge to you. For a complete explanation of the Cisco NX-OS licensing scheme, see the <i>Cisco NX-OS Licensing Guide</i> .

Send document comments to nexus7k-docfeedback@cisco.com.

Prerequisites for VRF

VRFs have the following prerequisites:

- You must install the Advanced Services license to use VDCs besides the default VDC.

Guidelines and Limitations for VRFs

VRFs have the following configuration guidelines and limitations:

- When you make an interface a member of an existing VRF, Cisco NX-OS removes all Layer 3 configurations. You should configure all Layer 3 parameters after adding an interface to a VRF.
- You should add the mgmt0 interface to the management VRF and configure the mgmt0 IP address and other parameters after you add it to the management VRF.
- If you configure an interface for a VRF before the VRF exists, the interface is operationally down until you create the VRF.
- Cisco NX-OS creates the default and management VRFs by default. You should make the mgmt0 interface a member of the management VRF.
- The **write erase boot** command does not remove the management VRF configurations. You must use the **write erase** command and then the **write erase boot** command.

Default Settings

Table 14-1 lists the default settings for VRF parameters.

Table 14-1 Default VRF Parameters

Parameters	Default
Configured VRFs	Default, management
routing context	Default VRF

Configuring VRFs

This section contains the following topics:

- [Creating a VRF, page 14-7](#)
- [Assigning VRF Membership to an Interface, page 14-8](#)
- [Configuring VRF Parameters for a Routing Protocol, page 14-9](#)
- [Configuring a VRF-Aware Service, page 14-11](#)
- [Setting the VRF Scope, page 14-12](#)



Note

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

Send document comments to nexus7k-docfeedback@cisco.com.

Creating a VRF

You can create a VRF in a VDC.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **configure terminal**
2. **vrf context** *vrf-name*
3. (Optional) **ip route** {*ip-prefix* | *ip-addr ip-mask*} {[*next-hop* | *nh-prefix*] | [*interface next-hop* | *nh-prefix*]} [**tag** *tag-value* [*pref*]
4. (Optional) **show vrf** [*vrf-name*]
5. (Optional) **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters configuration mode.
Step 2	vrf context <i>name</i> Example: switch(config)# vrf context Enterprise switch(config-vrf)#	Creates a new VRF and enters VRF configuration mode. The <i>name</i> can be any case-sensitive, alphanumeric string up to 32 characters.
Step 3	ip route { <i>ip-prefix</i> <i>ip-addr ip-mask</i> } {[<i>next-hop</i> <i>nh-prefix</i>] [<i>interface next-hop</i> <i>nh-prefix</i>]} [tag <i>tag-value</i> [<i>pref</i>] Example: switch(config-vrf)# ip route 192.0.2.0/8 ethernet 1/2 192.0.2.4	(Optional) Configures a static route and the interface for this static route. You can optionally configure the next-hop address. The <i>preference</i> value sets the administrative distance. The range is from 1 to 255. The default is 1.
Step 4	show vrf [<i>vrf-name</i>] Example: switch(config-vrf)# show vrf Enterprise	(Optional) Displays VRF information.
Step 5	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

Send document comments to nexus7k-docfeedback@cisco.com.

To delete the VRF and the associated configuration, use the following command in global configuration mode:

Command	Purpose
<code>no vrf context name</code>	Deletes the VRF and all associated configurations.
Example: <code>switch(config)# no vrf context Enterprise</code>	

Any commands available in global configuration mode are also available in VRF configuration mode.

This example shows how to create a VRF and add a static route to the VRF:

```
switch# configure terminal
switch(config)# vrf context Enterprise
switch(config-vrf)# ip route 192.0.2.0/8 ethernet 1/2
switch(config-vrf)# exit
switch(config)# copy running-config startup-config
```

Assigning VRF Membership to an Interface

You can make an interface a member of a VRF.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the `switchto vdc` command).

Assign the IP address for an interface after you have configured the interface for a VRF.

SUMMARY STEPS

1. **configure terminal**
2. **interface** *interface-type slot/port*
3. **vrf member** *vrf-name*
4. **ip-address** *ip-prefix/length*
5. (Optional) **show vrf** *vrf-name interface interface-type number*
6. (Optional) **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	<code>configure terminal</code> Example: <code>switch# configure terminal</code> <code>switch(config)#</code>	Enters configuration mode.
Step 2	<code>interface interface-type slot/port</code> Example: <code>switch(config)# interface ethernet 1/2</code> <code>switch(config-if)#</code>	Enters interface configuration mode.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 3	vrf member <i>vrf-name</i> Example: switch(config-if)# vrf member RemoteOfficeVRF	Adds this interface to a VRF.
Step 4	ip address <i>ip-prefix/length</i> Example: switch(config-if)# ip address 192.0.2.1/16	Configures an IP address for this interface. You must do this step after you assign this interface to a VRF.
Step 5	show vrf <i>vrf-name interface</i> <i>interface-type number</i> Example: switch(config-vrf)# show vrf Enterprise interface ethernet 1/2	(Optional) Displays VRF information.
Step 6	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to add an interface to the VRF:

```
switch# configure terminal
switch(config)# interface ethernet 1/2
switch(config-if)# vrf member RemoteOfficeVRF
switch(config-if)# ip address 192.0.2.1/16
switch(config-if)# copy running-config startup-config
```

Configuring VRF Parameters for a Routing Protocol

You can associate a routing protocol with one or more VRFs. See the appropriate chapter for information on how to configure VRFs for the routing protocol. This section uses OSPFv2 as an example protocol for the detailed configuration steps.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **configure terminal**
2. **router ospf** *instance-tag*
3. **vrf** *vrf-name*
4. (Optional) **maximum-paths** *paths*
5. **interface** *interface-type slot/port*
6. **vrf member** *vrf-name*
7. **ip address** *ip-prefix/length*
8. **ip router ospf** *instance-tag area area-id*

Send document comments to nexus7k-docfeedback@cisco.com.

9. (Optional) **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters configuration mode.
Step 2	router ospf instance-tag Example: switch(config-vrf)# router ospf 201 switch(config-router)#	Creates a new OSPFv2 instance with the configured instance tag.
Step 3	vrf vrf-name Example: switch(config-router)# vrf RemoteOfficeVRF switch(config-router-vrf)#	Enters VRF configuration mode.
Step 4	maximum-paths paths Example: switch(config-router-vrf)# maximum-paths 4	(Optional) Configures the maximum number of equal OSPFv2 paths to a destination in the route table for this VRF. Used for load balancing.
Step 5	interface interface-type slot/port Example: switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 6	vrf member vrf-name Example: switch(config-if)# vrf member RemoteOfficeVRF	Adds this interface to a VRF.
Step 7	ip address ip-prefix/length Example: switch(config-if)# ip address 192.0.2.1/16	Configures an IP address for this interface. You must do this step after you assign this interface to a VRF.
Step 8	ip router ospf instance-tag area area-id Example: switch(config-if)# ip router ospf 201 area 0	Assigns this interface to the OSPFv2 instance and area configured.
Step 9	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

Send document comments to nexus7k-docfeedback@cisco.com.

This example shows how to create a VRF and add an interface to the VRF:

```
switch# configure terminal
switch(config)# vrf context RemoteOfficeVRF
switch(config-vrf)# exit
switch(config)# router ospf 201
switch(config-router)# vrf RemoteOfficeVRF
switch(config-router-vrf)# maximum-paths 4
switch(config-router-vrf)# interface ethernet 1/2
switch(config-if)# vrf member RemoteOfficeVRF
switch(config-if)# ip address 192.0.2.1/16
switch(config-if)# ip router ospf 201 area 0
switch(config-if)# exit
switch(config)# copy running-config startup-config
```

Configuring a VRF-Aware Service

You can configure a VRF-aware service for reachability and filtering. See the “[VRF-Aware Services](#)” section on page 14-3 for links to the appropriate chapter or configuration guide for information on how to configure the service for VRFs. This section uses SNMP and IP domain lists as example services for the detailed configuration steps.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the `switchto vdc` command).

SUMMARY STEPS

1. `configure terminal`
2. `snmp-server host ip-address [filter-vrf vrf-name] [use-vrf vrf-name]`
3. `vrf context [vrf-name]`
4. `ip domain-list domain-name [all-vrfs][use-vrf vrf-name]`
5. (Optional) `copy running-config startup-config`

DETAILED STEPS

	Command	Purpose
Step 1	<code>configure terminal</code> Example: switch# configure terminal switch(config)#	Enters configuration mode.
Step 2	<code>snmp-server host ip-address [filter-vrf vrf-name] [use-vrf vrf-name]</code> Example: switch(config)# snmp-server host 192.0.2.1 use-vrf Red switch(config-vrf)#	Configures a global SNMP server and configures the VRF that Cisco NX-OS uses to reach the service. Use the filter-vrf keyword to filter information from the selected VRF to this server.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 3	vrf context <i>vrf-name</i> Example: switch(config)# vrf context Blue switch(config-vrf)#	Creates a new VRF.
Step 4	ip domain-list <i>domain-name</i> [<i>all-vrfs</i>] [<i>use-vrf vrf-name</i>] Example: switch(config-vrf)# ip domain-list List all-vrfs use-vrf Blue switch(config-vrf)#	Configures the domain list in the VRF and optionally configures the VRF that Cisco NX-OS uses to reach the domain name listed.
Step 5	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

This example shows how to send SNMP information for all VRFs to SNMP host 192.0.2.1, reachable on VRF Red:

```
switch# configure terminal
switch(config)# snmp-server host 192.0.2.1 for-all-vrfs use-vrf Red
switch(config)# copy running-config startup-config
```

This example shows how to filter SNMP information for VRF Blue to SNMP host 192.0.2.12, reachable on VRF Red:

```
switch# configure terminal
switch(config)# vrf context Blue
switch(config-vrf)# snmp-server host 192.0.2.12 use-vrf Red
switch(config)# copy running-config startup-config
```

Setting the VRF Scope

You can set the VRF scope for all EXEC commands (for example, **show** commands). This automatically restricts the scope of the output of EXEC commands to the configured VRF. You can override this scope by using the VRF keywords available for some EXEC commands.

To set the VRF scope, use the following command in EXEC mode:

Command	Purpose
routing-context vrf <i>vrf-name</i> Example: switch# routing-context vrf red switch%red#	Sets the routing context for all EXEC commands. Default routing context is the default VRF.

Send document comments to nexus7k-docfeedback@cisco.com.

To return to the default VRF scope, use the following command in EXEC mode:

Command	Purpose
<code>routing-context vrf default</code>	Sets the default routing context.
Example: <code>switch%red# routing-context vrf default</code> <code>switch#</code>	

Verifying the VRF Configuration

To display VRF configuration information, perform one of the following tasks:

Command	Purpose
<code>show vrf [vrf-name]</code>	Displays the information for all or one VRF.
<code>show vrf [vrf-name] detail</code>	Displays detailed information for all or one VRF.
<code>show vrf [vrf-name] [interface interface-type slot/port]</code>	Displays the VRF status for an interface.

Configuration Examples for VRF

This example shows how to configure VRF Red, add an SNMP server to that VRF, and add an instance of OSPF to VRF Red:

```
configure terminal
vrf context Red
 snmp-server host 192.0.2.12 use-vrf Red
router ospf 201
 vrf Red
interface ethernet 1/2
 vrf member Red
 ip address 192.0.2.1/16
 ip router ospf 201 area 0
```

This example shows how to configure VRF Red and Blue, add an instance of OSPF to each VRF, and create an SNMP context for each OSPF instance in each VRF:

```
configure terminal
!Create the VRFs
vrf context Red
vrf context Blue
vrf context Green
!Create the OSPF instances and associate them with a single VRF or multiple VRFs
(recommended)
feature ospf
router ospf Lab
 vrf Red
!
router ospf Production
 vrf Blue
  router-id 1.1.1.1
vrf Green
  router-id 2.2.2.2
```

Send document comments to nexus7k-docfeedback@cisco.com.

```
!Configure one interface to use ospf Lab on VRF Red
interface ethernet 1/2
 vrf member Red
 ip address 192.0.2.1/16
 ip router ospf Lab area 0
 no shutdown
!Configure another interface to use ospf Production on VRF Blue
interface ethernet 10/2
 vrf member Blue
 ip address 192.0.2.1/16
 ip router ospf Production area 0
 no shutdown
!
interface ethernet 10/3
 vrf member Green
 ip address 192.0.2.1/16
 ip router ospf Production area 0
 no shutdown

!configure the SNMP server
snmp-server user admin network-admin auth md5 nbv-12345
snmp-server community public ro
!Create the SNMP contexts for each VRF
snmp-server context lab instance Lab vrf Red
snmp-server context production instance Production vrf Blue
!Use the SNMP context lab to access the OSPF-MIB values for the OSPF instance Lab in VRF
Red in this example.
```

Use the SNMP context **lab** to access the OSPF-MIB values for the OSPF instance Lab in VRF Red in this example.

Additional References

For additional information related to implementing virtualization, see the following sections:

- [Related Documents, page 14-14](#)
- [Standards, page 14-15](#)

Related Documents

Related Topic	Document Title
VRF CLI	<i>Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 5.x</i>
VRFs	<i>Cisco Nexus 7000 Series NX-OS Fundamentals Configuration Guide, Release 5.x</i> <i>Cisco Nexus 7000 Series NX-OS MPLS Configuration Guide</i> <i>Cisco Nexus 7000 Series NX-OS System Management Configuration Guide, Release 5.x</i>
VDCs	<i>Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 5.x</i>

Send document comments to nexus7k-docfeedback@cisco.com.

Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	—

Feature History for VRF

Table 14-2 lists the release history for this feature.

Table 14-2 Feature History for VRF

Feature Name	Releases	Feature Information
VRF	4.0(1)	This feature was introduced.

Send document comments to nexus7k-docfeedback@cisco.com.