



## Installing the Switch

This chapter describes how to install a Catalyst 6880-X switch. Pointers within the overall chassis installation procedures point to separate installation procedures that cover installing various components and assemblies.

- [Installation Tasks, page 1](#)
- [Safety Warnings, page 2](#)
- [Rack-Mounting Guidelines, page 3](#)
- [Unpacking the Switch, page 4](#)
- [Chassis Installation Kits and Cable Guides, page 4](#)
- [Installing the Switch Chassis, page 5](#)

## Installation Tasks

The process of installing the switch can be broken down into a series of tasks, which are described in the following table.

Task	Description
Unpacking the switch	Remove the switch from the packaging materials. <b>Note</b> Save the packaging material for later use if you need to move the chassis.
Installing the switch	Install the switch.
Connecting the chassis to system ground	Construct and attach a system ground wire from the building (earth) ground to the system ground point on the chassis.
Installing and cabling the power supply or supplies	Power supplies that are ordered with the switch are installed in the switch. If ordered separately, install the power supplies. Connect the power supplies.

Task	Description
Cabling the chassis and modules to the network	The various ports on the chassis must be connected to the network. This process can involve only attaching a network interface cable to the port or it can include the installation of a transceiver of some type in port and then attaching the network interface cable to the transceiver.
Powering up the chassis	After completing the network cabling and making sure that system ground is connected, the power supplies can be turned on. The system powers up and runs through a set of built-in diagnostics.

## Safety Warnings


**Warning**

Class 1 laser product. Statement 1008


**Warning**

This unit is intended for installation in restricted access areas. A restricted access area can be accessed only through the use of a special tool, lock and key, or other means of security. Statement 1017


**Warning**

This unit might have more than one power supply connection. All connections must be removed to de-energize the unit. Statement 1028


**Warning**

Only trained and qualified personnel should be allowed to install, replace, or service this equipment. Statement 1030


**Warning**

To prevent personal injury or damage to the chassis, never attempt to lift or tilt the chassis using the handles on modules (such as power supplies, fans, or cards); these types of handles are not designed to support the weight of the unit. Statement 1032


**Warning**

Hazardous voltage or energy is present on the backplane when the system is operating. Use caution when servicing. Statement 1034


**Warning**

This product requires short-circuit (overcurrent) protection, to be provided as part of the building installation. Install only in accordance with national and local wiring regulations. Statement 1045

**Warning**

When installing or replacing the unit, the ground connection must always be made first and disconnected last. Statement 1046

**Warning**

Installation of the equipment must comply with local and national electrical codes.. Statement 1074

**Warning**

Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments. Statement 1051

Before starting the installation procedures in this chapter, see the “Site Preparation Checklist” section on page 2-15 to verify that all site planning activities were completed.

## Rack-Mounting Guidelines

**Note**

The switch is designed to be installed in standard 19-inch racks.

Before rack-mounting the switch, ensure that the equipment rack complies with the following guidelines:

- The width of the rack, measured between the two front-mounting strips or rails, must be one of the following measurements:
  - 17.5 inches (44.45 cm)
  - 17.75 inches (45.09 cm)
- The depth of the rack, measured between the front- and rear-mounting strips, must be at least 19.25 inches (48.9 cm).
- The rack must have sufficient vertical clearance to insert the chassis: 8.75 inches (22.23 cm) (5 RU)

**Note**

Chassis height is sometimes measured in rack units (RU or just U) where 1 RU or 1 U equals 1.75 in (44.45 mm). A typical server rack is 42 RU or 42 U in height.

**Caution**

If the rack is on wheels, ensure that the brakes are engaged and that the rack is stabilized.

**Warning**

Stability hazard. The rack stabilizing mechanism must be in place, or the rack must be bolted to the floor before you slide the unit out for servicing. Failure to stabilize the rack can cause the rack to tip over. Statement 1048

**Warning**

To prevent bodily injury when mounting or servicing this unit in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety:

- This unit should be mounted at the bottom of the rack if it is the only unit in the rack.
- When mounting this unit in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack. Statement 1006

**Note**

To maintain proper air circulation through the Catalyst switch chassis, you should maintain a recommended separation of a minimum of 6 inches (15 cm) between a wall and the chassis air intake or a wall and the chassis air exhaust. You should also allow a minimum separation of 12 inches (30.5 cm) between the hot air exhaust on one chassis and the air intake on another chassis. Failure to maintain adequate air space can cause the chassis to overheat and the system to fail.

## Unpacking the Switch

**Note**

Do not discard the shipping container when you unpack the switch. Flatten the shipping cartons and store them with the pallet. You will need these containers if you need to move or ship the switch in the future.

Check the contents of the accessory kit. Verify that you received all listed equipment, which should include the following:

- Grounding lug and disposable ESD strap.
- Optional equipment that you ordered, such as console cables, transceivers, or special connectors.
- Blank covers are installed for the port card slots and power supply slots on the chassis.
- Rack-mount shelf kit is provided that includes brackets and a tray to support the chassis when it is installed on a rack.

## Chassis Installation Kits and Cable Guides

The chassis ships with an accessory kit, which includes chassis installation kits and cable guides:

- Standard 19-inch rack-mount L brackets (factory-installed on the chassis). Associated rack-mounting hardware is included in the accessory kit.
- 5 RU rack-mount shelf kit is included in the accessory kit.
- Two cable management guides are included in the accessory kit.

# Installing the Switch Chassis

## Installation Accessory Kits

The switch chassis is designed to be installed in a standard 19-inch rack, either open or enclosed. The chassis is shipped with the 19-inch rack-mount L brackets that are factory installed on the left-front and right-front of the chassis. Screws are included with the accessory kit that are used to secure the chassis in the rack enclosure.



### Note

Depending on the manufacturer, the rack posts might be prethreaded to accept either 10-32 or 12-24 screws. If the rack posts are not prethreaded, you must install 10-32 or 12-24 clip nuts or cage nuts to secure the rack-mount screws. The clip nuts or the cage nuts are not included as part of the accessory kit and must be obtained on your own.


The accessory kit also contains the following chassis installation kits:

- Rack-mount shelf kit. The rack-mount shelf kit is used to support the weight of the chassis.
- Cable guides— Two cable guides can be installed on the front of the chassis using the same sets of screws that secure the chassis rack-mount brackets to the rack posts.

## L Brackets on the Chassis

The switch chassis is shipped with two L brackets installed toward the front of each side of the chassis, as shown in the following figure.

**Figure 1: Brackets on the Switch Chassis**

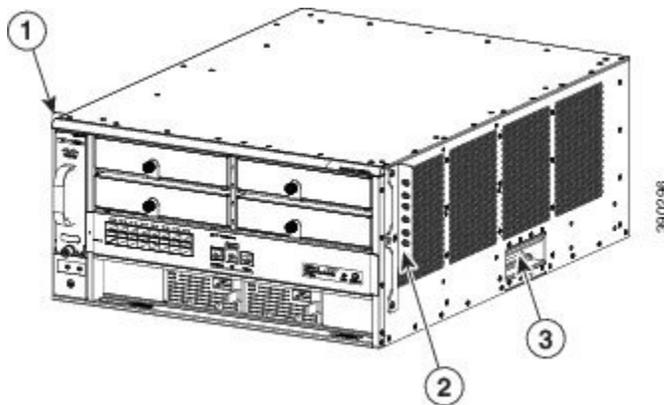

1	Left L bracket	3	Handhold (one on each side of chassis)
2	Right L bracket		

## Installing the Rack-Mount Shelf Kit

Before installing the chassis, you should install the rack-mount shelf kit that is included as part of the accessory kit. The rack-mount shelf kit is shipped as part of the switch accessory kit. It contains two shelf brackets, a crossbar, and screws. The shelf brackets attach directly to the rack and help support the weight of the chassis.

### Required Tools

These tools and equipment are required to install the rack-mount shelf kit:

- Number 1 and number 2 Phillips screwdrivers
- 3/16-inch flat-blade screwdriver
- Tape measure and level

### Installing the Shelf Brackets on a rack



#### Note

On many older equipment racks, the rack posts are prethreaded to accept either 10-32 or 12-24 screws. Newer rack enclosure posts might not be prethreaded. These rack enclosure posts require that you install 10-32 or 12-24 clip nuts or cage nuts to secure the rack-mount screws. The clip nuts or the cage nuts are not included as part of the accessory kit and must be obtained on your own.

Before you install the Shelf brackets, determine the clearance between the insides of the left and right rails of your rack system:

- If the distance between the insides of the rails is 17.5 inches (44.45 cm), then follow the steps in .
  - [Installing Shelf Brackets and Crossbar in a Two-Post Rack with 17.5-inch \(44.45 cm\) Opening , on page 14](#)
  - [Installing Shelf Brackets and Crossbar in a Four-Post Rack with 17.5-inch \(44.45 cm\) Opening, on page 6](#)
- If the distance between the insides of the rails is 17.75 inches (45.09 cm), then follow the steps in .
  - [Installing Shelf Brackets and Crossbar in a Two-Post Rack with 17.75 inch \(45.09 cm\) Opening, on page 17](#)
  - [Installing Shelf Brackets and Crossbar in a Four-Post Rack with 17.75 inch \(45.09 cm\) Opening, on page 10](#)

### Installing Shelf Brackets and Crossbar in a Four-Post Rack with 17.5-inch (44.45 cm) Opening



#### Important

You have to rear-mount the shelf brackets and the crossbar in a rack with a 17.5-inch rail-to-rail opening.

Perform these steps:

### Before You Begin


You will require:

- Number 1 and Number 2 Phillips screwdrivers
- 3/16-inch flat-blade screwdriver
- Tape measure and level

### Procedure

**Step 1** Secure the crossbar to the shelf brackets by using two M4 screws, with one screw on each side.

*Figure 2: Securing the crossbar to the shelf brackets*

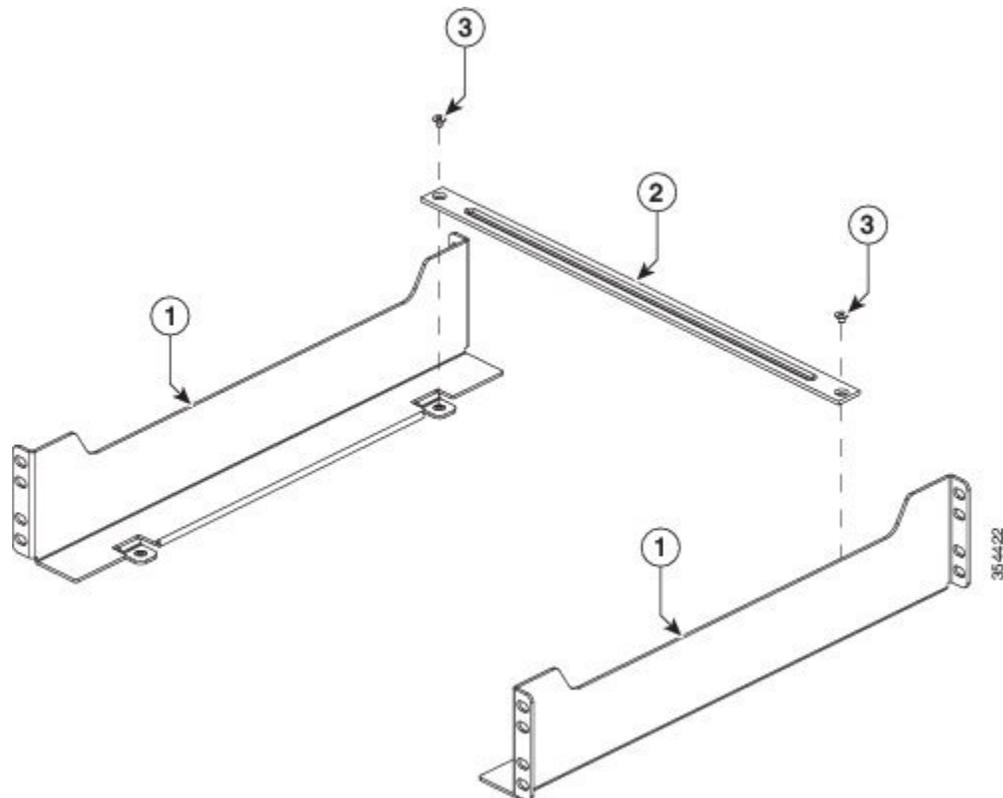


1	Shelf brackets	3	M4 x 5 mm flat-head screw
2	Crossbar		

**Step 2** Position the front side of the support flanges of the shelf brackets on the fixed front-left and front-right posts of the rack and secure them by using the four EA screws (Two EA screws on each side).

**Note** Ensure that the crossbar attached to the shelf brackets is on the rear side of the rack post.

**Figure 3: Installing Shelf Brackets and Crossbar in a 17.5-inch Opening**

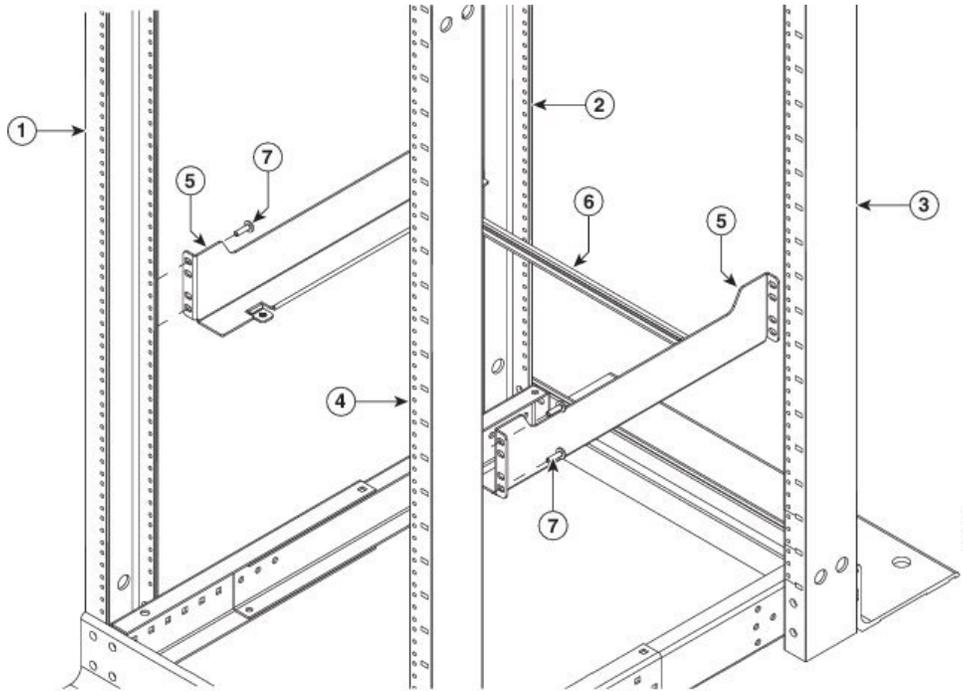


1	Fixed front-left rack post	5	Shelf brackets
2	Adjustable rear-left rack post	6	Crossbar
3	Adjustable rear-right rack post	7	Two EA screws
4	Fixed front-right rack post		


**Step 3** Adjust the adjustable rear-left and rear-right rack posts until it touches the shelf brackets flange surface and secure by using four EA screws, two EA screws on each side.

**Note** We recommend to assemble the shelf brackets rear flanges with rear rack posts by using four EA screws (two EA screws on each side) to avoid the shelf brackets from overhanging at the ends.

**Figure 4:** Before adjusting the rear rack posts

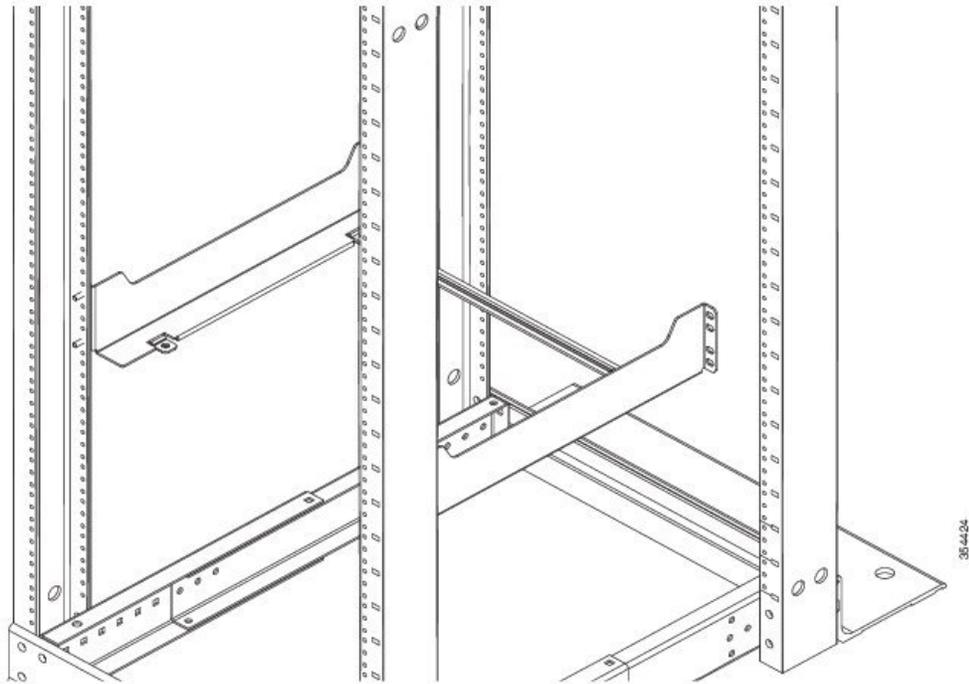

**Figure 5: After adjusting the rear rack posts**

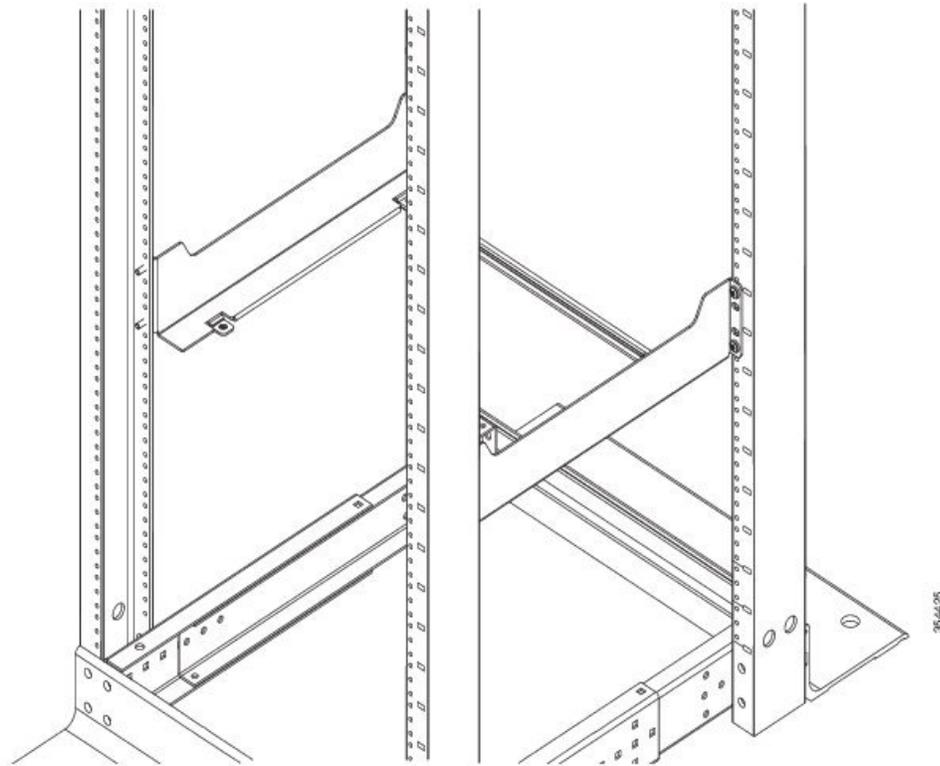

### Installing Shelf Brackets and Crossbar in a Four-Post Rack with 17.75 inch (45.09 cm) Opening



**Important** You have to front-mount the shelf brackets and crossbar on a rack with a 17.75-inch rail-to-rail opening.

Perform these steps:

#### **Before You Begin**


You will require:

- Number 1 and Number 2 Phillips screwdrivers
- 3/16-inch flat-blade screwdriver
- Tape measure and level

## Procedure

- Step 1** Secure the crossbar to the shelf brackets by using two M4 screws, with one screw on each side.

**Figure 6: Securing the crossbar to the shelf brackets**

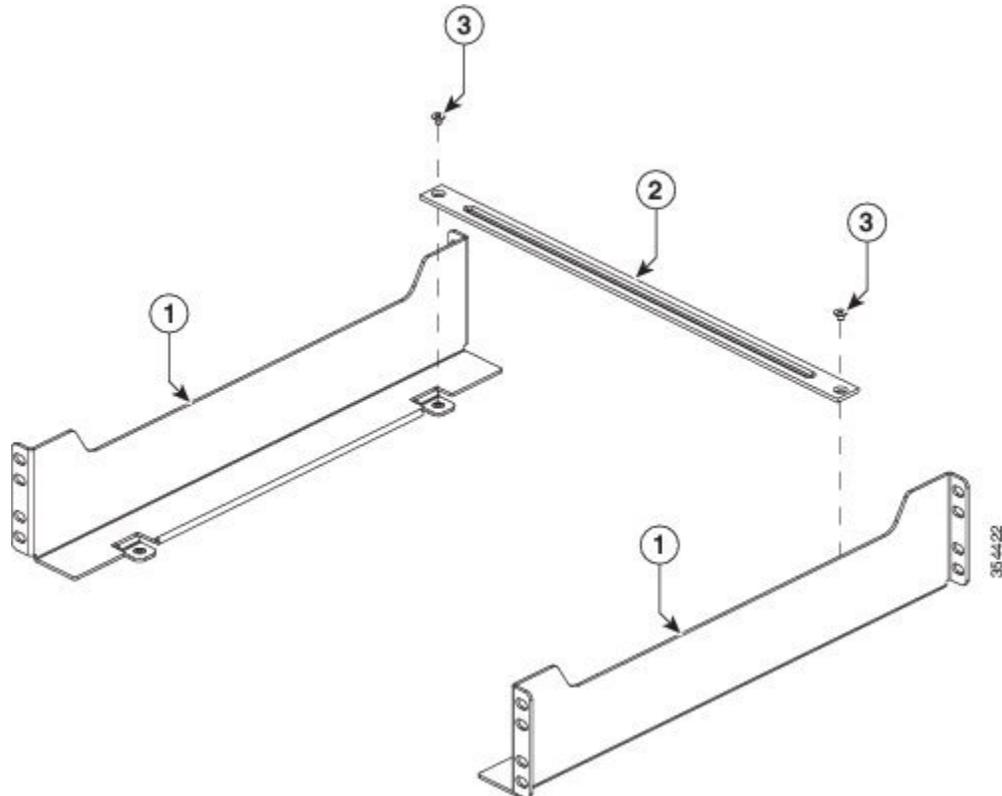


1	Shelf brackets	3	M4 x 5 mm flat-head screw
2	Crossbar		

- Step 2** Position the rear side of the support flanges of the shelf brackets on the front side of the fixed front-left and front-right posts of the rack. Align and secure the bracket to the rack by using the four EA screws (Two EA screws on each side).

**Note** Ensure that the crossbar attached to the shelf brackets is on the rear side of the rack post.

**Figure 7: Installing Shelf Brackets and Crossbar in a 17.5-inch Opening**

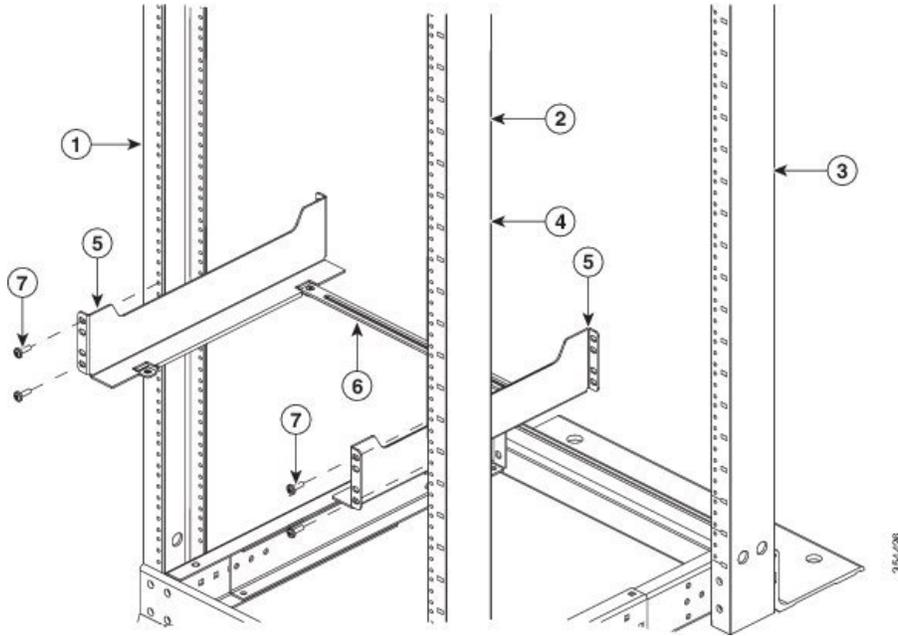


1	Fixed front-left rack post	5	Shelf brackets
2	Fixed front-right rack post	6	Crossbar
3	Adjustable rear-right rack post	7	Two EA screws
4	Adjustable rear-left rack post		


**Step 3** Adjust the adjustable rear-left and rear-right rack posts until it touches the shelf brackets flange surface and secure by using four EA screws, with two EA screws on each side.

**Note** We recommend to assemble the shelf brackets rear flanges with rear rack posts by using the four EA screws (two EA screws on each side) to avoid the shelf brackets from overhanging at the ends.

**Figure 8:** Before adjusting the rear rack posts

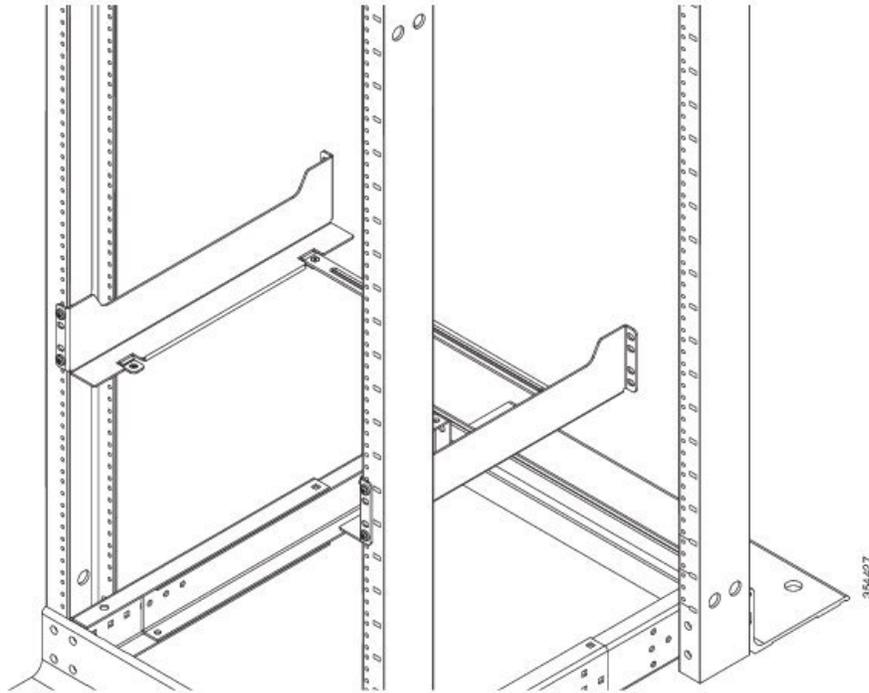

**Figure 9: After adjusting the rear rack posts**

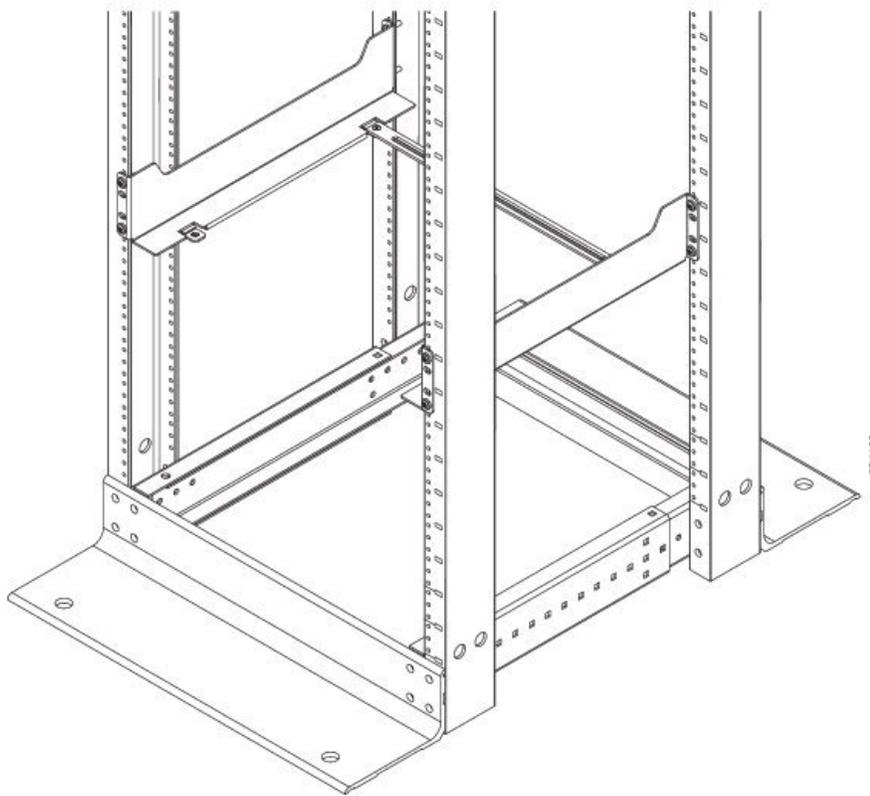

### Installing Shelf Brackets and Crossbar in a Two-Post Rack with 17.5-inch (44.45 cm) Opening



**Important** You have to rear-mount the shelf brackets and the crossbar for a rack with a 17.5-inch rail-to-rail opening.

Perform these steps:

#### **Before You Begin**


You will require:

- Number 1 and Number 2 Phillips screwdrivers
- 3/16-inch flat-blade screwdriver
- Tape measure and level

## Procedure

- Step 1** Secure the crossbar to the shelf brackets by using two M4 screws, with one screw on each side.

**Figure 10: Securing the crossbar to the shelf brackets**

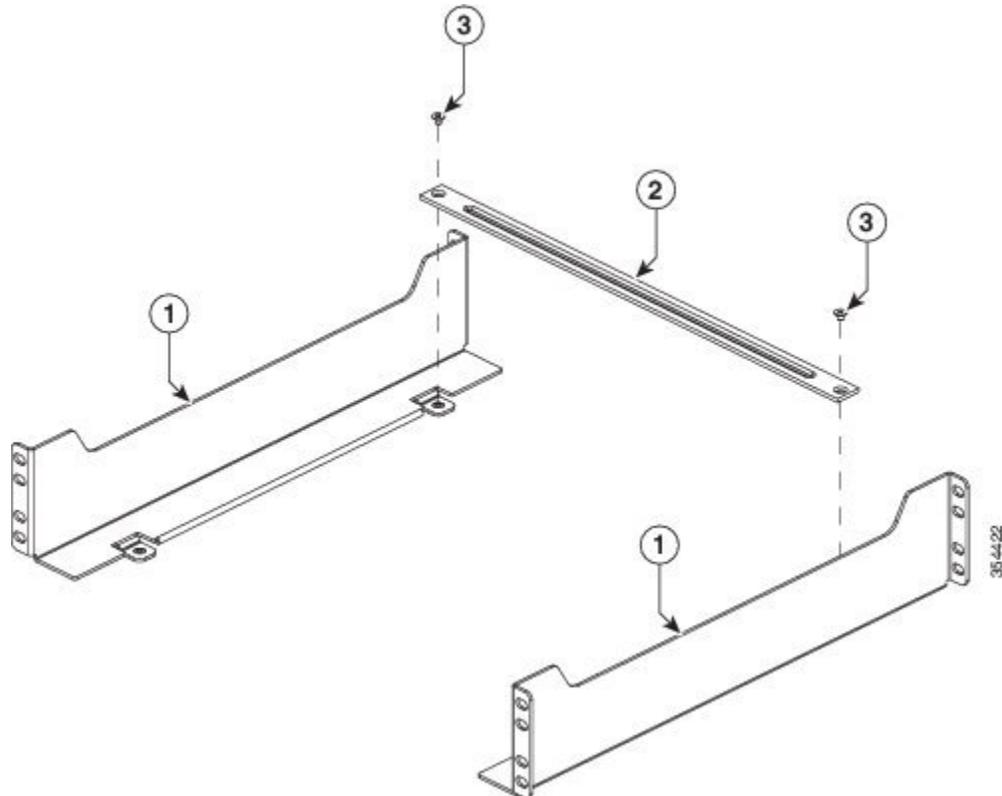


1	Shelf brackets	3	M4 x 5 mm flat-head screw
2	Crossbar		

- Step 2** Position the front side of the support flanges of the shelf brackets on the rear side of the left and the right posts of the rack. Align and secure the bracket to the rack by using the eight EA screws (four EA screws on each side).

**Note** Ensure that the crossbar attached to the shelf brackets is on the rear side of the rack post.

**Figure 11: Installing Shelf Brackets and Crossbar in a Two-Post Rack with 17.5-inch Opening**

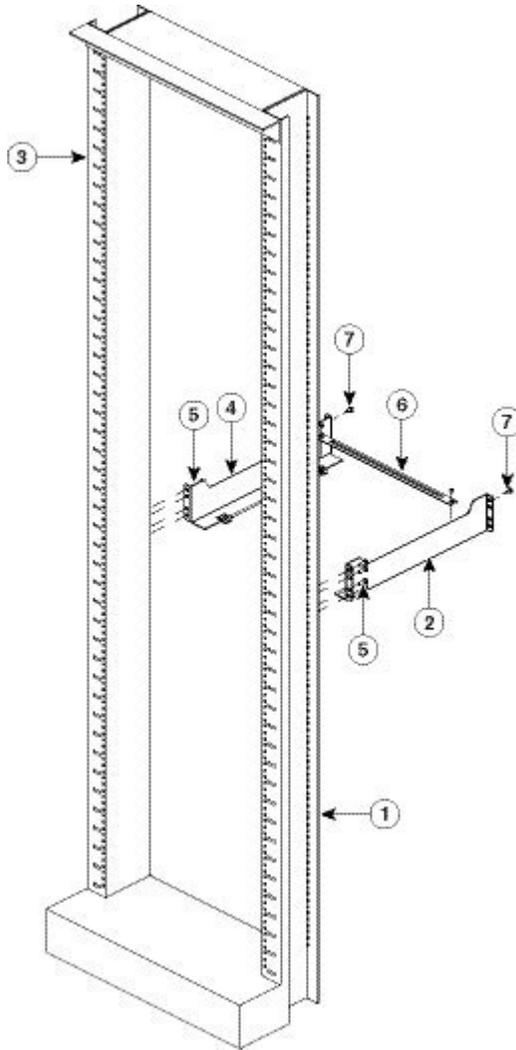

1	Right rail	4	Crossbar
2	Left rail	5	Four EA screws on each side, to secure the shelf brackets to the rack
3	Shelf brackets		

## Installing Shelf Brackets and Crossbar in a Two-Post Rack with 17.75 inch (45.09 cm) Opening



**Important** You have to front-mount the shelf brackets and crossbar in a rack with a 17.75-inch rail-to-rail opening.

Perform these steps:

### Before You Begin


You will require:

- Number 1 and Number 2 Phillips screwdrivers
- 3/16-inch flat-blade screwdriver
- Tape measure and level

### Procedure

**Step 1** Secure the crossbar to the shelf brackets by using two M4 screws, with one screw on each side.


**Figure 12: Securing the crossbar to the shelf brackets**

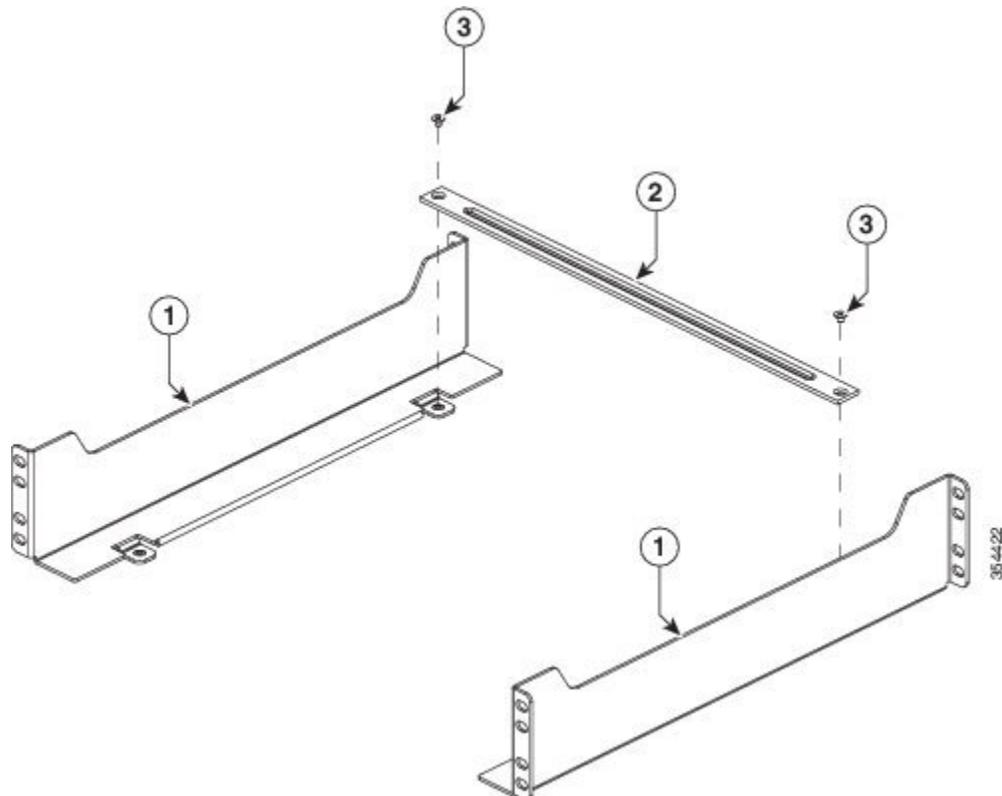

1	Shelf brackets	3	M4 x 5 mm flat-head screw
2	Crossbar		

**Step 2** Position the rear side of the support flanges of the shelf brackets on the front side of the left and the right posts of the rack. Align and secure the bracket to the rack by using the four EA screws (two EA screws on each side).

**Figure 13: Installing Shelf Brackets and Crossbar in a 17.75-inch Opening**

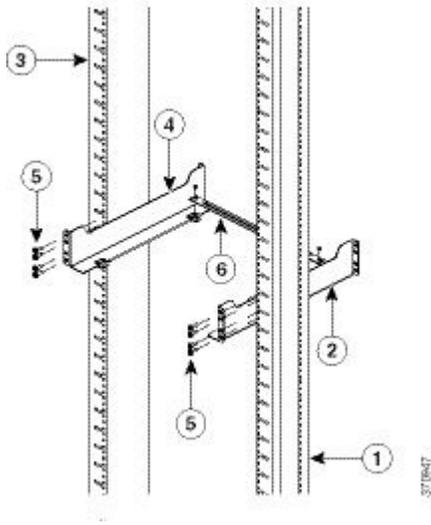

1	Right rail	4	Crossbar
2	Left rail	5	Four EA screws on each side, to secure the shelf bracket to the rack
3	Shelf brackets		

## Rack Mounting the Chassis

### Installing the Chassis in a Four-Post Rack



**Note** The chassis are designed to be mounted in equipment racks that meet ANSI/EIA 310-D and ETS 300-119 standards.

#### Procedure


**Step 1** Based on the type of rack (closed (cabinet) rack or open rack), you can install the left and the right L brackets of the chassis in one of the following ways:

- Original position - Left L bracket on the left side of the chassis and right L bracket on the right side of the chassis.

**Note** The chassis is shipped with the L brackets installed, which is referred to as the original position.


- 180° flip position - Left L bracket on the right side of the chassis and right L bracket on the left side of the chassis.

**Figure 14: Original position of L bracket**

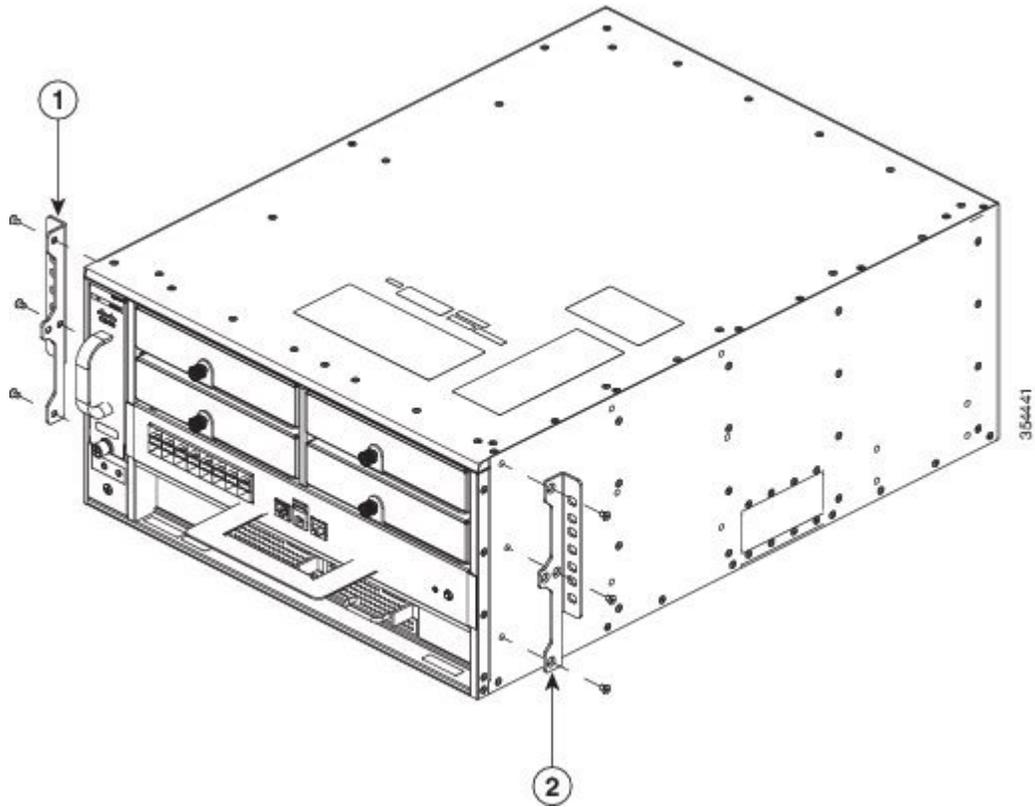

1	Left L bracket	2	Right L bracket
---	----------------	---	-----------------

Figure 15: 180° flip position of L bracket

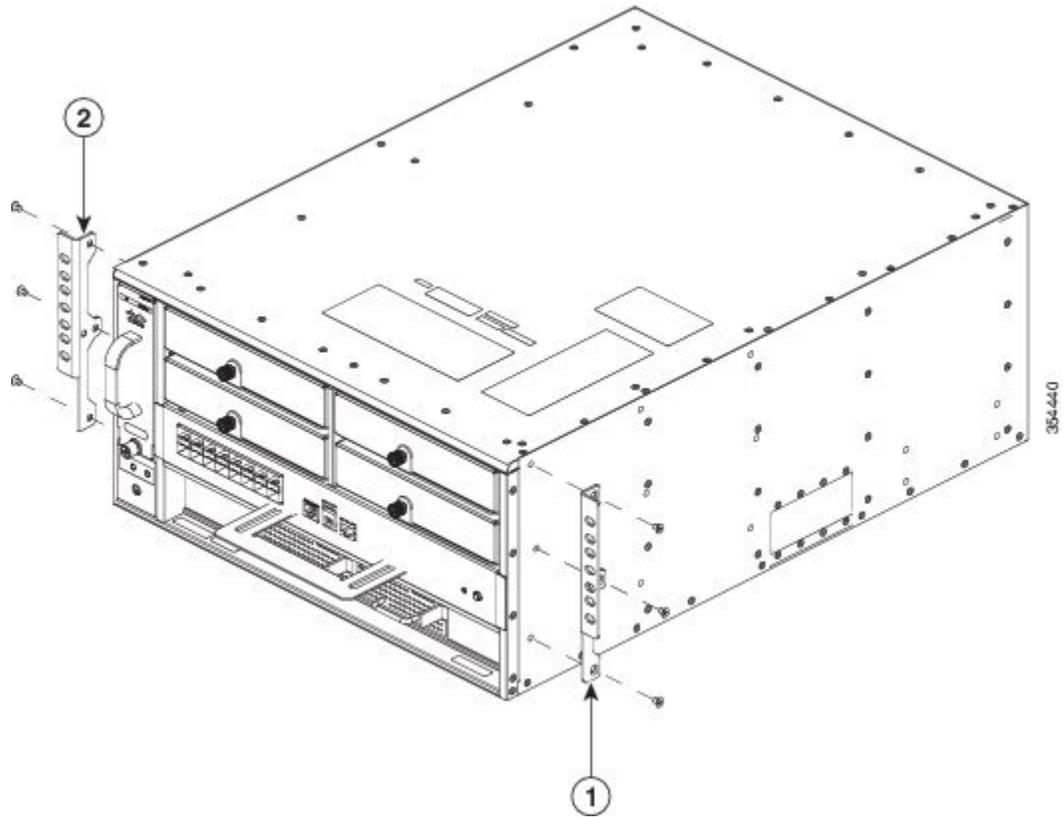


1	Left L bracket	2	Right L bracket
---	----------------	---	-----------------

- Step 2** With a person standing at each side of the chassis, each person supports the chassis by placing one hand in the handhold on the side of the chassis (see figure above) and using the other hand under the back of the chassis for balance. Slowly lift the chassis together. Avoid sudden twists or moves to prevent injury.
- Step 3** Rest the back end of the chassis on the rack-mount shelf and carefully slide the chassis into the rack until the L brackets meet the front rails of the rack system.
- Step 4** Locate the rack post holes that align with the chassis L bracket holes. If the rack post holes are prethreaded, determine if the threads are 10-32 or 12-24. If the rack post holes are unthreaded, install fourteen (seven on each side) either 10-32 or 12-24 clip or cage nuts over the rack post holes to accept the installation screws.
- Note** Clip nuts or cage nuts are not included as part of the accessory kit that comes with the chassis. You must obtain them yourself.

- Step 5** If you want to install one or both of the optional cable guide assemblies, position the cable guides so that the cable guide mounting holes are aligned with L bracket holes as shown in figure below.


**Figure 16: Installing the Cable Mount Guides**

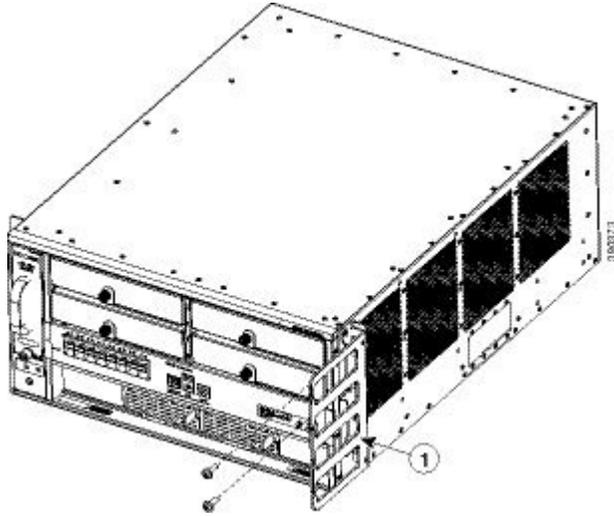


1	Cable guide
---	-------------

- Step 6** Install all fourteen 10-32 or 12-24 screws (seven on each side) through the cable guide mounting holes, rack-mount L bracket holes, rack post holes, and into the clip nuts to secure the cable guides and the chassis to the rack post. Tighten the screws securely.
- Step 7** Secure the chassis using fourteen screws through the holes in the L bracket and into the rack post holes.

**Figure 17: Chassis in a rack with L brackets at original position**

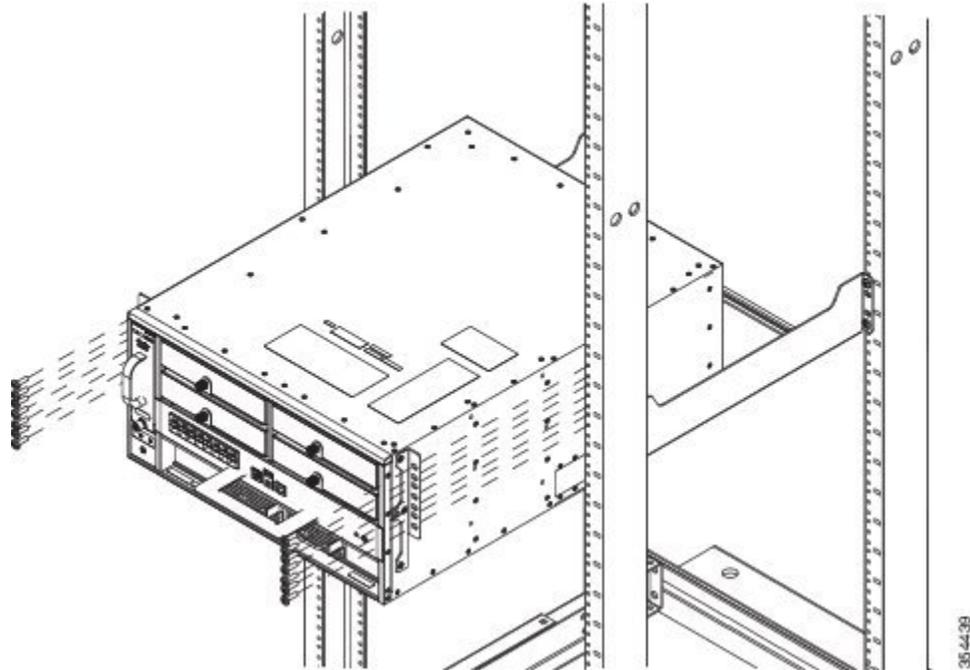

**Figure 18: Chassis in a rack with L brackets at inverted position**

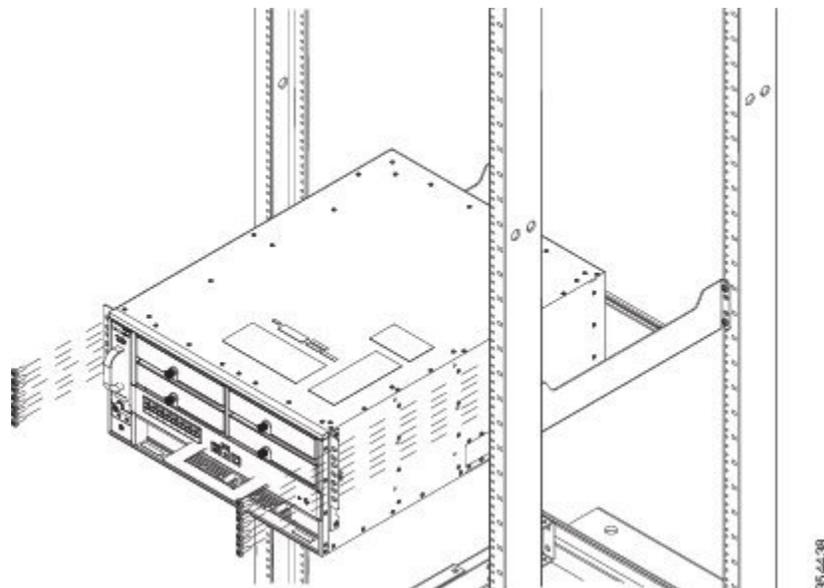

1	10-32 or 12-24 screws
---	-----------------------

---

## Installing the Chassis in a Two-Post Rack



**Note** The chassis are designed to be mounted in equipment racks that meet ANSI/EIA 310-D and ETS 300-119 standards.

---


### Procedure

---

- Step 1** Before rack-mounting the chassis, determine if you need to move the L brackets so that the chassis is installed in one of the recommended positions:
- Positioned so the front of the chassis is approximately flush with the front of the rack:
    - The chassis is shipped with the L brackets in the correct location; there is no need to move them.
  - Positioned so approximately one fourth of the chassis protrudes in front of the rack:
    - Remove the screws in the L brackets.
    - Reposition the L brackets to align with the first set of holes behind the holes where the L brackets were originally installed (see figure below).
    - Secure the brackets with the screws.
  - Positioned so approximately one half of the chassis protrudes in front of the rack:
    - Remove the screws in the L brackets.
    - Reposition the L brackets to align with the second set of holes behind the holes where the L brackets were originally installed (see figure below).

- Secure the brackets with the screws.

**Figure 19: Locations of Screw Holes for Alternate Chassis Installation Positions**

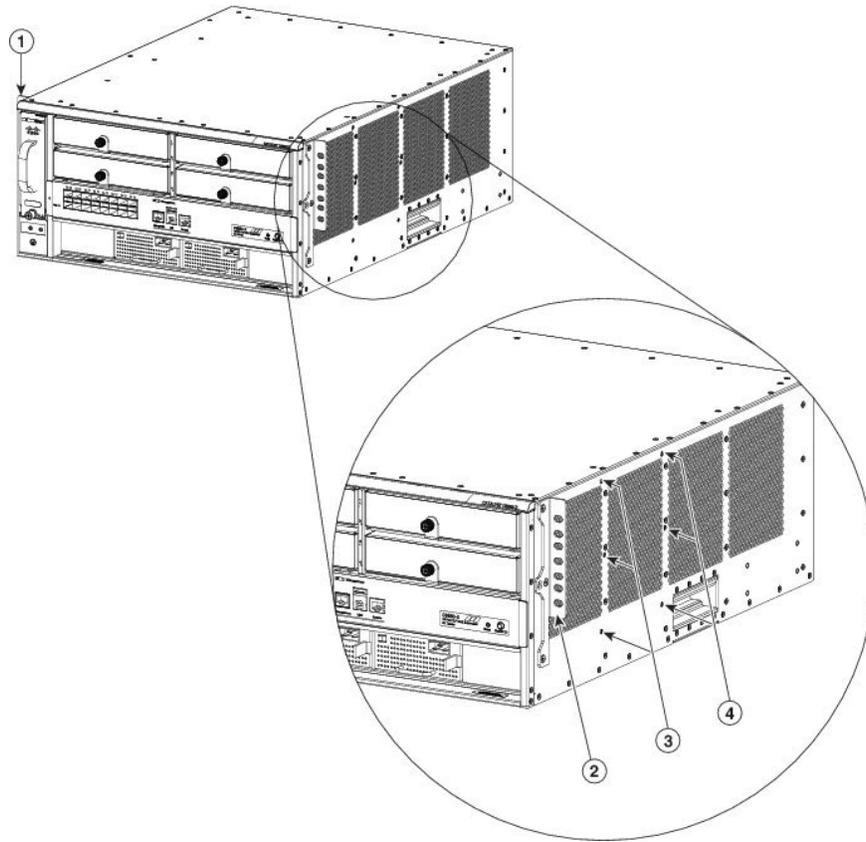

1	Left L bracket already attached. When the chassis is installed, the front of the chassis is approximately flush with the front of the rack.	3	Screw holes for reattaching the L brackets. When the chassis is installed, approximately one quarter of it protrudes in front of the rack.
2	Right L bracket already attached. When the chassis is installed, the front of the chassis is approximately flush with the front of the rack.	4	Screw holes for reattaching the L brackets. When the chassis is installed, approximately one half of it protrudes in front of the rack.


- Step 2** With a person standing at each side of the chassis, each person supports the chassis by placing one hand in the handhold on the side of the chassis (see figure above) and using the other hand under the back of the chassis for balance. Slowly lift the chassis together. Avoid sudden twists or moves to prevent injury.
- Step 3** Rest the back end of the chassis on the rack-mount shelf and carefully slide the chassis into the rack until the L brackets meet the front rails of the rack system.
- Step 4** Locate the rack post holes that align with the chassis L bracket holes. If the rack post holes are prethreaded, determine if the threads are 10-32 or 12-24. If the rack post holes are unthreaded, install eight or ten (four or

five on each side) either 10-32 or 12-24 clip or cage nuts over the rack post holes to accept the installation screws.

**Note** Clip nuts or cage nuts are not included as part of the accessory kit that comes with the chassis. You must obtain them yourself.

**Step 5** If you want to install one or both of the optional cable guide assemblies, position the cable guides so that the cable guide mounting holes are aligned with L bracket holes as shown in figure below.


**Figure 20: Installing the Cable Mount Guides**

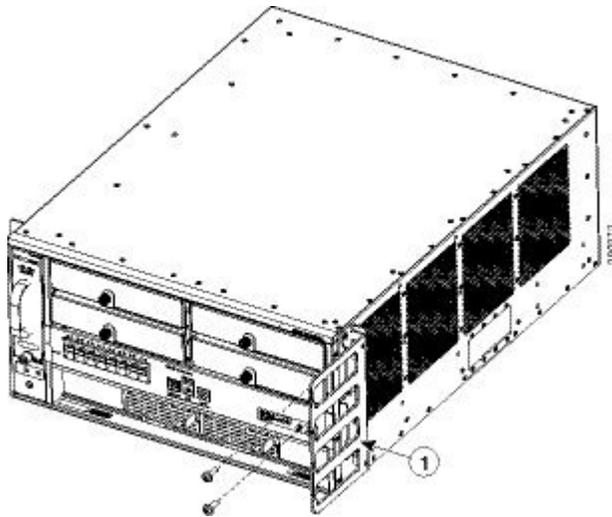

1	Cable guide
---	-------------

- Step 6** Install all eight 10-32 or 12-24 screws (four on each side) through the cable guide mounting holes, rack-mount L bracket holes, rack post holes, and into the clip nuts to secure the cable guides and the chassis to the rack post. Tighten the screws securely.
- Step 7** Secure the chassis using four screws through the holes in the L bracket and into the rack post holes.

**Figure 21: Installing the Cable Mount Guides**

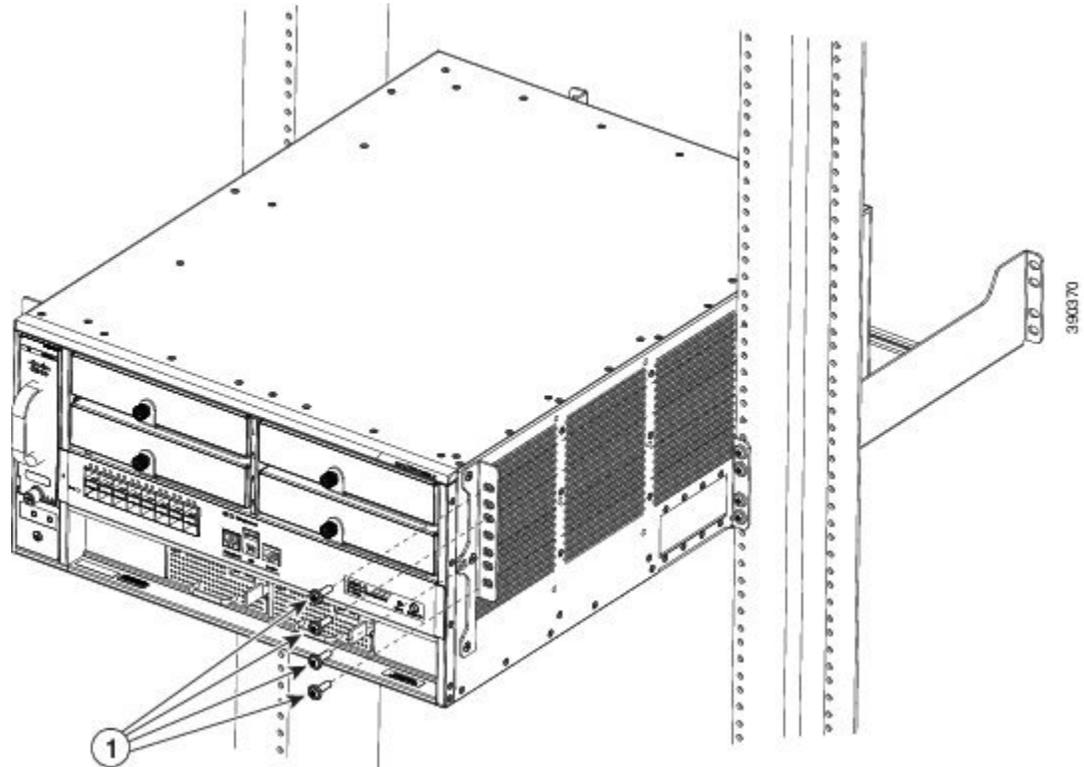

1	10-32 or 12-24 screws
---	-----------------------

### What to Do Next

After installing the chassis in its location, complete the installation process by following these procedures:

- Connecting the chassis to system ground. See [Establishing the System Ground](#), on page 28.
- Installing and connecting the power supplies to source power. For information on how to install and cable power supplies, see the [Installing Power Supplies](#).
- Connecting to the switch console port. See [Connecting the Switch Console Port](#), on page 30.
- Connecting to the uplink ports. [Installing SFP and SFP+ Transceiver Modules](#), on page 31
- Powering-up the chassis and verifying the installation. See [Verifying Switch Chassis Installation](#), on page 33.

## Establishing the System Ground

This section describes how to connect a system ground to the switch.

**Caution**

Installations that rely solely on system grounding using only an AC third-prong ground run a substantially greater risk of equipment problems and data corruption than those installations that use both the AC third-prong ground and a properly installed system ground.

The system ground provides additional grounding for EMI shielding requirements and grounding for the low voltage supplies (DC-DC converters) on the modules. You must observe the following system grounding guidelines for your chassis:

- You must install the system ground connection with any other rack or system power ground connections that you make. The system ground connection is required if FXS modules are installed or if this equipment is installed in a U.S. or European Central Office.
- You must connect both the system ground connection and the power supply ground connection to an earth ground. The system ground connection is required if FXS modules are installed or if this equipment is installed in a U.S. or European Central Office.
- When using DC-input power supplies, you must install the system (ground before you attach the source DC power cables to the DC PEM. Power down the chassis before attaching the system ground.

**Note**

In all situations, grounding practices must comply with Section 250 of the National Electric Code (NEC) requirements or local laws and regulations. A 6 AWG grounding wire is preferred from the chassis to the rack ground or directly to the common bonding network (CBN). The equipment rack should also be connected to the CBN with 6 AWG grounding wire.

**Note**

The system ground serves as the primary safety ground for chassis that are equipped with DC-input power supplies. The DC-input power supplies for these chassis do not have a separate ground.

## Required Tools and Equipment

To connect the system ground, you need the following tools and materials:

- Grounding lug—A two-hole standard barrel lug. Supports up to 6 AWG wire. Supplied as part of accessory kit.
- Grounding screws—Two M4 x 8 mm (metric) pan-head screws. Supplied as part of the accessory kit.
- Grounding wire—Not supplied as part of accessory kit. The grounding wire should be sized according to local and national installation requirements. Depending on the power supply and system, a 12 AWG to 6 AWG copper conductor is required for U.S. installations. Commercially available 6 AWG wire is recommended. The length of the grounding wire depends on the proximity of the switch to proper grounding facilities.
- No. 1 Phillips screwdriver.

- Crimping tool to crimp the grounding wire to the grounding lug.
- Wire-stripping tool to remove the insulation from the grounding wire.


## Connecting the System Ground

To establish an earth ground for the chassis, you must attach a grounding cable from the chassis' grounding lug to the rack.

### Before You Begin

Review the following illustration and table.

**Figure 22: System Ground Location**

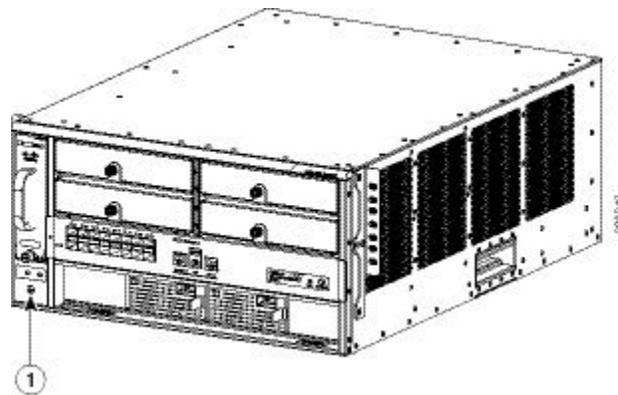

1	Location of system ground lug
---	-------------------------------

### Procedure

- Step 1** Use a wire-stripping tool to remove approximately 0.75 inch (19 mm) of the covering from the end of the grounding wire.
- Step 2** Insert the stripped end of the grounding wire into the open end of the grounding lug.
- Step 3** Crimp the grounding wire in the barrel of the grounding lug. Verify that the ground wire is securely attached to the ground lug.
- Step 4** Place the grounding wire lug against the grounding pad, making sure that there is solid metal-to-metal contact.
- Step 5** Secure the grounding lug to the chassis with two M4 screws. Ensure that the grounding lug and the grounding wire will not interfere with other switch hardware or rack equipment.
- Step 6** Prepare the other end of the grounding wire with a ring lug, and secure it to the rack with a screw.

## Installing the Power Supplies in the Switch Chassis

The chassis power supplies (AC or DC) might be shipped separately from the switch chassis. Remove the power supply from its shipping packaging, and then install and connect it to the site power by referring to [Installing Power Supplies](#).

**Note**

AC-input and DC-input power supplies can be mixed in a chassis.

## Installing the Port Card in the Switch Chassis

The modular port card is optional and might be shipped separately from the switch chassis. Remove the port card from its shipping packaging, and then install it, see the [Installing a Modular Port Card](#) section.

## Connecting the Switch Console Port

This section describes how to connect to the supervisor engine console port from a terminal or modem. The console port on the supervisor engine allows you to perform the following functions:

- Configure the switch from the CLI.
- Monitor network statistics and errors.
- Configure SNMP agent parameters.
- Download software updates to the switch, or distribute software images residing in flash memory to attached devices.

The console port is located on the front panel of the chassis.

The accessory kit that shipped with your switch might contain the necessary cable and adapters (depending on if you ordered them) to connect a terminal or modem to the console port. To connect a terminal to the console port using the cable and adapters provided, follow these steps:

### Procedure

- Step 1** Connect to the port using the RJ-45-to-RJ-45 cable and RJ-45-to-DB-25 DTE adapter or RJ-45-to-DB-9 DTE adapter (labeled "Terminal").
- Step 2** Position the cable in the cable guide (if installed). Make sure there are no sharp bends in the cable.
- Step 3** Check the terminal documentation to determine the baud rate. The baud rate of the terminal must match the default baud rate (9600 baud) of the console port. Set up the terminal as follows:
  - 9600 baud
  - 8 data bits
  - No parity
  - 1 stop bits

## Connecting the Uplink Ports

### SFP and SFP+ Transceiver Modules

The SFP and SFP+ transceiver modules provide copper or fiber-optic connections to other devices. These transceiver modules are field-replaceable and provide the uplink interfaces when installed in an SFP module slot. The SFP modules have LC connectors for fiber-optic connections or RJ-45 connectors for copper connections.

For Cisco SFP and SFP+ transceiver modules documentation, including compatibility matrixes, refer to this URL: [http://www.cisco.com/en/US/products/hw/modules/ps5455/products\\_device\\_support\\_tables\\_list.html](http://www.cisco.com/en/US/products/hw/modules/ps5455/products_device_support_tables_list.html)

### Installing SFP and SFP+ Transceiver Modules

#### Before You Begin

For cable specifications, see Appendix B, “Connector and Cable Specifications.”

Observe these precautions:



#### Warning

Class 1 laser product. Statement 1008

- Do not remove the dust plugs from the SFP transceiver modules or the rubber caps from the fiber-optic cable until you are ready to connect the cable. The plugs and caps protect the module ports and cables from contamination and ambient light.
- Removing and installing an SFP transceiver module can shorten its useful life. Do not remove and insert any SFP transceiver module more often than is necessary.
- To prevent ESD damage, follow your normal board and component handling procedures when connecting cables to the switch and other devices.



#### Note


For installing SFP or SFP+ modules from the modular port card, see the [Installing SFP and SFP+ Transceiver Modules in the Port Card](#) section.

#### Procedure

- Step 1** Attach an ESD-preventive wrist strap to your wrist and to an earth ground surface.
- Step 2** Find the send (Tx) and receive (Rx) markings that identify the top of the SFP module. On some SFP transceiver modules, the send and receive (Tx and Rx) markings might be shown by arrows that show the direction of the connection.


- Step 3** If the SFP transceiver module has a bale-clasp latch, move it to the open, unlocked position.
- Step 4** Align the module in front of the slot opening, and push until you feel the connector snap into place.

**Figure 23: Installing an SFP Module in the SFP Transceiver Module Port**

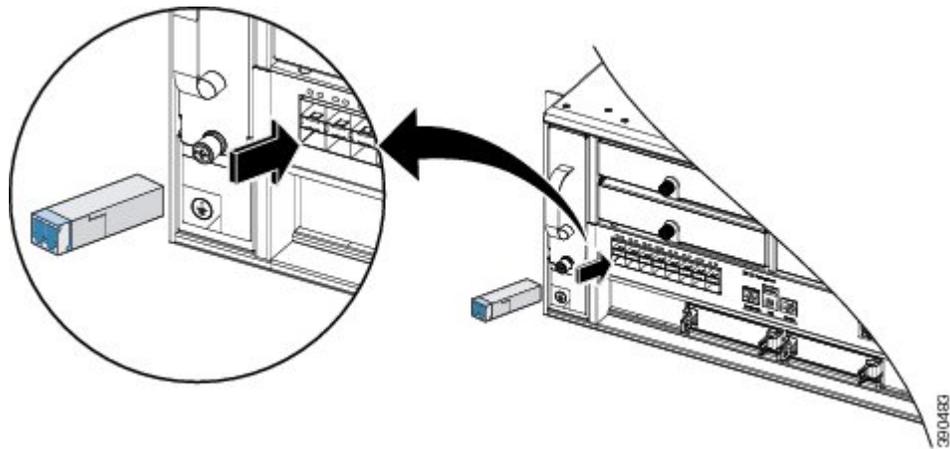

- Step 5** If the module has a bale-clasp latch, close it to lock the SFP transceiver module in place.
- Note** If you are inserting the SFP transceiver module in the lower ports, you need to invert the module.
- Step 6** Remove the SFP dust plugs and save.
- Step 7** Connect the SFP cables.

**Figure 24: Port with SFP Transceiver Modules Installed**

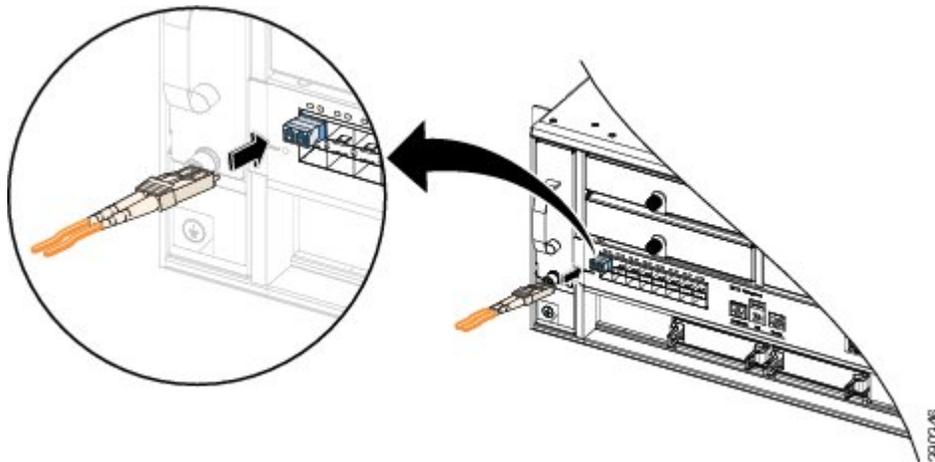

## Removing SFP or SFP+ Transceiver Modules



**Note** For removing SFP or SFP+ modules from the modular port card, see the [Removing SFP or SFP+ Modules from the Modular Port Card](#) section.

### Procedure

- Step 1** Attach an ESD-preventive wrist strap to your wrist and to an earth ground surface.
- Step 2** Disconnect the cable from the SFP transceiver module. For reattachment, note which cable connector plug is send (Tx) and which is receive (Rx).
- Step 3** Insert a dust plug into the optical ports of the SFP transceiver module to keep the optical interfaces clean.
- Step 4** If the module has a bale-clasp latch, pull the bale out and down to eject the module. If you cannot use your finger to open the latch, use a small, flat-blade screwdriver or other long, narrow instrument to open it.
- Step 5** Grasp the SFP transceiver module, and carefully remove it from the slot.
- Step 6** Place the SFP transceiver module in an antistatic bag or other protective environment.

## Verifying Switch Chassis Installation

### Procedure

- Step 1** Verify that all empty module slots have blank faceplates installed and that the screws holding the plates in place are tight. The blank faceplates optimize the air flow through the chassis and contain electromagnetic interference.
  - Warning** Blank faceplates and cover panels serve three important functions: they prevent exposure to hazardous voltages and currents inside the chassis; they contain electromagnetic interference (EMI) that might disrupt other equipment; and they direct the flow of cooling air through the chassis. Do not operate the system unless all cards, faceplates, front covers, and rear covers are in place. Statement 1029
- Step 2** Ensure that the unused power supply unit has a metal cover plate installed.
- Step 3** Turn on the power supply switches to power up the system. During the power-up sequence, the system performs a series of bootup diagnostic tests.

Additional system diagnostic tests are available. These tests allow you to perform a complete sanity check on the system prior to inserting the system into your network and to monitor the health of the system while the system is running. Refer to the “Online Diagnostics” section on page 3-19 for further information.

**Tip** When prestaging systems in a nonproduction environment, we recommend that you run all diagnostic tests, including the disruptive tests, to prescreen the systems for any failures.

## Online Diagnostics

The switch running Cisco IOS has many levels of online diagnostic capabilities. The online diagnostics are divided into four categories:

- **Bootup**—Bootup diagnostics automatically run during bootup, module OIR, or switchover to a backup supervisor engine.
- **Background health**—Monitoring diagnostic tests are continuously run by the system to monitor system health.
- **On-demand online diagnostics**—On-demand online diagnostics can be used to run any test from the CLI. You can also run on-demand online diagnostics to perform a sanity check on the system hardware. Some of these tests are disruptive and will impact traffic flow. You must follow the on-demand diagnostic guidelines exactly to avoid false failures.
- **Scheduled diagnostics**—Scheduled diagnostics can be used to run any of the above tests at user-designated intervals.

For complete information on the online diagnostic tests and how to run them, refer to the software configuration guide.