

电话现场的安装在IP电话7841的

Contents

[Introduction](#)

[Prerequisites](#)

[Requirements](#)

[Components Used](#)

[背景信息](#)

[Configure](#)

[配置](#)

[Verify](#)

[Troubleshoot](#)

Introduction

本文描述如何在一个Cisco 7841系列IP电话上安装电话现场。

Prerequisites

Requirements

There are no specific requirements for this document.

Components Used

本文档中的信息基于以下软件和硬件版本：

- Cisco Unified Communication管理器12.x
- Cisco IP电话7841

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. 如果您的网络实际，请保证您了解所有命令的潜在影响。

背景信息

Cisco Unified通信管理器(CUCM)为12种语言包括英语和16个国家(地区)提供系统定义的本地化技术支持包括美国。网络地点指定国别的语音和节奏;用户地点指定语言使用文本显示。

Configure

配置

这是执行电话的硬出厂重置的程序：

步骤1.从Cisco网站下载现场。

Downloads Home / Collaboration Endpoints / IP Phones / IP Phone 7800 Series / IP Phone 7841 / Unified Communications Manager Endpoints Locale Installer- 12.1(1.1000)

IP Phone 7841

Release 12.1(1.1000)

Related Links and Documentation

Notifications

- No related links or documentation -

File Information	Release Date	Size	
Cisco Unified Communications Locale Installer 12.1.1.1000 Arabic (United Arab Emirates) for Cisco Unified IP Phones FW 12.1(1) po-locale-ar_AE-k3-12.1.1.1000-1.cop.sgn	27-MAR-2018	2.89 MB	Download
Cisco Unified Communications Locale Installer 12.1.1.1000 Arabic (Bahrain) for Cisco Unified IP Phones FW 12.1(1) po-locale-ar_BH-k3-12.1.1.1000-1.cop.sgn	27-MAR-2018	2.88 MB	Download
Cisco Unified Communications Locale Installer 12.1.1.1000 Arabic (Algeria) for Cisco Unified IP Phones	27-MAR-2018	2.88 MB	Download

步骤2.连接对OS Administration >软件升级>安装/升级。

Cisco Unified Operating System Administration

For Cisco Unified Communications Solutions

Show Settings Security Software Upgrades Services Help

Install/Upgrade

TFTP File Management

Install/Upgrade

Customized Logon Message

Branding

WARNING: It is recommended to perform a successful backup. Please verify backup configuration.

Cisco Unified Operating System Administration

System version: 12.0.0.99834-4

VMWare Installation: 2 vCPU Intel(R) Xeon(R) CPU E5-2697A v4 @ 2.60GHz, disk 1: 110Gbytes, 8192Mbytes RAM, ERROR: UNDISKED: Partitions unaligned, WARNING: DNS unreachable

User admin last logged in to this cluster on Friday, June 29, 2018 3:39:36 PM IST, to node 10.106.111.182, from 10.196.121.10 using HTTPS

User admin failed to log in 1 times!

Most recent failure Sunday, July 1, 2018 5:26:34 PM IST, to 10.106.111.182, from 10.65.43.63 using HTTPS

Copyright © 1999 - 2017 Cisco Systems, Inc. All rights reserved.

This product contains cryptographic features and is subject to United States and local country laws governing import, export, transfer and use. Delivery of Cisco cryptographic products does not imply that exporters, distributors and users are responsible for compliance with U.S. and local country laws. By using this product you agree to comply with applicable laws and regulations. If you are unable to comply with applicable laws and regulations, you should not use this product.

A summary of U.S. laws governing Cisco cryptographic products may be found at our [Export Compliance Product Report](#) web site.

For information about Cisco Unified Communications Manager please visit our [Unified Communications System Documentation](#) web site.

For Cisco Technical Support please visit our [Technical Support](#) web site.

步骤3.如镜像所显示，请进入SFTP服务器的证件。



Cisco Unified Operating System Administration

For Cisco Unified Communications Solutions

Show ▾ Settings ▾ Security ▾ Software Upgrades ▾ Services ▾ Help ▾

Software Installation/Upgrade

Cancel Next

- Status -


Status: Ready

- Software Location -


Source*	<input type="text" value="Remote Filesystem"/>
Directory*	<input type="text" value="/"/>
Server*	<input type="text" value="192.168.0.5"/>
User Name*	<input type="text" value="cisco"/>
User Password*	<input type="password" value="*****"/>
Transfer Protocol*	<input type="text" value="SFTP"/>
SMTP Server	<input type="text"/>
Email Destination	<input type="text"/>

*- indicates required item.

步骤4.如镜像所显示，选择现场从选项/升级下拉菜单并且其次点击。现场的安装开始。

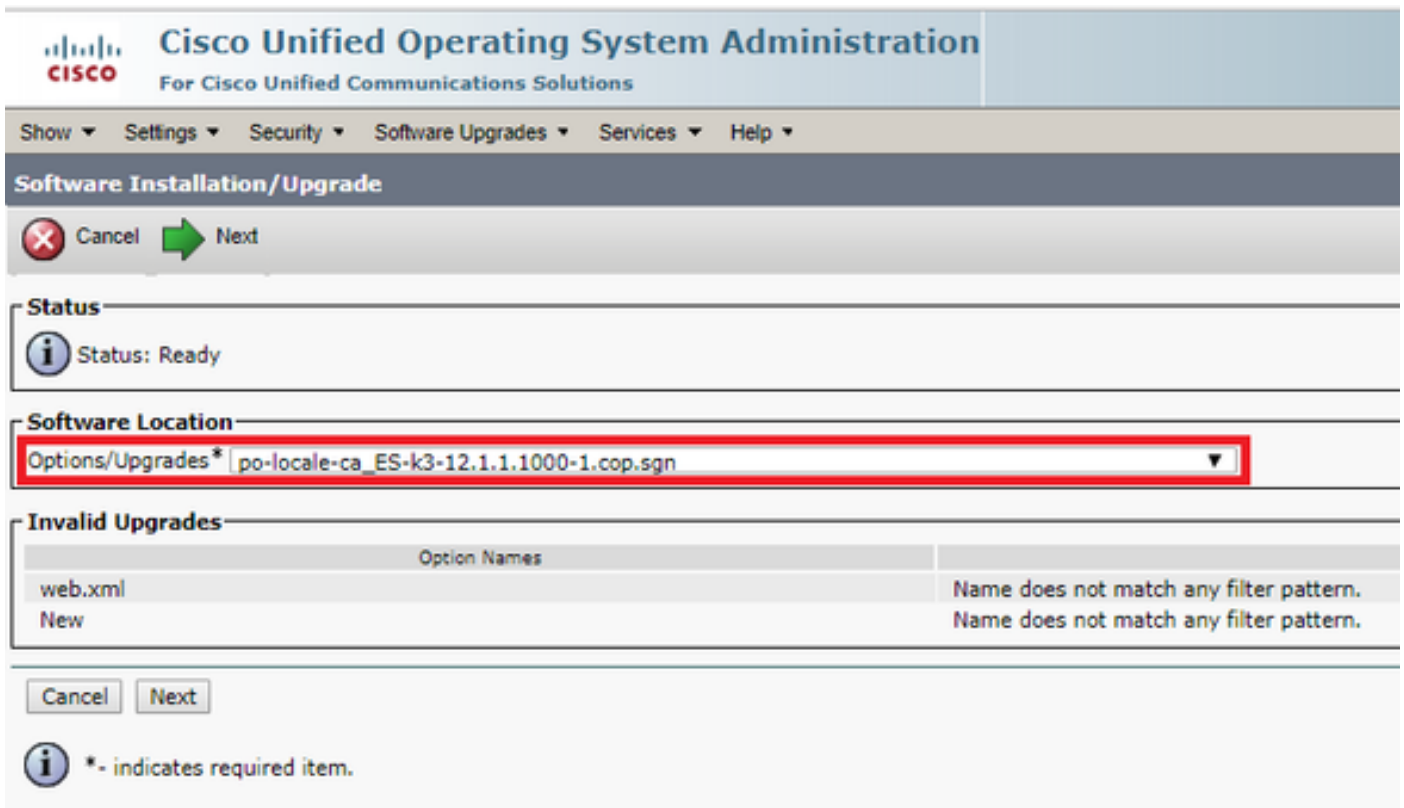

5. 在校验和详细资料被验证后，如镜像所显示，点击其次。

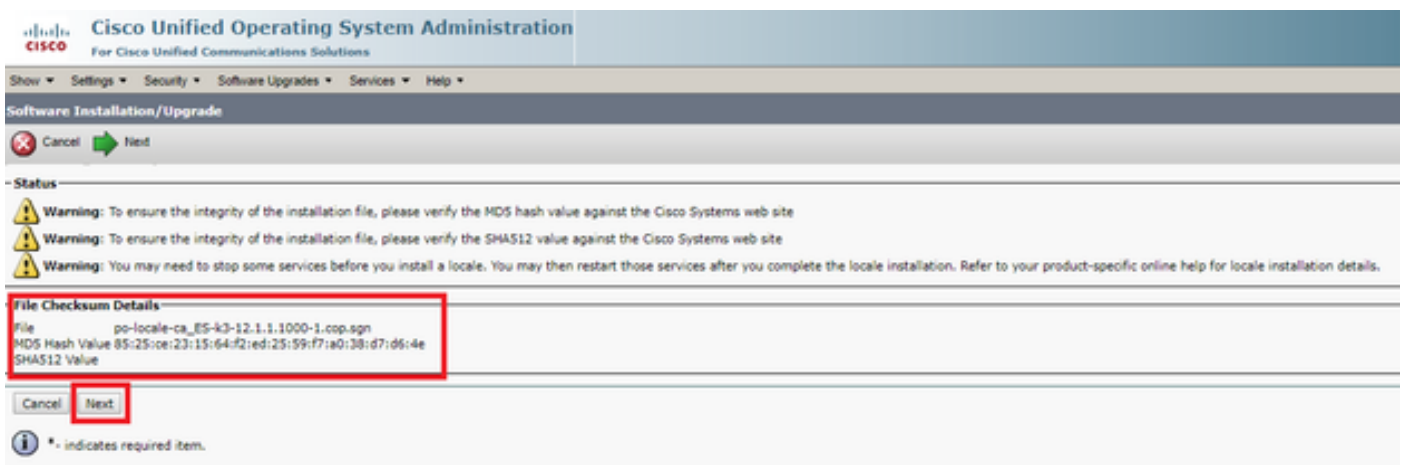

步骤6.现场的安装是成功的

Cisco Unified Operating System Administration
For Cisco Unified Communications Solutions

Show Settings Security Software Upgrades Services Help

Software Installation/Upgrade

Install Another

Installation Status

File po-locale-ca_ES-k3-12.1.1.1000-1.cop.sgn
 Start Time Mon Jul 02 13:19:26 IST 2018
 Status Complete

Installation Log

```

[18/07/02_13:19:57] locale_install.sh: Publisher: Starting installdb...
/bin/su -l informix -s /bin/sh -c
"source /usr/local/cm/db/dblenv.bash /usr/local/cm ;
source /usr/local/cm/db/informix/local/ids.env ;
nice /usr/local/cm/bin/installdb -x /usr/local/cm/db/xml/xml"
    
```

Install Another

i *- indicates required item.

步骤7.重置运行它在所有节点的Cisco Tftp服务，当您连接对Servicability页> Tools> Control中心功能服务。如镜像所显示，选择Cisco Tftp服务那里并且点击重新启动。

Cisco Unified Serviceability
For Cisco Unified Communications Solutions

Alarm Trace Tools Snmp CallHome Help

Control Center - Feature Services

Start Stop Restart Refresh Page

Status:
Ready

Select Server
Server: 10.106.111.182--CUCM Voice/Video Go

Performance and Monitoring Services

Service Name	Status:
Cisco Serviceability Reporter	Started
Cisco CallManager SNMP Service	Started


Directory Services

Service Name	Status:
Cisco DirSync	Started


CM Services

Service Name	Status:
Cisco CallManager	Started
Cisco Unified Mobile Voice Access Service	Started
Cisco IP Voice Media Streaming App	Started
Cisco CTIManager	Started
Cisco Extension Mobility	Started
Cisco DHCP Monitor Service	Started
Cisco Intercluster Lookup Service	Started
Cisco Location Bandwidth Manager	Started
Cisco Directory Number Alias Sync	Started
Cisco Directory Number Alias Lookup	Started
Cisco Dialed Number Analyzer Server	Started
Cisco Dialed Number Analyzer	Started
Cisco Tftp	Started

步骤8.连接到电话。

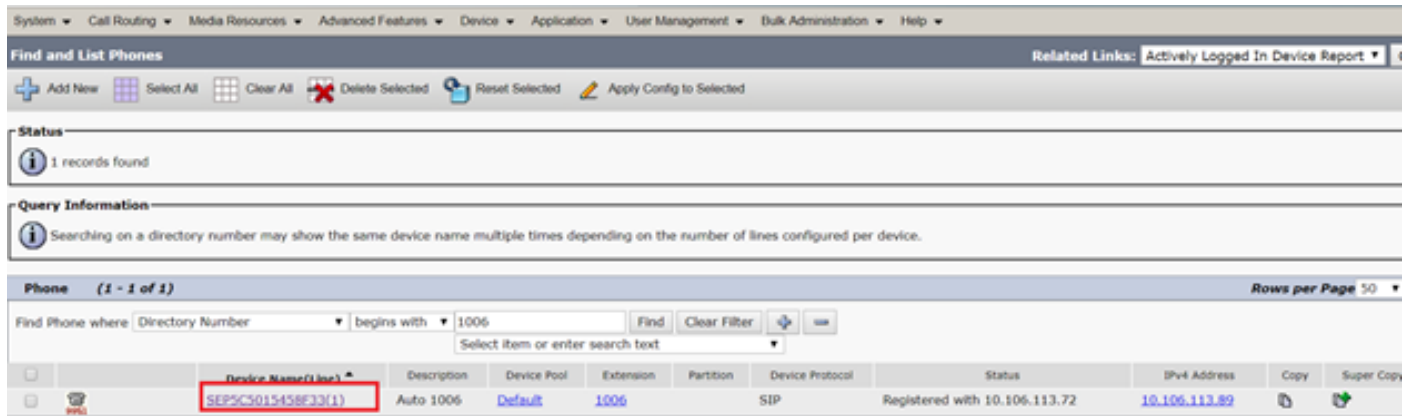


第9步。在用户区域设置下请选择您下载的现场。

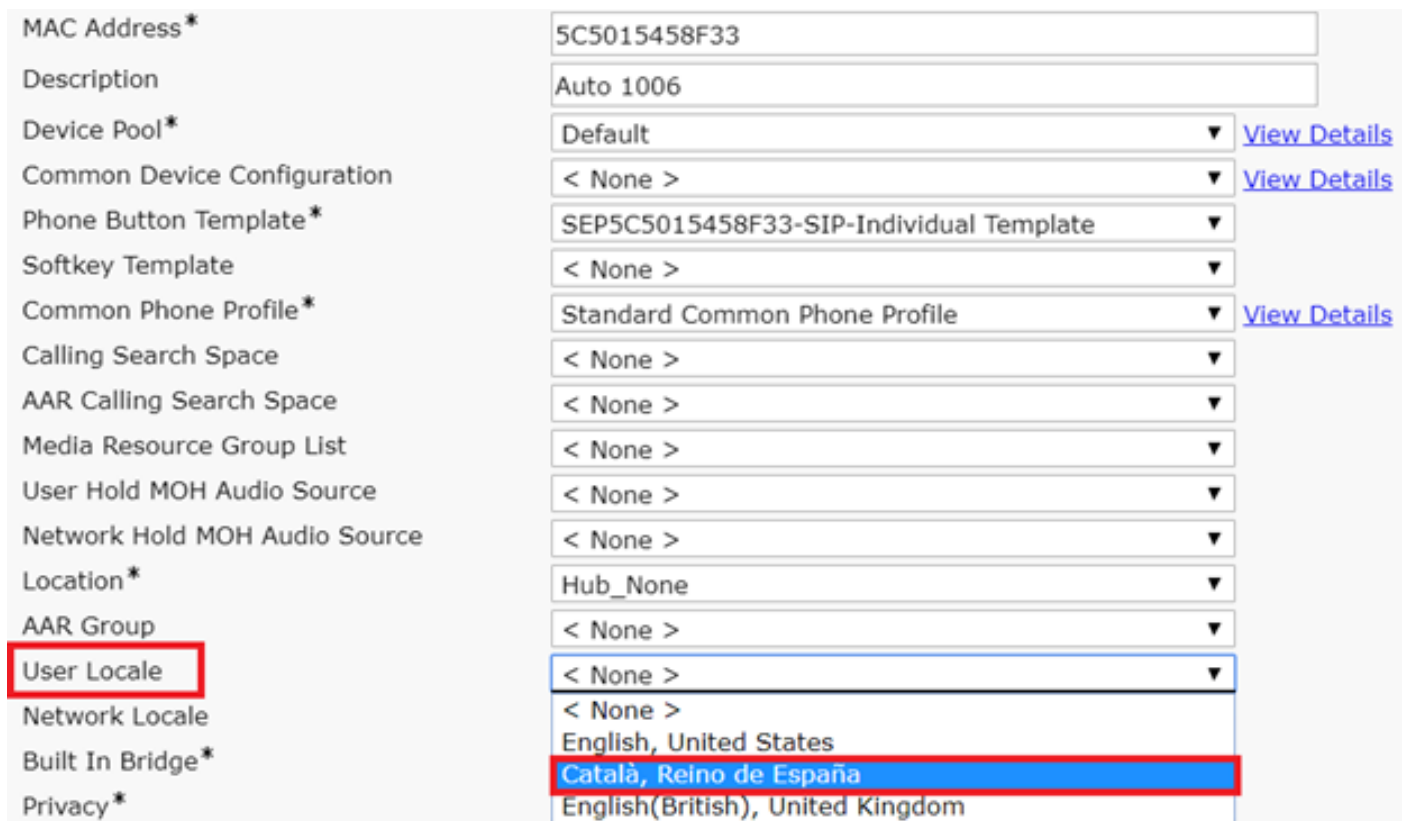

步骤10.保存，运用配置并且重置了电话。

Verify

如果成功安装现场，如镜像所显示，您能发现在母语的softleys：

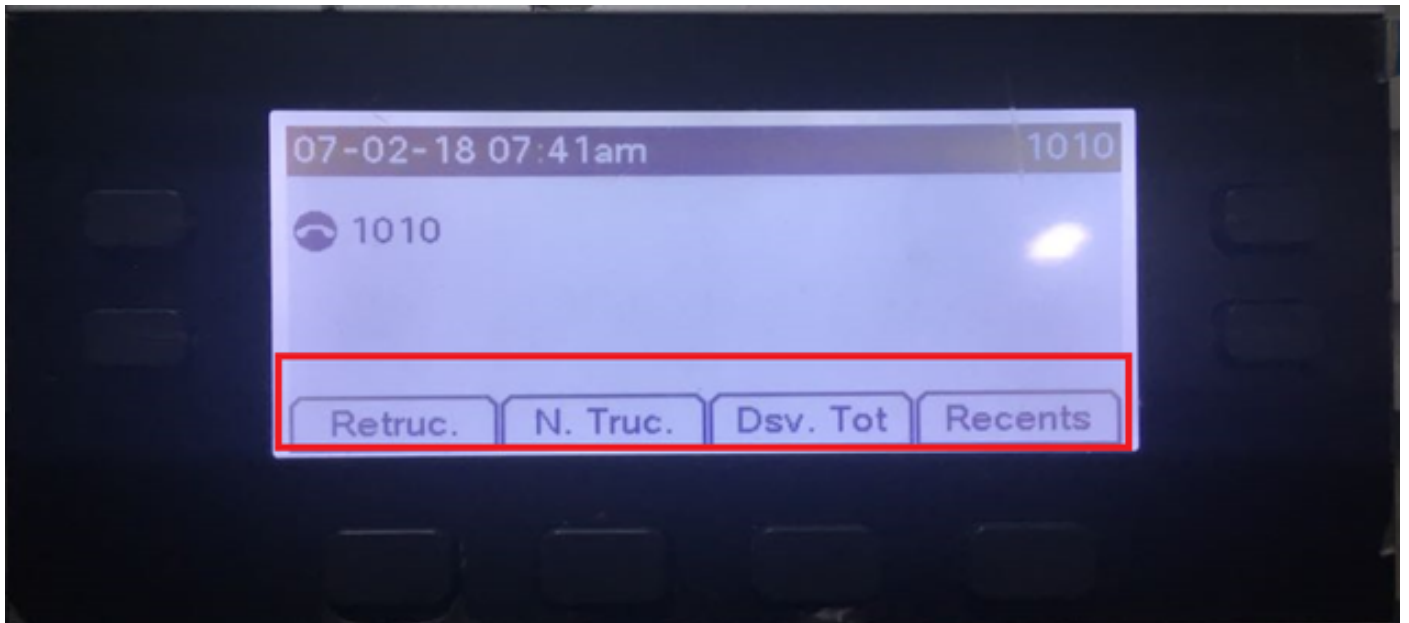

Troubleshoot

目前没有针对此配置的故障排除信息。