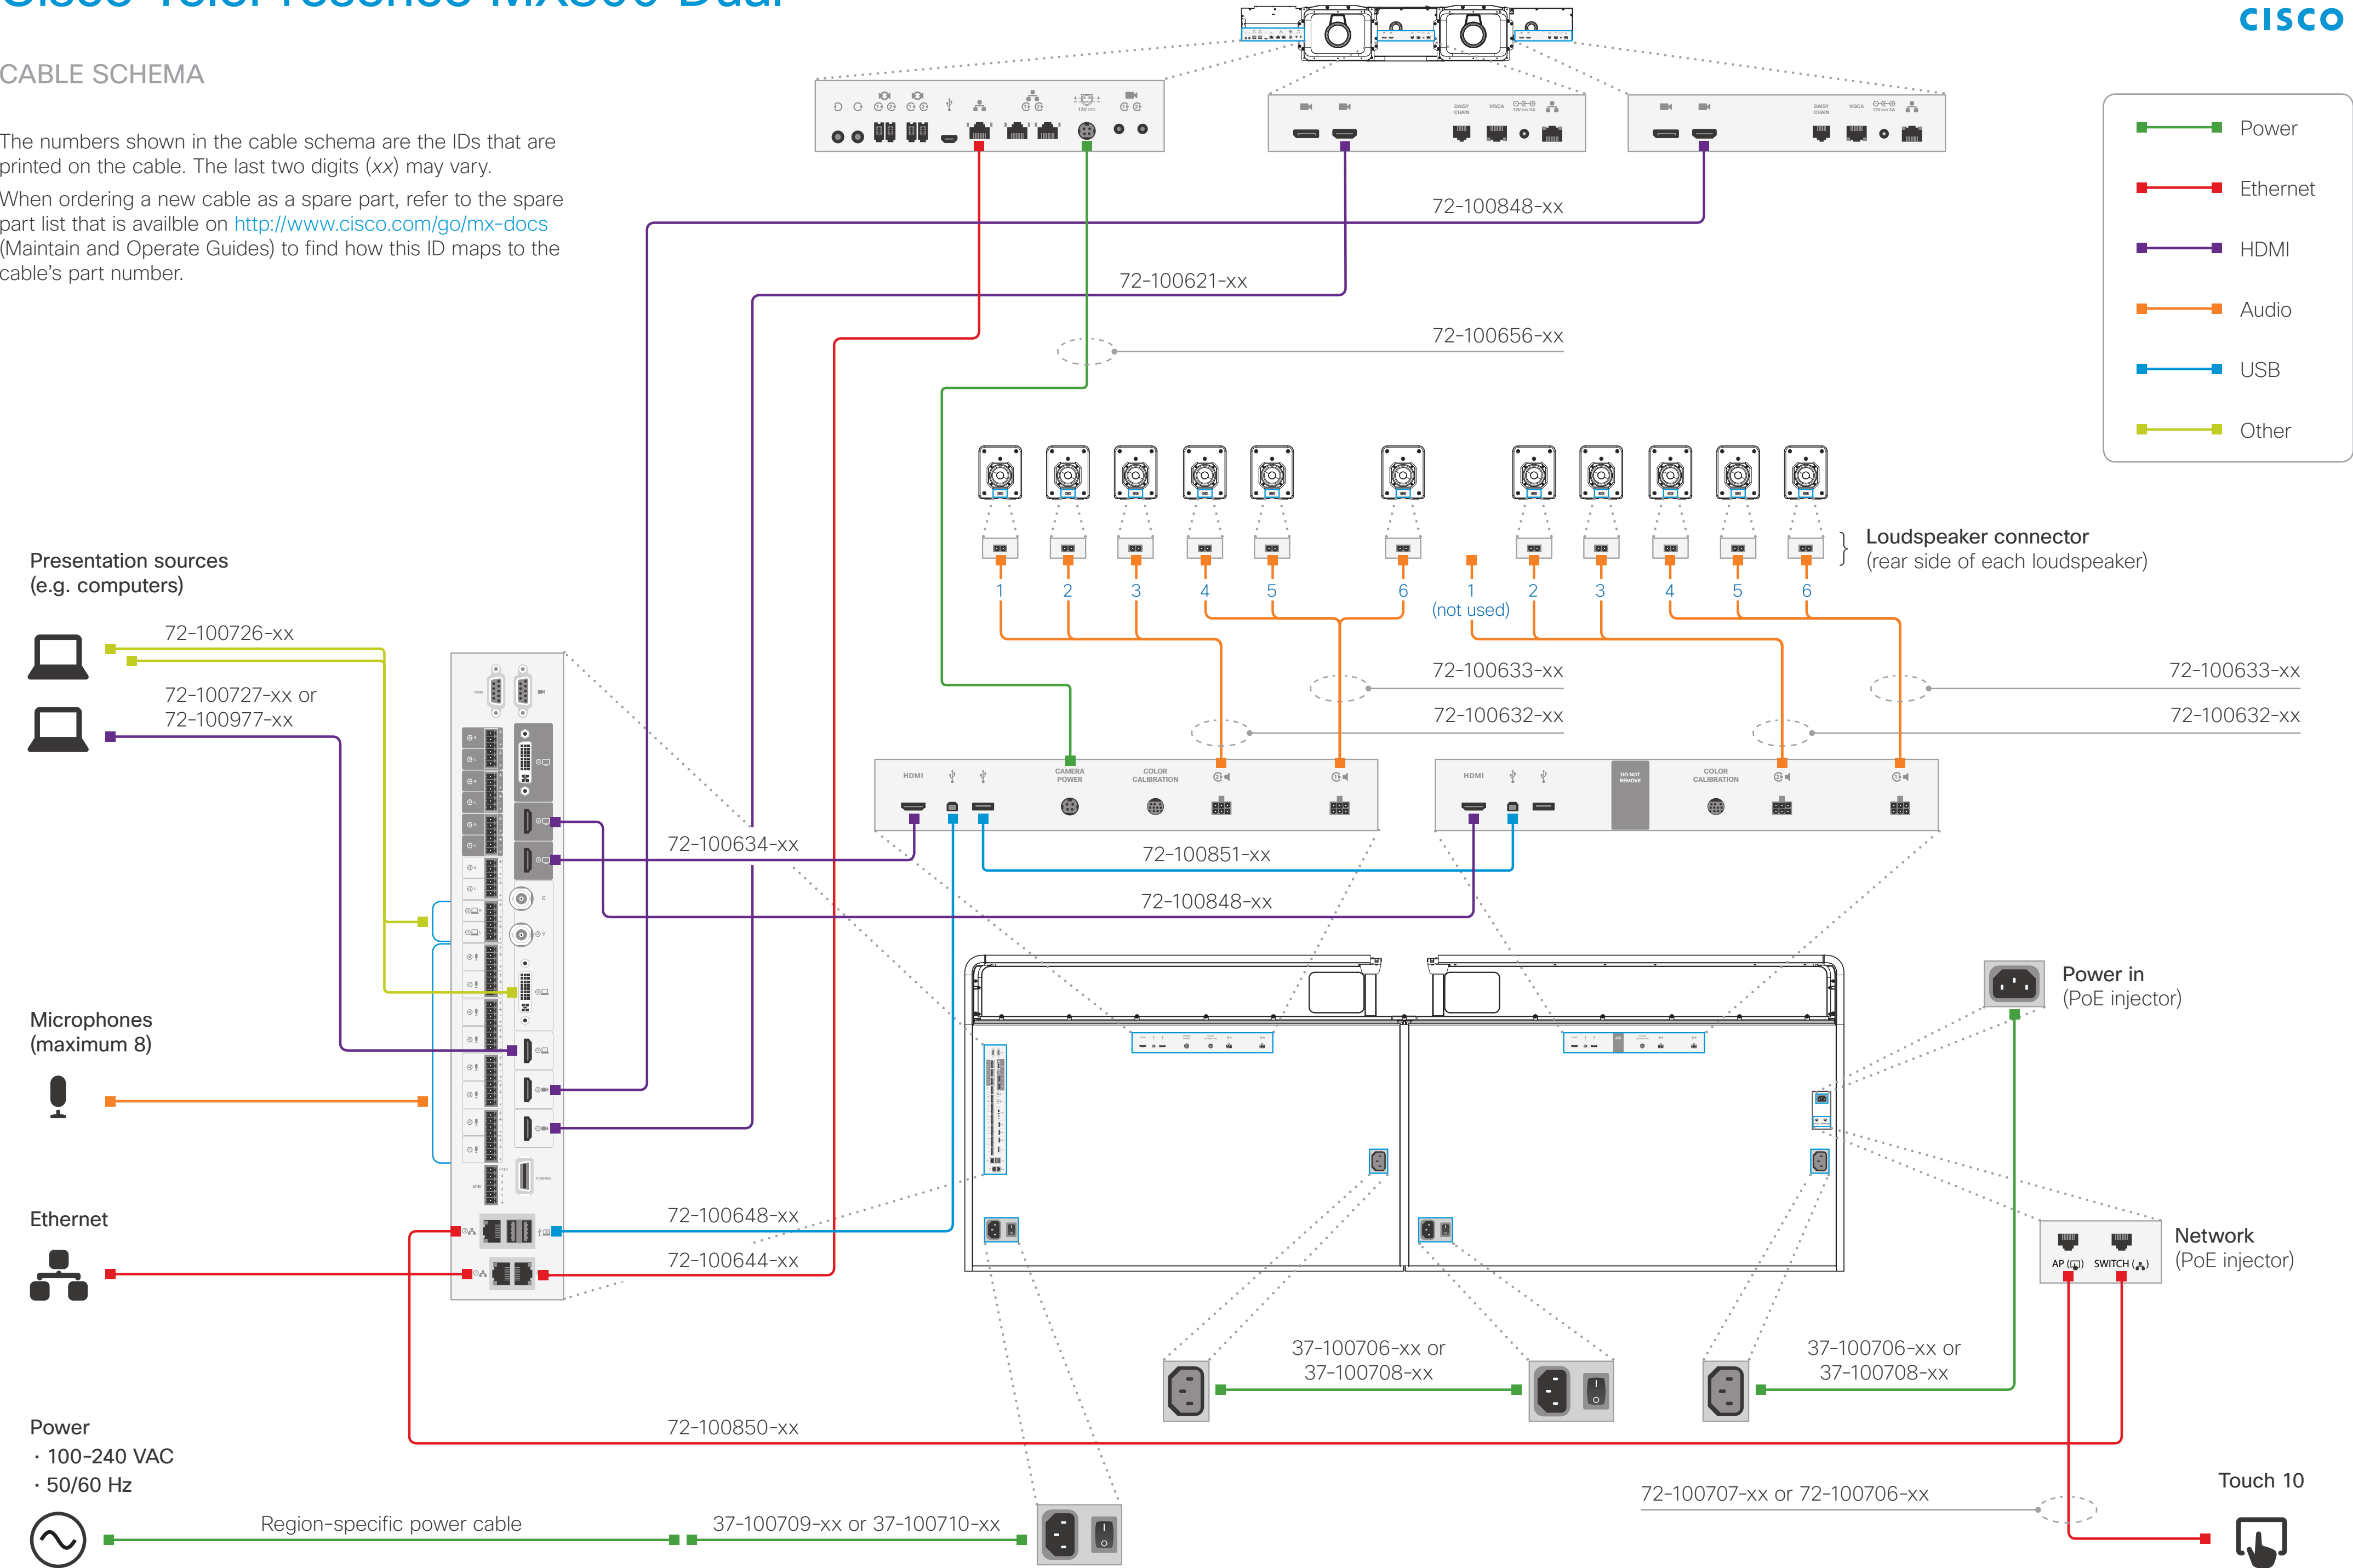# Cisco TelePresence MX800 Dual

CABLE SCHEMA

The numbers shown in the cable schema are the IDs that are printed on the cable. The last two digits (*xx*) may vary.

When ordering a new cable as a spare part, refer to the spare part list that is availble on http://www.cisco.com/go/mx-docs (Maintain and Operate Guides) to find how this ID maps to the cable's part number.

Legend:
- Power
- Ethernet
- HDMI
- Audio
- USB
- Other

72-100848-xx

72-100621-xx

72-100656-xx

Loudspeaker connector (rear side of each loudspeaker)

1 2 3 4 5 6 1 (not used) 2 3 4 5 6

72-100633-xx

72-100632-xx

72-100633-xx

72-100632-xx

Presentation sources (e.g. computers)

72-100726-xx

72-100727-xx or 72-100977-xx

72-100634-xx

HDMI COLOR CALIBRATION CAMERA POWER

72-100851-xx

72-100848-xx

Microphones (maximum 8)

Ethernet

72-100648-xx

72-100644-xx

Power in (PoE injector)

Network (PoE injector)

AP SWITCH

37-100706-xx or 37-100708-xx

37-100706-xx or 37-100708-xx

Power
- 100–240 VAC
- 50/60 Hz

72-100850-xx

72-100707-xx or 72-100706-xx

Touch 10

Region-specific power cable

37-100709-xx or 37-100710-xx

Cisco TelePresence MX800 Dual

INTERNAL CABLES IN THE DUAL CAMERA ASSEMBLY

The numbers shown in the cable schema are the IDs that are printed on the cable. The last two digits (*xx*) may vary.

When ordering a new cable as a spare part, refer to the spare part list that is availble on http://www.cisco.com/go/mx-docs (Maintain and Operate Guides) to find how this ID maps to the cable's part number.

■— ■ Power

■— ■ Ethernet

■— ■ Audio

72-100679-xx

72-100678-xx

72-100614-xx

72-100613-xx

72-100617-xx

72-100616-xx