Cisco UCS Faults and Error Messages Reference Guide 4.3

First Published: 2023-08-11

Americas Headquarters
Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
http://www.cisco.com
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

© 2023 Cisco Systems, Inc. All rights reserved.

CONTENTS

CHAPTER 1 **System Event Log Messages** 1

Information about System Event Log Messages 1

SEL File 1

SEL Policy 1

CHAPTER 2 **SEM Faults in Cisco UCS Manager** 3

Cisco UCS SEM Faults 3

CHAPTER 3 **FSM Faults in Cisco UCS Manager** 1005

Cisco UCS FSM Faults 1005

CHAPTER 4 **Call Home Faults** 2451

About Call Home Messages 2451

Cisco UCS Faults that Raise Call Home Alerts 2451

Faults Raised by a Fabric Interconnect 2452

Faults Raised by Syslog 2461

Cisco UCS Faults and Call Home Priority Levels 2463

CHAPTER 5 **Transient Faults** 2465

Troubleshooting Transient Faults 2465

Initial Setup and Discovery Faults 2465

Virtual Machine Startup Faults 2469

CHAPTER 6 **System Event Log Messages** 2471

Information about System Event Log Messages 2471

SEL File 2471

SEL Policy 2471

CHAPTER 7 **Baseboard Management Controller Messages** 2473

Baseboard Management Controller Messages 2473

SEL Device 2473

SEL Event Record Format 2473

Sensor Initialization Agent 2474

Sensor Data Record Device 2474

SDR Repository Interface 2474

Modal and Nonmodal SDR Repositories 2474

Event Receiver Device 2475

BMC Commands 2475

SEL Device Commands 2475

SDR Repository Device Commands 2477

Event Receiver Commands 2478

SEL Record Examples 2479

CHAPTER 8 **BIOS Messages** 2481

POST Error Messages and Handling 2481

BIOS Message Severities 2481

BIOS Message Format 2482

BIOS Messages and Codes 2482

Cisco BIOS Messages and Codes 2490

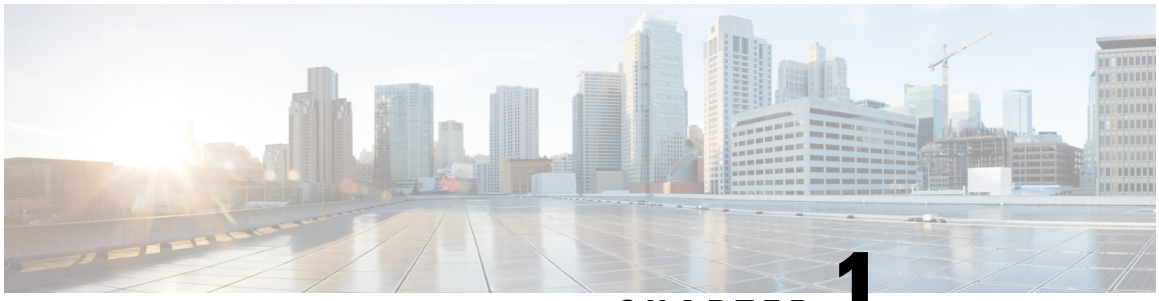

CHAPTER 1

System Event Log Messages

- Information about System Event Log Messages, on page 1
- SEL File, on page 1
- SEL Policy, on page 1

Information about System Event Log Messages

The system event log (SEL) resides on the CIMC in NVRAM. It records most server-related events, such as over- and under-voltage, temperature events, fan events, events from the BIOS, and so on. It also records platform errors such as memory errors, CPU errors, and so on.

The SEL is mainly used for troubleshooting purposes. UCSM uses SEL records to provide mechanisms for proactive health monitoring of the system (for example, faults and error statistics).

Note For more information about the SEL, including how to view the SEL for each server and configure the SEL policy, see the Cisco UCS configuration guides accessible through the Cisco UCS B-Series Servers Documentation Roadmap.

SEL File

The SEL file is approximately 40 KB in size, and no further events are recorded when it is full. It must be cleared before additional events can be recorded.

SEL Policy

The SEL policy can be configured to backup the SEL to a remote server, and, optionally to clear the SEL after a backup operation occurs. A back up operation can be triggered based upon the following actions defined by the user as a part of SEL backup policy.

- On SEL log full
- On change of server association

- On expiration of timer interval, and so on.

User can also manually backup or clear the SEL.

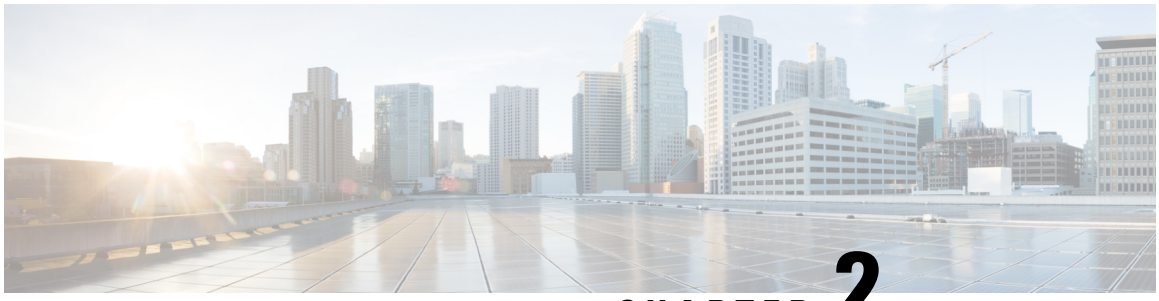

CHAPTER 2

SEM Faults in Cisco UCS Manager

• Cisco UCS SEM Faults, on page 3

Cisco UCS SEM Faults

fltFabricComputeSlotEpMisplacedInChassisSlot

Fault Code: F0156

Message: Server, vendor([vendor]), model([model]), serial([serial]) in slot [chassisId]/[slotId] presence: [presence]

Explanation:

This fault typically occurs when Cisco UCS Manager detects a server in a chassis slot that does not match what was previously equipped in the slot.

Recommended Action: If you see this fault, take the following actions:

1. If the previous server was intentionally removed and a new one was inserted, reacknowledge the server.
2. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: server-moved
mibFaultCode: F0156
mibFaultName: fltFabricComputeSlotEpMisplacedInChassisSlot
moClass: fabric:ComputeSlotEp
Type: equipment
autoCleared: true
Affected MO: fabric/server/chassis-[chassisId]/slot-[slotId]
```

fltFabricComputeSlotEpServerIdentificationProblem

Fault Code: F0157

Message: Problem identifying server in slot [chassisId]/[slotId]

Explanation: This fault typically occurs when Cisco UCS Manager encountered a problem identifying the server in a chassis slot.

Recommended Action: If you see this fault, take the following actions:

1. Remove and reinsert the server.
2. Reacknowledge the server.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: server-identification-problem
mibFaultCode: F0157
mibFaultName: fltFabricComputeSlotEpServerIdentificationProblem
moClass: fabric:ComputeSlotEp
Type: equipment
autoCleared: true
Affected MO: fabric/server/chassis-[chassisId]/slot-[slotId]
```

fltVnicEtherConfig-failed

Fault Code: F0169

Message: Eth vNIC [name], service profile [name] failed to apply configuration

Explanation: This fault typically occurs when Cisco UCS Manager could not place the vNIC on the vCon.

Recommended Action: If you see this fault, take the following actions:

1. Verify that the server was successfully discovered.
2. Verify that the correct type of adapters are installed on the server.
3. Confirm that the vCon assignment is correct.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: configuration-failed
mibFaultCode: F0169
mibFaultName: fltVnicEtherConfigFailed
moClass: vnic:Ether
Type: configuration
autoCleared: true
Affected MO: org-[name]/lan-conn-pol-[name]/ether-[name]
Affected MO: org-[name]/ls-[name]/ether-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ether-[name]
```

fltVnicFcConfig-failed

Fault Code: F0170

Message: FC vHBA [name], service profile [name] failed to apply configuration

Explanation: This fault typically occurs when Cisco UCS Manager could not place the vHBA on the vCon.

Recommended Action: If you see this fault, take the following actions:

1. Verify that the server was successfully discovered.

2. Verify that the correct type of adapters are installed on the server.
3. Confirm that the vCon assignment is correct.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: configuration-failed
mibFaultCode: F0170
mibFaultName: fltVnicFcConfigFailed
moClass: vnic:Fc
Type: configuration
autoCleared: true
Affected MO: org-[name]/ls-[name]/fc-[name]
Affected MO: org-[name]/san-conn-pol-[name]/fc-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/fc-[name]
```

fltProcessorUnitInoperable

Fault Code: F0174

Message: Processor [id] on server [chassisId]/[slotId] operability: [operability]Processor [id] on rack server [id] operability: [operability]Processor [id] on server [chassisId]/[slotId]/[serverInstanceId] operability: [operability]

Explanation: This fault occurs in the unlikely event that processor is inoperable.

Recommended Action: If you see this fault, take the following actions:

1. If the fault occurs on a blade server processor, remove the server from the chassis and then reinsert it.
2. In Cisco UCS Manager, decommission and then recommission the server.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-inoperable
mibFaultCode: F0174
mibFaultName: fltProcessorUnitInoperable
moClass: processor:Unit
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]
Affected MO: sys/rack-unit-[id]/board/cpu-[id]
```

fltProcessorUnitThermalNonCritical

Fault Code: F0175

Message: Processor [id] on server [chassisId]/[slotId] temperature: [thermal]Processor [id] on server [id] temperature: [thermal]Processor [id] on server [chassisId]/[slotId]/[serverInstanceId] temperature: [thermal]

Explanation: This fault occurs when the processor temperature on a blade or rack server exceeds a non-critical threshold value, but is still below the critical threshold. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).
- If sensors on a CPU reach 179.6F (82C), the system will take that CPU offline.

Recommended Action: If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the server.
2. Review the Cisco UCS Site Preparation Guide to ensure the servers have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis or rack server are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
8. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: info
Cause: thermal-problem
mibFaultCode: F0175
mibFaultName: fltProcessorUnitThermalNonCritical
moClass: processor:Unit
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]
Affected MO: sys/rack-unit-[id]/board/cpu-[id]
```

fltProcessorUnitThermalThresholdCritical

Fault Code: F0176

Message: Processor [id] on server [chassisId]/[slotId] temperature: [thermal]Processor [id] on server [id] temperature: [thermal]Processor [id] on server [chassisId]/[slotId]/[serverInstanceId] temperature: [thermal]

Explanation: This fault occurs when the processor temperature on a blade or rack server exceeds a critical threshold value. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.

- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).
- If sensors on a CPU reach 179.6F (82C), the system will take that CPU offline.

Recommended Action: If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the server.
2. Review the Cisco UCS Site Preparation Guide to ensure the servers have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis or rack server are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
8. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: thermal-problem
mibFaultCode: F0176
mibFaultName: fltProcessorUnitThermalThresholdCritical
moClass: processor:Unit
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]
Affected MO: sys/rack-unit-[id]/board/cpu-[id]
```

fltProcessorUnitThermalThresholdNonRecoverable

Fault Code: F0177

Message: Processor [id] on server [chassisId]/[slotId] temperature: [thermal]Processor [id] on server [id] temperature: [thermal]Processor [id] on server [chassisId]/[slotId]/[serverInstanceId] temperature: [thermal]

Explanation:

This fault occurs when the processor temperature on a blade or rack server has been out of the operating range, and the issue is not recoverable. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).

- If sensors on a CPU reach 179.6F (82C), the system will take that CPU offline.

Recommended Action: If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the server.
2. Review the Cisco UCS Site Preparation Guide to ensure the servers have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis or rack server are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
8. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: thermal-problem
mibFaultCode: F0177
mibFaultName: fltProcessorUnitThermalThresholdNonRecoverable
moClass: processor:Unit
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]
Affected MO: sys/rack-unit-[id]/board/cpu-[id]
```

fltProcessorUnitVoltageThresholdNonCritical

Fault Code: F0178

Message: Processor [id] on server [chassisId]/[slotId] voltage: [voltage]Processor [id] on server [id] voltage: [voltage]Processor [id] on server [chassisId]/[slotId]/[serverInstanceId] voltage: [voltage]

Explanation: This fault occurs when the processor voltage is out of normal operating range, but hasn't yet reached a critical stage. Normally the processor recovers itself from this situation

Recommended Action: If you see this fault, take the following actions:

1. Monitor the processor for further degradation.
2. If the fault occurs on a blade server processor, remove the server from the chassis and then reinsert it.
3. In Cisco UCS Manager, decommission and then recommission the server.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: voltage-problem
mibFaultCode: F0178
mibFaultName: fltProcessorUnitVoltageThresholdNonCritical
moClass: processor:Unit
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]
Affected MO: sys/rack-unit-[id]/board/cpu-[id]
```

fltProcessorUnitVoltageThresholdCritical

Fault Code: F0179

Message: Processor [id] on server [chassisId]/[slotId] voltage: [voltage]Processor [id] on server [id] voltage: [voltage]Processor [id] on server [chassisId]/[slotId]/[serverInstanceId] voltage: [voltage]

Explanation: This fault occurs when the processor voltage has exceeded the specified hardware voltage rating.

Recommended Action: If you see this fault, take the following actions:

1. If the fault occurs on a blade server processor, remove the server from the chassis and then reinsert it.
2. In Cisco UCS Manager, decommission and then recommission the server.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: voltage-problem
mibFaultCode: F0179
mibFaultName: fltProcessorUnitVoltageThresholdCritical
moClass: processor:Unit
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]
Affected MO: sys/rack-unit-[id]/board/cpu-[id]
```

fltProcessorUnitVoltageThresholdNonRecoverable

Fault Code: F0180

Message: Processor [id] on server [chassisId]/[slotId] voltage: [voltage]Processor [id] on server [id] voltage: [voltage]Processor [id] on server [chassisId]/[slotId]/[serverInstanceId] voltage: [voltage]

Explanation: This fault occurs when the processor voltage has exceeded the specified hardware voltage rating and may cause processor hardware damage or jeopardy.

Recommended Action: If you see this fault, take the following actions:

1. If the fault occurs on a blade server processor, remove the server from the chassis and then reinsert it.
2. In Cisco UCS Manager, decommission and then recommission the server.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: voltage-problem
mibFaultCode: F0180
mibFaultName: fltProcessorUnitVoltageThresholdNonRecoverable
moClass: processor:Unit
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]
Affected MO: sys/rack-unit-[id]/board/cpu-[id]
```

fltStorageLocalDiskInoperable

Fault Code: F0181

Message: Local disk [id] on server [chassisId]/[slotId] operability: [operability]. Reason: [operQualifierReason]Local disk [id] on server [id] operability: [operability]. Reason: [operQualifierReason]Local disk [id] on storage enclosure [id] operability: [operability]. Reason: [operQualifierReason]Local disk [id] on chassis [id] operability: [operability]. Reason: [operQualifierReason]

Explanation: This fault occurs when the local disk has become inoperable.

Recommended Action: If you see this fault, take the following actions:

1. Insert the disk in a supported slot.
2. Remove and reinsert the local disk.
3. Replace the disk, if an additional disk is available.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-inoperable
mibFaultCode: F0181
mibFaultName: fltStorageLocalDiskInoperable
moClass: storage:LocalDisk
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]
```

fltStorageItemCapacityExceeded

Fault Code: F0182

Message: Disk usage for partition [name] on fabric interconnect [id] exceeded 70%

Explanation: This fault occurs when the partition disk usage exceeds 70% but is less than 90%.

Recommended Action: If you see this fault, take the following actions:

1. Reduce the partition disk usage to less than 70% by deleting unused and unnecessary files.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: capacity-exceeded
mibFaultCode: F0182
mibFaultName: fltStorageItemCapacityExceeded
moClass: storage:Item
Type: environmental
autoCleared: true
Affected MO: sys/switch-[id]/stor-part-[name]
```

fltStorageItemCapacityWarning

Fault Code: F0183

Message: Disk usage for partition [name] on fabric interconnect [id] exceeded 90%

Explanation:

This fault occurs when the partition disk usage exceeds 90%.

Recommended Action:

If you see this fault, take the following actions:

1. Reduce the partition disk usage to less than 90% by deleting unused and unnecessary files.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: capacity-exceeded
mibFaultCode: F0183
mibFaultName: fltStorageItemCapacityWarning
moClass: storage:Item
Type: environmental
autoCleared: true
Affected MO: sys/switch-[id]/stor-part-[name]
```

fltMemoryUnitDegraded

Fault Code: F0184

Message: DIMM [location] on server [chassisId]/[slotId] operability: [operability]DIMM [location] on server [id] operability: [operability]DIMM [location] on server [chassisId]/[slotId]/[serverInstanceId] operability: [operability]

Explanation: This fault occurs when a DIMM is in a degraded operability state. This state typically occurs when an excessive number of correctable ECC errors are reported on the DIMM by the server BIOS.

Recommended Action: If you see this fault, take the following actions:

1. Monitor the error statistics on the degraded DIMM through Cisco UCS Manager. If the high number of errors persists, there is a high possibility of the DIMM becoming inoperable.
2. If the DIMM becomes inoperable, replace the DIMM.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: equipment-degraded
mibFaultCode: F0184
mibFaultName: fltMemoryUnitDegraded
moClass: memory:Unit
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/mem-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]
```

fltMemoryUnitInoperable

Fault Code: F0185

Message: DIMM [location] on server [chassisId]/[slotId] operability: [operability]DIMM [location] on server [id] operability: [operability]DIMM [location] on server [chassisId]/[slotId]/[serverInstanceId] operability: [operability]

Explanation: This fault typically occurs because an above threshold number of correctable or uncorrectable errors has occurred on a DIMM. The DIMM may be inoperable.

Recommended Action: If you see this fault, take the following actions:

1. If the SEL is enabled, review the SEL statistics on the DIMM to determine which threshold was crossed.
2. If necessary, replace the DIMM.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-inoperable
mibFaultCode: F0185
mibFaultName: fltMemoryUnitInoperable
moClass: memory:Unit
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/mem-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]
```

fltMemoryUnitThermalThresholdNonCritical

Fault Code: F0186

Message: DIMM [location] on server [chassisId]/[slotId] temperature: [thermal]DIMM [location] on server [id] temperature: [thermal]DIMM [location] on server [chassisId]/[slotId]/[serverInstanceId] temperature: [thermal]

Explanation: This fault occurs when the temperature of a memory unit on a blade or rack server exceeds a non-critical threshold value, but is still below the critical threshold. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).
- If sensors on a CPU reach 179.6F (82C), the system will take that CPU offline.

Recommended Action: If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the server.
2. Review the Cisco UCS Site Preparation Guide to ensure the servers have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis or rack server are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
8. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: info
Cause: thermal-problem
mibFaultCode: F0186
mibFaultName: fltMemoryUnitThermalThresholdNonCritical
moClass: memory:Unit
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/mem-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]
```

fltMemoryUnitThermalThresholdCritical

Fault Code: F0187

Message: DIMM [location] on server [chassisId]/[slotId] temperature: [thermal]DIMM [location] on server [id] temperature: [thermal]DIMM [location] on server [chassisId]/[slotId]/[serverInstanceId] temperature: [thermal]

Explanation:

This fault occurs when the temperature of a memory unit on a blade or rack server exceeds a critical threshold value. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).
- If sensors on a CPU reach 179.6F (82C), the system will take that CPU offline.

Recommended Action: If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the server.
2. Review the Cisco UCS Site Preparation Guide to ensure the servers have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis or rack server are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
8. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: thermal-problem
mibFaultCode: F0187
mibFaultName: fltMemoryUnitThermalThresholdCritical
moClass: memory:Unit
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/mem-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]
```

fltMemoryUnitThermalThresholdNonRecoverable

Fault Code: F0188

Message: DIMM [location] on server [chassisId]/[slotId] temperature: [thermal]DIMM [location] on server [id] temperature: [thermal]DIMM [location] on server [chassisId]/[slotId]/[serverInstanceId] temperature: [thermal]

Explanation:

This fault occurs when the temperature of a memory unit on a blade or rack server has been out of the operating range, and the issue is not recoverable.Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).
- If sensors on a CPU reach 179.6F (82C), the system will take that CPU offline.

Recommended Action: If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the server.
2. Review the Cisco UCS Site Preparation Guide to ensure the servers have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis or rack server are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
8. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: thermal-problem
mibFaultCode: F0188
mibFaultName: fltMemoryUnitThermalThresholdNonRecoverable
moClass: memory:Unit
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/mem-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]
```

fltMemoryArrayVoltageThresholdNonCritical

Fault Code: F0189

Message: Memory array [id] on server [chassisId]/[slotId] voltage: [voltage]Memory array [id] on server [id] voltage: [voltage]Memory array [id] on server [chassisId]/[slotId]/[serverInstanceId] voltage: [voltage]

Explanation: This fault occurs when the memory array voltage is out of normal operating range, but hasn't yet reached a critical stage. Typically the memory array recovers itself from this situation.

Recommended Action: If you see this fault, take the following actions:

1. If the SEL is enabled, look at the SEL statistics on the DIMM to determine which threshold was crossed.
2. Monitor the memory array for further degradation.
3. If the fault occurs on a blade server memory array, remove the blade and re-insert into the chassis.
4. In Cisco UCS Manager, decommission and recommission the server.
5. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: voltage-problem
mibFaultCode: F0189
mibFaultName: fltMemoryArrayVoltageThresholdNonCritical
moClass: memory:Array
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]
```

fltMemoryArrayVoltageThresholdCritical

Fault Code: F0190

Message: Memory array [id] on server [chassisId]/[slotId] voltage: [voltage]Memory array [id] on server [id] voltage: [voltage]Memory array [id] on server [chassisId]/[slotId]/[serverInstanceId] voltage: [voltage]

Explanation: This fault occurs when the memory array voltage exceeds the specified hardware voltage rating

Recommended Action: If you see this fault, take the following actions:

1. If the SEL is enabled, look at the SEL statistics on the DIMM to determine which threshold was crossed.
2. Monitor the memory array for further degradation.
3. If the fault occurs on a blade server memory array, remove the blade and re-insert into the chassis.
4. In Cisco UCS Manager, decommission and recommission the server.
5. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: voltage-problem
mibFaultCode: F0190
```

```
mibFaultName: fltMemoryArrayVoltageThresholdCritical
moClass: memory:Array
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]
```

fltMemoryArrayVoltageThresholdNonRecoverable

Fault Code: F0191

Message: Memory array [id] on server [chassisId]/[slotId] voltage: [voltage]Memory array [id] on server [id] voltage: [voltage]Memory array [id] on server [chassisId]/[slotId]/[serverInstanceId] voltage: [voltage]

Explanation: This fault occurs when the memory array voltage exceeded the specified hardware voltage rating and potentially memory hardware may be in damage or jeopardy

Recommended Action: If you see this fault, take the following actions:

1. If the SEL is enabled, review the SEL statistics on the DIMM to determine which threshold was crossed.
2. Monitor the memory array for further degradation.
3. If the fault occurs on a blade server memory array, remove the server from the chassis and re-insert it.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: voltage-problem
mibFaultCode: F0191
mibFaultName: fltMemoryArrayVoltageThresholdNonRecoverable
moClass: memory:Array
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]
```

fltAdaptorUnitUnidentifiable-fru

Fault Code: F0200

Message: Adapter [id] in server [id] has unidentified FRU.Adapter [id] in server [chassisId]/[slotId] has unidentified FRU.Adapter [id] in server [chassisId]/[slotId]/[serverInstanceId] has unidentified FRU

Explanation: This fault typically occurs because Cisco UCS Manager has detected an unsupported adapter. For example, the model, vendor, or revision is not recognized.

Recommended Action: If you see this fault, take the following actions:

1. Verify that a supported adapter is installed.
2. Verify that the capability catalog in Cisco UCS Manager is up to date. If necessary, update the catalog.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: unidentifiable-fru
mibFaultCode: F0200
mibFaultName: fltAdaptorUnitUnidentifiableFru
moClass: adaptor:Unit
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]
```

fltAdaptorUnitMissing

Fault Code: F0203

Message: Adapter [id] in server [id] presence: [presence]Adapter [id] in server [chassisId]/[slotId] presence: [presence]Adapter [id] in server [chassisId]/[slotId]/[serverInstanceId] presence: [presence]

Explanation: The adaptor is missing. Cisco UCS Manager raises this fault when any of the following scenarios occur:

- The endpoint reports there is no adapter in the adaptor slot.
- The endpoint cannot detect or communicate with the adapter in the adaptor slot.

Recommended Action: If you see this fault, take the following actions:

1. Make sure an adapter is inserted in the adaptor slot in the server.
2. Check whether the adaptor is connected and configured properly and is running the recommended firmware version.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: equipment-missing
mibFaultCode: F0203
mibFaultName: fltAdaptorUnitMissing
moClass: adaptor:Unit
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]
```

fltAdaptorUnitAdaptorReachability

Fault Code: F0206

Message: Adapter [id]/[id] is unreachableAdapter [chassisId]/[slotId]/[id] is unreachable

Explanation: Cisco UCS Manager cannot access the adapterwhose connectivty is discovered. This fault typically occurs as a result of one of the following issues:

- The server does not have sufficient power.
- The I/O module is not functional.

- The adapter firmware has failed.
- The adapter is not functional

Recommended Action: If you see this fault, take the following actions:

1. Check the POST results for the server. In Cisco UCS Manager GUI, you can access the POST results from the General tab for the server. In Cisco UCS Manager CLI, you can access the POST results through the **show post** command under the scope for the server.
2. In Cisco UCS Manager, check the power state of the server.
3. Verify that the physical server has the same power state.
4. If the server is off, turn the server on.
5. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: info
Cause: connectivity-problem
mibFaultCode: F0206
mibFaultName: fltAdaptorUnitAdaptorReachability
moClass: adaptor:Unit
Type: connectivity
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]
```

fltAdaptorHostIfLink-down

Fault Code: F0207

Message: Adapter [transport] host interface [id]/[id]/[id] link state: [linkState]Adapter [transport] host interface [chassisId]/[slotId]/[id]/[id] link state: [linkState]Adapter [transport] host interface [chassisId]/[slotId]/[serverInstanceId] link state: [linkState]

Explanation: This fault typically occurs as a result of one of the following issues:

- The fabric interconnect is in End-Host mode, and all uplink ports failed.
- The server port to which the adapter is pinned failed.
- A transient error caused the link to fail.

Recommended Action: If you see this fault, take the following actions:

1. If an associated port is disabled, enable the port.
2. Reacknowledge the server with the adapter that has the failed link.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: link-down
```

```
mibFaultCode: F0207
mibFaultName: fltAdaptorHostIfLinkDown
moClass: adaptor:HostIf
Type: network
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]
```

fltAdaptorExtIfLink-down

Fault Code: F0209

Message: Adapter uplink interface [id]/[id]/[id] link state: [linkState]. Please verify connectivity to Fabric Interconnect. Acknowledging FEX might be required.Adapter uplink interface [chassisId]/[slotId]/[id]/[id] link state: [linkState]. Please verify connectivity to Fabric Interconnect. Acknowledging chassis might be required.

Explanation: The link for a network facing adapter interface is down. Cisco UCS Manager raises this fault when any of the following scenarios occur:

- Cisco UCS Manager cannot establish and/or validate the adapter's connectivity to any of the fabric interconnects.
- The endpoint reports a link down or vNIC down event on the adapter link.
- The endpoint reports an errored link state or errored vNIC state event on the adapter link.

Recommended Action: If you see this fault, take the following actions:

1. Verify that the adapter is connected, configured properly, and is running the recommended firmware version.
2. If the server is stuck at discovery, decommission the server and reacknowledge the server slot.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: link-down
mibFaultCode: F0209
mibFaultName: fltAdaptorExtIfLinkDown
```

```
moClass: adaptor:ExtIf
Type: network
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]
```

fltPortPIoLink-down

Fault Code: F0276

Message: [transport] port [portId] on chassis [id] oper state: [operState], reason: [stateQual][transport] port [slotId]/[aggrPortId]/[portId] on fabric interconnect [id] oper state: [operState], reason: [stateQual][transport] port [slotId]/[portId] on fabric interconnect [id] oper state: [operState], reason: [stateQual]

Explanation: This fault occurs when a fabric interconnect port is in link-down state. This state impacts the traffic destined for the port.

Recommended Action: If you see this fault, take the following actions:

1. Verify that the physical link is properly connected between the fabric interconnect and the peer component.
2. Verify that the configuration on the peer entity is properly configured and matches the fabric interconnect port configuration.
3. Unconfigure and re-configure the port.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: link-down
mibFaultCode: F0276
mibFaultName: fltPortPIoLinkDown
moClass: port:PIo
Type: network
autoCleared: true
Affected MO: sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]
```

fltPortPIoFailed

Fault Code: F0277

Message: [transport] port [portId] on chassis [id] oper state: [operState], reason: [stateQual][transport] port [slotId]/[aggrPortId]/[portId] on fabric interconnect [id] oper state: [operState], reason: [stateQual][transport] port [slotId]/[portId] on fabric interconnect [id] oper state: [operState], reason: [stateQual]

Explanation: This fault is raised on fabric interconnect ports and on server-facing ports on an IOM or a FEX module when UCSM detects that the port is not up and in failed state while it is expected to be up since it has been enabled by user and there is no known hardware failure or missing SFP issue and port license is valid. Additional reason is displayed by the fault description string.

Recommended Action: If you see this fault, Corrective action maybe taken based on reason information in the fault description whenever such a reason is displayed. If the fault description displays reason as "ENM source pinning failed" then it means that the fabric interconnect is operating in End-host Node Mode and the uplink port that this server facing port is pinned to is down or does not have appropriate VLAN configured. In case of such an error for an appliance port check the VLAN configuration on uplink port. A VLAN with same id as the one on the appliance port will also need to be configured on the uplink port. After setting the configuration right if you still see the fault then create a **show tech-support** file for Cisco UCS Manager and the chassis or FEX module, and then contact Cisco TAC.

Fault Details

```
Severity: major
Cause: port-failed
mibFaultCode: F0277
mibFaultName: fltPortPIoFailed
moClass: port:PIo
Type: network
autoCleared: true
Affected MO: sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]
```

fltPortPIoHardware-failure

Fault Code: F0278

Message: [transport] port [portId] on chassis [id] oper state: [operState], reason: hardware-failure[transport] port [slotId]/[aggrPortId]/[portId] on fabric interconnect [id] oper state: [operState], reason: hardware-failure[transport] port [slotId]/[portId] on fabric interconnect [id] oper state: [operState], reason: hardware-failure

Explanation: This fault is raised on fabric interconnect ports and server-facing ports on an IOM or a FEX module when the system detects a hardware failure.

Recommended Action: If you see this fault, create a **show tech-support** file for Cisco UCS Manager and the chassis or FEX module, and then contact Cisco TAC.

Fault Details

```
Severity: major
Cause: port-failed
mibFaultCode: F0278
mibFaultName: fltPortPIoHardwareFailure
```

moClass: port:PIo
Type: network
autoCleared: true
Affected MO: sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]

fltPortPIoSfp-not-present

Fault Code: F0279

Message: [transport] port [portId] on chassis [id] oper state: [operState][transport] port [slotId]/[aggrPortId]/[portId] on fabric interconnect [id] oper state: [operState][transport] port [slotId]/[portId] on fabric interconnect [id] oper state: [operState]

Explanation: When a fabric interconnect port is not in an unconfigured state, an SFP is required for its operation. This fault is raised to indicate that the SFP is missing from a configured port.

Recommended Action: If you see this fault, insert a supported SFP into the port on the fabric interconnect. A list of supported SFPs can be found on www.Cisco.com.

Fault Details

Severity: info
Cause: port-failed
mibFaultCode: F0279
mibFaultName: fltPortPIoSfpNotPresent
moClass: port:PIo
Type: network
autoCleared: true
Affected MO: sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]

fltFabricExternalPcDown

Fault Code: F0282

Message: [type] port-channel [portId] on fabric interconnect [switchId] oper state: [operState], reason: [stateQual][type] port-channel [portId] on fabric interconnect [switchId] oper state: [operState], reason:

[stateQual][type] port-channel [portId] on fabric interconnect [switchId] oper state: [operState], reason: [stateQual]

Explanation: This fault typically occurs when a fabric interconnect reports that a fabric port channel is operationally down.

Recommended Action: If you see this fault, take the following actions:

1. Verify that the member ports in the fabric port channel are administratively up and operational. Check the link connectivity for each port.
2. If connectivity seems correct, check the operational states on the peer switch ports of the port channel members.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: operational-state-down
mibFaultCode: F0282
mibFaultName: fltFabricExternalPcDown
moClass: fabric:ExternalPc
Type: network
autoCleared: true
Affected MO: fabric/eth-estc/[id]/net-[name]/pc-switch-[switchId]-pc-[portId]
Affected MO: fabric/eth-estc/[id]/pc-[portId]
Affected MO: fabric/eth-estc/net-[name]/pc-switch-[switchId]-pc-[portId]
Affected MO: fabric/fc-estc/[id]/net-[name]/fcoepc-switch-[switchId]-fcoepc-[portId]
Affected MO: fabric/fc-estc/[id]/net-[name]/pc-switch-[switchId]-pc-[portId]
Affected MO: fabric/fc-estc/net-[name]/fcoepc-switch-[switchId]-fcoepc-[portId]
Affected MO: fabric/fc-estc/net-[name]/pc-switch-[switchId]-pc-[portId]
Affected MO: fabric/lan/[id]/net-[name]/pc-switch-[switchId]-pc-[portId]
Affected MO: fabric/lan/[id]/net-group-[name]/pc-switch-[switchId]-pc-[portId]
Affected MO: fabric/lan/[id]/pc-[portId]
Affected MO: fabric/lan/net-[name]/pc-switch-[switchId]-pc-[portId]
Affected MO: fabric/lan/net-group-[name]/pc-switch-[switchId]-pc-[portId]
Affected MO: fabric/san/[id]/fcoesanpc-[portId]
Affected MO: fabric/san/[id]/net-[name]/fcoepc-switch-[switchId]-fcoepc-[portId]
Affected MO: fabric/san/[id]/net-[name]/pc-switch-[switchId]-pc-[portId]
Affected MO: fabric/san/[id]/pc-[portId]
Affected MO: fabric/san/net-[name]/fcoepc-switch-[switchId]-fcoepc-[portId]
Affected MO: fabric/san/net-[name]/pc-switch-[switchId]-pc-[portId]
```

fltDcxVcDown

Fault Code: F0283

Message: [transport] VIF [id] on server [chassisId] / [slotId] of switch [switchId] down, reason: [stateQual][transport] VIF [id] on server [id] of switch [switchId] down, reason: [stateQual][transport] VIF [id] on server [chassisId]/[slotId]/[serverInstanceId] of switch [switchId] down, reason: [stateQual]

Explanation: This fault typically occurs when a fabric interconnect reports one of the following connectivity states for a virtual interface:

- Down
- Errored
- Unavailable

Recommended Action: If you see this fault, take the following actions:

1. Verify that the uplink physical interface is up.
2. If the vNIC/vHBA is configured for a pin group, verify that the pin group targets are configured correctly.
3. In the Network Control Policy for the vNIC, verify that the 'Action on Uplink Fail' field is set to 'warning'.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: link-down
mibFaultCode: F0283
mibFaultName: fltDcxVcDown
moClass: dcx:Vc
Type: network
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
```

Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/fnucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/fnucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/fnucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/fnucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/fabric-[switchId]/vc-[id]

Affected MO: sys/chassis-[id]/shared-io-module/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/slot-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/fex-[id]/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/fex-[id]/fabric-[switchId]/vc-[id]
Affected MO: sys/fex-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/fex-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]

```
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/rack-unit-[id]/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/fabric-[switchId]/vc-[id]
Affected MO: sys/rack-unit-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/switch-[id]/ethlanflowmon/vc-[id]
Affected MO: sys/switch-[id]/lanmon-eth/mon-[name]/vc-[id]
Affected MO: sys/switch-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/switch-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/switch-[id]/sanmon-fc/mon-[name]/vc-[id]
```

fltNetworkElementInoperable

Fault Code: F0291

Message: Fabric Interconnect [id] operability: [operability]

Explanation: This fault typically occurs when the fabric interconnect cluster controller reports that the membership state of the fabric interconnect is down, indicating that the fabric interconnect is inoperable.

Recommended Action: If you see this fault, take the following actions:

1. Verify that both fabric interconnects in the cluster are running the same Kernel and System software versions.
2. Verify that the fabric interconnects software version and the Cisco UCS Manager software versions are the same.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: equipment-inoperable
mibFaultCode: F0291
mibFaultName: fltNetworkElementInoperable
moClass: network:Element
Type: equipment
autoCleared: true
Affected MO: sys/switch-[id]
```

fltMgmtEntityDegraded

Fault Code: F0293

Message: Fabric Interconnect [id], HA Cluster interconnect link failure

Explanation: This fault occurs when one of the cluster links (either L1 or L2) of a fabric interconnect is not operationally up. This issue impacts the full HA functionality of the fabric interconnect cluster.

Recommended Action: If you see this fault, take the following actions:

1. Verify that both L1 and L2 links are properly connected between the fabric interconnects.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: link-down
mibFaultCode: F0293
mibFaultName: fltMgmtEntityDegraded
moClass: mgmt:Entity
Type: network
autoCleared: true
Affected MO: sys/mgmt-entity-[id]
```

fltMgmtEntityDown

Fault Code: F0294

Message: Fabric Interconnect [id], HA Cluster interconnect total link failure

Explanation: This fault occurs when both cluster links (L1 and L2) of the fabric interconnects are in a link-down state. This issue impacts the full HA functionality of the fabric interconnect cluster.

Recommended Action: If you see this fault, take the following actions:

1. Verify that both L1 and L2 links are properly connected between the fabric interconnects.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: link-down
mibFaultCode: F0294
mibFaultName: fltMgmtEntityDown
moClass: mgmt:Entity
Type: network
autoCleared: true
Affected MO: sys/mgmt-entity-[id]
```

fltDcxNsFailed

Fault Code: F0304

Message: Server [chassisId]/[slotId] (service profile: [assignedToDn]) virtual network interface allocation failed.Server [id] (service profile: [assignedToDn]) virtual network interface allocation failed.Server [chassisId]/[slotId]/[serverInstanceId] (service profile: [assignedToDn]) virtual network interface allocation failed.

Explanation: The adapter's vif-namespace activation failed due to insufficient resources. Cisco UCS Manager raises this fault when the number of deployed VIF resources exceeds the maximum VIF resources available on the adapter connected to the fabric interconnect.

Recommended Action: If you see this fault, take the following actions:

1. Check the NS "size" and "used" resources to determine by how many vNICs the adapter exceeded the maximum.
2. Unconfigure or delete all vNICs on the adapter above the maximum number.
3. Add additional fabric uplinks from the IOM to the corresponding fabric interconnect and reacknowledge the chassis. This increases the "NS size" on the adapter.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: insufficient-resources
mibFaultCode: F0304
mibFaultName: fltDcxNsFailed
moClass: dcx:Ns
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/dcxns-[switchId]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/dcxns-[switchId]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/dcxns-[switchId]
```

fltComputePhysicalInsufficientlyEquipped

Fault Code: F0305

Message: Server [id] (service profile: [assignedToDn]) has insufficient number of DIMMs, CPUs and/or adaptersServer [chassisId]/[slotId] (service profile: [assignedToDn]) has insufficient number of DIMMs, CPUs and/or adaptersServer [chassisId]/[slotId]/[serverInstanceId] (service profile: [assignedToDn]) has insufficient number of DIMMs and/or CPUs

Explanation: This fault typically occurs because Cisco UCS Manager has detected that the server has an insufficient number of DIMMs, CPUs, and/or adapters.

Recommended Action: If you see this fault, take the following actions:

1. Verify that the DIMMs are installed in a supported configuration.
2. Verify that an adapter and CPU are installed.
3. Reacknowledge the server.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: insufficiently-equipped
mibFaultCode: F0305
mibFaultName: fltComputePhysicalInsufficientlyEquipped
moClass: compute:Physical
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fltComputePhysicalIdentityUnestablishable

Fault Code: F0306

Message: Server [id] (service profile: [assignedToDn]) has an invalid FRUServer [chassisId]/[slotId] (service profile: [assignedToDn]) has an invalid FRUServer [chassisId]/[slotId]/[serverInstanceId] (service profile: [assignedToDn]) has an invalid FRU

Explanation: This fault typically occurs because Cisco UCS Manager has detected an unsupported server or CPU.

Recommended Action: If you see this fault, take the following actions:

1. Verify that a supported server and/or CPU is installed.
2. Verify that the Cisco UCS Manager capability catalog is up to date.
3. Reacknowledge the server.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: identity-unestablishable
mibFaultCode: F0306
mibFaultName: fltComputePhysicalIdentityUnestablishable
moClass: compute:Physical
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fltComputeBoardPowerError

Fault Code: F0310

Message: Motherboard of server [chassisId]/[slotId] (service profile: [assignedToDn]) power: [operPower]Motherboard of server [id] (service profile: [assignedToDn]) power: [operPower]Motherboard of server [chassisId]/[slotId]/[serverInstanceId] (service profile: [assignedToDn]) power: [operPower]

Explanation: This fault typically occurs when the server power sensors have detected a problem.

Recommended Action: If you see this fault, take the following actions:

1. Make sure that the server is correctly installed in the chassis and that all cables are secure.
2. If you reinstalled the server, reacknowledge it.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: power-problem
mibFaultCode: F0310
mibFaultName: fltComputeBoardPowerError
moClass: compute:Board
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board
Affected MO: sys/rack-unit-[id]/board
```

fltComputePhysicalPowerProblem

Fault Code: F0311

Message: Server [id] (service profile: [assignedToDn]) oper state: [operState]Server [chassisId]/[slotId] (service profile: [assignedToDn]) oper state: [operState]Server [chassisId]/[slotId]/[serverInstanceId] (service profile: [assignedToDn]) oper state: [operState]

Explanation: This fault typically occurs when the server power sensors have detected a problem.

Recommended Action: If you see this fault, take the following actions:

1. Make sure that the server is correctly installed in the chassis and that all cables are secure.
2. If you reinstalled the server, reacknowledge it.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: power-problem
mibFaultCode: F0311
mibFaultName: fltComputePhysicalPowerProblem
moClass: compute:Physical
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fltComputePhysicalThermalProblem

Fault Code: F0312

Message: Server [id] (service profile: [assignedToDn]) oper state: [operState]Server [chassisId]/[slotId] (service profile: [assignedToDn]) oper state: [operState]Server [chassisId]/[slotId]/[serverInstanceId] (service profile: [assignedToDn]) oper state: [operState]

Explanation: This fault typically occurs when the server thermal sensors have detected a problem.

Recommended Action: If you see this fault, take the following actions:

1. Make sure that the server fans are working properly.
2. Wait for 24 hours to see if the problem resolves itself.
3. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: thermal-problem
mibFaultCode: F0312
mibFaultName: fltComputePhysicalThermalProblem
moClass: compute:Physical
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fltComputePhysicalBiosPostTimeout

Fault Code: F0313

Message: Server [id] (service profile: [assignedToDn]) BIOS failed power-on self testServer [chassisId]/[slotId] (service profile: [assignedToDn]) BIOS failed power-on self testServer [chassisId]/[slotId]/[serverInstanceId] (service profile: [assignedToDn]) BIOS failed power-on self test

Explanation: This fault typically occurs when the server has encountered a diagnostic failure.

Recommended Action: If you see this fault, take the following actions:

1. Check the POST results for the server. In Cisco UCS Manager GUI, you can access the POST results from the General tab for the server. In Cisco UCS Manager CLI, you can access the POST results through the show post command under the scope for the server.
2. Reacknowledge the server.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: equipment-inoperable
mibFaultCode: F0313
mibFaultName: fltComputePhysicalBiosPostTimeout
moClass: compute:Physical
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fltComputePhysicalDiscoveryFailed

Fault Code: F0314

Message: Server [id] (service profile: [assignedToDn]) discovery: [discovery]Server [chassisId]/[slotId] (service profile: [assignedToDn]) discovery: [discovery]Server [chassisId]/[slotId]/[serverInstanceId] (service profile: [assignedToDn]) discovery: [discovery]

Explanation: This fault typically occurs for one of the following reasons:

- The shallow discovery that occurs when the server associated with service profile failed.
- The server is down.
- The data path is not working.
- Cisco UCS Manager cannot communicate with the CIMC on the server.
- The server cannot communicate with the fabric interconnect.

Recommended Action: If you see this fault, take the following actions:

1. Check the FSM tab and the current state of the server and any FSM operations.
2. Check the error descriptions and see if any server components indicate a failure.
3. If the server or a server component has failed, do the following:

a. Check the operational state of the server.

b. If the server is not operable, re-acknowledge the server.

4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: discovery-failed
mibFaultCode: F0314
mibFaultName: fltComputePhysicalDiscoveryFailed
moClass: compute:Physical
Type: operational
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fltComputePhysicalAssociationFailed

Fault Code: F0315

Message: Service profile [assignedToDn] failed to associate with server [id]Service profile [assignedToDn] failed to associate with server [chassisId]/[slotId]Service profile [assignedToDn] failed to associate with server [chassisId]/[slotId]/[serverInstanceId]

Explanation: This fault typically occurs for one of the following reasons:

- The service profile could not be associated with the server.
- The server is down.
- The data path is not working.
- Cisco UCS Manager cannot communicate with one or more of the fabric interconnect, the server, or a component on the server.

Recommended Action: If you see this fault, take the following actions:

1. Check the FSM tab and the current state of the server and any FSM operations.
2. If the server is stuck in an inappropriate state, such as booting, power cycle the server.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: association-failed
mibFaultCode: F0315
mibFaultName: fltComputePhysicalAssociationFailed
moClass: compute:Physical
Type: configuration
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fltComputePhysicalInoperable

Fault Code: F0317

Message: Server [id] (service profile: [assignedToDn]) health: [operability]Server [chassisId]/[slotId] (service profile: [assignedToDn]) health: [operability]Server [chassisId]/[slotId]/[serverInstanceId] (service profile: [assignedToDn]) health: [operability]

Explanation: This fault typically occurs when the server has encountered a diagnostic failure.

Recommended Action: If you see this fault, take the following actions:

1. Check the POST results for the server.In Cisco UCS Manager GUI, you can access the POST results from the General tab for the server. In Cisco UCS Manager CLI, you can access the POST results through the show post command under the scope for the server.
2. Reacknowledge the server.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-inoperable
mibFaultCode: F0317
mibFaultName: fltComputePhysicalInoperable
moClass: compute:Physical
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fltComputePhysicalUnassignedMissing

Fault Code: F0318

Message: Server [id] missing (no profile)Server [chassisId]/[slotId] missing (no profile)Server [chassisId]/[slotId]/[serverInstanceId] (no profile) missing

Explanation: This fault typically occurs when the server, which is not associated with a service profile, was previously physically inserted in the slot, but cannot be detected by Cisco UCS Manager.

Recommended Action: If you see this fault, take the following actions:

1. If the server is physically present in the slot, remove and then reinsert it.
2. If the server is not physically present in the slot, insert it.
3. Reacknowledge the server.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: equipment-missing
mibFaultCode: F0318
mibFaultName: fltComputePhysicalUnassignedMissing
moClass: compute:Physical
```

```
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fltComputePhysicalAssignedMissing

Fault Code: F0319

Message: Server [id] missing (service profile: [assignedToDn])Server [chassisId]/[slotId] missing (service profile: [assignedToDn])Server [chassisId]/[slotId]/[serverInstanceId] (service profile: [assignedToDn]) missing

Explanation: This fault typically occurs when the server, which is associated with a service profile, was previously physically inserted in the slot, but cannot be detected by Cisco UCS Manager.

Recommended Action: If you see this fault, take the following actions:

1. If the server is physically present in the slot, remove and then reinsert it.
2. If the server is not physically present in the slot, reinsert it.
3. Reacknowledge the server.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-missing
mibFaultCode: F0319
mibFaultName: fltComputePhysicalAssignedMissing
moClass: compute:Physical
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fltComputePhysicalUnidentified

Fault Code: F0320

Message: Server [id] (service profile: [assignedToDn]) has an invalid FRU: [presence]Server [chassisId]/[slotId] (service profile: [assignedToDn]) has an invalid FRU: [presence]Server [chassisId]/[slotId]/[serverInstanceId] (service profile: [assignedToDn]) has an invalid FRU: [presence]

Explanation: This fault typically occurs because Cisco UCS Manager has detected an unsupported server or CPU.

Recommended Action: If you see this fault, take the following actions:

1. Verify that a supported server and/or CPU is installed.
2. Verify that the Cisco UCS Manager capability catalog is up to date.
3. Reacknowledge the server.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: identity-unestablishable
mibFaultCode: F0320
mibFaultName: fltComputePhysicalUnidentified
moClass: compute:Physical
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fltComputePhysicalUnassignedInaccessible

Fault Code: F0321

Message: Server [id] (no profile) inaccessibleServer [chassisId]/[slotId] (no profile) inaccessibleServer [chassisId]/[slotId]/[serverInstanceId] (no profile) inaccessible

Explanation: This fault typically occurs when the server, which is not associated with a service profile, has lost connection to the fabric interconnects. This fault occurs if there are communication issues between the server CIMC and the fabric interconnects.

Recommended Action: If you see this fault, take the following actions:

1. Wait a few minutes to see if the fault clears. This is typically a temporary issue, and can occur after a firmware upgrade.
2. If the fault does not clear after a brief time, remove the server and then reinsert it.
3. Reacknowledge the server.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: equipment-inaccessible
mibFaultCode: F0321
mibFaultName: fltComputePhysicalUnassignedInaccessible
moClass: compute:Physical
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fltComputePhysicalAssignedInaccessible

Fault Code: F0322

Message: Server [id] (service profile: [assignedToDn]) inaccessibleServer [chassisId]/[slotId] (service profile: [assignedToDn]) inaccessibleServer [chassisId]/[slotId]/[serverInstanceId] (service profile: [assignedToDn]) inaccessible

Explanation: This fault typically occurs when the server, which is associated with a service profile, has lost connection to the fabric interconnects. This fault occurs if there are communication issues between the server CIMC and the fabric interconnects.

Recommended Action: If you see this fault, take the following actions:

1. Wait a few minutes to see if the fault clears. This is typically a temporary issue, and can occur after a firmware upgrade.
2. If the fault does not clear after a brief time, remove the server and then reinsert it.
3. Reacknowledge the server.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: equipment-inaccessible
mibFaultCode: F0322
mibFaultName: fltComputePhysicalAssignedInaccessible
moClass: compute:Physical
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fltLsServerFailed

Fault Code: F0324

Message: Service profile [name] failed

Explanation: Server has failed. This fault typically occurs if the adapter power on self-test results in major and critical errors.

Recommended Action: If you see this fault, take the following actions:

1. Check the POST results for the server. In Cisco UCS Manager GUI, you can access the POST results from the General tab for the server. In Cisco UCS Manager CLI, you can access the POST results through the **show post** command under the scope for the server.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: server-failed
mibFaultCode: F0324
mibFaultName: fltLsServerFailed
moClass: ls:Server
Type: server
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fltLsServerDiscoveryFailed

Fault Code: F0326

Message: Service profile [name] discovery failed

Explanation: The shallow discovery that occurs when the server associated with service profile fails. If the server is up and the data path is working, this fault typically occurs as a result of one of the following issues:

- Cisco UCS Manager cannot communicate with the CIMC on the server.
- The server cannot communicate with the fabric interconnect.

Recommended Action: If you see this fault, take the following actions:

1. Check the FSM tab and view the current state of the server and any FSM operations.
2. Check the error descriptions and see if any server components indicate a failure.
3. If the server or a server component has failed, do the following:
   a. Check the operational state of the server.
   b. If the server is not operable, reacknowledge the server.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: discovery-failed
mibFaultCode: F0326
mibFaultName: fltLsServerDiscoveryFailed
moClass: ls:Server
Type: server
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fltLsServerConfigFailure

Fault Code: F0327

Message: Service profile [name] configuration failed due to [serverConfigIssues],[serverExtdConfigIssues],[networkConfigIssues],[storageConfigIssues],[vnicConfigIssues],[iscsiConfigIssues],[vnicConfigIssues2]

Explanation:

The named configuration qualifier is not available. This fault typically occurs because Cisco UCS Manager cannot successfully deploy the service profile due to a lack of resources that meet the named qualifier. For example, this fault can occur if the following occurs:

- The service profile is configured for a server adapter with vHBAs, and the adapter on the server does not support vHBAs.
- The service profile is created from a template which includes a server pool, and the server pool is empty.
- The local disk configuration policy in the service profile specifies the No Local Storage mode, but the server contains local disks.

Recommended Action: If you see this fault, take the following actions:

1. Check the status of the server pool associated with the service profile. If the pool is empty, add more blade servers to it.

2. Check the state of the server and ensure that it is in either the discovered or unassociated state.
3. If the server is associated or undiscovered, do one of the following:
   - Discover the server.
   - Disassociate the server from the current service profile.
   - Select another server to associate with the service profile.
4. Review each policy in the service profile and verify that the selected server meets the requirements in the policy.
5. If the server does not meet the requirements of the service profile, do one of the following:
   - Modify the service profile to match the server.
   - Select another server that does meet the requirements to associate with the service profile.
6. If you can verify that the server meets the requirements of the service profile, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: configuration-failure
mibFaultCode: F0327
mibFaultName: fltLsServerConfigFailure
moClass: ls:Server
Type: server
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fltLsServerMaintenanceFailed

Fault Code: F0329

Message: Service profile [name] maintenance failed

Explanation: Cisco UCS Manager currently does not use this fault.

Recommended Action: If you see this fault, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: maintenance-failed
mibFaultCode: F0329
mibFaultName: fltLsServerMaintenanceFailed
moClass: ls:Server
Type: server
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fltLsServerRemoved

Fault Code: F0330

Message: Service profile [name] underlying resource removed

Explanation: Cisco UCS Manager cannot access the server associated with the service profile. This fault typically occurs as a result of one of the following issues:

- The server has been physically removed from the slot.
- The server is not available.

Recommended Action: If you see this fault, take the following actions:

1. If the server was removed from the slot, reinsert the server in the slot.
2. If the server was not removed, remove and reinsert the server.**NOTE:** If the server is operable, this action can be disruptive to current operations.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-removed
mibFaultCode: F0330
mibFaultName: fltLsServerRemoved
moClass: ls:Server
Type: server
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fltLsServerInaccessible

Fault Code: F0331

Message: Service profile [name] cannot be accessed

Explanation: Cisco UCS Manager cannot communicate with the CIMC on the server. This fault typically occurs as a result of one of the following issues:

- The server port or ports have failed.
- The I/O module is offline.
- The BMC has failed.

Recommended Action: If you see this fault, take the following actions:

1. If Cisco UCS Manager shows that the CIMC is down, physically reseat the server.
2. If Cisco UCS Manager shows that the server ports have failed, attempt to enable them.
3. If the I/O module is offline, check for faults on that component.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: server-inaccessible
mibFaultCode: F0331
```

```
mibFaultName: fltLsServerInaccessible
moClass: ls:Server
Type: server
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fltLsServerAssociationFailed

Fault Code: F0332

Message: Service profile [name] association failed for [pnDn]

Explanation: The service profile could not be associated with the server. This fault typically occurs because Cisco UCS Manager cannot communicate with one or more of the following:

- Fabric interconnect
- CIMC on the server
- SAS controller driver
- Server

Recommended Action: If you see this fault, take the following actions:

1. Check the FSM tab for the server and service profile to determine why the association failed.
2. If the server is stuck in an inappropriate state, such as booting, power cycle the server.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: association-failed
mibFaultCode: F0332
mibFaultName: fltLsServerAssociationFailed
moClass: ls:Server
Type: server
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fltLsServerServer-unfulfilled

Fault Code: F0337

Message: Server [pnDn] does not fulfill Service profile [name] due to [configQualifier]

Explanation: The server no longer meets the qualification requirements of the service profile. This fault typically occurs as a result of one of the following issues:

- The server has been physically changed.
- A required component of the server has failed.

Recommended Action: If you see this fault, take the following actions:

1. Check the server inventory compare to the service profile qualifications.

2. If the server inventory does not match the service profile qualifications, do one of the following:
   - Associate the server with a different service profile.
   - Ensure the server has sufficient resources to qualify for the current service profile.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: server-failed
mibFaultCode: F0337
mibFaultName: fltLsServerServerUnfulfilled
moClass: ls:Server
Type: server
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fltEtherSwitchIntFIoSatellite-connection-absent

Fault Code: F0367

Message: No link between NIF port [chassisId]/[slotId]/[portId] and fabric interconnect [switchId]:[peerSlotId]/[peerPortId]

Explanation: This fault is raised when an I/O module fabric port, which links the I/O module port and the fabric interconnect, is not functional

Recommended Action: If you see this fault, take the following actions:

1. Verify the fabric interconnect-chassis topology. Make sure each I/O module is connected to only one fabric interconnect.
2. Ensure that the fabric interconnect server port is configured and enabled.
3. Ensure that the links are plugged in properly and reacknowledge the chassis.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: satellite-connection-absent
mibFaultCode: F0367
mibFaultName: fltEtherSwitchIntFIoSatelliteConnectionAbsent
moClass: ether:SwitchIntFIo
Type: connectivity
autoCleared: true
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]
```

fltEtherSwitchIntFIoSatellite-wiring-problem

Fault Code: F0368

Message: Invalid connection between IOM port [chassisId]/[slotId]/[portId] and fabric interconnect [switchId]:[peerSlotId]/[peerPortId]

Explanation: This fault typically occurs as a result of a satellite wiring problem on the network-facing interface of an I/O module and Cisco UCS Manager detects that at least one IOM uplink is misconnected to one of the fabric interconnect ports.

Recommended Action: If you see this fault, take the following actions:

1. Verify the fabric interconnect-chassis topology. Make sure each I/O module is connected to only one fabric interconnect.
2. Ensure that the links are plugged in properly and re-acknowledge the chassis.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: satellite-mis-connected
mibFaultCode: F0368
mibFaultName: fltEtherSwitchIntFIoSatelliteWiringProblem
moClass: ether:SwitchIntFIo
Type: connectivity
autoCleared: true
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]
```

fltEquipmentPsuPowerSupplyProblem

Fault Code: F0369

Message: Power supply [id] in chassis [id] power: [power]Power supply [id] in fabric interconnect [id] power: [power]Power supply [id] in fex [id] power: [power]Power supply [id] in server [id] power: [power]Power supply [id] in rack-enclosure [id] power: [power]

Explanation: This fault typically occurs when Cisco UCS Manager detects a problem with a power supply unit in a chassis, fabric interconnect or a FEX. For example, the PSU is not functional.

Recommended Action: If you see this fault, take the following actions:

1. Verify that the power cord is properly connected to the PSU and the power source.
2. Verify that the power source is 220 volts.
3. Verify that the PSU is properly installed in the chassis or fabric interconnect.
4. Remove the PSU and reinstall it.
5. Replace the PSU.
6. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: power-problem
mibFaultCode: F0369
mibFaultName: fltEquipmentPsuPowerSupplyProblem
moClass: equipment:Psu
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-enclosure-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fltEquipmentFanDegraded

Fault Code: F0371

Message: Fan [id] in Fan Module [tray]-[id] under chassis [id] operability: [operability]Fan [id] in fabric interconnect [id] operability: [operability]Fan [id] in fex [id] operability: [operability]Fan [id] in Fan Module [tray]-[id] under server [id] operability: [operability]Fan [id] in Fan Module [tray]-[id] under rack-enclosure [id] operability: [operability]

Explanation: This fault occurs when one or more fans in a fan module are not operational, but at least one fan is operational.

Recommended Action: If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the fan module.
2. Review the Cisco UCS Site Preparation Guide and ensure the fan module has adequate airflow, including front and back clearance.
3. Verify that the air flows are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Replace the faulty fan modules.
8. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
9. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: equipment-degraded
mibFaultCode: F0371
mibFaultName: fltEquipmentFanDegraded
moClass: equipment:Fan
```

```
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/fex-[id]/fan-[id]
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]
```

fltEquipmentFanInoperable

Fault Code: F0373

Message: Fan [id] in Fan Module [tray]-[id] under chassis [id] operability: [operability]Fan [id] in fabric interconnect [id] operability: [operability]Fan [id] in fex [id] operability: [operability]Fan [id] in Fan Module [tray]-[id] under server [id] operability: [operability]Fan [id] in Fan Module [tray]-[id] under rack-enclosure [id] operability: [operability]

Explanation: This fault occurs if a fan is not operational.

Recommended Action: If you see this fault, take the following actions:

1. Remove fan module and re-install the fan module again. Remove only one fan module at a time.
2. Replace fan module with a different fan module
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-inoperable
mibFaultCode: F0373
mibFaultName: fltEquipmentFanInoperable
moClass: equipment:Fan
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/fex-[id]/fan-[id]
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]
```

fltEquipmentPsuInoperable

Fault Code: F0374

Message: Power supply [id] in chassis [id] operability: [operability]Power supply [id] in fabric interconnect [id] operability: [operability]Power supply [id] in fex [id] operability: [operability]Power supply [id] in server [id] operability: [operability]Power supply [id] in rack-enclosure [id] operability: [operability]

Explanation:

This fault typically occurs when Cisco UCS Manager detects a problem with a power supply unit in a chassis, fabric interconnect or a FEX. For example, the PSU is not functional.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the power cord is properly connected to the PSU and the power source.
2. Verify that the power source is 220 volts.
3. Verify that the PSU is properly installed in the chassis or fabric interconnect.
4. Remove the PSU and reinstall it.
5. Replace the PSU.
6. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-inoperable
mibFaultCode: F0374
mibFaultName: fltEquipmentPsuInoperable
moClass: equipment:Psu
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-enclosure-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fltEquipmentIOCardRemoved

Fault Code: F0376

Message: [side] IOM [chassisId]/[id] ([switchId]) is removed

Explanation:

This fault typically occurs because an I/O module is removed from the chassis. In a cluster configuration, the chassis fails over to the other I/O module. For a standalone configuration, the chassis associated with the I/O module loses network connectivity. This is a critical fault because it can result in the loss of network connectivity and disrupt data traffic through the I/O module.

Recommended Action:

If you see this fault, take the following actions:

1. Reinsert the I/O module and configure the fabric-interconnect ports connected to it as server ports and wait a few minutes to see if the fault clears.
2. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: equipment-removed
```

```
mibFaultCode: F0376
mibFaultName: fltEquipmentIOCardRemoved
moClass: equipment:IOCard
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fltEquipmentFanModuleMissing

Fault Code: F0377

Message: Fan module [tray]-[id] in chassis [id] presence: [presence]Fan module [tray]-[id] in server [id] presence: [presence]Fan module [tray]-[id] in fabric interconnect [id] presence: [presence]Fan module [tray]-[id] in rack-enclosure [id] presence: [presence]

Explanation:

This fault occurs if a fan Module slot is not equipped or removed from its slot

Recommended Action:

If you see this fault, take the following actions:

1. If the reported slot is empty, insert a fan module into the slot.
2. If the reported slot contains a fan module, remove and reinsert the fan module.
3. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: equipment-missing
mibFaultCode: F0377
mibFaultName: fltEquipmentFanModuleMissing
moClass: equipment:FanModule
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]
```

fltEquipmentPsuMissing

Fault Code: F0378

Message: Power supply [id] in chassis [id] presence: [presence]Power supply [id] in fabric interconnect [id] presence: [presence]Power supply [id] in fex [id] presence: [presence]Power supply [id] in server [id] presence: [presence]Power supply [id] in rack-enclosure [id] presence: [presence]

Explanation:

This fault typically occurs when Cisco UCS Manager detects a problem with a power supply unit in a chassis, fabric interconnect, or a FEX. For example, the PSU is missing.

Recommended Action:

If you see this fault, take the following actions:

1. If the PSU is physically present in the slot, remove and then reinsert it.
2. If the PSU is not physically present in the slot, insert a new PSU.
3. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: equipment-missing
mibFaultCode: F0378
mibFaultName: fltEquipmentPsuMissing
moClass: equipment:Psu
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-enclosure-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fltEquipmentIOCardThermalProblem

Fault Code: F0379

Message: [side] IOM [chassisId]/[id] ([switchId]) operState: [operState]

Explanation:

This fault occurs when there is a thermal problem on an I/O module. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the I/O module.
2. Review the Cisco UCS Site Preparation Guide to ensure the I/O modules have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Replace faulty I/O modules.

8. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
9. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: thermal-problem
mibFaultCode: F0379
mibFaultName: fltEquipmentIOCardThermalProblem
moClass: equipment:IOCard
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fltEquipmentFanModuleThermalThresholdNonCritical

Fault Code: F0380

Message: Fan module [tray]-[id] in chassis [id] temperature: [thermal]Fan module [tray]-[id] in server [id] temperature: [thermal]Fan module [tray]-[id] in fabric interconnect [id] temperature: [thermal]Fan module [tray]-[id] in rack-enclosure [id] temperature: [thermal]

Explanation:

This fault occurs when the temperature of a fan module has exceeded a non-critical threshold value, but is still below the critical threshold. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the fan module.
2. Review the Cisco UCS Site Preparation Guide to ensure the fan modules have adequate airflow, including front and back clearance.
3. Verify that the air flows are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Replace faulty fan modules.

8. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
9. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: thermal-problem
mibFaultCode: F0380
mibFaultName: fltEquipmentFanModuleThermalThresholdNonCritical
moClass: equipment:FanModule
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]
```

fltEquipmentPsuThermalThresholdNonCritical

Fault Code: F0381

Message: Power supply [id] in chassis [id] temperature: [thermal]Power supply [id] in fabric interconnect [id] temperature: [thermal]Power supply [id] in server [id] temperature: [thermal]Power supply [id] in rack-enclosure [id] temperature: [thermal]

Explanation:

This fault occurs when the temperature of a PSU module has exceeded a non-critical threshold value, but is still below the critical threshold. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the PSU module.
2. Review the Cisco UCS Site Preparation Guide to ensure the PSU modules have adequate airflow, including front and back clearance.
3. Verify that the air flows are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.

6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Replace faulty PSU modules.
8. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
9. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: thermal-problem
mibFaultCode: F0381
mibFaultName: fltEquipmentPsuThermalThresholdNonCritical
moClass: equipment:Psu
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-enclosure-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fltEquipmentFanModuleThermalThresholdCritical

Fault Code: F0382

Message: Fan module [tray]-[id] in chassis [id] temperature: [thermal]Fan module [tray]-[id] in server [id] temperature: [thermal]Fan module [tray]-[id] in fabric interconnect [id] temperature: [thermal]Fan module [tray]-[id] in rack-enclosure [id] temperature: [thermal]

Explanation:

This fault occurs when the temperature of a fan module has exceeded a critical threshold value. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the fan module.
2. Review the Cisco UCS Site Preparation Guide to ensure the fan modules have adequate airflow, including front and back clearance.
3. Verify that the air flows are not obstructed.
4. Verify that the site cooling system is operating properly.

5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Replace faulty fan modules.
8. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
9. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: thermal-problem
mibFaultCode: F0382
mibFaultName: fltEquipmentFanModuleThermalThresholdCritical
moClass: equipment:FanModule
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]
```

fltEquipmentPsuThermalThresholdCritical

Fault Code: F0383

Message: Power supply [id] in chassis [id] temperature: [thermal]Power supply [id] in fabric interconnect [id] temperature: [thermal]Power supply [id] in server [id] temperature: [thermal]Power supply [id] in rack-enclosure [id] temperature: [thermal]

Explanation:

This fault occurs when the temperature of a PSU module has exceeded a critical threshold value. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the PSU module.
2. Review the Cisco UCS Site Preparation Guide to ensure the PSU modules have adequate airflow, including front and back clearance.

3. Verify that the air flows are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Replace faulty PSU modules.
8. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
9. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: thermal-problem
mibFaultCode: F0383
mibFaultName: fltEquipmentPsuThermalThresholdCritical
moClass: equipment:Psu
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-enclosure-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fltEquipmentFanModuleThermalThresholdNonRecoverable

Fault Code: F0384

Message: Fan module [tray]-[id] in chassis [id] temperature: [thermal]Fan module [tray]-[id] in server [id] temperature: [thermal]Fan module [tray]-[id] in fabric interconnect [id] temperature: [thermal]Fan module [tray]-[id] in rack-enclosure [id] temperature: [thermal]

Explanation:

This fault occurs when the temperature of a fan module has been out of operating range, and the issue is not recoverable. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the fan module.

2. Review the Cisco UCS Site Preparation Guide to ensure the fan modules have adequate airflow, including front and back clearance.
3. Verify that the air flows are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Replace faulty fan modules.
8. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
9. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: thermal-problem
mibFaultCode: F0384
mibFaultName: fltEquipmentFanModuleThermalThresholdNonRecoverable
moClass: equipment:FanModule
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]
```

fltEquipmentPsuThermalThresholdNonRecoverable

Fault Code: F0385

Message: Power supply [id] in chassis [id] temperature: [thermal]Power supply [id] in fabric interconnect [id] temperature: [thermal]Power supply [id] in server [id] temperature: [thermal]Power supply [id] in rack-enclosure [id] temperature: [thermal]

Explanation:

This fault occurs when the temperature of a PSU module has been out of operating range, and the issue is not recoverable. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the PSU module.
2. Review the Cisco UCS Site Preparation Guide to ensure the PSU modules have adequate airflow, including front and back clearance.
3. Verify that the air flows are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Replace faulty PSU modules.
8. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
9. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: thermal-problem
mibFaultCode: F0385
mibFaultName: fltEquipmentPsuThermalThresholdNonRecoverable
moClass: equipment:Psu
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-enclosure-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fltEquipmentPsuVoltageThresholdNonCritical

Fault Code: F0387

Message: Power supply [id] in chassis [id] voltage: [voltage]Power supply [id] in fabric interconnect [id] voltage: [voltage]Power supply [id] in fex [id] voltage: [voltage]Power supply [id] in server [id] voltage: [voltage]Power supply [id] in rack-enclosure [id] voltage: [voltage]

Explanation:

This fault occurs when the PSU voltage is out of normal operating range, but hasn't reached to a critical stage yet. Normally the PSU will recover itself from this situation.

Recommended Action:

If you see this fault, take the following actions:

1. Monitor the PSU for further degradation.
2. Remove and reseat the PSU.

3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: voltage-problem
mibFaultCode: F0387
mibFaultName: fltEquipmentPsuVoltageThresholdNonCritical
moClass: equipment:Psu
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-enclosure-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fltEquipmentPsuVoltageThresholdCritical

Fault Code: F0389

Message: Power supply [id] in chassis [id] voltage: [voltage]Power supply [id] in fabric interconnect [id] voltage: [voltage]Power supply [id] in fex [id] voltage: [voltage]Power supply [id] in server [id] voltage: [voltage]Power supply [id] in rack-enclosure [id] voltage: [voltage]

Explanation:

This fault occurs when the PSU voltage has exceeded the specified hardware voltage rating.

Recommended Action:

If you see this fault, take the following actions:

1. Remove and reseat the PSU.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: voltage-problem
mibFaultCode: F0389
mibFaultName: fltEquipmentPsuVoltageThresholdCritical
moClass: equipment:Psu
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-enclosure-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fltEquipmentPsuVoltageThresholdNonRecoverable

Fault Code: F0391

Message: Power supply [id] in chassis [id] voltage: [voltage]Power supply [id] in fabric interconnect [id] voltage: [voltage]Power supply [id] in fex [id] voltage: [voltage]Power supply [id] in server [id] voltage: [voltage]Power supply [id] in rack-enclosure [id] voltage: [voltage]

Explanation:

This fault occurs when the PSU voltage has exceeded the specified hardware voltage rating and PSU hardware may have been damaged as a result or may be at risk of being damaged.

Recommended Action:

If you see this fault, take the following actions:

1. Remove and reseat the PSU.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: voltage-problem
mibFaultCode: F0391
mibFaultName: fltEquipmentPsuVoltageThresholdNonRecoverable
moClass: equipment:Psu
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-enclosure-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fltEquipmentPsuPerfThresholdNonCritical

Fault Code: F0392

Message: Power supply [id] in chassis [id] output current: [perf]Power supply [id] in fabric interconnect [id] output current: [perf]Power supply [id] in server [id] output current: [perf]Power supply [id] in rack-enclosure [id] output current: [perf]

Explanation:

This fault is raised as a warning if the current output of the PSU in a chassis, fabric interconnect, or rack server does not match the desired output value.

Recommended Action:

If you see this fault, take the following actions:

1. Monitor the PSU status.
2. If possible, remove and reseat the PSU.
3. If the above action did not resolve the issue, create a **show tech-support** file for the chassis and Cisco UCS Manager, and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: performance-problem
mibFaultCode: F0392
mibFaultName: fltEquipmentPsuPerfThresholdNonCritical
moClass: equipment:Psu
Type: equipment
```

```
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-enclosure-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fltEquipmentPsuPerfThresholdCritical

Fault Code: F0393

Message: Power supply [id] in chassis [id] output current: [perf]Power supply [id] in fabric interconnect [id] output current: [perf]Power supply [id] in server [id] output current: [perf]Power supply [id] in rack-enclosure [id] output current: [perf]

Explanation:

This fault occurs if the current output of the PSU in a chassis, fabric interconnect, or rack server is far below or above the desired output value.

Recommended Action:

If you see this fault, take the following actions:

1. Monitor the PSU status.
2. Plan to replace the PSU as soon as possible.
3. If the above actions did not resolve the issue, create a **show tech-support** file for the chassis and Cisco UCS Manager, and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: performance-problem
mibFaultCode: F0393
mibFaultName: fltEquipmentPsuPerfThresholdCritical
moClass: equipment:Psu
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-enclosure-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fltEquipmentPsuPerfThresholdNonRecoverable

Fault Code: F0394

Message: Power supply [id] in chassis [id] output current: [perf]Power supply [id] in fabric interconnect [id] output current: [perf]Power supply [id] in server [id] output current: [perf]Power supply [id] in rack-enclosure [id] output current: [perf]

Explanation:

This fault occurs if the current output of the PSU in a chassis, fabric interconnect, or rack server is far above or below the non-recoverable threshold value.

Recommended Action:

If you see this fault, plan to replace the PSU as soon as possible.

Fault Details

```
Severity: critical
Cause: performance-problem
mibFaultCode: F0394
mibFaultName: fltEquipmentPsuPerfThresholdNonRecoverable
moClass: equipment:Psu
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-enclosure-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fltEquipmentFanPerfThresholdNonCritical

Fault Code: F0395

Message: Fan [id] in Fan Module [tray]-[id] under chassis [id] speed: [perf]Fan [id] in fabric interconnect [id] speed: [perf]Fan [id] in Fan Module [tray]-[id] under server [id] speed: [perf]Fan [id] in Fan Module [tray]-[id] under rack-enclosure [id] speed: [perf]

Explanation:

This fault occurs when the fan speed reading from the fan controller does not match the desired fan speed and is outside of the normal operating range. This can indicate a problem with a fan or with the reading from the fan controller.

Recommended Action:

If you see this fault, take the following actions:

1. Monitor the fan status.
2. If the problem persists for a long period of time or if other fans do not show the same problem, reseat the fan.
3. Replace the fan module.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: info
Cause: performance-problem
mibFaultCode: F0395
mibFaultName: fltEquipmentFanPerfThresholdNonCritical
moClass: equipment:Fan
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/fex-[id]/fan-[id]
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]
```

```
Affected MO: sys/switch-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]
```

fltEquipmentFanPerfThresholdCritical

Fault Code: F0396

Message: Fan [id] in Fan Module [tray]-[id] under chassis [id] speed: [perf]Fan [id] in fabric interconnect [id] speed: [perf]Fan [id] in Fan Module [tray]-[id] under server [id] speed: [perf]Fan [id] in Fan Module [tray]-[id] under rack-enclosure [id] speed: [perf]

Explanation:

This fault occurs when the fan speed read from the fan controller does not match the desired fan speed and has exceeded the critical threshold and is in risk of failure. This can indicate a problem with a fan or with the reading from the fan controller.

Recommended Action:

If you see this fault, take the following actions:

1. Monitor the fan status.
2. If the problem persists for a long period of time or if other fans do not show the same problem, reseat the fan.
3. If the above actions did not resolve the issue, create a **show tech-support** file for the chassis and contact Cisco TAC.

Fault Details

```
Severity: info
Cause: performance-problem
mibFaultCode: F0396
mibFaultName: fltEquipmentFanPerfThresholdCritical
moClass: equipment:Fan
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/fex-[id]/fan-[id]
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]
```

fltEquipmentFanPerfThresholdNonRecoverable

Fault Code: F0397

Message: Fan [id] in Fan Module [tray]-[id] under chassis [id] speed: [perf]Fan [id] in fabric interconnect [id] speed: [perf]Fan [id] in Fan Module [tray]-[id] under server [id] speed: [perf]Fan [id] in Fan Module [tray]-[id] under rack-enclosure [id] speed: [perf]

Explanation:

This fault occurs when the fan speed read from the fan controller has far exceeded the desired fan speed. It frequently indicates that the fan has failed.

Recommended Action:

If you see this fault, take the following actions:

1. Replace the fan.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: info
Cause: performance-problem
mibFaultCode: F0397
mibFaultName: fltEquipmentFanPerfThresholdNonRecoverable
moClass: equipment:Fan
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/fex-[id]/fan-[id]
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]
```

fltEquipmentIOCardFirmwareUpgrade

Fault Code: F0398

Message: Chassis controller in IOM [chassisId]/[id] ([switchId]) firmware upgrade problem: [upgradeStatus]

Explanation:

This fault typically occurs when an IOM upgrade fails.

Recommended Action:

If you see this fault, take the following actions:

1. On the FSM tab for the IOM, verify whether FSM for the upgrade completed successfully or failed.
2. If the FSM failed, review the error message in the FSM.
3. If the error message is self explanatory, verify the physical connectivity. For example, an error message could be No Connection to Endpoint or Link Down.
4. If the above action did not resolve the issue and the fault persists, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: firmware-upgrade-problem
mibFaultCode: F0398
mibFaultName: fltEquipmentIOCardFirmwareUpgrade
moClass: equipment:IOCard
Type: equipment
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fltEquipmentChassisUnsupportedConnectivity

Fault Code: F0399

Message: Current connectivity for chassis [id] does not match supported topology

Explanation:

This fault typically occurs when the current connectivity for a chassis does not match the configuration in the chassis discovery policy.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the correct number of links are configured in the chassis discovery policy.
2. Check the state of the I/O module links.
3. Reacknowledge the chassis.
4. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: unsupported-connectivity-configuration
mibFaultCode: F0399
mibFaultName: fltEquipmentChassisUnsupportedConnectivity
moClass: equipment:Chassis
Type: connectivity
autoCleared: true
Affected MO: sys/chassis-[id]
```

fltEquipmentChassisUnacknowledged

Fault Code: F0400

Message: Chassis [id] connectivity configuration: [configState]

Explanation:

This fault typically occurs when or more of the I/O module links from the chassis are unacknowledged.

Recommended Action:

If you see this fault, take the following actions:

1. Check the state of the I/O module links.
2. Reacknowledge the chassis.
3. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: equipment-unacknowledged
```

```
mibFaultCode: F0400
mibFaultName: fltEquipmentChassisUnacknowledged
moClass: equipment:Chassis
Type: connectivity
autoCleared: true
Affected MO: sys/chassis-[id]
```

fltEquipmentIOCardUnsupportedConnectivity

Fault Code: F0401

Message: IOM [chassisId]/[id] ([switchId]) current connectivity does not match discovery policy or connectivity is unsupported: [configState]

Explanation:

This fault typically occurs when the current connectivity for an I/O module does not match the configuration in the chassis discovery policy.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the correct number of links are configured in the chassis discovery policy.
2. Check the state of the I/O module links.
3. Note that atleast 2 links are required to be connected between FEX and 61xx Fabric Interconnect
4. Reacknowledge the chassis.
5. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: unsupported-connectivity-configuration
mibFaultCode: F0401
mibFaultName: fltEquipmentIOCardUnsupportedConnectivity
moClass: equipment:IOCard
Type: connectivity
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fltEquipmentIOCardUnacknowledged

Fault Code: F0402

Message: IOM [chassisId]/[id] ([switchId]) connectivity configuration: [configState]

Explanation:

This fault typically occurs when an I/O module is unacknowledged.

Recommended Action:

If you see this fault, take the following actions:

1. Check the state of the I/O module links.
2. Reacknowledge the chassis.

3. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: equipment-unacknowledged
mibFaultCode: F0402
mibFaultName: fltEquipmentIOCardUnacknowledged
moClass: equipment:IOCard
Type: connectivity
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fltEquipmentIOCardPeerDisconnected

Fault Code: F0403

Message: IOM [chassisId]/[id] ([switchId]) peer connectivity: [peerCommStatus]

Explanation:

This fault typically occurs when an I/O module is unable to communicate with its peer I/O module.

Recommended Action:

If you see this fault, take the following actions:

1. Wait a few minutes to see if the fault clears. This is typically a temporary issue, and can occur after a firmware upgrade.
2. If the fault does not clear after a few minutes, remove and reinsert the I/O module.
3. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: equipment-disconnected
mibFaultCode: F0403
mibFaultName: fltEquipmentIOCardPeerDisconnected
moClass: equipment:IOCard
Type: connectivity
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fltEquipmentChassisIdentity

Fault Code: F0404

Message: Chassis [id] has a mismatch between FRU identity reported by Fabric/IOM vs. FRU identity reported by CMC

Explanation:

This fault typically occurs when the FRU information for an I/O module is corrupted or malformed.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the capability catalog in Cisco UCS Manager is up to date. If necessary, update the catalog.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: fru-problem
mibFaultCode: F0404
mibFaultName: fltEquipmentChassisIdentity
moClass: equipment:Chassis
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]
```

fltEquipmentIOCardIdentity

Fault Code: F0405

Message: [side] IOM [chassisId]/[id] ([switchId]) has a malformed FRU

Explanation:

This fault typically occurs when the FRU information for an I/O module is corrupted or malformed.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the capability catalog in Cisco UCS Manager is up to date. If necessary, update the catalog.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: fru-problem
mibFaultCode: F0405
mibFaultName: fltEquipmentIOCardIdentity
moClass: equipment:IOCard
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fltEquipmentFanModuleIdentity

Fault Code: F0406

Message: Fan Module [tray]-[id] in chassis [id] has a malformed FRUFan Module [tray]-[id] in server [id] has a malformed FRUFan Module [tray]-[id] in fabric interconnect [id] has a malformed FRUFan Module [tray]-[id] in rack-enclosure [id] has a malformed FRU

Explanation:

This fault typically occurs when the FRU information for a fan module is corrupted or malformed.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the capability catalog in Cisco UCS Manager is up to date. If necessary, update the catalog.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: fru-problem
mibFaultCode: F0406
mibFaultName: fltEquipmentFanModuleIdentity
moClass: equipment:FanModule
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]
```

fltEquipmentPsuIdentity

Fault Code: F0407

Message: Power supply [id] on chassis [id] has a malformed FRUPower supply [id] on server [id] has a malformed FRUPower supply [id] on rack-enclosure [id] has a malformed FRU

Explanation:

This fault typically occurs when the FRU information for a power supply unit is corrupted or malformed.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the capability catalog in Cisco UCS Manager is up to date. If necessary, update the catalog.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: fru-problem
mibFaultCode: F0407
mibFaultName: fltEquipmentPsuIdentity
moClass: equipment:Psu
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-enclosure-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fltEquipmentChassisPowerProblem

Fault Code: F0408

Message: Power state on chassis [id] is [power]

Explanation:

This fault typically occurs when the chassis fails to meet the minimal power requirements defined in the power policy or when one or more power supplies have failed.

Recommended Action:

If you see this fault, take the following actions:

1. In Cisco UCS Manager, verify that all PSUs for the chassis are functional.
2. Verify that all PSUs are seated properly within the chassis and are powered on.
3. Physically unplug and replug the power cord into the chassis.
4. If all PSUs are operating at maximum capacity, either add more PSUs to the chassis or redefine the power policy in Cisco UCS Manager.
5. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: power-problem
mibFaultCode: F0408
mibFaultName: fltEquipmentChassisPowerProblem
moClass: equipment:Chassis
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]
```

fltEquipmentChassisThermalThresholdCritical

Fault Code: F0409

Message: Thermal condition on chassis [id] is [thermal]

Explanation:

This fault occurs under the following conditions:

1. If a component within a chassis is operating outside the safe thermal operating range.
2. If the chassis controller in the IOM is unable to determine the thermal condition of a blade server, the **show tech-support** file for the chassis provides a more detailed report of the most severe thermal conditions currently applicable for that chassis.

Recommended Action:

If you see this fault, take the following actions:

1. Check the temperature readings for the blade servers and IOM and ensure they are within the recommended thermal safe operating range.
2. If the fault reports a "Thermal Sensor threshold crossing in blade" error for one or more blade servers, check if DIMM or processor temperature related faults have been raised against that blade.
3. If the fault reports a "Thermal Sensor threshold crossing in IOM" error for one or both the IOMs, check if thermal faults have been raised against that IOM. Those faults include details of the thermal condition.

4. If the fault reports a "Missing or Faulty Fan" error, check on the status of that fan. If it needs replacement, create a **show tech-support** file for the chassis and contact Cisco TAC.
5. If the fault reports a "No connectivity between IOM and blade" or "Thermal Sensor readings unavailable from blade" error, check if that blade server is operational and whether any faults have been raised against that blade server. In this situation, the chassis controller may go into a fail-safe operating mode and the fan speeds may increase as a precautionary measure.
6. If the above actions did not resolve the issue and the condition persists, create a **show tech-support** file for Cisco UCS Manager and the chassis and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: thermal-problem
mibFaultCode: F0409
mibFaultName: fltEquipmentChassisThermalThresholdCritical
moClass: equipment:Chassis
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]
```

fltEquipmentChassisThermalThresholdNonCritical

Fault Code: F0410

Message: Thermal condition on chassis [id] is [thermal]

Explanation:

UCSM raises this fault under the following conditions:

1. If a component within a chassis is operating outside the safe thermal operating range.
2. If the chassis controller in the IOM is unable to determine the thermal condition of a blade server, the **show tech-support** file for the chassis provides a more detailed report of the most severe thermal conditions currently applicable for that chassis.

Recommended Action:

If you see this fault, take the following actions:

1. Check the temperature readings for the blade servers and IOM and ensure they are within the recommended thermal safe operating range.
2. If the fault reports a "Thermal Sensor threshold crossing in blade" error for one or more blade servers, check if DIMM or processor temperature related faults have been raised against that blade.
3. If the fault reports a "Thermal Sensor threshold crossing in IOM" error for one or both the IOMs, check if thermal faults have been raised against that IOM. Those faults include details of the thermal condition.
4. If the fault reports a "Missing or Faulty Fan" error, check on the status of that fan. If it needs replacement, create a **show tech-support** file for the chassis and contact Cisco TAC.
5. If the fault reports a "No connectivity between IOM and blade" or "Thermal Sensor readings unavailable from blade" error, check if that blade server is operational and whether any faults have been raised against that blade server. In this situation, the chassis controller may go into a fail-safe operating mode and the fan speeds may increase as a precautionary measure.

6. If the above actions did not resolve the issue and the condition persists, create a **show tech-support** file for Cisco UCS Manager and the chassis and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: thermal-problem
mibFaultCode: F0410
mibFaultName: fltEquipmentChassisThermalThresholdNonCritical
moClass: equipment:Chassis
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]
```

fltEquipmentChassisThermalThresholdNonRecoverable

Fault Code: F0411

Message: Thermal condition on chassis [id] is [thermal]

Explanation:

UCSM raises this fault under the following conditions:

1. If a component within a chassis is operating outside the safe thermal operating range.
2. If the chassis controller in the IOM is unable to determine the thermal condition of a blade server, the **show tech-support** file for the chassis provides a more detailed report of the most severe thermal conditions currently applicable for that chassis.

Recommended Action:

If you see this fault, take the following actions:

1. Check the temperature readings for the blade servers and IOM and ensure they are within the recommended thermal safe operating range.
2. If the fault reports a "Thermal Sensor threshold crossing in blade" error for one or more blade servers, check if DIMM or processor temperature related faults have been raised against that blade.
3. If the fault reports a "Thermal Sensor threshold crossing in IOM" error for one or both the IOMs, check if thermal faults have been raised against that IOM. Those faults include details of the thermal condition.
4. If the fault reports a "Missing or Faulty Fan" error, check on the status of that fan. If it needs replacement, create a **show tech-support** file for the chassis and contact Cisco TAC.
5. If the fault reports a "No connectivity between IOM and blade" or "Thermal Sensor readings unavailable from blade" error, check if that blade server is operational and whether any faults have been raised against that blade server. In this situation, the chassis controller may go into a fail-safe operating mode and the fan speeds may increase as a precautionary measure.
6. If the above actions did not resolve the issue and the condition persists, create a **show tech-support** file for Cisco UCS Manager and the chassis and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: thermal-problem
```

```
mibFaultCode: F0411
mibFaultName: fltEquipmentChassisThermalThresholdNonRecoverable
moClass: equipment:Chassis
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]
```

fltComputeBoardCmosVoltageThresholdCritical

Fault Code: F0424

Message: Possible loss of CMOS settings: CMOS battery voltage on server [chassisId]/[slotId] is [cmosVoltage]Possible loss of CMOS settings: CMOS battery voltage on server [id] is [cmosVoltage]Possible loss of CMOS settings: CMOS battery voltage on server [chassisId]/[slotId]/[serverInstanceId] is [cmosVoltage]

Explanation:

This fault is raised when the CMOS battery voltage has dropped to lower than the normal operating range. This could impact the clock and other CMOS settings.

Recommended Action:

If you see this fault, replace the battery.

Fault Details

```
Severity: major
Cause: voltage-problem
mibFaultCode: F0424
mibFaultName: fltComputeBoardCmosVoltageThresholdCritical
moClass: compute:Board
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board
Affected MO: sys/rack-unit-[id]/board
```

fltComputeBoardCmosVoltageThresholdNonRecoverable

Fault Code: F0425

Message: Possible loss of CMOS settings: CMOS battery voltage on server [chassisId]/[slotId] is [cmosVoltage]Possible loss of CMOS settings: CMOS battery voltage on server [id] is [cmosVoltage]Possible loss of CMOS settings: CMOS battery voltage on server [chassisId]/[slotId]/[serverInstanceId] is [cmosVoltage]

Explanation:

This fault is raised when the CMOS battery voltage has dropped quite low and is unlikely to recover. This impacts the clock and other CMOS settings.

Recommended Action:

If you see this fault, replace the battery.

Fault Details

```
Severity: major
Cause: voltage-problem
mibFaultCode: F0425
mibFaultName: fltComputeBoardCmosVoltageThresholdNonRecoverable
moClass: compute:Board
```

```
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board
Affected MO: sys/rack-unit-[id]/board
```

fltMgmtEntityElection-failure

Fault Code: F0428

Message: Fabric Interconnect [id], election of primary managemt instance has failed

Explanation:

This fault occurs in an unlikely event that the fabric interconnects in a cluster configuration could not reach an agreement for selecting the primary fabric interconnect. This impacts the full HA functionality of the fabric interconnect cluster.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the initial setup configuration is correct on both fabric interconnects.
2. Verify that the L1 and L2 links are properly connected between the fabric interconnects.
3. In the Cisco UCS Manager CLI, run the **cluster force primary** local-mgmt command on one fabric interconnect.
4. Reboot the fabric interconnects.
5. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: election-failure
mibFaultCode: F0428
mibFaultName: fltMgmtEntityElectionFailure
moClass: mgmt:Entity
Type: management
autoCleared: true
Affected MO: sys/mgmt-entity-[id]
```

fltMgmtEntityHa-not-ready

Fault Code: F0429

Message: Fabric Interconnect [id], HA functionality not ready

Explanation:

This fault occurs if Cisco UCS Manager cannot discover or communicate with one or more chassis or rack servers to write the HA Cluster state. This impacts the full HA functionality of the fabric interconnect cluster.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the initial setup configuration is correct on both fabric interconnects.
2. Verify that the L1 and L2 links are properly connected between the fabric interconnects.

3. Verify that the IOMs and/or FEXes are reachable and the server ports are enabled and operationally up.
4. Verify that the chassis and/or rack servers are powered up and reachable
5. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: ha-not-ready
mibFaultCode: F0429
mibFaultName: fltMgmtEntityHaNotReady
moClass: mgmt:Entity
Type: management
autoCleared: true
Affected MO: sys/mgmt-entity-[id]
```

fltMgmtEntityVersion-incompatible

Fault Code: F0430

Message: Fabric Interconnect [id], management services, incompatible versions

Explanation:

This fault occurs if the Cisco UCS Manager software on the subordinate fabric interconnect is not the same release as that of the primary fabric interconnect. This impacts the full HA functionality of the fabric interconnect cluster.

Recommended Action:

If you see this fault, take the following actions:

1. Upgrade the Cisco UCS Manager software on the subordinate fabric interconnect to the same release as the primary fabric interconnect and verify that both fabric interconnects are running the same release of Cisco UCS Manager.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: version-incompatible
mibFaultCode: F0430
mibFaultName: fltMgmtEntityVersionIncompatible
moClass: mgmt:Entity
Type: management
autoCleared: true
Affected MO: sys/mgmt-entity-[id]
```

fltEquipmentFanMissing

Fault Code: F0434

Message: Fan [id] in fabric interconnect [id] presence: [presence]Fan [id] in fex [id] presence: [presence]Fan [id] in Fan Module [tray]-[id] under server [id] presence: [presence]Fan [id] in Fan Module [tray]-[id] under rack-enclosure [id] presence: [presence]

Explanation:

This fault occurs in the unlikely event that a fan in a fan module cannot be detected.

Recommended Action:

If you see this fault, take the following actions:

1. Insert/reinsert the fan module in the slot that is reporting the issue.
2. Replace the fan module with a different fan module, if available.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: equipment-missing
mibFaultCode: F0434
mibFaultName: fltEquipmentFanMissing
moClass: equipment:Fan
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/fex-[id]/fan-[id]
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]
```

fltEquipmentIOCardAutoUpgradingFirmware

Fault Code: F0435

Message: IOM [chassisId]/[id] ([switchId]) is auto upgrading firmware

Explanation:

This fault typically occurs when an I/O module is auto upgrading. Auto-upgrade occurs when the firmware version on the IOM is incompatible with the firmware version on the fabric interconnect.

Recommended Action:

If you see this fault, take the following actions:

1. If the IOM and fabric interconnects are not running the same firmware version, wait for the auto-upgrade to complete.
2. When the IOM upgrade is completed, verify that Cisco UCS Manager has cleared this fault.
3. If you see this fault after the IOM overall status changes to operable, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: auto-firmware-upgrade
mibFaultCode: F0435
mibFaultName: fltEquipmentIOCardAutoUpgradingFirmware
moClass: equipment:IOCard
```

```
Type: connectivity
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fltFirmwarePackItemImageMissing

Fault Code: F0436

Message: [type] image with vendor [hwVendor], model [hwModel] and version [version] is deleted

Explanation:

This fault typically occurs when the image to which a firmware package item refers is missing.

Recommended Action:

If you see this fault, take the following actions:

1. In Cisco UCS Manager GUI, navigate to the Firmware Management > Images tab and determine whether the missing image is available or not.
2. If the image is present, click on it to verify the model and vendor.
3. If the image for the required model and vendor is not present, download that image or bundle from the Cisco.com website.
4. If the image is present and the fault persists, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: image-deleted
mibFaultCode: F0436
mibFaultName: fltFirmwarePackItemImageMissing
moClass: firmware:PackItem
Type: management
autoCleared: true
Affected MO: org-[name]/fw-catalog-pack-[name]/pack-image-[hwVendor]|[hwModel]|[type]
Affected MO:
org-[name]/fw-catalog-pack-[name]/update-backup-version-holder-[bundleType]/pack-image-[hwVendor]|[hwModel]|[type]
Affected MO: org-[name]/fw-chassis-pack-[name]/pack-image-[hwVendor]|[hwModel]|[type]
Affected MO:
org-[name]/fw-chassis-pack-[name]/update-backup-version-holder-[bundleType]/pack-image-[hwVendor]|[hwModel]|[type]
Affected MO: org-[name]/fw-host-pack-[name]/pack-image-[hwVendor]|[hwModel]|[type]
Affected MO:
org-[name]/fw-host-pack-[name]/update-backup-version-holder-[bundleType]/pack-image-[hwVendor]|[hwModel]|[type]
Affected MO: org-[name]/fw-infra-pack-[name]/pack-image-[hwVendor]|[hwModel]|[type]
Affected MO:
org-[name]/fw-infra-pack-[name]/update-backup-version-holder-[bundleType]/pack-image-[hwVendor]|[hwModel]|[type]
Affected MO: org-[name]/fw-mgmt-pack-[name]/pack-image-[hwVendor]|[hwModel]|[type]
Affected MO:
org-[name]/fw-mgmt-pack-[name]/update-backup-version-holder-[bundleType]/pack-image-[hwVendor]|[hwModel]|[type]
Affected MO: org-[name]/pack-image-[hwVendor]|[hwModel]|[type]
Affected MO:
org-[name]/update-backup-version-holder-[bundleType]/pack-image-[hwVendor]|[hwModel]|[type]
```

fltEtherSwitchIntFloSatellite-wiring-numbers-unexpected

Fault Code: F0440

Message: Chassis discovery policy conflict: Link IOM [chassisId]/[slotId]/[portId] to peer port [switchId]:[peerChassisId]/[peerSlotId]/[peerPortId] not configured

Explanation:

The configuration of the chassis discovery policy conflicts with the physical IOM uplinks. Cisco UCS Manager raises this fault when the chassis discovery policy is configured for more links than are physically cabled between the IOM uplinks on the chassis and the fabric interconnect.

Recommended Action:

If you see this fault, take the following actions:

1. Ensure that you cable at least the same number of IOM uplinks as are configured in the chassis discovery policy, and that you configure the corresponding server ports on the fabric interconnect.
2. Reacknowledge the chassis.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: info
Cause: unexpected-number-of-links
mibFaultCode: F0440
mibFaultName: fltEtherSwitchIntFIoSatelliteWiringNumbersUnexpected
moClass: ether:SwitchIntFIo
Type: connectivity
autoCleared: true
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]
```

fltMgmtEntityManagement-services-failure

Fault Code: F0451

Message: Fabric Interconnect [id], management services have failed

Explanation:

This fault occurs in an unlikely event that management services fail on a fabric interconnect. This impacts the full HA functionality of the fabric interconnect cluster.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the initial setup configuration is correct on both fabric interconnects.
2. Verify that the L1 and L2 links are properly connected between the fabric interconnects.
3. Reboot the fabric interconnects.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: management-services-failure
mibFaultCode: F0451
mibFaultName: fltMgmtEntityManagementServicesFailure
moClass: mgmt:Entity
Type: management
autoCleared: true
Affected MO: sys/mgmt-entity-[id]
```

fltMgmtEntityManagement-services-unresponsive

Fault Code: F0452

Message: Fabric Interconnect [id], management services are unresponsive

Explanation:

This fault occurs when management services on a fabric interconnect are unresponsive. This impacts the full HA functionality of the fabric interconnect cluster.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the initial setup configuration is correct on both fabric interconnects.
2. Verify that the L1 and L2 links are properly connected between the fabric interconnects.
3. Reboot the fabric interconnects.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: management-services-unresponsive
mibFaultCode: F0452
mibFaultName: fltMgmtEntityManagementServicesUnresponsive
moClass: mgmt:Entity
Type: management
autoCleared: true
Affected MO: sys/mgmt-entity-[id]
```

fltEquipmentChassisInoperable

Fault Code: F0456

Message: Chassis [id] operability: [operability]

Explanation:

This fault typically occurs for one of the following reasons:

- The fabric interconnect cannot communicate with a chassis. For a cluster configuration, this fault means that neither fabric interconnect can communicate with the chassis.
- The chassis has an invalid FRU.

Recommended Action:

If you see this fault, take the following actions:

1. In Cisco UCS Manager, reacknowledge the chassis that raised the fault.
2. Physically unplug and replug the power cord into the chassis.
3. Verify that the I/O modules are functional.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: equipment-inoperable
mibFaultCode: F0456
mibFaultName: fltEquipmentChassisInoperable
moClass: equipment:Chassis
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]
```

fltEtherServerIntFIoHardware-failure

Fault Code: F0458

Message: IOM [transport] interface [portId] on chassis [id] oper state: [operState], reason: [stateQual]Fabric Interconnect [transport] interface [portId] on fabric interconnect [id] oper state: [operState], reason: [stateQual]IOM [transport] interface [portId] on fex [id] oper state: [operState], reason: [stateQual]

Explanation:

This fault is raised on the IOM/FEX backplane ports when Cisco UCS Manager detects a hardware failure.

Recommended Action:

If you see this fault, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: interface-failed
mibFaultCode: F0458
mibFaultName: fltEtherServerIntFIoHardwareFailure
moClass: ether:ServerIntFIo
Type: network
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/rack-unit-[id]/diag/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]
```

fltDcxVcMgmt-vif-down

Fault Code: F0459

Message: IOM [chassisId] / [slotId] ([switchId]) management VIF [id] down, reason [stateQual]

Explanation:

This fault occurs when the transport VIF for an I/O module is down. Cisco UCS Manager raises this fault when a fabric interconnect reports the connectivity state on virtual interface as one of the following:

- Down
- Errored
- Unavailable

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the chassis discovery has gone through successfully. Check the states on all communicating ports from end to end.
2. If connectivity seems correct, decommission and recommission the chassis.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: cmc-vif-down
mibFaultCode: F0459
mibFaultName: fltDcxVcMgmtVifDown
moClass: dcx:Vc
Type: network
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]
```

Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/fabric-[switchId]/path-[id]/vc-[id]

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/slot-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/fex-[id]/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/fex-[id]/fabric-[switchId]/vc-[id]
Affected MO: sys/fex-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/fex-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:

sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/rack-unit-[id]/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/fabric-[switchId]/vc-[id]
Affected MO: sys/rack-unit-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/switch-[id]/ethlanflowmon/vc-[id]
Affected MO: sys/switch-[id]/lanmon-eth/mon-[name]/vc-[id]
Affected MO: sys/switch-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/switch-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/switch-[id]/sanmon-fc/mon-[name]/vc-[id]

fltSysdebugMEpLogMEpLogLog

Fault Code: F0460

Message: Log capacity on [side] IOM [chassisId]/[id] is [capacity]Log capacity on Management Controller on server [chassisId]/[slotId] is [capacity]Log capacity on Management Controller on server [id] is [capacity]Log capacity on Management Controller on server [chassisId]/[slotId]/[serverInstanceId] is [capacity]

Explanation:

This fault typically occurs because Cisco UCS Manager has detected that the system event log (SEL) on the server is approaching full capacity. The available capacity in the log is low. This is an info-level fault and can be ignored if you do not want to clear the SEL at this time.

Recommended Action:

If you see this fault, you can clear the SEL in Cisco UCS Manager if desired.

Fault Details

Severity: info
Cause: log-capacity
mibFaultCode: F0460
mibFaultName: fltSysdebugMEpLogMEpLogLog
moClass: sysdebug:MEpLog
Type: operational
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]

Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/log-[type]-[id]
Affected MO: sys/fex-[id]/mgmt/log-[type]-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/log-[type]-[id]
Affected MO: sys/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/log-[type]-[id]

Affected MO: sys/rack-unit-[id]/mgmt/log-[type]-[id]
Affected MO: sys/switch-[id]/mgmt/log-[type]-[id]

fltSysdebugMEpLogMEpLogVeryLow

Fault Code: F0461

Message: Log capacity on [side] IOM [chassisId]/[id] is [capacity]Log capacity on Management Controller on server [chassisId]/[slotId] is [capacity]Log capacity on Management Controller on server [id] is [capacity]Log capacity on Management Controller on server [chassisId]/[slotId]/[serverInstanceId] is [capacity]

Explanation:

This fault typically occurs because Cisco UCS Manager has detected that the system event log (SEL) on the server is almost full. The available capacity in the log is very low. This is an info-level fault and can be ignored if you do not want to clear the SEL at this time.

Recommended Action:

If you see this fault, you can clear the SEL in Cisco UCS Manager if desired.

Fault Details

Severity: info
Cause: log-capacity
mibFaultCode: F0461
mibFaultName: fltSysdebugMEpLogMEpLogVeryLow
moClass: sysdebug:MEpLog
Type: operational
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/log-[type]-[id]

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/log-[type]-[id]
Affected MO: sys/fex-[id]/mgmt/log-[type]-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/log-[type]-[id]
Affected MO: sys/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/mgmt/log-[type]-[id]
Affected MO: sys/switch-[id]/mgmt/log-[type]-[id]

fltSysdebugMEpLogMEpLogFull

Fault Code: F0462

Message: Log capacity on [side] IOM [chassisId]/[id] is [capacity]Log capacity on Management Controller on server [chassisId]/[slotId] is [capacity]Log capacity on Management Controller on server [id] is [capacity]Log capacity on Management Controller on server [chassisId]/[slotId]/[serverInstanceId] is [capacity]

Explanation:

This fault typically occurs because Cisco UCS Manager could not transfer the SEL file to the location specified in the SEL policy. This is an info-level fault and can be ignored if you do not want to clear the SEL at this time.

Recommended Action:

If you see this fault, take the following actions:

1. Verify the configuration of the SEL policy to ensure that the location, user, and password provided are correct.

2. If you do want to transfer and clear the SEL and the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

Severity: info
Cause: log-capacity
mibFaultCode: F0462
mibFaultName: fltSysdebugMEpLogMEpLogFull
moClass: sysdebug:MEpLog
Type: operational
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/log-[type]-[id]

```
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/log-[type]-[id]
Affected MO: sys/fex-[id]/mgmt/log-[type]-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/log-[type]-[id]
Affected MO: sys/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/mgmt/log-[type]-[id]
Affected MO: sys/switch-[id]/mgmt/log-[type]-[id]
```

fltComputePoolEmpty

Fault Code: F0463

Message: server pool [name] is empty

Explanation:

This fault typically occurs when the selected server pool does not contain any servers.

Recommended Action:

If you see this fault, take the following actions:

1. Verify the qualifier settings in the server pool policy qualifications. If the policy was modified after the server was discovered, reacknowledge the server.
2. Manually associate the service profile with a server.
3. If the server pool is not used, ignore the fault.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: empty-pool
mibFaultCode: F0463
mibFaultName: fltComputePoolEmpty
moClass: compute:Pool
Type: server
autoCleared: true
Affected MO: org-[name]/compute-pool-[name]
```

fltUuidpoolPoolEmpty

Fault Code: F0464

Message: UUID suffix pool [name] is empty

Explanation:

This fault typically occurs when a UUID suffix pool does not contain any UUID suffixes.

Recommended Action:

If you see this fault, take the following actions:

1. If the pool is in use, add a block of UUID suffixes to the pool.
2. If the pool is not in use, ignore the fault.

Fault Details

```
Severity: minor
Cause: empty-pool
mibFaultCode: F0464
mibFaultName: fltUuidpoolPoolEmpty
moClass: uuidpool:Pool
Type: server
autoCleared: true
Affected MO: org-[name]/uuid-pool-[name]
```

fltIppoolPoolEmpty

Fault Code: F0465

Message: IP pool [name] is empty

Explanation:

This fault typically occurs when an IP address pool does not contain any IP addresses.

Recommended Action:

If you see this fault, take the following actions:

1. If the pool is in use, add a block of IP addresses to the pool.
2. If the pool is not in use, ignore the fault.

Fault Details

```
Severity: minor
Cause: empty-pool
mibFaultCode: F0465
mibFaultName: fltIppoolPoolEmpty
moClass: ippool:Pool
Type: server
autoCleared: true
Affected MO: fabric/lan/network-sets/ip-pool-[name]
Affected MO: org-[name]/ip-pool-[name]
```

fltMacpoolPoolEmpty

Fault Code: F0466

Message: MAC pool [name] is empty

Explanation:

This fault typically occurs when a MAC address pool does not contain any MAC addresses.

Recommended Action:

If you see this fault, take the following actions:

1. If the pool is in use, add a block of MAC addresses to the pool.
2. If the pool is not in use, ignore the fault.

Fault Details

```
Severity: minor
Cause: empty-pool
mibFaultCode: F0466
mibFaultName: fltMacpoolPoolEmpty
moClass: macpool:Pool
Type: server
autoCleared: true
Affected MO: org-[name]/mac-pool-[name]
```

fltFirmwareUpdatableImageUnusable

Fault Code: F0470

Message: backup image is unusable. reason: [operStateQual]

Explanation:

This fault typically occurs when the backup firmware image on an endpoint is unusable.

Recommended Action:

If you see this fault, take the following actions:

1. Review the fault and the error message on the FSM tab for the endpoint to determine why the firmware image is unusable.
2. If the firmware image is bad or corrupted, download another copy from the Cisco website and update the backup version on the endpoint with the new image.
3. If the image is present and the fault persists, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: image-unusable
mibFaultCode: F0470
mibFaultName: fltFirmwareUpdatableImageUnusable
moClass: firmware:Updatable
Type: management
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/blade-[slotId]/bios/fw-updatable
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/fw-updatable
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/onboard-device-[deviceType]-[id]/fw-updatable
```

Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/fw-updatable
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fw-updatable
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/fw-updatable
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/onboard-device-[deviceType]-[id]/fw-updatable
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/bios/fw-updatable
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/boardController/mgmt/fw-updatable
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fw-updatable
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/bios/fw-updatable
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/fw-updatable
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/onboard-device-[deviceType]-[id]/fw-updatable
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/fw-updatable
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fw-updatable
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fw-updatable
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/fw-updatable
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/onboard-device-[deviceType]-[id]/fw-updatable
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/fw-updatable
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/fw-updatable
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/bios/fw-updatable
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/fw-updatable
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/psu-[id]/fw-updatable
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/sas-expander-[id]/onboard-device-[deviceType]-[id]/fw-updatable
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/fw-updatable
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/onboard-device-[deviceType]-[id]/fw-updatable
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/fw-updatable
Affected MO: sys/fex-[id]/mgmt/fw-updatable

Affected MO: sys/fex-[id]/psu-[id]/fw-updatable
Affected MO: sys/fex-[id]/slot-[id]/mgmt/fw-updatable
Affected MO: sys/mgmt/fw-updatable
Affected MO: sys/rack-enclosure-[id]/psu-[id]/fw-updatable
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fw-updatable
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/fw-updatable
Affected MO: sys/rack-unit-[id]/bios/fw-updatable
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/fw-updatable
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/onboard-device-[deviceType]-[id]/fw-updatable
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/fw-updatable
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fw-updatable
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fw-updatable
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/fw-updatable
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/onboard-device-[deviceType]-[id]/fw-updatable
Affected MO: sys/rack-unit-[id]/boardController/mgmt/fw-updatable
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/fw-updatable
Affected MO: sys/rack-unit-[id]/ext-board-[id]/bios/fw-updatable
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fw-updatable
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/fw-updatable
Affected MO: sys/rack-unit-[id]/mgmt/fw-updatable
Affected MO: sys/rack-unit-[id]/psu-[id]/fw-updatable
Affected MO: sys/switch-[id]/mgmt/fw-updatable
Affected MO: sys/switch-[id]/psu-[id]/fw-updatable

fltFirmwareBootUnitCantBoot

Fault Code: F0471

Message: unable to boot the startup image. End point booted with backup image

Explanation:

This fault typically occurs when the startup firmware image on an endpoint is corrupted or invalid, and the endpoint cannot boot from that image.

Recommended Action:

If you see this fault, take the following actions:

1. Review the fault and the error message on the FSM tab for the endpoint to determine why the firmware image is unusable. The error message usually includes an explanation for why the endpoint could not boot from the startup image, such as Bad-Image or Checksum Failed.
2. If the firmware image is bad or corrupted, download another copy from the Cisco website and update the startup version on the endpoint with the new image.
3. If the fault persists, create a **show tech-support** file and contact Cisco TAC.

Fault Details

Severity: major
Cause: image-cannot-boot
mibFaultCode: F0471
mibFaultName: fltFirmwareBootUnitCantBoot
moClass: firmware:BootUnit
Type: management
autoCleared: true
Affected MO: capabilities/ep/mgmt-ext/fw-boot-def/bootunit-[type]

Affected MO: capabilities/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/bios/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/graphics-card-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/pmemory-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/nvme-switch-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pci-switch-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/bios/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/bios/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/graphics-card-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/pmemory-[id]/fw-boot-def/bootunit-[type]
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/nvme-switch-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/pci-switch-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/bios/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/psu-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/sas-expander-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/sas-expander-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]

Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/fex-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/fex-[id]/psu-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-enclosure-[id]/psu-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/bios/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/graphics-card-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/pmemory-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/nvme-switch-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/pci-switch-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/bios/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/psu-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/switch-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/switch-[id]/psu-[id]/fw-boot-def/bootunit-[type]

fltFcpoolInitiatorsEmpty

Fault Code: F0476

Message: FC pool [purpose] [name] is empty

Explanation:

This fault typically occurs when a WWN pool does not contain any WWNs.

Recommended Action:

If you see this fault, take the following actions:

1. If the pool is in use, add a block of WWNs to the pool.
2. If the pool is not in use, ignore the fault.

Fault Details

```
Severity: minor
Cause: empty-pool
mibFaultCode: F0476
mibFaultName: fltFcpoolInitiatorsEmpty
moClass: fcpool:Initiators
Type: server
autoCleared: true
Affected MO: org-[name]/wwn-pool-[name]
```

fltEquipmentIOCardInaccessible

Fault Code: F0478

Message: [side] IOM [chassisId]/[id] ([switchId]) is inaccessible

Explanation:

This fault typically occurs because an I/O module has lost its connection to the fabric interconnects. In a cluster configuration, the chassis fails over to the other I/O module. For a standalone configuration, the chassis associated with the I/O module loses network connectivity. This is a critical fault because it can result in the loss of network connectivity and disrupt data traffic through the I/O module.

Recommended Action:

If you see this fault, take the following actions:

1. Wait a few minutes to see if the fault clears. This is typically a temporary issue, and can occur after a firmware upgrade.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: equipment-inaccessible
mibFaultCode: F0478
mibFaultName: fltEquipmentIOCardInaccessible
moClass: equipment:IOCard
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fltDcxVIfLinkState

Fault Code: F0479

Message: Virtual interface [id] link state is down

Explanation:

This fault occurs when Cisco UCS cannot send or receive data through an uplink port.

Recommended Action:

If you see this fault, take the following actions:

1. Reenable the uplink port that failed.

2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: vif-down
mibFaultCode: F0479
mibFaultName: fltDcxVIfLinkState
moClass: dcx:VIf
Type: management
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/vif-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/fcoe/vif-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vif-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fcoe/vif-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vif-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vif-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/vif-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/fcoe/vif-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vif-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fcoe/vif-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vif-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vif-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/pc-[portId]/vif-[id]
Affected MO:
```

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO: sys/chassis-[id]/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO: sys/chassis-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/slot-[id]/boardController/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO: sys/fex-[id]/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO: sys/fex-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO: sys/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/vif-[id]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/fcoe/vif-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vif-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fcoe/vif-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vif-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vif-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/pc-[portId]/vif-[id]
Affected MO:
sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]

Affected MO: sys/rack-unit-[id]/boardController/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO:
sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO: sys/rack-unit-[id]/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO: sys/rack-unit-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]
Affected MO: sys/switch-[id]/mgmt/fabric-[switchId]/pc-[portId]/vif-[id]

fltEquipmentFanModuleDegraded

Fault Code: F0480

Message: Fan module [tray]-[id] in chassis [id] operability: [operability]Fan module [tray]-[id] in server [id] operability: [operability]Fan module [tray]-[id] in fabric interconnect [id] operability: [operability]Fan module [tray]-[id] in rack-enclosure [id] operability: [operability]

Explanation:

This fault occurs when a fan module is not operational.

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the fan module.
2. Review the Cisco UCS Site Preparation Guide to ensure the fan module has adequate airflow, including front and back clearance.
3. Verify that the air flows for the fan module are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
8. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

Severity: minor
Cause: equipment-degraded
mibFaultCode: F0480
mibFaultName: fltEquipmentFanModuleDegraded
moClass: equipment:FanModule
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]

```
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]
```

fltEquipmentIOCardPost-failure

Fault Code: F0481

Message: [side] IOM [chassisId]/[id] ([switchId]) POST failure

Explanation:

This fault typically occurs when an I/O module encounters errors during the Power On Self Test (POST). The impact of this fault varies according to the errors that were encountered during POST.

Recommended Action:

If you see this fault, take the following actions:

1. Check the POST results for the I/O module. In Cisco UCS Manager GUI, you can access the POST results from the General tab for the I/O module. In Cisco UCS Manager CLI, you can access the POST results through the show post command under the scope for the I/O module.
2. If the POST results indicate FRU error, check if UCS manager has raised fault for the FRU and follow recommended action for the fault.
3. Otherwise, reboot the I/O module.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-problem
mibFaultCode: F0481
mibFaultName: fltEquipmentIOCardPostFailure
moClass: equipment:IOCard
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fltEquipmentFanPerfThresholdLowerNonRecoverable

Fault Code: F0484

Message: Fan [id] in Fan Module [tray]-[id] under chassis [id] speed: [perf]Fan [id] in fabric interconnect [id] speed: [perf]Fan [id] in Fan Module [tray]-[id] under server [id] speed: [perf]Fan [id] in Fan Module [tray]-[id] under rack-enclosure [id] speed: [perf]

Explanation:

This fault occurs when the fan speed reading from the fan controller is far below the desired fan speed, and the fan has likely failed.

Recommended Action:

If you see this fault, create a detailed **show tech-support** file for the chassis and replace the fan module. If necessary, contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: performance-problem
mibFaultCode: F0484
mibFaultName: fltEquipmentFanPerfThresholdLowerNonRecoverable
moClass: equipment:Fan
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/fex-[id]/fan-[id]
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]
```

fltMemoryUnitIdentity-unestablishable

Fault Code: F0502

Message: DIMM [location] on server [chassisId]/[slotId] has an invalid FRUDIMM [location] on server [id] has an invalid FRUDIMM [location] on server [chassisId]/[slotId]/[serverInstanceId] has an invalid FRU

Explanation:

This fault typically occurs because Cisco UCS Manager has detected unsupported DIMM in the server. For example, the model, vendor, or revision is not recognized.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the capability catalog in Cisco UCS Manager is up to date. If necessary, update the catalog.
2. If the above action did not resolve the issue, you may have unsupported DIMMs or DIMM configuration in the server. Create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: identity-unestablishable
mibFaultCode: F0502
mibFaultName: fltMemoryUnitIdentityUnestablishable
moClass: memory:Unit
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/mem-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]
```

fltComputePhysicalPost-failure

Fault Code: F0517

Message: Server [id] POST or diagnostic failureServer [chassisId]/[slotId] POST or diagnostic failureServer [chassisId]/[slotId]/[serverInstanceId] POST or diagnostic failure

Explanation:

This fault typically occurs when the server has encountered a diagnostic failure or an error during POST.

Recommended Action:

If you see this fault, take the following actions:

1. Check the POST results for the server. In Cisco UCS Manager GUI, you can access the POST results from the General tab for the server. In Cisco UCS Manager CLI, you can access the POST results through the show post command under the scope for the server.
2. Reboot the server.
3. If the above actions did not resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: major
Cause: equipment-problem
mibFaultCode: F0517
mibFaultName: fltComputePhysicalPostFailure
moClass: compute:Physical
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fltEquipmentPsuOffline

Fault Code: F0528

Message: Power supply [id] in chassis [id] power: [power]Power supply [id] in fabric interconnect [id] power: [power]Power supply [id] in fex [id] power: [power]Power supply [id] in server [id] power: [power]Power supply [id] in rack-enclosure [id] power: [power]

Explanation:

This fault typically occurs when Cisco UCS Manager detects that a power supply unit in a chassis, fabric interconnect, or FEX is offline.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the power cord is properly connected to the PSU and the power source.
2. Verify that the power source is 220 volts.
3. Verify that the PSU is properly installed in the chassis or fabric interconnect.
4. Remove the PSU and reinstall it.
5. Replace the PSU.
6. If the above actions did not resolve the issue, note down the type of PSU, execute the **show tech-support** command, and contact Cisco Technical Support.

Fault Details

```
Severity: warning
Cause: equipment-offline
mibFaultCode: F0528
mibFaultName: fltEquipmentPsuOffline
moClass: equipment:Psu
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-enclosure-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fltStorageRaidBatteryInoperable

Fault Code: F0531

Message: RAID Battery on server [chassisId]/[slotId] operability: [operability]. Reason: [operQualifierReason]RAID Battery on server [id] operability: [operability]. Reason: [operQualifierReason]RAID Battery on chassis [id] operability: [operability]. Reason: [operQualifierReason]

Explanation:

This fault occurs when the RAID backup unit is not operational.

Recommended Action:

If you see this fault, take the following actions:

1. If the backup unit is a battery, replace the battery.
2. If the backup unit is a supercapacitor type and the supercapacitor is missing, verify its presence and supply if missing.
3. If the backup unit is a supercapacitor type and the TFM is missing, verify its presence and supply if missing.
4. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-inoperable
mibFaultCode: F0531
mibFaultName: fltStorageRaidBatteryInoperable
moClass: storage:RaidBattery
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/raid-battery
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/raid-battery
Affected MO: sys/chassis-[id]/storage-[type]-[id]/raid-battery
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/raid-battery
```

fltSysdebugMEpLogTransferError

Fault Code: F0532

Message: Server [chassisId]/[slotId] [type] transfer failed: [operState]Server [id] [type] transfer failed: [operState]

Explanation:

This fault occurs when the transfer of a managed endpoint log file, such as the SEL, fails.

Recommended Action:

If you see this fault, take the following actions:

1. If the fault is related to the SEL, verify the connectivity to the CIMC on the server.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: info
Cause: file-transfer-failed
mibFaultCode: F0532
mibFaultName: fltSysdebugMEpLogTransferError
moClass: sysdebug:MEpLog
Type: operational
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/log-[type]-[id]
Affected MO:
```

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/log-[type]-[id]
Affected MO: sys/fex-[id]/mgmt/log-[type]-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/log-[type]-[id]
Affected MO: sys/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/mgmt/log-[type]-[id]
Affected MO: sys/switch-[id]/mgmt/log-[type]-[id]

fltComputeRtcBatteryInoperable

Fault Code: F0533

Message: RTC Battery on server [chassisId]/[slotId] operability: [operability]

Explanation:

This fault is raised when the CMOS battery voltage is below the normal operating range. This impacts the system clock.

Recommended Action:

If you see this fault, replace the CMOS battery.

Fault Details

Severity: major
Cause: equipment-inoperable
mibFaultCode: F0533
mibFaultName: fltComputeRtcBatteryInoperable
moClass: compute:RtcBattery
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/rtc-battery
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/rtc-battery
Affected MO: sys/rack-unit-[id]/board/rtc-battery

fltMemoryBufferUnitThermalThresholdNonCritical

Fault Code: F0535

Message: Buffer Unit [id] on server [chassisId]/[slotId] temperature: [thermal]Buffer Unit [id] on server [id] temperature: [thermal]Buffer Unit [id] on server [chassisId]/[slotId]/[serverInstanceId] temperature: [thermal]

Explanation:

This fault occurs when the temperature of a memory buffer unit on a blade or rack server exceeds a non-critical threshold value, but is still below the critical threshold. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).
- If sensors on a CPU reach 179.6F (82C), the system will take that CPU offline.

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the server.
2. Review the Cisco UCS Site Preparation Guide to ensure the servers have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis or rack server are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
8. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: info
Cause: thermal-problem
mibFaultCode: F0535
mibFaultName: fltMemoryBufferUnitThermalThresholdNonCritical
moClass: memory:BufferUnit
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sensor-unit-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sensor-unit-[id]
Affected MO: sys/rack-unit-[id]/board/sensor-unit-[id]
```

fltMemoryBufferUnitThermalThresholdCritical

Fault Code: F0536

Message: Buffer Unit [id] on server [chassisId]/[slotId] temperature: [thermal]Buffer Unit [id] on server [id] temperature: [thermal]Buffer Unit [id] on server [chassisId]/[slotId]/[serverInstanceId] temperature: [thermal]

Explanation:

This fault occurs when the temperature of a memory buffer unit on a blade or rack server exceeds a critical threshold value. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).
- If sensors on a CPU reach 179.6F (82C), the system will take that CPU offline.

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the server.
2. Review the Cisco UCS Site Preparation Guide to ensure the servers have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis or rack server are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
8. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: thermal-problem
mibFaultCode: F0536
mibFaultName: fltMemoryBufferUnitThermalThresholdCritical
moClass: memory:BufferUnit
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sensor-unit-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sensor-unit-[id]
Affected MO: sys/rack-unit-[id]/board/sensor-unit-[id]
```

fltMemoryBufferUnitThermalThresholdNonRecoverable

Fault Code: F0537

Message: Buffer Unit [id] on server [chassisId]/[slotId] temperature: [thermal]Buffer Unit [id] on server [id] temperature: [thermal]Buffer Unit [id] on server [chassisId]/[slotId]/[serverInstanceId] temperature: [thermal]

Explanation:

This fault occurs when the temperature of a memory buffer unit on a blade or rack server has been out of the operating range, and the issue is not recoverable. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).
- If sensors on a CPU reach 179.6F (82C), the system will take that CPU offline.

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the server.
2. Review the Cisco UCS Site Preparation Guide to ensure the servers have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis or rack server are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
8. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: thermal-problem
mibFaultCode: F0537
mibFaultName: fltMemoryBufferUnitThermalThresholdNonRecoverable
moClass: memory:BufferUnit
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sensor-unit-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sensor-unit-[id]
Affected MO: sys/rack-unit-[id]/board/sensor-unit-[id]
```

fltComputeIOHubThermalNonCritical

Fault Code: F0538

Message: IO Hub on server [chassisId]/[slotId] temperature: [thermal]

Explanation:

This fault is raised when the IO controller temperature is outside the upper or lower non-critical threshold.

Recommended Action:

If you see this fault, monitor other environmental events related to this server and ensure the temperature ranges are within recommended ranges.

Fault Details

```
Severity: minor
Cause: thermal-problem
mibFaultCode: F0538
mibFaultName: fltComputeIOHubThermalNonCritical
moClass: compute:IOHub
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/iohub
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/iohub
Affected MO: sys/rack-unit-[id]/board/iohub
```

fltComputeIOHubThermalThresholdCritical

Fault Code: F0539

Message: IO Hub on server [chassisId]/[slotId] temperature: [thermal]

Explanation:

This fault is raised when the IO controller temperature is outside the upper or lower critical threshold.

Recommended Action:

If you see this fault, take the following actions:

1. Monitor other environmental events related to the server and ensure the temperature ranges are within recommended ranges.
2. Consider turning off the server for a while if possible.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: thermal-problem
mibFaultCode: F0539
mibFaultName: fltComputeIOHubThermalThresholdCritical
moClass: compute:IOHub
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/iohub
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/iohub
Affected MO: sys/rack-unit-[id]/board/iohub
```

fltComputeIOHubThermalThresholdNonRecoverable

Fault Code: F0540

Message: IO Hub on server [chassisId]/[slotId] temperature: [thermal]

Explanation:

This fault is raised when the IO controller temperature is outside the recoverable range of operation.

Recommended Action:

If you see this fault, take the following actions:

1. Shutdown the server immediately.
2. Create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: thermal-problem
mibFaultCode: F0540
mibFaultName: fltComputeIOHubThermalThresholdNonRecoverable
moClass: compute:IOHub
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/iohub
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/iohub
Affected MO: sys/rack-unit-[id]/board/iohub
```

fltEquipmentChassisIdentity-unestablishable

Fault Code: F0543

Message: Chassis [id] has an invalid FRU

Explanation:

This fault typically occurs because Cisco UCS Manager has detected an unsupported chassis. For example, the model, vendor, or revision is not recognized.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the capability catalog in Cisco UCS Manager is up to date. If necessary, update the catalog.
2. If the above action did not resolve the issue, execute the **show tech-support** command and contact Cisco technical support.

Fault Details

```
Severity: major
Cause: identity-unestablishable
mibFaultCode: F0543
mibFaultName: fltEquipmentChassisIdentityUnestablishable
moClass: equipment:Chassis
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]
```

fltSwVlanPortNsResourceStatus

Fault Code: F0549

Message: Vlan-Port Resource exceeded

Explanation:

This fault occurs when the total number of configured VLANs in the Cisco UCS instance has exceeded the allowed maximum number of configured VLANs on the fabric interconnect.

Recommended Action: If you see this fault, take the following actions:

1. In the Cisco UCS Manager CLI or Cisco UCS Manager GUI, check the port VLAN count to determine by how many VLANs the system is over the maximum.
2. Reduce the VLAN port count in one of the following ways:
   - Delete VLANs configured on the LAN cloud.
   - Delete VLANs configured on vNICs.
   - Unconfigure one or more vNICs.
   - Unconfigure one or more uplink Ethernet ports on the fabric interconnect.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: limit-reached
mibFaultCode: F0549
mibFaultName: fltSwVlanPortNsResourceStatus
moClass: sw:VlanPortNs
Type: management
autoCleared: true
Affected MO: sys/switch-[id]/vlan-port-ns
```

fltFabricLanPinGroupEmpty

Fault Code: F0621

Message: LAN Pin Group [name] is empty

Explanation:

This fault typically occurs when a LAN pin group does not contain any targets.

Recommended Action:

If you see this fault, add a target to the LAN pin group.

Fault Details

```
Severity: minor
Cause: empty-pin-group
mibFaultCode: F0621
mibFaultName: fltFabricLanPinGroupEmpty
moClass: fabric:LanPinGroup
Type: server
```

```
autoCleared: true
Affected MO: fabric/lan/lan-pin-group-[name]
```

fltFabricSanPinGroupEmpty

Fault Code: F0622

Message: SAN Pin Group [name] is empty

Explanation:

This fault typically occurs when a SAN pin group does not contain any targets.

Recommended Action:

If you see this fault, add a target to the SAN pin group.

Fault Details

```
Severity: minor
Cause: empty-pin-group
mibFaultCode: F0622
mibFaultName: fltFabricSanPinGroupEmpty
moClass: fabric:SanPinGroup
Type: server
autoCleared: true
Affected MO: fabric/san/san-pin-group-[name]
```

fltAdaptorExtEthIfMisConnect

Fault Code: F0625

Message: Adapter [id] eth interface [id] in server [id] mis-connected

Explanation:

The link for a network-facing adapter interface is misconnected. Cisco UCS Manager raises this fault when any of the following scenarios occur:

- Cisco UCS Manager detects a new connectivity between a previously configured switch port or FEX port and the adapter's external interface.
- Cisco UCS Manager detects a misconnected link between a fabric interconnect or FEX and its non-peer adapter's interface.

Recommended Action:

If you see this fault, take the following actions:

1. Check whether the adapter link is connected to a port that belongs to its peer fabric interconnect or FEX.
2. If that connectivity seems correct, reacknowledge the server.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: link-misconnected
mibFaultCode: F0625
mibFaultName: fltAdaptorExtEthIfMisConnect
```

```
moClass: adaptor:ExtEthIf
Type: network
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]
```

fltAdaptorHostEthIfMisConnect

Fault Code: F0626

Message: Adapter [id] eth interface [id] in server [id] mis-connected

Explanation:

The link for a network-facing host interface is misconnected. Cisco UCS Manager raises this fault when any of the following scenarios occur:

- Cisco UCS Manager detects a new connectivity between a previously configured switch port and the host Ethernet interface.
- Cisco UCS Manager detects a misconnected link between the host interface and its non-peer fabric interconnect.

Recommended Action:

If you see this fault, take the following actions:

1. Check whether the host Ethernet interface is connected to a port belonging to its peer fabric interconnect.
2. If connectivity seems correct, reacknowledge the server.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: link-misconnected
mibFaultCode: F0626
mibFaultName: fltAdaptorHostEthIfMisConnect
moClass: adaptor:HostEthIf
Type: network
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]
```

fltPowerBudgetPowerBudgetCmcProblem

Fault Code: F0635

Message: Power cap application failed for chassis [id]

Explanation:

This fault typically occurs when the server CIMC has failed to enforce the configured power cap.

Recommended Action:

If you see this fault, take the following actions:

1. Check the power consumption of the chassis. If the chassis is consuming significantly more power than configured in the power cap, consider reducing the group cap so that the power consumption of other chassis consumption can be reduced to make up for the increase.
2. If the above action did not resolve the issue, create a **show tech-support** file for Cisco UCS Manager and the chassis and then contact Cisco TAC.

Fault Details

```
Severity: major
Cause: power-cap-fail
mibFaultCode: F0635
mibFaultName: fltPowerBudgetPowerBudgetCmcProblem
moClass: power:Budget
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/budget
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/budget
Affected MO: sys/chassis-[id]/budget
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/budget
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/budget
Affected MO: sys/fex-[id]/budget
Affected MO: sys/rack-unit-[id]/budget
Affected MO: sys/rack-unit-[id]/ext-board-[id]/budget
Affected MO: sys/switch-[id]/budget
```

fltPowerBudgetPowerBudgetBmcProblem

Fault Code: F0637

Message: Power cap application failed for server [chassisId]/[slotId]Power cap application failed for server [id]

Explanation:

This fault typically occurs when the server CIMC or BIOS has failed to enforce the configured power cap.

Recommended Action:

If you see this fault, take the following actions:

1. Check the power consumption of the blade server. If the server is consuming significantly more power than configured in the power cap, switch to a manual per blade cap configuration. If the power consumption is still too high, consider reducing the group cap so that the power consumption of other chassis consumption can be reduced to make up for the increase.
2. If the power consumption is still too high, the CIMC or BIOS software is likely faulty.
3. Create a **show tech-support** file for Cisco UCS Manager and the chassis and then contact Cisco TAC.

Fault Details

```
Severity: major
Cause: power-cap-fail
mibFaultCode: F0637
mibFaultName: fltPowerBudgetPowerBudgetBmcProblem
```

```
moClass: power:Budget
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/budget
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/budget
Affected MO: sys/chassis-[id]/budget
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/budget
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/budget
Affected MO: sys/fex-[id]/budget
Affected MO: sys/rack-unit-[id]/budget
Affected MO: sys/rack-unit-[id]/ext-board-[id]/budget
Affected MO: sys/switch-[id]/budget
```

fltPowerBudgetPowerBudgetDiscFail

Fault Code: F0640

Message: Insufficient power available to discover server [chassisId]/[slotId]Insufficient power available to discover server [id]

Explanation:

This fault typically occurs when discovery fails due to unavailable power in the group.

Recommended Action:

If you see this fault, take the following actions:

1. Consider increasing the group cap.
2. Reduce the number of blade servers or chassis in the Cisco UCS instance.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: power-cap-fail
mibFaultCode: F0640
mibFaultName: fltPowerBudgetPowerBudgetDiscFail
moClass: power:Budget
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/budget
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/budget
Affected MO: sys/chassis-[id]/budget
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/budget
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/budget
Affected MO: sys/fex-[id]/budget
Affected MO: sys/rack-unit-[id]/budget
Affected MO: sys/rack-unit-[id]/ext-board-[id]/budget
Affected MO: sys/switch-[id]/budget
```

fltPowerGroupPowerGroupInsufficientBudget

Fault Code: F0642

Message: insufficient budget for power group [name]

Explanation:

This fault typically occurs when the group cap is insufficient to meet the minimum hardware requirements.

Recommended Action:

If you see this fault, take the following actions:

1. Consider increasing the group cap.
2. Reduce the number of blade servers or chassis in the Cisco UCS instance.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: power-cap-fail
mibFaultCode: F0642
mibFaultName: fltPowerGroupPowerGroupInsufficientBudget
moClass: power:Group
Type: environmental
autoCleared: true
Affected MO: sys/power-ep/group-[name]
```

fltPowerGroupPowerGroupBudgetIncorrect

Fault Code: F0643

Message: admin committed insufficient for power group [name], using previous value [operCommitted]

Explanation:

This fault typically occurs when the group cap is insufficient to meet the minimum hardware requirements. Under these circumstances, Cisco UCS Manager uses the previously entered group cap for provisioning.

Recommended Action:

If you see this fault, take the following actions:

1. Consider increasing the group cap.
2. Reduce the number of blade servers or chassis in the Cisco UCS instance.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: power-cap-fail
mibFaultCode: F0643
mibFaultName: fltPowerGroupPowerGroupBudgetIncorrect
moClass: power:Group
Type: environmental
autoCleared: true
Affected MO: sys/power-ep/group-[name]
```

fltLicenseInstanceGracePeriodWarning1

Fault Code: F0670

Message: One or more ports with license type [feature] on fabric-interconnect [scope] have started using license grace period.

Explanation:

At least one port on the fabric interconnect is running in the grace period. This fault typically occurs if one or more ports on the fixed module are enabled after all default licenses have been assigned to a port.

Recommended Action:

If you see this fault, take the following actions:

1. Check the number of licenses installed and being used on each fabric interconnect. In the Cisco UCS Manager GUI, you can access the licensing information from the Admin tab for the fabric interconnect. In the Cisco UCS Manager CLI, you can access the licensing information by entering the **show usage detail** command under the license scope.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: license-graceperiod-entered
mibFaultCode: F0670
mibFaultName: fltLicenseInstanceGracePeriodWarning1
moClass: license:Instance
Type: management
autoCleared: true
Affected MO: sys/license/feature-[name]-[vendor]-[version]/inst-[scope]
```

fltLicenseInstanceGracePeriodWarning2

Fault Code: F0671

Message: One or more ports with license type [feature] on fabric-interconnect [scope] are running in the grace period for more than 10 days

Explanation:

At least one port on the fabric interconnect has been running in the grace period for more than 10 days. This fault typically occurs if one or more ports on the fixed module are enabled after all default licenses have been assigned to ports and the unlicensed ports have been running for more than 10 days.

Recommended Action:

If you see this fault, take the following actions:

1. Check the number of licenses installed and consumed on each fabric interconnect. In the Cisco UCS Manager GUI, you can access the licensing information from the Admin tab for the fabric interconnect. In the Cisco UCS Manager CLI, you can access the licensing information by entering the **show usage detail** command under the license scope.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: license-graceperiod-10days
mibFaultCode: F0671
```

```
mibFaultName: fltLicenseInstanceGracePeriodWarning2
moClass: license:Instance
Type: management
autoCleared: true
Affected MO: sys/license/feature-[name]-[vendor]-[version]/inst-[scope]
```

fltLicenseInstanceGracePeriodWarning3

Fault Code: F0672

Message: One or more ports with license type [feature] on fabric-interconnect [scope] are running in the grace period for more than 30 days

Explanation:

At least one port on the fabric interconnect has been running in the grace period for more than 30 days. This fault typically occurs if one or more ports on the fixed module are enabled after all default licenses have been assigned to ports and the unlicensed ports have been running for more than 30 days.

Recommended Action:

If you see this fault, take the following actions:

1. Check the number of licenses installed and consumed on each fabric interconnect. In the Cisco UCS Manager GUI, you can access the licensing information from the Admin tab for the fabric interconnect. In the Cisco UCS Manager CLI, you can access the licensing information by entering the **show usage detail** command under the license scope.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: license-graceperiod-30days
mibFaultCode: F0672
mibFaultName: fltLicenseInstanceGracePeriodWarning3
moClass: license:Instance
Type: management
autoCleared: true
Affected MO: sys/license/feature-[name]-[vendor]-[version]/inst-[scope]
```

fltLicenseInstanceGracePeriodWarning4

Fault Code: F0673

Message: One or more ports with license type [feature] on fabric-interconnect [scope] are running in the grace period for more than 60 days

Explanation:

At least one port on the fabric interconnect has been running in the grace period for more than 60 days. This fault typically occurs if one or more ports on the fixed module are enabled after all default licenses have been assigned to ports and the unlicensed ports have been running for more than 60 days.

Recommended Action:

If you see this fault, take the following actions:

1. Check the number of licenses installed and consumed on each fabric interconnect. In the Cisco UCS Manager GUI, you can access the licensing information from the Admin tab for the fabric interconnect.

In the Cisco UCS Manager CLI, you can access the licensing information by entering the **show usage detail** command under the license scope.

2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: license-graceperiod-60days
mibFaultCode: F0673
mibFaultName: fltLicenseInstanceGracePeriodWarning4
moClass: license:Instance
Type: management
autoCleared: true
Affected MO: sys/license/feature-[name]-[vendor]-[version]/inst-[scope]
```

fltLicenseInstanceGracePeriodWarning5

Fault Code: F0674

Message: One or more ports with license type [feature] on fabric-interconnect [scope] are running in the grace period for more than 90 days

Explanation:

At least one port on the fabric interconnect has been running in the grace period for more than 90 days. This fault typically occurs if one or more ports on the fixed module are enabled after all default licenses have been assigned to ports and the unlicensed ports have been running for more than 90 days.

Recommended Action:

If you see this fault, take the following actions:

1. Check the number of licenses installed and consumed on each fabric interconnect. In the Cisco UCS Manager GUI, you can access the licensing information from the Admin tab for the fabric interconnect. In the Cisco UCS Manager CLI, you can access the licensing information by entering the **show usage detail** command under the license scope.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: license-graceperiod-90days
mibFaultCode: F0674
mibFaultName: fltLicenseInstanceGracePeriodWarning5
moClass: license:Instance
Type: management
autoCleared: true
Affected MO: sys/license/feature-[name]-[vendor]-[version]/inst-[scope]
```

fltLicenseInstanceGracePeriodWarning6

Fault Code: F0675

Message: One or more ports with license type [feature] on fabric-interconnect [scope] are running in the grace period for more than 119 days

Explanation:

At least one port on the fabric interconnect has been running in the grace period for more than 119 days. This fault typically occurs if one or more ports on the fixed module are enabled after all default licenses have been assigned to ports and the unlicensed ports have been running for more than 119 days.

Recommended Action:

If you see this fault, take the following actions:

1. Check the number of licenses installed and consumed on each fabric interconnect. In the Cisco UCS Manager GUI, you can access the licensing information from the Admin tab for the fabric interconnect. In the Cisco UCS Manager CLI, you can access the licensing information by entering the **show usage detail** command under the license scope.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: license-graceperiod-119days
mibFaultCode: F0675
mibFaultName: fltLicenseInstanceGracePeriodWarning6
moClass: license:Instance
Type: management
autoCleared: true
Affected MO: sys/license/feature-[name]-[vendor]-[version]/inst-[scope]
```

fltLicenseInstanceGracePeriodWarning7

Fault Code: F0676

Message: Grace period of one or more ports with license type [feature] on fabric-interconnect [scope] is expired. Please acquire a license for the same.

Explanation:

At least one port on the fabric interconnect has been running in the grace period for more than 120 days. This fault typically occurs if one or more ports on the fixed module are enabled after all default licenses have been assigned to ports and the unlicensed ports have been running for more than 120 days. At this stage, the system licensing state is set to expired.

Recommended Action:

If you see this fault, take the following actions:

1. Check the number of licenses installed and consumed on each fabric interconnect. In the Cisco UCS Manager GUI, you can access the licensing information from the Admin tab for the fabric interconnect. In the Cisco UCS Manager CLI, you can access the licensing information by entering the **show usage detail** command under the license scope.
2. Disable the unlicensed ports to bring the number of enabled ports down to the number of total licenses.
3. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC immediately to procure more licenses.

Fault Details

```
Severity: critical
Cause: license-graceperiod-expired
```

```
mibFaultCode: F0676
mibFaultName: fltLicenseInstanceGracePeriodWarning7
moClass: license:Instance
Type: management
autoCleared: true
Affected MO: sys/license/feature-[name]-[vendor]-[version]/inst-[scope]
```

fltLicenseFileBadLicenseFile

Fault Code: F0677

Message: license file [name] on fabric-interconnect [scope] can not be installed

Explanation:

The installation of a license file on the fabric interconnect failed. This fault typically occurs if the license file is badly formatted or its host ID does not match that of the fabric interconnect.

Recommended Action:

If you see this fault, take the following actions:

1. In the Cisco UCS Manager CLI, check the host IDs for both fabric interconnects. You can access the host ID information by entering the **show server-host-id detail** command under the license scope.
2. Match the host IDs with the contents of the license file. If the host ID matches that of one of the fabric interconnects, create a **show tech-support** file and contact Cisco TAC. If it does not match, contact Cisco TAC to obtain the correct license File.

Fault Details

```
Severity: critical
Cause: license-file-uninstallable
mibFaultCode: F0677
mibFaultName: fltLicenseFileBadLicenseFile
moClass: license:File
Type: management
autoCleared: false
Affected MO: sys/license/file-[scope]:[id]
```

fltLicenseFileFileNotDeleted

Fault Code: F0678

Message: license file [name] from fabric-interconnect [scope] could not be deleted

Explanation:

The deletion of a license file on the fabric interconnect has failed. This fault typically occurs if license framework is not able to delete a file.

Recommended Action:

If you see this fault, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: license-file-not-deleted
mibFaultCode: F0678
mibFaultName: fltLicenseFileFileNotDeleted
```

moClass: license:File
Type: management
autoCleared: false
Affected MO: sys/license/file-[scope]:[id]

fltMgmtIfMisConnect

Fault Code: F0688

Message: Management Port [id] in server [id] is mis connected

Explanation:

This fault occurs when the server and FEX connectivity changes.

Recommended Action:

If you see this fault, take the following actions:

1. Check the connectivity between the server and FEX.
2. If the connectivity was changed by mistake, restore it to its previous configuration.
3. If the connectivity change was intentional, reacknowledge the server.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

Severity: warning
Cause: link-misconnected
mibFaultCode: F0688
mibFaultName: fltMgmtIfMisConnect
moClass: mgmt:If
Type: operational
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fltLsComputeBindingAssignmentRequirementsNotMet

Fault Code: F0689

Message: Assignment of service profile [name] to server [pnDn] failed

Explanation:

The server could not be assigned to the selected service profile. This fault typically occurs as a result of one of the following issues:

- The selected server does not meet the requirements of the service profile.
- If the service profile was configured for restricted migration, the selected server does not match the currently or previously assigned server.

Recommended Action:

If you see this fault, select a different server that meets the requirements of the service profile or matches the currently or previously assigned server.

Fault Details

```
Severity: minor
Cause: assignment-failed
mibFaultCode: F0689
mibFaultName: fltLsComputeBindingAssignmentRequirementsNotMet
moClass: ls:ComputeBinding
Type: server
autoCleared: true
Affected MO: org-[name]/ls-[name]/pn
Affected MO: org-[name]/ls-[name]/pn-req
Affected MO: org-[name]/tier-[name]/ls-[name]/pn
Affected MO: org-[name]/tier-[name]/ls-[name]/pn-req
```

fltEquipmentFexPost-failure

Fault Code: F0702

Message: fex [id] POST failure

Explanation:

This fault typically occurs when a FEX encounters errors during the Power On Self Test (POST). The impact of this fault varies depending on which errors were encountered during POST.

Recommended Action:

If you see this fault, take the following actions:

1. Check the POST results for the FEX. In the Cisco UCS Manager GUI, you can access the POST results from the General tab for the FEX. In the Cisco UCS Manager CLI, you can access the POST results by entering the **show post** command under the scope for the FEX.
2. Reboot the FEX.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-problem
mibFaultCode: F0702
mibFaultName: fltEquipmentFexPostFailure
moClass: equipment:Fex
Type: equipment
autoCleared: true
Affected MO: sys/fex-[id]
```

fltEquipmentFexIdentity

Fault Code: F0703

Message: Fex [id] has a malformed FRU

Explanation:

This fault typically occurs when the FRU information for a FEX is corrupted or malformed.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the capability catalog in Cisco UCS Manager is up to date. If necessary, update the catalog.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: fru-problem
mibFaultCode: F0703
mibFaultName: fltEquipmentFexIdentity
moClass: equipment:Fex
Type: equipment
autoCleared: true
Affected MO: sys/fex-[id]
```

fltAdaptorHostEthIfMissing

Fault Code: F0708

Message: Connection to Adapter [id] eth interface [id] in server [id] missing

Explanation:

The link for a network-facing host interface is missing. Cisco UCS Manager raises this fault when it detects missing connectivity between a previously configured switch port and its previous peer host interface.

Recommended Action:

If you see this fault, take the following actions:

1. Check whether the adapter link is connected to a port that belongs to its non-peer fabric interconnect.
2. If that connectivity seems correct, reacknowledge the server.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: link-missing
mibFaultCode: F0708
mibFaultName: fltAdaptorHostEthIfMissing
moClass: adaptor:HostEthIf
Type: network
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]
```

fltPortPhysInvalid-sfp

Fault Code: F0713

Message: [transport] port [portId] on chassis [id] role : [ifRole] transceiver type:[xcvrType][transport] port [slotId]/[aggrPortId]/[portId] on fabric interconnect [id] role : [ifRole] transceiver type:[xcvrType][transport] port [slotId]/[portId] on fabric interconnect [id] role : [ifRole] transceiver type:[xcvrType]

Explanation:

This fault is raised against a fabric interconnect port, network-facing IOM port, or FEX module port if an unsupported transceiver type is inserted. The port cannot be used if it has an unsupported transceiver.

Recommended Action:

If you see this fault, replace the transceiver with a supported SFP type. Refer to the documentation on the Cisco website for a list of supported SFPs.

Fault Details

```
Severity: major
Cause: unsupported-transceiver
mibFaultCode: F0713
mibFaultName: fltPortPIoInvalidSfp
moClass: port:PIo
Type: network
autoCleared: true
Affected MO: sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]
```

fltMgmtIfMissing

Fault Code: F0717

Message: Connection to Management Port [id] in server [id] is missing

Explanation:

This fault occurs when the connectivity between a server and FEX is removed or unconfigured.

Recommended Action:

If you see this fault, take the following actions:

1. Check the connectivity between the server and FEX.
2. If the connectivity was changed by mistake, restore it to its previous configuration.
3. If the connectivity change was intentional, reacknowledge the server.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

Severity: warning
Cause: link-missing
mibFaultCode: F0717
mibFaultName: fltMgmtIfMissing
moClass: mgmt:If
Type: operational
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]

Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fltFabricEthLanPcEpDown

Fault Code: F0727

Message: [type] Member [slotId]/[aggrPortId]/[portId] of Port-Channel [portId] on fabric interconnect [id] is down, membership: [membership][type] Member [slotId]/[portId] of Port-Channel [portId] on fabric interconnect [id] is down, membership: [membership]

Explanation:

This fault typically occurs when a member port in an Ethernet port channel is down.

Recommended Action:

If you see this fault, take the following action:

1. Check the link connectivity on the upstream Ethernet switch.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

Severity: major
Cause: membership-down
mibFaultCode: F0727
mibFaultName: fltFabricEthLanPcEpDown
moClass: fabric:EthLanPcEp
Type: network
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO: fabric/lan/[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]

Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]

fltFabricFcSanPcEpDown

Fault Code: F0728

Message: [type] Member [slotId]/[portId] of Port-Channel [portId] on fabric interconnect [id] is down, membership: [membership]

Explanation:

This fault typically occurs when a member port in a Fibre Channel port channel is down.

Recommended Action:

If you see this fault, take the following action:

1. Check the link connectivity on the upstream Fibre Channel switch
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

Severity: major
Cause: membership-down
mibFaultCode: F0728
mibFaultName: fltFabricFcSanPcEpDown
moClass: fabric:FcSanPcEp
Type: network
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO: fabric/san/[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]

fltEquipmentIOCardThermalThresholdNonCritical

Fault Code: F0729

Message: [side] IOM [chassisId]/[id] ([switchId]) sensor: [inlet1Sensor] temperature: [thermal]

Explanation:

This fault occurs when the temperature of an I/O module has exceeded a non-critical threshold value, but is still below the critical threshold. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).
- If sensors on a CPU reach 179.6F (82C), the system will take that CPU offline.

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the I/O module.
2. Review the Cisco UCS Site Preparation Guide to ensure the chassis and I/O modules have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis and I/O module are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
8. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: thermal-problem
mibFaultCode: F0729
mibFaultName: fltEquipmentIOCardThermalThresholdNonCritical
moClass: equipment:IOCard
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fltEquipmentIOCardThermalThresholdCritical

Fault Code: F0730

Message: [side] IOM [chassisId]/[id] ([switchId]) sensor: [inlet1Sensor] temperature: [thermal]

Explanation:

This fault occurs when the temperature of an I/O module has exceeded a critical threshold value. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).
- If sensors on a CPU reach 179.6F (82C), the system will take that CPU offline.

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the I/O module.
2. Review the Cisco UCS Site Preparation Guide to ensure the chassis and I/O modules have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis and I/O module are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Replace the faulty I/O modules.
8. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
9. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: thermal-problem
mibFaultCode: F0730
mibFaultName: fltEquipmentIOCardThermalThresholdCritical
moClass: equipment:IOCard
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fltEquipmentIOCardThermalThresholdNonRecoverable

Fault Code: F0731

Message: [side] IOM [chassisId]/[id] ([switchId]) sensor: [inlet1Sensor] temperature: [thermal]

Explanation:

This fault occurs when the temperature of an I/O module has been out of the operating range, and the issue is not recoverable. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).
- If sensors on a CPU reach 179.6F (82C), the system will take that CPU offline.

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the I/O module.
2. Review the Cisco UCS Site Preparation Guide to ensure the chassis and I/O modules have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis and I/O module are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Replace the faulty I/O modules.
8. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
9. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: thermal-problem
mibFaultCode: F0731
mibFaultName: fltEquipmentIOCardThermalThresholdNonRecoverable
moClass: equipment:IOCard
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fltEquipmentChassisSeeprom-inoperable

Fault Code: F0733

Message: Device [id] SEEPROM operability: [seepromOperState]

Explanation:

This fault occurs in the unlikely event that the Chassis shared storage (SEEPROM) is not operational.

Recommended Action:

If you see this fault, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: equipment-inoperable
mibFaultCode: F0733
mibFaultName: fltEquipmentChassisSeepromInoperable
moClass: equipment:Chassis
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]
```

fltFabricFcSanPcEpIncompatibleSpeed

Fault Code: F0734

Message: Member [slotId]/[portId] cannot be added to SAN Port-Channel [portId] on fabric interconnect [id], reason: [membership]

Explanation:

This fault typically occurs when the maximum supported Fibre Channel speed of a port in a Fibre Channel port channel is incompatible with the admin speed configured for the port channel.

Recommended Action:

If you see this fault, take one of the following actions:

- Change the admin speed of the port channel to match the maximum supported speed of the member ports in the port channel.
- Replace the expansion module in the fabric interconnect with one that matches the admin speed configured for the port channel.

Fault Details

```
Severity: major
Cause: incompatible-speed
mibFaultCode: F0734
mibFaultName: fltFabricFcSanPcEpIncompatibleSpeed
moClass: fabric:FcSanPcEp
Type: network
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
```

```
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO: fabric/san/[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
```

fltFabricFcSanPcIncompatibleSpeed

Fault Code: F0735

Message: Cannot set admin speed to the requested value, Speed incompatible with member ports in the port-channel

Explanation:

This fault typically occurs when the maximum supported Fibre Channel speed of a port in a Fibre Channel port channel is incompatible with the admin speed configured for the port channel.

Recommended Action:

If you see this fault, take one of the following actions:

- Change the admin speed of the port channel to match the maximum supported speed of the member ports in the port channel.
- Replace the expansion module in the fabric interconnect with one that matches the admin speed configured for the port channel.

Fault Details

```
Severity: major
Cause: incompatible-speed
mibFaultCode: F0735
mibFaultName: fltFabricFcSanPcIncompatibleSpeed
moClass: fabric:FcSanPc
Type: network
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]
```

fltExtmgmtIfMgmtifdown

Fault Code: F0736

Message: Management services on Fabric Interconnect [id] is [operState]

Explanation:

This fault occurs when a fabric interconnect reports that the operational state of an external management interface is down.

Recommended Action:

If you see this fault, take the following actions:

1. Check the state transitions of the external management interface on the fabric interconnect.

2. Check the link connectivity for the external management interface.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: mgmtif-down
mibFaultCode: F0736
mibFaultName: fltExtmgmtIfMgmtifdown
moClass: extmgmt:If
Type: management
autoCleared: true
Affected MO: sys/switch-[id]/extmgmt-intf
```

fltPowerChassisMemberPowerGroupCapInsufficient

Fault Code: F0740

Message: Chassis [id] cannot be capped as group cap is low. Please consider raising the cap.

Explanation:

This fault typically occurs when an updated group cap is insufficient to meet the minimum hardware requirements and a chassis that has just been added to the power group cannot be capped as a result.

Recommended Action:

If you see this fault, take the following actions:

1. Consider increasing the group cap.
2. Reduce the number of blade servers or chassis in the Cisco UCS instance.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: group-cap-insufficient
mibFaultCode: F0740
mibFaultName: fltPowerChassisMemberPowerGroupCapInsufficient
moClass: power:ChassisMember
Type: environmental
autoCleared: true
Affected MO: sys/power-ep/group-[name]/ch-member-[id]
```

fltPowerChassisMemberChassisFirmwareProblem

Fault Code: F0741

Message: Chassis [id] cannot be capped as at least one of the CMC or CIMC or BIOS firmware version is less than 1.4. Please upgrade the firmware for cap to be applied.

Explanation:

This fault typically occurs when the CIMC firmware on a server is an earlier release than Cisco UCS, Release 1.4.

Recommended Action:

If you see this fault, consider upgrading the CIMC firmware, and the entire Cisco UCS instance if necessary, to Cisco UCS, Release 1.4 or later.

Fault Details

```
Severity: major
Cause: old-chassis-component-firmware
mibFaultCode: F0741
mibFaultName: fltPowerChassisMemberChassisFirmwareProblem
moClass: power:ChassisMember
Type: environmental
autoCleared: true
Affected MO: sys/power-ep/group-[name]/ch-member-[id]
```

fltPowerChassisMemberChassisPsuInsufficient

Fault Code: F0742

Message: Chassis [id] cannot be capped as at least two PSU need to be powered

Explanation:

This fault typically occurs when at least two PSUs are not powered on.

Recommended Action:

If you see this fault, insert at least two PSUs and power them on.

Fault Details

```
Severity: major
Cause: psu-insufficient
mibFaultCode: F0742
mibFaultName: fltPowerChassisMemberChassisPsuInsufficient
moClass: power:ChassisMember
Type: environmental
autoCleared: true
Affected MO: sys/power-ep/group-[name]/ch-member-[id]
```

fltPowerChassisMemberChassisPsuRedundanceFailure

Fault Code: F0743

Message: Chassis [id] was configured for redundancy, but running in a non-redundant configuration.

Explanation:

This fault typically occurs when chassis power redundancy has failed.

Recommended Action:

If you see this fault, take the following actions:

1. Consider adding more PSUs to the chassis.
2. Replace any non-functional PSUs.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: psu-redundancy-fail
mibFaultCode: F0743
mibFaultName: fltPowerChassisMemberChassisPsuRedundanceFailure
moClass: power:ChassisMember
Type: environmental
autoCleared: true
Affected MO: sys/power-ep/group-[name]/ch-member-[id]
```

fltPowerBudgetPowerCapReachedCommit

Fault Code: F0744

Message: P-State lowered as consumption hit power cap for server [chassisId]/[slotId]P-State lowered as consumption hit power cap for server [id]

Explanation:

This fault typically occurs when Cisco UCS Manager is actively capping the power for a blade server.

Recommended Action:

If you see this fault, no action is needed.

Fault Details

```
Severity: info
Cause: power-consumption-hit-limit
mibFaultCode: F0744
mibFaultName: fltPowerBudgetPowerCapReachedCommit
moClass: power:Budget
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/budget
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/budget
Affected MO: sys/chassis-[id]/budget
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/budget
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/budget
Affected MO: sys/fex-[id]/budget
Affected MO: sys/rack-unit-[id]/budget
Affected MO: sys/rack-unit-[id]/ext-board-[id]/budget
Affected MO: sys/switch-[id]/budget
```

fltSysdebugAutoCoreFileExportTargetAutoCoreTransferFailure

Fault Code: F0747

Message: Auto core transfer failure at remote server [hostname]:[path] [exportFailureReason]

Explanation:

This fault occurs when Cisco UCS Manager cannot transfer a core file to a remote TFTP server. This is typically the result of one of the following issues:

- The remote TFTP server is not accessible.
- One or more of the parameters for the TFTP server that are specified for the core export target, such as path, port, and server name, are incorrect.

Recommended Action:

If you see this fault, take the following actions:

1. Verify the connectivity to the remote server.
2. Verify the path information of the remote server.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: tftp-server-error
mibFaultCode: F0747
mibFaultName: fltSysdebugAutoCoreFileExportTargetAutoCoreTransferFailure
moClass: sysdebug:AutoCoreFileExportTarget
Type: sysdebug
autoCleared: true
Affected MO: sys/sysdebug/file-export
```

fltFabricMonSpanConfigFail

Fault Code: F0757

Message: Configuration for traffic monitor [name] failed, reason: [configFailReason]

Explanation:

This fault typically occurs when the configuration of a traffic monitoring session is incorrect.

Recommended Action:

If you see this fault, correct the configuration problem provided in the fault description.

Fault Details

```
Severity: major
Cause: config-error
mibFaultCode: F0757
mibFaultName: fltFabricMonSpanConfigFail
moClass: fabric:Mon
Type: network
autoCleared: true
Affected MO: fabric/lanmon/[id]/eth-mon-[name]
Affected MO: fabric/sanmon/[id]/fc-mon-[name]
```

fltPowerBudgetChassisPsuInsufficient

Fault Code: F0764

Message: Chassis [id] cannot be capped as the available PSU power is not enough for the chassis and the blades. Please correct the problem by checking input power or replace the PSU

Explanation:

This fault typically occurs when the available PSU power is not enough to deploy the power budget of chassis and blades.

Recommended Action:

If you see this fault, check the PSU input power or replace the PSU.

Fault Details

```
Severity: major
Cause: psu-insufficient
mibFaultCode: F0764
mibFaultName: fltPowerBudgetChassisPsuInsufficient
moClass: power:Budget
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/budget
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/budget
Affected MO: sys/chassis-[id]/budget
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/budget
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/budget
Affected MO: sys/fex-[id]/budget
Affected MO: sys/rack-unit-[id]/budget
Affected MO: sys/rack-unit-[id]/ext-board-[id]/budget
Affected MO: sys/switch-[id]/budget
```

fltPowerBudgetTStateTransition

Fault Code: F0765

Message: Blade [chassisId]/[slotId] has been severely throttled. CIMC can recover if budget is redeployed to the blade or by rebooting the blade. If problem persists, please ensure that OS is ACPI compliantRack server [id] has been severely throttled. CIMC can recover if budget is redeployed to the blade or by rebooting the blade. If problem persists, please ensure that OS is ACPI compliant

Explanation:

This fault typically occurs when the processor T-state is used to severely throttle the CPU.

Recommended Action:

If you see this fault, take the following actions:

1. Redeploy the power budget for the affected power group, blade server, or chassis.
2. If the problem persists, reboot the blade server.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: no-ack-from-bios
mibFaultCode: F0765
mibFaultName: fltPowerBudgetTStateTransition
moClass: power:Budget
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/budget
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/budget
Affected MO: sys/chassis-[id]/budget
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/budget
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/budget
Affected MO: sys/fex-[id]/budget
```

```
Affected MO: sys/rack-unit-[id]/budget
Affected MO: sys/rack-unit-[id]/ext-board-[id]/budget
Affected MO: sys/switch-[id]/budget
```

fltPowerPolicyPowerPolicyApplicationFail

Fault Code: F0766

Message: Insufficient budget to apply no-cap priority through policy [name]. Blades will continue to be capped

Explanation:

This fault occurs when a power policy cannot be applied to one or more blade servers. The affected blade servers cannot operate normally without power capping due to the limited power budget for those servers.

Recommended Action:

If you see this fault, take the following actions:

1. Increase the power budget for the blade servers in the power policy.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: no-cap-fail
mibFaultCode: F0766
mibFaultName: fltPowerPolicyPowerPolicyApplicationFail
moClass: power:Policy
Type: environmental
autoCleared: true
Affected MO: org-[name]/power-policy-[name]
Affected MO: policy-ep/system-policies/power-policy-[name]
```

fltMgmtIfNew

Fault Code: F0772

Message: New connection discovered on Management Port [id] in server [id]

Explanation:

This fault occurs when the connectivity between a server and a FEX is added or changed.

Recommended Action:

If you see this fault, take the following actions:

1. Check the connectivity between the server and FEX.
2. If the connectivity was changed by mistake, restore it to its previous configuration.
3. If the connectivity change was intentional, reacknowledge the server.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
```

Cause: new-link
mibFaultCode: F0772
mibFaultName: fltMgmtIfNew
moClass: mgmt:If
Type: operational
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]

```
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]
```

fltAdaptorExtEthIfMissing

Fault Code: F0775

Message: Connection to Adapter [id] eth interface [id] in server [id] missing

Explanation:

The link for a network-facing adapter interface is misconnected. Cisco UCS Manager raises this fault when it detects that the connectivity between a previously configured port on a fabric interconnect or FEX and its prior peer network-facing adapter interface is misconnected or missing.

Recommended Action:

If you see this fault, take the following actions:

1. Check whether the adapter interface is connected to a port belonging to its peer fabric interconnect or FEX.
2. If the connectivity seems correct, reacknowledge the server.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: link-missing
mibFaultCode: F0775
mibFaultName: fltAdaptorExtEthIfMissing
moClass: adaptor:ExtEthIf
Type: network
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]
```

fltStorageLocalDiskSlotEpUnusable

Fault Code: F0776

Message: Local disk [id] on server [serverId] is not usable by the operating system

Explanation:

This fault occurs when the server disk drive is in a slot that is not supported by the storage controller.

Recommended Action:

If you see this fault, take the following actions:

1. Insert the server disk drive in a supported slot.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: equipment-inoperable
mibFaultCode: F0776
mibFaultName: fltStorageLocalDiskSlotEpUnusable
moClass: storage:LocalDiskSlotEp
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/disk-[id]
Affected MO: sys/rack-unit-[id]/board/disk-[id]
```

fltFabricEthEstcPcEpDown

Fault Code: F0777

Message: [type] Member [slotId]/[aggrPortId]/[portId] of Port-Channel [portId] on fabric interconnect [id] is down, membership: [membership][type] Member [slotId]/[portId] of Port-Channel [portId] on fabric interconnect [id] is down, membership: [membership]

Explanation:

This fault typically occurs when a member port in an Ethernet port channel is down.

Recommended Action:

If you see this fault, take the following action:

1. Check the link connectivity on the upstream Ethernet switch.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: membership-down
mibFaultCode: F0777
mibFaultName: fltFabricEthEstcPcEpDown
moClass: fabric:EthEstcPcEp
Type: network
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
```

Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]

fltEquipmentFexIdentity-unestablishable

Fault Code: F0778

Message: Fex [id] has an invalid FRU

Explanation:

This fault typically occurs because Cisco UCS Manager detected an unsupported chassis. For example, the model, vendor, or revision is not recognized.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the capability catalog in Cisco UCS Manager is up to date. If necessary, update the catalog.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

Severity: major
Cause: identity-unestablishable
mibFaultCode: F0778
mibFaultName: fltEquipmentFexIdentityUnestablishable
moClass: equipment:Fex
Type: equipment
autoCleared: true
Affected MO: sys/fex-[id]

fltEquipmentFanModuleInoperable

Fault Code: F0794

Message: Fan module [tray]-[id] in chassis [id] operability: [operability]Fan module [tray]-[id] in server [id] operability: [operability]Fan module [tray]-[id] in fabric interconnect [id] operability: [operability]Fan module [tray]-[id] in rack-enclosure [id] operability: [operability]

Explanation:

This fault occurs if a fan module is not operational.

Recommended Action:

If you see this fault, take the following actions:

1. Remove and reinstall the fan module. If multiple fans are affected by this fault, remove and reinstall one fan module at a time.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-inoperable
mibFaultCode: F0794
mibFaultName: fltEquipmentFanModuleInoperable
moClass: equipment:FanModule
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]
```

fltLsmaintMaintPolicyUnresolvableScheduler

Fault Code: F0795

Message: Schedule [schedName] referenced by maintenance policy [name] does not exist

Explanation:

The schedule that is referenced by the maintenance policy does not exist. This fault typically occurs as a result of one of the following issues:

- The schedule does not exist.
- The schedule was deleted.

Recommended Action:

If you see this fault, take the following actions:

1. Check if the named schedule exists. If it is deleted or missing, try to create it.
2. If the named schedule is deleted or missing, recreate it.
3. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: non-existent-scheduler
mibFaultCode: F0795
mibFaultName: fltLsmaintMaintPolicyUnresolvableScheduler
moClass: lsmaint:MaintPolicy
Type: server
autoCleared: true
Affected MO: org-[name]/maint-[name]
```

fltFabricVsanErrorDisabled

Fault Code: F0796

Message: VSAN [name] is [operState]

Explanation:

This fault typically occurs when the VSAN has an ID in the restricted range between 3840 and 4078, and Fibre Channel end host mode is enabled on the fabric interconnect.

Recommended Action:

If you see this fault, take the following actions:

1. Delete the port channels on the fabric interconnect.
2. Disable uplink trunking on the fabric-interconnect.
3. Configure the fabric interconnect for fibre channel switch mode.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: vsan-misconfigured
mibFaultCode: F0796
mibFaultName: fltFabricVsanErrorDisabled
moClass: fabric:Vsan
Type: network
autoCleared: true
Affected MO: fabric/fc-estc/[id]/net-[name]
Affected MO: fabric/fc-estc/net-[name]
Affected MO: fabric/san/[id]/net-[name]
Affected MO: fabric/san/net-[name]
```

fltFabricVsanEpErrorDisabled

Fault Code: F0797

Message: [type] Port [slotId]/[portId] on fabric interconnect [switchId] has VSAN [id] in error disabled statePort channel [portId] on fabric interconnect [switchId] has VSAN [id] in error disabled state

Explanation:

This fault typically occurs when a port is assigned to a VSAN that has an ID in the restricted range between 3840 and 4078) or is VSAN 4079, which is reserved.

Recommended Action:

If you see this fault, take the following action:

1. If the VSAN ID is in the restricted range between 3840 and 4078, do the following:
   a. Delete the port channels on the fabric interconnect.
   b. Disable uplink trunking on the fabric-interconnect.
   c. Configure the fabric interconnect for fibre channel switch mode.
2. If the VSAN is VSAN 4079, which is reserved, assign the port to a non-reserved VSAN.

3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: vsan-misconfigured
mibFaultCode: F0797
mibFaultName: fltFabricVsanEpErrorDisabled
moClass: fabric:VsanEp
Type: network
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO: fabric/fc-estc/[id]/phys-fc-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
```

fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/vsan-[id]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO: fabric/san/[id]/pc-[portId]/vsan-[id]
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO: fabric/san/[id]/phys-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]/vsan-[id]

fltPowerBudgetFirmwareMismatch

Fault Code: F0798

Message: Firmware on blade [chassisId]/[slotId] does not allow chassis level power capping. Please consider upgrading to at least 1.4 version

Explanation:

This fault typically occurs when the CIMC or BIOS firmware on a server is an earlier release than Cisco UCS, Release 1.4.

Recommended Action:

If you see this fault, consider upgrading the CIMC firmware, and the entire Cisco UCS instance if necessary, to Cisco UCS, Release 1.4 or later.

Fault Details

```
Severity: major
Cause: old-firmware
mibFaultCode: F0798
mibFaultName: fltPowerBudgetFirmwareMismatch
moClass: power:Budget
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/budget
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/budget
Affected MO: sys/chassis-[id]/budget
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/budget
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/budget
Affected MO: sys/fex-[id]/budget
Affected MO: sys/rack-unit-[id]/budget
Affected MO: sys/rack-unit-[id]/ext-board-[id]/budget
Affected MO: sys/switch-[id]/budget
```

fltProcessorUnitIdentity-unestablishable

Fault Code: F0801

Message: Processor [id] on server [chassisId]/[slotId] has an invalid FRUProcessor [id] on server [id] has an invalid FRUProcessor [id] on server [chassisId]/[slotId]/[serverInstanceId] has an invalid FRU

Explanation:

This fault typically occurs because Cisco UCS Manager has detected an unsupported CPU in the server. For example, the model, vendor, or revision is not recognized.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the capability catalog in Cisco UCS Manager is up to date. If necessary, update the catalog.
2. If the above action did not resolve the issue, you may have an unsupported CPU configuration in the server. Create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: identity-unestablishable
mibFaultCode: F0801
mibFaultName: fltProcessorUnitIdentityUnestablishable
moClass: processor:Unit
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]
Affected MO: sys/rack-unit-[id]/board/cpu-[id]
```

fltIqnpoolPoolEmpty

Fault Code: F0821

Message: iqn pool [name] is empty

Explanation:

This fault typically occurs when an IQN pool does not contain any IQNs.

Recommended Action:

If you see this fault, take the following actions:

1. If the pool is in use, add a block of IQNs to the pool.
2. If the pool is not in use, ignore the fault.

Fault Details

```
Severity: minor
Cause: empty-pool
mibFaultCode: F0821
mibFaultName: fltIqnpoolPoolEmpty
moClass: iqnpool:Pool
Type: server
autoCleared: true
Affected MO: org-[name]/iqn-pool-[name]
```

fltFabricDceSwSrvPcEpDown

Fault Code: F0831

Message: [type] Member [slotId]/[aggrPortId]/[portId] of Port-Channel [portId] on fabric interconnect [id] is down, membership: [membership][type] Member [slotId]/[portId] of Port-Channel [portId] on fabric interconnect [id] is down, membership: [membership]

Explanation:

This fault typically occurs when a member port in a fabric port channel is down.

Recommended Action:

If you see this fault, take the following action:

1. Check the link connectivity between the FEX or IOM and the fabric interconnect.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: membership-down
mibFaultCode: F0831
mibFaultName: fltFabricDceSwSrvPcEpDown
moClass: fabric:DceSwSrvPcEp
Type: network
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
```

Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO: fabric/server/sw-[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]

fltFabricEpMgrEpTransModeFail

Fault Code: F0832

Message: Port constraint violation on switch [id]: [confQual]

Explanation:

This fault occurs when at least one logical interface is misconfigured. This can happen when upgrading to a different type or series of fabric interconnect or when importing a configuration. The configuration must meet the following constraints:

- The first Fibre Channel port must be an odd port number. This constraint cannot be violated when upgrading from a Cisco UCS 6100 series fabric interconnect to a Cisco UCS 6200 series fabric interconnect.
- All FC ports must be configured contiguously with intervening unconfigured FC ports. This can happen during an upgrade from a Cisco UCS 6100 series fabric interconnect when you import the configuration from a Cisco UCS 6100 series fabric interconnect configuration into a Cisco UCS 6200 series fabric interconnect. For example, the Cisco UCS 6100 series fabric interconnect has an FC expansion module with ports FC2/1 through FC2/6 configured. When you import that configuration into a Cisco UCS 6200 series fabric interconnect, FC ports 2/7 through 2/16 remain unconfigured. You can correct this problem by configuring the missing FC ports.
- Ethernet and FC port ranges cannot overlap. This can happen when upgrading from a Cisco UCS 6100 series fabric interconnect to a Cisco UCS 6200 series fabric interconnect. For example, some Cisco UCS 6100 expansion modules have FC and Ethernet ports with the same ID, such as FC port 2/1 and Ethernet port 2/1.
- There must be at most one logical port per fabric interconnect ID/module ID/port ID. For example, a port cannot be configured as both Ethernet and FC. This can happen during an upgrade from a Cisco UCS 6100 series fabric interconnect. For example, some Cisco UCS 6100 expansion modules have FC and Ethernet ports with the same ID, such as FC port 2/1 and Ethernet port 2/1.
- Within a module, the port IDs of Ethernet ports must be lower than the smallest FC port ID. This means that all Ethernet ports must be on the left and all FC ports on the right. This can happen during an upgrade from a Cisco UCS 6140 fabric interconnect with 40 ports on the fixed module to a Cisco UCS 6248

fabric interconnect with 32 ports on the fixed module. For example, if the Cisco UCS 6248 is initially configured with Ethernet ports 1/1 through 1/16 and FC ports 1/17 through 1/32, and you import a a configuration from the Cisco UCS 6140 with Ethernet ports 1/1 through 1/32 unconfigured and Ethernet ports 1/33 through 1/40, the resulting configuration is Ethernet 1/1 through 1/16, FC 1/17 through 1/32, and Ethernet 1/33 through 1/40. This is not a valid configuration. You must delete ports 1/33 through 1/40 to correct the configuration.

- A non-unified Ethernet port cannot be configured as an FC port. Note the following:
  - This constraint cannot be violated when upgrading from a Cisco UCS 6100 series fabric interconnect to a Cisco UCS 6200 series fabric interconnect.
  - This constraint can be violated when downgrading from a Cisco UCS 6200 series fabric interconnect to a Cisco UCS 6100 series fabric interconnect.
  - This constraint can be violated when pre-provisioning a port on a Cisco UCS 6100 series fabric interconnect and then inserting an expansion module that does not match the requirement.
- A non-unified FC port cannot be configured as an Ethernet port. Note the following:
  - This constraint cannot be violated when upgrading from a Cisco UCS 6100 series fabric interconnect to a Cisco UCS 6200 series fabric interconnect.
  - This constraint can be violated when downgrading from a Cisco UCS 6200 series fabric interconnect to a Cisco UCS 6100 series fabric interconnect.
  - This constraint can be violated when pre-provisioning a port on a Cisco UCS 6100 series fabric interconnect and then inserting an expansion module that does not match the requirement.
- On a Cisco UCS 6100 series fabric interconnect, server ports cannot be configured on expansion modules. This constraint can be violated when downgrading from a Cisco UCS 6200 series fabric interconnect to a Cisco UCS 6100 series fabric interconnect.

Recommended Action:

If you see this fault, take the following action:

1. Create a list of all logical interfaces that are misconfigured and have caused an 'error-misconfigured' fault.
2. For each logical interface, note the reason listed in the fault for the misconfiguration.
3. Log into Cisco UCS Manager and correct each misconfigured logical interface. If you used the Cisco UCS Manager CLI, commit all changes.
4. Review any faults or error messages that describe additional misconfigurations and correct those errors.
5. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: config-error
mibFaultCode: F0832
mibFaultName: fltFabricEpMgrEpTransModeFail
moClass: fabric:EpMgr
Type: network
autoCleared: true
Affected MO: fabric/[id]
```

fltFabricVlanMisconfigured

Fault Code: F0833

Message: VLAN [name] is [operState] because of conflicting vlan-id with a fcoe-vlan

Explanation:

This fault typically occurs when VLAN has the same ID as an FCoE VLAN. This issue can cause disruption of traffic.

Recommended Action:

If you see this fault, take the following action:

1. Check the VLAN ID.
2. If the ID of the VLAN matches the ID of the FCoE VLAN assigned to a VLAN in the same fabric interconnect, change the ID of either the VLAN or the FCoE VLAN.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: vlan-misconfigured
mibFaultCode: F0833
mibFaultName: fltFabricVlanMisconfigured
moClass: fabric:Vlan
Type: network
autoCleared: true
Affected MO: fabric/eth-estc/[id]/net-[name]
Affected MO: fabric/eth-estc/net-[name]
Affected MO: fabric/lan/[id]/net-[name]
Affected MO: fabric/lan/net-[name]
```

fltFabricPloEpErrorMisconfigured

Fault Code: F0834

Message: Interface [name] is [operState]. Reason: [operStateReason]

Explanation:

This fault occurs when a logical interface is misconfigured. This can happen when upgrading to a different type or series of fabric interconnect or when importing a configuration.

Recommended Action:

If you see this fault, take the following action:

1. Create a list of all logical interfaces that are misconfigured and have caused an 'error-misconfigured' fault.
2. For each logical interface, note the reason listed in the fault for the misconfiguration.
3. Log into Cisco UCS Manager and correct each misconfigured logical interface. If you used the Cisco UCS Manager CLI, commit all changes.
4. Review any faults or error messages that describe additional misconfigurations and correct those errors.
5. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

Severity: critical
Cause: interface-misconfigured
mibFaultCode: F0834
mibFaultName: fltFabricPIoEpErrorMisconfigured
moClass: fabric:PIoEp
Type: network
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/eth-estc/[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]
Affected MO: fabric/eth-estc/[id]/pc-[portId]/eth-target-ep-[name]
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/slot-[slotId]-port-[portId]
Affected MO: fabric/eth-estc/[id]/phys-eth-slot-[slotId]-port-[portId]
Affected MO: fabric/eth-estc/[id]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/slot-[slotId]-port-[portId]
Affected MO: fabric/eth-estc/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]

Affected MO:
fabric/eth-estc/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/net-[name]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/fc-estc/[id]/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/fc-estc/[id]/phys-fc-slot-[slotId]-port-[portId]
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/slot-[slotId]-port-[portId]
Affected MO: fabric/fc-estc/net-[name]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/fc-estc/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/lan/[id]/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/net-group-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/net-group-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/net-group-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/lan/[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]

Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/slot-[slotId]-port-[portId]
Affected MO: fabric/lan/[id]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO: fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/slot-[slotId]-port-[portId]
Affected MO: fabric/lan/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/lan/net-group-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/net-group-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/net-group-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/lanmon/[id]/eth-mon-[name]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/slot-[slotId]-port-[portId]
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:

fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/net-[name]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/san/[id]/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/san/[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/slot-[slotId]-port-[portId]
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO: fabric/san/[id]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]

Affected MO: fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/slot-[slotId]-port-[portId]
Affected MO: fabric/san/net-[name]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/san/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/sanmon/[id]/fc-mon-[name]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/slot-[slotId]-port-[portId]
Affected MO: fabric/server/cart-ep-ven-[vendor]-mod-[model]-ser-[serial]
Affected MO: fabric/server/chassis-[chassisId]
Affected MO: fabric/server/chassis-[chassisId]/cart-slot-[slotId]
Affected MO: fabric/server/chassis-[chassisId]/cart-slot-[slotId]/ins-[serverInstanceId]
Affected MO: fabric/server/chassis-[chassisId]/slot-[slotId]
Affected MO: fabric/server/chassis-ep-ven-[vendor]-mod[model]-ser-[serial]
Affected MO: fabric/server/compute-ep-ven-[vendor]-mod-[model]-ser-[serial]
Affected MO: fabric/server/sw-[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:

fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/slot-[slotId]-port-[portId]
Affected MO: fabric/server/sw-[id]/slot-[slotId]-port-[portId]
Affected MO:
sys/switch-[id]/access-eth/slot-[slotId]-aggr-port-[aggrPortId]/ethestc-ep-slot-[slotId]port-[portId]/eth-target-[name]
Affected MO:
sys/switch-[id]/border-eth/ethestc-ep-slot-[slotId]port-[portId]/eth-target-[name]
Affected MO: sys/switch-[id]/border-eth/pc-[portId]/eth-target-[name]
Affected MO:
sys/switch-[id]/border-eth/slot-[slotId]-aggr-port-[aggrPortId]/ethestc-ep-slot-[slotId]port-[portId]/eth-target-[name]
Affected MO:
sys/switch-[id]/border-fc/slot-[slotId]-aggr-port-[aggrPortId]/ethestc-ep-slot-[slotId]port-[portId]/eth-target-[name]
Affected MO: sys/switch-[id]/lanmon-eth/mon-[name]/pc-[portId]/eth-target-[name]
Affected MO:
sys/switch-[id]/lanmon-eth/mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/ethestc-ep-slot-[slotId]port-[portId]/eth-target-[name]
Affected MO:
sys/switch-[id]/phys/slot-[slotId]-aggr-port-[aggrPortId]/ethestc-ep-slot-[slotId]port-[portId]/eth-target-[name]
Affected MO:
sys/switch-[id]/sanmon-fc/mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/ethestc-ep-slot-[slotId]port-[portId]/eth-target-[name]

fltFabricEthLanEpMissingPrimaryVlan

Fault Code: F0835

Message: Primary vlan missing from fabric: [switchId], port: [slotId]/[aggrPortId]/[portId].Primary vlan missing from fabric: [switchId], port: [slotId]/[portId].

Explanation:

This fault occurs when an uplink port or port channel is configured with a primary VLAN that does not exist in the Cisco UCS instance.

Recommended Action:

If you see this fault, take the following action:

1. Update the configuration of the port or port channel to include a primary VLAN.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

Severity: major
Cause: missing-primary-vlan
mibFaultCode: F0835
mibFaultName: fltFabricEthLanEpMissingPrimaryVlan
moClass: fabric:EthLanEp
Type: management
autoCleared: true
Affected MO:

```
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO: fabric/lan/[id]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
```

fltFabricEthLanPcMissingPrimaryVlan

Fault Code: F0836

Message: Primary vlan missing from fabric: [switchId], port-channel: [portId].

Explanation:

This fault occurs when an uplink port or port channel is configured with a primary VLAN that does not exist in the Cisco UCS instance.

Recommended Action:

If you see this fault, take the following action:

1. Update the configuration of the port or port channel to include a primary VLAN.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: missing-primary-vlan
mibFaultCode: F0836
mibFaultName: fltFabricEthLanPcMissingPrimaryVlan
moClass: fabric:EthLanPc
Type: management
autoCleared: true
Affected MO: fabric/lan/[id]/pc-[portId]
```

fltVnicEtherPinningMismatch

Fault Code: F0840

Message: Hard pinning target for eth vNIC [name], service profile [name] does not have all the required vlans configured

Explanation:

This fault occurs when one or more VLANs required by vNIC in a service profile are not configured on the target uplink port or port channel for a hard-pinned LAN pin group.

Recommended Action:

If you see this fault, take the following actions:

1. In the LAN Uplinks Manager of the Cisco UCS Manager GUI, configure all of the VLANs in the vNIC in the target uplink port or port channel for the LAN pin group. If you prefer to use the Cisco UCS Manager CLI, navigate to scope **/eth-uplink/vlan** and create the required member ports for the LAN pin group.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: pinning-mismatch
mibFaultCode: F0840
mibFaultName: fltVnicEtherPinningMismatch
moClass: vnic:Ether
Type: configuration
autoCleared: true
Affected MO: org-[name]/lan-conn-pol-[name]/ether-[name]
Affected MO: org-[name]/ls-[name]/ether-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ether-[name]
```

fltVnicEtherPinningMisconfig

Fault Code: F0841

Message: Hard pinning target for eth vNIC [name], service profile [name] is missing or misconfigured

Explanation:

This fault occurs when one or more vNIC target uplink ports or port channels for a hard-pinned LAN pin group are either missing or misconfigured as the wrong port type.

Recommended Action:

If you see this fault, take the following actions:

1. Review the LAN pin group configuration.
2. Correct the configuration of the port and port channels in the pin group.
3. Ensure that all required vLANs are allowed on the target ports or port channels.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: pinning-misconfig
mibFaultCode: F0841
mibFaultName: fltVnicEtherPinningMisconfig
moClass: vnic:Ether
```

```
Type: configuration
autoCleared: true
Affected MO: org-[name]/lan-conn-pol-[name]/ether-[name]
Affected MO: org-[name]/ls-[name]/ether-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ether-[name]
```

fltProcessorUnitDisabled

Fault Code: F0842

Message: Processor [id] on server [chassisId]/[slotId] operState: [operState]Processor [id] on server [id] operState: [operState]Processor [id] on server [chassisId]/[slotId]/[serverInstanceId] operState: [operState]

Explanation:

This fault occurs in the unlikely event that a processor is disabled.

Recommended Action:

If you see this fault, take the following actions:

1. If this fault occurs on a blade server, remove and reinsert the server into the chassis.
2. In Cisco UCS Manager, decommission and recommission the blade server.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-disabled
mibFaultCode: F0842
mibFaultName: fltProcessorUnitDisabled
moClass: processor:Unit
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]
Affected MO: sys/rack-unit-[id]/board/cpu-[id]
```

fltMemoryUnitDisabled

Fault Code: F0844

Message: DIMM [location] on server [chassisId]/[slotId] operState: [operState]DIMM [location] on server [id] operaState: [operState]DIMM [location] on server [chassisId]/[slotId]/[serverInstanceId] operState: [operState]

Explanation:

This fault is raised when the server BIOS disables a DIMM. The BIOS could disable a DIMM for several reasons, including incorrect location of the DIMM or incompatible speed.

Recommended Action:

If you see this fault, refer to the Cisco UCS B-Series Troubleshooting Guide for information on how to resolve the DIMM issues.

Fault Details

```
Severity: major
```

```
Cause: equipment-disabled
mibFaultCode: F0844
mibFaultName: fltMemoryUnitDisabled
moClass: memory:Unit
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/mem-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]
```

fltFirmwareBootUnitActivateStatusFailed

Fault Code: F0856

Message: Activation failed and Activate Status set to failed.

Explanation:

This fault typically occurs for the following reasons: when firmware activation fails, or if the after activation running image is not the corresponding startup image.

- Firmware activation failed.
- The version of firmware running on the server after activation is not the version listed in Cisco UCS Manager as the startup image.

Recommended Action:

If you see this fault, take the following actions:

1. Go to FSM tab for the endpoint on which the fault is raised and review the error description for the reason that the activation failed.
2. If the FSM failed, review the error message in the FSM.
3. If possible, correct the problem described in the error message.
4. If the problem persists, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: activation-failed
mibFaultCode: F0856
mibFaultName: fltFirmwareBootUnitActivateStatusFailed
moClass: firmware:BootUnit
Type: management
autoCleared: true
Affected MO: capabilities/ep/mgmt-ext/fw-boot-def/bootunit-[type]
Affected MO: capabilities/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/bios/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/graphics-card-[id]/fw-boot-def/bootunit-[type]
```

Affected MO:
sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/pmemory-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/nvme-switch-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pci-switch-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/bios/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/bios/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/graphics-card-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/pmemory-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/nvme-switch-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/pci-switch-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/fw-boot-def/bootunit-[type]

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/bios/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/psu-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/sas-expander-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/sas-expander-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/fex-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/fex-[id]/psu-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-enclosure-[id]/psu-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/fw-boot-def/bootunit-[type]

Affected MO: sys/rack-unit-[id]/bios/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/graphics-card-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/pmemory-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/nvme-switch-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/pci-switch-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/board/sas-expander-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/bios/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/psu-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/switch-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/switch-[id]/psu-[id]/fw-boot-def/bootunit-[type]

fltFabricInternalPcDown

Fault Code: F0858

Message: [type] port-channel [portId] on fabric interconnect [id] oper state: [operState], reason: [stateQual]

Explanation:

This fault occurs when the transport VIF for a server is down. Cisco UCS Manager raises this fault when a fabric interconnect reports the connectivity state on virtual interface as one of the following:

- Down
- Errored
- Unavailable

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the blade server discovery was successful.
2. Check the states on all communicating ports from end to end.
3. If connectivity seems correct, decommission and recommission the server.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: operational-state-down
mibFaultCode: F0858
mibFaultName: fltFabricInternalPcDown
moClass: fabric:InternalPc
Type: network
autoCleared: true
Affected MO: fabric/server/sw-[id]/pc-[portId]
```

fltMgmtEntityDevice-1-shared-storage-error

Fault Code: F0863

Message: device [chassis1], error accessing shared-storage

Explanation:

This fault occurs in an unlikely event that the shared storage selected for writing the cluster state is not accessible. This fault is typically a transient fault. You might see this fault when one of the following occurs: (a) the Fabric Interconnect boots, (b) the IO Module is reset, (c) the rack server is reboot, or (d) system is upgraded/downgraded. If this fault is not cleared after the system returns to normal operation following the reboot/reset/upgrade/downgrade, then it may affect the full HA functionality of the Fabric Interconnect cluster.

Recommended Action:

If this fault is not cleared even after the system returns to normal operation, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: device-shared-storage-error
mibFaultCode: F0863
mibFaultName: fltMgmtEntityDevice1SharedStorageError
moClass: mgmt:Entity
Type: management
autoCleared: true
Affected MO: sys/mgmt-entity-[id]
```

fltMgmtEntityDevice-2-shared-storage error

Fault Code: F0864

Message: device [chassis2], error accessing shared-storage

Explanation:

This fault occurs in an unlikely event that the shared storage selected for writing the cluster state is not accessible. This fault is typically a transient fault. You might see this fault when one of the following occurs: (a) the Fabric Interconnect boots, (b) the IO Module is reset, (c) the rack server is reboot, or (d) system is upgraded/downgraded. If this fault is not cleared after the system returns to normal operation following the reboot/reset/upgrade/downgrade, then it may affect the full HA functionality of the Fabric Interconnect cluster.

Recommended Action:

If this fault is not cleared even after the system returns to normal operation, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: device-shared-storage-error
mibFaultCode: F0864
mibFaultName: fltMgmtEntityDevice2SharedStorageError
moClass: mgmt:Entity
Type: management
autoCleared: true
Affected MO: sys/mgmt-entity-[id]
```

fltMgmtEntityDevice-3-shared-storage error

Fault Code: F0865

Message: device [chassis3], error accessing shared-storage

Explanation:

This fault occurs in an unlikely event that the shared storage selected for writing the cluster state is not accessible. This fault is typically a transient fault. You might see this fault when one of the following occurs: (a) the Fabric Interconnect boots, (b) the IO Module is reset, (c) the rack server is reboot, or (d) system is upgraded/downgraded. If this fault is not cleared after the system returns to normal operation following the reboot/reset/upgrade/downgrade, then it may affect the full HA functionality of the Fabric Interconnect cluster.

Recommended Action:

If this fault is not cleared even after the system returns to normal operation, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: device-shared-storage-error
mibFaultCode: F0865
mibFaultName: fltMgmtEntityDevice3SharedStorageError
moClass: mgmt:Entity
Type: management
autoCleared: true
Affected MO: sys/mgmt-entity-[id]
```

fltMgmtEntityHa-ssh-keys-mismatched

Fault Code: F0866

Message: Fabric Interconnect [id], management services, mismatched SSH keys

Explanation:

This fault indicates that one of the following scenarios has occurred:

- The internal SSH keys used for HA in the cluster configuration are mismatched. This causes certain operations to fail.
- Another fabric interconnect is connected to the primary fabric interconnect in the cluster without first erasing the existing configuration in the primary.

Recommended Action:

If you see this fault, take the following actions:

1. Log into the Cisco UCS Manager CLI on the subordinate fabric interconnect.
2. Enter **connect local-mgmt**
3. Enter **erase configuration** to erase the configuration on the subordinate fabric interconnect and reboot it.
4. When the secondary fabric interconnect has rebooted, reconfigure it for the cluster.
5. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: ha-ssh-keys-mismatched
mibFaultCode: F0866
mibFaultName: fltMgmtEntityHaSshKeysMismatched
moClass: mgmt:Entity
Type: management
autoCleared: true
Affected MO: sys/mgmt-entity-[id]
```

fltMgmtPmonEntryUCSM process failure

Fault Code: F0867

Message: UCSM process [name] failed on FI [switchId]

Explanation:

This fault occurs in an unlikely event of a Cisco UCS Manager process crash. Typically, the failed process restarts and recovers from the problem. Any pending operations are restarted after the process successfully restarts.

Recommended Action:

If you see this fault and the process does not restart successfully, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: ucsm-process-failure
mibFaultCode: F0867
mibFaultName: fltMgmtPmonEntryUCSMProcessFailure
moClass: mgmt:PmonEntry
Type: management
autoCleared: true
Affected MO: sys/mgmt-entity-[id]/[name]
```

fltComputeBoardPowerFail

Fault Code: F0868

Message: Motherboard of server [chassisId]/[slotId] (service profile: [assignedToDn]) power: [power]Motherboard of server [id] (service profile: [assignedToDn]) power: [power]Motherboard of server [chassisId]/[slotId]/[serverInstanceId] (service profile: [assignedToDn]) power: [power]

Explanation:

This fault typically occurs when CIMC is unable to turn ON the server power. This may indicate a hardware component failure.

Recommended Action:

If you see this fault, take the following actions

1. In case of a blade server, remove the blade server from the chassis and re-insert.
2. In case of a rack server, manually a/c power cycle the server.
3. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: power-problem
mibFaultCode: F0868
mibFaultName: fltComputeBoardPowerFail
moClass: compute:Board
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board
Affected MO: sys/rack-unit-[id]/board
```

fltComputeABoardThermalProblem

Fault Code: F0869

Message: Motherboard [faultQualifier] of server [chassisId]/[slotId] (service profile: [assignedToDn]) thermal: [thermal]Motherboard of server [id] (service profile: [assignedToDn]) thermal: [thermal]Motherboard [faultQualifier] of server [chassisId]/[slotId]/[serverInstanceId] (service profile: [assignedToDn]) thermal: [thermal]

Explanation:

This fault typically occurs when the motherboard thermal sensors on a server detect a problem.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the server fans are working properly.
2. Wait for 24 hours to see if the problem resolves itself.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: thermal-problem
mibFaultCode: F0869
mibFaultName: fltComputeABoardThermalProblem
moClass: compute:ABoard
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]
```

```
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]
Affected MO: sys/rack-unit-[id]/board
Affected MO: sys/rack-unit-[id]/ext-board-[id]
```

fltVmVifLinkState

Fault Code: F0876

Message: Virtual interface [vifId] link is down; reason [stateQual]

Explanation:

This fault occurs when Cisco UCS cannot send or receive data through an uplink port.

Recommended Action:

If you see this fault, take the following actions:

1. Enable the failed uplink port.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: vif-down
mibFaultCode: F0876
mibFaultName: fltVmVifLinkState
moClass: vm:Vif
Type: management
autoCleared: true
Affected MO: vmm/computeEp-[uuid]/nic-[name]/sw-[phSwitchId]vif-[vifId]
Affected MO: vmm/hv-[uuid]/nic-[name]/sw-[phSwitchId]vif-[vifId]
Affected MO: vmm/vm-[uuid]/nic-[name]/sw-[phSwitchId]vif-[vifId]
```

fltEquipmentPsuPowerSupplyShutdown

Fault Code: F0881

Message: Power supply [id] in chassis [id] shutdown reason:[powerStateQualifier]Power supply [id] in rack-enclosure [id] shutdown reason:[powerStateQualifier]

Explanation:

This fault typically occurs when a power supply unit in a chassis, fabric interconnect, or a FEX is shut down, either due to higher than expected power current, higher than expected temperatures, or the failure of a fan.

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the server.
2. Review the Cisco UCS Site Preparation Guide to ensure the servers have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis or rack server are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.

6. Verify that the power cord is properly connected to the PSU and the power source.
7. Verify that the power source is 220 volts.
8. Verify that the PSU is properly installed in the chassis or fabric interconnect.
9. Remove the PSU and reinstall it.
10. Replace the PSU.
11. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-offline
mibFaultCode: F0881
mibFaultName: fltEquipmentPsuPowerSupplyShutdown
moClass: equipment:Psu
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-enclosure-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fltEquipmentPsuPowerThreshold

Fault Code: F0882

Message: Power supply [id] on chassis [id] has exceeded its power thresholdPower supply [id] on server [id] has exceeded its power thresholdPower supply [id] on rack-enclosure [id] has exceeded its power threshold

Explanation:

This fault occurs when a power supply unit is drawing too much current.

Recommended Action:

If you see this fault, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: power-problem
mibFaultCode: F0882
mibFaultName: fltEquipmentPsuPowerThreshold
moClass: equipment:Psu
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-enclosure-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fltEquipmentPsuInputError

Fault Code: F0883

Message: Power supply [id] on chassis [id] has disconnected cable or bad input voltagePower supply [id] on server [id] has disconnected cable or bad input voltagePower supply [id] on rack-enclosure [id] has disconnected cable or bad input voltage

Explanation:

This fault occurs when a power cable is disconnected or input voltage is incorrect.

Recommended Action:

If you see this fault, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: power-problem
mibFaultCode: F0883
mibFaultName: fltEquipmentPsuInputError
moClass: equipment:Psu
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-enclosure-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fltEquipmentSwitchCardPowerOff

Fault Code: F0884

Message: Switch card is powered down.

Explanation:

This fault occurs when the switch card is powered down.

Recommended Action:

If you see this fault, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: power-down
mibFaultCode: F0884
mibFaultName: fltEquipmentSwitchCardPowerOff
moClass: equipment:SwitchCard
Type: equipment
autoCleared: true
Affected MO: sys/switch-[id]/slot-[id]
```

fltNetworkElementInventoryFailed

Fault Code: F0885

Message: Fabric Interconnect [id] inventory is not complete [inventoryStatus]

Explanation:

Cisco UCS Manager raises this fault when the management subsystem is unable to perform an inventory of the physical components, such as I/O cards or physical ports.

Recommended Action:

If you see this fault, take the following actions:

1. Ensure that both fabric interconnects in an HA cluster are running the same software versions.
2. Ensure that the fabric interconnect software is a version that is compatible with the Cisco UCS Manager software.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: inventory-failed
mibFaultCode: F0885
mibFaultName: fltNetworkElementInventoryFailed
moClass: network:Element
Type: equipment
autoCleared: true
Affected MO: sys/switch-[id]
```

fltAdaptorUnitExtnUnidentifiable-fru

Fault Code: F0900

Message: Adapter extension [id] in server [chassisId]/[slotId] has unidentified FRU

Explanation:

This fault typically occurs because Cisco UCS Manager has detected an unsupported adapter unit extension, such as a pass-through adaptor. For example, the model, vendor, or revision is not recognized.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that a supported adapter unit extension is installed.
2. Verify that the capability catalog in Cisco UCS Manager is up to date. If necessary, update the catalog.
3. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: unidentifiable-fru
mibFaultCode: F0900
mibFaultName: fltAdaptorUnitExtnUnidentifiableFru
moClass: adaptor:UnitExtn
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/adaptor-extn-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/adaptor-extn-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/adaptor-extn-[id]
```

fltAdaptorUnitExtnMissing

Fault Code: F0901

Message: Adapter extension [id] in server [chassisId]/[slotId] presence: [presence]

Explanation:

This fault typically occurs when an I/O adapter unit extension, such as a pass-through adapter, is missing. Cisco UCS Manager raises this fault when any of the following scenario occur:

- The endpoint reports there is no adapter unit extension, such as a pass-through adapter, plugged into the adapter slot.
- The endpoint cannot detect or communicate with the adapter unit extension plugged into the adapter slot.

Recommended Action:

If you see this fault, take the following actions:

1. Ensure the adapter unit extension is properly plugged into an adapter slot in the server.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: equipment-missing
mibFaultCode: F0901
mibFaultName: fltAdaptorUnitExtnMissing
moClass: adaptor:UnitExtn
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/adaptor-extn-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/adaptor-extn-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/adaptor-extn-[id]
```

fltEquipmentFexFex-unsupported

Fault Code: F0902

Message: Fex [id] with model [model] is unsupported

Explanation:

This fault typically occurs because Cisco UCS Manager has detected an unsupported FEX. For example, the model, vendor, or revision is not recognized.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that a supported FEX is installed.
2. Verify that the capability catalog in Cisco UCS Manager is up to date. If necessary, update the catalog.
3. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: fex-unsupported
mibFaultCode: F0902
mibFaultName: fltEquipmentFexFexUnsupported
```

```
moClass: equipment:Fex
Type: equipment
autoCleared: true
Affected MO: sys/fex-[id]
```

fltVnicIScsiConfig-failed

Fault Code: F0903

Message: iSCSI vNIC [name], service profile [name] has duplicate iqn name [initiatorName]

Explanation:

This fault typically occurs when IScsi Vnics refer the same iqn name.

Recommended Action:

If you see this fault, take the following actions:

1. Make sure that iqn name unique per iSCSI vnic.
2. Using show identity iqn check if the iSCSI vnic is registered in the universe.
3. Try non disruptive actions such as changing description on the Service Profile to register the iqn in the universe.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: configuration-failed
mibFaultCode: F0903
mibFaultName: fltVnicIScsiConfigFailed
moClass: vnic:IScsi
Type: configuration
autoCleared: true
Affected MO: org-[name]/ls-[name]/iscsi-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/iscsi-[name]
```

fltPkiKeyRingStatus

Fault Code: F0909

Message: [name] Keyring's certificate is invalid, reason: [certStatus].

Explanation:

This fault occurs when certificate status of Keyring has become invalid.

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: invalid-keyring-certificate
mibFaultCode: F0909
mibFaultName: fltPkiKeyRingStatus
moClass: pki:KeyRing
Type: security
```

```
autoCleared: true
Affected MO: sys/pki-ext/keyring-[name]
```

fltPkiTPStatus

Fault Code: F0910

Message: [name] Trustpoint's cert-chain is invalid, reason: [certStatus].

Explanation:

This fault occurs when certificate status of TrustPoint has become invalid.

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: invalid-trustpoint-cert-chain
mibFaultCode: F0910
mibFaultName: fltPkiTPStatus
moClass: pki:TP
Type: security
autoCleared: true
Affected MO: sys/pki-ext/tp-[name]
```

fltComputePhysicalDisassociationFailed

Fault Code: F0915

Message: Failed to disassociate server [id]Failed to disassociate server [chassisId]/[slotId]Failed to disassociate server [chassisId]/[slotId]/[serverInstanceId]

Explanation:

This fault typically occurs for one of the following reasons:

- The server is down.
- The data path is not working.
- Cisco UCS Manager cannot communicate with one or more of the fabric interconnect, the server, or a component on the server.

Recommended Action:

If you see this fault, take the following actions:

1. Check the communication path to the server including fabric interconnect server ports, IOM link and the current state of the server
2. If the server is stuck in an inappropriate state, such as booting, power cycle the server.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: disassociation-failed
```

```
mibFaultCode: F0915
mibFaultName: fltComputePhysicalDisassociationFailed
moClass: compute:Physical
Type: configuration
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fltComputePhysicalNetworkMisconfigured

Fault Code: F0916

Message: Server [id] (service profile: [assignedToDn]) has mis-configured network vif resourcesServer [chassisId]/[slotId] (service profile: [assignedToDn]) has mis-configured network vif resourcesServer [chassisId]/[slotId]/[serverInstanceId] (service profile: [assignedToDn]) has mis-configured network vif resources

Explanation:

This fault would occur when UCSM VIF-id Map is not the same as the VIF-id map deployed on the adaptor upon Full Backup->Restore etc.

Recommended Action:

If you see this fault, take the following actions:

1. Re-acknowledge the server. This will trigger Deep Discovery->Deep Association & will resolve the issue
2. If the above actions did not resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: minor
Cause: vif-ids-mismatch
mibFaultCode: F0916
mibFaultName: fltComputePhysicalNetworkMisconfigured
moClass: compute:Physical
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fltVnicProfileProfileConfigIncorrect

Fault Code: F0917

Message: The Port Profile [name] has an invalid configuration.

Explanation:

This fault occurs there is an invalid entry for a port profile configuration.

Recommended Action:

Check documentation and correct the offending entry in the port profile configuration.

Fault Details

```
Severity: warning
Cause: profile-config-incorrect
mibFaultCode: F0917
mibFaultName: fltVnicProfileProfileConfigIncorrect
moClass: vnic:Profile
Type: configuration
autoCleared: true
Affected MO: fabric/lan/profiles/vnic-[name]
```

fltComputeABoardMotherBoardVoltageThresholdUpperNonRecoverable

Fault Code: F0918

Message: Motherboard input voltage in server [id] is [voltage]Motherboard [faultQualifier] input voltage in server [chassisId]/[slotId] is [voltage]Motherboard input voltage(12V/5V/3V) in server [chassisId]/[slotId]/[serverInstanceId] is [voltage]

Explanation:

This fault is raised when one or more motherboard input voltages has become too high and is unlikely to recover.

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: voltage-problem
mibFaultCode: F0918
mibFaultName: fltComputeABoardMotherBoardVoltageThresholdUpperNonRecoverable
moClass: compute:ABoard
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]
Affected MO: sys/rack-unit-[id]/board
Affected MO: sys/rack-unit-[id]/ext-board-[id]
```

fltComputeABoardMotherBoardVoltageThresholdLowerNonRecoverable

Fault Code: F0919

Message: Motherboard input voltage in server [id] is [voltage]Motherboard [faultQualifier] input voltage in server [chassisId]/[slotId] is [voltage]Motherboard input voltage(12V/5V/3V) in server [chassisId]/[slotId]/[serverInstanceId] is [voltage]

Explanation:

This fault is raised when one or more motherboard input voltages has dropped too low and is unlikely to recover.

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: voltage-problem
mibFaultCode: F0919
mibFaultName: fltComputeABoardMotherBoardVoltageThresholdLowerNonRecoverable
moClass: compute:ABoard
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]
Affected MO: sys/rack-unit-[id]/board
Affected MO: sys/rack-unit-[id]/ext-board-[id]
```

fltComputeABoardMotherBoardVoltageUpperThresholdCritical

Fault Code: F0920

Message: Motherboard input voltage in server [id] is [voltage]Motherboard [faultQualifier] input voltage in server [chassisId]/[slotId] is [voltage]Motherboard input voltage(12V/5V/3V) in server [chassisId]/[slotId]/[serverInstanceId] is [voltage]

Explanation:

This fault is raised when one or more motherboard input voltages has crossed upper critical thresholds.

Recommended Action:

None set.

Fault Details

```
Severity: minor
Cause: voltage-problem
mibFaultCode: F0920
mibFaultName: fltComputeABoardMotherBoardVoltageUpperThresholdCritical
moClass: compute:ABoard
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]
Affected MO: sys/rack-unit-[id]/board
Affected MO: sys/rack-unit-[id]/ext-board-[id]
```

fltComputeABoardMotherBoardVoltageLowerThresholdCritical

Fault Code: F0921

Message: Motherboard input voltage in server [id] is [voltage]Motherboard [faultQualifier] input voltage in server [chassisId]/[slotId] is [voltage]Motherboard [faultQualifier] input voltage(12V/5V/3V) in server [chassisId]/[slotId]/[serverInstanceId] is [voltage]

Explanation:

This fault is raised when one or more motherboard input voltages has crossed lower critical thresholds.

Recommended Action:

None set.

Fault Details

```
Severity: minor
Cause: voltage-problem
mibFaultCode: F0921
mibFaultName: fltComputeABoardMotherBoardVoltageLowerThresholdCritical
moClass: compute:ABoard
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]
Affected MO: sys/rack-unit-[id]/board
Affected MO: sys/rack-unit-[id]/ext-board-[id]
```

fltVnicEtherIfVlanAccessFault

Fault Code: F0932

Message: The named vlan [name] for vNIC [name] cannot be accessed from org [name]

Explanation:

This fault typically occurs when a Service Profile's vnic interface (LAN) is resolvable but the service profile does not have access to the vlan. In this case, the default vlan will be used.

Recommended Action:

This fault will be removed if you perform one of the following actions:

1. Change the vnic's interface name to a VLAN that you have access to.
2. If you wish to use the default vlan, change the vnic's interface name to default.
3. Configure access to the named vlan by creating a vlan permit or vlan group permit in the service profile's org (or a parent org).

Fault Details

```
Severity: major
Cause: inaccessible-vlan-referenced
mibFaultCode: F0932
mibFaultName: fltVnicEtherIfVlanAccessFault
moClass: vnic:EtherIf
Type: configuration
autoCleared: true
Affected MO:
fabric/lan/network-sets/fabric-network-[name]/fabric-network-def-[name]/vm-network-def-[name]/if-[name]
Affected MO: fabric/lan/profiles/vnic-[name]/if-[name]
Affected MO: fabric/lanmon/eth-flow-monitoring/flow-exporter-profile-[name]/if-[name]
Affected MO: org-[name]/lan-conn-pol-[name]/ether-[name]/if-[name]
Affected MO: org-[name]/lan-conn-templ-[name]/if-[name]
Affected MO: org-[name]/ls-[name]/ether-[name]/if-[name]
Affected MO: org-[name]/ls-[name]/if-[name]
Affected MO: org-[name]/ls-[name]/ipc-[name]/if-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ether-[name]/if-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/if-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ipc-[name]/if-[name]
```

fltVnicEtherIfVlanUnresolvable

Fault Code: F0933

Message: The named vlan [name] for vNIC [name], service profile [name] cannot be resolved

Explanation:

This fault (warning) occurs when a Service Profile's vnic interface (LAN) is unresolvable. In this case, the default vlan will be used as the operational vlan.

Recommended Action:

This fault will be removed if you perform one of the following actions:

1. Change the vnic interface name to an existing VLAN.
2. Create the named vlan .

Fault Details

```
Severity: warning
Cause: referenced-vlan-unresolvable
mibFaultCode: F0933
mibFaultName: fltVnicEtherIfVlanUnresolvable
moClass: vnic:EtherIf
Type: configuration
autoCleared: true
Affected MO:
fabric/lan/network-sets/fabric-network-[name]/fabric-network-def-[name]/vm-network-def-[name]/if-[name]
Affected MO: fabric/lan/profiles/vnic-[name]/if-[name]
Affected MO: fabric/lanmon/eth-flow-monitoring/flow-exporter-profile-[name]/if-[name]
Affected MO: org-[name]/lan-conn-pol-[name]/ether-[name]/if-[name]
Affected MO: org-[name]/lan-conn-templ-[name]/if-[name]
Affected MO: org-[name]/ls-[name]/ether-[name]/if-[name]
Affected MO: org-[name]/ls-[name]/if-[name]
Affected MO: org-[name]/ls-[name]/ipc-[name]/if-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ether-[name]/if-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/if-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ipc-[name]/if-[name]
```

fltVnicEtherIfInvalidVlan

Fault Code: F0934

Message: Invalid Vlan in the allowed vlan list

Explanation:

This fault typically occurs when a vnic of a service profile or a port profile contains an invalid vlan. an invalid vlan can be any one of the following:

1. an isolated vlan or a community vlan that is not associated to a valid primary vlan
2. a primary vlan without any of its assoicated secondary vlans allowed on the vnic
3. a vlan which has sharing-type or primary vlan name not matching to that of vlan in lan-side/appliance-side
4. a vlan which overlaps with FCoE vlan

Recommended Action:

This fault will be removed if you perform one of the following actions:

1. if invalid vlan is an isolated or community vlan then make sure it is mapped to a valid primary vlan.
2. if invalid vlan is a primary vlan then either allow any of its secondary vlans or delete it from vnic or port profile.
3. if invalid vlan is a vlan that does not match the sharing properties with the vlan of same vlan id in the lan-side/appliance-side, change the properties of this vlan to be the same as the other.
4. if invalid vlan is a vlan overlaps with FCoE vlan then configure a different vlan.

Fault Details

```
Severity: major
Cause: invalid-vlan-in-the-allowed-vlan-list
mibFaultCode: F0934
mibFaultName: fltVnicEtherIfInvalidVlan
moClass: vnic:EtherIf
Type: configuration
autoCleared: true
Affected MO:
fabric/lan/network-sets/fabric-network-[name]/fabric-network-def-[name]/vm-network-def-[name]/if-[name]
Affected MO: fabric/lan/profiles/vnic-[name]/if-[name]
Affected MO: fabric/lanmon/eth-flow-monitoring/flow-exporter-profile-[name]/if-[name]
Affected MO: org-[name]/lan-conn-pol-[name]/ether-[name]/if-[name]
Affected MO: org-[name]/lan-conn-templ-[name]/if-[name]
Affected MO: org-[name]/ls-[name]/ether-[name]/if-[name]
Affected MO: org-[name]/ls-[name]/if-[name]
Affected MO: org-[name]/ls-[name]/ipc-[name]/if-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ether-[name]/if-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/if-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ipc-[name]/if-[name]
```

fltFabricVlanVlanConflictPermit

Fault Code: F0935

Message: There are multiple vlans with id [id] have different accessability configured.

Explanation:

This fault occurs when multipl global vlans with the same id have different access configurations.

Recommended Action:

Change the access configuration by configuring VLAN/VLAN Group Permits.

Fault Details

```
Severity: warning
Cause: vlan-conflict-permit
mibFaultCode: F0935
mibFaultName: fltFabricVlanVlanConflictPermit
moClass: fabric:Vlan
Type: configuration
autoCleared: true
Affected MO: fabric/eth-estc/[id]/net-[name]
Affected MO: fabric/eth-estc/net-[name]
Affected MO: fabric/lan/[id]/net-[name]
Affected MO: fabric/lan/net-[name]
```

fltFabricVlanReqVlanPermitUnresolved

Fault Code: F0936

Message: The VLAN permit does not reference any existing vlans.

Explanation:

This fault occurs when a VLAN permit exists but there are no vnics by the name.

Recommended Action:

Delete the VLAN permit, create the referenced VLAN (or ignore).

Fault Details

```
Severity: warning
Cause: vlan-permit-unresolved
mibFaultCode: F0936
mibFaultName: fltFabricVlanReqVlanPermitUnresolved
moClass: fabric:VlanReq
Type: configuration
autoCleared: true
Affected MO: org-[name]/vlan-req-[name]
```

fltFabricVlanGroupReqVlanGroupPermitUnresolved

Fault Code: F0937

Message: The VLAN permit does not reference any existing net groups.

Explanation:

This fault occurs when a VLAN group permit exists but there are no referenced network groups.

Recommended Action:

Delete the VLAN permit, create the referenced VLAN (or ignore).

Fault Details

```
Severity: warning
Cause: group-permit-unresolved
mibFaultCode: F0937
mibFaultName: fltFabricVlanGroupReqVlanGroupPermitUnresolved
moClass: fabric:VlanGroupReq
Type: configuration
autoCleared: true
Affected MO: org-[name]/vlan-group-req-[name]
```

fltExtpolClientClientLostConnectivity

Fault Code: F0988

Message: UCS has lost connectivity with UCS Central

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: client-lost-connectivity
mibFaultCode: F0988
mibFaultName: fltExtpolClientClientLostConnectivity
moClass: extpol:Client
Type: network
autoCleared: true
Affected MO: extpol/reg/clients/client-[id]
```

fltStorageLocalDiskDegraded

Fault Code: F0996

Message: Local disk [id] on server [chassisId]/[slotId] operability: [operability]. Reason: [operQualifierReason]Local disk [id] on server [id] operability: [operability]. Reason: [operQualifierReason]Local disk [id] on storage enclosure [id] operability: [operability]. Reason: [operQualifierReason]Local disk [id] on chassis [id] operability: [operability]. Reason: [operQualifierReason]

Explanation:

This fault occurs when the local disk has become degraded. The fault description will contain the physical drive state, which indicates the reason for the degradation.

Recommended Action:

If you see this fault, take the following actions:

1. If the drive state is "rebuild" or "copyback", wait for the rebuild or copyback operation to complete.
2. If the drive state is "predictive-failure", replace the disk.

Fault Details

```
Severity: warning
Cause: equipment-degraded
mibFaultCode: F0996
mibFaultName: fltStorageLocalDiskDegraded
moClass: storage:LocalDisk
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]
```

fltStorageRaidBatteryDegraded

Fault Code: F0997

Message: RAID Battery on server [chassisId]/[slotId] operability: [operability]. Reason: [operQualifierReason]RAID Battery on server [id] operability: [operability]. Reason: [operQualifierReason]RAID Battery on chassis [id] operability: [operability]. Reason: [operQualifierReason]

Explanation:

This fault occurs when the RAID backup unit is degraded.

Recommended Action:

If you see this fault, take the following actions:

1. If the fault reason indicates the backup unit is in a relearning cycle, wait for relearning to complete.
2. If the fault reason indicates the backup unit is about to fail, replace the backup unit.
3. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: equipment-degraded
mibFaultCode: F0997
mibFaultName: fltStorageRaidBatteryDegraded
moClass: storage:RaidBattery
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/raid-battery
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/raid-battery
Affected MO: sys/chassis-[id]/storage-[type]-[id]/raid-battery
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/raid-battery
```

fltStorageRaidBatteryRelearnAborted

Fault Code: F0998

Message: RAID Battery on server [chassisId]/[slotId] operability: [operability]. Reason: [operQualifierReason]RAID Battery on server [id] operability: [operability]. Reason: [operQualifierReason]RAID Battery on chassis [id] operability: [operability]. Reason: [operQualifierReason]

Explanation:

NOTE: This fault is not currently implemented by UCSMThis fault is present only as a placeholder, possibly for another release,such as stand-alone rack servers.--- This fault occurs when the backup unit's relearning cycle was aborted.

Recommended Action:

If you see this fault, take the following actions:

1. Retry the learn cycle.
2. Replace the backup unit.

Fault Details

```
Severity: minor
Cause: equipment-degraded
mibFaultCode: F0998
```

```
mibFaultName: fltStorageRaidBatteryRelearnAborted
moClass: storage:RaidBattery
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/raid-battery
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/raid-battery
Affected MO: sys/chassis-[id]/storage-[type]-[id]/raid-battery
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/raid-battery
```

fltStorageRaidBatteryRelearnFailed

Fault Code: F0999

Message: RAID Battery on server [chassisId]/[slotId] operability: [operability]. Reason: [operQualifierReason]RAID Battery on server [id] operability: [operability]. Reason: [operQualifierReason]RAID Battery on chassis [id] operability: [operability]. Reason: [operQualifierReason]

Explanation:

NOTE: This fault is not currently implemented by UCSMThis fault is present only as a placeholder, possibly for another release,such as stand-alone rack servers.--- This fault occurs when the backup unit's relearning cycle has failed.

Recommended Action:

If you see this fault, take the following actions:

1. Retry the learn cycle.
2. Replace the backup unit.

Fault Details

```
Severity: major
Cause: equipment-degraded
mibFaultCode: F0999
mibFaultName: fltStorageRaidBatteryRelearnFailed
moClass: storage:RaidBattery
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/raid-battery
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/raid-battery
Affected MO: sys/chassis-[id]/storage-[type]-[id]/raid-battery
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/raid-battery
```

fltStorageADefConfiguration-error

Fault Code: F1000

Message: Vsan trunking is not supported on Vhbas. Targets with overlapping path should have same vsan.

Explanation:

Under a storage connection policy, storage targets with overlapping path setting should have similar VSAN setting.

Recommended Action:

If you see this fault, take the following action:

1. Under the storage connection policy find out the targets with overlapping path setting. Make sure that same VSAN is applied on these targets.

Fault Details

```
Severity: info
Cause: configuration-error
mibFaultCode: F1000
mibFaultName: fltStorageADefConfigurationError
moClass: storage:ADef
Type: equipment
autoCleared: true
Affected MO: org-[name]/ls-[name]/grp-[name]/fc-group/storage-conndef
Affected MO: org-[name]/san-conn-pol-[name]/grp-[name]/fc-group/storage-conndef
Affected MO: org-[name]/storage-connpolicy-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/grp-[name]/fc-group/storage-conndef
```

fltStorageInitiatorConfiguration-error

Fault Code: F1001

Message: Initiator [name] either cannot be resolved or does not match with one of the storage targets. No zones are deployed for this initiator and the target. Enable FC Zoning to get the zones deployed.

Explanation:

Initiator either cannot be resolved or does not match with one of the targets.

Recommended Action:

If you see this fault, take the following action:

1. Check if vhba interface referenced by this Initiator exsits.
2. Check if switch id or vsan name of the vhba interface referenced by this Initiator matches one of the targets.

Fault Details

```
Severity: warning
Cause: configuration-error
mibFaultCode: F1001
mibFaultName: fltStorageInitiatorConfigurationError
moClass: storage:Initiator
Type: equipment
autoCleared: true
Affected MO: org-[name]/ls-[name]/grp-[name]/ini-[name]
Affected MO: org-[name]/san-conn-pol-[name]/grp-[name]/ini-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/grp-[name]/ini-[name]
```

fltStorageVsanRefVsanUnresolvable

Fault Code: F1002

Message: The named vsan [name] for storage target cannot be resolved

Explanation:

This fault (warning) occurs when a Storage Target's vsan interface (VSAN) is unresolvable. In this case, the default vsan will be used as the operational vsan.

Recommended Action:

This fault will be removed if you perform one of the following actions:

1. Change the vsan reference name to an existing VSAN.
2. Create the named vsan .

Fault Details

```
Severity: warning
Cause: referenced-vsan-unresolvable
mibFaultCode: F1002
mibFaultName: fltStorageVsanRefVsanUnresolvable
moClass: storage:VsanRef
Type: configuration
autoCleared: true
Affected MO: fabric/fc-estc/zone-profile-[name]/zone-[name]/vsan-ref
Affected MO:
org-[name]/ls-[name]/grp-[name]/fc-group/storage-conndef/fc-target-ep-[targetwwpn]/vsan-ref
Affected MO:
org-[name]/san-conn-pol-[name]/grp-[name]/fc-group/storage-conndef/fc-target-ep-[targetwwpn]/vsan-ref
Affected MO: org-[name]/storage-connpolicy-[name]/fc-target-ep-[targetwwpn]/vsan-ref
Affected MO:
org-[name]/tier-[name]/ls-[name]/grp-[name]/fc-group/storage-conndef/fc-target-ep-[targetwwpn]/vsan-ref
```

fltStorageControllerPatrolReadFailed

Fault Code: F1003

Message: Controller [id] on server [chassisId]/[slotId] had a patrol read failure. Reason: [operQualifierReason]Controller [id] on server [id] had a patrol read failure. Reason: [operQualifierReason]Controller [id] on chassis [id] had a patrol read failure. Reason: [operQualifierReason]

Explanation:

NOTE: This fault is not currently implemented by UCSMThis fault is present only as a placeholder, possibly for another release,such as stand-alone rack servers.--- This fault occurs when a Patrol Read operation has failed.

Recommended Action:

Re-run the patrol read operation.

Fault Details

```
Severity: warning
Cause: operation-failed
mibFaultCode: F1003
mibFaultName: fltStorageControllerPatrolReadFailed
moClass: storage:Controller
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]
```

fltStorageControllerInoperable

Fault Code: F1004

Message: Controller [id] on server [chassisId]/[slotId] is inoperable. Reason: [operQualifierReason]Controller [id] on server [id] is inoperable. Reason: [operQualifierReason]Controller [id] on chassis [id] is inoperable. Reason: [operQualifierReason]

Explanation:

This fault occurs when the storage controller is inaccessible.

Recommended Action:

For PCI and mezz-based storage controllers, check the seating of the storage controller. If the problem persists, replace the controller.

Fault Details

```
Severity: critical
Cause: equipment-inoperable
mibFaultCode: F1004
mibFaultName: fltStorageControllerInoperable
moClass: storage:Controller
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]
```

fltStorageLocalDiskRebuildFailed

Fault Code: F1005

Message: Local disk [id] on server [chassisId]/[slotId] operability: [operability]. Reason: [operQualifierReason]Local disk [id] on server [id] operability: [operability]. Reason: [operQualifierReason]Local disk [id] on storage enclosure [id] operability: [operability]. Reason: [operQualifierReason]Local disk [id] on chassis [id] operability: [operability]. Reason: [operQualifierReason]

Explanation:

NOTE: This fault is not currently implemented by UCSMThis fault is present only as a placeholder, possibly for another release,such as stand-alone rack servers.--- This fault occurs when a rebuild operation has failed. This may cause a degradation in performance.

Recommended Action:

If you see this fault, take the following action:

1. Retry the rebuild operation.
2. Replace the disk.

Fault Details

```
Severity: major
Cause: equipment-offline
mibFaultCode: F1005
mibFaultName: fltStorageLocalDiskRebuildFailed
```

moClass: storage:LocalDisk
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]

fltStorageLocalDiskCopybackFailed

Fault Code: F1006

Message: Local disk [id] on server [chassisId]/[slotId] operability: [operability]. Reason: [operQualifierReason]Local disk [id] on server [id] operability: [operability]. Reason: [operQualifierReason]Local disk [id] on storage enclosure [id] operability: [operability]. Reason: [operQualifierReason]Local disk [id] on chassis [id] operability: [operability]. Reason: [operQualifierReason]

Explanation:

NOTE: This fault is not currently implemented by UCSMThis fault is present only as a placeholder, possibly for another release,such as stand-alone rack servers.--- This fault occurs when a copyback operation has failed. This may cause a degradation in performance.

Recommended Action:

If you see this fault, take the following action:

1. Retry the copyback operation.
2. Replace the disk.

Fault Details

Severity: major
Cause: equipment-offline
mibFaultCode: F1006
mibFaultName: fltStorageLocalDiskCopybackFailed
moClass: storage:LocalDisk
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]

```
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]
```

fltStorageVirtualDriveInoperable

Fault Code: F1007

Message: Virtual drive [id] on server [chassisId]/[slotId] operability: [operability]. Reason: [operQualifierReason]Virtual drive [id] on server [id] operability: [operability]. Reason: [operQualifierReason]Virtual drive [id] on chassis [id] operability: [operability]. Reason: [operQualifierReason]

Explanation:

This fault occurs when the virtual drive has become inoperable.

Recommended Action:

If you see this fault, take the following actions:

1. Verify the presence and health of disks that are used by the virtual drive.
2. If applicable, reseat or replace used disks.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: equipment-inoperable
mibFaultCode: F1007
mibFaultName: fltStorageVirtualDriveInoperable
moClass: storage:VirtualDrive
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/vd-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/vd-container-[id]/vd-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/vd-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/vd-container-[id]/vd-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/vd-[id]
Affected MO: sys/chassis-[id]/vd-container-[id]/vd-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/vd-[id]
Affected MO: sys/rack-unit-[id]/vd-container-[id]/vd-[id]
```

fltStorageVirtualDriveDegraded

Fault Code: F1008

Message: Virtual drive [id] on server [chassisId]/[slotId] operability: [operability]. Reason: [operQualifierReason]Virtual drive [id] on server [id] operability: [operability]. Reason: [operQualifierReason]Virtual drive [id] on chassis [id] operability: [operability]. Reason: [operQualifierReason]

Explanation:

This fault occurs when the virtual drive has become degraded. The fault description will contain the physical drive state, which indicates the reason for the degradation.

Recommended Action:

If you see this fault, take the following actions:

1. If the drive is performing a consistency check operation, wait for the operation to complete.
2. Verify the presence and health of disks that are used by the virtual drive.
3. If applicable, reseat or replace used disks.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-degraded
mibFaultCode: F1008
mibFaultName: fltStorageVirtualDriveDegraded
moClass: storage:VirtualDrive
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/vd-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/vd-container-[id]/vd-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/vd-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/vd-container-[id]/vd-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/vd-[id]
Affected MO: sys/chassis-[id]/vd-container-[id]/vd-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/vd-[id]
Affected MO: sys/rack-unit-[id]/vd-container-[id]/vd-[id]
```

fltStorageVirtualDriveReconstructionFailed

Fault Code: F1009

Message: Virtual drive [id] on server [chassisId]/[slotId] operability: [operability]. Reason: [operQualifierReason]Virtual drive [id] on server [id] operability: [operability]. Reason: [operQualifierReason]Virtual drive [id] on chassis [id] operability: [operability]. Reason: [operQualifierReason]

Explanation:

NOTE: This fault is not currently implemented by UCSMThis fault is present only as a placeholder, possibly for another release,such as stand-alone rack servers.--- This fault occurs when a drive reconstruction operation has failed. This may cause a degradation in performance.

Recommended Action:

If you see this fault, take the following action:

1. Retry the reconstruction operation.
2. Delete and recreate the virtual drive.

Fault Details

```
Severity: major
Cause: equipment-degraded
mibFaultCode: F1009
mibFaultName: fltStorageVirtualDriveReconstructionFailed
moClass: storage:VirtualDrive
Type: equipment
```

```
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/vd-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/vd-container-[id]/vd-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/vd-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/vd-container-[id]/vd-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/vd-[id]
Affected MO: sys/chassis-[id]/vd-container-[id]/vd-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/vd-[id]
Affected MO: sys/rack-unit-[id]/vd-container-[id]/vd-[id]
```

fltStorageVirtualDriveConsistencyCheckFailed

Fault Code: F1010

Message: Virtual drive [id] on server [chassisId]/[slotId] operability: [operability]. Reason: [operQualifierReason]Virtual drive [id] on server [id] operability: [operability]. Reason: [operQualifierReason]Virtual drive [id] on chassis [id] operability: [operability]. Reason: [operQualifierReason]

Explanation:

NOTE: This fault is not currently implemented by UCSMThis fault is present only as a placeholder, possibly for another release,such as stand-alone rack servers.--- This fault occurs when a drive consistency check operation has failed. This may cause a degradation in performance.

Recommended Action:

If you see this fault, take the following action:

1. Retry the consistency check operation.
2. Delete and recreate the virtual drive.

Fault Details

```
Severity: major
Cause: equipment-degraded
mibFaultCode: F1010
mibFaultName: fltStorageVirtualDriveConsistencyCheckFailed
moClass: storage:VirtualDrive
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/vd-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/vd-container-[id]/vd-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/vd-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/vd-container-[id]/vd-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/vd-[id]
Affected MO: sys/chassis-[id]/vd-container-[id]/vd-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/vd-[id]
Affected MO: sys/rack-unit-[id]/vd-container-[id]/vd-[id]
```

fltAaaProviderGroupProvidergroup

Fault Code: F1026

Message: For [dn]: Server Group with name [name] already exist, You need to specify a unique name for this object.

Explanation:

This fault typically occurs because Cisco UCS Manager has detected multiple provider-groups with same name.

Recommended Action:

If you see this fault, take the following actions:

1. Need to delete the duplicate provider group configured causing this problem.

Fault Details

```
Severity: major
Cause: provider-group-already-exists
mibFaultCode: F1026
mibFaultName: fltAaaProviderGroupProvidergroup
moClass: aaa:ProviderGroup
Type: security
autoCleared: true
Affected MO: sys/ldap-ext/providergroup-[name]
Affected MO: sys/radius-ext/providergroup-[name]
Affected MO: sys/tacacs-ext/providergroup-[name]
```

fltAaaConfigServergroup

Fault Code: F1027

Message: For [dn]: [realm] Server Group with name [providerGroup] doesn't exist or is not deployed.

Explanation:

This fault typically occurs because Cisco UCS Manager has detected an unsupported authentication method.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that server group configured for authentication is present.
2. If the server group is not configured, create the server group to use for authentication.

Fault Details

```
Severity: critical
Cause: invalid-server-group
mibFaultCode: F1027
mibFaultName: fltAaaConfigServergroup
moClass: aaa:Config
Type: security
autoCleared: true
Affected MO: sys/auth-realm/console-auth
Affected MO: sys/auth-realm/default-auth
Affected MO: sys/auth-realm/domain-[name]/domain-auth
```

fltAaaRoleRoleNotDeployed

Fault Code: F1028

Message: Role [name] can't be deployed. Error: [configStatusMessage]

Explanation:

This fault typically occurs because Cisco UCS Manager has detected an unsupported role.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that total number of roles is less than maximum supported roles.
2. Verify that sum of privileges across all roles is less than maximum privileges sum.

Fault Details

```
Severity: critical
Cause: role-config-error
mibFaultCode: F1028
mibFaultName: fltAaaRoleRoleNotDeployed
moClass: aaa:Role
Type: security
autoCleared: true
Affected MO: sys/user-ext/role-[name]
```

fltAaaLocaleLocaleNotDeployed

Fault Code: F1029

Message: Locale [name] can't be deployed. Error: [configStatusMessage]

Explanation:

This fault typically occurs because Cisco UCS Manager has detected an unsupported locale.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that total number of locale is less than maximum supported roles.

Fault Details

```
Severity: critical
Cause: locale-config-error
mibFaultCode: F1029
mibFaultName: fltAaaLocaleLocaleNotDeployed
moClass: aaa:Locale
Type: security
autoCleared: true
Affected MO: sys/user-ext/locale-[name]
```

fltAaaUserRoleUserRoleNotDeployed

Fault Code: F1030

Message: For user: [name] role [name] can't be assigned. Error: [configStatusMessage].For Ldap Group: [name] role [name] can't be assigned. Error: [configStatusMessage].

Explanation:

This fault typically occurs because Cisco UCS Manager has detected an unsupported user role for ldap groups or local users.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the role is present .
2. Verify that the role is applied .
3. Verify that the role is compatible with locales assigned to ldap group or local user .

Fault Details

```
Severity: critical
Cause: user-role-config-error
mibFaultCode: F1030
mibFaultName: fltAaaUserRoleUserRoleNotDeployed
moClass: aaa:UserRole
Type: security
autoCleared: true
Affected MO: sys/ldap-ext/ldapgroup-[name]/role-[name]
Affected MO: sys/user-ext/remoteuser-[name]/role-[name]
Affected MO: sys/user-ext/user-[name]/role-[name]
```

fltAaaUserLocaleUserLocaleNotDeployed

Fault Code: F1031

Message: For user: [name] locale [name] can't be assigned. Error: [configStatusMessage].For Ldap Group: [name] locale [name] can't be assigned. Error: [configStatusMessage].

Explanation:

This fault typically occurs because Cisco UCS Manager has detected an unsupported user locale for ldap groups or local users.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the locale is present .
2. Verify that the locale is applied .
3. Verify that the locale is compatible with roles assigned to ldap group or local user .

Fault Details

```
Severity: critical
Cause: user-locale-config-error
mibFaultCode: F1031
mibFaultName: fltAaaUserLocaleUserLocaleNotDeployed
moClass: aaa:UserLocale
Type: security
autoCleared: true
Affected MO: sys/ldap-ext/ldapgroup-[name]/locale-[name]
Affected MO: sys/user-ext/remoteuser-[name]/locale-[name]
Affected MO: sys/user-ext/user-[name]/locale-[name]
```

fltPkiKeyRingKeyRingNotDeployed

Fault Code: F1032

Message: Keyring [name] can't be deployed. Error: [configStatusMessage]

Explanation:

This fault typically occurs because Cisco UCS Manager has detected an invalid Keyring.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the trust point configured for this keyring is present .
2. Verify that the trust point found above is applied .

Fault Details

```
Severity: critical
Cause: keyring-config-error
mibFaultCode: F1032
mibFaultName: fltPkiKeyRingKeyRingNotDeployed
moClass: pki:KeyRing
Type: security
autoCleared: true
Affected MO: sys/pki-ext/keyring-[name]
```

fltCommSnmpSyscontactEmpty

Fault Code: F1033

Message: UCS Manager cannot deploy an empty value of SNMP Syscontact when Callhome is enabled. The previous value [sysContact] for SNMP Syscontact has been retained.

Explanation:

This fault typically occurs when UCS Manager receives an invalid configuration from UCS Central wherein SNMP Syscontact is set to empty when Callhome is enabled.

Recommended Action:

If you see this fault, please ensure that the SNMP Syscontact field on UCS Central is configured correctly for the domain group corresponding to this UCSM.

Fault Details

```
Severity: warning
Cause: snmp-config-error
mibFaultCode: F1033
mibFaultName: fltCommSnmpSyscontactEmpty
moClass: comm:Snmp
Type: configuration
autoCleared: true
Affected MO: sys/svc-ext/snmp-svc
```

fltCommDateTimeCommTimeZoneInvalid

Fault Code: F1034

Message: Timezone:[timezone] is invalid

Explanation:

This fault typically occurs because Cisco UCS Manager has detected an unsupported role.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that total number of roles is less than maximum supported roles.
2. Verify that sum of privileges across all roles is less than maximum privileges sum.

Fault Details

```
Severity: minor
Cause: timezone-file-not-exists
mibFaultCode: F1034
mibFaultName: fltCommDateTimeCommTimeZoneInvalid
moClass: comm:DateTime
Type: configuration
autoCleared: true
Affected MO: org-[name]/comm-pol-[name]/datetime-svc
Affected MO: sys/svc-ext/datetime-svc
```

fltAaaUserLocalUserNotDeployed

Fault Code: F1035

Message: Local User [name] can't be deployed. Error: [configStatusMessage]

Explanation:

This fault typically occurs because Cisco UCS Manager has detected an invalid system user.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that local user name is not used by snmp users.

Fault Details

```
Severity: major
Cause: user-config-error
mibFaultCode: F1035
mibFaultName: fltAaaUserLocalUserNotDeployed
moClass: aaa:User
Type: security
autoCleared: true
Affected MO: sys/user-ext/user-[name]
```

fltCommSnmpUserSnmpUserNotDeployed

Fault Code: F1036

Message: SNMP User [name] can't be deployed. Error: [configStatusMessage]

Explanation:

This fault typically occurs because Cisco UCS Manager has detected an invalid snmp user.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that snmp user name is not used by system users.
2. Verify that authentication type is not MD5.
3. Verify that AES is enabled.

Fault Details

```
Severity: major
Cause: snmp-user-config-error
mibFaultCode: F1036
mibFaultName: fltCommSnmpUserSnmpUserNotDeployed
moClass: comm:SnmpUser
Type: configuration
autoCleared: true
Affected MO: sys/svc-ext/snmp-svc/snmpv3-user-[name]
```

fltCommSvcEpCommSvcNotDeployed

Fault Code: F1037

Message: Communication Service configuration can't be deployed. Error: [configStatusMessage]

Explanation:

This fault typically occurs because Cisco UCS Manager has detected an invalid communication policy confiuration.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that ports configured across all communication services is unique.

Fault Details

```
Severity: major
Cause: comm-svc-config-error
mibFaultCode: F1037
mibFaultName: fltCommSvcEpCommSvcNotDeployed
moClass: comm:SvcEp
Type: configuration
autoCleared: true
Affected MO: sys/svc-ext
```

fltComputeABoardPowerUsageProblem

Fault Code: F1040

Message: Motherboard [faultQualifier] of server [chassisId]/[slotId] (service profile: [assignedToDn]) powerUsage: [powerUsage]Motherboard of server [id] (service profile: [assignedToDn]) powerUsage: [powerUsage]Motherboard [faultQualifier] of server [chassisId]/[slotId]/[serverInstanceId] (service profile: [assignedToDn]) powerUsage: [powerUsage]

Explanation:

This fault typically occurs when the motherboard power consumption exceeds certain threshold limits. At that time the power usage sensors on a server detect a problem.

Recommended Action:

If you see this fault, take the following actions:

1. Create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: power-problem
mibFaultCode: F1040
mibFaultName: fltComputeABoardPowerUsageProblem
moClass: compute:ABoard
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]
Affected MO: sys/rack-unit-[id]/board
Affected MO: sys/rack-unit-[id]/ext-board-[id]
```

fltSwVlanPortNsVLANCompNotSupport

Fault Code: F1056

Message: VLAN Port Count Optimization is not supported

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: no-vlan-optimization
mibFaultCode: F1056
mibFaultName: fltSwVlanPortNsVLANCompNotSupport
moClass: sw:VlanPortNs
Type: network
autoCleared: true
Affected MO: sys/switch-[id]/vlan-port-ns
```

fltPolicyControlEpSuspendModeActive

Fault Code: F1057

Message: UCSM is suspended from receiving updates from UCS Central.

Explanation:

This fault occurs when UCSM enters into suspend state from receiving updates from UCS Central that it is registered with.

Recommended Action:

If you see this fault, take the following actions:

1. Please check if UCS Central is restored to a previous version or a policy roll-back has occured. You may have brought UCS in to manual suspension mode by using **set suspendstate on** command under the system->control-ep policy scope.
2. Please confirm the suspend state by using **show control-ep policy detail** under system scope. If you still want to receive the updates from UCS Central, you need to restore it back to a version compatible with UCSM or set the suspend state to off by acknowledging it by using **set ackstate acked** under policy-control scope.
3. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: suspend-mode-entered
mibFaultCode: F1057
mibFaultName: fltPolicyControlEpSuspendModeActive
moClass: policy:ControlEp
Type: management
autoCleared: true
Affected MO: sys/control-ep-[type]
```

fltNetworkElementThermalThresholdCritical

Fault Code: F1080

Message: Fabric Interconnect [id] temperature: [thermal]

Explanation:

This fault occurs when the temperature of a Fabric Interconnect exceeds a critical threshold value. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the Fabric Interconnect.
2. Review the Cisco UCS Site Preparation Guide to ensure the Fabric Interconnects have adequate airflow, including front and back clearance.
3. Verify that the air flows are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
6. Replace faulty Fabric Interconnects.

7. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: thermal-problem
mibFaultCode: F1080
mibFaultName: fltNetworkElementThermalThresholdCritical
moClass: network:Element
Type: environmental
autoCleared: true
Affected MO: sys/switch-[id]
```

fltFabricFcoeSanPcEpDown

Fault Code: F1081

Message: [type] Member [slotId]/[aggrPortId]/[portId] of Port-Channel [portId] on fabric interconnect [id] is down, membership: [membership][type] Member [slotId]/[portId] of Port-Channel [portId] on fabric interconnect [id] is down, membership: [membership]

Explanation:

This fault typically occurs when a member port in a FCoE uplink port channel is down.

Recommended Action:

If you see this fault, take the following action:

1. Check the link connectivity on the upstream switch
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: membership-down
mibFaultCode: F1081
mibFaultName: fltFabricFcoeSanPcEpDown
moClass: fabric:FcoeSanPcEp
Type: network
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
```

fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]

fltFabricFcoeSanEpDown

Fault Code: F1082

Message: FCoE uplink port [slotId]/[aggrPortId]/[portId] is downFCoE uplink port [slotId]/[portId] is down

Explanation:

This fault typically occurs when a Fcoe uplink port is down.

Recommended Action:

If you see this fault, take the following action:

1. Check the link connectivity on the upstream switch
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

Severity: major
Cause: membership-down
mibFaultCode: F1082
mibFaultName: fltFabricFcoeSanEpDown
moClass: fabric:FcoeSanEp
Type: network
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]

fltFabricVsanMembershipDown

Fault Code: F1083

Message: FCoE or FC uplink is down on Vsan [vsanId]

Explanation:

This fault occurs when a particular vsan member of an FCoE uplink is down.

Recommended Action:

If you see this fault, take the following action:

1. Check if the vsan is created at the peer switch and check the link connectivity on the upstream switch
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: membership-down
mibFaultCode: F1083
mibFaultName: fltFabricVsanMembershipDown
moClass: fabric:VsanMembership
Type: network
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
```

fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO: fabric/san/[id]/pc-[portId]/vsanmember-[vsanId]
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO: fabric/san/[id]/phys-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]/vsanmember-[vsanId]

fltFabricFcoeSanEpUnsupported

Fault Code: F1084

Message: FCoE uplink port [slotId]/[aggrPortId]/[portId] cannot be supported on springfields when FI is in eth endhost mode and FC switching modeFCoE uplink port [slotId]/[portId] cannot be supported on springfields when FI is in eth endhost mode and FC switching mode

Explanation:

This fault typically occurs when a Fcoe uplink port cannot be supported on a specific FI platform .

Recommended Action:

If you see this fault, take the following action:

1. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

Severity: major
Cause: fcoe-uplink-unsupported-fi-settings
mibFaultCode: F1084
mibFaultName: fltFabricFcoeSanEpUnsupported
moClass: fabric:FcoeSanEp
Type: network
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]

fltFabricFcoeSanPcDown

Fault Code: F1085

Message: FCoE uplink port channel [portId] is down

Explanation:

This fault typically occurs when a Fcoe uplink port channel is down.

Recommended Action:

If you see this fault, take the following action:

1. Check the link connectivity on the upstream switch
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

Severity: major
Cause: membership-down
mibFaultCode: F1085
mibFaultName: fltFabricFcoeSanPcDown
moClass: fabric:FcoeSanPc
Type: network

```
autoCleared: true
Affected MO: fabric/san/[id]/fcoesanpc-[portId]
```

fltFabricFcoeSanPcUnsupported

Fault Code: F1086

Message: FCoE uplink port channel [portId] cannot be supported on springfields when FI is in eth endhost mode and FC switching mode

Explanation:

This fault typically occurs when a Fcoe uplink port cannot be supported on a specific FI platform .

Recommended Action:

If you see this fault, take the following action:

1. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: fcoe-uplink-port-channel-unsupported-fi-settings
mibFaultCode: F1086
mibFaultName: fltFabricFcoeSanPcUnsupported
moClass: fabric:FcoeSanPc
Type: network
autoCleared: true
Affected MO: fabric/san/[id]/fcoesanpc-[portId]
```

fltFabricFcoeEstcEpDown

Fault Code: F1087

Message: FCoE storage port [slotId]/[aggrPortId]/[portId] is downFCoE storage port [slotId]/[portId] is down

Explanation:

This fault typically occurs when a Fcoe storage port is down.

Recommended Action:

If you see this fault, take the following action:

1. Check the link connectivity on the upstream switch
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: membership-down
mibFaultCode: F1087
mibFaultName: fltFabricFcoeEstcEpDown
moClass: fabric:FcoeEstcEp
Type: network
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
```

fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]

fltFabricPinTargetDown

Fault Code: F1088

Message: Pin target is a non-existent interface

Explanation:

This fault typically occurs when a PinGroup has an unresolvable target.

Recommended Action:

If you see this fault, take the following action:

1. Check whether the PinGroup target is correctly provisioned.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

Severity: warning
Cause: invalid-target
mibFaultCode: F1088
mibFaultName: fltFabricPinTargetDown
moClass: fabric:PinTarget
Type: network
autoCleared: true
Affected MO: fabric/lan/lan-pin-group-[name]/target-[fabricId]
Affected MO: fabric/san/san-pin-group-[name]/target-[fabricId]

fltFabricExternalEpFcZoningEnable

Fault Code: F1089

Message: FC zoning is not supported from FI when connected to an uplink FC switch. Fabric: [switchId], Port: [slotId]/[portId].

Explanation:

This fault occurs when FC zoning is enabled from FI and at the same time FI is connected to an uplink FC switch.

Recommended Action:

FC zones should be configured either from UCSM or from the uplink FC switch. Disable FC zoning from UCSM or disconnect the uplink switch for clearing this fault.

Fault Details

Severity: warning
Cause: fc-zoning-enabled
mibFaultCode: F1089
mibFaultName: fltFabricExternalEpFcZoningEnable
moClass: fabric:ExternalEp
Type: management
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/eth-estc/[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]
Affected MO: fabric/eth-estc/[id]/pc-[portId]/eth-target-ep-[name]
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO: fabric/eth-estc/[id]/phys-eth-slot-[slotId]-port-[portId]
Affected MO: fabric/eth-estc/[id]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:

fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO: fabric/eth-estc/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/net-[name]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/fc-estc/[id]/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/fc-estc/[id]/phys-fc-slot-[slotId]-port-[portId]
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO: fabric/fc-estc/net-[name]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/fc-estc/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/lan/[id]/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/net-group-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/net-group-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/net-group-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/lan/[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]

Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO: fabric/lan/[id]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO: fabric/lan/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/lan/net-group-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/net-group-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/net-group-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/lanmon/[id]/eth-mon-[name]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]

Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/net-[name]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/san/[id]/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/san/[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO: fabric/san/[id]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO: fabric/san/net-[name]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/san/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/net-[name]/sw-[switchId]-slot-[slotId]-aggr-port-[aggrPortId]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/sanmon/[id]/fc-mon-[name]/dest-slot-[slotId]-port-[portId]

Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
sys/switch-[id]/access-eth/slot-[slotId]-aggr-port-[aggrPortId]/ethestc-ep-slot-[slotId]port-[portId]/eth-target-[name]
Affected MO:
sys/switch-[id]/border-eth/ethestc-ep-slot-[slotId]port-[portId]/eth-target-[name]
Affected MO: sys/switch-[id]/border-eth/pc-[portId]/eth-target-[name]
Affected MO:
sys/switch-[id]/border-eth/slot-[slotId]-aggr-port-[aggrPortId]/ethestc-ep-slot-[slotId]port-[portId]/eth-target-[name]
Affected MO:
sys/switch-[id]/border-fc/slot-[slotId]-aggr-port-[aggrPortId]/ethestc-ep-slot-[slotId]port-[portId]/eth-target-[name]

Affected MO: sys/switch-[id]/lanmon-eth/mon-[name]/pc-[portId]/eth-target-[name]
Affected MO:
sys/switch-[id]/lanmon-eth/mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/ethestc-ep-slot-[slotId]port-[portId]/eth-target-[name]
Affected MO:
sys/switch-[id]/phys/slot-[slotId]-aggr-port-[aggrPortId]/ethestc-ep-slot-[slotId]port-[portId]/eth-target-[name]
Affected MO:
sys/switch-[id]/sanmon-fc/mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/ethestc-ep-slot-[slotId]port-[portId]/eth-target-[name]

fltFabricEthLanEpOverlapping-vlan

Fault Code: F1090

Message: On Fabric: [switchId], Port: [slotId]/[aggrPortId]/[portId] following overlapping VLANs detected: [overlappingVlans]On Fabric: [switchId], Port: [slotId]/[portId] following overlapping VLANs detected: [overlappingVlans]

Explanation:

This fault occurs when Overlapping Vlans occur due to mis configuration.

Recommended Action:

Ports configured on Vlans belonging to a group should not intersect with other ports of different network group belonging to Vlans which overlap .

Fault Details

Severity: info
Cause: configuration-error
mibFaultCode: F1090
mibFaultName: fltFabricEthLanEpOverlappingVlan
moClass: fabric:EthLanEp
Type: network
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO: fabric/lan/[id]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]

fltFabricEthLanPcOverlapping-vlan

Fault Code: F1091

Message: Overlapping VLANs detected on Fabric: [switchId], Port: [portId] in configured VLANs: [overlappingVlans]

Explanation:

This fault occurs when Overlapping Vlans occur due to mis configuration.

Recommended Action:

Ports configured on Vlans belonging to a group should not intersect with other ports of different network group belonging to Vlans which overlap .

Fault Details

```
Severity: info
Cause: configuration-error
mibFaultCode: F1091
mibFaultName: fltFabricEthLanPcOverlappingVlan
moClass: fabric:EthLanPc
Type: network
autoCleared: true
Affected MO: fabric/lan/[id]/pc-[portId]
```

fltFabricFcEstcEpFc-storage-port-invalid

Fault Code: F1092

Message: FC storage port should not be created in NPV mode

Explanation:

This fault typically occurs when a FC Storage port is created in NPV mode

Recommended Action:

FC Storage ports should not be created in NPV mode.

Fault Details

```
Severity: minor
Cause: fc-storageport-npv-mode
mibFaultCode: F1092
mibFaultName: fltFabricFcEstcEpFcStoragePortInvalid
moClass: fabric:FcEstcEp
Type: network
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO: fabric/fc-estc/[id]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
```

fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fc-slot-[slotId]-port-[portId]

fltFabricFcoeEstcEpFcoe-storage-port-invalid

Fault Code: F1093

Message: FCOE storage port should not be created in NPV mode

Explanation:

This fault typically occurs when a FCOE Storage port is created in NPV mode

Recommended Action:

FCOE Storage ports should not be created in NPV mode.

Fault Details

Severity: minor
Cause: fcoe-storageport-npv-mode
mibFaultCode: F1093
mibFaultName: fltFabricFcoeEstcEpFcoeStoragePortInvalid
moClass: fabric:FcoeEstcEp
Type: network
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:

```
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]
```

fltFabricFcSanPcFc-portchannel-members-invalid

Fault Code: F1094

Message: FC port channel member ports should have same max speed

Explanation:

This fault typically occurs when admin speed of FC PortChannel is Auto while its member ports having different max speeds

Recommended Action:

When FC PortChannel admin speed is set to Auto, member ports should have same max speed

Fault Details

```
Severity: major
Cause: fc-portchannel-members-inconsistent-speed
mibFaultCode: F1094
mibFaultName: fltFabricFcSanPcFcPortchannelMembersInvalid
moClass: fabric:FcSanPc
Type: network
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]
```

fltFabricVlanMisconfigured-mcast-policy

Fault Code: F1095

Message: VLAN [name] multicast policy [mcastPolicyName] is non-default.

Explanation:

This fault is raised when VLAN belonging to a Springfield fabric has a non-default multicast policy assigned to it.

Recommended Action:

If you see this fault, take the following action:

1. Un-assign multicast policy for the this vlan or change the multicast policy to default.
2. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: vlan-mcast-policy-misconfigured
mibFaultCode: F1095
mibFaultName: fltFabricVlanMisconfiguredMcastPolicy
moClass: fabric:Vlan
Type: network
autoCleared: true
Affected MO: fabric/eth-estc/[id]/net-[name]
Affected MO: fabric/eth-estc/net-[name]
Affected MO: fabric/lan/[id]/net-[name]
Affected MO: fabric/lan/net-[name]
```

fltMgmtConnectionDisabled

Fault Code: F1097

Message: Management Connection [type] in server [id] is not operational

Explanation:

This fault occurs when multiple management connections are acknowledegd.

Recommended Action:

If you see this fault, take the following actions:

1. Disable the management connection which is unused.
2. If new management connection needs to be used, decommission and recommission server.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: another-connection-already-enabled
mibFaultCode: F1097
mibFaultName: fltMgmtConnectionDisabled
moClass: mgmt:Connection
Type: operational
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/boardController/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/mgmt-connection-[type]
```

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/fex-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/switch-[id]/mgmt/mgmt-connection-[type]

fltMgmtConnectionUnused

Fault Code: F1098

Message: Management Connection [type] in server [id] is unused

Explanation:

This fault occurs when a management connection is not enabel

Recommended Action:

If you see this fault, you can enable the connection if none of the management connections are enabled. Else this can be ignored

Fault Details

Severity: info

Cause: connection-unused
mibFaultCode: F1098
mibFaultName: fltMgmtConnectionUnused
moClass: mgmt:Connection
Type: operational
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/boardController/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/mgmt-connection-[type]

Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/fex-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/switch-[id]/mgmt/mgmt-connection-[type]

fltMgmtConnectionUnsupportedConnectivity

Fault Code: F1099

Message: Unsupported connectivity for management connection [type] in server [id]

Explanation:

This fault typically occurs because Cisco UCS Manager has detected that the physical connectivity of the management port of the server is unsupported.

Recommended Action:

If you see this fault, take the following actions:

1. Connect the management port/s of the rack mount server to the Fabric Extender/s
2. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

Severity: minor
Cause: unsupported-connectivity
mibFaultCode: F1099
mibFaultName: fltMgmtConnectionUnsupportedConnectivity
moClass: mgmt:Connection
Type: operational
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/mgmt-connection-[type]

Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/boardController/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/fex-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/mgmt-connection-[type]

```
Affected MO: sys/rack-unit-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/switch-[id]/mgmt/mgmt-connection-[type]
```

fltCallhomeEpNoSnmpPolicyForCallhome

Fault Code: F1102

Message: UCS Manager cannot apply Callhome policy if SNMP Policy is not configured or if SNMP Syscontact has an empty value. The Callhome policy from UCS Central has not been applied.

Explanation:

This fault typically occurs when UCS Manager receives an invalid configuration from UCS Central wherein Callhome is configured on UCS Central but there is no SNMP Syscontact defined locally.

Recommended Action:

If you see this fault, please ensure that the SNMP Policy is configured on UCSM Manager, either locally or via UCS Central.

Fault Details

```
Severity: minor
Cause: callhome-config-error
mibFaultCode: F1102
mibFaultName: fltCallhomeEpNoSnmpPolicyForCallhome
moClass: callhome:Ep
Type: configuration
autoCleared: true
Affected MO: call-home
```

fltCapabilityCatalogueLoadErrors

Fault Code: F1103

Message: Load errors: File parse errors: [fileParseFailures], provider load failures: [providerLoadFailures], XML element load errors: [loadErrors].

Explanation:

The capability catalog failed to load fully. This may be caused by either a faulty UCSM image or a faulty catalog image.

Recommended Action:

If you see this fault, take the following actions:

1. Check the version of the capability catalog.
2. Contact Cisco TAC to see if there are known issues with the catalog and if there is a catalog image that will fix the known issues.

Fault Details

```
Severity: major
Cause: load-catalog-failed
mibFaultCode: F1103
mibFaultName: fltCapabilityCatalogueLoadErrors
moClass: capability:Catalogue
Type: management
```

```
autoCleared: true
Affected MO: capabilities
```

fltExtmgmtArpTargetsArpTargetsNotValid

Fault Code: F1114

Message: Invalid ARP Targets configured for Management Interface Polling. Error: [configStatusMessage]

Explanation:

This fault typically occurs because Cisco UCS Manager has detected an invalid ArpTargets Configuration.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that Arp target ip address and external management ip address are in the same subnet.
2. Verify that Arp target ip address is not the same as ip address of this system's fabric-interconnects.
3. Verify that Arp target ip address is not the same as virtual IP Address.

Fault Details

```
Severity: major
Cause: arp-targets-config-error
mibFaultCode: F1114
mibFaultName: fltExtmgmtArpTargetsArpTargetsNotValid
moClass: extmgmt:ArpTargets
Type: management
autoCleared: true
Affected MO: sys/extmgmt-intf-monitor-policy/arp-target-policy
```

fltVnicFcPinningMisconfig

Fault Code: F1209

Message: Hard pinning target for vHBA [name], service profile [name] is missing or misconfigured

Explanation:

This fault occurs when one or more vNIC target uplink ports or port channels for a hard-pinned SAN pin group are either missing or misconfigured as the wrong port type.

Recommended Action:

If you see this fault, take the following actions:

1. Review the SAN pin group configuration.
2. Correct the configuration of the port and port channels in the pin group.
3. Ensure that all required vSANs are allowed on the target ports or port channels.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: pinning-misconfig
```

```
mibFaultCode: F1209
mibFaultName: fltVnicFcPinningMisconfig
moClass: vnic:Fc
Type: configuration
autoCleared: true
Affected MO: org-[name]/ls-[name]/fc-[name]
Affected MO: org-[name]/san-conn-pol-[name]/fc-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/fc-[name]
```

fltExtpolClientGracePeriodWarning

Fault Code: F1211

Message: UCS domain [name] registered with UCS Central has entered into the grace period.

Explanation:

A UCS domain is registered with UCS Central without having a license. This fault typically occurs if this UCS domain is registered with UCS Central after all default (and procured) licenses are assigned to other UCS domains.

Recommended Action:

If you see this fault, take the following actions:

1. Check the number of licenses installed and consumed on UCS Central. In the Cisco UCS Central GUI, you can access the licensing information from the Operations Management tab for the UCS Central. In the Cisco UCS Central CLI, you can access the licensing information by entering the **show usage detail** command under license scope from **service-reg** session.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: license-graceperiod-entered
mibFaultCode: F1211
mibFaultName: fltExtpolClientGracePeriodWarning
moClass: extpol:Client
Type: management
autoCleared: true
Affected MO: extpol/reg/clients/client-[id]
```

fltExtpolClientGracePeriodWarning2

Fault Code: F1212

Message: UCS Domain [name] registered with UCS Central is running in the grace period for more than 10 days

Explanation:

This UCS domain is registered with UCS Central without having a license. This fault typically occurs if this UCS domain is registered with UCS Central after all default (and procured) licenses are assigned to other UCS domains.

Recommended Action:

If you see this fault, take the following actions:

1. Check the number of licenses installed and consumed on UCS Central. In the Cisco UCS Central GUI, you can access the licensing information from the Operations Management tab for the UCS Central. In the Cisco UCS Central CLI, you can access the licensing information by entering the **show usage detail** command under the license scope.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: license-graceperiod-10days
mibFaultCode: F1212
mibFaultName: fltExtpolClientGracePeriodWarning2
moClass: extpol:Client
Type: management
autoCleared: true
Affected MO: extpol/reg/clients/client-[id]
```

fltExtpolClientGracePeriodWarning3

Fault Code: F1213

Message: UCS Domain [name] registered with UCS Central is running in the grace period for more than 30 days

Explanation:

This UCS Domain registered with UCS Central has been running in the grace period for more than 30 days. This fault typically occurs if this UCS domain is registered with UCS Central after all default (and procured) licenses are assigned to other UCS domains and the unlicensed UCS Domains have been running for more than 120 days.

Recommended Action:

If you see this fault, take the following actions:

1. Check the number of licenses installed and consumed on UCS Central. In the Cisco UCS Manager GUI, you can access the licensing information from the Operations Management tab for the UCS Central. In the Cisco UCS Central CLI, you can access the licensing information by entering the **show usage detail** command under the license scope.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: license-graceperiod-30days
mibFaultCode: F1213
mibFaultName: fltExtpolClientGracePeriodWarning3
moClass: extpol:Client
Type: management
autoCleared: true
Affected MO: extpol/reg/clients/client-[id]
```

fltExtpolClientGracePeriodWarning4

Fault Code: F1214

Message: UCS Domain [name] registered with UCS Central is running in the grace period for more than 60 days

Explanation:

This UCS Domain registered with UCS Central has been running in the grace period for more than 60 days. This fault typically occurs if this UCS domain is registered with UCS Central after all default (and procured) licenses are assigned to other UCS domains and the unlicensed UCS Domains have been running for more than 60 days.

Recommended Action:

If you see this fault, take the following actions:

1. Check the number of licenses installed and consumed on UCS Central. In the Cisco UCS Central GUI, you can access the licensing information from the Operations Management tab for the UCS Central. In the Cisco UCS Central CLI, you can access the licensing information by entering the **show usage detail** command under the license scope.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: license-graceperiod-60days
mibFaultCode: F1214
mibFaultName: fltExtpolClientGracePeriodWarning4
moClass: extpol:Client
Type: management
autoCleared: true
Affected MO: extpol/reg/clients/client-[id]
```

fltExtpolClientGracePeriodWarning5

Fault Code: F1215

Message: UCS Domain [name] registered with UCS Central is running in the grace period for more than 90 days

Explanation:

This UCS Domain registered with UCS Central has been running in the grace period for more than 90 days. This fault typically occurs if this UCS domains is registered with UCS Central after all default (and procured) licenses are assigned to other UCS domains and the unlicensed UCS Domains have been running for more than 90 days.

Recommended Action:

If you see this fault, take the following actions:

1. Check the number of licenses installed and consumed by UCS Central. In the Cisco UCS Central GUI, you can access the licensing information from the Operations Management tab for the UCS Central. In the Cisco UCS Central CLI, you can access the licensing information by entering the **show usage detail** command under the license scope.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: license-graceperiod-90days
mibFaultCode: F1215
mibFaultName: fltExtpolClientGracePeriodWarning5
moClass: extpol:Client
Type: management
autoCleared: true
Affected MO: extpol/reg/clients/client-[id]
```

fltExtpolClientGracePeriodWarning6

Fault Code: F1216

Message: UCS Domain [name] registered with UCS Central is running in the grace period for more than 119 days

Explanation:

This UCS Domain registered with UCS Central has been running in the grace period for more than 119 days. This fault typically occurs if this UCS domain is registered with UCS Central after all default (and procured) licenses are assigned to other UCS domains and the unlicensed UCS Domains have been running for more than 119 days.

Recommended Action:

If you see this fault, take the following actions:

1. Check the number of licenses installed and consumed on UCS Central. In the Cisco UCS Central GUI, you can access the licensing information from the Operations Management tab for UCS Central. In the Cisco UCS Central CLI, you can access the licensing information by entering the **show usage detail** command under the license scope.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: license-graceperiod-119days
mibFaultCode: F1216
mibFaultName: fltExtpolClientGracePeriodWarning6
moClass: extpol:Client
Type: management
autoCleared: true
Affected MO: extpol/reg/clients/client-[id]
```

fltExtpolClientGracePeriodWarning7

Fault Code: F1217

Message: Grace period for UCS Domain [name] registered with UCS Central has expired. Please acquire a license for the same.

Explanation:

This UCS Domain registered with UCS Central has been running in the grace period for more than 120 days. UCS domains are registered with UCS Central after all default (and procured) licenses are assigned to other UCS domains and the unlicensed UCS Domains have been running for more than 120 days. At this stage, the system licensing state is set to expired.

Recommended Action:

If you see this fault, take the following actions:

1. Check the number of licenses installed and consumed on UCS Central. In the Cisco UCS Central GUI, you can access the licensing information from the Operations Management tab for UCS Central. In the Cisco UCS Central CLI, you can access the licensing information by entering the **show usage detail** command under the license scope.
2. Disable the unlicensed UCS Domains to bring the number of enabled Domains down to the number of total licenses.
3. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC immediately to procure more licenses.

Fault Details

```
Severity: critical
Cause: license-graceperiod-expired
mibFaultCode: F1217
mibFaultName: fltExtpolClientGracePeriodWarning7
moClass: extpol:Client
Type: management
autoCleared: true
Affected MO: extpol/reg/clients/client-[id]
```

fltExtpolClientGracePeriodWarning1

Fault Code: F1218

Message: UCS Domain [name] is registered with UCS Central without a valid license.

Explanation:

This UCS domain is registered with UCS Central without having a license. This fault typically occurs if this UCS domain is registered with UCS Central without the initial activation license and after all default licenses are assigned to other UCS domains.

Recommended Action:

If you see this fault, take the following actions:

1. Check if the initial activation license is installed on UCS Central. In the Cisco UCS Central GUI, you can access the licensing information from the Operations Management tab for UCS Central. In the Cisco UCS Central CLI, you can access the licensing information by entering the **show usage detail** command under the license scope.
2. Disable the unlicensed UCS Domains to bring the number of enabled Domains down to the number of total licenses.
3. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC immediately to procure more licenses.

Fault Details

```
Severity: critical
Cause: license-insufficient
mibFaultCode: F1218
mibFaultName: fltExtpolClientGracePeriodWarning1
```

```
moClass: extpol:Client
Type: management
autoCleared: true
Affected MO: extpol/reg/clients/client-[id]
```

fltStorageItemFilesystemIssues

Fault Code: F1219

Message: Partition [name] on fabric interconnect [id] has file system errors

Explanation:

This fault occurs when the partition develops faults

Recommended Action:

If you see this fault, take the following actions:

1. Create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-degraded
mibFaultCode: F1219
mibFaultName: fltStorageItemFilesystemIssues
moClass: storage:Item
Type: equipment
autoCleared: true
Affected MO: sys/switch-[id]/stor-part-[name]
```

fltStorageInitiatorDuplicate-fc-zone

Fault Code: F1220

Message: Duplicate FC zones are created for initiator [name], because the same target wwpn [duplicateTarget] is duplicately configured in both boot and storage connection policy.

Explanation:

Duplicate FC zones are created, because the same target wwpn is duplicately configured in both boot and storage connection policy.

Recommended Action:

If you see this fault, take the following action:

1. Remove the duplicate target wwpn from either boot policy or storage connection policy.

Fault Details

```
Severity: info
Cause: configuration-error
mibFaultCode: F1220
mibFaultName: fltStorageInitiatorDuplicateFcZone
moClass: storage:Initiator
Type: configuration
autoCleared: true
Affected MO: org-[name]/ls-[name]/grp-[name]/ini-[name]
```

```
Affected MO: org-[name]/san-conn-pol-[name]/grp-[name]/ini-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/grp-[name]/ini-[name]
```

fltStorageIniGroupSwitch-mode-disabled

Fault Code: F1221

Message: FC zones cannot be deployed because FI is not running in FC switch mode.

Explanation:

FC zones cannot be deployed because FI is not running in FC switch mode.

Recommended Action:

If you see this fault, take the following action:

1. If you want FC zones to be deployed, enable FC switch mode.
2. If FI is running FC end-host mode and you want this fault to be cleared, remove initiators from the initiator group.

Fault Details

```
Severity: warning
Cause: configuration-error
mibFaultCode: F1221
mibFaultName: fltStorageIniGroupSwitchModeDisabled
moClass: storage:IniGroup
Type: configuration
autoCleared: true
Affected MO: org-[name]/ls-[name]/grp-[name]
Affected MO: org-[name]/san-conn-pol-[name]/grp-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/grp-[name]
```

fltPkiKeyRingModulus

Fault Code: F1222

Message: [name] Keyring's key modulus is invalid.

Explanation:

This fault occurs when keyring is created without modulus set.

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: invalid-keyring-modulus
mibFaultCode: F1222
mibFaultName: fltPkiKeyRingModulus
moClass: pki:KeyRing
Type: security
autoCleared: true
Affected MO: sys/pki-ext/keyring-[name]
```

fltAaaOrgLocaleOrgNotPresent

Fault Code: F1223

Message: Locale Org [name] can't be deployed. Error: [configStatusMessage]

Explanation:

This fault typically occurs because Cisco UCS Manager has detected an unidentified org reference.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the org dn referenced in this Org is exists, if not create the same.

Fault Details

```
Severity: warning
Cause: locale-org-config-error
mibFaultCode: F1223
mibFaultName: fltAaaOrgLocaleOrgNotPresent
moClass: aaa:Org
Type: security
autoCleared: true
Affected MO: sys/user-ext/locale-[name]/org-[name]
```

fltNetworkOperLevelExtraprimaryvlans

Fault Code: F1229

Message: Fabric Interconnect [id]: Number of primary vlans exceeds the max limit on the FI: Number of Primary Vlans: [primaryVlanCount] and Max primary vlans allowed: [maxPrimaryVlanCount]

Explanation:

This fault occurs when the fabric interconnect has more number of primary vlans than what is supported.

Recommended Action:

If you see this fault, take the following actions:

1. It is recommended that operator should delete the extra primary vlans than are there in the FI. System may appear to be normally functioning even with these extra primary vlans in place. However there may be performance issues observed as the system is operating above the recommended scale limits..
2. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: extra-primary-vlans
mibFaultCode: F1229
mibFaultName: fltNetworkOperLevelExtraprimaryvlans
moClass: network:OperLevel
Type: equipment
autoCleared: true
Affected MO: sys/switch-[id]/oper-level
```

fltEquipmentHealthLedCriticalError

Fault Code: F1236

Message: [dn] shows error. Reason [healthLedStateQualifier]

Explanation:

This fault is raised Blade LED changes to amber blinking

Recommended Action:

If you see this fault, take the following actions:

1. Read fault summary and determine course of action.

Fault Details

```
Severity: critical
Cause: health-led-amber-blinking
mibFaultCode: F1236
mibFaultName: fltEquipmentHealthLedCriticalError
moClass: equipment:HealthLed
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/health-led
Affected MO: sys/chassis-[id]/blade-[slotId]/health-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/health-led
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/health-led
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/health-led
Affected MO: sys/chassis-[id]/health-led
Affected MO: sys/chassis-[id]/psu-[id]/health-led
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/health-led
Affected MO: sys/chassis-[id]/slot-[id]/health-led
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/health-led
Affected MO: sys/fex-[id]/health-led
Affected MO: sys/fex-[id]/psu-[id]/health-led
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/health-led
Affected MO: sys/fex-[id]/slot-[id]/health-led
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/health-led
Affected MO: sys/rack-enclosure-[id]/psu-[id]/health-led
Affected MO: sys/rack-unit-[id]/ext-board-[id]/health-led
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/health-led
Affected MO: sys/rack-unit-[id]/health-led
Affected MO: sys/rack-unit-[id]/psu-[id]/health-led
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/health-led
Affected MO: sys/switch-[id]/psu-[id]/health-led
```

fltEquipmentHealthLedMinorError

Fault Code: F1237

Message: [dn] shows error. Reason: [healthLedStateQualifier]

Explanation:

This fault is raised Blade LED changes to amber

Recommended Action:

If you see this fault, take the following actions:

1. Read fault summary and determine course of action.

Fault Details

```
Severity: minor
Cause: health-led-amber
mibFaultCode: F1237
mibFaultName: fltEquipmentHealthLedMinorError
moClass: equipment:HealthLed
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/health-led
Affected MO: sys/chassis-[id]/blade-[slotId]/health-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/health-led
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/health-led
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/health-led
Affected MO: sys/chassis-[id]/health-led
Affected MO: sys/chassis-[id]/psu-[id]/health-led
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/health-led
Affected MO: sys/chassis-[id]/slot-[id]/health-led
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/health-led
Affected MO: sys/fex-[id]/health-led
Affected MO: sys/fex-[id]/psu-[id]/health-led
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/health-led
Affected MO: sys/fex-[id]/slot-[id]/health-led
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/health-led
Affected MO: sys/rack-enclosure-[id]/psu-[id]/health-led
Affected MO: sys/rack-unit-[id]/ext-board-[id]/health-led
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/health-led
Affected MO: sys/rack-unit-[id]/health-led
Affected MO: sys/rack-unit-[id]/psu-[id]/health-led
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/health-led
Affected MO: sys/switch-[id]/psu-[id]/health-led
```

fltVnicEtherIfRemoteVlanUnresolvable

Fault Code: F1249

Message: The named vlan [name] for vNIC [name], service profile [name] cannot be resolved remotely

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: referenced-remote-vlan-unresolvable
mibFaultCode: F1249
mibFaultName: fltVnicEtherIfRemoteVlanUnresolvable
moClass: vnic:EtherIf
Type: configuration
autoCleared: true
Affected MO:
fabric/lan/network-sets/fabric-network-[name]/fabric-network-def-[name]/vm-network-def-[name]/if-[name]
Affected MO: fabric/lan/profiles/vnic-[name]/if-[name]
```

```
Affected MO: fabric/lanmon/eth-flow-monitoring/flow-exporter-profile-[name]/if-[name]
Affected MO: org-[name]/lan-conn-pol-[name]/ether-[name]/if-[name]
Affected MO: org-[name]/lan-conn-templ-[name]/if-[name]
Affected MO: org-[name]/ls-[name]/ether-[name]/if-[name]
Affected MO: org-[name]/ls-[name]/if-[name]
Affected MO: org-[name]/ls-[name]/ipc-[name]/if-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ether-[name]/if-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/if-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ipc-[name]/if-[name]
```

fltVnicFcIfRemoteVsanUnresolvable

Fault Code: F1250

Message: The named vsan [name] for vHBA [name], service profile [name] cannot be resolved remotely

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: referenced-remote-vsan-unresolvable
mibFaultCode: F1250
mibFaultName: fltVnicFcIfRemoteVsanUnresolvable
moClass: vnic:FcIf
Type: configuration
autoCleared: true
Affected MO: org-[name]/ls-[name]/fc-[name]/if-default
Affected MO: org-[name]/san-conn-pol-[name]/fc-[name]/if-default
Affected MO: org-[name]/san-conn-templ-[name]/if-default
Affected MO: org-[name]/tier-[name]/ls-[name]/fc-[name]/if-default
```

fltVnicEtherVirtualization-conflict

Fault Code: F1251

Message: Multiple connection policies cannot be assigned to the same Eth vNIC

Explanation:

This fault occurs when multiple connection policies are assigned to the same vNIC.

Recommended Action:

If you see this fault, take the following actions:

1. Check on the vNIC if different types of connection policies (dynamic/VMQ) are assigned. Keep only one type.
2. Check on the vNIC through CLI if more than one connection policy of the same type is assigned. Keep only one connection policy.

Fault Details

```
Severity: major
```

```
Cause: multiple-connection-policies
mibFaultCode: F1251
mibFaultName: fltVnicEtherVirtualizationConflict
moClass: vnic:Ether
Type: configuration
autoCleared: true
Affected MO: org-[name]/lan-conn-pol-[name]/ether-[name]
Affected MO: org-[name]/ls-[name]/ether-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ether-[name]
```

fltLsIssuesIscsi-config-failed

Fault Code: F1252

Message: Service Profile [name] configuration failed due to iSCSI issue [iscsiConfigIssues]

Explanation:

This fault typically occurs when Cisco UCS Manager Service Profile configuration failed due to iSCSI Config Issues.

Recommended Action:

If you see this fault, take the following actions:

1. Correct the Service Profile iSCSI Configuration as per the issue reported.
2. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: configuration-failed
mibFaultCode: F1252
mibFaultName: fltLsIssuesIscsiConfigFailed
moClass: ls:Issues
Type: configuration
autoCleared: true
Affected MO: org-[name]/ls-[name]/config-issue
Affected MO: org-[name]/tier-[name]/ls-[name]/config-issue
```

fltStorageLocalDiskMissing

Fault Code: F1256

Message: Local disk [id] missing on server [chassisId]/[slotId]Local disk [id] missing on server [id]Local disk [id] missing on storage enclosure [id]Local disk [id] missing on chassis [id]

Explanation:

This fault occurs when a disk is missing.

Recommended Action:

If you see this fault, take the following action:

1. Insert the disk.

Fault Details

```
Severity: warning
```

```
Cause: equipment-missing
mibFaultCode: F1256
mibFaultName: fltStorageLocalDiskMissing
moClass: storage:LocalDisk
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]
```

fltStorageFlexFlashControllerInoperable

Fault Code: F1257

Message: FlexFlash Controller [id] on server [chassisId]/[slotId] is inoperable. Reason: [operQualifierReason] Status: [controllerHealth]FlexFlash Controller [id] on server [id] is inoperable. Reason: [operQualifierReason] Status: [controllerHealth]

Explanation:

This fault occurs when the flexflash controller is inaccessible.

Recommended Action:

If you see this fault, take the following action:

1. If reported as Firmware Mismatch, update the CIMC and Board Controller firmware
2. If reported as Fatal Error, reset the CIMC and update Board Controller firmware
3. For PCI and mezz-based controllers, check the seating of the storage controller. If the problem persists, replace the controller

Fault Details

```
Severity: major
Cause: equipment-inoperable
mibFaultCode: F1257
mibFaultName: fltStorageFlexFlashControllerInoperable
moClass: storage:FlexFlashController
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-flexflash-[id]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]
```

fltStorageFlexFlashCardInoperable

Fault Code: F1258

Message: FlexFlash Card [slotNumber] on server [chassisId]/[slotId] is inoperable. Reason: [operQualifierReason]FlexFlash Card [slotNumber] on server [id] is inoperable. Reason: [operQualifierReason]

Explanation:

This fault occurs when the flexflash card is inaccessible.

Recommended Action:

If you see this fault, take the following action:

1. If reported as Write Protected, then remove write protection from the card
2. If reported as Invalid Capacity, use an OS disk utility to delete/recreate the partitions
3. If the above action did not resolve the issue, replace the card

Fault Details

```
Severity: major
Cause: equipment-inoperable
mibFaultCode: F1258
mibFaultName: fltStorageFlexFlashCardInoperable
moClass: storage:FlexFlashCard
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]/card-[slotNumber]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-flexflash-[id]/card-[slotNumber]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]/card-[slotNumber]
```

fltStorageFlexFlashCardMissing

Fault Code: F1259

Message: FlexFlash Card [slotNumber] missing on server [chassisId]/[slotId]FlexFlash Card [slotNumber] missing on server [id]

Explanation:

This fault occurs when a FlexFlash Card is missing.

Recommended Action:

If you see this fault, take the following action:

1. Insert the Card.

Fault Details

```
Severity: major
Cause: equipment-missing
mibFaultCode: F1259
mibFaultName: fltStorageFlexFlashCardMissing
moClass: storage:FlexFlashCard
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]/card-[slotNumber]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-flexflash-[id]/card-[slotNumber]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]/card-[slotNumber]
```

fltStorageFlexFlashVirtualDriveDegraded

Fault Code: F1260

Message: FlexFlash Virtual Drive RAID degraded on server [chassisId]/[slotId]. Reason: [raidState]FlexFlash Virtual Drive RAID degraded on server [id]. Reason: [raidState]

Explanation:

This fault occurs when the flexflash raid is degraded.

Recommended Action:

If you see this fault, take the following action:

1. Re-acknowledge the server by setting the flexflash scrub policy to yes. Please note that this action will erase all data in the card(s)
2. Verify the health of the controller/card(s). If the above action did not resolve the issue, replace the card(s)

Fault Details

```
Severity: minor
Cause: equipment-degraded
mibFaultCode: F1260
mibFaultName: fltStorageFlexFlashVirtualDriveDegraded
moClass: storage:FlexFlashVirtualDrive
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]/vd-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-flexflash-[id]/vd-[id]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]/vd-[id]
```

fltStorageFlexFlashVirtualDriveInoperable

Fault Code: F1261

Message: FlexFlash Virtual Drive on server [chassisId]/[slotId] is inoperable. Reason: [raidState]FlexFlash Virtual Drive on server [id] is inoperable. Reason: [raidState]

Explanation:

This fault occurs when the flexflash virtual drive is inoperable.

Recommended Action:

If you see this fault, take the following action:

1. Re-acknowledge the server by setting the flexflash scrub policy to yes. Please note that this action will erase all data in the card(s)
2. Verify the health of the controller/card(s). If the above action did not resolve the issue, replace the card(s)

Fault Details

```
Severity: major
Cause: equipment-inoperable
mibFaultCode: F1261
mibFaultName: fltStorageFlexFlashVirtualDriveInoperable
moClass: storage:FlexFlashVirtualDrive
```

```
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]/vd-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-flexflash-[id]/vd-[id]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]/vd-[id]
```

fltStorageFlexFlashControllerUnhealthy

Fault Code: F1262

Message: FlexFlash Controller [id] on server [chassisId]/[slotId] is unhealthy. Reason: [operQualifierReason] Status: [controllerHealth]FlexFlash Controller [id] on server [id] is unhealthy. Reason: [operQualifierReason] Status: [controllerHealth]

Explanation:

This fault occurs when the flexflash controller is unhealthy.

Recommended Action:

If you see this fault, take the following action:

1. If reported as Old Firmware/Firmware Mismatch, update the CIMC and Board Controller firmware, reboot the server
2. Re-acknowledge the server by setting the flexflash scrub policy to yes. Please note that this action will erase all data in the card(s)
3. Verify the health of the controller. If the above action did not resolve the issue, replace the card(s)

Fault Details

```
Severity: minor
Cause: equipment-unhealthy
mibFaultCode: F1262
mibFaultName: fltStorageFlexFlashControllerUnhealthy
moClass: storage:FlexFlashController
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-flexflash-[id]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]
```

fltAaaProviderGroupProvidergroupsize

Fault Code: F1279

Message: For [dn]: Server Group [name] has [size] provider references. Authentication might fail, if this provider group is used with auth-domain.

Explanation:

This fault typically occurs because Cisco UCS Manager has detected provider-group with 0 provider references..

Recommended Action:

If you see this fault, take the following actions:

1. Need to delete the provider group which does not have any provider references.

2. Or Add provider references to provider group.

Fault Details

```
Severity: warning
Cause: provider-group-size-empty
mibFaultCode: F1279
mibFaultName: fltAaaProviderGroupProvidergroupsize
moClass: aaa:ProviderGroup
Type: security
autoCleared: true
Affected MO: sys/ldap-ext/providergroup-[name]
Affected MO: sys/radius-ext/providergroup-[name]
Affected MO: sys/tacacs-ext/providergroup-[name]
```

fltFirmwareAutoSyncPolicyDefaultHostPackageMissing

Fault Code: F1284

Message: Default host firmware package is missing or deleted.

Explanation:

This fault typically occurs for the following reasons: when Auto Firmware Sync Policy is set Auto-acknowledge or User-acknowledge and default host firmware pack is not available.

- Auto Firmware Sync is not happening.
- Default host firmware package is missing or deleted.

Recommended Action:

If you see this fault, take the following actions:

1. Go to Servers tab and expand policies node. Select Host Firmware Packages under policies node.
2. If the FSM failed, review the error message in the FSM.
3. Create a host firmware package with name 'default'. If the problem persists, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: default-hostpack-missing
mibFaultCode: F1284
mibFaultName: fltFirmwareAutoSyncPolicyDefaultHostPackageMissing
moClass: firmware:AutoSyncPolicy
Type: management
autoCleared: true
Affected MO: org-[name]/fw-auto-sync
```

fltFirmwareAutoSyncPolicyDefaultHostPackageMissingVersions

Fault Code: F1285

Message: B-series,C-series and M-series package versions are empty in default host firmware package

Explanation:

This fault typically occurs for the following reasons: when Auto Firmware Sync Policy is set Auto-acknowledge or User-acknowledge and default host firmware pack is not having any server versions set.

- Auto Firmware Sync is not happening.
- Default host firmware package has blade or rack versions empty.

Recommended Action:

If you see this fault, take the following actions:

1. Go to Servers tab and expand policies node. Select Host Firmware Packages under policies node.
2. If the FSM failed, review the error message in the FSM.
3. Open the 'default' host firmware package and update the rack and/or blade version. If the problem persists, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: default-hostpack-missing-versions
mibFaultCode: F1285
mibFaultName: fltFirmwareAutoSyncPolicyDefaultHostPackageMissingVersions
moClass: firmware:AutoSyncPolicy
Type: management
autoCleared: true
Affected MO: org-[name]/fw-auto-sync
```

fltFabricNetflowMonSessionFlowMonConfigFail

Fault Code: F1304

Message: Configuration for traffic flow monitor [name] failed, reason: [configFailReason]

Explanation:

This fault typically occurs when the configuration of a traffic flow monitoring session is incorrect.

Recommended Action:

If you see this fault, correct the configuration problem provided in the fault description.

Fault Details

```
Severity: major
Cause: config-error
mibFaultCode: F1304
mibFaultName: fltFabricNetflowMonSessionFlowMonConfigFail
moClass: fabric:NetflowMonSession
Type: network
autoCleared: true
Affected MO: fabric/lanmon/eth-flow-monitoring/netflow-mon-[name]
```

fltFabricNetflowMonSessionNetflowSessionConfigFail

Fault Code: F1305

Message: Netflow session configuration failed because [configQualifier]

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: config-error
mibFaultCode: F1305
mibFaultName: fltFabricNetflowMonSessionNetflowSessionConfigFail
moClass: fabric:NetflowMonSession
Type: network
autoCleared: true
Affected MO: fabric/lanmon/eth-flow-monitoring/netflow-mon-[name]
```

fltFabricPooledVlanNamedVlanUnresolved

Fault Code: F1306

Message: VLAN [name] for VLAN group [name] cannot be resolved to any existing vlans.

Explanation:

This fault typically occurs when a named VLAN in VLAN group cannot be resolved to any existing vlans.

Recommended Action:

If you see this fault, take the following action:

1. Create VLAN.
2. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: named-vlan-unresolved
mibFaultCode: F1306
mibFaultName: fltFabricPooledVlanNamedVlanUnresolved
moClass: fabric:PooledVlan
Type: network
autoCleared: true
Affected MO: fabric/lan/[id]/net-group-[name]/net-[name]
Affected MO: fabric/lan/net-group-[name]/net-[name]
```

fltExtvmmVMNDRefVmNetworkReferenceIncorrect

Fault Code: F1320

Message: VM Network [name] references [vmNetworkDefName] that is already being referenced by another VM Network

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: vm-network-reference-incorrect
mibFaultCode: F1320
mibFaultName: fltExtvmmVMNDRefVmNetworkReferenceIncorrect
moClass: extvmm:VMNDRef
Type: configuration
autoCleared: true
Affected MO: fabric/lan/vm-network-sets/vm-network-[name]/vm-network-def-ref[name]
```

fltExtmgmtNdiscTargetsNdiscTargetsNotValid

Fault Code: F1321

Message: Invalid NDISC Targets configured for Management Interface Polling. Error: [configStatusMessage]

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: ndisc-targets-config-error
mibFaultCode: F1321
mibFaultName: fltExtmgmtNdiscTargetsNdiscTargetsNotValid
moClass: extmgmt:NdiscTargets
Type: management
autoCleared: true
Affected MO: sys/extmgmt-intf-monitor-policy/ndisc-target-policy
```

fltFirmwareBootUnitPowerCycleRequired

Fault Code: F1325

Message: Board controller upgraded, manual a/c power cycle required on server [serverId]

Explanation:

None set.

Recommended Action:

If you see this fault, take the following actions:

1. Power cycle the board controller.

Fault Details

```
Severity: critical
Cause: board-ctrl-upgraded
mibFaultCode: F1325
mibFaultName: fltFirmwareBootUnitPowerCycleRequired
moClass: firmware:BootUnit
Type: generic
autoCleared: true
```

Affected MO: capabilities/ep/mgmt-ext/fw-boot-def/bootunit-[type]
Affected MO: capabilities/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/bios/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/graphics-card-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/pmemory-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/nvme-switch-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pci-switch-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/bios/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/bios/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/graphics-card-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/pmemory-[id]/fw-boot-def/bootunit-[type]

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/nvme-switch-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/pci-switch-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/bios/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/psu-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/sas-expander-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/sas-expander-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:

sys/chassis-[id]/storage-[type]-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/fex-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/fex-[id]/psu-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-enclosure-[id]/psu-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/bios/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/graphics-card-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/pmemory-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/nvme-switch-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/pci-switch-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/board/sas-expander-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/bios/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/psu-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/switch-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/switch-[id]/psu-[id]/fw-boot-def/bootunit-[type]

fltMgmtControllerUnsupportedDimmBlacklisting

Fault Code: F1328

Message: Dimm blacklisting is not supported on server [chassisId]/[slotId]Dimm blacklisting is not supported on server [id]

Explanation:

This fault typically occurs when the CIMC firmware on a server is an earlier release than Cisco UCS, Release 2.2.

Recommended Action:

If you see this fault, consider upgrading the CIMC firmware, and the entire Cisco UCS instance if necessary, to Cisco UCS, Release 2.2 or later.

Fault Details

```
Severity: info
Cause: incompatible-server-firmware
mibFaultCode: F1328
mibFaultName: fltMgmtControllerUnsupportedDimmBlacklisting
moClass: mgmt:Controller
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
```

Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fltFabricEthLanEpUdldLinkDown

Fault Code: F1358

Message: UDLD state for ether port [slotId]/[aggrPortId]/[portId] on fabric interconnect [switchId] is: [udldOperState].UDLD state for ether port [slotId]/[portId] on fabric interconnect [switchId] is: [udldOperState].

Explanation:

This fault occurs when an ethernet uplink port is unidirectional connected.

Recommended Action:

If you see this fault, take the following action:

1. Check the tx and rx connection of the uplink port.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

Severity: warning
Cause: udld-link-down
mibFaultCode: F1358
mibFaultName: fltFabricEthLanEpUdldLinkDown
moClass: fabric:EthLanEp
Type: network
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO: fabric/lan/[id]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:

fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-slot-[slotId]-port-[portId]

fltFabricEthLanPcEpUdldLinkDown

Fault Code: F1359

Message: UDLD state for ether port [slotId]/[aggrPortId]/[portId] on fabric interconnect [switchId] is: [udldOperState].UDLD state for ether port [slotId]/[portId] on fabric interconnect [switchId] is: [udldOperState].

Explanation:

This fault occurs when an ethernet uplink port-channel member is unidirectional connected.

Recommended Action:

If you see this fault, take the following action:

1. Check the tx and rx connection of the uplink port.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

Severity: warning
Cause: udld-link-down
mibFaultCode: F1359
mibFaultName: fltFabricEthLanPcEpUdldLinkDown
moClass: fabric:EthLanPcEp
Type: network
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO: fabric/lan/[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]-port-[portId]

fltFabricFcoeSanEpUdldLinkDown

Fault Code: F1360

Message: UDLD state for ether port [slotId]/[portId] on fabric interconnect [switchId] is: [udldOperState].UDLD state for ether port [slotId]/[portId] on fabric interconnect [switchId] is: [udldOperState].

Explanation:

This fault occurs when a FCoE uplink port is unidirectional connected.

Recommended Action:

If you see this fault, take the following action:

1. Check the tx and rx connection of the uplink port.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: udld-link-down
mibFaultCode: F1360
mibFaultName: fltFabricFcoeSanEpUdldLinkDown
moClass: fabric:FcoeSanEp
Type: network
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]
```

fltFabricFcoeSanPcEpUdldLinkDown

Fault Code: F1361

Message: UDLD state for ether port [slotId]/[aggrPortId]/[portId] on fabric interconnect [switchId] is: [udldOperState].UDLD state for ether port [slotId]/[portId] on fabric interconnect [switchId] is: [udldOperState].

Explanation:

This fault occurs when a FCoE uplink port-channel member is unidirectional connected.

Recommended Action:

If you see this fault, take the following action:

1. Check the tx and rx connection of the uplink port.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: udld-link-down
mibFaultCode: F1361
mibFaultName: fltFabricFcoeSanPcEpUdldLinkDown
moClass: fabric:FcoeSanPcEp
Type: network
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesanpcep-slot-[slotId]-port-[portId]
```

fltFirmwareStatusCimcFirmwareMismatch

Fault Code: F1365

Message: Aggregate blade CIMC firmware mismatch. Firmware: [cimcVersion]

Explanation:

This fault typically occurs when the CIMC firmware image on master and slave node in an aggregate blade does not match.

Recommended Action:

Update and activate master and slave CIMC to same firmware version.

Fault Details

```
Severity: critical
Cause: cimc-firmware-mismatch
mibFaultCode: F1365
mibFaultName: fltFirmwareStatusCimcFirmwareMismatch
moClass: firmware:Status
Type: management
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/fw-status
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/fw-status
Affected MO: sys/chassis-[id]/fw-status
Affected MO: sys/chassis-[id]/psu-[id]/fw-status
Affected MO: sys/chassis-[id]/slot-[id]/fw-status
Affected MO: sys/fex-[id]/psu-[id]/fw-status
Affected MO: sys/fex-[id]/slot-[id]/fw-status
Affected MO: sys/fw-status
Affected MO: sys/rack-enclosure-[id]/psu-[id]/fw-status
Affected MO: sys/rack-unit-[id]/fw-status
Affected MO: sys/rack-unit-[id]/psu-[id]/fw-status
Affected MO: sys/switch-[id]/fw-status
Affected MO: sys/switch-[id]/psu-[id]/fw-status
```

fltFirmwareStatusPldFirmwareMismatch

Fault Code: F1366

Message: Aggregate blade board controller firmware mismatch. Firmware: [pldVersion]

Explanation:

This fault typically occurs when the board controller firmware image on master and slave node in an aggregate blade does not match.

Recommended Action:

Update master and slave board controller to same firmware version.

Fault Details

```
Severity: critical
Cause: pld-firmware-mismatch
mibFaultCode: F1366
mibFaultName: fltFirmwareStatusPldFirmwareMismatch
moClass: firmware:Status
Type: management
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/fw-status
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/fw-status
Affected MO: sys/chassis-[id]/fw-status
Affected MO: sys/chassis-[id]/psu-[id]/fw-status
Affected MO: sys/chassis-[id]/slot-[id]/fw-status
Affected MO: sys/fex-[id]/psu-[id]/fw-status
Affected MO: sys/fex-[id]/slot-[id]/fw-status
Affected MO: sys/fw-status
Affected MO: sys/rack-enclosure-[id]/psu-[id]/fw-status
Affected MO: sys/rack-unit-[id]/fw-status
Affected MO: sys/rack-unit-[id]/psu-[id]/fw-status
Affected MO: sys/switch-[id]/fw-status
Affected MO: sys/switch-[id]/psu-[id]/fw-status
```

fltSysdebugLogExportStatusLogExportFailure

Fault Code: F1369

Message: Log export to remote server failed from [switchId]:[exportFailureReason]

Explanation:

This fault occurs when Cisco UCS Manager cannot transfer a log file to a remote server. This is typically the result of one of the following issues:

- The remote server is not accessible.
- One or more of the parameters for the remote server that are specified for the log export target, such as path, username, password, ssh-key and server name, are incorrect.

Recommended Action:

If you see this fault, take the following actions:

1. Verify the connectivity to the remote server.
2. Verify the path information of the remote server.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: server-error
mibFaultCode: F1369
mibFaultName: fltSysdebugLogExportStatusLogExportFailure
moClass: sysdebug:LogExportStatus
Type: sysdebug
autoCleared: true
Affected MO: sys/sysdebug/log-export-policy/log-export-status-[switchId]
```

fltVnicEtherVirtualization-netflow-conflict

Fault Code: F1380

Message: Netflow and VMQ/SRIOV-USNIC policies cannot be assigned to the same Eth vNIC

Explanation:

This fault typically occurs when a netflow src vnic is made a USNIC or VMQ vnic

Recommended Action:

If you see this fault, take the following actions:

1. Remove the vnic from a netflow session or remove the usnic/vmq policy
2. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: multiple-connection-policies
mibFaultCode: F1380
mibFaultName: fltVnicEtherVirtualizationNetflowConflict
```

```
moClass: vnic:Ether
Type: configuration
autoCleared: true
Affected MO: org-[name]/lan-conn-pol-[name]/ether-[name]
Affected MO: org-[name]/ls-[name]/ether-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ether-[name]
```

fltFabricVlanPrimaryVlanMissingForIsolated

Fault Code: F1382

Message: Primary Vlan can not be resolved for isolated vlan [name]

Explanation:

This fault typically occurs when Cisco UCS Manager encounters a problem resolving the primary VLAN ID corresponding to a particular isolated VLAN.

Recommended Action:

If you see this fault, take the following actions:

1. Associate the isolated VLAN with a valid primary VLAN.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: primary-vlan-missing-for-isolated
mibFaultCode: F1382
mibFaultName: fltFabricVlanPrimaryVlanMissingForIsolated
moClass: fabric:Vlan
Type: network
autoCleared: true
Affected MO: fabric/eth-estc/[id]/net-[name]
Affected MO: fabric/eth-estc/net-[name]
Affected MO: fabric/lan/[id]/net-[name]
Affected MO: fabric/lan/net-[name]
```

fltFabricVlanPrimaryVlanMissingForCommunity

Fault Code: F1383

Message: Primary Vlan can not be resolved for community vlan [name]

Explanation:

This fault typically occurs when Cisco UCS Manager encounters a problem resolving the primary VLAN ID corresponding to a particular community VLAN.

Recommended Action:

If you see this fault, take the following actions:

1. Associate the community VLAN with a valid primary VLAN.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: primary-vlan-missing-for-community
mibFaultCode: F1383
mibFaultName: fltFabricVlanPrimaryVlanMissingForCommunity
moClass: fabric:Vlan
Type: network
autoCleared: true
Affected MO: fabric/eth-estc/[id]/net-[name]
Affected MO: fabric/eth-estc/net-[name]
Affected MO: fabric/lan/[id]/net-[name]
Affected MO: fabric/lan/net-[name]
```

fltFabricVlanMismatch-a

Fault Code: F1384

Message: VLAN [name] has [overlapStateForA] with another vlan under lan-cloud/appliance-cloud for the fabric interconnect A

Explanation:

This fault typically occurs when private vlan properties of VLAN under one cloud conflicts with the private vlan properties of VLAN under another cloud for the fabric interconnect A. The cloud here means either a LAN cloud or an appliance cloud. This issue can stop the usage of this vlan.

Recommended Action:

If you see this fault, take the following action:

1. Check the sharing property of the VLAN under both clouds and fabric A referred by its VLAN ID.
2. If the sharing property of the VLAN does not match with the VLAN on the other cloud, then change the sharing property of either of the VLANs, so that it matches with each other.
3. If the VLAN is a isolated/community vlan, check the pubnwname property of the VLAN under both clouds referred by its VLAN ID.
4. If the pubnwname property of the isolated/community VLAN does not match with the isolated/community VLAN on the other cloud, then change the pubnwname property of either of the VLANs, so that it matches with each other.
5. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: vlan-mismatch
mibFaultCode: F1384
mibFaultName: fltFabricVlanMismatchA
moClass: fabric:Vlan
Type: network
autoCleared: true
Affected MO: fabric/eth-estc/[id]/net-[name]
Affected MO: fabric/eth-estc/net-[name]
Affected MO: fabric/lan/[id]/net-[name]
Affected MO: fabric/lan/net-[name]
```

fltFabricVlanMismatch-b

Fault Code: F1385

Message: VLAN [name] has [overlapStateForB] with another vlan under lan-cloud/appliance-cloud for the fabric interconnect B

Explanation:

This fault typically occurs when private vlan properties of VLAN under one cloud conflicts with the private vlan properties of VLAN under another cloud for the fabric interconnect B. The cloud here means either a LAN cloud or an appliance cloud. This issue can stop the usage of this vlan.

Recommended Action:

If you see this fault, take the following action:

1. Check the sharing property of the VLAN under both clouds and fabric B referred by its VLAN ID.
2. If the sharing property of the VLAN does not match with the VLAN on the other cloud, then change the sharing property of either of the VLANs, so that it matches with each other.
3. If the VLAN is a isolated/community vlan, check the pubnwname property of the VLAN under both clouds referred by its VLAN ID.
4. If the pubnwname property of the isolated/community VLAN does not match with the isolated/community VLAN on the other cloud, then change the pubnwname property of either of the VLANs, so that it matches with each other.
5. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: vlan-mismatch
mibFaultCode: F1385
mibFaultName: fltFabricVlanMismatchB
moClass: fabric:Vlan
Type: network
autoCleared: true
Affected MO: fabric/eth-estc/[id]/net-[name]
Affected MO: fabric/eth-estc/net-[name]
Affected MO: fabric/lan/[id]/net-[name]
Affected MO: fabric/lan/net-[name]
```

fltFabricVlanErrorAssocPrimary

Fault Code: F1386

Message: VLAN [name] is in error state because the associated primary vlan [assocPrimaryVlanState]

Explanation:

This fault typically occurs when there is an error in associated primary vlan of a secondary VLAN. This issue can stop the usage of this vlan.

Recommended Action:

If you see this fault, take the following action:

1. Check the pubnwname property of the VLAN.

2. If the pubnwname is not given or refers to a non-existing primary vlan, give a name of a primary vlan which is in good state.
3. If the pubnwname refers to a vlan which is not a primary vlan, then either change the referred vlan to be a primary vlan or give a different primary vlan.
4. If the pubnwname refers to a valid primary vlan, then check the state of the primary VLAN.
5. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: vlan-error-assoc-primary
mibFaultCode: F1386
mibFaultName: fltFabricVlanErrorAssocPrimary
moClass: fabric:Vlan
Type: network
autoCleared: true
Affected MO: fabric/eth-estc/[id]/net-[name]
Affected MO: fabric/eth-estc/net-[name]
Affected MO: fabric/lan/[id]/net-[name]
Affected MO: fabric/lan/net-[name]
```

fltLsServerSvnicNotPresent

Fault Code: F1388

Message: Service profile [name] does not contain service vnics for netflow.

Explanation:

The service profile does not have service vnics, hence netflow will not function on this server. This fault typically occurs as a result of one of the following issues:

- Service profile has maximum number of vnics already created, hence cannot accomodate service vnics required for netflow.

Recommended Action:

If you see this fault, take the following actions:

1. If you have already enabled netflow, please reduce the number of vnics on the SP to accomodate service vnics.
2. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: svnic-not-present
mibFaultCode: F1388
mibFaultName: fltLsServerSvnicNotPresent
moClass: ls:Server
Type: server
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fltLsIssuesKvmPolicyUnsupported

Fault Code: F1389

Message: Kvm mgmt policy not supported by current CIMC version

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: minor
Cause: unsupported-cimc-firmware
mibFaultCode: F1389
mibFaultName: fltLsIssuesKvmPolicyUnsupported
moClass: ls:Issues
Type: server
autoCleared: true
Affected MO: org-[name]/ls-[name]/config-issue
Affected MO: org-[name]/tier-[name]/ls-[name]/config-issue
```

fltMgmtBackupPolicyConfigConfiguration backup outdated

Fault Code: F1392

Message: Config backup may be outdated

Explanation:

This fault occurs when last backup configuration is taken long back

Recommended Action:

If you see this fault, take the following actions:

1. Please take a configuration backup

Fault Details

```
Severity: minor
Cause: config-backup-outdated
mibFaultCode: F1392
mibFaultName: fltMgmtBackupPolicyConfigConfigurationBackupOutdated
moClass: mgmt:BackupPolicyConfig
Type: management
autoCleared: true
Affected MO: sys/bkup-policy-cfg
```

fltNetworkOperLevelExtrasecondaryvlans

Fault Code: F1396

Message: Fabric Interconnect [id]: Number of secondary vlans exceeds the max limit on the FI: Number of secondary vlans: [secondaryVlanCount] and Max secondary vlans allowed: [maxSecondaryVlanCount]

Explanation:

This fault occurs when the fabric interconnect has more number of secondary vlans than what is supported.

Recommended Action:

If you see this fault, take the following actions:

1. It is recommended that operator should delete the extra secondary vlans that are there in the FI. System may appear to be normally functioning even with these extra secondary vlans in place. However there may be performance issues observed as the system is operating above the recommended scale limits..
2. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: extra-secondary-vlans
mibFaultCode: F1396
mibFaultName: fltNetworkOperLevelExtrasecondaryvlans
moClass: network:OperLevel
Type: equipment
autoCleared: true
Affected MO: sys/switch-[id]/oper-level
```

fltSwVlanExtrasecondaryvlansperprimary

Fault Code: F1397

Message: Number of secondary vlans associated with the primary vlan [id] in Fabric Interconnect [switchId] exceeds the max limit: Number of secondary vlans: [secVlanPerPrimaryVlanCount].

Explanation:

This fault occurs when the fabric interconnect has more number of secondary vlans per primary vlan than what is supported.

Recommended Action:

If you see this fault, take the following actions:

1. It is recommended that operator should delete the extra secondary vlans on this primary vlan that are there in the FI. System may appear to be normally functioning even with these extra secondary vlans on this primary vlan in place. However there may be performance issues observed as the system is operating above the recommended scale limits..
2. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: extra-secondary-vlans-per-primary
mibFaultCode: F1397
mibFaultName: fltSwVlanExtrasecondaryvlansperprimary
moClass: sw:Vlan
Type: equipment
autoCleared: true
Affected MO: fabric/lan/profiles/vnic-[name]/vlan-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
```

Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/fru-comp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/fru-comp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO: sys/chassis-[id]/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO: sys/chassis-[id]/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO: sys/chassis-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO: sys/chassis-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/sas-expander-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/shared-io-module/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/slot-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/slot-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:

sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO: sys/chassis-[id]/vnic-[name]/vlan-[id]
Affected MO: sys/fex-[id]/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO: sys/fex-[id]/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO: sys/fex-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO: sys/fex-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO: sys/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO: sys/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/rack-unit-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/rack-unit-[id]/ext-board-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]

Affected MO: sys/rack-unit-[id]/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO: sys/rack-unit-[id]/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO: sys/rack-unit-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO: sys/rack-unit-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/switch-[id]/access-eth/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO:
sys/switch-[id]/access-eth/slot-[slotId]-aggr-port-[aggrPortId]/ethestc-ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO:
sys/switch-[id]/access-eth/slot-[slotId]-aggr-port-[aggrPortId]/fcoeestc-ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO:
sys/switch-[id]/access-eth/slot-[slotId]-aggr-port-[aggrPortId]/fcoesan-ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO: sys/switch-[id]/border-eth/ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO: sys/switch-[id]/border-eth/ethestc-ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO: sys/switch-[id]/border-eth/pc-[portId]/vlan-[id]
Affected MO:
sys/switch-[id]/border-eth/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO:
sys/switch-[id]/border-eth/slot-[slotId]-aggr-port-[aggrPortId]/ethestc-ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO:
sys/switch-[id]/border-eth/slot-[slotId]-aggr-port-[aggrPortId]/fcoeestc-ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO:
sys/switch-[id]/border-eth/slot-[slotId]-aggr-port-[aggrPortId]/fcoesan-ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO: sys/switch-[id]/border-eth/vlan-[id]
Affected MO: sys/switch-[id]/border-fc/fcoeestc-ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO: sys/switch-[id]/border-fc/fcoesan-ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO: sys/switch-[id]/border-fc/fcoesan-pc-[portId]/vlan-[id]
Affected MO:
sys/switch-[id]/border-fc/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO:
sys/switch-[id]/border-fc/slot-[slotId]-aggr-port-[aggrPortId]/ethestc-ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO:
sys/switch-[id]/border-fc/slot-[slotId]-aggr-port-[aggrPortId]/fcoeestc-ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO:
sys/switch-[id]/border-fc/slot-[slotId]-aggr-port-[aggrPortId]/fcoesan-ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO: sys/switch-[id]/border-fc/vlan-[id]
Affected MO: sys/switch-[id]/ethlanflowmon/flowexporter-netflow-[name]/vlan-[id]
Affected MO: sys/switch-[id]/ethlanflowmon/vc-[id]/vlan-[id]
Affected MO: sys/switch-[id]/lanmon-eth/mon-[name]/pc-[portId]/vlan-[id]
Affected MO:
sys/switch-[id]/lanmon-eth/mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO:
sys/switch-[id]/lanmon-eth/mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/ethestc-ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO:
sys/switch-[id]/lanmon-eth/mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/fcoeestc-ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO:
sys/switch-[id]/lanmon-eth/mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesan-ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO: sys/switch-[id]/lanmon-eth/mon-[name]/vc-[id]/vlan-[id]
Affected MO: sys/switch-[id]/lanmon-eth/mon-[name]/vlan-[id]
Affected MO: sys/switch-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO: sys/switch-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO:
sys/switch-[id]/phys/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO:
sys/switch-[id]/phys/slot-[slotId]-aggr-port-[aggrPortId]/ethestc-ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO:
sys/switch-[id]/phys/slot-[slotId]-aggr-port-[aggrPortId]/fcoeestc-ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO:
sys/switch-[id]/phys/slot-[slotId]-aggr-port-[aggrPortId]/fcoesan-ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO: sys/switch-[id]/sanmon-fc/mon-[name]/fcoesan-pc-[portId]/vlan-[id]
Affected MO:
sys/switch-[id]/sanmon-fc/mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO:

sys/switch-[id]/sanmon-fc/mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/ethestc-ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO:
sys/switch-[id]/sanmon-fc/mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/fcoeestc-ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO:
sys/switch-[id]/sanmon-fc/mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/fcoesan-ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO: sys/switch-[id]/sanmon-fc/mon-[name]/vc-[id]/vlan-[id]
Affected MO: sys/switch-[id]/sanmon-fc/mon-[name]/vlan-[id]

fltCimcvmediaActualMountEntryVmediaMountFailed

Fault Code: F1404

Message: Server [chassisId]/[slotId] (service profile: [assignedToDn]) vmedia mapping [mappingName] has failed.Server [id] (service profile: [assignedToDn]) vmedia mapping [mappingName] has failed.Server [chassisId]/[slotId]/[serverInstanceId] (service profile: [assignedToDn]) vmedia mapping [mappingName] has failed.

Explanation:

None set.

Recommended Action:

If you see this fault, take the following actions:

1. Check the mount related details(remote server ip, port, path & file is reachable) and reack the server .

Fault Details

Severity: major
Cause: vmedia-mount-inaccessible
mibFaultCode: F1404
mibFaultName: fltCimcvmediaActualMountEntryVmediaMountFailed
moClass: cimcvmedia:ActualMountEntry
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/blade-[slotId]/boardController/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/blade-[slotId]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/boardController/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO: sys/chassis-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/sas-expander-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/shared-io-module/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/slot-[id]/boardController/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/slot-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/chassis-[id]/sw-slot-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO: sys/fex-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO: sys/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:

```
sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/rack-unit-[id]/boardController/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
sys/rack-unit-[id]/ext-board-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO: sys/rack-unit-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO: sys/switch-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
```

fltEquipmentTpmSlaveTpm

Fault Code: F1439

Message: Server [chassisId]/[slotId], has a TPM present on the Slave Board which will be unoperational.

Explanation:

This fault indicates the TPM is present on the slave board but it cannot be used by the server. In the case of an aggregate blade server, only the master board's TPM can be used.

Recommended Action:

There is no impact on server functionality although TPM from the slave board can be removed and used on a different server.

Fault Details

```
Severity: info
Cause: tpm-on-slave-board
mibFaultCode: F1439
mibFaultName: fltEquipmentTpmSlaveTpm
moClass: equipment:Tpm
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/Tpm-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/Tpm-[id]
Affected MO: sys/rack-unit-[id]/board/Tpm-[id]
```

fltStorageMezzFlashLifeConfiguration-error

Fault Code: F1448

Message: Flash Life on server [chassisId]/[slotId] flashStatus: [flashStatus]

Explanation:

This fault occurs when UCSM is not able to retrieve the Fusion-io life left due to an error.

Recommended Action:

If you see this fault, take the following actions:

1. Upgrade Fusion-io Firmware.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: info
```

```
Cause: configuration-error
mibFaultCode: F1448
mibFaultName: fltStorageMezzFlashLifeConfigurationError
moClass: storage:MezzFlashLife
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/flash-life-
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/flash-life-
Affected MO: sys/chassis-[id]/storage-[type]-[id]/flash-life-
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/flash-life-
```

fltStorageMezzFlashLifeDegraded

Fault Code: F1449

Message: Flash Life on server [chassisId]/[slotId] flashStatus: [flashStatus]

Explanation:

This fault occurs when the Fusion-io life left is 10 percent or less.

Recommended Action:

If you see this fault, take the following actions:

1. Continue to monitor the the Fusion-io life left and if it reaches 0 percent, the adapter might revert to read-only.

Fault Details

```
Severity: warning
Cause: equipment-degraded
mibFaultCode: F1449
mibFaultName: fltStorageMezzFlashLifeDegraded
moClass: storage:MezzFlashLife
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/flash-life-
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/flash-life-
Affected MO: sys/chassis-[id]/storage-[type]-[id]/flash-life-
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/flash-life-
```

fltStorageFlexFlashControllerMismatch

Fault Code: F1450

Message: FlexFlash Controller [id] on server [chassisId]/[slotId] has SD cards with different sizes.FlexFlash Controller [id] on server [id] has SD cards with different sizes.

Explanation:

This fault occurs when the flexflash SD Cards dont match in size.

Recommended Action:

If you see this fault, take the following action:

1. Remove one of the existing cards and replace it with another card that has the same size as the unremoved one.

Fault Details

```
Severity: major
Cause: equipment-unhealthy
mibFaultCode: F1450
mibFaultName: fltStorageFlexFlashControllerMismatch
moClass: storage:FlexFlashController
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-flexflash-[id]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]
```

fltStorageFlexFlashDriveUnhealthy

Fault Code: F1451

Message: FlexFlash Drive [id] on server [chassisId]/[slotId] is unhealthy. Reason: [operQualifierReason] Status: [operationState]FlexFlash Drive [id] on server [id] is unhealthy. Reason: [operQualifierReason] Status: [operationState]

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: equipment-unhealthy
mibFaultCode: F1451
mibFaultName: fltStorageFlexFlashDriveUnhealthy
moClass: storage:FlexFlashDrive
Type: equipment
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]/card-[slotNumber]/drive-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-flexflash-[id]/card-[slotNumber]/drive-[name]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]/card-[slotNumber]/drive-[name]
```

fltStorageFlexFlashCardUnhealthy

Fault Code: F1452

Message: FlexFlash Card [slotNumber] on server [chassisId]/[slotId] is unhealthy. Reason: [cardHealth]FlexFlash Card [slotNumber] on server [id] is unhealthy. Reason: [cardHealth]

Explanation: This fault occurs when the Flex Flash card is unhealthy.

Recommended Action: If you see this fault, take the following action:

1. Determine if the Flex Flash controller supports auto-sync; auto-sync is currently configured; and the Flex Flash controller is currently building the RAID group. If the RAID group is being built, wait until the

RAID group has been synchronized. Note that building the RAID-1 mirror may take multiple hours, depending on how much I/O the host OS is generating.

If the above action did not resolve the problem, configure Flex Flash auto-sync and wait until the RAID group has been rebuilt, which may take multiple hours.

2. If the above action did not resolve the problem, reset the Flex Flash controller.
3. If the above action did not resolve the problem, reformat the SD cards.
4. Verify the health of the card. If the above action did not resolve the issue, replace the card.
5. Re-acknowledge the server by setting the Flex Flash scrub policy to yes. Please note that this action will erase all data in the card(s).

Fault Details

```
Severity: minor
Cause: equipment-unhealthy
mibFaultCode: F1452
mibFaultName: fltStorageFlexFlashCardUnhealthy
moClass: storage:FlexFlashCard
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]/card-[slotNumber]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-flexflash-[id]/card-[slotNumber]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]/card-[slotNumber]
```

fltPoolElementDuplicatedAssigned

Fault Code: F1453

Message: ID is duplicated assigned for multiple servers(Check UCSC for details)

Explanation: None set.

Recommended Action: None set.

Fault Details

```
Severity: major
Cause: duplicated-assigned
mibFaultCode: F1453
mibFaultName: fltPoolElementDuplicatedAssigned
moClass: pool:Element
Type: server
autoCleared: true
Affected MO: ip/[id]
Affected MO: iqn/[name]
Affected MO: mac/[id]
Affected MO: uuid/[id]
Affected MO: wwn/[id]
```

fltMgmtInterfaceNamedInbandVlanUnresolved

Fault Code: F1454

Message: [configMessage]

Explanation:

This fault occurs if there is an issue in Inband interface configuration.

Recommended Action:

If you see this fault check if the VLAN configured on Inband IP is created and the VLAN is present in the Inband Profile or IP address is configured

Fault Details

```
Severity: minor
Cause: named-inband-vlan-unresolved
mibFaultCode: F1454
mibFaultName: fltMgmtInterfaceNamedInbandVlanUnresolved
moClass: mgmt:Interface
Type: management
autoCleared: true
Affected MO: org-[name]/ls-[name]/iface-[mode]
Affected MO: org-[name]/tier-[name]/ls-[name]/iface-[mode]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/boardController/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/mgmt/iface-[mode]
```

Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/iface-[mode]
Affected MO: sys/fex-[id]/mgmt/iface-[mode]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/iface-[mode]
Affected MO: sys/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/mgmt/iface-[mode]
Affected MO: sys/switch-[id]/mgmt/iface-[mode]

fltMgmtInterfaceInbandUnsupportedServer

Fault Code: F1455

Message: [configMessage]

Explanation:

This fault occurs if there is an issue in Inband interface configuration.

Recommended Action:

If you see this fault check if the VLAN configured on Inband IP is created and the VLAN is present in the Inband Profile or IP address is configured

Fault Details

Severity: minor
Cause: inband-unsupported-server
mibFaultCode: F1455
mibFaultName: fltMgmtInterfaceInbandUnsupportedServer
moClass: mgmt:Interface
Type: management
autoCleared: true
Affected MO: org-[name]/ls-[name]/iface-[mode]
Affected MO: org-[name]/tier-[name]/ls-[name]/iface-[mode]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/iface-[mode]

Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/boardController/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/iface-[mode]
Affected MO: sys/fex-[id]/mgmt/iface-[mode]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/iface-[mode]
Affected MO: sys/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/mgmt/iface-[mode]
Affected MO: sys/switch-[id]/mgmt/iface-[mode]

fltMgmtInterfaceInbandUnsupportedFirmware

Fault Code: F1456

Message: [configMessage]

Explanation:

This fault occurs if there is an issue in Inband interface configuration.

Recommended Action:

If you see this fault check if the VLAN configured on Inband IP is created and the VLAN is present in the Inband Profile or IP address is configured

Fault Details

```
Severity: minor
Cause: unsupported-cimc-firmware
mibFaultCode: F1456
mibFaultName: fltMgmtInterfaceInbandUnsupportedFirmware
moClass: mgmt:Interface
Type: management
autoCleared: true
Affected MO: org-[name]/ls-[name]/iface-[mode]
Affected MO: org-[name]/tier-[name]/ls-[name]/iface-[mode]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/boardController/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/iface-[mode]
```

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/iface-[mode]
Affected MO: sys/fex-[id]/mgmt/iface-[mode]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/iface-[mode]
Affected MO: sys/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/mgmt/iface-[mode]
Affected MO: sys/switch-[id]/mgmt/iface-[mode]

fltSwVlanPortNsResourceStatusWarning

Fault Code: F1464

Message: Total Available Vlan-Port Count on switch [switchId] is below 10%

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: near-max-limit
mibFaultCode: F1464
mibFaultName: fltSwVlanPortNsResourceStatusWarning
moClass: sw:VlanPortNs
Type: management
autoCleared: true
Affected MO: sys/switch-[id]/vlan-port-ns

fltNetworkElementMemoryerror

Fault Code: F1465

Message: Fabric Interconnect [id] memory less than expected! Total Memory: [totalMemory] and Expected Memory: [expectedMemory]

Explanation:

This fault occurs when the total memory on FI is less than expected.

Recommended Action:

If you see this fault, take the following actions:

1. You will need to do a manual physical inspection of the DIMMs on the FI. Try removing and reinserting the DIMMs, and verify the Total Memory. If this does not resolve the issue, one of the DIMMs has gone bad and needs to be replaced.
2. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: memory-error
mibFaultCode: F1465
mibFaultName: fltNetworkElementMemoryerror
moClass: network:Element
Type: equipment
autoCleared: true
Affected MO: sys/switch-[id]
```

fltComputePhysicalAdapterMismatch

Fault Code: F1467

Message: Server [id] (service profile: [assignedToDn]) has invalid adapter combinatonServer [chassisId]/[slotId] (service profile: [assignedToDn]) has invalid adapter combination

Explanation:

This fault typically occurs because Cisco UCS Manager has detected that the server has an invalid combination of Cisco VICs.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the valid adapter combinations are installed configuration.
2. Reacknowledge the server.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: adaptor-mismatch
mibFaultCode: F1467
mibFaultName: fltComputePhysicalAdapterMismatch
moClass: compute:Physical
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

```
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fltNetworkElementRemoved

Fault Code: F1493

Message: Fabric Interconnect [id] operability: [operability]

Explanation:

This fault occurs when the fabric interconnect is removed in a clustering setup.

Recommended Action:

If you see this fault, take the following actions:

1. Reinsert the removed fabric interconnect back into the chassis (applicable to UCS-Mini only).
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: equipment-removed
mibFaultCode: F1493
mibFaultName: fltNetworkElementRemoved
moClass: network:Element
Type: equipment
autoCleared: true
Affected MO: sys/switch-[id]
```

fltPowerBudgetChassisPsuMixedMode

Fault Code: F1498

Message: Chassis [id] has a mix of high-line and low-line PSU input power sources.

Explanation:

This fault occurs when there is a mix of high-line and low-line PSU input power source.

Recommended Action:

If you see this fault, change all the PSU input power sources to have same mode

Fault Details

```
Severity: critical
Cause: psu-mixed-mode
mibFaultCode: F1498
mibFaultName: fltPowerBudgetChassisPsuMixedMode
moClass: power:Budget
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/budget
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/budget
Affected MO: sys/chassis-[id]/budget
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/budget
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/budget
Affected MO: sys/fex-[id]/budget
```

```
Affected MO: sys/rack-unit-[id]/budget
Affected MO: sys/rack-unit-[id]/ext-board-[id]/budget
Affected MO: sys/switch-[id]/budget
```

fltPowerBudgetPowerBudgetUnavailable

Fault Code: F1499

Message: Insufficient power available to power-on server [chassisId]/[slotId]Insufficient power available to power-on server [id]

Explanation:

This fault occurs when there is not enough power available to be allocated to a server.

Recommended Action:

If you see this fault, take the following actions:

1. Consider increasing the group cap.
2. Consider increasing the power available to a chassis by increasing PSUs connected and/or changing the PSU policy.
3. Reduce the number of blade servers powered-on and/or reduce the number of chassis in the Cisco UCS instance.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: power-budget-unavailable
mibFaultCode: F1499
mibFaultName: fltPowerBudgetPowerBudgetUnavailable
moClass: power:Budget
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/budget
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/budget
Affected MO: sys/chassis-[id]/budget
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/budget
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/budget
Affected MO: sys/fex-[id]/budget
Affected MO: sys/rack-unit-[id]/budget
Affected MO: sys/rack-unit-[id]/ext-board-[id]/budget
Affected MO: sys/switch-[id]/budget
```

fltStorageLocalDiskInaccessible

Fault Code: F1519

Message: Storage LocalDisk [id] is inaccessible. Reason: [operQualifierReason]

Explanation:

This fault occurs when the local disk is abnormal or bad. The fault description will contain the physical drive state, which indicates the reason for the degradation.

Recommended Action:

If you see this fault, take the following actions:

1. Resolve the fault on LocalDisk

Fault Details

```
Severity: major
Cause: equipment-inaccessible
mibFaultCode: F1519
mibFaultName: fltStorageLocalDiskInaccessible
moClass: storage:LocalDisk
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]
```

fltEquipmentChassisInvalid-fru

Fault Code: F1558

Message: Chassis [id] has a empty value for FRU identity reported by CMC.

Explanation:

This fault typically occurs when the FRU information for a chassis has empty value.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the capability catalog in Cisco UCS Manager is up to date. If necessary, update the catalog.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: fru-problem
mibFaultCode: F1558
mibFaultName: fltEquipmentChassisInvalidFru
moClass: equipment:Chassis
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]
```

fltEquipmentSwitchIOCardRemoved

Fault Code: F1559

Message: [side] FI IOM [chassisId]/[id] ([switchId]) is removed

Explanation:

This fault typically occurs because an FI I/O module is removed from the chassis. In a cluster configuration, the chassis fails over to the other FI I/O module. For a standalone configuration, the chassis associated with the FI I/O module loses network connectivity. This is a critical fault because it can result in the loss of network connectivity and disrupt data traffic through the FI I/O module.

Recommended Action:

If you see this fault, take the following actions:

1. Reinsert the FI I/O module and configure the fabric-interconnect ports connected to it as server ports and wait a few minutes to see if the fault clears.
2. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: equipment-removed
mibFaultCode: F1559
mibFaultName: fltEquipmentSwitchIOCardRemoved
moClass: equipment:SwitchIOCard
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/sw-slot-[id]
```

fltEquipmentSwitchIOCardThermalProblem

Fault Code: F1560

Message: [side] FI IOM [chassisId]/[id] ([switchId]) operState: [operState]

Explanation:

This fault occurs when there is a thermal problem on an FI I/O module. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the FI I/O module.
2. Review the Cisco UCS Site Preparation Guide to ensure the FI I/O modules have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis are not obstructed.
4. Verify that the site cooling system is operating properly.

5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Replace faulty FI I/O modules.
8. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
9. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: thermal-problem
mibFaultCode: F1560
mibFaultName: fltEquipmentSwitchIOCardThermalProblem
moClass: equipment:SwitchIOCard
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/sw-slot-[id]
```

fltEquipmentSwitchIOCardThermalThresholdNonCritical

Fault Code: F1561

Message: [side] FI IOM [chassisId]/[id] ([switchId]) sensor: [inlet1Sensor] temperature: [thermal]

Explanation:

This fault occurs when the temperature of an FI I/O module has exceeded a non-critical threshold value, but is still below the critical threshold. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).
- If sensors on a CPU reach 179.6F (82C), the system will take that CPU offline.

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the FI I/O module.
2. Review the Cisco UCS Site Preparation Guide to ensure the chassis and FI I/O modules have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis and FI I/O module are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.

6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
8. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: thermal-problem
mibFaultCode: F1561
mibFaultName: fltEquipmentSwitchIOCardThermalThresholdNonCritical
moClass: equipment:SwitchIOCard
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/sw-slot-[id]
```

fltEquipmentSwitchIOCardThermalThresholdCritical

Fault Code: F1562

Message: [side] FI IOM [chassisId]/[id] ([switchId]) sensor: [inlet1Sensor] temperature: [thermal]

Explanation:

This fault occurs when the temperature of an FI I/O module has exceeded a critical threshold value. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).
- If sensors on a CPU reach 179.6F (82C), the system will take that CPU offline.

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the FI I/O module.
2. Review the Cisco UCS Site Preparation Guide to ensure the chassis and FI I/O modules have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis and FI I/O module are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.

7. Replace the faulty FI I/O modules.
8. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
9. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: thermal-problem
mibFaultCode: F1562
mibFaultName: fltEquipmentSwitchIOCardThermalThresholdCritical
moClass: equipment:SwitchIOCard
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/sw-slot-[id]
```

fltEquipmentSwitchIOCardThermalThresholdNonRecoverable

Fault Code: F1563

Message: [side] FI IOM [chassisId]/[id] ([switchId]) sensor: [inlet1Sensor] temperature: [thermal]

Explanation:

This fault occurs when the temperature of an FI I/O module has been out of the operating range, and the issue is not recoverable. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).
- If sensors on a CPU reach 179.6F (82C), the system will take that CPU offline.

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the FI I/O module.
2. Review the Cisco UCS Site Preparation Guide to ensure the chassis and FI I/O modules have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis and FI I/O module are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Replace the faulty FI I/O modules.

8. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
9. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: thermal-problem
mibFaultCode: F1563
mibFaultName: fltEquipmentSwitchIOCardThermalThresholdNonRecoverable
moClass: equipment:SwitchIOCard
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/sw-slot-[id]
```

fltEquipmentSwitchIOCardPeerDisconnected

Fault Code: F1564

Message: FI IOM [chassisId]/[id] ([switchId]) peer connectivity: [peerCommStatus]

Explanation:

This fault typically occurs when an FI I/O module is unable to communicate with its peer FI I/O module.

Recommended Action:

If you see this fault, take the following actions:

1. Wait a few minutes to see if the fault clears. This is typically a temporary issue, and can occur after a firmware upgrade.
2. If the fault does not clear after a few minutes, remove and reinsert the FI I/O module.
3. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: equipment-disconnected
mibFaultCode: F1564
mibFaultName: fltEquipmentSwitchIOCardPeerDisconnected
moClass: equipment:SwitchIOCard
Type: connectivity
autoCleared: true
Affected MO: sys/chassis-[id]/sw-slot-[id]
```

fltEquipmentSwitchIOCardIdentity

Fault Code: F1565

Message: [side] FI IOM [chassisId]/[id] ([switchId]) has a malformed FRU

Explanation:

This fault typically occurs when the FRU information for an FI I/O module is corrupted or malformed.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the capability catalog in Cisco UCS Manager is up to date. If necessary, update the catalog.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: fru-problem
mibFaultCode: F1565
mibFaultName: fltEquipmentSwitchIOCardIdentity
moClass: equipment:SwitchIOCard
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/sw-slot-[id]
```

fltEquipmentSwitchIOCardCpuThermalThresholdCritical

Fault Code: F1566

Message: [side] FI IOM [chassisId]/[id] ([switchId]) processor temperature exceeded the limit

Explanation:

This fault typically occurs when the processor temperature in FI-IOM exceeds the limit.

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the FI I/O module.
2. Review the Cisco UCS Site Preparation Guide to ensure the chassis and FI I/O modules have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis and FI I/O module are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Replace the faulty FI I/O modules.
8. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
9. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: thermal-problem
```

```
mibFaultCode: F1566
mibFaultName: fltEquipmentSwitchIOCardCpuThermalThresholdCritical
moClass: equipment:SwitchIOCard
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/sw-slot-[id]
```

fltStorageLocalDiskThermalIssueCritical

Fault Code: F1604

Message: Local disk [id] on server [chassisId]/[slotId] has thermal issue: [thermal]Local disk [id] on server [id] has thermal issue: [thermal]Local disk [id] on chassis [id] has thermal issue: [thermal]Local disk [id] on storage enclosure [id] has thermal issue: [thermal]

Explanation:

This fault occurs when the local drive is experiencing a critical thermal issue.

Recommended Action:

If you see this fault, take the following actions:

1. If only one drive is too hot, replace the drive.
2. If many drives are too hot, remove the server.
3. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: thermal-problem
mibFaultCode: F1604
mibFaultName: fltStorageLocalDiskThermalIssueCritical
moClass: storage:LocalDisk
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]
```

fltStorageLocalDiskThermalIssueNonRecoverable

Fault Code: F1605

Message: Local disk [id] on server [chassisId]/[slotId] has thermal issue: [thermal]Local disk [id] on server [id] has thermal issue: [thermal]Local disk [id] on chassis [id] has thermal issue: [thermal]Local disk [id] on storage enclosure [id] has thermal issue: [thermal]

Explanation:

This fault occurs when the local drive is experiencing a non-recoverable thermal issue.

Recommended Action:

If you see this fault, take the following actions:

1. If only one drive is too hot, replace the drive.
2. If many drives are too hot, remove the server.
3. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: thermal-problem
mibFaultCode: F1605
mibFaultName: fltStorageLocalDiskThermalIssueNonRecoverable
moClass: storage:LocalDisk
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]
```

fltStorageLocalDiskNot-supported

Fault Code: F1606

Message: Local disk [id] is not supported on server [chassisId]/[slotId]Local disk [id] is not supported on server [id]Local disk [id] is not supported on chassis [id]Local disk [id] is not supported on storage enclosure [id]

Explanation:

This fault occurs when the local disk is not supported on this server or chassis.

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: not-supported
mibFaultCode: F1606
mibFaultName: fltStorageLocalDiskNotSupported
moClass: storage:LocalDisk
```

```
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]
```

fltFabricComputeMSlotEpMisplacedInChassisSlot

Fault Code: F1616

Message: Server, vendor([vendor]), model([model]), serial([serial]) in slot [chassisId]/[slotId]/[serverInstanceId] presence: [presence]

Explanation:

This fault typically occurs when Cisco UCS Manager detects a server in a slot that does not match what was previously equipped in the slot.

Recommended Action:

If you see this fault, take the following actions:

1. If the server was decommissioned, reacknowledge the server.
2. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: server-moved
mibFaultCode: F1616
mibFaultName: fltFabricComputeMSlotEpMisplacedInChassisSlot
moClass: fabric:ComputeMSlotEp
Type: equipment
autoCleared: true
Affected MO: fabric/server/chassis-[chassisId]/cart-slot-[slotId]/ins-[serverInstanceId]
```

fltFabricComputeMSlotEpServerIdentificationProblem

Fault Code: F1617

Message: Problem identifying server [serverInstanceId] in slot [chassisId]/[slotId]

Explanation:

This fault typically occurs when Cisco UCS Manager encountered a problem identifying the server in a cartridge slot.

Recommended Action:

If you see this fault, take the following actions:

1. Remove and reinsert the cartridge.
2. Reacknowledge the server.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: server-identification-problem
mibFaultCode: F1617
mibFaultName: fltFabricComputeMSlotEpServerIdentificationProblem
moClass: fabric:ComputeMSlotEp
Type: equipment
autoCleared: true
Affected MO: fabric/server/chassis-[chassisId]/cart-slot-[slotId]/ins-[serverInstanceId]
```

fltFabricCartridgeSlotEpMisplacedInChassisSlot

Fault Code: F1618

Message: Cartridge, vendor([vendor]), model([model]), serial([serial]) in slot [chassisId]/[slotId] presence: [presence]

Explanation:

This fault typically occurs when Cisco UCS Manager detects a cartridge in a chassis slot that does not match what was previously equipped in the slot.

Recommended Action:

If you see this fault, take the following actions:

1. If the previous cartridge was intentionally removed and a new one was inserted, reacknowledge the cartridge.
2. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: cartridge-moved
mibFaultCode: F1618
mibFaultName: fltFabricCartridgeSlotEpMisplacedInChassisSlot
moClass: fabric:CartridgeSlotEp
Type: equipment
autoCleared: true
Affected MO: fabric/server/chassis-[chassisId]/cart-slot-[slotId]
```

fltStorageControllerNot-supported

Fault Code: F1620

Message: Controller [id] is not supported on chassis [id]

Explanation:

This fault occurs when the storage controller is not supported on this chassis.

Recommended Action:

Check whether the storage controller is in the list of supported controllers. Replace with a supported controller.

Fault Details

```
Severity: critical
Cause: not-supported
mibFaultCode: F1620
mibFaultName: fltStorageControllerNotSupported
moClass: storage:Controller
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]
```

fltStorageVirtualDriveDeployment-failure

Fault Code: F1621

Message: Virtual drive [name] deployment failure. Reason: [configQualifierReason]

Explanation:

This fault indicates that UCSM found resources for a virtual drive but was unable to deploy it.

Recommended Action:

If you see this fault, take the following actions:

1. Verify the presence and health of disks that are used for the virtual drive deployment.
2. Alternatively, the fault can be cleared by deleting the DasScsiLun mo
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-inoperable
mibFaultCode: F1621
mibFaultName: fltStorageVirtualDriveDeploymentFailure
moClass: storage:VirtualDrive
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/vd-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/vd-container-[id]/vd-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/vd-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/vd-container-[id]/vd-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/vd-[id]
Affected MO: sys/chassis-[id]/vd-container-[id]/vd-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/vd-[id]
Affected MO: sys/rack-unit-[id]/vd-container-[id]/vd-[id]
```

fltStorageVirtualDriveMissing

Fault Code: F1622

Message: Virtual drive [name] missing

Explanation:

This fault indicates that the virtual drive was successfully deployed but it was later deleted.

Recommended Action:

If you see this fault, take the following actions:

1. The presence of this fault means that UCSM will attempt to re-create the virtual drive when the next association FSM occurs.
2. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-missing
mibFaultCode: F1622
mibFaultName: fltStorageVirtualDriveMissing
moClass: storage:VirtualDrive
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/vd-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/vd-container-[id]/vd-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/vd-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/vd-container-[id]/vd-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/vd-[id]
Affected MO: sys/chassis-[id]/vd-container-[id]/vd-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/vd-[id]
Affected MO: sys/rack-unit-[id]/vd-container-[id]/vd-[id]
```

fltStorageVirtualDriveMismatch

Fault Code: F1623

Message: Virtual drive [name] mismatch. Reason: [configQualifierReason]

Explanation:

This fault indicates that the virtual drive was successfully deployed but later, UCSM detected that the virtual drive did not match the configuration expected by UCSM.

Recommended Action:

If you see this fault, take the following actions:

1. To modify the DasScsiLun mo to match the actual virtual drive.
2. To use an LSI host utility to restore the virtual drive to the original configuration.
3. To to replace the failed or missing drive and use an LSI host utility to restore the virtual drive to the original configuration.
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

Severity: major
Cause: configuration-mismatch
mibFaultCode: F1623
mibFaultName: fltStorageVirtualDriveMismatch
moClass: storage:VirtualDrive
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/vd-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/vd-container-[id]/vd-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/vd-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/vd-container-[id]/vd-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/vd-[id]
Affected MO: sys/chassis-[id]/vd-container-[id]/vd-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/vd-[id]
Affected MO: sys/rack-unit-[id]/vd-container-[id]/vd-[id]

fltStorageVDMemberEpMismatch

Fault Code: F1624

Message: Virtual drive member [id] in a mismatched state. Reason: [operQualifierReason]

Explanation:

This fault indicates that a physical drive that is a member of the virtual drive is in a mismatched state.

Recommended Action:

If you see this fault, take the following actions:

1. Check the local disk referred by the VdMemberEp to see if it's expected beheavior.
2. If not expected, create a **show tech-support** file and contact Cisco TAC.

Fault Details

Severity: info
Cause: configuration-mismatch
mibFaultCode: F1624
mibFaultName: fltStorageVDMemberEpMismatch
moClass: storage:VDMemberEp
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/vd-[id]/member-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/vd-container-[id]/vd-[id]/member-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/vd-[id]/member-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/vd-container-[id]/vd-[id]/member-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/vd-[id]/member-[id]
Affected MO: sys/chassis-[id]/vd-container-[id]/vd-[id]/member-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/vd-[id]/member-[id]
Affected MO: sys/rack-unit-[id]/vd-container-[id]/vd-[id]/member-[id]

fltFirmwareBootUnitFirmwareBootFailed

Fault Code: F1627

Message: Endpoint firmware went faulty.

Explanation:

This fault typically occurs for the following reasons: when firmware activation fails, or if end-point booted up and went faulty.

- Firmware activation failed.
- The version of firmware running on the end-point went faulty.

Recommended Action:

If you see this fault, take the following actions:

1. Go to FSM tab or in cli for the endpoint on which the fault is raised and review the error description for the reason that the activation failed.
2. If the FSM failed, review the error message in the FSM.
3. If possible, correct the problem described in the error message.
4. If the problem persists, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: activation-failed
mibFaultCode: F1627
mibFaultName: fltFirmwareBootUnitFirmwareBootFailed
moClass: firmware:BootUnit
Type: management
autoCleared: true
Affected MO: capabilities/ep/mgmt-ext/fw-boot-def/bootunit-[type]
Affected MO: capabilities/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/bios/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/graphics-card-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/pmemory-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/nvme-switch-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pci-switch-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
```

sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/bios/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/bios/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/graphics-card-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/pmemory-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/nvme-switch-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/pci-switch-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/bios/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/psu-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/sas-expander-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/sas-expander-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/fex-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/fex-[id]/psu-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-enclosure-[id]/psu-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/bios/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/graphics-card-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/pmemory-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/nvme-switch-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/pci-switch-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/board/sas-expander-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:

sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/onboard-device-[deviceType]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/bios/fw-boot-def/bootunit-[type]
Affected MO:
sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/psu-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/switch-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/switch-[id]/psu-[id]/fw-boot-def/bootunit-[type]

fltAaaDefaultAuthDefaultAuthNotDeployed

Fault Code: F1668

Message: DefaultAuth can't be deployed. Error: [configStatusMessage]

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: defaultauth-config-error
mibFaultCode: F1668
mibFaultName: fltAaaDefaultAuthDefaultAuthNotDeployed
moClass: aaa:DefaultAuth
Type: security
autoCleared: true
Affected MO: sys/auth-realm/default-auth

fltAaaDomainDomainNotDeployed

Fault Code: F1669

Message: Domain [name] can't be deployed. Error: [configStatusMessage]

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: domain-config-error
mibFaultCode: F1669
mibFaultName: fltAaaDomainDomainNotDeployed

```
moClass: aaa:Domain
Type: security
autoCleared: true
Affected MO: sys/auth-realm/domain-[name]
```

fltLsServerFAULT

Fault Code: F1671

Message: The UUID stored in Service Profile [name] does not match the UUID stored in server [pnDn]

Explanation:

Because of a recent UCSM upgrade that fixed a bug relating to a change in Smbios endianness, UCSM inventory has an updated UUID that matches the UUID stored in BIOS, but the UUID stored in the Service Profile has not been updated and hence does not match

Recommended Action:

If you see this fault, take any one of the following actions:

1. Disassociate and reassociate the service profile
2. Decommision and recommision the server
3. Set a new UUID for the server

Fault Details

```
Severity: info
Cause: fault
mibFaultCode: F1671
mibFaultName: fltLsServerFAULT
moClass: ls:Server
Type: server
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fltMgmtBackupLocal Internal backup failed

Fault Code: F1672

Message: Local Internal backup failed while upgrade. Please re-trigger a manual backup.

Explanation:

This fault occurs when the local internal backup failed while upgrade

Recommended Action:

If you see this fault, take the following actions:

1. Please take a configuration backup

Fault Details

```
Severity: minor
Cause: local-internal-backup-failed
mibFaultCode: F1672
mibFaultName: fltMgmtBackupLocalInternalBackupFailed
```

```
moClass: mgmt:Backup
Type: management
autoCleared: true
Affected MO: sys/backup-[hostname]
```

fltVnicEtherCdn-config-not-applied

Fault Code: F1680

Message: CDN can not be applied for vnic [name] in Service Profile [name]

Explanation:

This fault typically occurs when CDN of a vnic is not applied due to adaptor hardware or firmware incompatibility

Recommended Action:

If you see this fault, take the following actions:

1. For a CDN supported adaptor, upgrade the firmware to a version where it is supported
2. For an unsupported adaptor, place the vnics manually on the supported adaptor only
3. In case CDN is not intended to be used, disable CDN in bios policy
4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: info
Cause: config-missing
mibFaultCode: F1680
mibFaultName: fltVnicEtherCdnConfigNotApplied
moClass: vnic:Ether
Type: configuration
autoCleared: true
Affected MO: org-[name]/lan-conn-pol-[name]/ether-[name]
Affected MO: org-[name]/ls-[name]/ether-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ether-[name]
```

fltComputePhysicalConnectivityDown

Fault Code: F1681

Message: Connectivity between the CIMC and one of the FIs is down. Connectivity may be down for expected reasons (e.g. FI/CIMC firmware upgrade).Connectivity between the CIMC and one of the FIs is down. Connectivity may be down for expected reasons (e.g. FI/CIMC firmware upgrade).Connectivity between the CIMC and one of the FIs is down. Connectivity may be down for expected reasons (e.g. FI/CIMC firmware upgrade).

Explanation:

This fault occurs if there are connectivity issues between the server's CIMC and one or both of the FIs. Please note that this management path loss will not impact the underlying OS communications.

Recommended Action:

If you see this fault, take the following actions:

1. Wait a few minutes to see if the fault clears. This is typically a temporary issue, and can occur during or after a firmware upgrade.
2. If the fault does not clear after a brief time, please reset the CIMC. This will not impact OS communications.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: info
Cause: equipment-inaccessible
mibFaultCode: F1681
mibFaultName: fltComputePhysicalConnectivityDown
moClass: compute:Physical
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fltStorageSasExpanderInoperable

Fault Code: F1685

Message: SAS Expander [id]/[id] operability: [operability]. Reason [operQualifierReason].

Explanation:

This fault indicates that a SAS Expander is not operable.

Recommended Action:

If you see this fault, take the following actions:

1. create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-inoperable
mibFaultCode: F1685
mibFaultName: fltStorageSasExpanderInoperable
moClass: storage:SasExpander
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]
```

fltStorageSasExpanderAccessibility-problem

Fault Code: F1686

Message: SAS Expander [id]/[id] operability: [operability]. Reason [operQualifierReason].

Explanation:

This fault indicates that a SAS Expander is unreachable.

Recommended Action:

If you see this fault, take the following actions:

1. create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-accessibility-problem
mibFaultCode: F1686
mibFaultName: fltStorageSasExpanderAccessibilityProblem
moClass: storage:SasExpander
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]
```

fltStorageSasExpanderDegraded

Fault Code: F1687

Message: SAS Expander [id]/[id] operability: [operability]. Reason [uplinkStateReason].

Explanation:

This fault indicates that a link in SAS Expander is in sub-optimal state.

Recommended Action:

If you see this fault, take the following actions:

1. create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: equipment-degraded
mibFaultCode: F1687
mibFaultName: fltStorageSasExpanderDegraded
moClass: storage:SasExpander
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]
```

fltStorageLocalDiskLink-degraded

Fault Code: F1688

Message: Local Disk [id]/[id]/[id] link state: [linkState]. Reason [linkStateReason].

Explanation:

This fault indicates that a link in storage Local disk is sub-optimal.

Recommended Action:

If you see this fault, take the following actions:

1. create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: equipment-link-degraded
mibFaultCode: F1688
mibFaultName: fltStorageLocalDiskLinkDegraded
moClass: storage:LocalDisk
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]
```

fltFabricFcSanNumOfVsanExceedLimit

Fault Code: F1694

Message: VSAN count for [dn] exceeds the limit.

Explanation:

This fault occurs when the number of VSANs exceed limit.

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: vsan-exceed-limit
mibFaultCode: F1694
mibFaultName: fltFabricFcSanNumOfVsanExceedLimit
moClass: fabric:FcSan
Type: configuration
autoCleared: true
Affected MO: fabric/san/[id]
```

fltSwVlanPortNsCompressedSetsExhaustedWarning

Fault Code: F1700

Message: Network configuration on switch [switchId] resulted in using up ALL of the optimization sets supported by hardware.

Explanation:

Cisco UCS Manager raises this fault when the fabric interconnect exhaust all of the Optimizatino sets to be programmed in hardware. This fault does not indicate any problem in the configuration. However, some current or future configuration may cause some error and appropriate alert will be shown. Only when you see any other alters, there could be a cause of concern.

Recommended Action:

If you see this fault, take the following actions:

1. Check if any configuration error is shown in UCSM and take actions recommended by those errors if any.

Fault Details

```
Severity: warning
Cause: compr-sets-exhausted
mibFaultCode: F1700
mibFaultName: fltSwVlanPortNsCompressedSetsExhaustedWarning
moClass: sw:VlanPortNs
Type: management
autoCleared: true
Affected MO: sys/switch-[id]/vlan-port-ns
```

fltNetworkElementKernelMemCricitalThreshold

Fault Code: F1701

Message: Fabric Interconnect [id] kernel low memory free reached critical level: [kernelMemFree] (MB).

Explanation:

This fault occurs when the kernel memory for the FI is below 100MB

Recommended Action:

If you see this fault:

1. Kernel LowFree memory dropped below the minimal watermark of 100 MB. Please collect tech-support info and contact Cisco Customer Support (TAC).
2. Also can log the memory footprint of the FI via "show system internal kernel meminfo"

Fault Details

```
Severity: major
Cause: kernel-mem-critical-threshold
mibFaultCode: F1701
mibFaultName: fltNetworkElementKernelMemCricitalThreshold
moClass: network:Element
Type: equipment
autoCleared: true
Affected MO: sys/switch-[id]
```

fltFlowctrlItemFlowctrlconfig

Fault Code: F1702

Message: Flow Control Policy: [name], has unsupported configuration. Priority Pause and Send/Receive Flow-control cannot be ON together, this policy configuration won't be applied until corrected.

Explanation:

This fault occurs when the flow-control policy has an unsupported config. This fault will be raised during upgrade/import operations.

Recommended Action:

If you see this fault, take the following actions:

1. Check the flow-control policy named in the fault message and correct the configuration on it to a supported configuration.

Fault Details

```
Severity: major
Cause: unsupported-policy-config
mibFaultCode: F1702
mibFaultName: fltFlowctrlItemFlowctrlconfig
moClass: flowctrl:Item
Type: configuration
autoCleared: true
Affected MO: fabric/lan/flowctrl/policy-[name]
```

fltNetworkElementSystemshutdown

Fault Code: F1703

Message: Fabric Interconnect [id] will reboot in 120 sec

Explanation:

This fault typically occurs when fans get removed or broken and the fabric interconnect will reboot.

Recommended Action:

If you see this fault, take the following actions:

1. Replace or Insert with a good fan.

Fault Details

```
Severity: critical
Cause: fan-removal
mibFaultCode: F1703
mibFaultName: fltNetworkElementSystemshutdown
moClass: network:Element
Type: equipment
autoCleared: true
Affected MO: sys/switch-[id]
```

fltMgmtHealthStatusHealthWarningIssue

Fault Code: F1704

Message: [healthQualifier] : Please check the Health tab for more details

Explanation:

This fault occurs when there is a warning health issue of a component (BMC/CIMC..)

Recommended Action:

If you see this fault, take the following actions:

1. create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: health-warning
mibFaultCode: F1704
mibFaultName: fltMgmtHealthStatusHealthWarningIssue
moClass: mgmt:HealthStatus
Type: management
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/health
Affected MO: sys/chassis-[id]/boardController/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/health
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/health
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/chassis-[id]/mgmt/health
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/health
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/health
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/health
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/health
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/health
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/health
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/health
```

Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/health
Affected MO: sys/fex-[id]/mgmt/health
Affected MO: sys/fex-[id]/slot-[id]/mgmt/health
Affected MO: sys/mgmt/health
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/boardController/mgmt/health
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/health
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/mgmt/health
Affected MO: sys/switch-[id]/health
Affected MO: sys/switch-[id]/mgmt/health

fltMgmtHealthStatusHealthMinorIssue

Fault Code: F1705

Message: [healthQualifier] : Please check the Health tab for more details

Explanation:

This fault occurs when there is a minor health issue of a component (BMC/CIMC..)

Recommended Action:

If you see this fault, take the following actions:

1. create a **show tech-support** file and contact Cisco TAC.

Fault Details

Severity: minor
Cause: health-minor
mibFaultCode: F1705
mibFaultName: fltMgmtHealthStatusHealthMinorIssue
moClass: mgmt:HealthStatus
Type: management
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/health
Affected MO: sys/chassis-[id]/boardController/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/health
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/health
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/chassis-[id]/mgmt/health
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/health
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/health
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/health
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/health
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/health
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/health
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/health
Affected MO: sys/fex-[id]/mgmt/health
Affected MO: sys/fex-[id]/slot-[id]/mgmt/health
Affected MO: sys/mgmt/health
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/boardController/mgmt/health
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/health
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/mgmt/health
Affected MO: sys/switch-[id]/health
Affected MO: sys/switch-[id]/mgmt/health

fltMgmtHealthStatusHealthMajorIssue

Fault Code: F1706

Message: [healthQualifier] : Please check the Health tab for more details[healthQualifier] : [description]

Explanation:

This fault occurs when there is a major health issue of a component (CMC/CIMC/FI)

Recommended Action:

If you see this fault, take the following actions:

1. If it is on CMC/CIMC component, create a **show tech-support** file and contact Cisco TAC.
2. If it is on FI with fault description starting with "SER Uncorrectable Error", then switch reboot is recommended. If this does not fix the problem, contact TAC.

Fault Details

```
Severity: major
Cause: health-major
mibFaultCode: F1706
mibFaultName: fltMgmtHealthStatusHealthMajorIssue
moClass: mgmt:HealthStatus
Type: management
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/health
Affected MO: sys/chassis-[id]/boardController/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/health
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/health
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/chassis-[id]/mgmt/health
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/health
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/health
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/health
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/health
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/health
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/health
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/health
```

Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/health
Affected MO: sys/fex-[id]/mgmt/health
Affected MO: sys/fex-[id]/slot-[id]/mgmt/health
Affected MO: sys/mgmt/health
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/boardController/mgmt/health
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/health
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/mgmt/health
Affected MO: sys/switch-[id]/health
Affected MO: sys/switch-[id]/mgmt/health

fltMgmtHealthStatusHealthCriticalIssue

Fault Code: F1707

Message: [healthQualifier] : Please check the Health tab for more details

Explanation:

This fault occurs when there is a critical health issue of a component (BMC/CIMC)

Recommended Action:

If you see this fault, take the following actions:

1. create a **show tech-support** file and contact Cisco TAC.

Fault Details

Severity: critical
Cause: health-critical
mibFaultCode: F1707
mibFaultName: fltMgmtHealthStatusHealthCriticalIssue
moClass: mgmt:HealthStatus
Type: management
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/health
Affected MO: sys/chassis-[id]/boardController/mgmt/health
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/health
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/health
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/health
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/chassis-[id]/mgmt/health
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/health
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/health
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/health
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/health
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/health
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/health
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/health
Affected MO: sys/fex-[id]/mgmt/health
Affected MO: sys/fex-[id]/slot-[id]/mgmt/health
Affected MO: sys/mgmt/health
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/boardController/mgmt/health
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/health
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/mgmt/health
Affected MO: sys/switch-[id]/health
Affected MO: sys/switch-[id]/mgmt/health

fltComputePhysicalDeprecated

Fault Code: F1708

Message: Server [id] (service profile: [assignedToDn]) discovery: [discovery] Hardware Deprecated or FRU not supportedServer [chassisId]/[slotId] (service profile: [assignedToDn]) discovery: [discovery] Hardware Deprecated or FRU not supportedServer [chassisId]/[slotId]/[serverInstanceId] (service profile: [assignedToDn]) discovery: [discovery] Hardware Deprecated or FRU not supported

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: discovery-failed
mibFaultCode: F1708
mibFaultName: fltComputePhysicalDeprecated
moClass: compute:Physical
Type: operational
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fltComputePhysicalAdapterFirmwareNeedsUpdate

Fault Code: F1709

Message: Some of the adapters in Server [chassisId]/[slotId] needs firmware update to operate in 40G mode.These adapters are currently configured in 4x10G mode

Explanation:

None set.

Recommended Action:

If you see this fault, take the following actions:

1. Update the Adapter Firmware in the blade and acknowledge the Chassis

Fault Details

```
Severity: minor
Cause: connectivity-problem
mibFaultCode: F1709
mibFaultName: fltComputePhysicalAdapterFirmwareNeedsUpdate
moClass: compute:Physical
Type: connectivity
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fltComputePhysicalIdentityUnestablishableOrDeprecated

Fault Code: F1710

Message: Server [id] (service profile: [assignedToDn]) has an invalid FRU. The server is either deprecated or not supportedServer [chassisId]/[slotId] (service profile: [assignedToDn]) has an invalid FRU. The server is either deprecated or not supported

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: identity-unestablishable
mibFaultCode: F1710
mibFaultName: fltComputePhysicalIdentityUnestablishableOrDeprecated
moClass: compute:Physical
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fltEquipmentIOCardDeprecated

Fault Code: F1713

Message: [side] IOM [chassisId]/[id] ([switchId]) is either deprecated or not supported

Explanation:

This fault typically occurs when the I/O module is deprecated.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the capability catalog in Cisco UCS Manager is the right version. If necessary, update the catalog.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: fru-problem
mibFaultCode: F1713
mibFaultName: fltEquipmentIOCardDeprecated
moClass: equipment:IOCard
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fltFabricSwChPhEpUncleanConfiguration

Fault Code: F1719

Message: Chassis [chassisId] has unclean configuration

Explanation:

This fault typically occurs when there is a unclean configuration after decommission the Chassis.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that if service profile is completely disassociate.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-removed
mibFaultCode: F1719
mibFaultName: fltFabricSwChPhEpUncleanConfiguration
moClass: fabric:SwChPhEp
Type: equipment
autoCleared: true
Affected MO: fabric/server/chassis-ep-ven-[vendor]-mod[model]-ser-[serial]
```

fltFabricComputeSlotEpNotSupportedInChassisSlot

Fault Code: F1720

Message: Server in slot [chassisId]/[slotId] is not supported on this platform

Explanation: This fault typically occurs when Cisco UCS Manager detects a server in a chassis slot is not supported on the current platform.

Recommended Action: If you see this fault, take the following actions:

Remove the server.

Fault Details

```
Severity: critical
Cause: equipment-inoperable
mibFaultCode: F1720
mibFaultName: fltFabricComputeSlotEpNotSupportedInChassisSlot
moClass: fabric:ComputeSlotEp
Type: equipment
autoCleared: true
Affected MO: fabric/server/chassis-[chassisId]/slot-[slotId]
```

fltFabricDceSwSrvEpDown

Fault Code: F1721

Message: Chassis discovery detected on port [slotId]/[portId]. UCS-FI-M-6324 platform does not support chassis discovery on non-scalability port

Explanation: This fault typically occurs when a non-scalability port is configured as server port to discover non-Primary Chassis on UCS-FI-6324 platform.

Recommended Action: If you see this fault, try the alternate action described below:

1. Unconfigure the server ports and move the cables from the regular port(s) on FI to scalability ports.

Fault Details

```
Severity: major
Cause: unsupported-config
mibFaultCode: F1721
mibFaultName: fltFabricDceSwSrvEpDown
```

moClass: fabric:DceSwSrvEp
Type: network
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/slot-[slotId]-port-[portId]
Affected MO: fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/slot-[slotId]-port-[portId]
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/slot-[slotId]-port-[portId]
Affected MO: fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/slot-[slotId]-port-[portId]
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/slot-[slotId]-port-[portId]
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/slot-[slotId]-port-[portId]
Affected MO: fabric/server/sw-[id]/slot-[slotId]-port-[portId]

fltStorageLocalDiskThermalIssueNonCritical

Fault Code: F1731

Message: Local disk [id] on server [chassisId]/[slotId] has thermal issue: [thermal]Local disk [id] on server [id] has thermal issue: [thermal]Local disk [id] on storage enclosure [id] has thermal issue: [thermal]

Explanation: This fault occurs when the local drive is experiencing a non critical thermal issue.

Recommended Action: If you see this fault, monitor other environmental events related to this server and ensure the temperature ranges are within recommended ranges. If the issue persists, take the following actions:

1. If only one drive is too hot, replace the drive.
2. If many drives are too hot, remove the server.
3. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

Severity: minor
Cause: thermal-problem
mibFaultCode: F1731
mibFaultName: fltStorageLocalDiskThermalIssueNonCritical
moClass: storage:LocalDisk
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]

fltStorageLocalDiskFailed

Fault Code: F1732

Message: Local disk [id] failed on server [chassisId]/[slotId]Local disk [id] failed on server [id]Local disk [id] failed on storage enclosure [id]

Explanation: This fault occurs when a disk goes bad.

Recommended Action: If you see this fault, take the following action:

1. Replace disk or send it to hardware team for further investigation.

Fault Details

Severity: info
Cause: equipment-failed
mibFaultCode: F1732
mibFaultName: fltStorageLocalDiskFailed
moClass: storage:LocalDisk
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]

fltEquipmentSystemIOControllerRemoved

Fault Code: F1744

Message: System IO Controller [chassisId]/[id] is removed

Explanation: This fault typically occurs because a System IO Controller is removed from the colusa chassis.This is a critical fault because it can result in the loss of network connectivity.

Recommended Action: If you see this fault, take the following actions:

1. Reinsert the System IO Controller and configure the fabric-interconnect ports connected to it as server ports and wait a few minutes to see if the fault clears.
2. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: equipment-removed
mibFaultCode: F1744
mibFaultName: fltEquipmentSystemIOControllerRemoved
moClass: equipment:SystemIOController
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
```

fltComputeRackUnitFanSpeedConfigurationFailed

Fault Code: F1745

Message: Server [id] (service profile: [assignedToDn]) Fan Speed Policy failed: [fanSpeedConfigStatus]

Explanation: This fault typically occurs because the set fan speed policy is not sufficient

Recommended Action: If you see this fault, take the following actions:

1. Increase the value of the fan speed policy in power control policy to a higher value.

Fault Details

```
Severity: info
Cause: equipment-degraded
mibFaultCode: F1745
mibFaultName: fltComputeRackUnitFanSpeedConfigurationFailed
moClass: compute:RackUnit
Type: equipment
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fltFabricEthLanNumOfVLANCompGrpExceedLimit

Fault Code: F1748

Message: VLAN compression group count for [dn] exceeds the limit.

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: vlan-comp-grp-count-exceeds-limit
mibFaultCode: F1748
mibFaultName: fltFabricEthLanNumOfVLANCompGrpExceedLimit
moClass: fabric:EthLan
Type: configuration
autoCleared: true
Affected MO: fabric/lan/[id]
```

fltFabricMulticastPolicySameOrEmptyPeerQuerierIp

Fault Code: F1749

Message: FI-B querier IP [querierIpAddrPeer] is empty or same as FI-A.

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: fi-b-querier-ip-empty-or-same-as-primary
mibFaultCode: F1749
mibFaultName: fltFabricMulticastPolicySameOrEmptyPeerQuerierIp
moClass: fabric:MulticastPolicy
Type: configuration
autoCleared: true
Affected MO: org-[name]/mc-policy-[name]
```

fltAdaptorUnitDeprecated

Fault Code: F1753

Message: Adapter [id] in server [id] may be deprecated or not supported.Adapter [id] in server [chassisId]/[slotId] may be deprecated or not supported.Adapter [id] in server [chassisId]/[slotId]/[serverInstanceId] may be deprecated or not supported.

Explanation:

This fault typically occurs because Cisco UCS Manager has detected an adapter that is deprecated in the current release.

Recommended Action:

If you see this fault, take the following actions:

1. Verify if the adapter is supported in the release and not deprecated
2. If the above action(s) did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: deprecated
mibFaultCode: F1753
mibFaultName: fltAdaptorUnitDeprecated
moClass: adaptor:Unit
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]
```

fltMgmtInterfaceInbandPinningInvalid

Fault Code: F1754

Message: [configMessage]

Explanation:

This fault occurs if the server interface is not pinned to any uplink.

Recommended Action:

If you see this fault check if there is any operational uplink that is configured with all VLANs specified in the Inband Profile

Fault Details

```
Severity: warning
Cause: invalid-pinning
mibFaultCode: F1754
mibFaultName: fltMgmtInterfaceInbandPinningInvalid
moClass: mgmt:Interface
Type: management
autoCleared: true
Affected MO: org-[name]/ls-[name]/iface-[mode]
Affected MO: org-[name]/tier-[name]/ls-[name]/iface-[mode]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/boardController/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/iface-[mode]
```

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/iface-[mode]
Affected MO: sys/fex-[id]/mgmt/iface-[mode]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/iface-[mode]
Affected MO: sys/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/mgmt/iface-[mode]
Affected MO: sys/switch-[id]/mgmt/iface-[mode]

fltEtherPIoInvalid-sfp

Fault Code: F1755

Message: Port [slotId]/[portId] on FI-[switchId] does not support CR4 (passive copper) cable

Explanation:

3GFI donner ports (last 6 40G ports) do not support "negotiate auto". When an CR4 (passive coper mode) cable is inserted, this fault will be raised

Recommended Action:

: If you see this fault, please replace a fabric cable into the 40G port.

Fault Details

Severity: major
Cause: unsupported-transceiver
mibFaultCode: F1755
mibFaultName: fltEtherPIoInvalidSfp
moClass: ether:PIo
Type: network
autoCleared: true
Affected MO: sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO:

```
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]
```

fltNetworkOperLevelExtravif

Fault Code: F1756

Message: Fabric Interconnect [id]: Number of VIFs configured exceeds the max limit on the FI: Number of VIFs configured: [vifCount] and Max VIFs allowed: [maxVifCount]

Explanation: This fault occurs when the fabric interconnect has more number of Virtual Interfaces (VIF) than what is supported.

Recommended Action: If you see this fault, take the following actions:

1. It is recommended that operator should delete the extra Virtual Interfaces(VIF) than are there in the FI. System may appear to be normally functioning even with these extra VIFs in place. However there may be performance issues observed as the system is operating above the recommended scale limits..
2. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: extra-vif
mibFaultCode: F1756
mibFaultName: fltNetworkOperLevelExtravif
moClass: network:OperLevel
Type: equipment
autoCleared: true
Affected MO: sys/switch-[id]/oper-level
```

fltNetworkElementDeprecated

Fault Code: F1757

Message: Fabric Interconnect [id] operability: [operability]

Explanation: This fault typically occurs when the fabric interconnect model is deprecated.

Recommended Action: If you see this fault, take the following actions:

1. Downgrade to the previous work release and plan your upgrade with a non-deprecated fabric interconnect model.

Fault Details

```
Severity: critical
Cause: equipment-deprecated
mibFaultCode: F1757
mibFaultName: fltNetworkElementDeprecated
moClass: network:Element
Type: equipment
```

```
autoCleared: true
Affected MO: sys/switch-[id]
```

fltFabricNetGroupNativeVlanNotFound

Fault Code: F1758

Message: Native VLAN [nativeNet] for VLAN group [name] cannot be found among the member vlans in the VLAN group.

Explanation:

This fault typically occurs when the native VLAN of the VLAN group is not found among the member vlans in the VLAN group.

Recommended Action:

If you see this fault, take the following action:

1. Create the member Vlan in the VLAN group.
2. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: native-vlan-not-found
mibFaultCode: F1758
mibFaultName: fltFabricNetGroupNativeVlanNotFound
moClass: fabric:NetGroup
Type: network
autoCleared: true
Affected MO: fabric/lan/[id]/net-group-[name]
Affected MO: fabric/lan/net-group-[name]
```

fltEquipmentChassisChassislimit-exceeded

Fault Code: F1761

Message: Chassis limit exceeded for this platform with the addition of chassis [id]

Explanation: This fault typically occurs because Cisco UCS Manager detects that the number of chassis present in the system exceeds the maximum number supported on the platform.

Recommended Action: If you see this fault, take the following actions:

1. Verify the maximum number of chassis supported in the platform from the release notes. If the number of chassis in the system is less than the maximum number supported, and the fault is still observed, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: chassis-limit-exceeded
mibFaultCode: F1761
mibFaultName: fltEquipmentChassisChassislimitExceeded
moClass: equipment:Chassis
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]
```

fltMgmtEntityDevice-1-shared-storage-connect error

Fault Code: F1766

Message: device [chassis1], error connecting to shared-storage management interface

Explanation:

This fault occurs in an unlikely event that the shared storage selected for writing the cluster state is not accessible. This fault is typically a transient fault. You might see this fault when one of the following occurs: (a) the Fabric Interconnect boots, (b) the IO Module is reset, (c) the rack server is reboot, or (d) system is upgraded/downgraded. If this fault is not cleared after the system returns to normal operation following the reboot/reset/upgrade/downgrade, then it may affect the full HA functionality of the Fabric Interconnect cluster.

Recommended Action:

If this fault is not cleared even after the system returns to normal operation, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: device-shared-storage-error
mibFaultCode: F1766
mibFaultName: fltMgmtEntityDevice1SharedStorageConnectError
moClass: mgmt:Entity
Type: management
autoCleared: true
Affected MO: sys/mgmt-entity-[id]
```

fltMgmtEntityDevice-2-shared-storage-connect error

Fault Code: F1767

Message: device [chassis2], error connecting to shared-storage management interface

Explanation:

This fault occurs in an unlikely event that the shared storage selected for writing the cluster state is not accessible. This fault is typically a transient fault. You might see this fault when one of the following occurs: (a) the Fabric Interconnect boots, (b) the IO Module is reset, (c) the rack server is reboot, or (d) system is upgraded/downgraded. If this fault is not cleared after the system returns to normal operation following the reboot/reset/upgrade/downgrade, then it may affect the full HA functionality of the Fabric Interconnect cluster.

Recommended Action:

If this fault is not cleared even after the system returns to normal operation, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: device-shared-storage-error
mibFaultCode: F1767
mibFaultName: fltMgmtEntityDevice2SharedStorageConnectError
moClass: mgmt:Entity
Type: management
autoCleared: true
Affected MO: sys/mgmt-entity-[id]
```

fltMgmtEntityDevice-3-shared-storage-connect error

Fault Code: F1768

Message: device [chassis3], error connecting to shared-storage management interface

Explanation:

This fault occurs in an unlikely event that the shared storage selected for writing the cluster state is not accessible. This fault is typically a transient fault. You might see this fault when one of the following occurs: (a) the Fabric Interconnect boots, (b) the IO Module is reset, (c) the rack server is reboot, or (d) system is upgraded/downgraded. If this fault is not cleared after the system returns to normal operation following the reboot/reset/upgrade/downgrade, then it may affect the full HA functionality of the Fabric Interconnect cluster.

Recommended Action:

If this fault is not cleared even after the system returns to normal operation, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: device-shared-storage-error
mibFaultCode: F1768
mibFaultName: fltMgmtEntityDevice3SharedStorageConnectError
moClass: mgmt:Entity
Type: management
autoCleared: true
Affected MO: sys/mgmt-entity-[id]
```

fltSwEthLanBorderVlan-limit-exceeded

Fault Code: F1778

Message: Maximum allowed VLANs limit has been exceeded, please delete the extra VLANs to ensure proper system functioning.

Explanation:

This fault typically occurs after upgrade, if the maximum allowed VLANs limit has changed in the new release.

Recommended Action:

If you see this fault, take the following actions:

1. Delete the extra VLANs in order to meet the limits defined in the new release. Current count and max allowed count details can be seen in UCSM CLI under 'system/upgrade-validation' scope.
2. Note: The VLANs associated with FCoE VSANs are also counted towards the overall max VLAN limit.
3. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: max-vlan-limit-exceeded
mibFaultCode: F1778
mibFaultName: fltSwEthLanBorderVlanLimitExceeded
moClass: sw:EthLanBorder
Type: network
```

```
autoCleared: true
Affected MO: sys/switch-[id]/border-eth
```

fltMgmtEntityMgmt-db-version-mismatch

Fault Code: F1781

Message: Management database version mismatch detected failover may not complete

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: replication-failure
mibFaultCode: F1781
mibFaultName: fltMgmtEntityMgmtDbVersionMismatch
moClass: mgmt:Entity
Type: management
autoCleared: true
Affected MO: sys/mgmt-entity-[id]
```

fltEquipmentTpmTpmMismatch

Fault Code: F1784

Message: Server [id], has a TPM mismatch.

Explanation:

This fault is raised due to incompatible CPU/TPM combination

Recommended Action:

If you see this fault, please check the TPM model used

1. Read fault summary and determine course of action.

Fault Details

```
Severity: warning
Cause: tpm-mismatch
mibFaultCode: F1784
mibFaultName: fltEquipmentTpmTpmMismatch
moClass: equipment:Tpm
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/Tpm-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/Tpm-[id]
Affected MO: sys/rack-unit-[id]/board/Tpm-[id]
```

fltEquipmentSharedIOModuleInaccessible

Fault Code: F1792

Message: Shared IO Module [id] of chassis [chassisId] is offline

Explanation:

This fault typically occurs because a Shared I/O module has lost its connection to the fabric interconnects. This is a critical fault because it can result in the loss of network connectivity and disrupt data traffic.

Recommended Action:

If you see this fault, take the following actions:

1. Wait a few minutes to see if the fault clears. This is typically a temporary issue, and can occur after a firmware upgrade.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: equipment-inaccessible
mibFaultCode: F1792
mibFaultName: fltEquipmentSharedIOModuleInaccessible
moClass: equipment:SharedIOModule
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/shared-io-module
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module
```

fltEquipmentChassisInaccessible-b

Fault Code: F1793

Message: Chassis not reachable from B side

Explanation:

This fault typically occurs because a Shared I/O module has lost its connection to B side FI. This is a major fault because it can result in the loss of network connectivity and disrupt data traffic on B side.

Recommended Action:

If you see this fault, take the following actions:

1. Wait a few minutes to see if the fault clears. This is typically a temporary issue, and can occur after a firmware upgrade.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-inaccessible
mibFaultCode: F1793
mibFaultName: fltEquipmentChassisInaccessibleB
moClass: equipment:Chassis
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]
```

fltEquipmentChassisInaccessible-a

Fault Code: F1794

Message: Chassis not reachable from A side

Explanation:

This fault typically occurs because a Shared I/O module has lost its connection to A side FI. This is a major fault because it can result in the loss of network connectivity and disrupt data traffic on A side.

Recommended Action:

If you see this fault, take the following actions:

1. Wait a few minutes to see if the fault clears. This is typically a temporary issue, and can occur after a firmware upgrade.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-inaccessible
mibFaultCode: F1794
mibFaultName: fltEquipmentChassisInaccessibleA
moClass: equipment:Chassis
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]
```

fltEquipmentSystemIOControllerThermalProblem

Fault Code: F1795

Message: System IO Controller [id] on Chassis [chassisId], operState: [operState]

Explanation:

This fault occurs when there is a thermal problem on an System I/O Controller module. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the I/O module.
2. Review the Cisco UCS Site Preparation Guide to ensure the I/O modules have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis are not obstructed.
4. Verify that the site cooling system is operating properly.

5. Power off unused servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Replace faulty I/O modules.
8. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
9. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: thermal-problem
mibFaultCode: F1795
mibFaultName: fltEquipmentSystemIOControllerThermalProblem
moClass: equipment:SystemIOController
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
```

fltEquipmentSystemIOControllerUnacknowledged

Fault Code: F1796

Message: System IO Controller [id] or its component in Chassis [chassisId] is replaced or re-inserted. Acknowledge the SIOC

Explanation:

System IO Controller is in un-acknowledged state. Cisco UCS Manager raises this fault when any of the following scenarios occur:

- Cisco UCS Manager detects a that the SystemIOController or its adapter is re-inserted or replaced.

Recommended Action:

If you see this fault, take the following actions:

1. Reacknowledge the SIOC.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-unacknowledged
mibFaultCode: F1796
mibFaultName: fltEquipmentSystemIOControllerUnacknowledged
moClass: equipment:SystemIOController
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
```

fltEquipmentIOCardBackPlanePortProblem

Fault Code: F1797

Message: One or more of the Backplane Ports are not up in IOM [chassisId]/[id] connected to FI [switchId]

Explanation:

This fault occurs when one or any of the backplane ports are failed:

Recommended Action:

If you see this fault, check the status of the backplane ports

Fault Details

```
Severity: major
Cause: backplane-port-problem
mibFaultCode: F1797
mibFaultName: fltEquipmentIOCardBackPlanePortProblem
moClass: equipment:IOCard
Type: network
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fltEquipmentSwitchIOCardBackPlanePortProblem

Fault Code: F1798

Message: One or more of the Backplane Ports are not up in IOM [chassisId]/[id] connected to FI [switchId]

Explanation:

This fault occurs when one or any of the backplane ports are failed:

Recommended Action:

If you see this fault, check the status of the backplane ports

Fault Details

```
Severity: major
Cause: backplane-port-problem
mibFaultCode: F1798
mibFaultName: fltEquipmentSwitchIOCardBackPlanePortProblem
moClass: equipment:SwitchIOCard
Type: network
autoCleared: true
Affected MO: sys/chassis-[id]/sw-slot-[id]
```

fltEquipmentFexBackPlanePortProblem

Fault Code: F1799

Message: One or more of the Backplane Ports are not up in FEX [id] connected to FI [switchId]

Explanation:

This fault occurs when one or any of the backplane ports are failed:

Recommended Action:

If you see this fault, check the status of the backplane ports

Fault Details

```
Severity: major
Cause: backplane-port-problem
mibFaultCode: F1799
mibFaultName: fltEquipmentFexBackPlanePortProblem
moClass: equipment:Fex
Type: network
autoCleared: true
Affected MO: sys/fex-[id]
```

fltFabricFcZoneProfileSwitch-mode-disabled

Fault Code: F1825

Message: FC User zones cannot be deployed because FI is not running in FC switch mode.

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: configuration-error
mibFaultCode: F1825
mibFaultName: fltFabricFcZoneProfileSwitchModeDisabled
moClass: fabric:FcZoneProfile
Type: configuration
autoCleared: true
Affected MO: fabric/fc-estc/zone-profile-[name]
```

fltFabricFcUserZoneConfigFailure

Fault Code: F1826

Message: FC User Zone [name] configuration failed as it reached max user defined or system zone configuration limit

Explanation:

Cisco UCS Manager cannot successfully deploy the FC User defined Zone due to a lack of resource that meet the named qualifier. This fault typically occurs as a result of exceeding the user defined zone limit or system zone limit

Recommended Action:

If you see this fault, take the following actions:

1. If the User defined zone count is above the limit, then free up any unused user defined zone.
2. If the User defined zone count is below the limit, but the system FC Zone count exceeds 8000, then try to free up unused zones from the service profile.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: configuration-failure
mibFaultCode: F1826
mibFaultName: fltFabricFcUserZoneConfigFailure
moClass: fabric:FcUserZone
Type: configuration
autoCleared: true
Affected MO: fabric/fc-estc/zone-profile-[name]/zone-[name]
```

fltStorageEnclosureThermalIssueNonCritical

Fault Code: F1831

Message: HDD MotherBoard on [id] has a thermal problem: [thermal]

Explanation:

This fault occurs when there is a thermal problem on an HDD MotherBoard module. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the I/O module.
2. Review the Cisco UCS Site Preparation Guide to ensure the I/O modules have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Replace faulty I/O modules.
8. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
9. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
```

```
Cause: thermal-problem
mibFaultCode: F1831
mibFaultName: fltStorageEnclosureThermalIssueNonCritical
moClass: storage:Enclosure
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]
Affected MO: sys/chassis-[id]/enc-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]
```

fltStorageEnclosureThermalIssueCritical

Fault Code: F1832

Message: HDD MotherBoard on [id] has a thermal problem: [thermal]

Explanation:

This fault occurs when there is a thermal problem on an HDD MotherBoard module. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the I/O module.
2. Review the Cisco UCS Site Preparation Guide to ensure the I/O modules have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Replace faulty I/O modules.
8. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
9. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: thermal-problem
mibFaultCode: F1832
mibFaultName: fltStorageEnclosureThermalIssueCritical
moClass: storage:Enclosure
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]
Affected MO: sys/chassis-[id]/enc-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]
```

fltStorageEnclosureThermalIssueNonRecoverable

Fault Code: F1833

Message: HDD MotherBoard on [id] has a thermal problem: [thermal]

Explanation:

This fault occurs when there is a thermal problem on an HDD MotherBoard module. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the I/O module.
2. Review the Cisco UCS Site Preparation Guide to ensure the I/O modules have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Replace faulty I/O modules.
8. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to

the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.

9. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: thermal-problem
mibFaultCode: F1833
mibFaultName: fltStorageEnclosureThermalIssueNonRecoverable
moClass: storage:Enclosure
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]
Affected MO: sys/chassis-[id]/enc-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]
```

fltStorageControllerDegraded

Fault Code: F1834

Message: Controller [id] on server [chassisId]/[slotId] is degraded. Reason: [operQualifierReason]Controller [id] on server [id] is degraded. Reason: [operQualifierReason]Controller [id] on chassis [id] is degraded. Reason: [operQualifierReason]

Explanation:

This fault occurs when the storage controller is degraded.

Recommended Action:

For NVMe SSD. If the problem persists, replace the controller.

Fault Details

```
Severity: critical
Cause: equipment-degraded
mibFaultCode: F1834
mibFaultName: fltStorageControllerDegraded
moClass: storage:Controller
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]
```

fltStorageSasExpanderLink-misconnect

Fault Code: F1835

Message: SAS Expander [id]/[id] uplink state: [uplinkState]. Reason [uplinkStateReason].

Explanation:

This fault indicates that a SAS Expander uplink state is misconnect.

Recommended Action:

If you see this fault, take the following actions:

1. create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-link-misconnect
mibFaultCode: F1835
mibFaultName: fltStorageSasExpanderLinkMisconnect
moClass: storage:SasExpander
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]
```

fltStorageSasExpanderLink-degraded

Fault Code: F1836

Message: SAS Expander [id]/[id] uplink state: [uplinkState]. Reason [uplinkStateReason].

Explanation:

This fault indicates that a SAS Expander uplink state is sub-optimal.

Recommended Action:

If you see this fault, take the following actions:

1. create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-link-degraded
mibFaultCode: F1836
mibFaultName: fltStorageSasExpanderLinkDegraded
moClass: storage:SasExpander
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]
```

fltStorageEnclosureMissing

Fault Code: F1837

Message: Enclosure [id]/[id] is missing.

Explanation:

This fault indicates that a removable enclosure is missing.

Recommended Action:

If you see this fault, take the following actions:

1. Run remove operation on that enclosure to cleanup.

Fault Details

```
Severity: minor
Cause: equipment-missing
mibFaultCode: F1837
mibFaultName: fltStorageEnclosureMissing
moClass: storage:Enclosure
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]
Affected MO: sys/chassis-[id]/enc-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]
```

fltStorageEnclosureFru-empty

Fault Code: F1838

Message: HDD Expansion Tray [id]/[id] FRU could not be identified.

Explanation:

This fault indicates that a HDD expansion tray is replaced and FRU details need to be fetched

Recommended Action:

If you see this fault, take the following actions:

1. Reset the active CMC

Fault Details

```
Severity: minor
Cause: equipment-fru-missing
mibFaultCode: F1838
mibFaultName: fltStorageEnclosureFruEmpty
moClass: storage:Enclosure
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]
Affected MO: sys/chassis-[id]/enc-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]
```

```
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]
```

fltStorageEnclosureDiskSlotEpMissing

Fault Code: F1839

Message: Disk Slot [id]/[id]/[id] is missing.

Explanation:

This fault indicates that a disk slot is missing.

Recommended Action:

If you see this fault, take the following actions:

1. If the slot is part of a removable enclosure, run remove operation on that enclosure to cleanup.
2. If the slot is part of a non-removeable, enclsoure, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: equipment-missing
mibFaultCode: F1839
mibFaultName: fltStorageEnclosureDiskSlotEpMissing
moClass: storage:EnclosureDiskSlotEp
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-slot-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-slot-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-slot-[id]
```

fltStorageEnclosureDiskSlotEpEquipment-inoperable

Fault Code: F1840

Message: Disk Slot [id]/[id]/[id] operability: [operability]. Reason [operQualifierReason].

Explanation:

This fault indicates that a disk slot is not operable.

Recommended Action:

If you see this fault, take the following actions:

1. create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-inoperable
```

```
mibFaultCode: F1840
mibFaultName: fltStorageEnclosureDiskSlotEpEquipmentInoperable
moClass: storage:EnclosureDiskSlotEp
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-slot-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-slot-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-slot-[id]
```

fltStorageEnclosureDiskSlotEpChassis-spare

Fault Code: F1841

Message: Chassis spare disk in slot [id]/[id]/[id] is assigned to a controller.

Explanation:

This fault indicates that a disk slot marked as chassis spare is assigned to a controller.

Recommended Action:

If you see this fault, take the following actions:

1. Replace the bad disk(s)

Fault Details

```
Severity: info
Cause: equipment-unavailable
mibFaultCode: F1841
mibFaultName: fltStorageEnclosureDiskSlotEpChassisSpare
moClass: storage:EnclosureDiskSlotEp
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-slot-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-slot-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-slot-[id]
```

fltStorageEnclosureDiskSlotEpHotspare-unsupported

Fault Code: F1842

Message: Slot [id]/[id]/[id] ownership is automatically unassigned since the controller(s) does not support chassis global hot spare.

Explanation:

This fault indicates that a disk slot ownership is automatically unassigned since the controller does not chassis wide hot spare.

Recommended Action:

If you see this fault, take the following actions:

1. Insert server(s) with hot spare supported storage controllers (or) change the ownership in disk zoning policy

Fault Details

```
Severity: minor
Cause: equipment-hotspare-unsupported
mibFaultCode: F1842
mibFaultName: fltStorageEnclosureDiskSlotEpHotspareUnsupported
moClass: storage:EnclosureDiskSlotEp
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-slot-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-slot-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-slot-[id]
```

fltStorageEnclosureDiskSlotEpSharing-unsupported

Fault Code: F1843

Message: Slot [id]/[id]/[id] ownership is automatically unassigned since the controller(s) does not support sharing.

Explanation:

This fault indicates that a disk slot ownership is automatically unassigned since the controller does not support sharing.

Recommended Action:

If you see this fault, take the following actions:

1. Insert server(s) with sharing supported storage controllers (or) change the ownership in disk zoning policy

Fault Details

```
Severity: minor
Cause: equipment-ownership-unsupported
mibFaultCode: F1843
mibFaultName: fltStorageEnclosureDiskSlotEpSharingUnsupported
moClass: storage:EnclosureDiskSlotEp
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-slot-[id]
Affected MO:
```

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-slot-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-slot-[id]

fltStorageEnclosureDiskSlotEploe-ownership-unassigned

Fault Code: F1844

Message: Slot [id]/[id]/[id] ownership is automatically unassigned since IO Expander with second controller is present in place of server in first slot.

Explanation:

This fault indicates that a disk slot ownership is automatically unassigned since IO Expander with second controller is present in place of server in first slot.

Recommended Action:

If you see this fault, take the following actions:

1. Insert server in first slot (or) change the ownership in disk zoning policy

Fault Details

Severity: minor
Cause: equipment-ioe-ownership-unassigned
mibFaultCode: F1844
mibFaultName: fltStorageEnclosureDiskSlotEpIoeOwnershipUnassigned
moClass: storage:EnclosureDiskSlotEp
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-slot-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-slot-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-slot-[id]

fltStorageEnclosureDiskSlotEpHddslot-server2-ownership-unassigned

Fault Code: F1845

Message: Slot [id]/[id]/[id] ownership is automatically unassigned since HDD Expansion Tray is present in place of server in second slot.

Explanation:

This fault indicates that a disk slot ownership is automatically unassigned since HDD Expansion Tray is present in place of server in second slot.

Recommended Action:

If you see this fault, take the following actions:

1. Insert server in second slot (or) change the ownership in disk zoning policy

Fault Details

```
Severity: minor
Cause: equipment-hddslot-server2-ownership-unassigned
mibFaultCode: F1845
mibFaultName: fltStorageEnclosureDiskSlotEpHddslotServer2OwnershipUnassigned
moClass: storage:EnclosureDiskSlotEp
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-slot-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-slot-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-slot-[id]
```

fltEquipmentChassisProfileFailed

Fault Code: F1846

Message: Chassis Profile [name] failed

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: equipment-failed
mibFaultCode: F1846
mibFaultName: fltEquipmentChassisProfileFailed
moClass: equipment:ChassisProfile
Type: chassis-profile
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fltEquipmentChassisProfileDiscoveryFailed

Fault Code: F1847

Message: Chassis Profile [name] discovery failed

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: discovery-failed
mibFaultCode: F1847
mibFaultName: fltEquipmentChassisProfileDiscoveryFailed
moClass: equipment:ChassisProfile
Type: chassis-profile
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fltEquipmentChassisProfileConfigFailure

Fault Code: F1848

Message: Chassis Profile [name] configuration failed due to [chassisConfigIssues],[storageConfigIssues]

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: configuration-failure
mibFaultCode: F1848
mibFaultName: fltEquipmentChassisProfileConfigFailure
moClass: equipment:ChassisProfile
Type: chassis-profile
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fltEquipmentChassisProfileRemoved

Fault Code: F1849

Message: Chassis Profile [name] underlying resource removed

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: equipment-removed
mibFaultCode: F1849
mibFaultName: fltEquipmentChassisProfileRemoved
moClass: equipment:ChassisProfile
Type: chassis-profile
autoCleared: true
```

```
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fltEquipmentChassisProfileInaccessible

Fault Code: F1850

Message: Chassis Profile [name] cannot be accessed

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: equipment-inaccessible
mibFaultCode: F1850
mibFaultName: fltEquipmentChassisProfileInaccessible
moClass: equipment:ChassisProfile
Type: chassis-profile
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fltEquipmentChassisProfileAssociationFailed

Fault Code: F1851

Message: Chassis Profile [name] association failed for [chassisDn]

Explanation:

The Chassis Profile could not be associated with the Chassis

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: association-failed
mibFaultCode: F1851
mibFaultName: fltEquipmentChassisProfileAssociationFailed
moClass: equipment:ChassisProfile
Type: chassis-profile
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fltEquipmentChassisProfileUnassociated

Fault Code: F1852

Message: Chassis Profile [name] is not associated

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unassociated
mibFaultCode: F1852
mibFaultName: fltEquipmentChassisProfileUnassociated
moClass: equipment:ChassisProfile
Type: chassis-profile
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fltFabricNetGroupRefNetSanGroupUnresolvable

Fault Code: F1873

Message: Network/SAN group does not exist or not permitted

Explanation:

This fault occurs when NetGroup/SanGroup referenced by the netGroupRef/SanGroupRef doesn't exist or netGroupRef/SanGroupRef MO are not in the same Org as Network Group/San Group.

Recommended Action:

If you see this fault, take the following actions:

1. Check if the NetGroup/SanGroup exists if not create one.
2. Check if the NetGroup/SanGroup is in the same Org as netGroupRef/SanGroupRef.

Fault Details

```
Severity: major
Cause: network-san-group-does-not-exist
mibFaultCode: F1873
mibFaultName: fltFabricNetGroupRefNetSanGroupUnresolvable
moClass: fabric:NetGroupRef
Type: configuration
autoCleared: true
Affected MO: fabric/lan/profiles/vnic-[name]/net-group-ref-[name]
Affected MO: org-[name]/lan-conn-pol-[name]/ether-[name]/net-group-ref-[name]
Affected MO: org-[name]/lan-conn-templ-[name]/net-group-ref-[name]
Affected MO: org-[name]/ls-[name]/ether-[name]/net-group-ref-[name]
Affected MO: org-[name]/san-conn-templ-[name]/net-group-ref-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ether-[name]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
```

Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/fruconp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/fruconp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/fruconp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/fruconp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:

sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/fru-comp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/fru-comp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/fru-comp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/fru-comp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-crc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-crc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-crc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-crc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/fru-comp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/fru-comp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-crc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/fru-comp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/fru-comp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-crc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-crc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-crc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-crc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/fabric-[switchId]/vc-[id]/vlan-crc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-crc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-crc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-crc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]/vlan-crc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-crc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-crc[id]/net-group-ref-[name]

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO: sys/chassis-[id]/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO: sys/chassis-[id]/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO: sys/chassis-[id]/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO: sys/chassis-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO: sys/chassis-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO: sys/chassis-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/sas-expander-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/sas-expander-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/sas-expander-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/sas-expander-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/shared-io-module/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/shared-io-module/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/shared-io-module/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/shared-io-module/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/slot-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/slot-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/slot-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/slot-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/slot-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/slot-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]

Affected MO:
sys/chassis-[id]/slot-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/sw-slot-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/sw-slot-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/chassis-[id]/sw-slot-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO: sys/fex-[id]/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/fex-[id]/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO: sys/fex-[id]/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO: sys/fex-[id]/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO: sys/fex-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/fex-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO: sys/fex-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO: sys/fex-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/fex-[id]/slot-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/fex-[id]/slot-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]

Affected MO: sys/fex-[id]/slot-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/fex-[id]/slot-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO: sys/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO: sys/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO: sys/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO: sys/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]

Affected MO:
sys/rack-unit-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/ext-board-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/ext-board-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/ext-board-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/ext-board-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO: sys/rack-unit-[id]/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO: sys/rack-unit-[id]/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO: sys/rack-unit-[id]/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO: sys/rack-unit-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO: sys/rack-unit-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/rack-unit-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO: sys/switch-[id]/ethlanflowmon/vc-[id]/net-group-ref-[name]
Affected MO: sys/switch-[id]/ethlanflowmon/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO: sys/switch-[id]/lanmon-eth/mon-[name]/vc-[id]/net-group-ref-[name]
Affected MO: sys/switch-[id]/lanmon-eth/mon-[name]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO: sys/switch-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/net-group-ref-[name]
Affected MO:
sys/switch-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO: sys/switch-[id]/mgmt/fabric-[switchId]/vc-[id]/net-group-ref-[name]
Affected MO: sys/switch-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]
Affected MO: sys/switch-[id]/sanmon-fc/mon-[name]/vc-[id]/net-group-ref-[name]
Affected MO: sys/switch-[id]/sanmon-fc/mon-[name]/vc-[id]/vlan-cmc[id]/net-group-ref-[name]

fltEtherPIoUnknownServerDevice

Fault Code: F1889

Message: [slotId]/[portId] on FI-[switchId] is connected by a unknown server device

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: info
Cause: port-misconfigure
mibFaultCode: F1889
mibFaultName: fltEtherPIoUnknownServerDevice
moClass: ether:PIo
Type: network
autoCleared: true
Affected MO: sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]
```

fltEtherPIoInterfaceMismatch

Fault Code: F1891

Message: Port [slotId]/[portId] on FI-[switchId] does not match with breakout cable

Explanation:

: 3GFI tranceiver type does not match interface type, this fault will be raised

Recommended Action:

: If you see this fault, please change interface to breakout.

Fault Details

```
Severity: minor
Cause: transceiver-mismatch
mibFaultCode: F1891
mibFaultName: fltEtherPIoInterfaceMismatch
moClass: ether:PIo
Type: network
autoCleared: true
Affected MO: sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
```

```
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]
```

fltAdaptorUnitPci-config-issue

Fault Code: F1892

Message: Adapter [id] in server [chassisId]/[slotId] is not visible to host

Explanation:

The adapter is not visible to the host OS. Cisco UCS Manager raises this fault when any of the following scenarios occur:

- The PCIe connecitivity to the chassis adapter is not configured for the server.
- Corresponding SIOC is missing.
- Single Server Dual SIOC connectivity is applied, and CIMC/BIOS firmware version does not support this feature.

Recommended Action:

If you see this fault, take the following actions:

1. Check if the corresponding SIOC is inserted in the chassis.
2. Check if CIMC/BIOS are running recommended firmware version.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: pci-config-issue
mibFaultCode: F1892
mibFaultName: fltAdaptorUnitPciConfigIssue
moClass: adaptor:Unit
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]
```

fltNetworkElementEvacuationon

Fault Code: F1893

Message: Fabric Interconnect [id] operEvacState: [operEvacState]

Explanation:

This fault typically occurs when the fabric interconnect is evacuated.

Recommended Action:

If you see this fault, take the following actions:

1. Ensure that the Evacuation option is switched off for the fabric interconnects.

Fault Details

```
Severity: info
Cause: fabric-evacuated
mibFaultCode: F1893
mibFaultName: fltNetworkElementEvacuationon
moClass: network:Element
Type: equipment
autoCleared: true
Affected MO: sys/switch-[id]
```

fltNetworkLimitUnicast-mac

Fault Code: F1894

Message: No. of unicast mac addresses ([actualCount]) on switch [id] has reached the upper limit([upperLimit]). Will get cleared when the count reaches the lower limit ([lowerLimit])

Explanation:

This fault typically occurs when number of unicast mac addreses on the fabric interconnect has exreched an upper threshold. It gets cleared when the numbers reaches a lower threshold

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: unicast-mac-exhausted
mibFaultCode: F1894
mibFaultName: fltNetworkLimitUnicastMac
moClass: network:Limit
Type: management
autoCleared: true
Affected MO: sys/switch-[id]/limit-type-[type]-asic-[asicNumber]
```

fltNetworkLimitMulticast-mac

Fault Code: F1895

Message: No. of multicast mac addresses ([actualCount]) on switch [id] has reached the upper limit([upperLimit]). Will get cleared when the count reaches the lower limit ([lowerLimit])

Explanation:

This fault typically occurs when number of multicast mac addreses on the fabric interconnect has reached an upper threshold. It gets cleared when the numbers reaches a lower threshold

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: multicast-mac-exhausted
mibFaultCode: F1895
mibFaultName: fltNetworkLimitMulticastMac
moClass: network:Limit
```

```
Type: management
autoCleared: true
Affected MO: sys/switch-[id]/limit-type-[type]-asic-[asicNumber]
```

fltNetworkLimitPvlifvlanmbr

Fault Code: F1896

Message: No. of PV LifVlanMbr count ([actualCount]) in the asic [asicNumber] corresponding to ports (eth [slotNumber]/[startPortNumber] through eth [slotNumber]/[endPortNumber]) on switch [id] has reached the upper limit ([upperLimit]). Will get cleared when the count reaches the lower limit ([lowerLimit])

Explanation:

This fault typically occurs when number of PV LifVlanMbr on a particular asic in the fabric interconnect has reached an upper threshold. It gets cleared when the numbers reaches a lower threshold

Recommended Action:

If you see this fault, take the following actions:

1. The user needs to remove the chassis from the current asic and move to a different asic

Fault Details

```
Severity: warning
Cause: pvlif-vlan-mbr-exhausted
mibFaultCode: F1896
mibFaultName: fltNetworkLimitPvlifvlanmbr
moClass: network:Limit
Type: management
autoCleared: true
Affected MO: sys/switch-[id]/limit-type-[type]-asic-[asicNumber]
```

fltNetworkLimitPvsystem

Fault Code: F1897

Message: No. of PV System count ([actualCount]) on switch [id] has reached the upper limit ([upperLimit]). Will get cleared when the count reaches the lower limit ([lowerLimit])

Explanation:

This fault typically occurs when number of PV System count on the fabric interconnect has reached an upper threshold. It gets cleared when the numbers reaches a lower threshold

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pvsystem-exhausted
mibFaultCode: F1897
mibFaultName: fltNetworkLimitPvsystem
moClass: network:Limit
Type: management
autoCleared: true
Affected MO: sys/switch-[id]/limit-type-[type]-asic-[asicNumber]
```

fltNetworkLimitIgmpgroup

Fault Code: F1898

Message: No. of IGMP Group count ([actualCount]) on switch [id] has reached the upper limit ([upperLimit]). Will get cleared when the count reaches the lower limit ([lowerLimit])

Explanation:

This fault typically occurs when number of IGMP group count on the fabric interconnect has reached an upper threshold. It gets cleared when the numbers reaches a lower threshold.

Recommended Action:

If you see this fault, take the following actions:

1.

Fault Details

```
Severity: warning
Cause: igmp-group-exhausted
mibFaultCode: F1898
mibFaultName: fltNetworkLimitIgmpgroup
moClass: network:Limit
Type: management
autoCleared: true
Affected MO: sys/switch-[id]/limit-type-[type]-asic-[asicNumber]
```

fltMgmtDbStateDb-corruption-detected

Fault Code: F1899

Message: Management database corruption detected and recovered on Fabric Interconnect [id]. Number of corruption events: [corruptedCount]. Last corruption event timestamp: [lastOccurrenceTime]

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: info
Cause: mgmt-db-corruption
mibFaultCode: F1899
mibFaultName: fltMgmtDbStateDbCorruptionDetected
moClass: mgmt:DbState
Type: management
autoCleared: true
Affected MO: sys/switch-[id]/mgmt-db-state
```

fltMgmtDbStateHigh-db-corruption-detected

Fault Code: F1900

Message: High number of management database corruption events on Fabric Interconnect [id]. Number of corruption events: [corruptedCount]. Number of corruption events: [corruptedCount]. Last corruption event timestamp: [lastOccurrenceTime]

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: mgmt-db-corruption
mibFaultCode: F1900
mibFaultName: fltMgmtDbStateHighDbCorruptionDetected
moClass: mgmt:DbState
Type: management
autoCleared: true
Affected MO: sys/switch-[id]/mgmt-db-state
```

fltEquipmentInventoryStatusHardwareMismatch

Fault Code: F1901

Message: Adaptor unit inventory mismatchPass through adaptor unit extension inventory mismatchGraphics card inventory mismatchSecurity unit inventory mismatchStorage controller inventory mismatchCPU inventory mismatchDIMM inventory mismatchMini storage inventory mismatch

Explanation:

UCSM raises this fault under the following conditions:

1. If any server hardware component is changed in a rack server without decommissioning the server.
2. If any server hardware component is changed in a non-rack server and the server is not acknowledged.

Recommended Action:

If you see this fault, take the following actions:

1. For rack servers, decommission and recommission the server if any hardware component is changed.
2. For non-rack servers, acknowledge the server if any hardware component is changed.
3. If no hardware component was changed, Create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: hardware-mismatch
mibFaultCode: F1901
mibFaultName: fltEquipmentInventoryStatusHardwareMismatch
moClass: equipment:InventoryStatus
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/adaptor-extn-[id]/inv-status
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/inv-status
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/inv-status
```

Affected MO: sys/chassis-[id]/blade-[slotId]/board/graphics-card-[id]/inv-status
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]/inv-status
Affected MO: sys/chassis-[id]/blade-[slotId]/board/mini-storage-[type]-[id]/inv-status
Affected MO: sys/chassis-[id]/blade-[slotId]/board/security-unit-[id]/inv-status
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/inv-status
Affected MO: sys/chassis-[id]/blade-[slotId]/inv-status
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/adaptor-extn-[id]/inv-status
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/inv-status
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/inv-status
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/graphics-card-[id]/inv-status
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/mem-[id]/inv-status
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/mini-storage-[type]-[id]/inv-status
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/security-unit-[id]/inv-status
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/inv-status
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/inv-status
Affected MO: sys/chassis-[id]/storage-[type]-[id]/inv-status
Affected MO: sys/rack-unit-[id]/adaptor-[id]/adaptor-extn-[id]/inv-status
Affected MO: sys/rack-unit-[id]/adaptor-[id]/inv-status
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/inv-status
Affected MO: sys/rack-unit-[id]/board/graphics-card-[id]/inv-status
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]/inv-status
Affected MO: sys/rack-unit-[id]/board/mini-storage-[type]-[id]/inv-status
Affected MO: sys/rack-unit-[id]/board/security-unit-[id]/inv-status
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/inv-status
Affected MO: sys/rack-unit-[id]/inv-status

fltEquipmentChassisPhysical-security

Fault Code: F1902

Message: Chassis [id] operability: [operability]Chassis [id] operability: [operability]

Explanation:

NOTE: This fault is not currently implemented by UCSMThis fault is present only as a placeholder, possibly for another release,such as stand-alone rack servers.--- UCSM raises this fault under the following conditions:

1. One or more of the chassis lids are open.

Recommended Action:

If you see this fault, take the following actions:

1. Close all the chassis lids.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

Severity: info
Cause: chassis-intrusion
mibFaultCode: F1902
mibFaultName: fltEquipmentChassisPhysicalSecurity

```
moClass: equipment:Chassis
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]
```

fltEquipmentComputeConnConfig-problem

Fault Code: F1903

Message: Second server is inserted on this Chassis when server sioc connectivity was set to: [serverSiocConnectivity]

Explanation:

NOTE: This fault is not currently implemented by UCSMThis fault is present only as a placeholder, possibly for another release,such as stand-alone rack servers.--- UCSM raises this fault under the following conditions:

1. Second server inserted into this chassis, when Single Server Dual SIOC connectivity was selected for the chassis..

Recommended Action:

If you see this fault, take the following actions:

1. Correct Single Server Dual VIC configuration.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: config-problem
mibFaultCode: F1903
mibFaultName: fltEquipmentComputeConnConfigProblem
moClass: equipment:ComputeConn
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/compute-conn
```

fltVnicEtherPrimaryVlanMissing

Fault Code: F1907

Message: Hard pinning target for eth vNIC [name], service profile [name] does not have the corresponding primary VLAN configured

Explanation:

This fault occurs when secondary VLAN configured on a vNIC has no corresponding primary VLAN configured on the target uplink port or port channel for a hard-pinned LAN pin group.

Recommended Action:

If you see this fault, take the following actions:

1. Review the LAN pin group configuration.
2. Correct the configuration of the port and port channels in the pin group.
3. In the LAN Uplinks Manager of the Cisco UCS Manager GUI, configure primary VLANs in the target uplink port or port channel for the corresponding secodary VLAN configured in the vNIC.

4. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: missing-primary-vlan
mibFaultCode: F1907
mibFaultName: fltVnicEtherPrimaryVlanMissing
moClass: vnic:Ether
Type: configuration
autoCleared: true
Affected MO: org-[name]/lan-conn-pol-[name]/ether-[name]
Affected MO: org-[name]/ls-[name]/ether-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ether-[name]
```

fltVnicEtherNetSanGroupMisconfigured

Fault Code: F1908

Message: Network/SAN group has been misconfigured

Explanation:

This fault occurs when native vlan of a vnicEtherIf and native vlan of a netGroup assigned to a vNIC are not same.

Recommended Action:

If you see this fault, take the following actions:

1. Change the native vlan on the vnicEtherIf or the NetGroup to be same.

Fault Details

```
Severity: major
Cause: network-san-group-misconfigured
mibFaultCode: F1908
mibFaultName: fltVnicEtherNetSanGroupMisconfigured
moClass: vnic:Ether
Type: configuration
autoCleared: true
Affected MO: org-[name]/lan-conn-pol-[name]/ether-[name]
Affected MO: org-[name]/ls-[name]/ether-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ether-[name]
```

fltComputePhysicalKmipFault

Fault Code: F1912

Message: Server [id] (service profile: [assignedToDn]) kmip fault [kmipFault]. Reason : [kmipFaultDescription].Server [chassisId]/[slotId] (service profile: [assignedToDn]) kmip fault [kmipFault]. Reason : [kmipFaultDescription].

Explanation:

This fault typically occurs Cisco UCS Manager has detected some issue with the KMIP server

Recommended Action:

None set.

Fault Details

```
Severity: minor
Cause: kmip-fault
mibFaultCode: F1912
mibFaultName: fltComputePhysicalKmipFault
moClass: compute:Physical
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fltComputePhysicalHardwareInventoryMismatch

Fault Code: F1913

Message: Server [id] hardware inventory mismatch. Decommission and recommission the server to clear the faultServer [chassisId]/[slotId] hardware inventory mismatch. Acknowledge the server to clear the fault

Explanation:

UCSM raises this fault under the following conditions:

1. If any server hardware component is changed in a rack server without decommissioning the server.
2. If any server hardware component is changed in a non-rack server and the server is not acknowledged.

Recommended Action:

If you see this fault, take the following actions:

1. For rack servers, decommission and recommission the server if any hardware component is changed.
2. For non-rack servers, acknowledge the server if any hardware component is changed.
3. If no hardware component was changed, Create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: hardware-inventory-mismatch
mibFaultCode: F1913
mibFaultName: fltComputePhysicalHardwareInventoryMismatch
moClass: compute:Physical
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fltComputePhysicalPciConfigMismatch

Fault Code: F1914

Message: Mismatch in PCIe configuration of the chassis adapters

Explanation:

UCSM raises this fault under the following conditions:

1. If the SIOC is replaced and the new SIOC is running pre 3.1.3 CMC firmware that does not support Single Server Dual SIOC connectivity for the chassis.

Recommended Action:

If you see this fault, take the following actions:

1. Re-trigger chassis profile association, to update the SIOC firmware and reconfigure server SIOC Connectivity
2. If SIOC was not replaced, Create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: pci-config-mismatch
mibFaultCode: F1914
mibFaultName: fltComputePhysicalPciConfigMismatch
moClass: compute:Physical
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fltStorageEnclosureDiskSlotEpSecond-controller-absent

Fault Code: F1915

Message: Slot [id]/[id]/[id] ownership is automatically unassigned because of unavailability of second storage controller in the server.

Explanation:

This fault indicates that a disk slot ownership is automatically unassigned because there were no second controller attached to the server.

Recommended Action:

If you see this fault, take the following actions:

1. Add a second controller to the server (or) change the ownership in disk zoning policy

Fault Details

```
Severity: minor
Cause: equipment-second-controller-absent
mibFaultCode: F1915
mibFaultName: fltStorageEnclosureDiskSlotEpSecondControllerAbsent
moClass: storage:EnclosureDiskSlotEp
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-slot-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-slot-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-slot-[id]
```

```
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-slot-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-slot-[id]
```

fltAdaptorUnitUnConnectedAdaptorReachability

Fault Code: F1926

Message: Adapter [id]/[id] is unreachableAdapter [chassisId]/[slotId]/[id] is unreachable

Explanation:

Cisco UCS Manager cannot access the adapter whose connectivity is not discovered. This fault typically occurs as a result of one of the following issues:

- The server does not have sufficient power.
- The I/O module is not functional.
- The adapter firmware has failed.
- The adapter is not functional
- The adapter is not connected to UCSM

Recommended Action:

If you see this fault, take the following actions:

1. Check the POST results for the server. In Cisco UCS Manager GUI, you can access the POST results from the General tab for the server. In Cisco UCS Manager CLI, you can access the POST results through the **show post** command under the scope for the server.
2. In Cisco UCS Manager, check the power state of the server.
3. Verify that the physical server has the same power state.
4. If the server is off, turn the server on.
5. If the server is not connected to UCSM, connect it if it needs to be managed by UCSM.
6. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: connectivity-problem
mibFaultCode: F1926
mibFaultName: fltAdaptorUnitUnConnectedAdaptorReachability
moClass: adaptor:Unit
Type: connectivity
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]
```

fltMgmtHealthStatusHealthInfoIssue

Fault Code: F1927

Message: [healthQualifier] : Please check the Health tab for more details

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: info
Cause: health-info
mibFaultCode: F1927
mibFaultName: fltMgmtHealthStatusHealthInfoIssue
moClass: mgmt:HealthStatus
Type: management
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/health
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/health
Affected MO: sys/chassis-[id]/boardController/mgmt/health
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/health
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/health
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/health
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/health
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/health
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/health
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/health
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/chassis-[id]/mgmt/health
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/health
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/health
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/health
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/health
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/health
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/health

```
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/health
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/health
Affected MO: sys/fex-[id]/mgmt/health
Affected MO: sys/fex-[id]/slot-[id]/mgmt/health
Affected MO: sys/mgmt/health
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/boardController/mgmt/health
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/health
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/health
Affected MO: sys/rack-unit-[id]/mgmt/health
Affected MO: sys/switch-[id]/health
Affected MO: sys/switch-[id]/mgmt/health
```

fltComputeRackUnitPhysical-security

Fault Code: F1932

Message: Chassis enclosure for server [id] is open

Explanation:

This fault is raised when chassis enclosure of the Rack Server is opened

Recommended Action:

If you see this fault, take the following actions:

1. Close the chassis enclosure for the rack server.

Fault Details

```
Severity: info
Cause: chassis-intrusion
mibFaultCode: F1932
mibFaultName: fltComputeRackUnitPhysicalSecurity
moClass: compute:RackUnit
Type: equipment
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fltBiosUnitFD0FailedSecurityVerification

Fault Code: F1933

Message: Bios Flash Descriptor 0 on server [chassisId]/[slotId] failed security verificationBios Flash Descriptor 0 on server [id] failed security verification

Explanation:

NOTE: This fault is not currently implemented by UCSMThis fault is present only as a placeholder, possibly for another release,such as stand-alone rack servers.--- This fault occurs when signature validation of BIOS

Flash Descriptor fails. Signature validation of BIOS occurs when server is A/C power on, pushed into a chassis or BIOS activation.

Recommended Action:

Please re-attempt BIOS update and activation with a known good image.

Fault Details

```
Severity: critical
Cause: image-corrupted
mibFaultCode: F1933
mibFaultName: fltBiosUnitFD0FailedSecurityVerification
moClass: bios:Unit
Type: security
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/bios
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/bios
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/bios
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/bios
Affected MO: sys/rack-unit-[id]/bios
Affected MO: sys/rack-unit-[id]/ext-board-[id]/bios
```

fltComputeBoardFailedSecureFuseValidation

Fault Code: F1934

Message: Intel PCH secure fuse fails validation on server [chassisId]/[slotId]Intel PCH secure fuse fails validation on server [id]

Explanation:

NOTE: This fault is not currently implemented by UCSMThis fault is present only as a placeholder, possibly for another release,such as stand-alone rack servers.--- This fault occurs when CIMC discovers a mis-programmed or compromised Intel PCH.

Recommended Action:

If this fault is seen in conjunction with fltBiosUnitFD0FailedSecurityVerification, please re-attempt BIOS update and activation. Then, reboot the CIMC. Otherwise, please contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: equipment-unhealthy
mibFaultCode: F1934
mibFaultName: fltComputeBoardFailedSecureFuseValidation
moClass: compute:Board
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board
Affected MO: sys/rack-unit-[id]/board
```

fltStorageControllerNon-optimal

Fault Code: F1945

Message: Controller [id] on server [chassisId]/[slotId] is operating in a non-optimal state. Reason: [operQualifierReason]Controller [id] on server [id] is operating in a non-optimal state. Reason:

[operQualifierReason]Controller [id] on chassis [id] is operating in a non-optimal state. Reason: [operQualifierReason]

Explanation:

This fault occurs when the NVMe controller is operating in a non-optimal state..

Recommended Action:

If the problem persists, replace the NVMe controller.

Fault Details

```
Severity: major
Cause: equipment-non-optimal
mibFaultCode: F1945
mibFaultName: fltStorageControllerNonOptimal
moClass: storage:Controller
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]
```

fltStorageFlexFlashCardIoerrors

Fault Code: F1946

Message: FlexFlash Card [slotNumber] on server [chassisId]/[slotId] is observing read/write IO ErrorsFlexFlash Card [slotNumber] on server [id] is observing read/write IO Errors.

Explanation: This fault occurs when the Flex Flash card has read/write errors.

Recommended Action: If you see this fault, take the following action:

1. Reformat the SD cards using Format SD Cards option. (or) Re-acknowledge the server by setting the Flex Flash scrub policy to yes. Please note that this action will erase all data in the card(s).
2. Verify the health of the card. If the above action did not resolve the issue, replace the card

Fault Details

```
Severity: info
Cause: equipment-unhealthy
mibFaultCode: F1946
mibFaultName: fltStorageFlexFlashCardIoerrors
moClass: storage:FlexFlashCard
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]/card-[slotNumber]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-flexflash-[id]/card-[slotNumber]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]/card-[slotNumber]
```

fltStorageNvmeSwitchDegraded

Fault Code: F1947

Message: MSwitch [id] on server [chassisId]/[slotId] operability: [operability]. Reason: [operQualifierReason]MSwitch [id] on server [id] operability: [operability]. Reason: [operQualifierReason]MSwitch [id] on chassis [id] operability: [operability]. Reason: [operQualifierReason]

Explanation: This fault occurs when the MSwitch is operating in a non-optimal state..

Recommended Action: If the problem persists, replace the MSwitch.

Fault Details

```
Severity: critical
Cause: equipment-degraded
mibFaultCode: F1947
mibFaultName: fltStorageNvmeSwitchDegraded
moClass: storage:NvmeSwitch
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/nvme-switch-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/nvme-switch-[id]
Affected MO: sys/rack-unit-[id]/board/nvme-switch-[id]
```

fltStorageLocalDiskUnhealthy

Fault Code: F1948

Message: Local disk [id] exceeding its threshold operating temperature on server [chassisId]/[slotId]Local disk exceeding its threshold operating temperature [id] failed on server [id]Local disk exceeding its threshold operating temperature [id] failed on storage enclosure [id]

Explanation: This fault occurs when a physical drive exceeding its threshold operating temperature.

Recommended Action: If you see this fault, take the following action:

Replace disk or send it to hardware team for further investigation.

Fault Details

```
Severity: major
Cause: equipment-unhealthy
mibFaultCode: F1948
mibFaultName: fltStorageLocalDiskUnhealthy
moClass: storage:LocalDisk
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]
```

fltAdaptorExtEthIfUnsupportedConection

Fault Code: F1949

Message: Adapter [id] eth interface [id] connection in server [id] is un-supported

Explanation: None set.

Recommended Action: None set.

Fault Details

```
Severity: major
Cause: connectivity-problem
mibFaultCode: F1949
mibFaultName: fltAdaptorExtEthIfUnsupportedConection
moClass: adaptor:ExtEthIf
Type: network
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]
```

fltComputeRackUnitUnsupportedConfig

Fault Code: F1955

Message: Unsupported configuration is found in server [id]. Reason: Mixing MSwitch with SAS/SATA controller is not supported.

Explanation:

UCSM raises this fault under the following conditions:

1. Mixing MSwitch with SAS/SATA controller is not supported.

Recommended Action:

If you see this fault, take the following actions:

1. If Mixing MSwitch with SAS/SATA controller is found, remove SAS/SATA Controller/cages from the server.

Fault Details

```
Severity: critical
Cause: unsupported-config
mibFaultCode: F1955
mibFaultName: fltComputeRackUnitUnsupportedConfig
moClass: compute:RackUnit
Type: equipment
autoCleared: false
Affected MO: sys/rack-unit-[id]
```

fltComputeRackUnitConfigMismatch

Fault Code: F1956

Message: Configuration mismatch found in server [id]. Reason: [operQualifierReason]

Explanation:

UCSM raises this fault under the following conditions:

1. If mismatch is found between the FWs/Revisions running on MSwitches.

Recommended Action:

If you see this fault, take the following actions:

1. If FW/Revision mismatch is found, install the same FW/Revision on all MSwitches.

Fault Details

```
Severity: critical
Cause: config-mismatch
mibFaultCode: F1956
mibFaultName: fltComputeRackUnitConfigMismatch
moClass: compute:RackUnit
Type: equipment
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fltMgmtKvmCertificateCertificate-unsupported

Fault Code: F1959

Message: KVM certificate configuration is not supported on Management Controller on server [chassisId]/[slotId]KVM certificate configuration is not supported on Management Controller on server [id]

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: minor
Cause: certificate-unsupported
mibFaultCode: F1959
mibFaultName: fltMgmtKvmCertificateCertificateUnsupported
moClass: mgmt:KvmCertificate
Type: management
autoCleared: true
Affected MO: org-[name]/kvm-mgmt-policy-[name]/cert
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/cert
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/cert
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/cert
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/cert
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/cert
```

Affected MO: sys/chassis-[id]/blade-[slotId]/kvm-mgmt-policy-[name]/cert
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/cert
Affected MO: sys/chassis-[id]/boardController/mgmt/cert
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/cert
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/cert
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/cert
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/cert
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/cert
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/cert
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/cert
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/cert
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/cert
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/cert
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/cert
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/kvm-mgmt-policy-[name]/cert
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/cert
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/cert
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/cert
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/cert
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/cert
Affected MO: sys/fex-[id]/mgmt/cert
Affected MO: sys/fex-[id]/slot-[id]/mgmt/cert
Affected MO: sys/mgmt/cert
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/cert
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/cert
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/cert
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/cert
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/cert
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/cert
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/cert
Affected MO: sys/rack-unit-[id]/boardController/mgmt/cert
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/cert
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/cert
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/cert
Affected MO: sys/rack-unit-[id]/kvm-mgmt-policy-[name]/cert
Affected MO: sys/rack-unit-[id]/mgmt/cert
Affected MO: sys/switch-[id]/mgmt/cert

fltMgmtKvmCertificateCertificate-empty-params

Fault Code: F1960

Message: KVM certificate parameters are incomplete on server [chassisId]/[slotId]KVM certificate parameters are incomplete on server [id]

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: minor
Cause: certificate-empty-params
mibFaultCode: F1960
mibFaultName: fltMgmtKvmCertificateCertificateEmptyParams
moClass: mgmt:KvmCertificate
Type: management
autoCleared: true
Affected MO: org-[name]/kvm-mgmt-policy-[name]/cert
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/cert
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/cert
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/cert
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/cert
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/blade-[slotId]/kvm-mgmt-policy-[name]/cert
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/cert
Affected MO: sys/chassis-[id]/boardController/mgmt/cert
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/cert
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/cert
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/cert
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/cert
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/cert
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/cert
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/cert
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/cert
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/cert
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/cert
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/cert
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/kvm-mgmt-policy-[name]/cert
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/cert
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/cert
```

Affected MO: sys/chassis-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/cert
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/cert
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/cert
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/cert
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/cert
Affected MO: sys/fex-[id]/mgmt/cert
Affected MO: sys/fex-[id]/slot-[id]/mgmt/cert
Affected MO: sys/mgmt/cert
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/cert
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/cert
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/cert
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/cert
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/cert
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/cert
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/cert
Affected MO: sys/rack-unit-[id]/boardController/mgmt/cert
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/cert
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/cert
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/cert
Affected MO: sys/rack-unit-[id]/kvm-mgmt-policy-[name]/cert
Affected MO: sys/rack-unit-[id]/mgmt/cert
Affected MO: sys/switch-[id]/mgmt/cert

fltVnicFcUnsupported

Fault Code: F1964

Message: FC/FCoE [name], service profile [name] is not supported when both the links are connected in a 3GFI Direct-Connect mode

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: info
Cause: vhba-not-supported
mibFaultCode: F1964
mibFaultName: fltVnicFcUnsupported
moClass: vnic:Fc
Type: configuration
autoCleared: false
Affected MO: org-[name]/ls-[name]/fc-[name]
Affected MO: org-[name]/san-conn-pol-[name]/fc-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/fc-[name]

fltNetworkLimitIftmcpv

Fault Code: F1965

Message: VP grouping switch resources are exhausted

Explanation:

This fault typically occurs when VP grouping switch resources are exhausted

Recommended Action:

If you see this fault, take the following actions:

1. Reduce the number of VNICs / VLans in the system

Fault Details

```
Severity: critical
Cause: iftmc-pv-exhausted
mibFaultCode: F1965
mibFaultName: fltNetworkLimitIftmcpv
moClass: network:Limit
Type: management
autoCleared: true
Affected MO: sys/switch-[id]/limit-type-[type]-asic-[asicNumber]
```

fltNetworkLimitDvif

Fault Code: F1966

Message: No. of Dvif count ([actualCount]) on switch [id] has reached the upper limit([upperLimit]). Will get cleared when the count reaches the lower limit ([lowerLimit])

Explanation:

This fault typically occurs when number of DVIF on the fabric interconnect has exreched an upper threshold. It gets cleared when the numbers reaches a lower threshold

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: dvif-exhausted
mibFaultCode: F1966
mibFaultName: fltNetworkLimitDvif
moClass: network:Limit
Type: management
autoCleared: true
Affected MO: sys/switch-[id]/limit-type-[type]-asic-[asicNumber]
```

fltFabricVsanReserved

Fault Code: F1967

Message: VSAN [name] is [configOverlap] because fcoeVlan-id [fcoeVlan] is in the reserved VLAN range

Explanation:

This fault typically occurs when the VSAN has the fcoeVlan ID in the reserved VLAN range.

Recommended Action:

If you see this fault, take the following actions:

1. Check the VSAN ID.
2. If the fcoeVlan ID of the VSAN is in the reserved range, recreate it outside the reserved VLAN range or change the reserved range.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: vsan-misconfigured
mibFaultCode: F1967
mibFaultName: fltFabricVsanReserved
moClass: fabric:Vsan
Type: network
autoCleared: true
Affected MO: fabric/fc-estc/[id]/net-[name]
Affected MO: fabric/fc-estc/net-[name]
Affected MO: fabric/san/[id]/net-[name]
Affected MO: fabric/san/net-[name]
```

fltFabricVlanReserved

Fault Code: F1968

Message: VLAN [name] is [configOverlap] because vlan-id [id] is in the reserved VLAN range

Explanation:

This fault typically occurs when VLAN is in the reserved VLAN range.

Recommended Action:

If you see this fault, take the following action:

1. Check the VLAN ID.
2. If the ID of the VLAN is in the reserved range, recreate the VLAN outside the reserved VLAN range or change the reserved range.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: vlan-misconfigured
mibFaultCode: F1968
mibFaultName: fltFabricVlanReserved
moClass: fabric:Vlan
Type: network
autoCleared: true
Affected MO: fabric/eth-estc/[id]/net-[name]
Affected MO: fabric/eth-estc/net-[name]
Affected MO: fabric/lan/[id]/net-[name]
Affected MO: fabric/lan/net-[name]
```

fltEquipmentSystemIOControllerInoperable

Fault Code: F1970

Message: System IO Controller [id] on Chassis [chassisId], operState: [operState]

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: inoperable
mibFaultCode: F1970
mibFaultName: fltEquipmentSystemIOControllerInoperable
moClass: equipment:SystemIOController
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
```

fltPciSwitchPci-switch

Fault Code: F1974

Message: Pci Switch [id] on server [id] is operating in a non-optimal state. Switch status: [health]

Explanation:

This fault typically occurs when the health of pci switch becomes non optimal

Recommended Action:

If you see this fault, take the following actions:

1. Create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: equipment-non-optimal
mibFaultCode: F1974
mibFaultName: fltPciSwitchPciSwitch
moClass: pci:Switch
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pci-switch-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/pci-switch-[id]
Affected MO: sys/rack-unit-[id]/board/pci-switch-[id]
```

fltStorageControllerNon-optimal-severe

Fault Code: F1975

Message: Controller [id] on server [chassisId]/[slotId] is operating in a non-optimal state. Reason: [operQualifierReason]Controller [id] on server [id] is operating in a non-optimal state. Reason: [operQualifierReason]Controller [id] on chassis [id] is operating in a non-optimal state. Reason: [operQualifierReason]

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: equipment-non-optimal
mibFaultCode: F1975
mibFaultName: fltStorageControllerNonOptimalSevere
moClass: storage:Controller
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]
```

fltEtherServerIntFIoError-disabled

Fault Code: F1979

Message: Port [slotId]/[portId] is error-disabled! Slow-Drain feature is [slowDrainAdminState], if enabled, you can try selecting the 'Correct Slow-Drain congestion' option on the IOM.

Explanation:

This fault shows that the port might've been error-disabled due to SlowDrain feature (if enabled).

Recommended Action:

If you see this fault, take the following actions:

1. Verify whether the SlowDrain QoS feature has been enabled globally. If yes, select the 'Correct Slow-Drain congestion' option under the IOM.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: interface-failed
mibFaultCode: F1979
mibFaultName: fltEtherServerIntFIoErrorDisabled
moClass: ether:ServerIntFIo
Type: network
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/rack-unit-[id]/diag/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]
```

fltEquipmentIOCardSlow-drain-recovery-fail

Fault Code: F1980

Message: Slow-drain recovery failed for IOM [chassisId]/[id] ([switchId])! Please retry the operation.

Explanation:

This fault typically occurs because a Slow-Drain recovery operation that was triggered on an I/O module could not complete successfully.

Recommended Action:

If you see this fault, take the following actions:

1. Retry the operation and verify if this fault clears within a few minutes.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: slow-drain-recovery-failure
mibFaultCode: F1980
mibFaultName: fltEquipmentIOCardSlowDrainRecoveryFail
moClass: equipment:IOCard
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fltCloudDeviceConnectorEpIntersightNotClaimed

Fault Code: F1981

Message: [description]

Explanation:

This fault occurs when Intersight management is enabled and UCSM device is unclaimed.

Recommended Action:

None set.

Fault Details

```
Severity: info
Cause: unclaimed-device
mibFaultCode: F1981
mibFaultName: fltCloudDeviceConnectorEpIntersightNotClaimed
moClass: cloud:DeviceConnectorEp
Type: equipment
autoCleared: true
Affected MO: sys/cloud-mgmt/device-connector
```

fltComputePhysicalPersistentMemoryDetected

Fault Code: F1994

Message: Persistent Memory module detected on Server [id]. Acknowledge the server to clear the faultPersistent Memory module detected on Server [chassisId]/[slotId]. Acknowledge the server to clear the fault

Explanation:

UCSM raises this fault under the following conditions:

1. If persistent-memory module is detected in a rack or non-rack server and the server is not acknowledged.

Recommended Action:

If you see this fault, take the following actions:

1. For both rack and non-rack server, acknowledge the server if persistent memory module is detected.
2. If no persistent memory module exists in the server, Create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: persistent-memory-detection
mibFaultCode: F1994
mibFaultName: fltComputePhysicalPersistentMemoryDetected
moClass: compute:Physical
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fltMemoryPersistentMemoryUnitDegraded

Fault Code: F1998

Message: Persistent Memory DIMM [location] on server [chassisId]/[slotId] operability: [operability]Persistent Memory DIMM [location] on server [id] operability: [operability]Persistent Memory DIMM [location] on server [chassisId]/[slotId]/[serverInstanceId] operability: [operability]

Explanation:

This fault occurs when a Persistent Memory DIMM is in a degraded operability state. This state typically occurs when an excessive number of correctable ECC errors are reported on the Persistent Memory DIMM by the server BIOS.

Recommended Action:

If you see this fault, take the following actions:

1. Monitor the error statistics on the degraded Persistent Memory DIMM through Cisco UCS Manager. If the high number of errors persists, there is a high possibility of the Persistent Memory DIMM becoming inoperable.
2. If the Persistent Memory DIMM becomes inoperable, replace the Persistent Memory DIMM
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: equipment-degraded
mibFaultCode: F1998
mibFaultName: fltMemoryPersistentMemoryUnitDegraded
```

```
moClass: memory:PersistentMemoryUnit
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/pmemory-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/pmemory-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/pmemory-[id]
```

fltMemoryPersistentMemoryUnitIdentity-unestablishable

Fault Code: F1999

Message: Persistent Memory DIMM [location] on server [chassisId]/[slotId] has an invalid FRUPersistent Memory DIMM [location] on server [id] has an invalid FRUPersistent Memory DIMM [location] on server [chassisId]/[slotId]/[serverInstanceId] has an invalid FRU

Explanation:

This fault typically occurs because Cisco UCS Manager has detected unsupported Persistent Memory DIMM in the server. For example, the model, vendor, or revision is not recognized.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the capability catalog in Cisco UCS Manager is up to date. If necessary, update the catalog.
2. If the above action did not resolve the issue, you may have unsupported Persistent Memory DIMM or Persistent Memory DIMM configuration in the server. Create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: identity-unestablishable
mibFaultCode: F1999
mibFaultName: fltMemoryPersistentMemoryUnitIdentityUnestablishable
moClass: memory:PersistentMemoryUnit
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/pmemory-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/pmemory-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/pmemory-[id]
```

fltMemoryPersistentMemoryUnitInoperable

Fault Code: F2000

Message: Persistent Memory DIMM [location] on server [chassisId]/[slotId] operability: [operability]Persistent Memory DIMM [location] on server [id] operability: [operability]Persistent Memory DIMM [location] on server [chassisId]/[slotId]/[serverInstanceId] operability: [operability]

Explanation:

This fault typically occurs because an above threshold number of correctable or uncorrectable errors has occurred on a Persistent Memory DIMM The Persistent Memory DIMM may be inoperable.

Recommended Action:

If you see this fault, take the following actions:

1. If the SEL is enabled, review the SEL statistics on the Persistent Memory DIMM to determine which threshold was crossed.
2. If necessary, replace the Persistent Memory DIMM
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-inoperable
mibFaultCode: F2000
mibFaultName: fltMemoryPersistentMemoryUnitInoperable
moClass: memory:PersistentMemoryUnit
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/pmemory-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/pmemory-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/pmemory-[id]
```

fltMemoryPersistentMemoryUnitDisabled

Fault Code: F2001

Message: Persistent Memory DIMM [location] on server [chassisId]/[slotId] operState: [operState]Persistent Memory DIMM [location] on server [id] operaState: [operState]Persistent Memory DIMM [location] on server [chassisId]/[slotId]/[serverInstanceId] operState: [operState]

Explanation:

This fault is raised when the server BIOS disables a Persistent Memory DIMM The BIOS could disable a Persistent Memory DIMM for several reasons, including incorrect location of the Persistent Memory DIMM or incompatible speed.

Recommended Action:

If you see this fault, refer to the Cisco UCS B-Series Troubleshooting Guide for information on how to resolve the Persistent Memory DIMM issues.

Fault Details

```
Severity: major
Cause: equipment-disabled
mibFaultCode: F2001
mibFaultName: fltMemoryPersistentMemoryUnitDisabled
moClass: memory:PersistentMemoryUnit
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/pmemory-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/pmemory-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/pmemory-[id]
```

fltMemoryPersistentMemoryUnitThermalThresholdNonCritical

Fault Code: F2002

Message: Persistent Memory DIMM [location] on server [chassisId]/[slotId] temperature: [thermal]Persistent Memory DIMM [location] on server [id] temperature: [thermal]Persistent Memory DIMM [location] on server [chassisId]/[slotId]/[serverInstanceId] temperature: [thermal]

Explanation:

This fault occurs when the temperature of a memory unit on a blade or rack server exceeds a non-critical threshold value, but is still below the critical threshold. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).
- If sensors on a CPU reach 179.6F (82C), the system will take that CPU offline.

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the server.
2. Review the Cisco UCS Site Preparation Guide to ensure the servers have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis or rack server are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
8. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: info
Cause: thermal-problem
mibFaultCode: F2002
mibFaultName: fltMemoryPersistentMemoryUnitThermalThresholdNonCritical
moClass: memory:PersistentMemoryUnit
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/pmemory-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/pmemory-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/pmemory-[id]
```

fltMemoryPersistentMemoryUnitThermalThresholdCritical

Fault Code: F2003

Message: Persistent Memory DIMM [location] on server [chassisId]/[slotId] temperature: [thermal]Persistent Memory DIMM [location] on server [id] temperature: [thermal]Persistent Memory DIMM [location] on server [chassisId]/[slotId]/[serverInstanceId] temperature: [thermal]

Explanation:

This fault occurs when the temperature of a memory unit on a blade or rack server exceeds a critical threshold value. Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).
- If sensors on a CPU reach 179.6F (82C), the system will take that CPU offline.

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the server.
2. Review the Cisco UCS Site Preparation Guide to ensure the servers have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis or rack server are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
8. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: thermal-problem
mibFaultCode: F2003
mibFaultName: fltMemoryPersistentMemoryUnitThermalThresholdCritical
moClass: memory:PersistentMemoryUnit
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/pmemory-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/pmemory-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/pmemory-[id]
```

fltMemoryPersistentMemoryUnitThermalThresholdNonRecoverable

Fault Code: F2004

Message: Persistent Memory DIMM [location] on server [chassisId]/[slotId] temperature: [thermal]Persistent Memory DIMM [location] on server [id] temperature: [thermal]Persistent Memory DIMM [location] on server [chassisId]/[slotId]/[serverInstanceId] temperature: [thermal]

Explanation:

This fault occurs when the temperature of a memory unit on a blade or rack server has been out of the operating range, and the issue is not recoverable.Be aware of the following possible contributing factors:

- Temperature extremes can cause Cisco UCS equipment to operate at reduced efficiency and cause a variety of problems, including early degradation, failure of chips, and failure of equipment. In addition, extreme temperature fluctuations can cause CPUs to become loose in their sockets.
- Cisco UCS equipment should operate in an environment that provides an inlet air temperature not colder than 50F (10C) nor hotter than 95F (35C).
- If sensors on a CPU reach 179.6F (82C), the system will take that CPU offline.

Recommended Action:

If you see this fault, take the following actions:

1. Review the product specifications to determine the temperature operating range of the server.
2. Review the Cisco UCS Site Preparation Guide to ensure the servers have adequate airflow, including front and back clearance.
3. Verify that the air flows on the Cisco UCS chassis or rack server are not obstructed.
4. Verify that the site cooling system is operating properly.
5. Power off unused blade servers and rack servers.
6. Clean the installation site at regular intervals to avoid buildup of dust and debris, which can cause a system to overheat.
7. Use the Cisco UCS power capping capability to limit power usage. Power capping can limit the power consumption of the system, including blade and rack servers, to a threshold that is less than or equal to the system's maximum rated power. Power-capping can have an impact on heat dissipation and help to lower the installation site temperature.
8. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: thermal-problem
mibFaultCode: F2004
mibFaultName: fltMemoryPersistentMemoryUnitThermalThresholdNonRecoverable
moClass: memory:PersistentMemoryUnit
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/pmemory-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/pmemory-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/pmemory-[id]
```

fltMemoryPersistentMemoryConfigurationNot-matching

Fault Code: F2005

Message: Persistent Memory configuration not matching

Explanation:

This fault typically occurs because the Persistent Memory configuration is not matching with the goal configuration in the associated policy.

Recommended Action:

If you see this fault, take one of the following actions based on the requirement:

1. Either configure the server through host OS such that it matches with the goal.
2. Or, change the goal configuration to match all the associated servers' configuration
3. Or, remove the association with the persistent memory policy
4. Or, force configure the goal configuation on all the associated servers
5. Or, if this fault is ignored then it would be tried when the force configuration on the policy is applied next time
6. If the above actions except the last one did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: equipment-config-not-matching
mibFaultCode: F2005
mibFaultName: fltMemoryPersistentMemoryConfigurationNotMatching
moClass: memory:PersistentMemoryConfiguration
Type: equipment
autoCleared: true
Affected MO: org-[name]/ls-[name]/pmemory-config
Affected MO: org-[name]/tier-[name]/ls-[name]/pmemory-config
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pmemory-config
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/pmemory-config
Affected MO: sys/rack-unit-[id]/board/pmemory-config
```

fltMemoryPersistentMemoryConfigurationNs-not-matching

Fault Code: F2006

Message: Persistent Memory namespaces in policy not matching

Explanation:

This fault typically occurs because the Persistent Memory configuration is not able to find one or more namespaces on the server corresponding to the logical namespace configuration in the associated policy.

Recommended Action:

If you see this fault, take one of the following actions based on the requirement:

1. Either configure the missing namespaces in the server through host OS such that it matches with the goal.

2. Or, force configure the policy configuation on all the associated servers
3. Or, if this fault is ignored then it would be tried when other configuration on the policy is applied next time
4. Or, remove the association with the persistent memory policy
5. If the above actions except the last one did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: equipment-namespace-not-matching
mibFaultCode: F2006
mibFaultName: fltMemoryPersistentMemoryConfigurationNsNotMatching
moClass: memory:PersistentMemoryConfiguration
Type: equipment
autoCleared: true
Affected MO: org-[name]/ls-[name]/pmemory-config
Affected MO: org-[name]/tier-[name]/ls-[name]/pmemory-config
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pmemory-config
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/pmemory-config
Affected MO: sys/rack-unit-[id]/board/pmemory-config
```

fltMemoryPersistentMemoryConfigResultConfig-error

Fault Code: F2007

Message: Persistent Memory configuration failed with error code: [configResult] and error description: [configErrorDesc]

Explanation:

This fault typically occurs when the Persistent Memory configuration has failed to apply on the server and resulted in an error

Recommended Action:

If you see this fault, take one of the following actions based on the requirement:

1. Please check the error code and description to find the where the issue occurred.
2. Also, check if the policy configuration matches with the server configuration and see if the policy configuration needs any change
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: equipment-config-error
mibFaultCode: F2007
mibFaultName: fltMemoryPersistentMemoryConfigResultConfigError
moClass: memory:PersistentMemoryConfigResult
Type: equipment
autoCleared: true
Affected MO: org-[name]/ls-[name]/pmemory-config/cfg-result
Affected MO: org-[name]/tier-[name]/ls-[name]/pmemory-config/cfg-result
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pmemory-config/cfg-result
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/pmemory-config/cfg-result
Affected MO: sys/rack-unit-[id]/board/pmemory-config/cfg-result
```

fltMemoryPersistentMemoryNamespaceConfigResultConfig-error

Fault Code: F2008

Message: Persistent Memory Namespace [name] configuration failed with error: [configStatus]

Explanation:

This fault typically occurs when the Persistent Memory Namespace configuration has failed to apply on the server and resulted in an error

Recommended Action:

If you see this fault, take one of the following actions based on the requirement:

1. Please check the error description to find the where the issue occurred.
2. Also, check if the policy configuration matches with the server configuration and see if the policy configuration needs any change
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: equipment-config-error
mibFaultCode: F2008
mibFaultName: fltMemoryPersistentMemoryNamespaceConfigResultConfigError
moClass: memory:PersistentMemoryNamespaceConfigResult
Type: equipment
autoCleared: true
Affected MO: org-[name]/ls-[name]/pmemory-config/cfg-result/nscr-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/pmemory-config/cfg-result/nscr-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pmemory-config/cfg-result/nscr-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/pmemory-config/cfg-result/nscr-[name]
Affected MO: sys/rack-unit-[id]/board/pmemory-config/cfg-result/nscr-[name]
```

fltMemoryPersistentMemoryNamespaceNot-matching

Fault Code: F2009

Message: Persistent Memory namespace not matching with the namespace in the policy or not present in the policy

Explanation:

This fault typically occurs because the Persistent Memory configuration found one or more namespaces that does not have the logical namespace configuration in the associated policy.

Recommended Action:

If you see this fault, take one of the following actions based on the requirement:

1. Either, ignore this fault, since the namespace would exists in the server and would not be managed by UCSM

2. Or, configure the missing logical namespaces in the associated policy so that it configures on all associated servers.
3. Or, remove the association with the persistent memory policy
4. If the above actions except the first one did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: info
Cause: equipment-config-not-matching
mibFaultCode: F2009
mibFaultName: fltMemoryPersistentMemoryNamespaceNotMatching
moClass: memory:PersistentMemoryNamespace
Type: equipment
autoCleared: true
Affected MO: org-[name]/ls-[name]/pmemory-config/region-[id]/ns-[uuid]
Affected MO: org-[name]/tier-[name]/ls-[name]/pmemory-config/region-[id]/ns-[uuid]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pmemory-config/region-[id]/ns-[uuid]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/pmemory-config/region-[id]/ns-[uuid]
Affected MO: sys/rack-unit-[id]/board/pmemory-config/region-[id]/ns-[uuid]
```

fltComputeBoardCpuTypeUnestablished

Fault Code: F2013

Message: CPU type on server [chassisId]/[slotId] is not known. Server reacknowledge may resolve the issue.CPU type on server [id] is not known. Server reacknowledge may resolve the issue.

Explanation:

This fault is raised when the CPU type is not inventoried.

Recommended Action:

None set.

Fault Details

```
Severity: info
Cause: identity-unestablishable
mibFaultCode: F2013
mibFaultName: fltComputeBoardCpuTypeUnestablished
moClass: compute:Board
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board
Affected MO: sys/rack-unit-[id]/board
```

fltEquipmentPsuUnsupported

Fault Code: F2014

Message: Power supply [id] on chassis [id] is not supportedPower supply [id] on server [id] is not supportedPower supply [id] on rack-enclosure [id] is not supported

Explanation:

This fault typically occurs because Cisco UCS Manager has detected an unsupported PSU. For example, the model, vendor, or revision is not recognized.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that a supported PSU is installed.
2. Verify that the capability catalog in Cisco UCS Manager is up to date. If necessary, update the catalog.
3. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipped-unsupported
mibFaultCode: F2014
mibFaultName: fltEquipmentPsuUnsupported
moClass: equipment:Psu
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-enclosure-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fltPciEquipSlotUnsecure

Fault Code: F2015

Message: PCIe Adapter [id] in server [id] is unsecure

Explanation:

Cisco UCS Manager raises this fault when it detects an un-secure PCIe adapter in the server.

Recommended Action:

If you see this fault, take the following actions:

1. Check the system manually for security failures and reacknowledge the server.
2. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: unsecure-adaptor
mibFaultCode: F2015
mibFaultName: fltPciEquipSlotUnsecure
moClass: pci:EquipSlot
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/equipped-slot-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/equipped-slot-[id]
Affected MO: sys/rack-unit-[id]/equipped-slot-[id]
```

fltStorageItemFilesystemcleanwitherrors

Fault Code: F2016

Message: Partition [name] on fabric interconnect [id] is clean but with errors. Please execute reboot e2fsck to clear the fault.

Explanation:

This fault occurs when the partition develops faults

Recommended Action:

If you see this fault, take the following actions:

1. Create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: minor
Cause: equipment-degraded
mibFaultCode: F2016
mibFaultName: fltStorageItemFilesystemcleanwitherrors
moClass: storage:Item
Type: equipment
autoCleared: true
Affected MO: sys/switch-[id]/stor-part-[name]
```

fltFirmwareSecureFPGAUnsecuredFPGA

Fault Code: F2023

Message: Endpoint FPGA firmware Unsecured.

Explanation:

This fault typically occurs for the following reasons: when running FPGA firmware on switch is unsecured.

- FPGA Firmware unsecure.
- The secure FPGA version has to be triggered.

Recommended Action:

If you see this fault, take the following actions:

1. Go to FSM tab or in cli for the endpoint on which the fault is raised and review the error description for the reason that the activation failed.
2. If the FSM failed, review the error message in the FSM.
3. If possible, correct the problem described in the error message.
4. If the problem persists, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: unsecured-fpga
mibFaultCode: F2023
mibFaultName: fltFirmwareSecureFPGAUnsecuredFPGA
```

```
moClass: firmware:SecureFPGA
Type: management
autoCleared: true
Affected MO: sys/switch-[id]/fw-secure-fpga
```

fltPciEquipSlotSpdmFault

Fault Code: F2042

Message: SPDM Fault on server [id] with Slot No. [id], Reason: [spdmFaultDesc]

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: spdm-fault
mibFaultCode: F2042
mibFaultName: fltPciEquipSlotSpdmFault
moClass: pci:EquipSlot
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/equipped-slot-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/equipped-slot-[id]
Affected MO: sys/rack-unit-[id]/equipped-slot-[id]
```

fltLsIssuesSpdmCertificatePolicyUnsupported

Fault Code: F2045

Message: Spdm certificate policy not supported by current CIMC version

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: minor
Cause: unsupported-cimc-firmware
mibFaultCode: F2045
mibFaultName: fltLsIssuesSpdmCertificatePolicyUnsupported
moClass: ls:Issues
Type: server
autoCleared: true
Affected MO: org-[name]/ls-[name]/config-issue
Affected MO: org-[name]/tier-[name]/ls-[name]/config-issue
```

fltStorageControllerSpdmFault

Fault Code: F2046

Message: SPDM Fault on server [id] with Slot No. [id], Reason: [spdmFaultDesc]

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: spdm-fault
mibFaultCode: F2046
mibFaultName: fltStorageControllerSpdmFault
moClass: storage:Controller
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]
```

fltEquipmentIOCardFabric-port-count-exceed

Fault Code: F2056

Message: Fabric Extender N9K-C93180YC-FX3 does not support more than 16 active fabric ports. Please reduce number of active fabric ports for FEX [chassisId].

Explanation:

UCSM raises this fault under the following conditions:

1. When there are more than 16 active fabric ports towards N9K-C93180YC-FX3 fabric extender.

Recommended Action:

If you see this fault, take the following actions:

1. Reduce active fabric ports to less or equal to 16 fabric ports towards N9K-C93180YC-FX3 fabric extender.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: fabric-port-count-exceed
mibFaultCode: F2056
mibFaultName: fltEquipmentIOCardFabricPortCountExceed
moClass: equipment:IOCard
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fltAdaptorHostEthIfAdaptorRingSizeValue

Fault Code: F2057

Message: Adapter [id] in server [id] does not support Ring Size more than 4096 for Receive and Transmit Queues. In such scenario Ring Size value will be capped to 4096. Reduce Ring Size to less than or 4096 to clear the warning.Adapter [id] in server [chassisId]/[slotId] does not support Ring Size more than 4096 for Receive and Transmit Queues. In such scenario Ring Size value will be capped to 4096. Reduce Ring Size to less than or 4096 to clear the warning.Adapter [id] in server [chassisId]/[slotId]/[serverInstanceId] does not support Ring Size more than 4096 for Receive and Transmit Queues. In such scenario Ring Size value will be capped to 4096. Reduce Ring Size to less than or 4096 to clear the warning.

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: exceeds-maxvalue
mibFaultCode: F2057
mibFaultName: fltAdaptorHostEthIfAdaptorRingSizeValue
moClass: adaptor:HostEthIf
Type: connectivity
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]
```

fltMemoryUnitPeer-dimm-disabled

Fault Code: F2058

Message: DIMM [location] on server [chassisId]/[slotId] operability: [operability]DIMM [location] on server [id] operability: [operability]DIMM [location] on server [chassisId]/[slotId]/[serverInstanceId] operability: [operability]

Explanation:

This fault typically occurs when a DIMM gets disabled because of Peer (Memory disabled -Other DIMM failed in same Channel) . The DIMM may be disabled.

Recommended Action:

If you see this fault, take the following actions:

1. If the SEL is enabled, review the SEL statistics on the DIMM to determine which threshold was crossed.
2. If necessary, replace the peer DIMM in the same channel.
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-peer-dimm-disabled
mibFaultCode: F2058
mibFaultName: fltMemoryUnitPeerDimmDisabled
moClass: memory:Unit
```

```
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/mem-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]
```

fltMemoryUnitDimm-disabled

Fault Code: F2059

Message: DIMM [location] on server [chassisId]/[slotId] operability: [operability]DIMM [location] on server [id] operability: [operability]DIMM [location] on server [chassisId]/[slotId]/[serverInstanceId] operability: [operability]

Explanation:

This fault typically occurs when a DIMM gets disabled because of a bad DIMM . The DIMM may be disabled.

Recommended Action:

If you see this fault, take the following actions:

1. If the SEL is enabled, review the SEL statistics on the DIMM to determine which threshold was crossed.
2. If necessary, replace the DIMM .
3. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-dimm-disabled
mibFaultCode: F2059
mibFaultName: fltMemoryUnitDimmDisabled
moClass: memory:Unit
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/mem-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]
```

fltPortPIoUplinkPortStpMisConfigured

Fault Code: F2060

Message: Uplink switch interface connected to the FI interface ethernet [slotId]/[aggrPortId]/[portId] is not configured in STP portfast/edge modeUplink switch interface connected to the FI interface ethernet [slotId]/[portId] is not configured in STP portfast/edge mode

Explanation:

This fault is raised against a fabric interconnect uplink port,if STP configuration on uplink switch towards FI interface is not portfast/STP.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: uplink-port-type-misconfigured
mibFaultCode: F2060
mibFaultName: fltPortPIoUplinkPortStpMisConfigured
moClass: port:PIo
Type: network
autoCleared: true
Affected MO: sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]
```

fltEtherServerIntFIoInvalid-sfp

Fault Code: F2061

Message: Port [slotId]/[portId] of FEX does not support 1G/10G transceiver

Explanation:

This fault shows that the port is having unsupported transceiver.

Recommended Action:

If you see this fault, take the following actions:

1. Verify the admin speed of backplane port. If it is 1G/10G, then please reconnect it with 25G SFP cable
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: warning
Cause: unsupported-transceiver
mibFaultCode: F2061
mibFaultName: fltEtherServerIntFIoInvalidSfp
moClass: ether:ServerIntFIo
Type: network
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/rack-unit-[id]/diag/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]
```

fltStorageLocalDiskSelftestfailed

Fault Code: F2062

Message: Local disk [id] on server [chassisId]/[slotId] Disk State: [diskState]. Reason: [operQualifierReason]Local disk [id] on server [id] Disk State: [diskState]. Reason: [operQualifierReason]Local disk [id] on storage enclosure [id] Disk State: [diskState]. Reason: [operQualifierReason]Local disk [id] on chassis [id] Disk State: [diskState]. Reason: [operQualifierReason]

Explanation:

This fault occurs when the local disk has become Self Test Failed.

Recommended Action:

If you see this fault, take the following actions:

1. Recommended to Replace the Drive which shows Self-Test-Failed with a Healthy Drive's.
2. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: major
Cause: equipment-selftestfailed
mibFaultCode: F2062
mibFaultName: fltStorageLocalDiskSelftestfailed
moClass: storage:LocalDisk
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]
```

fltEquipmentIOCardThermalNonCritical

Fault Code: F2063

Message: [side] IOM [chassisId]/[id] ([switchId]) sensor: [inlet2Sensor] temperature: [inlet2Thermal]

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: minor
```

```
Cause: thermal-problem
mibFaultCode: F2063
mibFaultName: fltEquipmentIOCardThermalNonCritical
moClass: equipment:IOCard
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fltEquipmentIOCardThermalCritical

Fault Code: F2064

Message: [side] IOM [chassisId]/[id] ([switchId]) sensor: [inlet2Sensor] temperature: [inlet2Thermal]

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: thermal-problem
mibFaultCode: F2064
mibFaultName: fltEquipmentIOCardThermalCritical
moClass: equipment:IOCard
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fltEquipmentIOCardThermalNonRecoverable

Fault Code: F2065

Message: [side] IOM [chassisId]/[id] ([switchId]) sensor: [inlet2Sensor] temperature: [inlet2Thermal]

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: thermal-problem
mibFaultCode: F2065
mibFaultName: fltEquipmentIOCardThermalNonRecoverable
moClass: equipment:IOCard
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fltEquipmentSwitchIOCardThermalNonCritical

Fault Code: F2066

Message: [side] FI IOM [chassisId]/[id] ([switchId]) sensor: [inlet2Sensor] temperature: [inlet2Thermal]

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: minor
Cause: thermal-problem
mibFaultCode: F2066
mibFaultName: fltEquipmentSwitchIOCardThermalNonCritical
moClass: equipment:SwitchIOCard
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/sw-slot-[id]
```

fltEquipmentSwitchIOCardThermalCritical

Fault Code: F2067

Message: [side] FI IOM [chassisId]/[id] ([switchId]) sensor: [inlet2Sensor] temperature: [inlet2Thermal]

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: thermal-problem
mibFaultCode: F2067
mibFaultName: fltEquipmentSwitchIOCardThermalCritical
moClass: equipment:SwitchIOCard
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/sw-slot-[id]
```

fltEquipmentSwitchIOCardThermalNonRecoverable

Fault Code: F2068

Message: [side] FI IOM [chassisId]/[id] ([switchId]) sensor: [inlet2Sensor] temperature: [inlet2Thermal]

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: thermal-problem
mibFaultCode: F2068
mibFaultName: fltEquipmentSwitchIOCardThermalNonRecoverable
moClass: equipment:SwitchIOCard
Type: environmental
autoCleared: true
Affected MO: sys/chassis-[id]/sw-slot-[id]
```

fltFabricEthLanPcUplinkPortChannelStpMisConfigured

Fault Code: F2069

Message: Uplink switch interface connected to the FI Port-channel [portId] is not configured in STP portfast/edge mode

Explanation:

This fault is raised against a fabric interconnect uplink portchannel,if STP configuration on uplink switch towards FI interface is not portfast/STP.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: uplink-port-channel-misconfigured
mibFaultCode: F2069
mibFaultName: fltFabricEthLanPcUplinkPortChannelStpMisConfigured
moClass: fabric:EthLanPc
Type: network
autoCleared: true
Affected MO: fabric/lan/[id]/pc-[portId]
```

fltCloudDeviceConnectorEpDisabledOrUnclaimedDevice

Fault Code: F2079

Message: UCS Manager requires an Intersight connection and Intersight Infrastructure Service Licenses for Cisco UCS X-Series and/or Cisco UCS M7 generation servers. Please claim this UCS Manager instance with Cisco Intersight to maintain compliance

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: major
Cause: disabled-or-unclaimed-device
mibFaultCode: F2079
mibFaultName: fltCloudDeviceConnectorEpDisabledOrUnclaimedDevice
moClass: cloud:DeviceConnectorEp
```

```
Type: equipment
autoCleared: true
Affected MO: sys/cloud-mgmt/device-connector
```

fltEquipmentCrossFabricModuleRemoved

Fault Code: F2080

Message: XFM in chassis-[chassisId]/xfm-slot-[id] is removed

Explanation:

This fault typically occurs because a XFM is removed from the X-Series chassis.This is a critical fault because it can result in the loss of connectivity with peripherals connected inside the PCIe node

Recommended Action:

If you see this fault, take the following actions:

1. Reinsert the XFM and wait a few minutes to see if the fault clears.
2. If the above actions did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: equipment-removed
mibFaultCode: F2080
mibFaultName: fltEquipmentCrossFabricModuleRemoved
moClass: equipment:CrossFabricModule
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/xfm-slot-[id]
```

fltEquipmentCrossFabricModuleIdentity

Fault Code: F2081

Message: XFM in chassis-[chassisId]/xfm-slot-[id] has a malformed FRU

Explanation:

This fault typically occurs when the FRU information for an XFM is corrupted or malformed.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the capability catalog in Cisco UCS Manager is up to date. If necessary, update the catalog.
2. If the above action did not resolve the issue, create a **show tech-support** file and contact Cisco TAC.

Fault Details

```
Severity: critical
Cause: fru-problem
mibFaultCode: F2081
mibFaultName: fltEquipmentCrossFabricModuleIdentity
moClass: equipment:CrossFabricModule
Type: equipment
```

```
autoCleared: true
Affected MO: sys/chassis-[id]/xfm-slot-[id]
```

fltEquipmentCrossFabricModuleDeprecated

Fault Code: F2082

Message: XFM in chassis-[chassisId]/xfm-slot-[id] has an invalid FRU

Explanation:

This fault typically occurs because Cisco UCS Manager has detected an unsupported XFM. For example, the model, vendor, or revision is not recognized.

Recommended Action:

If you see this fault, take the following actions:

1. Verify that the capability catalog in Cisco UCS Manager is up to date. If necessary, update the catalog.
2. If the above action did not resolve the issue, execute the **show tech-support** command and contact Cisco technical support.

Fault Details

```
Severity: critical
Cause: fru-problem
mibFaultCode: F2082
mibFaultName: fltEquipmentCrossFabricModuleDeprecated
moClass: equipment:CrossFabricModule
Type: equipment
autoCleared: true
Affected MO: sys/chassis-[id]/xfm-slot-[id]
```

fltAdaptorUnitPcieUnstableLink

Fault Code: F2083

Message: Unstable PCIE link is detected for adapter [id] in server [id].Unstable PCIE link is detected for adapter [id] in server [chassisId]/[slotId].Unstable PCIE link is detected for adapter [id] in server [chassisId]/[slotId]/[serverInstanceId].

Explanation: Server PCIE link used by the adapter is unstable. Cisco UCS Manager raises this fault when it detects adapter PCIE link becomes unstable.

Recommended Action: If you see this fault, take the following actions:

1. Create a **show tech-support** file and contact Cisco TAC.
2. To recover from the error condition, reboot the server.

Note For single wired managed rack server, if the error happens on the single wired managed adapter, power cycle the server to recover from the error.

Fault Details

```
Severity: critical
Cause: pcie-unstable-link
mibFaultCode: F2083
mibFaultName: fltAdaptorUnitPcieUnstableLink
moClass: adaptor:Unit
Type: network
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]
```

fltAdaptorUnitAsicFatalErr

Fault Code: F2084

Message: Fatal adapter ASIC error is detected for adapter [id] in server [id].Fatal adapter ASIC error is detected for adapter [id] in server [chassisId]/[slotId].Fatal adapter ASIC error is detected for adapter [id] in server [chassisId]/[slotId]/[serverInstanceId].

Explanation: Fatal ASIC Error has occurs in the adapter. Cisco UCS Manager raises this fault when it detects adapter fatal ASIC errors.

Recommended Action: If you see this fault, take the following actions:

1. Create a **show tech-support** file and contact Cisco TAC.
2. To recover from the error condition, reboot the server.

Note For single wired managed rack server, if the error happens on the single wired managed adapter, power cycle the server to recover from the error.

Fault Details

```
Severity: critical
Cause: asic-fatal-error
mibFaultCode: F2084
mibFaultName: fltAdaptorUnitAsicFatalErr
moClass: adaptor:Unit
Type: network
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]
```

fltAdaptorUnitFcpuErr

Fault Code: F2085

Message: FCPU error is detected for adapter [id] in server [id].FCPU error is detected for adapter [id] in server [chassisId]/[slotId].FCPU error is detected for adapter [id] in server [chassisId]/[slotId]/[serverInstanceId].

Explanation:

FCPU Error has occurs in the adapter. Cisco UCS Manager raises this fault when it detects adapter FCPU errors.

Recommended Action:

If you see this fault, take the following actions:

1. Create a **show tech-support** file and contact Cisco TAC.
2. To recover from the error condition, reboot the server.

Note For single wired managed rack server, if the error happens on the single wired managed adapter, power cycle the server to recover from the error.

Fault Details

```
Severity: critical
Cause: fcpu-error
mibFaultCode: F2085
mibFaultName: fltAdaptorUnitFcpuErr
moClass: adaptor:Unit
Type: network
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]
```

fltNetworkLimitUnicast-mac-threshold

Fault Code: F2086

Message: No. of unicast mac addresses ([actualCount]) on switch [id] has reached 75% of the upper limit([upperLimit]). Will get cleared when the count reaches lesser than 75% of upper limit

Explanation:

This fault typically occurs when number of unicast mac addreses on the fabric interconnect has exreched an 75% of Upper threshold. It gets cleared when the numbers reaches lesser than 75% of upper threshold

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unicast-mac-threshold-limit
mibFaultCode: F2086
mibFaultName: fltNetworkLimitUnicastMacThreshold
moClass: network:Limit
Type: management
autoCleared: true
Affected MO: sys/switch-[id]/limit-type-[type]-asic-[asicNumber]
```

fltAaaUserEpPasswordEncryptionKeyNotSet

Fault Code: F2087

Message: The password encryption key has not been set.

Explanation:

This fault typically occurs because a password encryption key is not set on the system. The password encryption key is used for protecting credentials when a user exports the system's configurations

Recommended Action:

If you see this fault, take the following actions:

1. Scope to security, and run the command "set password-encryption-key".

Fault Details

```
Severity: major
Cause: password-encryption-key-not-set
mibFaultCode: F2087
mibFaultName: fltAaaUserEpPasswordEncryptionKeyNotSet
moClass: aaa:UserEp
Type: configuration
autoCleared: true
Affected MO: sys/user-ext
```

tcaProcessorLoad

Fault Code: F33142

Message: Threshold Crossed: processor:Runtime property: load

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33142
mibFaultName: tcaProcessorLoad
moClass: processor:Runtime
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/cpu-rt
```

tcaProcessorLoadMin

Fault Code: F33144

Message: Threshold Crossed: processor:Runtime property: loadMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33144
mibFaultName: tcaProcessorLoadMin
moClass: processor:Runtime
Type: server
```

```
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/cpu-rt
```

tcaProcessorLoadMax

Fault Code: F33145

Message: Threshold Crossed: processor:Runtime property: loadMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33145
mibFaultName: tcaProcessorLoadMax
moClass: processor:Runtime
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/cpu-rt
```

tcaProcessorLoadAvg

Fault Code: F33146

Message: Threshold Crossed: processor:Runtime property: loadAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33146
mibFaultName: tcaProcessorLoadAvg
moClass: processor:Runtime
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/cpu-rt
```

tcaFcBytesRxDelta

Fault Code: F33167

Message: Threshold Crossed: fc:Stats property: bytesRxDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33167
mibFaultName: tcaFcBytesRxDelta
```

moClass: fc:Stats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

tcaFcBytesRxDeltaMin

Fault Code: F33168

Message: Threshold Crossed: fc:Stats property: bytesRxDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33168
mibFaultName: tcaFcBytesRxDeltaMin
moClass: fc:Stats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

tcaFcBytesRxDeltaMax

Fault Code: F33169

Message: Threshold Crossed: fc:Stats property: bytesRxDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33169
mibFaultName: tcaFcBytesRxDeltaMax
moClass: fc:Stats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats
```

tcaFcBytesRxDeltaAvg

Fault Code: F33170

Message: Threshold Crossed: fc:Stats property: bytesRxDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33170
mibFaultName: tcaFcBytesRxDeltaAvg
moClass: fc:Stats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats
```

tcaFcPacketsRxDelta

Fault Code: F33177

Message: Threshold Crossed: fc:Stats property: packetsRxDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33177
mibFaultName: tcaFcPacketsRxDelta
moClass: fc:Stats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats
```

tcaFcPacketsRxDeltaMin

Fault Code: F33178

Message: Threshold Crossed: fc:Stats property: packetsRxDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33178
mibFaultName: tcaFcPacketsRxDeltaMin
moClass: fc:Stats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
```

Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

tcaFcPacketsRxDeltaMax

Fault Code: F33179

Message: Threshold Crossed: fc:Stats property: packetsRxDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33179
mibFaultName: tcaFcPacketsRxDeltaMax
moClass: fc:Stats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

tcaFcPacketsRxDeltaAvg

Fault Code: F33180

Message: Threshold Crossed: fc:Stats property: packetsRxDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33180
mibFaultName: tcaFcPacketsRxDeltaAvg
moClass: fc:Stats
Type: equipment

autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

tcaFcBytesTxDelta

Fault Code: F33187

Message: Threshold Crossed: fc:Stats property: bytesTxDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33187
mibFaultName: tcaFcBytesTxDelta
moClass: fc:Stats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

tcaFcBytesTxDeltaMin

Fault Code: F33188

Message: Threshold Crossed: fc:Stats property: bytesTxDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33188
mibFaultName: tcaFcBytesTxDeltaMin
moClass: fc:Stats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats
```

tcaFcBytesTxDeltaMax

Fault Code: F33189

Message: Threshold Crossed: fc:Stats property: bytesTxDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33189
mibFaultName: tcaFcBytesTxDeltaMax
moClass: fc:Stats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats
```

tcaFcBytesTxDeltaAvg

Fault Code: F33190

Message: Threshold Crossed: fc:Stats property: bytesTxDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33190
mibFaultName: tcaFcBytesTxDeltaAvg
moClass: fc:Stats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats
```

tcaFcPacketsTxDelta

Fault Code: F33197

Message: Threshold Crossed: fc:Stats property: packetsTxDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33197
mibFaultName: tcaFcPacketsTxDelta
moClass: fc:Stats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
```

Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

tcaFcPacketsTxDeltaMin

Fault Code: F33198

Message: Threshold Crossed: fc:Stats property: packetsTxDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33198
mibFaultName: tcaFcPacketsTxDeltaMin
moClass: fc:Stats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

tcaFcPacketsTxDeltaMax

Fault Code: F33199

Message: Threshold Crossed: fc:Stats property: packetsTxDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33199
mibFaultName: tcaFcPacketsTxDeltaMax
moClass: fc:Stats
Type: equipment

autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

tcaFcPacketsTxDeltaAvg

Fault Code: F33200

Message: Threshold Crossed: fc:Stats property: packetsTxDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33200
mibFaultName: tcaFcPacketsTxDeltaAvg
moClass: fc:Stats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

tcaFcCrcRxDelta

Fault Code: F33211

Message: Threshold Crossed: fc:ErrStats property: crcRxDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33211
mibFaultName: tcaFcCrcRxDelta
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcCrcRxDeltaMin

Fault Code: F33212

Message: Threshold Crossed: fc:ErrStats property: crcRxDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33212
mibFaultName: tcaFcCrcRxDeltaMin
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcCrcRxDeltaMax

Fault Code: F33213

Message: Threshold Crossed: fc:ErrStats property: crcRxDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33213
mibFaultName: tcaFcCrcRxDeltaMax
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats
```

tcaFcCrcRxDeltaAvg

Fault Code: F33214

Message: Threshold Crossed: fc:ErrStats property: crcRxDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33214
mibFaultName: tcaFcCrcRxDeltaAvg
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
```

sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcDiscardRxDelta

Fault Code: F33221

Message: Threshold Crossed: fc:ErrStats property: discardRxDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33221
mibFaultName: tcaFcDiscardRxDelta
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcDiscardRxDeltaMin

Fault Code: F33222

Message: Threshold Crossed: fc:ErrStats property: discardRxDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33222
mibFaultName: tcaFcDiscardRxDeltaMin

moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcDiscardRxDeltaMax

Fault Code: F33223

Message: Threshold Crossed: fc:ErrStats property: discardRxDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33223
mibFaultName: tcaFcDiscardRxDeltaMax
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcDiscardRxDeltaAvg

Fault Code: F33224

Message: Threshold Crossed: fc:ErrStats property: discardRxDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33224
mibFaultName: tcaFcDiscardRxDeltaAvg
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats
```

tcaFcTooLongRxDelta

Fault Code: F33231

Message: Threshold Crossed: fc:ErrStats property: tooLongRxDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33231
mibFaultName: tcaFcTooLongRxDelta
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
```

Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcTooLongRxDeltaMin

Fault Code: F33232

Message: Threshold Crossed: fc:ErrStats property: tooLongRxDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33232
mibFaultName: tcaFcTooLongRxDeltaMin
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcTooLongRxDeltaMax

Fault Code: F33233

Message: Threshold Crossed: fc:ErrStats property: tooLongRxDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33233
mibFaultName: tcaFcTooLongRxDeltaMax
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats

Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcTooLongRxDeltaAvg

Fault Code: F33234

Message: Threshold Crossed: fc:ErrStats property: tooLongRxDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33234
mibFaultName: tcaFcTooLongRxDeltaAvg
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcTooShortRxDelta

Fault Code: F33241

Message: Threshold Crossed: fc:ErrStats property: tooShortRxDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33241
mibFaultName: tcaFcTooShortRxDelta
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcTooShortRxDeltaMin

Fault Code: F33242

Message: Threshold Crossed: fc:ErrStats property: tooShortRxDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33242
mibFaultName: tcaFcTooShortRxDeltaMin
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcTooShortRxDeltaMax

Fault Code: F33243

Message: Threshold Crossed: fc:ErrStats property: tooShortRxDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33243
mibFaultName: tcaFcTooShortRxDeltaMax
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats
```

tcaFcTooShortRxDeltaAvg

Fault Code: F33244

Message: Threshold Crossed: fc:ErrStats property: tooShortRxDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33244
mibFaultName: tcaFcTooShortRxDeltaAvg
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
```

sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcRxDelta

Fault Code: F33251

Message: Threshold Crossed: fc:ErrStats property: rxDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33251
mibFaultName: tcaFcRxDelta
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcRxDeltaMin

Fault Code: F33252

Message: Threshold Crossed: fc:ErrStats property: rxDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33252
mibFaultName: tcaFcRxDeltaMin

moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcRxDeltaMax

Fault Code: F33253

Message: Threshold Crossed: fc:ErrStats property: rxDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33253
mibFaultName: tcaFcRxDeltaMax
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcRxDeltaAvg

Fault Code: F33254

Message: Threshold Crossed: fc:ErrStats property: rxDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33254
mibFaultName: tcaFcRxDeltaAvg
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats
```

tcaFcDiscardTxDelta

Fault Code: F33261

Message: Threshold Crossed: fc:ErrStats property: discardTxDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33261
mibFaultName: tcaFcDiscardTxDelta
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
```

Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcDiscardTxDeltaMin

Fault Code: F33262

Message: Threshold Crossed: fc:ErrStats property: discardTxDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33262
mibFaultName: tcaFcDiscardTxDeltaMin
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcDiscardTxDeltaMax

Fault Code: F33263

Message: Threshold Crossed: fc:ErrStats property: discardTxDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33263
mibFaultName: tcaFcDiscardTxDeltaMax
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats

Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcDiscardTxDeltaAvg

Fault Code: F33264

Message: Threshold Crossed: fc:ErrStats property: discardTxDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33264
mibFaultName: tcaFcDiscardTxDeltaAvg
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcTxDelta

Fault Code: F33271

Message: Threshold Crossed: fc:ErrStats property: txDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33271
mibFaultName: tcaFcTxDelta
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcTxDeltaMin

Fault Code: F33272

Message: Threshold Crossed: fc:ErrStats property: txDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33272
mibFaultName: tcaFcTxDeltaMin
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcTxDeltaMax

Fault Code: F33273

Message: Threshold Crossed: fc:ErrStats property: txDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33273
mibFaultName: tcaFcTxDeltaMax
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats
```

tcaFcTxDeltaAvg

Fault Code: F33274

Message: Threshold Crossed: fc:ErrStats property: txDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33274
mibFaultName: tcaFcTxDeltaAvg
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
```

sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcLinkFailuresDelta

Fault Code: F33281

Message: Threshold Crossed: fc:ErrStats property: linkFailuresDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33281
mibFaultName: tcaFcLinkFailuresDelta
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcLinkFailuresDeltaMin

Fault Code: F33282

Message: Threshold Crossed: fc:ErrStats property: linkFailuresDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33282
mibFaultName: tcaFcLinkFailuresDeltaMin

moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcLinkFailuresDeltaMax

Fault Code: F33283

Message: Threshold Crossed: fc:ErrStats property: linkFailuresDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33283
mibFaultName: tcaFcLinkFailuresDeltaMax
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcLinkFailuresDeltaAvg

Fault Code: F33284

Message: Threshold Crossed: fc:ErrStats property: linkFailuresDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33284
mibFaultName: tcaFcLinkFailuresDeltaAvg
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats
```

tcaFcSyncLossesDelta

Fault Code: F33291

Message: Threshold Crossed: fc:ErrStats property: syncLossesDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33291
mibFaultName: tcaFcSyncLossesDelta
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
```

Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcSyncLossesDeltaMin

Fault Code: F33292

Message: Threshold Crossed: fc:ErrStats property: syncLossesDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33292
mibFaultName: tcaFcSyncLossesDeltaMin
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcSyncLossesDeltaMax

Fault Code: F33293

Message: Threshold Crossed: fc:ErrStats property: syncLossesDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33293
mibFaultName: tcaFcSyncLossesDeltaMax
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats

Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcSyncLossesDeltaAvg

Fault Code: F33294

Message: Threshold Crossed: fc:ErrStats property: syncLossesDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33294
mibFaultName: tcaFcSyncLossesDeltaAvg
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcSignalLossesDelta

Fault Code: F33301

Message: Threshold Crossed: fc:ErrStats property: signalLossesDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33301
mibFaultName: tcaFcSignalLossesDelta
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcSignalLossesDeltaMin

Fault Code: F33302

Message: Threshold Crossed: fc:ErrStats property: signalLossesDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33302
mibFaultName: tcaFcSignalLossesDeltaMin
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaFcSignalLossesDeltaMax

Fault Code: F33303

Message: Threshold Crossed: fc:ErrStats property: signalLossesDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33303
mibFaultName: tcaFcSignalLossesDeltaMax
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats
```

tcaFcSignalLossesDeltaAvg

Fault Code: F33304

Message: Threshold Crossed: fc:ErrStats property: signalLossesDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33304
mibFaultName: tcaFcSignalLossesDeltaAvg
moClass: fc:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
```

sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaMemoryTotal

Fault Code: F33483

Message: Threshold Crossed: memory:Runtime property: total

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33483
mibFaultName: tcaMemoryTotal
moClass: memory:Runtime
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/[type]-mem-rt
```

tcaMemoryTotalMin

Fault Code: F33485

Message: Threshold Crossed: memory:Runtime property: totalMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33485
mibFaultName: tcaMemoryTotalMin
moClass: memory:Runtime
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/[type]-mem-rt
```

tcaMemoryTotalMax

Fault Code: F33486

Message: Threshold Crossed: memory:Runtime property: totalMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33486
mibFaultName: tcaMemoryTotalMax
moClass: memory:Runtime
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/[type]-mem-rt
```

tcaMemoryTotalAvg

Fault Code: F33487

Message: Threshold Crossed: memory:Runtime property: totalAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33487
mibFaultName: tcaMemoryTotalAvg
moClass: memory:Runtime
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/[type]-mem-rt
```

tcaMemoryAvailable

Fault Code: F33491

Message: Threshold Crossed: memory:Runtime property: available

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33491
mibFaultName: tcaMemoryAvailable
moClass: memory:Runtime
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/[type]-mem-rt
```

tcaMemoryAvailableMin

Fault Code: F33493

Message: Threshold Crossed: memory:Runtime property: availableMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33493
mibFaultName: tcaMemoryAvailableMin
moClass: memory:Runtime
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/[type]-mem-rt
```

tcaMemoryAvailableMax

Fault Code: F33494

Message: Threshold Crossed: memory:Runtime property: availableMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33494
mibFaultName: tcaMemoryAvailableMax
moClass: memory:Runtime
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/[type]-mem-rt
```

tcaMemoryAvailableAvg

Fault Code: F33495

Message: Threshold Crossed: memory:Runtime property: availableAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33495
mibFaultName: tcaMemoryAvailableAvg
moClass: memory:Runtime
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/[type]-mem-rt
```

tcaMemoryCached

Fault Code: F33499

Message: Threshold Crossed: memory:Runtime property: cached

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33499
mibFaultName: tcaMemoryCached
moClass: memory:Runtime
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/[type]-mem-rt
```

tcaMemoryCachedMin

Fault Code: F33501

Message: Threshold Crossed: memory:Runtime property: cachedMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33501
mibFaultName: tcaMemoryCachedMin
moClass: memory:Runtime
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/[type]-mem-rt
```

tcaMemoryCachedMax

Fault Code: F33502

Message: Threshold Crossed: memory:Runtime property: cachedMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33502
mibFaultName: tcaMemoryCachedMax
moClass: memory:Runtime
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/[type]-mem-rt
```

tcaMemoryCachedAvg

Fault Code: F33503

Message: Threshold Crossed: memory:Runtime property: cachedAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33503
mibFaultName: tcaMemoryCachedAvg
moClass: memory:Runtime
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/[type]-mem-rt
```

tcaAdaptorTotalPacketsDelta

Fault Code: F33720

Message: Threshold Crossed: adaptor:EthPortStats property: totalPacketsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33720
mibFaultName: tcaAdaptorTotalPacketsDelta
moClass: adaptor:EthPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
```

tcaAdaptorTotalPacketsDeltaMin

Fault Code: F33721

Message: Threshold Crossed: adaptor:EthPortStats property: totalPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33721
mibFaultName: tcaAdaptorTotalPacketsDeltaMin
moClass: adaptor:EthPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorTotalPacketsDeltaMax

Fault Code: F33722

Message: Threshold Crossed: adaptor:EthPortStats property: totalPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33722
mibFaultName: tcaAdaptorTotalPacketsDeltaMax
moClass: adaptor:EthPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorTotalPacketsDeltaAvg

Fault Code: F33723

Message: Threshold Crossed: adaptor:EthPortStats property: totalPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33723
mibFaultName: tcaAdaptorTotalPacketsDeltaAvg
moClass: adaptor:EthPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
```

tcaAdaptorGoodPacketsDelta

Fault Code: F33730

Message: Threshold Crossed: adaptor:EthPortStats property: goodPacketsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33730
mibFaultName: tcaAdaptorGoodPacketsDelta
moClass: adaptor:EthPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
```

tcaAdaptorGoodPacketsDeltaMin

Fault Code: F33731

Message: Threshold Crossed: adaptor:EthPortStats property: goodPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33731
mibFaultName: tcaAdaptorGoodPacketsDeltaMin
moClass: adaptor:EthPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
```

tcaAdaptorGoodPacketsDeltaMax

Fault Code: F33732

Message: Threshold Crossed: adaptor:EthPortStats property: goodPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33732
mibFaultName: tcaAdaptorGoodPacketsDeltaMax
moClass: adaptor:EthPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
```

tcaAdaptorGoodPacketsDeltaAvg

Fault Code: F33733

Message: Threshold Crossed: adaptor:EthPortStats property: goodPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33733
mibFaultName: tcaAdaptorGoodPacketsDeltaAvg
moClass: adaptor:EthPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
```

tcaAdaptorVlanPacketsDelta

Fault Code: F33740

Message: Threshold Crossed: adaptor:EthPortStats property: vlanPacketsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33740
mibFaultName: tcaAdaptorVlanPacketsDelta
moClass: adaptor:EthPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
```

Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorVlanPacketsDeltaMin

Fault Code: F33741

Message: Threshold Crossed: adaptor:EthPortStats property: vlanPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33741
mibFaultName: tcaAdaptorVlanPacketsDeltaMin
moClass: adaptor:EthPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorVlanPacketsDeltaMax

Fault Code: F33742

Message: Threshold Crossed: adaptor:EthPortStats property: vlanPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33742
mibFaultName: tcaAdaptorVlanPacketsDeltaMax
moClass: adaptor:EthPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorVlanPacketsDeltaAvg

Fault Code: F33743

Message: Threshold Crossed: adaptor:EthPortStats property: vlanPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33743
mibFaultName: tcaAdaptorVlanPacketsDeltaAvg
moClass: adaptor:EthPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorPausePacketsDelta

Fault Code: F33750

Message: Threshold Crossed: adaptor:EthPortStats property: pausePacketsDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33750
mibFaultName: tcaAdaptorPausePacketsDelta
moClass: adaptor:EthPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]

Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorPausePacketsDeltaMin

Fault Code: F33751

Message: Threshold Crossed: adaptor:EthPortStats property: pausePacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33751
mibFaultName: tcaAdaptorPausePacketsDeltaMin
moClass: adaptor:EthPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorPausePacketsDeltaMax

Fault Code: F33752

Message: Threshold Crossed: adaptor:EthPortStats property: pausePacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33752
mibFaultName: tcaAdaptorPausePacketsDeltaMax
moClass: adaptor:EthPortStats

Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorPausePacketsDeltaAvg

Fault Code: F33753

Message: Threshold Crossed: adaptor:EthPortStats property: pausePacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33753
mibFaultName: tcaAdaptorPausePacketsDeltaAvg
moClass: adaptor:EthPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorPerPriorityPausePacketsDelta

Fault Code: F33760

Message: Threshold Crossed: adaptor:EthPortStats property: perPriorityPausePacketsDelta

Explanation:

Recommended Action:

Fault Details

Severity: info

Cause: threshold-crossed
mibFaultCode: F33760
mibFaultName: tcaAdaptorPerPriorityPausePacketsDelta
moClass: adaptor:EthPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorPerPriorityPausePacketsDeltaMin

Fault Code: F33761

Message: Threshold Crossed: adaptor:EthPortStats property: perPriorityPausePacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33761
mibFaultName: tcaAdaptorPerPriorityPausePacketsDeltaMin
moClass: adaptor:EthPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorPerPriorityPausePacketsDeltaMax

Fault Code: F33762

Message: Threshold Crossed: adaptor:EthPortStats property: perPriorityPausePacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33762
mibFaultName: tcaAdaptorPerPriorityPausePacketsDeltaMax
moClass: adaptor:EthPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
```

tcaAdaptorPerPriorityPausePacketsDeltaAvg

Fault Code: F33763

Message: Threshold Crossed: adaptor:EthPortStats property: perPriorityPausePacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33763
mibFaultName: tcaAdaptorPerPriorityPausePacketsDeltaAvg
moClass: adaptor:EthPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
```

tcaAdaptorPppPacketsDelta

Fault Code: F33770

Message: Threshold Crossed: adaptor:EthPortStats property: pppPacketsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33770
mibFaultName: tcaAdaptorPppPacketsDelta
moClass: adaptor:EthPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
```

tcaAdaptorPppPacketsDeltaMin

Fault Code: F33771

Message: Threshold Crossed: adaptor:EthPortStats property: pppPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33771
mibFaultName: tcaAdaptorPppPacketsDeltaMin
moClass: adaptor:EthPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
```

tcaAdaptorPppPacketsDeltaMax

Fault Code: F33772

Message: Threshold Crossed: adaptor:EthPortStats property: pppPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33772
mibFaultName: tcaAdaptorPppPacketsDeltaMax
moClass: adaptor:EthPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
```

tcaAdaptorPppPacketsDeltaAvg

Fault Code: F33773

Message: Threshold Crossed: adaptor:EthPortStats property: pppPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33773
mibFaultName: tcaAdaptorPppPacketsDeltaAvg
moClass: adaptor:EthPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
```

Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorLessThan64Delta

Fault Code: F33810

Message: Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan64Delta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33810
mibFaultName: tcaAdaptorLessThan64Delta
moClass: adaptor:EthPortBySizeSmallStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan64DeltaMin

Fault Code: F33811

Message: Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan64DeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33811
mibFaultName: tcaAdaptorLessThan64DeltaMin
moClass: adaptor:EthPortBySizeSmallStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan64DeltaMax

Fault Code: F33812

Message: Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan64DeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33812
mibFaultName: tcaAdaptorLessThan64DeltaMax
moClass: adaptor:EthPortBySizeSmallStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan64DeltaAvg

Fault Code: F33813

Message: Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan64DeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33813

mibFaultName: tcaAdaptorLessThan64DeltaAvg
moClass: adaptor:EthPortBySizeSmallStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorEquals64Delta

Fault Code: F33820

Message: Threshold Crossed: adaptor:EthPortBySizeSmallStats property: equals64Delta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33820
mibFaultName: tcaAdaptorEquals64Delta
moClass: adaptor:EthPortBySizeSmallStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorEquals64DeltaMin

Fault Code: F33821

Message: Threshold Crossed: adaptor:EthPortBySizeSmallStats property: equals64DeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33821
mibFaultName: tcaAdaptorEquals64DeltaMin
moClass: adaptor:EthPortBySizeSmallStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
```

tcaAdaptorEquals64DeltaMax

Fault Code: F33822

Message: Threshold Crossed: adaptor:EthPortBySizeSmallStats property: equals64DeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33822
mibFaultName: tcaAdaptorEquals64DeltaMax
moClass: adaptor:EthPortBySizeSmallStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
```

tcaAdaptorEquals64DeltaAvg

Fault Code: F33823

Message: Threshold Crossed: adaptor:EthPortBySizeSmallStats property: equals64DeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33823
mibFaultName: tcaAdaptorEquals64DeltaAvg
moClass: adaptor:EthPortBySizeSmallStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
```

tcaAdaptorLessThan128Delta

Fault Code: F33830

Message: Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan128Delta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33830
mibFaultName: tcaAdaptorLessThan128Delta
moClass: adaptor:EthPortBySizeSmallStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
```

Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan128DeltaMin

Fault Code: F33831

Message: Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan128DeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33831
mibFaultName: tcaAdaptorLessThan128DeltaMin
moClass: adaptor:EthPortBySizeSmallStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan128DeltaMax

Fault Code: F33832

Message: Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan128DeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33832
mibFaultName: tcaAdaptorLessThan128DeltaMax
moClass: adaptor:EthPortBySizeSmallStats
Type: server
autoCleared: true

Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan128DeltaAvg

Fault Code: F33833

Message: Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan128DeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33833
mibFaultName: tcaAdaptorLessThan128DeltaAvg
moClass: adaptor:EthPortBySizeSmallStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan256Delta

Fault Code: F33840

Message: Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan256Delta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33840
mibFaultName: tcaAdaptorLessThan256Delta
moClass: adaptor:EthPortBySizeSmallStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan256DeltaMin

Fault Code: F33841

Message: Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan256DeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33841
mibFaultName: tcaAdaptorLessThan256DeltaMin
moClass: adaptor:EthPortBySizeSmallStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan256DeltaMax

Fault Code: F33842

Message: Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan256DeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33842
mibFaultName: tcaAdaptorLessThan256DeltaMax
moClass: adaptor:EthPortBySizeSmallStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
```

tcaAdaptorLessThan256DeltaAvg

Fault Code: F33843

Message: Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan256DeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33843
mibFaultName: tcaAdaptorLessThan256DeltaAvg
moClass: adaptor:EthPortBySizeSmallStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
```

Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan512Delta

Fault Code: F33850

Message: Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan512Delta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33850
mibFaultName: tcaAdaptorLessThan512Delta
moClass: adaptor:EthPortBySizeSmallStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan512DeltaMin

Fault Code: F33851

Message: Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan512DeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33851
mibFaultName: tcaAdaptorLessThan512DeltaMin
moClass: adaptor:EthPortBySizeSmallStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan512DeltaMax

Fault Code: F33852

Message: Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan512DeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33852
mibFaultName: tcaAdaptorLessThan512DeltaMax
moClass: adaptor:EthPortBySizeSmallStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan512DeltaAvg

Fault Code: F33853

Message: Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan512DeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33853

mibFaultName: tcaAdaptorLessThan512DeltaAvg
moClass: adaptor:EthPortBySizeSmallStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan1024Delta

Fault Code: F33860

Message: Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan1024Delta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33860
mibFaultName: tcaAdaptorLessThan1024Delta
moClass: adaptor:EthPortBySizeSmallStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan1024DeltaMin

Fault Code: F33861

Message: Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan1024DeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33861
mibFaultName: tcaAdaptorLessThan1024DeltaMin
moClass: adaptor:EthPortBySizeSmallStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
```

tcaAdaptorLessThan1024DeltaMax

Fault Code: F33862

Message: Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan1024DeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33862
mibFaultName: tcaAdaptorLessThan1024DeltaMax
moClass: adaptor:EthPortBySizeSmallStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
```

tcaAdaptorLessThan1024DeltaAvg

Fault Code: F33863

Message: Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan1024DeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33863
mibFaultName: tcaAdaptorLessThan1024DeltaAvg
moClass: adaptor:EthPortBySizeSmallStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
```

tcaAdaptorLessThanOrEqualTo1518Delta

Fault Code: F33875

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThanOrEqualTo1518Delta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33875
mibFaultName: tcaAdaptorLessThanOrEqualTo1518Delta
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
```

Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThanOrEqualTo1518DeltaMin

Fault Code: F33876

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThanOrEqualTo1518DeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33876
mibFaultName: tcaAdaptorLessThanOrEqualTo1518DeltaMin
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThanOrEqualTo1518DeltaMax

Fault Code: F33877

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThanOrEqualTo1518DeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33877
mibFaultName: tcaAdaptorLessThanOrEqualTo1518DeltaMax
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true

Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThanOrEqualTo1518DeltaAvg

Fault Code: F33878

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThanOrEqualTo1518DeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33878
mibFaultName: tcaAdaptorLessThanOrEqualTo1518DeltaAvg
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThan2048Delta

Fault Code: F33885

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan2048Delta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33885
mibFaultName: tcaAdaptorLessThan2048Delta
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThan2048DeltaMin

Fault Code: F33886

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan2048DeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33886
mibFaultName: tcaAdaptorLessThan2048DeltaMin
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThan2048DeltaMax

Fault Code: F33887

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan2048DeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33887
mibFaultName: tcaAdaptorLessThan2048DeltaMax
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
```

tcaAdaptorLessThan2048DeltaAvg

Fault Code: F33888

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan2048DeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33888
mibFaultName: tcaAdaptorLessThan2048DeltaAvg
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
```

Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThan4096Delta

Fault Code: F33895

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan4096Delta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33895
mibFaultName: tcaAdaptorLessThan4096Delta
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThan4096DeltaMin

Fault Code: F33896

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan4096DeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33896
mibFaultName: tcaAdaptorLessThan4096DeltaMin
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThan4096DeltaMax

Fault Code: F33897

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan4096DeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33897
mibFaultName: tcaAdaptorLessThan4096DeltaMax
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThan4096DeltaAvg

Fault Code: F33898

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan4096DeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33898

mibFaultName: tcaAdaptorLessThan4096DeltaAvg
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThan8192Delta

Fault Code: F33905

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan8192Delta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33905
mibFaultName: tcaAdaptorLessThan8192Delta
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThan8192DeltaMin

Fault Code: F33906

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan8192DeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33906
mibFaultName: tcaAdaptorLessThan8192DeltaMin
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
```

tcaAdaptorLessThan8192DeltaMax

Fault Code: F33907

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan8192DeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33907
mibFaultName: tcaAdaptorLessThan8192DeltaMax
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
```

tcaAdaptorLessThan8192DeltaAvg

Fault Code: F33908

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan8192DeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33908
mibFaultName: tcaAdaptorLessThan8192DeltaAvg
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
```

tcaAdaptorLessThan9216Delta

Fault Code: F33915

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan9216Delta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33915
mibFaultName: tcaAdaptorLessThan9216Delta
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
```

Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThan9216DeltaMin

Fault Code: F33916

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan9216DeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33916
mibFaultName: tcaAdaptorLessThan9216DeltaMin
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThan9216DeltaMax

Fault Code: F33917

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan9216DeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33917
mibFaultName: tcaAdaptorLessThan9216DeltaMax
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true

Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThan9216DeltaAvg

Fault Code: F33918

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan9216DeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33918
mibFaultName: tcaAdaptorLessThan9216DeltaAvg
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorGreaterThanOrEqualTo9216Delta

Fault Code: F33925

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: greaterThanOrEqualTo9216Delta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33925
mibFaultName: tcaAdaptorGreaterThanOrEqualTo9216Delta
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorGreaterThanOrEqualTo9216DeltaMin

Fault Code: F33926

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: greaterThanOrEqualTo9216DeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33926
mibFaultName: tcaAdaptorGreaterThanOrEqualTo9216DeltaMin
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorGreaterThanOrEqualTo9216DeltaMax

Fault Code: F33927

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: greaterThanOrEqualTo9216DeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33927
mibFaultName: tcaAdaptorGreaterThanOrEqualTo9216DeltaMax
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
```

tcaAdaptorGreaterThanOrEqualTo9216DeltaAvg

Fault Code: F33928

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: greaterThanOrEqualTo9216DeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33928
mibFaultName: tcaAdaptorGreaterThanOrEqualTo9216DeltaAvg
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
```

Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorOversizedPacketsDelta

Fault Code: F33940

Message: Threshold Crossed: adaptor:EthPortOutsizedStats property: oversizedPacketsDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33940
mibFaultName: tcaAdaptorOversizedPacketsDelta
moClass: adaptor:EthPortOutsizedStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorOversizedPacketsDeltaMin

Fault Code: F33941

Message: Threshold Crossed: adaptor:EthPortOutsizedStats property: oversizedPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33941
mibFaultName: tcaAdaptorOversizedPacketsDeltaMin
moClass: adaptor:EthPortOutsizedStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorOversizedPacketsDeltaMax

Fault Code: F33942

Message: Threshold Crossed: adaptor:EthPortOutsizedStats property: oversizedPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33942
mibFaultName: tcaAdaptorOversizedPacketsDeltaMax
moClass: adaptor:EthPortOutsizedStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorOversizedPacketsDeltaAvg

Fault Code: F33943

Message: Threshold Crossed: adaptor:EthPortOutsizedStats property: oversizedPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33943

mibFaultName: tcaAdaptorOversizedPacketsDeltaAvg
moClass: adaptor:EthPortOutsizedStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorOversizedGoodCrcPacketsDelta

Fault Code: F33950

Message: Threshold Crossed: adaptor:EthPortOutsizedStats property: oversizedGoodCrcPacketsDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33950
mibFaultName: tcaAdaptorOversizedGoodCrcPacketsDelta
moClass: adaptor:EthPortOutsizedStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorOversizedGoodCrcPacketsDeltaMin

Fault Code: F33951

Message: Threshold Crossed: adaptor:EthPortOutsizedStats property: oversizedGoodCrcPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33951
mibFaultName: tcaAdaptorOversizedGoodCrcPacketsDeltaMin
moClass: adaptor:EthPortOutsizedStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
```

tcaAdaptorOversizedGoodCrcPacketsDeltaMax

Fault Code: F33952

Message: Threshold Crossed: adaptor:EthPortOutsizedStats property: oversizedGoodCrcPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33952
mibFaultName: tcaAdaptorOversizedGoodCrcPacketsDeltaMax
moClass: adaptor:EthPortOutsizedStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
```

tcaAdaptorOversizedGoodCrcPacketsDeltaAvg

Fault Code: F33953

Message: Threshold Crossed: adaptor:EthPortOutsizedStats property: oversizedGoodCrcPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33953
mibFaultName: tcaAdaptorOversizedGoodCrcPacketsDeltaAvg
moClass: adaptor:EthPortOutsizedStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
```

tcaAdaptorOversizedBadCrcPacketsDelta

Fault Code: F33960

Message: Threshold Crossed: adaptor:EthPortOutsizedStats property: oversizedBadCrcPacketsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33960
mibFaultName: tcaAdaptorOversizedBadCrcPacketsDelta
moClass: adaptor:EthPortOutsizedStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
```

Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorOversizedBadCrcPacketsDeltaMin

Fault Code: F33961

Message: Threshold Crossed: adaptor:EthPortOutsizedStats property: oversizedBadCrcPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33961
mibFaultName: tcaAdaptorOversizedBadCrcPacketsDeltaMin
moClass: adaptor:EthPortOutsizedStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorOversizedBadCrcPacketsDeltaMax

Fault Code: F33962

Message: Threshold Crossed: adaptor:EthPortOutsizedStats property: oversizedBadCrcPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33962
mibFaultName: tcaAdaptorOversizedBadCrcPacketsDeltaMax
moClass: adaptor:EthPortOutsizedStats
Type: server
autoCleared: true

Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorOversizedBadCrcPacketsDeltaAvg

Fault Code: F33963

Message: Threshold Crossed: adaptor:EthPortOutsizedStats property: oversizedBadCrcPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33963
mibFaultName: tcaAdaptorOversizedBadCrcPacketsDeltaAvg
moClass: adaptor:EthPortOutsizedStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorUndersizedGoodCrcPacketsDelta

Fault Code: F33970

Message: Threshold Crossed: adaptor:EthPortOutsizedStats property: undersizedGoodCrcPacketsDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33970
mibFaultName: tcaAdaptorUndersizedGoodCrcPacketsDelta
moClass: adaptor:EthPortOutsizedStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorUndersizedGoodCrcPacketsDeltaMin

Fault Code: F33971

Message: Threshold Crossed: adaptor:EthPortOutsizedStats property: undersizedGoodCrcPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33971
mibFaultName: tcaAdaptorUndersizedGoodCrcPacketsDeltaMin
moClass: adaptor:EthPortOutsizedStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorUndersizedGoodCrcPacketsDeltaMax

Fault Code: F33972

Message: Threshold Crossed: adaptor:EthPortOutsizedStats property: undersizedGoodCrcPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33972
mibFaultName: tcaAdaptorUndersizedGoodCrcPacketsDeltaMax
moClass: adaptor:EthPortOutsizedStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
```

tcaAdaptorUndersizedGoodCrcPacketsDeltaAvg

Fault Code: F33973

Message: Threshold Crossed: adaptor:EthPortOutsizedStats property: undersizedGoodCrcPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33973
mibFaultName: tcaAdaptorUndersizedGoodCrcPacketsDeltaAvg
moClass: adaptor:EthPortOutsizedStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
```

Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorUndersizedBadCrcPacketsDelta

Fault Code: F33980

Message: Threshold Crossed: adaptor:EthPortOutsizedStats property: undersizedBadCrcPacketsDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33980
mibFaultName: tcaAdaptorUndersizedBadCrcPacketsDelta
moClass: adaptor:EthPortOutsizedStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorUndersizedBadCrcPacketsDeltaMin

Fault Code: F33981

Message: Threshold Crossed: adaptor:EthPortOutsizedStats property: undersizedBadCrcPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33981
mibFaultName: tcaAdaptorUndersizedBadCrcPacketsDeltaMin
moClass: adaptor:EthPortOutsizedStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorUndersizedBadCrcPacketsDeltaMax

Fault Code: F33982

Message: Threshold Crossed: adaptor:EthPortOutsizedStats property: undersizedBadCrcPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33982
mibFaultName: tcaAdaptorUndersizedBadCrcPacketsDeltaMax
moClass: adaptor:EthPortOutsizedStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorUndersizedBadCrcPacketsDeltaAvg

Fault Code: F33983

Message: Threshold Crossed: adaptor:EthPortOutsizedStats property: undersizedBadCrcPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33983

mibFaultName: tcaAdaptorUndersizedBadCrcPacketsDeltaAvg
moClass: adaptor:EthPortOutsizedStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorUnicastPacketsDelta

Fault Code: F33995

Message: Threshold Crossed: adaptor:EthPortMcastStats property: unicastPacketsDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F33995
mibFaultName: tcaAdaptorUnicastPacketsDelta
moClass: adaptor:EthPortMcastStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]

tcaAdaptorUnicastPacketsDeltaMin

Fault Code: F33996

Message: Threshold Crossed: adaptor:EthPortMcastStats property: unicastPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33996
mibFaultName: tcaAdaptorUnicastPacketsDeltaMin
moClass: adaptor:EthPortMcastStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
```

tcaAdaptorUnicastPacketsDeltaMax

Fault Code: F33997

Message: Threshold Crossed: adaptor:EthPortMcastStats property: unicastPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33997
mibFaultName: tcaAdaptorUnicastPacketsDeltaMax
moClass: adaptor:EthPortMcastStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
```

tcaAdaptorUnicastPacketsDeltaAvg

Fault Code: F33998

Message: Threshold Crossed: adaptor:EthPortMcastStats property: unicastPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F33998
mibFaultName: tcaAdaptorUnicastPacketsDeltaAvg
moClass: adaptor:EthPortMcastStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
```

tcaAdaptorMulticastPacketsDelta

Fault Code: F34005

Message: Threshold Crossed: adaptor:EthPortMcastStats property: multicastPacketsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34005
mibFaultName: tcaAdaptorMulticastPacketsDelta
moClass: adaptor:EthPortMcastStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
```

Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]

tcaAdaptorMulticastPacketsDeltaMin

Fault Code: F34006

Message: Threshold Crossed: adaptor:EthPortMcastStats property: multicastPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34006
mibFaultName: tcaAdaptorMulticastPacketsDeltaMin
moClass: adaptor:EthPortMcastStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]

tcaAdaptorMulticastPacketsDeltaMax

Fault Code: F34007

Message: Threshold Crossed: adaptor:EthPortMcastStats property: multicastPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34007
mibFaultName: tcaAdaptorMulticastPacketsDeltaMax
moClass: adaptor:EthPortMcastStats
Type: server
autoCleared: true

Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]

tcaAdaptorMulticastPacketsDeltaAvg

Fault Code: F34008

Message: Threshold Crossed: adaptor:EthPortMcastStats property: multicastPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34008
mibFaultName: tcaAdaptorMulticastPacketsDeltaAvg
moClass: adaptor:EthPortMcastStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]

tcaAdaptorBroadcastPacketsDelta

Fault Code: F34015

Message: Threshold Crossed: adaptor:EthPortMcastStats property: broadcastPacketsDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34015
mibFaultName: tcaAdaptorBroadcastPacketsDelta
moClass: adaptor:EthPortMcastStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]

tcaAdaptorBroadcastPacketsDeltaMin

Fault Code: F34016

Message: Threshold Crossed: adaptor:EthPortMcastStats property: broadcastPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34016
mibFaultName: tcaAdaptorBroadcastPacketsDeltaMin
moClass: adaptor:EthPortMcastStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]

tcaAdaptorBroadcastPacketsDeltaMax

Fault Code: F34017

Message: Threshold Crossed: adaptor:EthPortMcastStats property: broadcastPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34017
mibFaultName: tcaAdaptorBroadcastPacketsDeltaMax
moClass: adaptor:EthPortMcastStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
```

tcaAdaptorBroadcastPacketsDeltaAvg

Fault Code: F34018

Message: Threshold Crossed: adaptor:EthPortMcastStats property: broadcastPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34018
mibFaultName: tcaAdaptorBroadcastPacketsDeltaAvg
moClass: adaptor:EthPortMcastStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
```

Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]

tcaAdaptorMacDiscardedPacketsDelta

Fault Code: F34030

Message: Threshold Crossed: adaptor:EthPortErrStats property: macDiscardedPacketsDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34030
mibFaultName: tcaAdaptorMacDiscardedPacketsDelta
moClass: adaptor:EthPortErrStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]

tcaAdaptorMacDiscardedPacketsDeltaMin

Fault Code: F34031

Message: Threshold Crossed: adaptor:EthPortErrStats property: macDiscardedPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34031
mibFaultName: tcaAdaptorMacDiscardedPacketsDeltaMin
moClass: adaptor:EthPortErrStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]

tcaAdaptorMacDiscardedPacketsDeltaMax

Fault Code: F34032

Message: Threshold Crossed: adaptor:EthPortErrStats property: macDiscardedPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34032
mibFaultName: tcaAdaptorMacDiscardedPacketsDeltaMax
moClass: adaptor:EthPortErrStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]

tcaAdaptorMacDiscardedPacketsDeltaAvg

Fault Code: F34033

Message: Threshold Crossed: adaptor:EthPortErrStats property: macDiscardedPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34033

mibFaultName: tcaAdaptorMacDiscardedPacketsDeltaAvg
moClass: adaptor:EthPortErrStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]

tcaAdaptorBadCrcPacketsDelta

Fault Code: F34040

Message: Threshold Crossed: adaptor:EthPortErrStats property: badCrcPacketsDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34040
mibFaultName: tcaAdaptorBadCrcPacketsDelta
moClass: adaptor:EthPortErrStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]

tcaAdaptorBadCrcPacketsDeltaMin

Fault Code: F34041

Message: Threshold Crossed: adaptor:EthPortErrStats property: badCrcPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34041
mibFaultName: tcaAdaptorBadCrcPacketsDeltaMin
moClass: adaptor:EthPortErrStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
```

tcaAdaptorBadCrcPacketsDeltaMax

Fault Code: F34042

Message: Threshold Crossed: adaptor:EthPortErrStats property: badCrcPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34042
mibFaultName: tcaAdaptorBadCrcPacketsDeltaMax
moClass: adaptor:EthPortErrStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
```

tcaAdaptorBadCrcPacketsDeltaAvg

Fault Code: F34043

Message: Threshold Crossed: adaptor:EthPortErrStats property: badCrcPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34043
mibFaultName: tcaAdaptorBadCrcPacketsDeltaAvg
moClass: adaptor:EthPortErrStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
```

tcaAdaptorBadLengthPacketsDelta

Fault Code: F34050

Message: Threshold Crossed: adaptor:EthPortErrStats property: badLengthPacketsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34050
mibFaultName: tcaAdaptorBadLengthPacketsDelta
moClass: adaptor:EthPortErrStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
```

Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]

tcaAdaptorBadLengthPacketsDeltaMin

Fault Code: F34051

Message: Threshold Crossed: adaptor:EthPortErrStats property: badLengthPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34051
mibFaultName: tcaAdaptorBadLengthPacketsDeltaMin
moClass: adaptor:EthPortErrStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]

tcaAdaptorBadLengthPacketsDeltaMax

Fault Code: F34052

Message: Threshold Crossed: adaptor:EthPortErrStats property: badLengthPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34052
mibFaultName: tcaAdaptorBadLengthPacketsDeltaMax
moClass: adaptor:EthPortErrStats
Type: server
autoCleared: true

Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]

tcaAdaptorBadLengthPacketsDeltaAvg

Fault Code: F34053

Message: Threshold Crossed: adaptor:EthPortErrStats property: badLengthPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34053
mibFaultName: tcaAdaptorBadLengthPacketsDeltaAvg
moClass: adaptor:EthPortErrStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]

tcaAdaptorRxFramesDelta

Fault Code: F34064

Message: Threshold Crossed: adaptor:FcPortStats property: rxFramesDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34064
mibFaultName: tcaAdaptorRxFramesDelta
moClass: adaptor:FcPortStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats
```

tcaAdaptorRxFramesDeltaMin

Fault Code: F34065

Message: Threshold Crossed: adaptor:FcPortStats property: rxFramesDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34065
mibFaultName: tcaAdaptorRxFramesDeltaMin
moClass: adaptor:FcPortStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats
```

tcaAdaptorRxFramesDeltaMax

Fault Code: F34066

Message: Threshold Crossed: adaptor:FcPortStats property: rxFramesDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34066
mibFaultName: tcaAdaptorRxFramesDeltaMax
moClass: adaptor:FcPortStats
Type: server
autoCleared: true
```

Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats

tcaAdaptorRxFramesDeltaAvg

Fault Code: F34067

Message: Threshold Crossed: adaptor:FcPortStats property: rxFramesDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34067
mibFaultName: tcaAdaptorRxFramesDeltaAvg
moClass: adaptor:FcPortStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats

tcaAdaptorTxFramesDelta

Fault Code: F34074

Message: Threshold Crossed: adaptor:FcPortStats property: txFramesDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34074
mibFaultName: tcaAdaptorTxFramesDelta
moClass: adaptor:FcPortStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats

tcaAdaptorTxFramesDeltaMin

Fault Code: F34075

Message: Threshold Crossed: adaptor:FcPortStats property: txFramesDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34075
mibFaultName: tcaAdaptorTxFramesDeltaMin
moClass: adaptor:FcPortStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats
```

tcaAdaptorTxFramesDeltaMax

Fault Code: F34076

Message: Threshold Crossed: adaptor:FcPortStats property: txFramesDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34076
mibFaultName: tcaAdaptorTxFramesDeltaMax
moClass: adaptor:FcPortStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats
```

tcaAdaptorTxFramesDeltaAvg

Fault Code: F34077

Message: Threshold Crossed: adaptor:FcPortStats property: txFramesDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34077
mibFaultName: tcaAdaptorTxFramesDeltaAvg
moClass: adaptor:FcPortStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats
```

tcaAdaptorRxBadFramesDelta

Fault Code: F34084

Message: Threshold Crossed: adaptor:FcPortStats property: rxBadFramesDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34084
mibFaultName: tcaAdaptorRxBadFramesDelta
moClass: adaptor:FcPortStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats
```

tcaAdaptorRxBadFramesDeltaMin

Fault Code: F34085

Message: Threshold Crossed: adaptor:FcPortStats property: rxBadFramesDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34085
```

mibFaultName: tcaAdaptorRxBadFramesDeltaMin
moClass: adaptor:FcPortStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats

tcaAdaptorRxBadFramesDeltaMax

Fault Code: F34086

Message: Threshold Crossed: adaptor:FcPortStats property: rxBadFramesDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34086
mibFaultName: tcaAdaptorRxBadFramesDeltaMax
moClass: adaptor:FcPortStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats

tcaAdaptorRxBadFramesDeltaAvg

Fault Code: F34087

Message: Threshold Crossed: adaptor:FcPortStats property: rxBadFramesDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34087
mibFaultName: tcaAdaptorRxBadFramesDeltaAvg
moClass: adaptor:FcPortStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats

Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats

tcaAdaptorTxBadFramesDelta

Fault Code: F34094

Message: Threshold Crossed: adaptor:FcPortStats property: txBadFramesDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34094
mibFaultName: tcaAdaptorTxBadFramesDelta
moClass: adaptor:FcPortStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats

tcaAdaptorTxBadFramesDeltaMin

Fault Code: F34095

Message: Threshold Crossed: adaptor:FcPortStats property: txBadFramesDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34095
mibFaultName: tcaAdaptorTxBadFramesDeltaMin
moClass: adaptor:FcPortStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats

tcaAdaptorTxBadFramesDeltaMax

Fault Code: F34096

Message: Threshold Crossed: adaptor:FcPortStats property: txBadFramesDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34096
mibFaultName: tcaAdaptorTxBadFramesDeltaMax
moClass: adaptor:FcPortStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats
```

tcaAdaptorTxBadFramesDeltaAvg

Fault Code: F34097

Message: Threshold Crossed: adaptor:FcPortStats property: txBadFramesDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34097
mibFaultName: tcaAdaptorTxBadFramesDeltaAvg
moClass: adaptor:FcPortStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats
```

tcaAdaptorPacketsTxDelta

Fault Code: F34108

Message: Threshold Crossed: adaptor:VnicStats property: packetsTxDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34108
mibFaultName: tcaAdaptorPacketsTxDelta
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorPacketsTxDeltaMin

Fault Code: F34109

Message: Threshold Crossed: adaptor:VnicStats property: packetsTxDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34109
mibFaultName: tcaAdaptorPacketsTxDeltaMin
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorPacketsTxDeltaMax

Fault Code: F34110

Message: Threshold Crossed: adaptor:VnicStats property: packetsTxDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34110
mibFaultName: tcaAdaptorPacketsTxDeltaMax
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorPacketsTxDeltaAvg

Fault Code: F34111

Message: Threshold Crossed: adaptor:VnicStats property: packetsTxDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34111
mibFaultName: tcaAdaptorPacketsTxDeltaAvg
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats
```

tcaAdaptorPacketsRxDelta

Fault Code: F34118

Message: Threshold Crossed: adaptor:VnicStats property: packetsRxDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34118
mibFaultName: tcaAdaptorPacketsRxDelta
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO:
```

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorPacketsRxDeltaMin

Fault Code: F34119

Message: Threshold Crossed: adaptor:VnicStats property: packetsRxDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34119
mibFaultName: tcaAdaptorPacketsRxDeltaMin
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorPacketsRxDeltaMax

Fault Code: F34120

Message: Threshold Crossed: adaptor:VnicStats property: packetsRxDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34120
mibFaultName: tcaAdaptorPacketsRxDeltaMax
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats
```

tcaAdaptorPacketsRxDeltaAvg

Fault Code: F34121

Message: Threshold Crossed: adaptor:VnicStats property: packetsRxDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34121
mibFaultName: tcaAdaptorPacketsRxDeltaAvg
moClass: adaptor:VnicStats
Type: server
autoCleared: true
```

Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorBytesTxDelta

Fault Code: F34128

Message: Threshold Crossed: adaptor:VnicStats property: bytesTxDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34128
mibFaultName: tcaAdaptorBytesTxDelta
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats

Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorBytesTxDeltaMin

Fault Code: F34129

Message: Threshold Crossed: adaptor:VnicStats property: bytesTxDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34129
mibFaultName: tcaAdaptorBytesTxDeltaMin
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorBytesTxDeltaMax

Fault Code: F34130

Message: Threshold Crossed: adaptor:VnicStats property: bytesTxDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed

mibFaultCode: F34130
mibFaultName: tcaAdaptorBytesTxDeltaMax
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorBytesTxDeltaAvg

Fault Code: F34131

Message: Threshold Crossed: adaptor:VnicStats property: bytesTxDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34131
mibFaultName: tcaAdaptorBytesTxDeltaAvg
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorBytesRxDelta

Fault Code: F34138

Message: Threshold Crossed: adaptor:VnicStats property: bytesRxDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34138
mibFaultName: tcaAdaptorBytesRxDelta
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorBytesRxDeltaMin

Fault Code: F34139

Message: Threshold Crossed: adaptor:VnicStats property: bytesRxDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34139
mibFaultName: tcaAdaptorBytesRxDeltaMin
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorBytesRxDeltaMax

Fault Code: F34140

Message: Threshold Crossed: adaptor:VnicStats property: bytesRxDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34140
mibFaultName: tcaAdaptorBytesRxDeltaMax
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorBytesRxDeltaAvg

Fault Code: F34141

Message: Threshold Crossed: adaptor:VnicStats property: bytesRxDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34141
mibFaultName: tcaAdaptorBytesRxDeltaAvg
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorErrorsTxDelta

Fault Code: F34148

Message: Threshold Crossed: adaptor:VnicStats property: errorsTxDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34148
mibFaultName: tcaAdaptorErrorsTxDelta
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats
```

tcaAdaptorErrorsTxDeltaMin

Fault Code: F34149

Message: Threshold Crossed: adaptor:VnicStats property: errorsTxDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34149
mibFaultName: tcaAdaptorErrorsTxDeltaMin
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
```

Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorErrorsTxDeltaMax

Fault Code: F34150

Message: Threshold Crossed: adaptor:VnicStats property: errorsTxDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34150
mibFaultName: tcaAdaptorErrorsTxDeltaMax
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorErrorsTxDeltaAvg

Fault Code: F34151

Message: Threshold Crossed: adaptor:VnicStats property: errorsTxDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34151
mibFaultName: tcaAdaptorErrorsTxDeltaAvg
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats
```

tcaAdaptorErrorsRxDelta

Fault Code: F34158

Message: Threshold Crossed: adaptor:VnicStats property: errorsRxDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34158
mibFaultName: tcaAdaptorErrorsRxDelta
moClass: adaptor:VnicStats
Type: server
autoCleared: true
```

Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorErrorsRxDeltaMin

Fault Code: F34159

Message: Threshold Crossed: adaptor:VnicStats property: errorsRxDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34159
mibFaultName: tcaAdaptorErrorsRxDeltaMin
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats

Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorErrorsRxDeltaMax

Fault Code: F34160

Message: Threshold Crossed: adaptor:VnicStats property: errorsRxDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34160
mibFaultName: tcaAdaptorErrorsRxDeltaMax
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorErrorsRxDeltaAvg

Fault Code: F34161

Message: Threshold Crossed: adaptor:VnicStats property: errorsRxDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed

mibFaultCode: F34161
mibFaultName: tcaAdaptorErrorsRxDeltaAvg
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorDroppedTxDelta

Fault Code: F34168

Message: Threshold Crossed: adaptor:VnicStats property: droppedTxDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34168
mibFaultName: tcaAdaptorDroppedTxDelta
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorDroppedTxDeltaMin

Fault Code: F34169

Message: Threshold Crossed: adaptor:VnicStats property: droppedTxDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34169
mibFaultName: tcaAdaptorDroppedTxDeltaMin
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorDroppedTxDeltaMax

Fault Code: F34170

Message: Threshold Crossed: adaptor:VnicStats property: droppedTxDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34170
mibFaultName: tcaAdaptorDroppedTxDeltaMax
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorDroppedTxDeltaAvg

Fault Code: F34171

Message: Threshold Crossed: adaptor:VnicStats property: droppedTxDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34171
mibFaultName: tcaAdaptorDroppedTxDeltaAvg
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorDroppedRxDelta

Fault Code: F34178

Message: Threshold Crossed: adaptor:VnicStats property: droppedRxDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34178
mibFaultName: tcaAdaptorDroppedRxDelta
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorDroppedRxDeltaMin

Fault Code: F34179

Message: Threshold Crossed: adaptor:VnicStats property: droppedRxDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34179
mibFaultName: tcaAdaptorDroppedRxDeltaMin
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats
```

tcaAdaptorDroppedRxDeltaMax

Fault Code: F34180

Message: Threshold Crossed: adaptor:VnicStats property: droppedRxDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34180
mibFaultName: tcaAdaptorDroppedRxDeltaMax
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
```

Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorDroppedRxDeltaAvg

Fault Code: F34181

Message: Threshold Crossed: adaptor:VnicStats property: droppedRxDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34181
mibFaultName: tcaAdaptorDroppedRxDeltaAvg
moClass: adaptor:VnicStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-scsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorInputRequestsDelta

Fault Code: F34192

Message: Threshold Crossed: adaptor:FcIfFC4Stats property: inputRequestsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34192
mibFaultName: tcaAdaptorInputRequestsDelta
moClass: adaptor:FcIfFC4Stats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
```

tcaAdaptorInputRequestsDeltaMin

Fault Code: F34193

Message: Threshold Crossed: adaptor:FcIfFC4Stats property: inputRequestsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34193
mibFaultName: tcaAdaptorInputRequestsDeltaMin
moClass: adaptor:FcIfFC4Stats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
```

tcaAdaptorInputRequestsDeltaMax

Fault Code: F34194

Message: Threshold Crossed: adaptor:FcIfFC4Stats property: inputRequestsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
```

mibFaultCode: F34194
mibFaultName: tcaAdaptorInputRequestsDeltaMax
moClass: adaptor:FcIfFC4Stats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

tcaAdaptorInputRequestsDeltaAvg

Fault Code: F34195

Message: Threshold Crossed: adaptor:FcIfFC4Stats property: inputRequestsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34195
mibFaultName: tcaAdaptorInputRequestsDeltaAvg
moClass: adaptor:FcIfFC4Stats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

tcaAdaptorOutputRequestsDelta

Fault Code: F34202

Message: Threshold Crossed: adaptor:FcIfFC4Stats property: outputRequestsDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34202
mibFaultName: tcaAdaptorOutputRequestsDelta
moClass: adaptor:FcIfFC4Stats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

tcaAdaptorOutputRequestsDeltaMin

Fault Code: F34203

Message: Threshold Crossed: adaptor:FcIfFC4Stats property: outputRequestsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34203
mibFaultName: tcaAdaptorOutputRequestsDeltaMin
moClass: adaptor:FcIfFC4Stats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
```

tcaAdaptorOutputRequestsDeltaMax

Fault Code: F34204

Message: Threshold Crossed: adaptor:FcIfFC4Stats property: outputRequestsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34204
mibFaultName: tcaAdaptorOutputRequestsDeltaMax
moClass: adaptor:FcIfFC4Stats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
```

tcaAdaptorOutputRequestsDeltaAvg

Fault Code: F34205

Message: Threshold Crossed: adaptor:FcIfFC4Stats property: outputRequestsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34205
mibFaultName: tcaAdaptorOutputRequestsDeltaAvg
moClass: adaptor:FcIfFC4Stats
```

```
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
```

tcaAdaptorControlRequestsDelta

Fault Code: F34212

Message: Threshold Crossed: adaptor:FcIfFC4Stats property: controlRequestsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34212
mibFaultName: tcaAdaptorControlRequestsDelta
moClass: adaptor:FcIfFC4Stats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
```

tcaAdaptorControlRequestsDeltaMin

Fault Code: F34213

Message: Threshold Crossed: adaptor:FcIfFC4Stats property: controlRequestsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34213
mibFaultName: tcaAdaptorControlRequestsDeltaMin
moClass: adaptor:FcIfFC4Stats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
```

tcaAdaptorControlRequestsDeltaMax

Fault Code: F34214

Message: Threshold Crossed: adaptor:FcIfFC4Stats property: controlRequestsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34214
mibFaultName: tcaAdaptorControlRequestsDeltaMax
moClass: adaptor:FcIfFC4Stats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
```

tcaAdaptorControlRequestsDeltaAvg

Fault Code: F34215

Message: Threshold Crossed: adaptor:FcIfFC4Stats property: controlRequestsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34215
mibFaultName: tcaAdaptorControlRequestsDeltaAvg
moClass: adaptor:FcIfFC4Stats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
```

tcaAdaptorInputMegabytesDelta

Fault Code: F34222

Message: Threshold Crossed: adaptor:FcIfFC4Stats property: inputMegabytesDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34222
mibFaultName: tcaAdaptorInputMegabytesDelta
moClass: adaptor:FcIfFC4Stats
Type: server
autoCleared: true
```

Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

tcaAdaptorInputMegabytesDeltaMin

Fault Code: F34223

Message: Threshold Crossed: adaptor:FcIfFC4Stats property: inputMegabytesDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34223
mibFaultName: tcaAdaptorInputMegabytesDeltaMin
moClass: adaptor:FcIfFC4Stats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

tcaAdaptorInputMegabytesDeltaMax

Fault Code: F34224

Message: Threshold Crossed: adaptor:FcIfFC4Stats property: inputMegabytesDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34224
mibFaultName: tcaAdaptorInputMegabytesDeltaMax
moClass: adaptor:FcIfFC4Stats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

tcaAdaptorInputMegabytesDeltaAvg

Fault Code: F34225

Message: Threshold Crossed: adaptor:FcIfFC4Stats property: inputMegabytesDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34225
mibFaultName: tcaAdaptorInputMegabytesDeltaAvg
moClass: adaptor:FcIfFC4Stats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
```

tcaAdaptorOutputMegabytesDelta

Fault Code: F34232

Message: Threshold Crossed: adaptor:FcIfFC4Stats property: outputMegabytesDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34232
mibFaultName: tcaAdaptorOutputMegabytesDelta
moClass: adaptor:FcIfFC4Stats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
```

tcaAdaptorOutputMegabytesDeltaMin

Fault Code: F34233

Message: Threshold Crossed: adaptor:FcIfFC4Stats property: outputMegabytesDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34233
mibFaultName: tcaAdaptorOutputMegabytesDeltaMin
moClass: adaptor:FcIfFC4Stats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
```

tcaAdaptorOutputMegabytesDeltaMax

Fault Code: F34234

Message: Threshold Crossed: adaptor:FcIfFC4Stats property: outputMegabytesDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34234
mibFaultName: tcaAdaptorOutputMegabytesDeltaMax
moClass: adaptor:FcIfFC4Stats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
```

tcaAdaptorOutputMegabytesDeltaAvg

Fault Code: F34235

Message: Threshold Crossed: adaptor:FcIfFC4Stats property: outputMegabytesDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34235
mibFaultName: tcaAdaptorOutputMegabytesDeltaAvg
moClass: adaptor:FcIfFC4Stats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
```

tcaAdaptorCorrectableErrorsDelta

Fault Code: F34246

Message: Threshold Crossed: adaptor:MenloBaseErrorStats property: correctableErrorsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
```

```
mibFaultCode: F34246
mibFaultName: tcaAdaptorCorrectableErrorsDelta
moClass: adaptor:MenloBaseErrorStats
Type: server
autoCleared: true
```

tcaAdaptorCorrectableErrorsDeltaMin

Fault Code: F34247

Message: Threshold Crossed: adaptor:MenloBaseErrorStats property: correctableErrorsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34247
mibFaultName: tcaAdaptorCorrectableErrorsDeltaMin
moClass: adaptor:MenloBaseErrorStats
Type: server
autoCleared: true
```

tcaAdaptorCorrectableErrorsDeltaMax

Fault Code: F34248

Message: Threshold Crossed: adaptor:MenloBaseErrorStats property: correctableErrorsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34248
mibFaultName: tcaAdaptorCorrectableErrorsDeltaMax
moClass: adaptor:MenloBaseErrorStats
Type: server
autoCleared: true
```

tcaAdaptorCorrectableErrorsDeltaAvg

Fault Code: F34249

Message: Threshold Crossed: adaptor:MenloBaseErrorStats property: correctableErrorsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34249
```

```
mibFaultName: tcaAdaptorCorrectableErrorsDeltaAvg
moClass: adaptor:MenloBaseErrorStats
Type: server
autoCleared: true
```

tcaAdaptorUncorrectableErrorsDelta

Fault Code: F34256

Message: Threshold Crossed: adaptor:MenloBaseErrorStats property: uncorrectableErrorsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34256
mibFaultName: tcaAdaptorUncorrectableErrorsDelta
moClass: adaptor:MenloBaseErrorStats
Type: server
autoCleared: true
```

tcaAdaptorUncorrectableErrorsDeltaMin

Fault Code: F34257

Message: Threshold Crossed: adaptor:MenloBaseErrorStats property: uncorrectableErrorsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34257
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaMin
moClass: adaptor:MenloBaseErrorStats
Type: server
autoCleared: true
```

tcaAdaptorUncorrectableErrorsDeltaMax

Fault Code: F34258

Message: Threshold Crossed: adaptor:MenloBaseErrorStats property: uncorrectableErrorsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34258
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaMax
```

moClass: adaptor:MenloBaseErrorStats
Type: server
autoCleared: true

tcaAdaptorUncorrectableErrorsDeltaAvg

Fault Code: F34259

Message: Threshold Crossed: adaptor:MenloBaseErrorStats property: uncorrectableErrorsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34259
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaAvg
moClass: adaptor:MenloBaseErrorStats
Type: server
autoCleared: true

tcaAdaptorDropAclDelta

Fault Code: F34271

Message: Threshold Crossed: adaptor:MenloMcpuStats property: dropAclDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34271
mibFaultName: tcaAdaptorDropAclDelta
moClass: adaptor:MenloMcpuStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

tcaAdaptorDropAclDeltaMin

Fault Code: F34272

Message: Threshold Crossed: adaptor:MenloMcpuStats property: dropAclDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info

Cause: threshold-crossed
mibFaultCode: F34272
mibFaultName: tcaAdaptorDropAclDeltaMin
moClass: adaptor:MenloMcpuStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

tcaAdaptorDropAclDeltaMax

Fault Code: F34273

Message: Threshold Crossed: adaptor:MenloMcpuStats property: dropAclDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34273
mibFaultName: tcaAdaptorDropAclDeltaMax
moClass: adaptor:MenloMcpuStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

tcaAdaptorDropAclDeltaAvg

Fault Code: F34274

Message: Threshold Crossed: adaptor:MenloMcpuStats property: dropAclDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34274
mibFaultName: tcaAdaptorDropAclDeltaAvg
moClass: adaptor:MenloMcpuStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

tcaAdaptorDropOverrunDelta

Fault Code: F34281

Message: Threshold Crossed: adaptor:MenloMcpuStats property: dropOverrunDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34281
mibFaultName: tcaAdaptorDropOverrunDelta
moClass: adaptor:MenloMcpuStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
```

tcaAdaptorDropOverrunDeltaMin

Fault Code: F34282

Message: Threshold Crossed: adaptor:MenloMcpuStats property: dropOverrunDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34282
mibFaultName: tcaAdaptorDropOverrunDeltaMin
moClass: adaptor:MenloMcpuStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
```

tcaAdaptorDropOverrunDeltaMax

Fault Code: F34283

Message: Threshold Crossed: adaptor:MenloMcpuStats property: dropOverrunDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
```

mibFaultCode: F34283
mibFaultName: tcaAdaptorDropOverrunDeltaMax
moClass: adaptor:MenloMcpuStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

tcaAdaptorDropOverrunDeltaAvg

Fault Code: F34284

Message: Threshold Crossed: adaptor:MenloMcpuStats property: dropOverrunDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34284
mibFaultName: tcaAdaptorDropOverrunDeltaAvg
moClass: adaptor:MenloMcpuStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

tcaAdaptorDropRuntDelta

Fault Code: F34291

Message: Threshold Crossed: adaptor:MenloMcpuStats property: dropRuntDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34291
mibFaultName: tcaAdaptorDropRuntDelta
moClass: adaptor:MenloMcpuStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

tcaAdaptorDropRuntDeltaMin

Fault Code: F34292

Message: Threshold Crossed: adaptor:MenloMcpuStats property: dropRuntDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34292
mibFaultName: tcaAdaptorDropRuntDeltaMin
moClass: adaptor:MenloMcpuStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
```

tcaAdaptorDropRuntDeltaMax

Fault Code: F34293

Message: Threshold Crossed: adaptor:MenloMcpuStats property: dropRuntDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34293
mibFaultName: tcaAdaptorDropRuntDeltaMax
moClass: adaptor:MenloMcpuStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
```

tcaAdaptorDropRuntDeltaAvg

Fault Code: F34294

Message: Threshold Crossed: adaptor:MenloMcpuStats property: dropRuntDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34294
mibFaultName: tcaAdaptorDropRuntDeltaAvg
moClass: adaptor:MenloMcpuStats
```

Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

tcaAdaptorTruncateOverrunDelta

Fault Code: F34301

Message: Threshold Crossed: adaptor:MenloMcpuStats property: truncateOverrunDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34301
mibFaultName: tcaAdaptorTruncateOverrunDelta
moClass: adaptor:MenloMcpuStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

tcaAdaptorTruncateOverrunDeltaMin

Fault Code: F34302

Message: Threshold Crossed: adaptor:MenloMcpuStats property: truncateOverrunDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34302
mibFaultName: tcaAdaptorTruncateOverrunDeltaMin
moClass: adaptor:MenloMcpuStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

tcaAdaptorTruncateOverrunDeltaMax

Fault Code: F34303

Message: Threshold Crossed: adaptor:MenloMcpuStats property: truncateOverrunDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34303
mibFaultName: tcaAdaptorTruncateOverrunDeltaMax
moClass: adaptor:MenloMcpuStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
```

tcaAdaptorTruncateOverrunDeltaAvg

Fault Code: F34304

Message: Threshold Crossed: adaptor:MenloMcpuStats property: truncateOverrunDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34304
mibFaultName: tcaAdaptorTruncateOverrunDeltaAvg
moClass: adaptor:MenloMcpuStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
```

tcaAdaptorCorrectableErrorsDelta

Fault Code: F34316

Message: Threshold Crossed: adaptor:MenloMcpuErrorStats property: correctableErrorsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34316
mibFaultName: tcaAdaptorCorrectableErrorsDelta
moClass: adaptor:MenloMcpuErrorStats
Type: server
autoCleared: true
```

Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

tcaAdaptorCorrectableErrorsDeltaMin

Fault Code: F34317

Message: Threshold Crossed: adaptor:MenloMcpuErrorStats property: correctableErrorsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34317
mibFaultName: tcaAdaptorCorrectableErrorsDeltaMin
moClass: adaptor:MenloMcpuErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

tcaAdaptorCorrectableErrorsDeltaMax

Fault Code: F34318

Message: Threshold Crossed: adaptor:MenloMcpuErrorStats property: correctableErrorsDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34318
mibFaultName: tcaAdaptorCorrectableErrorsDeltaMax
moClass: adaptor:MenloMcpuErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

tcaAdaptorCorrectableErrorsDeltaAvg

Fault Code: F34319

Message: Threshold Crossed: adaptor:MenloMcpuErrorStats property: correctableErrorsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34319
mibFaultName: tcaAdaptorCorrectableErrorsDeltaAvg
moClass: adaptor:MenloMcpuErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
```

tcaAdaptorPopErrorsDelta

Fault Code: F34326

Message: Threshold Crossed: adaptor:MenloMcpuErrorStats property: popErrorsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34326
mibFaultName: tcaAdaptorPopErrorsDelta
moClass: adaptor:MenloMcpuErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
```

tcaAdaptorPopErrorsDeltaMin

Fault Code: F34327

Message: Threshold Crossed: adaptor:MenloMcpuErrorStats property: popErrorsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34327
mibFaultName: tcaAdaptorPopErrorsDeltaMin
moClass: adaptor:MenloMcpuErrorStats
```

Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

tcaAdaptorPopErrorsDeltaMax

Fault Code: F34328

Message: Threshold Crossed: adaptor:MenloMcpuErrorStats property: popErrorsDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34328
mibFaultName: tcaAdaptorPopErrorsDeltaMax
moClass: adaptor:MenloMcpuErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

tcaAdaptorPopErrorsDeltaAvg

Fault Code: F34329

Message: Threshold Crossed: adaptor:MenloMcpuErrorStats property: popErrorsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34329
mibFaultName: tcaAdaptorPopErrorsDeltaAvg
moClass: adaptor:MenloMcpuErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

tcaAdaptorPushErrorsDelta

Fault Code: F34336

Message: Threshold Crossed: adaptor:MenloMcpuErrorStats property: pushErrorsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34336
mibFaultName: tcaAdaptorPushErrorsDelta
moClass: adaptor:MenloMcpuErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
```

tcaAdaptorPushErrorsDeltaMin

Fault Code: F34337

Message: Threshold Crossed: adaptor:MenloMcpuErrorStats property: pushErrorsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34337
mibFaultName: tcaAdaptorPushErrorsDeltaMin
moClass: adaptor:MenloMcpuErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
```

tcaAdaptorPushErrorsDeltaMax

Fault Code: F34338

Message: Threshold Crossed: adaptor:MenloMcpuErrorStats property: pushErrorsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34338
```

mibFaultName: tcaAdaptorPushErrorsDeltaMax
moClass: adaptor:MenloMcpuErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

tcaAdaptorPushErrorsDeltaAvg

Fault Code: F34339

Message: Threshold Crossed: adaptor:MenloMcpuErrorStats property: pushErrorsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34339
mibFaultName: tcaAdaptorPushErrorsDeltaAvg
moClass: adaptor:MenloMcpuErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

tcaAdaptorUncorrectableErrorsDelta

Fault Code: F34346

Message: Threshold Crossed: adaptor:MenloMcpuErrorStats property: uncorrectableErrorsDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34346
mibFaultName: tcaAdaptorUncorrectableErrorsDelta
moClass: adaptor:MenloMcpuErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

tcaAdaptorUncorrectableErrorsDeltaMin

Fault Code: F34347

Message: Threshold Crossed: adaptor:MenloMcpuErrorStats property: uncorrectableErrorsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34347
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaMin
moClass: adaptor:MenloMcpuErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
```

tcaAdaptorUncorrectableErrorsDeltaMax

Fault Code: F34348

Message: Threshold Crossed: adaptor:MenloMcpuErrorStats property: uncorrectableErrorsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34348
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaMax
moClass: adaptor:MenloMcpuErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
```

tcaAdaptorUncorrectableErrorsDeltaAvg

Fault Code: F34349

Message: Threshold Crossed: adaptor:MenloMcpuErrorStats property: uncorrectableErrorsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34349
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaAvg
moClass: adaptor:MenloMcpuErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

tcaAdaptorDropOverrunDelta

Fault Code: F34361

Message: Threshold Crossed: adaptor:MenloEthStats property: dropOverrunDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34361
mibFaultName: tcaAdaptorDropOverrunDelta
moClass: adaptor:MenloEthStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]

tcaAdaptorDropOverrunDeltaMin

Fault Code: F34362

Message: Threshold Crossed: adaptor:MenloEthStats property: dropOverrunDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34362
mibFaultName: tcaAdaptorDropOverrunDeltaMin
moClass: adaptor:MenloEthStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]

tcaAdaptorDropOverrunDeltaMax

Fault Code: F34363

Message: Threshold Crossed: adaptor:MenloEthStats property: dropOverrunDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34363
mibFaultName: tcaAdaptorDropOverrunDeltaMax
moClass: adaptor:MenloEthStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
```

tcaAdaptorDropOverrunDeltaAvg

Fault Code: F34364

Message: Threshold Crossed: adaptor:MenloEthStats property: dropOverrunDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34364
mibFaultName: tcaAdaptorDropOverrunDeltaAvg
moClass: adaptor:MenloEthStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
```

tcaAdaptorDropRuntDelta

Fault Code: F34371

Message: Threshold Crossed: adaptor:MenloEthStats property: dropRuntDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
```

mibFaultCode: F34371
mibFaultName: tcaAdaptorDropRuntDelta
moClass: adaptor:MenloEthStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]

tcaAdaptorDropRuntDeltaMin

Fault Code: F34372

Message: Threshold Crossed: adaptor:MenloEthStats property: dropRuntDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34372
mibFaultName: tcaAdaptorDropRuntDeltaMin
moClass: adaptor:MenloEthStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]

tcaAdaptorDropRuntDeltaMax

Fault Code: F34373

Message: Threshold Crossed: adaptor:MenloEthStats property: dropRuntDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34373
mibFaultName: tcaAdaptorDropRuntDeltaMax
moClass: adaptor:MenloEthStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]

tcaAdaptorDropRuntDeltaAvg

Fault Code: F34374

Message: Threshold Crossed: adaptor:MenloEthStats property: dropRuntDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34374
mibFaultName: tcaAdaptorDropRuntDeltaAvg
moClass: adaptor:MenloEthStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
```

tcaAdaptorTruncateOverrunDelta

Fault Code: F34381

Message: Threshold Crossed: adaptor:MenloEthStats property: truncateOverrunDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34381
mibFaultName: tcaAdaptorTruncateOverrunDelta
moClass: adaptor:MenloEthStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
```

tcaAdaptorTruncateOverrunDeltaMin

Fault Code: F34382

Message: Threshold Crossed: adaptor:MenloEthStats property: truncateOverrunDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34382
mibFaultName: tcaAdaptorTruncateOverrunDeltaMin
moClass: adaptor:MenloEthStats
```

Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]

tcaAdaptorTruncateOverrunDeltaMax

Fault Code: F34383

Message: Threshold Crossed: adaptor:MenloEthStats property: truncateOverrunDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34383
mibFaultName: tcaAdaptorTruncateOverrunDeltaMax
moClass: adaptor:MenloEthStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]

tcaAdaptorTruncateOverrunDeltaAvg

Fault Code: F34384

Message: Threshold Crossed: adaptor:MenloEthStats property: truncateOverrunDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34384
mibFaultName: tcaAdaptorTruncateOverrunDeltaAvg
moClass: adaptor:MenloEthStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]

tcaAdaptorCorrectableErrorsDelta

Fault Code: F34396

Message: Threshold Crossed: adaptor:MenloEthErrorStats property: correctableErrorsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34396
mibFaultName: tcaAdaptorCorrectableErrorsDelta
moClass: adaptor:MenloEthErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
```

tcaAdaptorCorrectableErrorsDeltaMin

Fault Code: F34397

Message: Threshold Crossed: adaptor:MenloEthErrorStats property: correctableErrorsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34397
mibFaultName: tcaAdaptorCorrectableErrorsDeltaMin
moClass: adaptor:MenloEthErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
```

tcaAdaptorCorrectableErrorsDeltaMax

Fault Code: F34398

Message: Threshold Crossed: adaptor:MenloEthErrorStats property: correctableErrorsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34398
mibFaultName: tcaAdaptorCorrectableErrorsDeltaMax
moClass: adaptor:MenloEthErrorStats
```

Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

tcaAdaptorCorrectableErrorsDeltaAvg

Fault Code: F34399

Message: Threshold Crossed: adaptor:MenloEthErrorStats property: correctableErrorsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34399
mibFaultName: tcaAdaptorCorrectableErrorsDeltaAvg
moClass: adaptor:MenloEthErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

tcaAdaptorDropAclDelta

Fault Code: F34406

Message: Threshold Crossed: adaptor:MenloEthErrorStats property: dropAclDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34406
mibFaultName: tcaAdaptorDropAclDelta
moClass: adaptor:MenloEthErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

tcaAdaptorDropAclDeltaMin

Fault Code: F34407

Message: Threshold Crossed: adaptor:MenloEthErrorStats property: dropAclDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34407
mibFaultName: tcaAdaptorDropAclDeltaMin
moClass: adaptor:MenloEthErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
```

tcaAdaptorDropAclDeltaMax

Fault Code: F34408

Message: Threshold Crossed: adaptor:MenloEthErrorStats property: dropAclDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34408
mibFaultName: tcaAdaptorDropAclDeltaMax
moClass: adaptor:MenloEthErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
```

tcaAdaptorDropAclDeltaAvg

Fault Code: F34409

Message: Threshold Crossed: adaptor:MenloEthErrorStats property: dropAclDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34409
```

mibFaultName: tcaAdaptorDropAclDeltaAvg
moClass: adaptor:MenloEthErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

tcaAdaptorPopErrorsDelta

Fault Code: F34416

Message: Threshold Crossed: adaptor:MenloEthErrorStats property: popErrorsDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34416
mibFaultName: tcaAdaptorPopErrorsDelta
moClass: adaptor:MenloEthErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

tcaAdaptorPopErrorsDeltaMin

Fault Code: F34417

Message: Threshold Crossed: adaptor:MenloEthErrorStats property: popErrorsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34417
mibFaultName: tcaAdaptorPopErrorsDeltaMin
moClass: adaptor:MenloEthErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

tcaAdaptorPopErrorsDeltaMax

Fault Code: F34418

Message: Threshold Crossed: adaptor:MenloEthErrorStats property: popErrorsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34418
mibFaultName: tcaAdaptorPopErrorsDeltaMax
moClass: adaptor:MenloEthErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
```

tcaAdaptorPopErrorsDeltaAvg

Fault Code: F34419

Message: Threshold Crossed: adaptor:MenloEthErrorStats property: popErrorsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34419
mibFaultName: tcaAdaptorPopErrorsDeltaAvg
moClass: adaptor:MenloEthErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
```

tcaAdaptorPushErrorsDelta

Fault Code: F34426

Message: Threshold Crossed: adaptor:MenloEthErrorStats property: pushErrorsDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34426
mibFaultName: tcaAdaptorPushErrorsDelta
moClass: adaptor:MenloEthErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

tcaAdaptorPushErrorsDeltaMin

Fault Code: F34427

Message: Threshold Crossed: adaptor:MenloEthErrorStats property: pushErrorsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34427
mibFaultName: tcaAdaptorPushErrorsDeltaMin
moClass: adaptor:MenloEthErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

tcaAdaptorPushErrorsDeltaMax

Fault Code: F34428

Message: Threshold Crossed: adaptor:MenloEthErrorStats property: pushErrorsDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34428
mibFaultName: tcaAdaptorPushErrorsDeltaMax
moClass: adaptor:MenloEthErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

tcaAdaptorPushErrorsDeltaAvg

Fault Code: F34429

Message: Threshold Crossed: adaptor:MenloEthErrorStats property: pushErrorsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34429
mibFaultName: tcaAdaptorPushErrorsDeltaAvg
moClass: adaptor:MenloEthErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
```

tcaAdaptorUncorrectableErrorsDelta

Fault Code: F34436

Message: Threshold Crossed: adaptor:MenloEthErrorStats property: uncorrectableErrorsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34436
mibFaultName: tcaAdaptorUncorrectableErrorsDelta
moClass: adaptor:MenloEthErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
```

tcaAdaptorUncorrectableErrorsDeltaMin

Fault Code: F34437

Message: Threshold Crossed: adaptor:MenloEthErrorStats property: uncorrectableErrorsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34437
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaMin
moClass: adaptor:MenloEthErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
```

tcaAdaptorUncorrectableErrorsDeltaMax

Fault Code: F34438

Message: Threshold Crossed: adaptor:MenloEthErrorStats property: uncorrectableErrorsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34438
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaMax
moClass: adaptor:MenloEthErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
```

tcaAdaptorUncorrectableErrorsDeltaAvg

Fault Code: F34439

Message: Threshold Crossed: adaptor:MenloEthErrorStats property: uncorrectableErrorsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34439
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaAvg
moClass: adaptor:MenloEthErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
```

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

tcaAdaptorDropAclDelta

Fault Code: F34451

Message: Threshold Crossed: adaptor:MenloFcStats property: dropAclDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34451
mibFaultName: tcaAdaptorDropAclDelta
moClass: adaptor:MenloFcStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]

tcaAdaptorDropAclDeltaMin

Fault Code: F34452

Message: Threshold Crossed: adaptor:MenloFcStats property: dropAclDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34452
mibFaultName: tcaAdaptorDropAclDeltaMin
moClass: adaptor:MenloFcStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]

tcaAdaptorDropAclDeltaMax

Fault Code: F34453

Message: Threshold Crossed: adaptor:MenloFcStats property: dropAclDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34453
mibFaultName: tcaAdaptorDropAclDeltaMax
moClass: adaptor:MenloFcStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
```

tcaAdaptorDropAclDeltaAvg

Fault Code: F34454

Message: Threshold Crossed: adaptor:MenloFcStats property: dropAclDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34454
mibFaultName: tcaAdaptorDropAclDeltaAvg
moClass: adaptor:MenloFcStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
```

tcaAdaptorDropOverrunDelta

Fault Code: F34461

Message: Threshold Crossed: adaptor:MenloFcStats property: dropOverrunDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34461
mibFaultName: tcaAdaptorDropOverrunDelta
moClass: adaptor:MenloFcStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
```

tcaAdaptorDropOverrunDeltaMin

Fault Code: F34462

Message: Threshold Crossed: adaptor:MenloFcStats property: dropOverrunDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34462
mibFaultName: tcaAdaptorDropOverrunDeltaMin
moClass: adaptor:MenloFcStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
```

tcaAdaptorDropOverrunDeltaMax

Fault Code: F34463

Message: Threshold Crossed: adaptor:MenloFcStats property: dropOverrunDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34463
mibFaultName: tcaAdaptorDropOverrunDeltaMax
moClass: adaptor:MenloFcStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
```

tcaAdaptorDropOverrunDeltaAvg

Fault Code: F34464

Message: Threshold Crossed: adaptor:MenloFcStats property: dropOverrunDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
```

mibFaultCode: F34464
mibFaultName: tcaAdaptorDropOverrunDeltaAvg
moClass: adaptor:MenloFcStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]

tcaAdaptorDropRuntDelta

Fault Code: F34471

Message: Threshold Crossed: adaptor:MenloFcStats property: dropRuntDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34471
mibFaultName: tcaAdaptorDropRuntDelta
moClass: adaptor:MenloFcStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]

tcaAdaptorDropRuntDeltaMin

Fault Code: F34472

Message: Threshold Crossed: adaptor:MenloFcStats property: dropRuntDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34472
mibFaultName: tcaAdaptorDropRuntDeltaMin
moClass: adaptor:MenloFcStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]

tcaAdaptorDropRuntDeltaMax

Fault Code: F34473

Message: Threshold Crossed: adaptor:MenloFcStats property: dropRuntDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34473
mibFaultName: tcaAdaptorDropRuntDeltaMax
moClass: adaptor:MenloFcStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
```

tcaAdaptorDropRuntDeltaAvg

Fault Code: F34474

Message: Threshold Crossed: adaptor:MenloFcStats property: dropRuntDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34474
mibFaultName: tcaAdaptorDropRuntDeltaAvg
moClass: adaptor:MenloFcStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
```

tcaAdaptorTruncateOverrunDelta

Fault Code: F34481

Message: Threshold Crossed: adaptor:MenloFcStats property: truncateOverrunDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34481
mibFaultName: tcaAdaptorTruncateOverrunDelta
moClass: adaptor:MenloFcStats
```

Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]

tcaAdaptorTruncateOverrunDeltaMin

Fault Code: F34482

Message: Threshold Crossed: adaptor:MenloFcStats property: truncateOverrunDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34482
mibFaultName: tcaAdaptorTruncateOverrunDeltaMin
moClass: adaptor:MenloFcStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]

tcaAdaptorTruncateOverrunDeltaMax

Fault Code: F34483

Message: Threshold Crossed: adaptor:MenloFcStats property: truncateOverrunDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34483
mibFaultName: tcaAdaptorTruncateOverrunDeltaMax
moClass: adaptor:MenloFcStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]

tcaAdaptorTruncateOverrunDeltaAvg

Fault Code: F34484

Message: Threshold Crossed: adaptor:MenloFcStats property: truncateOverrunDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34484
mibFaultName: tcaAdaptorTruncateOverrunDeltaAvg
moClass: adaptor:MenloFcStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
```

tcaAdaptorCorrectableErrorsDelta

Fault Code: F34496

Message: Threshold Crossed: adaptor:MenloFcErrorStats property: correctableErrorsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34496
mibFaultName: tcaAdaptorCorrectableErrorsDelta
moClass: adaptor:MenloFcErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
```

tcaAdaptorCorrectableErrorsDeltaMin

Fault Code: F34497

Message: Threshold Crossed: adaptor:MenloFcErrorStats property: correctableErrorsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34497
mibFaultName: tcaAdaptorCorrectableErrorsDeltaMin
moClass: adaptor:MenloFcErrorStats
Type: server
autoCleared: true
```

Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]

tcaAdaptorCorrectableErrorsDeltaMax

Fault Code: F34498

Message: Threshold Crossed: adaptor:MenloFcErrorStats property: correctableErrorsDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34498
mibFaultName: tcaAdaptorCorrectableErrorsDeltaMax
moClass: adaptor:MenloFcErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]

tcaAdaptorCorrectableErrorsDeltaAvg

Fault Code: F34499

Message: Threshold Crossed: adaptor:MenloFcErrorStats property: correctableErrorsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34499
mibFaultName: tcaAdaptorCorrectableErrorsDeltaAvg
moClass: adaptor:MenloFcErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]

tcaAdaptorPopErrorsDelta

Fault Code: F34506

Message: Threshold Crossed: adaptor:MenloFcErrorStats property: popErrorsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34506
mibFaultName: tcaAdaptorPopErrorsDelta
moClass: adaptor:MenloFcErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
```

tcaAdaptorPopErrorsDeltaMin

Fault Code: F34507

Message: Threshold Crossed: adaptor:MenloFcErrorStats property: popErrorsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34507
mibFaultName: tcaAdaptorPopErrorsDeltaMin
moClass: adaptor:MenloFcErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
```

tcaAdaptorPopErrorsDeltaMax

Fault Code: F34508

Message: Threshold Crossed: adaptor:MenloFcErrorStats property: popErrorsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34508
mibFaultName: tcaAdaptorPopErrorsDeltaMax
moClass: adaptor:MenloFcErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
```

tcaAdaptorPopErrorsDeltaAvg

Fault Code: F34509

Message: Threshold Crossed: adaptor:MenloFcErrorStats property: popErrorsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34509
mibFaultName: tcaAdaptorPopErrorsDeltaAvg
moClass: adaptor:MenloFcErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
```

tcaAdaptorPushErrorsDelta

Fault Code: F34516

Message: Threshold Crossed: adaptor:MenloFcErrorStats property: pushErrorsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34516
mibFaultName: tcaAdaptorPushErrorsDelta
moClass: adaptor:MenloFcErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
```

tcaAdaptorPushErrorsDeltaMin

Fault Code: F34517

Message: Threshold Crossed: adaptor:MenloFcErrorStats property: pushErrorsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
```

mibFaultCode: F34517
mibFaultName: tcaAdaptorPushErrorsDeltaMin
moClass: adaptor:MenloFcErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]

tcaAdaptorPushErrorsDeltaMax

Fault Code: F34518

Message: Threshold Crossed: adaptor:MenloFcErrorStats property: pushErrorsDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34518
mibFaultName: tcaAdaptorPushErrorsDeltaMax
moClass: adaptor:MenloFcErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]

tcaAdaptorPushErrorsDeltaAvg

Fault Code: F34519

Message: Threshold Crossed: adaptor:MenloFcErrorStats property: pushErrorsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34519
mibFaultName: tcaAdaptorPushErrorsDeltaAvg
moClass: adaptor:MenloFcErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]

tcaAdaptorUncorrectableErrorsDelta

Fault Code: F34526

Message: Threshold Crossed: adaptor:MenloFcErrorStats property: uncorrectableErrorsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34526
mibFaultName: tcaAdaptorUncorrectableErrorsDelta
moClass: adaptor:MenloFcErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
```

tcaAdaptorUncorrectableErrorsDeltaMin

Fault Code: F34527

Message: Threshold Crossed: adaptor:MenloFcErrorStats property: uncorrectableErrorsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34527
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaMin
moClass: adaptor:MenloFcErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
```

tcaAdaptorUncorrectableErrorsDeltaMax

Fault Code: F34528

Message: Threshold Crossed: adaptor:MenloFcErrorStats property: uncorrectableErrorsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34528
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaMax
moClass: adaptor:MenloFcErrorStats
```

Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]

tcaAdaptorUncorrectableErrorsDeltaAvg

Fault Code: F34529

Message: Threshold Crossed: adaptor:MenloFcErrorStats property: uncorrectableErrorsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34529
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaAvg
moClass: adaptor:MenloFcErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]

tcaAdaptorDropOverrunN0Delta

Fault Code: F34542

Message: Threshold Crossed: adaptor:MenloQStats property: dropOverrunN0Delta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34542
mibFaultName: tcaAdaptorDropOverrunN0Delta
moClass: adaptor:MenloQStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

tcaAdaptorDropOverrunN0DeltaMin

Fault Code: F34543

Message: Threshold Crossed: adaptor:MenloQStats property: dropOverrunN0DeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34543
mibFaultName: tcaAdaptorDropOverrunN0DeltaMin
moClass: adaptor:MenloQStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
```

tcaAdaptorDropOverrunN0DeltaMax

Fault Code: F34544

Message: Threshold Crossed: adaptor:MenloQStats property: dropOverrunN0DeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34544
mibFaultName: tcaAdaptorDropOverrunN0DeltaMax
moClass: adaptor:MenloQStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
```

tcaAdaptorDropOverrunN0DeltaAvg

Fault Code: F34545

Message: Threshold Crossed: adaptor:MenloQStats property: dropOverrunN0DeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34545
mibFaultName: tcaAdaptorDropOverrunN0DeltaAvg
moClass: adaptor:MenloQStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

tcaAdaptorDropOverrunN1Delta

Fault Code: F34552

Message: Threshold Crossed: adaptor:MenloQStats property: dropOverrunN1Delta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34552
mibFaultName: tcaAdaptorDropOverrunN1Delta
moClass: adaptor:MenloQStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

tcaAdaptorDropOverrunN1DeltaMin

Fault Code: F34553

Message: Threshold Crossed: adaptor:MenloQStats property: dropOverrunN1DeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34553
mibFaultName: tcaAdaptorDropOverrunN1DeltaMin
moClass: adaptor:MenloQStats
Type: server
autoCleared: true

Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

tcaAdaptorDropOverrunN1DeltaMax

Fault Code: F34554

Message: Threshold Crossed: adaptor:MenloQStats property: dropOverrunN1DeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34554
mibFaultName: tcaAdaptorDropOverrunN1DeltaMax
moClass: adaptor:MenloQStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

tcaAdaptorDropOverrunN1DeltaAvg

Fault Code: F34555

Message: Threshold Crossed: adaptor:MenloQStats property: dropOverrunN1DeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34555
mibFaultName: tcaAdaptorDropOverrunN1DeltaAvg
moClass: adaptor:MenloQStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

tcaAdaptorTruncateOverrunN0Delta

Fault Code: F34562

Message: Threshold Crossed: adaptor:MenloQStats property: truncateOverrunN0Delta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34562
mibFaultName: tcaAdaptorTruncateOverrunN0Delta
moClass: adaptor:MenloQStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
```

tcaAdaptorTruncateOverrunN0DeltaMin

Fault Code: F34563

Message: Threshold Crossed: adaptor:MenloQStats property: truncateOverrunN0DeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34563
mibFaultName: tcaAdaptorTruncateOverrunN0DeltaMin
moClass: adaptor:MenloQStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
```

tcaAdaptorTruncateOverrunN0DeltaMax

Fault Code: F34564

Message: Threshold Crossed: adaptor:MenloQStats property: truncateOverrunN0DeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34564
mibFaultName: tcaAdaptorTruncateOverrunN0DeltaMax
moClass: adaptor:MenloQStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
```

tcaAdaptorTruncateOverrunN0DeltaAvg

Fault Code: F34565

Message: Threshold Crossed: adaptor:MenloQStats property: truncateOverrunN0DeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34565
mibFaultName: tcaAdaptorTruncateOverrunN0DeltaAvg
moClass: adaptor:MenloQStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
```

tcaAdaptorTruncateOverrunN1Delta

Fault Code: F34572

Message: Threshold Crossed: adaptor:MenloQStats property: truncateOverrunN1Delta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34572
```

mibFaultName: tcaAdaptorTruncateOverrunN1Delta
moClass: adaptor:MenloQStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

tcaAdaptorTruncateOverrunN1DeltaMin

Fault Code: F34573

Message: Threshold Crossed: adaptor:MenloQStats property: truncateOverrunN1DeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34573
mibFaultName: tcaAdaptorTruncateOverrunN1DeltaMin
moClass: adaptor:MenloQStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

tcaAdaptorTruncateOverrunN1DeltaMax

Fault Code: F34574

Message: Threshold Crossed: adaptor:MenloQStats property: truncateOverrunN1DeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34574
mibFaultName: tcaAdaptorTruncateOverrunN1DeltaMax
moClass: adaptor:MenloQStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

tcaAdaptorTruncateOverrunN1DeltaAvg

Fault Code: F34575

Message: Threshold Crossed: adaptor:MenloQStats property: truncateOverrunN1DeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34575
mibFaultName: tcaAdaptorTruncateOverrunN1DeltaAvg
moClass: adaptor:MenloQStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

tcaAdaptorCorrectableErrorsDelta

Fault Code: F34588

Message: Threshold Crossed: adaptor:MenloQErrorStats property: correctableErrorsDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34588
mibFaultName: tcaAdaptorCorrectableErrorsDelta
moClass: adaptor:MenloQErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

tcaAdaptorCorrectableErrorsDeltaMin

Fault Code: F34589

Message: Threshold Crossed: adaptor:MenloQErrorStats property: correctableErrorsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34589
mibFaultName: tcaAdaptorCorrectableErrorsDeltaMin
moClass: adaptor:MenloQErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
```

tcaAdaptorCorrectableErrorsDeltaMax

Fault Code: F34590

Message: Threshold Crossed: adaptor:MenloQErrorStats property: correctableErrorsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34590
mibFaultName: tcaAdaptorCorrectableErrorsDeltaMax
moClass: adaptor:MenloQErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
```

tcaAdaptorCorrectableErrorsDeltaAvg

Fault Code: F34591

Message: Threshold Crossed: adaptor:MenloQErrorStats property: correctableErrorsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34591
mibFaultName: tcaAdaptorCorrectableErrorsDeltaAvg
moClass: adaptor:MenloQErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

tcaAdaptorPopErrorsDelta

Fault Code: F34598

Message: Threshold Crossed: adaptor:MenloQErrorStats property: popErrorsDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34598
mibFaultName: tcaAdaptorPopErrorsDelta
moClass: adaptor:MenloQErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

tcaAdaptorPopErrorsDeltaMin

Fault Code: F34599

Message: Threshold Crossed: adaptor:MenloQErrorStats property: popErrorsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34599
mibFaultName: tcaAdaptorPopErrorsDeltaMin
moClass: adaptor:MenloQErrorStats
Type: server
autoCleared: true

Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

tcaAdaptorPopErrorsDeltaMax

Fault Code: F34600

Message: Threshold Crossed: adaptor:MenloQErrorStats property: popErrorsDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34600
mibFaultName: tcaAdaptorPopErrorsDeltaMax
moClass: adaptor:MenloQErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

tcaAdaptorPopErrorsDeltaAvg

Fault Code: F34601

Message: Threshold Crossed: adaptor:MenloQErrorStats property: popErrorsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34601
mibFaultName: tcaAdaptorPopErrorsDeltaAvg
moClass: adaptor:MenloQErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

tcaAdaptorPushErrorsDelta

Fault Code: F34608

Message: Threshold Crossed: adaptor:MenloQErrorStats property: pushErrorsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34608
mibFaultName: tcaAdaptorPushErrorsDelta
moClass: adaptor:MenloQErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
```

tcaAdaptorPushErrorsDeltaMin

Fault Code: F34609

Message: Threshold Crossed: adaptor:MenloQErrorStats property: pushErrorsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34609
mibFaultName: tcaAdaptorPushErrorsDeltaMin
moClass: adaptor:MenloQErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
```

tcaAdaptorPushErrorsDeltaMax

Fault Code: F34610

Message: Threshold Crossed: adaptor:MenloQErrorStats property: pushErrorsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34610
mibFaultName: tcaAdaptorPushErrorsDeltaMax
moClass: adaptor:MenloQErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
```

tcaAdaptorPushErrorsDeltaAvg

Fault Code: F34611

Message: Threshold Crossed: adaptor:MenloQErrorStats property: pushErrorsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34611
mibFaultName: tcaAdaptorPushErrorsDeltaAvg
moClass: adaptor:MenloQErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
```

tcaAdaptorUncorrectableErrorsDelta

Fault Code: F34618

Message: Threshold Crossed: adaptor:MenloQErrorStats property: uncorrectableErrorsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34618
```

mibFaultName: tcaAdaptorUncorrectableErrorsDelta
moClass: adaptor:MenloQErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

tcaAdaptorUncorrectableErrorsDeltaMin

Fault Code: F34619

Message: Threshold Crossed: adaptor:MenloQErrorStats property: uncorrectableErrorsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34619
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaMin
moClass: adaptor:MenloQErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

tcaAdaptorUncorrectableErrorsDeltaMax

Fault Code: F34620

Message: Threshold Crossed: adaptor:MenloQErrorStats property: uncorrectableErrorsDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34620
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaMax
moClass: adaptor:MenloQErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

tcaAdaptorUncorrectableErrorsDeltaAvg

Fault Code: F34621

Message: Threshold Crossed: adaptor:MenloQErrorStats property: uncorrectableErrorsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34621
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaAvg
moClass: adaptor:MenloQErrorStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

tcaAdaptorLearnReqDropDelta

Fault Code: F34633

Message: Threshold Crossed: adaptor:MenloNetEgStats property: learnReqDropDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34633
mibFaultName: tcaAdaptorLearnReqDropDelta
moClass: adaptor:MenloNetEgStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]

tcaAdaptorLearnReqDropDeltaMin

Fault Code: F34634

Message: Threshold Crossed: adaptor:MenloNetEgStats property: learnReqDropDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34634
mibFaultName: tcaAdaptorLearnReqDropDeltaMin
moClass: adaptor:MenloNetEgStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```

tcaAdaptorLearnReqDropDeltaMax

Fault Code: F34635

Message: Threshold Crossed: adaptor:MenloNetEgStats property: learnReqDropDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34635
mibFaultName: tcaAdaptorLearnReqDropDeltaMax
moClass: adaptor:MenloNetEgStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```

tcaAdaptorLearnReqDropDeltaAvg

Fault Code: F34636

Message: Threshold Crossed: adaptor:MenloNetEgStats property: learnReqDropDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34636
mibFaultName: tcaAdaptorLearnReqDropDeltaAvg
moClass: adaptor:MenloNetEgStats
Type: server
autoCleared: true
```

Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]

tcaAdaptorDropCmdDelta

Fault Code: F34643

Message: Threshold Crossed: adaptor:MenloNetEgStats property: dropCmdDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34643
mibFaultName: tcaAdaptorDropCmdDelta
moClass: adaptor:MenloNetEgStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]

tcaAdaptorDropCmdDeltaMin

Fault Code: F34644

Message: Threshold Crossed: adaptor:MenloNetEgStats property: dropCmdDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34644
mibFaultName: tcaAdaptorDropCmdDeltaMin
moClass: adaptor:MenloNetEgStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]

tcaAdaptorDropCmdDeltaMax

Fault Code: F34645

Message: Threshold Crossed: adaptor:MenloNetEgStats property: dropCmdDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34645
mibFaultName: tcaAdaptorDropCmdDeltaMax
moClass: adaptor:MenloNetEgStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```

tcaAdaptorDropCmdDeltaAvg

Fault Code: F34646

Message: Threshold Crossed: adaptor:MenloNetEgStats property: dropCmdDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34646
mibFaultName: tcaAdaptorDropCmdDeltaAvg
moClass: adaptor:MenloNetEgStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```

tcaAdaptorDropLifCfgInvalidDelta

Fault Code: F34653

Message: Threshold Crossed: adaptor:MenloNetEgStats property: dropLifCfgInvalidDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34653
mibFaultName: tcaAdaptorDropLifCfgInvalidDelta
moClass: adaptor:MenloNetEgStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```

tcaAdaptorDropLifCfgInvalidDeltaMin

Fault Code: F34654

Message: Threshold Crossed: adaptor:MenloNetEgStats property: dropLifCfgInvalidDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34654
mibFaultName: tcaAdaptorDropLifCfgInvalidDeltaMin
moClass: adaptor:MenloNetEgStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```

tcaAdaptorDropLifCfgInvalidDeltaMax

Fault Code: F34655

Message: Threshold Crossed: adaptor:MenloNetEgStats property: dropLifCfgInvalidDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34655
mibFaultName: tcaAdaptorDropLifCfgInvalidDeltaMax
moClass: adaptor:MenloNetEgStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```

tcaAdaptorDropLifCfgInvalidDeltaAvg

Fault Code: F34656

Message: Threshold Crossed: adaptor:MenloNetEgStats property: dropLifCfgInvalidDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
```

mibFaultCode: F34656
mibFaultName: tcaAdaptorDropLifCfgInvalidDeltaAvg
moClass: adaptor:MenloNetEgStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]

tcaAdaptorDropLifMapNoHitDelta

Fault Code: F34663

Message: Threshold Crossed: adaptor:MenloNetEgStats property: dropLifMapNoHitDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34663
mibFaultName: tcaAdaptorDropLifMapNoHitDelta
moClass: adaptor:MenloNetEgStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]

tcaAdaptorDropLifMapNoHitDeltaMin

Fault Code: F34664

Message: Threshold Crossed: adaptor:MenloNetEgStats property: dropLifMapNoHitDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34664
mibFaultName: tcaAdaptorDropLifMapNoHitDeltaMin
moClass: adaptor:MenloNetEgStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]

tcaAdaptorDropLifMapNoHitDeltaMax

Fault Code: F34665

Message: Threshold Crossed: adaptor:MenloNetEgStats property: dropLifMapNoHitDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34665
mibFaultName: tcaAdaptorDropLifMapNoHitDeltaMax
moClass: adaptor:MenloNetEgStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```

tcaAdaptorDropLifMapNoHitDeltaAvg

Fault Code: F34666

Message: Threshold Crossed: adaptor:MenloNetEgStats property: dropLifMapNoHitDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34666
mibFaultName: tcaAdaptorDropLifMapNoHitDeltaAvg
moClass: adaptor:MenloNetEgStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```

tcaAdaptorDropSrcBindDelta

Fault Code: F34673

Message: Threshold Crossed: adaptor:MenloNetEgStats property: dropSrcBindDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34673
mibFaultName: tcaAdaptorDropSrcBindDelta
moClass: adaptor:MenloNetEgStats
```

Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]

tcaAdaptorDropSrcBindDeltaMin

Fault Code: F34674

Message: Threshold Crossed: adaptor:MenloNetEgStats property: dropSrcBindDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34674
mibFaultName: tcaAdaptorDropSrcBindDeltaMin
moClass: adaptor:MenloNetEgStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]

tcaAdaptorDropSrcBindDeltaMax

Fault Code: F34675

Message: Threshold Crossed: adaptor:MenloNetEgStats property: dropSrcBindDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34675
mibFaultName: tcaAdaptorDropSrcBindDeltaMax
moClass: adaptor:MenloNetEgStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]

tcaAdaptorDropSrcBindDeltaAvg

Fault Code: F34676

Message: Threshold Crossed: adaptor:MenloNetEgStats property: dropSrcBindDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34676
mibFaultName: tcaAdaptorDropSrcBindDeltaAvg
moClass: adaptor:MenloNetEgStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```

tcaAdaptorFwdLookupNoHitDelta

Fault Code: F34688

Message: Threshold Crossed: adaptor:MenloNetInStats property: fwdLookupNoHitDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34688
mibFaultName: tcaAdaptorFwdLookupNoHitDelta
moClass: adaptor:MenloNetInStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
```

tcaAdaptorFwdLookupNoHitDeltaMin

Fault Code: F34689

Message: Threshold Crossed: adaptor:MenloNetInStats property: fwdLookupNoHitDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34689
mibFaultName: tcaAdaptorFwdLookupNoHitDeltaMin
moClass: adaptor:MenloNetInStats
Type: server
autoCleared: true
```

Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]

tcaAdaptorFwdLookupNoHitDeltaMax

Fault Code: F34690

Message: Threshold Crossed: adaptor:MenloNetInStats property: fwdLookupNoHitDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34690
mibFaultName: tcaAdaptorFwdLookupNoHitDeltaMax
moClass: adaptor:MenloNetInStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]

tcaAdaptorFwdLookupNoHitDeltaAvg

Fault Code: F34691

Message: Threshold Crossed: adaptor:MenloNetInStats property: fwdLookupNoHitDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34691
mibFaultName: tcaAdaptorFwdLookupNoHitDeltaAvg
moClass: adaptor:MenloNetInStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]

tcaAdaptorDropFcMulticastDelta

Fault Code: F34698

Message: Threshold Crossed: adaptor:MenloNetInStats property: dropFcMulticastDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34698
mibFaultName: tcaAdaptorDropFcMulticastDelta
moClass: adaptor:MenloNetInStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
```

tcaAdaptorDropFcMulticastDeltaMin

Fault Code: F34699

Message: Threshold Crossed: adaptor:MenloNetInStats property: dropFcMulticastDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34699
mibFaultName: tcaAdaptorDropFcMulticastDeltaMin
moClass: adaptor:MenloNetInStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
```

tcaAdaptorDropFcMulticastDeltaMax

Fault Code: F34700

Message: Threshold Crossed: adaptor:MenloNetInStats property: dropFcMulticastDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34700
mibFaultName: tcaAdaptorDropFcMulticastDeltaMax
moClass: adaptor:MenloNetInStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
```

tcaAdaptorDropFcMulticastDeltaAvg

Fault Code: F34701

Message: Threshold Crossed: adaptor:MenloNetInStats property: dropFcMulticastDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34701
mibFaultName: tcaAdaptorDropFcMulticastDeltaAvg
moClass: adaptor:MenloNetInStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
```

tcaAdaptorDropFcLifInvalidDelta

Fault Code: F34708

Message: Threshold Crossed: adaptor:MenloNetInStats property: dropFcLifInvalidDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34708
mibFaultName: tcaAdaptorDropFcLifInvalidDelta
moClass: adaptor:MenloNetInStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
```

tcaAdaptorDropFcLifInvalidDeltaMin

Fault Code: F34709

Message: Threshold Crossed: adaptor:MenloNetInStats property: dropFcLifInvalidDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
```

mibFaultCode: F34709
mibFaultName: tcaAdaptorDropFcLifInvalidDeltaMin
moClass: adaptor:MenloNetInStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]

tcaAdaptorDropFcLifInvalidDeltaMax

Fault Code: F34710

Message: Threshold Crossed: adaptor:MenloNetInStats property: dropFcLifInvalidDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34710
mibFaultName: tcaAdaptorDropFcLifInvalidDeltaMax
moClass: adaptor:MenloNetInStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]

tcaAdaptorDropFcLifInvalidDeltaAvg

Fault Code: F34711

Message: Threshold Crossed: adaptor:MenloNetInStats property: dropFcLifInvalidDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34711
mibFaultName: tcaAdaptorDropFcLifInvalidDeltaAvg
moClass: adaptor:MenloNetInStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]

tcaAdaptorDropNullPifDelta

Fault Code: F34718

Message: Threshold Crossed: adaptor:MenloNetInStats property: dropNullPifDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34718
mibFaultName: tcaAdaptorDropNullPifDelta
moClass: adaptor:MenloNetInStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
```

tcaAdaptorDropNullPifDeltaMin

Fault Code: F34719

Message: Threshold Crossed: adaptor:MenloNetInStats property: dropNullPifDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34719
mibFaultName: tcaAdaptorDropNullPifDeltaMin
moClass: adaptor:MenloNetInStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
```

tcaAdaptorDropNullPifDeltaMax

Fault Code: F34720

Message: Threshold Crossed: adaptor:MenloNetInStats property: dropNullPifDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34720
mibFaultName: tcaAdaptorDropNullPifDeltaMax
moClass: adaptor:MenloNetInStats
```

Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]

tcaAdaptorDropNullPifDeltaAvg

Fault Code: F34721

Message: Threshold Crossed: adaptor:MenloNetInStats property: dropNullPifDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34721
mibFaultName: tcaAdaptorDropNullPifDeltaAvg
moClass: adaptor:MenloNetInStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]

tcaAdaptorRxPauseCFCDelta

Fault Code: F34733

Message: Threshold Crossed: adaptor:MenloHostPortStats property: rxPauseCFCDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34733
mibFaultName: tcaAdaptorRxPauseCFCDelta
moClass: adaptor:MenloHostPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]

tcaAdaptorRxPauseCFCDeltaMin

Fault Code: F34734

Message: Threshold Crossed: adaptor:MenloHostPortStats property: rxPauseCFCDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34734
mibFaultName: tcaAdaptorRxPauseCFCDeltaMin
moClass: adaptor:MenloHostPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
```

tcaAdaptorRxPauseCFCDeltaMax

Fault Code: F34735

Message: Threshold Crossed: adaptor:MenloHostPortStats property: rxPauseCFCDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34735
mibFaultName: tcaAdaptorRxPauseCFCDeltaMax
moClass: adaptor:MenloHostPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
```

tcaAdaptorRxPauseCFCDeltaAvg

Fault Code: F34736

Message: Threshold Crossed: adaptor:MenloHostPortStats property: rxPauseCFCDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34736
mibFaultName: tcaAdaptorRxPauseCFCDeltaAvg
moClass: adaptor:MenloHostPortStats
```

Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]

tcaAdaptorRxPausePFCDelta

Fault Code: F34743

Message: Threshold Crossed: adaptor:MenloHostPortStats property: rxPausePFCDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34743
mibFaultName: tcaAdaptorRxPausePFCDelta
moClass: adaptor:MenloHostPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]

tcaAdaptorRxPausePFCDeltaMin

Fault Code: F34744

Message: Threshold Crossed: adaptor:MenloHostPortStats property: rxPausePFCDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34744
mibFaultName: tcaAdaptorRxPausePFCDeltaMin
moClass: adaptor:MenloHostPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]

tcaAdaptorRxPausePFCDeltaMax

Fault Code: F34745

Message: Threshold Crossed: adaptor:MenloHostPortStats property: rxPausePFCDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34745
mibFaultName: tcaAdaptorRxPausePFCDeltaMax
moClass: adaptor:MenloHostPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
```

tcaAdaptorRxPausePFCDeltaAvg

Fault Code: F34746

Message: Threshold Crossed: adaptor:MenloHostPortStats property: rxPausePFCDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34746
mibFaultName: tcaAdaptorRxPausePFCDeltaAvg
moClass: adaptor:MenloHostPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
```

tcaAdaptorTxPauseCFCDelta

Fault Code: F34753

Message: Threshold Crossed: adaptor:MenloHostPortStats property: txPauseCFCDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34753
```

mibFaultName: tcaAdaptorTxPauseCFCDelta
moClass: adaptor:MenloHostPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]

tcaAdaptorTxPauseCFCDeltaMin

Fault Code: F34754

Message: Threshold Crossed: adaptor:MenloHostPortStats property: txPauseCFCDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34754
mibFaultName: tcaAdaptorTxPauseCFCDeltaMin
moClass: adaptor:MenloHostPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]

tcaAdaptorTxPauseCFCDeltaMax

Fault Code: F34755

Message: Threshold Crossed: adaptor:MenloHostPortStats property: txPauseCFCDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34755
mibFaultName: tcaAdaptorTxPauseCFCDeltaMax
moClass: adaptor:MenloHostPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]

tcaAdaptorTxPauseCFCDeltaAvg

Fault Code: F34756

Message: Threshold Crossed: adaptor:MenloHostPortStats property: txPauseCFCDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34756
mibFaultName: tcaAdaptorTxPauseCFCDeltaAvg
moClass: adaptor:MenloHostPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
```

tcaAdaptorTxPausePFCDelta

Fault Code: F34763

Message: Threshold Crossed: adaptor:MenloHostPortStats property: txPausePFCDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34763
mibFaultName: tcaAdaptorTxPausePFCDelta
moClass: adaptor:MenloHostPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
```

tcaAdaptorTxPausePFCDeltaMin

Fault Code: F34764

Message: Threshold Crossed: adaptor:MenloHostPortStats property: txPausePFCDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34764
mibFaultName: tcaAdaptorTxPausePFCDeltaMin
moClass: adaptor:MenloHostPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]

tcaAdaptorTxPausePFCDeltaMax

Fault Code: F34765

Message: Threshold Crossed: adaptor:MenloHostPortStats property: txPausePFCDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34765
mibFaultName: tcaAdaptorTxPausePFCDeltaMax
moClass: adaptor:MenloHostPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]

tcaAdaptorTxPausePFCDeltaAvg

Fault Code: F34766

Message: Threshold Crossed: adaptor:MenloHostPortStats property: txPausePFCDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34766
mibFaultName: tcaAdaptorTxPausePFCDeltaAvg
moClass: adaptor:MenloHostPortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]

tcaAdaptorRxPauseCFCDelta

Fault Code: F34778

Message: Threshold Crossed: adaptor:MenloDcePortStats property: rxPauseCFCDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34778
mibFaultName: tcaAdaptorRxPauseCFCDelta
moClass: adaptor:MenloDcePortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]

tcaAdaptorRxPauseCFCDeltaMin

Fault Code: F34779

Message: Threshold Crossed: adaptor:MenloDcePortStats property: rxPauseCFCDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34779
mibFaultName: tcaAdaptorRxPauseCFCDeltaMin
moClass: adaptor:MenloDcePortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]

tcaAdaptorRxPauseCFCDeltaMax

Fault Code: F34780

Message: Threshold Crossed: adaptor:MenloDcePortStats property: rxPauseCFCDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34780
mibFaultName: tcaAdaptorRxPauseCFCDeltaMax
moClass: adaptor:MenloDcePortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
```

tcaAdaptorRxPauseCFCDeltaAvg

Fault Code: F34781

Message: Threshold Crossed: adaptor:MenloDcePortStats property: rxPauseCFCDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34781
mibFaultName: tcaAdaptorRxPauseCFCDeltaAvg
moClass: adaptor:MenloDcePortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
```

tcaAdaptorRxPausePFCDelta

Fault Code: F34788

Message: Threshold Crossed: adaptor:MenloDcePortStats property: rxPausePFCDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34788
mibFaultName: tcaAdaptorRxPausePFCDelta
moClass: adaptor:MenloDcePortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
```

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]

tcaAdaptorRxPausePFCDeltaMin

Fault Code: F34789

Message: Threshold Crossed: adaptor:MenloDcePortStats property: rxPausePFCDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34789
mibFaultName: tcaAdaptorRxPausePFCDeltaMin
moClass: adaptor:MenloDcePortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]

tcaAdaptorRxPausePFCDeltaMax

Fault Code: F34790

Message: Threshold Crossed: adaptor:MenloDcePortStats property: rxPausePFCDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34790
mibFaultName: tcaAdaptorRxPausePFCDeltaMax
moClass: adaptor:MenloDcePortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]

tcaAdaptorRxPausePFCDeltaAvg

Fault Code: F34791

Message: Threshold Crossed: adaptor:MenloDcePortStats property: rxPausePFCDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34791
mibFaultName: tcaAdaptorRxPausePFCDeltaAvg
moClass: adaptor:MenloDcePortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
```

tcaAdaptorTxPauseCFCDelta

Fault Code: F34798

Message: Threshold Crossed: adaptor:MenloDcePortStats property: txPauseCFCDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34798
mibFaultName: tcaAdaptorTxPauseCFCDelta
moClass: adaptor:MenloDcePortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
```

tcaAdaptorTxPauseCFCDeltaMin

Fault Code: F34799

Message: Threshold Crossed: adaptor:MenloDcePortStats property: txPauseCFCDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34799
mibFaultName: tcaAdaptorTxPauseCFCDeltaMin
moClass: adaptor:MenloDcePortStats
Type: server
autoCleared: true
```

Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]

tcaAdaptorTxPauseCFCDeltaMax

Fault Code: F34800

Message: Threshold Crossed: adaptor:MenloDcePortStats property: txPauseCFCDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34800
mibFaultName: tcaAdaptorTxPauseCFCDeltaMax
moClass: adaptor:MenloDcePortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]

tcaAdaptorTxPauseCFCDeltaAvg

Fault Code: F34801

Message: Threshold Crossed: adaptor:MenloDcePortStats property: txPauseCFCDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34801
mibFaultName: tcaAdaptorTxPauseCFCDeltaAvg
moClass: adaptor:MenloDcePortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]

tcaAdaptorTxPausePFCDelta

Fault Code: F34808

Message: Threshold Crossed: adaptor:MenloDcePortStats property: txPausePFCDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34808
mibFaultName: tcaAdaptorTxPausePFCDelta
moClass: adaptor:MenloDcePortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
```

tcaAdaptorTxPausePFCDeltaMin

Fault Code: F34809

Message: Threshold Crossed: adaptor:MenloDcePortStats property: txPausePFCDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34809
mibFaultName: tcaAdaptorTxPausePFCDeltaMin
moClass: adaptor:MenloDcePortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
```

tcaAdaptorTxPausePFCDeltaMax

Fault Code: F34810

Message: Threshold Crossed: adaptor:MenloDcePortStats property: txPausePFCDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34810
mibFaultName: tcaAdaptorTxPausePFCDeltaMax
moClass: adaptor:MenloDcePortStats
```

Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]

tcaAdaptorTxPausePFCDeltaAvg

Fault Code: F34811

Message: Threshold Crossed: adaptor:MenloDcePortStats property: txPausePFCDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34811
mibFaultName: tcaAdaptorTxPausePFCDeltaAvg
moClass: adaptor:MenloDcePortStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]

tcaAdaptorTxBytesDelta

Fault Code: F34822

Message: Threshold Crossed: adaptor:EtherIfStats property: txBytesDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34822
mibFaultName: tcaAdaptorTxBytesDelta
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorTxBytesDeltaMin

Fault Code: F34823

Message: Threshold Crossed: adaptor:EtherIfStats property: txBytesDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34823
mibFaultName: tcaAdaptorTxBytesDeltaMin
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorTxBytesDeltaMax

Fault Code: F34824

Message: Threshold Crossed: adaptor:EtherIfStats property: txBytesDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34824
mibFaultName: tcaAdaptorTxBytesDeltaMax
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true

Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorTxBytesDeltaAvg

Fault Code: F34825

Message: Threshold Crossed: adaptor:EtherIfStats property: txBytesDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34825
mibFaultName: tcaAdaptorTxBytesDeltaAvg
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorTxPacketsDelta

Fault Code: F34832

Message: Threshold Crossed: adaptor:EtherIfStats property: txPacketsDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34832
mibFaultName: tcaAdaptorTxPacketsDelta
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorTxPacketsDeltaMin

Fault Code: F34833

Message: Threshold Crossed: adaptor:EtherIfStats property: txPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34833
mibFaultName: tcaAdaptorTxPacketsDeltaMin
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorTxPacketsDeltaMax

Fault Code: F34834

Message: Threshold Crossed: adaptor:EtherIfStats property: txPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34834
mibFaultName: tcaAdaptorTxPacketsDeltaMax
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
```

tcaAdaptorTxPacketsDeltaAvg

Fault Code: F34835

Message: Threshold Crossed: adaptor:EtherIfStats property: txPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34835
mibFaultName: tcaAdaptorTxPacketsDeltaAvg
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
```

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorTxErrorsDelta

Fault Code: F34842

Message: Threshold Crossed: adaptor:EtherIfStats property: txErrorsDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34842
mibFaultName: tcaAdaptorTxErrorsDelta
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorTxErrorsDeltaMin

Fault Code: F34843

Message: Threshold Crossed: adaptor:EtherIfStats property: txErrorsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34843
mibFaultName: tcaAdaptorTxErrorsDeltaMin

moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorTxErrorsDeltaMax

Fault Code: F34844

Message: Threshold Crossed: adaptor:EtherIfStats property: txErrorsDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34844
mibFaultName: tcaAdaptorTxErrorsDeltaMax
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorTxErrorsDeltaAvg

Fault Code: F34845

Message: Threshold Crossed: adaptor:EtherIfStats property: txErrorsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34845
mibFaultName: tcaAdaptorTxErrorsDeltaAvg
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
```

tcaAdaptorTxDroppedDelta

Fault Code: F34852

Message: Threshold Crossed: adaptor:EtherIfStats property: txDroppedDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34852
mibFaultName: tcaAdaptorTxDroppedDelta
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
```

Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorTxDroppedDeltaMin

Fault Code: F34853

Message: Threshold Crossed: adaptor:EtherIfStats property: txDroppedDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34853
mibFaultName: tcaAdaptorTxDroppedDeltaMin
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorTxDroppedDeltaMax

Fault Code: F34854

Message: Threshold Crossed: adaptor:EtherIfStats property: txDroppedDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34854
mibFaultName: tcaAdaptorTxDroppedDeltaMax
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:

sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorTxDroppedDeltaAvg

Fault Code: F34855

Message: Threshold Crossed: adaptor:EtherIfStats property: txDroppedDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34855
mibFaultName: tcaAdaptorTxDroppedDeltaAvg
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorRxBytesDelta

Fault Code: F34862

Message: Threshold Crossed: adaptor:EtherIfStats property: rxBytesDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34862
mibFaultName: tcaAdaptorRxBytesDelta
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorRxBytesDeltaMin

Fault Code: F34863

Message: Threshold Crossed: adaptor:EtherIfStats property: rxBytesDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34863
mibFaultName: tcaAdaptorRxBytesDeltaMin
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorRxBytesDeltaMax

Fault Code: F34864

Message: Threshold Crossed: adaptor:EtherIfStats property: rxBytesDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34864
mibFaultName: tcaAdaptorRxBytesDeltaMax
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
```

tcaAdaptorRxBytesDeltaAvg

Fault Code: F34865

Message: Threshold Crossed: adaptor:EtherIfStats property: rxBytesDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34865
mibFaultName: tcaAdaptorRxBytesDeltaAvg
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
```

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorRxPacketsDelta

Fault Code: F34872

Message: Threshold Crossed: adaptor:EtherIfStats property: rxPacketsDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34872
mibFaultName: tcaAdaptorRxPacketsDelta
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorRxPacketsDeltaMin

Fault Code: F34873

Message: Threshold Crossed: adaptor:EtherIfStats property: rxPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34873
mibFaultName: tcaAdaptorRxPacketsDeltaMin

moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorRxPacketsDeltaMax

Fault Code: F34874

Message: Threshold Crossed: adaptor:EtherIfStats property: rxPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34874
mibFaultName: tcaAdaptorRxPacketsDeltaMax
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorRxPacketsDeltaAvg

Fault Code: F34875

Message: Threshold Crossed: adaptor:EtherIfStats property: rxPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34875
mibFaultName: tcaAdaptorRxPacketsDeltaAvg
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
```

tcaAdaptorRxErrorsDelta

Fault Code: F34882

Message: Threshold Crossed: adaptor:EtherIfStats property: rxErrorsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34882
mibFaultName: tcaAdaptorRxErrorsDelta
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
```

Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorRxErrorsDeltaMin

Fault Code: F34883

Message: Threshold Crossed: adaptor:EtherIfStats property: rxErrorsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34883
mibFaultName: tcaAdaptorRxErrorsDeltaMin
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorRxErrorsDeltaMax

Fault Code: F34884

Message: Threshold Crossed: adaptor:EtherIfStats property: rxErrorsDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34884
mibFaultName: tcaAdaptorRxErrorsDeltaMax
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:

sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorRxErrorsDeltaAvg

Fault Code: F34885

Message: Threshold Crossed: adaptor:EtherIfStats property: rxErrorsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34885
mibFaultName: tcaAdaptorRxErrorsDeltaAvg
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorRxDroppedDelta

Fault Code: F34892

Message: Threshold Crossed: adaptor:EtherIfStats property: rxDroppedDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34892
mibFaultName: tcaAdaptorRxDroppedDelta
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorRxDroppedDeltaMin

Fault Code: F34893

Message: Threshold Crossed: adaptor:EtherIfStats property: rxDroppedDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34893
mibFaultName: tcaAdaptorRxDroppedDeltaMin
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorRxDroppedDeltaMax

Fault Code: F34894

Message: Threshold Crossed: adaptor:EtherIfStats property: rxDroppedDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34894
mibFaultName: tcaAdaptorRxDroppedDeltaMax
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
```

tcaAdaptorRxDroppedDeltaAvg

Fault Code: F34895

Message: Threshold Crossed: adaptor:EtherIfStats property: rxDroppedDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34895
mibFaultName: tcaAdaptorRxDroppedDeltaAvg
moClass: adaptor:EtherIfStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
```

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorTxFramesDelta

Fault Code: F34906

Message: Threshold Crossed: adaptor:FcIfFrameStats property: txFramesDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34906
mibFaultName: tcaAdaptorTxFramesDelta
moClass: adaptor:FcIfFrameStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats

tcaAdaptorTxFramesDeltaMin

Fault Code: F34907

Message: Threshold Crossed: adaptor:FcIfFrameStats property: txFramesDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34907
mibFaultName: tcaAdaptorTxFramesDeltaMin
moClass: adaptor:FcIfFrameStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats

tcaAdaptorTxFramesDeltaMax

Fault Code: F34908

Message: Threshold Crossed: adaptor:FcIfFrameStats property: txFramesDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34908
mibFaultName: tcaAdaptorTxFramesDeltaMax
moClass: adaptor:FcIfFrameStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
```

tcaAdaptorTxFramesDeltaAvg

Fault Code: F34909

Message: Threshold Crossed: adaptor:FcIfFrameStats property: txFramesDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34909
mibFaultName: tcaAdaptorTxFramesDeltaAvg
moClass: adaptor:FcIfFrameStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
```

tcaAdaptorRxFramesDelta

Fault Code: F34916

Message: Threshold Crossed: adaptor:FcIfFrameStats property: rxFramesDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34916
mibFaultName: tcaAdaptorRxFramesDelta
moClass: adaptor:FcIfFrameStats
```

```
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
```

tcaAdaptorRxFramesDeltaMin

Fault Code: F34917

Message: Threshold Crossed: adaptor:FcIfFrameStats property: rxFramesDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34917
mibFaultName: tcaAdaptorRxFramesDeltaMin
moClass: adaptor:FcIfFrameStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
```

tcaAdaptorRxFramesDeltaMax

Fault Code: F34918

Message: Threshold Crossed: adaptor:FcIfFrameStats property: rxFramesDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34918
mibFaultName: tcaAdaptorRxFramesDeltaMax
moClass: adaptor:FcIfFrameStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
```

tcaAdaptorRxFramesDeltaAvg

Fault Code: F34919

Message: Threshold Crossed: adaptor:FcIfFrameStats property: rxFramesDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34919
mibFaultName: tcaAdaptorRxFramesDeltaAvg
moClass: adaptor:FcIfFrameStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
```

tcaAdaptorErrorFramesDelta

Fault Code: F34926

Message: Threshold Crossed: adaptor:FcIfFrameStats property: errorFramesDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34926
mibFaultName: tcaAdaptorErrorFramesDelta
moClass: adaptor:FcIfFrameStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
```

tcaAdaptorErrorFramesDeltaMin

Fault Code: F34927

Message: Threshold Crossed: adaptor:FcIfFrameStats property: errorFramesDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34927
mibFaultName: tcaAdaptorErrorFramesDeltaMin
moClass: adaptor:FcIfFrameStats
Type: generic
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
```

tcaAdaptorErrorFramesDeltaMax

Fault Code: F34928

Message: Threshold Crossed: adaptor:FcIfFrameStats property: errorFramesDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34928
mibFaultName: tcaAdaptorErrorFramesDeltaMax
moClass: adaptor:FcIfFrameStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
```

tcaAdaptorErrorFramesDeltaAvg

Fault Code: F34929

Message: Threshold Crossed: adaptor:FcIfFrameStats property: errorFramesDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34929
mibFaultName: tcaAdaptorErrorFramesDeltaAvg
moClass: adaptor:FcIfFrameStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
```

tcaAdaptorDumpedFramesDelta

Fault Code: F34936

Message: Threshold Crossed: adaptor:FcIfFrameStats property: dumpedFramesDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34936
mibFaultName: tcaAdaptorDumpedFramesDelta
moClass: adaptor:FcIfFrameStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
```

tcaAdaptorDumpedFramesDeltaMin

Fault Code: F34937

Message: Threshold Crossed: adaptor:FcIfFrameStats property: dumpedFramesDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34937
mibFaultName: tcaAdaptorDumpedFramesDeltaMin
moClass: adaptor:FcIfFrameStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
```

tcaAdaptorDumpedFramesDeltaMax

Fault Code: F34938

Message: Threshold Crossed: adaptor:FcIfFrameStats property: dumpedFramesDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34938
mibFaultName: tcaAdaptorDumpedFramesDeltaMax
moClass: adaptor:FcIfFrameStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
```

tcaAdaptorDumpedFramesDeltaAvg

Fault Code: F34939

Message: Threshold Crossed: adaptor:FcIfFrameStats property: dumpedFramesDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34939
mibFaultName: tcaAdaptorDumpedFramesDeltaAvg
moClass: adaptor:FcIfFrameStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
```

tcaAdaptorLipCountDelta

Fault Code: F34950

Message: Threshold Crossed: adaptor:FcIfEventStats property: lipCountDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34950
mibFaultName: tcaAdaptorLipCountDelta
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorLipCountDeltaMin

Fault Code: F34951

Message: Threshold Crossed: adaptor:FcIfEventStats property: lipCountDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
```

```
mibFaultCode: F34951
mibFaultName: tcaAdaptorLipCountDeltaMin
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorLipCountDeltaMax

Fault Code: F34952

Message: Threshold Crossed: adaptor:FcIfEventStats property: lipCountDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34952
mibFaultName: tcaAdaptorLipCountDeltaMax
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorLipCountDeltaAvg

Fault Code: F34953

Message: Threshold Crossed: adaptor:FcIfEventStats property: lipCountDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34953
mibFaultName: tcaAdaptorLipCountDeltaAvg
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorInvalidCRCCountDelta

Fault Code: F34960

Message: Threshold Crossed: adaptor:FcIfEventStats property: invalidCRCCountDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34960
mibFaultName: tcaAdaptorInvalidCRCCountDelta
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorInvalidCRCCountDeltaMin

Fault Code: F34961

Message: Threshold Crossed: adaptor:FcIfEventStats property: invalidCRCCountDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34961
mibFaultName: tcaAdaptorInvalidCRCCountDeltaMin
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorInvalidCRCCountDeltaMax

Fault Code: F34962

Message: Threshold Crossed: adaptor:FcIfEventStats property: invalidCRCCountDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34962
mibFaultName: tcaAdaptorInvalidCRCCountDeltaMax
moClass: adaptor:FcIfEventStats
```

```
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorInvalidCRCCountDeltaAvg

Fault Code: F34963

Message: Threshold Crossed: adaptor:FcIfEventStats property: invalidCRCCountDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34963
mibFaultName: tcaAdaptorInvalidCRCCountDeltaAvg
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorNOSCountDelta

Fault Code: F34970

Message: Threshold Crossed: adaptor:FcIfEventStats property: nOSCountDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34970
mibFaultName: tcaAdaptorNOSCountDelta
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorNOSCountDeltaMin

Fault Code: F34971

Message: Threshold Crossed: adaptor:FcIfEventStats property: nOSCountDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34971
mibFaultName: tcaAdaptorNOSCountDeltaMin
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorNOSCountDeltaMax

Fault Code: F34972

Message: Threshold Crossed: adaptor:FcIfEventStats property: nOSCountDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34972
mibFaultName: tcaAdaptorNOSCountDeltaMax
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorNOSCountDeltaAvg

Fault Code: F34973

Message: Threshold Crossed: adaptor:FcIfEventStats property: nOSCountDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34973
mibFaultName: tcaAdaptorNOSCountDeltaAvg
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
```

Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats

tcaAdaptorLinkFailureCountDelta

Fault Code: F34980

Message: Threshold Crossed: adaptor:FcIfEventStats property: linkFailureCountDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34980
mibFaultName: tcaAdaptorLinkFailureCountDelta
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats

tcaAdaptorLinkFailureCountDeltaMin

Fault Code: F34981

Message: Threshold Crossed: adaptor:FcIfEventStats property: linkFailureCountDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F34981
mibFaultName: tcaAdaptorLinkFailureCountDeltaMin
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats

tcaAdaptorLinkFailureCountDeltaMax

Fault Code: F34982

Message: Threshold Crossed: adaptor:FcIfEventStats property: linkFailureCountDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34982
mibFaultName: tcaAdaptorLinkFailureCountDeltaMax
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorLinkFailureCountDeltaAvg

Fault Code: F34983

Message: Threshold Crossed: adaptor:FcIfEventStats property: linkFailureCountDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34983
mibFaultName: tcaAdaptorLinkFailureCountDeltaAvg
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorLossOfSyncCountDelta

Fault Code: F34990

Message: Threshold Crossed: adaptor:FcIfEventStats property: lossOfSyncCountDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34990
mibFaultName: tcaAdaptorLossOfSyncCountDelta
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorLossOfSyncCountDeltaMin

Fault Code: F34991

Message: Threshold Crossed: adaptor:FcIfEventStats property: lossOfSyncCountDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34991
mibFaultName: tcaAdaptorLossOfSyncCountDeltaMin
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorLossOfSyncCountDeltaMax

Fault Code: F34992

Message: Threshold Crossed: adaptor:FcIfEventStats property: lossOfSyncCountDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F34992
mibFaultName: tcaAdaptorLossOfSyncCountDeltaMax
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorLossOfSyncCountDeltaAvg

Fault Code: F34993

Message: Threshold Crossed: adaptor:FcIfEventStats property: lossOfSyncCountDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
```

mibFaultCode: F34993
mibFaultName: tcaAdaptorLossOfSyncCountDeltaAvg
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats

tcaAdaptorLossOfSignalCountDelta

Fault Code: F35000

Message: Threshold Crossed: adaptor:FcIfEventStats property: lossOfSignalCountDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F35000
mibFaultName: tcaAdaptorLossOfSignalCountDelta
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats

tcaAdaptorLossOfSignalCountDeltaMin

Fault Code: F35001

Message: Threshold Crossed: adaptor:FcIfEventStats property: lossOfSignalCountDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F35001
mibFaultName: tcaAdaptorLossOfSignalCountDeltaMin
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats

tcaAdaptorLossOfSignalCountDeltaMax

Fault Code: F35002

Message: Threshold Crossed: adaptor:FcIfEventStats property: lossOfSignalCountDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35002
mibFaultName: tcaAdaptorLossOfSignalCountDeltaMax
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorLossOfSignalCountDeltaAvg

Fault Code: F35003

Message: Threshold Crossed: adaptor:FcIfEventStats property: lossOfSignalCountDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35003
mibFaultName: tcaAdaptorLossOfSignalCountDeltaAvg
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorSeqProtocolErrCountDelta

Fault Code: F35010

Message: Threshold Crossed: adaptor:FcIfEventStats property: seqProtocolErrCountDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35010
mibFaultName: tcaAdaptorSeqProtocolErrCountDelta
moClass: adaptor:FcIfEventStats
```

```
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorSeqProtocolErrCountDeltaMin

Fault Code: F35011

Message: Threshold Crossed: adaptor:FcIfEventStats property: seqProtocolErrCountDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35011
mibFaultName: tcaAdaptorSeqProtocolErrCountDeltaMin
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorSeqProtocolErrCountDeltaMax

Fault Code: F35012

Message: Threshold Crossed: adaptor:FcIfEventStats property: seqProtocolErrCountDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35012
mibFaultName: tcaAdaptorSeqProtocolErrCountDeltaMax
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorSeqProtocolErrCountDeltaAvg

Fault Code: F35013

Message: Threshold Crossed: adaptor:FcIfEventStats property: seqProtocolErrCountDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35013
mibFaultName: tcaAdaptorSeqProtocolErrCountDeltaAvg
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorSecondsSinceLastResetDelta

Fault Code: F35020

Message: Threshold Crossed: adaptor:FcIfEventStats property: secondsSinceLastResetDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35020
mibFaultName: tcaAdaptorSecondsSinceLastResetDelta
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorSecondsSinceLastResetDeltaMin

Fault Code: F35021

Message: Threshold Crossed: adaptor:FcIfEventStats property: secondsSinceLastResetDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35021
mibFaultName: tcaAdaptorSecondsSinceLastResetDeltaMin
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorSecondsSinceLastResetDeltaMax

Fault Code: F35022

Message: Threshold Crossed: adaptor:FcIfEventStats property: secondsSinceLastResetDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35022
mibFaultName: tcaAdaptorSecondsSinceLastResetDeltaMax
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorSecondsSinceLastResetDeltaAvg

Fault Code: F35023

Message: Threshold Crossed: adaptor:FcIfEventStats property: secondsSinceLastResetDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35023
mibFaultName: tcaAdaptorSecondsSinceLastResetDeltaAvg
moClass: adaptor:FcIfEventStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaSwMainBoardOutlet1

Fault Code: F35166

Message: Threshold Crossed: sw:EnvStats property: mainBoardOutlet1

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35166
mibFaultName: tcaSwMainBoardOutlet1
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwMainBoardOutlet1Min

Fault Code: F35168

Message: Threshold Crossed: sw:EnvStats property: mainBoardOutlet1Min

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35168
mibFaultName: tcaSwMainBoardOutlet1Min
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwMainBoardOutlet1Max

Fault Code: F35169

Message: Threshold Crossed: sw:EnvStats property: mainBoardOutlet1Max

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35169
mibFaultName: tcaSwMainBoardOutlet1Max
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwMainBoardOutlet1Avg

Fault Code: F35170

Message: Threshold Crossed: sw:EnvStats property: mainBoardOutlet1Avg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35170
mibFaultName: tcaSwMainBoardOutlet1Avg
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwMainBoardOutlet2

Fault Code: F35174

Message: Threshold Crossed: sw:EnvStats property: mainBoardOutlet2

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35174
mibFaultName: tcaSwMainBoardOutlet2
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwMainBoardOutlet2Min

Fault Code: F35176

Message: Threshold Crossed: sw:EnvStats property: mainBoardOutlet2Min

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35176
mibFaultName: tcaSwMainBoardOutlet2Min
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwMainBoardOutlet2Max

Fault Code: F35177

Message: Threshold Crossed: sw:EnvStats property: mainBoardOutlet2Max

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35177
mibFaultName: tcaSwMainBoardOutlet2Max
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwMainBoardOutlet2Avg

Fault Code: F35178

Message: Threshold Crossed: sw:EnvStats property: mainBoardOutlet2Avg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35178
mibFaultName: tcaSwMainBoardOutlet2Avg
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwFanCtrlrInlet1

Fault Code: F35198

Message: Threshold Crossed: sw:EnvStats property: fanCtrlrInlet1

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35198
mibFaultName: tcaSwFanCtrlrInlet1
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwFanCtrlrInlet1Min

Fault Code: F35200

Message: Threshold Crossed: sw:EnvStats property: fanCtrlrInlet1Min

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35200
mibFaultName: tcaSwFanCtrlrInlet1Min
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwFanCtrlrInlet1Max

Fault Code: F35201

Message: Threshold Crossed: sw:EnvStats property: fanCtrlrInlet1Max

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35201
mibFaultName: tcaSwFanCtrlrInlet1Max
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwFanCtrlrInlet1Avg

Fault Code: F35202

Message: Threshold Crossed: sw:EnvStats property: fanCtrlrInlet1Avg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35202
mibFaultName: tcaSwFanCtrlrInlet1Avg
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwFanCtrlrInlet2

Fault Code: F35206

Message: Threshold Crossed: sw:EnvStats property: fanCtrlrInlet2

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35206
mibFaultName: tcaSwFanCtrlrInlet2
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwFanCtrlrInlet2Min

Fault Code: F35208

Message: Threshold Crossed: sw:EnvStats property: fanCtrlrInlet2Min

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35208
mibFaultName: tcaSwFanCtrlrInlet2Min
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwFanCtrlrInlet2Max

Fault Code: F35209

Message: Threshold Crossed: sw:EnvStats property: fanCtrlrInlet2Max

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35209
mibFaultName: tcaSwFanCtrlrInlet2Max
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwFanCtrlrInlet2Avg

Fault Code: F35210

Message: Threshold Crossed: sw:EnvStats property: fanCtrlrInlet2Avg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35210
mibFaultName: tcaSwFanCtrlrInlet2Avg
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwFanCtrlrInlet3

Fault Code: F35214

Message: Threshold Crossed: sw:EnvStats property: fanCtrlrInlet3

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35214
mibFaultName: tcaSwFanCtrlrInlet3
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwFanCtrlrInlet3Min

Fault Code: F35216

Message: Threshold Crossed: sw:EnvStats property: fanCtrlrInlet3Min

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35216
mibFaultName: tcaSwFanCtrlrInlet3Min
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwFanCtrlrInlet3Max

Fault Code: F35217

Message: Threshold Crossed: sw:EnvStats property: fanCtrlrInlet3Max

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35217
mibFaultName: tcaSwFanCtrlrInlet3Max
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwFanCtrlrInlet3Avg

Fault Code: F35218

Message: Threshold Crossed: sw:EnvStats property: fanCtrlrInlet3Avg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35218
mibFaultName: tcaSwFanCtrlrInlet3Avg
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwFanCtrlrInlet4

Fault Code: F35222

Message: Threshold Crossed: sw:EnvStats property: fanCtrlrInlet4

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35222
mibFaultName: tcaSwFanCtrlrInlet4
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwFanCtrlrInlet4Min

Fault Code: F35224

Message: Threshold Crossed: sw:EnvStats property: fanCtrlrInlet4Min

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35224
mibFaultName: tcaSwFanCtrlrInlet4Min
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwFanCtrlrInlet4Max

Fault Code: F35225

Message: Threshold Crossed: sw:EnvStats property: fanCtrlrInlet4Max

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35225
mibFaultName: tcaSwFanCtrlrInlet4Max
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwFanCtrlrInlet4Avg

Fault Code: F35226

Message: Threshold Crossed: sw:EnvStats property: fanCtrlrInlet4Avg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35226
mibFaultName: tcaSwFanCtrlrInlet4Avg
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwMemAvailable

Fault Code: F35234

Message: Threshold Crossed: sw:SystemStats property: memAvailable

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35234
mibFaultName: tcaSwMemAvailable
moClass: sw:SystemStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwMemAvailableMin

Fault Code: F35236

Message: Threshold Crossed: sw:SystemStats property: memAvailableMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35236
mibFaultName: tcaSwMemAvailableMin
moClass: sw:SystemStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwMemAvailableMax

Fault Code: F35237

Message: Threshold Crossed: sw:SystemStats property: memAvailableMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35237
mibFaultName: tcaSwMemAvailableMax
moClass: sw:SystemStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwMemAvailableAvg

Fault Code: F35238

Message: Threshold Crossed: sw:SystemStats property: memAvailableAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35238
mibFaultName: tcaSwMemAvailableAvg
moClass: sw:SystemStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwMemCached

Fault Code: F35242

Message: Threshold Crossed: sw:SystemStats property: memCached

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35242
mibFaultName: tcaSwMemCached
moClass: sw:SystemStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwMemCachedMin

Fault Code: F35244

Message: Threshold Crossed: sw:SystemStats property: memCachedMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35244
mibFaultName: tcaSwMemCachedMin
moClass: sw:SystemStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwMemCachedMax

Fault Code: F35245

Message: Threshold Crossed: sw:SystemStats property: memCachedMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35245
mibFaultName: tcaSwMemCachedMax
moClass: sw:SystemStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwMemCachedAvg

Fault Code: F35246

Message: Threshold Crossed: sw:SystemStats property: memCachedAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35246
mibFaultName: tcaSwMemCachedAvg
moClass: sw:SystemStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwLoad

Fault Code: F35250

Message: Threshold Crossed: sw:SystemStats property: load

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35250
mibFaultName: tcaSwLoad
moClass: sw:SystemStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwLoadMin

Fault Code: F35252

Message: Threshold Crossed: sw:SystemStats property: loadMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35252
mibFaultName: tcaSwLoadMin
moClass: sw:SystemStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwLoadMax

Fault Code: F35253

Message: Threshold Crossed: sw:SystemStats property: loadMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35253
mibFaultName: tcaSwLoadMax
moClass: sw:SystemStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwLoadAvg

Fault Code: F35254

Message: Threshold Crossed: sw:SystemStats property: loadAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35254
mibFaultName: tcaSwLoadAvg
moClass: sw:SystemStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/sysstats
```

tcaEtherTotalBytesDelta

Fault Code: F35275

Message: Threshold Crossed: ether:TxStats property: totalBytesDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35275
mibFaultName: tcaEtherTotalBytesDelta
moClass: ether:TxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats
```

tcaEtherTotalBytesDeltaMin

Fault Code: F35276

Message: Threshold Crossed: ether:TxStats property: totalBytesDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35276
mibFaultName: tcaEtherTotalBytesDeltaMin
moClass: ether:TxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
```

Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

tcaEtherTotalBytesDeltaMax

Fault Code: F35277

Message: Threshold Crossed: ether:TxStats property: totalBytesDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F35277
mibFaultName: tcaEtherTotalBytesDeltaMax
moClass: ether:TxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

tcaEtherTotalBytesDeltaAvg

Fault Code: F35278

Message: Threshold Crossed: ether:TxStats property: totalBytesDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35278
mibFaultName: tcaEtherTotalBytesDeltaAvg
moClass: ether:TxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats
```

tcaEtherTotalPacketsDelta

Fault Code: F35285

Message: Threshold Crossed: ether:TxStats property: totalPacketsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35285
mibFaultName: tcaEtherTotalPacketsDelta
moClass: ether:TxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
```

Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

tcaEtherTotalPacketsDeltaMin

Fault Code: F35286

Message: Threshold Crossed: ether:TxStats property: totalPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F35286
mibFaultName: tcaEtherTotalPacketsDeltaMin
moClass: ether:TxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

tcaEtherTotalPacketsDeltaMax

Fault Code: F35287

Message: Threshold Crossed: ether:TxStats property: totalPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35287
mibFaultName: tcaEtherTotalPacketsDeltaMax
moClass: ether:TxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats
```

tcaEtherTotalPacketsDeltaAvg

Fault Code: F35288

Message: Threshold Crossed: ether:TxStats property: totalPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35288
mibFaultName: tcaEtherTotalPacketsDeltaAvg
moClass: ether:TxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
```

Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

tcaEtherMulticastPacketsDelta

Fault Code: F35295

Message: Threshold Crossed: ether:TxStats property: multicastPacketsDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F35295
mibFaultName: tcaEtherMulticastPacketsDelta
moClass: ether:TxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

tcaEtherMulticastPacketsDeltaMin

Fault Code: F35296

Message: Threshold Crossed: ether:TxStats property: multicastPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35296
mibFaultName: tcaEtherMulticastPacketsDeltaMin
moClass: ether:TxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats
```

tcaEtherMulticastPacketsDeltaMax

Fault Code: F35297

Message: Threshold Crossed: ether:TxStats property: multicastPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35297
mibFaultName: tcaEtherMulticastPacketsDeltaMax
moClass: ether:TxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
```

Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

tcaEtherMulticastPacketsDeltaAvg

Fault Code: F35298

Message: Threshold Crossed: ether:TxStats property: multicastPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F35298
mibFaultName: tcaEtherMulticastPacketsDeltaAvg
moClass: ether:TxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

tcaEtherBroadcastPacketsDelta

Fault Code: F35305

Message: Threshold Crossed: ether:TxStats property: broadcastPacketsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35305
mibFaultName: tcaEtherBroadcastPacketsDelta
moClass: ether:TxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats
```

tcaEtherBroadcastPacketsDeltaMin

Fault Code: F35306

Message: Threshold Crossed: ether:TxStats property: broadcastPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35306
mibFaultName: tcaEtherBroadcastPacketsDeltaMin
moClass: ether:TxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
```

Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

tcaEtherBroadcastPacketsDeltaMax

Fault Code: F35307

Message: Threshold Crossed: ether:TxStats property: broadcastPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F35307
mibFaultName: tcaEtherBroadcastPacketsDeltaMax
moClass: ether:TxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

tcaEtherBroadcastPacketsDeltaAvg

Fault Code: F35308

Message: Threshold Crossed: ether:TxStats property: broadcastPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35308
mibFaultName: tcaEtherBroadcastPacketsDeltaAvg
moClass: ether:TxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats
```

tcaEtherJumboPacketsDelta

Fault Code: F35315

Message: Threshold Crossed: ether:TxStats property: jumboPacketsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35315
mibFaultName: tcaEtherJumboPacketsDelta
moClass: ether:TxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
```

Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

tcaEtherJumboPacketsDeltaMin

Fault Code: F35316

Message: Threshold Crossed: ether:TxStats property: jumboPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F35316
mibFaultName: tcaEtherJumboPacketsDeltaMin
moClass: ether:TxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

tcaEtherJumboPacketsDeltaMax

Fault Code: F35317

Message: Threshold Crossed: ether:TxStats property: jumboPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35317
mibFaultName: tcaEtherJumboPacketsDeltaMax
moClass: ether:TxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats
```

tcaEtherJumboPacketsDeltaAvg

Fault Code: F35318

Message: Threshold Crossed: ether:TxStats property: jumboPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35318
mibFaultName: tcaEtherJumboPacketsDeltaAvg
moClass: ether:TxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
```

Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

tcaEtherTotalBytesDelta

Fault Code: F35329

Message: Threshold Crossed: ether:RxStats property: totalBytesDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F35329
mibFaultName: tcaEtherTotalBytesDelta
moClass: ether:RxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaEtherTotalBytesDeltaMin

Fault Code: F35330

Message: Threshold Crossed: ether:RxStats property: totalBytesDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35330
mibFaultName: tcaEtherTotalBytesDeltaMin
moClass: ether:RxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats
```

tcaEtherTotalBytesDeltaMax

Fault Code: F35331

Message: Threshold Crossed: ether:RxStats property: totalBytesDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35331
mibFaultName: tcaEtherTotalBytesDeltaMax
moClass: ether:RxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
```

Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaEtherTotalBytesDeltaAvg

Fault Code: F35332

Message: Threshold Crossed: ether:RxStats property: totalBytesDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F35332
mibFaultName: tcaEtherTotalBytesDeltaAvg
moClass: ether:RxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaEtherTotalPacketsDelta

Fault Code: F35339

Message: Threshold Crossed: ether:RxStats property: totalPacketsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35339
mibFaultName: tcaEtherTotalPacketsDelta
moClass: ether:RxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats
```

tcaEtherTotalPacketsDeltaMin

Fault Code: F35340

Message: Threshold Crossed: ether:RxStats property: totalPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35340
mibFaultName: tcaEtherTotalPacketsDeltaMin
moClass: ether:RxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
```

Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaEtherTotalPacketsDeltaMax

Fault Code: F35341

Message: Threshold Crossed: ether:RxStats property: totalPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F35341
mibFaultName: tcaEtherTotalPacketsDeltaMax
moClass: ether:RxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaEtherTotalPacketsDeltaAvg

Fault Code: F35342

Message: Threshold Crossed: ether:RxStats property: totalPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35342
mibFaultName: tcaEtherTotalPacketsDeltaAvg
moClass: ether:RxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats
```

tcaEtherUnicastPacketsDelta

Fault Code: F35349

Message: Threshold Crossed: ether:RxStats property: unicastPacketsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35349
mibFaultName: tcaEtherUnicastPacketsDelta
moClass: ether:RxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
```

Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaEtherUnicastPacketsDeltaMin

Fault Code: F35350

Message: Threshold Crossed: ether:RxStats property: unicastPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F35350
mibFaultName: tcaEtherUnicastPacketsDeltaMin
moClass: ether:RxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaEtherUnicastPacketsDeltaMax

Fault Code: F35351

Message: Threshold Crossed: ether:RxStats property: unicastPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35351
mibFaultName: tcaEtherUnicastPacketsDeltaMax
moClass: ether:RxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats
```

tcaEtherUnicastPacketsDeltaAvg

Fault Code: F35352

Message: Threshold Crossed: ether:RxStats property: unicastPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35352
mibFaultName: tcaEtherUnicastPacketsDeltaAvg
moClass: ether:RxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
```

Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaEtherMulticastPacketsDelta

Fault Code: F35359

Message: Threshold Crossed: ether:RxStats property: multicastPacketsDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F35359
mibFaultName: tcaEtherMulticastPacketsDelta
moClass: ether:RxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaEtherMulticastPacketsDeltaMin

Fault Code: F35360

Message: Threshold Crossed: ether:RxStats property: multicastPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35360
mibFaultName: tcaEtherMulticastPacketsDeltaMin
moClass: ether:RxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats
```

tcaEtherMulticastPacketsDeltaMax

Fault Code: F35361

Message: Threshold Crossed: ether:RxStats property: multicastPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35361
mibFaultName: tcaEtherMulticastPacketsDeltaMax
moClass: ether:RxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
```

Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaEtherMulticastPacketsDeltaAvg

Fault Code: F35362

Message: Threshold Crossed: ether:RxStats property: multicastPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F35362
mibFaultName: tcaEtherMulticastPacketsDeltaAvg
moClass: ether:RxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaEtherBroadcastPacketsDelta

Fault Code: F35369

Message: Threshold Crossed: ether:RxStats property: broadcastPacketsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35369
mibFaultName: tcaEtherBroadcastPacketsDelta
moClass: ether:RxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats
```

tcaEtherBroadcastPacketsDeltaMin

Fault Code: F35370

Message: Threshold Crossed: ether:RxStats property: broadcastPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35370
mibFaultName: tcaEtherBroadcastPacketsDeltaMin
moClass: ether:RxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
```

Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaEtherBroadcastPacketsDeltaMax

Fault Code: F35371

Message: Threshold Crossed: ether:RxStats property: broadcastPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F35371
mibFaultName: tcaEtherBroadcastPacketsDeltaMax
moClass: ether:RxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaEtherBroadcastPacketsDeltaAvg

Fault Code: F35372

Message: Threshold Crossed: ether:RxStats property: broadcastPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35372
mibFaultName: tcaEtherBroadcastPacketsDeltaAvg
moClass: ether:RxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats
```

tcaEtherJumboPacketsDelta

Fault Code: F35379

Message: Threshold Crossed: ether:RxStats property: jumboPacketsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35379
mibFaultName: tcaEtherJumboPacketsDelta
moClass: ether:RxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
```

Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaEtherJumboPacketsDeltaMin

Fault Code: F35380

Message: Threshold Crossed: ether:RxStats property: jumboPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F35380
mibFaultName: tcaEtherJumboPacketsDeltaMin
moClass: ether:RxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaEtherJumboPacketsDeltaMax

Fault Code: F35381

Message: Threshold Crossed: ether:RxStats property: jumboPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35381
mibFaultName: tcaEtherJumboPacketsDeltaMax
moClass: ether:RxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats
```

tcaEtherJumboPacketsDeltaAvg

Fault Code: F35382

Message: Threshold Crossed: ether:RxStats property: jumboPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35382
mibFaultName: tcaEtherJumboPacketsDeltaAvg
moClass: ether:RxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
```

Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/rx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaComputeConsumedPower

Fault Code: F35962

Message: Threshold Crossed: compute:MbPowerStats property: consumedPower

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F35962
mibFaultName: tcaComputeConsumedPower
moClass: compute:MbPowerStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/power-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/power-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/power-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/power-stats
Affected MO: sys/rack-unit-[id]/board/power-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/power-stats

tcaComputeConsumedPowerMin

Fault Code: F35964

Message: Threshold Crossed: compute:MbPowerStats property: consumedPowerMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F35964

mibFaultName: tcaComputeConsumedPowerMin
moClass: compute:MbPowerStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/power-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/power-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/power-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/power-stats
Affected MO: sys/rack-unit-[id]/board/power-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/power-stats

tcaComputeConsumedPowerMax

Fault Code: F35965

Message: Threshold Crossed: compute:MbPowerStats property: consumedPowerMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F35965
mibFaultName: tcaComputeConsumedPowerMax
moClass: compute:MbPowerStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/power-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/power-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/power-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/power-stats
Affected MO: sys/rack-unit-[id]/board/power-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/power-stats

tcaComputeConsumedPowerAvg

Fault Code: F35966

Message: Threshold Crossed: compute:MbPowerStats property: consumedPowerAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F35966
mibFaultName: tcaComputeConsumedPowerAvg
moClass: compute:MbPowerStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/power-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/power-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/power-stats

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/power-stats
Affected MO: sys/rack-unit-[id]/board/power-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/power-stats

tcaComputeFmTempSenIo

Fault Code: F35974

Message: Threshold Crossed: compute:MbTempStats property: fmTempSenIo

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F35974
mibFaultName: tcaComputeFmTempSenIo
moClass: compute:MbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats

tcaComputeFmTempSenIoMin

Fault Code: F35976

Message: Threshold Crossed: compute:MbTempStats property: fmTempSenIoMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F35976
mibFaultName: tcaComputeFmTempSenIoMin
moClass: compute:MbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats

tcaComputeFmTempSenIoMax

Fault Code: F35977

Message: Threshold Crossed: compute:MbTempStats property: fmTempSenIoMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35977
mibFaultName: tcaComputeFmTempSenIoMax
moClass: compute:MbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats
```

tcaComputeFmTempSenIoAvg

Fault Code: F35978

Message: Threshold Crossed: compute:MbTempStats property: fmTempSenIoAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F35978
mibFaultName: tcaComputeFmTempSenIoAvg
moClass: compute:MbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats
```

tcaEquipmentInputPower

Fault Code: F36234

Message: Threshold Crossed: equipment:ChassisStats property: inputPower

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36234
mibFaultName: tcaEquipmentInputPower
moClass: equipment:ChassisStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/stats
```

tcaEquipmentInputPowerMin

Fault Code: F36236

Message: Threshold Crossed: equipment:ChassisStats property: inputPowerMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36236
mibFaultName: tcaEquipmentInputPowerMin
moClass: equipment:ChassisStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/stats
```

tcaEquipmentInputPowerMax

Fault Code: F36237

Message: Threshold Crossed: equipment:ChassisStats property: inputPowerMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36237
mibFaultName: tcaEquipmentInputPowerMax
moClass: equipment:ChassisStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/stats
```

tcaEquipmentInputPowerAvg

Fault Code: F36238

Message: Threshold Crossed: equipment:ChassisStats property: inputPowerAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36238
mibFaultName: tcaEquipmentInputPowerAvg
moClass: equipment:ChassisStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/stats
```

tcaEquipmentOutputPower

Fault Code: F36242

Message: Threshold Crossed: equipment:ChassisStats property: outputPower

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36242
mibFaultName: tcaEquipmentOutputPower
moClass: equipment:ChassisStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/stats
```

tcaEquipmentOutputPowerMin

Fault Code: F36244

Message: Threshold Crossed: equipment:ChassisStats property: outputPowerMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36244
mibFaultName: tcaEquipmentOutputPowerMin
moClass: equipment:ChassisStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/stats
```

tcaEquipmentOutputPowerMax

Fault Code: F36245

Message: Threshold Crossed: equipment:ChassisStats property: outputPowerMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36245
mibFaultName: tcaEquipmentOutputPowerMax
moClass: equipment:ChassisStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/stats
```

tcaEquipmentOutputPowerAvg

Fault Code: F36246

Message: Threshold Crossed: equipment:ChassisStats property: outputPowerAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36246
mibFaultName: tcaEquipmentOutputPowerAvg
moClass: equipment:ChassisStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/stats
```

tcaEquipmentAmbientTemp

Fault Code: F36266

Message: Threshold Crossed: equipment:PsuStats property: ambientTemp

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36266
mibFaultName: tcaEquipmentAmbientTemp
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
```

Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentAmbientTempMin

Fault Code: F36268

Message: Threshold Crossed: equipment:PsuStats property: ambientTempMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F36268
mibFaultName: tcaEquipmentAmbientTempMin
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentAmbientTempMax

Fault Code: F36269

Message: Threshold Crossed: equipment:PsuStats property: ambientTempMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F36269
mibFaultName: tcaEquipmentAmbientTempMax
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentAmbientTempAvg

Fault Code: F36270

Message: Threshold Crossed: equipment:PsuStats property: ambientTempAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36270
mibFaultName: tcaEquipmentAmbientTempAvg
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentOutputCurrent

Fault Code: F36274

Message: Threshold Crossed: equipment:PsuStats property: outputCurrent

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36274
mibFaultName: tcaEquipmentOutputCurrent
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentOutputCurrentMin

Fault Code: F36276

Message: Threshold Crossed: equipment:PsuStats property: outputCurrentMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36276
mibFaultName: tcaEquipmentOutputCurrentMin
moClass: equipment:PsuStats
Type: generic
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentOutputCurrentMax

Fault Code: F36277

Message: Threshold Crossed: equipment:PsuStats property: outputCurrentMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36277
mibFaultName: tcaEquipmentOutputCurrentMax
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentOutputCurrentAvg

Fault Code: F36278

Message: Threshold Crossed: equipment:PsuStats property: outputCurrentAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36278
mibFaultName: tcaEquipmentOutputCurrentAvg
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentOutputPower

Fault Code: F36282

Message: Threshold Crossed: equipment:PsuStats property: outputPower

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36282
mibFaultName: tcaEquipmentOutputPower
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentOutputPowerMin

Fault Code: F36284

Message: Threshold Crossed: equipment:PsuStats property: outputPowerMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36284
mibFaultName: tcaEquipmentOutputPowerMin
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentOutputPowerMax

Fault Code: F36285

Message: Threshold Crossed: equipment:PsuStats property: outputPowerMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36285
mibFaultName: tcaEquipmentOutputPowerMax
moClass: equipment:PsuStats
```

```
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentOutputPowerAvg

Fault Code: F36286

Message: Threshold Crossed: equipment:PsuStats property: outputPowerAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36286
mibFaultName: tcaEquipmentOutputPowerAvg
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentCurrent

Fault Code: F36294

Message: Threshold Crossed: equipment:PsuInputStats property: current

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36294
mibFaultName: tcaEquipmentCurrent
moClass: equipment:PsuInputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/input-stats
Affected MO: sys/fex-[id]/psu-[id]/input-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/input-stats
Affected MO: sys/switch-[id]/psu-[id]/input-stats
```

tcaEquipmentCurrentMin

Fault Code: F36296

Message: Threshold Crossed: equipment:PsuInputStats property: currentMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36296
mibFaultName: tcaEquipmentCurrentMin
moClass: equipment:PsuInputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/input-stats
Affected MO: sys/fex-[id]/psu-[id]/input-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/input-stats
Affected MO: sys/switch-[id]/psu-[id]/input-stats
```

tcaEquipmentCurrentMax

Fault Code: F36297

Message: Threshold Crossed: equipment:PsuInputStats property: currentMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36297
mibFaultName: tcaEquipmentCurrentMax
moClass: equipment:PsuInputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/input-stats
Affected MO: sys/fex-[id]/psu-[id]/input-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/input-stats
Affected MO: sys/switch-[id]/psu-[id]/input-stats
```

tcaEquipmentCurrentAvg

Fault Code: F36298

Message: Threshold Crossed: equipment:PsuInputStats property: currentAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36298
```

```
mibFaultName: tcaEquipmentCurrentAvg
moClass: equipment:PsuInputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/input-stats
Affected MO: sys/fex-[id]/psu-[id]/input-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/input-stats
Affected MO: sys/switch-[id]/psu-[id]/input-stats
```

tcaEquipmentVoltage

Fault Code: F36302

Message: Threshold Crossed: equipment:PsuInputStats property: voltage

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36302
mibFaultName: tcaEquipmentVoltage
moClass: equipment:PsuInputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/input-stats
Affected MO: sys/fex-[id]/psu-[id]/input-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/input-stats
Affected MO: sys/switch-[id]/psu-[id]/input-stats
```

tcaEquipmentVoltageMin

Fault Code: F36304

Message: Threshold Crossed: equipment:PsuInputStats property: voltageMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36304
mibFaultName: tcaEquipmentVoltageMin
moClass: equipment:PsuInputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/input-stats
Affected MO: sys/fex-[id]/psu-[id]/input-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/input-stats
Affected MO: sys/switch-[id]/psu-[id]/input-stats
```

tcaEquipmentVoltageMax

Fault Code: F36305

Message: Threshold Crossed: equipment:PsuInputStats property: voltageMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36305
mibFaultName: tcaEquipmentVoltageMax
moClass: equipment:PsuInputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/input-stats
Affected MO: sys/fex-[id]/psu-[id]/input-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/input-stats
Affected MO: sys/switch-[id]/psu-[id]/input-stats
```

tcaEquipmentVoltageAvg

Fault Code: F36306

Message: Threshold Crossed: equipment:PsuInputStats property: voltageAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36306
mibFaultName: tcaEquipmentVoltageAvg
moClass: equipment:PsuInputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/input-stats
Affected MO: sys/fex-[id]/psu-[id]/input-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/input-stats
Affected MO: sys/switch-[id]/psu-[id]/input-stats
```

tcaEquipmentPower

Fault Code: F36310

Message: Threshold Crossed: equipment:PsuInputStats property: power

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36310
mibFaultName: tcaEquipmentPower
moClass: equipment:PsuInputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/input-stats
Affected MO: sys/fex-[id]/psu-[id]/input-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/input-stats
Affected MO: sys/switch-[id]/psu-[id]/input-stats
```

tcaEquipmentPowerMin

Fault Code: F36312

Message: Threshold Crossed: equipment:PsuInputStats property: powerMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36312
mibFaultName: tcaEquipmentPowerMin
moClass: equipment:PsuInputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/input-stats
Affected MO: sys/fex-[id]/psu-[id]/input-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/input-stats
Affected MO: sys/switch-[id]/psu-[id]/input-stats
```

tcaEquipmentPowerMax

Fault Code: F36313

Message: Threshold Crossed: equipment:PsuInputStats property: powerMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36313
mibFaultName: tcaEquipmentPowerMax
moClass: equipment:PsuInputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/input-stats
Affected MO: sys/fex-[id]/psu-[id]/input-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/input-stats
```

```
Affected MO: sys/rack-unit-[id]/psu-[id]/input-stats
Affected MO: sys/switch-[id]/psu-[id]/input-stats
```

tcaEquipmentPowerAvg

Fault Code: F36314

Message: Threshold Crossed: equipment:PsuInputStats property: powerAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36314
mibFaultName: tcaEquipmentPowerAvg
moClass: equipment:PsuInputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/input-stats
Affected MO: sys/fex-[id]/psu-[id]/input-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/input-stats
Affected MO: sys/switch-[id]/psu-[id]/input-stats
```

tcaEquipmentAmbientTemp

Fault Code: F36323

Message: Threshold Crossed: equipment:FanModuleStats property: ambientTemp

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36323
mibFaultName: tcaEquipmentAmbientTemp
moClass: equipment:FanModuleStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/stats
```

tcaEquipmentAmbientTempMin

Fault Code: F36325

Message: Threshold Crossed: equipment:FanModuleStats property: ambientTempMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36325
mibFaultName: tcaEquipmentAmbientTempMin
moClass: equipment:FanModuleStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/stats
```

tcaEquipmentAmbientTempMax

Fault Code: F36326

Message: Threshold Crossed: equipment:FanModuleStats property: ambientTempMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F36326
mibFaultName: tcaEquipmentAmbientTempMax
moClass: equipment:FanModuleStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/stats
```

tcaEquipmentAmbientTempAvg

Fault Code: F36327

Message: Threshold Crossed: equipment:FanModuleStats property: ambientTempAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
```

Cause: threshold-crossed
mibFaultCode: F36327
mibFaultName: tcaEquipmentAmbientTempAvg
moClass: equipment:FanModuleStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/stats

tcaEquipmentSpeed

Fault Code: F36335

Message: Threshold Crossed: equipment:FanStats property: speed

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F36335
mibFaultName: tcaEquipmentSpeed
moClass: equipment:FanStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaEquipmentSpeedMin

Fault Code: F36337

Message: Threshold Crossed: equipment:FanStats property: speedMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F36337
mibFaultName: tcaEquipmentSpeedMin
moClass: equipment:FanStats
Type: generic

autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaEquipmentSpeedMax

Fault Code: F36338

Message: Threshold Crossed: equipment:FanStats property: speedMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F36338
mibFaultName: tcaEquipmentSpeedMax
moClass: equipment:FanStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaEquipmentSpeedAvg

Fault Code: F36339

Message: Threshold Crossed: equipment:FanStats property: speedAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F36339
mibFaultName: tcaEquipmentSpeedAvg
moClass: equipment:FanStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats

Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaEquipmentOutput12v

Fault Code: F37154

Message: Threshold Crossed: equipment:PsuStats property: output12v

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37154
mibFaultName: tcaEquipmentOutput12v
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentOutput12vMin

Fault Code: F37156

Message: Threshold Crossed: equipment:PsuStats property: output12vMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37156
mibFaultName: tcaEquipmentOutput12vMin
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentOutput12vMax

Fault Code: F37157

Message: Threshold Crossed: equipment:PsuStats property: output12vMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37157
mibFaultName: tcaEquipmentOutput12vMax
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentOutput12vAvg

Fault Code: F37158

Message: Threshold Crossed: equipment:PsuStats property: output12vAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37158
mibFaultName: tcaEquipmentOutput12vAvg
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentOutput3v3

Fault Code: F37162

Message: Threshold Crossed: equipment:PsuStats property: output3v3

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37162
```

```
mibFaultName: tcaEquipmentOutput3v3
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentOutput3v3Min

Fault Code: F37164

Message: Threshold Crossed: equipment:PsuStats property: output3v3Min

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37164
mibFaultName: tcaEquipmentOutput3v3Min
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentOutput3v3Max

Fault Code: F37165

Message: Threshold Crossed: equipment:PsuStats property: output3v3Max

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37165
mibFaultName: tcaEquipmentOutput3v3Max
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentOutput3v3Avg

Fault Code: F37166

Message: Threshold Crossed: equipment:PsuStats property: output3v3Avg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37166
mibFaultName: tcaEquipmentOutput3v3Avg
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentInput210v

Fault Code: F37170

Message: Threshold Crossed: equipment:PsuStats property: input210v

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37170
mibFaultName: tcaEquipmentInput210v
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentInput210vMin

Fault Code: F37172

Message: Threshold Crossed: equipment:PsuStats property: input210vMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37172
mibFaultName: tcaEquipmentInput210vMin
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentInput210vMax

Fault Code: F37173

Message: Threshold Crossed: equipment:PsuStats property: input210vMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37173
mibFaultName: tcaEquipmentInput210vMax
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentInput210vAvg

Fault Code: F37174

Message: Threshold Crossed: equipment:PsuStats property: input210vAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37174
mibFaultName: tcaEquipmentInput210vAvg
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
```

```
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentAmbientTemp

Fault Code: F37269

Message: Threshold Crossed: equipment:IOCardStats property: ambientTemp

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37269
mibFaultName: tcaEquipmentAmbientTemp
moClass: equipment:IOCardStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats
```

tcaEquipmentAmbientTempMin

Fault Code: F37271

Message: Threshold Crossed: equipment:IOCardStats property: ambientTempMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37271
mibFaultName: tcaEquipmentAmbientTempMin
moClass: equipment:IOCardStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats
```

tcaEquipmentAmbientTempMax

Fault Code: F37272

Message: Threshold Crossed: equipment:IOCardStats property: ambientTempMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37272
mibFaultName: tcaEquipmentAmbientTempMax
moClass: equipment:IOCardStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats

tcaEquipmentAmbientTempAvg

Fault Code: F37273

Message: Threshold Crossed: equipment:IOCardStats property: ambientTempAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37273
mibFaultName: tcaEquipmentAmbientTempAvg
moClass: equipment:IOCardStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats

tcaEtherAlignDelta

Fault Code: F37313

Message: Threshold Crossed: ether:ErrStats property: alignDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37313
mibFaultName: tcaEtherAlignDelta
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats

Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherAlignDeltaMin

Fault Code: F37314

Message: Threshold Crossed: ether:ErrStats property: alignDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37314
mibFaultName: tcaEtherAlignDeltaMin
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherAlignDeltaMax

Fault Code: F37315

Message: Threshold Crossed: ether:ErrStats property: alignDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37315
mibFaultName: tcaEtherAlignDeltaMax
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats
```

tcaEtherAlignDeltaAvg

Fault Code: F37316

Message: Threshold Crossed: ether:ErrStats property: alignDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37316
mibFaultName: tcaEtherAlignDeltaAvg
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
```

Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherFcsDelta

Fault Code: F37323

Message: Threshold Crossed: ether:ErrStats property: fcsDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37323
mibFaultName: tcaEtherFcsDelta
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherFcsDeltaMin

Fault Code: F37324

Message: Threshold Crossed: ether:ErrStats property: fcsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37324
mibFaultName: tcaEtherFcsDeltaMin
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats
```

tcaEtherFcsDeltaMax

Fault Code: F37325

Message: Threshold Crossed: ether:ErrStats property: fcsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37325
mibFaultName: tcaEtherFcsDeltaMax
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
```

Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherFcsDeltaAvg

Fault Code: F37326

Message: Threshold Crossed: ether:ErrStats property: fcsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37326
mibFaultName: tcaEtherFcsDeltaAvg
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherXmitDelta

Fault Code: F37333

Message: Threshold Crossed: ether:ErrStats property: xmitDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37333
mibFaultName: tcaEtherXmitDelta
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats
```

tcaEtherXmitDeltaMin

Fault Code: F37334

Message: Threshold Crossed: ether:ErrStats property: xmitDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37334
mibFaultName: tcaEtherXmitDeltaMin
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
```

Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherXmitDeltaMax

Fault Code: F37335

Message: Threshold Crossed: ether:ErrStats property: xmitDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37335
mibFaultName: tcaEtherXmitDeltaMax
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherXmitDeltaAvg

Fault Code: F37336

Message: Threshold Crossed: ether:ErrStats property: xmitDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37336
mibFaultName: tcaEtherXmitDeltaAvg
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats
```

tcaEtherRcvDelta

Fault Code: F37343

Message: Threshold Crossed: ether:ErrStats property: rcvDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37343
mibFaultName: tcaEtherRcvDelta
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
```

Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherRcvDeltaMin

Fault Code: F37344

Message: Threshold Crossed: ether:ErrStats property: rcvDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37344
mibFaultName: tcaEtherRcvDeltaMin
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherRcvDeltaMax

Fault Code: F37345

Message: Threshold Crossed: ether:ErrStats property: rcvDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37345
mibFaultName: tcaEtherRcvDeltaMax
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats
```

tcaEtherRcvDeltaAvg

Fault Code: F37346

Message: Threshold Crossed: ether:ErrStats property: rcvDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37346
mibFaultName: tcaEtherRcvDeltaAvg
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
```

Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherUnderSizeDelta

Fault Code: F37353

Message: Threshold Crossed: ether:ErrStats property: underSizeDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37353
mibFaultName: tcaEtherUnderSizeDelta
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherUnderSizeDeltaMin

Fault Code: F37354

Message: Threshold Crossed: ether:ErrStats property: underSizeDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37354
mibFaultName: tcaEtherUnderSizeDeltaMin
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats
```

tcaEtherUnderSizeDeltaMax

Fault Code: F37355

Message: Threshold Crossed: ether:ErrStats property: underSizeDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37355
mibFaultName: tcaEtherUnderSizeDeltaMax
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
```

Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherUnderSizeDeltaAvg

Fault Code: F37356

Message: Threshold Crossed: ether:ErrStats property: underSizeDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37356
mibFaultName: tcaEtherUnderSizeDeltaAvg
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherOutDiscardDelta

Fault Code: F37363

Message: Threshold Crossed: ether:ErrStats property: outDiscardDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37363
mibFaultName: tcaEtherOutDiscardDelta
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats
```

tcaEtherOutDiscardDeltaMin

Fault Code: F37364

Message: Threshold Crossed: ether:ErrStats property: outDiscardDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37364
mibFaultName: tcaEtherOutDiscardDeltaMin
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
```

Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherOutDiscardDeltaMax

Fault Code: F37365

Message: Threshold Crossed: ether:ErrStats property: outDiscardDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37365
mibFaultName: tcaEtherOutDiscardDeltaMax
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherOutDiscardDeltaAvg

Fault Code: F37366

Message: Threshold Crossed: ether:ErrStats property: outDiscardDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37366
mibFaultName: tcaEtherOutDiscardDeltaAvg
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats
```

tcaEtherIntMacTxDelta

Fault Code: F37383

Message: Threshold Crossed: ether:ErrStats property: intMacTxDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37383
mibFaultName: tcaEtherIntMacTxDelta
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
```

Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherIntMacTxDeltaMin

Fault Code: F37384

Message: Threshold Crossed: ether:ErrStats property: intMacTxDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37384
mibFaultName: tcaEtherIntMacTxDeltaMin
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherIntMacTxDeltaMax

Fault Code: F37385

Message: Threshold Crossed: ether:ErrStats property: intMacTxDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37385
mibFaultName: tcaEtherIntMacTxDeltaMax
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats
```

tcaEtherIntMacTxDeltaAvg

Fault Code: F37386

Message: Threshold Crossed: ether:ErrStats property: intMacTxDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37386
mibFaultName: tcaEtherIntMacTxDeltaAvg
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
```

Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherIntMacRxDelta

Fault Code: F37393

Message: Threshold Crossed: ether:ErrStats property: intMacRxDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37393
mibFaultName: tcaEtherIntMacRxDelta
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherIntMacRxDeltaMin

Fault Code: F37394

Message: Threshold Crossed: ether:ErrStats property: intMacRxDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37394
mibFaultName: tcaEtherIntMacRxDeltaMin
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats
```

tcaEtherIntMacRxDeltaMax

Fault Code: F37395

Message: Threshold Crossed: ether:ErrStats property: intMacRxDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37395
mibFaultName: tcaEtherIntMacRxDeltaMax
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
```

Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherIntMacRxDeltaAvg

Fault Code: F37396

Message: Threshold Crossed: ether:ErrStats property: intMacRxDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37396
mibFaultName: tcaEtherIntMacRxDeltaAvg
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherSingleCollisionDelta

Fault Code: F37403

Message: Threshold Crossed: ether:LossStats property: singleCollisionDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37403
mibFaultName: tcaEtherSingleCollisionDelta
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats
```

tcaEtherSingleCollisionDeltaMin

Fault Code: F37404

Message: Threshold Crossed: ether:LossStats property: singleCollisionDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37404
mibFaultName: tcaEtherSingleCollisionDeltaMin
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
```

Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherSingleCollisionDeltaMax

Fault Code: F37405

Message: Threshold Crossed: ether:LossStats property: singleCollisionDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37405
mibFaultName: tcaEtherSingleCollisionDeltaMax
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherSingleCollisionDeltaAvg

Fault Code: F37406

Message: Threshold Crossed: ether:LossStats property: singleCollisionDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37406
mibFaultName: tcaEtherSingleCollisionDeltaAvg
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats
```

tcaEtherMultiCollisionDelta

Fault Code: F37413

Message: Threshold Crossed: ether:LossStats property: multiCollisionDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37413
mibFaultName: tcaEtherMultiCollisionDelta
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
```

Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherMultiCollisionDeltaMin

Fault Code: F37414

Message: Threshold Crossed: ether:LossStats property: multiCollisionDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37414
mibFaultName: tcaEtherMultiCollisionDeltaMin
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherMultiCollisionDeltaMax

Fault Code: F37415

Message: Threshold Crossed: ether:LossStats property: multiCollisionDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37415
mibFaultName: tcaEtherMultiCollisionDeltaMax
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats
```

tcaEtherMultiCollisionDeltaAvg

Fault Code: F37416

Message: Threshold Crossed: ether:LossStats property: multiCollisionDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37416
mibFaultName: tcaEtherMultiCollisionDeltaAvg
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
```

Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherLateCollisionDelta

Fault Code: F37423

Message: Threshold Crossed: ether:LossStats property: lateCollisionDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37423
mibFaultName: tcaEtherLateCollisionDelta
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherLateCollisionDeltaMin

Fault Code: F37424

Message: Threshold Crossed: ether:LossStats property: lateCollisionDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37424
mibFaultName: tcaEtherLateCollisionDeltaMin
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats
```

tcaEtherLateCollisionDeltaMax

Fault Code: F37425

Message: Threshold Crossed: ether:LossStats property: lateCollisionDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37425
mibFaultName: tcaEtherLateCollisionDeltaMax
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
```

Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherLateCollisionDeltaAvg

Fault Code: F37426

Message: Threshold Crossed: ether:LossStats property: lateCollisionDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37426
mibFaultName: tcaEtherLateCollisionDeltaAvg
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherCarrierSenseDelta

Fault Code: F37443

Message: Threshold Crossed: ether:LossStats property: carrierSenseDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37443
mibFaultName: tcaEtherCarrierSenseDelta
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats
```

tcaEtherCarrierSenseDeltaMin

Fault Code: F37444

Message: Threshold Crossed: ether:LossStats property: carrierSenseDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37444
mibFaultName: tcaEtherCarrierSenseDeltaMin
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
```

Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherCarrierSenseDeltaMax

Fault Code: F37445

Message: Threshold Crossed: ether:LossStats property: carrierSenseDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37445
mibFaultName: tcaEtherCarrierSenseDeltaMax
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherCarrierSenseDeltaAvg

Fault Code: F37446

Message: Threshold Crossed: ether:LossStats property: carrierSenseDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37446
mibFaultName: tcaEtherCarrierSenseDeltaAvg
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats
```

tcaEtherGiantsDelta

Fault Code: F37453

Message: Threshold Crossed: ether:LossStats property: giantsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37453
mibFaultName: tcaEtherGiantsDelta
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
```

Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherGiantsDeltaMin

Fault Code: F37454

Message: Threshold Crossed: ether:LossStats property: giantsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37454
mibFaultName: tcaEtherGiantsDeltaMin
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherGiantsDeltaMax

Fault Code: F37455

Message: Threshold Crossed: ether:LossStats property: giantsDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37455
mibFaultName: tcaEtherGiantsDeltaMax
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats
```

tcaEtherGiantsDeltaAvg

Fault Code: F37456

Message: Threshold Crossed: ether:LossStats property: giantsDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37456
mibFaultName: tcaEtherGiantsDeltaAvg
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
```

Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherSymbolDelta

Fault Code: F37463

Message: Threshold Crossed: ether:LossStats property: symbolDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37463
mibFaultName: tcaEtherSymbolDelta
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherSymbolDeltaMin

Fault Code: F37464

Message: Threshold Crossed: ether:LossStats property: symbolDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37464
mibFaultName: tcaEtherSymbolDeltaMin
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats
```

tcaEtherSymbolDeltaMax

Fault Code: F37465

Message: Threshold Crossed: ether:LossStats property: symbolDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37465
mibFaultName: tcaEtherSymbolDeltaMax
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
```

Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherSymbolDeltaAvg

Fault Code: F37466

Message: Threshold Crossed: ether:LossStats property: symbolDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37466
mibFaultName: tcaEtherSymbolDeltaAvg
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherSQETestDelta

Fault Code: F37473

Message: Threshold Crossed: ether:LossStats property: SQETestDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37473
mibFaultName: tcaEtherSQETestDelta
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats
```

tcaEtherSQETestDeltaMin

Fault Code: F37474

Message: Threshold Crossed: ether:LossStats property: SQETestDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37474
mibFaultName: tcaEtherSQETestDeltaMin
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
```

Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherSQETestDeltaMax

Fault Code: F37475

Message: Threshold Crossed: ether:LossStats property: SQETestDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37475
mibFaultName: tcaEtherSQETestDeltaMax
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherSQETestDeltaAvg

Fault Code: F37476

Message: Threshold Crossed: ether:LossStats property: SQETestDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37476
mibFaultName: tcaEtherSQETestDeltaAvg
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats
```

tcaEtherRecvPauseDelta

Fault Code: F37485

Message: Threshold Crossed: ether:PauseStats property: recvPauseDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37485
mibFaultName: tcaEtherRecvPauseDelta
moClass: ether:PauseStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/pause-stats
Affected MO: fabric/lan/[id]/pc-[portId]/pause-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/pause-stats
Affected MO:
```

sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/pause-stats

tcaEtherRecvPauseDeltaMin

Fault Code: F37486

Message: Threshold Crossed: ether:PauseStats property: recvPauseDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37486
mibFaultName: tcaEtherRecvPauseDeltaMin
moClass: ether:PauseStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/pause-stats
Affected MO: fabric/lan/[id]/pc-[portId]/pause-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/pause-stats

tcaEtherRecvPauseDeltaMax

Fault Code: F37487

Message: Threshold Crossed: ether:PauseStats property: recvPauseDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37487
mibFaultName: tcaEtherRecvPauseDeltaMax
moClass: ether:PauseStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/pause-stats
Affected MO: fabric/lan/[id]/pc-[portId]/pause-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/pause-stats
```

tcaEtherRecvPauseDeltaAvg

Fault Code: F37488

Message: Threshold Crossed: ether:PauseStats property: recvPauseDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37488
mibFaultName: tcaEtherRecvPauseDeltaAvg
moClass: ether:PauseStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/pause-stats
Affected MO: fabric/lan/[id]/pc-[portId]/pause-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
```

Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/pause-stats

tcaEtherXmitPauseDelta

Fault Code: F37495

Message: Threshold Crossed: ether:PauseStats property: xmitPauseDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37495
mibFaultName: tcaEtherXmitPauseDelta
moClass: ether:PauseStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/pause-stats
Affected MO: fabric/lan/[id]/pc-[portId]/pause-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/pause-stats

tcaEtherXmitPauseDeltaMin

Fault Code: F37496

Message: Threshold Crossed: ether:PauseStats property: xmitPauseDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37496
mibFaultName: tcaEtherXmitPauseDeltaMin
moClass: ether:PauseStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/pause-stats
Affected MO: fabric/lan/[id]/pc-[portId]/pause-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/pause-stats
```

tcaEtherXmitPauseDeltaMax

Fault Code: F37497

Message: Threshold Crossed: ether:PauseStats property: xmitPauseDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37497
mibFaultName: tcaEtherXmitPauseDeltaMax
moClass: ether:PauseStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/pause-stats
Affected MO: fabric/lan/[id]/pc-[portId]/pause-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/pause-stats
```

Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/pause-stats

tcaEtherXmitPauseDeltaAvg

Fault Code: F37498

Message: Threshold Crossed: ether:PauseStats property: xmitPauseDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37498
mibFaultName: tcaEtherXmitPauseDeltaAvg
moClass: ether:PauseStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/pause-stats
Affected MO: fabric/lan/[id]/pc-[portId]/pause-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/pause-stats

tcaEtherResetsDelta

Fault Code: F37505

Message: Threshold Crossed: ether:PauseStats property: resetsDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37505
mibFaultName: tcaEtherResetsDelta
moClass: ether:PauseStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/pause-stats
Affected MO: fabric/lan/[id]/pc-[portId]/pause-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/pause-stats
```

tcaEtherResetsDeltaMin

Fault Code: F37506

Message: Threshold Crossed: ether:PauseStats property: resetsDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37506
mibFaultName: tcaEtherResetsDeltaMin
moClass: ether:PauseStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/pause-stats
```

Affected MO: fabric/lan/[id]/pc-[portId]/pause-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/pause-stats

tcaEtherResetsDeltaMax

Fault Code: F37507

Message: Threshold Crossed: ether:PauseStats property: resetsDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37507
mibFaultName: tcaEtherResetsDeltaMax
moClass: ether:PauseStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/pause-stats
Affected MO: fabric/lan/[id]/pc-[portId]/pause-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/pause-stats

Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/pause-stats

tcaEtherResetsDeltaAvg

Fault Code: F37508

Message: Threshold Crossed: ether:PauseStats property: resetsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37508
mibFaultName: tcaEtherResetsDeltaAvg
moClass: ether:PauseStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/pause-stats
Affected MO: fabric/lan/[id]/pc-[portId]/pause-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/pause-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/pause-stats

tcaEtherExcessCollisionDelta

Fault Code: F37532

Message: Threshold Crossed: ether:LossStats property: excessCollisionDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37532
mibFaultName: tcaEtherExcessCollisionDelta
moClass: ether:LossStats

Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherExcessCollisionDeltaMin

Fault Code: F37533

Message: Threshold Crossed: ether:LossStats property: excessCollisionDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37533
mibFaultName: tcaEtherExcessCollisionDeltaMin
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats

Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherExcessCollisionDeltaMax

Fault Code: F37534

Message: Threshold Crossed: ether:LossStats property: excessCollisionDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37534
mibFaultName: tcaEtherExcessCollisionDeltaMax
moClass: ether:LossStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherExcessCollisionDeltaAvg

Fault Code: F37535

Message: Threshold Crossed: ether:LossStats property: excessCollisionDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37535
mibFaultName: tcaEtherExcessCollisionDeltaAvg
moClass: ether:LossStats
Type: equipment

autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/loss-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherUnicastPacketsDelta

Fault Code: F37543

Message: Threshold Crossed: ether:TxStats property: unicastPacketsDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37543
mibFaultName: tcaEtherUnicastPacketsDelta
moClass: ether:TxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats

Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

tcaEtherUnicastPacketsDeltaMin

Fault Code: F37544

Message: Threshold Crossed: ether:TxStats property: unicastPacketsDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37544
mibFaultName: tcaEtherUnicastPacketsDeltaMin
moClass: ether:TxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

tcaEtherUnicastPacketsDeltaMax

Fault Code: F37545

Message: Threshold Crossed: ether:TxStats property: unicastPacketsDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37545
mibFaultName: tcaEtherUnicastPacketsDeltaMax
moClass: ether:TxStats
Type: equipment

autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

tcaEtherUnicastPacketsDeltaAvg

Fault Code: F37546

Message: Threshold Crossed: ether:TxStats property: unicastPacketsDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37546
mibFaultName: tcaEtherUnicastPacketsDeltaAvg
moClass: ether:TxStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/tx-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats

Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

tcaEtherDeferredTxDelta

Fault Code: F37553

Message: Threshold Crossed: ether:ErrStats property: deferredTxDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37553
mibFaultName: tcaEtherDeferredTxDelta
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherDeferredTxDeltaMin

Fault Code: F37554

Message: Threshold Crossed: ether:ErrStats property: deferredTxDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37554
mibFaultName: tcaEtherDeferredTxDeltaMin
moClass: ether:ErrStats
Type: equipment

autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherDeferredTxDeltaMax

Fault Code: F37555

Message: Threshold Crossed: ether:ErrStats property: deferredTxDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37555
mibFaultName: tcaEtherDeferredTxDeltaMax
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats

Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherDeferredTxDeltaAvg

Fault Code: F37556

Message: Threshold Crossed: ether:ErrStats property: deferredTxDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37556
mibFaultName: tcaEtherDeferredTxDeltaAvg
moClass: ether:ErrStats
Type: equipment
autoCleared: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaComputeInputVoltage

Fault Code: F37564

Message: Threshold Crossed: compute:MbPowerStats property: inputVoltage

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37564
mibFaultName: tcaComputeInputVoltage
moClass: compute:MbPowerStats
Type: server

autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/power-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/power-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/power-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/power-stats
Affected MO: sys/rack-unit-[id]/board/power-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/power-stats

tcaComputeInputVoltageMin

Fault Code: F37566

Message: Threshold Crossed: compute:MbPowerStats property: inputVoltageMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37566
mibFaultName: tcaComputeInputVoltageMin
moClass: compute:MbPowerStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/power-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/power-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/power-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/power-stats
Affected MO: sys/rack-unit-[id]/board/power-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/power-stats

tcaComputeInputVoltageMax

Fault Code: F37567

Message: Threshold Crossed: compute:MbPowerStats property: inputVoltageMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37567
mibFaultName: tcaComputeInputVoltageMax
moClass: compute:MbPowerStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/power-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/power-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/power-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/power-stats
Affected MO: sys/rack-unit-[id]/board/power-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/power-stats

tcaComputeInputVoltageAvg

Fault Code: F37568

Message: Threshold Crossed: compute:MbPowerStats property: inputVoltageAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37568
mibFaultName: tcaComputeInputVoltageAvg
moClass: compute:MbPowerStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/power-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/power-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/power-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/power-stats
Affected MO: sys/rack-unit-[id]/board/power-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/power-stats
```

tcaComputeInputCurrent

Fault Code: F37572

Message: Threshold Crossed: compute:MbPowerStats property: inputCurrent

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37572
mibFaultName: tcaComputeInputCurrent
moClass: compute:MbPowerStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/power-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/power-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/power-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/power-stats
Affected MO: sys/rack-unit-[id]/board/power-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/power-stats
```

tcaComputeInputCurrentMin

Fault Code: F37574

Message: Threshold Crossed: compute:MbPowerStats property: inputCurrentMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37574
mibFaultName: tcaComputeInputCurrentMin
moClass: compute:MbPowerStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/power-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/power-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/power-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/power-stats
Affected MO: sys/rack-unit-[id]/board/power-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/power-stats
```

tcaComputeInputCurrentMax

Fault Code: F37575

Message: Threshold Crossed: compute:MbPowerStats property: inputCurrentMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37575
mibFaultName: tcaComputeInputCurrentMax
moClass: compute:MbPowerStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/power-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/power-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/power-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/power-stats
Affected MO: sys/rack-unit-[id]/board/power-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/power-stats
```

tcaComputeInputCurrentAvg

Fault Code: F37576

Message: Threshold Crossed: compute:MbPowerStats property: inputCurrentAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37576
```

mibFaultName: tcaComputeInputCurrentAvg
moClass: compute:MbPowerStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/power-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/power-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/power-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/power-stats
Affected MO: sys/rack-unit-[id]/board/power-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/power-stats

tcaComputeFmTempSenRear

Fault Code: F37580

Message: Threshold Crossed: compute:MbTempStats property: fmTempSenRear

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37580
mibFaultName: tcaComputeFmTempSenRear
moClass: compute:MbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats

tcaComputeFmTempSenRearMin

Fault Code: F37582

Message: Threshold Crossed: compute:MbTempStats property: fmTempSenRearMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37582
mibFaultName: tcaComputeFmTempSenRearMin
moClass: compute:MbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats

tcaComputeFmTempSenRearMax

Fault Code: F37583

Message: Threshold Crossed: compute:MbTempStats property: fmTempSenRearMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37583
mibFaultName: tcaComputeFmTempSenRearMax
moClass: compute:MbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats

tcaComputeFmTempSenRearAvg

Fault Code: F37584

Message: Threshold Crossed: compute:MbTempStats property: fmTempSenRearAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37584
mibFaultName: tcaComputeFmTempSenRearAvg
moClass: compute:MbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats

tcaMemoryTemperature

Fault Code: F37600

Message: Threshold Crossed: memory:UnitEnvStats property: temperature

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37600
mibFaultName: tcaMemoryTemperature
moClass: memory:UnitEnvStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]/dimm-env-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/pmemory-[id]/dimm-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/mem-[id]/dimm-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/pmemory-[id]/dimm-env-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]/dimm-env-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/pmemory-[id]/dimm-env-stats
```

tcaMemoryTemperatureMin

Fault Code: F37602

Message: Threshold Crossed: memory:UnitEnvStats property: temperatureMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37602
mibFaultName: tcaMemoryTemperatureMin
moClass: memory:UnitEnvStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]/dimm-env-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/pmemory-[id]/dimm-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/mem-[id]/dimm-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/pmemory-[id]/dimm-env-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]/dimm-env-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/pmemory-[id]/dimm-env-stats
```

tcaMemoryTemperatureMax

Fault Code: F37603

Message: Threshold Crossed: memory:UnitEnvStats property: temperatureMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37603
mibFaultName: tcaMemoryTemperatureMax
moClass: memory:UnitEnvStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]/dimm-env-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/pmemory-[id]/dimm-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/mem-[id]/dimm-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/pmemory-[id]/dimm-env-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]/dimm-env-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/pmemory-[id]/dimm-env-stats
```

tcaMemoryTemperatureAvg

Fault Code: F37604

Message: Threshold Crossed: memory:UnitEnvStats property: temperatureAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37604
mibFaultName: tcaMemoryTemperatureAvg
moClass: memory:UnitEnvStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]/dimm-env-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/pmemory-[id]/dimm-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/mem-[id]/dimm-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/pmemory-[id]/dimm-env-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]/dimm-env-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/pmemory-[id]/dimm-env-stats
```

tcaProcessorTemperature

Fault Code: F37610

Message: Threshold Crossed: processor:EnvStats property: temperature

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37610
mibFaultName: tcaProcessorTemperature
moClass: processor:EnvStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/env-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/env-stats

tcaProcessorTemperatureMin

Fault Code: F37612

Message: Threshold Crossed: processor:EnvStats property: temperatureMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37612
mibFaultName: tcaProcessorTemperatureMin
moClass: processor:EnvStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/env-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/env-stats

tcaProcessorTemperatureMax

Fault Code: F37613

Message: Threshold Crossed: processor:EnvStats property: temperatureMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F37613
mibFaultName: tcaProcessorTemperatureMax
moClass: processor:EnvStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/env-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/env-stats

tcaProcessorTemperatureAvg

Fault Code: F37614

Message: Threshold Crossed: processor:EnvStats property: temperatureAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37614
mibFaultName: tcaProcessorTemperatureAvg
moClass: processor:EnvStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/env-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/env-stats
```

tcaSwPsuCtrlrInlet1

Fault Code: F37771

Message: Threshold Crossed: sw:EnvStats property: psuCtrlrInlet1

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37771
mibFaultName: tcaSwPsuCtrlrInlet1
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwPsuCtrlrInlet1Min

Fault Code: F37773

Message: Threshold Crossed: sw:EnvStats property: psuCtrlrInlet1Min

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37773
mibFaultName: tcaSwPsuCtrlrInlet1Min
moClass: sw:EnvStats
```

```
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwPsuCtrlrInlet1Max

Fault Code: F37774

Message: Threshold Crossed: sw:EnvStats property: psuCtrlrInlet1Max

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37774
mibFaultName: tcaSwPsuCtrlrInlet1Max
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwPsuCtrlrInlet1Avg

Fault Code: F37775

Message: Threshold Crossed: sw:EnvStats property: psuCtrlrInlet1Avg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37775
mibFaultName: tcaSwPsuCtrlrInlet1Avg
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwPsuCtrlrInlet2

Fault Code: F37779

Message: Threshold Crossed: sw:EnvStats property: psuCtrlrInlet2

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37779
```

```
mibFaultName: tcaSwPsuCtrlrInlet2
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwPsuCtrlrInlet2Min

Fault Code: F37781

Message: Threshold Crossed: sw:EnvStats property: psuCtrlrInlet2Min

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37781
mibFaultName: tcaSwPsuCtrlrInlet2Min
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwPsuCtrlrInlet2Max

Fault Code: F37782

Message: Threshold Crossed: sw:EnvStats property: psuCtrlrInlet2Max

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F37782
mibFaultName: tcaSwPsuCtrlrInlet2Max
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwPsuCtrlrInlet2Avg

Fault Code: F37783

Message: Threshold Crossed: sw:EnvStats property: psuCtrlrInlet2Avg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
```

```
Cause: threshold-crossed
mibFaultCode: F37783
mibFaultName: tcaSwPsuCtrlrInlet2Avg
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaComputeDllpErrors

Fault Code: F38022

Message: Threshold Crossed: compute:PCIeFatalProtocolStats property: dllpErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38022
mibFaultName: tcaComputeDllpErrors
moClass: compute:PCIeFatalProtocolStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-protocol-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/pciefat-protocol-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-protocol-stats
```

tcaComputeFlowControlErrors

Fault Code: F38032

Message: Threshold Crossed: compute:PCIeFatalProtocolStats property: flowControlErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38032
mibFaultName: tcaComputeFlowControlErrors
moClass: compute:PCIeFatalProtocolStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-protocol-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/pciefat-protocol-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-protocol-stats
```

tcaComputeUnsupportedRequestErrors

Fault Code: F38044

Message: Threshold Crossed: compute:PCIeFatalReceiveStats property: unsupportedRequestErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38044
mibFaultName: tcaComputeUnsupportedRequestErrors
moClass: compute:PCIeFatalReceiveStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-receive-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/pciefat-receive-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-receive-stats
```

tcaComputeErrFatalErrors

Fault Code: F38054

Message: Threshold Crossed: compute:PCIeFatalReceiveStats property: errFatalErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38054
mibFaultName: tcaComputeErrFatalErrors
moClass: compute:PCIeFatalReceiveStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-receive-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/pciefat-receive-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-receive-stats
```

tcaComputeErrNonFatalErrors

Fault Code: F38064

Message: Threshold Crossed: compute:PCIeFatalReceiveStats property: errNonFatalErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38064
mibFaultName: tcaComputeErrNonFatalErrors
moClass: compute:PCIeFatalReceiveStats
Type: server
autoCleared: true
```

Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-receive-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/pciefat-receive-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-receive-stats

tcaComputeUnexpectedErrors

Fault Code: F38086

Message: Threshold Crossed: compute:PCIeFatalCompletionStats property: unexpectedErrors

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F38086
mibFaultName: tcaComputeUnexpectedErrors
moClass: compute:PCIeFatalCompletionStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-completion-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/pciefat-completion-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-completion-stats

tcaComputeTimeoutErrors

Fault Code: F38096

Message: Threshold Crossed: compute:PCIeFatalCompletionStats property: TimeoutErrors

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F38096
mibFaultName: tcaComputeTimeoutErrors
moClass: compute:PCIeFatalCompletionStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-completion-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/pciefat-completion-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-completion-stats

tcaComputeAbortErrors

Fault Code: F38106

Message: Threshold Crossed: compute:PCIeFatalCompletionStats property: AbortErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38106
mibFaultName: tcaComputeAbortErrors
moClass: compute:PCIeFatalCompletionStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-completion-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/pciefat-completion-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-completion-stats
```

tcaComputeSurpriseLinkDownErrors

Fault Code: F38128

Message: Threshold Crossed: compute:PCIeFatalStats property: surpriseLinkDownErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38128
mibFaultName: tcaComputeSurpriseLinkDownErrors
moClass: compute:PCIeFatalStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/pciefat-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-stats
```

tcaComputePoisonedTLPErrors

Fault Code: F38138

Message: Threshold Crossed: compute:PCIeFatalStats property: poisonedTLPErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38138
mibFaultName: tcaComputePoisonedTLPErrors
moClass: compute:PCIeFatalStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/pciefat-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-stats
```

tcaComputeAcsViolationErrors

Fault Code: F38148

Message: Threshold Crossed: compute:PCIeFatalStats property: acsViolationErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38148
mibFaultName: tcaComputeAcsViolationErrors
moClass: compute:PCIeFatalStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/pciefat-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-stats
```

tcaComputeMalformedTLPErrors

Fault Code: F38158

Message: Threshold Crossed: compute:PCIeFatalStats property: malformedTLPErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38158
mibFaultName: tcaComputeMalformedTLPErrors
moClass: compute:PCIeFatalStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/pciefat-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-stats
```

tcaEquipmentTemp

Fault Code: F38311

Message: Threshold Crossed: equipment:IOCardStats property: temp

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38311
mibFaultName: tcaEquipmentTemp
```

```
moClass: equipment:IOCardStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats
```

tcaEquipmentTempMin

Fault Code: F38313

Message: Threshold Crossed: equipment:IOCardStats property: tempMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38313
mibFaultName: tcaEquipmentTempMin
moClass: equipment:IOCardStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats
```

tcaEquipmentTempMax

Fault Code: F38314

Message: Threshold Crossed: equipment:IOCardStats property: tempMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38314
mibFaultName: tcaEquipmentTempMax
moClass: equipment:IOCardStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats
```

tcaEquipmentTempAvg

Fault Code: F38315

Message: Threshold Crossed: equipment:IOCardStats property: tempAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38315
mibFaultName: tcaEquipmentTempAvg
moClass: equipment:IOCardStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats
```

tcaProcessorInputCurrent

Fault Code: F38349

Message: Threshold Crossed: processor:EnvStats property: inputCurrent

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38349
mibFaultName: tcaProcessorInputCurrent
moClass: processor:EnvStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/env-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/env-stats
```

tcaProcessorInputCurrentMin

Fault Code: F38351

Message: Threshold Crossed: processor:EnvStats property: inputCurrentMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38351
mibFaultName: tcaProcessorInputCurrentMin
moClass: processor:EnvStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/env-stats
Affected MO:
```

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/env-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/env-stats

tcaProcessorInputCurrentMax

Fault Code: F38352

Message: Threshold Crossed: processor:EnvStats property: inputCurrentMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F38352
mibFaultName: tcaProcessorInputCurrentMax
moClass: processor:EnvStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/env-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/env-stats

tcaProcessorInputCurrentAvg

Fault Code: F38353

Message: Threshold Crossed: processor:EnvStats property: inputCurrentAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F38353
mibFaultName: tcaProcessorInputCurrentAvg
moClass: processor:EnvStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/env-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/env-stats

tcaMemoryInputCurrent

Fault Code: F38357

Message: Threshold Crossed: memory:ArrayEnvStats property: inputCurrent

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F38357
mibFaultName: tcaMemoryInputCurrent
moClass: memory:ArrayEnvStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/array-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/array-env-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/array-env-stats

tcaMemoryInputCurrentMin

Fault Code: F38359

Message: Threshold Crossed: memory:ArrayEnvStats property: inputCurrentMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F38359
mibFaultName: tcaMemoryInputCurrentMin
moClass: memory:ArrayEnvStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/array-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/array-env-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/array-env-stats

tcaMemoryInputCurrentMax

Fault Code: F38360

Message: Threshold Crossed: memory:ArrayEnvStats property: inputCurrentMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F38360
mibFaultName: tcaMemoryInputCurrentMax
moClass: memory:ArrayEnvStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/array-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/array-env-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/array-env-stats

tcaMemoryInputCurrentAvg

Fault Code: F38361

Message: Threshold Crossed: memory:ArrayEnvStats property: inputCurrentAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38361
mibFaultName: tcaMemoryInputCurrentAvg
moClass: memory:ArrayEnvStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/array-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/array-env-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/array-env-stats
```

tcaAdaptorNoBreakdownGreaterThan1518Delta

Fault Code: F38408

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: noBreakdownGreaterThan1518Delta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38408
mibFaultName: tcaAdaptorNoBreakdownGreaterThan1518Delta
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
```

tcaAdaptorNoBreakdownGreaterThan1518DeltaMin

Fault Code: F38409

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: noBreakdownGreaterThan1518DeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38409
mibFaultName: tcaAdaptorNoBreakdownGreaterThan1518DeltaMin
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
```

tcaAdaptorNoBreakdownGreaterThan1518DeltaMax

Fault Code: F38410

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: noBreakdownGreaterThan1518DeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38410
mibFaultName: tcaAdaptorNoBreakdownGreaterThan1518DeltaMax
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
```

Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorNoBreakdownGreaterThan1518DeltaAvg

Fault Code: F38411

Message: Threshold Crossed: adaptor:EthPortBySizeLargeStats property: noBreakdownGreaterThan1518DeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F38411
mibFaultName: tcaAdaptorNoBreakdownGreaterThan1518DeltaAvg
moClass: adaptor:EthPortBySizeLargeStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaMemoryTemperature

Fault Code: F38438

Message: Threshold Crossed: memory:BufferUnitEnvStats property: temperature

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F38438
mibFaultName: tcaMemoryTemperature
moClass: memory:BufferUnitEnvStats
Type: server
autoCleared: true

Affected MO: sys/chassis-[id]/blade-[slotId]/board/sensor-unit-[id]/buffer-unit-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sensor-unit-[id]/buffer-unit-env-stats
Affected MO: sys/rack-unit-[id]/board/sensor-unit-[id]/buffer-unit-env-stats

tcaMemoryTemperatureMin

Fault Code: F38440

Message: Threshold Crossed: memory:BufferUnitEnvStats property: temperatureMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F38440
mibFaultName: tcaMemoryTemperatureMin
moClass: memory:BufferUnitEnvStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sensor-unit-[id]/buffer-unit-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sensor-unit-[id]/buffer-unit-env-stats
Affected MO: sys/rack-unit-[id]/board/sensor-unit-[id]/buffer-unit-env-stats

tcaMemoryTemperatureMax

Fault Code: F38441

Message: Threshold Crossed: memory:BufferUnitEnvStats property: temperatureMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F38441
mibFaultName: tcaMemoryTemperatureMax
moClass: memory:BufferUnitEnvStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sensor-unit-[id]/buffer-unit-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sensor-unit-[id]/buffer-unit-env-stats
Affected MO: sys/rack-unit-[id]/board/sensor-unit-[id]/buffer-unit-env-stats

tcaMemoryTemperatureAvg

Fault Code: F38442

Message: Threshold Crossed: memory:BufferUnitEnvStats property: temperatureAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38442
mibFaultName: tcaMemoryTemperatureAvg
moClass: memory:BufferUnitEnvStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sensor-unit-[id]/buffer-unit-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sensor-unit-[id]/buffer-unit-env-stats
Affected MO: sys/rack-unit-[id]/board/sensor-unit-[id]/buffer-unit-env-stats
```

tcaComputeTemperature

Fault Code: F38451

Message: Threshold Crossed: compute:IOHubEnvStats property: temperature

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38451
mibFaultName: tcaComputeTemperature
moClass: compute:IOHubEnvStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/iohub/iohub-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/iohub/iohub-stats
Affected MO: sys/rack-unit-[id]/board/iohub/iohub-stats
```

tcaComputeTemperatureMin

Fault Code: F38453

Message: Threshold Crossed: compute:IOHubEnvStats property: temperatureMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38453
mibFaultName: tcaComputeTemperatureMin
moClass: compute:IOHubEnvStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/iohub/iohub-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/iohub/iohub-stats
Affected MO: sys/rack-unit-[id]/board/iohub/iohub-stats
```

tcaComputeTemperatureMax

Fault Code: F38454

Message: Threshold Crossed: compute:IOHubEnvStats property: temperatureMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38454
mibFaultName: tcaComputeTemperatureMax
moClass: compute:IOHubEnvStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/iohub/iohub-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/iohub/iohub-stats
Affected MO: sys/rack-unit-[id]/board/iohub/iohub-stats
```

tcaComputeTemperatureAvg

Fault Code: F38455

Message: Threshold Crossed: compute:IOHubEnvStats property: temperatureAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38455
mibFaultName: tcaComputeTemperatureAvg
moClass: compute:IOHubEnvStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/iohub/iohub-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/iohub/iohub-stats
Affected MO: sys/rack-unit-[id]/board/iohub/iohub-stats
```

tcaProcessorMirroringIntraSockErrors

Fault Code: F38779

Message: Threshold Crossed: processor:ErrorStats property: mirroringIntraSockErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
```

```
mibFaultCode: F38779
mibFaultName: tcaProcessorMirroringIntraSockErrors
moClass: processor:ErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/error-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/error-stats
```

tcaProcessorMirroringInterSockErrors

Fault Code: F38788

Message: Threshold Crossed: processor:ErrorStats property: mirroringInterSockErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38788
mibFaultName: tcaProcessorMirroringInterSockErrors
moClass: processor:ErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/error-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/error-stats
```

tcaProcessorSparingErrors

Fault Code: F38797

Message: Threshold Crossed: processor:ErrorStats property: sparingErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38797
mibFaultName: tcaProcessorSparingErrors
moClass: processor:ErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/error-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/error-stats
```

tcaProcessorSmiLinkCorrErrors

Fault Code: F38806

Message: Threshold Crossed: processor:ErrorStats property: smiLinkCorrErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38806
mibFaultName: tcaProcessorSmiLinkCorrErrors
moClass: processor:ErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/error-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/error-stats
```

tcaProcessorSmiLinkUncorrErrors

Fault Code: F38815

Message: Threshold Crossed: processor:ErrorStats property: smiLinkUncorrErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38815
mibFaultName: tcaProcessorSmiLinkUncorrErrors
moClass: processor:ErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/error-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/error-stats
```

tcaMemoryEccMultibitErrors

Fault Code: F38829

Message: Threshold Crossed: memory:ErrorStats property: eccMultibitErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F38829
mibFaultName: tcaMemoryEccMultibitErrors
moClass: memory:ErrorStats
```

Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]/error-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/pmemory-[id]/error-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/mem-[id]/error-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/pmemory-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/pmemory-[id]/error-stats

tcaMemoryEccSinglebitErrors

Fault Code: F38838

Message: Threshold Crossed: memory:ErrorStats property: eccSinglebitErrors

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F38838
mibFaultName: tcaMemoryEccSinglebitErrors
moClass: memory:ErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]/error-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/pmemory-[id]/error-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/mem-[id]/error-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/pmemory-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/pmemory-[id]/error-stats

tcaMemoryAddressParityErrors

Fault Code: F38847

Message: Threshold Crossed: memory:ErrorStats property: addressParityErrors

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F38847
mibFaultName: tcaMemoryAddressParityErrors
moClass: memory:ErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]/error-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/pmemory-[id]/error-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/mem-[id]/error-stats

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/pmemory-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/pmemory-[id]/error-stats

tcaMemoryMismatchErrors

Fault Code: F38856

Message: Threshold Crossed: memory:ErrorStats property: mismatchErrors

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F38856
mibFaultName: tcaMemoryMismatchErrors
moClass: memory:ErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]/error-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/pmemory-[id]/error-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/mem-[id]/error-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/pmemory-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/pmemory-[id]/error-stats

tcaComputeBufferOverflowErrors

Fault Code: F38909

Message: Threshold Crossed: compute:PCIeFatalReceiveStats property: bufferOverflowErrors

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F38909
mibFaultName: tcaComputeBufferOverflowErrors
moClass: compute:PCIeFatalReceiveStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-receive-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/pciefat-receive-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-receive-stats

tcaComputeFmTempSenRearL

Fault Code: F39032

Message: Threshold Crossed: compute:MbTempStats property: fmTempSenRearL

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39032
mibFaultName: tcaComputeFmTempSenRearL
moClass: compute:MbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats
```

tcaComputeFmTempSenRearLMin

Fault Code: F39034

Message: Threshold Crossed: compute:MbTempStats property: fmTempSenRearLMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39034
mibFaultName: tcaComputeFmTempSenRearLMin
moClass: compute:MbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats
```

tcaComputeFmTempSenRearLMax

Fault Code: F39035

Message: Threshold Crossed: compute:MbTempStats property: fmTempSenRearLMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F39035
mibFaultName: tcaComputeFmTempSenRearLMax
moClass: compute:MbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats

tcaComputeFmTempSenRearLAvg

Fault Code: F39036

Message: Threshold Crossed: compute:MbTempStats property: fmTempSenRearLAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F39036
mibFaultName: tcaComputeFmTempSenRearLAvg
moClass: compute:MbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats

tcaComputeFmTempSenRearR

Fault Code: F39040

Message: Threshold Crossed: compute:MbTempStats property: fmTempSenRearR

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F39040
mibFaultName: tcaComputeFmTempSenRearR
moClass: compute:MbTempStats
Type: server
autoCleared: true

Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats

tcaComputeFmTempSenRearRMin

Fault Code: F39042

Message: Threshold Crossed: compute:MbTempStats property: fmTempSenRearRMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F39042
mibFaultName: tcaComputeFmTempSenRearRMin
moClass: compute:MbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats

tcaComputeFmTempSenRearRMax

Fault Code: F39043

Message: Threshold Crossed: compute:MbTempStats property: fmTempSenRearRMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F39043
mibFaultName: tcaComputeFmTempSenRearRMax
moClass: compute:MbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats

tcaComputeFmTempSenRearRAvg

Fault Code: F39044

Message: Threshold Crossed: compute:MbTempStats property: fmTempSenRearRAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39044
mibFaultName: tcaComputeFmTempSenRearRAvg
moClass: compute:MbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats
```

tcaPowerPower

Fault Code: F39240

Message: Threshold Crossed: power:GroupStats property: power

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39240
mibFaultName: tcaPowerPower
moClass: power:GroupStats
Type: generic
autoCleared: true
```

tcaPowerPowerMin

Fault Code: F39242

Message: Threshold Crossed: power:GroupStats property: powerMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39242
```

```
mibFaultName: tcaPowerPowerMin
moClass: power:GroupStats
Type: generic
autoCleared: true
```

tcaPowerPowerMax

Fault Code: F39243

Message: Threshold Crossed: power:GroupStats property: powerMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39243
mibFaultName: tcaPowerPowerMax
moClass: power:GroupStats
Type: generic
autoCleared: true
```

tcaPowerPowerAvg

Fault Code: F39244

Message: Threshold Crossed: power:GroupStats property: powerAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39244
mibFaultName: tcaPowerPowerAvg
moClass: power:GroupStats
Type: generic
autoCleared: true
```

tcaEquipmentOutlet1

Fault Code: F39421

Message: Threshold Crossed: equipment:FexEnvStats property: outlet1

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39421
mibFaultName: tcaEquipmentOutlet1
```

```
moClass: equipment:FexEnvStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/env-stats
```

tcaEquipmentOutlet1Min

Fault Code: F39423

Message: Threshold Crossed: equipment:FexEnvStats property: outlet1Min

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39423
mibFaultName: tcaEquipmentOutlet1Min
moClass: equipment:FexEnvStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/env-stats
```

tcaEquipmentOutlet1Max

Fault Code: F39424

Message: Threshold Crossed: equipment:FexEnvStats property: outlet1Max

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39424
mibFaultName: tcaEquipmentOutlet1Max
moClass: equipment:FexEnvStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/env-stats
```

tcaEquipmentOutlet1Avg

Fault Code: F39425

Message: Threshold Crossed: equipment:FexEnvStats property: outlet1Avg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
```

```
mibFaultCode: F39425
mibFaultName: tcaEquipmentOutlet1Avg
moClass: equipment:FexEnvStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/env-stats
```

tcaEquipmentOutlet2

Fault Code: F39429

Message: Threshold Crossed: equipment:FexEnvStats property: outlet2

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39429
mibFaultName: tcaEquipmentOutlet2
moClass: equipment:FexEnvStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/env-stats
```

tcaEquipmentOutlet2Min

Fault Code: F39431

Message: Threshold Crossed: equipment:FexEnvStats property: outlet2Min

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39431
mibFaultName: tcaEquipmentOutlet2Min
moClass: equipment:FexEnvStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/env-stats
```

tcaEquipmentOutlet2Max

Fault Code: F39432

Message: Threshold Crossed: equipment:FexEnvStats property: outlet2Max

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39432
mibFaultName: tcaEquipmentOutlet2Max
moClass: equipment:FexEnvStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/env-stats
```

tcaEquipmentOutlet2Avg

Fault Code: F39433

Message: Threshold Crossed: equipment:FexEnvStats property: outlet2Avg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39433
mibFaultName: tcaEquipmentOutlet2Avg
moClass: equipment:FexEnvStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/env-stats
```

tcaEquipmentInlet

Fault Code: F39437

Message: Threshold Crossed: equipment:FexEnvStats property: inlet

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39437
mibFaultName: tcaEquipmentInlet
moClass: equipment:FexEnvStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/env-stats
```

tcaEquipmentInletMin

Fault Code: F39439

Message: Threshold Crossed: equipment:FexEnvStats property: inletMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39439
mibFaultName: tcaEquipmentInletMin
moClass: equipment:FexEnvStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/env-stats
```

tcaEquipmentInletMax

Fault Code: F39440

Message: Threshold Crossed: equipment:FexEnvStats property: inletMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39440
mibFaultName: tcaEquipmentInletMax
moClass: equipment:FexEnvStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/env-stats
```

tcaEquipmentInletAvg

Fault Code: F39441

Message: Threshold Crossed: equipment:FexEnvStats property: inletAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39441
mibFaultName: tcaEquipmentInletAvg
moClass: equipment:FexEnvStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/env-stats
```

tcaEquipmentInlet1

Fault Code: F39445

Message: Threshold Crossed: equipment:FexEnvStats property: inlet1

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39445
mibFaultName: tcaEquipmentInlet1
moClass: equipment:FexEnvStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/env-stats
```

tcaEquipmentInlet1Min

Fault Code: F39447

Message: Threshold Crossed: equipment:FexEnvStats property: inlet1Min

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39447
mibFaultName: tcaEquipmentInlet1Min
moClass: equipment:FexEnvStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/env-stats
```

tcaEquipmentInlet1Max

Fault Code: F39448

Message: Threshold Crossed: equipment:FexEnvStats property: inlet1Max

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39448
mibFaultName: tcaEquipmentInlet1Max
moClass: equipment:FexEnvStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/env-stats
```

tcaEquipmentInlet1Avg

Fault Code: F39449

Message: Threshold Crossed: equipment:FexEnvStats property: inlet1Avg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39449
mibFaultName: tcaEquipmentInlet1Avg
moClass: equipment:FexEnvStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/env-stats
```

tcaEquipmentDie1

Fault Code: F39453

Message: Threshold Crossed: equipment:FexEnvStats property: die1

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39453
mibFaultName: tcaEquipmentDie1
moClass: equipment:FexEnvStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/env-stats
```

tcaEquipmentDie1Min

Fault Code: F39455

Message: Threshold Crossed: equipment:FexEnvStats property: die1Min

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39455
mibFaultName: tcaEquipmentDie1Min
moClass: equipment:FexEnvStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/env-stats
```

tcaEquipmentDie1Max

Fault Code: F39456

Message: Threshold Crossed: equipment:FexEnvStats property: die1Max

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39456
mibFaultName: tcaEquipmentDie1Max
moClass: equipment:FexEnvStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/env-stats
```

tcaEquipmentDie1Avg

Fault Code: F39457

Message: Threshold Crossed: equipment:FexEnvStats property: die1Avg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39457
mibFaultName: tcaEquipmentDie1Avg
moClass: equipment:FexEnvStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/env-stats
```

tcaEquipmentTotalPower

Fault Code: F39464

Message: Threshold Crossed: equipment:FexPowerSummary property: totalPower

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39464
mibFaultName: tcaEquipmentTotalPower
moClass: equipment:FexPowerSummary
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/power-summary
```

tcaEquipmentTotalPowerMin

Fault Code: F39466

Message: Threshold Crossed: equipment:FexPowerSummary property: totalPowerMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39466
mibFaultName: tcaEquipmentTotalPowerMin
moClass: equipment:FexPowerSummary
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/power-summary
```

tcaEquipmentTotalPowerMax

Fault Code: F39467

Message: Threshold Crossed: equipment:FexPowerSummary property: totalPowerMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39467
mibFaultName: tcaEquipmentTotalPowerMax
moClass: equipment:FexPowerSummary
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/power-summary
```

tcaEquipmentTotalPowerAvg

Fault Code: F39468

Message: Threshold Crossed: equipment:FexPowerSummary property: totalPowerAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39468
mibFaultName: tcaEquipmentTotalPowerAvg
moClass: equipment:FexPowerSummary
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/power-summary
```

tcaEquipmentReservedPower

Fault Code: F39472

Message: Threshold Crossed: equipment:FexPowerSummary property: reservedPower

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39472
mibFaultName: tcaEquipmentReservedPower
moClass: equipment:FexPowerSummary
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/power-summary
```

tcaEquipmentReservedPowerMin

Fault Code: F39474

Message: Threshold Crossed: equipment:FexPowerSummary property: reservedPowerMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39474
mibFaultName: tcaEquipmentReservedPowerMin
moClass: equipment:FexPowerSummary
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/power-summary
```

tcaEquipmentReservedPowerMax

Fault Code: F39475

Message: Threshold Crossed: equipment:FexPowerSummary property: reservedPowerMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39475
mibFaultName: tcaEquipmentReservedPowerMax
moClass: equipment:FexPowerSummary
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/power-summary
```

tcaEquipmentReservedPowerAvg

Fault Code: F39476

Message: Threshold Crossed: equipment:FexPowerSummary property: reservedPowerAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39476
mibFaultName: tcaEquipmentReservedPowerAvg
moClass: equipment:FexPowerSummary
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/power-summary
```

tcaEquipmentModulePower

Fault Code: F39480

Message: Threshold Crossed: equipment:FexPowerSummary property: ModulePower

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39480
mibFaultName: tcaEquipmentModulePower
moClass: equipment:FexPowerSummary
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/power-summary
```

tcaEquipmentModulePowerMin

Fault Code: F39482

Message: Threshold Crossed: equipment:FexPowerSummary property: ModulePowerMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39482
mibFaultName: tcaEquipmentModulePowerMin
moClass: equipment:FexPowerSummary
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/power-summary
```

tcaEquipmentModulePowerMax

Fault Code: F39483

Message: Threshold Crossed: equipment:FexPowerSummary property: ModulePowerMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39483
mibFaultName: tcaEquipmentModulePowerMax
moClass: equipment:FexPowerSummary
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/power-summary
```

tcaEquipmentModulePowerAvg

Fault Code: F39484

Message: Threshold Crossed: equipment:FexPowerSummary property: ModulePowerAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39484
mibFaultName: tcaEquipmentModulePowerAvg
moClass: equipment:FexPowerSummary
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/power-summary
```

tcaEquipmentAvailablePower

Fault Code: F39488

Message: Threshold Crossed: equipment:FexPowerSummary property: availablePower

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39488
mibFaultName: tcaEquipmentAvailablePower
moClass: equipment:FexPowerSummary
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/power-summary
```

tcaEquipmentAvailablePowerMin

Fault Code: F39490

Message: Threshold Crossed: equipment:FexPowerSummary property: availablePowerMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39490
mibFaultName: tcaEquipmentAvailablePowerMin
moClass: equipment:FexPowerSummary
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/power-summary
```

tcaEquipmentAvailablePowerMax

Fault Code: F39491

Message: Threshold Crossed: equipment:FexPowerSummary property: availablePowerMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39491
mibFaultName: tcaEquipmentAvailablePowerMax
moClass: equipment:FexPowerSummary
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/power-summary
```

tcaEquipmentAvailablePowerAvg

Fault Code: F39492

Message: Threshold Crossed: equipment:FexPowerSummary property: availablePowerAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39492
mibFaultName: tcaEquipmentAvailablePowerAvg
moClass: equipment:FexPowerSummary
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/power-summary
```

tcaEquipmentCurrent

Fault Code: F39498

Message: Threshold Crossed: equipment:FexPsuInputStats property: current

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39498
mibFaultName: tcaEquipmentCurrent
moClass: equipment:FexPsuInputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/switch-[id]/psu-[id]/fex-psu-input-stats
```

tcaEquipmentCurrentMin

Fault Code: F39500

Message: Threshold Crossed: equipment:FexPsuInputStats property: currentMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39500
mibFaultName: tcaEquipmentCurrentMin
moClass: equipment:FexPsuInputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/switch-[id]/psu-[id]/fex-psu-input-stats
```

tcaEquipmentCurrentMax

Fault Code: F39501

Message: Threshold Crossed: equipment:FexPsuInputStats property: currentMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39501
mibFaultName: tcaEquipmentCurrentMax
moClass: equipment:FexPsuInputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/switch-[id]/psu-[id]/fex-psu-input-stats
```

tcaEquipmentCurrentAvg

Fault Code: F39502

Message: Threshold Crossed: equipment:FexPsuInputStats property: currentAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39502
mibFaultName: tcaEquipmentCurrentAvg
moClass: equipment:FexPsuInputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/switch-[id]/psu-[id]/fex-psu-input-stats
```

tcaEquipmentVoltage

Fault Code: F39506

Message: Threshold Crossed: equipment:FexPsuInputStats property: voltage

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39506
mibFaultName: tcaEquipmentVoltage
moClass: equipment:FexPsuInputStats
Type: generic
autoCleared: true
```

Affected MO: sys/chassis-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/switch-[id]/psu-[id]/fex-psu-input-stats

tcaEquipmentVoltageMin

Fault Code: F39508

Message: Threshold Crossed: equipment:FexPsuInputStats property: voltageMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F39508
mibFaultName: tcaEquipmentVoltageMin
moClass: equipment:FexPsuInputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/switch-[id]/psu-[id]/fex-psu-input-stats

tcaEquipmentVoltageMax

Fault Code: F39509

Message: Threshold Crossed: equipment:FexPsuInputStats property: voltageMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F39509
mibFaultName: tcaEquipmentVoltageMax
moClass: equipment:FexPsuInputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/switch-[id]/psu-[id]/fex-psu-input-stats

tcaEquipmentVoltageAvg

Fault Code: F39510

Message: Threshold Crossed: equipment:FexPsuInputStats property: voltageAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39510
mibFaultName: tcaEquipmentVoltageAvg
moClass: equipment:FexPsuInputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/switch-[id]/psu-[id]/fex-psu-input-stats
```

tcaEquipmentPower

Fault Code: F39514

Message: Threshold Crossed: equipment:FexPsuInputStats property: power

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39514
mibFaultName: tcaEquipmentPower
moClass: equipment:FexPsuInputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/switch-[id]/psu-[id]/fex-psu-input-stats
```

tcaEquipmentPowerMin

Fault Code: F39516

Message: Threshold Crossed: equipment:FexPsuInputStats property: powerMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39516
mibFaultName: tcaEquipmentPowerMin
moClass: equipment:FexPsuInputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/switch-[id]/psu-[id]/fex-psu-input-stats
```

tcaEquipmentPowerMax

Fault Code: F39517

Message: Threshold Crossed: equipment:FexPsuInputStats property: powerMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39517
mibFaultName: tcaEquipmentPowerMax
moClass: equipment:FexPsuInputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/switch-[id]/psu-[id]/fex-psu-input-stats
```

tcaEquipmentPowerAvg

Fault Code: F39518

Message: Threshold Crossed: equipment:FexPsuInputStats property: powerAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39518
mibFaultName: tcaEquipmentPowerAvg
moClass: equipment:FexPsuInputStats
Type: generic
autoCleared: true
```

Affected MO: sys/chassis-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/switch-[id]/psu-[id]/fex-psu-input-stats

tcaEquipmentAmbientTemp

Fault Code: F39525

Message: Threshold Crossed: equipment:RackUnitPsuStats property: ambientTemp

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F39525
mibFaultName: tcaEquipmentAmbientTemp
moClass: equipment:RackUnitPsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats

tcaEquipmentAmbientTempMin

Fault Code: F39527

Message: Threshold Crossed: equipment:RackUnitPsuStats property: ambientTempMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F39527
mibFaultName: tcaEquipmentAmbientTempMin
moClass: equipment:RackUnitPsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats

tcaEquipmentAmbientTempMax

Fault Code: F39528

Message: Threshold Crossed: equipment:RackUnitPsuStats property: ambientTempMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39528
mibFaultName: tcaEquipmentAmbientTempMax
moClass: equipment:RackUnitPsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentAmbientTempAvg

Fault Code: F39529

Message: Threshold Crossed: equipment:RackUnitPsuStats property: ambientTempAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39529
mibFaultName: tcaEquipmentAmbientTempAvg
moClass: equipment:RackUnitPsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentOutputCurrent

Fault Code: F39533

Message: Threshold Crossed: equipment:RackUnitPsuStats property: outputCurrent

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39533
```

```
mibFaultName: tcaEquipmentOutputCurrent
moClass: equipment:RackUnitPsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentOutputCurrentMin

Fault Code: F39535

Message: Threshold Crossed: equipment:RackUnitPsuStats property: outputCurrentMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39535
mibFaultName: tcaEquipmentOutputCurrentMin
moClass: equipment:RackUnitPsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentOutputCurrentMax

Fault Code: F39536

Message: Threshold Crossed: equipment:RackUnitPsuStats property: outputCurrentMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39536
mibFaultName: tcaEquipmentOutputCurrentMax
moClass: equipment:RackUnitPsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentOutputCurrentAvg

Fault Code: F39537

Message: Threshold Crossed: equipment:RackUnitPsuStats property: outputCurrentAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39537
mibFaultName: tcaEquipmentOutputCurrentAvg
moClass: equipment:RackUnitPsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentOutputPower

Fault Code: F39541

Message: Threshold Crossed: equipment:RackUnitPsuStats property: outputPower

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39541
mibFaultName: tcaEquipmentOutputPower
moClass: equipment:RackUnitPsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentOutputPowerMin

Fault Code: F39543

Message: Threshold Crossed: equipment:RackUnitPsuStats property: outputPowerMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F39543
mibFaultName: tcaEquipmentOutputPowerMin
moClass: equipment:RackUnitPsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats

tcaEquipmentOutputPowerMax

Fault Code: F39544

Message: Threshold Crossed: equipment:RackUnitPsuStats property: outputPowerMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F39544
mibFaultName: tcaEquipmentOutputPowerMax
moClass: equipment:RackUnitPsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats

tcaEquipmentOutputPowerAvg

Fault Code: F39545

Message: Threshold Crossed: equipment:RackUnitPsuStats property: outputPowerAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F39545
mibFaultName: tcaEquipmentOutputPowerAvg
moClass: equipment:RackUnitPsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/rackunit-power-stats

```
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentInputPower

Fault Code: F39549

Message: Threshold Crossed: equipment:RackUnitPsuStats property: inputPower

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39549
mibFaultName: tcaEquipmentInputPower
moClass: equipment:RackUnitPsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentInputPowerMin

Fault Code: F39551

Message: Threshold Crossed: equipment:RackUnitPsuStats property: inputPowerMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39551
mibFaultName: tcaEquipmentInputPowerMin
moClass: equipment:RackUnitPsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentInputPowerMax

Fault Code: F39552

Message: Threshold Crossed: equipment:RackUnitPsuStats property: inputPowerMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39552
mibFaultName: tcaEquipmentInputPowerMax
moClass: equipment:RackUnitPsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentInputPowerAvg

Fault Code: F39553

Message: Threshold Crossed: equipment:RackUnitPsuStats property: inputPowerAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39553
mibFaultName: tcaEquipmentInputPowerAvg
moClass: equipment:RackUnitPsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentOutputVoltage

Fault Code: F39557

Message: Threshold Crossed: equipment:RackUnitPsuStats property: outputVoltage

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39557
mibFaultName: tcaEquipmentOutputVoltage
moClass: equipment:RackUnitPsuStats
Type: generic
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentOutputVoltageMin

Fault Code: F39559

Message: Threshold Crossed: equipment:RackUnitPsuStats property: outputVoltageMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39559
mibFaultName: tcaEquipmentOutputVoltageMin
moClass: equipment:RackUnitPsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentOutputVoltageMax

Fault Code: F39560

Message: Threshold Crossed: equipment:RackUnitPsuStats property: outputVoltageMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39560
mibFaultName: tcaEquipmentOutputVoltageMax
moClass: equipment:RackUnitPsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentOutputVoltageAvg

Fault Code: F39561

Message: Threshold Crossed: equipment:RackUnitPsuStats property: outputVoltageAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39561
mibFaultName: tcaEquipmentOutputVoltageAvg
moClass: equipment:RackUnitPsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentInputVoltage

Fault Code: F39565

Message: Threshold Crossed: equipment:RackUnitPsuStats property: inputVoltage

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39565
mibFaultName: tcaEquipmentInputVoltage
moClass: equipment:RackUnitPsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentInputVoltageMin

Fault Code: F39567

Message: Threshold Crossed: equipment:RackUnitPsuStats property: inputVoltageMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39567
mibFaultName: tcaEquipmentInputVoltageMin
moClass: equipment:RackUnitPsuStats
```

```
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentInputVoltageMax

Fault Code: F39568

Message: Threshold Crossed: equipment:RackUnitPsuStats property: inputVoltageMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39568
mibFaultName: tcaEquipmentInputVoltageMax
moClass: equipment:RackUnitPsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentInputVoltageAvg

Fault Code: F39569

Message: Threshold Crossed: equipment:RackUnitPsuStats property: inputVoltageAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39569
mibFaultName: tcaEquipmentInputVoltageAvg
moClass: equipment:RackUnitPsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentSpeed

Fault Code: F39575

Message: Threshold Crossed: equipment:RackUnitFanStats property: speed

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39575
mibFaultName: tcaEquipmentSpeed
moClass: equipment:RackUnitFanStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats
```

tcaEquipmentSpeedMin

Fault Code: F39577

Message: Threshold Crossed: equipment:RackUnitFanStats property: speedMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39577
mibFaultName: tcaEquipmentSpeedMin
moClass: equipment:RackUnitFanStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats
```

tcaEquipmentSpeedMax

Fault Code: F39578

Message: Threshold Crossed: equipment:RackUnitFanStats property: speedMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39578
mibFaultName: tcaEquipmentSpeedMax
moClass: equipment:RackUnitFanStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats
```

tcaEquipmentSpeedAvg

Fault Code: F39579

Message: Threshold Crossed: equipment:RackUnitFanStats property: speedAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F39579
mibFaultName: tcaEquipmentSpeedAvg
moClass: equipment:RackUnitFanStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats
```

tcaComputeFrontTemp

Fault Code: F40092

Message: Threshold Crossed: compute:RackUnitMbTempStats property: frontTemp

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40092
mibFaultName: tcaComputeFrontTemp
moClass: compute:RackUnitMbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeFrontTempMin

Fault Code: F40094

Message: Threshold Crossed: compute:RackUnitMbTempStats property: frontTempMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40094
mibFaultName: tcaComputeFrontTempMin
moClass: compute:RackUnitMbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeFrontTempMax

Fault Code: F40095

Message: Threshold Crossed: compute:RackUnitMbTempStats property: frontTempMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40095
mibFaultName: tcaComputeFrontTempMax
moClass: compute:RackUnitMbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeFrontTempAvg

Fault Code: F40096

Message: Threshold Crossed: compute:RackUnitMbTempStats property: frontTempAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40096
mibFaultName: tcaComputeFrontTempAvg
moClass: compute:RackUnitMbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeRearTemp

Fault Code: F40100

Message: Threshold Crossed: compute:RackUnitMbTempStats property: rearTemp

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40100
mibFaultName: tcaComputeRearTemp
moClass: compute:RackUnitMbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeRearTempMin

Fault Code: F40102

Message: Threshold Crossed: compute:RackUnitMbTempStats property: rearTempMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40102
mibFaultName: tcaComputeRearTempMin
moClass: compute:RackUnitMbTempStats
Type: server
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeRearTempMax

Fault Code: F40103

Message: Threshold Crossed: compute:RackUnitMbTempStats property: rearTempMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40103
mibFaultName: tcaComputeRearTempMax
moClass: compute:RackUnitMbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeRearTempAvg

Fault Code: F40104

Message: Threshold Crossed: compute:RackUnitMbTempStats property: rearTempAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40104
mibFaultName: tcaComputeRearTempAvg
moClass: compute:RackUnitMbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeAmbientTemp

Fault Code: F40108

Message: Threshold Crossed: compute:RackUnitMbTempStats property: ambientTemp

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40108
mibFaultName: tcaComputeAmbientTemp
moClass: compute:RackUnitMbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeAmbientTempMin

Fault Code: F40110

Message: Threshold Crossed: compute:RackUnitMbTempStats property: ambientTempMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40110
mibFaultName: tcaComputeAmbientTempMin
moClass: compute:RackUnitMbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeAmbientTempMax

Fault Code: F40111

Message: Threshold Crossed: compute:RackUnitMbTempStats property: ambientTempMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40111
mibFaultName: tcaComputeAmbientTempMax
moClass: compute:RackUnitMbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeAmbientTempAvg

Fault Code: F40112

Message: Threshold Crossed: compute:RackUnitMbTempStats property: ambientTempAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40112
mibFaultName: tcaComputeAmbientTempAvg
moClass: compute:RackUnitMbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeIoh1Temp

Fault Code: F40116

Message: Threshold Crossed: compute:RackUnitMbTempStats property: ioh1Temp

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40116
mibFaultName: tcaComputeIoh1Temp
moClass: compute:RackUnitMbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeIoh1TempMin

Fault Code: F40118

Message: Threshold Crossed: compute:RackUnitMbTempStats property: ioh1TempMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40118
mibFaultName: tcaComputeIoh1TempMin
moClass: compute:RackUnitMbTempStats
Type: server
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeIoh1TempMax

Fault Code: F40119

Message: Threshold Crossed: compute:RackUnitMbTempStats property: ioh1TempMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40119
mibFaultName: tcaComputeIoh1TempMax
moClass: compute:RackUnitMbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeIoh1TempAvg

Fault Code: F40120

Message: Threshold Crossed: compute:RackUnitMbTempStats property: ioh1TempAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40120
mibFaultName: tcaComputeIoh1TempAvg
moClass: compute:RackUnitMbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeIoh2Temp

Fault Code: F40124

Message: Threshold Crossed: compute:RackUnitMbTempStats property: ioh2Temp

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40124
mibFaultName: tcaComputeIoh2Temp
moClass: compute:RackUnitMbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeIoh2TempMin

Fault Code: F40126

Message: Threshold Crossed: compute:RackUnitMbTempStats property: ioh2TempMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40126
mibFaultName: tcaComputeIoh2TempMin
moClass: compute:RackUnitMbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeIoh2TempMax

Fault Code: F40127

Message: Threshold Crossed: compute:RackUnitMbTempStats property: ioh2TempMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40127
mibFaultName: tcaComputeIoh2TempMax
moClass: compute:RackUnitMbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeIoh2TempAvg

Fault Code: F40128

Message: Threshold Crossed: compute:RackUnitMbTempStats property: ioh2TempAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40128
mibFaultName: tcaComputeIoh2TempAvg
moClass: compute:RackUnitMbTempStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaEquipmentCurrent

Fault Code: F40547

Message: Threshold Crossed: equipment:PsuOutputStats property: current

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40547
mibFaultName: tcaEquipmentCurrent
moClass: equipment:PsuOutputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/output-stats
Affected MO: sys/fex-[id]/psu-[id]/output-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/output-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/output-stats
Affected MO: sys/switch-[id]/psu-[id]/output-stats
```

tcaEquipmentCurrentMin

Fault Code: F40549

Message: Threshold Crossed: equipment:PsuOutputStats property: currentMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40549
mibFaultName: tcaEquipmentCurrentMin
moClass: equipment:PsuOutputStats
```

```
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/output-stats
Affected MO: sys/fex-[id]/psu-[id]/output-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/output-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/output-stats
Affected MO: sys/switch-[id]/psu-[id]/output-stats
```

tcaEquipmentCurrentMax

Fault Code: F40550

Message: Threshold Crossed: equipment:PsuOutputStats property: currentMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40550
mibFaultName: tcaEquipmentCurrentMax
moClass: equipment:PsuOutputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/output-stats
Affected MO: sys/fex-[id]/psu-[id]/output-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/output-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/output-stats
Affected MO: sys/switch-[id]/psu-[id]/output-stats
```

tcaEquipmentCurrentAvg

Fault Code: F40551

Message: Threshold Crossed: equipment:PsuOutputStats property: currentAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40551
mibFaultName: tcaEquipmentCurrentAvg
moClass: equipment:PsuOutputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/output-stats
Affected MO: sys/fex-[id]/psu-[id]/output-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/output-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/output-stats
Affected MO: sys/switch-[id]/psu-[id]/output-stats
```

tcaEquipmentVoltage

Fault Code: F40555

Message: Threshold Crossed: equipment:PsuOutputStats property: voltage

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40555
mibFaultName: tcaEquipmentVoltage
moClass: equipment:PsuOutputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/output-stats
Affected MO: sys/fex-[id]/psu-[id]/output-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/output-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/output-stats
Affected MO: sys/switch-[id]/psu-[id]/output-stats
```

tcaEquipmentVoltageMin

Fault Code: F40557

Message: Threshold Crossed: equipment:PsuOutputStats property: voltageMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40557
mibFaultName: tcaEquipmentVoltageMin
moClass: equipment:PsuOutputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/output-stats
Affected MO: sys/fex-[id]/psu-[id]/output-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/output-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/output-stats
Affected MO: sys/switch-[id]/psu-[id]/output-stats
```

tcaEquipmentVoltageMax

Fault Code: F40558

Message: Threshold Crossed: equipment:PsuOutputStats property: voltageMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40558
```

```
mibFaultName: tcaEquipmentVoltageMax
moClass: equipment:PsuOutputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/output-stats
Affected MO: sys/fex-[id]/psu-[id]/output-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/output-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/output-stats
Affected MO: sys/switch-[id]/psu-[id]/output-stats
```

tcaEquipmentVoltageAvg

Fault Code: F40559

Message: Threshold Crossed: equipment:PsuOutputStats property: voltageAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40559
mibFaultName: tcaEquipmentVoltageAvg
moClass: equipment:PsuOutputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/output-stats
Affected MO: sys/fex-[id]/psu-[id]/output-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/output-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/output-stats
Affected MO: sys/switch-[id]/psu-[id]/output-stats
```

tcaEquipmentPower

Fault Code: F40563

Message: Threshold Crossed: equipment:PsuOutputStats property: power

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40563
mibFaultName: tcaEquipmentPower
moClass: equipment:PsuOutputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/output-stats
Affected MO: sys/fex-[id]/psu-[id]/output-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/output-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/output-stats
Affected MO: sys/switch-[id]/psu-[id]/output-stats
```

tcaEquipmentPowerMin

Fault Code: F40565

Message: Threshold Crossed: equipment:PsuOutputStats property: powerMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40565
mibFaultName: tcaEquipmentPowerMin
moClass: equipment:PsuOutputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/output-stats
Affected MO: sys/fex-[id]/psu-[id]/output-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/output-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/output-stats
Affected MO: sys/switch-[id]/psu-[id]/output-stats
```

tcaEquipmentPowerMax

Fault Code: F40566

Message: Threshold Crossed: equipment:PsuOutputStats property: powerMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40566
mibFaultName: tcaEquipmentPowerMax
moClass: equipment:PsuOutputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/output-stats
Affected MO: sys/fex-[id]/psu-[id]/output-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/output-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/output-stats
Affected MO: sys/switch-[id]/psu-[id]/output-stats
```

tcaEquipmentPowerAvg

Fault Code: F40567

Message: Threshold Crossed: equipment:PsuOutputStats property: powerAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40567
mibFaultName: tcaEquipmentPowerAvg
moClass: equipment:PsuOutputStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/output-stats
Affected MO: sys/fex-[id]/psu-[id]/output-stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/output-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/output-stats
Affected MO: sys/switch-[id]/psu-[id]/output-stats
```

tcaEquipmentSpeed

Fault Code: F40574

Message: Threshold Crossed: equipment:NetworkElementFanStats property: speed

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40574
mibFaultName: tcaEquipmentSpeed
moClass: equipment:NetworkElementFanStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats
```

tcaEquipmentSpeedMin

Fault Code: F40576

Message: Threshold Crossed: equipment:NetworkElementFanStats property: speedMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F40576
mibFaultName: tcaEquipmentSpeedMin
moClass: equipment:NetworkElementFanStats
Type: generic
```

autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaEquipmentSpeedMax

Fault Code: F40577

Message: Threshold Crossed: equipment:NetworkElementFanStats property: speedMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F40577
mibFaultName: tcaEquipmentSpeedMax
moClass: equipment:NetworkElementFanStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaEquipmentSpeedAvg

Fault Code: F40578

Message: Threshold Crossed: equipment:NetworkElementFanStats property: speedAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F40578
mibFaultName: tcaEquipmentSpeedAvg
moClass: equipment:NetworkElementFanStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats

Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaEquipmentDrivePercentage

Fault Code: F40582

Message: Threshold Crossed: equipment:NetworkElementFanStats property: drivePercentage

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F40582
mibFaultName: tcaEquipmentDrivePercentage
moClass: equipment:NetworkElementFanStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaEquipmentDrivePercentageMin

Fault Code: F40584

Message: Threshold Crossed: equipment:NetworkElementFanStats property: drivePercentageMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F40584
mibFaultName: tcaEquipmentDrivePercentageMin
moClass: equipment:NetworkElementFanStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats

Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaEquipmentDrivePercentageMax

Fault Code: F40585

Message: Threshold Crossed: equipment:NetworkElementFanStats property: drivePercentageMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F40585
mibFaultName: tcaEquipmentDrivePercentageMax
moClass: equipment:NetworkElementFanStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaEquipmentDrivePercentageAvg

Fault Code: F40586

Message: Threshold Crossed: equipment:NetworkElementFanStats property: drivePercentageAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F40586
mibFaultName: tcaEquipmentDrivePercentageAvg
moClass: equipment:NetworkElementFanStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats

Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaSwSlotOutlet1

Fault Code: F41199

Message: Threshold Crossed: sw:CardEnvStats property: SlotOutlet1

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41199
mibFaultName: tcaSwSlotOutlet1
moClass: sw:CardEnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/cardenvstats

tcaSwSlotOutlet1Min

Fault Code: F41201

Message: Threshold Crossed: sw:CardEnvStats property: SlotOutlet1Min

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41201
mibFaultName: tcaSwSlotOutlet1Min
moClass: sw:CardEnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/cardenvstats

tcaSwSlotOutlet1Max

Fault Code: F41202

Message: Threshold Crossed: sw:CardEnvStats property: SlotOutlet1Max

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41202
mibFaultName: tcaSwSlotOutlet1Max

```
moClass: sw:CardEnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/cardenvstats
```

tcaSwSlotOutlet1Avg

Fault Code: F41203

Message: Threshold Crossed: sw:CardEnvStats property: SlotOutlet1Avg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F41203
mibFaultName: tcaSwSlotOutlet1Avg
moClass: sw:CardEnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/cardenvstats
```

tcaSwSlotOutlet2

Fault Code: F41207

Message: Threshold Crossed: sw:CardEnvStats property: SlotOutlet2

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F41207
mibFaultName: tcaSwSlotOutlet2
moClass: sw:CardEnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/cardenvstats
```

tcaSwSlotOutlet2Min

Fault Code: F41209

Message: Threshold Crossed: sw:CardEnvStats property: SlotOutlet2Min

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
```

```
mibFaultCode: F41209
mibFaultName: tcaSwSlotOutlet2Min
moClass: sw:CardEnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/cardenvstats
```

tcaSwSlotOutlet2Max

Fault Code: F41210

Message: Threshold Crossed: sw:CardEnvStats property: SlotOutlet2Max

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F41210
mibFaultName: tcaSwSlotOutlet2Max
moClass: sw:CardEnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/cardenvstats
```

tcaSwSlotOutlet2Avg

Fault Code: F41211

Message: Threshold Crossed: sw:CardEnvStats property: SlotOutlet2Avg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F41211
mibFaultName: tcaSwSlotOutlet2Avg
moClass: sw:CardEnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/cardenvstats
```

tcaSwSlotOutlet3

Fault Code: F41215

Message: Threshold Crossed: sw:CardEnvStats property: SlotOutlet3

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F41215
mibFaultName: tcaSwSlotOutlet3
moClass: sw:CardEnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/cardenvstats
```

tcaSwSlotOutlet3Min

Fault Code: F41217

Message: Threshold Crossed: sw:CardEnvStats property: SlotOutlet3Min

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F41217
mibFaultName: tcaSwSlotOutlet3Min
moClass: sw:CardEnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/cardenvstats
```

tcaSwSlotOutlet3Max

Fault Code: F41218

Message: Threshold Crossed: sw:CardEnvStats property: SlotOutlet3Max

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F41218
mibFaultName: tcaSwSlotOutlet3Max
moClass: sw:CardEnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/cardenvstats
```

tcaSwSlotOutlet3Avg

Fault Code: F41219

Message: Threshold Crossed: sw:CardEnvStats property: SlotOutlet3Avg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F41219
mibFaultName: tcaSwSlotOutlet3Avg
moClass: sw:CardEnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/cardenvstats
```

tcaEtherPacketsTxDelta

Fault Code: F41289

Message: Threshold Crossed: ether:FcoeInterfaceStats property: packetsTxDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F41289
mibFaultName: tcaEtherPacketsTxDelta
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherPacketsTxDeltaMin

Fault Code: F41290

Message: Threshold Crossed: ether:FcoeInterfaceStats property: packetsTxDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41290
mibFaultName: tcaEtherPacketsTxDeltaMin
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:

fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherPacketsTxDeltaMax

Fault Code: F41291

Message: Threshold Crossed: ether:FcoeInterfaceStats property: packetsTxDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41291
mibFaultName: tcaEtherPacketsTxDeltaMax
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:

fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherPacketsTxDeltaAvg

Fault Code: F41292

Message: Threshold Crossed: ether:FcoeInterfaceStats property: packetsTxDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41292
mibFaultName: tcaEtherPacketsTxDeltaAvg
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats

Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherPacketsRxDelta

Fault Code: F41299

Message: Threshold Crossed: ether:FcoeInterfaceStats property: packetsRxDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41299
mibFaultName: tcaEtherPacketsRxDelta
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherPacketsRxDeltaMin

Fault Code: F41300

Message: Threshold Crossed: ether:FcoeInterfaceStats property: packetsRxDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41300
mibFaultName: tcaEtherPacketsRxDeltaMin
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:

fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherPacketsRxDeltaMax

Fault Code: F41301

Message: Threshold Crossed: ether:FcoeInterfaceStats property: packetsRxDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41301
mibFaultName: tcaEtherPacketsRxDeltaMax
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherPacketsRxDeltaAvg

Fault Code: F41302

Message: Threshold Crossed: ether:FcoeInterfaceStats property: packetsRxDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41302
mibFaultName: tcaEtherPacketsRxDeltaAvg
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:

fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherBytesTxDelta

Fault Code: F41309

Message: Threshold Crossed: ether:FcoeInterfaceStats property: bytesTxDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41309
mibFaultName: tcaEtherBytesTxDelta
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:

fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherBytesTxDeltaMin

Fault Code: F41310

Message: Threshold Crossed: ether:FcoeInterfaceStats property: bytesTxDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41310
mibFaultName: tcaEtherBytesTxDeltaMin
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherBytesTxDeltaMax

Fault Code: F41311

Message: Threshold Crossed: ether:FcoeInterfaceStats property: bytesTxDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed

mibFaultCode: F41311
mibFaultName: tcaEtherBytesTxDeltaMax
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherBytesTxDeltaAvg

Fault Code: F41312

Message: Threshold Crossed: ether:FcoeInterfaceStats property: bytesTxDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41312
mibFaultName: tcaEtherBytesTxDeltaAvg
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats

Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherBytesRxDelta

Fault Code: F41319

Message: Threshold Crossed: ether:FcoeInterfaceStats property: bytesRxDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41319
mibFaultName: tcaEtherBytesRxDelta
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherBytesRxDeltaMin

Fault Code: F41320

Message: Threshold Crossed: ether:FcoeInterfaceStats property: bytesRxDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41320
mibFaultName: tcaEtherBytesRxDeltaMin
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:

fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherBytesRxDeltaMax

Fault Code: F41321

Message: Threshold Crossed: ether:FcoeInterfaceStats property: bytesRxDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41321
mibFaultName: tcaEtherBytesRxDeltaMax
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats

Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherBytesRxDeltaAvg

Fault Code: F41322

Message: Threshold Crossed: ether:FcoeInterfaceStats property: bytesRxDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41322
mibFaultName: tcaEtherBytesRxDeltaAvg
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats

Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherErrorsTxDelta

Fault Code: F41329

Message: Threshold Crossed: ether:FcoeInterfaceStats property: errorsTxDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41329
mibFaultName: tcaEtherErrorsTxDelta
moClass: ether:FcoeInterfaceStats
Type: server

autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherErrorsTxDeltaMin

Fault Code: F41330

Message: Threshold Crossed: ether:FcoeInterfaceStats property: errorsTxDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41330
mibFaultName: tcaEtherErrorsTxDeltaMin
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherErrorsTxDeltaMax

Fault Code: F41331

Message: Threshold Crossed: ether:FcoeInterfaceStats property: errorsTxDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F41331
mibFaultName: tcaEtherErrorsTxDeltaMax
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
```

fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherErrorsTxDeltaAvg

Fault Code: F41332

Message: Threshold Crossed: ether:FcoeInterfaceStats property: errorsTxDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41332
mibFaultName: tcaEtherErrorsTxDeltaAvg
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherErrorsRxDelta

Fault Code: F41339

Message: Threshold Crossed: ether:FcoeInterfaceStats property: errorsRxDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41339
mibFaultName: tcaEtherErrorsRxDelta
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:

fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherErrorsRxDeltaMin

Fault Code: F41340

Message: Threshold Crossed: ether:FcoeInterfaceStats property: errorsRxDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41340
mibFaultName: tcaEtherErrorsRxDeltaMin
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:

fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherErrorsRxDeltaMax

Fault Code: F41341

Message: Threshold Crossed: ether:FcoeInterfaceStats property: errorsRxDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41341
mibFaultName: tcaEtherErrorsRxDeltaMax
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherErrorsRxDeltaAvg

Fault Code: F41342

Message: Threshold Crossed: ether:FcoeInterfaceStats property: errorsRxDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed

mibFaultCode: F41342
mibFaultName: tcaEtherErrorsRxDeltaAvg
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherDroppedTxDelta

Fault Code: F41349

Message: Threshold Crossed: ether:FcoeInterfaceStats property: droppedTxDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41349
mibFaultName: tcaEtherDroppedTxDelta
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats

Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherDroppedTxDeltaMin

Fault Code: F41350

Message: Threshold Crossed: ether:FcoeInterfaceStats property: droppedTxDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41350
mibFaultName: tcaEtherDroppedTxDeltaMin
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherDroppedTxDeltaMax

Fault Code: F41351

Message: Threshold Crossed: ether:FcoeInterfaceStats property: droppedTxDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41351
mibFaultName: tcaEtherDroppedTxDeltaMax
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:

fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherDroppedTxDeltaAvg

Fault Code: F41352

Message: Threshold Crossed: ether:FcoeInterfaceStats property: droppedTxDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41352
mibFaultName: tcaEtherDroppedTxDeltaAvg
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats

Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherDroppedRxDelta

Fault Code: F41359

Message: Threshold Crossed: ether:FcoeInterfaceStats property: droppedRxDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41359
mibFaultName: tcaEtherDroppedRxDelta
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats

Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherDroppedRxDeltaMin

Fault Code: F41360

Message: Threshold Crossed: ether:FcoeInterfaceStats property: droppedRxDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41360
mibFaultName: tcaEtherDroppedRxDeltaMin
moClass: ether:FcoeInterfaceStats
Type: server

autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherDroppedRxDeltaMax

Fault Code: F41361

Message: Threshold Crossed: ether:FcoeInterfaceStats property: droppedRxDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41361
mibFaultName: tcaEtherDroppedRxDeltaMax
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherDroppedRxDeltaAvg

Fault Code: F41362

Message: Threshold Crossed: ether:FcoeInterfaceStats property: droppedRxDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F41362
mibFaultName: tcaEtherDroppedRxDeltaAvg
moClass: ether:FcoeInterfaceStats
Type: server
autoCleared: true
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/eth-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/fc-estc/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lan/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/lanmon/[id]/eth-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/sanmon/[id]/fc-mon-[name]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:

fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/pc-[portId]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO:
fabric/server/sw-[id]/slot-[slotId]-aggr-port-[aggrPortId]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherFrameTxDelta

Fault Code: F43294

Message: Threshold Crossed: ether:NiErrStats property: frameTxDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F43294
mibFaultName: tcaEtherFrameTxDelta
moClass: ether:NiErrStats
Type: equipment
autoCleared: true
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

tcaEtherFrameTxDeltaMin

Fault Code: F43295

Message: Threshold Crossed: ether:NiErrStats property: frameTxDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F43295
mibFaultName: tcaEtherFrameTxDeltaMin
moClass: ether:NiErrStats
Type: equipment
autoCleared: true
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
```

tcaEtherFrameTxDeltaMax

Fault Code: F43296

Message: Threshold Crossed: ether:NiErrStats property: frameTxDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F43296
mibFaultName: tcaEtherFrameTxDeltaMax
moClass: ether:NiErrStats
Type: equipment
autoCleared: true
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
```

sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

tcaEtherFrameTxDeltaAvg

Fault Code: F43297

Message: Threshold Crossed: ether:NiErrStats property: frameTxDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F43297
mibFaultName: tcaEtherFrameTxDeltaAvg
moClass: ether:NiErrStats
Type: equipment
autoCleared: true
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

tcaEtherTooLongDelta

Fault Code: F43304

Message: Threshold Crossed: ether:NiErrStats property: tooLongDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F43304
mibFaultName: tcaEtherTooLongDelta
moClass: ether:NiErrStats
Type: equipment
autoCleared: true
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
```

tcaEtherTooLongDeltaMin

Fault Code: F43305

Message: Threshold Crossed: ether:NiErrStats property: tooLongDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F43305
mibFaultName: tcaEtherTooLongDeltaMin
moClass: ether:NiErrStats
Type: equipment
autoCleared: true
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
```

Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

tcaEtherTooLongDeltaMax

Fault Code: F43306

Message: Threshold Crossed: ether:NiErrStats property: tooLongDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F43306
mibFaultName: tcaEtherTooLongDeltaMax
moClass: ether:NiErrStats
Type: equipment
autoCleared: true
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

tcaEtherTooLongDeltaAvg

Fault Code: F43307

Message: Threshold Crossed: ether:NiErrStats property: tooLongDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F43307
mibFaultName: tcaEtherTooLongDeltaAvg
moClass: ether:NiErrStats
Type: equipment
autoCleared: true
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
```

tcaEtherTooShortDelta

Fault Code: F43314

Message: Threshold Crossed: ether:NiErrStats property: tooShortDelta

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F43314
mibFaultName: tcaEtherTooShortDelta
moClass: ether:NiErrStats
Type: equipment
autoCleared: true
```

Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

tcaEtherTooShortDeltaMin

Fault Code: F43315

Message: Threshold Crossed: ether:NiErrStats property: tooShortDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F43315
mibFaultName: tcaEtherTooShortDeltaMin
moClass: ether:NiErrStats
Type: equipment
autoCleared: true
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

Affected MO:
sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

tcaEtherTooShortDeltaMax

Fault Code: F43316

Message: Threshold Crossed: ether:NiErrStats property: tooShortDeltaMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F43316
mibFaultName: tcaEtherTooShortDeltaMax
moClass: ether:NiErrStats
Type: equipment
autoCleared: true
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

tcaEtherTooShortDeltaAvg

Fault Code: F43317

Message: Threshold Crossed: ether:NiErrStats property: tooShortDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed

mibFaultCode: F43317
mibFaultName: tcaEtherTooShortDeltaAvg
moClass: ether:NiErrStats
Type: equipment
autoCleared: true
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

tcaEtherCrcDelta

Fault Code: F43324

Message: Threshold Crossed: ether:NiErrStats property: crcDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F43324
mibFaultName: tcaEtherCrcDelta
moClass: ether:NiErrStats
Type: equipment
autoCleared: true
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats

Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

tcaEtherCrcDeltaMin

Fault Code: F43325

Message: Threshold Crossed: ether:NiErrStats property: crcDeltaMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F43325
mibFaultName: tcaEtherCrcDeltaMin
moClass: ether:NiErrStats
Type: equipment
autoCleared: true
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

tcaEtherCrcDeltaMax

Fault Code: F43326

Message: Threshold Crossed: ether:NiErrStats property: crcDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F43326
mibFaultName: tcaEtherCrcDeltaMax
moClass: ether:NiErrStats
Type: equipment
autoCleared: true
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
```

tcaEtherCrcDeltaAvg

Fault Code: F43327

Message: Threshold Crossed: ether:NiErrStats property: crcDeltaAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F43327
mibFaultName: tcaEtherCrcDeltaAvg
moClass: ether:NiErrStats
Type: equipment
autoCleared: true
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
```

sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

tcaEtherInRangeDelta

Fault Code: F43334

Message: Threshold Crossed: ether:NiErrStats property: inRangeDelta

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F43334
mibFaultName: tcaEtherInRangeDelta
moClass: ether:NiErrStats
Type: equipment
autoCleared: true
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

tcaEtherInRangeDeltaMin

Fault Code: F43335

Message: Threshold Crossed: ether:NiErrStats property: inRangeDeltaMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F43335
mibFaultName: tcaEtherInRangeDeltaMin
moClass: ether:NiErrStats
Type: equipment
autoCleared: true
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
```

tcaEtherInRangeDeltaMax

Fault Code: F43336

Message: Threshold Crossed: ether:NiErrStats property: inRangeDeltaMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F43336
mibFaultName: tcaEtherInRangeDeltaMax
moClass: ether:NiErrStats
Type: equipment
autoCleared: true
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
```

Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

tcaEtherInRangeDeltaAvg

Fault Code: F43337

Message: Threshold Crossed: ether:NiErrStats property: inRangeDeltaAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F43337
mibFaultName: tcaEtherInRangeDeltaAvg
moClass: ether:NiErrStats
Type: equipment
autoCleared: true
Affected MO:
sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO:
sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/pc-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

tcaEquipmentProcTemp

Fault Code: F44131

Message: Threshold Crossed: equipment:IOCardStats property: procTemp

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F44131
mibFaultName: tcaEquipmentProcTemp
moClass: equipment:IOCardStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats
```

tcaEquipmentProcTempMin

Fault Code: F44133

Message: Threshold Crossed: equipment:IOCardStats property: procTempMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F44133
mibFaultName: tcaEquipmentProcTempMin
moClass: equipment:IOCardStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats
```

tcaEquipmentProcTempMax

Fault Code: F44134

Message: Threshold Crossed: equipment:IOCardStats property: procTempMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F44134
mibFaultName: tcaEquipmentProcTempMax
```

```
moClass: equipment:IOCardStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats
```

tcaEquipmentProcTempAvg

Fault Code: F44135

Message: Threshold Crossed: equipment:IOCardStats property: procTempAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F44135
mibFaultName: tcaEquipmentProcTempAvg
moClass: equipment:IOCardStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats
```

tcaEquipmentDimmTemp

Fault Code: F44139

Message: Threshold Crossed: equipment:IOCardStats property: dimmTemp

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F44139
mibFaultName: tcaEquipmentDimmTemp
moClass: equipment:IOCardStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats
```

tcaEquipmentDimmTempMin

Fault Code: F44141

Message: Threshold Crossed: equipment:IOCardStats property: dimmTempMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F44141
mibFaultName: tcaEquipmentDimmTempMin
moClass: equipment:IOCardStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats
```

tcaEquipmentDimmTempMax

Fault Code: F44142

Message: Threshold Crossed: equipment:IOCardStats property: dimmTempMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F44142
mibFaultName: tcaEquipmentDimmTempMax
moClass: equipment:IOCardStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats
```

tcaEquipmentDimmTempAvg

Fault Code: F44143

Message: Threshold Crossed: equipment:IOCardStats property: dimmTempAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F44143
mibFaultName: tcaEquipmentDimmTempAvg
moClass: equipment:IOCardStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats
```

tcaStorageTemperature

Fault Code: F44217

Message: Threshold Crossed: storage:DiskEnvStats property: temperature

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F44217
mibFaultName: tcaStorageTemperature
moClass: storage:DiskEnvStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/disk-env-stats
```

tcaStorageTemperatureMin

Fault Code: F44219

Message: Threshold Crossed: storage:DiskEnvStats property: temperatureMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F44219
mibFaultName: tcaStorageTemperatureMin
moClass: storage:DiskEnvStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/disk-env-stats
Affected MO:
```

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/disk-env-stats

tcaStorageTemperatureMax

Fault Code: F44220

Message: Threshold Crossed: storage:DiskEnvStats property: temperatureMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F44220
mibFaultName: tcaStorageTemperatureMax
moClass: storage:DiskEnvStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/disk-env-stats

tcaStorageTemperatureAvg

Fault Code: F44221

Message: Threshold Crossed: storage:DiskEnvStats property: temperatureAvg

Explanation:

Recommended Action:

Fault Details

Severity: info

Cause: threshold-crossed
mibFaultCode: F44221
mibFaultName: tcaStorageTemperatureAvg
moClass: storage:DiskEnvStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/disk-env-stats

tcaStorageWearPercentage

Fault Code: F44225

Message: Threshold Crossed: storage:DiskEnvStats property: wearPercentage

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F44225
mibFaultName: tcaStorageWearPercentage
moClass: storage:DiskEnvStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/disk-env-stats

tcaStorageWearPercentageMin

Fault Code: F44227

Message: Threshold Crossed: storage:DiskEnvStats property: wearPercentageMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F44227
mibFaultName: tcaStorageWearPercentageMin
moClass: storage:DiskEnvStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/disk-env-stats
```

tcaStorageWearPercentageMax

Fault Code: F44228

Message: Threshold Crossed: storage:DiskEnvStats property: wearPercentageMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F44228
mibFaultName: tcaStorageWearPercentageMax
moClass: storage:DiskEnvStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/disk-env-stats
Affected MO:
```

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/disk-env-stats

tcaStorageWearPercentageAvg

Fault Code: F44229

Message: Threshold Crossed: storage:DiskEnvStats property: wearPercentageAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F44229
mibFaultName: tcaStorageWearPercentageAvg
moClass: storage:DiskEnvStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/disk-env-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/disk-env-stats
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/disk-env-stats

tcaEquipmentInputPower

Fault Code: F44564

Message: Threshold Crossed: equipment:PsuStats property: inputPower

Explanation:

Recommended Action:

Fault Details

Severity: info

```
Cause: threshold-crossed
mibFaultCode: F44564
mibFaultName: tcaEquipmentInputPower
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentInputPowerMin

Fault Code: F44566

Message: Threshold Crossed: equipment:PsuStats property: inputPowerMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F44566
mibFaultName: tcaEquipmentInputPowerMin
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentInputPowerMax

Fault Code: F44567

Message: Threshold Crossed: equipment:PsuStats property: inputPowerMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F44567
mibFaultName: tcaEquipmentInputPowerMax
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentInputPowerAvg

Fault Code: F44568

Message: Threshold Crossed: equipment:PsuStats property: inputPowerAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F44568
mibFaultName: tcaEquipmentInputPowerAvg
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentChassisI2CErrors

Fault Code: F44728

Message: Threshold Crossed: equipment:ChassisStats property: ChassisI2CErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F44728
mibFaultName: tcaEquipmentChassisI2CErrors
moClass: equipment:ChassisStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/stats
```

tcaEquipmentIomI2CErrors

Fault Code: F44738

Message: Threshold Crossed: equipment:IOCardStats property: IomI2CErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F44738
mibFaultName: tcaEquipmentIomI2CErrors
```

```
moClass: equipment:IOCardStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats
```

tcaEquipmentPsuI2CErrors

Fault Code: F44748

Message: Threshold Crossed: equipment:PsuStats property: PsuI2CErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F44748
mibFaultName: tcaEquipmentPsuI2CErrors
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaSwDonner

Fault Code: F45019

Message: Threshold Crossed: sw:EnvStats property: donner

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45019
mibFaultName: tcaSwDonner
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwDonnerMin

Fault Code: F45021

Message: Threshold Crossed: sw:EnvStats property: donnerMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45021
mibFaultName: tcaSwDonnerMin
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwDonnerMax

Fault Code: F45022

Message: Threshold Crossed: sw:EnvStats property: donnerMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45022
mibFaultName: tcaSwDonnerMax
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwDonnerAvg

Fault Code: F45023

Message: Threshold Crossed: sw:EnvStats property: donnerAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45023
mibFaultName: tcaSwDonnerAvg
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwTd2

Fault Code: F45027

Message: Threshold Crossed: sw:EnvStats property: td2

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45027
mibFaultName: tcaSwTd2
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwTd2Min

Fault Code: F45029

Message: Threshold Crossed: sw:EnvStats property: td2Min

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45029
mibFaultName: tcaSwTd2Min
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwTd2Max

Fault Code: F45030

Message: Threshold Crossed: sw:EnvStats property: td2Max

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45030
mibFaultName: tcaSwTd2Max
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwTd2Avg

Fault Code: F45031

Message: Threshold Crossed: sw:EnvStats property: td2Avg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45031
mibFaultName: tcaSwTd2Avg
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwTiburon

Fault Code: F45035

Message: Threshold Crossed: sw:EnvStats property: tiburon

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45035
mibFaultName: tcaSwTiburon
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwTiburonMin

Fault Code: F45037

Message: Threshold Crossed: sw:EnvStats property: tiburonMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45037
mibFaultName: tcaSwTiburonMin
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwTiburonMax

Fault Code: F45038

Message: Threshold Crossed: sw:EnvStats property: tiburonMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45038
mibFaultName: tcaSwTiburonMax
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwTiburonAvg

Fault Code: F45039

Message: Threshold Crossed: sw:EnvStats property: tiburonAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45039
mibFaultName: tcaSwTiburonAvg
moClass: sw:EnvStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwKernelMemTotal

Fault Code: F45043

Message: Threshold Crossed: sw:SystemStats property: kernelMemTotal

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45043
mibFaultName: tcaSwKernelMemTotal
moClass: sw:SystemStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwKernelMemTotalMin

Fault Code: F45045

Message: Threshold Crossed: sw:SystemStats property: kernelMemTotalMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45045
mibFaultName: tcaSwKernelMemTotalMin
moClass: sw:SystemStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwKernelMemTotalMax

Fault Code: F45046

Message: Threshold Crossed: sw:SystemStats property: kernelMemTotalMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45046
mibFaultName: tcaSwKernelMemTotalMax
moClass: sw:SystemStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwKernelMemTotalAvg

Fault Code: F45047

Message: Threshold Crossed: sw:SystemStats property: kernelMemTotalAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45047
mibFaultName: tcaSwKernelMemTotalAvg
moClass: sw:SystemStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwKernelMemFree

Fault Code: F45051

Message: Threshold Crossed: sw:SystemStats property: kernelMemFree

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45051
mibFaultName: tcaSwKernelMemFree
moClass: sw:SystemStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwKernelMemFreeMin

Fault Code: F45053

Message: Threshold Crossed: sw:SystemStats property: kernelMemFreeMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45053
mibFaultName: tcaSwKernelMemFreeMin
moClass: sw:SystemStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwKernelMemFreeMax

Fault Code: F45054

Message: Threshold Crossed: sw:SystemStats property: kernelMemFreeMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45054
mibFaultName: tcaSwKernelMemFreeMax
moClass: sw:SystemStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwKernelMemFreeAvg

Fault Code: F45055

Message: Threshold Crossed: sw:SystemStats property: kernelMemFreeAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45055
mibFaultName: tcaSwKernelMemFreeAvg
moClass: sw:SystemStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/sysstats
```

tcaEquipmentMemAvailable

Fault Code: F45154

Message: Threshold Crossed: equipment:FexSystemStats property: memAvailable

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45154
mibFaultName: tcaEquipmentMemAvailable
moClass: equipment:FexSystemStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/sys-stats
```

tcaEquipmentMemAvailableMin

Fault Code: F45156

Message: Threshold Crossed: equipment:FexSystemStats property: memAvailableMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45156
mibFaultName: tcaEquipmentMemAvailableMin
moClass: equipment:FexSystemStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/sys-stats
```

tcaEquipmentMemAvailableMax

Fault Code: F45157

Message: Threshold Crossed: equipment:FexSystemStats property: memAvailableMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45157
mibFaultName: tcaEquipmentMemAvailableMax
moClass: equipment:FexSystemStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/sys-stats
```

tcaEquipmentMemAvailableAvg

Fault Code: F45158

Message: Threshold Crossed: equipment:FexSystemStats property: memAvailableAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45158
mibFaultName: tcaEquipmentMemAvailableAvg
moClass: equipment:FexSystemStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/sys-stats
```

tcaEquipmentMemCached

Fault Code: F45162

Message: Threshold Crossed: equipment:FexSystemStats property: memCached

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45162
mibFaultName: tcaEquipmentMemCached
moClass: equipment:FexSystemStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/sys-stats
```

tcaEquipmentMemCachedMin

Fault Code: F45164

Message: Threshold Crossed: equipment:FexSystemStats property: memCachedMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45164
mibFaultName: tcaEquipmentMemCachedMin
moClass: equipment:FexSystemStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/sys-stats
```

tcaEquipmentMemCachedMax

Fault Code: F45165

Message: Threshold Crossed: equipment:FexSystemStats property: memCachedMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45165
mibFaultName: tcaEquipmentMemCachedMax
moClass: equipment:FexSystemStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/sys-stats
```

tcaEquipmentMemCachedAvg

Fault Code: F45166

Message: Threshold Crossed: equipment:FexSystemStats property: memCachedAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45166
mibFaultName: tcaEquipmentMemCachedAvg
moClass: equipment:FexSystemStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/sys-stats
```

tcaEquipmentLoad

Fault Code: F45170

Message: Threshold Crossed: equipment:FexSystemStats property: load

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45170
mibFaultName: tcaEquipmentLoad
moClass: equipment:FexSystemStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/sys-stats
```

tcaEquipmentLoadMin

Fault Code: F45172

Message: Threshold Crossed: equipment:FexSystemStats property: loadMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45172
mibFaultName: tcaEquipmentLoadMin
moClass: equipment:FexSystemStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/sys-stats
```

tcaEquipmentLoadMax

Fault Code: F45173

Message: Threshold Crossed: equipment:FexSystemStats property: loadMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45173
mibFaultName: tcaEquipmentLoadMax
moClass: equipment:FexSystemStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/sys-stats
```

tcaEquipmentLoadAvg

Fault Code: F45174

Message: Threshold Crossed: equipment:FexSystemStats property: loadAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45174
mibFaultName: tcaEquipmentLoadAvg
moClass: equipment:FexSystemStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/sys-stats
```

tcaEquipmentKernelMemTotal

Fault Code: F45178

Message: Threshold Crossed: equipment:FexSystemStats property: kernelMemTotal

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45178
mibFaultName: tcaEquipmentKernelMemTotal
moClass: equipment:FexSystemStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/sys-stats
```

tcaEquipmentKernelMemTotalMin

Fault Code: F45180

Message: Threshold Crossed: equipment:FexSystemStats property: kernelMemTotalMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45180
mibFaultName: tcaEquipmentKernelMemTotalMin
moClass: equipment:FexSystemStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/sys-stats
```

tcaEquipmentKernelMemTotalMax

Fault Code: F45181

Message: Threshold Crossed: equipment:FexSystemStats property: kernelMemTotalMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45181
mibFaultName: tcaEquipmentKernelMemTotalMax
moClass: equipment:FexSystemStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/sys-stats
```

tcaEquipmentKernelMemTotalAvg

Fault Code: F45182

Message: Threshold Crossed: equipment:FexSystemStats property: kernelMemTotalAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45182
mibFaultName: tcaEquipmentKernelMemTotalAvg
moClass: equipment:FexSystemStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/sys-stats
```

tcaEquipmentKernelMemFree

Fault Code: F45186

Message: Threshold Crossed: equipment:FexSystemStats property: kernelMemFree

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45186
mibFaultName: tcaEquipmentKernelMemFree
moClass: equipment:FexSystemStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/sys-stats
```

tcaEquipmentKernelMemFreeMin

Fault Code: F45188

Message: Threshold Crossed: equipment:FexSystemStats property: kernelMemFreeMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45188
mibFaultName: tcaEquipmentKernelMemFreeMin
moClass: equipment:FexSystemStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/sys-stats
```

tcaEquipmentKernelMemFreeMax

Fault Code: F45189

Message: Threshold Crossed: equipment:FexSystemStats property: kernelMemFreeMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45189
mibFaultName: tcaEquipmentKernelMemFreeMax
moClass: equipment:FexSystemStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/sys-stats
```

tcaEquipmentKernelMemFreeAvg

Fault Code: F45190

Message: Threshold Crossed: equipment:FexSystemStats property: kernelMemFreeAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45190
mibFaultName: tcaEquipmentKernelMemFreeAvg
moClass: equipment:FexSystemStats
Type: generic
autoCleared: true
Affected MO: sys/fex-[id]/sys-stats
```

tcaSwCorrectableParityError

Fault Code: F45211

Message: Threshold Crossed: sw:SystemStats property: CorrectableParityError

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45211
mibFaultName: tcaSwCorrectableParityError
moClass: sw:SystemStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwCorrectableParityErrorMin

Fault Code: F45213

Message: Threshold Crossed: sw:SystemStats property: CorrectableParityErrorMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45213
mibFaultName: tcaSwCorrectableParityErrorMin
moClass: sw:SystemStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwCorrectableParityErrorMax

Fault Code: F45214

Message: Threshold Crossed: sw:SystemStats property: CorrectableParityErrorMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45214
mibFaultName: tcaSwCorrectableParityErrorMax
moClass: sw:SystemStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwCorrectableParityErrorAvg

Fault Code: F45215

Message: Threshold Crossed: sw:SystemStats property: CorrectableParityErrorAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45215
mibFaultName: tcaSwCorrectableParityErrorAvg
moClass: sw:SystemStats
Type: generic
autoCleared: true
Affected MO: sys/switch-[id]/sysstats
```

tcaEquipmentChassisI2CErrorsMin

Fault Code: F45266

Message: Threshold Crossed: equipment:ChassisStats property: ChassisI2CErrorsMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45266
mibFaultName: tcaEquipmentChassisI2CErrorsMin
moClass: equipment:ChassisStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/stats
```

tcaEquipmentChassisI2CErrorsMax

Fault Code: F45267

Message: Threshold Crossed: equipment:ChassisStats property: ChassisI2CErrorsMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45267
mibFaultName: tcaEquipmentChassisI2CErrorsMax
moClass: equipment:ChassisStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/stats
```

tcaEquipmentChassisI2CErrorsAvg

Fault Code: F45268

Message: Threshold Crossed: equipment:ChassisStats property: ChassisI2CErrorsAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45268
mibFaultName: tcaEquipmentChassisI2CErrorsAvg
moClass: equipment:ChassisStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/stats
```

tcaEquipmentIomI2CErrorsMin

Fault Code: F45272

Message: Threshold Crossed: equipment:IOCardStats property: IomI2CErrorsMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45272
mibFaultName: tcaEquipmentIomI2CErrorsMin
moClass: equipment:IOCardStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats
```

tcaEquipmentIomI2CErrorsMax

Fault Code: F45273

Message: Threshold Crossed: equipment:IOCardStats property: IomI2CErrorsMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45273
mibFaultName: tcaEquipmentIomI2CErrorsMax
moClass: equipment:IOCardStats
Type: generic
```

```
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats
```

tcaEquipmentIomI2CErrorsAvg

Fault Code: F45274

Message: Threshold Crossed: equipment:IOCardStats property: IomI2CErrorsAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45274
mibFaultName: tcaEquipmentIomI2CErrorsAvg
moClass: equipment:IOCardStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/chassis-[id]/sw-slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats
```

tcaEquipmentPsuI2CErrorsMin

Fault Code: F45278

Message: Threshold Crossed: equipment:PsuStats property: PsuI2CErrorsMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45278
mibFaultName: tcaEquipmentPsuI2CErrorsMin
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentPsuI2CErrorsMax

Fault Code: F45279

Message: Threshold Crossed: equipment:PsuStats property: PsuI2CErrorsMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45279
mibFaultName: tcaEquipmentPsuI2CErrorsMax
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentPsuI2CErrorsAvg

Fault Code: F45280

Message: Threshold Crossed: equipment:PsuStats property: PsuI2CErrorsAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45280
mibFaultName: tcaEquipmentPsuI2CErrorsAvg
moClass: equipment:PsuStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-enclosure-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentFanModuleI2CErrors

Fault Code: F45284

Message: Threshold Crossed: equipment:FanModuleStats property: FanModuleI2CErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45284
mibFaultName: tcaEquipmentFanModuleI2CErrors
moClass: equipment:FanModuleStats
Type: generic
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/stats
```

tcaEquipmentFanModuleI2CErrorsMin

Fault Code: F45286

Message: Threshold Crossed: equipment:FanModuleStats property: FanModuleI2CErrorsMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45286
mibFaultName: tcaEquipmentFanModuleI2CErrorsMin
moClass: equipment:FanModuleStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/stats
```

tcaEquipmentFanModuleI2CErrorsMax

Fault Code: F45287

Message: Threshold Crossed: equipment:FanModuleStats property: FanModuleI2CErrorsMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45287
mibFaultName: tcaEquipmentFanModuleI2CErrorsMax
moClass: equipment:FanModuleStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/stats
```

tcaEquipmentFanModuleI2CErrorsAvg

Fault Code: F45288

Message: Threshold Crossed: equipment:FanModuleStats property: FanModuleI2CErrorsAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45288
mibFaultName: tcaEquipmentFanModuleI2CErrorsAvg
moClass: equipment:FanModuleStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/stats
```

tcaStorageRightInletTemp

Fault Code: F45374

Message: Threshold Crossed: storage:HddMotherBoardTempStats property: rightInletTemp

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45374
mibFaultName: tcaStorageRightInletTemp
moClass: storage:HddMotherBoardTempStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/enc-[id]/hdd-mobo-temp-stats
```

tcaStorageRightInletTempMin

Fault Code: F45376

Message: Threshold Crossed: storage:HddMotherBoardTempStats property: rightInletTempMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45376
mibFaultName: tcaStorageRightInletTempMin
moClass: storage:HddMotherBoardTempStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/enc-[id]/hdd-mobo-temp-stats
```

tcaStorageRightInletTempMax

Fault Code: F45377

Message: Threshold Crossed: storage:HddMotherBoardTempStats property: rightInletTempMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45377
mibFaultName: tcaStorageRightInletTempMax
moClass: storage:HddMotherBoardTempStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/enc-[id]/hdd-mobo-temp-stats
```

tcaStorageRightInletTempAvg

Fault Code: F45378

Message: Threshold Crossed: storage:HddMotherBoardTempStats property: rightInletTempAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45378
mibFaultName: tcaStorageRightInletTempAvg
moClass: storage:HddMotherBoardTempStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/enc-[id]/hdd-mobo-temp-stats
```

tcaStorageLeftInletTemp

Fault Code: F45382

Message: Threshold Crossed: storage:HddMotherBoardTempStats property: leftInletTemp

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45382
mibFaultName: tcaStorageLeftInletTemp
moClass: storage:HddMotherBoardTempStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/enc-[id]/hdd-mobo-temp-stats
```

tcaStorageLeftInletTempMin

Fault Code: F45384

Message: Threshold Crossed: storage:HddMotherBoardTempStats property: leftInletTempMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45384
mibFaultName: tcaStorageLeftInletTempMin
moClass: storage:HddMotherBoardTempStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/enc-[id]/hdd-mobo-temp-stats
```

tcaStorageLeftInletTempMax

Fault Code: F45385

Message: Threshold Crossed: storage:HddMotherBoardTempStats property: leftInletTempMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45385
mibFaultName: tcaStorageLeftInletTempMax
moClass: storage:HddMotherBoardTempStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/enc-[id]/hdd-mobo-temp-stats
```

tcaStorageLeftInletTempAvg

Fault Code: F45386

Message: Threshold Crossed: storage:HddMotherBoardTempStats property: leftInletTempAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45386
mibFaultName: tcaStorageLeftInletTempAvg
moClass: storage:HddMotherBoardTempStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/enc-[id]/hdd-mobo-temp-stats
```

tcaStorageRightOutletTemp

Fault Code: F45390

Message: Threshold Crossed: storage:HddMotherBoardTempStats property: rightOutletTemp

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45390
mibFaultName: tcaStorageRightOutletTemp
moClass: storage:HddMotherBoardTempStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/enc-[id]/hdd-mobo-temp-stats
```

tcaStorageRightOutletTempMin

Fault Code: F45392

Message: Threshold Crossed: storage:HddMotherBoardTempStats property: rightOutletTempMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45392
mibFaultName: tcaStorageRightOutletTempMin
moClass: storage:HddMotherBoardTempStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/enc-[id]/hdd-mobo-temp-stats
```

tcaStorageRightOutletTempMax

Fault Code: F45393

Message: Threshold Crossed: storage:HddMotherBoardTempStats property: rightOutletTempMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45393
mibFaultName: tcaStorageRightOutletTempMax
moClass: storage:HddMotherBoardTempStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/enc-[id]/hdd-mobo-temp-stats
```

tcaStorageRightOutletTempAvg

Fault Code: F45394

Message: Threshold Crossed: storage:HddMotherBoardTempStats property: rightOutletTempAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45394
mibFaultName: tcaStorageRightOutletTempAvg
moClass: storage:HddMotherBoardTempStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/enc-[id]/hdd-mobo-temp-stats
```

tcaStorageLeftOutletTemp

Fault Code: F45398

Message: Threshold Crossed: storage:HddMotherBoardTempStats property: leftOutletTemp

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45398
mibFaultName: tcaStorageLeftOutletTemp
moClass: storage:HddMotherBoardTempStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/enc-[id]/hdd-mobo-temp-stats
```

tcaStorageLeftOutletTempMin

Fault Code: F45400

Message: Threshold Crossed: storage:HddMotherBoardTempStats property: leftOutletTempMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45400
mibFaultName: tcaStorageLeftOutletTempMin
moClass: storage:HddMotherBoardTempStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/enc-[id]/hdd-mobo-temp-stats
```

tcaStorageLeftOutletTempMax

Fault Code: F45401

Message: Threshold Crossed: storage:HddMotherBoardTempStats property: leftOutletTempMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45401
mibFaultName: tcaStorageLeftOutletTempMax
moClass: storage:HddMotherBoardTempStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/enc-[id]/hdd-mobo-temp-stats
```

tcaStorageLeftOutletTempAvg

Fault Code: F45402

Message: Threshold Crossed: storage:HddMotherBoardTempStats property: leftOutletTempAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45402
mibFaultName: tcaStorageLeftOutletTempAvg
moClass: storage:HddMotherBoardTempStats
Type: generic
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/hdd-mobo-temp-stats
Affected MO: sys/rack-unit-[id]/enc-[id]/hdd-mobo-temp-stats
```

tcaEquipmentRearTemp

Fault Code: F45506

Message: Threshold Crossed: equipment:SiocTempStats property: rearTemp

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45506
mibFaultName: tcaEquipmentRearTemp
moClass: equipment:SiocTempStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/temp-stats
```

tcaEquipmentRearTempMin

Fault Code: F45508

Message: Threshold Crossed: equipment:SiocTempStats property: rearTempMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
```

```
Cause: threshold-crossed
mibFaultCode: F45508
mibFaultName: tcaEquipmentRearTempMin
moClass: equipment:SiocTempStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/temp-stats
```

tcaEquipmentRearTempMax

Fault Code: F45509

Message: Threshold Crossed: equipment:SiocTempStats property: rearTempMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45509
mibFaultName: tcaEquipmentRearTempMax
moClass: equipment:SiocTempStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/temp-stats
```

tcaEquipmentRearTempAvg

Fault Code: F45510

Message: Threshold Crossed: equipment:SiocTempStats property: rearTempAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45510
mibFaultName: tcaEquipmentRearTempAvg
moClass: equipment:SiocTempStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/temp-stats
```

tcaEquipmentFrontTemp

Fault Code: F45514

Message: Threshold Crossed: equipment:SiocTempStats property: frontTemp

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45514
mibFaultName: tcaEquipmentFrontTemp
moClass: equipment:SiocTempStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/temp-stats
```

tcaEquipmentFrontTempMin

Fault Code: F45516

Message: Threshold Crossed: equipment:SiocTempStats property: frontTempMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45516
mibFaultName: tcaEquipmentFrontTempMin
moClass: equipment:SiocTempStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/temp-stats
```

tcaEquipmentFrontTempMax

Fault Code: F45517

Message: Threshold Crossed: equipment:SiocTempStats property: frontTempMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45517
mibFaultName: tcaEquipmentFrontTempMax
moClass: equipment:SiocTempStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/temp-stats
```

tcaEquipmentFrontTempAvg

Fault Code: F45518

Message: Threshold Crossed: equipment:SiocTempStats property: frontTempAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45518
mibFaultName: tcaEquipmentFrontTempAvg
moClass: equipment:SiocTempStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/temp-stats
```

tcaEquipmentMidTemp

Fault Code: F45522

Message: Threshold Crossed: equipment:SiocTempStats property: midTemp

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45522
mibFaultName: tcaEquipmentMidTemp
moClass: equipment:SiocTempStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/temp-stats
```

tcaEquipmentMidTempMin

Fault Code: F45524

Message: Threshold Crossed: equipment:SiocTempStats property: midTempMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45524
mibFaultName: tcaEquipmentMidTempMin
moClass: equipment:SiocTempStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/temp-stats
```

tcaEquipmentMidTempMax

Fault Code: F45525

Message: Threshold Crossed: equipment:SiocTempStats property: midTempMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45525
mibFaultName: tcaEquipmentMidTempMax
moClass: equipment:SiocTempStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/temp-stats
```

tcaEquipmentMidTempAvg

Fault Code: F45526

Message: Threshold Crossed: equipment:SiocTempStats property: midTempAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45526
mibFaultName: tcaEquipmentMidTempAvg
moClass: equipment:SiocTempStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/temp-stats
```

tcaEquipmentCmcTemp

Fault Code: F45530

Message: Threshold Crossed: equipment:SiocTempStats property: cmcTemp

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45530
mibFaultName: tcaEquipmentCmcTemp
moClass: equipment:SiocTempStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/temp-stats
```

tcaEquipmentCmcTempMin

Fault Code: F45532

Message: Threshold Crossed: equipment:SiocTempStats property: cmcTempMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45532
mibFaultName: tcaEquipmentCmcTempMin
moClass: equipment:SiocTempStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/temp-stats
```

tcaEquipmentCmcTempMax

Fault Code: F45533

Message: Threshold Crossed: equipment:SiocTempStats property: cmcTempMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45533
mibFaultName: tcaEquipmentCmcTempMax
moClass: equipment:SiocTempStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/temp-stats
```

tcaEquipmentCmcTempAvg

Fault Code: F45534

Message: Threshold Crossed: equipment:SiocTempStats property: cmcTempAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45534
mibFaultName: tcaEquipmentCmcTempAvg
moClass: equipment:SiocTempStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/temp-stats
```

tcaEquipmentVicTemp

Fault Code: F45538

Message: Threshold Crossed: equipment:SiocTempStats property: vicTemp

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45538
mibFaultName: tcaEquipmentVicTemp
moClass: equipment:SiocTempStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/temp-stats
```

tcaEquipmentVicTempMin

Fault Code: F45540

Message: Threshold Crossed: equipment:SiocTempStats property: vicTempMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45540
mibFaultName: tcaEquipmentVicTempMin
moClass: equipment:SiocTempStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/temp-stats
```

tcaEquipmentVicTempMax

Fault Code: F45541

Message: Threshold Crossed: equipment:SiocTempStats property: vicTempMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45541
mibFaultName: tcaEquipmentVicTempMax
moClass: equipment:SiocTempStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/temp-stats
```

tcaEquipmentVicTempAvg

Fault Code: F45542

Message: Threshold Crossed: equipment:SiocTempStats property: vicTempAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45542
mibFaultName: tcaEquipmentVicTempAvg
moClass: equipment:SiocTempStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]/temp-stats
```

tcaStorageTemperature

Fault Code: F45647

Message: Threshold Crossed: storage:NvmeStats property: temperature

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45647
mibFaultName: tcaStorageTemperature
moClass: storage:NvmeStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/nvme-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/nvme-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/nvme-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/nvme-stats
```

tcaStorageTemperatureMin

Fault Code: F45649

Message: Threshold Crossed: storage:NvmeStats property: temperatureMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45649
mibFaultName: tcaStorageTemperatureMin
```

moClass: storage:NvmeStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/nvme-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/nvme-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/nvme-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/nvme-stats

tcaStorageTemperatureMax

Fault Code: F45650

Message: Threshold Crossed: storage:NvmeStats property: temperatureMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F45650
mibFaultName: tcaStorageTemperatureMax
moClass: storage:NvmeStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/nvme-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/nvme-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/nvme-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/nvme-stats

tcaStorageTemperatureAvg

Fault Code: F45651

Message: Threshold Crossed: storage:NvmeStats property: temperatureAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F45651
mibFaultName: tcaStorageTemperatureAvg
moClass: storage:NvmeStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/nvme-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/nvme-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/nvme-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/nvme-stats

tcaStorageDriveLifeUsedPercentage

Fault Code: F45655

Message: Threshold Crossed: storage:NvmeStats property: driveLifeUsedPercentage

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45655
mibFaultName: tcaStorageDriveLifeUsedPercentage
moClass: storage:NvmeStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/nvme-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/nvme-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/nvme-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/nvme-stats
```

tcaStorageDriveLifeUsedPercentageMin

Fault Code: F45657

Message: Threshold Crossed: storage:NvmeStats property: driveLifeUsedPercentageMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F45657
mibFaultName: tcaStorageDriveLifeUsedPercentageMin
moClass: storage:NvmeStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/nvme-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/nvme-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/nvme-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/nvme-stats
```

tcaStorageDriveLifeUsedPercentageMax

Fault Code: F45658

Message: Threshold Crossed: storage:NvmeStats property: driveLifeUsedPercentageMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F45658
mibFaultName: tcaStorageDriveLifeUsedPercentageMax
moClass: storage:NvmeStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/nvme-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/nvme-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/nvme-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/nvme-stats

tcaStorageDriveLifeUsedPercentageAvg

Fault Code: F45659

Message: Threshold Crossed: storage:NvmeStats property: driveLifeUsedPercentageAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F45659
mibFaultName: tcaStorageDriveLifeUsedPercentageAvg
moClass: storage:NvmeStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/nvme-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/nvme-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/nvme-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/nvme-stats

tcaStoragePowerOnHours

Fault Code: F46020

Message: Threshold Crossed: storage:SsdHealthStats property: powerOnHours

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F46020
mibFaultName: tcaStoragePowerOnHours
moClass: storage:SsdHealthStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]

Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]

tcaStoragePowerOnHoursMin

Fault Code: F46022

Message: Threshold Crossed: storage:SsdHealthStats property: powerOnHoursMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F46022
mibFaultName: tcaStoragePowerOnHoursMin
moClass: storage:SsdHealthStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]

tcaStoragePowerOnHoursMax

Fault Code: F46023

Message: Threshold Crossed: storage:SsdHealthStats property: powerOnHoursMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46023
mibFaultName: tcaStoragePowerOnHoursMax
moClass: storage:SsdHealthStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
```

tcaStoragePowerOnHoursAvg

Fault Code: F46024

Message: Threshold Crossed: storage:SsdHealthStats property: powerOnHoursAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46024
mibFaultName: tcaStoragePowerOnHoursAvg
moClass: storage:SsdHealthStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
```

Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]

tcaStorageWearStatusInDays

Fault Code: F46028

Message: Threshold Crossed: storage:SsdHealthStats property: wearStatusInDays

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F46028
mibFaultName: tcaStorageWearStatusInDays
moClass: storage:SsdHealthStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]

tcaStorageWearStatusInDaysMin

Fault Code: F46030

Message: Threshold Crossed: storage:SsdHealthStats property: wearStatusInDaysMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F46030
mibFaultName: tcaStorageWearStatusInDaysMin
moClass: storage:SsdHealthStats
Type: server
autoCleared: true

Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]

tcaStorageWearStatusInDaysMax

Fault Code: F46031

Message: Threshold Crossed: storage:SsdHealthStats property: wearStatusInDaysMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F46031
mibFaultName: tcaStorageWearStatusInDaysMax
moClass: storage:SsdHealthStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]

tcaStorageWearStatusInDaysAvg

Fault Code: F46032

Message: Threshold Crossed: storage:SsdHealthStats property: wearStatusInDaysAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46032
mibFaultName: tcaStorageWearStatusInDaysAvg
moClass: storage:SsdHealthStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
```

tcaStoragePowerCycleCount

Fault Code: F46036

Message: Threshold Crossed: storage:SsdHealthStats property: powerCycleCount

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46036
mibFaultName: tcaStoragePowerCycleCount
moClass: storage:SsdHealthStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
```

Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]

tcaStoragePowerCycleCountMin

Fault Code: F46038

Message: Threshold Crossed: storage:SsdHealthStats property: powerCycleCountMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F46038
mibFaultName: tcaStoragePowerCycleCountMin
moClass: storage:SsdHealthStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]

tcaStoragePowerCycleCountMax

Fault Code: F46039

Message: Threshold Crossed: storage:SsdHealthStats property: powerCycleCountMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F46039
mibFaultName: tcaStoragePowerCycleCountMax

moClass: storage:SsdHealthStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]

tcaStoragePowerCycleCountAvg

Fault Code: F46040

Message: Threshold Crossed: storage:SsdHealthStats property: powerCycleCountAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F46040
mibFaultName: tcaStoragePowerCycleCountAvg
moClass: storage:SsdHealthStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]

tcaStoragePercentageLifeLeft

Fault Code: F46044

Message: Threshold Crossed: storage:SsdHealthStats property: percentageLifeLeft

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46044
mibFaultName: tcaStoragePercentageLifeLeft
moClass: storage:SsdHealthStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
```

tcaStoragePercentageLifeLeftMin

Fault Code: F46046

Message: Threshold Crossed: storage:SsdHealthStats property: percentageLifeLeftMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46046
mibFaultName: tcaStoragePercentageLifeLeftMin
moClass: storage:SsdHealthStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
```

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]

tcaStoragePercentageLifeLeftMax

Fault Code: F46047

Message: Threshold Crossed: storage:SsdHealthStats property: percentageLifeLeftMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F46047
mibFaultName: tcaStoragePercentageLifeLeftMax
moClass: storage:SsdHealthStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]

tcaStoragePercentageLifeLeftAvg

Fault Code: F46048

Message: Threshold Crossed: storage:SsdHealthStats property: percentageLifeLeftAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46048
mibFaultName: tcaStoragePercentageLifeLeftAvg
moClass: storage:SsdHealthStats
Type: server
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/ssd-health-stats-[id]
```

tcaMemoryDramWriteDataCorrectableCRCErrors

Fault Code: F46329

Message: Threshold Crossed: memory:ErrorStats property: DramWriteDataCorrectableCRCErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46329
mibFaultName: tcaMemoryDramWriteDataCorrectableCRCErrors
moClass: memory:ErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]/error-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/pmemory-[id]/error-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/mem-[id]/error-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/pmemory-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/pmemory-[id]/error-stats
```

tcaMemoryDramWriteDataUnCorrectableCRCErrors

Fault Code: F46340

Message: Threshold Crossed: memory:ErrorStats property: DramWriteDataUnCorrectableCRCErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46340
mibFaultName: tcaMemoryDramWriteDataUnCorrectableCRCErrors
moClass: memory:ErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]/error-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/pmemory-[id]/error-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/mem-[id]/error-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/pmemory-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/pmemory-[id]/error-stats
```

tcaMemoryAddressParityErrorsCorrectable

Fault Code: F46351

Message: Threshold Crossed: memory:ErrorStats property: addressParityErrorsCorrectable

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46351
mibFaultName: tcaMemoryAddressParityErrorsCorrectable
moClass: memory:ErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]/error-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/pmemory-[id]/error-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/mem-[id]/error-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/pmemory-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/pmemory-[id]/error-stats
```

tcaMemoryAddressParityErrorsUnCorrectable

Fault Code: F46362

Message: Threshold Crossed: memory:ErrorStats property: addressParityErrorsUnCorrectable

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F46362
mibFaultName: tcaMemoryAddressParityErrorsUnCorrectable
moClass: memory:ErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]/error-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/pmemory-[id]/error-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/mem-[id]/error-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/memarray-[id]/pmemory-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/pmemory-[id]/error-stats

tcaProcessorCorrectableLinkCRCErrors

Fault Code: F46389

Message: Threshold Crossed: processor:ErrorStats property: CorrectableLinkCRCErrors

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F46389
mibFaultName: tcaProcessorCorrectableLinkCRCErrors
moClass: processor:ErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/error-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/error-stats

tcaProcessorUncorrectableLinkCRCErrors

Fault Code: F46400

Message: Threshold Crossed: processor:ErrorStats property: UncorrectableLinkCRCErrors

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F46400
mibFaultName: tcaProcessorUncorrectableLinkCRCErrors
moClass: processor:ErrorStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/error-stats
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/error-stats

tcaStorageLifeLeftInDays

Fault Code: F46476

Message: Threshold Crossed: storage:NvmeStats property: lifeLeftInDays

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46476
mibFaultName: tcaStorageLifeLeftInDays
moClass: storage:NvmeStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/nvme-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/nvme-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/nvme-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/nvme-stats
```

tcaStorageLifeLeftInDaysMin

Fault Code: F46478

Message: Threshold Crossed: storage:NvmeStats property: lifeLeftInDaysMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46478
mibFaultName: tcaStorageLifeLeftInDaysMin
moClass: storage:NvmeStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/nvme-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/nvme-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/nvme-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/nvme-stats
```

tcaStorageLifeLeftInDaysMax

Fault Code: F46479

Message: Threshold Crossed: storage:NvmeStats property: lifeLeftInDaysMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46479
mibFaultName: tcaStorageLifeLeftInDaysMax
moClass: storage:NvmeStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/nvme-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/nvme-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/nvme-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/nvme-stats
```

tcaStorageLifeLeftInDaysAvg

Fault Code: F46480

Message: Threshold Crossed: storage:NvmeStats property: lifeLeftInDaysAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46480
mibFaultName: tcaStorageLifeLeftInDaysAvg
moClass: storage:NvmeStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/nvme-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/nvme-stats
Affected MO: sys/chassis-[id]/storage-[type]-[id]/nvme-stats
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/nvme-stats
```

tcaProcessorLoadStoreUnitCorrectableErrors

Fault Code: F46643

Message: Threshold Crossed: processor:ExecStats property: LoadStoreUnitCorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46643
mibFaultName: tcaProcessorLoadStoreUnitCorrectableErrors
moClass: processor:ExecStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/exec-stats
Affected MO:
```

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/exec-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/exec-stats

tcaProcessorLoadStoreUnitUncorrectableErrors

Fault Code: F46654

Message: Threshold Crossed: processor:ExecStats property: LoadStoreUnitUncorrectableErrors

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F46654
mibFaultName: tcaProcessorLoadStoreUnitUncorrectableErrors
moClass: processor:ExecStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/exec-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/exec-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/exec-stats

tcaProcessorInstructionFetchUnitCorrectableErrors

Fault Code: F46665

Message: Threshold Crossed: processor:ExecStats property: InstructionFetchUnitCorrectableErrors

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F46665
mibFaultName: tcaProcessorInstructionFetchUnitCorrectableErrors
moClass: processor:ExecStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/exec-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/exec-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/exec-stats

tcaProcessorInstructionFetchUnitUncorrectableErrors

Fault Code: F46676

Message: Threshold Crossed: processor:ExecStats property: InstructionFetchUnitUncorrectableErrors

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F46676
mibFaultName: tcaProcessorInstructionFetchUnitUncorrectableErrors
moClass: processor:ExecStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/exec-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/exec-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/exec-stats

tcaProcessorDecodeUnitCorrectableErrors

Fault Code: F46687

Message: Threshold Crossed: processor:ExecStats property: DecodeUnitCorrectableErrors

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F46687
mibFaultName: tcaProcessorDecodeUnitCorrectableErrors
moClass: processor:ExecStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/exec-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/exec-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/exec-stats

tcaProcessorDecodeUnitUncorrectableErrors

Fault Code: F46698

Message: Threshold Crossed: processor:ExecStats property: DecodeUnitUncorrectableErrors

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F46698
mibFaultName: tcaProcessorDecodeUnitUncorrectableErrors
moClass: processor:ExecStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/exec-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/exec-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/exec-stats

tcaProcessorExecutionUnitCorrectableErrors

Fault Code: F46709

Message: Threshold Crossed: processor:ExecStats property: ExecutionUnitCorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46709
mibFaultName: tcaProcessorExecutionUnitCorrectableErrors
moClass: processor:ExecStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/exec-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/exec-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/exec-stats
```

tcaProcessorExecutionUnitUncorrectableErrors

Fault Code: F46720

Message: Threshold Crossed: processor:ExecStats property: ExecutionUnitUncorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46720
mibFaultName: tcaProcessorExecutionUnitUncorrectableErrors
moClass: processor:ExecStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/exec-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/exec-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/exec-stats
```

tcaProcessorL2CacheUnitCorrectableErrors

Fault Code: F46732

Message: Threshold Crossed: processor:CacheMemStats property: L2CacheUnitCorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
```

mibFaultCode: F46732
mibFaultName: tcaProcessorL2CacheUnitCorrectableErrors
moClass: processor:CacheMemStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/cache-mem-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/cache-mem-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/cache-mem-stats

tcaProcessorL2CacheUnitUncorrectableErrors

Fault Code: F46743

Message: Threshold Crossed: processor:CacheMemStats property: L2CacheUnitUncorrectableErrors

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F46743
mibFaultName: tcaProcessorL2CacheUnitUncorrectableErrors
moClass: processor:CacheMemStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/cache-mem-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/cache-mem-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/cache-mem-stats

tcaProcessorL3CacheUnitCorrectableErrors

Fault Code: F46754

Message: Threshold Crossed: processor:CacheMemStats property: L3CacheUnitCorrectableErrors

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F46754
mibFaultName: tcaProcessorL3CacheUnitCorrectableErrors
moClass: processor:CacheMemStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/cache-mem-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/cache-mem-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/cache-mem-stats

tcaProcessorL3CacheUnitUncorrectableErrors

Fault Code: F46765

Message: Threshold Crossed: processor:CacheMemStats property: L3CacheUnitUncorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46765
mibFaultName: tcaProcessorL3CacheUnitUncorrectableErrors
moClass: processor:CacheMemStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/cache-mem-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/cache-mem-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/cache-mem-stats
```

tcaProcessorMemTestcorrectableErrors

Fault Code: F46776

Message: Threshold Crossed: processor:CacheMemStats property: MemTestcorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46776
mibFaultName: tcaProcessorMemTestcorrectableErrors
moClass: processor:CacheMemStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/cache-mem-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/cache-mem-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/cache-mem-stats
```

tcaProcessorFCHcorrectableErrors

Fault Code: F46788

Message: Threshold Crossed: processor:PCIBusStats property: FCHcorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46788
mibFaultName: tcaProcessorFCHcorrectableErrors
moClass: processor:PCIBusStats
```

```
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/pcibus-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/pcibus-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/pcibus-stats
```

tcaProcessorFCHUncorrectableErrors

Fault Code: F46799

Message: Threshold Crossed: processor:PCIBusStats property: FCHUncorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46799
mibFaultName: tcaProcessorFCHUncorrectableErrors
moClass: processor:PCIBusStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/pcibus-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/pcibus-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/pcibus-stats
```

tcaProcessorNorthBridgeIOCorrectableErrors

Fault Code: F46810

Message: Threshold Crossed: processor:PCIBusStats property: NorthBridgeIOCorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46810
mibFaultName: tcaProcessorNorthBridgeIOCorrectableErrors
moClass: processor:PCIBusStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/pcibus-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/pcibus-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/pcibus-stats
```

tcaProcessorNorthBridgeIOUncorrectableErrors

Fault Code: F46821

Message: Threshold Crossed: processor:PCIBusStats property: NorthBridgeIOUncorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46821
mibFaultName: tcaProcessorNorthBridgeIOUncorrectableErrors
moClass: processor:PCIBusStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/pcibus-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/pcibus-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/pcibus-stats
```

tcaProcessorSystemManagementUnitCorrectableErrors

Fault Code: F46833

Message: Threshold Crossed: processor:PMUStats property: SystemManagementUnitCorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46833
mibFaultName: tcaProcessorSystemManagementUnitCorrectableErrors
moClass: processor:PMUStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/pmu-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/pmu-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/pmu-stats
```

tcaProcessorSystemManagementUnitUncorrectableErrors

Fault Code: F46844

Message: Threshold Crossed: processor:PMUStats property: SystemManagementUnitUncorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46844
mibFaultName: tcaProcessorSystemManagementUnitUncorrectableErrors
moClass: processor:PMUStats
Type: server
autoCleared: true
```

Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/pmu-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/pmu-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/pmu-stats

tcaProcessorSATAcorrectableErrors

Fault Code: F46856

Message: Threshold Crossed: processor:IOStats property: SATAcorrectableErrors

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F46856
mibFaultName: tcaProcessorSATAcorrectableErrors
moClass: processor:IOStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/io-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/io-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/io-stats

tcaProcessorSATAUncorrectableErrors

Fault Code: F46867

Message: Threshold Crossed: processor:IOStats property: SATAUncorrectableErrors

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F46867
mibFaultName: tcaProcessorSATAUncorrectableErrors
moClass: processor:IOStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/io-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/io-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/io-stats

tcaProcessorUSBcorrectableErrors

Fault Code: F46878

Message: Threshold Crossed: processor:IOStats property: USBcorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46878
mibFaultName: tcaProcessorUSBcorrectableErrors
moClass: processor:IOStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/io-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/io-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/io-stats
```

tcaProcessorUSBUncorrectableErrors

Fault Code: F46889

Message: Threshold Crossed: processor:IOStats property: USBUncorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46889
mibFaultName: tcaProcessorUSBUncorrectableErrors
moClass: processor:IOStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/io-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/io-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/io-stats
```

tcaProcessorPCIeBankCorrectableErrors

Fault Code: F46900

Message: Threshold Crossed: processor:IOStats property: PCIeBankCorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46900
mibFaultName: tcaProcessorPCIeBankCorrectableErrors
moClass: processor:IOStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/io-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/io-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/io-stats
```

tcaProcessorPCIeBankUncorrectableErrors

Fault Code: F46911

Message: Threshold Crossed: processor:IOStats property: PCIeBankUncorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46911
mibFaultName: tcaProcessorPCIeBankUncorrectableErrors
moClass: processor:IOStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/io-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/io-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/io-stats
```

tcaProcessorSMNcorrectableErrors

Fault Code: F46922

Message: Threshold Crossed: processor:IOStats property: SMNcorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46922
mibFaultName: tcaProcessorSMNcorrectableErrors
moClass: processor:IOStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/io-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/io-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/io-stats
```

tcaProcessorSMNUncorrectableErrors

Fault Code: F46933

Message: Threshold Crossed: processor:IOStats property: SMNUncorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
```

```
mibFaultCode: F46933
mibFaultName: tcaProcessorSMNUncorrectableErrors
moClass: processor:IOStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/io-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/io-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/io-stats
```

tcaProcessorPSPCorrectableErrors

Fault Code: F46945

Message: Threshold Crossed: processor:SecurityStats property: PSPCorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46945
mibFaultName: tcaProcessorPSPCorrectableErrors
moClass: processor:SecurityStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/security-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/security-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/security-stats
```

tcaProcessorPSPUncorrectableErrors

Fault Code: F46956

Message: Threshold Crossed: processor:SecurityStats property: PSPUncorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46956
mibFaultName: tcaProcessorPSPUncorrectableErrors
moClass: processor:SecurityStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/security-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/security-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/security-stats
```

tcaProcessorCoherentSlaveCorrectableErrors

Fault Code: F46968

Message: Threshold Crossed: processor:MiscStats property: CoherentSlaveCorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46968
mibFaultName: tcaProcessorCoherentSlaveCorrectableErrors
moClass: processor:MiscStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/misc-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/misc-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/misc-stats
```

tcaProcessorCoherentSlaveUncorrectableErrors

Fault Code: F46979

Message: Threshold Crossed: processor:MiscStats property: CoherentSlaveUncorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46979
mibFaultName: tcaProcessorCoherentSlaveUncorrectableErrors
moClass: processor:MiscStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/misc-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/misc-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/misc-stats
```

tcaProcessorMPMgmntControllerCorrectableErrors

Fault Code: F46990

Message: Threshold Crossed: processor:MiscStats property: MPMgmntControllerCorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F46990
mibFaultName: tcaProcessorMPMgmntControllerCorrectableErrors
moClass: processor:MiscStats
```

```
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/misc-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/misc-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/misc-stats
```

tcaProcessorMPMgmntControllerUncorrectableErrors

Fault Code: F47001

Message: Threshold Crossed: processor:MiscStats property: MPMgmntControllerUncorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F47001
mibFaultName: tcaProcessorMPMgmntControllerUncorrectableErrors
moClass: processor:MiscStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/misc-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/misc-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/misc-stats
```

tcaProcessorParameterBlockCorrectableErrors

Fault Code: F47012

Message: Threshold Crossed: processor:MiscStats property: ParameterBlockCorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F47012
mibFaultName: tcaProcessorParameterBlockCorrectableErrors
moClass: processor:MiscStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/misc-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/misc-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/misc-stats
```

tcaProcessorParameterBlockUncorrectableErrors

Fault Code: F47023

Message: Threshold Crossed: processor:MiscStats property: ParameterBlockUncorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F47023
mibFaultName: tcaProcessorParameterBlockUncorrectableErrors
moClass: processor:MiscStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/misc-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/misc-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/misc-stats
```

tcaProcessorFloatingPointUnitCorrectableErrors

Fault Code: F47034

Message: Threshold Crossed: processor:MiscStats property: FloatingPointUnitCorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F47034
mibFaultName: tcaProcessorFloatingPointUnitCorrectableErrors
moClass: processor:MiscStats
Type: server
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/misc-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/misc-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/misc-stats
```

tcaProcessorFloatingPointUnitUncorrectableErrors

Fault Code: F47045

Message: Threshold Crossed: processor:MiscStats property: FloatingPointUnitUncorrectableErrors

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F47045
mibFaultName: tcaProcessorFloatingPointUnitUncorrectableErrors
moClass: processor:MiscStats
Type: server
autoCleared: true
```

Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/misc-stats
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/cpu-[id]/misc-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/misc-stats

tcaEquipmentAmbientTemp

Fault Code: F47252

Message: Threshold Crossed: equipment:CrossFabricModuleStats property: ambientTemp

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F47252
mibFaultName: tcaEquipmentAmbientTemp
moClass: equipment:CrossFabricModuleStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/xfm-slot-[id]/stats

tcaEquipmentAmbientTempMin

Fault Code: F47254

Message: Threshold Crossed: equipment:CrossFabricModuleStats property: ambientTempMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F47254
mibFaultName: tcaEquipmentAmbientTempMin
moClass: equipment:CrossFabricModuleStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/xfm-slot-[id]/stats

tcaEquipmentAmbientTempMax

Fault Code: F47255

Message: Threshold Crossed: equipment:CrossFabricModuleStats property: ambientTempMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed

```
mibFaultCode: F47255
mibFaultName: tcaEquipmentAmbientTempMax
moClass: equipment:CrossFabricModuleStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/xfm-slot-[id]/stats
```

tcaEquipmentAmbientTempAvg

Fault Code: F47256

Message: Threshold Crossed: equipment:CrossFabricModuleStats property: ambientTempAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F47256
mibFaultName: tcaEquipmentAmbientTempAvg
moClass: equipment:CrossFabricModuleStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/xfm-slot-[id]/stats
```

tcaEquipmentAmbientTemp

Fault Code: F47262

Message: Threshold Crossed: equipment:IOCardFanModuleStats property: ambientTemp

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F47262
mibFaultName: tcaEquipmentAmbientTemp
moClass: equipment:IOCardFanModuleStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/
```

tcaEquipmentAmbientTempMin

Fault Code: F47264

Message: Threshold Crossed: equipment:IOCardFanModuleStats property: ambientTempMin

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F47264
mibFaultName: tcaEquipmentAmbientTempMin
moClass: equipment:IOCardFanModuleStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/
```

tcaEquipmentAmbientTempMax

Fault Code: F47265

Message: Threshold Crossed: equipment:IOCardFanModuleStats property: ambientTempMax

Explanation:

Recommended Action:

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: F47265
mibFaultName: tcaEquipmentAmbientTempMax
moClass: equipment:IOCardFanModuleStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/
```

tcaEquipmentAmbientTempAvg

Fault Code: F47266

Message: Threshold Crossed: equipment:IOCardFanModuleStats property: ambientTempAvg

Explanation:

Recommended Action:

Fault Details

```
Severity: info
```

Cause: threshold-crossed
mibFaultCode: F47266
mibFaultName: tcaEquipmentAmbientTempAvg
moClass: equipment:IOCardFanModuleStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/

tcaEquipmentSpeed

Fault Code: F47272

Message: Threshold Crossed: equipment:IOCardFanStats property: speed

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F47272
mibFaultName: tcaEquipmentSpeed
moClass: equipment:IOCardFanStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]/
Affected MO: sys/fex-[id]/fan-[id]/
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]/
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/
Affected MO: sys/switch-[id]/fan-[id]/
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/

tcaEquipmentSpeedMin

Fault Code: F47274

Message: Threshold Crossed: equipment:IOCardFanStats property: speedMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F47274
mibFaultName: tcaEquipmentSpeedMin
moClass: equipment:IOCardFanStats
Type: generic

autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]/
Affected MO: sys/fex-[id]/fan-[id]/
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]/
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/
Affected MO: sys/switch-[id]/fan-[id]/
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/

tcaEquipmentSpeedMax

Fault Code: F47275

Message: Threshold Crossed: equipment:IOCardFanStats property: speedMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F47275
mibFaultName: tcaEquipmentSpeedMax
moClass: equipment:IOCardFanStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]/
Affected MO: sys/fex-[id]/fan-[id]/
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]/
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/
Affected MO: sys/switch-[id]/fan-[id]/
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/

tcaEquipmentSpeedAvg

Fault Code: F47276

Message: Threshold Crossed: equipment:IOCardFanStats property: speedAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F47276
mibFaultName: tcaEquipmentSpeedAvg
moClass: equipment:IOCardFanStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/

Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]/
Affected MO: sys/fex-[id]/fan-[id]/
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]/
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/
Affected MO: sys/switch-[id]/fan-[id]/
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/

tcaEquipmentSpeed

Fault Code: F47282

Message: Threshold Crossed: equipment:CrossFabricModuleFanStats property: speed

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F47282
mibFaultName: tcaEquipmentSpeed
moClass: equipment:CrossFabricModuleFanStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaEquipmentSpeedMin

Fault Code: F47284

Message: Threshold Crossed: equipment:CrossFabricModuleFanStats property: speedMin

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F47284
mibFaultName: tcaEquipmentSpeedMin
moClass: equipment:CrossFabricModuleFanStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats

Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaEquipmentSpeedMax

Fault Code: F47285

Message: Threshold Crossed: equipment:CrossFabricModuleFanStats property: speedMax

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F47285
mibFaultName: tcaEquipmentSpeedMax
moClass: equipment:CrossFabricModuleFanStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaEquipmentSpeedAvg

Fault Code: F47286

Message: Threshold Crossed: equipment:CrossFabricModuleFanStats property: speedAvg

Explanation:

Recommended Action:

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: F47286
mibFaultName: tcaEquipmentSpeedAvg
moClass: equipment:CrossFabricModuleFanStats
Type: generic
autoCleared: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats

Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

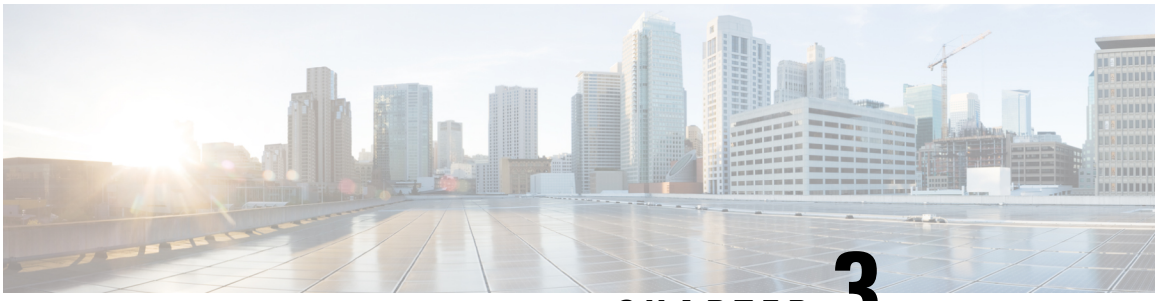

CHAPTER 3

FSM Faults in Cisco UCS Manager

- Cisco UCS FSM Faults, on page 1005

Cisco UCS FSM Faults

fsmStFailEquipmentChassisRemoveChassis:CleanupVnicsLocal

Fault Code: F16407

Message: [FSM:STAGE:FAILED|RETRY]: cleaning up vnics for chassis [id] from primary(FSM-STAGE:sam:dme:EquipmentChassisRemoveChassis:CleanupVnicsLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cleanup-vnics-local-failed
mibFaultCode: F16407
mibFaultName: fsmStFailEquipmentChassisRemoveChassisCleanupVnicsLocal
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisRemoveChassis:CleanupVnicsPeer

Fault Code: F16407

Message: [FSM:STAGE:FAILED|RETRY]: cleaning up vnics for chassis [id] from secondary(FSM-STAGE:sam:dme:EquipmentChassisRemoveChassis:CleanupVnicsPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cleanup-vnics-peer-failed
mibFaultCode: F16407
mibFaultName: fsmStFailEquipmentChassisRemoveChassisCleanupVnicsPeer
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisRemoveChassis:DisableEndPoint

Fault Code: F16407

Message: [FSM:STAGE:FAILED|RETRY]: unconfiguring access to chassis [id](FSM-STAGE:sam:dme:EquipmentChassisRemoveChassis:DisableEndPoint)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: disable-end-point-failed
mibFaultCode: F16407
mibFaultName: fsmStFailEquipmentChassisRemoveChassisDisableEndPoint
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisRemoveChassis:UnIdentifyLocal

Fault Code: F16407

Message: [FSM:STAGE:FAILED|RETRY]: erasing chassis identity [id] from primary(FSM-STAGE:sam:dme:EquipmentChassisRemoveChassis:UnIdentifyLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: un-identify-local-failed
mibFaultCode: F16407
mibFaultName: fsmStFailEquipmentChassisRemoveChassisUnIdentifyLocal
moClass: equipment:Chassis
```

```
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisRemoveChassis:UnIdentifyPeer

Fault Code: F16407

Message: [FSM:STAGE:FAILED|RETRY]: erasing chassis identity [id] from secondary(FSM-STAGE:sam:dme:EquipmentChassisRemoveChassis:UnIdentifyPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: un-identify-peer-failed
mibFaultCode: F16407
mibFaultName: fsmStFailEquipmentChassisRemoveChassisUnIdentifyPeer
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisRemoveChassis:Wait

Fault Code: F16407

Message: [FSM:STAGE:FAILED|RETRY]: waiting for clean up of resources for chassis [id] (approx. 3 min)(FSM-STAGE:sam:dme:EquipmentChassisRemoveChassis:Wait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-failed
mibFaultCode: F16407
mibFaultName: fsmStFailEquipmentChassisRemoveChassisWait
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisRemoveChassis:decomission

Fault Code: F16407

Message: [FSM:STAGE:FAILED|RETRY]: decommissioning chassis [id](FSM-STAGE:sam:dme:EquipmentChassisRemoveChassis:decomission)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: decomission-failed
mibFaultCode: F16407
mibFaultName: fsmStFailEquipmentChassisRemoveChassisDecomission
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentLocatorLedSetLocatorLed:Execute

Fault Code: F16408

Message: [FSM:STAGE:FAILED|RETRY]: setting locator led to [adminState](FSM-STAGE:sam:dme:EquipmentLocatorLedSetLocatorLed:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F16408
mibFaultName: fsmStFailEquipmentLocatorLedSetLocatorLedExecute
moClass: equipment:LocatorLed
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/locator-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/locator-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/locator-led
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/locator-led
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/locator-led
```

Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/chassis-[id]/locator-led
Affected MO: sys/chassis-[id]/psu-[id]/locator-led
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/chassis-[id]/slot-[id]/locator-led
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/fex-[id]/locator-led
Affected MO: sys/fex-[id]/psu-[id]/locator-led
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/fex-[id]/slot-[id]/locator-led
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/rack-enclosure-[id]/psu-[id]/locator-led
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/rack-unit-[id]/ext-board-[id]/locator-led
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/rack-unit-[id]/locator-led
Affected MO: sys/rack-unit-[id]/psu-[id]/locator-led
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/switch-[id]/locator-led
Affected MO: sys/switch-[id]/psu-[id]/locator-led

fsmStFailMgmtControllerExtMgmtIfConfig:Primary

Fault Code: F16518

Message: [FSM:STAGE:FAILED|RETRY]: external mgmt interface configuration on primary(FSM-STAGE:sam:dme:MgmtControllerExtMgmtIfConfig:Primary)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: primary-failed
mibFaultCode: F16518
mibFaultName: fsmStFailMgmtControllerExtMgmtIfConfigPrimary
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt

Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerExtMgmtIfConfig:Secondary

Fault Code: F16518

Message: [FSM:STAGE:FAILED|RETRY]: external mgmt interface configuration on secondary(FSM-STAGE:sam:dme:MgmtControllerExtMgmtIfConfig:Secondary)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: secondary-failed
mibFaultCode: F16518
mibFaultName: fsmStFailMgmtControllerExtMgmtIfConfigSecondary
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt

```
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt
```

fsmStFailFabricComputeSlotEpIdentify:ExecuteLocal

Fault Code: F16519

Message: [FSM:STAGE:FAILED|RETRY]: identifying a server in [chassisId]/[slotId] via CIMC(FSM-STAGE:sam:dme:FabricComputeSlotEpIdentify:ExecuteLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-local-failed
mibFaultCode: F16519
mibFaultName: fsmStFailFabricComputeSlotEpIdentifyExecuteLocal
moClass: fabric:ComputeSlotEp
Type: fsm
autoCleared: true
Affected MO: fabric/server/chassis-[chassisId]/slot-[slotId]
```

fsmStFailFabricComputeSlotEpIdentify:ExecutePeer

Fault Code: F16519

Message: [FSM:STAGE:FAILED|RETRY]: identifying a server in [chassisId]/[slotId] via CIMC(FSM-STAGE:sam:dme:FabricComputeSlotEpIdentify:ExecutePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-peer-failed
mibFaultCode: F16519
mibFaultName: fsmStFailFabricComputeSlotEpIdentifyExecutePeer
```

```
moClass: fabric:ComputeSlotEp
Type: fsm
autoCleared: true
Affected MO: fabric/server/chassis-[chassisId]/slot-[slotId]
```

fsmStFailComputeBladeDiscover:BiosPostCompletion

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for BIOS POST completion from CIMC on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:BiosPostCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverBiosPostCompletion
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:BladeBootPnuos

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: power server [chassisId]/[slotId] on with pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:BladeBootPnuos)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: blade-boot-pnuos-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverBladeBootPnuos
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:BladeBootWait

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for system reset on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:BladeBootWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: blade-boot-wait-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverBladeBootWait
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:BladePowerOn

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: power on server [chassisId]/[slotId] for discovery(FSM-STAGE:sam:dme:ComputeBladeDiscover:BladePowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: blade-power-on-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverBladePowerOn
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:BladeReadSmbios

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for SMBIOS table from CIMC on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:BladeReadSmbios)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: blade-read-smbios-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverBladeReadSmbios
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:BmcConfigPnuOS

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: provisioning a bootable device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputeBladeDiscover:BmcConfigPnuOS)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-config-pnuos-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverBmcConfigPnuOS
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:BmcFactoryReset

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: performing factory reset of server [chassisId]/[slotId] via CIMC(FSM-STAGE:sam:dme:ComputeBladeDiscover:BmcFactoryReset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-factory-reset-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverBmcFactoryReset
moClass: compute:Blade
Type: fsm
```

```
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:BmcInventory

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: getting inventory of server [chassisId]/[slotId] via CIMC(FSM-STAGE:sam:dme:ComputeBladeDiscover:BmcInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-inventory-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverBmcInventory
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:BmcPreConfigPnuOSLocal

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:BmcPreConfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-pre-config-pnuoslocal-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverBmcPreConfigPnuOSLocal
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:BmcPreConfigPnuOSPeer

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:BmcPreConfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-pre-config-pnuospeer-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverBmcPreConfigPnuOSPeer
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:BmcPresence

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: checking CIMC of server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:BmcPresence)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-presence-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverBmcPresence
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:BmcShutdownDiscovered

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Shutdown the server [chassisId]/[slotId]; deep discovery completed(FSM-STAGE:sam:dme:ComputeBladeDiscover:BmcShutdownDiscovered)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-shutdown-discovered-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverBmcShutdownDiscovered
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:CheckAdaptorFw40GCap

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: checking if adaptor firmware supports 40G speed to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:CheckAdaptorFw40GCap)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-adaptor-fw40gcap-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverCheckAdaptorFw40GCap
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:CheckPowerAvailability

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Check if power can be allocated to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverCheckPowerAvailability
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:ConfigBMCPowerParams

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Configuring power profiling parameters for server [chassisId]/[slotId] via CIMC(FSM-STAGE:sam:dme:ComputeBladeDiscover:ConfigBMCPowerParams)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: configbmcpower-params-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverConfigBMCPowerParams
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:ConfigFeLocal

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: configuring primary fabric interconnect access to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:ConfigFeLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-fe-local-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverConfigFeLocal
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:ConfigFePeer

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: configuring secondary fabric interconnect access to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:ConfigFePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-fe-peer-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverConfigFePeer
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:ConfigFlexFlashScrub

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Configuring FlexFlash Scrub on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:ConfigFlexFlashScrub)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-flex-flash-scrub-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverConfigFlexFlashScrub
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:ConfigUserAccess

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: configuring external user access to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:ConfigUserAccess)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-user-access-failed
mibFaultCode: F16520
```

```
mibFaultName: fsmStFailComputeBladeDiscoverConfigUserAccess
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:FruComponentInventory

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Fru Component Inventory in [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:FruComponentInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: fru-component-inventory-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverFruComponentInventory
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:HandlePooling

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Invoke post-discovery policies on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:HandlePooling)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: handle-pooling-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverHandlePooling
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:NicConfigPnuOSLocal

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: configure primary adapter in [chassisId]/[slotId] for pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:NicConfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-pnuoslocal-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverNicConfigPnuOSLocal
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:NicConfigPnuOSPeer

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: configure secondary adapter in [chassisId]/[slotId] for pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:NicConfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-pnuospeer-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverNicConfigPnuOSPeer
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:NicPresenceLocal

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: detect mezz cards in [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:NicPresenceLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-presence-local-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverNicPresenceLocal
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:NicPresencePeer

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: detect mezz cards in [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:NicPresencePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-presence-peer-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverNicPresencePeer
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:NicUnconfigPnuOSLocal

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure adapter of server [chassisId]/[slotId] pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:NicUnconfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-unconfig-pnuoslocal-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverNicUnconfigPnuOSLocal
moClass: compute:Blade
Type: fsm
```

```
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:NicUnconfigPnuOSPeer

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure adapter of server [chassisId]/[slotId] pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:NicUnconfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-unconfig-pnuospeer-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverNicUnconfigPnuOSPeer
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:OobStorageInventory

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Perform oob storage inventory of server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:OobStorageInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-storage-inventory-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverOobStorageInventory
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:PnuOSCatalog

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Populate pre-boot catalog to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:PnuOSCatalog)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuoscatalog-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverPnuOSCatalog
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:PnuOSIdent

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Identify pre-boot environment agent on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:PnuOSIdent)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosident-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverPnuOSIdent
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:PnuOSInventory

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Perform inventory of server [chassisId]/[slotId] pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:PnuOSInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosinventory-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverPnuOSInventory
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:PnuOSPolicy

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Populate pre-boot environment behavior policy to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:PnuOSPolicy)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuospolicy-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverPnuOSPolicy
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:PnuOSPowerProfiling

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Profile power for server [chassisId]/[slotId] by running benchmark(FSM-STAGE:sam:dme:ComputeBladeDiscover:PnuOSPowerProfiling)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuospower-profiling-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverPnuOSPowerProfiling
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:PnuOSScrub

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Scrub server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:PnuOSScrub)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosscrub-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverPnuOSScrub
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:PnuOSSelfTest

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Trigger self-test of server [chassisId]/[slotId] pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:PnuOSSelfTest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosself-test-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverPnuOSSelfTest
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:PostScrubOobStorageInventory

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Perform post scrub oob storage inventory of server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:PostScrubOobStorageInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: post-scrub-oob-storage-inventory-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverPostScrubOobStorageInventory
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:PowerDeployWait

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for power allocation to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverPowerDeployWait
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:PreSanitize

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Preparing to check hardware configuration server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F16520
```

```
mibFaultName: fsmStFailComputeBladeDiscoverPreSanitize
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:Sanitize

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Checking hardware configuration server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverSanitize
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:SendBmcProfilingDone

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for valid power profile for server [chassisId]/[slotId] from CIMC(FSM-STAGE:sam:dme:ComputeBladeDiscover:SendBmcProfilingDone)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: send-bmc-profiling-done-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverSendBmcProfilingDone
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:SendBmcProfilingInit

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Start profiling power for server [chassisId]/[slotId] via CIMC(FSM-STAGE:sam:dme:ComputeBladeDiscover:SendBmcProfilingInit)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: send-bmc-profiling-init-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverSendBmcProfilingInit
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:SetupVmediaLocal

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: provisioning a Virtual Media device with a bootable pre-boot image for blade [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:SetupVmediaLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: setup-vmedia-local-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverSetupVmediaLocal
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:SetupVmediaPeer

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: provisioning a Virtual Media device with a bootable pre-boot image for blade [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:SetupVmediaPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: setup-vmedia-peer-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverSetupVmediaPeer
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:SharedComponentsOobInventory

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Inventory of shared components in SIOC(FSM-STAGE:sam:dme:ComputeBladeDiscover:SharedComponentsOobInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: shared-components-oob-inventory-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverSharedComponentsOobInventory
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:SharedComponentsOobInventoryPeer

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Inventory of shared components in peer SIOC(FSM-STAGE:sam:dme:ComputeBladeDiscover:SharedComponentsOobInventoryPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: shared-components-oob-inventory-peer-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverSharedComponentsOobInventoryPeer
moClass: compute:Blade
Type: fsm
```

```
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:SolRedirectDisable

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Disable Sol Redirection on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:SolRedirectDisable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sol-redirect-disable-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverSolRedirectDisable
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:SolRedirectEnable

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: set up bios token on server [chassisId]/[slotId] for Sol redirect(FSM-STAGE:sam:dme:ComputeBladeDiscover:SolRedirectEnable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sol-redirect-enable-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverSolRedirectEnable
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:SwConfigPnuOSLocal

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: configure primary fabric interconnect in [chassisId]/[slotId] for pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:SwConfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-pnuoslocal-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverSwConfigPnuOSLocal
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:SwConfigPnuOSPeer

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: configure secondary fabric interconnect in [chassisId]/[slotId] for pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:SwConfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-pnuospeer-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverSwConfigPnuOSPeer
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:SwUnconfigPnuOSLocal

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure primary fabric interconnect for server [chassisId]/[slotId] pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:SwUnconfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfig-pnuoslocal-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverSwUnconfigPnuOSLocal
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:SwUnconfigPnuOSPeer

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure secondary fabric interconnect for server [chassisId]/[slotId] pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:SwUnconfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfig-pnuospeer-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverSwUnconfigPnuOSPeer
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:TeardownVmediaLocal

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: unprovisioning the Virtual Media bootable device for blade [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:TeardownVmediaLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: teardown-vmedia-local-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverTeardownVmediaLocal
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:TeardownVmediaPeer

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: unprovisioning the Virtual media bootable device for blade [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:TeardownVmediaPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: teardown-vmedia-peer-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverTeardownVmediaPeer
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:UnconfigCimcVMedia

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: cleaning all mappings for vmedia(FSM-STAGE:sam:dme:ComputeBladeDiscover:UnconfigCimcVMedia)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-cimcvmedia-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverUnconfigCimcVMedia
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:UnconfigExtMgmtGw

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: cleaning all ext mgmt bmc gateway for vmedia(FSM-STAGE:sam:dme:ComputeBladeDiscover:UnconfigExtMgmtGw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-ext-mgmt-gw-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverUnconfigExtMgmtGw
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:UnconfigExtMgmtRules

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: cleaning all ext mgmt rules for vmedia(FSM-STAGE:sam:dme:ComputeBladeDiscover:UnconfigExtMgmtRules)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-ext-mgmt-rules-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverUnconfigExtMgmtRules
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:hagConnect

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Connect to pre-boot environment agent on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:hagConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-connect-failed
mibFaultCode: F16520
```

```
mibFaultName: fsmStFailComputeBladeDiscoverHagConnect
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:hagDisconnect

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Disconnect pre-boot environment agent for server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:hagDisconnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-disconnect-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverHagDisconnect
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:serialDebugConnect

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Connect to pre-boot environment agent on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:serialDebugConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: serial-debug-connect-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverSerialDebugConnect
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailComputeBladeDiscover:serialDebugDisconnect

Fault Code: F16520

Message: [FSM:STAGE:FAILED|RETRY]: Disconnect pre-boot environment agent for server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:serialDebugDisconnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: serial-debug-disconnect-failed
mibFaultCode: F16520
mibFaultName: fsmStFailComputeBladeDiscoverSerialDebugDisconnect
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmStFailEquipmentChassisPsuPolicyConfig:Execute

Fault Code: F16533

Message: [FSM:STAGE:FAILED|RETRY]: Deploying Power Management policy changes on chassis [id](FSM-STAGE:sam:dme:EquipmentChassisPsuPolicyConfig:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F16533
mibFaultName: fsmStFailEquipmentChassisPsuPolicyConfigExecute
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailAdaptorHostFcIfResetFcPersBinding:ExecuteLocal

Fault Code: F16534

Message: [FSM:STAGE:FAILED|RETRY]: Resetting FC persistent bindings on host interface [dn](FSM-STAGE:sam:dme:AdaptorHostFcIfResetFcPersBinding:ExecuteLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-local-failed
mibFaultCode: F16534
mibFaultName: fsmStFailAdaptorHostFcIfResetFcPersBindingExecuteLocal
moClass: adaptor:HostFcIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]
```

fsmStFailAdaptorHostFcIfResetFcPersBinding:ExecutePeer

Fault Code: F16534

Message: [FSM:STAGE:FAILED|RETRY]: Resetting FC persistent bindings on host interface [dn](FSM-STAGE:sam:dme:AdaptorHostFcIfResetFcPersBinding:ExecutePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-peer-failed
mibFaultCode: F16534
mibFaultName: fsmStFailAdaptorHostFcIfResetFcPersBindingExecutePeer
moClass: adaptor:HostFcIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]
```

fsmStFailFabricLanCloudSwitchMode:SwConfigLocal

Fault Code: F16539

Message: [FSM:STAGE:FAILED|RETRY]: Fabric interconnect mode configuration to primary(FSM-STAGE:sam:dme:FabricLanCloudSwitchMode:SwConfigLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: sw-config-local-failed
mibFaultCode: F16539
mibFaultName: fsmStFailFabricLanCloudSwitchModeSwConfigLocal
moClass: fabric:LanCloud
Type: fsm
autoCleared: true
Affected MO: fabric/lan
```

fsmStFailFabricLanCloudSwitchMode:SwConfigPeer

Fault Code: F16539

Message: [FSM:STAGE:FAILED|RETRY]: Fabric interconnect mode configuration to secondary(FSM-STAGE:sam:dme:FabricLanCloudSwitchMode:SwConfigPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-peer-failed
mibFaultCode: F16539
mibFaultName: fsmStFailFabricLanCloudSwitchModeSwConfigPeer
moClass: fabric:LanCloud
Type: fsm
autoCleared: true
Affected MO: fabric/lan
```

fsmStFailFabricLanCloudSwitchMode:WaitForUserAck

Fault Code: F16539

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for User Acknowledgment to configuration on primary(FSM-STAGE:sam:dme:FabricLanCloudSwitchMode:WaitForUserAck)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-user-ack-failed
mibFaultCode: F16539
mibFaultName: fsmStFailFabricLanCloudSwitchModeWaitForUserAck
moClass: fabric:LanCloud
Type: fsm
autoCleared: true
Affected MO: fabric/lan
```

fsmStFailVnicProfileSetDeploy:Local

Fault Code: F16550

Message: [FSM:STAGE:FAILED|RETRY]: VNIC profile configuration on local fabric(FSM-STAGE:sam:dme:VnicProfileSetDeploy:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F16550
mibFaultName: fsmStFailVnicProfileSetDeployLocal
moClass: vnic:ProfileSet
Type: fsm
autoCleared: true
Affected MO: fabric/lan/profiles
```

fsmStFailVnicProfileSetDeploy:Peer

Fault Code: F16550

Message: [FSM:STAGE:FAILED|RETRY]: VNIC profile configuration on peer fabric(FSM-STAGE:sam:dme:VnicProfileSetDeploy:Peer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: peer-failed
mibFaultCode: F16550
mibFaultName: fsmStFailVnicProfileSetDeployPeer
moClass: vnic:ProfileSet
Type: fsm
autoCleared: true
Affected MO: fabric/lan/profiles
```

fsmStFailCommSvcEpUpdateSvcEp:InitIptablesLocal

Fault Code: F16576

Message: [FSM:STAGE:FAILED|RETRY]: initialising iptables on primary(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:InitIptablesLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: init-iptables-local-failed
mibFaultCode: F16576
mibFaultName: fsmStFailCommSvcEpUpdateSvcEpInitIptablesLocal
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmStFailCommSvcEpUpdateSvcEp:InitIptablesPeer

Fault Code: F16576

Message: [FSM:STAGE:FAILED|RETRY]: initialising iptables on secondary(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:InitIptablesPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: init-iptables-peer-failed
mibFaultCode: F16576
mibFaultName: fsmStFailCommSvcEpUpdateSvcEpInitIptablesPeer
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmStFailCommSvcEpUpdateSvcEp:PropogateEpSettings

Fault Code: F16576

Message: [FSM:STAGE:FAILED|RETRY]: propagate updated settings (eg. timezone)(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpSettings)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: propogate-ep-settings-failed
mibFaultCode: F16576
```

```
mibFaultName: fsmStFailCommSvcEpUpdateSvcEpPropogateEpSettings
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmStFailCommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsLocal

Fault Code: F16576

Message: [FSM:STAGE:FAILED|RETRY]: propagate updated timezone settings to management controllers.(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: propogate-ep-time-zone-settings-local-failed
mibFaultCode: F16576
mibFaultName: fsmStFailCommSvcEpUpdateSvcEpPropogateEpTimeZoneSettingsLocal
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmStFailCommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsPeer

Fault Code: F16576

Message: [FSM:STAGE:FAILED|RETRY]: propagate updated timezone settings to management controllers.(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: propogate-ep-time-zone-settings-peer-failed
mibFaultCode: F16576
mibFaultName: fsmStFailCommSvcEpUpdateSvcEpPropogateEpTimeZoneSettingsPeer
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmStFailCommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToAdaptorsLocal

Fault Code: F16576

Message: [FSM:STAGE:FAILED|RETRY]: propagate updated timezone settings to NICs.(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToAdaptorsLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: propogate-ep-time-zone-settings-to-adaptors-local-failed
mibFaultCode: F16576
mibFaultName: fsmStFailCommSvcEpUpdateSvcEpPropogateEpTimeZoneSettingsToAdaptorsLocal
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmStFailCommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToAdaptorsPeer

Fault Code: F16576

Message: [FSM:STAGE:FAILED|RETRY]: propagate updated timezone settings to NICs.(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToAdaptorsPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: propogate-ep-time-zone-settings-to-adaptors-peer-failed
mibFaultCode: F16576
mibFaultName: fsmStFailCommSvcEpUpdateSvcEpPropogateEpTimeZoneSettingsToAdaptorsPeer
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmStFailCommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToFexIomLocal

Fault Code: F16576

Message: [FSM:STAGE:FAILED|RETRY]: propagate updated timezone settings to FEXs and IOMs.(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToFexIomLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: propogate-ep-time-zone-settings-to-fex-iom-local-failed
mibFaultCode: F16576
mibFaultName: fsmStFailCommSvcEpUpdateSvcEpPropogateEpTimeZoneSettingsToFexIomLocal
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmStFailCommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToFexIomPeer

Fault Code: F16576

Message: [FSM:STAGE:FAILED|RETRY]: propagate updated timezone settings to FEXs and IOMs.(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToFexIomPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: propogate-ep-time-zone-settings-to-fex-iom-peer-failed
mibFaultCode: F16576
mibFaultName: fsmStFailCommSvcEpUpdateSvcEpPropogateEpTimeZoneSettingsToFexIomPeer
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmStFailCommSvcEpUpdateSvcEp:SetEpLocal

Fault Code: F16576

Message: [FSM:STAGE:FAILED|RETRY]: communication service [name] configuration to primary(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:SetEpLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-ep-local-failed
mibFaultCode: F16576
mibFaultName: fsmStFailCommSvcEpUpdateSvcEpSetEpLocal
moClass: comm:SvcEp
Type: fsm
```

```
autoCleared: true
Affected MO: sys/svc-ext
```

fsmStFailCommSvcEpUpdateSvcEp:SetEpPeer

Fault Code: F16576

Message: [FSM:STAGE:FAILED|RETRY]: communication service [name] configuration to secondary(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:SetEpPeer)

Explanation: None set.

Recommended Action: None set.

Fault Details

```
Severity: warning
Cause: set-ep-peer-failed
mibFaultCode: F16576
mibFaultName: fsmStFailCommSvcEpUpdateSvcEpSetEpPeer
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmStFailCommSvcEpRestartWebSvc:local

Fault Code: F16577

Message: [FSM:STAGE:FAILED|RETRY]: restart web services in primary(FSM-STAGE:sam:dme:CommSvcEpRestartWebSvc:local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F16577
mibFaultName: fsmStFailCommSvcEpRestartWebSvcLocal
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmStFailCommSvcEpRestartWebSvc:peer

Fault Code: F16577

Message: [FSM:STAGE:FAILED|RETRY]: restart web services in secondary(FSM-STAGE:sam:dme:CommSvcEpRestartWebSvc:peer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: peer-failed
mibFaultCode: F16577
mibFaultName: fsmStFailCommSvcEpRestartWebSvcPeer
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmStFailAaaEpUpdateEp:SetEpLocal

Fault Code: F16579

Message: [FSM:STAGE:FAILED|RETRY]: external aaa server configuration to primary(FSM-STAGE:sam:dme:AaaEpUpdateEp:SetEpLocal)

Explanation: Cisco UCS Manager could not set the configurations in the primary Fabric Interconnect for AAA servers while re-ordering/deleting providers.

Recommended Action: If you see this fault, take the following actions:

1. Identify the auth-domain(s) that are using the auth-realm modification causing this fault.
2. Modify the auth-domain(s) realm identified in step 1, to local realm and commit the changes.
3. Re-order/Delete the AAA providers user wish to modify and commit the changes.
4. Change the auth-domain(s) realm back to previous realm modified in step2 and commit the changes.

Fault Details

```
Severity: warning
Cause: set-ep-local-failed
mibFaultCode: F16579
mibFaultName: fsmStFailAaaEpUpdateEpSetEpLocal
moClass: aaa:Ep
Type: fsm
autoCleared: true
Affected MO: sys/ldap-ext
Affected MO: sys/radius-ext
Affected MO: sys/tacacs-ext
```

fsmStFailAaaEpUpdateEp:SetEpPeer

Fault Code: F16579

Message: [FSM:STAGE:FAILED|RETRY]: external aaa server configuration to secondary(FSM-STAGE:sam:dme:AaaEpUpdateEp:SetEpPeer)

Explanation: Cisco UCS Manager could not set the configurations in the secondary Fabric Interconnect for AAA servers while re-ordering/deleting providers.

Recommended Action: If you see this fault, take the following actions:

1. Make sure secondary FI is up and running.
2. Identify the auth-domain(s) that are using the auth-realm modification causing this fault.
3. Modify the auth-domain(s) realm identified in step 1, to local realm and commit the changes.
4. Re-order/Delete the AAA providers user wish to modify and commit the changes.
5. Change the auth-domain(s) realm back to previous realm modified in step2 and commit the changes.

Fault Details

```
Severity: warning
Cause: set-ep-peer-failed
mibFaultCode: F16579
mibFaultName: fsmStFailAaaEpUpdateEpSetEpPeer
moClass: aaa:Ep
Type: fsm
autoCleared: true
Affected MO: sys/ldap-ext
Affected MO: sys/radius-ext
Affected MO: sys/tacacs-ext
```

fsmStFailAaaRealmUpdateRealm:SetRealmLocal

Fault Code: F16580

Message: [FSM:STAGE:FAILED|RETRY]: realm configuration to primary(FSM-STAGE:sam:dme:AaaRealmUpdateRealm:SetRealmLocal)

Explanation: Cisco UCS Manager could not set the configurations in the primary Fabric Interconnect for Authentication realms.

Recommended Action: If you see this fault, take the following actions:

1. Make sure the auth-server-group used in the auth-domain is exist and is deployed on to switch.
2. If auth-server-group doesn't exist, either create auth-server-group in appropriaate realm (RADIUS/TACACS+/LDAP) or unset the auth-server-group in auth-domain.

Fault Details

```
Severity: warning
Cause: set-realm-local-failed
mibFaultCode: F16580
mibFaultName: fsmStFailAaaRealmUpdateRealmSetRealmLocal
moClass: aaa:Realm
Type: fsm
autoCleared: true
Affected MO: sys/auth-realm
```

fsmStFailAaaRealmUpdateRealm:SetRealmPeer

Fault Code: F16580

Message: [FSM:STAGE:FAILED|RETRY]: realm configuration to secondary(FSM-STAGE:sam:dme:AaaRealmUpdateRealm:SetRealmPeer)

Explanation: Cisco UCS Manager could not set the configurations in the secondary Fabric Interconnect for Authentication realms.

Recommended Action: If you see this fault, take the following actions:

1. Make sure secondary FI is up and running.
2. Make sure the auth-server-group used in the auth-domain is exist and is deployed on to switch.
3. If auth-server-group doesn't exist, either create auth-server-group in appropriaate realm (RADIUS/TACACS+/LDAP) or unset the auth-server-group in auth-domain.

Fault Details

```
Severity: warning
Cause: set-realm-peer-failed
mibFaultCode: F16580
mibFaultName: fsmStFailAaaRealmUpdateRealmSetRealmPeer
moClass: aaa:Realm
Type: fsm
autoCleared: true
Affected MO: sys/auth-realm
```

fsmStFailAaaUserEpUpdateUserEp:SetUserLocal

Fault Code: F16581

Message: [FSM:STAGE:FAILED|RETRY]: user configuration to primary(FSM-STAGE:sam:dme:AaaUserEpUpdateUserEp:SetUserLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-user-local-failed
mibFaultCode: F16581
mibFaultName: fsmStFailAaaUserEpUpdateUserEpSetUserLocal
moClass: aaa:UserEp
Type: fsm
autoCleared: true
Affected MO: sys/user-ext
```

fsmStFailAaaUserEpUpdateUserEp:SetUserPeer

Fault Code: F16581

Message: [FSM:STAGE:FAILED|RETRY]: user configuration to secondary(FSM-STAGE:sam:dme:AaaUserEpUpdateUserEp:SetUserPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-user-peer-failed
mibFaultCode: F16581
mibFaultName: fsmStFailAaaUserEpUpdateUserEpSetUserPeer
moClass: aaa:UserEp
Type: fsm
autoCleared: true
Affected MO: sys/user-ext
```

fsmStFailPkiEpUpdateEp:PostSetKeyRingLocal

Fault Code: F16582

Message: [FSM:STAGE:FAILED|RETRY]: post processing after keyring configuration on primary(FSM-STAGE:sam:dme:PkiEpUpdateEp:PostSetKeyRingLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: post-set-key-ring-local-failed
mibFaultCode: F16582
mibFaultName: fsmStFailPkiEpUpdateEpPostSetKeyRingLocal
moClass: pki:Ep
Type: fsm
autoCleared: true
Affected MO: sys/pki-ext
```

fsmStFailPkiEpUpdateEp:PostSetKeyRingPeer

Fault Code: F16582

Message: [FSM:STAGE:FAILED|RETRY]: post processing after keyring configuration on secondary(FSM-STAGE:sam:dme:PkiEpUpdateEp:PostSetKeyRingPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: post-set-key-ring-peer-failed
mibFaultCode: F16582
mibFaultName: fsmStFailPkiEpUpdateEpPostSetKeyRingPeer
moClass: pki:Ep
```

```
Type: fsm
autoCleared: true
Affected MO: sys/pki-ext
```

fsmStFailPkiEpUpdateEp:SetKeyRingLocal

Fault Code: F16582

Message: [FSM:STAGE:FAILED|RETRY]: keyring configuration on primary(FSM-STAGE:sam:dme:PkiEpUpdateEp:SetKeyRingLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-key-ring-local-failed
mibFaultCode: F16582
mibFaultName: fsmStFailPkiEpUpdateEpSetKeyRingLocal
moClass: pki:Ep
Type: fsm
autoCleared: true
Affected MO: sys/pki-ext
```

fsmStFailPkiEpUpdateEp:SetKeyRingPeer

Fault Code: F16582

Message: [FSM:STAGE:FAILED|RETRY]: keyring configuration on secondary(FSM-STAGE:sam:dme:PkiEpUpdateEp:SetKeyRingPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-key-ring-peer-failed
mibFaultCode: F16582
mibFaultName: fsmStFailPkiEpUpdateEpSetKeyRingPeer
moClass: pki:Ep
Type: fsm
autoCleared: true
Affected MO: sys/pki-ext
```

fsmStFailSysfileMutationSingle:Execute

Fault Code: F16600

Message: [FSM:STAGE:FAILED|RETRY]: [action] file [name](FSM-STAGE:sam:dme:SysfileMutationSingle:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F16600
mibFaultName: fsmStFailSysfileMutationSingleExecute
moClass: sysfile:Mutation
Type: fsm
autoCleared: true
Affected MO: sys/corefiles/file-[name]|[switchId]/mutation
Affected MO: sys/corefiles/mutation
```

fsmStFailSysfileMutationGlobal:Local

Fault Code: F16601

Message: [FSM:STAGE:FAILED|RETRY]: remove files from local(FSM-STAGE:sam:dme:SysfileMutationGlobal:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F16601
mibFaultName: fsmStFailSysfileMutationGlobalLocal
moClass: sysfile:Mutation
Type: fsm
autoCleared: true
Affected MO: sys/corefiles/file-[name]|[switchId]/mutation
Affected MO: sys/corefiles/mutation
```

fsmStFailSysfileMutationGlobal:Peer

Fault Code: F16601

Message: [FSM:STAGE:FAILED|RETRY]: remove files from peer(FSM-STAGE:sam:dme:SysfileMutationGlobal:Peer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: peer-failed
mibFaultCode: F16601
mibFaultName: fsmStFailSysfileMutationGlobalPeer
moClass: sysfile:Mutation
Type: fsm
autoCleared: true
Affected MO: sys/corefiles/file-[name]|[switchId]/mutation
Affected MO: sys/corefiles/mutation
```

fsmStFailSysdebugManualCoreFileExportTargetExport:Execute

Fault Code: F16604

Message: [FSM:STAGE:FAILED|RETRY]: export core file [name] to [hostname](FSM-STAGE:sam:dme:SysdebugManualCoreFileExportTargetExport:Execute)

Explanation: None set.

Recommended Action: None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F16604
mibFaultName: fsmStFailSysdebugManualCoreFileExportTargetExportExecute
moClass: sysdebug:ManualCoreFileExportTarget
Type: fsm
autoCleared: true
Affected MO: sys/corefiles/file-[name]|[switchId]/export-to-[hostname]
```

fsmStFailSysdebugAutoCoreFileExportTargetConfigure:Local

Fault Code: F16605

Message: [FSM:STAGE:FAILED|RETRY]: configuring automatic core file export service on local(FSM-STAGE:sam:dme:SysdebugAutoCoreFileExportTargetConfigure:Local)

Explanation: Cisco UCS Manager could not set the configurations in the primary Fabric Interconnect for auto core transfer to remote TFTP server.

Recommended Action: If you see this fault, take the following actions:

1. Execute the show tech-support command and contact Cisco Technical Support.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F16605
mibFaultName: fsmStFailSysdebugAutoCoreFileExportTargetConfigureLocal
moClass: sysdebug:AutoCoreFileExportTarget
Type: fsm
autoCleared: true
Affected MO: sys/sysdebug/file-export
```

fsmStFailSysdebugAutoCoreFileExportTargetConfigure:Peer

Fault Code: F16605

Message: [FSM:STAGE:FAILED|RETRY]: configuring automatic core file export service on peer(FSM-STAGE:sam:dme:SysdebugAutoCoreFileExportTargetConfigure:Peer)

Explanation: Cisco UCS Manager could not set the configurations in the subordinate Fabric Interconnect (FI) for auto core transfer to remote TFTP server. This fault typically appears for one of the following reasons:

- The subordinate FI is not reachable.
- The subordinate FI is experiencing an internal system error on applying the configuration.

Recommended Action: If you see this fault, take the following actions:

1. Check the FI cluster state to ensure that the subordinate FI is reachable and functioning correctly. If the subordinate FI is down, take appropriate corrective actions so that the UCS cluster goes into HA ready state.
2. If the HA state of the primary and subordinate FIs are good, execute the show tech-support command and contact Cisco Technical Support.

Fault Details

```
Severity: warning
Cause: peer-failed
mibFaultCode: F16605
mibFaultName: fsmStFailSysdebugAutoCoreFileExportTargetConfigurePeer
moClass: sysdebug:AutoCoreFileExportTarget
Type: fsm
autoCleared: true
Affected MO: sys/sysdebug/file-export
```

fsmStFailSysdebugLogControlEpLogControlPersist:Local

Fault Code: F16606

Message: [FSM:STAGE:FAILED|RETRY]: persisting LogControl on local(FSM-STAGE:sam:dme:SysdebugLogControlEpLogControlPersist:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F16606
mibFaultName: fsmStFailSysdebugLogControlEpLogControlPersistLocal
moClass: sysdebug:LogControlEp
Type: fsm
autoCleared: true
Affected MO: sys/sysdebug/logcontrol
```

fsmStFailSysdebugLogControlEpLogControlPersist:Peer

Fault Code: F16606

Message: [FSM:STAGE:FAILED|RETRY]: persisting LogControl on peer(FSM-STAGE:sam:dme:SysdebugLogControlEpLogControlPersist:Peer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: peer-failed
mibFaultCode: F16606
mibFaultName: fsmStFailSysdebugLogControlEpLogControlPersistPeer
moClass: sysdebug:LogControlEp
Type: fsm
autoCleared: true
Affected MO: sys/sysdebug/logcontrol
```

fsmStFailSwAccessDomainDeploy:UpdateConnectivity

Fault Code: F16634

Message: [FSM:STAGE:FAILED|RETRY]: internal network configuration on [switchId](FSM-STAGE:sam:dme:SwAccessDomainDeploy:UpdateConnectivity)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-connectivity-failed
mibFaultCode: F16634
mibFaultName: fsmStFailSwAccessDomainDeployUpdateConnectivity
moClass: sw:AccessDomain
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/access-eth
```

fsmStFailSwEthLanBorderDeploy:UpdateConnectivity

Fault Code: F16635

Message: [FSM:STAGE:FAILED|RETRY]: Uplink eth port configuration on [switchId](FSM-STAGE:sam:dme:SwEthLanBorderDeploy:UpdateConnectivity)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-connectivity-failed
mibFaultCode: F16635
mibFaultName: fsmStFailSwEthLanBorderDeployUpdateConnectivity
moClass: sw:EthLanBorder
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/border-eth
```

fsmStFailSwEthLanBorderDeploy:UpdateVlanGroups

Fault Code: F16635

Message: [FSM:STAGE:FAILED|RETRY]: VLAN group configuration on [switchId](FSM-STAGE:sam:dme:SwEthLanBorderDeploy:UpdateVlanGroups)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-vlan-groups-failed
mibFaultCode: F16635
mibFaultName: fsmStFailSwEthLanBorderDeployUpdateVlanGroups
moClass: sw:EthLanBorder
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/border-eth
```

fsmStFailSwEthLanBorderDeploy:WaitOnSwConfigHost

Fault Code: F16635

Message: [FSM:STAGE:FAILED|RETRY]: Waiting on applying switch configuration on host to complete(FSM-STAGE:sam:dme:SwEthLanBorderDeploy:WaitOnSwConfigHost)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-on-sw-config-host-failed
mibFaultCode: F16635
```

```
mibFaultName: fsmStFailSwEthLanBorderDeployWaitOnSwConfigHost
moClass: sw:EthLanBorder
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/border-eth
```

fsmStFailSwFcSanBorderDeploy:UpdateConnectivity

Fault Code: F16636

Message: [FSM:STAGE:FAILED|RETRY]: Uplink fc port configuration on [switchId](FSM-STAGE:sam:dme:SwFcSanBorderDeploy:UpdateConnectivity)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-connectivity-failed
mibFaultCode: F16636
mibFaultName: fsmStFailSwFcSanBorderDeployUpdateConnectivity
moClass: sw:FcSanBorder
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/border-fc
```

fsmStFailSwUtilityDomainDeploy:UpdateConnectivity

Fault Code: F16637

Message: [FSM:STAGE:FAILED|RETRY]: Utility network configuration on [switchId](FSM-STAGE:sam:dme:SwUtilityDomainDeploy:UpdateConnectivity)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-connectivity-failed
mibFaultCode: F16637
mibFaultName: fsmStFailSwUtilityDomainDeployUpdateConnectivity
moClass: sw:UtilityDomain
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/utility-eth
```

fsmStFailSyntheticFsObjCreate:createLocal

Fault Code: F16641

Message: [FSM:STAGE:FAILED|RETRY]: create on primary(FSM-STAGE:sam:dme:SyntheticFsObjCreate:createLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: create-local-failed
mibFaultCode: F16641
mibFaultName: fsmStFailSyntheticFsObjCreateCreateLocal
moClass: synthetic:FsObj
Type: fsm
autoCleared: true
Affected MO: sys/file-[name]
```

fsmStFailSyntheticFsObjCreate:createRemote

Fault Code: F16641

Message: [FSM:STAGE:FAILED|RETRY]: create on secondary(FSM-STAGE:sam:dme:SyntheticFsObjCreate:createRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: create-remote-failed
mibFaultCode: F16641
mibFaultName: fsmStFailSyntheticFsObjCreateCreateRemote
moClass: synthetic:FsObj
Type: fsm
autoCleared: true
Affected MO: sys/file-[name]
```

fsmStFailFirmwareDownloaderDownload:CopyRemote

Fault Code: F16650

Message: [FSM:STAGE:FAILED|RETRY]: sync images to subordinate(FSM-STAGE:sam:dme:FirmwareDownloaderDownload:CopyRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-remote-failed
mibFaultCode: F16650
mibFaultName: fsmStFailFirmwareDownloaderDownloadCopyRemote
moClass: firmware:Downloader
Type: fsm
autoCleared: true
Affected MO: sys/fw-catalogue/dnld-[fileName]
```

fsmStFailFirmwareDownloaderDownload:DeleteLocal

Fault Code: F16650

Message: [FSM:STAGE:FAILED|RETRY]: deleting downloadable [fileName] on local(FSM-STAGE:sam:dme:FirmwareDownloaderDownload:DeleteLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-local-failed
mibFaultCode: F16650
mibFaultName: fsmStFailFirmwareDownloaderDownloadDeleteLocal
moClass: firmware:Downloader
Type: fsm
autoCleared: true
Affected MO: sys/fw-catalogue/dnld-[fileName]
```

fsmStFailFirmwareDownloaderDownload:Local

Fault Code: F16650

Message: [FSM:STAGE:FAILED|RETRY]: downloading image [fileName] from [server](FSM-STAGE:sam:dme:FirmwareDownloaderDownload:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F16650
mibFaultName: fsmStFailFirmwareDownloaderDownloadLocal
moClass: firmware:Downloader
Type: fsm
```

autoCleared: true
Affected MO: sys/fw-catalogue/dnld-[fileName]

fsmStFailFirmwareDownloaderDownload:UnpackLocal

Fault Code: F16650

Message: [FSM:STAGE:FAILED|RETRY]: unpacking image [fileName] on primary(FSM-STAGE:sam:dme:FirmwareDownloaderDownload:UnpackLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: unpack-local-failed
mibFaultCode: F16650
mibFaultName: fsmStFailFirmwareDownloaderDownloadUnpackLocal
moClass: firmware:Downloader
Type: fsm
autoCleared: true
Affected MO: sys/fw-catalogue/dnld-[fileName]

fsmStFailFirmwareImageDelete:Local

Fault Code: F16651

Message: [FSM:STAGE:FAILED|RETRY]: deleting image file [name] ([invTag]) from primary(FSM-STAGE:sam:dme:FirmwareImageDelete:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: F16651
mibFaultName: fsmStFailFirmwareImageDeleteLocal
moClass: firmware:Image
Type: fsm
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO:

sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/boardController/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/image-[name]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/image-[name]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/image-[name]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/image-[name]
Affected MO: sys/fex-[id]/mgmt/image-[name]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/image-[name]
Affected MO: sys/fw-catalogue/image-[name]
Affected MO: sys/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/mgmt/image-[name]
Affected MO: sys/switch-[id]/mgmt/image-[name]

fsmStFailFirmwareImageDelete:Remote

Fault Code: F16651

Message: [FSM:STAGE:FAILED|RETRY]: deleting image file [name] ([invTag]) from secondary(FSM-STAGE:sam:dme:FirmwareImageDelete:Remote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: remote-failed
mibFaultCode: F16651
mibFaultName: fsmStFailFirmwareImageDeleteRemote
moClass: firmware:Image
Type: fsm
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/boardController/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/image-[name]
```

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/image-[name]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/image-[name]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/image-[name]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/image-[name]
Affected MO: sys/fex-[id]/mgmt/image-[name]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/image-[name]
Affected MO: sys/fw-catalogue/image-[name]
Affected MO: sys/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/mgmt/image-[name]
Affected MO: sys/switch-[id]/mgmt/image-[name]

fsmStFailMgmtControllerUpdateSwitch:resetLocal

Fault Code: F16653

Message: [FSM:STAGE:FAILED|RETRY]: rebooting local fabric interconnect(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:resetLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: reset-local-failed
mibFaultCode: F16653
mibFaultName: fsmStFailMgmtControllerUpdateSwitchResetLocal
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:

sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateSwitch:resetRemote

Fault Code: F16653

Message: [FSM:STAGE:FAILED|RETRY]: rebooting remote fabric interconnect(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:resetRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: reset-remote-failed
mibFaultCode: F16653
mibFaultName: fsmStFailMgmtControllerUpdateSwitchResetRemote
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateSwitch:updateLocal

Fault Code: F16653

Message: [FSM:STAGE:FAILED|RETRY]: updating local fabric interconnect(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:updateLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-local-failed
mibFaultCode: F16653
mibFaultName: fsmStFailMgmtControllerUpdateSwitchUpdateLocal
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateSwitch:updateRemote

Fault Code: F16653

Message: [FSM:STAGE:FAILED|RETRY]: updating peer fabric interconnect(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:updateRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-remote-failed
mibFaultCode: F16653
mibFaultName: fsmStFailMgmtControllerUpdateSwitchUpdateRemote
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt

Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateSwitch:updateSpLocal

Fault Code: F16653

Message: [FSM:STAGE:FAILED|RETRY]: updating sp version on local fabric interconnect and reboot switch if needed(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:updateSpLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-sp-local-failed
mibFaultCode: F16653
mibFaultName: fsmStFailMgmtControllerUpdateSwitchUpdateSpLocal
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateSwitch:updateSpRemote

Fault Code: F16653

Message: [FSM:STAGE:FAILED|RETRY]: updating sp version on peer fabric interconnect and reboot switch if needed(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:updateSpRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-sp-remote-failed
mibFaultCode: F16653
mibFaultName: fsmStFailMgmtControllerUpdateSwitchUpdateSpRemote
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateSwitch:verifyLocal

Fault Code: F16653

Message: [FSM:STAGE:FAILED|RETRY]: verifying boot variables for local fabric interconnect(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:verifyLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: verify-local-failed
mibFaultCode: F16653
mibFaultName: fsmStFailMgmtControllerUpdateSwitchVerifyLocal
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateSwitch:verifyRemote

Fault Code: F16653

Message: [FSM:STAGE:FAILED|RETRY]: verifying boot variables for remote fabric interconnect(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:verifyRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: verify-remote-failed
mibFaultCode: F16653
mibFaultName: fsmStFailMgmtControllerUpdateSwitchVerifyRemote
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt

Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateIOM:CopyIOMImgToSub

Fault Code: F16654

Message: [FSM:STAGE:FAILED|RETRY]: Copying IOM Image to subordinate FI(FSM-STAGE:sam:dme:MgmtControllerUpdateIOM:CopyIOMImgToSub)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: copyiomimg-to-sub-failed
mibFaultCode: F16654
mibFaultName: fsmStFailMgmtControllerUpdateIOMCopyIOMImgToSub
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt

Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateIOM:CopyImgFromRep

Fault Code: F16654

Message: [FSM:STAGE:FAILED|RETRY]: Copying IOM Image from repository to FI(FSM-STAGE:sam:dme:MgmtControllerUpdateIOM:CopyImgFromRep)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: copy-img-from-rep-failed
mibFaultCode: F16654
mibFaultName: fsmStFailMgmtControllerUpdateIOMCopyImgFromRep
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateIOM:PollUpdateStatus

Fault Code: F16654

Message: [FSM:STAGE:FAILED|RETRY]: waiting for IOM update(FSM-STAGE:sam:dme:MgmtControllerUpdateIOM:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F16654
mibFaultName: fsmStFailMgmtControllerUpdateIOMPollUpdateStatus

moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt

Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateIOM:UpdateRequest

Fault Code: F16654

Message: [FSM:STAGE:FAILED|RETRY]: sending update request to IOM(FSM-STAGE:sam:dme:MgmtControllerUpdateIOM:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: F16654
mibFaultName: fsmStFailMgmtControllerUpdateIOMUpdateRequest
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerActivateIOM:Activate

Fault Code: F16655

Message: [FSM:STAGE:FAILED|RETRY]: activating backup image of IOM(FSM-STAGE:sam:dme:MgmtControllerActivateIOM:Activate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: activate-failed
mibFaultCode: F16655
mibFaultName: fsmStFailMgmtControllerActivateIOMActivate
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerActivateIOM:Reset

Fault Code: F16655

Message: [FSM:STAGE:FAILED|RETRY]: Resetting IOM to boot the activated version(FSM-STAGE:sam:dme:MgmtControllerActivateIOM:Reset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: reset-failed
mibFaultCode: F16655
mibFaultName: fsmStFailMgmtControllerActivateIOMReset
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateBMC:PollUpdateStatus

Fault Code: F16656

Message: [FSM:STAGE:FAILED|RETRY]: waiting for update to complete(FSM-STAGE:sam:dme:MgmtControllerUpdateBMC:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F16656
mibFaultName: fsmStFailMgmtControllerUpdateBMCPollUpdateStatus
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateBMC:UpdateRequest

Fault Code: F16656

Message: [FSM:STAGE:FAILED|RETRY]: sending update request to CIMC(FSM-STAGE:sam:dme:MgmtControllerUpdateBMC:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: F16656
mibFaultName: fsmStFailMgmtControllerUpdateBMCUpdateRequest
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt

Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerActivateBMC:Activate

Fault Code: F16657

Message: [FSM:STAGE:FAILED|RETRY]: activating backup image of CIMC(FSM-STAGE:sam:dme:MgmtControllerActivateBMC:Activate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: activate-failed
mibFaultCode: F16657
mibFaultName: fsmStFailMgmtControllerActivateBMCActivate
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerActivateBMC:Reset

Fault Code: F16657

Message: [FSM:STAGE:FAILED|RETRY]: Resetting CIMC to boot the activated version(FSM-STAGE:sam:dme:MgmtControllerActivateBMC:Reset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: reset-failed
mibFaultCode: F16657
mibFaultName: fsmStFailMgmtControllerActivateBMCReset
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailCallhomeEpConfigCallhome:SetLocal

Fault Code: F16670

Message: [FSM:STAGE:FAILED|RETRY]: call-home configuration on primary(FSM-STAGE:sam:dme:CallhomeEpConfigCallhome:SetLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-local-failed
mibFaultCode: F16670
mibFaultName: fsmStFailCallhomeEpConfigCallhomeSetLocal
moClass: callhome:Ep
Type: fsm
autoCleared: true
Affected MO: call-home
```

fsmStFailCallhomeEpConfigCallhome:SetPeer

Fault Code: F16670

Message: [FSM:STAGE:FAILED|RETRY]: call-home configuration on secondary(FSM-STAGE:sam:dme:CallhomeEpConfigCallhome:SetPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-peer-failed
mibFaultCode: F16670
mibFaultName: fsmStFailCallhomeEpConfigCallhomeSetPeer
moClass: callhome:Ep
Type: fsm
autoCleared: true
Affected MO: call-home
```

fsmStFailMgmtIfSwMgmtOobIfConfig:Switch

Fault Code: F16673

Message: [FSM:STAGE:FAILED|RETRY]: configuring the out-of-band interface(FSM-STAGE:sam:dme:MgmtIfSwMgmtOobIfConfig:Switch)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: switch-failed
mibFaultCode: F16673
mibFaultName: fsmStFailMgmtIfSwMgmtOobIfConfigSwitch
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]

Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmStFailMgmtIfSwMgmtInbandIfConfig:Switch

Fault Code: F16674

Message: [FSM:STAGE:FAILED|RETRY]: configuring the inband interface(FSM-STAGE:sam:dme:MgmtIfSwMgmtInbandIfConfig:Switch)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: switch-failed
mibFaultCode: F16674
mibFaultName: fsmStFailMgmtIfSwMgmtInbandIfConfigSwitch
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmStFailMgmtIfVirtualIfConfig:Local

Fault Code: F16679

Message: [FSM:STAGE:FAILED|RETRY]: Updating virtual interface on local fabric interconnect(FSM-STAGE:sam:dme:MgmtIfVirtualIfConfig:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: F16679
mibFaultName: fsmStFailMgmtIfVirtualIfConfigLocal
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]

Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmStFailMgmtIfVirtualIfConfig:Remote

Fault Code: F16679

Message: [FSM:STAGE:FAILED|RETRY]: Updating virtual interface on peer fabric interconnect(FSM-STAGE:sam:dme:MgmtIfVirtualIfConfig:Remote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: remote-failed
mibFaultCode: F16679
mibFaultName: fsmStFailMgmtIfVirtualIfConfigRemote
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]

Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmStFailMgmtIfEnableVip:Local

Fault Code: F16680

Message: [FSM:STAGE:FAILED|RETRY]: Enable virtual interface on local fabric interconnect(FSM-STAGE:sam:dme:MgmtIfEnableVip:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F16680
mibFaultName: fsmStFailMgmtIfEnableVipLocal
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
```

Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmStFailMgmtIfDisableVip:Peer

Fault Code: F16681

Message: [FSM:STAGE:FAILED|RETRY]: Disable virtual interface on peer fabric interconnect(FSM-STAGE:sam:dme:MgmtIfDisableVip:Peer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: peer-failed
mibFaultCode: F16681
mibFaultName: fsmStFailMgmtIfDisableVipPeer
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]

Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmStFailMgmtIfEnableHA:Local

Fault Code: F16682

Message: [FSM:STAGE:FAILED|RETRY]: Transition from single to cluster mode(FSM-STAGE:sam:dme:MgmtIfEnableHA:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F16682
mibFaultName: fsmStFailMgmtIfEnableHALocal
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
```

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmStFailMgmtBackupBackup:backupLocal

Fault Code: F16683

Message: [FSM:STAGE:FAILED|RETRY]: internal database backup(FSM-STAGE:sam:dme:MgmtBackupBackup:backupLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: backup-local-failed
mibFaultCode: F16683
mibFaultName: fsmStFailMgmtBackupBackupBackupLocal
moClass: mgmt:Backup
Type: fsm
autoCleared: true
Affected MO: sys/backup-[hostname]

fsmStFailMgmtBackupBackup:upload

Fault Code: F16683

Message: [FSM:STAGE:FAILED|RETRY]: internal system backup(FSM-STAGE:sam:dme:MgmtBackupBackup:upload)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: upload-failed
mibFaultCode: F16683
mibFaultName: fsmStFailMgmtBackupBackupUpload
moClass: mgmt:Backup
Type: fsm
autoCleared: true
Affected MO: sys/backup-[hostname]
```

fsmStFailMgmtImporterImport:config

Fault Code: F16684

Message: [FSM:STAGE:FAILED|RETRY]: importing the configuration file(FSM-STAGE:sam:dme:MgmtImporterImport:config)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-failed
mibFaultCode: F16684
mibFaultName: fsmStFailMgmtImporterImportConfig
moClass: mgmt:Importer
Type: fsm
autoCleared: true
Affected MO: sys/import-config-[hostname]
```

fsmStFailMgmtImporterImport:downloadLocal

Fault Code: F16684

Message: [FSM:STAGE:FAILED|RETRY]: downloading the configuration file from the remote location(FSM-STAGE:sam:dme:MgmtImporterImport:downloadLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: download-local-failed
mibFaultCode: F16684
mibFaultName: fsmStFailMgmtImporterImportDownloadLocal
moClass: mgmt:Importer
Type: fsm
autoCleared: true
Affected MO: sys/import-config-[hostname]
```

fsmStFailMgmtImporterImport:reportResults

Fault Code: F16684

Message: [FSM:STAGE:FAILED|RETRY]: Report results of configuration application(FSM-STAGE:sam:dme:MgmtImporterImport:reportResults)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: report-results-failed
mibFaultCode: F16684
mibFaultName: fsmStFailMgmtImporterImportReportResults
moClass: mgmt:Importer
Type: fsm
autoCleared: true
Affected MO: sys/import-config-[hostname]
```

fsmStFailMgmtImporterImport:verifyKey

Fault Code: F16684

Message: [FSM:STAGE:FAILED|RETRY]: verify if password encryption key matches(FSM-STAGE:sam:dme:MgmtImporterImport:verifyKey)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: verify-key-failed
mibFaultCode: F16684
mibFaultName: fsmStFailMgmtImporterImportVerifyKey
moClass: mgmt:Importer
Type: fsm
```

```
autoCleared: true
Affected MO: sys/import-config-[hostname]
```

fsmStFailStatsCollectionPolicyUpdateEp:SetEpA

Fault Code: F16742

Message: [FSM:STAGE:FAILED|RETRY]: Update endpoint on fabric interconnect A(FSM-STAGE:sam:dme:StatsCollectionPolicyUpdateEp:SetEpA)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-ep-afailed
mibFaultCode: F16742
mibFaultName: fsmStFailStatsCollectionPolicyUpdateEpSetEpA
moClass: stats:CollectionPolicy
Type: fsm
autoCleared: true
Affected MO: stats/coll-policy-[name]
```

fsmStFailStatsCollectionPolicyUpdateEp:SetEpB

Fault Code: F16742

Message: [FSM:STAGE:FAILED|RETRY]: Update endpoint on fabric interconnect B(FSM-STAGE:sam:dme:StatsCollectionPolicyUpdateEp:SetEpB)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-ep-bfailed
mibFaultCode: F16742
mibFaultName: fsmStFailStatsCollectionPolicyUpdateEpSetEpB
moClass: stats:CollectionPolicy
Type: fsm
autoCleared: true
Affected MO: stats/coll-policy-[name]
```

fsmStFailQosclassDefinitionConfigGlobalQoS:SetLocal

Fault Code: F16745

Message: [FSM:STAGE:FAILED|RETRY]: QoS Classification Definition [name] configuration on primary(FSM-STAGE:sam:dme:QosclassDefinitionConfigGlobalQoS:SetLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-local-failed
mibFaultCode: F16745
mibFaultName: fsmStFailQosclassDefinitionConfigGlobalQoSSetLocal
moClass: qosclass:Definition
Type: fsm
autoCleared: true
Affected MO: fabric/lan/classes
```

fsmStFailQosclassDefinitionConfigGlobalQoS:SetPeer

Fault Code: F16745

Message: [FSM:STAGE:FAILED|RETRY]: QoS Classification Definition [name] configuration on secondary(FSM-STAGE:sam:dme:QosclassDefinitionConfigGlobalQoS:SetPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-peer-failed
mibFaultCode: F16745
mibFaultName: fsmStFailQosclassDefinitionConfigGlobalQoSSetPeer
moClass: qosclass:Definition
Type: fsm
autoCleared: true
Affected MO: fabric/lan/classes
```

fsmStFailQosclassDefinitionConfigGlobalQoS:WaitForUserAck

Fault Code: F16745

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for User Acknowledgment to configuration on primary(FSM-STAGE:sam:dme:QosclassDefinitionConfigGlobalQoS:WaitForUserAck)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-user-ack-failed
mibFaultCode: F16745
mibFaultName: fsmStFailQosclassDefinitionConfigGlobalQoSWaitForUserAck
moClass: qosclass:Definition
Type: fsm
autoCleared: true
Affected MO: fabric/lan/classes
```

fsmStFailEpqosDefinitionDeploy:Local

Fault Code: F16749

Message: [FSM:STAGE:FAILED|RETRY]: vnic qos policy [name] configuration to primary(FSM-STAGE:sam:dme:EpqosDefinitionDeploy:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F16749
mibFaultName: fsmStFailEpqosDefinitionDeployLocal
moClass: epqos:Definition
Type: fsm
autoCleared: true
Affected MO: org-[name]/ep-qos-[name]
```

fsmStFailEpqosDefinitionDeploy:Peer

Fault Code: F16749

Message: [FSM:STAGE:FAILED|RETRY]: vnic qos policy [name] configuration to secondary(FSM-STAGE:sam:dme:EpqosDefinitionDeploy:Peer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: peer-failed
mibFaultCode: F16749
mibFaultName: fsmStFailEpqosDefinitionDeployPeer
moClass: epqos:Definition
Type: fsm
autoCleared: true
Affected MO: org-[name]/ep-qos-[name]
```

fsmStFailEpqosDefinitionDelTaskRemove:Local

Fault Code: F16750

Message: [FSM:STAGE:FAILED|RETRY]: vnic qos policy [name] removal from primary(FSM-STAGE:sam:dme:EpqosDefinitionDelTaskRemove:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F16750
mibFaultName: fsmStFailEpqosDefinitionDelTaskRemoveLocal
moClass: epqos:DefinitionDelTask
Type: fsm
autoCleared: true
Affected MO: org-[name]/ep-qos-deletion-[defIntId]
```

fsmStFailEpqosDefinitionDelTaskRemove:Peer

Fault Code: F16750

Message: [FSM:STAGE:FAILED|RETRY]: vnic qos policy [name] removal from secondary(FSM-STAGE:sam:dme:EpqosDefinitionDelTaskRemove:Peer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: peer-failed
mibFaultCode: F16750
mibFaultName: fsmStFailEpqosDefinitionDelTaskRemovePeer
moClass: epqos:DefinitionDelTask
Type: fsm
autoCleared: true
Affected MO: org-[name]/ep-qos-deletion-[defIntId]
```

fsmStFailEquipmentIOCardResetCmc:Execute

Fault Code: F16803

Message: [FSM:STAGE:FAILED|RETRY]: Resetting Chassis Management Controller on IOM [chassisId]/[id](FSM-STAGE:sam:dme:EquipmentIOCardResetCmc:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F16803
mibFaultName: fsmStFailEquipmentIOCardResetCmcExecute
moClass: equipment:IOCard
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmStFailMgmtControllerUpdateUCSManager:execute

Fault Code: F16815

Message: [FSM:STAGE:FAILED|RETRY]: Updating UCS Manager firmware(FSM-STAGE:sam:dme:MgmtControllerUpdateUCSManager:execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F16815
mibFaultName: fsmStFailMgmtControllerUpdateUCSManagerExecute
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
```

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateUCSManager:start

Fault Code: F16815

Message: [FSM:STAGE:FAILED|RETRY]: Scheduling UCS manager update(FSM-STAGE:sam:dme:MgmtControllerUpdateUCSManager:start)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: start-failed
mibFaultCode: F16815

mibFaultName: fsmStFailMgmtControllerUpdateUCSManagerStart
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt

Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerSysConfig:Primary

Fault Code: F16823

Message: [FSM:STAGE:FAILED|RETRY]: system configuration on primary(FSM-STAGE:sam:dme:MgmtControllerSysConfig:Primary)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: primary-failed
mibFaultCode: F16823
mibFaultName: fsmStFailMgmtControllerSysConfigPrimary
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerSysConfig:Secondary

Fault Code: F16823

Message: [FSM:STAGE:FAILED|RETRY]: system configuration on secondary(FSM-STAGE:sam:dme:MgmtControllerSysConfig:Secondary)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: secondary-failed
mibFaultCode: F16823
mibFaultName: fsmStFailMgmtControllerSysConfigSecondary
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:

sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailAdaptorExtEthIfPathReset:Disable

Fault Code: F16852

Message: [FSM:STAGE:FAILED|RETRY]: Disable path [side]([switchId]) on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorExtEthIfPathReset:Disable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: disable-failed
mibFaultCode: F16852
mibFaultName: fsmStFailAdaptorExtEthIfPathResetDisable
moClass: adaptor:ExtEthIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]
```

fsmStFailAdaptorExtEthIfPathReset:Enable

Fault Code: F16852

Message: [FSM:STAGE:FAILED|RETRY]: Enable path [side]([switchId]) on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorExtEthIfPathReset:Enable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: enable-failed
mibFaultCode: F16852
mibFaultName: fsmStFailAdaptorExtEthIfPathResetEnable
moClass: adaptor:ExtEthIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]
```

fsmStFailAdaptorHostEthIfCircuitReset:DisableA

Fault Code: F16857

Message: [FSM:STAGE:FAILED|RETRY]: Disable circuit A for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostEthIfCircuitReset:DisableA)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: disable-afailed
mibFaultCode: F16857
mibFaultName: fsmStFailAdaptorHostEthIfCircuitResetDisableA
moClass: adaptor:HostEthIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]
```

fsmStFailAdaptorHostEthIfCircuitReset:DisableB

Fault Code: F16857

Message: [FSM:STAGE:FAILED|RETRY]: Disable circuit B for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostEthIfCircuitReset:DisableB)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: disable-bfailed
mibFaultCode: F16857
mibFaultName: fsmStFailAdaptorHostEthIfCircuitResetDisableB
moClass: adaptor:HostEthIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]
```

fsmStFailAdaptorHostEthIfCircuitReset:EnableA

Fault Code: F16857

Message: [FSM:STAGE:FAILED|RETRY]: Enable circuit A for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostEthIfCircuitReset:EnableA)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: enable-afailed
mibFaultCode: F16857
mibFaultName: fsmStFailAdaptorHostEthIfCircuitResetEnableA
moClass: adaptor:HostEthIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]
```

fsmStFailAdaptorHostEthIfCircuitReset:EnableB

Fault Code: F16857

Message: [FSM:STAGE:FAILED|RETRY]: Enable circuit B for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostEthIfCircuitReset:EnableB)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: enable-bfailed
mibFaultCode: F16857
mibFaultName: fsmStFailAdaptorHostEthIfCircuitResetEnableB
moClass: adaptor:HostEthIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]
```

fsmStFailAdaptorHostFcIfCircuitReset:DisableA

Fault Code: F16858

Message: [FSM:STAGE:FAILED|RETRY]: Disable circuit A for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostFcIfCircuitReset:DisableA)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: disable-afailed
mibFaultCode: F16858
mibFaultName: fsmStFailAdaptorHostFcIfCircuitResetDisableA
moClass: adaptor:HostFcIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]
```

fsmStFailAdaptorHostFcIfCircuitReset:DisableB

Fault Code: F16858

Message: [FSM:STAGE:FAILED|RETRY]: Disable circuit B for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostFcIfCircuitReset:DisableB)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: disable-bfailed
mibFaultCode: F16858
mibFaultName: fsmStFailAdaptorHostFcIfCircuitResetDisableB
moClass: adaptor:HostFcIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]
```

fsmStFailAdaptorHostFcIfCircuitReset:EnableA

Fault Code: F16858

Message: [FSM:STAGE:FAILED|RETRY]: Enable circuit A for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostFcIfCircuitReset:EnableA)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: enable-afailed
mibFaultCode: F16858
```

```
mibFaultName: fsmStFailAdaptorHostFcIfCircuitResetEnableA
moClass: adaptor:HostFcIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]
```

fsmStFailAdaptorHostFcIfCircuitReset:EnableB

Fault Code: F16858

Message: [FSM:STAGE:FAILED|RETRY]: Enable circuit B for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostFcIfCircuitReset:EnableB)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: enable-bfailed
mibFaultCode: F16858
mibFaultName: fsmStFailAdaptorHostFcIfCircuitResetEnableB
moClass: adaptor:HostFcIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]
```

fsmStFailExtvmmProviderConfig:GetVersion

Fault Code: F16879

Message: [FSM:STAGE:FAILED|RETRY]: external VM manager version fetch(FSM-STAGE:sam:dme:ExtvmmProviderConfig:GetVersion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: get-version-failed
mibFaultCode: F16879
mibFaultName: fsmStFailExtvmmProviderConfigGetVersion
moClass: extvmm:Provider
Type: fsm
```

```
autoCleared: true
Affected MO: sys/extvm-mgmt/vm-[name]
```

fsmStFailExtvmmProviderConfig:SetLocal

Fault Code: F16879

Message: [FSM:STAGE:FAILED|RETRY]: external VM manager configuration on local fabric(FSM-STAGE:sam:dme:ExtvmmProviderConfig:SetLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-local-failed
mibFaultCode: F16879
mibFaultName: fsmStFailExtvmmProviderConfigSetLocal
moClass: extvmm:Provider
Type: fsm
autoCleared: true
Affected MO: sys/extvm-mgmt/vm-[name]
```

fsmStFailExtvmmProviderConfig:SetPeer

Fault Code: F16879

Message: [FSM:STAGE:FAILED|RETRY]: external VM manager configuration on peer fabric(FSM-STAGE:sam:dme:ExtvmmProviderConfig:SetPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-peer-failed
mibFaultCode: F16879
mibFaultName: fsmStFailExtvmmProviderConfigSetPeer
moClass: extvmm:Provider
Type: fsm
autoCleared: true
Affected MO: sys/extvm-mgmt/vm-[name]
```

fsmStFailExtvmmKeyStoreCertInstall:SetLocal

Fault Code: F16880

Message: [FSM:STAGE:FAILED|RETRY]: external VM manager certificate configuration on local fabric(FSM-STAGE:sam:dme:ExtvmmKeyStoreCertInstall:SetLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-local-failed
mibFaultCode: F16880
mibFaultName: fsmStFailExtvmmKeyStoreCertInstallSetLocal
moClass: extvmm:KeyStore
Type: fsm
autoCleared: true
Affected MO: sys/extvm-mgmt/key-store
```

fsmStFailExtvmmKeyStoreCertInstall:SetPeer

Fault Code: F16880

Message: [FSM:STAGE:FAILED|RETRY]: external VM manager certificate configuration on peer fabric(FSM-STAGE:sam:dme:ExtvmmKeyStoreCertInstall:SetPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-peer-failed
mibFaultCode: F16880
mibFaultName: fsmStFailExtvmmKeyStoreCertInstallSetPeer
moClass: extvmm:KeyStore
Type: fsm
autoCleared: true
Affected MO: sys/extvm-mgmt/key-store
```

fsmStFailExtvmmSwitchDelTaskRemoveProvider:RemoveLocal

Fault Code: F16881

Message: [FSM:STAGE:FAILED|RETRY]: external VM manager deletion from local fabric(FSM-STAGE:sam:dme:ExtvmmSwitchDelTaskRemoveProvider:RemoveLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: remove-local-failed
mibFaultCode: F16881
mibFaultName: fsmStFailExtvmmSwitchDelTaskRemoveProviderRemoveLocal
moClass: extvmm:SwitchDelTask
Type: fsm
autoCleared: true
Affected MO: sys/extvm-mgmt/vsw-deltask-[swIntId]
```

fsmStFailExtvmmMasterExtKeyConfig:SetLocal

Fault Code: F16898

Message: [FSM:STAGE:FAILED|RETRY]: external VM manager extension-key configuration on peer fabric(FSM-STAGE:sam:dme:ExtvmmMasterExtKeyConfig:SetLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-local-failed
mibFaultCode: F16898
mibFaultName: fsmStFailExtvmmMasterExtKeyConfigSetLocal
moClass: extvmm:MasterExtKey
Type: fsm
autoCleared: true
Affected MO: sys/extvm-mgmt/ext-key
```

fsmStFailExtvmmMasterExtKeyConfig:SetPeer

Fault Code: F16898

Message: [FSM:STAGE:FAILED|RETRY]: external VM manager extension-key configuration on local fabric(FSM-STAGE:sam:dme:ExtvmmMasterExtKeyConfig:SetPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-peer-failed
mibFaultCode: F16898
mibFaultName: fsmStFailExtvmmMasterExtKeyConfigSetPeer
moClass: extvmm:MasterExtKey
Type: fsm
autoCleared: true
Affected MO: sys/extvm-mgmt/ext-key
```

fsmStFailCapabilityUpdaterUpdater:Apply

Fault Code: F16904

Message: [FSM:STAGE:FAILED|RETRY]: applying changes to catalog(FSM-STAGE:sam:dme:CapabilityUpdaterUpdater:Apply)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-failed
mibFaultCode: F16904
mibFaultName: fsmStFailCapabilityUpdaterUpdaterApply
moClass: capability:Updater
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/updater-[fileName]
```

fsmStFailCapabilityUpdaterUpdater:CopyRemote

Fault Code: F16904

Message: [FSM:STAGE:FAILED|RETRY]: syncing catalog files to subordinate(FSM-STAGE:sam:dme:CapabilityUpdaterUpdater:CopyRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-remote-failed
mibFaultCode: F16904
mibFaultName: fsmStFailCapabilityUpdaterUpdaterCopyRemote
moClass: capability:Updater
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/updater-[fileName]
```

fsmStFailCapabilityUpdaterUpdater:DeleteLocal

Fault Code: F16904

Message: [FSM:STAGE:FAILED|RETRY]: deleting temp image [fileName] on local(FSM-STAGE:sam:dme:CapabilityUpdaterUpdater:DeleteLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-local-failed
mibFaultCode: F16904
mibFaultName: fsmStFailCapabilityUpdaterUpdaterDeleteLocal
moClass: capability:Updater
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/updater-[fileName]
```

fsmStFailCapabilityUpdaterUpdater:EvaluateStatus

Fault Code: F16904

Message: [FSM:STAGE:FAILED|RETRY]: evaluating status of update(FSM-STAGE:sam:dme:CapabilityUpdaterUpdater:EvaluateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: evaluate-status-failed
mibFaultCode: F16904
mibFaultName: fsmStFailCapabilityUpdaterUpdaterEvaluateStatus
moClass: capability:Updater
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/updater-[fileName]
```

fsmStFailCapabilityUpdaterUpdater:Local

Fault Code: F16904

Message: [FSM:STAGE:FAILED|RETRY]: downloading catalog file [fileName] from [server](FSM-STAGE:sam:dme:CapabilityUpdaterUpdater:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F16904
```

```
mibFaultName: fsmStFailCapabilityUpdaterUpdaterLocal
moClass: capability:Updater
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/updater-[fileName]
```

fsmStFailCapabilityUpdaterUpdater:RescanImages

Fault Code: F16904

Message: [FSM:STAGE:FAILED|RETRY]: rescanning image files(FSM-STAGE:sam:dme:CapabilityUpdaterUpdater:RescanImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: rescan-images-failed
mibFaultCode: F16904
mibFaultName: fsmStFailCapabilityUpdaterUpdaterRescanImages
moClass: capability:Updater
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/updater-[fileName]
```

fsmStFailCapabilityUpdaterUpdater:UnpackLocal

Fault Code: F16904

Message: [FSM:STAGE:FAILED|RETRY]: unpacking catalog file [fileName] on primary(FSM-STAGE:sam:dme:CapabilityUpdaterUpdater:UnpackLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unpack-local-failed
mibFaultCode: F16904
mibFaultName: fsmStFailCapabilityUpdaterUpdaterUnpackLocal
moClass: capability:Updater
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/updater-[fileName]
```

fsmStFailFirmwareDistributableDelete:Local

Fault Code: F16906

Message: [FSM:STAGE:FAILED|RETRY]: deleting package [name] from primary(FSM-STAGE:sam:dme:FirmwareDistributableDelete:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F16906
mibFaultName: fsmStFailFirmwareDistributableDeleteLocal
moClass: firmware:Distributable
Type: fsm
autoCleared: true
Affected MO: sys/fw-catalogue/distrib-[name]
```

fsmStFailFirmwareDistributableDelete:Remote

Fault Code: F16906

Message: [FSM:STAGE:FAILED|RETRY]: deleting package [name] from secondary(FSM-STAGE:sam:dme:FirmwareDistributableDelete:Remote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: remote-failed
mibFaultCode: F16906
mibFaultName: fsmStFailFirmwareDistributableDeleteRemote
moClass: firmware:Distributable
Type: fsm
autoCleared: true
Affected MO: sys/fw-catalogue/distrib-[name]
```

fsmStFailCapabilityCatalogueDeployCatalogue:SyncBladeAGLocal

Fault Code: F16931

Message: [FSM:STAGE:FAILED|RETRY]: Sending capability catalogue [version] to local bladeAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncBladeAGLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sync-bladeaglocal-failed
mibFaultCode: F16931
mibFaultName: fsmStFailCapabilityCatalogueDeployCatalogueSyncBladeAGLocal
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmStFailCapabilityCatalogueDeployCatalogue:SyncBladeAGRemote

Fault Code: F16931

Message: [FSM:STAGE:FAILED|RETRY]: Sending capability catalogue [version] to remote bladeAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncBladeAGRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sync-bladeagremote-failed
mibFaultCode: F16931
mibFaultName: fsmStFailCapabilityCatalogueDeployCatalogueSyncBladeAGRemote
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmStFailCapabilityCatalogueDeployCatalogue:SyncHostagentAGLocal

Fault Code: F16931

Message: [FSM:STAGE:FAILED|RETRY]: Sending capability catalogue [version] to local hostagentAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncHostagentAGLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sync-hostagentaglocal-failed
mibFaultCode: F16931
mibFaultName: fsmStFailCapabilityCatalogueDeployCatalogueSyncHostagentAGLocal
moClass: capability:Catalogue
Type: fsm
```

```
autoCleared: true
Affected MO: capabilities
```

fsmStFailCapabilityCatalogueDeployCatalogue:SyncHostagentAGRemote

Fault Code: F16931

Message: [FSM:STAGE:FAILED|RETRY]: Sending capability catalogue [version] to remote hostagentAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncHostagentAGRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sync-hostagentagremote-failed
mibFaultCode: F16931
mibFaultName: fsmStFailCapabilityCatalogueDeployCatalogueSyncHostagentAGRemote
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmStFailCapabilityCatalogueDeployCatalogue:SyncNicAGLocal

Fault Code: F16931

Message: [FSM:STAGE:FAILED|RETRY]: Sending capability catalogue [version] to local nicAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncNicAGLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sync-nicaglocal-failed
mibFaultCode: F16931
mibFaultName: fsmStFailCapabilityCatalogueDeployCatalogueSyncNicAGLocal
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmStFailCapabilityCatalogueDeployCatalogue:SyncNicAGRemote

Fault Code: F16931

Message: [FSM:STAGE:FAILED|RETRY]: Sending capability catalogue [version] to remote nicAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncNicAGRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sync-nicagremote-failed
mibFaultCode: F16931
mibFaultName: fsmStFailCapabilityCatalogueDeployCatalogueSyncNicAGRemote
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmStFailCapabilityCatalogueDeployCatalogue:SyncPortAGLocal

Fault Code: F16931

Message: [FSM:STAGE:FAILED|RETRY]: Sending capability catalogue [version] to local portAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncPortAGLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sync-portaglocal-failed
mibFaultCode: F16931
mibFaultName: fsmStFailCapabilityCatalogueDeployCatalogueSyncPortAGLocal
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmStFailCapabilityCatalogueDeployCatalogue:SyncPortAGRemote

Fault Code: F16931

Message: [FSM:STAGE:FAILED|RETRY]: Sending capability catalogue [version] to remote portAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncPortAGRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sync-portagremote-failed
mibFaultCode: F16931
mibFaultName: fsmStFailCapabilityCatalogueDeployCatalogueSyncPortAGRemote
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmStFailCapabilityCatalogueDeployCatalogue:finalize

Fault Code: F16931

Message: [FSM:STAGE:FAILED|RETRY]: Finalizing capability catalogue [version] deployment(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:finalize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: finalize-failed
mibFaultCode: F16931
mibFaultName: fsmStFailCapabilityCatalogueDeployCatalogueFinalize
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmStFailEquipmentFexRemoveFex:CleanUpVIfs

Fault Code: F16942

Message: [FSM:STAGE:FAILED|RETRY]: deleting VIfs from fex [id] from primary(FSM-STAGE:sam:dme:EquipmentFexRemoveFex:CleanUpVIfs)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: clean-upvifs-failed
mibFaultCode: F16942
mibFaultName: fsmStFailEquipmentFexRemoveFexCleanUpVIfs
moClass: equipment:Fex
Type: fsm
autoCleared: true
Affected MO: sys/fex-[id]
```

fsmStFailEquipmentFexRemoveFex:CleanupEntries

Fault Code: F16942

Message: [FSM:STAGE:FAILED|RETRY]: cleaning host entries(FSM-STAGE:sam:dme:EquipmentFexRemoveFex:CleanupEntries)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cleanup-entries-failed
mibFaultCode: F16942
mibFaultName: fsmStFailEquipmentFexRemoveFexCleanupEntries
moClass: equipment:Fex
Type: fsm
autoCleared: true
Affected MO: sys/fex-[id]
```

fsmStFailEquipmentFexRemoveFex:UnIdentifyLocal

Fault Code: F16942

Message: [FSM:STAGE:FAILED|RETRY]: erasing fex identity [id] from primary(FSM-STAGE:sam:dme:EquipmentFexRemoveFex:UnIdentifyLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: un-identify-local-failed
mibFaultCode: F16942
mibFaultName: fsmStFailEquipmentFexRemoveFexUnIdentifyLocal
moClass: equipment:Fex
Type: fsm
autoCleared: true
Affected MO: sys/fex-[id]
```

fsmStFailEquipmentFexRemoveFex:Wait

Fault Code: F16942

Message: [FSM:STAGE:FAILED|RETRY]: waiting for clean up of resources for chassis [id] (approx. 2 min)(FSM-STAGE:sam:dme:EquipmentFexRemoveFex:Wait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-failed
mibFaultCode: F16942
mibFaultName: fsmStFailEquipmentFexRemoveFexWait
moClass: equipment:Fex
Type: fsm
autoCleared: true
Affected MO: sys/fex-[id]
```

fsmStFailEquipmentFexRemoveFex:decomission

Fault Code: F16942

Message: [FSM:STAGE:FAILED|RETRY]: decommissioning fex [id](FSM-STAGE:sam:dme:EquipmentFexRemoveFex:decomission)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: decomission-failed
mibFaultCode: F16942
mibFaultName: fsmStFailEquipmentFexRemoveFexDecomission
moClass: equipment:Fex
Type: fsm
autoCleared: true
Affected MO: sys/fex-[id]
```

fsmStFailEquipmentLocatorLedSetFeLocatorLed:Execute

Fault Code: F16943

Message: [FSM:STAGE:FAILED|RETRY]: setting locator led to [adminState](FSM-STAGE:sam:dme:EquipmentLocatorLedSetFeLocatorLed:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F16943
```

mibFaultName: fsmStFailEquipmentLocatorLedSetFeLocatorLedExecute
moClass: equipment:LocatorLed
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/locator-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/locator-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/locator-led
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/locator-led
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/chassis-[id]/locator-led
Affected MO: sys/chassis-[id]/psu-[id]/locator-led
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/chassis-[id]/slot-[id]/locator-led
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/fex-[id]/locator-led
Affected MO: sys/fex-[id]/psu-[id]/locator-led
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/fex-[id]/slot-[id]/locator-led
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/rack-enclosure-[id]/psu-[id]/locator-led
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/rack-unit-[id]/ext-board-[id]/locator-led
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/rack-unit-[id]/locator-led
Affected MO: sys/rack-unit-[id]/psu-[id]/locator-led
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/switch-[id]/locator-led
Affected MO: sys/switch-[id]/psu-[id]/locator-led

fsmStFailEquipmentChassisPowerCap:Config

Fault Code: F16944

Message: [FSM:STAGE:FAILED|RETRY]: (FSM-STAGE:sam:dme:EquipmentChassisPowerCap:Config)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning

```
Cause: config-failed
mibFaultCode: F16944
mibFaultName: fsmStFailEquipmentChassisPowerCapConfig
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisPowerCap:Wait

Fault Code: F16944

Message: [FSM:STAGE:FAILED|RETRY]: Waiting before powercap deployment on chassis [id](FSM-STAGE:sam:dme:EquipmentChassisPowerCap:Wait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-failed
mibFaultCode: F16944
mibFaultName: fsmStFailEquipmentChassisPowerCapWait
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentIOCardMuxOffline:CleanupEntries

Fault Code: F16945

Message: [FSM:STAGE:FAILED|RETRY]: cleaning host entries(FSM-STAGE:sam:dme:EquipmentIOCardMuxOffline:CleanupEntries)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cleanup-entries-failed
mibFaultCode: F16945
mibFaultName: fsmStFailEquipmentIOCardMuxOfflineCleanupEntries
moClass: equipment:IOCard
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmStFailComputePhysicalAssociate:ActivateBios

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Activate BIOS image for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:ActivateBios)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-bios-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateActivateBios
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:AssertBypassWait

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for assert bypass on rack server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:AssertBypassWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: assert-bypass-wait-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateAssertBypassWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:BiosImgUpdate

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Update blade BIOS image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BiosImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bios-img-update-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateBiosImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:BiosPostCompletion

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for BIOS POST completion from CIMC on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:BiosPostCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateBiosPostCompletion
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:BladePowerOff

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Power off server for configuration of service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:BladePowerOff)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: blade-power-off-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateBladePowerOff
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:BmcConfigPnuOS

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: provisioning a bootable device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BmcConfigPnuOS)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-config-pnuos-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateBmcConfigPnuOS
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:BmcPreconfigPnuOSLocal

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BmcPreconfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: bmc-preconfig-pnuoslocal-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateBmcPreconfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:BmcPreconfigPnuOSPeer

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BmcPreconfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-preconfig-pnuospeer-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateBmcPreconfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:BmcUnconfigPnuOS

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: unprovisioning the bootable device for server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BmcUnconfigPnuOS)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-unconfig-pnuos-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateBmcUnconfigPnuOS
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:BootHost

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Boot host OS for server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BootHost)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-host-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateBootHost
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:BootPnuos

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Bring-up pre-boot environment for association with [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:BootPnuos)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-pnuos-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateBootPnuos
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:BootWait

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for system reset(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BootWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-wait-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateBootWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:CalculateVlanGroupForHostOSLocal

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Calculate VLAN group for server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:CalculateVlanGroupForHostOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: calculate-vlan-group-for-hostoslocal-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateCalculateVlanGroupForHostOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:CalculateVlanGroupForHostOSPeer

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Calculate VLAN group for server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:CalculateVlanGroupForHostOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: calculate-vlan-group-for-hostospeer-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateCalculateVlanGroupForHostOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:CheckPowerAvailability

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:CiscoOSOpenGate

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Open Gate from CIMC on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:CiscoOSOpenGate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: ciscoosopen-gate-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateCiscoOSOpenGate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:ClearBiosUpdate

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Clearing pending BIOS image update(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ClearBiosUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: clear-bios-update-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateClearBiosUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:ConfigCimcVMedia

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: configuring mappings for vmedia(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigCimcVMedia)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: config-cimcvmedia-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateConfigCimcVMedia
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:ConfigExtMgmtGw

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: configuring ext mgmt gateway for vmedia(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigExtMgmtGw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-ext-mgmt-gw-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateConfigExtMgmtGw
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:ConfigExtMgmtRules

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: configuring ext mgmt rules for vmedia(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigExtMgmtRules)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-ext-mgmt-rules-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateConfigExtMgmtRules
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:ConfigFanSpeed

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configuring Rack Fan Speed(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigFanSpeed)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-fan-speed-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateConfigFanSpeed
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:ConfigFlexFlash

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configuring FlexFlash(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigFlexFlash)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-flex-flash-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateConfigFlexFlash
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:ConfigHostOsAnnotations

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configure host OS annotations for server profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigHostOsAnnotations)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-host-os-annotations-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateConfigHostOsAnnotations
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:ConfigMgmtIpRules

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configuring ip mgmt rules(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigMgmtIpRules)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-mgmt-ip-rules-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateConfigMgmtIpRules
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:ConfigServerIdentity

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configure asset tag for server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigServerIdentity)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-server-identity-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateConfigServerIdentity
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:ConfigSoL

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configuring SoL interface on server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigSoL)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-so-lfailed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateConfigSoL
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:ConfigUserAccess

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configuring external user access(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigUserAccess)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-user-access-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateConfigUserAccess
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:ConfigUuid

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configure logical UUID for server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigUuid)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-uuid-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateConfigUuid
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:DeassertResetBypass

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: deassert reset-bypass(FSM-STAGE:sam:dme:ComputePhysicalAssociate:DeassertResetBypass)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: deassert-reset-bypass-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateDeassertResetBypass
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:DeleteCurlDownloadedImages

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Delete images downloaded from operations manager(FSM-STAGE:sam:dme:ComputePhysicalAssociate:DeleteCurlDownloadedImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-curl-downloaded-images-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateDeleteCurlDownloadedImages
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:DeleteImagesRemote

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Delete images downloaded from operations manager(FSM-STAGE:sam:dme:ComputePhysicalAssociate:DeleteImagesRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-images-remote-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateDeleteImagesRemote
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:GraphicsImageUpdate

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Update gpu firmware image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:GraphicsImageUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: graphics-image-update-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateGraphicsImageUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:HbaImgUpdate

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Update Host Bus Adapter image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:HbaImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hba-img-update-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateHbaImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:HostOSConfig

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configure host OS components on server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:HostOSConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hostosconfig-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateHostOSConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:HostOSConnect

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Connect to Host OS on server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:HostOSConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hostosconnect-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateHostOSConnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:HostOSIdent

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Identify host agent on server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:HostOSIdent)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hostosident-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateHostOSIdent
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:HostOSPolicy

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Upload host agent policy to host agent on server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:HostOSPolicy)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hostospolicy-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateHostOSPolicy
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:HostOSValidate

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Validate host OS on server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:HostOSValidate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hostosvalidate-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateHostOSValidate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:LocalDiskFwUpdate

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Update LocalDisk firmware image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:LocalDiskFwUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-disk-fw-update-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateLocalDiskFwUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:MarkAdapterForReboot

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: deassert reset-bypass(FSM-STAGE:sam:dme:ComputePhysicalAssociate:MarkAdapterForReboot)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: mark-adapter-for-reboot-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateMarkAdapterForReboot
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:MswitchImgUpdate

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Update NVMe MSwitch image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:MswitchImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: mswitch-img-update-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateMswitchImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:NicConfigHostOSLocal

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configure adapter in server for host OS (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicConfigHostOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-hostoslocal-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateNicConfigHostOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:NicConfigHostOSPeer

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configure adapter in server for host OS (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicConfigHostOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-hostospeer-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateNicConfigHostOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:NicConfigParamsHostOSLocal

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configure and modify properties of vNIC(s) on the adapter (service profile : [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicConfigParamsHostOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-params-hostoslocal-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateNicConfigParamsHostOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:NicConfigParamsHostOSPeer

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configure and modify properties of vNIC(s) on the adapter (service profile : [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicConfigParamsHostOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-params-hostospeer-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateNicConfigParamsHostOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:NicConfigPnuOSLocal

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configure adapter for pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicConfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-pnuoslocal-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateNicConfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:NicConfigPnuOSPeer

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configure adapter for pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicConfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-pnuospeer-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateNicConfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:NicConfigServiceInfraLocal

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configure adapter in server for service infrastructure ([assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicConfigServiceInfraLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-service-infra-local-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateNicConfigServiceInfraLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:NicConfigServiceInfraPeer

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configure adapter in server for service infrastructure ([assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicConfigServiceInfraPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-service-infra-peer-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateNicConfigServiceInfraPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:NicImgUpdate

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Update adapter image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-img-update-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateNicImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:NicUnconfigPnuOSLocal

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure adapter of server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicUnconfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-unconfig-pnuoslocal-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateNicUnconfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:NicUnconfigPnuOSPeer

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure adapter of server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicUnconfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-unconfig-pnuospeer-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateNicUnconfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:OobPollSasExpanderActivateStatus

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Sas expander regular firmware activation to complete(FSM-STAGE:sam:dme:ComputePhysicalAssociate:OobPollSasExpanderActivateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-poll-sas-expander-activate-status-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateOobPollSasExpanderActivateStatus
moClass: compute:Physical
```

```
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:OobPollSasExpanderBootImgActivateStatus

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Sas expander boot firmware update to complete(FSM-STAGE:sam:dme:ComputePhysicalAssociate:OobPollSasExpanderBootImgActivateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-poll-sas-expander-boot-img-activate-status-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateOobPollSasExpanderBootImgActivateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:OobPollSasExpanderUpdateStatus

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Sas expander regular firmware update to complete(FSM-STAGE:sam:dme:ComputePhysicalAssociate:OobPollSasExpanderUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-poll-sas-expander-update-status-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateOobPollSasExpanderUpdateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:OobSasExpanderBootImgActivate

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Sas expander boot firmware update(FSM-STAGE:sam:dme:ComputePhysicalAssociate:OobSasExpanderBootImgActivate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-sas-expander-boot-img-activate-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateOobSasExpanderBootImgActivate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:OobSasExpanderImgActivate

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Sas expander regular firmware activate(FSM-STAGE:sam:dme:ComputePhysicalAssociate:OobSasExpanderImgActivate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-sas-expander-img-activate-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateOobSasExpanderImgActivate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:OobSasExpanderImgUpdate

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Sas expander regular firmware update(FSM-STAGE:sam:dme:ComputePhysicalAssociate:OobSasExpanderImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-sas-expander-img-update-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateOobSasExpanderImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:OobStorageConfig

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Storage configuration(FSM-STAGE:sam:dme:ComputePhysicalAssociate:OobStorageConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-storage-config-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateOobStorageConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:OobStorageInventory

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Perform oob storage inventory with server profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:OobStorageInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-storage-inventory-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateOobStorageInventory
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:PciSwitchImageUpdate

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Update Pci Switch firmware image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PciSwitchImageUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pci-switch-image-update-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociatePciSwitchImageUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:PersistentMemoryDimmFwUpdate

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Update Persistent Memory DIMM firmware image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PersistentMemoryDimmFwUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: persistent-memory-dimm-fw-update-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociatePersistentMemoryDimmFwUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:PnuOSCatalog

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Populate pre-boot catalog to server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSCatalog)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuoscatalog-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociatePnuOSCatalog
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:PnuOSConfig

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configure server with service profile [assignedToDn] pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosconfig-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociatePnuOSConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:PnuOSIdent

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Identify pre-boot environment agent(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSIdent)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosident-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociatePnuOSIdent
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:PnuOSInventory

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Perform inventory of server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosinventory-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociatePnuOSInventory
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:PnuOSLocalDiskConfig

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configure local disk on server with service profile [assignedToDn] pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSLocalDiskConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuoslocal-disk-config-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociatePnuOSLocalDiskConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:PnuOSPeripheralComponentConfig

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configure peripheral component on server with service profile [assignedToDn] pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSPeripheralComponentConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosperipheral-component-config-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociatePnuOSPeripheralComponentConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:PnuOSPolicy

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Populate pre-boot environment behavior policy(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSPolicy)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuospolicy-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociatePnuOSPolicy
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:PnuOSSelfTest

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Trigger self-test on pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSSelfTest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosself-test-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociatePnuOSSelfTest
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:PnuOSUnloadDrivers

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Unload drivers on server with service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSUnloadDrivers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosunload-drivers-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociatePnuOSUnloadDrivers
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:PnuOSValidate

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Pre-boot environment validation for association with [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSValidate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosvalidate-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociatePnuOSValidate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:PollBiosActivateStatus

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: waiting for BIOS activate(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PollBiosActivateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-bios-activate-status-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociatePollBiosActivateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:PollBiosUpdateStatus

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for BIOS update to complete(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PollBiosUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-bios-update-status-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociatePollBiosUpdateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:PollBoardCtrlPowerCycle

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Board Controller power cycle to complete(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PollBoardCtrlPowerCycle)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-board-ctrl-power-cycle-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociatePollBoardCtrlPowerCycle
moClass: compute:Physical
```

```
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:PollBoardCtrlUpdateStatus

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Board Controller update to complete(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PollBoardCtrlUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-board-ctrl-update-status-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociatePollBoardCtrlUpdateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:PollClearBiosUpdateStatus

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: waiting for pending BIOS image update to clear(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PollClearBiosUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-clear-bios-update-status-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociatePollClearBiosUpdateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:PowerCycleBoard

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Power cycle the board controller(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PowerCycleBoard)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-cycle-board-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociatePowerCycleBoard
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:PowerDeployWait

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociatePowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:PowerOffForSbAdaptorActivation

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Power off the server for activating Secure boot adapter firmware(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PowerOffForSbAdaptorActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-off-for-sb-adaptor-activation-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociatePowerOffForSbAdaptorActivation
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:PowerOn

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Power on server for configuration of service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:PowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociatePowerOn
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:PowerOnPreConfig

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: PowerOn preconfig for server of service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:PowerOnPreConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-pre-config-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociatePowerOnPreConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:PreSanitize

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Preparing to check hardware configuration(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociatePreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:PrepareForBoot

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Prepare server for booting host OS(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PrepareForBoot)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: prepare-for-boot-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociatePrepareForBoot
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:RestoreVdStatus

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Restore virtual driver status(FSM-STAGE:sam:dme:ComputePhysicalAssociate:RestoreVdStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: restore-vd-status-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateRestoreVdStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:Sanitize

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Checking hardware configuration(FSM-STAGE:sam:dme:ComputePhysicalAssociate:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:SasExpanderImgUpdate

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Update sas expander image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SasExpanderImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sas-expander-img-update-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateSasExpanderImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:SharedComponentsOobInventory

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Inventory of shared components in SIOC(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SharedComponentsOobInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: shared-components-oob-inventory-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateSharedComponentsOobInventory
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:SharedComponentsOobInventoryPeer

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Inventory of shared components in peer SIOC(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SharedComponentsOobInventoryPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: shared-components-oob-inventory-peer-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateSharedComponentsOobInventoryPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:SolRedirectDisable

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Disable Sol Redirection on server [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:SolRedirectDisable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sol-redirect-disable-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateSolRedirectDisable
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:SolRedirectEnable

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: set up bios token for server [assignedToDn] for Sol redirect(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SolRedirectEnable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sol-redirect-enable-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateSolRedirectEnable
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:StorageCtlrImgUpdate

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Update storage controller image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:StorageCtlrImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: storage-ctlr-img-update-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateStorageCtlrImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:SwConfigHostOSLocal

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configure primary fabric interconnect for server host os (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigHostOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-hostoslocal-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateSwConfigHostOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:SwConfigHostOSPeer

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configure secondary fabric interconnect for server host OS (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigHostOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-hostospeer-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateSwConfigHostOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:SwConfigPnuOSLocal

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configure primary fabric interconnect for pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: sw-config-pnuoslocal-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateSwConfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:SwConfigPnuOSPeer

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configure secondary fabric interconnect for pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-pnuospeer-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateSwConfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:SwConfigPortNivLocal

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: configuring primary fabric interconnect access to server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigPortNivLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-port-niv-local-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateSwConfigPortNivLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:SwConfigPortNivPeer

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: configuring secondary fabric interconnect access to server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigPortNivPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-port-niv-peer-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateSwConfigPortNivPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:SwConfigServiceInfraLocal

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configure service infrastructure on primary fabric Interconnect(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigServiceInfraLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-service-infra-local-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateSwConfigServiceInfraLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:SwConfigServiceInfraPeer

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Configure service infrastructure on secondary fabric Interconnect(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigServiceInfraPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-service-infra-peer-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateSwConfigServiceInfraPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:SwUnconfigPnuOSLocal

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure primary fabric interconnect for server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwUnconfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfig-pnuoslocal-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateSwUnconfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:SwUnconfigPnuOSPeer

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure secondary fabric interconnect for server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwUnconfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfig-pnuospeer-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateSwUnconfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:SyncPowerState

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Sync power state for server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SyncPowerState)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sync-power-state-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateSyncPowerState
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:UnconfigCimcVMedia

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: cleaning all mappings for vmedia(FSM-STAGE:sam:dme:ComputePhysicalAssociate:UnconfigCimcVMedia)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-cimcvmedia-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateUnconfigCimcVMedia
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:UnconfigExtMgmtGw

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: cleaning all ext mgmt gateway for vmedia(FSM-STAGE:sam:dme:ComputePhysicalAssociate:UnconfigExtMgmtGw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-ext-mgmt-gw-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateUnconfigExtMgmtGw
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:UnconfigExtMgmtRules

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: cleaning all ext mgmt rules for vmedia(FSM-STAGE:sam:dme:ComputePhysicalAssociate:UnconfigExtMgmtRules)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: unconfig-ext-mgmt-rules-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateUnconfigExtMgmtRules
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:UnlockFirmwareImage

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Releasing the lock obtained(FSM-STAGE:sam:dme:ComputePhysicalAssociate:UnlockFirmwareImage)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unlock-firmware-image-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateUnlockFirmwareImage
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:UpdateBiosRequest

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Sending update BIOS request to CIMC(FSM-STAGE:sam:dme:ComputePhysicalAssociate:UpdateBiosRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-bios-request-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateUpdateBiosRequest
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:UpdateBoardCtrlRequest

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Sending Board Controller update request to CIMC(FSM-STAGE:sam:dme:ComputePhysicalAssociate:UpdateBoardCtrlRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-board-ctrl-request-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateUpdateBoardCtrlRequest
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:UpdateFruComponents

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Updating Sub Components after Power Off for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:UpdateFruComponents)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-fru-components-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateUpdateFruComponents
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:VerifyFcZoneConfig

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Verifying Storage(FC Zones) Connectivity(FSM-STAGE:sam:dme:ComputePhysicalAssociate:VerifyFcZoneConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: verify-fc-zone-config-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateVerifyFcZoneConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:WaitForBiosPostCompletion

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for adaptor to come up after BIOS POST completion(FSM-STAGE:sam:dme:ComputePhysicalAssociate:WaitForBiosPostCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-bios-post-completion-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateWaitForBiosPostCompletion
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:WaitForBorderConfigCompletionLocal

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Wait for border ports configuration completion on primary fabric interconnect(FSM-STAGE:sam:dme:ComputePhysicalAssociate:WaitForBorderConfigCompletionLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-border-config-completion-local-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateWaitForBorderConfigCompletionLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:WaitForBorderConfigCompletionPeer

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Wait for border ports configuration completion on secondary fabric interconnect(FSM-STAGE:sam:dme:ComputePhysicalAssociate:WaitForBorderConfigCompletionPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-border-config-completion-peer-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateWaitForBorderConfigCompletionPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:activateAdaptorNwFwLocal

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Activate adapter network firmware on(FSM-STAGE:sam:dme:ComputePhysicalAssociate:activateAdaptorNwFwLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-adaptor-nw-fw-local-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateActivateAdaptorNwFwLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:activateAdaptorNwFwPeer

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Activate adapter network firmware on(FSM-STAGE:sam:dme:ComputePhysicalAssociate:activateAdaptorNwFwPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-adaptor-nw-fw-peer-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateActivateAdaptorNwFwPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:activateIBMCFw

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Activate CIMC firmware of server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:activateIBMCFw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: activateibmcfw-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateActivateIBMCFw
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:activateNwSbAdaptorFw

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Activate Network Secure boot adapter firmware(FSM-STAGE:sam:dme:ComputePhysicalAssociate:activateNwSbAdaptorFw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-nw-sb-adaptor-fw-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateActivateNwSbAdaptorFw
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:copyRemote

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Copy images to peer node(FSM-STAGE:sam:dme:ComputePhysicalAssociate:copyRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-remote-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateCopyRemote
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:downloadImages

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Download images from operations manager(FSM-STAGE:sam:dme:ComputePhysicalAssociate:downloadImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: download-images-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateDownloadImages
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:hagHostOSConnect

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Connect to host agent on server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:hagHostOSConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-hostosconnect-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateHagHostOSConnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:hagPnuOSConnect

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Connect to pre-boot environment agent for association with [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:hagPnuOSConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-pnuosconnect-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateHagPnuOSConnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:hagPnuOSDisconnect

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Disconnect pre-boot environment agent(FSM-STAGE:sam:dme:ComputePhysicalAssociate:hagPnuOSDisconnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-pnuosdisconnect-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateHagPnuOSDisconnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:resetIBMC

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Reset CIMC of server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:resetIBMC)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resetibmc-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateResetIBMC
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:serialDebugPnuOSConnect

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Connect to pre-boot environment agent for association with [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:serialDebugPnuOSConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: serial-debug-pnuosconnect-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateSerialDebugPnuOSConnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:serialDebugPnuOSDisconnect

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Disconnect pre-boot environment agent(FSM-STAGE:sam:dme:ComputePhysicalAssociate:serialDebugPnuOSDisconnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: serial-debug-pnuosdisconnect-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateSerialDebugPnuOSDisconnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:updateAdaptorNwFwLocal

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Update adapter network firmware(FSM-STAGE:sam:dme:ComputePhysicalAssociate:updateAdaptorNwFwLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-adaptor-nw-fw-local-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateUpdateAdaptorNwFwLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:updateAdaptorNwFwPeer

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Update adapter network firmware(FSM-STAGE:sam:dme:ComputePhysicalAssociate:updateAdaptorNwFwPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: update-adaptor-nw-fw-peer-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateUpdateAdaptorNwFwPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:updateIBMCFw

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Update CIMC firmware of server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:updateIBMCFw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: updateibmcfw-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateUpdateIBMCFw
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:updateNwSbAdaptorFw

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Update Network Secure boot adapter firmware(FSM-STAGE:sam:dme:ComputePhysicalAssociate:updateNwSbAdaptorFw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-nw-sb-adaptor-fw-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateUpdateNwSbAdaptorFw
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:waitForAdaptorNwFwUpdateLocal

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Wait for adapter network firmware update completion(FSM-STAGE:sam:dme:ComputePhysicalAssociate:waitForAdaptorNwFwUpdateLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-adaptor-nw-fw-update-local-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateWaitForAdaptorNwFwUpdateLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:waitForAdaptorNwFwUpdatePeer

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Wait for adapter network firmware update completion(FSM-STAGE:sam:dme:ComputePhysicalAssociate:waitForAdaptorNwFwUpdatePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-adaptor-nw-fw-update-peer-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateWaitForAdaptorNwFwUpdatePeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:waitForIBMCFwUpdate

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Wait for CIMC firmware completion on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:waitForIBMCFwUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-foribmcfw-update-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateWaitForIBMCFwUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:waitForNwSbAdaptorFwActivate

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Wait for Network Secure boot adapter firmware activation completion(FSM-STAGE:sam:dme:ComputePhysicalAssociate:waitForNwSbAdaptorFwActivate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-nw-sb-adaptor-fw-activate-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateWaitForNwSbAdaptorFwActivate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:waitForNwSbAdaptorFwUpdate

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Wait for Network Secure boot adapter firmware update completion(FSM-STAGE:sam:dme:ComputePhysicalAssociate:waitForNwSbAdaptorFwUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-nw-sb-adaptor-fw-update-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateWaitForNwSbAdaptorFwUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalAssociate:waitForUpdateFruComponents

Fault Code: F16973

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for update completion on Sub Components for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:waitForUpdateFruComponents)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-update-fru-components-failed
mibFaultCode: F16973
mibFaultName: fsmStFailComputePhysicalAssociateWaitForUpdateFruComponents
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:BiosPostCompletion

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for BIOS POST completion from CIMC on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BiosPostCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateBiosPostCompletion
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:BmcConfigPnuOS

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: provisioning a bootable device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BmcConfigPnuOS)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-config-pnuos-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateBmcConfigPnuOS
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:BmcPreconfigPnuOSLocal

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BmcPreconfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: bmc-preconfig-pnuoslocal-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateBmcPreconfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:BmcPreconfigPnuOSPeer

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BmcPreconfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-preconfig-pnuospeer-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateBmcPreconfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:BmcUnconfigPnuOS

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: unprovisioning the bootable device for server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BmcUnconfigPnuOS)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-unconfig-pnuos-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateBmcUnconfigPnuOS
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:BootPnuos

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Bring-up pre-boot environment on server for disassociation with service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BootPnuos)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-pnuos-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateBootPnuos
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:BootWait

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for system reset on server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BootWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-wait-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateBootWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:CheckPowerAvailability

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:ConfigBios

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Configuring BIOS Defaults on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:ConfigBios)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-bios-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateConfigBios
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:ConfigFlexFlashScrub

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Configuring FlexFlash Scrub on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:ConfigFlexFlashScrub)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-flex-flash-scrub-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateConfigFlexFlashScrub
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:ConfigKvmMgmtDefaultSetting

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Configure KVM Mgmt to default before ConfigPnuOs(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:ConfigKvmMgmtDefaultSetting)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-kvm-mgmt-default-setting-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateConfigKvmMgmtDefaultSetting
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:ConfigUserAccess

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Configuring external user access(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:ConfigUserAccess)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-user-access-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateConfigUserAccess
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:DeassertResetBypass

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: deassert reset-bypass(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:DeassertResetBypass)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: deassert-reset-bypass-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateDeassertResetBypass
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:HandlePooling

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Apply post-disassociation policies to server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:HandlePooling)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: handle-pooling-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateHandlePooling
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:NicConfigPnuOSLocal

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Configure adapter for pre-boot environment on server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicConfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-pnuoslocal-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateNicConfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:NicConfigPnuOSPeer

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Configure adapter for pre-boot environment on server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicConfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-pnuospeer-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateNicConfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:NicUnconfigHostOSLocal

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure host OS connectivity from server adapter(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicUnconfigHostOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-unconfig-hostoslocal-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateNicUnconfigHostOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:NicUnconfigHostOSPeer

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure host OS connectivity from server adapter(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicUnconfigHostOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-unconfig-hostospeer-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateNicUnconfigHostOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:NicUnconfigPnuOSLocal

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure adapter of server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicUnconfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-unconfig-pnuoslocal-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateNicUnconfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:NicUnconfigPnuOSPeer

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure adapter of server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicUnconfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-unconfig-pnuospeer-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateNicUnconfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:NicUnconfigServiceInfraLocal

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure service infra connectivity from server adapter(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicUnconfigServiceInfraLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-unconfig-service-infra-local-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateNicUnconfigServiceInfraLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:NicUnconfigServiceInfraPeer

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure service infra connectivity from server adapter(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicUnconfigServiceInfraPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-unconfig-service-infra-peer-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateNicUnconfigServiceInfraPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:OobDiskScrub

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Disk Scrub(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:OobDiskScrub)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-disk-scrub-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateOobDiskScrub
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:PnuOSCatalog

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Populate pre-boot catalog to server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSCatalog)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuoscatalog-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociatePnuOSCatalog
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:PnuOSIdent

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Identify pre-boot environment agent on server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSIdent)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: pnuosident-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociatePnuOSIdent
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:PnuOSPolicy

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Populate pre-boot environment behavior policy to server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSPolicy)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuospolicy-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociatePnuOSPolicy
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:PnuOSScrub

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Scrub server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSScrub)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosscrub-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociatePnuOSScrub
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:PnuOSSelfTest

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Trigger self-test of server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSSelfTest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosself-test-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociatePnuOSSelfTest
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:PnuOSUnconfig

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure server from service profile [assignedToDn] pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSUnconfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosunconfig-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociatePnuOSUnconfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:PnuOSValidate

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Pre-boot environment validate server for disassociation with service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSValidate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosvalidate-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociatePnuOSValidate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:PowerDeployWait

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociatePowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:PowerOn

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Power on server for unconfiguration of service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociatePowerOn
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:PreSanitize

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Preparing to check hardware configuration server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociatePreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:ResetSecureBootConfig

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure secure boot configuration(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:ResetSecureBootConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: reset-secure-boot-config-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateResetSecureBootConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:Sanitize

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Checking hardware configuration server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:Shutdown

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Shutdown server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:Shutdown)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: shutdown-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateShutdown
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:SolRedirectDisable

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Disable Sol redirection on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SolRedirectDisable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sol-redirect-disable-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateSolRedirectDisable
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:SolRedirectEnable

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: set up bios token for server [serverId] for Sol redirect(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SolRedirectEnable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sol-redirect-enable-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateSolRedirectEnable
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:SwConfigPnuOSLocal

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Configure primary fabric interconnect for pre-boot environment on server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwConfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-pnuoslocal-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateSwConfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:SwConfigPnuOSPeer

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Configure secondary fabric interconnect for pre-boot environment on server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwConfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-pnuospeer-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateSwConfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:SwConfigPortNivLocal

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: configuring primary fabric interconnect access to server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwConfigPortNivLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-port-niv-local-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateSwConfigPortNivLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:SwConfigPortNivPeer

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: configuring secondary fabric interconnect access to server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwConfigPortNivPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-port-niv-peer-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateSwConfigPortNivPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:SwUnconfigHostOSLocal

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure host OS connectivity from server to primary fabric interconnect(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwUnconfigHostOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfig-hostoslocal-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateSwUnconfigHostOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:SwUnconfigHostOSPeer

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure host OS connectivity from server to secondary fabric interconnect(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwUnconfigHostOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfig-hostospeer-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateSwUnconfigHostOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:SwUnconfigPnuOSLocal

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure primary fabric interconnect for server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwUnconfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfig-pnuoslocal-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateSwUnconfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:SwUnconfigPnuOSPeer

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure secondary fabric interconnect for server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwUnconfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfig-pnuospeer-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateSwUnconfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:UnconfigBios

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Unconfiguring BIOS Settings and Boot Order of server [serverId] (service profile [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:UnconfigBios)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: unconfig-bios-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateUnconfigBios
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:UnconfigCimcVMedia

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: cleaning all mappings for vmedia(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:UnconfigCimcVMedia)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-cimcvmedia-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateUnconfigCimcVMedia
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:UnconfigExtMgmtGw

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: cleaning all ext mgmt gateway for vmedia(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:UnconfigExtMgmtGw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-ext-mgmt-gw-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateUnconfigExtMgmtGw
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:UnconfigExtMgmtRules

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: cleaning all ext mgmt rules for vmedia(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:UnconfigExtMgmtRules)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-ext-mgmt-rules-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateUnconfigExtMgmtRules
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:UnconfigFlexFlash

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Unconfiguring FlexFlash(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:UnconfigFlexFlash)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-flex-flash-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateUnconfigFlexFlash
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:UnconfigServerIdentity

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: reset asset tag for server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:UnconfigServerIdentity)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-server-identity-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateUnconfigServerIdentity
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:UnconfigSoL

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Removing SoL configuration from server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:UnconfigSoL)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-so-lfailed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateUnconfigSoL
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:UnconfigUuid

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Restore original UUID for server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:UnconfigUuid)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-uuid-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateUnconfigUuid
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:VerifyFcZoneConfig

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Verifying Storage(FC Zones) Connectivity(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:VerifyFcZoneConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: verify-fc-zone-config-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateVerifyFcZoneConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:hagPnuOSConnect

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Connect to pre-boot environment agent on server for disassociation with service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:hagPnuOSConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-pnuosconnect-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateHagPnuOSConnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:hagPnuOSDisconnect

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Disconnect pre-boot environment agent for server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:hagPnuOSDisconnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-pnuosdisconnect-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateHagPnuOSDisconnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:serialDebugPnuOSConnect

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Connect to pre-boot environment agent on server for disassociation with service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:serialDebugPnuOSConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: serial-debug-pnuosconnect-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateSerialDebugPnuOSConnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDisassociate:serialDebugPnuOSDisconnect

Fault Code: F16974

Message: [FSM:STAGE:FAILED|RETRY]: Disconnect pre-boot environment agent for server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:serialDebugPnuOSDisconnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: serial-debug-pnuosdisconnect-failed
mibFaultCode: F16974
mibFaultName: fsmStFailComputePhysicalDisassociateSerialDebugPnuOSDisconnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalPowerCap:Config

Fault Code: F16975

Message: [FSM:STAGE:FAILED|RETRY]: Configuring power cap of server [dn](FSM-STAGE:sam:dme:ComputePhysicalPowerCap:Config)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-failed
mibFaultCode: F16975
mibFaultName: fsmStFailComputePhysicalPowerCapConfig
moClass: compute:Physical
```

```
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDecommission:CleanupCIMC

Fault Code: F16976

Message: [FSM:STAGE:FAILED|RETRY]: Cleaning up CIMC configuration for server [dn](FSM-STAGE:sam:dme:ComputePhysicalDecommission:CleanupCIMC)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cleanupcimc-failed
mibFaultCode: F16976
mibFaultName: fsmStFailComputePhysicalDecommissionCleanupCIMC
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDecommission:CleanupPortConfigLocal

Fault Code: F16976

Message: [FSM:STAGE:FAILED|RETRY]: Cleaning up local port config for server [dn](FSM-STAGE:sam:dme:ComputePhysicalDecommission:CleanupPortConfigLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cleanup-port-config-local-failed
mibFaultCode: F16976
mibFaultName: fsmStFailComputePhysicalDecommissionCleanupPortConfigLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDecommission:CleanupPortConfigPeer

Fault Code: F16976

Message: [FSM:STAGE:FAILED|RETRY]: Cleaning up peer port config for server [dn](FSM-STAGE:sam:dme:ComputePhysicalDecommission:CleanupPortConfigPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cleanup-port-config-peer-failed
mibFaultCode: F16976
mibFaultName: fsmStFailComputePhysicalDecommissionCleanupPortConfigPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDecommission:Execute

Fault Code: F16976

Message: [FSM:STAGE:FAILED|RETRY]: Decommissioning server [dn](FSM-STAGE:sam:dme:ComputePhysicalDecommission:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F16976
mibFaultName: fsmStFailComputePhysicalDecommissionExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDecommission:PrecleanupPortConfig

Fault Code: F16976

Message: [FSM:STAGE:FAILED|RETRY]: Preparing to clean port config for server [dn](FSM-STAGE:sam:dme:ComputePhysicalDecommission:PrecleanupPortConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: precleanup-port-config-failed
mibFaultCode: F16976
mibFaultName: fsmStFailComputePhysicalDecommissionPrecleanupPortConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDecommission:StopVMediaLocal

Fault Code: F16976

Message: [FSM:STAGE:FAILED|RETRY]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalDecommission:StopVMediaLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: stopvmedia-local-failed
mibFaultCode: F16976
mibFaultName: fsmStFailComputePhysicalDecommissionStopVMediaLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDecommission:StopVMediaPeer

Fault Code: F16976

Message: [FSM:STAGE:FAILED|RETRY]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalDecommission:StopVMediaPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: stopvmedia-peer-failed
mibFaultCode: F16976
mibFaultName: fsmStFailComputePhysicalDecommissionStopVMediaPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDecommission:UnconfigExtMgmtGw

Fault Code: F16976

Message: [FSM:STAGE:FAILED|RETRY]: cleaning all ext mgmt gateway for vmedia(FSM-STAGE:sam:dme:ComputePhysicalDecommission:UnconfigExtMgmtGw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-ext-mgmt-gw-failed
mibFaultCode: F16976
mibFaultName: fsmStFailComputePhysicalDecommissionUnconfigExtMgmtGw
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDecommission:UnconfigExtMgmtRules

Fault Code: F16976

Message: [FSM:STAGE:FAILED|RETRY]: cleaning all ext mgmt rules for vmedia(FSM-STAGE:sam:dme:ComputePhysicalDecommission:UnconfigExtMgmtRules)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: unconfig-ext-mgmt-rules-failed
mibFaultCode: F16976
mibFaultName: fsmStFailComputePhysicalDecommissionUnconfigExtMgmtRules
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalSoftShutdown:Execute

Fault Code: F16977

Message: [FSM:STAGE:FAILED|RETRY]: Soft shutdown of server [dn](FSM-STAGE:sam:dme:ComputePhysicalSoftShutdown:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F16977
mibFaultName: fsmStFailComputePhysicalSoftShutdownExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalHardShutdown:Execute

Fault Code: F16978

Message: [FSM:STAGE:FAILED|RETRY]: Hard shutdown of server [dn](FSM-STAGE:sam:dme:ComputePhysicalHardShutdown:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F16978
mibFaultName: fsmStFailComputePhysicalHardShutdownExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalTurnup:CheckPowerAvailability

Fault Code: F16979

Message: [FSM:STAGE:FAILED|RETRY]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalTurnup:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F16979
mibFaultName: fsmStFailComputePhysicalTurnupCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalTurnup:Execute

Fault Code: F16979

Message: [FSM:STAGE:FAILED|RETRY]: Power-on server [dn](FSM-STAGE:sam:dme:ComputePhysicalTurnup:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F16979
mibFaultName: fsmStFailComputePhysicalTurnupExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalTurnup:PowerDeployWait

Fault Code: F16979

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalTurnup:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F16979
mibFaultName: fsmStFailComputePhysicalTurnupPowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalPowercycle:CheckPowerAvailability

Fault Code: F16980

Message: [FSM:STAGE:FAILED|RETRY]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalPowercycle:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F16980
mibFaultName: fsmStFailComputePhysicalPowercycleCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalPowercycle:Execute

Fault Code: F16980

Message: [FSM:STAGE:FAILED|RETRY]: Power-cycle server [dn](FSM-STAGE:sam:dme:ComputePhysicalPowercycle:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F16980
mibFaultName: fsmStFailComputePhysicalPowercycleExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalPowercycle:PowerDeployWait

Fault Code: F16980

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalPowercycle:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F16980
mibFaultName: fsmStFailComputePhysicalPowercyclePowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalPowercycle:PreSanitize

Fault Code: F16980

Message: [FSM:STAGE:FAILED|RETRY]: Preparing to check hardware configuration server [dn](FSM-STAGE:sam:dme:ComputePhysicalPowercycle:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F16980
mibFaultName: fsmStFailComputePhysicalPowercyclePreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalPowercycle:Sanitize

Fault Code: F16980

Message: [FSM:STAGE:FAILED|RETRY]: Checking hardware configuration server [dn](FSM-STAGE:sam:dme:ComputePhysicalPowercycle:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F16980
mibFaultName: fsmStFailComputePhysicalPowercycleSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalHardreset:CheckPowerAvailability

Fault Code: F16981

Message: [FSM:STAGE:FAILED|RETRY]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalHardreset:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: check-power-availability-failed
mibFaultCode: F16981
mibFaultName: fsmStFailComputePhysicalHardresetCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalHardreset:Execute

Fault Code: F16981

Message: [FSM:STAGE:FAILED|RETRY]: Hard-reset server [dn](FSM-STAGE:sam:dme:ComputePhysicalHardreset:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F16981
mibFaultName: fsmStFailComputePhysicalHardresetExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalHardreset:PowerDeployWait

Fault Code: F16981

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalHardreset:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F16981
mibFaultName: fsmStFailComputePhysicalHardresetPowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalHardreset:PreSanitize

Fault Code: F16981

Message: [FSM:STAGE:FAILED|RETRY]: Preparing to check hardware configuration server [dn](FSM-STAGE:sam:dme:ComputePhysicalHardreset:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F16981
mibFaultName: fsmStFailComputePhysicalHardresetPreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalHardreset:Sanitize

Fault Code: F16981

Message: [FSM:STAGE:FAILED|RETRY]: Checking hardware configuration server [dn](FSM-STAGE:sam:dme:ComputePhysicalHardreset:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F16981
mibFaultName: fsmStFailComputePhysicalHardresetSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalSoftreset:CheckPowerAvailability

Fault Code: F16982

Message: [FSM:STAGE:FAILED|RETRY]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalSoftreset:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F16982
mibFaultName: fsmStFailComputePhysicalSoftresetCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalSoftreset:Execute

Fault Code: F16982

Message: [FSM:STAGE:FAILED|RETRY]: Soft-reset server [dn](FSM-STAGE:sam:dme:ComputePhysicalSoftreset:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F16982
mibFaultName: fsmStFailComputePhysicalSoftresetExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalSoftreset:PowerDeployWait

Fault Code: F16982

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalSoftreset:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F16982
mibFaultName: fsmStFailComputePhysicalSoftresetPowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalSoftreset:PreSanitize

Fault Code: F16982

Message: [FSM:STAGE:FAILED|RETRY]: Preparing to check hardware configuration server [dn](FSM-STAGE:sam:dme:ComputePhysicalSoftreset:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F16982
mibFaultName: fsmStFailComputePhysicalSoftresetPreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalSoftreset:Sanitize

Fault Code: F16982

Message: [FSM:STAGE:FAILED|RETRY]: Checking hardware configuration server [dn](FSM-STAGE:sam:dme:ComputePhysicalSoftreset:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F16982
mibFaultName: fsmStFailComputePhysicalSoftresetSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalSwConnUpd:A

Fault Code: F16983

Message: [FSM:STAGE:FAILED|RETRY]: Updating fabric A for server [dn](FSM-STAGE:sam:dme:ComputePhysicalSwConnUpd:A)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: a-failed
mibFaultCode: F16983
mibFaultName: fsmStFailComputePhysicalSwConnUpdA
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalSwConnUpd:B

Fault Code: F16983

Message: [FSM:STAGE:FAILED|RETRY]: Updating fabric B for server [dn](FSM-STAGE:sam:dme:ComputePhysicalSwConnUpd:B)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: b-failed
mibFaultCode: F16983
mibFaultName: fsmStFailComputePhysicalSwConnUpdB
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalBiosRecovery:CheckPowerAvailability

Fault Code: F16984

Message: [FSM:STAGE:FAILED|RETRY]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F16984
mibFaultName: fsmStFailComputePhysicalBiosRecoveryCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalBiosRecovery:Cleanup

Fault Code: F16984

Message: [FSM:STAGE:FAILED|RETRY]: Completing BIOS recovery mode for server [dn], and shutting it down(FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:Cleanup)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cleanup-failed
mibFaultCode: F16984
mibFaultName: fsmStFailComputePhysicalBiosRecoveryCleanup
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalBiosRecovery:PowerDeployWait

Fault Code: F16984

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F16984
mibFaultName: fsmStFailComputePhysicalBiosRecoveryPowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalBiosRecovery:PreSanitize

Fault Code: F16984

Message: [FSM:STAGE:FAILED|RETRY]: Preparing to check hardware configuration server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F16984
mibFaultName: fsmStFailComputePhysicalBiosRecoveryPreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalBiosRecovery:Reset

Fault Code: F16984

Message: [FSM:STAGE:FAILED|RETRY]: Resetting server [dn] power state after BIOS recovery(FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:Reset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: reset-failed
mibFaultCode: F16984
mibFaultName: fsmStFailComputePhysicalBiosRecoveryReset
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalBiosRecovery:Sanitize

Fault Code: F16984

Message: [FSM:STAGE:FAILED|RETRY]: Checking hardware configuration server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F16984
mibFaultName: fsmStFailComputePhysicalBiosRecoverySanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalBiosRecovery:SetupVmediaLocal

Fault Code: F16984

Message: [FSM:STAGE:FAILED|RETRY]: Provisioning a V-Media device with a bootable BIOS image for server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:SetupVmediaLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: setup-vmedia-local-failed
mibFaultCode: F16984
mibFaultName: fsmStFailComputePhysicalBiosRecoverySetupVmediaLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalBiosRecovery:SetupVmediaPeer

Fault Code: F16984

Message: [FSM:STAGE:FAILED|RETRY]: Provisioning a V-Media device with a bootable BIOS image for server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:SetupVmediaPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: setup-vmedia-peer-failed
mibFaultCode: F16984
mibFaultName: fsmStFailComputePhysicalBiosRecoverySetupVmediaPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalBiosRecovery:Shutdown

Fault Code: F16984

Message: [FSM:STAGE:FAILED|RETRY]: Shutting down server [dn] to prepare for BIOS recovery(FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:Shutdown)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: shutdown-failed
mibFaultCode: F16984
mibFaultName: fsmStFailComputePhysicalBiosRecoveryShutdown
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalBiosRecovery:Start

Fault Code: F16984

Message: [FSM:STAGE:FAILED|RETRY]: Running BIOS recovery on server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:Start)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: start-failed
mibFaultCode: F16984
mibFaultName: fsmStFailComputePhysicalBiosRecoveryStart
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalBiosRecovery:StopVMediaLocal

Fault Code: F16984

Message: [FSM:STAGE:FAILED|RETRY]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:StopVMediaLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: stopvmedia-local-failed
mibFaultCode: F16984
mibFaultName: fsmStFailComputePhysicalBiosRecoveryStopVMediaLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalBiosRecovery:StopVMediaPeer

Fault Code: F16984

Message: [FSM:STAGE:FAILED|RETRY]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:StopVMediaPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: stopvmedia-peer-failed
mibFaultCode: F16984
mibFaultName: fsmStFailComputePhysicalBiosRecoveryStopVMediaPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalBiosRecovery:TeardownVmediaLocal

Fault Code: F16984

Message: [FSM:STAGE:FAILED|RETRY]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:TeardownVmediaLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: teardown-vmedia-local-failed
mibFaultCode: F16984
mibFaultName: fsmStFailComputePhysicalBiosRecoveryTeardownVmediaLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalBiosRecovery:TeardownVmediaPeer

Fault Code: F16984

Message: [FSM:STAGE:FAILED|RETRY]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:TeardownVmediaPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: teardown-vmedia-peer-failed
mibFaultCode: F16984
mibFaultName: fsmStFailComputePhysicalBiosRecoveryTeardownVmediaPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalBiosRecovery:Wait

Fault Code: F16984

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for completion of BIOS recovery for server [dn] (up to 15 min)(FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:Wait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-failed
mibFaultCode: F16984
mibFaultName: fsmStFailComputePhysicalBiosRecoveryWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalCmosReset:BladePowerOn

Fault Code: F16986

Message: [FSM:STAGE:FAILED|RETRY]: Power on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:BladePowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: blade-power-on-failed
mibFaultCode: F16986
mibFaultName: fsmStFailComputePhysicalCmosResetBladePowerOn
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalCmosReset:CheckPowerAvailability

Fault Code: F16986

Message: [FSM:STAGE:FAILED|RETRY]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F16986
mibFaultName: fsmStFailComputePhysicalCmosResetCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalCmosReset:Execute

Fault Code: F16986

Message: [FSM:STAGE:FAILED|RETRY]: Resetting CMOS for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F16986
mibFaultName: fsmStFailComputePhysicalCmosResetExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalCmosReset:PowerDeployWait

Fault Code: F16986

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F16986
mibFaultName: fsmStFailComputePhysicalCmosResetPowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalCmosReset:PreSanitize

Fault Code: F16986

Message: [FSM:STAGE:FAILED|RETRY]: Preparing to check hardware configuration server [serverId](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F16986
mibFaultName: fsmStFailComputePhysicalCmosResetPreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalCmosReset:ReconfigBios

Fault Code: F16986

Message: [FSM:STAGE:FAILED|RETRY]: Reconfiguring BIOS Settings and Boot Order of server [serverId] for service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:ReconfigBios)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: reconfig-bios-failed
mibFaultCode: F16986
mibFaultName: fsmStFailComputePhysicalCmosResetReconfigBios
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalCmosReset:ReconfigUuid

Fault Code: F16986

Message: [FSM:STAGE:FAILED|RETRY]: Reconfiguring logical UUID of server [serverId] for service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:ReconfigUuid)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: reconfig-uuid-failed
mibFaultCode: F16986
mibFaultName: fsmStFailComputePhysicalCmosResetReconfigUuid
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalCmosReset:Sanitize

Fault Code: F16986

Message: [FSM:STAGE:FAILED|RETRY]: Checking hardware configuration server [serverId](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F16986
mibFaultName: fsmStFailComputePhysicalCmosResetSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalResetBmc:Execute

Fault Code: F16987

Message: [FSM:STAGE:FAILED|RETRY]: Resetting Management Controller on server [dn](FSM-STAGE:sam:dme:ComputePhysicalResetBmc:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F16987
mibFaultName: fsmStFailComputePhysicalResetBmcExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailEquipmentIOCardResetIom:Execute

Fault Code: F16988

Message: [FSM:STAGE:FAILED|RETRY]: Reset IOM [id] on Fex [chassisId](FSM-STAGE:sam:dme:EquipmentIOCardResetIom:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F16988
mibFaultName: fsmStFailEquipmentIOCardResetIomExecute
moClass: equipment:IOCard
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmStFailComputeRackUnitDiscover:BiosPostCompletion

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for BIOS POST completion from CIMC on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BiosPostCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverBiosPostCompletion
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:BladePowerOff

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: power on server [id] for discovery(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BladePowerOff)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: blade-power-off-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverBladePowerOff
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:BmcConfigPnuOS

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: provisioning a bootable device with a bootable pre-boot image for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcConfigPnuOS)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-config-pnuos-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverBmcConfigPnuOS
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:BmcConfigureConnLocal

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Configuring connectivity on CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcConfigureConnLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-configure-conn-local-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverBmcConfigureConnLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:BmcConfigureConnPeer

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Configuring connectivity on CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcConfigureConnPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-configure-conn-peer-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverBmcConfigureConnPeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:BmcFactoryReset

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: performing factory reset of server [id] via CIMC(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcFactoryReset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-factory-reset-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverBmcFactoryReset
moClass: compute:RackUnit
Type: fsm
```

```
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:BmcInventory

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: getting inventory of server [id] via CIMC(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-inventory-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverBmcInventory
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:BmcPreconfigPnuOSLocal

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcPreconfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-preconfig-pnuoslocal-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverBmcPreconfigPnuOSLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:BmcPreconfigPnuOSPeer

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcPreconfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-preconfig-pnuospeer-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverBmcPreconfigPnuOSPeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:BmcPresence

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: checking CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcPresence)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-presence-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverBmcPresence
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:BmcShutdownDiscovered

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Shutdown the server [id]; deep discovery completed(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcShutdownDiscovered)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-shutdown-discovered-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverBmcShutdownDiscovered
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:BmcUnconfigPnuOS

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: unprovisioning the bootable device for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcUnconfigPnuOS)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-unconfig-pnuos-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverBmcUnconfigPnuOS
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:BootPnuos

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: power server [id] on with pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BootPnuos)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-pnuos-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverBootPnuos
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:BootWait

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for system reset on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BootWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-wait-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverBootWait
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:CheckPowerAvailability

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Check if power can be allocated to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverCheckPowerAvailability
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:ConfigDiscoveryMode

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: setting adapter mode to discovery for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:ConfigDiscoveryMode)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-discovery-mode-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverConfigDiscoveryMode
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:ConfigFlexFlashScrub

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Configuring FlexFlash Scrub on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:ConfigFlexFlashScrub)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-flex-flash-scrub-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverConfigFlexFlashScrub
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:ConfigNivMode

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: setting adapter mode to NIV for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:ConfigNivMode)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-niv-mode-failed
mibFaultCode: F16994
```

```
mibFaultName: fsmStFailComputeRackUnitDiscoverConfigNivMode
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:ConfigUserAccess

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: configuring external user access to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:ConfigUserAccess)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-user-access-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverConfigUserAccess
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:FruComponentInventory

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Fru Component Inventory for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:FruComponentInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: fru-component-inventory-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverFruComponentInventory
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:HandlePooling

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Invoke post-discovery policies on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:HandlePooling)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: handle-pooling-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverHandlePooling
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:NicConfigPnuOSLocal

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: configure primary adapter in server [id] for pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:NicConfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-pnuoslocal-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverNicConfigPnuOSLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:NicConfigPnuOSPeer

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: configure secondary adapter in server [id] for pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:NicConfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-pnuospeer-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverNicConfigPnuOSPeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:NicInventoryLocal

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: detect and get mezz cards information from [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:NicInventoryLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-inventory-local-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverNicInventoryLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:NicInventoryPeer

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: detect and get mezz cards information from [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:NicInventoryPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-inventory-peer-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverNicInventoryPeer
moClass: compute:RackUnit
Type: fsm
```

```
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:OobStorageConfig

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Configure the storage configuration settings of server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:OobStorageConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-storage-config-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverOobStorageConfig
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:OobStorageInventory

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: getting oob storage inventory of server [id] via CIMC(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:OobStorageInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-storage-inventory-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverOobStorageInventory
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:PnuOSCatalog

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Populate pre-boot catalog to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSCatalog)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuoscatalog-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverPnuOSCatalog
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:PnuOSConnStatus

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Explore connectivity of server [id] in pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSConnStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosconn-status-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverPnuOSConnStatus
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:PnuOSConnectivity

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Explore connectivity of server [id] in pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSConnectivity)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosconnectivity-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverPnuOSConnectivity
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:PnuOSIdent

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Identify pre-boot environment agent on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSIdent)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosident-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverPnuOSIdent
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:PnuOSInventory

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Perform inventory of server [id] pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosinventory-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverPnuOSInventory
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:PnuOSPolicy

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Populate pre-boot environment behavior policy to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSPolicy)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuospolicy-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverPnuOSPolicy
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:PnuOSScrub

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Scrub server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSScrub)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosscrub-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverPnuOSScrub
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:PnuOSSelfTest

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Trigger self-test of server [id] pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSSelfTest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosself-test-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverPnuOSSelfTest
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:PnuosBootWait

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for PNUOS to boot on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuosBootWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuos-boot-wait-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverPnuosBootWait
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:PowerDeployWait

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for power allocation to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F16994
```

```
mibFaultName: fsmStFailComputeRackUnitDiscoverPowerDeployWait
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:PreSanitize

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Preparing to check hardware configuration server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverPreSanitize
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:ReadSmbios

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for SMBIOS table from CIMC on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:ReadSmbios)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: read-smbios-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverReadSmbios
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:Sanitize

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Checking hardware configuration server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverSanitize
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:SolRedirectDisable

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Disable Sol Redirection on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SolRedirectDisable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sol-redirect-disable-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverSolRedirectDisable
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:SolRedirectEnable

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: set up bios token on server [id] for Sol redirect(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SolRedirectEnable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sol-redirect-enable-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverSolRedirectEnable
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:SwConfigPnuOSLocal

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: configure primary fabric interconnect for pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-pnuoslocal-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverSwConfigPnuOSLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:SwConfigPnuOSPeer

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: configure secondary fabric interconnect for pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-pnuospeer-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverSwConfigPnuOSPeer
moClass: compute:RackUnit
Type: fsm
```

```
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:SwConfigPortNivLocal

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: configuring primary fabric interconnect access to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigPortNivLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-port-niv-local-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverSwConfigPortNivLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:SwConfigPortNivPeer

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: configuring secondary fabric interconnect access to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigPortNivPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-port-niv-peer-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverSwConfigPortNivPeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:SwConfigureConnLocal

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Configuring fabric-interconnect connectivity to CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigureConnLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-configure-conn-local-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverSwConfigureConnLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:SwConfigureConnPeer

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Configuring fabric-interconnect connectivity to CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigureConnPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-configure-conn-peer-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverSwConfigureConnPeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:SwConfigurePortChannelLocal

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Configuring port channel for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigurePortChannelLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-configure-port-channel-local-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverSwConfigurePortChannelLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:SwConfigurePortChannelPeer

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Configuring port channel for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigurePortChannelPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-configure-port-channel-peer-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverSwConfigurePortChannelPeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:SwHostOSConfigurePortChannelLocal

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Configuring port channel for multi-port adaptor on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwHostOSConfigurePortChannelLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-hostosconfigure-port-channel-local-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverSwHostOSConfigurePortChannelLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:SwHostOSConfigurePortChannelPeer

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Configuring port channel for multi-port adaptor on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwHostOSConfigurePortChannelPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-hostosconfigure-port-channel-peer-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverSwHostOSConfigurePortChannelPeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:SwHostOSMultiPortConnectivityLocal

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Fetching adaptor connectivity details for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwHostOSMultiPortConnectivityLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-hostosmulti-port-connectivity-local-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverSwHostOSMultiPortConnectivityLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:SwHostOSMultiPortConnectivityPeer

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Fetching adaptor connectivity details for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwHostOSMultiPortConnectivityPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-hostosmulti-port-connectivity-peer-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverSwHostOSMultiPortConnectivityPeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:SwPnuOSConnectivityLocal

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: determine connectivity of server [id] to fabric(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwPnuOSConnectivityLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-pnuosconnectivity-local-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverSwPnuOSConnectivityLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:SwPnuOSConnectivityPeer

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: determine connectivity of server [id] to fabric(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwPnuOSConnectivityPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-pnuosconnectivity-peer-failed
mibFaultCode: F16994
```

```
mibFaultName: fsmStFailComputeRackUnitDiscoverSwPnuOSConnectivityPeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:SwPortDetailsLocal

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Fetching adaptor connectivity details for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwPortDetailsLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-port-details-local-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverSwPortDetailsLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:SwPortDetailsPeer

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Fetching adaptor connectivity details for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwPortDetailsPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-port-details-peer-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverSwPortDetailsPeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:SwUnconfigPortNivLocal

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Unconfiguring primary fabric interconnect access to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwUnconfigPortNivLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfig-port-niv-local-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverSwUnconfigPortNivLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:SwUnconfigPortNivPeer

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Unconfiguring secondary fabric interconnect access to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwUnconfigPortNivPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfig-port-niv-peer-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverSwUnconfigPortNivPeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:UnconfigCimcVMedia

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: cleaning all bmc mappings for vmedia(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:UnconfigCimcVMedia)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-cimcvmedia-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverUnconfigCimcVMedia
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:UnconfigExtMgmtGw

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: cleaning all ext mgmt bmc gateway for vmedia(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:UnconfigExtMgmtGw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-ext-mgmt-gw-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverUnconfigExtMgmtGw
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:UnconfigExtMgmtRules

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: cleaning all ext mgmt rules for vmedia(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:UnconfigExtMgmtRules)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-ext-mgmt-rules-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverUnconfigExtMgmtRules
moClass: compute:RackUnit
Type: fsm
```

```
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:hagConnect

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Connect to pre-boot environment agent on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:hagConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-connect-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverHagConnect
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:hagDisconnect

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Disconnect pre-boot environment agent for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:hagDisconnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-disconnect-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverHagDisconnect
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:serialDebugConnect

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Connect to pre-boot environment agent on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:serialDebugConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: serial-debug-connect-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverSerialDebugConnect
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:serialDebugDisconnect

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: Disconnect pre-boot environment agent for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:serialDebugDisconnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: serial-debug-disconnect-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverSerialDebugDisconnect
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitDiscover:waitForConnReady

Fault Code: F16994

Message: [FSM:STAGE:FAILED|RETRY]: wait for connection to be established(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:waitForConnReady)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-conn-ready-failed
mibFaultCode: F16994
mibFaultName: fsmStFailComputeRackUnitDiscoverWaitForConnReady
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailLsServerConfigure:AnalyzeImpact

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Analyzing changes impact(FSM-STAGE:sam:dme:LsServerConfigure:AnalyzeImpact)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: analyze-impact-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureAnalyzeImpact
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:ApplyConfig

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Applying config to server [pnDn](FSM-STAGE:sam:dme:LsServerConfigure:ApplyConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-config-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureApplyConfig
moClass: ls:Server
Type: fsm
autoCleared: true
```

```
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:ApplyDefaultIdentifiers

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Resolving and applying default identifiers locally(FSM-STAGE:sam:dme:LsServerConfigure:ApplyDefaultIdentifiers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-default-identifiers-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureApplyDefaultIdentifiers
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:ApplyIdentifiers

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Resolving and applying identifiers locally(FSM-STAGE:sam:dme:LsServerConfigure:ApplyIdentifiers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-identifiers-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureApplyIdentifiers
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:ApplyMaintConfig

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Waiting to set the server maintenance mode on CIMC(FSM-STAGE:sam:dme:LsServerConfigure:ApplyMaintConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-maint-config-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureApplyMaintConfig
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:ApplyPolicies

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Resolving and applying policies(FSM-STAGE:sam:dme:LsServerConfigure:ApplyPolicies)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-policies-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureApplyPolicies
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:ApplyTemplate

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Applying configuration template [srcTemplName](FSM-STAGE:sam:dme:LsServerConfigure:ApplyTemplate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-template-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureApplyTemplate
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:CommitStorage

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: committing storage for service profile(FSM-STAGE:sam:dme:LsServerConfigure:CommitStorage)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: commit-storage-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureCommitStorage
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:EstimateApplyConfig

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Estimating Apply config change impact(FSM-STAGE:sam:dme:LsServerConfigure:EstimateApplyConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: estimate-apply-config-failed
mibFaultCode: F16995
```

```
mibFaultName: fsmStFailLsServerConfigureEstimateApplyConfig
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:EvaluateAssociation

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Evaluate association with server [pnDn](FSM-STAGE:sam:dme:LsServerConfigure:EvaluateAssociation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: evaluate-association-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureEvaluateAssociation
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:ProvisionStorage

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Resolving storage policy(FSM-STAGE:sam:dme:LsServerConfigure:ProvisionStorage)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: provision-storage-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureProvisionStorage
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:ResolveBootConfig

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Computing binding changes(FSM-STAGE:sam:dme:LsServerConfigure:ResolveBootConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-boot-config-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureResolveBootConfig
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:ResolveDefaultIdentifiers

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Resolving default identifiers from UCS Central(FSM-STAGE:sam:dme:LsServerConfigure:ResolveDefaultIdentifiers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-default-identifiers-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureResolveDefaultIdentifiers
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:ResolveDistributable

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Resolve distributable from operations manager(FSM-STAGE:sam:dme:LsServerConfigure:ResolveDistributable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-distributable-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureResolveDistributable
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:ResolveDistributableNames

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Resolving distributable names from host pack(FSM-STAGE:sam:dme:LsServerConfigure:ResolveDistributableNames)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-distributable-names-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureResolveDistributableNames
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:ResolveIdentifiers

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Resolving identifiers from UCS Central(FSM-STAGE:sam:dme:LsServerConfigure:ResolveIdentifiers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-identifiers-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureResolveIdentifiers
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:ResolveImages

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Resolve images from operations manager(FSM-STAGE:sam:dme:LsServerConfigure:ResolveImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-images-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureResolveImages
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:ResolveNetworkPolicies

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Resolving various dependent policies from UCS Central(FSM-STAGE:sam:dme:LsServerConfigure:ResolveNetworkPolicies)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-network-policies-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureResolveNetworkPolicies
moClass: ls:Server
Type: fsm
autoCleared: true
```

```
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:ResolveNetworkTemplates

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Resolving various template policies from UCS Central(FSM-STAGE:sam:dme:LsServerConfigure:ResolveNetworkTemplates)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-network-templates-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureResolveNetworkTemplates
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:ResolvePolicies

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Resolving various policies from UCS Central(FSM-STAGE:sam:dme:LsServerConfigure:ResolvePolicies)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-policies-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureResolvePolicies
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:ResolveSchedule

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Resolving schedule policy from UCS Central(FSM-STAGE:sam:dme:LsServerConfigure:ResolveSchedule)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-schedule-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureResolveSchedule
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:ResolveStorageSchedule

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Resolving schedule policy from UCS Central(FSM-STAGE:sam:dme:LsServerConfigure:ResolveStorageSchedule)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-storage-schedule-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureResolveStorageSchedule
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:ValidatePolicyOwnership

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Validating policy integrity from ownership perspective(FSM-STAGE:sam:dme:LsServerConfigure:ValidatePolicyOwnership)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: validate-policy-ownership-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureValidatePolicyOwnership
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:WaitForAssocCompletion

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Association completion on server [pnDn](FSM-STAGE:sam:dme:LsServerConfigure:WaitForAssocCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-assoc-completion-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureWaitForAssocCompletion
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:WaitForCommitStorage

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for storage commit to complete(FSM-STAGE:sam:dme:LsServerConfigure:WaitForCommitStorage)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-commit-storage-failed
mibFaultCode: F16995
```

```
mibFaultName: fsmStFailLsServerConfigureWaitForCommitStorage
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:WaitForMaintPermission

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for ack or maint window(FSM-STAGE:sam:dme:LsServerConfigure:WaitForMaintPermission)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-maint-permission-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureWaitForMaintPermission
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:WaitForMaintWindow

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for maintenance window(FSM-STAGE:sam:dme:LsServerConfigure:WaitForMaintWindow)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-maint-window-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureWaitForMaintWindow
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:WaitForStorageProvision

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: waiting for storage provisioning to complete(FSM-STAGE:sam:dme:LsServerConfigure:WaitForStorageProvision)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-storage-provision-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureWaitForStorageProvision
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:checkAssignedDefaultIdentifiersForDup

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: checking assigned identifiers(from default pool) for dup(FSM-STAGE:sam:dme:LsServerConfigure:checkAssignedDefaultIdentifiersForDup)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-assigned-default-identifiers-for-dup-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureCheckAssignedDefaultIdentifiersForDup
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailLsServerConfigure:checkAssignedIdentifiersForDup

Fault Code: F16995

Message: [FSM:STAGE:FAILED|RETRY]: checking assigned identifiers for dup(FSM-STAGE:sam:dme:LsServerConfigure:checkAssignedIdentifiersForDup)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-assigned-identifiers-for-dup-failed
mibFaultCode: F16995
mibFaultName: fsmStFailLsServerConfigureCheckAssignedIdentifiersForDup
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmStFailSwEthMonDeploy:UpdateEthMon

Fault Code: F17000

Message: [FSM:STAGE:FAILED|RETRY]: Ethernet traffic monitor (SPAN)configuration on [switchId](FSM-STAGE:sam:dme:SwEthMonDeploy:UpdateEthMon)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-eth-mon-failed
mibFaultCode: F17000
mibFaultName: fsmStFailSwEthMonDeployUpdateEthMon
moClass: sw:EthMon
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/lanmon-eth/mon-[name]
```

fsmStFailSwFcMonDeploy:UpdateFcMon

Fault Code: F17001

Message: [FSM:STAGE:FAILED|RETRY]: FC traffic monitor (SPAN)configuration on [switchId](FSM-STAGE:sam:dme:SwFcMonDeploy:UpdateFcMon)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: update-fc-mon-failed
mibFaultCode: F17001
mibFaultName: fsmStFailSwFcMonDeployUpdateFcMon
moClass: sw:FcMon
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/sanmon-fc/mon-[name]
```

fsmStFailFabricSanCloudSwitchMode:SwConfigLocal

Fault Code: F17002

Message: [FSM:STAGE:FAILED|RETRY]: Fabric interconnect FC mode configuration to primary(FSM-STAGE:sam:dme:FabricSanCloudSwitchMode:SwConfigLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-local-failed
mibFaultCode: F17002
mibFaultName: fsmStFailFabricSanCloudSwitchModeSwConfigLocal
moClass: fabric:SanCloud
Type: fsm
autoCleared: true
Affected MO: fabric/san
```

fsmStFailFabricSanCloudSwitchMode:SwConfigPeer

Fault Code: F17002

Message: [FSM:STAGE:FAILED|RETRY]: Fabric interconnect FC mode configuration to secondary(FSM-STAGE:sam:dme:FabricSanCloudSwitchMode:SwConfigPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-peer-failed
mibFaultCode: F17002
mibFaultName: fsmStFailFabricSanCloudSwitchModeSwConfigPeer
moClass: fabric:SanCloud
Type: fsm
autoCleared: true
Affected MO: fabric/san
```

fsmStFailFabricSanCloudSwitchMode:WaitForUserAck

Fault Code: F17002

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for User Acknowledgment to configuration on primary(FSM-STAGE:sam:dme:FabricSanCloudSwitchMode:WaitForUserAck)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-user-ack-failed
mibFaultCode: F17002
mibFaultName: fsmStFailFabricSanCloudSwitchModeWaitForUserAck
moClass: fabric:SanCloud
Type: fsm
autoCleared: true
Affected MO: fabric/san
```

fsmStFailComputePhysicalUpdateExtUsers:Deploy

Fault Code: F17008

Message: [FSM:STAGE:FAILED|RETRY]: external mgmt user deployment on server [dn] (profile [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalUpdateExtUsers:Deploy)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: deploy-failed
mibFaultCode: F17008
mibFaultName: fsmStFailComputePhysicalUpdateExtUsersDeploy
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailSysdebugTechSupportInitiate:Local

Fault Code: F17012

Message: [FSM:STAGE:FAILED|RETRY]: create tech-support file from GUI on local(FSM-STAGE:sam:dme:SysdebugTechSupportInitiate:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F17012
mibFaultName: fsmStFailSysdebugTechSupportInitiateLocal
moClass: sysdebug:TechSupport
Type: fsm
autoCleared: true
Affected MO: sys/tech-support-files/tech-support-[creationTS]
```

fsmStFailSysdebugTechSupportDeleteTechSupFile:Local

Fault Code: F17013

Message: [FSM:STAGE:FAILED|RETRY]: delete tech-support file from GUI on local(FSM-STAGE:sam:dme:SysdebugTechSupportDeleteTechSupFile:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F17013
mibFaultName: fsmStFailSysdebugTechSupportDeleteTechSupFileLocal
moClass: sysdebug:TechSupport
Type: fsm
autoCleared: true
Affected MO: sys/tech-support-files/tech-support-[creationTS]
```

fsmStFailSysdebugTechSupportDeleteTechSupFile:peer

Fault Code: F17013

Message: [FSM:STAGE:FAILED|RETRY]: delete tech-support file from GUI on peer(FSM-STAGE:sam:dme:SysdebugTechSupportDeleteTechSupFile:peer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: peer-failed
```

```
mibFaultCode: F17013
mibFaultName: fsmStFailSysdebugTechSupportDeleteTechSupFilePeer
moClass: sysdebug:TechSupport
Type: fsm
autoCleared: true
Affected MO: sys/tech-support-files/tech-support-[creationTS]
```

fsmStFailSysdebugTechSupportDownload:CopyPrimary

Fault Code: F17014

Message: [FSM:STAGE:FAILED|RETRY]: Copy the tech-support file to primary for download(FSM-STAGE:sam:dme:SysdebugTechSupportDownload:CopyPrimary)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-primary-failed
mibFaultCode: F17014
mibFaultName: fsmStFailSysdebugTechSupportDownloadCopyPrimary
moClass: sysdebug:TechSupport
Type: fsm
autoCleared: true
Affected MO: sys/tech-support-files/tech-support-[creationTS]
```

fsmStFailSysdebugTechSupportDownload:CopySub

Fault Code: F17014

Message: [FSM:STAGE:FAILED|RETRY]: copy tech-support file on subordinate switch to tmp directory(FSM-STAGE:sam:dme:SysdebugTechSupportDownload:CopySub)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-sub-failed
mibFaultCode: F17014
mibFaultName: fsmStFailSysdebugTechSupportDownloadCopySub
moClass: sysdebug:TechSupport
Type: fsm
autoCleared: true
Affected MO: sys/tech-support-files/tech-support-[creationTS]
```

fsmStFailSysdebugTechSupportDownload:DeletePrimary

Fault Code: F17014

Message: [FSM:STAGE:FAILED|RETRY]: Delete the tech-support file from primary switch under tmp directory(FSM-STAGE:sam:dme:SysdebugTechSupportDownload:DeletePrimary)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-primary-failed
mibFaultCode: F17014
mibFaultName: fsmStFailSysdebugTechSupportDownloadDeletePrimary
moClass: sysdebug:TechSupport
Type: fsm
autoCleared: true
Affected MO: sys/tech-support-files/tech-support-[creationTS]
```

fsmStFailSysdebugTechSupportDownload:DeleteSub

Fault Code: F17014

Message: [FSM:STAGE:FAILED|RETRY]: Delete the tech-support file from subordinate under tmp directory(FSM-STAGE:sam:dme:SysdebugTechSupportDownload:DeleteSub)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-sub-failed
mibFaultCode: F17014
mibFaultName: fsmStFailSysdebugTechSupportDownloadDeleteSub
moClass: sysdebug:TechSupport
Type: fsm
autoCleared: true
Affected MO: sys/tech-support-files/tech-support-[creationTS]
```

fsmStFailComputePhysicalUpdateAdaptor:CheckPowerAvailability

Fault Code: F17043

Message: [FSM:STAGE:FAILED|RETRY]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F17043
mibFaultName: fsmStFailComputePhysicalUpdateAdaptorCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalUpdateAdaptor:PollUpdateStatusLocal

Fault Code: F17043

Message: [FSM:STAGE:FAILED|RETRY]: waiting for update to complete(FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:PollUpdateStatusLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-status-local-failed
mibFaultCode: F17043
mibFaultName: fsmStFailComputePhysicalUpdateAdaptorPollUpdateStatusLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalUpdateAdaptor:PollUpdateStatusPeer

Fault Code: F17043

Message: [FSM:STAGE:FAILED|RETRY]: waiting for update to complete(FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:PollUpdateStatusPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-status-peer-failed
mibFaultCode: F17043
mibFaultName: fsmStFailComputePhysicalUpdateAdaptorPollUpdateStatusPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalUpdateAdaptor:PowerDeployWait

Fault Code: F17043

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F17043
mibFaultName: fsmStFailComputePhysicalUpdateAdaptorPowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalUpdateAdaptor:PowerOff

Fault Code: F17043

Message: [FSM:STAGE:FAILED|RETRY]: Power off the server(FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:PowerOff)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-off-failed
mibFaultCode: F17043
mibFaultName: fsmStFailComputePhysicalUpdateAdaptorPowerOff
moClass: compute:Physical
```

```
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalUpdateAdaptor:PowerOn

Fault Code: F17043

Message: [FSM:STAGE:FAILED|RETRY]: power on the blade(FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:PowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-failed
mibFaultCode: F17043
mibFaultName: fsmStFailComputePhysicalUpdateAdaptorPowerOn
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalUpdateAdaptor:UpdateRequestLocal

Fault Code: F17043

Message: [FSM:STAGE:FAILED|RETRY]: sending update request to Adaptor(FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:UpdateRequestLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-request-local-failed
mibFaultCode: F17043
mibFaultName: fsmStFailComputePhysicalUpdateAdaptorUpdateRequestLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalUpdateAdaptor:UpdateRequestPeer

Fault Code: F17043

Message: [FSM:STAGE:FAILED|RETRY]: sending update request to Adaptor(FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:UpdateRequestPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-request-peer-failed
mibFaultCode: F17043
mibFaultName: fsmStFailComputePhysicalUpdateAdaptorUpdateRequestPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalActivateAdaptor:ActivateLocal

Fault Code: F17044

Message: [FSM:STAGE:FAILED|RETRY]: activating backup image of Adaptor(FSM-STAGE:sam:dme:ComputePhysicalActivateAdaptor:ActivateLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-local-failed
mibFaultCode: F17044
mibFaultName: fsmStFailComputePhysicalActivateAdaptorActivateLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalActivateAdaptor:ActivatePeer

Fault Code: F17044

Message: [FSM:STAGE:FAILED|RETRY]: activating backup image of Adaptor(FSM-STAGE:sam:dme:ComputePhysicalActivateAdaptor:ActivatePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-peer-failed
mibFaultCode: F17044
mibFaultName: fsmStFailComputePhysicalActivateAdaptorActivatePeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalActivateAdaptor:AssertBypassWait

Fault Code: F17044

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for assert bypass on rack server(FSM-STAGE:sam:dme:ComputePhysicalActivateAdaptor:AssertBypassWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: assert-bypass-wait-failed
mibFaultCode: F17044
mibFaultName: fsmStFailComputePhysicalActivateAdaptorAssertBypassWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalActivateAdaptor:CheckPowerAvailability

Fault Code: F17044

Message: [FSM:STAGE:FAILED|RETRY]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalActivateAdaptor:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F17044
mibFaultName: fsmStFailComputePhysicalActivateAdaptorCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalActivateAdaptor:DeassertResetBypass

Fault Code: F17044

Message: [FSM:STAGE:FAILED|RETRY]: deassert reset-bypass(FSM-STAGE:sam:dme:ComputePhysicalActivateAdaptor:DeassertResetBypass)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: deassert-reset-bypass-failed
mibFaultCode: F17044
mibFaultName: fsmStFailComputePhysicalActivateAdaptorDeassertResetBypass
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalActivateAdaptor:PowerDeployWait

Fault Code: F17044

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalActivateAdaptor:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: power-deploy-wait-failed
mibFaultCode: F17044
mibFaultName: fsmStFailComputePhysicalActivateAdaptorPowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalActivateAdaptor:PowerOn

Fault Code: F17044

Message: [FSM:STAGE:FAILED|RETRY]: power on the blade(FSM-STAGE:sam:dme:ComputePhysicalActivateAdaptor:PowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-failed
mibFaultCode: F17044
mibFaultName: fsmStFailComputePhysicalActivateAdaptorPowerOn
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalActivateAdaptor:Reset

Fault Code: F17044

Message: [FSM:STAGE:FAILED|RETRY]: resetting the blade(FSM-STAGE:sam:dme:ComputePhysicalActivateAdaptor:Reset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: reset-failed
mibFaultCode: F17044
mibFaultName: fsmStFailComputePhysicalActivateAdaptorReset
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailCapabilityCatalogueActivateCatalog:ApplyCatalog

Fault Code: F17045

Message: [FSM:STAGE:FAILED|RETRY]: applying changes to catalog(FSM-STAGE:sam:dme:CapabilityCatalogueActivateCatalog:ApplyCatalog)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-catalog-failed
mibFaultCode: F17045
mibFaultName: fsmStFailCapabilityCatalogueActivateCatalogApplyCatalog
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmStFailCapabilityCatalogueActivateCatalog:CopyCatFromRep

Fault Code: F17045

Message: [FSM:STAGE:FAILED|RETRY]: Copying Catalogue from repository to FI(FSM-STAGE:sam:dme:CapabilityCatalogueActivateCatalog:CopyCatFromRep)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-cat-from-rep-failed
mibFaultCode: F17045
mibFaultName: fsmStFailCapabilityCatalogueActivateCatalogCopyCatFromRep
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmStFailCapabilityCatalogueActivateCatalog:CopyExternalRepToRemote

Fault Code: F17045

Message: [FSM:STAGE:FAILED|RETRY]: syncing external repository to subordinate(FSM-STAGE:sam:dme:CapabilityCatalogueActivateCatalog:CopyExternalRepToRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-external-rep-to-remote-failed
mibFaultCode: F17045
mibFaultName: fsmStFailCapabilityCatalogueActivateCatalogCopyExternalRepToRemote
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmStFailCapabilityCatalogueActivateCatalog:CopyRemote

Fault Code: F17045

Message: [FSM:STAGE:FAILED|RETRY]: syncing catalog changes to subordinate(FSM-STAGE:sam:dme:CapabilityCatalogueActivateCatalog:CopyRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-remote-failed
mibFaultCode: F17045
mibFaultName: fsmStFailCapabilityCatalogueActivateCatalogCopyRemote
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmStFailCapabilityCatalogueActivateCatalog:EvaluateStatus

Fault Code: F17045

Message: [FSM:STAGE:FAILED|RETRY]: evaluating status of activation(FSM-STAGE:sam:dme:CapabilityCatalogueActivateCatalog:EvaluateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: evaluate-status-failed
mibFaultCode: F17045
mibFaultName: fsmStFailCapabilityCatalogueActivateCatalogEvaluateStatus
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmStFailCapabilityCatalogueActivateCatalog:RescanImages

Fault Code: F17045

Message: [FSM:STAGE:FAILED|RETRY]: rescanning image files(FSM-STAGE:sam:dme:CapabilityCatalogueActivateCatalog:RescanImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: rescan-images-failed
mibFaultCode: F17045
mibFaultName: fsmStFailCapabilityCatalogueActivateCatalogRescanImages
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmStFailCapabilityCatalogueActivateCatalog:UnpackLocal

Fault Code: F17045

Message: [FSM:STAGE:FAILED|RETRY]: activating catalog changes(FSM-STAGE:sam:dme:CapabilityCatalogueActivateCatalog:UnpackLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unpack-local-failed
mibFaultCode: F17045
mibFaultName: fsmStFailCapabilityCatalogueActivateCatalogUnpackLocal
moClass: capability:Catalogue
Type: fsm
```

```
autoCleared: true
Affected MO: capabilities
```

fsmStFailCapabilityMgmtExtensionActivateMgmtExt:ApplyCatalog

Fault Code: F17046

Message: [FSM:STAGE:FAILED|RETRY]: applying changes to catalog(FSM-STAGE:sam:dme:CapabilityMgmtExtensionActivateMgmtExt:ApplyCatalog)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-catalog-failed
mibFaultCode: F17046
mibFaultName: fsmStFailCapabilityMgmtExtensionActivateMgmtExtApplyCatalog
moClass: capability:MgmtExtension
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/mgmt-ext
```

fsmStFailCapabilityMgmtExtensionActivateMgmtExt:CopyRemote

Fault Code: F17046

Message: [FSM:STAGE:FAILED|RETRY]: syncing management extension changes to subordinate(FSM-STAGE:sam:dme:CapabilityMgmtExtensionActivateMgmtExt:CopyRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-remote-failed
mibFaultCode: F17046
mibFaultName: fsmStFailCapabilityMgmtExtensionActivateMgmtExtCopyRemote
moClass: capability:MgmtExtension
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/mgmt-ext
```

fsmStFailCapabilityMgmtExtensionActivateMgmtExt:EvaluateStatus

Fault Code: F17046

Message: [FSM:STAGE:FAILED|RETRY]: evaluating status of activation(FSM-STAGE:sam:dme:CapabilityMgmtExtensionActivateMgmtExt:EvaluateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: evaluate-status-failed
mibFaultCode: F17046
mibFaultName: fsmStFailCapabilityMgmtExtensionActivateMgmtExtEvaluateStatus
moClass: capability:MgmtExtension
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/mgmt-ext
```

fsmStFailCapabilityMgmtExtensionActivateMgmtExt:RescanImages

Fault Code: F17046

Message: [FSM:STAGE:FAILED|RETRY]: rescanning image files(FSM-STAGE:sam:dme:CapabilityMgmtExtensionActivateMgmtExt:RescanImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: rescan-images-failed
mibFaultCode: F17046
mibFaultName: fsmStFailCapabilityMgmtExtensionActivateMgmtExtRescanImages
moClass: capability:MgmtExtension
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/mgmt-ext
```

fsmStFailCapabilityMgmtExtensionActivateMgmtExt:UnpackLocal

Fault Code: F17046

Message: [FSM:STAGE:FAILED|RETRY]: activating management extension changes(FSM-STAGE:sam:dme:CapabilityMgmtExtensionActivateMgmtExt:UnpackLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unpack-local-failed
mibFaultCode: F17046
mibFaultName: fsmStFailCapabilityMgmtExtensionActivateMgmtExtUnpackLocal
moClass: capability:MgmtExtension
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/mgmt-ext
```

fsmStFailLicenseDownloaderDownload:CopyRemote

Fault Code: F17050

Message: [FSM:STAGE:FAILED|RETRY]: Copy the license file to subordinate for inventory(FSM-STAGE:sam:dme:LicenseDownloaderDownload:CopyRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-remote-failed
mibFaultCode: F17050
mibFaultName: fsmStFailLicenseDownloaderDownloadCopyRemote
moClass: license:Downloader
Type: fsm
autoCleared: true
Affected MO: sys/license/dnld-[fileName]
```

fsmStFailLicenseDownloaderDownload:DeleteLocal

Fault Code: F17050

Message: [FSM:STAGE:FAILED|RETRY]: deleting temporary files for [fileName] on local(FSM-STAGE:sam:dme:LicenseDownloaderDownload:DeleteLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-local-failed
mibFaultCode: F17050
mibFaultName: fsmStFailLicenseDownloaderDownloadDeleteLocal
moClass: license:Downloader
Type: fsm
autoCleared: true
Affected MO: sys/license/dnld-[fileName]
```

fsmStFailLicenseDownloaderDownload:DeleteRemote

Fault Code: F17050

Message: [FSM:STAGE:FAILED|RETRY]: deleting temporary files for [fileName] on subordinate(FSM-STAGE:sam:dme:LicenseDownloaderDownload:DeleteRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-remote-failed
mibFaultCode: F17050
mibFaultName: fsmStFailLicenseDownloaderDownloadDeleteRemote
moClass: license:Downloader
Type: fsm
autoCleared: true
Affected MO: sys/license/dnld-[fileName]
```

fsmStFailLicenseDownloaderDownload:Local

Fault Code: F17050

Message: [FSM:STAGE:FAILED|RETRY]: downloading license file [fileName] from [server](FSM-STAGE:sam:dme:LicenseDownloaderDownload:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F17050
mibFaultName: fsmStFailLicenseDownloaderDownloadLocal
moClass: license:Downloader
Type: fsm
autoCleared: true
Affected MO: sys/license/dnld-[fileName]
```

fsmStFailLicenseDownloaderDownload:ValidateLocal

Fault Code: F17050

Message: [FSM:STAGE:FAILED|RETRY]: validation for license file [fileName] on primary(FSM-STAGE:sam:dme:LicenseDownloaderDownload:ValidateLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: validate-local-failed
mibFaultCode: F17050
mibFaultName: fsmStFailLicenseDownloaderDownloadValidateLocal
moClass: license:Downloader
Type: fsm
autoCleared: true
Affected MO: sys/license/dnld-[fileName]
```

fsmStFailLicenseDownloaderDownload:ValidateRemote

Fault Code: F17050

Message: [FSM:STAGE:FAILED|RETRY]: validation for license file [fileName] on subordinate(FSM-STAGE:sam:dme:LicenseDownloaderDownload:ValidateRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: validate-remote-failed
mibFaultCode: F17050
mibFaultName: fsmStFailLicenseDownloaderDownloadValidateRemote
moClass: license:Downloader
Type: fsm
autoCleared: true
Affected MO: sys/license/dnld-[fileName]
```

fsmStFailLicenseFileInstall:Local

Fault Code: F17051

Message: [FSM:STAGE:FAILED|RETRY]: Installing license on primary(FSM-STAGE:sam:dme:LicenseFileInstall:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F17051
```

```
mibFaultName: fsmStFailLicenseFileInstallLocal
moClass: license:File
Type: fsm
autoCleared: true
Affected MO: sys/license/file-[scope]:[id]
```

fsmStFailLicenseFileInstall:Remote

Fault Code: F17051

Message: [FSM:STAGE:FAILED|RETRY]: Installing license on subordinate(FSM-STAGE:sam:dme:LicenseFileInstall:Remote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: remote-failed
mibFaultCode: F17051
mibFaultName: fsmStFailLicenseFileInstallRemote
moClass: license:File
Type: fsm
autoCleared: true
Affected MO: sys/license/file-[scope]:[id]
```

fsmStFailLicenseFileClear:Local

Fault Code: F17052

Message: [FSM:STAGE:FAILED|RETRY]: Clearing license on primary(FSM-STAGE:sam:dme:LicenseFileClear:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F17052
mibFaultName: fsmStFailLicenseFileClearLocal
moClass: license:File
Type: fsm
autoCleared: true
Affected MO: sys/license/file-[scope]:[id]
```

fsmStFailLicenseFileClear:Remote

Fault Code: F17052

Message: [FSM:STAGE:FAILED|RETRY]: Clearing license on subordinate(FSM-STAGE:sam:dme:LicenseFileClear:Remote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: remote-failed
mibFaultCode: F17052
mibFaultName: fsmStFailLicenseFileClearRemote
moClass: license:File
Type: fsm
autoCleared: true
Affected MO: sys/license/file-[scope]:[id]
```

fsmStFailLicenseInstanceUpdateFlexlm:Local

Fault Code: F17053

Message: [FSM:STAGE:FAILED|RETRY]: Updating on primary(FSM-STAGE:sam:dme:LicenseInstanceUpdateFlexlm:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F17053
mibFaultName: fsmStFailLicenseInstanceUpdateFlexlmLocal
moClass: license:Instance
Type: fsm
autoCleared: true
Affected MO: sys/license/feature-[name]-[vendor]-[version]/inst-[scope]
```

fsmStFailLicenseInstanceUpdateFlexlm:Remote

Fault Code: F17053

Message: [FSM:STAGE:FAILED|RETRY]: Updating on subordinate(FSM-STAGE:sam:dme:LicenseInstanceUpdateFlexlm:Remote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: remote-failed
mibFaultCode: F17053
mibFaultName: fsmStFailLicenseInstanceUpdateFlexlmRemote
moClass: license:Instance
Type: fsm
autoCleared: true
Affected MO: sys/license/feature-[name]-[vendor]-[version]/inst-[scope]
```

fsmStFailComputePhysicalConfigSoL:Execute

Fault Code: F17083

Message: [FSM:STAGE:FAILED|RETRY]: configuring SoL interface on server [dn](FSM-STAGE:sam:dme:ComputePhysicalConfigSoL:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F17083
mibFaultName: fsmStFailComputePhysicalConfigSoLExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalUnconfigSoL:Execute

Fault Code: F17084

Message: [FSM:STAGE:FAILED|RETRY]: removing SoL interface configuration from server [dn](FSM-STAGE:sam:dme:ComputePhysicalUnconfigSoL:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F17084
mibFaultName: fsmStFailComputePhysicalUnconfigSoLExecute
moClass: compute:Physical
```

```
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailPortPIoInCompatSfpPresence:Shutdown

Fault Code: F17089

Message: [FSM:STAGE:FAILED|RETRY]: Shutting down port(FSM-STAGE:sam:dme:PortPIoInCompatSfpPresence:Shutdown)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: shutdown-failed
mibFaultCode: F17089
mibFaultName: fsmStFailPortPIoInCompatSfpPresenceShutdown
moClass: port:PIo
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]
```

fsmStFailComputePhysicalDiagnosticInterrupt:Execute

Fault Code: F17116

Message: [FSM:STAGE:FAILED|RETRY]: Execute Diagnostic Interrupt(NMI) for server [dn](FSM-STAGE:sam:dme:ComputePhysicalDiagnosticInterrupt:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: execute-failed
mibFaultCode: F17116
mibFaultName: fsmStFailComputePhysicalDiagnosticInterruptExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailSysdebugCoreDownload:CopyPrimary

Fault Code: F17133

Message: [FSM:STAGE:FAILED|RETRY]: Copy the Core file to primary for download(FSM-STAGE:sam:dme:SysdebugCoreDownload:CopyPrimary)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-primary-failed
mibFaultCode: F17133
mibFaultName: fsmStFailSysdebugCoreDownloadCopyPrimary
moClass: sysdebug:Core
Type: fsm
autoCleared: true
Affected MO: sys/corefiles/file-[name]|[switchId]
```

fsmStFailSysdebugCoreDownload:CopySub

Fault Code: F17133

Message: [FSM:STAGE:FAILED|RETRY]: copy Core file on subordinate switch to tmp directory(FSM-STAGE:sam:dme:SysdebugCoreDownload:CopySub)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-sub-failed
mibFaultCode: F17133
mibFaultName: fsmStFailSysdebugCoreDownloadCopySub
moClass: sysdebug:Core
Type: fsm
autoCleared: true
Affected MO: sys/corefiles/file-[name]|[switchId]
```

fsmStFailSysdebugCoreDownload:DeletePrimary

Fault Code: F17133

Message: [FSM:STAGE:FAILED|RETRY]: Delete the Core file from primary switch under tmp directory(FSM-STAGE:sam:dme:SysdebugCoreDownload:DeletePrimary)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-primary-failed
mibFaultCode: F17133
mibFaultName: fsmStFailSysdebugCoreDownloadDeletePrimary
moClass: sysdebug:Core
Type: fsm
autoCleared: true
Affected MO: sys/corefiles/file-[name]|[switchId]
```

fsmStFailSysdebugCoreDownload:DeleteSub

Fault Code: F17133

Message: [FSM:STAGE:FAILED|RETRY]: Delete the Core file from subordinate under tmp directory(FSM-STAGE:sam:dme:SysdebugCoreDownload:DeleteSub)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-sub-failed
mibFaultCode: F17133
mibFaultName: fsmStFailSysdebugCoreDownloadDeleteSub
moClass: sysdebug:Core
Type: fsm
autoCleared: true
Affected MO: sys/corefiles/file-[name]|[switchId]
```

fsmStFailEquipmentChassisDynamicReallocation:Config

Fault Code: F17134

Message: [FSM:STAGE:FAILED|RETRY]: (FSM-STAGE:sam:dme:EquipmentChassisDynamicReallocation:Config)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-failed
mibFaultCode: F17134
mibFaultName: fsmStFailEquipmentChassisDynamicReallocationConfig
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailComputePhysicalResetKvm:Execute

Fault Code: F17163

Message: [FSM:STAGE:FAILED|RETRY]: Execute KVM Reset for server [dn](FSM-STAGE:sam:dme:ComputePhysicalResetKvm:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F17163
mibFaultName: fsmStFailComputePhysicalResetKvmExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailMgmtControllerOnline:BmcConfigureConnLocal

Fault Code: F17169

Message: [FSM:STAGE:FAILED|RETRY]: Configuring connectivity on CIMC(FSM-STAGE:sam:dme:MgmtControllerOnline:BmcConfigureConnLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

Cause: bmc-configure-conn-local-failed
mibFaultCode: F17169
mibFaultName: fsmStFailMgmtControllerOnlineBmcConfigureConnLocal
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerOnline:BmcConfigureConnPeer

Fault Code: F17169

Message: [FSM:STAGE:FAILED|RETRY]: Configuring connectivity on CIMC(FSM-STAGE:sam:dme:MgmtControllerOnline:BmcConfigureConnPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: bmc-configure-conn-peer-failed
mibFaultCode: F17169
mibFaultName: fsmStFailMgmtControllerOnlineBmcConfigureConnPeer
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerOnline:SwConfigureConnLocal

Fault Code: F17169

Message: [FSM:STAGE:FAILED|RETRY]: Configuring fabric-interconnect connectivity to CIMC(FSM-STAGE:sam:dme:MgmtControllerOnline:SwConfigureConnLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: sw-configure-conn-local-failed
mibFaultCode: F17169
mibFaultName: fsmStFailMgmtControllerOnlineSwConfigureConnLocal
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerOnline:SwConfigureConnPeer

Fault Code: F17169

Message: [FSM:STAGE:FAILED|RETRY]: Configuring fabric-interconnect connectivity to CIMC(FSM-STAGE:sam:dme:MgmtControllerOnline:SwConfigureConnPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-configure-conn-peer-failed
mibFaultCode: F17169
mibFaultName: fsmStFailMgmtControllerOnlineSwConfigureConnPeer
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailComputeRackUnitOffline:CleanupLocal

Fault Code: F17170

Message: [FSM:STAGE:FAILED|RETRY]: cleaning host entries on local fabric-interconnect(FSM-STAGE:sam:dme:ComputeRackUnitOffline:CleanupLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: cleanup-local-failed
mibFaultCode: F17170
mibFaultName: fsmStFailComputeRackUnitOfflineCleanupLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]

fsmStFailComputeRackUnitOffline:CleanupPeer

Fault Code: F17170

Message: [FSM:STAGE:FAILED|RETRY]: cleaning host entries on peer fabric-interconnect(FSM-STAGE:sam:dme:ComputeRackUnitOffline:CleanupPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cleanup-peer-failed
mibFaultCode: F17170
mibFaultName: fsmStFailComputeRackUnitOfflineCleanupPeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitOffline:SwUnconfigureLocal

Fault Code: F17170

Message: [FSM:STAGE:FAILED|RETRY]: Unconfiguring fabric-interconnect connectivity to CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitOffline:SwUnconfigureLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfigure-local-failed
mibFaultCode: F17170
mibFaultName: fsmStFailComputeRackUnitOfflineSwUnconfigureLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitOffline:SwUnconfigurePeer

Fault Code: F17170

Message: [FSM:STAGE:FAILED|RETRY]: Unconfiguring fabric-interconnect connectivity to CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitOffline:SwUnconfigurePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfigure-peer-failed
mibFaultCode: F17170
```

mibFaultName: fsmStFailComputeRackUnitOfflineSwUnconfigurePeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]

fsmStFailEquipmentLocatorLedSetFiLocatorLed:Execute

Fault Code: F17187

Message: [FSM:STAGE:FAILED|RETRY]: setting FI locator led to [adminState](FSM-STAGE:sam:dme:EquipmentLocatorLedSetFiLocatorLed:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: F17187
mibFaultName: fsmStFailEquipmentLocatorLedSetFiLocatorLedExecute
moClass: equipment:LocatorLed
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/locator-led
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/locator-led
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/locator-led
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/chassis-[id]/locator-led
Affected MO: sys/chassis-[id]/psu-[id]/locator-led
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/chassis-[id]/slot-[id]/locator-led
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/fex-[id]/locator-led
Affected MO: sys/fex-[id]/psu-[id]/locator-led
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/fex-[id]/slot-[id]/locator-led
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/rack-enclosure-[id]/psu-[id]/locator-led
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led

```
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/rack-unit-[id]/ext-board-[id]/locator-led
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/rack-unit-[id]/locator-led
Affected MO: sys/rack-unit-[id]/psu-[id]/locator-led
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/switch-[id]/locator-led
Affected MO: sys/switch-[id]/psu-[id]/locator-led
```

fsmStFailFabricEpMgrConfigure:ApplyConfig

Fault Code: F17214

Message: [FSM:STAGE:FAILED|RETRY]: Apply switch configuration(FSM-STAGE:sam:dme:FabricEpMgrConfigure:ApplyConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-config-failed
mibFaultCode: F17214
mibFaultName: fsmStFailFabricEpMgrConfigureApplyConfig
moClass: fabric:EpMgr
Type: fsm
autoCleared: true
Affected MO: fabric/[id]
```

fsmStFailFabricEpMgrConfigure:ApplyPhysical

Fault Code: F17214

Message: [FSM:STAGE:FAILED|RETRY]: Applying physical configuration(FSM-STAGE:sam:dme:FabricEpMgrConfigure:ApplyPhysical)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-physical-failed
mibFaultCode: F17214
mibFaultName: fsmStFailFabricEpMgrConfigureApplyPhysical
moClass: fabric:EpMgr
Type: fsm
autoCleared: true
Affected MO: fabric/[id]
```

fsmStFailFabricEpMgrConfigure:ValidateConfiguration

Fault Code: F17214

Message: [FSM:STAGE:FAILED|RETRY]: Validating logical configuration(FSM-STAGE:sam:dme:FabricEpMgrConfigure:ValidateConfiguration)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: validate-configuration-failed
mibFaultCode: F17214
mibFaultName: fsmStFailFabricEpMgrConfigureValidateConfiguration
moClass: fabric:EpMgr
Type: fsm
autoCleared: true
Affected MO: fabric/[id]
```

fsmStFailFabricEpMgrConfigure:WaitOnPhys

Fault Code: F17214

Message: [FSM:STAGE:FAILED|RETRY]: Waiting on physical change application(FSM-STAGE:sam:dme:FabricEpMgrConfigure:WaitOnPhys)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-on-phys-failed
mibFaultCode: F17214
mibFaultName: fsmStFailFabricEpMgrConfigureWaitOnPhys
moClass: fabric:EpMgr
Type: fsm
autoCleared: true
Affected MO: fabric/[id]
```

fsmStFailVnicProfileSetDeployAlias:Local

Fault Code: F17223

Message: [FSM:STAGE:FAILED|RETRY]: VNIC profile alias configuration on local fabric(FSM-STAGE:sam:dme:VnicProfileSetDeployAlias:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F17223
mibFaultName: fsmStFailVnicProfileSetDeployAliasLocal
moClass: vnic:ProfileSet
Type: fsm
autoCleared: true
Affected MO: fabric/lan/profiles
```

fsmStFailVnicProfileSetDeployAlias:Peer

Fault Code: F17223

Message: [FSM:STAGE:FAILED|RETRY]: VNIC profile alias configuration on peer fabric(FSM-STAGE:sam:dme:VnicProfileSetDeployAlias:Peer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: peer-failed
mibFaultCode: F17223
mibFaultName: fsmStFailVnicProfileSetDeployAliasPeer
moClass: vnic:ProfileSet
Type: fsm
autoCleared: true
Affected MO: fabric/lan/profiles
```

fsmStFailSwPhysConfPhysical:ConfigSwA

Fault Code: F17239

Message: [FSM:STAGE:FAILED|RETRY]: Configure physical port mode on fabric interconnect [id](FSM-STAGE:sam:dme:SwPhysConfPhysical:ConfigSwA)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-sw-afailed
mibFaultCode: F17239
```

```
mibFaultName: fsmStFailSwPhysConfPhysicalConfigSwA
moClass: sw:Phys
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/phys
```

fsmStFailSwPhysConfPhysical:ConfigSwB

Fault Code: F17239

Message: [FSM:STAGE:FAILED|RETRY]: Configure physical port mode on fabric interconnect [id](FSM-STAGE:sam:dme:SwPhysConfPhysical:ConfigSwB)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-sw-bfailed
mibFaultCode: F17239
mibFaultName: fsmStFailSwPhysConfPhysicalConfigSwB
moClass: sw:Phys
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/phys
```

fsmStFailSwPhysConfPhysical:PortInventorySwA

Fault Code: F17239

Message: [FSM:STAGE:FAILED|RETRY]: Performing local port inventory of switch [id](FSM-STAGE:sam:dme:SwPhysConfPhysical:PortInventorySwA)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: port-inventory-sw-afailed
mibFaultCode: F17239
mibFaultName: fsmStFailSwPhysConfPhysicalPortInventorySwA
moClass: sw:Phys
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/phys
```

fsmStFailSwPhysConfPhysical:PortInventorySwB

Fault Code: F17239

Message: [FSM:STAGE:FAILED|RETRY]: Performing peer port inventory of switch [id](FSM-STAGE:sam:dme:SwPhysConfPhysical:PortInventorySwB)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: port-inventory-sw-bfailed
mibFaultCode: F17239
mibFaultName: fsmStFailSwPhysConfPhysicalPortInventorySwB
moClass: sw:Phys
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/phys
```

fsmStFailSwPhysConfPhysical:VerifyPhysConfig

Fault Code: F17239

Message: [FSM:STAGE:FAILED|RETRY]: Verifying physical transition on fabric interconnect [id](FSM-STAGE:sam:dme:SwPhysConfPhysical:VerifyPhysConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: verify-phys-config-failed
mibFaultCode: F17239
mibFaultName: fsmStFailSwPhysConfPhysicalVerifyPhysConfig
moClass: sw:Phys
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/phys
```

fsmStFailExtvmmEpClusterRole:SetLocal

Fault Code: F17254

Message: [FSM:STAGE:FAILED|RETRY]: external VM management cluster role configuration on local fabric(FSM-STAGE:sam:dme:ExtvmmEpClusterRole:SetLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-local-failed
mibFaultCode: F17254
mibFaultName: fsmStFailExtvmmEpClusterRoleSetLocal
moClass: extvmm:Ep
Type: fsm
autoCleared: true
Affected MO: sys/extvm-mgmt
```

fsmStFailExtvmmEpClusterRole:SetPeer

Fault Code: F17254

Message: [FSM:STAGE:FAILED|RETRY]: external VM management cluster role configuration on peer fabric(FSM-STAGE:sam:dme:ExtvmmEpClusterRole:SetPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-peer-failed
mibFaultCode: F17254
mibFaultName: fsmStFailExtvmmEpClusterRoleSetPeer
moClass: extvmm:Ep
Type: fsm
autoCleared: true
Affected MO: sys/extvm-mgmt
```

fsmStFailVmLifeCyclePolicyConfig:Local

Fault Code: F17259

Message: [FSM:STAGE:FAILED|RETRY]: set Veth Auto-delete Retention Timer on local fabric(FSM-STAGE:sam:dme:VmLifeCyclePolicyConfig:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F17259
mibFaultName: fsmStFailVmLifeCyclePolicyConfigLocal
moClass: vm:LifeCyclePolicy
Type: fsm
```

```
autoCleared: true
Affected MO: org-[name]/vm-lc-policy
```

fsmStFailVmLifeCyclePolicyConfig:Peer

Fault Code: F17259

Message: [FSM:STAGE:FAILED|RETRY]: set Veth Auto-delete Retention Timer on peer fabric(FSM-STAGE:sam:dme:VmLifeCyclePolicyConfig:Peer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: peer-failed
mibFaultCode: F17259
mibFaultName: fsmStFailVmLifeCyclePolicyConfigPeer
moClass: vm:LifeCyclePolicy
Type: fsm
autoCleared: true
Affected MO: org-[name]/vm-lc-policy
```

fsmStFailEquipmentBeaconLedIlluminate:ExecuteA

Fault Code: F17262

Message: [FSM:STAGE:FAILED|RETRY]: Turn beacon lights on/off for [dn] on fabric interconnect [id](FSM-STAGE:sam:dme:EquipmentBeaconLedIlluminate:ExecuteA)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-afailed
mibFaultCode: F17262
mibFaultName: fsmStFailEquipmentBeaconLedIlluminateExecuteA
moClass: equipment:BeaconLed
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/beacon
Affected MO: sys/chassis-[id]/blade-[slotId]/beacon
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/beacon
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/chassis-[id]/psu-[id]/beacon
Affected MO: sys/chassis-[id]/slot-[id]/beacon
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/fex-[id]/beacon
```

Affected MO: sys/fex-[id]/psu-[id]/beacon
Affected MO: sys/fex-[id]/slot-[id]/beacon
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/rack-enclosure-[id]/psu-[id]/beacon
Affected MO: sys/rack-unit-[id]/beacon
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/rack-unit-[id]/psu-[id]/beacon
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/switch-[id]/psu-[id]/beacon
Affected MO: sys/switch-[id]/slot-[id]/beacon

fsmStFailEquipmentBeaconLedIlluminate:ExecuteB

Fault Code: F17262

Message: [FSM:STAGE:FAILED|RETRY]: Turn beacon lights on/off for [dn] on fabric interconnect [id](FSM-STAGE:sam:dme:EquipmentBeaconLedIlluminate:ExecuteB)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: execute-bfailed
mibFaultCode: F17262
mibFaultName: fsmStFailEquipmentBeaconLedIlluminateExecuteB
moClass: equipment:BeaconLed
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/beacon
Affected MO: sys/chassis-[id]/blade-[slotId]/beacon
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/beacon
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/chassis-[id]/psu-[id]/beacon
Affected MO: sys/chassis-[id]/slot-[id]/beacon
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/fex-[id]/beacon
Affected MO: sys/fex-[id]/psu-[id]/beacon
Affected MO: sys/fex-[id]/slot-[id]/beacon
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/rack-enclosure-[id]/psu-[id]/beacon
Affected MO: sys/rack-unit-[id]/beacon
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/rack-unit-[id]/psu-[id]/beacon
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/switch-[id]/psu-[id]/beacon
Affected MO: sys/switch-[id]/slot-[id]/beacon

fsmStFailEtherServerIntFIoConfigSpeed:Configure

Fault Code: F17271

Message: [FSM:STAGE:FAILED|RETRY]: Configure admin speed for [dn](FSM-STAGE:sam:dme:EtherServerIntFIoConfigSpeed:Configure)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: configure-failed
mibFaultCode: F17271
mibFaultName: fsmStFailEtherServerIntFIoConfigSpeedConfigure
moClass: ether:ServerIntFIo
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/rack-unit-[id]/diag/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]
```

fsmStFailComputePhysicalUpdateBIOS:Clear

Fault Code: F17281

Message: [FSM:STAGE:FAILED|RETRY]: clearing pending BIOS image update(FSM-STAGE:sam:dme:ComputePhysicalUpdateBIOS:Clear)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: clear-failed
mibFaultCode: F17281
mibFaultName: fsmStFailComputePhysicalUpdateBIOSClear
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalUpdateBIOS:PollClearStatus

Fault Code: F17281

Message: [FSM:STAGE:FAILED|RETRY]: waiting for pending BIOS image update to clear(FSM-STAGE:sam:dme:ComputePhysicalUpdateBIOS:PollClearStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-clear-status-failed
mibFaultCode: F17281
mibFaultName: fsmStFailComputePhysicalUpdateBIOSPollClearStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalUpdateBIOS:PollUpdateStatus

Fault Code: F17281

Message: [FSM:STAGE:FAILED|RETRY]: waiting for BIOS update to complete(FSM-STAGE:sam:dme:ComputePhysicalUpdateBIOS:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F17281
mibFaultName: fsmStFailComputePhysicalUpdateBIOSPollUpdateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalUpdateBIOS:UpdateRequest

Fault Code: F17281

Message: [FSM:STAGE:FAILED|RETRY]: sending BIOS update request to CIMC(FSM-STAGE:sam:dme:ComputePhysicalUpdateBIOS:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-request-failed
mibFaultCode: F17281
mibFaultName: fsmStFailComputePhysicalUpdateBIOSUpdateRequest
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalActivateBIOS:Activate

Fault Code: F17282

Message: [FSM:STAGE:FAILED|RETRY]: activating BIOS image(FSM-STAGE:sam:dme:ComputePhysicalActivateBIOS:Activate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-failed
mibFaultCode: F17282
mibFaultName: fsmStFailComputePhysicalActivateBIOSActivate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalActivateBIOS:CheckPowerAvailability

Fault Code: F17282

Message: [FSM:STAGE:FAILED|RETRY]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalActivateBIOS:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F17282
mibFaultName: fsmStFailComputePhysicalActivateBIOSCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalActivateBIOS:Clear

Fault Code: F17282

Message: [FSM:STAGE:FAILED|RETRY]: clearing pending BIOS image activate(FSM-STAGE:sam:dme:ComputePhysicalActivateBIOS:Clear)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: clear-failed
mibFaultCode: F17282
mibFaultName: fsmStFailComputePhysicalActivateBIOSClear
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalActivateBIOS:PollActivateStatus

Fault Code: F17282

Message: [FSM:STAGE:FAILED|RETRY]: waiting for BIOS activate(FSM-STAGE:sam:dme:ComputePhysicalActivateBIOS:PollActivateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-activate-status-failed
mibFaultCode: F17282
mibFaultName: fsmStFailComputePhysicalActivateBIOSPollActivateStatus
moClass: compute:Physical
```

```
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalActivateBIOS:PollClearStatus

Fault Code: F17282

Message: [FSM:STAGE:FAILED|RETRY]: waiting for pending BIOS image activate to clear(FSM-STAGE:sam:dme:ComputePhysicalActivateBIOS:PollClearStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-clear-status-failed
mibFaultCode: F17282
mibFaultName: fsmStFailComputePhysicalActivateBIOSPollClearStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalActivateBIOS:PowerDeployWait

Fault Code: F17282

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalActivateBIOS:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F17282
mibFaultName: fsmStFailComputePhysicalActivateBIOSPowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalActivateBIOS:PowerOff

Fault Code: F17282

Message: [FSM:STAGE:FAILED|RETRY]: Power off the server(FSM-STAGE:sam:dme:ComputePhysicalActivateBIOS:PowerOff)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-off-failed
mibFaultCode: F17282
mibFaultName: fsmStFailComputePhysicalActivateBIOSPowerOff
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalActivateBIOS:PowerOn

Fault Code: F17282

Message: [FSM:STAGE:FAILED|RETRY]: power on the server(FSM-STAGE:sam:dme:ComputePhysicalActivateBIOS:PowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-failed
mibFaultCode: F17282
mibFaultName: fsmStFailComputePhysicalActivateBIOSPowerOn
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalActivateBIOS:UpdateTokens

Fault Code: F17282

Message: [FSM:STAGE:FAILED|RETRY]: updating BIOS tokens(FSM-STAGE:sam:dme:ComputePhysicalActivateBIOS:UpdateTokens)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-tokens-failed
mibFaultCode: F17282
mibFaultName: fsmStFailComputePhysicalActivateBIOSUpdateTokens
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailIdentIdentRequestUpdateIdent:Execute

Fault Code: F17312

Message: [FSM:STAGE:FAILED|RETRY]: Update identities to external identifier manager(FSM-STAGE:sam:dme:IdentIdentRequestUpdateIdent:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F17312
mibFaultName: fsmStFailIdentIdentRequestUpdateIdentExecute
moClass: ident:IdentRequest
Type: fsm
autoCleared: true
Affected MO: metaverse/metasys/IdentQ-[id]
```

fsmStFailIdentMetaSystemSync:Execute

Fault Code: F17313

Message: [FSM:STAGE:FAILED|RETRY]: Synchronise ID universe to external identifier manager(FSM-STAGE:sam:dme:IdentMetaSystemSync:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F17313
mibFaultName: fsmStFailIdentMetaSystemSyncExecute
moClass: ident:MetaSystem
Type: fsm
autoCleared: true
Affected MO: metaverse/metasys
```

fsmStFailIdentMetaSystemSync:Ping

Fault Code: F17313

Message: [FSM:STAGE:FAILED|RETRY]: Check identifier manager availability(FSM-STAGE:sam:dme:IdentMetaSystemSync:Ping)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: ping-failed
mibFaultCode: F17313
mibFaultName: fsmStFailIdentMetaSystemSyncPing
moClass: ident:MetaSystem
Type: fsm
autoCleared: true
Affected MO: metaverse/metasys
```

fsmStFailComputePhysicalResetIpmi:Execute

Fault Code: F17326

Message: [FSM:STAGE:FAILED|RETRY]: Execute Reset IPMI configuration for server [dn](FSM-STAGE:sam:dme:ComputePhysicalResetIpmi:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F17326
mibFaultName: fsmStFailComputePhysicalResetIpmiExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:ActivateBios

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Activate BIOS image for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:ActivateBios)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-bios-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeActivateBios
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:AssertBypassWait

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for assert bypass on rack server(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:AssertBypassWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: assert-bypass-wait-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeAssertBypassWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:BiosImgUpdate

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Update blade BIOS image(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:BiosImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bios-img-update-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeBiosImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:BiosPostCompletion

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for BIOS POST completion from CIMC on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:BiosPostCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeBiosPostCompletion
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:BladePowerOff

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Power off server for Firmware Upgrade(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:BladePowerOff)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: blade-power-off-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeBladePowerOff
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:BmcConfigPnuOS

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: provisioning a bootable device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:BmcConfigPnuOS)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-config-pnuos-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeBmcConfigPnuOS
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:BmcPreconfigPnuOSLocal

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:BmcPreconfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-preconfig-pnuoslocal-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeBmcPreconfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:BmcPreconfigPnuOSPeer

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:BmcPreconfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-preconfig-pnuospeer-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeBmcPreconfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:BmcUnconfigPnuOS

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: unprovisioning the bootable device for server(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:BmcUnconfigPnuOS)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: bmc-unconfig-pnuos-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeBmcUnconfigPnuOS
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:BootPnuos

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Bring-up pre-boot environment for Firmware Upgrade(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:BootPnuos)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-pnuos-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeBootPnuos
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:BootWait

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for system reset(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:BootWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-wait-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeBootWait
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:CheckPowerAvailability

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:CiscoOSOpenGate

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Open Gate from CIMC on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:CiscoOSOpenGate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: ciscoosopen-gate-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeCiscoOSOpenGate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:ClearBiosUpdate

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Clearing pending BIOS image update(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:ClearBiosUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: clear-bios-update-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeClearBiosUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:DeassertResetBypass

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: deassert reset-bypass(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:DeassertResetBypass)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: deassert-reset-bypass-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeDeassertResetBypass
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:DeleteCurlDownloadedImages

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Delete images downloaded from operations manager(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:DeleteCurlDownloadedImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-curl-downloaded-images-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeDeleteCurlDownloadedImages
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:DeleteImagesRemote

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Delete images downloaded from operations manager(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:DeleteImagesRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-images-remote-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeDeleteImagesRemote
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:GraphicsImageUpdate

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Update gpu firmware image(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:GraphicsImageUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: graphics-image-update-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeGraphicsImageUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:HbaImgUpdate

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Update Host Bus Adapter image(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:HbaImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hba-img-update-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeHbaImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:LocalDiskFwUpdate

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Update LocalDisk firmware image(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:LocalDiskFwUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: local-disk-fw-update-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeLocalDiskFwUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:MswitchImgUpdate

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Update NVMe MSwitch image(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:MswitchImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: mswitch-img-update-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeMswitchImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:NicConfigPnuOSLocal

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Configure adapter for pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:NicConfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-pnuoslocal-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeNicConfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:NicConfigPnuOSPeer

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Configure adapter for pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:NicConfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-pnuospeer-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeNicConfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:NicImgUpdate

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Update adapter image(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:NicImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-img-update-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeNicImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:NicUnconfigPnuOSLocal

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure adapter of server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:NicUnconfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-unconfig-pnuoslocal-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeNicUnconfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:NicUnconfigPnuOSPeer

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure adapter of server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:NicUnconfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-unconfig-pnuospeer-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeNicUnconfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:OobPollSasExpanderActivateStatus

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Sas expander regular firmware activation to complete(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:OobPollSasExpanderActivateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-poll-sas-expander-activate-status-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeOobPollSasExpanderActivateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:OobPollSasExpanderBootImgActivateStatus

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Sas expander boot firmware update to complete(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:OobPollSasExpanderBootImgActivateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-poll-sas-expander-boot-img-activate-status-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeOobPollSasExpanderBootImgActivateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:OobPollSasExpanderUpdateStatus

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Sas expander regular firmware update to complete(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:OobPollSasExpanderUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-poll-sas-expander-update-status-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeOobPollSasExpanderUpdateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:OobSasExpanderBootImgActivate

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Sas expander boot firmware update(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:OobSasExpanderBootImgActivate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-sas-expander-boot-img-activate-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeOobSasExpanderBootImgActivate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:OobSasExpanderImgActivate

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Sas expander regular firmware activate(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:OobSasExpanderImgActivate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: oob-sas-expander-img-activate-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeOobSasExpanderImgActivate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:OobSasExpanderImgUpdate

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Sas expander regular firmware update(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:OobSasExpanderImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-sas-expander-img-update-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeOobSasExpanderImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:OobStorageInventory

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Perform oob storage inventory(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:OobStorageInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-storage-inventory-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeOobStorageInventory
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:PciSwitchImageUpdate

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Update Pci Switch firmware image(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PciSwitchImageUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pci-switch-image-update-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradePciSwitchImageUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:PersistentMemoryDimmFwUpdate

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Update Persistent Memory DIMM firmware image(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PersistentMemoryDimmFwUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: persistent-memory-dimm-fw-update-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradePersistentMemoryDimmFwUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:PnuOSCatalog

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Populate pre-boot catalog to server(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PnuOSCatalog)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuoscatalog-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradePnuOSCatalog
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:PnuOSConfig

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Configure server with service profile [assignedToDn] pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PnuOSConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosconfig-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradePnuOSConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:PnuOSIdent

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Identify pre-boot environment agent(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PnuOSIdent)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosident-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradePnuOSIdent
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:PnuOSInventory

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Perform inventory of server(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PnuOSInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosinventory-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradePnuOSInventory
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:PnuOSPolicy

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Populate pre-boot environment behavior policy(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PnuOSPolicy)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuospolicy-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradePnuOSPolicy
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:PnuOSSelfTest

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Trigger self-test on pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PnuOSSelfTest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosself-test-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradePnuOSSelfTest
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:PnuOSUnloadDrivers

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Unload drivers on server(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PnuOSUnloadDrivers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: pnuosunload-drivers-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradePnuOSUnloadDrivers
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:PnuOSValidate

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Pre-boot environment validation for Firmware Upgrade(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PnuOSValidate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosvalidate-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradePnuOSValidate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:PollBiosActivateStatus

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: waiting for BIOS activate(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PollBiosActivateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-bios-activate-status-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradePollBiosActivateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:PollBiosUpdateStatus

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for BIOS update to complete(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PollBiosUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-bios-update-status-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradePollBiosUpdateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:PollBoardCtrlPowerCycle

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Board Controller power cycle to complete(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PollBoardCtrlPowerCycle)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-board-ctrl-power-cycle-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradePollBoardCtrlPowerCycle
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:PollBoardCtrlUpdateStatus

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Board Controller update to complete(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PollBoardCtrlUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-board-ctrl-update-status-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradePollBoardCtrlUpdateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:PollClearBiosUpdateStatus

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: waiting for pending BIOS image update to clear(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PollClearBiosUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-clear-bios-update-status-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradePollClearBiosUpdateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:PowerCycleBoard

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Power cycle the board controller(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PowerCycleBoard)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-cycle-board-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradePowerCycleBoard
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:PowerDeployWait

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradePowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:PowerOffForSbAdaptorActivation

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Power off the server for activating Secure boot adapter firmware(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PowerOffForSbAdaptorActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-off-for-sb-adaptor-activation-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradePowerOffForSbAdaptorActivation
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:PowerOn

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Power on server for Firmware Upgrade(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradePowerOn
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:PreSanitize

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Preparing to check hardware configuration(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: pre-sanitize-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradePreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:Sanitize

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Checking hardware configuration(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:SasExpanderImgUpdate

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Update sas expander image(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:SasExpanderImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sas-expander-img-update-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeSasExpanderImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:Shutdown

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Shutting down server [dn] after firmware upgrade(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:Shutdown)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: shutdown-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeShutdown
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:SolRedirectDisable

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Disable Sol redirection on server(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:SolRedirectDisable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sol-redirect-disable-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeSolRedirectDisable
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:SolRedirectEnable

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: set up bios token for server for Sol redirect(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:SolRedirectEnable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sol-redirect-enable-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeSolRedirectEnable
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:StorageCtlrImgUpdate

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Update storage controller image(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:StorageCtlrImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: storage-ctlr-img-update-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeStorageCtlrImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:SwConfigPnuOSLocal

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Configure primary fabric interconnect for pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:SwConfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-pnuoslocal-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeSwConfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:SwConfigPnuOSPeer

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Configure secondary fabric interconnect for pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:SwConfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-pnuospeer-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeSwConfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:SwConfigPortNivLocal

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: configuring primary fabric interconnect access to server(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:SwConfigPortNivLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-port-niv-local-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeSwConfigPortNivLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:SwConfigPortNivPeer

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: configuring secondary fabric interconnect access to server(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:SwConfigPortNivPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-port-niv-peer-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeSwConfigPortNivPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:SwUnconfigPnuOSLocal

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure primary fabric interconnect for server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:SwUnconfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: sw-unconfig-pnuoslocal-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeSwUnconfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:SwUnconfigPnuOSPeer

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure secondary fabric interconnect for server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:SwUnconfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfig-pnuospeer-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeSwUnconfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:UnconfigCimcVMedia

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: cleaning all mappings for vmedia(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:UnconfigCimcVMedia)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-cimcvmedia-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeUnconfigCimcVMedia
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:UnconfigExtMgmtGw

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: cleaning all ext mgmt bmc gateway for vmedia(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:UnconfigExtMgmtGw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-ext-mgmt-gw-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeUnconfigExtMgmtGw
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:UnconfigExtMgmtRules

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: cleaning all ext mgmt rules for vmedia(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:UnconfigExtMgmtRules)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-ext-mgmt-rules-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeUnconfigExtMgmtRules
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:UnlockFirmwareImage

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Releasing the lock obtained(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:UnlockFirmwareImage)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unlock-firmware-image-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeUnlockFirmwareImage
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:UpdateBiosRequest

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Sending update BIOS request to CIMC(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:UpdateBiosRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-bios-request-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeUpdateBiosRequest
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:UpdateBoardCtrlRequest

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Sending Board Controller update request to CIMC(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:UpdateBoardCtrlRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-board-ctrl-request-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeUpdateBoardCtrlRequest
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:UpdateFruComponents

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Updating Sub Components after Power Off for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:UpdateFruComponents)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-fru-components-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeUpdateFruComponents
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:WaitForBiosPostCompletion

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Adaptor to Come up after BIOS POST Completion(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:WaitForBiosPostCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-bios-post-completion-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeWaitForBiosPostCompletion
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:activateAdaptorNwFwLocal

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Activate adapter network firmware on(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:activateAdaptorNwFwLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-adaptor-nw-fw-local-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeActivateAdaptorNwFwLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:activateAdaptorNwFwPeer

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Activate adapter network firmware on(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:activateAdaptorNwFwPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: activate-adaptor-nw-fw-peer-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeActivateAdaptorNwFwPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:activateIBMCFw

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Activate CIMC firmware of server [serverId](FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:activateIBMCFw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activateibmcfw-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeActivateIBMCFw
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:activateNwSbAdaptorFw

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Activate Network Secure boot adapter firmware(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:activateNwSbAdaptorFw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-nw-sb-adaptor-fw-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeActivateNwSbAdaptorFw
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:copyRemote

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Copy images to peer node(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:copyRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-remote-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeCopyRemote
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:downloadImages

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Download images from operations manager(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:downloadImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: download-images-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeDownloadImages
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:hagPnuOSConnect

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Connect to pre-boot environment agent for Firmware Upgrade(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:hagPnuOSConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-pnuosconnect-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeHagPnuOSConnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:hagPnuOSDisconnect

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Disconnect pre-boot environment agent(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:hagPnuOSDisconnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-pnuosdisconnect-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeHagPnuOSDisconnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:resetIBMC

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Reset CIMC of server [serverId](FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:resetIBMC)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resetibmc-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeResetIBMC
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:serialDebugPnuOSConnect

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Connect to pre-boot environment agent for Firmware Upgrade(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:serialDebugPnuOSConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: serial-debug-pnuosconnect-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeSerialDebugPnuOSConnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:serialDebugPnuOSDisconnect

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Disconnect pre-boot environment agent(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:serialDebugPnuOSDisconnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: serial-debug-pnuosdisconnect-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeSerialDebugPnuOSDisconnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:updateAdaptorNwFwLocal

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Update adapter network firmware(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:updateAdaptorNwFwLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-adaptor-nw-fw-local-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeUpdateAdaptorNwFwLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:updateAdaptorNwFwPeer

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Update adapter network firmware(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:updateAdaptorNwFwPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: update-adaptor-nw-fw-peer-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeUpdateAdaptorNwFwPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:updateIBMCFw

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Update CIMC firmware of server [serverId](FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:updateIBMCFw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: updateibmcfw-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeUpdateIBMCFw
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:updateNwSbAdaptorFw

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Update Network Secure boot adapter firmware(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:updateNwSbAdaptorFw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-nw-sb-adaptor-fw-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeUpdateNwSbAdaptorFw
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:waitForAdaptorNwFwUpdateLocal

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Wait for adapter network firmware update completion(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:waitForAdaptorNwFwUpdateLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-adaptor-nw-fw-update-local-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeWaitForAdaptorNwFwUpdateLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:waitForAdaptorNwFwUpdatePeer

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Wait for adapter network firmware update completion(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:waitForAdaptorNwFwUpdatePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-adaptor-nw-fw-update-peer-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeWaitForAdaptorNwFwUpdatePeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:waitForIBMCFwUpdate

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Wait for CIMC firmware completion on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:waitForIBMCFwUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-foribmcfw-update-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeWaitForIBMCFwUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:waitForNwSbAdaptorFwActivate

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Wait for Network Secure boot adapter firmware activation completion(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:waitForNwSbAdaptorFwActivate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-nw-sb-adaptor-fw-activate-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeWaitForNwSbAdaptorFwActivate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:waitForNwSbAdaptorFwUpdate

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Wait for Network Secure boot adapter firmware update completion(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:waitForNwSbAdaptorFwUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-nw-sb-adaptor-fw-update-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeWaitForNwSbAdaptorFwUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalFwUpgrade:waitForUpdateFruComponents

Fault Code: F17327

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for update completion on Sub Components for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:waitForUpdateFruComponents)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-update-fru-components-failed
mibFaultCode: F17327
mibFaultName: fsmStFailComputePhysicalFwUpgradeWaitForUpdateFruComponents
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitAdapterReset:DeassertResetBypass

Fault Code: F17328

Message: [FSM:STAGE:FAILED|RETRY]: deassert reset-bypass(FSM-STAGE:sam:dme:ComputeRackUnitAdapterReset:DeassertResetBypass)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: deassert-reset-bypass-failed
mibFaultCode: F17328
mibFaultName: fsmStFailComputeRackUnitAdapterResetDeassertResetBypass
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitAdapterReset:PowerCycle

Fault Code: F17328

Message: [FSM:STAGE:FAILED|RETRY]: Power-cycle server [dn](FSM-STAGE:sam:dme:ComputeRackUnitAdapterReset:PowerCycle)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-cycle-failed
mibFaultCode: F17328
mibFaultName: fsmStFailComputeRackUnitAdapterResetPowerCycle
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitAdapterReset:PreSanitize

Fault Code: F17328

Message: [FSM:STAGE:FAILED|RETRY]: Preparing to check hardware configuration server [dn](FSM-STAGE:sam:dme:ComputeRackUnitAdapterReset:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F17328
mibFaultName: fsmStFailComputeRackUnitAdapterResetPreSanitize
moClass: compute:RackUnit
```

```
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputeRackUnitAdapterReset:Sanitize

Fault Code: F17328

Message: [FSM:STAGE:FAILED|RETRY]: Checking hardware configuration server [dn](FSM-STAGE:sam:dme:ComputeRackUnitAdapterReset:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F17328
mibFaultName: fsmStFailComputeRackUnitAdapterResetSanitize
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailPortPIoInCompatSfpReplaced:EnablePort

Fault Code: F17358

Message: [FSM:STAGE:FAILED|RETRY]: Enabling port(FSM-STAGE:sam:dme:PortPIoInCompatSfpReplaced:EnablePort)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: enable-port-failed
mibFaultCode: F17358
mibFaultName: fsmStFailPortPIoInCompatSfpReplacedEnablePort
moClass: port:PIo
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
```

```
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]
```

fsmStFailExtpolEpRegisterFsm:Execute

Fault Code: F17359

Message: [FSM:STAGE:FAILED|RETRY]: Register FSM Execute(FSM-STAGE:sam:dme:ExtpolEpRegisterFsm:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F17359
mibFaultName: fsmStFailExtpolEpRegisterFsmExecute
moClass: extpol:Ep
Type: fsm
autoCleared: true
Affected MO: extpol
```

fsmStFailExtpolRegistryCrossDomainConfig:SetLocal

Fault Code: F17360

Message: [FSM:STAGE:FAILED|RETRY]: Configure cross-domain XML for FLEX client on local fabric-interconnect(FSM-STAGE:sam:dme:ExtpolRegistryCrossDomainConfig:SetLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-local-failed
mibFaultCode: F17360
mibFaultName: fsmStFailExtpolRegistryCrossDomainConfigSetLocal
moClass: extpol:Registry
Type: fsm
autoCleared: true
Affected MO: extpol/reg
```

fsmStFailExtpolRegistryCrossDomainConfig:SetPeer

Fault Code: F17360

Message: [FSM:STAGE:FAILED|RETRY]: Configure cross-domain XML for FLEX client on peer fabric-interconnect(FSM-STAGE:sam:dme:ExtpolRegistryCrossDomainConfig:SetPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-peer-failed
mibFaultCode: F17360
mibFaultName: fsmStFailExtpolRegistryCrossDomainConfigSetPeer
moClass: extpol:Registry
Type: fsm
autoCleared: true
Affected MO: extpol/reg
```

fsmStFailExtpolRegistryCrossDomainDelete:SetLocal

Fault Code: F17361

Message: [FSM:STAGE:FAILED|RETRY]: Remove cross-domain XML for FLEX client on local fabric-interconnect(FSM-STAGE:sam:dme:ExtpolRegistryCrossDomainDelete:SetLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-local-failed
mibFaultCode: F17361
mibFaultName: fsmStFailExtpolRegistryCrossDomainDeleteSetLocal
moClass: extpol:Registry
Type: fsm
autoCleared: true
Affected MO: extpol/reg
```

fsmStFailExtpolRegistryCrossDomainDelete:SetPeer

Fault Code: F17361

Message: [FSM:STAGE:FAILED|RETRY]: Remove cross-domain XML for FLEX client on peer fabric-interconnect(FSM-STAGE:sam:dme:ExtpolRegistryCrossDomainDelete:SetPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-peer-failed
mibFaultCode: F17361
mibFaultName: fsmStFailExtpolRegistryCrossDomainDeleteSetPeer
moClass: extpol:Registry
Type: fsm
autoCleared: true
Affected MO: extpol/reg
```

fsmStFailNfsMountInstMount:MountLocal

Fault Code: F17377

Message: [FSM:STAGE:FAILED|RETRY]: Mount nfs [remoteDir] from server [server] on local switch(FSM-STAGE:sam:dme:NfsMountInstMount:MountLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: mount-local-failed
mibFaultCode: F17377
mibFaultName: fsmStFailNfsMountInstMountMountLocal
moClass: nfs:MountInst
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/nfs-mount-inst-[name]
```

fsmStFailNfsMountInstMount:MountPeer

Fault Code: F17377

Message: [FSM:STAGE:FAILED|RETRY]: Mount nfs [remoteDir] from NFS server [server] on peer switch(FSM-STAGE:sam:dme:NfsMountInstMount:MountPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: mount-peer-failed
mibFaultCode: F17377
mibFaultName: fsmStFailNfsMountInstMountMountPeer
moClass: nfs:MountInst
Type: fsm
```

```
autoCleared: true
Affected MO: sys/switch-[id]/nfs-mount-inst-[name]
```

fsmStFailNfsMountInstMount:RegisterClient

Fault Code: F17377

Message: [FSM:STAGE:FAILED|RETRY]: Register client with Ops Mgr(FSM-STAGE:sam:dme:NfsMountInstMount:RegisterClient)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: register-client-failed
mibFaultCode: F17377
mibFaultName: fsmStFailNfsMountInstMountRegisterClient
moClass: nfs:MountInst
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/nfs-mount-inst-[name]
```

fsmStFailNfsMountInstMount:VerifyRegistration

Fault Code: F17377

Message: [FSM:STAGE:FAILED|RETRY]: Verify client registration with Ops Mgr(FSM-STAGE:sam:dme:NfsMountInstMount:VerifyRegistration)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: verify-registration-failed
mibFaultCode: F17377
mibFaultName: fsmStFailNfsMountInstMountVerifyRegistration
moClass: nfs:MountInst
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/nfs-mount-inst-[name]
```

fsmStFailNfsMountInstUnmount:UnmountLocal

Fault Code: F17378

Message: [FSM:STAGE:FAILED|RETRY]: Unmount nfs [remoteDir] from server [server](FSM-STAGE:sam:dme:NfsMountInstUnmount:UnmountLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unmount-local-failed
mibFaultCode: F17378
mibFaultName: fsmStFailNfsMountInstUnmountUnmountLocal
moClass: nfs:MountInst
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/nfs-mount-inst-[name]
```

fsmStFailNfsMountInstUnmount:UnmountPeer

Fault Code: F17378

Message: [FSM:STAGE:FAILED|RETRY]: Unmount nfs [remoteDir] from server [server](FSM-STAGE:sam:dme:NfsMountInstUnmount:UnmountPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unmount-peer-failed
mibFaultCode: F17378
mibFaultName: fsmStFailNfsMountInstUnmountUnmountPeer
moClass: nfs:MountInst
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/nfs-mount-inst-[name]
```

fsmStFailNfsMountDefReportNfsMountSuspend:Report

Fault Code: F17379

Message: [FSM:STAGE:FAILED|RETRY]: Report mount suspend success to operations manager(FSM-STAGE:sam:dme:NfsMountDefReportNfsMountSuspend:Report)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: report-failed
mibFaultCode: F17379
mibFaultName: fsmStFailNfsMountDefReportNfsMountSuspendReport
moClass: nfs:MountDef
Type: fsm
autoCleared: true
Affected MO: nfs-ep/nfs-mount-def-[name]
```

fsmStFailStorageSystemSync:Execute

Fault Code: F17395

Message: [FSM:STAGE:FAILED|RETRY]: Synchronise requestors with storage broker(FSM-STAGE:sam:dme:StorageSystemSync:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F17395
mibFaultName: fsmStFailStorageSystemSyncExecute
moClass: storage:System
Type: fsm
autoCleared: true
Affected MO: storage-ep/system
```

fsmStFailFirmwareSystemDeploy:ActivateIOM

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Activating IOMs(FSM-STAGE:sam:dme:FirmwareSystemDeploy:ActivateIOM)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activateiom-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployActivateIOM
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:ActivateLocalFI

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Activating Local Fabric Interconnect(FSM-STAGE:sam:dme:FirmwareSystemDeploy:ActivateLocalFI)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-localfi-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployActivateLocalFI
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:ActivateRemoteFI

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Activating Peer Fabric Interconnect(FSM-STAGE:sam:dme:FirmwareSystemDeploy:ActivateRemoteFI)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-remotefi-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployActivateRemoteFI
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:ActivateUCSM

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Activating UCSM(FSM-STAGE:sam:dme:FirmwareSystemDeploy:ActivateUCSM)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activateucsm-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployActivateUCSM
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:ActivateUCSMServicePack

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Activating UCSM Service Pack(FSM-STAGE:sam:dme:FirmwareSystemDeploy:ActivateUCSMServicePack)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activateucsmservice-pack-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployActivateUCSMServicePack
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:CopyAllImagesToPeer

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Copy all images to peer(FSM-STAGE:sam:dme:FirmwareSystemDeploy:CopyAllImagesToPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-all-images-to-peer-failed
mibFaultCode: F17408
```

```
mibFaultName: fsmStFailFirmwareSystemDeployCopyAllImagesToPeer
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:FabEvacOffRemoteFI

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Disabling Fabric Evacuation on Remote FI(FSM-STAGE:sam:dme:FirmwareSystemDeploy:FabEvacOffRemoteFI)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: fab-evac-off-remotefi-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployFabEvacOffRemoteFI
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:FabEvacOnRemoteFI

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Enabling Fabric Evacuation on Remote FI(FSM-STAGE:sam:dme:FirmwareSystemDeploy:FabEvacOnRemoteFI)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: fab-evac-on-remotefi-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployFabEvacOnRemoteFI
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:FailOverToRemoteFI

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Switching Over to Remote FI to make it as Primary(FSM-STAGE:sam:dme:FirmwareSystemDeploy:FailOverToRemoteFI)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: fail-over-to-remotefi-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployFailOverToRemoteFI
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:InternalBackup

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Taking Internal Backup(FSM-STAGE:sam:dme:FirmwareSystemDeploy:InternalBackup)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: internal-backup-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployInternalBackup
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:PollActivateOfIOM

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Activation to complete on IOMs(FSM-STAGE:sam:dme:FirmwareSystemDeploy:PollActivateOfIOM)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-activate-ofiom-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployPollActivateOfIOM
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:PollActivateOfLocalFI

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Activation to complete on Local Fabric Interconnect(FSM-STAGE:sam:dme:FirmwareSystemDeploy:PollActivateOfLocalFI)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-activate-of-localfi-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployPollActivateOfLocalFI
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:PollActivateOfRemoteFI

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Activation to complete on Peer Fabric Interconnect(FSM-STAGE:sam:dme:FirmwareSystemDeploy:PollActivateOfRemoteFI)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-activate-of-remotefi-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployPollActivateOfRemoteFI
moClass: firmware:System
Type: fsm
```

```
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:PollActivateOfUCSM

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for UCSM Activate to complete(FSM-STAGE:sam:dme:FirmwareSystemDeploy:PollActivateOfUCSM)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-activate-ofucsm-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployPollActivateOfUCSM
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:PollActivateOfUCSMServicePack

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for UCSM Service Pack Activate to complete(FSM-STAGE:sam:dme:FirmwareSystemDeploy:PollActivateOfUCSMServicePack)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-activate-ofucsmservice-pack-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployPollActivateOfUCSMServicePack
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:PollFabEvacOffRemoteFI

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Fabric Evacuation to be Disabled on Remote FI(FSM-STAGE:sam:dme:FirmwareSystemDeploy:PollFabEvacOffRemoteFI)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-fab-evac-off-remotefi-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployPollFabEvacOffRemoteFI
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:PollFabEvacOnRemoteFI

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Fabric Evacuation to be Enabled on Remote FI(FSM-STAGE:sam:dme:FirmwareSystemDeploy:PollFabEvacOnRemoteFI)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-fab-evac-on-remotefi-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployPollFabEvacOnRemoteFI
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:PollFailOverToRemoteFI

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Switch Over to complete(FSM-STAGE:sam:dme:FirmwareSystemDeploy:PollFailOverToRemoteFI)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-fail-over-to-remotefi-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployPollFailOverToRemoteFI
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:PollInternalBackup

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Internal Backup to complete(FSM-STAGE:sam:dme:FirmwareSystemDeploy:PollInternalBackup)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-internal-backup-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployPollInternalBackup
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:PollUpdateOfIOM

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for update of IOMs to complete(FSM-STAGE:sam:dme:FirmwareSystemDeploy:PollUpdateOfIOM)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-ofiom-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployPollUpdateOfIOM
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:PollWaitForUserAck

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Polling to wait for user acknowledgment(FSM-STAGE:sam:dme:FirmwareSystemDeploy:PollWaitForUserAck)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-wait-for-user-ack-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployPollWaitForUserAck
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:ResolveDistributable

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Resolve distributable from operations manager(FSM-STAGE:sam:dme:FirmwareSystemDeploy:ResolveDistributable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-distributable-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployResolveDistributable
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:ResolveDistributableNames

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Resolving distributable name from infra pack(FSM-STAGE:sam:dme:FirmwareSystemDeploy:ResolveDistributableNames)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-distributable-names-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployResolveDistributableNames
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:ResolveImages

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Resolve images from operations manager(FSM-STAGE:sam:dme:FirmwareSystemDeploy:ResolveImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-images-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployResolveImages
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:UpdateIOM

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Updating back-up image of IOMs(FSM-STAGE:sam:dme:FirmwareSystemDeploy:UpdateIOM)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: updateiom-failed
mibFaultCode: F17408
```

```
mibFaultName: fsmStFailFirmwareSystemDeployUpdateIOM
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:WaitForDeploy

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Deploy to begin(FSM-STAGE:sam:dme:FirmwareSystemDeploy:WaitForDeploy)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-deploy-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployWaitForDeploy
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:WaitForUserAck

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for User Acknowledgment To Start Primary Fabric Interconnect Activation(FSM-STAGE:sam:dme:FirmwareSystemDeploy:WaitForUserAck)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-user-ack-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployWaitForUserAck
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemDeploy:downloadImages

Fault Code: F17408

Message: [FSM:STAGE:FAILED|RETRY]: downloading image from central to local repository(FSM-STAGE:sam:dme:FirmwareSystemDeploy:downloadImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: download-images-failed
mibFaultCode: F17408
mibFaultName: fsmStFailFirmwareSystemDeployDownloadImages
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemApplyCatalogPack:ActivateCatalog

Fault Code: F17409

Message: [FSM:STAGE:FAILED|RETRY]: Activating Catalog(FSM-STAGE:sam:dme:FirmwareSystemApplyCatalogPack:ActivateCatalog)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-catalog-failed
mibFaultCode: F17409
mibFaultName: fsmStFailFirmwareSystemApplyCatalogPackActivateCatalog
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemApplyCatalogPack:ResolveDistributable

Fault Code: F17409

Message: [FSM:STAGE:FAILED|RETRY]: Resolve distributable from operations manager(FSM-STAGE:sam:dme:FirmwareSystemApplyCatalogPack:ResolveDistributable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-distributable-failed
mibFaultCode: F17409
mibFaultName: fsmStFailFirmwareSystemApplyCatalogPackResolveDistributable
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemApplyCatalogPack:ResolveDistributableNames

Fault Code: F17409

Message: [FSM:STAGE:FAILED|RETRY]: Resolving distributable name(FSM-STAGE:sam:dme:FirmwareSystemApplyCatalogPack:ResolveDistributableNames)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-distributable-names-failed
mibFaultCode: F17409
mibFaultName: fsmStFailFirmwareSystemApplyCatalogPackResolveDistributableNames
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailFirmwareSystemApplyCatalogPack:ResolveImages

Fault Code: F17409

Message: [FSM:STAGE:FAILED|RETRY]: Resolve images from operations manager(FSM-STAGE:sam:dme:FirmwareSystemApplyCatalogPack:ResolveImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-images-failed
mibFaultCode: F17409
mibFaultName: fsmStFailFirmwareSystemApplyCatalogPackResolveImages
moClass: firmware:System
Type: fsm
```

```
autoCleared: true
Affected MO: sys/fw-system
```

fsmStFailComputeServerDiscPolicyResolveScrubPolicy:Resolve

Fault Code: F17426

Message: [FSM:STAGE:FAILED|RETRY]: Resolving scrub policy from UCS Central(FSM-STAGE:sam:dme:ComputeServerDiscPolicyResolveScrubPolicy:Resolve)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-failed
mibFaultCode: F17426
mibFaultName: fsmStFailComputeServerDiscPolicyResolveScrubPolicyResolve
moClass: compute:ServerDiscPolicy
Type: fsm
autoCleared: true
Affected MO: org-[name]/server-discovery
```

fsmStFailSwFcSanBorderActivateZoneSet:UpdateZones

Fault Code: F17439

Message: [FSM:STAGE:FAILED|RETRY]: fc zone configuration on [switchId](FSM-STAGE:sam:dme:SwFcSanBorderActivateZoneSet:UpdateZones)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-zones-failed
mibFaultCode: F17439
mibFaultName: fsmStFailSwFcSanBorderActivateZoneSetUpdateZones
moClass: sw:FcSanBorder
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/border-fc
```

fsmStFailSwFcSanBorderActivateZoneSet:VerifyUserZoneConfig

Fault Code: F17439

Message: [FSM:STAGE:FAILED|RETRY]: Verifying Storage(FC User Configured Zones) Connectivity(FSM-STAGE:sam:dme:SwFcSanBorderActivateZoneSet:VerifyUserZoneConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: verify-user-zone-config-failed
mibFaultCode: F17439
mibFaultName: fsmStFailSwFcSanBorderActivateZoneSetVerifyUserZoneConfig
moClass: sw:FcSanBorder
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/border-fc
```

fsmStFailExtpolEpRepairCert:cleanOldData

Fault Code: F17446

Message: [FSM:STAGE:FAILED|RETRY]: Cleaning certificates, channels and policy meta data(FSM-STAGE:sam:dme:ExtpolEpRepairCert:cleanOldData)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: clean-old-data-failed
mibFaultCode: F17446
mibFaultName: fsmStFailExtpolEpRepairCertCleanOldData
moClass: extpol:Ep
Type: fsm
autoCleared: true
Affected MO: extpol
```

fsmStFailExtpolEpRepairCert:request

Fault Code: F17446

Message: [FSM:STAGE:FAILED|RETRY]: Provisioning latest certificates(FSM-STAGE:sam:dme:ExtpolEpRepairCert:request)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: request-failed
mibFaultCode: F17446
mibFaultName: fsmStFailExtpolEpRepairCertRequest
moClass: extpol:Ep
Type: fsm
autoCleared: true
Affected MO: extpol
```

fsmStFailExtpolEpRepairCert:unregister

Fault Code: F17446

Message: [FSM:STAGE:FAILED|RETRY]: unregister from old UCS Central, if needed(FSM-STAGE:sam:dme:ExtpolEpRepairCert:unregister)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unregister-failed
mibFaultCode: F17446
mibFaultName: fsmStFailExtpolEpRepairCertUnregister
moClass: extpol:Ep
Type: fsm
autoCleared: true
Affected MO: extpol
```

fsmStFailExtpolEpRepairCert:verify

Fault Code: F17446

Message: [FSM:STAGE:FAILED|RETRY]: checking that cert was provisioned(FSM-STAGE:sam:dme:ExtpolEpRepairCert:verify)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: verify-failed
mibFaultCode: F17446
mibFaultName: fsmStFailExtpolEpRepairCertVerify
moClass: extpol:Ep
Type: fsm
autoCleared: true
Affected MO: extpol
```

fsmStFailExtpolEpRepairCert:verifyGuid

Fault Code: F17446

Message: [FSM:STAGE:FAILED|RETRY]: verifying GUID of UCS Central(FSM-STAGE:sam:dme:ExtpolEpRepairCert:verifyGuid)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: verify-guid-failed
mibFaultCode: F17446
mibFaultName: fsmStFailExtpolEpRepairCertVerifyGuid
moClass: extpol:Ep
Type: fsm
autoCleared: true
Affected MO: extpol
```

fsmStFailPolicyControlEpOperate:Resolve

Fault Code: F17447

Message: [FSM:STAGE:FAILED|RETRY]: (FSM-STAGE:sam:dme:PolicyControlEpOperate:Resolve)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-failed
mibFaultCode: F17447
mibFaultName: fsmStFailPolicyControlEpOperateResolve
moClass: policy:ControlEp
Type: fsm
autoCleared: true
Affected MO: sys/control-ep-[type]
```

fsmStFailPolicyPolicyScopeReleasePolicyFsm:Release

Fault Code: F17448

Message: [FSM:STAGE:FAILED|RETRY]: (FSM-STAGE:sam:dme:PolicyPolicyScopeReleasePolicyFsm:Release)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: release-failed
mibFaultCode: F17448
mibFaultName: fsmStFailPolicyPolicyScopeReleasePolicyFsmRelease
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

fsmStFailPolicyPolicyScopeReleaseOperationFsm:Release

Fault Code: F17449

Message: [FSM:STAGE:FAILED|RETRY]:
(FSM-STAGE:sam:dme:PolicyPolicyScopeReleaseOperationFsm:Release)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: release-failed
mibFaultCode: F17449
mibFaultName: fsmStFailPolicyPolicyScopeReleaseOperationFsmRelease
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

fsmStFailPolicyPolicyScopeReleaseStorageFsm:Release

Fault Code: F17450

Message: [FSM:STAGE:FAILED|RETRY]:
(FSM-STAGE:sam:dme:PolicyPolicyScopeReleaseStorageFsm:Release)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: release-failed
mibFaultCode: F17450
mibFaultName: fsmStFailPolicyPolicyScopeReleaseStorageFsmRelease
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

fsmStFailPolicyPolicyScopeResolveManyPolicyFsm:ResolveMany

Fault Code: F17451

Message: [FSM:STAGE:FAILED|RETRY]:
(FSM-STAGE:sam:dme:PolicyPolicyScopeResolveManyPolicyFsm:ResolveMany)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-many-failed
mibFaultCode: F17451
mibFaultName: fsmStFailPolicyPolicyScopeResolveManyPolicyFsmResolveMany
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]

fsmStFailPolicyPolicyScopeResolveManyOperationFsm:ResolveMany

Fault Code: F17452

Message: [FSM:STAGE:FAILED|RETRY]:
(FSM-STAGE:sam:dme:PolicyPolicyScopeResolveManyOperationFsm:ResolveMany)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: resolve-many-failed
mibFaultCode: F17452
mibFaultName: fsmStFailPolicyPolicyScopeResolveManyOperationFsmResolveMany
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]

fsmStFailPolicyPolicyScopeResolveManyStorageFsm:ResolveMany

Fault Code: F17453

Message: [FSM:STAGE:FAILED|RETRY]:
(FSM-STAGE:sam:dme:PolicyPolicyScopeResolveManyStorageFsm:ResolveMany)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: resolve-many-failed
mibFaultCode: F17453
mibFaultName: fsmStFailPolicyPolicyScopeResolveManyStorageFsmResolveMany
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]

fsmStFailPolicyPolicyScopeReleaseManyPolicyFsm:ReleaseMany

Fault Code: F17454

Message: [FSM:STAGE:FAILED|RETRY]:
(FSM-STAGE:sam:dme:PolicyPolicyScopeReleaseManyPolicyFsm:ReleaseMany)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: release-many-failed
mibFaultCode: F17454
mibFaultName: fsmStFailPolicyPolicyScopeReleaseManyPolicyFsmReleaseMany
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]

fsmStFailPolicyPolicyScopeReleaseManyOperationFsm:ReleaseMany

Fault Code: F17455

Message: [FSM:STAGE:FAILED|RETRY]:
(FSM-STAGE:sam:dme:PolicyPolicyScopeReleaseManyOperationFsm:ReleaseMany)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: release-many-failed
mibFaultCode: F17455
mibFaultName: fsmStFailPolicyPolicyScopeReleaseManyOperationFsmReleaseMany
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

fsmStFailPolicyPolicyScopeReleaseManyStorageFsm:ReleaseMany

Fault Code: F17456

Message: [FSM:STAGE:FAILED|RETRY]:
(FSM-STAGE:sam:dme:PolicyPolicyScopeReleaseManyStorageFsm:ReleaseMany)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: release-many-failed
mibFaultCode: F17456
mibFaultName: fsmStFailPolicyPolicyScopeReleaseManyStorageFsmReleaseMany
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
```

```
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

fsmStFailPolicyPolicyScopeResolveAllPolicyFsm:ResolveAll

Fault Code: F17457

Message: [FSM:STAGE:FAILED|RETRY]:
(FSM-STAGE:sam:dme:PolicyPolicyScopeResolveAllPolicyFsm:ResolveAll)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-all-failed
mibFaultCode: F17457
mibFaultName: fsmStFailPolicyPolicyScopeResolveAllPolicyFsmResolveAll
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

fsmStFailPolicyPolicyScopeResolveAllOperationFsm:ResolveAll

Fault Code: F17458

Message: [FSM:STAGE:FAILED|RETRY]:
(FSM-STAGE:sam:dme:PolicyPolicyScopeResolveAllOperationFsm:ResolveAll)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-all-failed
mibFaultCode: F17458
mibFaultName: fsmStFailPolicyPolicyScopeResolveAllOperationFsmResolveAll
moClass: policy:PolicyScope
Type: fsm
```

autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]

fsmStFailPolicyPolicyScopeResolveAllStorageFsm:ResolveAll

Fault Code: F17459

Message: [FSM:STAGE:FAILED|RETRY]:
(FSM-STAGE:sam:dme:PolicyPolicyScopeResolveAllStorageFsm:ResolveAll)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: resolve-all-failed
mibFaultCode: F17459
mibFaultName: fsmStFailPolicyPolicyScopeResolveAllStorageFsmResolveAll
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]

fsmStFailPolicyPolicyScopeReleaseAllPolicyFsm:ReleaseAll

Fault Code: F17460

Message: [FSM:STAGE:FAILED|RETRY]:
(FSM-STAGE:sam:dme:PolicyPolicyScopeReleaseAllPolicyFsm:ReleaseAll)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: release-all-failed
mibFaultCode: F17460
mibFaultName: fsmStFailPolicyPolicyScopeReleaseAllPolicyFsmReleaseAll
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

fsmStFailPolicyPolicyScopeReleaseAllOperationFsm:ReleaseAll

Fault Code: F17461

Message: [FSM:STAGE:FAILED|RETRY]:
(FSM-STAGE:sam:dme:PolicyPolicyScopeReleaseAllOperationFsm:ReleaseAll)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: release-all-failed
mibFaultCode: F17461
mibFaultName: fsmStFailPolicyPolicyScopeReleaseAllOperationFsmReleaseAll
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

fsmStFailPolicyPolicyScopeReleaseAllStorageFsm:ReleaseAll

Fault Code: F17462

Message: [FSM:STAGE:FAILED|RETRY]: (FSM-STAGE:sam:dme:PolicyPolicyScopeReleaseAllStorageFsm:ReleaseAll)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: release-all-failed
mibFaultCode: F17462
mibFaultName: fsmStFailPolicyPolicyScopeReleaseAllStorageFsmReleaseAll
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

fsmStFailMgmtExportPolicyReportConfigCopy:Report

Fault Code: F17484

Message: [FSM:STAGE:FAILED|RETRY]: Report config copy to Ops Mgr(FSM-STAGE:sam:dme:MgmtExportPolicyReportConfigCopy:Report)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: report-failed
mibFaultCode: F17484
mibFaultName: fsmStFailMgmtExportPolicyReportConfigCopyReport
moClass: mgmt:ExportPolicy
Type: fsm
autoCleared: true
Affected MO: org-[name]/cfg-exp-policy-[name]
Affected MO: org-[name]/db-backup-policy-[name]
```

fsmStFailExtpolProviderReportConfigImport:Report

Fault Code: F17485

Message: [FSM:STAGE:FAILED|RETRY]: Report config import to Ops Mgr(FSM-STAGE:sam:dme:ExtpolProviderReportConfigImport:Report)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: report-failed
mibFaultCode: F17485
mibFaultName: fsmStFailExtpolProviderReportConfigImportReport
moClass: extpol:Provider
Type: fsm
autoCleared: true
Affected MO: extpol/reg/providers/prov-[type]
```

fsmStFailObserveObservedResolvePolicyFsm:Execute

Fault Code: F17491

Message: [FSM:STAGE:FAILED|RETRY]: Resolve Policy FSM Execute(FSM-STAGE:sam:dme:ObserveObservedResolvePolicyFsm:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F17491
mibFaultName: fsmStFailObserveObservedResolvePolicyFsmExecute
moClass: observe:Observed
Type: fsm
autoCleared: true
Affected MO: extpol/reg/clients/client-[id]/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/controllers/contro-[id]/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/providers/prov-[type]/observed-[dataSrcSysId]-[id]
Affected MO: observe/observed-[dataSrcSysId]-[id]
```

fsmStFailObserveObservedResolveResourceFsm:Execute

Fault Code: F17492

Message: [FSM:STAGE:FAILED|RETRY]: Resolve Resource FSM Execute(FSM-STAGE:sam:dme:ObserveObservedResolveResourceFsm:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F17492
mibFaultName: fsmStFailObserveObservedResolveResourceFsmExecute
moClass: observe:Observed
Type: fsm
autoCleared: true
Affected MO: extpol/reg/clients/client-[id]/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/controllers/contro-[id]/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/providers/prov-[type]/observed-[dataSrcSysId]-[id]
Affected MO: observe/observed-[dataSrcSysId]-[id]
```

fsmStFailObserveObservedResolveVMFsm:Execute

Fault Code: F17493

Message: [FSM:STAGE:FAILED|RETRY]: Resolve VM FSM Execute(FSM-STAGE:sam:dme:ObserveObservedResolveVMFsm:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F17493
mibFaultName: fsmStFailObserveObservedResolveVMFsmExecute
moClass: observe:Observed
Type: fsm
autoCleared: true
Affected MO: extpol/reg/clients/client-[id]/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/controllers/contro-[id]/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/providers/prov-[type]/observed-[dataSrcSysId]-[id]
Affected MO: observe/observed-[dataSrcSysId]-[id]
```

fsmStFailObserveObservedResolveControllerFsm:Execute

Fault Code: F17494

Message: [FSM:STAGE:FAILED|RETRY]: Resolve Mgmt Controller FSM Execute(FSM-STAGE:sam:dme:ObserveObservedResolveControllerFsm:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F17494
mibFaultName: fsmStFailObserveObservedResolveControllerFsmExecute
moClass: observe:Observed
Type: fsm
autoCleared: true
Affected MO: extpol/reg/clients/client-[id]/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/controllers/contro-[id]/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/providers/prov-[type]/observed-[dataSrcSysId]-[id]
Affected MO: observe/observed-[dataSrcSysId]-[id]
```

fsmStFailMgmtControllerRegistryConfig:Remove

Fault Code: F17499

Message: [FSM:STAGE:FAILED|RETRY]: Deleting registry information from local config file(FSM-STAGE:sam:dme:MgmtControllerRegistryConfig:Remove)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: remove-failed
mibFaultCode: F17499
mibFaultName: fsmStFailMgmtControllerRegistryConfigRemove
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
```

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerRegistryConfig:RemovePeer

Fault Code: F17499

Message: [FSM:STAGE:FAILED|RETRY]: Deleting registry information from peer config file(FSM-STAGE:sam:dme:MgmtControllerRegistryConfig:RemovePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning

Cause: remove-peer-failed
mibFaultCode: F17499
mibFaultName: fsmStFailMgmtControllerRegistryConfigRemovePeer
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailGmetaHolderInventory:BeginInventory

Fault Code: F17608

Message: [FSM:STAGE:FAILED|RETRY]: Begin inventory stages(FSM-STAGE:sam:dme:GmetaHolderInventory:BeginInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: begin-inventory-failed
mibFaultCode: F17608
mibFaultName: fsmStFailGmetaHolderInventoryBeginInventory
moClass: gmeta:Holder
Type: fsm
autoCleared: true
Affected MO: gmeta/category-[category]-provider-[provider]

fsmStFailGmetaHolderInventory:CheckInventoryStatus

Fault Code: F17608

Message: [FSM:STAGE:FAILED|RETRY]: Throttle inventory(FSM-STAGE:sam:dme:GmetaHolderInventory:CheckInventoryStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: check-inventory-status-failed
mibFaultCode: F17608
mibFaultName: fsmStFailGmetaHolderInventoryCheckInventoryStatus
moClass: gmeta:Holder
Type: fsm
autoCleared: true
Affected MO: gmeta/category-[category]-provider-[provider]

fsmStFailGmetaHolderInventory:EndInventory

Fault Code: F17608

Message: [FSM:STAGE:FAILED|RETRY]: End inventory stages(FSM-STAGE:sam:dme:GmetaHolderInventory:EndInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: end-inventory-failed
mibFaultCode: F17608
mibFaultName: fsmStFailGmetaHolderInventoryEndInventory
moClass: gmeta:Holder
Type: fsm
autoCleared: true
Affected MO: gmeta/category-[category]-provider-[provider]
```

fsmStFailGmetaHolderInventory:FullInventory

Fault Code: F17608

Message: [FSM:STAGE:FAILED|RETRY]: Full inventory stages(FSM-STAGE:sam:dme:GmetaHolderInventory:FullInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: full-inventory-failed
mibFaultCode: F17608
mibFaultName: fsmStFailGmetaHolderInventoryFullInventory
moClass: gmeta:Holder
Type: fsm
autoCleared: true
Affected MO: gmeta/category-[category]-provider-[provider]
```

fsmStFailGmetaHolderInventory:ReportFaultInventory

Fault Code: F17608

Message: [FSM:STAGE:FAILED|RETRY]: Report fault inventory to UCS-Central(FSM-STAGE:sam:dme:GmetaHolderInventory:ReportFaultInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: report-fault-inventory-failed
mibFaultCode: F17608
mibFaultName: fsmStFailGmetaHolderInventoryReportFaultInventory
moClass: gmeta:Holder
Type: fsm
autoCleared: true
Affected MO: gmeta/category-[category]-provider-[provider]
```

fsmStFailGmetaHolderInventory:ReportOrgInventory

Fault Code: F17608

Message: [FSM:STAGE:FAILED|RETRY]: Report org inventory to UCS-Central(FSM-STAGE:sam:dme:GmetaHolderInventory:ReportOrgInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: report-org-inventory-failed
mibFaultCode: F17608
mibFaultName: fsmStFailGmetaHolderInventoryReportOrgInventory
moClass: gmeta:Holder
Type: fsm
autoCleared: true
Affected MO: gmeta/category-[category]-provider-[provider]
```

fsmStFailGmetaHolderInventory:ReportPhysicalInventory

Fault Code: F17608

Message: [FSM:STAGE:FAILED|RETRY]: Report physical inventory to UCS-Central(FSM-STAGE:sam:dme:GmetaHolderInventory:ReportPhysicalInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: report-physical-inventory-failed
mibFaultCode: F17608
```

```
mibFaultName: fsmStFailGmetaHolderInventoryReportPhysicalInventory
moClass: gmeta:Holder
Type: fsm
autoCleared: true
Affected MO: gmeta/category-[category]-provider-[provider]
```

fsmStFailGmetaHolderInventory:ReportStorageInventory

Fault Code: F17608

Message: [FSM:STAGE:FAILED|RETRY]: Report storage inventory to UCS-Central(FSM-STAGE:sam:dme:GmetaHolderInventory:ReportStorageInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: report-storage-inventory-failed
mibFaultCode: F17608
mibFaultName: fsmStFailGmetaHolderInventoryReportStorageInventory
moClass: gmeta:Holder
Type: fsm
autoCleared: true
Affected MO: gmeta/category-[category]-provider-[provider]
```

fsmStFailComputePhysicalCimcSessionDelete:Execute

Fault Code: F17609

Message: [FSM:STAGE:FAILED|RETRY]: Terminating Cimc Sessions(FSM-STAGE:sam:dme:ComputePhysicalCimcSessionDelete:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F17609
mibFaultName: fsmStFailComputePhysicalCimcSessionDeleteExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailPolicyControlledTypeOperate:ResolveAll

Fault Code: F17612

Message: [FSM:STAGE:FAILED|RETRY]: Resolving controlled type global policies(FSM-STAGE:sam:dme:PolicyControlledTypeOperate:ResolveAll)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-all-failed
mibFaultCode: F17612
mibFaultName: fsmStFailPolicyControlledTypeOperateResolveAll
moClass: policy:ControlledType
Type: fsm
autoCleared: true
Affected MO: sys/control-ep-[type]/cfg-backup-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/comm-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/datetime-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/discovery-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/dns-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/equipment-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/fabric-fw-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/fault-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/mep-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/monitoring-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/portconfig-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/powermgmt-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/psu-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/security-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/storage-autoconfig-ctrl/ctrlled-type-[type]
```

fsmStFailFabricVnetEpSyncEpPushVnetEpDeletion:Sync

Fault Code: F17619

Message: [FSM:STAGE:FAILED|RETRY]: Update resource-mgr with VnetEp deletion(FSM-STAGE:sam:dme:FabricVnetEpSyncEpPushVnetEpDeletion:Sync)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sync-failed
mibFaultCode: F17619
mibFaultName: fsmStFailFabricVnetEpSyncEpPushVnetEpDeletionSync
```

```
moClass: fabric:VnetEpSyncEp
Type: fsm
autoCleared: true
Affected MO: extpol/reg/providers/prov-[type]/syncEp
```

fsmStFailSwEthLanFlowMonDeploy:UpdateEthFlowMon

Fault Code: F17639

Message: [FSM:STAGE:FAILED|RETRY]: Ethernet traffic flow monitoring configuration on [switchId](FSM-STAGE:sam:dme:SwEthLanFlowMonDeploy:UpdateEthFlowMon)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-eth-flow-mon-failed
mibFaultCode: F17639
mibFaultName: fsmStFailSwEthLanFlowMonDeployUpdateEthFlowMon
moClass: sw:EthLanFlowMon
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/ethlanflowmon
```

fsmStFailMgmtIPv6IfAddrSwMgmtOobIpv6IfConfig:Switch

Fault Code: F17665

Message: [FSM:STAGE:FAILED|RETRY]: configuring the out-of-band IPv6 interface(FSM-STAGE:sam:dme:MgmtIPv6IfAddrSwMgmtOobIpv6IfConfig:Switch)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: switch-failed
mibFaultCode: F17665
mibFaultName: fsmStFailMgmtIPv6IfAddrSwMgmtOobIpv6IfConfigSwitch
moClass: mgmt:IPv6IfAddr
Type: fsm
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
```

Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/fex-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]/ifConfig-ipv6/if-ipv6

Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/switch-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/switch-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6

fsmStFailComputePhysicalUpdateBoardController:CheckPowerAvailability

Fault Code: F17667

Message: [FSM:STAGE:FAILED|RETRY]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalUpdateBoardController:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F17667
mibFaultName: fsmStFailComputePhysicalUpdateBoardControllerCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]

fsmStFailComputePhysicalUpdateBoardController:PollBoardCtrlPowerCycle

Fault Code: F17667

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Board Controller power cycle to complete(FSM-STAGE:sam:dme:ComputePhysicalUpdateBoardController:PollBoardCtrlPowerCycle)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-board-ctrl-power-cycle-failed
mibFaultCode: F17667
mibFaultName: fsmStFailComputePhysicalUpdateBoardControllerPollBoardCtrlPowerCycle
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalUpdateBoardController:PollUpdateStatus

Fault Code: F17667

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Board Controller update to complete(FSM-STAGE:sam:dme:ComputePhysicalUpdateBoardController:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F17667
mibFaultName: fsmStFailComputePhysicalUpdateBoardControllerPollUpdateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalUpdateBoardController:PowerCycleBoard

Fault Code: F17667

Message: [FSM:STAGE:FAILED|RETRY]: Power cycle the board controller(FSM-STAGE:sam:dme:ComputePhysicalUpdateBoardController:PowerCycleBoard)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-cycle-board-failed
mibFaultCode: F17667
mibFaultName: fsmStFailComputePhysicalUpdateBoardControllerPowerCycleBoard
moClass: compute:Physical
```

```
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalUpdateBoardController:PowerDeployWait

Fault Code: F17667

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalUpdateBoardController:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F17667
mibFaultName: fsmStFailComputePhysicalUpdateBoardControllerPowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalUpdateBoardController:PrepareForUpdate

Fault Code: F17667

Message: [FSM:STAGE:FAILED|RETRY]: Prepare for BoardController update(FSM-STAGE:sam:dme:ComputePhysicalUpdateBoardController:PrepareForUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: prepare-for-update-failed
mibFaultCode: F17667
mibFaultName: fsmStFailComputePhysicalUpdateBoardControllerPrepareForUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalUpdateBoardController:ServerPowerOff

Fault Code: F17667

Message: [FSM:STAGE:FAILED|RETRY]: Power off server [serverId](FSM-STAGE:sam:dme:ComputePhysicalUpdateBoardController:ServerPowerOff)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: server-power-off-failed
mibFaultCode: F17667
mibFaultName: fsmStFailComputePhysicalUpdateBoardControllerServerPowerOff
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalUpdateBoardController:ServerPowerOn

Fault Code: F17667

Message: [FSM:STAGE:FAILED|RETRY]: Power on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalUpdateBoardController:ServerPowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: server-power-on-failed
mibFaultCode: F17667
mibFaultName: fsmStFailComputePhysicalUpdateBoardControllerServerPowerOn
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalUpdateBoardController:UpdateRequest

Fault Code: F17667

Message: [FSM:STAGE:FAILED|RETRY]: Sending Board Controller update request to CIMC(FSM-STAGE:sam:dme:ComputePhysicalUpdateBoardController:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-request-failed
mibFaultCode: F17667
mibFaultName: fsmStFailComputePhysicalUpdateBoardControllerUpdateRequest
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailExtvmmNetworkSetsDeploy:Local

Fault Code: F17703

Message: [FSM:STAGE:FAILED|RETRY]: VMNetworkDefinition configuration on local fabric(FSM-STAGE:sam:dme:ExtvmmNetworkSetsDeploy:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F17703
mibFaultName: fsmStFailExtvmmNetworkSetsDeployLocal
moClass: extvmm:NetworkSets
Type: fsm
autoCleared: true
Affected MO: fabric/lan/network-sets
```

fsmStFailExtvmmNetworkSetsDeploy:Peer

Fault Code: F17703

Message: [FSM:STAGE:FAILED|RETRY]: VMNetworkDefinition configuration on peer fabric(FSM-STAGE:sam:dme:ExtvmmNetworkSetsDeploy:Peer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: peer-failed
mibFaultCode: F17703
mibFaultName: fsmStFailExtvmmNetworkSetsDeployPeer
moClass: extvmm:NetworkSets
Type: fsm
autoCleared: true
Affected MO: fabric/lan/network-sets
```

fsmStFailComputePhysicalConfigBoard:ConfigMemoryPolicy

Fault Code: F17707

Message: [FSM:STAGE:FAILED|RETRY]: Configure Memory Configuration Policy on server [dn](FSM-STAGE:sam:dme:ComputePhysicalConfigBoard:ConfigMemoryPolicy)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-memory-policy-failed
mibFaultCode: F17707
mibFaultName: fsmStFailComputePhysicalConfigBoardConfigMemoryPolicy
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalResetMemoryErrors:Execute

Fault Code: F17708

Message: [FSM:STAGE:FAILED|RETRY]: Resetting memory errors on server [dn](FSM-STAGE:sam:dme:ComputePhysicalResetMemoryErrors:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F17708
mibFaultName: fsmStFailComputePhysicalResetMemoryErrorsExecute
moClass: compute:Physical
```

Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]

fsmStFailMgmtControllerExtMgmtInterfaceConfig:Active

Fault Code: F17714

Message: [FSM:STAGE:FAILED|RETRY]: external in-band mgmt interface configuration on Active CIMC(FSM-STAGE:sam:dme:MgmtControllerExtMgmtInterfaceConfig:Active)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: active-failed
mibFaultCode: F17714
mibFaultName: fsmStFailMgmtControllerExtMgmtInterfaceConfigActive
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerExtMgmtInterfaceConfig:CIMCVlanCfgLocal

Fault Code: F17714

Message: [FSM:STAGE:FAILED|RETRY]: in-band vlan configuration on Local CIMC(FSM-STAGE:sam:dme:MgmtControllerExtMgmtInterfaceConfig:CIMCVlanCfgLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: cimcvlan-cfg-local-failed
mibFaultCode: F17714
mibFaultName: fsmStFailMgmtControllerExtMgmtInterfaceConfigCIMCVlanCfgLocal
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:

sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerExtMgmtInterfaceConfig:CIMCVlanCfgPeer

Fault Code: F17714

Message: [FSM:STAGE:FAILED|RETRY]: in-band vlan configuration on Peer CIMC(FSM-STAGE:sam:dme:MgmtControllerExtMgmtInterfaceConfig:CIMCVlanCfgPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cimcvlan-cfg-peer-failed
mibFaultCode: F17714
mibFaultName: fsmStFailMgmtControllerExtMgmtInterfaceConfigCIMCVlanCfgPeer
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerExtMgmtInterfaceConfig:CMCVlanCfg

Fault Code: F17714

Message: [FSM:STAGE:FAILED|RETRY]: in-band vlan configuration on CMC(FSM-STAGE:sam:dme:MgmtControllerExtMgmtInterfaceConfig:CMCVlanCfg)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: cmcvlan-cfg-failed
mibFaultCode: F17714
mibFaultName: fsmStFailMgmtControllerExtMgmtInterfaceConfigCMCVlanCfg
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerExtMgmtInterfaceConfig:CMCVlanCfgPeer

Fault Code: F17714

Message: [FSM:STAGE:FAILED|RETRY]: in-band vlan configuration on CMC(FSM-STAGE:sam:dme:MgmtControllerExtMgmtInterfaceConfig:CMCVlanCfgPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: cmcvlan-cfg-peer-failed
mibFaultCode: F17714
mibFaultName: fsmStFailMgmtControllerExtMgmtInterfaceConfigCMCVlanCfgPeer
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt

Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerExtMgmtInterfaceConfig:StandbyCMCVlanCfg

Fault Code: F17714

Message: [FSM:STAGE:FAILED|RETRY]: in-band vlan configuration on CMC(FSM-STAGE:sam:dme:MgmtControllerExtMgmtInterfaceConfig:StandbyCMCVlanCfg)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: standbycmcvlan-cfg-failed
mibFaultCode: F17714
mibFaultName: fsmStFailMgmtControllerExtMgmtInterfaceConfigStandbyCMCVlanCfg
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailComputeRackUnitCreateDhcpEntry:ExecuteLocal

Fault Code: F17715

Message: [FSM:STAGE:FAILED|RETRY]: Creating host entry in dhcp database(FSM-STAGE:sam:dme:ComputeRackUnitCreateDhcpEntry:ExecuteLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: execute-local-failed
mibFaultCode: F17715
mibFaultName: fsmStFailComputeRackUnitCreateDhcpEntryExecuteLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]

fsmStFailComputeRackUnitCreateDhcpEntry:ExecutePeer

Fault Code: F17715

Message: [FSM:STAGE:FAILED|RETRY]: Creating host entry in dhcp database(FSM-STAGE:sam:dme:ComputeRackUnitCreateDhcpEntry:ExecutePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-peer-failed
mibFaultCode: F17715
mibFaultName: fsmStFailComputeRackUnitCreateDhcpEntryExecutePeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalServiceInfraDeploy:NicConfigLocal

Fault Code: F17716

Message: [FSM:STAGE:FAILED|RETRY]: Configure adapter in server for service infrastructure ([assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalServiceInfraDeploy:NicConfigLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-local-failed
mibFaultCode: F17716
mibFaultName: fsmStFailComputePhysicalServiceInfraDeployNicConfigLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalServiceInfraDeploy:NicConfigPeer

Fault Code: F17716

Message: [FSM:STAGE:FAILED|RETRY]: Configure adapter in server for service infrastructure ([assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalServiceInfraDeploy:NicConfigPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-peer-failed
mibFaultCode: F17716
mibFaultName: fsmStFailComputePhysicalServiceInfraDeployNicConfigPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalServiceInfraDeploy:SwConfigLocal

Fault Code: F17716

Message: [FSM:STAGE:FAILED|RETRY]: Configure service infrastructure on primary fabric Interconnect(FSM-STAGE:sam:dme:ComputePhysicalServiceInfraDeploy:SwConfigLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-local-failed
mibFaultCode: F17716
mibFaultName: fsmStFailComputePhysicalServiceInfraDeploySwConfigLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalServiceInfraDeploy:SwConfigPeer

Fault Code: F17716

Message: [FSM:STAGE:FAILED|RETRY]: Configure service infrastructure on secondary fabric Interconnect(FSM-STAGE:sam:dme:ComputePhysicalServiceInfraDeploy:SwConfigPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-peer-failed
mibFaultCode: F17716
mibFaultName: fsmStFailComputePhysicalServiceInfraDeploySwConfigPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalServiceInfraWithdraw:NicUnConfigLocal

Fault Code: F17717

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure adapter in server for service infrastructure ([assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalServiceInfraWithdraw:NicUnConfigLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-un-config-local-failed
mibFaultCode: F17717
mibFaultName: fsmStFailComputePhysicalServiceInfraWithdrawNicUnConfigLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalServiceInfraWithdraw:NicUnConfigPeer

Fault Code: F17717

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure adapter in server for service infrastructure ([assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalServiceInfraWithdraw:NicUnConfigPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-un-config-peer-failed
mibFaultCode: F17717
```

```
mibFaultName: fsmStFailComputePhysicalServiceInfraWithdrawNicUnConfigPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalServiceInfraWithdraw:SwUnConfigLocal

Fault Code: F17717

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure service infrastructure on primary fabric Interconnect(FSM-STAGE:sam:dme:ComputePhysicalServiceInfraWithdraw:SwUnConfigLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-un-config-local-failed
mibFaultCode: F17717
mibFaultName: fsmStFailComputePhysicalServiceInfraWithdrawSwUnConfigLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalServiceInfraWithdraw:SwUnConfigPeer

Fault Code: F17717

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure service infrastructure on secondary fabric Interconnect(FSM-STAGE:sam:dme:ComputePhysicalServiceInfraWithdraw:SwUnConfigPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-un-config-peer-failed
mibFaultCode: F17717
mibFaultName: fsmStFailComputePhysicalServiceInfraWithdrawSwUnConfigPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

```
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailSysdebugLogExportPolicyConfigure:Local

Fault Code: F17755

Message: [FSM:STAGE:FAILED|RETRY]: configuring log file export service on local(FSM-STAGE:sam:dme:SysdebugLogExportPolicyConfigure:Local)

Explanation: Cisco UCS Manager could not set the configurations in the primary Fabric Interconnect for log file transfer to remote server.

Recommended Action: If you see this fault, take the following actions:

1. Execute the show tech-support command and contact Cisco Technical Support.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F17755
mibFaultName: fsmStFailSysdebugLogExportPolicyConfigureLocal
moClass: sysdebug:LogExportPolicy
Type: fsm
autoCleared: true
Affected MO: sys/sysdebug/log-export-policy
```

fsmStFailSysdebugLogExportPolicyConfigure:Peer

Fault Code: F17755

Message: [FSM:STAGE:FAILED|RETRY]: configuring log file export service on peer(FSM-STAGE:sam:dme:SysdebugLogExportPolicyConfigure:Peer)

Explanation: Cisco UCS Manager could not set the configurations in the subordinate Fabric Interconnect (FI) for log file transfer to remote server. This fault typically appears for one of the following reasons:

- The subordinate FI is not reachable.
- The subordinate FI is experiencing an internal system error on applying the configuration.

Recommended Action: If you see this fault, take the following actions:

1. Check the FI cluster state to ensure that the subordinate FI is reachable and functioning correctly. If the subordinate FI is down, take appropriate corrective actions so that the UCS cluster goes into HA ready state.
2. If the HA state of the primary and subordinate FIs are good, execute the show tech-support command and contact Cisco Technical Support.

Fault Details

```
Severity: warning
Cause: peer-failed
mibFaultCode: F17755
mibFaultName: fsmStFailSysdebugLogExportPolicyConfigurePeer
moClass: sysdebug:LogExportPolicy
Type: fsm
```

```
autoCleared: true
Affected MO: sys/sysdebug/log-export-policy
```

fsmStFailComputePhysicalFlashController:UpdateFlashLife

Fault Code: F17757

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Flash Life update to complete(FSM-STAGE:sam:dme:ComputePhysicalFlashController:UpdateFlashLife)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-flash-life-failed
mibFaultCode: F17757
mibFaultName: fsmStFailComputePhysicalFlashControllerUpdateFlashLife
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailStorageFlexFlashControllerMOpsReset:Reset

Fault Code: F17818

Message: [FSM:STAGE:FAILED|RETRY]: Resetting FlexFlashController [dn](FSM-STAGE:sam:dme:StorageFlexFlashControllerMOpsReset:Reset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: reset-failed
mibFaultCode: F17818
mibFaultName: fsmStFailStorageFlexFlashControllerMOpsResetReset
moClass: storage:FlexFlashController
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-flexflash-[id]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]
```

fsmStFailStorageFlexFlashControllerMOpsFormat:Format

Fault Code: F17819

Message: [FSM:STAGE:FAILED|RETRY]: Formatting FlexFlash Cards in Controller [dn](FSM-STAGE:sam:dme:StorageFlexFlashControllerMOpsFormat:Format)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: format-failed
mibFaultCode: F17819
mibFaultName: fsmStFailStorageFlexFlashControllerMOpsFormatFormat
moClass: storage:FlexFlashController
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-flexflash-[id]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]
```

fsmStFailStorageFlexFlashControllerMOpsPair:Pair

Fault Code: F17820

Message: [FSM:STAGE:FAILED|RETRY]: Configure FlexFlash Card mirroring in Controller [dn](FSM-STAGE:sam:dme:StorageFlexFlashControllerMOpsPair:Pair)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pair-failed
mibFaultCode: F17820
mibFaultName: fsmStFailStorageFlexFlashControllerMOpsPairPair
moClass: storage:FlexFlashController
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-flexflash-[id]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]
```

fsmStFailComputePhysicalEnableCimcSecureBoot:Activate

Fault Code: F17826

Message: [FSM:STAGE:FAILED|RETRY]: Activating CIMC image(FSM-STAGE:sam:dme:ComputePhysicalEnableCimcSecureBoot:Activate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-failed
mibFaultCode: F17826
mibFaultName: fsmStFailComputePhysicalEnableCimcSecureBootActivate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalEnableCimcSecureBoot:PollUpdateStatus

Fault Code: F17826

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for update to complete(FSM-STAGE:sam:dme:ComputePhysicalEnableCimcSecureBoot:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F17826
mibFaultName: fsmStFailComputePhysicalEnableCimcSecureBootPollUpdateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalEnableCimcSecureBoot:Reset

Fault Code: F17826

Message: [FSM:STAGE:FAILED|RETRY]: Resetting CIMC to boot the activated version(FSM-STAGE:sam:dme:ComputePhysicalEnableCimcSecureBoot:Reset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: reset-failed
mibFaultCode: F17826
mibFaultName: fsmStFailComputePhysicalEnableCimcSecureBootReset
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalEnableCimcSecureBoot:UpdateRequest

Fault Code: F17826

Message: [FSM:STAGE:FAILED|RETRY]: Sending update request to CIMC(FSM-STAGE:sam:dme:ComputePhysicalEnableCimcSecureBoot:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-request-failed
mibFaultCode: F17826
mibFaultName: fsmStFailComputePhysicalEnableCimcSecureBootUpdateRequest
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailIdentMetaSystemUcscUnivSync:Execute

Fault Code: F17850

Message: [FSM:STAGE:FAILED|RETRY]: Synchronise ID universe to external identifier manager(FSM-STAGE:sam:dme:IdentMetaSystemUcscUnivSync:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: F17850
mibFaultName: fsmStFailIdentMetaSystemUcscUnivSyncExecute
moClass: ident:MetaSystem
Type: fsm
autoCleared: true
Affected MO: metaverse/metasys

fsmStFailMgmtControllerLockConfig:PowerButtonLockConfig

Fault Code: F17933

Message: [FSM:STAGE:FAILED|RETRY]: Configuring Power Button Lock State(FSM-STAGE:sam:dme:MgmtControllerLockConfig:PowerButtonLockConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: power-button-lock-config-failed
mibFaultCode: F17933
mibFaultName: fsmStFailMgmtControllerLockConfigPowerButtonLockConfig
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerPowerBudgetReclaimConfig:PowerOffReclaim

Fault Code: F17934

Message: [FSM:STAGE:FAILED|RETRY]: Checking power-off and reclaiming power budget(FSM-STAGE:sam:dme:MgmtControllerPowerBudgetReclaimConfig:PowerOffReclaim)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: power-off-reclaim-failed
mibFaultCode: F17934
mibFaultName: fsmStFailMgmtControllerPowerBudgetReclaimConfigPowerOffReclaim
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerPowerBudgetReclaimConfig:PowerOffWait

Fault Code: F17934

Message: [FSM:STAGE:FAILED|RETRY]: Waiting to confirm power-off(FSM-STAGE:sam:dme:MgmtControllerPowerBudgetReclaimConfig:PowerOffWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-off-wait-failed
mibFaultCode: F17934
mibFaultName: fsmStFailMgmtControllerPowerBudgetReclaimConfigPowerOffWait
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailComputePhysicalOobStorageAdminConfig:BootHost

Fault Code: F17935

Message: [FSM:STAGE:FAILED|RETRY]: Bring-up pre-boot environment for local storage admin config(FSM-STAGE:sam:dme:ComputePhysicalOobStorageAdminConfig:BootHost)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: boot-host-failed
mibFaultCode: F17935
mibFaultName: fsmStFailComputePhysicalOobStorageAdminConfigBootHost
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]

fsmStFailComputePhysicalOobStorageAdminConfig:BootWait

Fault Code: F17935

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for system reset(FSM-STAGE:sam:dme:ComputePhysicalOobStorageAdminConfig:BootWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-wait-failed
mibFaultCode: F17935
mibFaultName: fsmStFailComputePhysicalOobStorageAdminConfigBootWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalOobStorageAdminConfig:CheckPowerAvailability

Fault Code: F17935

Message: [FSM:STAGE:FAILED|RETRY]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalOobStorageAdminConfig:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F17935
mibFaultName: fsmStFailComputePhysicalOobStorageAdminConfigCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalOobStorageAdminConfig:OobStorageConfig

Fault Code: F17935

Message: [FSM:STAGE:FAILED|RETRY]: Local storage admin configuration(FSM-STAGE:sam:dme:ComputePhysicalOobStorageAdminConfig:OobStorageConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-storage-config-failed
mibFaultCode: F17935
mibFaultName: fsmStFailComputePhysicalOobStorageAdminConfigOobStorageConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalOobStorageAdminConfig:OobStorageInventory

Fault Code: F17935

Message: [FSM:STAGE:FAILED|RETRY]: Perform oob storage inventory with server profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalOobStorageAdminConfig:OobStorageInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-storage-inventory-failed
mibFaultCode: F17935
mibFaultName: fsmStFailComputePhysicalOobStorageAdminConfigOobStorageInventory
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalOobStorageAdminConfig:PowerDeployWait

Fault Code: F17935

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalOobStorageAdminConfig:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F17935
```

```
mibFaultName: fsmStFailComputePhysicalOobStorageAdminConfigPowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalOobStorageAdminConfig:PreSanitize

Fault Code: F17935

Message: [FSM:STAGE:FAILED|RETRY]: Preparing to check hardware configuration(FSM-STAGE:sam:dme:ComputePhysicalOobStorageAdminConfig:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F17935
mibFaultName: fsmStFailComputePhysicalOobStorageAdminConfigPreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalOobStorageAdminConfig:Sanitize

Fault Code: F17935

Message: [FSM:STAGE:FAILED|RETRY]: Checking hardware configuration(FSM-STAGE:sam:dme:ComputePhysicalOobStorageAdminConfig:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F17935
mibFaultName: fsmStFailComputePhysicalOobStorageAdminConfigSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

```
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalOobStorageAdminConfig:Shutdown

Fault Code: F17935

Message: [FSM:STAGE:FAILED|RETRY]: Shutting down server [dn] after local storage admin configuration(FSM-STAGE:sam:dme:ComputePhysicalOobStorageAdminConfig:Shutdown)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: shutdown-failed
mibFaultCode: F17935
mibFaultName: fsmStFailComputePhysicalOobStorageAdminConfigShutdown
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalOobStorageAdminConfig:TearDownVMediaLocal

Fault Code: F17935

Message: [FSM:STAGE:FAILED|RETRY]: Tear down VMedia Local(FSM-STAGE:sam:dme:ComputePhysicalOobStorageAdminConfig:TearDownVMediaLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: tear-downvmedia-local-failed
mibFaultCode: F17935
mibFaultName: fsmStFailComputePhysicalOobStorageAdminConfigTearDownVMediaLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalOobStorageAdminConfig:TearDownVMediaPeer

Fault Code: F17935

Message: [FSM:STAGE:FAILED|RETRY]: Tear down VMedia Peer(FSM-STAGE:sam:dme:ComputePhysicalOobStorageAdminConfig:TearDownVMediaPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: tear-downvmedia-peer-failed
mibFaultCode: F17935
mibFaultName: fsmStFailComputePhysicalOobStorageAdminConfigTearDownVMediaPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailEquipmentIOCardBaseFePresence:CheckLicense

Fault Code: F17940

Message: [FSM:STAGE:FAILED|RETRY]: Checking license for chassis [chassisId] (iom [id])(FSM-STAGE:sam:dme:EquipmentIOCardBaseFePresence:CheckLicense)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-license-failed
mibFaultCode: F17940
mibFaultName: fsmStFailEquipmentIOCardBaseFePresenceCheckLicense
moClass: equipment:IOCardBase
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmStFailEquipmentIOCardBaseFePresence:ConfigChassisId

Fault Code: F17940

Message: [FSM:STAGE:FAILED|RETRY]: identifying SwitchIOCard [chassisId]/[id](FSM-STAGE:sam:dme:EquipmentIOCardBaseFePresence:ConfigChassisId)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-chassis-id-failed
mibFaultCode: F17940
mibFaultName: fsmStFailEquipmentIOCardBaseFePresenceConfigChassisId
moClass: equipment:IOCardBase
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmStFailEquipmentIOCardBaseFePresence:Identify

Fault Code: F17940

Message: [FSM:STAGE:FAILED|RETRY]: identifying IOM [chassisId]/[id](FSM-STAGE:sam:dme:EquipmentIOCardBaseFePresence:Identify)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: identify-failed
mibFaultCode: F17940
mibFaultName: fsmStFailEquipmentIOCardBaseFePresenceIdentify
moClass: equipment:IOCardBase
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmStFailEquipmentIOCardBaseFeConn:ConfigureEndPoint

Fault Code: F17941

Message: [FSM:STAGE:FAILED|RETRY]: configuring management identity to IOM [chassisId]/[id]([side])(FSM-STAGE:sam:dme:EquipmentIOCardBaseFeConn:ConfigureEndPoint)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: configure-end-point-failed
mibFaultCode: F17941
mibFaultName: fsmStFailEquipmentIOCardBaseFeConnConfigureEndPoint
moClass: equipment:IOCardBase
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmStFailEquipmentIOCardBaseFeConn:ConfigureSwMgmtEndPoint

Fault Code: F17941

Message: [FSM:STAGE:FAILED|RETRY]: configuring fabric interconnect [switchId] mgmt connectivity to IOM [chassisId]/[id]([side])(FSM-STAGE:sam:dme:EquipmentIOCardBaseFeConn:ConfigureSwMgmtEndPoint)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: configure-sw-mgmt-end-point-failed
mibFaultCode: F17941
mibFaultName: fsmStFailEquipmentIOCardBaseFeConnConfigureSwMgmtEndPoint
moClass: equipment:IOCardBase
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmStFailEquipmentIOCardBaseFeConn:ConfigureVifNs

Fault Code: F17941

Message: [FSM:STAGE:FAILED|RETRY]: configuring IOM [chassisId]/[id]([side]) virtual name space(FSM-STAGE:sam:dme:EquipmentIOCardBaseFeConn:ConfigureVifNs)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: configure-vif-ns-failed
mibFaultCode: F17941
mibFaultName: fsmStFailEquipmentIOCardBaseFeConnConfigureVifNs
moClass: equipment:IOCardBase
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmStFailEquipmentIOCardBaseFeConn:DiscoverChassis

Fault Code: F17941

Message: [FSM:STAGE:FAILED|RETRY]: triggering chassis discovery via IOM [chassisId]/[id]([side])(FSM-STAGE:sam:dme:EquipmentIOCardBaseFeConn:DiscoverChassis)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: discover-chassis-failed
mibFaultCode: F17941
mibFaultName: fsmStFailEquipmentIOCardBaseFeConnDiscoverChassis
moClass: equipment:IOCardBase
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmStFailEquipmentIOCardBaseFeConn:EnableChassis

Fault Code: F17941

Message: [FSM:STAGE:FAILED|RETRY]: enabling chassis [chassisId] on [side] side(FSM-STAGE:sam:dme:EquipmentIOCardBaseFeConn:EnableChassis)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: enable-chassis-failed
mibFaultCode: F17941
mibFaultName: fsmStFailEquipmentIOCardBaseFeConnEnableChassis
moClass: equipment:IOCardBase
```

```
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmStFailEquipmentPsuUpdatePSU:ActivatePsu

Fault Code: F17987

Message: [FSM:STAGE:FAILED|RETRY]: activating PSU image(FSM-STAGE:sam:dme:EquipmentPsuUpdatePSU:ActivatePsu)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-psu-failed
mibFaultCode: F17987
mibFaultName: fsmStFailEquipmentPsuUpdatePSUActivatePsu
moClass: equipment:Psu
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-enclosure-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fsmStFailEquipmentPsuUpdatePSU:PollActivateStatus

Fault Code: F17987

Message: [FSM:STAGE:FAILED|RETRY]: waiting for PSU activate to complete(FSM-STAGE:sam:dme:EquipmentPsuUpdatePSU:PollActivateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-activate-status-failed
mibFaultCode: F17987
mibFaultName: fsmStFailEquipmentPsuUpdatePSUPollActivateStatus
moClass: equipment:Psu
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
```

```
Affected MO: sys/rack-enclosure-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fsmStFailEquipmentPsuUpdatePSU:PollUpdateStatus

Fault Code: F17987

Message: [FSM:STAGE:FAILED|RETRY]: waiting for PSU update to complete(FSM-STAGE:sam:dme:EquipmentPsuUpdatePSU:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F17987
mibFaultName: fsmStFailEquipmentPsuUpdatePSUPollUpdateStatus
moClass: equipment:Psu
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-enclosure-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fsmStFailEquipmentPsuUpdatePSU:UpdateRequest

Fault Code: F17987

Message: [FSM:STAGE:FAILED|RETRY]: sending PSU update request to CIMC(FSM-STAGE:sam:dme:EquipmentPsuUpdatePSU:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-request-failed
mibFaultCode: F17987
mibFaultName: fsmStFailEquipmentPsuUpdatePSUUpdateRequest
moClass: equipment:Psu
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-enclosure-[id]/psu-[id]
```

Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]

fsmStFailMgmtControllerUpdateCMC:PollUpdateStatus

Fault Code: F18012

Message: [FSM:STAGE:FAILED|RETRY]: waiting for M-series CMC update(FSM-STAGE:sam:dme:MgmtControllerUpdateCMC:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F18012
mibFaultName: fsmStFailMgmtControllerUpdateCMCPollUpdateStatus
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt

Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateCMC:UpdateRequest

Fault Code: F18012

Message: [FSM:STAGE:FAILED|RETRY]: sending update request to M-series CMC(FSM-STAGE:sam:dme:MgmtControllerUpdateCMC:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: F18012
mibFaultName: fsmStFailMgmtControllerUpdateCMCUpdateRequest
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerActivateCMC:Activate

Fault Code: F18013

Message: [FSM:STAGE:FAILED|RETRY]: activating backup image of M-series CMC(FSM-STAGE:sam:dme:MgmtControllerActivateCMC:Activate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: activate-failed
mibFaultCode: F18013
mibFaultName: fsmStFailMgmtControllerActivateCMCActivate
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerActivateCMC:PollActivation

Fault Code: F18013

Message: [FSM:STAGE:FAILED|RETRY]: poll activation status(FSM-STAGE:sam:dme:MgmtControllerActivateCMC:PollActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-activation-failed
mibFaultCode: F18013
mibFaultName: fsmStFailMgmtControllerActivateCMCPollActivation
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerActivateCMC:Reset

Fault Code: F18013

Message: [FSM:STAGE:FAILED|RETRY]: Resetting M-series CMC to boot the activated version(FSM-STAGE:sam:dme:MgmtControllerActivateCMC:Reset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: reset-failed
mibFaultCode: F18013
mibFaultName: fsmStFailMgmtControllerActivateCMCReset
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt

Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateAdaptor:PollUpdateStatus

Fault Code: F18014

Message: [FSM:STAGE:FAILED|RETRY]: waiting for update to complete(FSM-STAGE:sam:dme:MgmtControllerUpdateAdaptor:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F18014
mibFaultName: fsmStFailMgmtControllerUpdateAdaptorPollUpdateStatus
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateAdaptor:UpdateRequest

Fault Code: F18014

Message: [FSM:STAGE:FAILED|RETRY]: sending update request to Adaptor(FSM-STAGE:sam:dme:MgmtControllerUpdateAdaptor:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: F18014
mibFaultName: fsmStFailMgmtControllerUpdateAdaptorUpdateRequest
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateAdaptor:UpdateRequestPeer

Fault Code: F18014

Message: [FSM:STAGE:FAILED|RETRY]: sending update request to Peer Adaptor(FSM-STAGE:sam:dme:MgmtControllerUpdateAdaptor:UpdateRequestPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-request-peer-failed
mibFaultCode: F18014
mibFaultName: fsmStFailMgmtControllerUpdateAdaptorUpdateRequestPeer
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerActivateAdaptor:Activate

Fault Code: F18015

Message: [FSM:STAGE:FAILED|RETRY]: activating image of Adaptor(FSM-STAGE:sam:dme:MgmtControllerActivateAdaptor:Activate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: activate-failed
mibFaultCode: F18015
mibFaultName: fsmStFailMgmtControllerActivateAdaptorActivate
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt

Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerActivateAdaptor:ActivatePeer

Fault Code: F18015

Message: [FSM:STAGE:FAILED|RETRY]: activating image of Peer Adaptor(FSM-STAGE:sam:dme:MgmtControllerActivateAdaptor:ActivatePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: activate-peer-failed
mibFaultCode: F18015
mibFaultName: fsmStFailMgmtControllerActivateAdaptorActivatePeer
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt

Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerActivateAdaptor:PollActivateStatus

Fault Code: F18015

Message: [FSM:STAGE:FAILED|RETRY]: waiting for adaptor reboot to complete(FSM-STAGE:sam:dme:MgmtControllerActivateAdaptor:PollActivateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-activate-status-failed
mibFaultCode: F18015
mibFaultName: fsmStFailMgmtControllerActivateAdaptorPollActivateStatus
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerActivateAdaptor:PowerOffServers

Fault Code: F18015

Message: [FSM:STAGE:FAILED|RETRY]: soft shutdown of the servers(FSM-STAGE:sam:dme:MgmtControllerActivateAdaptor:PowerOffServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: power-off-servers-failed
mibFaultCode: F18015
mibFaultName: fsmStFailMgmtControllerActivateAdaptorPowerOffServers

moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt

Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerActivateAdaptor:PowerOnServers

Fault Code: F18015

Message: [FSM:STAGE:FAILED|RETRY]: Power on servers(FSM-STAGE:sam:dme:MgmtControllerActivateAdaptor:PowerOnServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: power-on-servers-failed
mibFaultCode: F18015
mibFaultName: fsmStFailMgmtControllerActivateAdaptorPowerOnServers
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerActivateAdaptor:Reset

Fault Code: F18015

Message: [FSM:STAGE:FAILED|RETRY]: reseting the adaptor(FSM-STAGE:sam:dme:MgmtControllerActivateAdaptor:Reset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: reset-failed
mibFaultCode: F18015
mibFaultName: fsmStFailMgmtControllerActivateAdaptorReset
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerActivateAdaptor:ServersPowerOffCompletion

Fault Code: F18015

Message: [FSM:STAGE:FAILED|RETRY]: checking for servers are powered down(FSM-STAGE:sam:dme:MgmtControllerActivateAdaptor:ServersPowerOffCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: servers-power-off-completion-failed
mibFaultCode: F18015
mibFaultName: fsmStFailMgmtControllerActivateAdaptorServersPowerOffCompletion
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateRaidController:Activate

Fault Code: F18016

Message: [FSM:STAGE:FAILED|RETRY]: Activating M-series Storage Controller(FSM-STAGE:sam:dme:MgmtControllerUpdateRaidController:Activate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: activate-failed
mibFaultCode: F18016
mibFaultName: fsmStFailMgmtControllerUpdateRaidControllerActivate
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateRaidController:PollActivation

Fault Code: F18016

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for M-series Storage Controller activation to complete(FSM-STAGE:sam:dme:MgmtControllerUpdateRaidController:PollActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-activation-failed
mibFaultCode: F18016
mibFaultName: fsmStFailMgmtControllerUpdateRaidControllerPollActivation
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt

Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateRaidController:PollUpdateStatus

Fault Code: F18016

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for M-series Storage Controller update to complete(FSM-STAGE:sam:dme:MgmtControllerUpdateRaidController:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F18016
mibFaultName: fsmStFailMgmtControllerUpdateRaidControllerPollUpdateStatus
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateRaidController:PowerOffServers

Fault Code: F18016

Message: [FSM:STAGE:FAILED|RETRY]: Power off servers(FSM-STAGE:sam:dme:MgmtControllerUpdateRaidController:PowerOffServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: power-off-servers-failed
mibFaultCode: F18016
mibFaultName: fsmStFailMgmtControllerUpdateRaidControllerPowerOffServers
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateRaidController:PowerOnServers

Fault Code: F18016

Message: [FSM:STAGE:FAILED|RETRY]: Power on servers(FSM-STAGE:sam:dme:MgmtControllerUpdateRaidController:PowerOnServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-servers-failed
mibFaultCode: F18016
mibFaultName: fsmStFailMgmtControllerUpdateRaidControllerPowerOnServers
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateRaidController:ServersPowerOffCompletion

Fault Code: F18016

Message: [FSM:STAGE:FAILED|RETRY]: checking for servers are powered down(FSM-STAGE:sam:dme:MgmtControllerUpdateRaidController:ServersPowerOffCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: servers-power-off-completion-failed
mibFaultCode: F18016
mibFaultName: fsmStFailMgmtControllerUpdateRaidControllerServersPowerOffCompletion
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt

Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateRaidController:UpdateRequest

Fault Code: F18016

Message: [FSM:STAGE:FAILED|RETRY]: Sending M-series Storage Controller update request to CMC(FSM-STAGE:sam:dme:MgmtControllerUpdateRaidController:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: F18016
mibFaultName: fsmStFailMgmtControllerUpdateRaidControllerUpdateRequest
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt

Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateBoardController:PollUpdateStatus

Fault Code: F18017

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Board Controller update to complete(FSM-STAGE:sam:dme:MgmtControllerUpdateBoardController:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F18017
mibFaultName: fsmStFailMgmtControllerUpdateBoardControllerPollUpdateStatus
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateBoardController:PowerOffServers

Fault Code: F18017

Message: [FSM:STAGE:FAILED|RETRY]: Power off servers(FSM-STAGE:sam:dme:MgmtControllerUpdateBoardController:PowerOffServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: power-off-servers-failed
mibFaultCode: F18017
mibFaultName: fsmStFailMgmtControllerUpdateBoardControllerPowerOffServers

moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt

Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateBoardController:PowerOnServers

Fault Code: F18017

Message: [FSM:STAGE:FAILED|RETRY]: Power on servers(FSM-STAGE:sam:dme:MgmtControllerUpdateBoardController:PowerOnServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: power-on-servers-failed
mibFaultCode: F18017
mibFaultName: fsmStFailMgmtControllerUpdateBoardControllerPowerOnServers
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateBoardController:PrepareForUpdate

Fault Code: F18017

Message: [FSM:STAGE:FAILED|RETRY]: Prepare for BoardController update(FSM-STAGE:sam:dme:MgmtControllerUpdateBoardController:PrepareForUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: prepare-for-update-failed
mibFaultCode: F18017
mibFaultName: fsmStFailMgmtControllerUpdateBoardControllerPrepareForUpdate
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateBoardController:ServersPowerOffCompletion

Fault Code: F18017

Message: [FSM:STAGE:FAILED|RETRY]: checking for servers are powered down(FSM-STAGE:sam:dme:MgmtControllerUpdateBoardController:ServersPowerOffCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: servers-power-off-completion-failed
mibFaultCode: F18017
mibFaultName: fsmStFailMgmtControllerUpdateBoardControllerServersPowerOffCompletion
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateBoardController:UpdateRequest

Fault Code: F18017

Message: [FSM:STAGE:FAILED|RETRY]: Sending Board Controller update request to CMC(FSM-STAGE:sam:dme:MgmtControllerUpdateBoardController:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: F18017
mibFaultName: fsmStFailMgmtControllerUpdateBoardControllerUpdateRequest
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailFabricCartridgeSlotEpIdentify:ExecuteLocal

Fault Code: F18024

Message: [FSM:STAGE:FAILED|RETRY]: identifying a cartridge in [chassisId]/[slotId] via CMC(FSM-STAGE:sam:dme:FabricCartridgeSlotEpIdentify:ExecuteLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-local-failed
mibFaultCode: F18024
mibFaultName: fsmStFailFabricCartridgeSlotEpIdentifyExecuteLocal
moClass: fabric:CartridgeSlotEp
Type: fsm
autoCleared: true
Affected MO: fabric/server/chassis-[chassisId]/cart-slot-[slotId]
```

fsmStFailFabricCartridgeSlotEpIdentify:ExecutePeer

Fault Code: F18024

Message: [FSM:STAGE:FAILED|RETRY]: identifying a cartridge in [chassisId]/[slotId] via CMC(FSM-STAGE:sam:dme:FabricCartridgeSlotEpIdentify:ExecutePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-peer-failed
mibFaultCode: F18024
mibFaultName: fsmStFailFabricCartridgeSlotEpIdentifyExecutePeer
moClass: fabric:CartridgeSlotEp
Type: fsm
autoCleared: true
Affected MO: fabric/server/chassis-[chassisId]/cart-slot-[slotId]
```

fsmStFailFabricComputeMSlotEpIdentify:ExecuteLocal

Fault Code: F18025

Message: [FSM:STAGE:FAILED|RETRY]: identifying a server unit in [chassisId]/[slotId]/[serverInstanceId] via CIMC(FSM-STAGE:sam:dme:FabricComputeMSlotEpIdentify:ExecuteLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-local-failed
mibFaultCode: F18025
mibFaultName: fsmStFailFabricComputeMSlotEpIdentifyExecuteLocal
moClass: fabric:ComputeMSlotEp
Type: fsm
```

```
autoCleared: true
Affected MO: fabric/server/chassis-[chassisId]/cart-slot-[slotId]/ins-[serverInstanceId]
```

fsmStFailFabricComputeMSlotEpIdentify:ExecutePeer

Fault Code: F18025

Message: [FSM:STAGE:FAILED|RETRY]: identifying a server in [chassisId]/[slotId]/[serverInstanceId] via CIMC(FSM-STAGE:sam:dme:FabricComputeMSlotEpIdentify:ExecutePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-peer-failed
mibFaultCode: F18025
mibFaultName: fsmStFailFabricComputeMSlotEpIdentifyExecutePeer
moClass: fabric:ComputeMSlotEp
Type: fsm
autoCleared: true
Affected MO: fabric/server/chassis-[chassisId]/cart-slot-[slotId]/ins-[serverInstanceId]
```

fsmStFailEquipmentChassisOobStorageAdminCfg:OobStorageConfig

Fault Code: F18026

Message: [FSM:STAGE:FAILED|RETRY]: Local storage admin configuration(FSM-STAGE:sam:dme:EquipmentChassisOobStorageAdminCfg:OobStorageConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-storage-config-failed
mibFaultCode: F18026
mibFaultName: fsmStFailEquipmentChassisOobStorageAdminCfgOobStorageConfig
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisOobStorageAdminCfg:OobStorageInventory

Fault Code: F18026

Message: [FSM:STAGE:FAILED|RETRY]: Perform oob storage inventory after admin configuration(FSM-STAGE:sam:dme:EquipmentChassisOobStorageAdminCfg:OobStorageInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-storage-inventory-failed
mibFaultCode: F18026
mibFaultName: fsmStFailEquipmentChassisOobStorageAdminCfgOobStorageInventory
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailComputeServerUnitDiscover:BiosPostCompletion

Fault Code: F18032

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for BIOS POST completion from CIMC on server [chassisId]/[slotId]/[serverInstanceId](FSM-STAGE:sam:dme:ComputeServerUnitDiscover:BiosPostCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: F18032
mibFaultName: fsmStFailComputeServerUnitDiscoverBiosPostCompletion
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmStFailComputeServerUnitDiscover:BladeBootWait

Fault Code: F18032

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for system reset on server [chassisId]/[slotId]/[serverInstanceId](FSM-STAGE:sam:dme:ComputeServerUnitDiscover:BladeBootWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: blade-boot-wait-failed
mibFaultCode: F18032
mibFaultName: fsmStFailComputeServerUnitDiscoverBladeBootWait
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmStFailComputeServerUnitDiscover:BmcConfigPnuOS

Fault Code: F18032

Message: [FSM:STAGE:FAILED|RETRY]: provisioning a bootable device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputeServerUnitDiscover:BmcConfigPnuOS)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-config-pnuos-failed
mibFaultCode: F18032
mibFaultName: fsmStFailComputeServerUnitDiscoverBmcConfigPnuOS
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmStFailComputeServerUnitDiscover:BmcFactoryReset

Fault Code: F18032

Message: [FSM:STAGE:FAILED|RETRY]: performing factory reset of server [chassisId]/[slotId]/[serverInstanceId](FSM-STAGE:sam:dme:ComputeServerUnitDiscover:BmcFactoryReset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-factory-reset-failed
mibFaultCode: F18032
mibFaultName: fsmStFailComputeServerUnitDiscoverBmcFactoryReset
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmStFailComputeServerUnitDiscover:BmcInventory

Fault Code: F18032

Message: [FSM:STAGE:FAILED|RETRY]: getting inventory of server [chassisId]/[slotId]/[serverInstanceId] via CIMC(FSM-STAGE:sam:dme:ComputeServerUnitDiscover:BmcInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-inventory-failed
mibFaultCode: F18032
mibFaultName: fsmStFailComputeServerUnitDiscoverBmcInventory
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmStFailComputeServerUnitDiscover:BmcShutdownDiscovered

Fault Code: F18032

Message: [FSM:STAGE:FAILED|RETRY]: Shutdown the server [chassisId]/[slotId]/[serverInstanceId]; deep discovery completed(FSM-STAGE:sam:dme:ComputeServerUnitDiscover:BmcShutdownDiscovered)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-shutdown-discovered-failed
mibFaultCode: F18032
mibFaultName: fsmStFailComputeServerUnitDiscoverBmcShutdownDiscovered
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmStFailComputeServerUnitDiscover:BootPnuos

Fault Code: F18032

Message: [FSM:STAGE:FAILED|RETRY]: power server [chassisId]/[slotId]/[serverInstanceId] on with pre-boot environment(FSM-STAGE:sam:dme:ComputeServerUnitDiscover:BootPnuos)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-pnuos-failed
mibFaultCode: F18032
mibFaultName: fsmStFailComputeServerUnitDiscoverBootPnuos
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmStFailComputeServerUnitDiscover:CimcPresence

Fault Code: F18032

Message: [FSM:STAGE:FAILED|RETRY]: checking CIMC of server [chassisId]/[slotId]/[serverInstanceId](FSM-STAGE:sam:dme:ComputeServerUnitDiscover:CimcPresence)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cimc-presence-failed
mibFaultCode: F18032
mibFaultName: fsmStFailComputeServerUnitDiscoverCimcPresence
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmStFailComputeServerUnitDiscover:CleanupNicConfigLocal

Fault Code: F18032

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure local adapter in server [chassisId]/[slotId]/[serverInstanceId](FSM-STAGE:sam:dme:ComputeServerUnitDiscover:CleanupNicConfigLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cleanup-nic-config-local-failed
mibFaultCode: F18032
```

```
mibFaultName: fsmStFailComputeServerUnitDiscoverCleanupNicConfigLocal
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmStFailComputeServerUnitDiscover:CleanupNicConfigPeer

Fault Code: F18032

Message: [FSM:STAGE:FAILED|RETRY]: Unconfigure peer adapter in server [chassisId]/[slotId]/[serverInstanceId](FSM-STAGE:sam:dme:ComputeServerUnitDiscover:CleanupNicConfigPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cleanup-nic-config-peer-failed
mibFaultCode: F18032
mibFaultName: fsmStFailComputeServerUnitDiscoverCleanupNicConfigPeer
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmStFailComputeServerUnitDiscover:ConfigUserAccess

Fault Code: F18032

Message: [FSM:STAGE:FAILED|RETRY]: configuring external user access to server [chassisId]/[slotId]/[serverInstanceId](FSM-STAGE:sam:dme:ComputeServerUnitDiscover:ConfigUserAccess)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-user-access-failed
mibFaultCode: F18032
mibFaultName: fsmStFailComputeServerUnitDiscoverConfigUserAccess
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmStFailComputeServerUnitDiscover:HandlePooling

Fault Code: F18032

Message: [FSM:STAGE:FAILED|RETRY]: Invoke post-discovery policies on server [chassisId]/[slotId]/[serverInstanceId](FSM-STAGE:sam:dme:ComputeServerUnitDiscover:HandlePooling)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: handle-pooling-failed
mibFaultCode: F18032
mibFaultName: fsmStFailComputeServerUnitDiscoverHandlePooling
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmStFailComputeServerUnitDiscover:PreSanitize

Fault Code: F18032

Message: [FSM:STAGE:FAILED|RETRY]: Preparing to check hardware configuration server [chassisId]/[slotId]/[serverInstanceId](FSM-STAGE:sam:dme:ComputeServerUnitDiscover:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F18032
mibFaultName: fsmStFailComputeServerUnitDiscoverPreSanitize
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmStFailComputeServerUnitDiscover:ReadSmbios

Fault Code: F18032

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for SMBIOS table from CIMC on server [chassisId]/[slotId]/[serverInstanceId](FSM-STAGE:sam:dme:ComputeServerUnitDiscover:ReadSmbios)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: read-smbios-failed
mibFaultCode: F18032
mibFaultName: fsmStFailComputeServerUnitDiscoverReadSmbios
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmStFailComputeServerUnitDiscover:Sanitize

Fault Code: F18032

Message: [FSM:STAGE:FAILED|RETRY]: Checking hardware configuration server [chassisId]/[slotId]/[serverInstanceId](FSM-STAGE:sam:dme:ComputeServerUnitDiscover:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F18032
mibFaultName: fsmStFailComputeServerUnitDiscoverSanitize
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmStFailComputeServerUnitDiscover:UnconfigCimcVMedia

Fault Code: F18032

Message: [FSM:STAGE:FAILED|RETRY]: cleaning all mappings for vmedia(FSM-STAGE:sam:dme:ComputeServerUnitDiscover:UnconfigCimcVMedia)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-cimcvmedia-failed
mibFaultCode: F18032
mibFaultName: fsmStFailComputeServerUnitDiscoverUnconfigCimcVMedia
moClass: compute:ServerUnit
Type: fsm
```

```
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmStFailComputeServerUnitDiscover:UnconfigExtMgmtGw

Fault Code: F18032

Message: [FSM:STAGE:FAILED|RETRY]: cleaning all ext mgmt bmc gateway for vmedia(FSM-STAGE:sam:dme:ComputeServerUnitDiscover:UnconfigExtMgmtGw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-ext-mgmt-gw-failed
mibFaultCode: F18032
mibFaultName: fsmStFailComputeServerUnitDiscoverUnconfigExtMgmtGw
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmStFailComputeServerUnitDiscover:UnconfigExtMgmtRules

Fault Code: F18032

Message: [FSM:STAGE:FAILED|RETRY]: cleaning all ext mgmt rules for vmedia(FSM-STAGE:sam:dme:ComputeServerUnitDiscover:UnconfigExtMgmtRules)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-ext-mgmt-rules-failed
mibFaultCode: F18032
mibFaultName: fsmStFailComputeServerUnitDiscoverUnconfigExtMgmtRules
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmStFailMgmtIfFaPresence:CheckLicense

Fault Code: F18033

Message: [FSM:STAGE:FAILED|RETRY]: Checking license for chassis [chassisId] (iom [id])(FSM-STAGE:sam:dme:MgmtIfFaPresence:CheckLicense)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: check-license-failed
mibFaultCode: F18033
mibFaultName: fsmStFailMgmtIfFaPresenceCheckLicense
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]

Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmStFailMgmtIfFaPresence:Identify

Fault Code: F18033

Message: [FSM:STAGE:FAILED|RETRY]: Identifying Shared IO Module [chassisId]/[id](FSM-STAGE:sam:dme:MgmtIfFaPresence:Identify)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: identify-failed
mibFaultCode: F18033
mibFaultName: fsmStFailMgmtIfFaPresenceIdentify
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]

Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmStFailMgmtIfFaConn:ConfigureVifNs

Fault Code: F18034

Message: [FSM:STAGE:FAILED|RETRY]: configuring Shared IO Module [chassisId]/[id] virtual name space(FSM-STAGE:sam:dme:MgmtIfFaConn:ConfigureVifNs)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: configure-vif-ns-failed
mibFaultCode: F18034
mibFaultName: fsmStFailMgmtIfFaConnConfigureVifNs
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
```

Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmStFailMgmtIfFaConn:DiscoverChassis

Fault Code: F18034

Message: [FSM:STAGE:FAILED|RETRY]: triggering chassis discovery via Shared IO Module path [chassisId]/[id](FSM-STAGE:sam:dme:MgmtIfFaConn:DiscoverChassis)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: discover-chassis-failed
mibFaultCode: F18034
mibFaultName: fsmStFailMgmtIfFaConnDiscoverChassis
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]

Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmStFailMgmtIfFaConn:DiscoverSasExpander

Fault Code: F18034

Message: [FSM:STAGE:FAILED|RETRY]: Identifying SAS Expander(FSM-STAGE:sam:dme:MgmtIfFaConn:DiscoverSasExpander)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: discover-sas-expander-failed
mibFaultCode: F18034
mibFaultName: fsmStFailMgmtIfFaConnDiscoverSasExpander
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
```

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmStFailMgmtIfFaConn:OobStorageInventory

Fault Code: F18034

Message: [FSM:STAGE:FAILED|RETRY]: Identifying Oob Storage(FSM-STAGE:sam:dme:MgmtIfFaConn:OobStorageInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: oob-storage-inventory-failed
mibFaultCode: F18034
mibFaultName: fsmStFailMgmtIfFaConnOobStorageInventory
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:

sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]

Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmStFailMgmtIfFaConn:SharedIOModuleInventory

Fault Code: F18034

Message: [FSM:STAGE:FAILED|RETRY]: Identifying Shared IO Module in Chassis-[chassisId](FSM-STAGE:sam:dme:MgmtIfFaConn:SharedIOModuleInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: sharediomodule-inventory-failed
mibFaultCode: F18034
mibFaultName: fsmStFailMgmtIfFaConnSharedIOModuleInventory
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmStFailEquipmentIOCardEvacuate:Execute

Fault Code: F18045

Message: [FSM:STAGE:FAILED|RETRY]: Stop all active flows on IOM [dn] connected to fabric [switchId](FSM-STAGE:sam:dme:EquipmentIOCardEvacuate:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: F18045
mibFaultName: fsmStFailEquipmentIOCardEvacuateExecute
moClass: equipment:IOCard
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]

fsmStFailEquipmentIOCardResetEvacuate:Execute

Fault Code: F18046

Message: [FSM:STAGE:FAILED|RETRY]: Restarting all stopped flows on IOM [dn] connected to fabric [switchId](FSM-STAGE:sam:dme:EquipmentIOCardResetEvacuate:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F18046
mibFaultName: fsmStFailEquipmentIOCardResetEvacuateExecute
moClass: equipment:IOCard
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmStFailComputePhysicalClearTPM:BiosPostCompletion

Fault Code: F18051

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for BIOS POST completion from CIMC(FSM-STAGE:sam:dme:ComputePhysicalClearTPM:BiosPostCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: F18051
mibFaultName: fsmStFailComputePhysicalClearTPMBiosPostCompletion
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalClearTPM:BladePowerOff

Fault Code: F18051

Message: [FSM:STAGE:FAILED|RETRY]: Power off server for reconfiguring Bios(FSM-STAGE:sam:dme:ComputePhysicalClearTPM:BladePowerOff)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: blade-power-off-failed
mibFaultCode: F18051
mibFaultName: fsmStFailComputePhysicalClearTPMBladePowerOff
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalClearTPM:BladePowerOn

Fault Code: F18051

Message: [FSM:STAGE:FAILED|RETRY]: Power on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalClearTPM:BladePowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: blade-power-on-failed
mibFaultCode: F18051
mibFaultName: fsmStFailComputePhysicalClearTPMBladePowerOn
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalClearTPM:BootHost

Fault Code: F18051

Message: [FSM:STAGE:FAILED|RETRY]: Reboot host OS for server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalClearTPM:BootHost)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-host-failed
mibFaultCode: F18051
mibFaultName: fsmStFailComputePhysicalClearTPMBootHost
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalClearTPM:Clear

Fault Code: F18051

Message: [FSM:STAGE:FAILED|RETRY]: Clear TPM for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalClearTPM:Clear)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: clear-failed
mibFaultCode: F18051
mibFaultName: fsmStFailComputePhysicalClearTPMClear
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalClearTPM:PreSanitize

Fault Code: F18051

Message: [FSM:STAGE:FAILED|RETRY]: Preparing to check hardware configuration server [serverId](FSM-STAGE:sam:dme:ComputePhysicalClearTPM:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: pre-sanitize-failed
mibFaultCode: F18051
mibFaultName: fsmStFailComputePhysicalClearTPMPreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalClearTPM:ReadSmBios

Fault Code: F18051

Message: [FSM:STAGE:FAILED|RETRY]: Reading SMBIOS 204 response(FSM-STAGE:sam:dme:ComputePhysicalClearTPM:ReadSmBios)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: read-sm-bios-failed
mibFaultCode: F18051
mibFaultName: fsmStFailComputePhysicalClearTPMReadSmBios
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalClearTPM:ReconfigBios

Fault Code: F18051

Message: [FSM:STAGE:FAILED|RETRY]: Reconfiguring BIOS Settings and Boot Order of server [serverId] for service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalClearTPM:ReconfigBios)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: reconfig-bios-failed
mibFaultCode: F18051
mibFaultName: fsmStFailComputePhysicalClearTPMReconfigBios
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalClearTPM:Sanitize

Fault Code: F18051

Message: [FSM:STAGE:FAILED|RETRY]: Checking hardware configuration server [serverId](FSM-STAGE:sam:dme:ComputePhysicalClearTPM:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F18051
mibFaultName: fsmStFailComputePhysicalClearTPMSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalClearTPM:SetupVmedia

Fault Code: F18051

Message: [FSM:STAGE:FAILED|RETRY]: Provisioning a V-Media device with a bootable BIOS image for server [dn](FSM-STAGE:sam:dme:ComputePhysicalClearTPM:SetupVmedia)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: setup-vmedia-failed
mibFaultCode: F18051
mibFaultName: fsmStFailComputePhysicalClearTPMSetupVmedia
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalClearTPM:StopVMediaLocal

Fault Code: F18051

Message: [FSM:STAGE:FAILED|RETRY]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalClearTPM:StopVMediaLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: stopvmedia-local-failed
mibFaultCode: F18051
mibFaultName: fsmStFailComputePhysicalClearTPMStopVMediaLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalClearTPM:StopVMediaPeer

Fault Code: F18051

Message: [FSM:STAGE:FAILED|RETRY]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalClearTPM:StopVMediaPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: stopvmedia-peer-failed
mibFaultCode: F18051
mibFaultName: fsmStFailComputePhysicalClearTPMStopVMediaPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalClearTPM:UnconfigVmedia

Fault Code: F18051

Message: [FSM:STAGE:FAILED|RETRY]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalClearTPM:UnconfigVmedia)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-vmedia-failed
mibFaultCode: F18051
mibFaultName: fsmStFailComputePhysicalClearTPMUnconfigVmedia
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailEquipmentIOCardResetPeerCmc:Execute

Fault Code: F18102

Message: [FSM:STAGE:FAILED|RETRY]: Resetting Chassis Management Controller on Peer IOM [chassisId]/[id](FSM-STAGE:sam:dme:EquipmentIOCardResetPeerCmc:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F18102
mibFaultName: fsmStFailEquipmentIOCardResetPeerCmcExecute
moClass: equipment:IOCard
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmStFailSwExtUtilityConfPortBreakout:ConfigSwA

Fault Code: F18124

Message: [FSM:STAGE:FAILED|RETRY]: Configure port breakout mode mode on fabric interconnect [id](FSM-STAGE:sam:dme:SwExtUtilityConfPortBreakout:ConfigSwA)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-sw-afailed
mibFaultCode: F18124
mibFaultName: fsmStFailSwExtUtilityConfPortBreakoutConfigSwA
moClass: sw:ExtUtility
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/ext
```

fsmStFailSwExtUtilityConfPortBreakout:ConfigSwB

Fault Code: F18124

Message: [FSM:STAGE:FAILED|RETRY]: Configure port breakout mode on fabric interconnect [id](FSM-STAGE:sam:dme:SwExtUtilityConfPortBreakout:ConfigSwB)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-sw-bfailed
mibFaultCode: F18124
mibFaultName: fsmStFailSwExtUtilityConfPortBreakoutConfigSwB
moClass: sw:ExtUtility
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/ext
```

fsmStFailSwExtUtilityConfPortBreakout:PortInventorySwA

Fault Code: F18124

Message: [FSM:STAGE:FAILED|RETRY]: Performing local port inventory of switch [id](FSM-STAGE:sam:dme:SwExtUtilityConfPortBreakout:PortInventorySwA)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: port-inventory-sw-afailed
mibFaultCode: F18124
mibFaultName: fsmStFailSwExtUtilityConfPortBreakoutPortInventorySwA
moClass: sw:ExtUtility
Type: fsm
```

```
autoCleared: true
Affected MO: sys/switch-[id]/ext
```

fsmStFailSwExtUtilityConfPortBreakout:PortInventorySwB

Fault Code: F18124

Message: [FSM:STAGE:FAILED|RETRY]: Performing peer port inventory of switch [id](FSM-STAGE:sam:dme:SwExtUtilityConfPortBreakout:PortInventorySwB)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: port-inventory-sw-bfailed
mibFaultCode: F18124
mibFaultName: fsmStFailSwExtUtilityConfPortBreakoutPortInventorySwB
moClass: sw:ExtUtility
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/ext
```

fsmStFailSwExtUtilityConfPortBreakout:VerifyBreakoutConfig

Fault Code: F18124

Message: [FSM:STAGE:FAILED|RETRY]: Verifying physical port breakout config on fabric interconnect [id](FSM-STAGE:sam:dme:SwExtUtilityConfPortBreakout:VerifyBreakoutConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: verify-breakout-config-failed
mibFaultCode: F18124
mibFaultName: fsmStFailSwExtUtilityConfPortBreakoutVerifyBreakoutConfig
moClass: sw:ExtUtility
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/ext
```

fsmStFailEquipmentSwitchIOCardEvacuate:Execute

Fault Code: F18146

Message: [FSM:STAGE:FAILED|RETRY]: Stop all active flows on FI-IOM [dn] alias fabric [switchId](FSM-STAGE:sam:dme:EquipmentSwitchIOCardEvacuate:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F18146
mibFaultName: fsmStFailEquipmentSwitchIOCardEvacuateExecute
moClass: equipment:SwitchIOCard
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/sw-slot-[id]
```

fsmStFailEquipmentSwitchIOCardResetEvacuate:Execute

Fault Code: F18147

Message: [FSM:STAGE:FAILED|RETRY]: Restarting all stopped flows on FI-IOM [dn] alias fabric [switchId](FSM-STAGE:sam:dme:EquipmentSwitchIOCardResetEvacuate:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F18147
mibFaultName: fsmStFailEquipmentSwitchIOCardResetEvacuateExecute
moClass: equipment:SwitchIOCard
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/sw-slot-[id]
```

fsmStFailMorefImportRootApplyMoRefs:ApplyMoProps

Fault Code: F18161

Message: [FSM:STAGE:FAILED|RETRY]: Assigning values for moref properties(FSM-STAGE:sam:dme:MorefImportRootApplyMoRefs:ApplyMoProps)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-mo-props-failed
mibFaultCode: F18161
mibFaultName: fsmStFailMorefImportRootApplyMoRefsApplyMoProps
moClass: moref:ImportRoot
Type: fsm
autoCleared: true
Affected MO: import-ref-root
```

fsmStFailMorefImportRootApplyMoRefs:DeleteAllMoRefs

Fault Code: F18161

Message: [FSM:STAGE:FAILED|RETRY]: Deleting all moref Mo's from MIT(FSM-STAGE:sam:dme:MorefImportRootApplyMoRefs:DeleteAllMoRefs)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-all-mo-refs-failed
mibFaultCode: F18161
mibFaultName: fsmStFailMorefImportRootApplyMoRefsDeleteAllMoRefs
moClass: moref:ImportRoot
Type: fsm
autoCleared: true
Affected MO: import-ref-root
```

fsmStFailStorageEnclosureRemoveEnclosure:PollUpdateStorageInvCIMC

Fault Code: F18169

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for storage inventory from CIMCs(FSM-STAGE:sam:dme:StorageEnclosureRemoveEnclosure:PollUpdateStorageInvCIMC)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-storage-invcimc-failed
mibFaultCode: F18169
mibFaultName: fsmStFailStorageEnclosureRemoveEnclosurePollUpdateStorageInvCIMC
moClass: storage:Enclosure
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]
```

```
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]
Affected MO: sys/chassis-[id]/enc-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]
```

fsmStFailStorageEnclosureRemoveEnclosure:UpdateStorageInvCIMC

Fault Code: F18169

Message: [FSM:STAGE:FAILED|RETRY]: Update storage inventory from CIMCs(FSM-STAGE:sam:dme:StorageEnclosureRemoveEnclosure:UpdateStorageInvCIMC)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-storage-invcimc-failed
mibFaultCode: F18169
mibFaultName: fsmStFailStorageEnclosureRemoveEnclosureUpdateStorageInvCIMC
moClass: storage:Enclosure
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]
Affected MO: sys/chassis-[id]/enc-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]
```

fsmStFailStorageEnclosureRemoveEnclosure:UpdateStorageInvCMC

Fault Code: F18169

Message: [FSM:STAGE:FAILED|RETRY]: Update storage inventory from CMC(FSM-STAGE:sam:dme:StorageEnclosureRemoveEnclosure:UpdateStorageInvCMC)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-storage-invcmc-failed
mibFaultCode: F18169
```

mibFaultName: fsmStFailStorageEnclosureRemoveEnclosureUpdateStorageInvCMC
moClass: storage:Enclosure
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]
Affected MO: sys/chassis-[id]/enc-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]

fsmStFailStorageEnclosureRemoveEnclosure:ValidateRemoval

Fault Code: F18169

Message: [FSM:STAGE:FAILED|RETRY]: Validate removal of enclosure [id](FSM-STAGE:sam:dme:StorageEnclosureRemoveEnclosure:ValidateRemoval)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: validate-removal-failed
mibFaultCode: F18169
mibFaultName: fsmStFailStorageEnclosureRemoveEnclosureValidateRemoval
moClass: storage:Enclosure
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]
Affected MO: sys/chassis-[id]/enc-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]

fsmStFailMgmtControllerPowerCap:Config

Fault Code: F18184

Message: [FSM:STAGE:FAILED|RETRY]: (FSM-STAGE:sam:dme:MgmtControllerPowerCap:Config)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: config-failed
mibFaultCode: F18184
mibFaultName: fsmStFailMgmtControllerPowerCapConfig
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt

```
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt
```

fsmStFailEquipmentSystemIOControllerResetCmc:Execute

Fault Code: F18185

Message: [FSM:STAGE:FAILED|RETRY]: Resetting Chassis Management Controller on SIOC [chassisId]/[id](FSM-STAGE:sam:dme:EquipmentSystemIOControllerResetCmc:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F18185
mibFaultName: fsmStFailEquipmentSystemIOControllerResetCmcExecute
moClass: equipment:SystemIOController
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
```

fsmStFailComputePhysicalDiskZoningInventory:BootHost

Fault Code: F18186

Message: [FSM:STAGE:FAILED|RETRY]: Bring-up host for fetching storage inventory(FSM-STAGE:sam:dme:ComputePhysicalDiskZoningInventory:BootHost)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-host-failed
mibFaultCode: F18186
mibFaultName: fsmStFailComputePhysicalDiskZoningInventoryBootHost
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiskZoningInventory:BootWait

Fault Code: F18186

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for system reset(FSM-STAGE:sam:dme:ComputePhysicalDiskZoningInventory:BootWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-wait-failed
mibFaultCode: F18186
mibFaultName: fsmStFailComputePhysicalDiskZoningInventoryBootWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiskZoningInventory:PreSanitize

Fault Code: F18186

Message: [FSM:STAGE:FAILED|RETRY]: Preparing to check hardware configuration(FSM-STAGE:sam:dme:ComputePhysicalDiskZoningInventory:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F18186
mibFaultName: fsmStFailComputePhysicalDiskZoningInventoryPreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiskZoningInventory:Sanitize

Fault Code: F18186

Message: [FSM:STAGE:FAILED|RETRY]: Checking hardware configuration(FSM-STAGE:sam:dme:ComputePhysicalDiskZoningInventory:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F18186
mibFaultName: fsmStFailComputePhysicalDiskZoningInventorySanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiskZoningInventory:Shutdown

Fault Code: F18186

Message: [FSM:STAGE:FAILED|RETRY]: Shutting down server(FSM-STAGE:sam:dme:ComputePhysicalDiskZoningInventory:Shutdown)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: shutdown-failed
mibFaultCode: F18186
mibFaultName: fsmStFailComputePhysicalDiskZoningInventoryShutdown
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiskZoningInventory:StorageInventory

Fault Code: F18186

Message: [FSM:STAGE:FAILED|RETRY]: Collect storage inventory(FSM-STAGE:sam:dme:ComputePhysicalDiskZoningInventory:StorageInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: storage-inventory-failed
mibFaultCode: F18186
mibFaultName: fsmStFailComputePhysicalDiskZoningInventoryStorageInventory
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailEquipmentChassisProfileConfigure:AnalyzeImpact

Fault Code: F18206

Message: [FSM:STAGE:FAILED|RETRY]: Analyzing changes impact(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:AnalyzeImpact)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: analyze-impact-failed
mibFaultCode: F18206
mibFaultName: fsmStFailEquipmentChassisProfileConfigureAnalyzeImpact
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmStFailEquipmentChassisProfileConfigure:ApplyConfig

Fault Code: F18206

Message: [FSM:STAGE:FAILED|RETRY]: Applying config to chassis(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:ApplyConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-config-failed
```

```
mibFaultCode: F18206
mibFaultName: fsmStFailEquipmentChassisProfileConfigureApplyConfig
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmStFailEquipmentChassisProfileConfigure:ApplyPolicies

Fault Code: F18206

Message: [FSM:STAGE:FAILED|RETRY]: Resolving and applying policies(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:ApplyPolicies)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-policies-failed
mibFaultCode: F18206
mibFaultName: fsmStFailEquipmentChassisProfileConfigureApplyPolicies
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmStFailEquipmentChassisProfileConfigure:ApplyTemplate

Fault Code: F18206

Message: [FSM:STAGE:FAILED|RETRY]: Applying configuration template(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:ApplyTemplate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-template-failed
mibFaultCode: F18206
mibFaultName: fsmStFailEquipmentChassisProfileConfigureApplyTemplate
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmStFailEquipmentChassisProfileConfigure:EvaluateAssociation

Fault Code: F18206

Message: [FSM:STAGE:FAILED|RETRY]: Evaluate association with chassis(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:EvaluateAssociation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: evaluate-association-failed
mibFaultCode: F18206
mibFaultName: fsmStFailEquipmentChassisProfileConfigureEvaluateAssociation
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmStFailEquipmentChassisProfileConfigure:ResolveDistributable

Fault Code: F18206

Message: [FSM:STAGE:FAILED|RETRY]: Resolve distributable from operations manager(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:ResolveDistributable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-distributable-failed
mibFaultCode: F18206
mibFaultName: fsmStFailEquipmentChassisProfileConfigureResolveDistributable
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmStFailEquipmentChassisProfileConfigure:ResolveDistributableNames

Fault Code: F18206

Message: [FSM:STAGE:FAILED|RETRY]: Resolving distributable names from chassis pack(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:ResolveDistributableNames)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-distributable-names-failed
mibFaultCode: F18206
mibFaultName: fsmStFailEquipmentChassisProfileConfigureResolveDistributableNames
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmStFailEquipmentChassisProfileConfigure:ResolveImages

Fault Code: F18206

Message: [FSM:STAGE:FAILED|RETRY]: Resolve images from operations manager(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:ResolveImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-images-failed
mibFaultCode: F18206
mibFaultName: fsmStFailEquipmentChassisProfileConfigureResolveImages
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmStFailEquipmentChassisProfileConfigure:ResolvePolicies

Fault Code: F18206

Message: [FSM:STAGE:FAILED|RETRY]: Resolving various policies from UCS Central(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:ResolvePolicies)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-policies-failed
mibFaultCode: F18206
mibFaultName: fsmStFailEquipmentChassisProfileConfigureResolvePolicies
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmStFailEquipmentChassisProfileConfigure:ResolveSchedule

Fault Code: F18206

Message: [FSM:STAGE:FAILED|RETRY]: Resolving schedule policy from UCS Central(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:ResolveSchedule)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-schedule-failed
mibFaultCode: F18206
mibFaultName: fsmStFailEquipmentChassisProfileConfigureResolveSchedule
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmStFailEquipmentChassisProfileConfigure:ValidatePolicyOwnership

Fault Code: F18206

Message: [FSM:STAGE:FAILED|RETRY]: Validating policy integrity from ownership perspective(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:ValidatePolicyOwnership)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: validate-policy-ownership-failed
mibFaultCode: F18206
mibFaultName: fsmStFailEquipmentChassisProfileConfigureValidatePolicyOwnership
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
```

```
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmStFailEquipmentChassisProfileConfigure:WaitForAssocCompletion

Fault Code: F18206

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Association completion on chassis(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:WaitForAssocCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-assoc-completion-failed
mibFaultCode: F18206
mibFaultName: fsmStFailEquipmentChassisProfileConfigureWaitForAssocCompletion
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmStFailEquipmentChassisProfileConfigure:WaitForMaintPermission

Fault Code: F18206

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for ack or maint window(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:WaitForMaintPermission)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-maint-permission-failed
mibFaultCode: F18206
mibFaultName: fsmStFailEquipmentChassisProfileConfigureWaitForMaintPermission
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmStFailEquipmentChassisAssociate:ActivateAdaptor

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: activating adaptor(FSM-STAGE:sam:dme:EquipmentChassisAssociate:ActivateAdaptor)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-adaptor-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociateActivateAdaptor
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:ActivateBrdCtlr

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: activate board controller(FSM-STAGE:sam:dme:EquipmentChassisAssociate:ActivateBrdCtlr)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-brd-ctlr-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociateActivateBrdCtlr
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:ActivateCmc

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: activating chassis management controller(FSM-STAGE:sam:dme:EquipmentChassisAssociate:ActivateCmc)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-cmc-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociateActivateCmc
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:ActivateLocalDisk

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: Activate Disk(FSM-STAGE:sam:dme:EquipmentChassisAssociate:ActivateLocalDisk)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-local-disk-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociateActivateLocalDisk
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:ActivateSasExpander

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: Activate SAS expander(FSM-STAGE:sam:dme:EquipmentChassisAssociate:ActivateSasExpander)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-sas-expander-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociateActivateSasExpander
moClass: equipment:Chassis
Type: fsm
```

```
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:ActivateStorageCtlr

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: activating raid controller(FSM-STAGE:sam:dme:EquipmentChassisAssociate:ActivateStorageCtlr)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-storage-ctlr-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociateActivateStorageCtlr
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:ChassisPeerAdapterReboot

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: Chassis Adapter Reboot(FSM-STAGE:sam:dme:EquipmentChassisAssociate:ChassisPeerAdapterReboot)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: chassis-peer-adapter-reboot-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociateChassisPeerAdapterReboot
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:ConfigChassisAdapterConnectivity

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: Configure Server to Chassis Adapter connectivity(FSM-STAGE:sam:dme:EquipmentChassisAssociate:ConfigChassisAdapterConnectivity)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-chassis-adapter-connectivity-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociateConfigChassisAdapterConnectivity
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:DeleteCurlDownloadedImages

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: Delete images downloaded from operations manager(FSM-STAGE:sam:dme:EquipmentChassisAssociate:DeleteCurlDownloadedImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-curl-downloaded-images-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociateDeleteCurlDownloadedImages
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:DeleteImagesRemote

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: Delete images downloaded from operations manager(FSM-STAGE:sam:dme:EquipmentChassisAssociate:DeleteImagesRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-images-remote-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociateDeleteImagesRemote
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:DiskZoningConfig

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: Deploy disk zoning configuration(FSM-STAGE:sam:dme:EquipmentChassisAssociate:DiskZoningConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: disk-zoning-config-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociateDiskZoningConfig
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:PollAdaptorActivation

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: waiting for adaptor activation to complete(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PollAdaptorActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-adaptor-activation-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociatePollAdaptorActivation
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:PollBrdCtlrActivation

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: waiting for board controller activation to complete(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PollBrdCtlrActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-brd-ctlr-activation-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociatePollBrdCtlrActivation
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:PollCmcActivation

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: waiting for chassis management controller activation to complete(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PollCmcActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-cmc-activation-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociatePollCmcActivation
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:PollPostDiskZoneStorageInvCIMC

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for storage inventory from CIMCs(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PollPostDiskZoneStorageInvCIMC)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-post-disk-zone-storage-invcimc-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociatePollPostDiskZoneStorageInvCIMC
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:PollSasExpanderActivate

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: waiting for Sas Expander Activate to complete(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PollSasExpanderActivate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-sas-expander-activate-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociatePollSasExpanderActivate
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:PollSasExpanderConfig

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: Poll Connection Management Settings on SAS Expanders(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PollSasExpanderConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-sas-expander-config-failed
mibFaultCode: F18207
```

```
mibFaultName: fsmStFailEquipmentChassisAssociatePollSasExpanderConfig
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:PollStorageCtlrActivation

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: waiting for storage controller activation to complete(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PollStorageCtlrActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-storage-ctlr-activation-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociatePollStorageCtlrActivation
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:PollUpdateAdaptor

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: Poll Update Adaptor fw(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PollUpdateAdaptor)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-adaptor-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociatePollUpdateAdaptor
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:PollUpdateCmc

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: Poll Update CMC fw(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PollUpdateCmc)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-cmc-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociatePollUpdateCmc
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:PollUpdateSasExpander

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: Update SAS expander(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PollUpdateSasExpander)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-sas-expander-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociatePollUpdateSasExpander
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:PostDiskZoneStorageInvCIMC

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: Update storage inventory from CIMCs(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PostDiskZoneStorageInvCIMC)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: post-disk-zone-storage-invcimc-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociatePostDiskZoneStorageInvCIMC
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:PostDiskZoneStorageInvCMC

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: Update storage inventory from CMC(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PostDiskZoneStorageInvCMC)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: post-disk-zone-storage-invcmc-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociatePostDiskZoneStorageInvCMC
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:PowerOffServers

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: soft shutdown of the servers(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PowerOffServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-off-servers-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociatePowerOffServers
moClass: equipment:Chassis
Type: fsm
```

```
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:PowerOnServers

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: Power on servers(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PowerOnServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-servers-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociatePowerOnServers
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:SasExpanderConfig

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: Configure Connection Management Settings on SAS Expanders(FSM-STAGE:sam:dme:EquipmentChassisAssociate:SasExpanderConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sas-expander-config-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociateSasExpanderConfig
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:UnlockFirmwareImage

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: Releasing the lock obtained(FSM-STAGE:sam:dme:EquipmentChassisAssociate:UnlockFirmwareImage)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unlock-firmware-image-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociateUnlockFirmwareImage
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:UpdateAdaptor

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: Update Adaptor fw(FSM-STAGE:sam:dme:EquipmentChassisAssociate:UpdateAdaptor)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-adaptor-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociateUpdateAdaptor
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:UpdateCmc

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: Update CMC fw(FSM-STAGE:sam:dme:EquipmentChassisAssociate:UpdateCmc)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-cmc-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociateUpdateCmc
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:UpdateSasExpander

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: Update PLD(FSM-STAGE:sam:dme:EquipmentChassisAssociate:UpdateSasExpander)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-sas-expander-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociateUpdateSasExpander
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:WaitBeforeInstallation

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: Wait before installation(FSM-STAGE:sam:dme:EquipmentChassisAssociate:WaitBeforeInstallation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-before-installation-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociateWaitBeforeInstallation
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:WaitForPowerOff

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: waiting for soft-shutdown of the servers to complete(FSM-STAGE:sam:dme:EquipmentChassisAssociate:WaitForPowerOff)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-power-off-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociateWaitForPowerOff
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:copyRemote

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: Copy images to peer node(FSM-STAGE:sam:dme:EquipmentChassisAssociate:copyRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-remote-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociateCopyRemote
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisAssociate:downloadImages

Fault Code: F18207

Message: [FSM:STAGE:FAILED|RETRY]: Download images(FSM-STAGE:sam:dme:EquipmentChassisAssociate:downloadImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: download-images-failed
mibFaultCode: F18207
mibFaultName: fsmStFailEquipmentChassisAssociateDownloadImages
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisDisassociate:complete

Fault Code: F18208

Message: [FSM:STAGE:FAILED|RETRY]: Chassis disassociation completion(FSM-STAGE:sam:dme:EquipmentChassisDisassociate:complete)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: complete-failed
mibFaultCode: F18208
mibFaultName: fsmStFailEquipmentChassisDisassociateComplete
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEtherServerIntFIoConfig:Configure

Fault Code: F18237

Message: [FSM:STAGE:FAILED|RETRY]: Configure interface [dn](FSM-STAGE:sam:dme:EtherServerIntFIoConfig:Configure)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: configure-failed
mibFaultCode: F18237
```

mibFaultName: fsmStFailEtherServerIntFIoConfigConfigure
moClass: ether:ServerIntFIo
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/rack-unit-[id]/diag/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]

fsmStFailMgmtControllerEnableSecureBoot:PollSecureBootStatus

Fault Code: F18239

Message: [FSM:STAGE:FAILED|RETRY]: Poll for Secure Boot Status(FSM-STAGE:sam:dme:MgmtControllerEnableSecureBoot:PollSecureBootStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-secure-boot-status-failed
mibFaultCode: F18239
mibFaultName: fsmStFailMgmtControllerEnableSecureBootPollSecureBootStatus
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerEnableSecureBoot:PollUpdateStatus

Fault Code: F18239

Message: [FSM:STAGE:FAILED|RETRY]: waiting for CMC update(FSM-STAGE:sam:dme:MgmtControllerEnableSecureBoot:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F18239
mibFaultName: fsmStFailMgmtControllerEnableSecureBootPollUpdateStatus
moClass: mgmt:Controller

Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt

Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerEnableSecureBoot:Reset

Fault Code: F18239

Message: [FSM:STAGE:FAILED|RETRY]: Resetting CMC(FSM-STAGE:sam:dme:MgmtControllerEnableSecureBoot:Reset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: reset-failed
mibFaultCode: F18239
mibFaultName: fsmStFailMgmtControllerEnableSecureBootReset
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerEnableSecureBoot:UpdateRequest

Fault Code: F18239

Message: [FSM:STAGE:FAILED|RETRY]: sending update request to CMC(FSM-STAGE:sam:dme:MgmtControllerEnableSecureBoot:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: F18239
mibFaultName: fsmStFailMgmtControllerEnableSecureBootUpdateRequest
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailEquipmentChassisChassisUpgrade:ActivateAdaptor

Fault Code: F18242

Message: [FSM:STAGE:FAILED|RETRY]: activating adaptor(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:ActivateAdaptor)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-adaptor-failed
mibFaultCode: F18242
mibFaultName: fsmStFailEquipmentChassisChassisUpgradeActivateAdaptor
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisChassisUpgrade:ActivateBrdCtlr

Fault Code: F18242

Message: [FSM:STAGE:FAILED|RETRY]: activate board controller(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:ActivateBrdCtlr)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-brd-ctlr-failed
mibFaultCode: F18242
mibFaultName: fsmStFailEquipmentChassisChassisUpgradeActivateBrdCtlr
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisChassisUpgrade:ActivateCmc

Fault Code: F18242

Message: [FSM:STAGE:FAILED|RETRY]: activating chassis management controller(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:ActivateCmc)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-cmc-failed
mibFaultCode: F18242
mibFaultName: fsmStFailEquipmentChassisChassisUpgradeActivateCmc
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisChassisUpgrade:ActivateLocalDisk

Fault Code: F18242

Message: [FSM:STAGE:FAILED|RETRY]: update Local Disk(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:ActivateLocalDisk)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-local-disk-failed
mibFaultCode: F18242
mibFaultName: fsmStFailEquipmentChassisChassisUpgradeActivateLocalDisk
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisChassisUpgrade:ActivateSasExpander

Fault Code: F18242

Message: [FSM:STAGE:FAILED|RETRY]: Activate SAS expander(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:ActivateSasExpander)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-sas-expander-failed
mibFaultCode: F18242
mibFaultName: fsmStFailEquipmentChassisChassisUpgradeActivateSasExpander
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisChassisUpgrade:ActivateStorageCtlr

Fault Code: F18242

Message: [FSM:STAGE:FAILED|RETRY]: activating raid controller(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:ActivateStorageCtlr)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-storage-ctlr-failed
mibFaultCode: F18242
mibFaultName: fsmStFailEquipmentChassisChassisUpgradeActivateStorageCtlr
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisChassisUpgrade:PollAdaptorActivation

Fault Code: F18242

Message: [FSM:STAGE:FAILED|RETRY]: waiting for adaptor activation to complete(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:PollAdaptorActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-adaptor-activation-failed
mibFaultCode: F18242
mibFaultName: fsmStFailEquipmentChassisChassisUpgradePollAdaptorActivation
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisChassisUpgrade:PollBrdCtlrActivation

Fault Code: F18242

Message: [FSM:STAGE:FAILED|RETRY]: waiting for board controller activation to complete(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:PollBrdCtlrActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-brd-ctlr-activation-failed
mibFaultCode: F18242
mibFaultName: fsmStFailEquipmentChassisChassisUpgradePollBrdCtlrActivation
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisChassisUpgrade:PollCmcActivation

Fault Code: F18242

Message: [FSM:STAGE:FAILED|RETRY]: waiting for chassis management controller activation to complete(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:PollCmcActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-cmc-activation-failed
mibFaultCode: F18242
mibFaultName: fsmStFailEquipmentChassisChassisUpgradePollCmcActivation
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisChassisUpgrade:PollLocalDiskActivate

Fault Code: F18242

Message: [FSM:STAGE:FAILED|RETRY]: waiting for Local disk activate to complete(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:PollLocalDiskActivate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-local-disk-activate-failed
mibFaultCode: F18242
```

```
mibFaultName: fsmStFailEquipmentChassisChassisUpgradePollLocalDiskActivate
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisChassisUpgrade:PollSasExpanderActivate

Fault Code: F18242

Message: [FSM:STAGE:FAILED|RETRY]: waiting for Sas Expander Activate to complete(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:PollSasExpanderActivate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-sas-expander-activate-failed
mibFaultCode: F18242
mibFaultName: fsmStFailEquipmentChassisChassisUpgradePollSasExpanderActivate
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisChassisUpgrade:PollStorageCtlrActivation

Fault Code: F18242

Message: [FSM:STAGE:FAILED|RETRY]: waiting for storage controller activation to complete(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:PollStorageCtlrActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-storage-ctlr-activation-failed
mibFaultCode: F18242
mibFaultName: fsmStFailEquipmentChassisChassisUpgradePollStorageCtlrActivation
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisChassisUpgrade:PollUpdateStatus

Fault Code: F18242

Message: [FSM:STAGE:FAILED|RETRY]: waiting for updates to complete(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F18242
mibFaultName: fsmStFailEquipmentChassisChassisUpgradePollUpdateStatus
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisChassisUpgrade:PowerOffServers

Fault Code: F18242

Message: [FSM:STAGE:FAILED|RETRY]: soft shutdown of the servers(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:PowerOffServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-off-servers-failed
mibFaultCode: F18242
mibFaultName: fsmStFailEquipmentChassisChassisUpgradePowerOffServers
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisChassisUpgrade:PowerOnServers

Fault Code: F18242

Message: [FSM:STAGE:FAILED|RETRY]: Power on servers(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:PowerOnServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-servers-failed
mibFaultCode: F18242
mibFaultName: fsmStFailEquipmentChassisChassisUpgradePowerOnServers
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisChassisUpgrade:ResetSasExpander

Fault Code: F18242

Message: [FSM:STAGE:FAILED|RETRY]: Reset SAS expander(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:ResetSasExpander)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: reset-sas-expander-failed
mibFaultCode: F18242
mibFaultName: fsmStFailEquipmentChassisChassisUpgradeResetSasExpander
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisChassisUpgrade:UpdateRequest

Fault Code: F18242

Message: [FSM:STAGE:FAILED|RETRY]: starting updates for chassis components(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-request-failed
mibFaultCode: F18242
mibFaultName: fsmStFailEquipmentChassisChassisUpgradeUpdateRequest
moClass: equipment:Chassis
Type: fsm
```

autoCleared: true
Affected MO: sys/chassis-[id]

fsmStFailEquipmentChassisChassisUpgrade:WaitForPowerOff

Fault Code: F18242

Message: [FSM:STAGE:FAILED|RETRY]: waiting for soft-shutdown of the servers to complete(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:WaitForPowerOff)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: wait-for-power-off-failed
mibFaultCode: F18242
mibFaultName: fsmStFailEquipmentChassisChassisUpgradeWaitForPowerOff
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]

fsmStFailMgmtControllerUpdateSasExpander:PollUpdateStatus

Fault Code: F18244

Message: [FSM:STAGE:FAILED|RETRY]: waiting for update to complete(FSM-STAGE:sam:dme:MgmtControllerUpdateSasExpander:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F18244
mibFaultName: fsmStFailMgmtControllerUpdateSasExpanderPollUpdateStatus
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateSasExpander:UpdateRequest

Fault Code: F18244

Message: [FSM:STAGE:FAILED|RETRY]: sending update request of SasExpander to CMC(FSM-STAGE:sam:dme:MgmtControllerUpdateSasExpander:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: F18244
mibFaultName: fsmStFailMgmtControllerUpdateSasExpanderUpdateRequest
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerActivateSasExpander:Activate

Fault Code: F18245

Message: [FSM:STAGE:FAILED|RETRY]: activating backup image of SasExpander(FSM-STAGE:sam:dme:MgmtControllerActivateSasExpander:Activate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: activate-failed
mibFaultCode: F18245
mibFaultName: fsmStFailMgmtControllerActivateSasExpanderActivate
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerActivateSasExpander:PollActivateStatus

Fault Code: F18245

Message: [FSM:STAGE:FAILED|RETRY]: waiting for activate to complete(FSM-STAGE:sam:dme:MgmtControllerActivateSasExpander:PollActivateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-activate-status-failed
mibFaultCode: F18245
mibFaultName: fsmStFailMgmtControllerActivateSasExpanderPollActivateStatus
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt

Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerActivateSasExpander:WaitForActivation

Fault Code: F18245

Message: [FSM:STAGE:FAILED|RETRY]: waiting for expander to be activated(FSM-STAGE:sam:dme:MgmtControllerActivateSasExpander:WaitForActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: wait-for-activation-failed
mibFaultCode: F18245
mibFaultName: fsmStFailMgmtControllerActivateSasExpanderWaitForActivation
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerActivateLocalDisk:Activate

Fault Code: F18246

Message: [FSM:STAGE:FAILED|RETRY]: activating image of LocalDisk(FSM-STAGE:sam:dme:MgmtControllerActivateLocalDisk:Activate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: activate-failed
mibFaultCode: F18246
mibFaultName: fsmStFailMgmtControllerActivateLocalDiskActivate
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerActivateLocalDisk:PollActivateStatus

Fault Code: F18246

Message: [FSM:STAGE:FAILED|RETRY]: waiting for activate to complete(FSM-STAGE:sam:dme:MgmtControllerActivateLocalDisk:PollActivateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-activate-status-failed
mibFaultCode: F18246
mibFaultName: fsmStFailMgmtControllerActivateLocalDiskPollActivateStatus
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailStorageLocalDiskUpdateLocalDisk:PollUpdateStatus

Fault Code: F18247

Message: [FSM:STAGE:FAILED|RETRY]: waiting for activate to complete(FSM-STAGE:sam:dme:StorageLocalDiskUpdateLocalDisk:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F18247
mibFaultName: fsmStFailStorageLocalDiskUpdateLocalDiskPollUpdateStatus
moClass: storage:LocalDisk
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]

```
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]
```

fsmStFailStorageLocalDiskUpdateLocalDisk:PowerOffServers

Fault Code: F18247

Message: [FSM:STAGE:FAILED|RETRY]: soft shutdown of the servers(FSM-STAGE:sam:dme:StorageLocalDiskUpdateLocalDisk:PowerOffServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-off-servers-failed
mibFaultCode: F18247
mibFaultName: fsmStFailStorageLocalDiskUpdateLocalDiskPowerOffServers
moClass: storage:LocalDisk
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]
```

fsmStFailStorageLocalDiskUpdateLocalDisk:ServersPowerOffCompletion

Fault Code: F18247

Message: [FSM:STAGE:FAILED|RETRY]: checking for servers are powered down(FSM-STAGE:sam:dme:StorageLocalDiskUpdateLocalDisk:ServersPowerOffCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: servers-power-off-completion-failed
mibFaultCode: F18247
```

mibFaultName: fsmStFailStorageLocalDiskUpdateLocalDiskServersPowerOffCompletion
moClass: storage:LocalDisk
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]

fsmStFailStorageLocalDiskUpdateLocalDisk:Update

Fault Code: F18247

Message: [FSM:STAGE:FAILED|RETRY]: updating image of LocalDisk(FSM-STAGE:sam:dme:StorageLocalDiskUpdateLocalDisk:Update)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-failed
mibFaultCode: F18247
mibFaultName: fsmStFailStorageLocalDiskUpdateLocalDiskUpdate
moClass: storage:LocalDisk
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]

fsmStFailMgmtControllerUpdateUCSManagerSP:execute

Fault Code: F18259

Message: [FSM:STAGE:FAILED|RETRY]: Updating UCS Manager firmware(FSM-STAGE:sam:dme:MgmtControllerUpdateUCSManagerSP:execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F18259
mibFaultName: fsmStFailMgmtControllerUpdateUCSManagerSPExecute
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateUCSManagerSP:start

Fault Code: F18259

Message: [FSM:STAGE:FAILED|RETRY]: Scheduling UCS manager update(FSM-STAGE:sam:dme:MgmtControllerUpdateUCSManagerSP:start)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: start-failed
mibFaultCode: F18259
mibFaultName: fsmStFailMgmtControllerUpdateUCSManagerSPStart
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailComputePhysicalDiag:BiosPostCompletion

Fault Code: F18260

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for BIOS POST completion on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:BiosPostCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: F18260
mibFaultName: fsmStFailComputePhysicalDiagBiosPostCompletion
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiag:CheckPowerAvailability

Fault Code: F18260

Message: [FSM:STAGE:FAILED|RETRY]: Check if power is available for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F18260
mibFaultName: fsmStFailComputePhysicalDiagCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiag:DisableScriptableVMedia

Fault Code: F18260

Message: [FSM:STAGE:FAILED|RETRY]: disabling scriptable vmedia(FSM-STAGE:sam:dme:ComputePhysicalDiag:DisableScriptableVMedia)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: disable-scriptablevmedia-failed
mibFaultCode: F18260
```

```
mibFaultName: fsmStFailComputePhysicalDiagDisableScriptableVMedia
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiag:HagConnect

Fault Code: F18260

Message: [FSM:STAGE:FAILED|RETRY]: Connect to pre-boot environment agent on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:HagConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-connect-failed
mibFaultCode: F18260
mibFaultName: fsmStFailComputePhysicalDiagHagConnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiag:HagDisconnect

Fault Code: F18260

Message: [FSM:STAGE:FAILED|RETRY]: Disconnect from pre-boot environment agent on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:HagDisconnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-disconnect-failed
mibFaultCode: F18260
mibFaultName: fsmStFailComputePhysicalDiagHagDisconnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

```
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiag:LogTransfer

Fault Code: F18260

Message: [FSM:STAGE:FAILED|RETRY]: Transferring diag log files(FSM-STAGE:sam:dme:ComputePhysicalDiag:LogTransfer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: log-transfer-failed
mibFaultCode: F18260
mibFaultName: fsmStFailComputePhysicalDiagLogTransfer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiag:PnuOSIdent

Fault Code: F18260

Message: [FSM:STAGE:FAILED|RETRY]: Identify pre-boot environment agent on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:PnuOSIdent)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosident-failed
mibFaultCode: F18260
mibFaultName: fsmStFailComputePhysicalDiagPnuOSIdent
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiag:PowerDeployWait

Fault Code: F18260

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F18260
mibFaultName: fsmStFailComputePhysicalDiagPowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiag:PowerOn

Fault Code: F18260

Message: [FSM:STAGE:FAILED|RETRY]: power on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:PowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-failed
mibFaultCode: F18260
mibFaultName: fsmStFailComputePhysicalDiagPowerOn
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiag:PowerOnWait

Fault Code: F18260

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for power on for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:PowerOnWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-wait-failed
mibFaultCode: F18260
mibFaultName: fsmStFailComputePhysicalDiagPowerOnWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiag:PreSanitize

Fault Code: F18260

Message: [FSM:STAGE:FAILED|RETRY]: Preparing to check hardware configuration server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F18260
mibFaultName: fsmStFailComputePhysicalDiagPreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiag:PreconfigVmediaLocal

Fault Code: F18260

Message: [FSM:STAGE:FAILED|RETRY]: Teardown local vmedia(FSM-STAGE:sam:dme:ComputePhysicalDiag:PreconfigVmediaLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: preconfig-vmedia-local-failed
mibFaultCode: F18260
mibFaultName: fsmStFailComputePhysicalDiagPreconfigVmediaLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiag:PreconfigVmediaPeer

Fault Code: F18260

Message: [FSM:STAGE:FAILED|RETRY]: Teardown peer vmedia(FSM-STAGE:sam:dme:ComputePhysicalDiag:PreconfigVmediaPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: preconfig-vmedia-peer-failed
mibFaultCode: F18260
mibFaultName: fsmStFailComputePhysicalDiagPreconfigVmediaPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiag:RunTests

Fault Code: F18260

Message: [FSM:STAGE:FAILED|RETRY]: Running diagnostic tests(FSM-STAGE:sam:dme:ComputePhysicalDiag:RunTests)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: run-tests-failed
mibFaultCode: F18260
mibFaultName: fsmStFailComputePhysicalDiagRunTests
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiag:Sanitize

Fault Code: F18260

Message: [FSM:STAGE:FAILED|RETRY]: Checking hardware configuration server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F18260
mibFaultName: fsmStFailComputePhysicalDiagSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiag:SerialDebugConnect

Fault Code: F18260

Message: [FSM:STAGE:FAILED|RETRY]: Connect to pre-boot environment agent on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:SerialDebugConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: serial-debug-connect-failed
mibFaultCode: F18260
mibFaultName: fsmStFailComputePhysicalDiagSerialDebugConnect
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiag:SerialDebugDisconnect

Fault Code: F18260

Message: [FSM:STAGE:FAILED|RETRY]: Disconnect from pre-boot environment agent on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:SerialDebugDisconnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: serial-debug-disconnect-failed
mibFaultCode: F18260
mibFaultName: fsmStFailComputePhysicalDiagSerialDebugDisconnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiag:SetupBootEnvironment

Fault Code: F18260

Message: [FSM:STAGE:FAILED|RETRY]: setting up boot environment for management O/S for server(FSM-STAGE:sam:dme:ComputePhysicalDiag:SetupBootEnvironment)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: setup-boot-environment-failed
mibFaultCode: F18260
mibFaultName: fsmStFailComputePhysicalDiagSetupBootEnvironment
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiag:SetupVmediaLocal

Fault Code: F18260

Message: [FSM:STAGE:FAILED|RETRY]: provisioning a virtual media device with a management O/S for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:SetupVmediaLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: setup-vmedia-local-failed
mibFaultCode: F18260
mibFaultName: fsmStFailComputePhysicalDiagSetupVmediaLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiag:SetupVmediaPeer

Fault Code: F18260

Message: [FSM:STAGE:FAILED|RETRY]: provisioning a virtual media device with a management O/S for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:SetupVmediaPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: setup-vmedia-peer-failed
mibFaultCode: F18260
mibFaultName: fsmStFailComputePhysicalDiagSetupVmediaPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiag:Shutdown

Fault Code: F18260

Message: [FSM:STAGE:FAILED|RETRY]: Shutting down server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:Shutdown)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: shutdown-failed
mibFaultCode: F18260
mibFaultName: fsmStFailComputePhysicalDiagShutdown
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiag:TearDownBootEnvironment

Fault Code: F18260

Message: [FSM:STAGE:FAILED|RETRY]: tearing down boot environment for management O/S for server(FSM-STAGE:sam:dme:ComputePhysicalDiag:TearDownBootEnvironment)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: tear-down-boot-environment-failed
mibFaultCode: F18260
mibFaultName: fsmStFailComputePhysicalDiagTearDownBootEnvironment
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiag:TeardownVmediaLocal

Fault Code: F18260

Message: [FSM:STAGE:FAILED|RETRY]: Teardown local vmedia(FSM-STAGE:sam:dme:ComputePhysicalDiag:TeardownVmediaLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: teardown-vmedia-local-failed
mibFaultCode: F18260
mibFaultName: fsmStFailComputePhysicalDiagTeardownVmediaLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiag:TeardownVmediaPeer

Fault Code: F18260

Message: [FSM:STAGE:FAILED|RETRY]: Teardown peer vmedia(FSM-STAGE:sam:dme:ComputePhysicalDiag:TeardownVmediaPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: teardown-vmedia-peer-failed
mibFaultCode: F18260
mibFaultName: fsmStFailComputePhysicalDiagTeardownVmediaPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalDiag:WaitForDebug

Fault Code: F18260

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for user debugging(FSM-STAGE:sam:dme:ComputePhysicalDiag:WaitForDebug)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: wait-for-debug-failed
mibFaultCode: F18260
mibFaultName: fsmStFailComputePhysicalDiagWaitForDebug
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalCimcSecurityConfig:KmipCertConfig

Fault Code: F18261

Message: [FSM:STAGE:FAILED|RETRY]: Certificate configuration on CIMC for KMIP(FSM-STAGE:sam:dme:ComputePhysicalCimcSecurityConfig:KmipCertConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: kmip-cert-config-failed
mibFaultCode: F18261
mibFaultName: fsmStFailComputePhysicalCimcSecurityConfigKmipCertConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalCimcSecurityConfig:KmipSaveCert

Fault Code: F18261

Message: [FSM:STAGE:FAILED|RETRY]: Save CA-signed certificate on CIMC for KMIP(FSM-STAGE:sam:dme:ComputePhysicalCimcSecurityConfig:KmipSaveCert)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: kmip-save-cert-failed
mibFaultCode: F18261
mibFaultName: fsmStFailComputePhysicalCimcSecurityConfigKmipSaveCert
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailSwPortDiscoverDeploy:EnablePort

Fault Code: F18290

Message: [FSM:STAGE:FAILED|RETRY]: FI port discover on [switchId](FSM-STAGE:sam:dme:SwPortDiscoverDeploy:EnablePort)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: enable-port-failed
mibFaultCode: F18290
mibFaultName: fsmStFailSwPortDiscoverDeployEnablePort
moClass: sw:PortDiscover
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/discover
```

fsmStFailPolicyPolicyScopeContReportPolicyFailFsm:ReportError

Fault Code: F18293

Message: [FSM:STAGE:FAILED|RETRY]: (FSM-STAGE:sam:dme:PolicyPolicyScopeContReportPolicyFailFsm:ReportError)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: report-error-failed
mibFaultCode: F18293
mibFaultName: fsmStFailPolicyPolicyScopeContReportPolicyFailFsmReportError
moClass: policy:PolicyScopeCont
Type: fsm
autoCleared: true
Affected MO: extpol/reg/clients/client-[id]/scope-cont-[appType]
Affected MO: extpol/reg/controllers/contro-[id]/scope-cont-[appType]
Affected MO: extpol/reg/providers/prov-[type]/scope-cont-[appType]
Affected MO: extpol/reg/scope-cont-[appType]
Affected MO: policy-ep/scope-cont-[appType]
```

fsmStFailPolicyRequestorResolveFromCentral:ResolveFromOpsMgr

Fault Code: F18294

Message: [FSM:STAGE:FAILED|RETRY]: Resolve objects from operations manager(FSM-STAGE:sam:dme:PolicyRequestorResolveFromCentral:ResolveFromOpsMgr)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-from-ops-mgr-failed
mibFaultCode: F18294
mibFaultName: fsmStFailPolicyRequestorResolveFromCentralResolveFromOpsMgr
moClass: policy:Requestor
Type: fsm
autoCleared: true
Affected MO:
sys/control-ep-[type]/source-[sourceDme]/context-[name]/scope-[policyType]-[resolveType]-[policyName]/requestor-[name]
```

fsmStFailPolicyRequestorResolveFromCentral:ResolveFromPolicyMgr

Fault Code: F18294

Message: [FSM:STAGE:FAILED|RETRY]: Resolve objects from policy manager(FSM-STAGE:sam:dme:PolicyRequestorResolveFromCentral:ResolveFromPolicyMgr)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-from-policy-mgr-failed
mibFaultCode: F18294
mibFaultName: fsmStFailPolicyRequestorResolveFromCentralResolveFromPolicyMgr
moClass: policy:Requestor
Type: fsm
autoCleared: true
Affected MO:
sys/control-ep-[type]/source-[sourceDme]/context-[name]/scope-[policyType]-[resolveType]-[policyName]/requestor-[name]
```

fsmStFailMgmtControllerKvmCert:Config

Fault Code: F18345

Message: [FSM:STAGE:FAILED|RETRY]: kvm certificate configuration(FSM-STAGE:sam:dme:MgmtControllerKvmCert:Config)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: config-failed
mibFaultCode: F18345
mibFaultName: fsmStFailMgmtControllerKvmCertConfig
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerKvmCert:ResetCimc

Fault Code: F18345

Message: [FSM:STAGE:FAILED|RETRY]: Resetting Management Controller(FSM-STAGE:sam:dme:MgmtControllerKvmCert:ResetCimc)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: reset-cimc-failed
mibFaultCode: F18345
mibFaultName: fsmStFailMgmtControllerKvmCertResetCimc
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailEquipmentChassisFwUpgrade:DeleteCurlDownloadedImages

Fault Code: F18346

Message: [FSM:STAGE:FAILED|RETRY]: Delete images downloaded from operations manager(FSM-STAGE:sam:dme:EquipmentChassisFwUpgrade:DeleteCurlDownloadedImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-curl-downloaded-images-failed
mibFaultCode: F18346
mibFaultName: fsmStFailEquipmentChassisFwUpgradeDeleteCurlDownloadedImages
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisFwUpgrade:DeleteImagesRemote

Fault Code: F18346

Message: [FSM:STAGE:FAILED|RETRY]: Delete images downloaded from operations manager(FSM-STAGE:sam:dme:EquipmentChassisFwUpgrade:DeleteImagesRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-images-remote-failed
mibFaultCode: F18346
mibFaultName: fsmStFailEquipmentChassisFwUpgradeDeleteImagesRemote
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisFwUpgrade:PollUpdateAdaptor

Fault Code: F18346

Message: [FSM:STAGE:FAILED|RETRY]: Poll Update Adaptor fw(FSM-STAGE:sam:dme:EquipmentChassisFwUpgrade:PollUpdateAdaptor)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-adaptor-failed
mibFaultCode: F18346
mibFaultName: fsmStFailEquipmentChassisFwUpgradePollUpdateAdaptor
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisFwUpgrade:PollUpdateCmc

Fault Code: F18346

Message: [FSM:STAGE:FAILED|RETRY]: Poll Update CMC fw(FSM-STAGE:sam:dme:EquipmentChassisFwUpgrade:PollUpdateCmc)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-cmc-failed
mibFaultCode: F18346
mibFaultName: fsmStFailEquipmentChassisFwUpgradePollUpdateCmc
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisFwUpgrade:PollUpdateSasExpander

Fault Code: F18346

Message: [FSM:STAGE:FAILED|RETRY]: Poll Update SAS expander fw(FSM-STAGE:sam:dme:EquipmentChassisFwUpgrade:PollUpdateSasExpander)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-sas-expander-failed
mibFaultCode: F18346
mibFaultName: fsmStFailEquipmentChassisFwUpgradePollUpdateSasExpander
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisFwUpgrade:UnlockFirmwareImage

Fault Code: F18346

Message: [FSM:STAGE:FAILED|RETRY]: Releasing the lock obtained(FSM-STAGE:sam:dme:EquipmentChassisFwUpgrade:UnlockFirmwareImage)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unlock-firmware-image-failed
mibFaultCode: F18346
mibFaultName: fsmStFailEquipmentChassisFwUpgradeUnlockFirmwareImage
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisFwUpgrade:UpdateAdaptor

Fault Code: F18346

Message: [FSM:STAGE:FAILED|RETRY]: Update Adaptor fw(FSM-STAGE:sam:dme:EquipmentChassisFwUpgrade:UpdateAdaptor)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-adaptor-failed
mibFaultCode: F18346
mibFaultName: fsmStFailEquipmentChassisFwUpgradeUpdateAdaptor
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisFwUpgrade:UpdateCmc

Fault Code: F18346

Message: [FSM:STAGE:FAILED|RETRY]: Update CMC fw(FSM-STAGE:sam:dme:EquipmentChassisFwUpgrade:UpdateCmc)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-cmc-failed
mibFaultCode: F18346
```

```
mibFaultName: fsmStFailEquipmentChassisFwUpgradeUpdateCmc
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisFwUpgrade:UpdateSasExpander

Fault Code: F18346

Message: [FSM:STAGE:FAILED|RETRY]: Update SAS expander fw(FSM-STAGE:sam:dme:EquipmentChassisFwUpgrade:UpdateSasExpander)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-sas-expander-failed
mibFaultCode: F18346
mibFaultName: fsmStFailEquipmentChassisFwUpgradeUpdateSasExpander
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisFwUpgrade:WaitBeforeInstallation

Fault Code: F18346

Message: [FSM:STAGE:FAILED|RETRY]: Wait before installation(FSM-STAGE:sam:dme:EquipmentChassisFwUpgrade:WaitBeforeInstallation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-before-installation-failed
mibFaultCode: F18346
mibFaultName: fsmStFailEquipmentChassisFwUpgradeWaitBeforeInstallation
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisFwUpgrade:copyRemote

Fault Code: F18346

Message: [FSM:STAGE:FAILED|RETRY]: Copy images to peer node(FSM-STAGE:sam:dme:EquipmentChassisFwUpgrade:copyRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-remote-failed
mibFaultCode: F18346
mibFaultName: fsmStFailEquipmentChassisFwUpgradeCopyRemote
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailEquipmentChassisFwUpgrade:downloadImages

Fault Code: F18346

Message: [FSM:STAGE:FAILED|RETRY]: Download images(FSM-STAGE:sam:dme:EquipmentChassisFwUpgrade:downloadImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: download-images-failed
mibFaultCode: F18346
mibFaultName: fsmStFailEquipmentChassisFwUpgradeDownloadImages
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailFabricReservedVlanDeploy:ConfigSwitchLocal

Fault Code: F18353

Message: [FSM:STAGE:FAILED|RETRY]: Reserved VLAN configuration on Local FI(FSM-STAGE:sam:dme:FabricReservedVlanDeploy:ConfigSwitchLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-switch-local-failed
mibFaultCode: F18353
mibFaultName: fsmStFailFabricReservedVlanDeployConfigSwitchLocal
moClass: fabric:ReservedVlan
Type: fsm
autoCleared: true
Affected MO: fabric/lan/fab-reserved-vlans
```

fsmStFailFabricReservedVlanDeploy:ConfigSwitchPeer

Fault Code: F18353

Message: [FSM:STAGE:FAILED|RETRY]: Reserved VLAN configuration on Peer FI(FSM-STAGE:sam:dme:FabricReservedVlanDeploy:ConfigSwitchPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-switch-peer-failed
mibFaultCode: F18353
mibFaultName: fsmStFailFabricReservedVlanDeployConfigSwitchPeer
moClass: fabric:ReservedVlan
Type: fsm
autoCleared: true
Affected MO: fabric/lan/fab-reserved-vlans
```

fsmStFailFabricReservedVlanDeploy:WaitForUserAck

Fault Code: F18353

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for User Acknowledgment to configuration on primary(FSM-STAGE:sam:dme:FabricReservedVlanDeploy:WaitForUserAck)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-user-ack-failed
mibFaultCode: F18353
mibFaultName: fsmStFailFabricReservedVlanDeployWaitForUserAck
moClass: fabric:ReservedVlan
Type: fsm
```

```
autoCleared: true
Affected MO: fabric/lan/fab-reserved-vlans
```

fsmStFailQosclassSlowDrainConfigQoSSlowDrain:SetLocal

Fault Code: F18361

Message: [FSM:STAGE:FAILED|RETRY]: QoS SlowDrain configuration on primary(FSM-STAGE:sam:dme:QosclassSlowDrainConfigQoSSlowDrain:SetLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-local-failed
mibFaultCode: F18361
mibFaultName: fsmStFailQosclassSlowDrainConfigQoSSlowDrainSetLocal
moClass: qosclass:SlowDrain
Type: fsm
autoCleared: true
Affected MO: fabric/lan/classes/slow-drain
```

fsmStFailQosclassSlowDrainConfigQoSSlowDrain:SetPeer

Fault Code: F18361

Message: [FSM:STAGE:FAILED|RETRY]: QoS SlowDrain configuration on secondary(FSM-STAGE:sam:dme:QosclassSlowDrainConfigQoSSlowDrain:SetPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-peer-failed
mibFaultCode: F18361
mibFaultName: fsmStFailQosclassSlowDrainConfigQoSSlowDrainSetPeer
moClass: qosclass:SlowDrain
Type: fsm
autoCleared: true
Affected MO: fabric/lan/classes/slow-drain
```

fsmStFailQosclassSlowDrainConfigQoSSlowDrainFex:SetLocal

Fault Code: F18362

Message: [FSM:STAGE:FAILED|RETRY]: QoS SlowDrain configuration on primary(FSM-STAGE:sam:dme:QosclassSlowDrainConfigQoSSlowDrainFex:SetLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-local-failed
mibFaultCode: F18362
mibFaultName: fsmStFailQosclassSlowDrainConfigQoSSlowDrainFexSetLocal
moClass: qosclass:SlowDrain
Type: fsm
autoCleared: true
Affected MO: fabric/lan/classes/slow-drain
```

fsmStFailQosclassSlowDrainConfigQoSSlowDrainFex:SetPeer

Fault Code: F18362

Message: [FSM:STAGE:FAILED|RETRY]: QoS SlowDrain configuration on secondary(FSM-STAGE:sam:dme:QosclassSlowDrainConfigQoSSlowDrainFex:SetPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-peer-failed
mibFaultCode: F18362
mibFaultName: fsmStFailQosclassSlowDrainConfigQoSSlowDrainFexSetPeer
moClass: qosclass:SlowDrain
Type: fsm
autoCleared: true
Affected MO: fabric/lan/classes/slow-drain
```

fsmStFailComputePhysicalExecuteActions:BiosPostCompletion

Fault Code: F18375

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for BIOS POST completion from CIMC on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalExecuteActions:BiosPostCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: F18375
mibFaultName: fsmStFailComputePhysicalExecuteActionsBiosPostCompletion
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalExecuteActions:ExecutePMAction

Fault Code: F18375

Message: [FSM:STAGE:FAILED|RETRY]: Execute a persistent memory action on a server [dn](FSM-STAGE:sam:dme:ComputePhysicalExecuteActions:ExecutePMAction)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: executepmaction-failed
mibFaultCode: F18375
mibFaultName: fsmStFailComputePhysicalExecuteActionsExecutePMAction
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalExecuteActions:PowerOn

Fault Code: F18375

Message: [FSM:STAGE:FAILED|RETRY]: Power on server for configuration of service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalExecuteActions:PowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-failed
mibFaultCode: F18375
mibFaultName: fsmStFailComputePhysicalExecuteActionsPowerOn
moClass: compute:Physical
```

```
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalExecuteActions:SoftShutdown

Fault Code: F18375

Message: [FSM:STAGE:FAILED|RETRY]: Soft shutdown of server [dn](FSM-STAGE:sam:dme:ComputePhysicalExecuteActions:SoftShutdown)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: soft-shutdown-failed
mibFaultCode: F18375
mibFaultName: fsmStFailComputePhysicalExecuteActionsSoftShutdown
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailEquipmentChassisFanPolicyConfig:Execute

Fault Code: F18376

Message: [FSM:STAGE:FAILED|RETRY]: Deploying Fan policy changes on chassis [id](FSM-STAGE:sam:dme:EquipmentChassisFanPolicyConfig:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F18376
mibFaultName: fsmStFailEquipmentChassisFanPolicyConfigExecute
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailComputePhysicalNvmeSwitchRecovery:CheckStatus

Fault Code: F18377

Message: [FSM:STAGE:FAILED|RETRY]: Get Recovery status for NVMe Switch(FSM-STAGE:sam:dme:ComputePhysicalNvmeSwitchRecovery:CheckStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-status-failed
mibFaultCode: F18377
mibFaultName: fsmStFailComputePhysicalNvmeSwitchRecoveryCheckStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalNvmeSwitchRecovery:Execute

Fault Code: F18377

Message: [FSM:STAGE:FAILED|RETRY]: Execute NVMe Switch recovery(FSM-STAGE:sam:dme:ComputePhysicalNvmeSwitchRecovery:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F18377
mibFaultName: fsmStFailComputePhysicalNvmeSwitchRecoveryExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalNvmeSwitchRecovery:WaitForAck

Fault Code: F18377

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for user ack(FSM-STAGE:sam:dme:ComputePhysicalNvmeSwitchRecovery:WaitForAck)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-ack-failed
mibFaultCode: F18377
mibFaultName: fsmStFailComputePhysicalNvmeSwitchRecoveryWaitForAck
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailMgmtControllerUpdateStorageServerCMC:PollUpdateStatus

Fault Code: F18379

Message: [FSM:STAGE:FAILED|RETRY]: waiting for c3260 CMC update(FSM-STAGE:sam:dme:MgmtControllerUpdateStorageServerCMC:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F18379
mibFaultName: fsmStFailMgmtControllerUpdateStorageServerCMCPollUpdateStatus
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
```

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateStorageServerCMC:UpdateRequest

Fault Code: F18379

Message: [FSM:STAGE:FAILED|RETRY]: sending update request to c3260 CMC(FSM-STAGE:sam:dme:MgmtControllerUpdateStorageServerCMC:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: F18379
mibFaultName: fsmStFailMgmtControllerUpdateStorageServerCMCUpdateRequest
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt

Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerActivateStorageServerCMC:Activate

Fault Code: F18380

Message: [FSM:STAGE:FAILED|RETRY]: activating backup image of c3260 CMC(FSM-STAGE:sam:dme:MgmtControllerActivateStorageServerCMC:Activate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: activate-failed
mibFaultCode: F18380
mibFaultName: fsmStFailMgmtControllerActivateStorageServerCMCActivate
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerActivateStorageServerCMC:PollActivation

Fault Code: F18380

Message: [FSM:STAGE:FAILED|RETRY]: poll activation status(FSM-STAGE:sam:dme:MgmtControllerActivateStorageServerCMC:PollActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-activation-failed
mibFaultCode: F18380
mibFaultName: fsmStFailMgmtControllerActivateStorageServerCMCPollActivation
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerActivateStorageServerCMC:Reset

Fault Code: F18380

Message: [FSM:STAGE:FAILED|RETRY]: Resetting c3260 CMC to boot the activated version(FSM-STAGE:sam:dme:MgmtControllerActivateStorageServerCMC:Reset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: reset-failed
mibFaultCode: F18380
mibFaultName: fsmStFailMgmtControllerActivateStorageServerCMCReset
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpgradeBoardController:PollUpdateStatus

Fault Code: F18381

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for Board Controller update to complete(FSM-STAGE:sam:dme:MgmtControllerUpgradeBoardController:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F18381
mibFaultName: fsmStFailMgmtControllerUpgradeBoardControllerPollUpdateStatus
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt

Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpgradeBoardController:PowerOffServers

Fault Code: F18381

Message: [FSM:STAGE:FAILED|RETRY]: Power off servers(FSM-STAGE:sam:dme:MgmtControllerUpgradeBoardController:PowerOffServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: power-off-servers-failed
mibFaultCode: F18381
mibFaultName: fsmStFailMgmtControllerUpgradeBoardControllerPowerOffServers
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt

Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpgradeBoardController:PowerOnServers

Fault Code: F18381

Message: [FSM:STAGE:FAILED|RETRY]: Power on servers(FSM-STAGE:sam:dme:MgmtControllerUpgradeBoardController:PowerOnServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: power-on-servers-failed
mibFaultCode: F18381
mibFaultName: fsmStFailMgmtControllerUpgradeBoardControllerPowerOnServers
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpgradeBoardController:PrepareForUpdate

Fault Code: F18381

Message: [FSM:STAGE:FAILED|RETRY]: Prepare for BoardController update(FSM-STAGE:sam:dme:MgmtControllerUpgradeBoardController:PrepareForUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: prepare-for-update-failed
mibFaultCode: F18381
mibFaultName: fsmStFailMgmtControllerUpgradeBoardControllerPrepareForUpdate

moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt

Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpgradeBoardController:ServersPowerOffCompletion

Fault Code: F18381

Message: [FSM:STAGE:FAILED|RETRY]: checking if the servers are powered down(FSM-STAGE:sam:dme:MgmtControllerUpgradeBoardController:ServersPowerOffCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: servers-power-off-completion-failed
mibFaultCode: F18381
mibFaultName: fsmStFailMgmtControllerUpgradeBoardControllerServersPowerOffCompletion
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpgradeBoardController:UpdateRequest

Fault Code: F18381

Message: [FSM:STAGE:FAILED|RETRY]: Sending Board Controller update request to CMC(FSM-STAGE:sam:dme:MgmtControllerUpgradeBoardController:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: F18381
mibFaultName: fsmStFailMgmtControllerUpgradeBoardControllerUpdateRequest
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailComputePhysicalReinitializeVirtualDrive:ExecuteVDAction

Fault Code: F18395

Message: [FSM:STAGE:FAILED|RETRY]: Execute Storage Configuration(FSM-STAGE:sam:dme:ComputePhysicalReinitializeVirtualDrive:ExecuteVDAction)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: executevdaction-failed
mibFaultCode: F18395
mibFaultName: fsmStFailComputePhysicalReinitializeVirtualDriveExecuteVDAction
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailEquipmentChassisPowerSavePolicyConfig:Execute

Fault Code: F18404

Message: [FSM:STAGE:FAILED|RETRY]: Deploying Power Save policy changes on chassis [id](FSM-STAGE:sam:dme:EquipmentChassisPowerSavePolicyConfig:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F18404
mibFaultName: fsmStFailEquipmentChassisPowerSavePolicyConfigExecute
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmStFailFcpoolOuisDeploy:Local

Fault Code: F18406

Message: [FSM:STAGE:FAILED|RETRY]: Deploy OUI to Local Fabric-Interconnect(FSM-STAGE:sam:dme:FcpoolOuisDeploy:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F18406
mibFaultName: fsmStFailFcpoolOuisDeployLocal
moClass: fcpool:Ouis
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/oui-pool-[name]
```

fsmStFailFcpoolOuisDeploy:Remote

Fault Code: F18406

Message: [FSM:STAGE:FAILED|RETRY]: Deploy OUI to Remote Fabric-Interconnect(FSM-STAGE:sam:dme:FcpoolOuisDeploy:Remote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: remote-failed
mibFaultCode: F18406
mibFaultName: fsmStFailFcpoolOuisDeployRemote
moClass: fcpool:Ouis
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/oui-pool-[name]
```

fsmStFailMgmtControllerUpdateSecureFPGA:ActivateLocal

Fault Code: F18410

Message: [FSM:STAGE:FAILED|RETRY]: Activating Secure FPGA on Local FI(FSM-STAGE:sam:dme:MgmtControllerUpdateSecureFPGA:ActivateLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-local-failed
mibFaultCode: F18410
mibFaultName: fsmStFailMgmtControllerUpdateSecureFPGAActivateLocal
moClass: mgmt:Controller
```

Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt

Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateSecureFPGA:ActivateRemote

Fault Code: F18410

Message: [FSM:STAGE:FAILED|RETRY]: Activating Secure FPGA on Remote FI(FSM-STAGE:sam:dme:MgmtControllerUpdateSecureFPGA:ActivateRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: activate-remote-failed
mibFaultCode: F18410
mibFaultName: fsmStFailMgmtControllerUpdateSecureFPGAActivateRemote
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailMgmtControllerUpdateSecureFPGA:PollActivate

Fault Code: F18410

Message: [FSM:STAGE:FAILED|RETRY]: Updating the FPGA Status after reboot(FSM-STAGE:sam:dme:MgmtControllerUpdateSecureFPGA:PollActivate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-activate-failed
mibFaultCode: F18410
mibFaultName: fsmStFailMgmtControllerUpdateSecureFPGAPollActivate
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmStFailPfcWatchDogConfigPfcWatchDog:SetLocal

Fault Code: F18411

Message: [FSM:STAGE:FAILED|RETRY]: Global PFC Watch Dog configuration on primary(FSM-STAGE:sam:dme:PfcWatchDogConfigPfcWatchDog:SetLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-local-failed
mibFaultCode: F18411
mibFaultName: fsmStFailPfcWatchDogConfigPfcWatchDogSetLocal
moClass: pfc:WatchDog
Type: fsm
autoCleared: true
Affected MO: fabric/lan/watch-dog
```

fsmStFailPfcWatchDogConfigPfcWatchDog:SetPeer

Fault Code: F18411

Message: [FSM:STAGE:FAILED|RETRY]: Global PFC Watch Dog configuration on secondary(FSM-STAGE:sam:dme:PfcWatchDogConfigPfcWatchDog:SetPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-peer-failed
mibFaultCode: F18411
mibFaultName: fsmStFailPfcWatchDogConfigPfcWatchDogSetPeer
moClass: pfc:WatchDog
Type: fsm
autoCleared: true
Affected MO: fabric/lan/watch-dog
```

fsmStFailMgmtControllerConfigureSwPersonalities:Execute

Fault Code: F18427

Message: [FSM:STAGE:FAILED|RETRY]: Configuring Software Personality Name(FSM-STAGE:sam:dme:MgmtControllerConfigureSwPersonalities:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: F18427
mibFaultName: fsmStFailMgmtControllerConfigureSwPersonalitiesExecute
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt

```
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt
```

fsmStFailComputePhysicalConfigureServerPersonality:Execute

Fault Code: F18428

Message: [FSM:STAGE:FAILED|RETRY]: Configuring Server Personality(FSM-STAGE:sam:dme:ComputePhysicalConfigureServerPersonality:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F18428
mibFaultName: fsmStFailComputePhysicalConfigureServerPersonalityExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalBiosPasswordReset:BladePowerOn

Fault Code: F18431

Message: [FSM:STAGE:FAILED|RETRY]: Power on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalBiosPasswordReset:BladePowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: blade-power-on-failed
mibFaultCode: F18431
mibFaultName: fsmStFailComputePhysicalBiosPasswordResetBladePowerOn
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

```
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalBiosPasswordReset:CheckPowerAvailability

Fault Code: F18431

Message: [FSM:STAGE:FAILED|RETRY]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalBiosPasswordReset:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F18431
mibFaultName: fsmStFailComputePhysicalBiosPasswordResetCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalBiosPasswordReset:Execute

Fault Code: F18431

Message: [FSM:STAGE:FAILED|RETRY]: Resetting BIOS Password for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalBiosPasswordReset:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F18431
mibFaultName: fsmStFailComputePhysicalBiosPasswordResetExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalBiosPasswordReset:PowerDeployWait

Fault Code: F18431

Message: [FSM:STAGE:FAILED|RETRY]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalBiosPasswordReset:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F18431
mibFaultName: fsmStFailComputePhysicalBiosPasswordResetPowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalBiosPasswordReset:PreSanitize

Fault Code: F18431

Message: [FSM:STAGE:FAILED|RETRY]: Preparing to check hardware configuration server [serverId](FSM-STAGE:sam:dme:ComputePhysicalBiosPasswordReset:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F18431
mibFaultName: fsmStFailComputePhysicalBiosPasswordResetPreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalBiosPasswordReset:ReconfigBios

Fault Code: F18431

Message: [FSM:STAGE:FAILED|RETRY]: Reconfiguring BIOS Settings and Boot Order of server [serverId] for service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalBiosPasswordReset:ReconfigBios)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: reconfig-bios-failed
mibFaultCode: F18431
mibFaultName: fsmStFailComputePhysicalBiosPasswordResetReconfigBios
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalBiosPasswordReset:ReconfigUuid

Fault Code: F18431

Message: [FSM:STAGE:FAILED|RETRY]: Reconfiguring logical UUID of server [serverId] for service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalBiosPasswordReset:ReconfigUuid)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: reconfig-uuid-failed
mibFaultCode: F18431
mibFaultName: fsmStFailComputePhysicalBiosPasswordResetReconfigUuid
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalBiosPasswordReset:Sanitize

Fault Code: F18431

Message: [FSM:STAGE:FAILED|RETRY]: Checking hardware configuration server [serverId](FSM-STAGE:sam:dme:ComputePhysicalBiosPasswordReset:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F18431
mibFaultName: fsmStFailComputePhysicalBiosPasswordResetSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailComputePhysicalCimcSecurityUnconfig:KmipDelCert

Fault Code: F18432

Message: [FSM:STAGE:FAILED|RETRY]: Certificate Deletion on CIMC for KMIP(FSM-STAGE:sam:dme:ComputePhysicalCimcSecurityUnconfig:KmipDelCert)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: kmip-del-cert-failed
mibFaultCode: F18432
mibFaultName: fsmStFailComputePhysicalCimcSecurityUnconfigKmipDelCert
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmStFailEquipmentChassisPowerExtendedPolicyConfig:Execute

Fault Code: F18456

Message: [FSM:STAGE:FAILED|RETRY]: Deploying Power Extended policy changes on chassis [id](FSM-STAGE:sam:dme:EquipmentChassisPowerExtendedPolicyConfig:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: execute-failed
mibFaultCode: F18456
mibFaultName: fsmStFailEquipmentChassisPowerExtendedPolicyConfigExecute
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisRemoveChassis:CleanupVnicsLocal

Fault Code: F77847

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning up vnics for chassis [id] from primary(FSM-STAGE:sam:dme:EquipmentChassisRemoveChassis:CleanupVnicsLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cleanup-vnics-local-failed
mibFaultCode: F77847
mibFaultName: fsmRmtErrEquipmentChassisRemoveChassisCleanupVnicsLocal
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisRemoveChassis:CleanupVnicsPeer

Fault Code: F77847

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning up vnics for chassis [id] from secondary(FSM-STAGE:sam:dme:EquipmentChassisRemoveChassis:CleanupVnicsPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cleanup-vnics-peer-failed
mibFaultCode: F77847
mibFaultName: fsmRmtErrEquipmentChassisRemoveChassisCleanupVnicsPeer
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisRemoveChassis:DisableEndPoint

Fault Code: F77847

Message: [FSM:STAGE:REMOTE-ERROR]: unconfiguring access to chassis [id](FSM-STAGE:sam:dme:EquipmentChassisRemoveChassis:DisableEndPoint)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: disable-end-point-failed
mibFaultCode: F77847
mibFaultName: fsmRmtErrEquipmentChassisRemoveChassisDisableEndPoint
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisRemoveChassis:UnIdentifyLocal

Fault Code: F77847

Message: [FSM:STAGE:REMOTE-ERROR]: erasing chassis identity [id] from primary(FSM-STAGE:sam:dme:EquipmentChassisRemoveChassis:UnIdentifyLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: un-identify-local-failed
mibFaultCode: F77847
mibFaultName: fsmRmtErrEquipmentChassisRemoveChassisUnIdentifyLocal
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisRemoveChassis:UnIdentifyPeer

Fault Code: F77847

Message: [FSM:STAGE:REMOTE-ERROR]: erasing chassis identity [id] from secondary(FSM-STAGE:sam:dme:EquipmentChassisRemoveChassis:UnIdentifyPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: un-identify-peer-failed
mibFaultCode: F77847
mibFaultName: fsmRmtErrEquipmentChassisRemoveChassisUnIdentifyPeer
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisRemoveChassis:Wait

Fault Code: F77847

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for clean up of resources for chassis [id] (approx. 3 min)(FSM-STAGE:sam:dme:EquipmentChassisRemoveChassis:Wait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-failed
mibFaultCode: F77847
mibFaultName: fsmRmtErrEquipmentChassisRemoveChassisWait
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisRemoveChassis:decomission

Fault Code: F77847

Message: [FSM:STAGE:REMOTE-ERROR]: decommissioning chassis [id](FSM-STAGE:sam:dme:EquipmentChassisRemoveChassis:decomission)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: decomission-failed
mibFaultCode: F77847
```

mibFaultName: fsmRmtErrEquipmentChassisRemoveChassisDecomission
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]

fsmRmtErrEquipmentLocatorLedSetLocatorLed:Execute

Fault Code: F77848

Message: [FSM:STAGE:REMOTE-ERROR]: setting locator led to [adminState](FSM-STAGE:sam:dme:EquipmentLocatorLedSetLocatorLed:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: F77848
mibFaultName: fsmRmtErrEquipmentLocatorLedSetLocatorLedExecute
moClass: equipment:LocatorLed
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/locator-led
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/locator-led
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/locator-led
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/chassis-[id]/locator-led
Affected MO: sys/chassis-[id]/psu-[id]/locator-led
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/chassis-[id]/slot-[id]/locator-led
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/fex-[id]/locator-led
Affected MO: sys/fex-[id]/psu-[id]/locator-led
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/fex-[id]/slot-[id]/locator-led
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/rack-enclosure-[id]/psu-[id]/locator-led
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led

Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/rack-unit-[id]/ext-board-[id]/locator-led
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/rack-unit-[id]/locator-led
Affected MO: sys/rack-unit-[id]/psu-[id]/locator-led
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/switch-[id]/locator-led
Affected MO: sys/switch-[id]/psu-[id]/locator-led

fsmRmtErrMgmtControllerExtMgmtIfConfig:Primary

Fault Code: F77958

Message: [FSM:STAGE:REMOTE-ERROR]: external mgmt interface configuration on primary(FSM-STAGE:sam:dme:MgmtControllerExtMgmtIfConfig:Primary)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: primary-failed
mibFaultCode: F77958
mibFaultName: fsmRmtErrMgmtControllerExtMgmtIfConfigPrimary
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerExtMgmtIfConfig:Secondary

Fault Code: F77958

Message: [FSM:STAGE:REMOTE-ERROR]: external mgmt interface configuration on secondary(FSM-STAGE:sam:dme:MgmtControllerExtMgmtIfConfig:Secondary)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: secondary-failed
mibFaultCode: F77958
mibFaultName: fsmRmtErrMgmtControllerExtMgmtIfConfigSecondary
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrFabricComputeSlotEpIdentify:ExecuteLocal

Fault Code: F77959

Message: [FSM:STAGE:REMOTE-ERROR]: identifying a server in [chassisId]/[slotId] via CIMC(FSM-STAGE:sam:dme:FabricComputeSlotEpIdentify:ExecuteLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-local-failed
mibFaultCode: F77959
mibFaultName: fsmRmtErrFabricComputeSlotEpIdentifyExecuteLocal
moClass: fabric:ComputeSlotEp
Type: fsm
autoCleared: true
Affected MO: fabric/server/chassis-[chassisId]/slot-[slotId]
```

fsmRmtErrFabricComputeSlotEpIdentify:ExecutePeer

Fault Code: F77959

Message: [FSM:STAGE:REMOTE-ERROR]: identifying a server in [chassisId]/[slotId] via CIMC(FSM-STAGE:sam:dme:FabricComputeSlotEpIdentify:ExecutePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-peer-failed
mibFaultCode: F77959
mibFaultName: fsmRmtErrFabricComputeSlotEpIdentifyExecutePeer
moClass: fabric:ComputeSlotEp
Type: fsm
autoCleared: true
Affected MO: fabric/server/chassis-[chassisId]/slot-[slotId]
```

fsmRmtErrComputeBladeDiscover:BiosPostCompletion

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for BIOS POST completion from CIMC on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:BiosPostCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverBiosPostCompletion
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:BladeBootPnuos

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: power server [chassisId]/[slotId] on with pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:BladeBootPnuos)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: blade-boot-pnuos-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverBladeBootPnuos
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:BladeBootWait

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for system reset on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:BladeBootWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: blade-boot-wait-failed
mibFaultCode: F77960
```

```
mibFaultName: fsmRmtErrComputeBladeDiscoverBladeBootWait
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:BladePowerOn

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: power on server [chassisId]/[slotId] for discovery(FSM-STAGE:sam:dme:ComputeBladeDiscover:BladePowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: blade-power-on-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverBladePowerOn
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:BladeReadSmbios

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for SMBIOS table from CIMC on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:BladeReadSmbios)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: blade-read-smbios-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverBladeReadSmbios
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:BmcConfigPnuOS

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: provisioning a bootable device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputeBladeDiscover:BmcConfigPnuOS)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-config-pnuos-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverBmcConfigPnuOS
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:BmcFactoryReset

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: performing factory reset of server [chassisId]/[slotId] via CIMC(FSM-STAGE:sam:dme:ComputeBladeDiscover:BmcFactoryReset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-factory-reset-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverBmcFactoryReset
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:BmcInventory

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: getting inventory of server [chassisId]/[slotId] via CIMC(FSM-STAGE:sam:dme:ComputeBladeDiscover:BmcInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-inventory-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverBmcInventory
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:BmcPreConfigPnuOSLocal

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:BmcPreConfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-pre-config-pnuoslocal-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverBmcPreConfigPnuOSLocal
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:BmcPreConfigPnuOSPeer

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:BmcPreConfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-pre-config-pnuospeer-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverBmcPreConfigPnuOSPeer
moClass: compute:Blade
Type: fsm
```

```
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:BmcPresence

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: checking CIMC of server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:BmcPresence)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-presence-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverBmcPresence
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:BmcShutdownDiscovered

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Shutdown the server [chassisId]/[slotId]; deep discovery completed(FSM-STAGE:sam:dme:ComputeBladeDiscover:BmcShutdownDiscovered)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-shutdown-discovered-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverBmcShutdownDiscovered
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:CheckAdaptorFw40GCap

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: checking if adaptor firmware supports 40G speed to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:CheckAdaptorFw40GCap)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-adaptor-fw40gcap-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverCheckAdaptorFw40GCap
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:CheckPowerAvailability

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Check if power can be allocated to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverCheckPowerAvailability
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:ConfigBMCPowerParams

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring power profiling parameters for server [chassisId]/[slotId] via CIMC(FSM-STAGE:sam:dme:ComputeBladeDiscover:ConfigBMCPowerParams)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: configbmcpower-params-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverConfigBMCPowerParams
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:ConfigFeLocal

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: configuring primary fabric interconnect access to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:ConfigFeLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-fe-local-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverConfigFeLocal
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:ConfigFePeer

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: configuring secondary fabric interconnect access to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:ConfigFePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-fe-peer-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverConfigFePeer
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:ConfigFlexFlashScrub

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring FlexFlash Scrub on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:ConfigFlexFlashScrub)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-flex-flash-scrub-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverConfigFlexFlashScrub
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:ConfigUserAccess

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: configuring external user access to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:ConfigUserAccess)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-user-access-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverConfigUserAccess
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:FruComponentInventory

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Fru Component Inventory in [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:FruComponentInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: fru-component-inventory-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverFruComponentInventory
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:HandlePooling

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Invoke post-discovery policies on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:HandlePooling)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: handle-pooling-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverHandlePooling
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:NicConfigPnuOSLocal

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: configure primary adapter in [chassisId]/[slotId] for pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:NicConfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-pnuoslocal-failed
mibFaultCode: F77960
```

```
mibFaultName: fsmRmtErrComputeBladeDiscoverNicConfigPnuOSLocal
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:NicConfigPnuOSPeer

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: configure secondary adapter in [chassisId]/[slotId] for pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:NicConfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-pnuospeer-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverNicConfigPnuOSPeer
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:NicPresenceLocal

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: detect mezz cards in [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:NicPresenceLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-presence-local-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverNicPresenceLocal
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:NicPresencePeer

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: detect mezz cards in [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:NicPresencePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-presence-peer-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverNicPresencePeer
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:NicUnconfigPnuOSLocal

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure adapter of server [chassisId]/[slotId] pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:NicUnconfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-unconfig-pnuoslocal-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverNicUnconfigPnuOSLocal
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:NicUnconfigPnuOSPeer

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure adapter of server [chassisId]/[slotId] pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:NicUnconfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-unconfig-pnuospeer-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverNicUnconfigPnuOSPeer
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:OobStorageInventory

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Perform oob storage inventory of server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:OobStorageInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-storage-inventory-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverOobStorageInventory
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:PnuOSCatalog

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Populate pre-boot catalog to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:PnuOSCatalog)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuoscatalog-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverPnuOSCatalog
moClass: compute:Blade
Type: fsm
```

```
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:PnuOSIdent

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Identify pre-boot environment agent on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:PnuOSIdent)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosident-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverPnuOSIdent
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:PnuOSInventory

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Perform inventory of server [chassisId]/[slotId] pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:PnuOSInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosinventory-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverPnuOSInventory
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:PnuOSPolicy

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Populate pre-boot environment behavior policy to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:PnuOSPolicy)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuospolicy-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverPnuOSPolicy
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:PnuOSPowerProfiling

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Profile power for server [chassisId]/[slotId] by running benchmark(FSM-STAGE:sam:dme:ComputeBladeDiscover:PnuOSPowerProfiling)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuospower-profiling-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverPnuOSPowerProfiling
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:PnuOSScrub

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Scrub server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:PnuOSScrub)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosscrub-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverPnuOSScrub
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:PnuOSSelfTest

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Trigger self-test of server [chassisId]/[slotId] pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:PnuOSSelfTest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosself-test-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverPnuOSSelfTest
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:PostScrubOobStorageInventory

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Perform post scrub oob storage inventory of server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:PostScrubOobStorageInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: post-scrub-oob-storage-inventory-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverPostScrubOobStorageInventory
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:PowerDeployWait

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for power allocation to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverPowerDeployWait
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:PreSanitize

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverPreSanitize
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:Sanitize

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverSanitize
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:SendBmcProfilingDone

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for valid power profile for server [chassisId]/[slotId] from CIMC(FSM-STAGE:sam:dme:ComputeBladeDiscover:SendBmcProfilingDone)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: send-bmc-profiling-done-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverSendBmcProfilingDone
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:SendBmcProfilingInit

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Start profiling power for server [chassisId]/[slotId] via CIMC(FSM-STAGE:sam:dme:ComputeBladeDiscover:SendBmcProfilingInit)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: send-bmc-profiling-init-failed
mibFaultCode: F77960
```

```
mibFaultName: fsmRmtErrComputeBladeDiscoverSendBmcProfilingInit
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:SetupVmediaLocal

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: provisioning a Virtual Media device with a bootable pre-boot image for blade [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:SetupVmediaLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: setup-vmedia-local-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverSetupVmediaLocal
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:SetupVmediaPeer

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: provisioning a Virtual Media device with a bootable pre-boot image for blade [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:SetupVmediaPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: setup-vmedia-peer-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverSetupVmediaPeer
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:SharedComponentsOobInventory

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Inventory of shared components in SIOC(FSM-STAGE:sam:dme:ComputeBladeDiscover:SharedComponentsOobInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: shared-components-oob-inventory-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverSharedComponentsOobInventory
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:SharedComponentsOobInventoryPeer

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Inventory of shared components in peer SIOC(FSM-STAGE:sam:dme:ComputeBladeDiscover:SharedComponentsOobInventoryPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: shared-components-oob-inventory-peer-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverSharedComponentsOobInventoryPeer
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:SolRedirectDisable

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Disable Sol Redirection on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:SolRedirectDisable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sol-redirect-disable-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverSolRedirectDisable
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:SolRedirectEnable

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: set up bios token on server [chassisId]/[slotId] for Sol redirect(FSM-STAGE:sam:dme:ComputeBladeDiscover:SolRedirectEnable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sol-redirect-enable-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverSolRedirectEnable
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:SwConfigPnuOSLocal

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: configure primary fabric interconnect in [chassisId]/[slotId] for pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:SwConfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-pnuoslocal-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverSwConfigPnuOSLocal
moClass: compute:Blade
Type: fsm
```

```
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:SwConfigPnuOSPeer

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: configure secondary fabric interconnect in [chassisId]/[slotId] for pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:SwConfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-pnuospeer-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverSwConfigPnuOSPeer
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:SwUnconfigPnuOSLocal

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure primary fabric interconnect for server [chassisId]/[slotId] pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:SwUnconfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfig-pnuoslocal-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverSwUnconfigPnuOSLocal
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:SwUnconfigPnuOSPeer

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure secondary fabric interconnect for server [chassisId]/[slotId] pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:SwUnconfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfig-pnuospeer-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverSwUnconfigPnuOSPeer
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:TeardownVmediaLocal

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: unprovisioning the Virtual Media bootable device for blade [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:TeardownVmediaLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: teardown-vmedia-local-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverTeardownVmediaLocal
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:TeardownVmediaPeer

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: unprovisioning the Virtual media bootable device for blade [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:TeardownVmediaPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: teardown-vmedia-peer-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverTeardownVmediaPeer
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:UnconfigCimcVMedia

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning all mappings for vmedia(FSM-STAGE:sam:dme:ComputeBladeDiscover:UnconfigCimcVMedia)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-cimcvmedia-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverUnconfigCimcVMedia
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:UnconfigExtMgmtGw

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning all ext mgmt bmc gateway for vmedia(FSM-STAGE:sam:dme:ComputeBladeDiscover:UnconfigExtMgmtGw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-ext-mgmt-gw-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverUnconfigExtMgmtGw
moClass: compute:Blade
```

```
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:UnconfigExtMgmtRules

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning all ext mgmt rules for vmedia(FSM-STAGE:sam:dme:ComputeBladeDiscover:UnconfigExtMgmtRules)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-ext-mgmt-rules-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverUnconfigExtMgmtRules
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:hagConnect

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Connect to pre-boot environment agent on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:hagConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-connect-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverHagConnect
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:hagDisconnect

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Disconnect pre-boot environment agent for server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:hagDisconnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-disconnect-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverHagDisconnect
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:serialDebugConnect

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Connect to pre-boot environment agent on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:serialDebugConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: serial-debug-connect-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverSerialDebugConnect
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrComputeBladeDiscover:serialDebugDisconnect

Fault Code: F77960

Message: [FSM:STAGE:REMOTE-ERROR]: Disconnect pre-boot environment agent for server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:serialDebugDisconnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: serial-debug-disconnect-failed
mibFaultCode: F77960
mibFaultName: fsmRmtErrComputeBladeDiscoverSerialDebugDisconnect
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmRmtErrEquipmentChassisPsuPolicyConfig:Execute

Fault Code: F77973

Message: [FSM:STAGE:REMOTE-ERROR]: Deploying Power Management policy changes on chassis [id](FSM-STAGE:sam:dme:EquipmentChassisPsuPolicyConfig:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F77973
mibFaultName: fsmRmtErrEquipmentChassisPsuPolicyConfigExecute
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrAdaptorHostFcIfResetFcPersBinding:ExecuteLocal

Fault Code: F77974

Message: [FSM:STAGE:REMOTE-ERROR]: Resetting FC persistent bindings on host interface [dn](FSM-STAGE:sam:dme:AdaptorHostFcIfResetFcPersBinding:ExecuteLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-local-failed
mibFaultCode: F77974
mibFaultName: fsmRmtErrAdaptorHostFcIfResetFcPersBindingExecuteLocal
moClass: adaptor:HostFcIf
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]
```

fsmRmtErrAdaptorHostFcIfResetFcPersBinding:ExecutePeer

Fault Code: F77974

Message: [FSM:STAGE:REMOTE-ERROR]: Resetting FC persistent bindings on host interface [dn](FSM-STAGE:sam:dme:AdaptorHostFcIfResetFcPersBinding:ExecutePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-peer-failed
mibFaultCode: F77974
mibFaultName: fsmRmtErrAdaptorHostFcIfResetFcPersBindingExecutePeer
moClass: adaptor:HostFcIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]
```

fsmRmtErrFabricLanCloudSwitchMode:SwConfigLocal

Fault Code: F77979

Message: [FSM:STAGE:REMOTE-ERROR]: Fabric interconnect mode configuration to primary(FSM-STAGE:sam:dme:FabricLanCloudSwitchMode:SwConfigLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-local-failed
mibFaultCode: F77979
mibFaultName: fsmRmtErrFabricLanCloudSwitchModeSwConfigLocal
moClass: fabric:LanCloud
Type: fsm
autoCleared: true
Affected MO: fabric/lan
```

fsmRmtErrFabricLanCloudSwitchMode:SwConfigPeer

Fault Code: F77979

Message: [FSM:STAGE:REMOTE-ERROR]: Fabric interconnect mode configuration to secondary(FSM-STAGE:sam:dme:FabricLanCloudSwitchMode:SwConfigPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-peer-failed
mibFaultCode: F77979
mibFaultName: fsmRmtErrFabricLanCloudSwitchModeSwConfigPeer
moClass: fabric:LanCloud
Type: fsm
autoCleared: true
Affected MO: fabric/lan
```

fsmRmtErrFabricLanCloudSwitchMode:WaitForUserAck

Fault Code: F77979

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for User Acknowledgment to configuration on primary(FSM-STAGE:sam:dme:FabricLanCloudSwitchMode:WaitForUserAck)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-user-ack-failed
mibFaultCode: F77979
mibFaultName: fsmRmtErrFabricLanCloudSwitchModeWaitForUserAck
moClass: fabric:LanCloud
Type: fsm
autoCleared: true
Affected MO: fabric/lan
```

fsmRmtErrVnicProfileSetDeploy:Local

Fault Code: F77990

Message: [FSM:STAGE:REMOTE-ERROR]: VNIC profile configuration on local fabric(FSM-STAGE:sam:dme:VnicProfileSetDeploy:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F77990
mibFaultName: fsmRmtErrVnicProfileSetDeployLocal
moClass: vnic:ProfileSet
Type: fsm
autoCleared: true
Affected MO: fabric/lan/profiles
```

fsmRmtErrVnicProfileSetDeploy:Peer

Fault Code: F77990

Message: [FSM:STAGE:REMOTE-ERROR]: VNIC profile configuration on peer fabric(FSM-STAGE:sam:dme:VnicProfileSetDeploy:Peer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: peer-failed
mibFaultCode: F77990
mibFaultName: fsmRmtErrVnicProfileSetDeployPeer
moClass: vnic:ProfileSet
Type: fsm
autoCleared: true
Affected MO: fabric/lan/profiles
```

fsmRmtErrCommSvcEpUpdateSvcEp:InitIptablesLocal

Fault Code: F78016

Message: [FSM:STAGE:REMOTE-ERROR]: initialising iptables on primary(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:InitIptablesLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: init-iptables-local-failed
mibFaultCode: F78016
```

```
mibFaultName: fsmRmtErrCommSvcEpUpdateSvcEpInitIptablesLocal
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmRmtErrCommSvcEpUpdateSvcEp:InitIptablesPeer

Fault Code: F78016

Message: [FSM:STAGE:REMOTE-ERROR]: initialising iptables on secondary(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:InitIptablesPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: init-iptables-peer-failed
mibFaultCode: F78016
mibFaultName: fsmRmtErrCommSvcEpUpdateSvcEpInitIptablesPeer
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmRmtErrCommSvcEpUpdateSvcEp:PropogateEpSettings

Fault Code: F78016

Message: [FSM:STAGE:REMOTE-ERROR]: propagate updated settings (eg. timezone)(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpSettings)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: propogate-ep-settings-failed
mibFaultCode: F78016
mibFaultName: fsmRmtErrCommSvcEpUpdateSvcEpPropogateEpSettings
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmRmtErrCommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsLocal

Fault Code: F78016

Message: [FSM:STAGE:REMOTE-ERROR]: propagate updated timezone settings to management controllers.(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: propogate-ep-time-zone-settings-local-failed
mibFaultCode: F78016
mibFaultName: fsmRmtErrCommSvcEpUpdateSvcEpPropogateEpTimeZoneSettingsLocal
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmRmtErrCommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsPeer

Fault Code: F78016

Message: [FSM:STAGE:REMOTE-ERROR]: propagate updated timezone settings to management controllers.(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: propogate-ep-time-zone-settings-peer-failed
mibFaultCode: F78016
mibFaultName: fsmRmtErrCommSvcEpUpdateSvcEpPropogateEpTimeZoneSettingsPeer
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmRmtErrCommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToAdaptorsLocal

Fault Code: F78016

Message: [FSM:STAGE:REMOTE-ERROR]: propagate updated timezone settings to NICs.(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToAdaptorsLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: propogate-ep-time-zone-settings-to-adaptors-local-failed
mibFaultCode: F78016
mibFaultName: fsmRmtErrCommSvcEpUpdateSvcEpPropogateEpTimeZoneSettingsToAdaptorsLocal
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmRmtErrCommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToAdaptorsPeer

Fault Code: F78016

Message: [FSM:STAGE:REMOTE-ERROR]: propagate updated timezone settings to NICs.(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToAdaptorsPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: propogate-ep-time-zone-settings-to-adaptors-peer-failed
mibFaultCode: F78016
mibFaultName: fsmRmtErrCommSvcEpUpdateSvcEpPropogateEpTimeZoneSettingsToAdaptorsPeer
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmRmtErrCommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToFexIomLocal

Fault Code: F78016

Message: [FSM:STAGE:REMOTE-ERROR]: propagate updated timezone settings to FEXs and IOMs.(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToFexIomLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: propogate-ep-time-zone-settings-to-fex-iom-local-failed
mibFaultCode: F78016
mibFaultName: fsmRmtErrCommSvcEpUpdateSvcEpPropogateEpTimeZoneSettingsToFexIomLocal
moClass: comm:SvcEp
Type: fsm
```

```
autoCleared: true
Affected MO: sys/svc-ext
```

fsmRmtErrCommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToFexIomPeer

Fault Code: F78016

Message: [FSM:STAGE:REMOTE-ERROR]: propagate updated timezone settings to FEXs and IOMs.(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToFexIomPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: propogate-ep-time-zone-settings-to-fex-iom-peer-failed
mibFaultCode: F78016
mibFaultName: fsmRmtErrCommSvcEpUpdateSvcEpPropogateEpTimeZoneSettingsToFexIomPeer
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmRmtErrCommSvcEpUpdateSvcEp:SetEpLocal

Fault Code: F78016

Message: [FSM:STAGE:REMOTE-ERROR]: communication service [name] configuration to primary(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:SetEpLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-ep-local-failed
mibFaultCode: F78016
mibFaultName: fsmRmtErrCommSvcEpUpdateSvcEpSetEpLocal
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmRmtErrCommSvcEpUpdateSvcEp:SetEpPeer

Fault Code: F78016

Message: [FSM:STAGE:REMOTE-ERROR]: communication service [name] configuration to secondary(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:SetEpPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-ep-peer-failed
mibFaultCode: F78016
mibFaultName: fsmRmtErrCommSvcEpUpdateSvcEpSetEpPeer
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmRmtErrCommSvcEpRestartWebSvc:local

Fault Code: F78017

Message: [FSM:STAGE:REMOTE-ERROR]: restart web services in primary(FSM-STAGE:sam:dme:CommSvcEpRestartWebSvc:local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F78017
mibFaultName: fsmRmtErrCommSvcEpRestartWebSvcLocal
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmRmtErrCommSvcEpRestartWebSvc:peer

Fault Code: F78017

Message: [FSM:STAGE:REMOTE-ERROR]: restart web services in secondary(FSM-STAGE:sam:dme:CommSvcEpRestartWebSvc:peer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: peer-failed
mibFaultCode: F78017
mibFaultName: fsmRmtErrCommSvcEpRestartWebSvcPeer
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmRmtErrAaaEpUpdateEp:SetEpLocal

Fault Code: F78019

Message: [FSM:STAGE:REMOTE-ERROR]: external aaa server configuration to primary(FSM-STAGE:sam:dme:AaaEpUpdateEp:SetEpLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-ep-local-failed
mibFaultCode: F78019
mibFaultName: fsmRmtErrAaaEpUpdateEpSetEpLocal
moClass: aaa:Ep
Type: fsm
autoCleared: true
Affected MO: sys/ldap-ext
Affected MO: sys/radius-ext
Affected MO: sys/tacacs-ext
```

fsmRmtErrAaaEpUpdateEp:SetEpPeer

Fault Code: F78019

Message: [FSM:STAGE:REMOTE-ERROR]: external aaa server configuration to secondary(FSM-STAGE:sam:dme:AaaEpUpdateEp:SetEpPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-ep-peer-failed
mibFaultCode: F78019
mibFaultName: fsmRmtErrAaaEpUpdateEpSetEpPeer
moClass: aaa:Ep
Type: fsm
autoCleared: true
```

```
Affected MO: sys/ldap-ext
Affected MO: sys/radius-ext
Affected MO: sys/tacacs-ext
```

fsmRmtErrAaaRealmUpdateRealm:SetRealmLocal

Fault Code: F78020

Message: [FSM:STAGE:REMOTE-ERROR]: realm configuration to primary(FSM-STAGE:sam:dme:AaaRealmUpdateRealm:SetRealmLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-realm-local-failed
mibFaultCode: F78020
mibFaultName: fsmRmtErrAaaRealmUpdateRealmSetRealmLocal
moClass: aaa:Realm
Type: fsm
autoCleared: true
Affected MO: sys/auth-realm
```

fsmRmtErrAaaRealmUpdateRealm:SetRealmPeer

Fault Code: F78020

Message: [FSM:STAGE:REMOTE-ERROR]: realm configuration to secondary(FSM-STAGE:sam:dme:AaaRealmUpdateRealm:SetRealmPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-realm-peer-failed
mibFaultCode: F78020
mibFaultName: fsmRmtErrAaaRealmUpdateRealmSetRealmPeer
moClass: aaa:Realm
Type: fsm
autoCleared: true
Affected MO: sys/auth-realm
```

fsmRmtErrAaaUserEpUpdateUserEp:SetUserLocal

Fault Code: F78021

Message: [FSM:STAGE:REMOTE-ERROR]: user configuration to primary(FSM-STAGE:sam:dme:AaaUserEpUpdateUserEp:SetUserLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-user-local-failed
mibFaultCode: F78021
mibFaultName: fsmRmtErrAaaUserEpUpdateUserEpSetUserLocal
moClass: aaa:UserEp
Type: fsm
autoCleared: true
Affected MO: sys/user-ext
```

fsmRmtErrAaaUserEpUpdateUserEp:SetUserPeer

Fault Code: F78021

Message: [FSM:STAGE:REMOTE-ERROR]: user configuration to secondary(FSM-STAGE:sam:dme:AaaUserEpUpdateUserEp:SetUserPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-user-peer-failed
mibFaultCode: F78021
mibFaultName: fsmRmtErrAaaUserEpUpdateUserEpSetUserPeer
moClass: aaa:UserEp
Type: fsm
autoCleared: true
Affected MO: sys/user-ext
```

fsmRmtErrPkiEpUpdateEp:PostSetKeyRingLocal

Fault Code: F78022

Message: [FSM:STAGE:REMOTE-ERROR]: post processing after keyring configuration on primary(FSM-STAGE:sam:dme:PkiEpUpdateEp:PostSetKeyRingLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: post-set-key-ring-local-failed
mibFaultCode: F78022
mibFaultName: fsmRmtErrPkiEpUpdateEpPostSetKeyRingLocal
moClass: pki:Ep
Type: fsm
autoCleared: true
Affected MO: sys/pki-ext
```

fsmRmtErrPkiEpUpdateEp:PostSetKeyRingPeer

Fault Code: F78022

Message: [FSM:STAGE:REMOTE-ERROR]: post processing after keyring configuration on secondary(FSM-STAGE:sam:dme:PkiEpUpdateEp:PostSetKeyRingPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: post-set-key-ring-peer-failed
mibFaultCode: F78022
mibFaultName: fsmRmtErrPkiEpUpdateEpPostSetKeyRingPeer
moClass: pki:Ep
Type: fsm
autoCleared: true
Affected MO: sys/pki-ext
```

fsmRmtErrPkiEpUpdateEp:SetKeyRingLocal

Fault Code: F78022

Message: [FSM:STAGE:REMOTE-ERROR]: keyring configuration on primary(FSM-STAGE:sam:dme:PkiEpUpdateEp:SetKeyRingLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-key-ring-local-failed
mibFaultCode: F78022
mibFaultName: fsmRmtErrPkiEpUpdateEpSetKeyRingLocal
moClass: pki:Ep
Type: fsm
```

```
autoCleared: true
Affected MO: sys/pki-ext
```

fsmRmtErrPkiEpUpdateEp:SetKeyRingPeer

Fault Code: F78022

Message: [FSM:STAGE:REMOTE-ERROR]: keyring configuration on secondary(FSM-STAGE:sam:dme:PkiEpUpdateEp:SetKeyRingPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-key-ring-peer-failed
mibFaultCode: F78022
mibFaultName: fsmRmtErrPkiEpUpdateEpSetKeyRingPeer
moClass: pki:Ep
Type: fsm
autoCleared: true
Affected MO: sys/pki-ext
```

fsmRmtErrSysfileMutationSingle:Execute

Fault Code: F78040

Message: [FSM:STAGE:REMOTE-ERROR]: [action] file [name](FSM-STAGE:sam:dme:SysfileMutationSingle:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78040
mibFaultName: fsmRmtErrSysfileMutationSingleExecute
moClass: sysfile:Mutation
Type: fsm
autoCleared: true
Affected MO: sys/corefiles/file-[name]|[switchId]/mutation
Affected MO: sys/corefiles/mutation
```

fsmRmtErrSysfileMutationGlobal:Local

Fault Code: F78041

Message: [FSM:STAGE:REMOTE-ERROR]: remove files from local(FSM-STAGE:sam:dme:SysfileMutationGlobal:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F78041
mibFaultName: fsmRmtErrSysfileMutationGlobalLocal
moClass: sysfile:Mutation
Type: fsm
autoCleared: true
Affected MO: sys/corefiles/file-[name]|[switchId]/mutation
Affected MO: sys/corefiles/mutation
```

fsmRmtErrSysfileMutationGlobal:Peer

Fault Code: F78041

Message: [FSM:STAGE:REMOTE-ERROR]: remove files from peer(FSM-STAGE:sam:dme:SysfileMutationGlobal:Peer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: peer-failed
mibFaultCode: F78041
mibFaultName: fsmRmtErrSysfileMutationGlobalPeer
moClass: sysfile:Mutation
Type: fsm
autoCleared: true
Affected MO: sys/corefiles/file-[name]|[switchId]/mutation
Affected MO: sys/corefiles/mutation
```

fsmRmtErrSysdebugManualCoreFileExportTargetExport:Execute

Fault Code: F78044

Message: [FSM:STAGE:REMOTE-ERROR]: export core file [name] to [hostname](FSM-STAGE:sam:dme:SysdebugManualCoreFileExportTargetExport:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78044
mibFaultName: fsmRmtErrSysdebugManualCoreFileExportTargetExportExecute
moClass: sysdebug:ManualCoreFileExportTarget
Type: fsm
autoCleared: true
Affected MO: sys/corefiles/file-[name]|[switchId]/export-to-[hostname]
```

fsmRmtErrSysdebugAutoCoreFileExportTargetConfigure:Local

Fault Code: F78045

Message: [FSM:STAGE:REMOTE-ERROR]: configuring automatic core file export service on local(FSM-STAGE:sam:dme:SysdebugAutoCoreFileExportTargetConfigure:Local)

Explanation: Cisco UCS Manager could not set the configurations in the primary Fabric Interconnect for auto core transfer to remote TFTP server.

Recommended Action: If you see this fault, take the following actions:

1. Execute the show tech-support command and contact Cisco Technical Support.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F78045
mibFaultName: fsmRmtErrSysdebugAutoCoreFileExportTargetConfigureLocal
moClass: sysdebug:AutoCoreFileExportTarget
Type: fsm
autoCleared: true
Affected MO: sys/sysdebug/file-export
```

fsmRmtErrSysdebugAutoCoreFileExportTargetConfigure:Peer

Fault Code: F78045

Message: [FSM:STAGE:REMOTE-ERROR]: configuring automatic core file export service on peer(FSM-STAGE:sam:dme:SysdebugAutoCoreFileExportTargetConfigure:Peer)

Explanation: Cisco UCS Manager could not set the configurations in the subordinate Fabric Interconnect (FI) for auto core transfer to remote TFTP server. This fault typically appears for one of the following reasons:

- The subordinate FI is not reachable.
- The subordinate FI is experiencing an internal system error on applying the configuration.

Recommended Action: If you see this fault, take the following actions:

1. Check the FI cluster state to ensure that the subordinate FI is reachable and functioning correctly. If the subordinate FI is down, take appropriate corrective actions so that the UCS cluster goes into HA ready state.

2. If the HA state of the primary and subordinate FIs are good, execute the show tech-support command and contact Cisco Technical Support.

Fault Details

```
Severity: warning
Cause: peer-failed
mibFaultCode: F78045
mibFaultName: fsmRmtErrSysdebugAutoCoreFileExportTargetConfigurePeer
moClass: sysdebug:AutoCoreFileExportTarget
Type: fsm
autoCleared: true
Affected MO: sys/sysdebug/file-export
```

fsmRmtErrSysdebugLogControlEpLogControlPersist:Local

Fault Code: F78046

Message: [FSM:STAGE:REMOTE-ERROR]: persisting LogControl on local(FSM-STAGE:sam:dme:SysdebugLogControlEpLogControlPersist:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F78046
mibFaultName: fsmRmtErrSysdebugLogControlEpLogControlPersistLocal
moClass: sysdebug:LogControlEp
Type: fsm
autoCleared: true
Affected MO: sys/sysdebug/logcontrol
```

fsmRmtErrSysdebugLogControlEpLogControlPersist:Peer

Fault Code: F78046

Message: [FSM:STAGE:REMOTE-ERROR]: persisting LogControl on peer(FSM-STAGE:sam:dme:SysdebugLogControlEpLogControlPersist:Peer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: peer-failed
mibFaultCode: F78046
```

```
mibFaultName: fsmRmtErrSysdebugLogControlEpLogControlPersistPeer
moClass: sysdebug:LogControlEp
Type: fsm
autoCleared: true
Affected MO: sys/sysdebug/logcontrol
```

fsmRmtErrSwAccessDomainDeploy:UpdateConnectivity

Fault Code: F78074

Message: [FSM:STAGE:REMOTE-ERROR]: internal network configuration on [switchId](FSM-STAGE:sam:dme:SwAccessDomainDeploy:UpdateConnectivity)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-connectivity-failed
mibFaultCode: F78074
mibFaultName: fsmRmtErrSwAccessDomainDeployUpdateConnectivity
moClass: sw:AccessDomain
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/access-eth
```

fsmRmtErrSwEthLanBorderDeploy:UpdateConnectivity

Fault Code: F78075

Message: [FSM:STAGE:REMOTE-ERROR]: Uplink eth port configuration on [switchId](FSM-STAGE:sam:dme:SwEthLanBorderDeploy:UpdateConnectivity)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-connectivity-failed
mibFaultCode: F78075
mibFaultName: fsmRmtErrSwEthLanBorderDeployUpdateConnectivity
moClass: sw:EthLanBorder
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/border-eth
```

fsmRmtErrSwEthLanBorderDeploy:UpdateVlanGroups

Fault Code: F78075

Message: [FSM:STAGE:REMOTE-ERROR]: VLAN group configuration on [switchId](FSM-STAGE:sam:dme:SwEthLanBorderDeploy:UpdateVlanGroups)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-vlan-groups-failed
mibFaultCode: F78075
mibFaultName: fsmRmtErrSwEthLanBorderDeployUpdateVlanGroups
moClass: sw:EthLanBorder
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/border-eth
```

fsmRmtErrSwEthLanBorderDeploy:WaitOnSwConfigHost

Fault Code: F78075

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting on applying switch configuration on host to complete(FSM-STAGE:sam:dme:SwEthLanBorderDeploy:WaitOnSwConfigHost)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-on-sw-config-host-failed
mibFaultCode: F78075
mibFaultName: fsmRmtErrSwEthLanBorderDeployWaitOnSwConfigHost
moClass: sw:EthLanBorder
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/border-eth
```

fsmRmtErrSwFcSanBorderDeploy:UpdateConnectivity

Fault Code: F78076

Message: [FSM:STAGE:REMOTE-ERROR]: Uplink fc port configuration on [switchId](FSM-STAGE:sam:dme:SwFcSanBorderDeploy:UpdateConnectivity)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-connectivity-failed
mibFaultCode: F78076
mibFaultName: fsmRmtErrSwFcSanBorderDeployUpdateConnectivity
moClass: sw:FcSanBorder
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/border-fc
```

fsmRmtErrSwUtilityDomainDeploy:UpdateConnectivity

Fault Code: F78077

Message: [FSM:STAGE:REMOTE-ERROR]: Utility network configuration on [switchId](FSM-STAGE:sam:dme:SwUtilityDomainDeploy:UpdateConnectivity)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-connectivity-failed
mibFaultCode: F78077
mibFaultName: fsmRmtErrSwUtilityDomainDeployUpdateConnectivity
moClass: sw:UtilityDomain
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/utility-eth
```

fsmRmtErrSyntheticFsObjCreate:createLocal

Fault Code: F78081

Message: [FSM:STAGE:REMOTE-ERROR]: create on primary(FSM-STAGE:sam:dme:SyntheticFsObjCreate:createLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: create-local-failed
mibFaultCode: F78081
mibFaultName: fsmRmtErrSyntheticFsObjCreateCreateLocal
moClass: synthetic:FsObj
Type: fsm
```

```
autoCleared: true
Affected MO: sys/file-[name]
```

fsmRmtErrSyntheticFsObjCreate:createRemote

Fault Code: F78081

Message: [FSM:STAGE:REMOTE-ERROR]: create on secondary(FSM-STAGE:sam:dme:SyntheticFsObjCreate:createRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: create-remote-failed
mibFaultCode: F78081
mibFaultName: fsmRmtErrSyntheticFsObjCreateCreateRemote
moClass: synthetic:FsObj
Type: fsm
autoCleared: true
Affected MO: sys/file-[name]
```

fsmRmtErrFirmwareDownloaderDownload:CopyRemote

Fault Code: F78090

Message: [FSM:STAGE:REMOTE-ERROR]: sync images to subordinate(FSM-STAGE:sam:dme:FirmwareDownloaderDownload:CopyRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-remote-failed
mibFaultCode: F78090
mibFaultName: fsmRmtErrFirmwareDownloaderDownloadCopyRemote
moClass: firmware:Downloader
Type: fsm
autoCleared: true
Affected MO: sys/fw-catalogue/dnld-[fileName]
```

fsmRmtErrFirmwareDownloaderDownload:DeleteLocal

Fault Code: F78090

Message: [FSM:STAGE:REMOTE-ERROR]: deleting downloadable [fileName] on local(FSM-STAGE:sam:dme:FirmwareDownloaderDownload:DeleteLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-local-failed
mibFaultCode: F78090
mibFaultName: fsmRmtErrFirmwareDownloaderDownloadDeleteLocal
moClass: firmware:Downloader
Type: fsm
autoCleared: true
Affected MO: sys/fw-catalogue/dnld-[fileName]
```

fsmRmtErrFirmwareDownloaderDownload:Local

Fault Code: F78090

Message: [FSM:STAGE:REMOTE-ERROR]: downloading image [fileName] from [server](FSM-STAGE:sam:dme:FirmwareDownloaderDownload:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F78090
mibFaultName: fsmRmtErrFirmwareDownloaderDownloadLocal
moClass: firmware:Downloader
Type: fsm
autoCleared: true
Affected MO: sys/fw-catalogue/dnld-[fileName]
```

fsmRmtErrFirmwareDownloaderDownload:UnpackLocal

Fault Code: F78090

Message: [FSM:STAGE:REMOTE-ERROR]: unpacking image [fileName] on primary(FSM-STAGE:sam:dme:FirmwareDownloaderDownload:UnpackLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: unpack-local-failed
mibFaultCode: F78090
mibFaultName: fsmRmtErrFirmwareDownloaderDownloadUnpackLocal
moClass: firmware:Downloader
Type: fsm
autoCleared: true
Affected MO: sys/fw-catalogue/dnld-[fileName]

fsmRmtErrFirmwareImageDelete:Local

Fault Code: F78091

Message: [FSM:STAGE:REMOTE-ERROR]: deleting image file [name] ([invTag]) from primary(FSM-STAGE:sam:dme:FirmwareImageDelete:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: F78091
mibFaultName: fsmRmtErrFirmwareImageDeleteLocal
moClass: firmware:Image
Type: fsm
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/boardController/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/image-[name]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/image-[name]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/image-[name]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/image-[name]
Affected MO: sys/fex-[id]/mgmt/image-[name]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/image-[name]
Affected MO: sys/fw-catalogue/image-[name]
Affected MO: sys/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/mgmt/image-[name]
Affected MO: sys/switch-[id]/mgmt/image-[name]

fsmRmtErrFirmwareImageDelete:Remote

Fault Code: F78091

Message: [FSM:STAGE:REMOTE-ERROR]: deleting image file [name] ([invTag]) from secondary(FSM-STAGE:sam:dme:FirmwareImageDelete:Remote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: remote-failed

mibFaultCode: F78091
mibFaultName: fsmRmtErrFirmwareImageDeleteRemote
moClass: firmware:Image
Type: fsm
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/boardController/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/image-[name]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/image-[name]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/image-[name]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/image-[name]
Affected MO: sys/fex-[id]/mgmt/image-[name]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/image-[name]
Affected MO: sys/fw-catalogue/image-[name]
Affected MO: sys/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/image-[name]

Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/mgmt/image-[name]
Affected MO: sys/switch-[id]/mgmt/image-[name]

fsmRmtErrMgmtControllerUpdateSwitch:resetLocal

Fault Code: F78093

Message: [FSM:STAGE:REMOTE-ERROR]: rebooting local fabric interconnect(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:resetLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: reset-local-failed
mibFaultCode: F78093
mibFaultName: fsmRmtErrMgmtControllerUpdateSwitchResetLocal
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateSwitch:resetRemote

Fault Code: F78093

Message: [FSM:STAGE:REMOTE-ERROR]: rebooting remote fabric interconnect(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:resetRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: reset-remote-failed
mibFaultCode: F78093
mibFaultName: fsmRmtErrMgmtControllerUpdateSwitchResetRemote
moClass: mgmt:Controller
Type: fsm

autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt

Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateSwitch:updateLocal

Fault Code: F78093

Message: [FSM:STAGE:REMOTE-ERROR]: updating local fabric interconnect(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:updateLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-local-failed
mibFaultCode: F78093
mibFaultName: fsmRmtErrMgmtControllerUpdateSwitchUpdateLocal
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt

Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateSwitch:updateRemote

Fault Code: F78093

Message: [FSM:STAGE:REMOTE-ERROR]: updating peer fabric interconnect(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:updateRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-remote-failed
mibFaultCode: F78093
mibFaultName: fsmRmtErrMgmtControllerUpdateSwitchUpdateRemote
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateSwitch:updateSpLocal

Fault Code: F78093

Message: [FSM:STAGE:REMOTE-ERROR]: updating sp version on local fabric interconnect and reboot switch if needed(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:updateSpLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-sp-local-failed
mibFaultCode: F78093
mibFaultName: fsmRmtErrMgmtControllerUpdateSwitchUpdateSpLocal
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateSwitch:updateSpRemote

Fault Code: F78093

Message: [FSM:STAGE:REMOTE-ERROR]: updating sp version on peer fabric interconnect and reboot switch if needed(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:updateSpRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-sp-remote-failed
mibFaultCode: F78093
mibFaultName: fsmRmtErrMgmtControllerUpdateSwitchUpdateSpRemote
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateSwitch:verifyLocal

Fault Code: F78093

Message: [FSM:STAGE:REMOTE-ERROR]: verifying boot variables for local fabric interconnect(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:verifyLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: verify-local-failed
mibFaultCode: F78093
mibFaultName: fsmRmtErrMgmtControllerUpdateSwitchVerifyLocal
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt

Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateSwitch:verifyRemote

Fault Code: F78093

Message: [FSM:STAGE:REMOTE-ERROR]: verifying boot variables for remote fabric interconnect(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:verifyRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: verify-remote-failed
mibFaultCode: F78093
mibFaultName: fsmRmtErrMgmtControllerUpdateSwitchVerifyRemote
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateIOM:CopyIOMImgToSub

Fault Code: F78094

Message: [FSM:STAGE:REMOTE-ERROR]: Copying IOM Image to subordinate FI(FSM-STAGE:sam:dme:MgmtControllerUpdateIOM:CopyIOMImgToSub)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: copyiomimg-to-sub-failed
mibFaultCode: F78094
mibFaultName: fsmRmtErrMgmtControllerUpdateIOMCopyIOMImgToSub
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateIOM:CopyImgFromRep

Fault Code: F78094

Message: [FSM:STAGE:REMOTE-ERROR]: Copying IOM Image from repository to FI(FSM-STAGE:sam:dme:MgmtControllerUpdateIOM:CopyImgFromRep)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-img-from-rep-failed
mibFaultCode: F78094
mibFaultName: fsmRmtErrMgmtControllerUpdateIOMCopyImgFromRep
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateIOM:PollUpdateStatus

Fault Code: F78094

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for IOM update(FSM-STAGE:sam:dme:MgmtControllerUpdateIOM:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F78094
mibFaultName: fsmRmtErrMgmtControllerUpdateIOMPollUpdateStatus
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt

Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateIOM:UpdateRequest

Fault Code: F78094

Message: [FSM:STAGE:REMOTE-ERROR]: sending update request to IOM(FSM-STAGE:sam:dme:MgmtControllerUpdateIOM:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: F78094
mibFaultName: fsmRmtErrMgmtControllerUpdateIOMUpdateRequest
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt

Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerActivateIOM:Activate

Fault Code: F78095

Message: [FSM:STAGE:REMOTE-ERROR]: activating backup image of IOM(FSM-STAGE:sam:dme:MgmtControllerActivateIOM:Activate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: activate-failed
mibFaultCode: F78095
mibFaultName: fsmRmtErrMgmtControllerActivateIOMActivate
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerActivateIOM:Reset

Fault Code: F78095

Message: [FSM:STAGE:REMOTE-ERROR]: Resetting IOM to boot the activated version(FSM-STAGE:sam:dme:MgmtControllerActivateIOM:Reset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: reset-failed
mibFaultCode: F78095
mibFaultName: fsmRmtErrMgmtControllerActivateIOMReset

moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt

Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateBMC:PollUpdateStatus

Fault Code: F78096

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for update to complete(FSM-STAGE:sam:dme:MgmtControllerUpdateBMC:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F78096
mibFaultName: fsmRmtErrMgmtControllerUpdateBMCPollUpdateStatus
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateBMC:UpdateRequest

Fault Code: F78096

Message: [FSM:STAGE:REMOTE-ERROR]: sending update request to CIMC(FSM-STAGE:sam:dme:MgmtControllerUpdateBMC:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: F78096
mibFaultName: fsmRmtErrMgmtControllerUpdateBMCUpdateRequest
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerActivateBMC:Activate

Fault Code: F78097

Message: [FSM:STAGE:REMOTE-ERROR]: activating backup image of CIMC(FSM-STAGE:sam:dme:MgmtControllerActivateBMC:Activate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-failed
mibFaultCode: F78097
mibFaultName: fsmRmtErrMgmtControllerActivateBMCActivate
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerActivateBMC:Reset

Fault Code: F78097

Message: [FSM:STAGE:REMOTE-ERROR]: Resetting CIMC to boot the activated version(FSM-STAGE:sam:dme:MgmtControllerActivateBMC:Reset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: reset-failed
mibFaultCode: F78097
mibFaultName: fsmRmtErrMgmtControllerActivateBMCReset
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrCallhomeEpConfigCallhome:SetLocal

Fault Code: F78110

Message: [FSM:STAGE:REMOTE-ERROR]: call-home configuration on primary(FSM-STAGE:sam:dme:CallhomeEpConfigCallhome:SetLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-local-failed
mibFaultCode: F78110
mibFaultName: fsmRmtErrCallhomeEpConfigCallhomeSetLocal
moClass: callhome:Ep
Type: fsm
autoCleared: true
Affected MO: call-home
```

fsmRmtErrCallhomeEpConfigCallhome:SetPeer

Fault Code: F78110

Message: [FSM:STAGE:REMOTE-ERROR]: call-home configuration on secondary(FSM-STAGE:sam:dme:CallhomeEpConfigCallhome:SetPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-peer-failed
mibFaultCode: F78110
mibFaultName: fsmRmtErrCallhomeEpConfigCallhomeSetPeer
moClass: callhome:Ep
Type: fsm
autoCleared: true
Affected MO: call-home
```

fsmRmtErrMgmtIfSwMgmtOobIfConfig:Switch

Fault Code: F78113

Message: [FSM:STAGE:REMOTE-ERROR]: configuring the out-of-band interface(FSM-STAGE:sam:dme:MgmtIfSwMgmtOobIfConfig:Switch)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: switch-failed
mibFaultCode: F78113
mibFaultName: fsmRmtErrMgmtIfSwMgmtOobIfConfigSwitch
moClass: mgmt:If
Type: fsm
autoCleared: true
```

Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]

Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmRmtErrMgmtIfSwMgmtInbandIfConfig:Switch

Fault Code: F78114

Message: [FSM:STAGE:REMOTE-ERROR]: configuring the inband interface(FSM-STAGE:sam:dme:MgmtIfSwMgmtInbandIfConfig:Switch)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: switch-failed
mibFaultCode: F78114
mibFaultName: fsmRmtErrMgmtIfSwMgmtInbandIfConfigSwitch
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmRmtErrMgmtIfVirtualIfConfig:Local

Fault Code: F78119

Message: [FSM:STAGE:REMOTE-ERROR]: Updating virtual interface on local fabric interconnect(FSM-STAGE:sam:dme:MgmtIfVirtualIfConfig:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: F78119
mibFaultName: fsmRmtErrMgmtIfVirtualIfConfigLocal

moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]

Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmRmtErrMgmtIfVirtualIfConfig:Remote

Fault Code: F78119

Message: [FSM:STAGE:REMOTE-ERROR]: Updating virtual interface on peer fabric interconnect(FSM-STAGE:sam:dme:MgmtIfVirtualIfConfig:Remote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: remote-failed
mibFaultCode: F78119
mibFaultName: fsmRmtErrMgmtIfVirtualIfConfigRemote
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmRmtErrMgmtIfEnableVip:Local

Fault Code: F78120

Message: [FSM:STAGE:REMOTE-ERROR]: Enable virtual interface on local fabric interconnect(FSM-STAGE:sam:dme:MgmtIfEnableVip:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning

Cause: local-failed
mibFaultCode: F78120
mibFaultName: fsmRmtErrMgmtIfEnableVipLocal
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]

Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmRmtErrMgmtIfDisableVip:Peer

Fault Code: F78121

Message: [FSM:STAGE:REMOTE-ERROR]: Disable virtual interface on peer fabric interconnect(FSM-STAGE:sam:dme:MgmtIfDisableVip:Peer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: peer-failed
mibFaultCode: F78121
mibFaultName: fsmRmtErrMgmtIfDisableVipPeer
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmRmtErrMgmtIfEnableHA:Local

Fault Code: F78122

Message: [FSM:STAGE:REMOTE-ERROR]: Transition from single to cluster mode(FSM-STAGE:sam:dme:MgmtIfEnableHA:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: F78122
mibFaultName: fsmRmtErrMgmtIfEnableHALocal
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]

```
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]
```

fsmRmtErrMgmtBackupBackup:backupLocal

Fault Code: F78123

Message: [FSM:STAGE:REMOTE-ERROR]: internal database backup(FSM-STAGE:sam:dme:MgmtBackupBackup:backupLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: backup-local-failed
mibFaultCode: F78123
mibFaultName: fsmRmtErrMgmtBackupBackupBackupLocal
moClass: mgmt:Backup
Type: fsm
autoCleared: true
Affected MO: sys/backup-[hostname]
```

fsmRmtErrMgmtBackupBackup:upload

Fault Code: F78123

Message: [FSM:STAGE:REMOTE-ERROR]: internal system backup(FSM-STAGE:sam:dme:MgmtBackupBackup:upload)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: upload-failed
mibFaultCode: F78123
```

```
mibFaultName: fsmRmtErrMgmtBackupBackupUpload
moClass: mgmt:Backup
Type: fsm
autoCleared: true
Affected MO: sys/backup-[hostname]
```

fsmRmtErrMgmtImporterImport:config

Fault Code: F78124

Message: [FSM:STAGE:REMOTE-ERROR]: importing the configuration file(FSM-STAGE:sam:dme:MgmtImporterImport:config)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-failed
mibFaultCode: F78124
mibFaultName: fsmRmtErrMgmtImporterImportConfig
moClass: mgmt:Importer
Type: fsm
autoCleared: true
Affected MO: sys/import-config-[hostname]
```

fsmRmtErrMgmtImporterImport:downloadLocal

Fault Code: F78124

Message: [FSM:STAGE:REMOTE-ERROR]: downloading the configuration file from the remote location(FSM-STAGE:sam:dme:MgmtImporterImport:downloadLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: download-local-failed
mibFaultCode: F78124
mibFaultName: fsmRmtErrMgmtImporterImportDownloadLocal
moClass: mgmt:Importer
Type: fsm
autoCleared: true
Affected MO: sys/import-config-[hostname]
```

fsmRmtErrMgmtImporterImport:reportResults

Fault Code: F78124

Message: [FSM:STAGE:REMOTE-ERROR]: Report results of configuration application(FSM-STAGE:sam:dme:MgmtImporterImport:reportResults)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: report-results-failed
mibFaultCode: F78124
mibFaultName: fsmRmtErrMgmtImporterImportReportResults
moClass: mgmt:Importer
Type: fsm
autoCleared: true
Affected MO: sys/import-config-[hostname]
```

fsmRmtErrMgmtImporterImport:verifyKey

Fault Code: F78124

Message: [FSM:STAGE:REMOTE-ERROR]: verify if password encryption key matches(FSM-STAGE:sam:dme:MgmtImporterImport:verifyKey)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: verify-key-failed
mibFaultCode: F78124
mibFaultName: fsmRmtErrMgmtImporterImportVerifyKey
moClass: mgmt:Importer
Type: fsm
autoCleared: true
Affected MO: sys/import-config-[hostname]
```

fsmRmtErrStatsCollectionPolicyUpdateEp:SetEpA

Fault Code: F78182

Message: [FSM:STAGE:REMOTE-ERROR]: Update endpoint on fabric interconnect A(FSM-STAGE:sam:dme:StatsCollectionPolicyUpdateEp:SetEpA)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-ep-afailed
mibFaultCode: F78182
mibFaultName: fsmRmtErrStatsCollectionPolicyUpdateEpSetEpA
moClass: stats:CollectionPolicy
Type: fsm
autoCleared: true
Affected MO: stats/coll-policy-[name]
```

fsmRmtErrStatsCollectionPolicyUpdateEp:SetEpB

Fault Code: F78182

Message: [FSM:STAGE:REMOTE-ERROR]: Update endpoint on fabric interconnect B(FSM-STAGE:sam:dme:StatsCollectionPolicyUpdateEp:SetEpB)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-ep-bfailed
mibFaultCode: F78182
mibFaultName: fsmRmtErrStatsCollectionPolicyUpdateEpSetEpB
moClass: stats:CollectionPolicy
Type: fsm
autoCleared: true
Affected MO: stats/coll-policy-[name]
```

fsmRmtErrQosclassDefinitionConfigGlobalQoS:SetLocal

Fault Code: F78185

Message: [FSM:STAGE:REMOTE-ERROR]: QoS Classification Definition [name] configuration on primary(FSM-STAGE:sam:dme:QosclassDefinitionConfigGlobalQoS:SetLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-local-failed
mibFaultCode: F78185
mibFaultName: fsmRmtErrQosclassDefinitionConfigGlobalQoSSetLocal
moClass: qosclass:Definition
Type: fsm
```

```
autoCleared: true
Affected MO: fabric/lan/classes
```

fsmRmtErrQosclassDefinitionConfigGlobalQoS:SetPeer

Fault Code: F78185

Message: [FSM:STAGE:REMOTE-ERROR]: QoS Classification Definition [name] configuration on secondary(FSM-STAGE:sam:dme:QosclassDefinitionConfigGlobalQoS:SetPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-peer-failed
mibFaultCode: F78185
mibFaultName: fsmRmtErrQosclassDefinitionConfigGlobalQoSSetPeer
moClass: qosclass:Definition
Type: fsm
autoCleared: true
Affected MO: fabric/lan/classes
```

fsmRmtErrQosclassDefinitionConfigGlobalQoS:WaitForUserAck

Fault Code: F78185

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for User Acknowledgment to configuration on primary(FSM-STAGE:sam:dme:QosclassDefinitionConfigGlobalQoS:WaitForUserAck)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-user-ack-failed
mibFaultCode: F78185
mibFaultName: fsmRmtErrQosclassDefinitionConfigGlobalQoSWaitForUserAck
moClass: qosclass:Definition
Type: fsm
autoCleared: true
Affected MO: fabric/lan/classes
```

fsmRmtErrEpqosDefinitionDeploy:Local

Fault Code: F78189

Message: [FSM:STAGE:REMOTE-ERROR]: vnic qos policy [name] configuration to primary(FSM-STAGE:sam:dme:EpqosDefinitionDeploy:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F78189
mibFaultName: fsmRmtErrEpqosDefinitionDeployLocal
moClass: epqos:Definition
Type: fsm
autoCleared: true
Affected MO: org-[name]/ep-qos-[name]
```

fsmRmtErrEpqosDefinitionDeploy:Peer

Fault Code: F78189

Message: [FSM:STAGE:REMOTE-ERROR]: vnic qos policy [name] configuration to secondary(FSM-STAGE:sam:dme:EpqosDefinitionDeploy:Peer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: peer-failed
mibFaultCode: F78189
mibFaultName: fsmRmtErrEpqosDefinitionDeployPeer
moClass: epqos:Definition
Type: fsm
autoCleared: true
Affected MO: org-[name]/ep-qos-[name]
```

fsmRmtErrEpqosDefinitionDelTaskRemove:Local

Fault Code: F78190

Message: [FSM:STAGE:REMOTE-ERROR]: vnic qos policy [name] removal from primary(FSM-STAGE:sam:dme:EpqosDefinitionDelTaskRemove:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F78190
mibFaultName: fsmRmtErrEpqosDefinitionDelTaskRemoveLocal
moClass: epqos:DefinitionDelTask
Type: fsm
autoCleared: true
Affected MO: org-[name]/ep-qos-deletion-[defIntId]
```

fsmRmtErrEpqosDefinitionDelTaskRemove:Peer

Fault Code: F78190

Message: [FSM:STAGE:REMOTE-ERROR]: vnic qos policy [name] removal from secondary(FSM-STAGE:sam:dme:EpqosDefinitionDelTaskRemove:Peer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: peer-failed
mibFaultCode: F78190
mibFaultName: fsmRmtErrEpqosDefinitionDelTaskRemovePeer
moClass: epqos:DefinitionDelTask
Type: fsm
autoCleared: true
Affected MO: org-[name]/ep-qos-deletion-[defIntId]
```

fsmRmtErrEquipmentIOCardResetCmc:Execute

Fault Code: F78243

Message: [FSM:STAGE:REMOTE-ERROR]: Resetting Chassis Management Controller on IOM [chassisId]/[id](FSM-STAGE:sam:dme:EquipmentIOCardResetCmc:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78243
mibFaultName: fsmRmtErrEquipmentIOCardResetCmcExecute
moClass: equipment:IOCard
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmRmtErrMgmtControllerUpdateUCSManager:execute

Fault Code: F78255

Message: [FSM:STAGE:REMOTE-ERROR]: Updating UCS Manager firmware(FSM-STAGE:sam:dme:MgmtControllerUpdateUCSManager:execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78255
mibFaultName: fsmRmtErrMgmtControllerUpdateUCSManagerExecute
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateUCSManager:start

Fault Code: F78255

Message: [FSM:STAGE:REMOTE-ERROR]: Scheduling UCS manager update(FSM-STAGE:sam:dme:MgmtControllerUpdateUCSManager:start)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: start-failed
mibFaultCode: F78255
mibFaultName: fsmRmtErrMgmtControllerUpdateUCSManagerStart
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt

Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerSysConfig:Primary

Fault Code: F78263

Message: [FSM:STAGE:REMOTE-ERROR]: system configuration on primary(FSM-STAGE:sam:dme:MgmtControllerSysConfig:Primary)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: primary-failed
mibFaultCode: F78263
mibFaultName: fsmRmtErrMgmtControllerSysConfigPrimary
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt

Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerSysConfig:Secondary

Fault Code: F78263

Message: [FSM:STAGE:REMOTE-ERROR]: system configuration on secondary(FSM-STAGE:sam:dme:MgmtControllerSysConfig:Secondary)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: secondary-failed
mibFaultCode: F78263
mibFaultName: fsmRmtErrMgmtControllerSysConfigSecondary
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrAdaptorExtEthIfPathReset:Disable

Fault Code: F78292

Message: [FSM:STAGE:REMOTE-ERROR]: Disable path [side]([switchId]) on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorExtEthIfPathReset:Disable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: disable-failed
mibFaultCode: F78292
mibFaultName: fsmRmtErrAdaptorExtEthIfPathResetDisable

```
moClass: adaptor:ExtEthIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]
```

fsmRmtErrAdaptorExtEthIfPathReset:Enable

Fault Code: F78292

Message: [FSM:STAGE:REMOTE-ERROR]: Enable path [side]([switchId]) on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorExtEthIfPathReset:Enable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: enable-failed
mibFaultCode: F78292
mibFaultName: fsmRmtErrAdaptorExtEthIfPathResetEnable
moClass: adaptor:ExtEthIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]
```

fsmRmtErrAdaptorHostEthIfCircuitReset:DisableA

Fault Code: F78297

Message: [FSM:STAGE:REMOTE-ERROR]: Disable circuit A for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostEthIfCircuitReset:DisableA)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: disable-afailed
mibFaultCode: F78297
mibFaultName: fsmRmtErrAdaptorHostEthIfCircuitResetDisableA
moClass: adaptor:HostEthIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]
```

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]

fsmRmtErrAdaptorHostEthIfCircuitReset:DisableB

Fault Code: F78297

Message: [FSM:STAGE:REMOTE-ERROR]: Disable circuit B for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostEthIfCircuitReset:DisableB)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: disable-bfailed
mibFaultCode: F78297
mibFaultName: fsmRmtErrAdaptorHostEthIfCircuitResetDisableB
moClass: adaptor:HostEthIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]

fsmRmtErrAdaptorHostEthIfCircuitReset:EnableA

Fault Code: F78297

Message: [FSM:STAGE:REMOTE-ERROR]: Enable circuit A for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostEthIfCircuitReset:EnableA)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: enable-afailed
mibFaultCode: F78297
mibFaultName: fsmRmtErrAdaptorHostEthIfCircuitResetEnableA
moClass: adaptor:HostEthIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]

fsmRmtErrAdaptorHostEthIfCircuitReset:EnableB

Fault Code: F78297

Message: [FSM:STAGE:REMOTE-ERROR]: Enable circuit B for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostEthIfCircuitReset:EnableB)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: enable-bfailed
mibFaultCode: F78297
mibFaultName: fsmRmtErrAdaptorHostEthIfCircuitResetEnableB
moClass: adaptor:HostEthIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]
```

fsmRmtErrAdaptorHostFcIfCircuitReset:DisableA

Fault Code: F78298

Message: [FSM:STAGE:REMOTE-ERROR]: Disable circuit A for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostFcIfCircuitReset:DisableA)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: disable-afailed
mibFaultCode: F78298
mibFaultName: fsmRmtErrAdaptorHostFcIfCircuitResetDisableA
moClass: adaptor:HostFcIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]
```

fsmRmtErrAdaptorHostFcIfCircuitReset:DisableB

Fault Code: F78298

Message: [FSM:STAGE:REMOTE-ERROR]: Disable circuit B for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostFcIfCircuitReset:DisableB)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: disable-bfailed
mibFaultCode: F78298
mibFaultName: fsmRmtErrAdaptorHostFcIfCircuitResetDisableB
moClass: adaptor:HostFcIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]
```

fsmRmtErrAdaptorHostFcIfCircuitReset:EnableA

Fault Code: F78298

Message: [FSM:STAGE:REMOTE-ERROR]: Enable circuit A for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostFcIfCircuitReset:EnableA)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: enable-afailed
mibFaultCode: F78298
mibFaultName: fsmRmtErrAdaptorHostFcIfCircuitResetEnableA
moClass: adaptor:HostFcIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]
```

fsmRmtErrAdaptorHostFcIfCircuitReset:EnableB

Fault Code: F78298

Message: [FSM:STAGE:REMOTE-ERROR]: Enable circuit B for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostFcIfCircuitReset:EnableB)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: enable-bfailed
mibFaultCode: F78298
mibFaultName: fsmRmtErrAdaptorHostFcIfCircuitResetEnableB
moClass: adaptor:HostFcIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]
```

fsmRmtErrExtvmmProviderConfig:GetVersion

Fault Code: F78319

Message: [FSM:STAGE:REMOTE-ERROR]: external VM manager version fetch(FSM-STAGE:sam:dme:ExtvmmProviderConfig:GetVersion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: get-version-failed
mibFaultCode: F78319
mibFaultName: fsmRmtErrExtvmmProviderConfigGetVersion
moClass: extvmm:Provider
Type: fsm
autoCleared: true
Affected MO: sys/extvm-mgmt/vm-[name]
```

fsmRmtErrExtvmmProviderConfig:SetLocal

Fault Code: F78319

Message: [FSM:STAGE:REMOTE-ERROR]: external VM manager configuration on local fabric(FSM-STAGE:sam:dme:ExtvmmProviderConfig:SetLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-local-failed
mibFaultCode: F78319
mibFaultName: fsmRmtErrExtvmmProviderConfigSetLocal
moClass: extvmm:Provider
Type: fsm
autoCleared: true
Affected MO: sys/extvm-mgmt/vm-[name]
```

fsmRmtErrExtvmmProviderConfig:SetPeer

Fault Code: F78319

Message: [FSM:STAGE:REMOTE-ERROR]: external VM manager configuration on peer fabric(FSM-STAGE:sam:dme:ExtvmmProviderConfig:SetPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-peer-failed
mibFaultCode: F78319
mibFaultName: fsmRmtErrExtvmmProviderConfigSetPeer
moClass: extvmm:Provider
Type: fsm
autoCleared: true
Affected MO: sys/extvm-mgmt/vm-[name]
```

fsmRmtErrExtvmmKeyStoreCertInstall:SetLocal

Fault Code: F78320

Message: [FSM:STAGE:REMOTE-ERROR]: external VM manager certificate configuration on local fabric(FSM-STAGE:sam:dme:ExtvmmKeyStoreCertInstall:SetLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-local-failed
mibFaultCode: F78320
mibFaultName: fsmRmtErrExtvmmKeyStoreCertInstallSetLocal
moClass: extvmm:KeyStore
Type: fsm
autoCleared: true
Affected MO: sys/extvm-mgmt/key-store
```

fsmRmtErrExtvmmKeyStoreCertInstall:SetPeer

Fault Code: F78320

Message: [FSM:STAGE:REMOTE-ERROR]: external VM manager certificate configuration on peer fabric(FSM-STAGE:sam:dme:ExtvmmKeyStoreCertInstall:SetPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-peer-failed
mibFaultCode: F78320
mibFaultName: fsmRmtErrExtvmmKeyStoreCertInstallSetPeer
moClass: extvmm:KeyStore
Type: fsm
autoCleared: true
Affected MO: sys/extvm-mgmt/key-store
```

fsmRmtErrExtvmmSwitchDelTaskRemoveProvider:RemoveLocal

Fault Code: F78321

Message: [FSM:STAGE:REMOTE-ERROR]: external VM manager deletion from local fabric(FSM-STAGE:sam:dme:ExtvmmSwitchDelTaskRemoveProvider:RemoveLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: remove-local-failed
mibFaultCode: F78321
mibFaultName: fsmRmtErrExtvmmSwitchDelTaskRemoveProviderRemoveLocal
moClass: extvmm:SwitchDelTask
Type: fsm
autoCleared: true
Affected MO: sys/extvm-mgmt/vsw-deltask-[swIntId]
```

fsmRmtErrExtvmmMasterExtKeyConfig:SetLocal

Fault Code: F78338

Message: [FSM:STAGE:REMOTE-ERROR]: external VM manager extension-key configuration on peer fabric(FSM-STAGE:sam:dme:ExtvmmMasterExtKeyConfig:SetLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-local-failed
mibFaultCode: F78338
mibFaultName: fsmRmtErrExtvmmMasterExtKeyConfigSetLocal
moClass: extvmm:MasterExtKey
Type: fsm
autoCleared: true
Affected MO: sys/extvm-mgmt/ext-key
```

fsmRmtErrExtvmmMasterExtKeyConfig:SetPeer

Fault Code: F78338

Message: [FSM:STAGE:REMOTE-ERROR]: external VM manager extension-key configuration on local fabric(FSM-STAGE:sam:dme:ExtvmmMasterExtKeyConfig:SetPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-peer-failed
mibFaultCode: F78338
mibFaultName: fsmRmtErrExtvmmMasterExtKeyConfigSetPeer
moClass: extvmm:MasterExtKey
Type: fsm
autoCleared: true
Affected MO: sys/extvm-mgmt/ext-key
```

fsmRmtErrCapabilityUpdaterUpdater:Apply

Fault Code: F78344

Message: [FSM:STAGE:REMOTE-ERROR]: applying changes to catalog(FSM-STAGE:sam:dme:CapabilityUpdaterUpdater:Apply)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-failed
mibFaultCode: F78344
```

```
mibFaultName: fsmRmtErrCapabilityUpdaterUpdaterApply
moClass: capability:Updater
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/updater-[fileName]
```

fsmRmtErrCapabilityUpdaterUpdater:CopyRemote

Fault Code: F78344

Message: [FSM:STAGE:REMOTE-ERROR]: syncing catalog files to subordinate(FSM-STAGE:sam:dme:CapabilityUpdaterUpdater:CopyRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-remote-failed
mibFaultCode: F78344
mibFaultName: fsmRmtErrCapabilityUpdaterUpdaterCopyRemote
moClass: capability:Updater
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/updater-[fileName]
```

fsmRmtErrCapabilityUpdaterUpdater:DeleteLocal

Fault Code: F78344

Message: [FSM:STAGE:REMOTE-ERROR]: deleting temp image [fileName] on local(FSM-STAGE:sam:dme:CapabilityUpdaterUpdater:DeleteLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-local-failed
mibFaultCode: F78344
mibFaultName: fsmRmtErrCapabilityUpdaterUpdaterDeleteLocal
moClass: capability:Updater
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/updater-[fileName]
```

fsmRmtErrCapabilityUpdaterUpdater:EvaluateStatus

Fault Code: F78344

Message: [FSM:STAGE:REMOTE-ERROR]: evaluating status of update(FSM-STAGE:sam:dme:CapabilityUpdaterUpdater:EvaluateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: evaluate-status-failed
mibFaultCode: F78344
mibFaultName: fsmRmtErrCapabilityUpdaterUpdaterEvaluateStatus
moClass: capability:Updater
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/updater-[fileName]
```

fsmRmtErrCapabilityUpdaterUpdater:Local

Fault Code: F78344

Message: [FSM:STAGE:REMOTE-ERROR]: downloading catalog file [fileName] from [server](FSM-STAGE:sam:dme:CapabilityUpdaterUpdater:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F78344
mibFaultName: fsmRmtErrCapabilityUpdaterUpdaterLocal
moClass: capability:Updater
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/updater-[fileName]
```

fsmRmtErrCapabilityUpdaterUpdater:RescanImages

Fault Code: F78344

Message: [FSM:STAGE:REMOTE-ERROR]: rescanning image files(FSM-STAGE:sam:dme:CapabilityUpdaterUpdater:RescanImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: rescan-images-failed
mibFaultCode: F78344
mibFaultName: fsmRmtErrCapabilityUpdaterUpdaterRescanImages
moClass: capability:Updater
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/updater-[fileName]
```

fsmRmtErrCapabilityUpdaterUpdater:UnpackLocal

Fault Code: F78344

Message: [FSM:STAGE:REMOTE-ERROR]: unpacking catalog file [fileName] on primary(FSM-STAGE:sam:dme:CapabilityUpdaterUpdater:UnpackLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unpack-local-failed
mibFaultCode: F78344
mibFaultName: fsmRmtErrCapabilityUpdaterUpdaterUnpackLocal
moClass: capability:Updater
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/updater-[fileName]
```

fsmRmtErrFirmwareDistributableDelete:Local

Fault Code: F78346

Message: [FSM:STAGE:REMOTE-ERROR]: deleting package [name] from primary(FSM-STAGE:sam:dme:FirmwareDistributableDelete:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F78346
mibFaultName: fsmRmtErrFirmwareDistributableDeleteLocal
moClass: firmware:Distributable
Type: fsm
```

```
autoCleared: true
Affected MO: sys/fw-catalogue/distrib-[name]
```

fsmRmtErrFirmwareDistributableDelete:Remote

Fault Code: F78346

Message: [FSM:STAGE:REMOTE-ERROR]: deleting package [name] from secondary(FSM-STAGE:sam:dme:FirmwareDistributableDelete:Remote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: remote-failed
mibFaultCode: F78346
mibFaultName: fsmRmtErrFirmwareDistributableDeleteRemote
moClass: firmware:Distributable
Type: fsm
autoCleared: true
Affected MO: sys/fw-catalogue/distrib-[name]
```

fsmRmtErrCapabilityCatalogueDeployCatalogue:SyncBladeAGLocal

Fault Code: F78371

Message: [FSM:STAGE:REMOTE-ERROR]: Sending capability catalogue [version] to local bladeAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncBladeAGLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sync-bladeaglocal-failed
mibFaultCode: F78371
mibFaultName: fsmRmtErrCapabilityCatalogueDeployCatalogueSyncBladeAGLocal
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmRmtErrCapabilityCatalogueDeployCatalogue:SyncBladeAGRemote

Fault Code: F78371

Message: [FSM:STAGE:REMOTE-ERROR]: Sending capability catalogue [version] to remote bladeAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncBladeAGRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sync-bladeagremote-failed
mibFaultCode: F78371
mibFaultName: fsmRmtErrCapabilityCatalogueDeployCatalogueSyncBladeAGRemote
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmRmtErrCapabilityCatalogueDeployCatalogue:SyncHostagentAGLocal

Fault Code: F78371

Message: [FSM:STAGE:REMOTE-ERROR]: Sending capability catalogue [version] to local hostagentAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncHostagentAGLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sync-hostagentaglocal-failed
mibFaultCode: F78371
mibFaultName: fsmRmtErrCapabilityCatalogueDeployCatalogueSyncHostagentAGLocal
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmRmtErrCapabilityCatalogueDeployCatalogue:SyncHostagentAGRemote

Fault Code: F78371

Message: [FSM:STAGE:REMOTE-ERROR]: Sending capability catalogue [version] to remote hostagentAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncHostagentAGRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sync-hostagentagremote-failed
mibFaultCode: F78371
mibFaultName: fsmRmtErrCapabilityCatalogueDeployCatalogueSyncHostagentAGRemote
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmRmtErrCapabilityCatalogueDeployCatalogue:SyncNicAGLocal

Fault Code: F78371

Message: [FSM:STAGE:REMOTE-ERROR]: Sending capability catalogue [version] to local nicAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncNicAGLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sync-nicaglocal-failed
mibFaultCode: F78371
mibFaultName: fsmRmtErrCapabilityCatalogueDeployCatalogueSyncNicAGLocal
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmRmtErrCapabilityCatalogueDeployCatalogue:SyncNicAGRemote

Fault Code: F78371

Message: [FSM:STAGE:REMOTE-ERROR]: Sending capability catalogue [version] to remote nicAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncNicAGRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sync-nicagremote-failed
mibFaultCode: F78371
mibFaultName: fsmRmtErrCapabilityCatalogueDeployCatalogueSyncNicAGRemote
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmRmtErrCapabilityCatalogueDeployCatalogue:SyncPortAGLocal

Fault Code: F78371

Message: [FSM:STAGE:REMOTE-ERROR]: Sending capability catalogue [version] to local portAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncPortAGLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sync-portaglocal-failed
mibFaultCode: F78371
mibFaultName: fsmRmtErrCapabilityCatalogueDeployCatalogueSyncPortAGLocal
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmRmtErrCapabilityCatalogueDeployCatalogue:SyncPortAGRemote

Fault Code: F78371

Message: [FSM:STAGE:REMOTE-ERROR]: Sending capability catalogue [version] to remote portAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncPortAGRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sync-portagremote-failed
mibFaultCode: F78371
mibFaultName: fsmRmtErrCapabilityCatalogueDeployCatalogueSyncPortAGRemote
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmRmtErrCapabilityCatalogueDeployCatalogue:finalize

Fault Code: F78371

Message: [FSM:STAGE:REMOTE-ERROR]: Finalizing capability catalogue [version] deployment(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:finalize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: finalize-failed
mibFaultCode: F78371
mibFaultName: fsmRmtErrCapabilityCatalogueDeployCatalogueFinalize
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmRmtErrEquipmentFexRemoveFex:CleanUpVIfs

Fault Code: F78382

Message: [FSM:STAGE:REMOTE-ERROR]: deleting VIfs from fex [id] from primary(FSM-STAGE:sam:dme:EquipmentFexRemoveFex:CleanUpVIfs)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: clean-upvifs-failed
mibFaultCode: F78382
mibFaultName: fsmRmtErrEquipmentFexRemoveFexCleanUpVIfs
moClass: equipment:Fex
Type: fsm
autoCleared: true
Affected MO: sys/fex-[id]
```

fsmRmtErrEquipmentFexRemoveFex:CleanupEntries

Fault Code: F78382

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning host entries(FSM-STAGE:sam:dme:EquipmentFexRemoveFex:CleanupEntries)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cleanup-entries-failed
mibFaultCode: F78382
```

```
mibFaultName: fsmRmtErrEquipmentFexRemoveFexCleanupEntries
moClass: equipment:Fex
Type: fsm
autoCleared: true
Affected MO: sys/fex-[id]
```

fsmRmtErrEquipmentFexRemoveFex:UnIdentifyLocal

Fault Code: F78382

Message: [FSM:STAGE:REMOTE-ERROR]: erasing fex identity [id] from primary(FSM-STAGE:sam:dme:EquipmentFexRemoveFex:UnIdentifyLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: un-identify-local-failed
mibFaultCode: F78382
mibFaultName: fsmRmtErrEquipmentFexRemoveFexUnIdentifyLocal
moClass: equipment:Fex
Type: fsm
autoCleared: true
Affected MO: sys/fex-[id]
```

fsmRmtErrEquipmentFexRemoveFex:Wait

Fault Code: F78382

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for clean up of resources for chassis [id] (approx. 2 min)(FSM-STAGE:sam:dme:EquipmentFexRemoveFex:Wait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-failed
mibFaultCode: F78382
mibFaultName: fsmRmtErrEquipmentFexRemoveFexWait
moClass: equipment:Fex
Type: fsm
autoCleared: true
Affected MO: sys/fex-[id]
```

fsmRmtErrEquipmentFexRemoveFex:decomission

Fault Code: F78382

Message: [FSM:STAGE:REMOTE-ERROR]: decommissioning fex [id](FSM-STAGE:sam:dme:EquipmentFexRemoveFex:decomission)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: decomission-failed
mibFaultCode: F78382
mibFaultName: fsmRmtErrEquipmentFexRemoveFexDecomission
moClass: equipment:Fex
Type: fsm
autoCleared: true
Affected MO: sys/fex-[id]
```

fsmRmtErrEquipmentLocatorLedSetFeLocatorLed:Execute

Fault Code: F78383

Message: [FSM:STAGE:REMOTE-ERROR]: setting locator led to [adminState](FSM-STAGE:sam:dme:EquipmentLocatorLedSetFeLocatorLed:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78383
mibFaultName: fsmRmtErrEquipmentLocatorLedSetFeLocatorLedExecute
moClass: equipment:LocatorLed
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/locator-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/locator-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/locator-led
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/locator-led
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/locator-led
```

```
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/chassis-[id]/locator-led
Affected MO: sys/chassis-[id]/psu-[id]/locator-led
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/chassis-[id]/slot-[id]/locator-led
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/fex-[id]/locator-led
Affected MO: sys/fex-[id]/psu-[id]/locator-led
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/fex-[id]/slot-[id]/locator-led
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/rack-enclosure-[id]/psu-[id]/locator-led
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/rack-unit-[id]/ext-board-[id]/locator-led
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/rack-unit-[id]/locator-led
Affected MO: sys/rack-unit-[id]/psu-[id]/locator-led
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/switch-[id]/locator-led
Affected MO: sys/switch-[id]/psu-[id]/locator-led
```

fsmRmtErrEquipmentChassisPowerCap:Config

Fault Code: F78384

Message: [FSM:STAGE:REMOTE-ERROR]: (FSM-STAGE:sam:dme:EquipmentChassisPowerCap:Config)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-failed
mibFaultCode: F78384
mibFaultName: fsmRmtErrEquipmentChassisPowerCapConfig
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisPowerCap:Wait

Fault Code: F78384

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting before powercap deployment on chassis [id](FSM-STAGE:sam:dme:EquipmentChassisPowerCap:Wait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-failed
mibFaultCode: F78384
mibFaultName: fsmRmtErrEquipmentChassisPowerCapWait
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentIOCardMuxOffline:CleanupEntries

Fault Code: F78385

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning host entries(FSM-STAGE:sam:dme:EquipmentIOCardMuxOffline:CleanupEntries)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cleanup-entries-failed
mibFaultCode: F78385
mibFaultName: fsmRmtErrEquipmentIOCardMuxOfflineCleanupEntries
moClass: equipment:IOCard
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmRmtErrComputePhysicalAssociate:ActivateBios

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Activate BIOS image for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:ActivateBios)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-bios-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateActivateBios
```

```
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:AssertBypassWait

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for assert bypass on rack server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:AssertBypassWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: assert-bypass-wait-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateAssertBypassWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:BiosImgUpdate

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Update blade BIOS image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BiosImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bios-img-update-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateBiosImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:BiosPostCompletion

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for BIOS POST completion from CIMC on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:BiosPostCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateBiosPostCompletion
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:BladePowerOff

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Power off server for configuration of service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:BladePowerOff)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: blade-power-off-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateBladePowerOff
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:BmcConfigPnuOS

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: provisioning a bootable device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BmcConfigPnuOS)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-config-pnuos-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateBmcConfigPnuOS
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:BmcPreconfigPnuOSLocal

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BmcPreconfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-preconfig-pnuoslocal-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateBmcPreconfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:BmcPreconfigPnuOSPeer

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BmcPreconfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-preconfig-pnuospeer-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateBmcPreconfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:BmcUnconfigPnuOS

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: unprovisioning the bootable device for server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BmcUnconfigPnuOS)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-unconfig-pnuos-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateBmcUnconfigPnuOS
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:BootHost

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Boot host OS for server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BootHost)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: boot-host-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateBootHost
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:BootPnuos

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Bring-up pre-boot environment for association with [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:BootPnuos)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-pnuos-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateBootPnuos
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:BootWait

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for system reset(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BootWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-wait-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateBootWait
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:CalculateVlanGroupForHostOSLocal

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Calculate VLAN group for server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:CalculateVlanGroupForHostOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: calculate-vlan-group-for-hostoslocal-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateCalculateVlanGroupForHostOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:CalculateVlanGroupForHostOSPeer

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Calculate VLAN group for server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:CalculateVlanGroupForHostOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: calculate-vlan-group-for-hostospeer-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateCalculateVlanGroupForHostOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:CheckPowerAvailability

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:CiscoOSOpenGate

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Open Gate from CIMC on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:CiscoOSOpenGate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: ciscoosopen-gate-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateCiscoOSOpenGate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:ClearBiosUpdate

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Clearing pending BIOS image update(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ClearBiosUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: clear-bios-update-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateClearBiosUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:ConfigCimcVMedia

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: configuring mappings for vmedia(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigCimcVMedia)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-cimcvmedia-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateConfigCimcVMedia
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:ConfigExtMgmtGw

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: configuring ext mgmt gateway for vmedia(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigExtMgmtGw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-ext-mgmt-gw-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateConfigExtMgmtGw
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:ConfigExtMgmtRules

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: configuring ext mgmt rules for vmedia(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigExtMgmtRules)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-ext-mgmt-rules-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateConfigExtMgmtRules
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:ConfigFanSpeed

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring Rack Fan Speed(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigFanSpeed)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: config-fan-speed-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateConfigFanSpeed
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:ConfigFlexFlash

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring FlexFlash(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigFlexFlash)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-flex-flash-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateConfigFlexFlash
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:ConfigHostOsAnnotations

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configure host OS annotations for server profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigHostOsAnnotations)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-host-os-annotations-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateConfigHostOsAnnotations
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:ConfigMgmtIpRules

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring ip mgmt rules(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigMgmtIpRules)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-mgmt-ip-rules-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateConfigMgmtIpRules
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:ConfigServerIdentity

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configure asset tag for server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigServerIdentity)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-server-identity-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateConfigServerIdentity
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:ConfigSoL

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring SoL interface on server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigSoL)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-so-lfailed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateConfigSoL
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:ConfigUserAccess

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring external user access(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigUserAccess)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-user-access-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateConfigUserAccess
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:ConfigUuid

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configure logical UUID for server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigUuid)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-uuid-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateConfigUuid
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:DeassertResetBypass

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: deassert reset-bypass(FSM-STAGE:sam:dme:ComputePhysicalAssociate:DeassertResetBypass)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: deassert-reset-bypass-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateDeassertResetBypass
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:DeleteCurlDownloadedImages

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Delete images downloaded from operations manager(FSM-STAGE:sam:dme:ComputePhysicalAssociate:DeleteCurlDownloadedImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-curl-downloaded-images-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateDeleteCurlDownloadedImages
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:DeleteImagesRemote

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Delete images downloaded from operations manager(FSM-STAGE:sam:dme:ComputePhysicalAssociate:DeleteImagesRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-images-remote-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateDeleteImagesRemote
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:GraphicsImageUpdate

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Update gpu firmware image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:GraphicsImageUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: graphics-image-update-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateGraphicsImageUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:HbaImgUpdate

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Update Host Bus Adapter image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:HbaImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hba-img-update-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateHbaImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:HostOSConfig

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configure host OS components on server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:HostOSConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hostosconfig-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateHostOSConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:HostOSConnect

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Connect to Host OS on server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:HostOSConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hostosconnect-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateHostOSConnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:HostOSIdent

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Identify host agent on server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:HostOSIdent)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hostosident-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateHostOSIdent
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:HostOSPolicy

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Upload host agent policy to host agent on server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:HostOSPolicy)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hostospolicy-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateHostOSPolicy
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:HostOSValidate

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Validate host OS on server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:HostOSValidate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hostosvalidate-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateHostOSValidate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:LocalDiskFwUpdate

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Update LocalDisk firmware image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:LocalDiskFwUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-disk-fw-update-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateLocalDiskFwUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:MarkAdapterForReboot

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: deassert reset-bypass(FSM-STAGE:sam:dme:ComputePhysicalAssociate:MarkAdapterForReboot)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: mark-adapter-for-reboot-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateMarkAdapterForReboot
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:MswitchImgUpdate

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Update NVMe MSwitch image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:MswitchImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: mswitch-img-update-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateMswitchImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:NicConfigHostOSLocal

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configure adapter in server for host OS (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicConfigHostOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-hostoslocal-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateNicConfigHostOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:NicConfigHostOSPeer

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configure adapter in server for host OS (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicConfigHostOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: nic-config-hostospeer-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateNicConfigHostOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:NicConfigParamsHostOSLocal

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configure and modify properties of vNIC(s) on the adapter (service profile : [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicConfigParamsHostOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-params-hostoslocal-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateNicConfigParamsHostOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:NicConfigParamsHostOSPeer

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configure and modify properties of vNIC(s) on the adapter (service profile : [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicConfigParamsHostOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-params-hostospeer-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateNicConfigParamsHostOSPeer
```

```
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:NicConfigPnuOSLocal

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configure adapter for pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicConfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-pnuoslocal-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateNicConfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:NicConfigPnuOSPeer

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configure adapter for pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicConfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-pnuospeer-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateNicConfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:NicConfigServiceInfraLocal

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configure adapter in server for service infrastructure ([assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicConfigServiceInfraLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-service-infra-local-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateNicConfigServiceInfraLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:NicConfigServiceInfraPeer

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configure adapter in server for service infrastructure ([assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicConfigServiceInfraPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-service-infra-peer-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateNicConfigServiceInfraPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:NicImgUpdate

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Update adapter image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-img-update-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateNicImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:NicUnconfigPnuOSLocal

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure adapter of server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicUnconfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-unconfig-pnuoslocal-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateNicUnconfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:NicUnconfigPnuOSPeer

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure adapter of server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicUnconfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-unconfig-pnuospeer-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateNicUnconfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:OobPollSasExpanderActivateStatus

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Sas expander regular firmware activation to complete(FSM-STAGE:sam:dme:ComputePhysicalAssociate:OobPollSasExpanderActivateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-poll-sas-expander-activate-status-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateOobPollSasExpanderActivateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:OobPollSasExpanderBootImgActivateStatus

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Sas expander boot firmware update to complete(FSM-STAGE:sam:dme:ComputePhysicalAssociate:OobPollSasExpanderBootImgActivateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: oob-poll-sas-expander-boot-img-activate-status-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateOobPollSasExpanderBootImgActivateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:OobPollSasExpanderUpdateStatus

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Sas expander regular firmware update to complete(FSM-STAGE:sam:dme:ComputePhysicalAssociate:OobPollSasExpanderUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-poll-sas-expander-update-status-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateOobPollSasExpanderUpdateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:OobSasExpanderBootImgActivate

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Sas expander boot firmware update(FSM-STAGE:sam:dme:ComputePhysicalAssociate:OobSasExpanderBootImgActivate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-sas-expander-boot-img-activate-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateOobSasExpanderBootImgActivate
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:OobSasExpanderImgActivate

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Sas expander regular firmware activate(FSM-STAGE:sam:dme:ComputePhysicalAssociate:OobSasExpanderImgActivate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-sas-expander-img-activate-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateOobSasExpanderImgActivate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:OobSasExpanderImgUpdate

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Sas expander regular firmware update(FSM-STAGE:sam:dme:ComputePhysicalAssociate:OobSasExpanderImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-sas-expander-img-update-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateOobSasExpanderImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:OobStorageConfig

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Storage configuration(FSM-STAGE:sam:dme:ComputePhysicalAssociate:OobStorageConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-storage-config-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateOobStorageConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:OobStorageInventory

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Perform oob storage inventory with server profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:OobStorageInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-storage-inventory-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateOobStorageInventory
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:PciSwitchImageUpdate

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Update Pci Switch firmware image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PciSwitchImageUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pci-switch-image-update-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePciSwitchImageUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:PersistentMemoryDimmFwUpdate

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Update Persistent Memory DIMM firmware image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PersistentMemoryDimmFwUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: persistent-memory-dimm-fw-update-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePersistentMemoryDimmFwUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:PnuOSCatalog

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Populate pre-boot catalog to server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSCatalog)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuoscatalog-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePnuOSCatalog
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:PnuOSConfig

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configure server with service profile [assignedToDn] pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosconfig-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePnuOSConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:PnuOSIdent

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Identify pre-boot environment agent(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSIdent)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: pnuosident-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePnuOSIdent
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:PnuOSInventory

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Perform inventory of server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosinventory-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePnuOSInventory
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:PnuOSLocalDiskConfig

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configure local disk on server with service profile [assignedToDn] pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSLocalDiskConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuoslocal-disk-config-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePnuOSLocalDiskConfig
moClass: compute:Physical
Type: fsm
```

```
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:PnuOSPeripheralComponentConfig

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configure peripheral component on server with service profile [assignedToDn] pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSPeripheralComponentConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosperipheral-component-config-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePnuOSPeripheralComponentConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:PnuOSPolicy

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Populate pre-boot environment behavior policy(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSPolicy)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuospolicy-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePnuOSPolicy
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:PnuOSSelfTest

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Trigger self-test on pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSSelfTest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosself-test-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePnuOSSelfTest
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:PnuOSUnloadDrivers

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Unload drivers on server with service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSUnloadDrivers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosunload-drivers-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePnuOSUnloadDrivers
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:PnuOSValidate

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Pre-boot environment validation for association with [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSValidate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosvalidate-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePnuOSValidate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:PollBiosActivateStatus

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for BIOS activate(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PollBiosActivateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-bios-activate-status-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePollBiosActivateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:PollBiosUpdateStatus

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for BIOS update to complete(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PollBiosUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-bios-update-status-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePollBiosUpdateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:PollBoardCtrlPowerCycle

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Board Controller power cycle to complete(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PollBoardCtrlPowerCycle)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-board-ctrl-power-cycle-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePollBoardCtrlPowerCycle
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:PollBoardCtrlUpdateStatus

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Board Controller update to complete(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PollBoardCtrlUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: poll-board-ctrl-update-status-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePollBoardCtrlUpdateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:PollClearBiosUpdateStatus

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for pending BIOS image update to clear(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PollClearBiosUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-clear-bios-update-status-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePollClearBiosUpdateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:PowerCycleBoard

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Power cycle the board controller(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PowerCycleBoard)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-cycle-board-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePowerCycleBoard
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:PowerDeployWait

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:PowerOffForSbAdaptorActivation

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Power off the server for activating Secure boot adapter firmware(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PowerOffForSbAdaptorActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-off-for-sb-adaptor-activation-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePowerOffForSbAdaptorActivation
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:PowerOn

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Power on server for configuration of service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:PowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePowerOn
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:PowerOnPreConfig

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: PowerOn preconfig for server of service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:PowerOnPreConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-pre-config-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePowerOnPreConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:PreSanitize

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:PrepareForBoot

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Prepare server for booting host OS(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PrepareForBoot)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: prepare-for-boot-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePrepareForBoot
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:RestoreVdStatus

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Restore virtual driver status(FSM-STAGE:sam:dme:ComputePhysicalAssociate:RestoreVdStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: restore-vd-status-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateRestoreVdStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:Sanitize

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration(FSM-STAGE:sam:dme:ComputePhysicalAssociate:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:SasExpanderImgUpdate

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Update sas expander image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SasExpanderImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: sas-expander-img-update-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSasExpanderImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:SharedComponentsOobInventory

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Inventory of shared components in SIOC(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SharedComponentsOobInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: shared-components-oob-inventory-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSharedComponentsOobInventory
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:SharedComponentsOobInventoryPeer

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Inventory of shared components in peer SIOC(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SharedComponentsOobInventoryPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: shared-components-oob-inventory-peer-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSharedComponentsOobInventoryPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:SolRedirectDisable

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Disable Sol Redirection on server [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:SolRedirectDisable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sol-redirect-disable-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSolRedirectDisable
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:SolRedirectEnable

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: set up bios token for server [assignedToDn] for Sol redirect(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SolRedirectEnable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sol-redirect-enable-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSolRedirectEnable
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:StorageCtlrImgUpdate

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Update storage controller image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:StorageCtlrImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: storage-ctlr-img-update-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateStorageCtlrImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:SwConfigHostOSLocal

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configure primary fabric interconnect for server host os (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigHostOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-hostoslocal-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSwConfigHostOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:SwConfigHostOSPeer

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configure secondary fabric interconnect for server host OS (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigHostOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-hostospeer-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSwConfigHostOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:SwConfigPnuOSLocal

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configure primary fabric interconnect for pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-pnuoslocal-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSwConfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:SwConfigPnuOSPeer

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configure secondary fabric interconnect for pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-pnuospeer-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSwConfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:SwConfigPortNivLocal

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: configuring primary fabric interconnect access to server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigPortNivLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-port-niv-local-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSwConfigPortNivLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:SwConfigPortNivPeer

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: configuring secondary fabric interconnect access to server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigPortNivPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: sw-config-port-niv-peer-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSwConfigPortNivPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:SwConfigServiceInfraLocal

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configure service infrastructure on primary fabric Interconnect(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigServiceInfraLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-service-infra-local-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSwConfigServiceInfraLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:SwConfigServiceInfraPeer

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Configure service infrastructure on secondary fabric Interconnect(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigServiceInfraPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-service-infra-peer-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSwConfigServiceInfraPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:SwUnconfigPnuOSLocal

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure primary fabric interconnect for server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwUnconfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfig-pnuoslocal-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSwUnconfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:SwUnconfigPnuOSPeer

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure secondary fabric interconnect for server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwUnconfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfig-pnuospeer-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSwUnconfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:SyncPowerState

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Sync power state for server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SyncPowerState)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sync-power-state-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSyncPowerState
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:UnconfigCimcVMedia

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning all mappings for vmedia(FSM-STAGE:sam:dme:ComputePhysicalAssociate:UnconfigCimcVMedia)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-cimcvmedia-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateUnconfigCimcVMedia
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:UnconfigExtMgmtGw

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning all ext mgmt gateway for vmedia(FSM-STAGE:sam:dme:ComputePhysicalAssociate:UnconfigExtMgmtGw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-ext-mgmt-gw-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateUnconfigExtMgmtGw
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:UnconfigExtMgmtRules

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning all ext mgmt rules for vmedia(FSM-STAGE:sam:dme:ComputePhysicalAssociate:UnconfigExtMgmtRules)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-ext-mgmt-rules-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateUnconfigExtMgmtRules
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:UnlockFirmwareImage

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Releasing the lock obtained(FSM-STAGE:sam:dme:ComputePhysicalAssociate:UnlockFirmwareImage)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unlock-firmware-image-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateUnlockFirmwareImage
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:UpdateBiosRequest

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Sending update BIOS request to CIMC(FSM-STAGE:sam:dme:ComputePhysicalAssociate:UpdateBiosRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-bios-request-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateUpdateBiosRequest
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:UpdateBoardCtrlRequest

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Sending Board Controller update request to CIMC(FSM-STAGE:sam:dme:ComputePhysicalAssociate:UpdateBoardCtrlRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: update-board-ctrl-request-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateUpdateBoardCtrlRequest
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:UpdateFruComponents

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Updating Sub Components after Power Off for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:UpdateFruComponents)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-fru-components-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateUpdateFruComponents
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:VerifyFcZoneConfig

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Verifying Storage(FC Zones) Connectivity(FSM-STAGE:sam:dme:ComputePhysicalAssociate:VerifyFcZoneConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: verify-fc-zone-config-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateVerifyFcZoneConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:WaitForBiosPostCompletion

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for adaptor to come up after BIOS POST completion(FSM-STAGE:sam:dme:ComputePhysicalAssociate:WaitForBiosPostCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-bios-post-completion-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateWaitForBiosPostCompletion
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:WaitForBorderConfigCompletionLocal

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Wait for border ports configuration completion on primary fabric interconnect(FSM-STAGE:sam:dme:ComputePhysicalAssociate:WaitForBorderConfigCompletionLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-border-config-completion-local-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateWaitForBorderConfigCompletionLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:WaitForBorderConfigCompletionPeer

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Wait for border ports configuration completion on secondary fabric interconnect(FSM-STAGE:sam:dme:ComputePhysicalAssociate:WaitForBorderConfigCompletionPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-border-config-completion-peer-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateWaitForBorderConfigCompletionPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:activateAdaptorNwFwLocal

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Activate adapter network firmware on(FSM-STAGE:sam:dme:ComputePhysicalAssociate:activateAdaptorNwFwLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-adaptor-nw-fw-local-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateActivateAdaptorNwFwLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:activateAdaptorNwFwPeer

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Activate adapter network firmware on(FSM-STAGE:sam:dme:ComputePhysicalAssociate:activateAdaptorNwFwPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-adaptor-nw-fw-peer-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateActivateAdaptorNwFwPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:activateIBMCFw

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Activate CIMC firmware of server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:activateIBMCFw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activateibmcfw-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateActivateIBMCFw
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:activateNwSbAdaptorFw

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Activate Network Secure boot adapter firmware(FSM-STAGE:sam:dme:ComputePhysicalAssociate:activateNwSbAdaptorFw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-nw-sb-adaptor-fw-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateActivateNwSbAdaptorFw
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:copyRemote

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Copy images to peer node(FSM-STAGE:sam:dme:ComputePhysicalAssociate:copyRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-remote-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateCopyRemote
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:downloadImages

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Download images from operations manager(FSM-STAGE:sam:dme:ComputePhysicalAssociate:downloadImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: download-images-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateDownloadImages
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:hagHostOSConnect

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Connect to host agent on server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:hagHostOSConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-hostosconnect-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateHagHostOSConnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:hagPnuOSConnect

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Connect to pre-boot environment agent for association with [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:hagPnuOSConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-pnuosconnect-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateHagPnuOSConnect
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:hagPnuOSDisconnect

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Disconnect pre-boot environment agent(FSM-STAGE:sam:dme:ComputePhysicalAssociate:hagPnuOSDisconnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-pnuosdisconnect-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateHagPnuOSDisconnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:resetIBMC

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Reset CIMC of server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:resetIBMC)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resetibmc-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateResetIBMC
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:serialDebugPnuOSConnect

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Connect to pre-boot environment agent for association with [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:serialDebugPnuOSConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: serial-debug-pnuosconnect-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSerialDebugPnuOSConnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:serialDebugPnuOSDisconnect

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Disconnect pre-boot environment agent(FSM-STAGE:sam:dme:ComputePhysicalAssociate:serialDebugPnuOSDisconnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: serial-debug-pnuosdisconnect-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSerialDebugPnuOSDisconnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:updateAdaptorNwFwLocal

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Update adapter network firmware(FSM-STAGE:sam:dme:ComputePhysicalAssociate:updateAdaptorNwFwLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-adaptor-nw-fw-local-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateUpdateAdaptorNwFwLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:updateAdaptorNwFwPeer

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Update adapter network firmware(FSM-STAGE:sam:dme:ComputePhysicalAssociate:updateAdaptorNwFwPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-adaptor-nw-fw-peer-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateUpdateAdaptorNwFwPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:updateIBMCFw

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Update CIMC firmware of server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:updateIBMCFw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: updateibmcfw-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateUpdateIBMCFw
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:updateNwSbAdaptorFw

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Update Network Secure boot adapter firmware(FSM-STAGE:sam:dme:ComputePhysicalAssociate:updateNwSbAdaptorFw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-nw-sb-adaptor-fw-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateUpdateNwSbAdaptorFw
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:waitForAdaptorNwFwUpdateLocal

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Wait for adapter network firmware update completion(FSM-STAGE:sam:dme:ComputePhysicalAssociate:waitForAdaptorNwFwUpdateLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: wait-for-adaptor-nw-fw-update-local-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateWaitForAdaptorNwFwUpdateLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:waitForAdaptorNwFwUpdatePeer

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Wait for adapter network firmware update completion(FSM-STAGE:sam:dme:ComputePhysicalAssociate:waitForAdaptorNwFwUpdatePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-adaptor-nw-fw-update-peer-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateWaitForAdaptorNwFwUpdatePeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:waitForIBMCFwUpdate

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Wait for CIMC firmware completion on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:waitForIBMCFwUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-foribmcfw-update-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateWaitForIBMCFwUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:waitForNwSbAdaptorFwActivate

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Wait for Network Secure boot adapter firmware activation completion(FSM-STAGE:sam:dme:ComputePhysicalAssociate:waitForNwSbAdaptorFwActivate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-nw-sb-adaptor-fw-activate-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateWaitForNwSbAdaptorFwActivate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:waitForNwSbAdaptorFwUpdate

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Wait for Network Secure boot adapter firmware update completion(FSM-STAGE:sam:dme:ComputePhysicalAssociate:waitForNwSbAdaptorFwUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-nw-sb-adaptor-fw-update-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateWaitForNwSbAdaptorFwUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalAssociate:waitForUpdateFruComponents

Fault Code: F78413

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for update completion on Sub Components for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:waitForUpdateFruComponents)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-update-fru-components-failed
mibFaultCode: F78413
mibFaultName: fsmRmtErrComputePhysicalAssociateWaitForUpdateFruComponents
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:BiosPostCompletion

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for BIOS POST completion from CIMC on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BiosPostCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateBiosPostCompletion
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:BmcConfigPnuOS

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: provisioning a bootable device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BmcConfigPnuOS)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-config-pnuos-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateBmcConfigPnuOS
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:BmcPreconfigPnuOSLocal

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BmcPreconfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-preconfig-pnuoslocal-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateBmcPreconfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:BmcPreconfigPnuOSPeer

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BmcPreconfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-preconfig-pnuospeer-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateBmcPreconfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:BmcUnconfigPnuOS

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: unprovisioning the bootable device for server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BmcUnconfigPnuOS)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-unconfig-pnuos-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateBmcUnconfigPnuOS
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:BootPnuos

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Bring-up pre-boot environment on server for disassociation with service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BootPnuos)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: boot-pnuos-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateBootPnuos
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:BootWait

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for system reset on server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BootWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-wait-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateBootWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:CheckPowerAvailability

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:ConfigBios

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring BIOS Defaults on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:ConfigBios)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-bios-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateConfigBios
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:ConfigFlexFlashScrub

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring FlexFlash Scrub on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:ConfigFlexFlashScrub)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-flex-flash-scrub-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateConfigFlexFlashScrub
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:ConfigKvmMgmtDefaultSetting

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Configure KVM Mgmt to default before ConfigPnuOs(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:ConfigKvmMgmtDefaultSetting)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-kvm-mgmt-default-setting-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateConfigKvmMgmtDefaultSetting
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:ConfigUserAccess

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring external user access(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:ConfigUserAccess)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-user-access-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateConfigUserAccess
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:DeassertResetBypass

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: deassert reset-bypass(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:DeassertResetBypass)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: deassert-reset-bypass-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateDeassertResetBypass
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:HandlePooling

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Apply post-disassociation policies to server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:HandlePooling)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: handle-pooling-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateHandlePooling
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:NicConfigPnuOSLocal

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Configure adapter for pre-boot environment on server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicConfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-pnuoslocal-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateNicConfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:NicConfigPnuOSPeer

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Configure adapter for pre-boot environment on server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicConfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-pnuospeer-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateNicConfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:NicUnconfigHostOSLocal

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure host OS connectivity from server adapter(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicUnconfigHostOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: nic-unconfig-hostoslocal-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateNicUnconfigHostOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:NicUnconfigHostOSPeer

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure host OS connectivity from server adapter(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicUnconfigHostOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-unconfig-hostospeer-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateNicUnconfigHostOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:NicUnconfigPnuOSLocal

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure adapter of server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicUnconfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-unconfig-pnuoslocal-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateNicUnconfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:NicUnconfigPnuOSPeer

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure adapter of server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicUnconfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-unconfig-pnuospeer-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateNicUnconfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:NicUnconfigServiceInfraLocal

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure service infra connectivity from server adapter(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicUnconfigServiceInfraLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-unconfig-service-infra-local-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateNicUnconfigServiceInfraLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:NicUnconfigServiceInfraPeer

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure service infra connectivity from server adapter(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicUnconfigServiceInfraPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-unconfig-service-infra-peer-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateNicUnconfigServiceInfraPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:OobDiskScrub

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Disk Scrub(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:OobDiskScrub)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-disk-scrub-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateOobDiskScrub
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:PnuOSCatalog

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Populate pre-boot catalog to server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSCatalog)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuoscatalog-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociatePnuOSCatalog
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:PnuOSIdent

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Identify pre-boot environment agent on server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSIdent)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosident-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociatePnuOSIdent
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:PnuOSPolicy

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Populate pre-boot environment behavior policy to server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSPolicy)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuospolicy-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociatePnuOSPolicy
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:PnuOSScrub

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Scrub server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSScrub)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosscrub-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociatePnuOSScrub
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:PnuOSSelfTest

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Trigger self-test of server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSSelfTest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: pnuosself-test-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociatePnuOSSelfTest
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:PnuOSUnconfig

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure server from service profile [assignedToDn] pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSUnconfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosunconfig-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociatePnuOSUnconfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:PnuOSValidate

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Pre-boot environment validate server for disassociation with service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSValidate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosvalidate-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociatePnuOSValidate
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:PowerDeployWait

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociatePowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:PowerOn

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Power on server for unconfiguration of service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociatePowerOn
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:PreSanitize

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociatePreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:ResetSecureBootConfig

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure secure boot configuration(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:ResetSecureBootConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: reset-secure-boot-config-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateResetSecureBootConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:Sanitize

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:Shutdown

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Shutdown server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:Shutdown)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: shutdown-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateShutdown
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:SolRedirectDisable

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Disable Sol redirection on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SolRedirectDisable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sol-redirect-disable-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateSolRedirectDisable
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:SolRedirectEnable

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: set up bios token for server [serverId] for Sol redirect(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SolRedirectEnable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sol-redirect-enable-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateSolRedirectEnable
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:SwConfigPnuOSLocal

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Configure primary fabric interconnect for pre-boot environment on server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwConfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: sw-config-pnuoslocal-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateSwConfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:SwConfigPnuOSPeer

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Configure secondary fabric interconnect for pre-boot environment on server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwConfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-pnuospeer-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateSwConfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:SwConfigPortNivLocal

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: configuring primary fabric interconnect access to server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwConfigPortNivLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-port-niv-local-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateSwConfigPortNivLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:SwConfigPortNivPeer

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: configuring secondary fabric interconnect access to server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwConfigPortNivPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-port-niv-peer-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateSwConfigPortNivPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:SwUnconfigHostOSLocal

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure host OS connectivity from server to primary fabric interconnect(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwUnconfigHostOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfig-hostoslocal-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateSwUnconfigHostOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:SwUnconfigHostOSPeer

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure host OS connectivity from server to secondary fabric interconnect(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwUnconfigHostOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfig-hostospeer-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateSwUnconfigHostOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:SwUnconfigPnuOSLocal

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure primary fabric interconnect for server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwUnconfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfig-pnuoslocal-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateSwUnconfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:SwUnconfigPnuOSPeer

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure secondary fabric interconnect for server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwUnconfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfig-pnuospeer-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateSwUnconfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:UnconfigBios

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfiguring BIOS Settings and Boot Order of server [serverId] (service profile [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:UnconfigBios)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-bios-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateUnconfigBios
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:UnconfigCimcVMedia

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning all mappings for vmedia(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:UnconfigCimcVMedia)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-cimcvmedia-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateUnconfigCimcVMedia
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:UnconfigExtMgmtGw

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning all ext mgmt gateway for vmedia(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:UnconfigExtMgmtGw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-ext-mgmt-gw-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateUnconfigExtMgmtGw
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:UnconfigExtMgmtRules

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning all ext mgmt rules for vmedia(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:UnconfigExtMgmtRules)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: unconfig-ext-mgmt-rules-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateUnconfigExtMgmtRules
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:UnconfigFlexFlash

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfiguring FlexFlash(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:UnconfigFlexFlash)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-flex-flash-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateUnconfigFlexFlash
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:UnconfigServerIdentity

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: reset asset tag for server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:UnconfigServerIdentity)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-server-identity-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateUnconfigServerIdentity
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:UnconfigSoL

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Removing SoL configuration from server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:UnconfigSoL)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-so-lfailed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateUnconfigSoL
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:UnconfigUuid

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Restore original UUID for server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:UnconfigUuid)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-uuid-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateUnconfigUuid
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:VerifyFcZoneConfig

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Verifying Storage(FC Zones) Connectivity(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:VerifyFcZoneConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: verify-fc-zone-config-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateVerifyFcZoneConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:hagPnuOSConnect

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Connect to pre-boot environment agent on server for disassociation with service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:hagPnuOSConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-pnuosconnect-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateHagPnuOSConnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:hagPnuOSDisconnect

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Disconnect pre-boot environment agent for server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:hagPnuOSDisconnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-pnuosdisconnect-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateHagPnuOSDisconnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:serialDebugPnuOSConnect

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Connect to pre-boot environment agent on server for disassociation with service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:serialDebugPnuOSConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: serial-debug-pnuosconnect-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateSerialDebugPnuOSConnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDisassociate:serialDebugPnuOSDisconnect

Fault Code: F78414

Message: [FSM:STAGE:REMOTE-ERROR]: Disconnect pre-boot environment agent for server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:serialDebugPnuOSDisconnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: serial-debug-pnuosdisconnect-failed
mibFaultCode: F78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateSerialDebugPnuOSDisconnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalPowerCap:Config

Fault Code: F78415

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring power cap of server [dn](FSM-STAGE:sam:dme:ComputePhysicalPowerCap:Config)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-failed
mibFaultCode: F78415
mibFaultName: fsmRmtErrComputePhysicalPowerCapConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDecommission:CleanupCIMC

Fault Code: F78416

Message: [FSM:STAGE:REMOTE-ERROR]: Cleaning up CIMC configuration for server [dn](FSM-STAGE:sam:dme:ComputePhysicalDecommission:CleanupCIMC)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cleanupcimc-failed
mibFaultCode: F78416
mibFaultName: fsmRmtErrComputePhysicalDecommissionCleanupCIMC
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDecommission:CleanupPortConfigLocal

Fault Code: F78416

Message: [FSM:STAGE:REMOTE-ERROR]: Cleaning up local port config for server [dn](FSM-STAGE:sam:dme:ComputePhysicalDecommission:CleanupPortConfigLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cleanup-port-config-local-failed
mibFaultCode: F78416
mibFaultName: fsmRmtErrComputePhysicalDecommissionCleanupPortConfigLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDecommission:CleanupPortConfigPeer

Fault Code: F78416

Message: [FSM:STAGE:REMOTE-ERROR]: Cleaning up peer port config for server [dn](FSM-STAGE:sam:dme:ComputePhysicalDecommission:CleanupPortConfigPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cleanup-port-config-peer-failed
mibFaultCode: F78416
```

```
mibFaultName: fsmRmtErrComputePhysicalDecommissionCleanupPortConfigPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDecommission:Execute

Fault Code: F78416

Message: [FSM:STAGE:REMOTE-ERROR]: Decommissioning server [dn](FSM-STAGE:sam:dme:ComputePhysicalDecommission:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78416
mibFaultName: fsmRmtErrComputePhysicalDecommissionExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDecommission:PrecleanupPortConfig

Fault Code: F78416

Message: [FSM:STAGE:REMOTE-ERROR]: Preparing to clean port config for server [dn](FSM-STAGE:sam:dme:ComputePhysicalDecommission:PrecleanupPortConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: precleanup-port-config-failed
mibFaultCode: F78416
mibFaultName: fsmRmtErrComputePhysicalDecommissionPrecleanupPortConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

```
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDecommission:StopVMediaLocal

Fault Code: F78416

Message: [FSM:STAGE:REMOTE-ERROR]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalDecommission:StopVMediaLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: stopvmedia-local-failed
mibFaultCode: F78416
mibFaultName: fsmRmtErrComputePhysicalDecommissionStopVMediaLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDecommission:StopVMediaPeer

Fault Code: F78416

Message: [FSM:STAGE:REMOTE-ERROR]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalDecommission:StopVMediaPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: stopvmedia-peer-failed
mibFaultCode: F78416
mibFaultName: fsmRmtErrComputePhysicalDecommissionStopVMediaPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDecommission:UnconfigExtMgmtGw

Fault Code: F78416

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning all ext mgmt gateway for vmedia(FSM-STAGE:sam:dme:ComputePhysicalDecommission:UnconfigExtMgmtGw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-ext-mgmt-gw-failed
mibFaultCode: F78416
mibFaultName: fsmRmtErrComputePhysicalDecommissionUnconfigExtMgmtGw
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDecommission:UnconfigExtMgmtRules

Fault Code: F78416

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning all ext mgmt rules for vmedia(FSM-STAGE:sam:dme:ComputePhysicalDecommission:UnconfigExtMgmtRules)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-ext-mgmt-rules-failed
mibFaultCode: F78416
mibFaultName: fsmRmtErrComputePhysicalDecommissionUnconfigExtMgmtRules
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalSoftShutdown:Execute

Fault Code: F78417

Message: [FSM:STAGE:REMOTE-ERROR]: Soft shutdown of server [dn](FSM-STAGE:sam:dme:ComputePhysicalSoftShutdown:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78417
mibFaultName: fsmRmtErrComputePhysicalSoftShutdownExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalHardShutdown:Execute

Fault Code: F78418

Message: [FSM:STAGE:REMOTE-ERROR]: Hard shutdown of server [dn](FSM-STAGE:sam:dme:ComputePhysicalHardShutdown:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78418
mibFaultName: fsmRmtErrComputePhysicalHardShutdownExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalTurnup:CheckPowerAvailability

Fault Code: F78419

Message: [FSM:STAGE:REMOTE-ERROR]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalTurnup:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F78419
mibFaultName: fsmRmtErrComputePhysicalTurnupCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalTurnup:Execute

Fault Code: F78419

Message: [FSM:STAGE:REMOTE-ERROR]: Power-on server [dn](FSM-STAGE:sam:dme:ComputePhysicalTurnup:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78419
mibFaultName: fsmRmtErrComputePhysicalTurnupExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalTurnup:PowerDeployWait

Fault Code: F78419

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalTurnup:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: power-deploy-wait-failed
mibFaultCode: F78419
mibFaultName: fsmRmtErrComputePhysicalTurnupPowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalPowercycle:CheckPowerAvailability

Fault Code: F78420

Message: [FSM:STAGE:REMOTE-ERROR]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalPowercycle:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F78420
mibFaultName: fsmRmtErrComputePhysicalPowercycleCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalPowercycle:Execute

Fault Code: F78420

Message: [FSM:STAGE:REMOTE-ERROR]: Power-cycle server [dn](FSM-STAGE:sam:dme:ComputePhysicalPowercycle:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78420
mibFaultName: fsmRmtErrComputePhysicalPowercycleExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalPowercycle:PowerDeployWait

Fault Code: F78420

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalPowercycle:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F78420
mibFaultName: fsmRmtErrComputePhysicalPowercyclePowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalPowercycle:PreSanitize

Fault Code: F78420

Message: [FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration server [dn](FSM-STAGE:sam:dme:ComputePhysicalPowercycle:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F78420
mibFaultName: fsmRmtErrComputePhysicalPowercyclePreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalPowercycle:Sanitize

Fault Code: F78420

Message: [FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration server [dn](FSM-STAGE:sam:dme:ComputePhysicalPowercycle:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F78420
mibFaultName: fsmRmtErrComputePhysicalPowercycleSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalHardreset:CheckPowerAvailability

Fault Code: F78421

Message: [FSM:STAGE:REMOTE-ERROR]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalHardreset:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F78421
mibFaultName: fsmRmtErrComputePhysicalHardresetCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalHardreset:Execute

Fault Code: F78421

Message: [FSM:STAGE:REMOTE-ERROR]: Hard-reset server [dn](FSM-STAGE:sam:dme:ComputePhysicalHardreset:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78421
mibFaultName: fsmRmtErrComputePhysicalHardresetExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalHardreset:PowerDeployWait

Fault Code: F78421

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalHardreset:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F78421
mibFaultName: fsmRmtErrComputePhysicalHardresetPowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalHardreset:PreSanitize

Fault Code: F78421

Message: [FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration server [dn](FSM-STAGE:sam:dme:ComputePhysicalHardreset:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F78421
mibFaultName: fsmRmtErrComputePhysicalHardresetPreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalHardreset:Sanitize

Fault Code: F78421

Message: [FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration server [dn](FSM-STAGE:sam:dme:ComputePhysicalHardreset:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F78421
mibFaultName: fsmRmtErrComputePhysicalHardresetSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalSoftreset:CheckPowerAvailability

Fault Code: F78422

Message: [FSM:STAGE:REMOTE-ERROR]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalSoftreset:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: check-power-availability-failed
mibFaultCode: F78422
mibFaultName: fsmRmtErrComputePhysicalSoftresetCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalSoftreset:Execute

Fault Code: F78422

Message: [FSM:STAGE:REMOTE-ERROR]: Soft-reset server [dn](FSM-STAGE:sam:dme:ComputePhysicalSoftreset:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78422
mibFaultName: fsmRmtErrComputePhysicalSoftresetExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalSoftreset:PowerDeployWait

Fault Code: F78422

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalSoftreset:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F78422
mibFaultName: fsmRmtErrComputePhysicalSoftresetPowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalSoftreset:PreSanitize

Fault Code: F78422

Message: [FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration server [dn](FSM-STAGE:sam:dme:ComputePhysicalSoftreset:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F78422
mibFaultName: fsmRmtErrComputePhysicalSoftresetPreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalSoftreset:Sanitize

Fault Code: F78422

Message: [FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration server [dn](FSM-STAGE:sam:dme:ComputePhysicalSoftreset:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F78422
mibFaultName: fsmRmtErrComputePhysicalSoftresetSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalSwConnUpd:A

Fault Code: F78423

Message: [FSM:STAGE:REMOTE-ERROR]: Updating fabric A for server [dn](FSM-STAGE:sam:dme:ComputePhysicalSwConnUpd:A)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: a-failed
mibFaultCode: F78423
mibFaultName: fsmRmtErrComputePhysicalSwConnUpdA
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalSwConnUpd:B

Fault Code: F78423

Message: [FSM:STAGE:REMOTE-ERROR]: Updating fabric B for server [dn](FSM-STAGE:sam:dme:ComputePhysicalSwConnUpd:B)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: b-failed
mibFaultCode: F78423
mibFaultName: fsmRmtErrComputePhysicalSwConnUpdB
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalBiosRecovery:CheckPowerAvailability

Fault Code: F78424

Message: [FSM:STAGE:REMOTE-ERROR]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoveryCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalBiosRecovery:Cleanup

Fault Code: F78424

Message: [FSM:STAGE:REMOTE-ERROR]: Completing BIOS recovery mode for server [dn], and shutting it down(FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:Cleanup)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cleanup-failed
mibFaultCode: F78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoveryCleanup
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalBiosRecovery:PowerDeployWait

Fault Code: F78424

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoveryPowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalBiosRecovery:PreSanitize

Fault Code: F78424

Message: [FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoveryPreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalBiosRecovery:Reset

Fault Code: F78424

Message: [FSM:STAGE:REMOTE-ERROR]: Resetting server [dn] power state after BIOS recovery(FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:Reset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: reset-failed
mibFaultCode: F78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoveryReset
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalBiosRecovery:Sanitize

Fault Code: F78424

Message: [FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoverySanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalBiosRecovery:SetupVmediaLocal

Fault Code: F78424

Message: [FSM:STAGE:REMOTE-ERROR]: Provisioning a V-Media device with a bootable BIOS image for server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:SetupVmediaLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: setup-vmedia-local-failed
mibFaultCode: F78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoverySetupVmediaLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalBiosRecovery:SetupVmediaPeer

Fault Code: F78424

Message: [FSM:STAGE:REMOTE-ERROR]: Provisioning a V-Media device with a bootable BIOS image for server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:SetupVmediaPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: setup-vmedia-peer-failed
mibFaultCode: F78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoverySetupVmediaPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalBiosRecovery:Shutdown

Fault Code: F78424

Message: [FSM:STAGE:REMOTE-ERROR]: Shutting down server [dn] to prepare for BIOS recovery(FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:Shutdown)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: shutdown-failed
mibFaultCode: F78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoveryShutdown
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalBiosRecovery:Start

Fault Code: F78424

Message: [FSM:STAGE:REMOTE-ERROR]: Running BIOS recovery on server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:Start)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: start-failed
mibFaultCode: F78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoveryStart
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalBiosRecovery:StopVMediaLocal

Fault Code: F78424

Message: [FSM:STAGE:REMOTE-ERROR]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:StopVMediaLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: stopvmedia-local-failed
mibFaultCode: F78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoveryStopVMediaLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalBiosRecovery:StopVMediaPeer

Fault Code: F78424

Message: [FSM:STAGE:REMOTE-ERROR]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:StopVMediaPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: stopvmedia-peer-failed
mibFaultCode: F78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoveryStopVMediaPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalBiosRecovery:TeardownVmediaLocal

Fault Code: F78424

Message: [FSM:STAGE:REMOTE-ERROR]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:TeardownVmediaLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: teardown-vmedia-local-failed
mibFaultCode: F78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoveryTeardownVmediaLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalBiosRecovery:TeardownVmediaPeer

Fault Code: F78424

Message: [FSM:STAGE:REMOTE-ERROR]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:TeardownVmediaPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: teardown-vmedia-peer-failed
mibFaultCode: F78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoveryTeardownVmediaPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalBiosRecovery:Wait

Fault Code: F78424

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for completion of BIOS recovery for server [dn] (up to 15 min)(FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:Wait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-failed
mibFaultCode: F78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoveryWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalCmosReset:BladePowerOn

Fault Code: F78426

Message: [FSM:STAGE:REMOTE-ERROR]: Power on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:BladePowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: blade-power-on-failed
mibFaultCode: F78426
mibFaultName: fsmRmtErrComputePhysicalCmosResetBladePowerOn
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalCmosReset:CheckPowerAvailability

Fault Code: F78426

Message: [FSM:STAGE:REMOTE-ERROR]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F78426
mibFaultName: fsmRmtErrComputePhysicalCmosResetCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalCmosReset:Execute

Fault Code: F78426

Message: [FSM:STAGE:REMOTE-ERROR]: Resetting CMOS for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78426
mibFaultName: fsmRmtErrComputePhysicalCmosResetExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalCmosReset:PowerDeployWait

Fault Code: F78426

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F78426
mibFaultName: fsmRmtErrComputePhysicalCmosResetPowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalCmosReset:PreSanitize

Fault Code: F78426

Message: [FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration server [serverId](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F78426
mibFaultName: fsmRmtErrComputePhysicalCmosResetPreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalCmosReset:ReconfigBios

Fault Code: F78426

Message: [FSM:STAGE:REMOTE-ERROR]: Reconfiguring BIOS Settings and Boot Order of server [serverId] for service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:ReconfigBios)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: reconfig-bios-failed
mibFaultCode: F78426
mibFaultName: fsmRmtErrComputePhysicalCmosResetReconfigBios
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalCmosReset:ReconfigUuid

Fault Code: F78426

Message: [FSM:STAGE:REMOTE-ERROR]: Reconfiguring logical UUID of server [serverId] for service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:ReconfigUuid)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: reconfig-uuid-failed
mibFaultCode: F78426
mibFaultName: fsmRmtErrComputePhysicalCmosResetReconfigUuid
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalCmosReset:Sanitize

Fault Code: F78426

Message: [FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration server [serverId](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F78426
mibFaultName: fsmRmtErrComputePhysicalCmosResetSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalResetBmc:Execute

Fault Code: F78427

Message: [FSM:STAGE:REMOTE-ERROR]: Resetting Management Controller on server [dn](FSM-STAGE:sam:dme:ComputePhysicalResetBmc:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78427
mibFaultName: fsmRmtErrComputePhysicalResetBmcExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrEquipmentIOCardResetIom:Execute

Fault Code: F78428

Message: [FSM:STAGE:REMOTE-ERROR]: Reset IOM [id] on Fex [chassisId](FSM-STAGE:sam:dme:EquipmentIOCardResetIom:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78428
mibFaultName: fsmRmtErrEquipmentIOCardResetIomExecute
moClass: equipment:IOCard
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmRmtErrComputeRackUnitDiscover:BiosPostCompletion

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for BIOS POST completion from CIMC on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BiosPostCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBiosPostCompletion
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:BladePowerOff

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: power on server [id] for discovery(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BladePowerOff)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: blade-power-off-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBladePowerOff
```

```
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:BmcConfigPnuOS

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: provisioning a bootable device with a bootable pre-boot image for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcConfigPnuOS)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-config-pnuos-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBmcConfigPnuOS
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:BmcConfigureConnLocal

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring connectivity on CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcConfigureConnLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-configure-conn-local-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBmcConfigureConnLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:BmcConfigureConnPeer

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring connectivity on CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcConfigureConnPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-configure-conn-peer-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBmcConfigureConnPeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:BmcFactoryReset

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: performing factory reset of server [id] via CIMC(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcFactoryReset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-factory-reset-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBmcFactoryReset
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:BmcInventory

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: getting inventory of server [id] via CIMC(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-inventory-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBmcInventory
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:BmcPreconfigPnuOSLocal

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcPreconfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-preconfig-pnuoslocal-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBmcPreconfigPnuOSLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:BmcPreconfigPnuOSPeer

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcPreconfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-preconfig-pnuospeer-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBmcPreconfigPnuOSPeer
moClass: compute:RackUnit
Type: fsm
```

```
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:BmcPresence

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: checking CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcPresence)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-presence-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBmcPresence
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:BmcShutdownDiscovered

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Shutdown the server [id]; deep discovery completed(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcShutdownDiscovered)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-shutdown-discovered-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBmcShutdownDiscovered
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:BmcUnconfigPnuOS

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: unprovisioning the bootable device for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcUnconfigPnuOS)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-unconfig-pnuos-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBmcUnconfigPnuOS
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:BootPnuos

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: power server [id] on with pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BootPnuos)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-pnuos-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBootPnuos
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:BootWait

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for system reset on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BootWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-wait-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBootWait
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:CheckPowerAvailability

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Check if power can be allocated to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverCheckPowerAvailability
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:ConfigDiscoveryMode

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: setting adapter mode to discovery for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:ConfigDiscoveryMode)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-discovery-mode-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverConfigDiscoveryMode
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:ConfigFlexFlashScrub

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring FlexFlash Scrub on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:ConfigFlexFlashScrub)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-flex-flash-scrub-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverConfigFlexFlashScrub
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:ConfigNivMode

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: setting adapter mode to NIV for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:ConfigNivMode)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-niv-mode-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverConfigNivMode
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:ConfigUserAccess

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: configuring external user access to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:ConfigUserAccess)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-user-access-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverConfigUserAccess
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:FruComponentInventory

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Fru Component Inventory for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:FruComponentInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: fru-component-inventory-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverFruComponentInventory
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:HandlePooling

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Invoke post-discovery policies on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:HandlePooling)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: handle-pooling-failed
mibFaultCode: F78434
```

```
mibFaultName: fsmRmtErrComputeRackUnitDiscoverHandlePooling
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:NicConfigPnuOSLocal

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: configure primary adapter in server [id] for pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:NicConfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-pnuoslocal-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverNicConfigPnuOSLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:NicConfigPnuOSPeer

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: configure secondary adapter in server [id] for pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:NicConfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-pnuospeer-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverNicConfigPnuOSPeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:NicInventoryLocal

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: detect and get mezz cards information from [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:NicInventoryLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-inventory-local-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverNicInventoryLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:NicInventoryPeer

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: detect and get mezz cards information from [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:NicInventoryPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-inventory-peer-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverNicInventoryPeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:OobStorageConfig

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Configure the storage configuration settings of server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:OobStorageConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-storage-config-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverOobStorageConfig
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:OobStorageInventory

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: getting oob storage inventory of server [id] via CIMC(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:OobStorageInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-storage-inventory-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverOobStorageInventory
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:PnuOSCatalog

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Populate pre-boot catalog to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSCatalog)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuoscatalog-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverPnuOSCatalog
moClass: compute:RackUnit
Type: fsm
```

```
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:PnuOSConnStatus

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Explore connectivity of server [id] in pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSConnStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosconn-status-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverPnuOSConnStatus
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:PnuOSConnectivity

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Explore connectivity of server [id] in pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSConnectivity)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosconnectivity-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverPnuOSConnectivity
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:PnuOSIdent

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Identify pre-boot environment agent on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSIdent)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosident-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverPnuOSIdent
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:PnuOSInventory

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Perform inventory of server [id] pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosinventory-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverPnuOSInventory
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:PnuOSPolicy

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Populate pre-boot environment behavior policy to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSPolicy)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuospolicy-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverPnuOSPolicy
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:PnuOSScrub

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Scrub server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSScrub)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosscrub-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverPnuOSScrub
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:PnuOSSelfTest

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Trigger self-test of server [id] pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSSelfTest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosself-test-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverPnuOSSelfTest
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:PnuosBootWait

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for PNUOS to boot on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuosBootWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuos-boot-wait-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverPnuosBootWait
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:PowerDeployWait

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for power allocation to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverPowerDeployWait
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:PreSanitize

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverPreSanitize
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:ReadSmbios

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for SMBIOS table from CIMC on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:ReadSmbios)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: read-smbios-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverReadSmbios
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:Sanitize

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F78434
```

```
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSanitize
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:SolRedirectDisable

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Disable Sol Redirection on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SolRedirectDisable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sol-redirect-disable-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSolRedirectDisable
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:SolRedirectEnable

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: set up bios token on server [id] for Sol redirect(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SolRedirectEnable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sol-redirect-enable-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSolRedirectEnable
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:SwConfigPnuOSLocal

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: configure primary fabric interconnect for pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-pnuoslocal-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwConfigPnuOSLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:SwConfigPnuOSPeer

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: configure secondary fabric interconnect for pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-pnuospeer-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwConfigPnuOSPeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:SwConfigPortNivLocal

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: configuring primary fabric interconnect access to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigPortNivLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-port-niv-local-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwConfigPortNivLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:SwConfigPortNivPeer

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: configuring secondary fabric interconnect access to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigPortNivPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-port-niv-peer-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwConfigPortNivPeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:SwConfigureConnLocal

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring fabric-interconnect connectivity to CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigureConnLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-configure-conn-local-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwConfigureConnLocal
moClass: compute:RackUnit
Type: fsm
```

```
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:SwConfigureConnPeer

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring fabric-interconnect connectivity to CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigureConnPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-configure-conn-peer-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwConfigureConnPeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:SwConfigurePortChannelLocal

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring port channel for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigurePortChannelLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-configure-port-channel-local-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwConfigurePortChannelLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:SwConfigurePortChannelPeer

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring port channel for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigurePortChannelPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-configure-port-channel-peer-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwConfigurePortChannelPeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:SwHostOSConfigurePortChannelLocal

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring port channel for multi-port adaptor on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwHostOSConfigurePortChannelLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-hostosconfigure-port-channel-local-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwHostOSConfigurePortChannelLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:SwHostOSConfigurePortChannelPeer

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring port channel for multi-port adaptor on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwHostOSConfigurePortChannelPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-hostosconfigure-port-channel-peer-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwHostOSConfigurePortChannelPeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:SwHostOSMultiPortConnectivityLocal

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Fetching adaptor connectivity details for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwHostOSMultiPortConnectivityLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-hostosmulti-port-connectivity-local-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwHostOSMultiPortConnectivityLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:SwHostOSMultiPortConnectivityPeer

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Fetching adaptor connectivity details for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwHostOSMultiPortConnectivityPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-hostosmulti-port-connectivity-peer-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwHostOSMultiPortConnectivityPeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:SwPnuOSConnectivityLocal

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: determine connectivity of server [id] to fabric(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwPnuOSConnectivityLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-pnuosconnectivity-local-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwPnuOSConnectivityLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:SwPnuOSConnectivityPeer

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: determine connectivity of server [id] to fabric(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwPnuOSConnectivityPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-pnuosconnectivity-peer-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwPnuOSConnectivityPeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:SwPortDetailsLocal

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Fetching adaptor connectivity details for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwPortDetailsLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-port-details-local-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwPortDetailsLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:SwPortDetailsPeer

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Fetching adaptor connectivity details for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwPortDetailsPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-port-details-peer-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwPortDetailsPeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:SwUnconfigPortNivLocal

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfiguring primary fabric interconnect access to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwUnconfigPortNivLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfig-port-niv-local-failed
mibFaultCode: F78434
```

```
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwUnconfigPortNivLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:SwUnconfigPortNivPeer

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfiguring secondary fabric interconnect access to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwUnconfigPortNivPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfig-port-niv-peer-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwUnconfigPortNivPeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:UnconfigCimcVMedia

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning all bmc mappings for vmedia(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:UnconfigCimcVMedia)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-cimcvmedia-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverUnconfigCimcVMedia
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:UnconfigExtMgmtGw

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning all ext mgmt bmc gateway for vmedia(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:UnconfigExtMgmtGw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-ext-mgmt-gw-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverUnconfigExtMgmtGw
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:UnconfigExtMgmtRules

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning all ext mgmt rules for vmedia(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:UnconfigExtMgmtRules)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-ext-mgmt-rules-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverUnconfigExtMgmtRules
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:hagConnect

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Connect to pre-boot environment agent on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:hagConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-connect-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverHagConnect
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:hagDisconnect

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Disconnect pre-boot environment agent for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:hagDisconnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-disconnect-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverHagDisconnect
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:serialDebugConnect

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Connect to pre-boot environment agent on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:serialDebugConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: serial-debug-connect-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSerialDebugConnect
moClass: compute:RackUnit
Type: fsm
```

```
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:serialDebugDisconnect

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: Disconnect pre-boot environment agent for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:serialDebugDisconnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: serial-debug-disconnect-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSerialDebugDisconnect
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitDiscover:waitForConnReady

Fault Code: F78434

Message: [FSM:STAGE:REMOTE-ERROR]: wait for connection to be established(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:waitForConnReady)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-conn-ready-failed
mibFaultCode: F78434
mibFaultName: fsmRmtErrComputeRackUnitDiscoverWaitForConnReady
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrLsServerConfigure:AnalyzeImpact

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Analyzing changes impact(FSM-STAGE:sam:dme:LsServerConfigure:AnalyzeImpact)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: analyze-impact-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureAnalyzeImpact
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:ApplyConfig

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Applying config to server [pnDn](FSM-STAGE:sam:dme:LsServerConfigure:ApplyConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-config-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureApplyConfig
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:ApplyDefaultIdentifiers

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Resolving and applying default identifiers locally(FSM-STAGE:sam:dme:LsServerConfigure:ApplyDefaultIdentifiers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-default-identifiers-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureApplyDefaultIdentifiers
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:ApplyIdentifiers

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Resolving and applying identifiers locally(FSM-STAGE:sam:dme:LsServerConfigure:ApplyIdentifiers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-identifiers-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureApplyIdentifiers
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:ApplyMaintConfig

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting to set the server maintenance mode on CIMC(FSM-STAGE:sam:dme:LsServerConfigure:ApplyMaintConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-maint-config-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureApplyMaintConfig
moClass: ls:Server
```

```
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:ApplyPolicies

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Resolving and applying policies(FSM-STAGE:sam:dme:LsServerConfigure:ApplyPolicies)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-policies-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureApplyPolicies
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:ApplyTemplate

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Applying configuration template [srcTemplName](FSM-STAGE:sam:dme:LsServerConfigure:ApplyTemplate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-template-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureApplyTemplate
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:CommitStorage

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: committing storage for service profile(FSM-STAGE:sam:dme:LsServerConfigure:CommitStorage)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: commit-storage-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureCommitStorage
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:EstimateApplyConfig

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Estimating Apply config change impact(FSM-STAGE:sam:dme:LsServerConfigure:EstimateApplyConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: estimate-apply-config-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureEstimateApplyConfig
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:EvaluateAssociation

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Evaluate association with server [pnDn](FSM-STAGE:sam:dme:LsServerConfigure:EvaluateAssociation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: evaluate-association-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureEvaluateAssociation
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:ProvisionStorage

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Resolving storage policy(FSM-STAGE:sam:dme:LsServerConfigure:ProvisionStorage)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: provision-storage-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureProvisionStorage
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:ResolveBootConfig

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Computing binding changes(FSM-STAGE:sam:dme:LsServerConfigure:ResolveBootConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-boot-config-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureResolveBootConfig
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:ResolveDefaultIdentifiers

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Resolving default identifiers from UCS Central(FSM-STAGE:sam:dme:LsServerConfigure:ResolveDefaultIdentifiers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-default-identifiers-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureResolveDefaultIdentifiers
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:ResolveDistributable

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Resolve distributable from operations manager(FSM-STAGE:sam:dme:LsServerConfigure:ResolveDistributable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-distributable-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureResolveDistributable
moClass: ls:Server
Type: fsm
autoCleared: true
```

```
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:ResolveDistributableNames

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Resolving distributable names from host pack(FSM-STAGE:sam:dme:LsServerConfigure:ResolveDistributableNames)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-distributable-names-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureResolveDistributableNames
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:ResolveIdentifiers

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Resolving identifiers from UCS Central(FSM-STAGE:sam:dme:LsServerConfigure:ResolveIdentifiers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-identifiers-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureResolveIdentifiers
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:ResolveImages

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Resolve images from operations manager(FSM-STAGE:sam:dme:LsServerConfigure:ResolveImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-images-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureResolveImages
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:ResolveNetworkPolicies

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Resolving various dependent policies from UCS Central(FSM-STAGE:sam:dme:LsServerConfigure:ResolveNetworkPolicies)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-network-policies-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureResolveNetworkPolicies
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:ResolveNetworkTemplates

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Resolving various template policies from UCS Central(FSM-STAGE:sam:dme:LsServerConfigure:ResolveNetworkTemplates)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-network-templates-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureResolveNetworkTemplates
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:ResolvePolicies

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Resolving various policies from UCS Central(FSM-STAGE:sam:dme:LsServerConfigure:ResolvePolicies)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-policies-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureResolvePolicies
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:ResolveSchedule

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Resolving schedule policy from UCS Central(FSM-STAGE:sam:dme:LsServerConfigure:ResolveSchedule)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-schedule-failed
mibFaultCode: F78435
```

```
mibFaultName: fsmRmtErrLsServerConfigureResolveSchedule
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:ResolveStorageSchedule

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Resolving schedule policy from UCS Central(FSM-STAGE:sam:dme:LsServerConfigure:ResolveStorageSchedule)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-storage-schedule-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureResolveStorageSchedule
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:ValidatePolicyOwnership

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Validating policy integrity from ownership perspective(FSM-STAGE:sam:dme:LsServerConfigure:ValidatePolicyOwnership)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: validate-policy-ownership-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureValidatePolicyOwnership
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:WaitForAssocCompletion

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Association completion on server [pnDn](FSM-STAGE:sam:dme:LsServerConfigure:WaitForAssocCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-assoc-completion-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureWaitForAssocCompletion
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:WaitForCommitStorage

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for storage commit to complete(FSM-STAGE:sam:dme:LsServerConfigure:WaitForCommitStorage)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-commit-storage-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureWaitForCommitStorage
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:WaitForMaintPermission

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for ack or maint window(FSM-STAGE:sam:dme:LsServerConfigure:WaitForMaintPermission)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-maint-permission-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureWaitForMaintPermission
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:WaitForMaintWindow

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for maintenance window(FSM-STAGE:sam:dme:LsServerConfigure:WaitForMaintWindow)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-maint-window-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureWaitForMaintWindow
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:WaitForStorageProvision

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for storage provisioning to complete(FSM-STAGE:sam:dme:LsServerConfigure:WaitForStorageProvision)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-storage-provision-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureWaitForStorageProvision
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:checkAssignedDefaultIdentifiersForDup

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: checking assigned identifiers(from default pool) for dup(FSM-STAGE:sam:dme:LsServerConfigure:checkAssignedDefaultIdentifiersForDup)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-assigned-default-identifiers-for-dup-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureCheckAssignedDefaultIdentifiersForDup
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrLsServerConfigure:checkAssignedIdentifiersForDup

Fault Code: F78435

Message: [FSM:STAGE:REMOTE-ERROR]: checking assigned identifiers for dup(FSM-STAGE:sam:dme:LsServerConfigure:checkAssignedIdentifiersForDup)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-assigned-identifiers-for-dup-failed
mibFaultCode: F78435
mibFaultName: fsmRmtErrLsServerConfigureCheckAssignedIdentifiersForDup
moClass: ls:Server
Type: fsm
autoCleared: true
```

```
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmRmtErrSwEthMonDeploy:UpdateEthMon

Fault Code: F78440

Message: [FSM:STAGE:REMOTE-ERROR]: Ethernet traffic monitor (SPAN)configuration on [switchId](FSM-STAGE:sam:dme:SwEthMonDeploy:UpdateEthMon)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-eth-mon-failed
mibFaultCode: F78440
mibFaultName: fsmRmtErrSwEthMonDeployUpdateEthMon
moClass: sw:EthMon
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/lanmon-eth/mon-[name]
```

fsmRmtErrSwFcMonDeploy:UpdateFcMon

Fault Code: F78441

Message: [FSM:STAGE:REMOTE-ERROR]: FC traffic monitor (SPAN)configuration on [switchId](FSM-STAGE:sam:dme:SwFcMonDeploy:UpdateFcMon)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-fc-mon-failed
mibFaultCode: F78441
mibFaultName: fsmRmtErrSwFcMonDeployUpdateFcMon
moClass: sw:FcMon
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/sanmon-fc/mon-[name]
```

fsmRmtErrFabricSanCloudSwitchMode:SwConfigLocal

Fault Code: F78442

Message: [FSM:STAGE:REMOTE-ERROR]: Fabric interconnect FC mode configuration to primary(FSM-STAGE:sam:dme:FabricSanCloudSwitchMode:SwConfigLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-local-failed
mibFaultCode: F78442
mibFaultName: fsmRmtErrFabricSanCloudSwitchModeSwConfigLocal
moClass: fabric:SanCloud
Type: fsm
autoCleared: true
Affected MO: fabric/san
```

fsmRmtErrFabricSanCloudSwitchMode:SwConfigPeer

Fault Code: F78442

Message: [FSM:STAGE:REMOTE-ERROR]: Fabric interconnect FC mode configuration to secondary(FSM-STAGE:sam:dme:FabricSanCloudSwitchMode:SwConfigPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-peer-failed
mibFaultCode: F78442
mibFaultName: fsmRmtErrFabricSanCloudSwitchModeSwConfigPeer
moClass: fabric:SanCloud
Type: fsm
autoCleared: true
Affected MO: fabric/san
```

fsmRmtErrFabricSanCloudSwitchMode:WaitForUserAck

Fault Code: F78442

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for User Acknowledgment to configuration on primary(FSM-STAGE:sam:dme:FabricSanCloudSwitchMode:WaitForUserAck)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-user-ack-failed
mibFaultCode: F78442
mibFaultName: fsmRmtErrFabricSanCloudSwitchModeWaitForUserAck
moClass: fabric:SanCloud
Type: fsm
autoCleared: true
Affected MO: fabric/san
```

fsmRmtErrComputePhysicalUpdateExtUsers:Deploy

Fault Code: F78448

Message: [FSM:STAGE:REMOTE-ERROR]: external mgmt user deployment on server [dn] (profile [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalUpdateExtUsers:Deploy)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: deploy-failed
mibFaultCode: F78448
mibFaultName: fsmRmtErrComputePhysicalUpdateExtUsersDeploy
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrSysdebugTechSupportInitiate:Local

Fault Code: F78452

Message: [FSM:STAGE:REMOTE-ERROR]: create tech-support file from GUI on local(FSM-STAGE:sam:dme:SysdebugTechSupportInitiate:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F78452
mibFaultName: fsmRmtErrSysdebugTechSupportInitiateLocal
moClass: sysdebug:TechSupport
Type: fsm
```

```
autoCleared: true
Affected MO: sys/tech-support-files/tech-support-[creationTS]
```

fsmRmtErrSysdebugTechSupportDeleteTechSupFile:Local

Fault Code: F78453

Message: [FSM:STAGE:REMOTE-ERROR]: delete tech-support file from GUI on local(FSM-STAGE:sam:dme:SysdebugTechSupportDeleteTechSupFile:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F78453
mibFaultName: fsmRmtErrSysdebugTechSupportDeleteTechSupFileLocal
moClass: sysdebug:TechSupport
Type: fsm
autoCleared: true
Affected MO: sys/tech-support-files/tech-support-[creationTS]
```

fsmRmtErrSysdebugTechSupportDeleteTechSupFile:peer

Fault Code: F78453

Message: [FSM:STAGE:REMOTE-ERROR]: delete tech-support file from GUI on peer(FSM-STAGE:sam:dme:SysdebugTechSupportDeleteTechSupFile:peer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: peer-failed
mibFaultCode: F78453
mibFaultName: fsmRmtErrSysdebugTechSupportDeleteTechSupFilePeer
moClass: sysdebug:TechSupport
Type: fsm
autoCleared: true
Affected MO: sys/tech-support-files/tech-support-[creationTS]
```

fsmRmtErrSysdebugTechSupportDownload:CopyPrimary

Fault Code: F78454

Message: [FSM:STAGE:REMOTE-ERROR]: Copy the tech-support file to primary for download(FSM-STAGE:sam:dme:SysdebugTechSupportDownload:CopyPrimary)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-primary-failed
mibFaultCode: F78454
mibFaultName: fsmRmtErrSysdebugTechSupportDownloadCopyPrimary
moClass: sysdebug:TechSupport
Type: fsm
autoCleared: true
Affected MO: sys/tech-support-files/tech-support-[creationTS]
```

fsmRmtErrSysdebugTechSupportDownload:CopySub

Fault Code: F78454

Message: [FSM:STAGE:REMOTE-ERROR]: copy tech-support file on subordinate switch to tmp directory(FSM-STAGE:sam:dme:SysdebugTechSupportDownload:CopySub)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-sub-failed
mibFaultCode: F78454
mibFaultName: fsmRmtErrSysdebugTechSupportDownloadCopySub
moClass: sysdebug:TechSupport
Type: fsm
autoCleared: true
Affected MO: sys/tech-support-files/tech-support-[creationTS]
```

fsmRmtErrSysdebugTechSupportDownload:DeletePrimary

Fault Code: F78454

Message: [FSM:STAGE:REMOTE-ERROR]: Delete the tech-support file from primary switch under tmp directory(FSM-STAGE:sam:dme:SysdebugTechSupportDownload:DeletePrimary)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-primary-failed
mibFaultCode: F78454
mibFaultName: fsmRmtErrSysdebugTechSupportDownloadDeletePrimary
moClass: sysdebug:TechSupport
Type: fsm
autoCleared: true
Affected MO: sys/tech-support-files/tech-support-[creationTS]
```

fsmRmtErrSysdebugTechSupportDownload:DeleteSub

Fault Code: F78454

Message: [FSM:STAGE:REMOTE-ERROR]: Delete the tech-support file from subordinate under tmp directory(FSM-STAGE:sam:dme:SysdebugTechSupportDownload:DeleteSub)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-sub-failed
mibFaultCode: F78454
mibFaultName: fsmRmtErrSysdebugTechSupportDownloadDeleteSub
moClass: sysdebug:TechSupport
Type: fsm
autoCleared: true
Affected MO: sys/tech-support-files/tech-support-[creationTS]
```

fsmRmtErrComputePhysicalUpdateAdaptor:CheckPowerAvailability

Fault Code: F78483

Message: [FSM:STAGE:REMOTE-ERROR]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F78483
mibFaultName: fsmRmtErrComputePhysicalUpdateAdaptorCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

```
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalUpdateAdaptor:PollUpdateStatusLocal

Fault Code: F78483

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for update to complete(FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:PollUpdateStatusLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-status-local-failed
mibFaultCode: F78483
mibFaultName: fsmRmtErrComputePhysicalUpdateAdaptorPollUpdateStatusLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalUpdateAdaptor:PollUpdateStatusPeer

Fault Code: F78483

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for update to complete(FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:PollUpdateStatusPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-status-peer-failed
mibFaultCode: F78483
mibFaultName: fsmRmtErrComputePhysicalUpdateAdaptorPollUpdateStatusPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalUpdateAdaptor:PowerDeployWait

Fault Code: F78483

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F78483
mibFaultName: fsmRmtErrComputePhysicalUpdateAdaptorPowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalUpdateAdaptor:PowerOff

Fault Code: F78483

Message: [FSM:STAGE:REMOTE-ERROR]: Power off the server(FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:PowerOff)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-off-failed
mibFaultCode: F78483
mibFaultName: fsmRmtErrComputePhysicalUpdateAdaptorPowerOff
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalUpdateAdaptor:PowerOn

Fault Code: F78483

Message: [FSM:STAGE:REMOTE-ERROR]: power on the blade(FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:PowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-failed
mibFaultCode: F78483
mibFaultName: fsmRmtErrComputePhysicalUpdateAdaptorPowerOn
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalUpdateAdaptor:UpdateRequestLocal

Fault Code: F78483

Message: [FSM:STAGE:REMOTE-ERROR]: sending update request to Adaptor(FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:UpdateRequestLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-request-local-failed
mibFaultCode: F78483
mibFaultName: fsmRmtErrComputePhysicalUpdateAdaptorUpdateRequestLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalUpdateAdaptor:UpdateRequestPeer

Fault Code: F78483

Message: [FSM:STAGE:REMOTE-ERROR]: sending update request to Adaptor(FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:UpdateRequestPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-request-peer-failed
mibFaultCode: F78483
mibFaultName: fsmRmtErrComputePhysicalUpdateAdaptorUpdateRequestPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalActivateAdaptor:ActivateLocal

Fault Code: F78484

Message: [FSM:STAGE:REMOTE-ERROR]: activating backup image of Adaptor(FSM-STAGE:sam:dme:ComputePhysicalActivateAdaptor:ActivateLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-local-failed
mibFaultCode: F78484
mibFaultName: fsmRmtErrComputePhysicalActivateAdaptorActivateLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalActivateAdaptor:ActivatePeer

Fault Code: F78484

Message: [FSM:STAGE:REMOTE-ERROR]: activating backup image of Adaptor(FSM-STAGE:sam:dme:ComputePhysicalActivateAdaptor:ActivatePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: activate-peer-failed
mibFaultCode: F78484
mibFaultName: fsmRmtErrComputePhysicalActivateAdaptorActivatePeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalActivateAdaptor:AssertBypassWait

Fault Code: F78484

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for assert bypass on rack server(FSM-STAGE:sam:dme:ComputePhysicalActivateAdaptor:AssertBypassWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: assert-bypass-wait-failed
mibFaultCode: F78484
mibFaultName: fsmRmtErrComputePhysicalActivateAdaptorAssertBypassWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalActivateAdaptor:CheckPowerAvailability

Fault Code: F78484

Message: [FSM:STAGE:REMOTE-ERROR]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalActivateAdaptor:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F78484
mibFaultName: fsmRmtErrComputePhysicalActivateAdaptorCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalActivateAdaptor:DeassertResetBypass

Fault Code: F78484

Message: [FSM:STAGE:REMOTE-ERROR]: deassert reset-bypass(FSM-STAGE:sam:dme:ComputePhysicalActivateAdaptor:DeassertResetBypass)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: deassert-reset-bypass-failed
mibFaultCode: F78484
mibFaultName: fsmRmtErrComputePhysicalActivateAdaptorDeassertResetBypass
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalActivateAdaptor:PowerDeployWait

Fault Code: F78484

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalActivateAdaptor:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F78484
mibFaultName: fsmRmtErrComputePhysicalActivateAdaptorPowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalActivateAdaptor:PowerOn

Fault Code: F78484

Message: [FSM:STAGE:REMOTE-ERROR]: power on the blade(FSM-STAGE:sam:dme:ComputePhysicalActivateAdaptor:PowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-failed
mibFaultCode: F78484
mibFaultName: fsmRmtErrComputePhysicalActivateAdaptorPowerOn
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalActivateAdaptor:Reset

Fault Code: F78484

Message: [FSM:STAGE:REMOTE-ERROR]: resetting the blade(FSM-STAGE:sam:dme:ComputePhysicalActivateAdaptor:Reset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: reset-failed
mibFaultCode: F78484
mibFaultName: fsmRmtErrComputePhysicalActivateAdaptorReset
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrCapabilityCatalogueActivateCatalog:ApplyCatalog

Fault Code: F78485

Message: [FSM:STAGE:REMOTE-ERROR]: applying changes to catalog(FSM-STAGE:sam:dme:CapabilityCatalogueActivateCatalog:ApplyCatalog)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-catalog-failed
mibFaultCode: F78485
mibFaultName: fsmRmtErrCapabilityCatalogueActivateCatalogApplyCatalog
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmRmtErrCapabilityCatalogueActivateCatalog:CopyCatFromRep

Fault Code: F78485

Message: [FSM:STAGE:REMOTE-ERROR]: Copying Catalogue from repository to FI(FSM-STAGE:sam:dme:CapabilityCatalogueActivateCatalog:CopyCatFromRep)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-cat-from-rep-failed
mibFaultCode: F78485
mibFaultName: fsmRmtErrCapabilityCatalogueActivateCatalogCopyCatFromRep
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmRmtErrCapabilityCatalogueActivateCatalog:CopyExternalRepToRemote

Fault Code: F78485

Message: [FSM:STAGE:REMOTE-ERROR]: syncing external repository to subordinate(FSM-STAGE:sam:dme:CapabilityCatalogueActivateCatalog:CopyExternalRepToRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-external-rep-to-remote-failed
mibFaultCode: F78485
mibFaultName: fsmRmtErrCapabilityCatalogueActivateCatalogCopyExternalRepToRemote
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmRmtErrCapabilityCatalogueActivateCatalog:CopyRemote

Fault Code: F78485

Message: [FSM:STAGE:REMOTE-ERROR]: syncing catalog changes to subordinate(FSM-STAGE:sam:dme:CapabilityCatalogueActivateCatalog:CopyRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-remote-failed
mibFaultCode: F78485
mibFaultName: fsmRmtErrCapabilityCatalogueActivateCatalogCopyRemote
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmRmtErrCapabilityCatalogueActivateCatalog:EvaluateStatus

Fault Code: F78485

Message: [FSM:STAGE:REMOTE-ERROR]: evaluating status of activation(FSM-STAGE:sam:dme:CapabilityCatalogueActivateCatalog:EvaluateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: evaluate-status-failed
mibFaultCode: F78485
mibFaultName: fsmRmtErrCapabilityCatalogueActivateCatalogEvaluateStatus
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmRmtErrCapabilityCatalogueActivateCatalog:RescanImages

Fault Code: F78485

Message: [FSM:STAGE:REMOTE-ERROR]: rescanning image files(FSM-STAGE:sam:dme:CapabilityCatalogueActivateCatalog:RescanImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: rescan-images-failed
mibFaultCode: F78485
mibFaultName: fsmRmtErrCapabilityCatalogueActivateCatalogRescanImages
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmRmtErrCapabilityCatalogueActivateCatalog:UnpackLocal

Fault Code: F78485

Message: [FSM:STAGE:REMOTE-ERROR]: activating catalog changes(FSM-STAGE:sam:dme:CapabilityCatalogueActivateCatalog:UnpackLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unpack-local-failed
mibFaultCode: F78485
mibFaultName: fsmRmtErrCapabilityCatalogueActivateCatalogUnpackLocal
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmRmtErrCapabilityMgmtExtensionActivateMgmtExt:ApplyCatalog

Fault Code: F78486

Message: [FSM:STAGE:REMOTE-ERROR]: applying changes to catalog(FSM-STAGE:sam:dme:CapabilityMgmtExtensionActivateMgmtExt:ApplyCatalog)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-catalog-failed
mibFaultCode: F78486
mibFaultName: fsmRmtErrCapabilityMgmtExtensionActivateMgmtExtApplyCatalog
moClass: capability:MgmtExtension
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/mgmt-ext
```

fsmRmtErrCapabilityMgmtExtensionActivateMgmtExt:CopyRemote

Fault Code: F78486

Message: [FSM:STAGE:REMOTE-ERROR]: syncing management extension changes to subordinate(FSM-STAGE:sam:dme:CapabilityMgmtExtensionActivateMgmtExt:CopyRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-remote-failed
mibFaultCode: F78486
mibFaultName: fsmRmtErrCapabilityMgmtExtensionActivateMgmtExtCopyRemote
moClass: capability:MgmtExtension
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/mgmt-ext
```

fsmRmtErrCapabilityMgmtExtensionActivateMgmtExt:EvaluateStatus

Fault Code: F78486

Message: [FSM:STAGE:REMOTE-ERROR]: evaluating status of activation(FSM-STAGE:sam:dme:CapabilityMgmtExtensionActivateMgmtExt:EvaluateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: evaluate-status-failed
mibFaultCode: F78486
```

```
mibFaultName: fsmRmtErrCapabilityMgmtExtensionActivateMgmtExtEvaluateStatus
moClass: capability:MgmtExtension
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/mgmt-ext
```

fsmRmtErrCapabilityMgmtExtensionActivateMgmtExt:RescanImages

Fault Code: F78486

Message: [FSM:STAGE:REMOTE-ERROR]: rescanning image files(FSM-STAGE:sam:dme:CapabilityMgmtExtensionActivateMgmtExt:RescanImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: rescan-images-failed
mibFaultCode: F78486
mibFaultName: fsmRmtErrCapabilityMgmtExtensionActivateMgmtExtRescanImages
moClass: capability:MgmtExtension
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/mgmt-ext
```

fsmRmtErrCapabilityMgmtExtensionActivateMgmtExt:UnpackLocal

Fault Code: F78486

Message: [FSM:STAGE:REMOTE-ERROR]: activating management extension changes(FSM-STAGE:sam:dme:CapabilityMgmtExtensionActivateMgmtExt:UnpackLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unpack-local-failed
mibFaultCode: F78486
mibFaultName: fsmRmtErrCapabilityMgmtExtensionActivateMgmtExtUnpackLocal
moClass: capability:MgmtExtension
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/mgmt-ext
```

fsmRmtErrLicenseDownloaderDownload:CopyRemote

Fault Code: F78490

Message: [FSM:STAGE:REMOTE-ERROR]: Copy the license file to subordinate for inventory(FSM-STAGE:sam:dme:LicenseDownloaderDownload:CopyRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-remote-failed
mibFaultCode: F78490
mibFaultName: fsmRmtErrLicenseDownloaderDownloadCopyRemote
moClass: license:Downloader
Type: fsm
autoCleared: true
Affected MO: sys/license/dnld-[fileName]
```

fsmRmtErrLicenseDownloaderDownload:DeleteLocal

Fault Code: F78490

Message: [FSM:STAGE:REMOTE-ERROR]: deleting temporary files for [fileName] on local(FSM-STAGE:sam:dme:LicenseDownloaderDownload:DeleteLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-local-failed
mibFaultCode: F78490
mibFaultName: fsmRmtErrLicenseDownloaderDownloadDeleteLocal
moClass: license:Downloader
Type: fsm
autoCleared: true
Affected MO: sys/license/dnld-[fileName]
```

fsmRmtErrLicenseDownloaderDownload:DeleteRemote

Fault Code: F78490

Message: [FSM:STAGE:REMOTE-ERROR]: deleting temporary files for [fileName] on subordinate(FSM-STAGE:sam:dme:LicenseDownloaderDownload:DeleteRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-remote-failed
mibFaultCode: F78490
mibFaultName: fsmRmtErrLicenseDownloaderDownloadDeleteRemote
moClass: license:Downloader
Type: fsm
autoCleared: true
Affected MO: sys/license/dnld-[fileName]
```

fsmRmtErrLicenseDownloaderDownload:Local

Fault Code: F78490

Message: [FSM:STAGE:REMOTE-ERROR]: downloading license file [fileName] from [server](FSM-STAGE:sam:dme:LicenseDownloaderDownload:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F78490
mibFaultName: fsmRmtErrLicenseDownloaderDownloadLocal
moClass: license:Downloader
Type: fsm
autoCleared: true
Affected MO: sys/license/dnld-[fileName]
```

fsmRmtErrLicenseDownloaderDownload:ValidateLocal

Fault Code: F78490

Message: [FSM:STAGE:REMOTE-ERROR]: validation for license file [fileName] on primary(FSM-STAGE:sam:dme:LicenseDownloaderDownload:ValidateLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: validate-local-failed
mibFaultCode: F78490
mibFaultName: fsmRmtErrLicenseDownloaderDownloadValidateLocal
moClass: license:Downloader
Type: fsm
```

```
autoCleared: true
Affected MO: sys/license/dnld-[fileName]
```

fsmRmtErrLicenseDownloaderDownload:ValidateRemote

Fault Code: F78490

Message: [FSM:STAGE:REMOTE-ERROR]: validation for license file [fileName] on subordinate(FSM-STAGE:sam:dme:LicenseDownloaderDownload:ValidateRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: validate-remote-failed
mibFaultCode: F78490
mibFaultName: fsmRmtErrLicenseDownloaderDownloadValidateRemote
moClass: license:Downloader
Type: fsm
autoCleared: true
Affected MO: sys/license/dnld-[fileName]
```

fsmRmtErrLicenseFileInstall:Local

Fault Code: F78491

Message: [FSM:STAGE:REMOTE-ERROR]: Installing license on primary(FSM-STAGE:sam:dme:LicenseFileInstall:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F78491
mibFaultName: fsmRmtErrLicenseFileInstallLocal
moClass: license:File
Type: fsm
autoCleared: true
Affected MO: sys/license/file-[scope]:[id]
```

fsmRmtErrLicenseFileInstall:Remote

Fault Code: F78491

Message: [FSM:STAGE:REMOTE-ERROR]: Installing license on subordinate(FSM-STAGE:sam:dme:LicenseFileInstall:Remote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: remote-failed
mibFaultCode: F78491
mibFaultName: fsmRmtErrLicenseFileInstallRemote
moClass: license:File
Type: fsm
autoCleared: true
Affected MO: sys/license/file-[scope]:[id]
```

fsmRmtErrLicenseFileClear:Local

Fault Code: F78492

Message: [FSM:STAGE:REMOTE-ERROR]: Clearing license on primary(FSM-STAGE:sam:dme:LicenseFileClear:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F78492
mibFaultName: fsmRmtErrLicenseFileClearLocal
moClass: license:File
Type: fsm
autoCleared: true
Affected MO: sys/license/file-[scope]:[id]
```

fsmRmtErrLicenseFileClear:Remote

Fault Code: F78492

Message: [FSM:STAGE:REMOTE-ERROR]: Clearing license on subordinate(FSM-STAGE:sam:dme:LicenseFileClear:Remote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: remote-failed
mibFaultCode: F78492
mibFaultName: fsmRmtErrLicenseFileClearRemote
moClass: license:File
Type: fsm
autoCleared: true
Affected MO: sys/license/file-[scope]:[id]
```

fsmRmtErrLicenseInstanceUpdateFlexlm:Local

Fault Code: F78493

Message: [FSM:STAGE:REMOTE-ERROR]: Updating on primary(FSM-STAGE:sam:dme:LicenseInstanceUpdateFlexlm:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F78493
mibFaultName: fsmRmtErrLicenseInstanceUpdateFlexlmLocal
moClass: license:Instance
Type: fsm
autoCleared: true
Affected MO: sys/license/feature-[name]-[vendor]-[version]/inst-[scope]
```

fsmRmtErrLicenseInstanceUpdateFlexlm:Remote

Fault Code: F78493

Message: [FSM:STAGE:REMOTE-ERROR]: Updating on subordinate(FSM-STAGE:sam:dme:LicenseInstanceUpdateFlexlm:Remote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: remote-failed
mibFaultCode: F78493
mibFaultName: fsmRmtErrLicenseInstanceUpdateFlexlmRemote
moClass: license:Instance
Type: fsm
autoCleared: true
Affected MO: sys/license/feature-[name]-[vendor]-[version]/inst-[scope]
```

fsmRmtErrComputePhysicalConfigSoL:Execute

Fault Code: F78523

Message: [FSM:STAGE:REMOTE-ERROR]: configuring SoL interface on server [dn](FSM-STAGE:sam:dme:ComputePhysicalConfigSoL:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78523
mibFaultName: fsmRmtErrComputePhysicalConfigSoLExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalUnconfigSoL:Execute

Fault Code: F78524

Message: [FSM:STAGE:REMOTE-ERROR]: removing SoL interface configuration from server [dn](FSM-STAGE:sam:dme:ComputePhysicalUnconfigSoL:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78524
mibFaultName: fsmRmtErrComputePhysicalUnconfigSoLExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrPortPIoInCompatSfpPresence:Shutdown

Fault Code: F78529

Message: [FSM:STAGE:REMOTE-ERROR]: Shutting down port(FSM-STAGE:sam:dme:PortPIoInCompatSfpPresence:Shutdown)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: shutdown-failed
mibFaultCode: F78529
mibFaultName: fsmRmtErrPortPIoInCompatSfpPresenceShutdown
moClass: port:PIo
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]
```

fsmRmtErrComputePhysicalDiagnosticInterrupt:Execute

Fault Code: F78556

Message: [FSM:STAGE:REMOTE-ERROR]: Execute Diagnostic Interrupt(NMI) for server [dn](FSM-STAGE:sam:dme:ComputePhysicalDiagnosticInterrupt:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78556
mibFaultName: fsmRmtErrComputePhysicalDiagnosticInterruptExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrSysdebugCoreDownload:CopyPrimary

Fault Code: F78573

Message: [FSM:STAGE:REMOTE-ERROR]: Copy the Core file to primary for download(FSM-STAGE:sam:dme:SysdebugCoreDownload:CopyPrimary)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-primary-failed
mibFaultCode: F78573
mibFaultName: fsmRmtErrSysdebugCoreDownloadCopyPrimary
moClass: sysdebug:Core
Type: fsm
autoCleared: true
Affected MO: sys/corefiles/file-[name]|[switchId]
```

fsmRmtErrSysdebugCoreDownload:CopySub

Fault Code: F78573

Message: [FSM:STAGE:REMOTE-ERROR]: copy Core file on subordinate switch to tmp directory(FSM-STAGE:sam:dme:SysdebugCoreDownload:CopySub)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-sub-failed
mibFaultCode: F78573
mibFaultName: fsmRmtErrSysdebugCoreDownloadCopySub
moClass: sysdebug:Core
Type: fsm
autoCleared: true
Affected MO: sys/corefiles/file-[name]|[switchId]
```

fsmRmtErrSysdebugCoreDownload:DeletePrimary

Fault Code: F78573

Message: [FSM:STAGE:REMOTE-ERROR]: Delete the Core file from primary switch under tmp directory(FSM-STAGE:sam:dme:SysdebugCoreDownload:DeletePrimary)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-primary-failed
mibFaultCode: F78573
mibFaultName: fsmRmtErrSysdebugCoreDownloadDeletePrimary
moClass: sysdebug:Core
Type: fsm
autoCleared: true
Affected MO: sys/corefiles/file-[name]|[switchId]
```

fsmRmtErrSysdebugCoreDownload:DeleteSub

Fault Code: F78573

Message: [FSM:STAGE:REMOTE-ERROR]: Delete the Core file from subordinate under tmp directory(FSM-STAGE:sam:dme:SysdebugCoreDownload:DeleteSub)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-sub-failed
mibFaultCode: F78573
mibFaultName: fsmRmtErrSysdebugCoreDownloadDeleteSub
moClass: sysdebug:Core
Type: fsm
autoCleared: true
Affected MO: sys/corefiles/file-[name]|[switchId]
```

fsmRmtErrEquipmentChassisDynamicReallocation:Config

Fault Code: F78574

Message: [FSM:STAGE:REMOTE-ERROR]: (FSM-STAGE:sam:dme:EquipmentChassisDynamicReallocation:Config)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-failed
mibFaultCode: F78574
```

```
mibFaultName: fsmRmtErrEquipmentChassisDynamicReallocationConfig
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrComputePhysicalResetKvm:Execute

Fault Code: F78603

Message: [FSM:STAGE:REMOTE-ERROR]: Execute KVM Reset for server [dn](FSM-STAGE:sam:dme:ComputePhysicalResetKvm:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78603
mibFaultName: fsmRmtErrComputePhysicalResetKvmExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrMgmtControllerOnline:BmcConfigureConnLocal

Fault Code: F78609

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring connectivity on CIMC(FSM-STAGE:sam:dme:MgmtControllerOnline:BmcConfigureConnLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-configure-conn-local-failed
mibFaultCode: F78609
mibFaultName: fsmRmtErrMgmtControllerOnlineBmcConfigureConnLocal
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
```

Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerOnline:BmcConfigureConnPeer

Fault Code: F78609

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring connectivity on CIMC(FSM-STAGE:sam:dme:MgmtControllerOnline:BmcConfigureConnPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-configure-conn-peer-failed
mibFaultCode: F78609
mibFaultName: fsmRmtErrMgmtControllerOnlineBmcConfigureConnPeer
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerOnline:SwConfigureConnLocal

Fault Code: F78609

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring fabric-interconnect connectivity to CIMC(FSM-STAGE:sam:dme:MgmtControllerOnline:SwConfigureConnLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: sw-configure-conn-local-failed
mibFaultCode: F78609
mibFaultName: fsmRmtErrMgmtControllerOnlineSwConfigureConnLocal
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt

Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerOnline:SwConfigureConnPeer

Fault Code: F78609

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring fabric-interconnect connectivity to CIMC(FSM-STAGE:sam:dme:MgmtControllerOnline:SwConfigureConnPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: sw-configure-conn-peer-failed
mibFaultCode: F78609
mibFaultName: fsmRmtErrMgmtControllerOnlineSwConfigureConnPeer
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt

```
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt
```

fsmRmtErrComputeRackUnitOffline:CleanupLocal

Fault Code: F78610

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning host entries on local fabric-interconnect(FSM-STAGE:sam:dme:ComputeRackUnitOffline:CleanupLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cleanup-local-failed
mibFaultCode: F78610
mibFaultName: fsmRmtErrComputeRackUnitOfflineCleanupLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitOffline:CleanupPeer

Fault Code: F78610

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning host entries on peer fabric-interconnect(FSM-STAGE:sam:dme:ComputeRackUnitOffline:CleanupPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cleanup-peer-failed
mibFaultCode: F78610
mibFaultName: fsmRmtErrComputeRackUnitOfflineCleanupPeer
```

```
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitOffline:SwUnconfigureLocal

Fault Code: F78610

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfiguring fabric-interconnect connectivity to CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitOffline:SwUnconfigureLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfigure-local-failed
mibFaultCode: F78610
mibFaultName: fsmRmtErrComputeRackUnitOfflineSwUnconfigureLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitOffline:SwUnconfigurePeer

Fault Code: F78610

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfiguring fabric-interconnect connectivity to CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitOffline:SwUnconfigurePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfigure-peer-failed
mibFaultCode: F78610
mibFaultName: fsmRmtErrComputeRackUnitOfflineSwUnconfigurePeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrEquipmentLocatorLedSetFiLocatorLed:Execute

Fault Code: F78627

Message: [FSM:STAGE:REMOTE-ERROR]: setting FI locator led to [adminState](FSM-STAGE:sam:dme:EquipmentLocatorLedSetFiLocatorLed:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78627
mibFaultName: fsmRmtErrEquipmentLocatorLedSetFiLocatorLedExecute
moClass: equipment:LocatorLed
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/locator-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/locator-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/locator-led
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/locator-led
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/chassis-[id]/locator-led
Affected MO: sys/chassis-[id]/psu-[id]/locator-led
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/chassis-[id]/slot-[id]/locator-led
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/fex-[id]/locator-led
Affected MO: sys/fex-[id]/psu-[id]/locator-led
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/fex-[id]/slot-[id]/locator-led
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/rack-enclosure-[id]/psu-[id]/locator-led
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/rack-unit-[id]/ext-board-[id]/locator-led
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/rack-unit-[id]/locator-led
Affected MO: sys/rack-unit-[id]/psu-[id]/locator-led
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/switch-[id]/locator-led
Affected MO: sys/switch-[id]/psu-[id]/locator-led
```

fsmRmtErrFabricEpMgrConfigure:ApplyConfig

Fault Code: F78654

Message: [FSM:STAGE:REMOTE-ERROR]: Apply switch configuration(FSM-STAGE:sam:dme:FabricEpMgrConfigure:ApplyConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-config-failed
mibFaultCode: F78654
mibFaultName: fsmRmtErrFabricEpMgrConfigureApplyConfig
moClass: fabric:EpMgr
Type: fsm
autoCleared: true
Affected MO: fabric/[id]
```

fsmRmtErrFabricEpMgrConfigure:ApplyPhysical

Fault Code: F78654

Message: [FSM:STAGE:REMOTE-ERROR]: Applying physical configuration(FSM-STAGE:sam:dme:FabricEpMgrConfigure:ApplyPhysical)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-physical-failed
mibFaultCode: F78654
mibFaultName: fsmRmtErrFabricEpMgrConfigureApplyPhysical
moClass: fabric:EpMgr
Type: fsm
autoCleared: true
Affected MO: fabric/[id]
```

fsmRmtErrFabricEpMgrConfigure:ValidateConfiguration

Fault Code: F78654

Message: [FSM:STAGE:REMOTE-ERROR]: Validating logical configuration(FSM-STAGE:sam:dme:FabricEpMgrConfigure:ValidateConfiguration)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: validate-configuration-failed
mibFaultCode: F78654
mibFaultName: fsmRmtErrFabricEpMgrConfigureValidateConfiguration
moClass: fabric:EpMgr
Type: fsm
autoCleared: true
Affected MO: fabric/[id]
```

fsmRmtErrFabricEpMgrConfigure:WaitOnPhys

Fault Code: F78654

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting on physical change application(FSM-STAGE:sam:dme:FabricEpMgrConfigure:WaitOnPhys)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-on-phys-failed
mibFaultCode: F78654
mibFaultName: fsmRmtErrFabricEpMgrConfigureWaitOnPhys
moClass: fabric:EpMgr
Type: fsm
autoCleared: true
Affected MO: fabric/[id]
```

fsmRmtErrVnicProfileSetDeployAlias:Local

Fault Code: F78663

Message: [FSM:STAGE:REMOTE-ERROR]: VNIC profile alias configuration on local fabric(FSM-STAGE:sam:dme:VnicProfileSetDeployAlias:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F78663
```

```
mibFaultName: fsmRmtErrVnicProfileSetDeployAliasLocal
moClass: vnic:ProfileSet
Type: fsm
autoCleared: true
Affected MO: fabric/lan/profiles
```

fsmRmtErrVnicProfileSetDeployAlias:Peer

Fault Code: F78663

Message: [FSM:STAGE:REMOTE-ERROR]: VNIC profile alias configuration on peer fabric(FSM-STAGE:sam:dme:VnicProfileSetDeployAlias:Peer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: peer-failed
mibFaultCode: F78663
mibFaultName: fsmRmtErrVnicProfileSetDeployAliasPeer
moClass: vnic:ProfileSet
Type: fsm
autoCleared: true
Affected MO: fabric/lan/profiles
```

fsmRmtErrSwPhysConfPhysical:ConfigSwA

Fault Code: F78679

Message: [FSM:STAGE:REMOTE-ERROR]: Configure physical port mode on fabric interconnect [id](FSM-STAGE:sam:dme:SwPhysConfPhysical:ConfigSwA)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-sw-afailed
mibFaultCode: F78679
mibFaultName: fsmRmtErrSwPhysConfPhysicalConfigSwA
moClass: sw:Phys
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/phys
```

fsmRmtErrSwPhysConfPhysical:ConfigSwB

Fault Code: F78679

Message: [FSM:STAGE:REMOTE-ERROR]: Configure physical port mode on fabric interconnect [id](FSM-STAGE:sam:dme:SwPhysConfPhysical:ConfigSwB)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-sw-bfailed
mibFaultCode: F78679
mibFaultName: fsmRmtErrSwPhysConfPhysicalConfigSwB
moClass: sw:Phys
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/phys
```

fsmRmtErrSwPhysConfPhysical:PortInventorySwA

Fault Code: F78679

Message: [FSM:STAGE:REMOTE-ERROR]: Performing local port inventory of switch [id](FSM-STAGE:sam:dme:SwPhysConfPhysical:PortInventorySwA)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: port-inventory-sw-afailed
mibFaultCode: F78679
mibFaultName: fsmRmtErrSwPhysConfPhysicalPortInventorySwA
moClass: sw:Phys
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/phys
```

fsmRmtErrSwPhysConfPhysical:PortInventorySwB

Fault Code: F78679

Message: [FSM:STAGE:REMOTE-ERROR]: Performing peer port inventory of switch [id](FSM-STAGE:sam:dme:SwPhysConfPhysical:PortInventorySwB)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: port-inventory-sw-bfailed
mibFaultCode: F78679
mibFaultName: fsmRmtErrSwPhysConfPhysicalPortInventorySwB
moClass: sw:Phys
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/phys
```

fsmRmtErrSwPhysConfPhysical:VerifyPhysConfig

Fault Code: F78679

Message: [FSM:STAGE:REMOTE-ERROR]: Verifying physical transition on fabric interconnect [id](FSM-STAGE:sam:dme:SwPhysConfPhysical:VerifyPhysConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: verify-phys-config-failed
mibFaultCode: F78679
mibFaultName: fsmRmtErrSwPhysConfPhysicalVerifyPhysConfig
moClass: sw:Phys
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/phys
```

fsmRmtErrExtvmmEpClusterRole:SetLocal

Fault Code: F78694

Message: [FSM:STAGE:REMOTE-ERROR]: external VM management cluster role configuration on local fabric(FSM-STAGE:sam:dme:ExtvmmEpClusterRole:SetLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-local-failed
mibFaultCode: F78694
mibFaultName: fsmRmtErrExtvmmEpClusterRoleSetLocal
moClass: extvmm:Ep
Type: fsm
```

```
autoCleared: true
Affected MO: sys/extvm-mgmt
```

fsmRmtErrExtvmmEpClusterRole:SetPeer

Fault Code: F78694

Message: [FSM:STAGE:REMOTE-ERROR]: external VM management cluster role configuration on peer fabric(FSM-STAGE:sam:dme:ExtvmmEpClusterRole:SetPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-peer-failed
mibFaultCode: F78694
mibFaultName: fsmRmtErrExtvmmEpClusterRoleSetPeer
moClass: extvmm:Ep
Type: fsm
autoCleared: true
Affected MO: sys/extvm-mgmt
```

fsmRmtErrVmLifeCyclePolicyConfig:Local

Fault Code: F78699

Message: [FSM:STAGE:REMOTE-ERROR]: set Veth Auto-delete Retention Timer on local fabric(FSM-STAGE:sam:dme:VmLifeCyclePolicyConfig:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F78699
mibFaultName: fsmRmtErrVmLifeCyclePolicyConfigLocal
moClass: vm:LifeCyclePolicy
Type: fsm
autoCleared: true
Affected MO: org-[name]/vm-lc-policy
```

fsmRmtErrVmLifeCyclePolicyConfig:Peer

Fault Code: F78699

Message: [FSM:STAGE:REMOTE-ERROR]: set Veth Auto-delete Retention Timer on peer fabric(FSM-STAGE:sam:dme:VmLifeCyclePolicyConfig:Peer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: peer-failed
mibFaultCode: F78699
mibFaultName: fsmRmtErrVmLifeCyclePolicyConfigPeer
moClass: vm:LifeCyclePolicy
Type: fsm
autoCleared: true
Affected MO: org-[name]/vm-lc-policy
```

fsmRmtErrEquipmentBeaconLedIlluminate:ExecuteA

Fault Code: F78702

Message: [FSM:STAGE:REMOTE-ERROR]: Turn beacon lights on/off for [dn] on fabric interconnect [id](FSM-STAGE:sam:dme:EquipmentBeaconLedIlluminate:ExecuteA)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-afailed
mibFaultCode: F78702
mibFaultName: fsmRmtErrEquipmentBeaconLedIlluminateExecuteA
moClass: equipment:BeaconLed
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/beacon
Affected MO: sys/chassis-[id]/blade-[slotId]/beacon
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/beacon
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/chassis-[id]/psu-[id]/beacon
Affected MO: sys/chassis-[id]/slot-[id]/beacon
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/fex-[id]/beacon
Affected MO: sys/fex-[id]/psu-[id]/beacon
Affected MO: sys/fex-[id]/slot-[id]/beacon
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/rack-enclosure-[id]/psu-[id]/beacon
Affected MO: sys/rack-unit-[id]/beacon
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/rack-unit-[id]/psu-[id]/beacon
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/beacon
```

```
Affected MO: sys/switch-[id]/psu-[id]/beacon
Affected MO: sys/switch-[id]/slot-[id]/beacon
```

fsmRmtErrEquipmentBeaconLedIlluminate:ExecuteB

Fault Code: F78702

Message: [FSM:STAGE:REMOTE-ERROR]: Turn beacon lights on/off for [dn] on fabric interconnect [id](FSM-STAGE:sam:dme:EquipmentBeaconLedIlluminate:ExecuteB)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-bfailed
mibFaultCode: F78702
mibFaultName: fsmRmtErrEquipmentBeaconLedIlluminateExecuteB
moClass: equipment:BeaconLed
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/beacon
Affected MO: sys/chassis-[id]/blade-[slotId]/beacon
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/beacon
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/chassis-[id]/psu-[id]/beacon
Affected MO: sys/chassis-[id]/slot-[id]/beacon
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/fex-[id]/beacon
Affected MO: sys/fex-[id]/psu-[id]/beacon
Affected MO: sys/fex-[id]/slot-[id]/beacon
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/rack-enclosure-[id]/psu-[id]/beacon
Affected MO: sys/rack-unit-[id]/beacon
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/rack-unit-[id]/psu-[id]/beacon
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/switch-[id]/psu-[id]/beacon
Affected MO: sys/switch-[id]/slot-[id]/beacon
```

fsmRmtErrEtherServerIntFIoConfigSpeed:Configure

Fault Code: F78711

Message: [FSM:STAGE:REMOTE-ERROR]: Configure admin speed for [dn](FSM-STAGE:sam:dme:EtherServerIntFIoConfigSpeed:Configure)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: configure-failed
mibFaultCode: F78711
mibFaultName: fsmRmtErrEtherServerIntFIoConfigSpeedConfigure
moClass: ether:ServerIntFIo
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/rack-unit-[id]/diag/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]
```

fsmRmtErrComputePhysicalUpdateBIOS:Clear

Fault Code: F78721

Message: [FSM:STAGE:REMOTE-ERROR]: clearing pending BIOS image update(FSM-STAGE:sam:dme:ComputePhysicalUpdateBIOS:Clear)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: clear-failed
mibFaultCode: F78721
mibFaultName: fsmRmtErrComputePhysicalUpdateBIOSClear
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalUpdateBIOS:PollClearStatus

Fault Code: F78721

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for pending BIOS image update to clear(FSM-STAGE:sam:dme:ComputePhysicalUpdateBIOS:PollClearStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-clear-status-failed
mibFaultCode: F78721
mibFaultName: fsmRmtErrComputePhysicalUpdateBIOSPollClearStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalUpdateBIOS:PollUpdateStatus

Fault Code: F78721

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for BIOS update to complete(FSM-STAGE:sam:dme:ComputePhysicalUpdateBIOS:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F78721
mibFaultName: fsmRmtErrComputePhysicalUpdateBIOSPollUpdateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalUpdateBIOS:UpdateRequest

Fault Code: F78721

Message: [FSM:STAGE:REMOTE-ERROR]: sending BIOS update request to CIMC(FSM-STAGE:sam:dme:ComputePhysicalUpdateBIOS:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-request-failed
mibFaultCode: F78721
```

```
mibFaultName: fsmRmtErrComputePhysicalUpdateBIOSUpdateRequest
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalActivateBIOS:Activate

Fault Code: F78722

Message: [FSM:STAGE:REMOTE-ERROR]: activating BIOS image(FSM-STAGE:sam:dme:ComputePhysicalActivateBIOS:Activate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-failed
mibFaultCode: F78722
mibFaultName: fsmRmtErrComputePhysicalActivateBIOSActivate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalActivateBIOS:CheckPowerAvailability

Fault Code: F78722

Message: [FSM:STAGE:REMOTE-ERROR]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalActivateBIOS:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F78722
mibFaultName: fsmRmtErrComputePhysicalActivateBIOSCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

```
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalActivateBIOS:Clear

Fault Code: F78722

Message: [FSM:STAGE:REMOTE-ERROR]: clearing pending BIOS image activate(FSM-STAGE:sam:dme:ComputePhysicalActivateBIOS:Clear)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: clear-failed
mibFaultCode: F78722
mibFaultName: fsmRmtErrComputePhysicalActivateBIOSClear
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalActivateBIOS:PollActivateStatus

Fault Code: F78722

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for BIOS activate(FSM-STAGE:sam:dme:ComputePhysicalActivateBIOS:PollActivateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-activate-status-failed
mibFaultCode: F78722
mibFaultName: fsmRmtErrComputePhysicalActivateBIOSPollActivateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalActivateBIOS:PollClearStatus

Fault Code: F78722

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for pending BIOS image activate to clear(FSM-STAGE:sam:dme:ComputePhysicalActivateBIOS:PollClearStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-clear-status-failed
mibFaultCode: F78722
mibFaultName: fsmRmtErrComputePhysicalActivateBIOSPollClearStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalActivateBIOS:PowerDeployWait

Fault Code: F78722

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalActivateBIOS:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F78722
mibFaultName: fsmRmtErrComputePhysicalActivateBIOSPowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalActivateBIOS:PowerOff

Fault Code: F78722

Message: [FSM:STAGE:REMOTE-ERROR]: Power off the server(FSM-STAGE:sam:dme:ComputePhysicalActivateBIOS:PowerOff)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-off-failed
mibFaultCode: F78722
mibFaultName: fsmRmtErrComputePhysicalActivateBIOSPowerOff
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalActivateBIOS:PowerOn

Fault Code: F78722

Message: [FSM:STAGE:REMOTE-ERROR]: power on the server(FSM-STAGE:sam:dme:ComputePhysicalActivateBIOS:PowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-failed
mibFaultCode: F78722
mibFaultName: fsmRmtErrComputePhysicalActivateBIOSPowerOn
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalActivateBIOS:UpdateTokens

Fault Code: F78722

Message: [FSM:STAGE:REMOTE-ERROR]: updating BIOS tokens(FSM-STAGE:sam:dme:ComputePhysicalActivateBIOS:UpdateTokens)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-tokens-failed
mibFaultCode: F78722
mibFaultName: fsmRmtErrComputePhysicalActivateBIOSUpdateTokens
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrIdentIdentRequestUpdateIdent:Execute

Fault Code: F78752

Message: [FSM:STAGE:REMOTE-ERROR]: Update identities to external identifier manager(FSM-STAGE:sam:dme:IdentIdentRequestUpdateIdent:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78752
mibFaultName: fsmRmtErrIdentIdentRequestUpdateIdentExecute
moClass: ident:IdentRequest
Type: fsm
autoCleared: true
Affected MO: metaverse/metasys/IdentQ-[id]
```

fsmRmtErrIdentMetaSystemSync:Execute

Fault Code: F78753

Message: [FSM:STAGE:REMOTE-ERROR]: Synchronise ID universe to external identifier manager(FSM-STAGE:sam:dme:IdentMetaSystemSync:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78753
```

```
mibFaultName: fsmRmtErrIdentMetaSystemSyncExecute
moClass: ident:MetaSystem
Type: fsm
autoCleared: true
Affected MO: metaverse/metasys
```

fsmRmtErrIdentMetaSystemSync:Ping

Fault Code: F78753

Message: [FSM:STAGE:REMOTE-ERROR]: Check identifier manager availability(FSM-STAGE:sam:dme:IdentMetaSystemSync:Ping)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: ping-failed
mibFaultCode: F78753
mibFaultName: fsmRmtErrIdentMetaSystemSyncPing
moClass: ident:MetaSystem
Type: fsm
autoCleared: true
Affected MO: metaverse/metasys
```

fsmRmtErrComputePhysicalResetIpmi:Execute

Fault Code: F78766

Message: [FSM:STAGE:REMOTE-ERROR]: Execute Reset IPMI configuration for server [dn](FSM-STAGE:sam:dme:ComputePhysicalResetIpmi:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78766
mibFaultName: fsmRmtErrComputePhysicalResetIpmiExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:ActivateBios

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Activate BIOS image for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:ActivateBios)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-bios-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeActivateBios
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:AssertBypassWait

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for assert bypass on rack server(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:AssertBypassWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: assert-bypass-wait-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeAssertBypassWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:BiosImgUpdate

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Update blade BIOS image(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:BiosImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bios-img-update-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeBiosImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:BiosPostCompletion

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for BIOS POST completion from CIMC on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:BiosPostCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeBiosPostCompletion
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:BladePowerOff

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Power off server for Firmware Upgrade(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:BladePowerOff)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: blade-power-off-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeBladePowerOff
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:BmcConfigPnuOS

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: provisioning a bootable device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:BmcConfigPnuOS)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-config-pnuos-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeBmcConfigPnuOS
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:BmcPreconfigPnuOSLocal

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:BmcPreconfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: bmc-preconfig-pnuoslocal-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeBmcPreconfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:BmcPreconfigPnuOSPeer

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:BmcPreconfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-preconfig-pnuospeer-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeBmcPreconfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:BmcUnconfigPnuOS

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: unprovisioning the bootable device for server(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:BmcUnconfigPnuOS)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-unconfig-pnuos-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeBmcUnconfigPnuOS
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:BootPnuos

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Bring-up pre-boot environment for Firmware Upgrade(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:BootPnuos)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-pnuos-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeBootPnuos
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:BootWait

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for system reset(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:BootWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-wait-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeBootWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:CheckPowerAvailability

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:CiscoOSOpenGate

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Open Gate from CIMC on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:CiscoOSOpenGate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: ciscoosopen-gate-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeCiscoOSOpenGate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:ClearBiosUpdate

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Clearing pending BIOS image update(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:ClearBiosUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: clear-bios-update-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeClearBiosUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:DeassertResetBypass

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: deassert reset-bypass(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:DeassertResetBypass)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: deassert-reset-bypass-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeDeassertResetBypass
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:DeleteCurlDownloadedImages

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Delete images downloaded from operations manager(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:DeleteCurlDownloadedImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-curl-downloaded-images-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeDeleteCurlDownloadedImages
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:DeleteImagesRemote

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Delete images downloaded from operations manager(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:DeleteImagesRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-images-remote-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeDeleteImagesRemote
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:GraphicsImageUpdate

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Update gpu firmware image(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:GraphicsImageUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: graphics-image-update-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeGraphicsImageUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:HbaImgUpdate

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Update Host Bus Adapter image(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:HbaImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hba-img-update-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeHbaImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:LocalDiskFwUpdate

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Update LocalDisk firmware image(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:LocalDiskFwUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-disk-fw-update-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeLocalDiskFwUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:MswitchImgUpdate

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Update NVMe MSwitch image(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:MswitchImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: mswitch-img-update-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeMswitchImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:NicConfigPnuOSLocal

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Configure adapter for pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:NicConfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-pnuoslocal-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeNicConfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:NicConfigPnuOSPeer

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Configure adapter for pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:NicConfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-pnuospeer-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeNicConfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:NicImgUpdate

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Update adapter image(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:NicImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-img-update-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeNicImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:NicUnconfigPnuOSLocal

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure adapter of server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:NicUnconfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-unconfig-pnuoslocal-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeNicUnconfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:NicUnconfigPnuOSPeer

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure adapter of server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:NicUnconfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-unconfig-pnuospeer-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeNicUnconfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:OobPollSasExpanderActivateStatus

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Sas expander regular firmware activation to complete(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:OobPollSasExpanderActivateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-poll-sas-expander-activate-status-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeOobPollSasExpanderActivateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:OobPollSasExpanderBootImgActivateStatus

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Sas expander boot firmware update to complete(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:OobPollSasExpanderBootImgActivateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-poll-sas-expander-boot-img-activate-status-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeOobPollSasExpanderBootImgActivateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:OobPollSasExpanderUpdateStatus

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Sas expander regular firmware update to complete(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:OobPollSasExpanderUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: oob-poll-sas-expander-update-status-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeOobPollSasExpanderUpdateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:OobSasExpanderBootImgActivate

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Sas expander boot firmware update(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:OobSasExpanderBootImgActivate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-sas-expander-boot-img-activate-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeOobSasExpanderBootImgActivate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:OobSasExpanderImgActivate

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Sas expander regular firmware activate(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:OobSasExpanderImgActivate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-sas-expander-img-activate-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeOobSasExpanderImgActivate
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:OobSasExpanderImgUpdate

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Sas expander regular firmware update(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:OobSasExpanderImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-sas-expander-img-update-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeOobSasExpanderImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:OobStorageInventory

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Perform oob storage inventory(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:OobStorageInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-storage-inventory-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeOobStorageInventory
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:PciSwitchImageUpdate

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Update Pci Switch firmware image(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PciSwitchImageUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pci-switch-image-update-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradePciSwitchImageUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:PersistentMemoryDimmFwUpdate

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Update Persistent Memory DIMM firmware image(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PersistentMemoryDimmFwUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: persistent-memory-dimm-fw-update-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradePersistentMemoryDimmFwUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:PnuOSCatalog

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Populate pre-boot catalog to server(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PnuOSCatalog)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuoscatalog-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradePnuOSCatalog
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:PnuOSConfig

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Configure server with service profile [assignedToDn] pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PnuOSConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosconfig-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradePnuOSConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:PnuOSIdent

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Identify pre-boot environment agent(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PnuOSIdent)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosident-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradePnuOSIdent
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:PnuOSInventory

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Perform inventory of server(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PnuOSInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosinventory-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradePnuOSInventory
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:PnuOSPolicy

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Populate pre-boot environment behavior policy(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PnuOSPolicy)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: pnuospolicy-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradePnuOSPolicy
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:PnuOSSelfTest

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Trigger self-test on pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PnuOSSelfTest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosself-test-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradePnuOSSelfTest
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:PnuOSUnloadDrivers

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Unload drivers on server(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PnuOSUnloadDrivers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosunload-drivers-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradePnuOSUnloadDrivers
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:PnuOSValidate

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Pre-boot environment validation for Firmware Upgrade(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PnuOSValidate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosvalidate-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradePnuOSValidate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:PollBiosActivateStatus

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for BIOS activate(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PollBiosActivateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-bios-activate-status-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradePollBiosActivateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:PollBiosUpdateStatus

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for BIOS update to complete(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PollBiosUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-bios-update-status-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradePollBiosUpdateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:PollBoardCtrlPowerCycle

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Board Controller power cycle to complete(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PollBoardCtrlPowerCycle)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-board-ctrl-power-cycle-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradePollBoardCtrlPowerCycle
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:PollBoardCtrlUpdateStatus

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Board Controller update to complete(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PollBoardCtrlUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-board-ctrl-update-status-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradePollBoardCtrlUpdateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:PollClearBiosUpdateStatus

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for pending BIOS image update to clear(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PollClearBiosUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-clear-bios-update-status-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradePollClearBiosUpdateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:PowerCycleBoard

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Power cycle the board controller(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PowerCycleBoard)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-cycle-board-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradePowerCycleBoard
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:PowerDeployWait

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradePowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:PowerOffForSbAdaptorActivation

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Power off the server for activating Secure boot adapter firmware(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PowerOffForSbAdaptorActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: power-off-for-sb-adaptor-activation-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradePowerOffForSbAdaptorActivation
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:PowerOn

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Power on server for Firmware Upgrade(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradePowerOn
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:PreSanitize

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradePreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:Sanitize

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:SasExpanderImgUpdate

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Update sas expander image(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:SasExpanderImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sas-expander-img-update-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeSasExpanderImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:Shutdown

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Shutting down server [dn] after firmware upgrade(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:Shutdown)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: shutdown-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeShutdown
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:SolRedirectDisable

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Disable Sol redirection on server(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:SolRedirectDisable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sol-redirect-disable-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeSolRedirectDisable
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:SolRedirectEnable

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: set up bios token for server for Sol redirect(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:SolRedirectEnable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sol-redirect-enable-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeSolRedirectEnable
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:StorageCtlrImgUpdate

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Update storage controller image(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:StorageCtlrImgUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: storage-ctlr-img-update-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeStorageCtlrImgUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:SwConfigPnuOSLocal

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Configure primary fabric interconnect for pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:SwConfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-pnuoslocal-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeSwConfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:SwConfigPnuOSPeer

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Configure secondary fabric interconnect for pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:SwConfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-pnuospeer-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeSwConfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:SwConfigPortNivLocal

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: configuring primary fabric interconnect access to server(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:SwConfigPortNivLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: sw-config-port-niv-local-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeSwConfigPortNivLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:SwConfigPortNivPeer

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: configuring secondary fabric interconnect access to server(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:SwConfigPortNivPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-port-niv-peer-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeSwConfigPortNivPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:SwUnconfigPnuOSLocal

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure primary fabric interconnect for server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:SwUnconfigPnuOSLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfig-pnuoslocal-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeSwUnconfigPnuOSLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:SwUnconfigPnuOSPeer

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure secondary fabric interconnect for server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:SwUnconfigPnuOSPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-unconfig-pnuospeer-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeSwUnconfigPnuOSPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:UnconfigCimcVMedia

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning all mappings for vmedia(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:UnconfigCimcVMedia)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-cimcvmedia-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeUnconfigCimcVMedia
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:UnconfigExtMgmtGw

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning all ext mgmt bmc gateway for vmedia(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:UnconfigExtMgmtGw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-ext-mgmt-gw-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeUnconfigExtMgmtGw
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:UnconfigExtMgmtRules

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning all ext mgmt rules for vmedia(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:UnconfigExtMgmtRules)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-ext-mgmt-rules-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeUnconfigExtMgmtRules
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:UnlockFirmwareImage

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Releasing the lock obtained(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:UnlockFirmwareImage)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unlock-firmware-image-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeUnlockFirmwareImage
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:UpdateBiosRequest

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Sending update BIOS request to CIMC(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:UpdateBiosRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-bios-request-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeUpdateBiosRequest
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:UpdateBoardCtrlRequest

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Sending Board Controller update request to CIMC(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:UpdateBoardCtrlRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-board-ctrl-request-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeUpdateBoardCtrlRequest
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:UpdateFruComponents

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Updating Sub Components after Power Off for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:UpdateFruComponents)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-fru-components-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeUpdateFruComponents
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:WaitForBiosPostCompletion

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Adaptor to Come up after BIOS POST Completion(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:WaitForBiosPostCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: wait-for-bios-post-completion-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeWaitForBiosPostCompletion
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:activateAdaptorNwFwLocal

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Activate adapter network firmware on(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:activateAdaptorNwFwLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-adaptor-nw-fw-local-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeActivateAdaptorNwFwLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:activateAdaptorNwFwPeer

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Activate adapter network firmware on(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:activateAdaptorNwFwPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-adaptor-nw-fw-peer-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeActivateAdaptorNwFwPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:activateIBMCFw

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Activate CIMC firmware of server [serverId](FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:activateIBMCFw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activateibmcfw-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeActivateIBMCFw
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:activateNwSbAdaptorFw

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Activate Network Secure boot adapter firmware(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:activateNwSbAdaptorFw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-nw-sb-adaptor-fw-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeActivateNwSbAdaptorFw
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:copyRemote

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Copy images to peer node(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:copyRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-remote-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeCopyRemote
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:downloadImages

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Download images from operations manager(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:downloadImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: download-images-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeDownloadImages
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:hagPnuOSConnect

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Connect to pre-boot environment agent for Firmware Upgrade(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:hagPnuOSConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-pnuosconnect-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeHagPnuOSConnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:hagPnuOSDisconnect

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Disconnect pre-boot environment agent(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:hagPnuOSDisconnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-pnuosdisconnect-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeHagPnuOSDisconnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:resetIBMC

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Reset CIMC of server [serverId](FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:resetIBMC)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resetibmc-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeResetIBMC
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:serialDebugPnuOSConnect

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Connect to pre-boot environment agent for Firmware Upgrade(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:serialDebugPnuOSConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: serial-debug-pnuosconnect-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeSerialDebugPnuOSConnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:serialDebugPnuOSDisconnect

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Disconnect pre-boot environment agent(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:serialDebugPnuOSDisconnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: serial-debug-pnuosdisconnect-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeSerialDebugPnuOSDisconnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:updateAdaptorNwFwLocal

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Update adapter network firmware(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:updateAdaptorNwFwLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-adaptor-nw-fw-local-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeUpdateAdaptorNwFwLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:updateAdaptorNwFwPeer

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Update adapter network firmware(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:updateAdaptorNwFwPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-adaptor-nw-fw-peer-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeUpdateAdaptorNwFwPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:updateIBMCFw

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Update CIMC firmware of server [serverId](FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:updateIBMCFw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: updateibmcfw-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeUpdateIBMCFw
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:updateNwSbAdaptorFw

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Update Network Secure boot adapter firmware(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:updateNwSbAdaptorFw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-nw-sb-adaptor-fw-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeUpdateNwSbAdaptorFw
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:waitForAdaptorNwFwUpdateLocal

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Wait for adapter network firmware update completion(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:waitForAdaptorNwFwUpdateLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-adaptor-nw-fw-update-local-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeWaitForAdaptorNwFwUpdateLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:waitForAdaptorNwFwUpdatePeer

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Wait for adapter network firmware update completion(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:waitForAdaptorNwFwUpdatePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-adaptor-nw-fw-update-peer-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeWaitForAdaptorNwFwUpdatePeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:waitForIBMCFwUpdate

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Wait for CIMC firmware completion on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:waitForIBMCFwUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-foribmcfw-update-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeWaitForIBMCFwUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:waitForNwSbAdaptorFwActivate

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Wait for Network Secure boot adapter firmware activation completion(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:waitForNwSbAdaptorFwActivate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-nw-sb-adaptor-fw-activate-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeWaitForNwSbAdaptorFwActivate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:waitForNwSbAdaptorFwUpdate

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Wait for Network Secure boot adapter firmware update completion(FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:waitForNwSbAdaptorFwUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-nw-sb-adaptor-fw-update-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeWaitForNwSbAdaptorFwUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalFwUpgrade:waitForUpdateFruComponents

Fault Code: F78767

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for update completion on Sub Components for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalFwUpgrade:waitForUpdateFruComponents)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-update-fru-components-failed
mibFaultCode: F78767
mibFaultName: fsmRmtErrComputePhysicalFwUpgradeWaitForUpdateFruComponents
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitAdapterReset:DeassertResetBypass

Fault Code: F78768

Message: [FSM:STAGE:REMOTE-ERROR]: deassert reset-bypass(FSM-STAGE:sam:dme:ComputeRackUnitAdapterReset:DeassertResetBypass)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: deassert-reset-bypass-failed
mibFaultCode: F78768
mibFaultName: fsmRmtErrComputeRackUnitAdapterResetDeassertResetBypass
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitAdapterReset:PowerCycle

Fault Code: F78768

Message: [FSM:STAGE:REMOTE-ERROR]: Power-cycle server [dn](FSM-STAGE:sam:dme:ComputeRackUnitAdapterReset:PowerCycle)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-cycle-failed
mibFaultCode: F78768
mibFaultName: fsmRmtErrComputeRackUnitAdapterResetPowerCycle
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitAdapterReset:PreSanitize

Fault Code: F78768

Message: [FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration server [dn](FSM-STAGE:sam:dme:ComputeRackUnitAdapterReset:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F78768
mibFaultName: fsmRmtErrComputeRackUnitAdapterResetPreSanitize
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputeRackUnitAdapterReset:Sanitize

Fault Code: F78768

Message: [FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration server [dn](FSM-STAGE:sam:dme:ComputeRackUnitAdapterReset:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F78768
mibFaultName: fsmRmtErrComputeRackUnitAdapterResetSanitize
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrPortPIoInCompatSfpReplaced:EnablePort

Fault Code: F78798

Message: [FSM:STAGE:REMOTE-ERROR]: Enabling port(FSM-STAGE:sam:dme:PortPIoInCompatSfpReplaced:EnablePort)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: enable-port-failed
mibFaultCode: F78798
mibFaultName: fsmRmtErrPortPIoInCompatSfpReplacedEnablePort
moClass: port:PIo
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
```

```
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]
```

fsmRmtErrExtpolEpRegisterFsm:Execute

Fault Code: F78799

Message: [FSM:STAGE:REMOTE-ERROR]: Register FSM Execute(FSM-STAGE:sam:dme:ExtpolEpRegisterFsm:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78799
mibFaultName: fsmRmtErrExtpolEpRegisterFsmExecute
moClass: extpol:Ep
Type: fsm
autoCleared: true
Affected MO: extpol
```

fsmRmtErrExtpolRegistryCrossDomainConfig:SetLocal

Fault Code: F78800

Message: [FSM:STAGE:REMOTE-ERROR]: Configure cross-domain XML for FLEX client on local fabric-interconnect(FSM-STAGE:sam:dme:ExtpolRegistryCrossDomainConfig:SetLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-local-failed
mibFaultCode: F78800
mibFaultName: fsmRmtErrExtpolRegistryCrossDomainConfigSetLocal
moClass: extpol:Registry
Type: fsm
autoCleared: true
Affected MO: extpol/reg
```

fsmRmtErrExtpolRegistryCrossDomainConfig:SetPeer

Fault Code: F78800

Message: [FSM:STAGE:REMOTE-ERROR]: Configure cross-domain XML for FLEX client on peer fabric-interconnect(FSM-STAGE:sam:dme:ExtpolRegistryCrossDomainConfig:SetPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-peer-failed
mibFaultCode: F78800
mibFaultName: fsmRmtErrExtpolRegistryCrossDomainConfigSetPeer
moClass: extpol:Registry
Type: fsm
autoCleared: true
Affected MO: extpol/reg
```

fsmRmtErrExtpolRegistryCrossDomainDelete:SetLocal

Fault Code: F78801

Message: [FSM:STAGE:REMOTE-ERROR]: Remove cross-domain XML for FLEX client on local fabric-interconnect(FSM-STAGE:sam:dme:ExtpolRegistryCrossDomainDelete:SetLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-local-failed
mibFaultCode: F78801
mibFaultName: fsmRmtErrExtpolRegistryCrossDomainDeleteSetLocal
moClass: extpol:Registry
Type: fsm
autoCleared: true
Affected MO: extpol/reg
```

fsmRmtErrExtpolRegistryCrossDomainDelete:SetPeer

Fault Code: F78801

Message: [FSM:STAGE:REMOTE-ERROR]: Remove cross-domain XML for FLEX client on peer fabric-interconnect(FSM-STAGE:sam:dme:ExtpolRegistryCrossDomainDelete:SetPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-peer-failed
mibFaultCode: F78801
mibFaultName: fsmRmtErrExtpolRegistryCrossDomainDeleteSetPeer
moClass: extpol:Registry
Type: fsm
autoCleared: true
Affected MO: extpol/reg
```

fsmRmtErrNfsMountInstMount:MountLocal

Fault Code: F78817

Message: [FSM:STAGE:REMOTE-ERROR]: Mount nfs [remoteDir] from server [server] on local switch(FSM-STAGE:sam:dme:NfsMountInstMount:MountLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: mount-local-failed
mibFaultCode: F78817
mibFaultName: fsmRmtErrNfsMountInstMountMountLocal
moClass: nfs:MountInst
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/nfs-mount-inst-[name]
```

fsmRmtErrNfsMountInstMount:MountPeer

Fault Code: F78817

Message: [FSM:STAGE:REMOTE-ERROR]: Mount nfs [remoteDir] from NFS server [server] on peer switch(FSM-STAGE:sam:dme:NfsMountInstMount:MountPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: mount-peer-failed
mibFaultCode: F78817
mibFaultName: fsmRmtErrNfsMountInstMountMountPeer
moClass: nfs:MountInst
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/nfs-mount-inst-[name]
```

fsmRmtErrNfsMountInstMount:RegisterClient

Fault Code: F78817

Message: [FSM:STAGE:REMOTE-ERROR]: Register client with Ops Mgr(FSM-STAGE:sam:dme:NfsMountInstMount:RegisterClient)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: register-client-failed
mibFaultCode: F78817
mibFaultName: fsmRmtErrNfsMountInstMountRegisterClient
moClass: nfs:MountInst
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/nfs-mount-inst-[name]
```

fsmRmtErrNfsMountInstMount:VerifyRegistration

Fault Code: F78817

Message: [FSM:STAGE:REMOTE-ERROR]: Verify client registration with Ops Mgr(FSM-STAGE:sam:dme:NfsMountInstMount:VerifyRegistration)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: verify-registration-failed
mibFaultCode: F78817
mibFaultName: fsmRmtErrNfsMountInstMountVerifyRegistration
moClass: nfs:MountInst
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/nfs-mount-inst-[name]
```

fsmRmtErrNfsMountInstUnmount:UnmountLocal

Fault Code: F78818

Message: [FSM:STAGE:REMOTE-ERROR]: Unmount nfs [remoteDir] from server [server](FSM-STAGE:sam:dme:NfsMountInstUnmount:UnmountLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unmount-local-failed
mibFaultCode: F78818
mibFaultName: fsmRmtErrNfsMountInstUnmountUnmountLocal
moClass: nfs:MountInst
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/nfs-mount-inst-[name]
```

fsmRmtErrNfsMountInstUnmount:UnmountPeer

Fault Code: F78818

Message: [FSM:STAGE:REMOTE-ERROR]: Unmount nfs [remoteDir] from server [server](FSM-STAGE:sam:dme:NfsMountInstUnmount:UnmountPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unmount-peer-failed
mibFaultCode: F78818
mibFaultName: fsmRmtErrNfsMountInstUnmountUnmountPeer
moClass: nfs:MountInst
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/nfs-mount-inst-[name]
```

fsmRmtErrNfsMountDefReportNfsMountSuspend:Report

Fault Code: F78819

Message: [FSM:STAGE:REMOTE-ERROR]: Report mount suspend success to operations manager(FSM-STAGE:sam:dme:NfsMountDefReportNfsMountSuspend:Report)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: report-failed
mibFaultCode: F78819
```

```
mibFaultName: fsmRmtErrNfsMountDefReportNfsMountSuspendReport
moClass: nfs:MountDef
Type: fsm
autoCleared: true
Affected MO: nfs-ep/nfs-mount-def-[name]
```

fsmRmtErrStorageSystemSync:Execute

Fault Code: F78835

Message: [FSM:STAGE:REMOTE-ERROR]: Synchronise requestors with storage broker(FSM-STAGE:sam:dme:StorageSystemSync:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78835
mibFaultName: fsmRmtErrStorageSystemSyncExecute
moClass: storage:System
Type: fsm
autoCleared: true
Affected MO: storage-ep/system
```

fsmRmtErrFirmwareSystemDeploy:ActivateIOM

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Activating IOMs(FSM-STAGE:sam:dme:FirmwareSystemDeploy:ActivateIOM)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activateiom-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployActivateIOM
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:ActivateLocalFI

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Activating Local Fabric Interconnect(FSM-STAGE:sam:dme:FirmwareSystemDeploy:ActivateLocalFI)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-localfi-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployActivateLocalFI
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:ActivateRemoteFI

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Activating Peer Fabric Interconnect(FSM-STAGE:sam:dme:FirmwareSystemDeploy:ActivateRemoteFI)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-remotefi-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployActivateRemoteFI
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:ActivateUCSM

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Activating UCSM(FSM-STAGE:sam:dme:FirmwareSystemDeploy:ActivateUCSM)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activateucsm-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployActivateUCSM
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:ActivateUCSMServicePack

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Activating UCSM Service Pack(FSM-STAGE:sam:dme:FirmwareSystemDeploy:ActivateUCSMServicePack)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activateucsmservice-pack-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployActivateUCSMServicePack
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:CopyAllImagesToPeer

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Copy all images to peer(FSM-STAGE:sam:dme:FirmwareSystemDeploy:CopyAllImagesToPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-all-images-to-peer-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployCopyAllImagesToPeer
moClass: firmware:System
Type: fsm
```

```
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:FabEvacOffRemoteFI

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Disabling Fabric Evacuation on Remote FI(FSM-STAGE:sam:dme:FirmwareSystemDeploy:FabEvacOffRemoteFI)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: fab-evac-off-remotefi-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployFabEvacOffRemoteFI
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:FabEvacOnRemoteFI

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Enabling Fabric Evacuation on Remote FI(FSM-STAGE:sam:dme:FirmwareSystemDeploy:FabEvacOnRemoteFI)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: fab-evac-on-remotefi-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployFabEvacOnRemoteFI
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:FailOverToRemoteFI

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Switching Over to Remote FI to make it as Primary(FSM-STAGE:sam:dme:FirmwareSystemDeploy:FailOverToRemoteFI)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: fail-over-to-remotefi-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployFailOverToRemoteFI
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:InternalBackup

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Taking Internal Backup(FSM-STAGE:sam:dme:FirmwareSystemDeploy:InternalBackup)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: internal-backup-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployInternalBackup
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:PollActivateOfIOM

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Activation to complete on IOMs(FSM-STAGE:sam:dme:FirmwareSystemDeploy:PollActivateOfIOM)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-activate-ofiom-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployPollActivateOfIOM
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:PollActivateOfLocalFI

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Activation to complete on Local Fabric Interconnect(FSM-STAGE:sam:dme:FirmwareSystemDeploy:PollActivateOfLocalFI)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-activate-of-localfi-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployPollActivateOfLocalFI
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:PollActivateOfRemoteFI

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Activation to complete on Peer Fabric Interconnect(FSM-STAGE:sam:dme:FirmwareSystemDeploy:PollActivateOfRemoteFI)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-activate-of-remotefi-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployPollActivateOfRemoteFI
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:PollActivateOfUCSM

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for UCSM Activate to complete(FSM-STAGE:sam:dme:FirmwareSystemDeploy:PollActivateOfUCSM)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-activate-ofucsm-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployPollActivateOfUCSM
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:PollActivateOfUCSMServicePack

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for UCSM Service Pack Activate to complete(FSM-STAGE:sam:dme:FirmwareSystemDeploy:PollActivateOfUCSMServicePack)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-activate-ofucsmservice-pack-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployPollActivateOfUCSMServicePack
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:PollFabEvacOffRemoteFI

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Fabric Evacuation to be Disabled on Remote FI(FSM-STAGE:sam:dme:FirmwareSystemDeploy:PollFabEvacOffRemoteFI)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-fab-evac-off-remotefi-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployPollFabEvacOffRemoteFI
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:PollFabEvacOnRemoteFI

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Fabric Evacuation to be Enabled on Remote FI(FSM-STAGE:sam:dme:FirmwareSystemDeploy:PollFabEvacOnRemoteFI)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-fab-evac-on-remotefi-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployPollFabEvacOnRemoteFI
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:PollFailOverToRemoteFI

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Switch Over to complete(FSM-STAGE:sam:dme:FirmwareSystemDeploy:PollFailOverToRemoteFI)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-fail-over-to-remotefi-failed
mibFaultCode: F78848
```

```
mibFaultName: fsmRmtErrFirmwareSystemDeployPollFailOverToRemoteFI
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:PollInternalBackup

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Internal Backup to complete(FSM-STAGE:sam:dme:FirmwareSystemDeploy:PollInternalBackup)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-internal-backup-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployPollInternalBackup
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:PollUpdateOfIOM

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for update of IOMs to complete(FSM-STAGE:sam:dme:FirmwareSystemDeploy:PollUpdateOfIOM)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-ofiom-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployPollUpdateOfIOM
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:PollWaitForUserAck

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Polling to wait for user acknowledgment(FSM-STAGE:sam:dme:FirmwareSystemDeploy:PollWaitForUserAck)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-wait-for-user-ack-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployPollWaitForUserAck
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:ResolveDistributable

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Resolve distributable from operations manager(FSM-STAGE:sam:dme:FirmwareSystemDeploy:ResolveDistributable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-distributable-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployResolveDistributable
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:ResolveDistributableNames

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Resolving distributable name from infra pack(FSM-STAGE:sam:dme:FirmwareSystemDeploy:ResolveDistributableNames)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-distributable-names-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployResolveDistributableNames
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:ResolveImages

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Resolve images from operations manager(FSM-STAGE:sam:dme:FirmwareSystemDeploy:ResolveImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-images-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployResolveImages
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:UpdateIOM

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Updating back-up image of IOMs(FSM-STAGE:sam:dme:FirmwareSystemDeploy:UpdateIOM)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: updateiom-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployUpdateIOM
moClass: firmware:System
Type: fsm
```

```
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:WaitForDeploy

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Deploy to begin(FSM-STAGE:sam:dme:FirmwareSystemDeploy:WaitForDeploy)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-deploy-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployWaitForDeploy
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:WaitForUserAck

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for User Acknowledgment To Start Primary Fabric Interconnect Activation(FSM-STAGE:sam:dme:FirmwareSystemDeploy:WaitForUserAck)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-user-ack-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployWaitForUserAck
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemDeploy:downloadImages

Fault Code: F78848

Message: [FSM:STAGE:REMOTE-ERROR]: downloading image from central to local repository(FSM-STAGE:sam:dme:FirmwareSystemDeploy:downloadImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: download-images-failed
mibFaultCode: F78848
mibFaultName: fsmRmtErrFirmwareSystemDeployDownloadImages
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemApplyCatalogPack:ActivateCatalog

Fault Code: F78849

Message: [FSM:STAGE:REMOTE-ERROR]: Activating Catalog(FSM-STAGE:sam:dme:FirmwareSystemApplyCatalogPack:ActivateCatalog)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-catalog-failed
mibFaultCode: F78849
mibFaultName: fsmRmtErrFirmwareSystemApplyCatalogPackActivateCatalog
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemApplyCatalogPack:ResolveDistributable

Fault Code: F78849

Message: [FSM:STAGE:REMOTE-ERROR]: Resolve distributable from operations manager(FSM-STAGE:sam:dme:FirmwareSystemApplyCatalogPack:ResolveDistributable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-distributable-failed
mibFaultCode: F78849
mibFaultName: fsmRmtErrFirmwareSystemApplyCatalogPackResolveDistributable
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemApplyCatalogPack:ResolveDistributableNames

Fault Code: F78849

Message: [FSM:STAGE:REMOTE-ERROR]: Resolving distributable name(FSM-STAGE:sam:dme:FirmwareSystemApplyCatalogPack:ResolveDistributableNames)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-distributable-names-failed
mibFaultCode: F78849
mibFaultName: fsmRmtErrFirmwareSystemApplyCatalogPackResolveDistributableNames
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrFirmwareSystemApplyCatalogPack:ResolveImages

Fault Code: F78849

Message: [FSM:STAGE:REMOTE-ERROR]: Resolve images from operations manager(FSM-STAGE:sam:dme:FirmwareSystemApplyCatalogPack:ResolveImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-images-failed
mibFaultCode: F78849
mibFaultName: fsmRmtErrFirmwareSystemApplyCatalogPackResolveImages
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmRmtErrComputeServerDiscPolicyResolveScrubPolicy:Resolve

Fault Code: F78866

Message: [FSM:STAGE:REMOTE-ERROR]: Resolving scrub policy from UCS Central(FSM-STAGE:sam:dme:ComputeServerDiscPolicyResolveScrubPolicy:Resolve)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-failed
mibFaultCode: F78866
mibFaultName: fsmRmtErrComputeServerDiscPolicyResolveScrubPolicyResolve
moClass: compute:ServerDiscPolicy
Type: fsm
autoCleared: true
Affected MO: org-[name]/server-discovery
```

fsmRmtErrSwFcSanBorderActivateZoneSet:UpdateZones

Fault Code: F78879

Message: [FSM:STAGE:REMOTE-ERROR]: fc zone configuration on [switchId](FSM-STAGE:sam:dme:SwFcSanBorderActivateZoneSet:UpdateZones)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-zones-failed
mibFaultCode: F78879
mibFaultName: fsmRmtErrSwFcSanBorderActivateZoneSetUpdateZones
moClass: sw:FcSanBorder
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/border-fc
```

fsmRmtErrSwFcSanBorderActivateZoneSet:VerifyUserZoneConfig

Fault Code: F78879

Message: [FSM:STAGE:REMOTE-ERROR]: Verifying Storage(FC User Configured Zones) Connectivity(FSM-STAGE:sam:dme:SwFcSanBorderActivateZoneSet:VerifyUserZoneConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: verify-user-zone-config-failed
mibFaultCode: F78879
mibFaultName: fsmRmtErrSwFcSanBorderActivateZoneSetVerifyUserZoneConfig
moClass: sw:FcSanBorder
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/border-fc
```

fsmRmtErrExtpolEpRepairCert:cleanOldData

Fault Code: F78886

Message: [FSM:STAGE:REMOTE-ERROR]: Cleaning certificates, channels and policy meta data(FSM-STAGE:sam:dme:ExtpolEpRepairCert:cleanOldData)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: clean-old-data-failed
mibFaultCode: F78886
mibFaultName: fsmRmtErrExtpolEpRepairCertCleanOldData
moClass: extpol:Ep
Type: fsm
autoCleared: true
Affected MO: extpol
```

fsmRmtErrExtpolEpRepairCert:request

Fault Code: F78886

Message: [FSM:STAGE:REMOTE-ERROR]: Provisioning latest certificates(FSM-STAGE:sam:dme:ExtpolEpRepairCert:request)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: request-failed
mibFaultCode: F78886
```

```
mibFaultName: fsmRmtErrExtpolEpRepairCertRequest
moClass: extpol:Ep
Type: fsm
autoCleared: true
Affected MO: extpol
```

fsmRmtErrExtpolEpRepairCert:unregister

Fault Code: F78886

Message: [FSM:STAGE:REMOTE-ERROR]: unregister from old UCS Central, if needed(FSM-STAGE:sam:dme:ExtpolEpRepairCert:unregister)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unregister-failed
mibFaultCode: F78886
mibFaultName: fsmRmtErrExtpolEpRepairCertUnregister
moClass: extpol:Ep
Type: fsm
autoCleared: true
Affected MO: extpol
```

fsmRmtErrExtpolEpRepairCert:verify

Fault Code: F78886

Message: [FSM:STAGE:REMOTE-ERROR]: checking that cert was provisioned(FSM-STAGE:sam:dme:ExtpolEpRepairCert:verify)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: verify-failed
mibFaultCode: F78886
mibFaultName: fsmRmtErrExtpolEpRepairCertVerify
moClass: extpol:Ep
Type: fsm
autoCleared: true
Affected MO: extpol
```

fsmRmtErrExtpolEpRepairCert:verifyGuid

Fault Code: F78886

Message: [FSM:STAGE:REMOTE-ERROR]: verifying GUID of UCS Central(FSM-STAGE:sam:dme:ExtpolEpRepairCert:verifyGuid)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: verify-guid-failed
mibFaultCode: F78886
mibFaultName: fsmRmtErrExtpolEpRepairCertVerifyGuid
moClass: extpol:Ep
Type: fsm
autoCleared: true
Affected MO: extpol
```

fsmRmtErrPolicyControlEpOperate:Resolve

Fault Code: F78887

Message: [FSM:STAGE:REMOTE-ERROR]: (FSM-STAGE:sam:dme:PolicyControlEpOperate:Resolve)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-failed
mibFaultCode: F78887
mibFaultName: fsmRmtErrPolicyControlEpOperateResolve
moClass: policy:ControlEp
Type: fsm
autoCleared: true
Affected MO: sys/control-ep-[type]
```

fsmRmtErrPolicyPolicyScopeReleasePolicyFsm:Release

Fault Code: F78888

Message: [FSM:STAGE:REMOTE-ERROR]: (FSM-STAGE:sam:dme:PolicyPolicyScopeReleasePolicyFsm:Release)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: release-failed
mibFaultCode: F78888
mibFaultName: fsmRmtErrPolicyPolicyScopeReleasePolicyFsmRelease
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

fsmRmtErrPolicyPolicyScopeReleaseOperationFsm:Release

Fault Code: F78889

Message: [FSM:STAGE:REMOTE-ERROR]:
(FSM-STAGE:sam:dme:PolicyPolicyScopeReleaseOperationFsm:Release)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: release-failed
mibFaultCode: F78889
mibFaultName: fsmRmtErrPolicyPolicyScopeReleaseOperationFsmRelease
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

fsmRmtErrPolicyPolicyScopeReleaseStorageFsm:Release

Fault Code: F78890

Message: [FSM:STAGE:REMOTE-ERROR]: (FSM-STAGE:sam:dme:PolicyPolicyScopeReleaseStorageFsm:Release)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: release-failed
mibFaultCode: F78890
mibFaultName: fsmRmtErrPolicyPolicyScopeReleaseStorageFsmRelease
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

fsmRmtErrPolicyPolicyScopeResolveManyPolicyFsm:ResolveMany

Fault Code: F78891

Message: [FSM:STAGE:REMOTE-ERROR]: (FSM-STAGE:sam:dme:PolicyPolicyScopeResolveManyPolicyFsm:ResolveMany)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-many-failed
mibFaultCode: F78891
mibFaultName: fsmRmtErrPolicyPolicyScopeResolveManyPolicyFsmResolveMany
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

```
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

fsmRmtErrPolicyPolicyScopeResolveManyOperationFsm:ResolveMany

Fault Code: F78892

Message: [FSM:STAGE:REMOTE-ERROR]: (FSM-STAGE:sam:dme:PolicyPolicyScopeResolveManyOperationFsm:ResolveMany)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-many-failed
mibFaultCode: F78892
mibFaultName: fsmRmtErrPolicyPolicyScopeResolveManyOperationFsmResolveMany
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

fsmRmtErrPolicyPolicyScopeResolveManyStorageFsm:ResolveMany

Fault Code: F78893

Message: [FSM:STAGE:REMOTE-ERROR]: (FSM-STAGE:sam:dme:PolicyPolicyScopeResolveManyStorageFsm:ResolveMany)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-many-failed
mibFaultCode: F78893
```

mibFaultName: fsmRmtErrPolicyPolicyScopeResolveManyStorageFsmResolveMany
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]

fsmRmtErrPolicyPolicyScopeReleaseManyPolicyFsm:ReleaseMany

Fault Code: F78894

Message: [FSM:STAGE:REMOTE-ERROR]: (FSM-STAGE:sam:dme:PolicyPolicyScopeReleaseManyPolicyFsm:ReleaseMany)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: release-many-failed
mibFaultCode: F78894
mibFaultName: fsmRmtErrPolicyPolicyScopeReleaseManyPolicyFsmReleaseMany
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]

fsmRmtErrPolicyPolicyScopeReleaseManyOperationFsm:ReleaseMany

Fault Code: F78895

Message: [FSM:STAGE:REMOTE-ERROR]: (FSM-STAGE:sam:dme:PolicyPolicyScopeReleaseManyOperationFsm:ReleaseMany)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: release-many-failed
mibFaultCode: F78895
mibFaultName: fsmRmtErrPolicyPolicyScopeReleaseManyOperationFsmReleaseMany
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

fsmRmtErrPolicyPolicyScopeReleaseManyStorageFsm:ReleaseMany

Fault Code: F78896

Message: [FSM:STAGE:REMOTE-ERROR]: (FSM-STAGE:sam:dme:PolicyPolicyScopeReleaseManyStorageFsm:ReleaseMany)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: release-many-failed
mibFaultCode: F78896
mibFaultName: fsmRmtErrPolicyPolicyScopeReleaseManyStorageFsmReleaseMany
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

fsmRmtErrPolicyPolicyScopeResolveAllPolicyFsm:ResolveAll

Fault Code: F78897

Message: [FSM:STAGE:REMOTE-ERROR]: (FSM-STAGE:sam:dme:PolicyPolicyScopeResolveAllPolicyFsm:ResolveAll)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-all-failed
mibFaultCode: F78897
mibFaultName: fsmRmtErrPolicyPolicyScopeResolveAllPolicyFsmResolveAll
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

fsmRmtErrPolicyPolicyScopeResolveAllOperationFsm:ResolveAll

Fault Code: F78898

Message: [FSM:STAGE:REMOTE-ERROR]: (FSM-STAGE:sam:dme:PolicyPolicyScopeResolveAllOperationFsm:ResolveAll)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-all-failed
mibFaultCode: F78898
mibFaultName: fsmRmtErrPolicyPolicyScopeResolveAllOperationFsmResolveAll
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]

fsmRmtErrPolicyPolicyScopeResolveAllStorageFsm:ResolveAll

Fault Code: F78899

Message: [FSM:STAGE:REMOTE-ERROR]:
(FSM-STAGE:sam:dme:PolicyPolicyScopeResolveAllStorageFsm:ResolveAll)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: resolve-all-failed
mibFaultCode: F78899
mibFaultName: fsmRmtErrPolicyPolicyScopeResolveAllStorageFsmResolveAll
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]

fsmRmtErrPolicyPolicyScopeReleaseAllPolicyFsm:ReleaseAll

Fault Code: F78900

Message: [FSM:STAGE:REMOTE-ERROR]:
(FSM-STAGE:sam:dme:PolicyPolicyScopeReleaseAllPolicyFsm:ReleaseAll)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: release-all-failed
mibFaultCode: F78900
mibFaultName: fsmRmtErrPolicyPolicyScopeReleaseAllPolicyFsmReleaseAll
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]

fsmRmtErrPolicyPolicyScopeReleaseAllOperationFsm:ReleaseAll

Fault Code: F78901

Message: [FSM:STAGE:REMOTE-ERROR]:
(FSM-STAGE:sam:dme:PolicyPolicyScopeReleaseAllOperationFsm:ReleaseAll)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: release-all-failed
mibFaultCode: F78901
mibFaultName: fsmRmtErrPolicyPolicyScopeReleaseAllOperationFsmReleaseAll
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]

fsmRmtErrPolicyPolicyScopeReleaseAllStorageFsm:ReleaseAll

Fault Code: F78902

Message: [FSM:STAGE:REMOTE-ERROR]:
(FSM-STAGE:sam:dme:PolicyPolicyScopeReleaseAllStorageFsm:ReleaseAll)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: release-all-failed
mibFaultCode: F78902
mibFaultName: fsmRmtErrPolicyPolicyScopeReleaseAllStorageFsmReleaseAll
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

fsmRmtErrMgmtExportPolicyReportConfigCopy:Report

Fault Code: F78924

Message: [FSM:STAGE:REMOTE-ERROR]: Report config copy to Ops Mgr(FSM-STAGE:sam:dme:MgmtExportPolicyReportConfigCopy:Report)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: report-failed
mibFaultCode: F78924
mibFaultName: fsmRmtErrMgmtExportPolicyReportConfigCopyReport
moClass: mgmt:ExportPolicy
Type: fsm
autoCleared: true
Affected MO: org-[name]/cfg-exp-policy-[name]
Affected MO: org-[name]/db-backup-policy-[name]
```

fsmRmtErrExtpolProviderReportConfigImport:Report

Fault Code: F78925

Message: [FSM:STAGE:REMOTE-ERROR]: Report config import to Ops Mgr(FSM-STAGE:sam:dme:ExtpolProviderReportConfigImport:Report)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: report-failed
mibFaultCode: F78925
mibFaultName: fsmRmtErrExtpolProviderReportConfigImportReport
moClass: extpol:Provider
Type: fsm
autoCleared: true
Affected MO: extpol/reg/providers/prov-[type]
```

fsmRmtErrObserveObservedResolvePolicyFsm:Execute

Fault Code: F78931

Message: [FSM:STAGE:REMOTE-ERROR]: Resolve Policy FSM Execute(FSM-STAGE:sam:dme:ObserveObservedResolvePolicyFsm:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78931
mibFaultName: fsmRmtErrObserveObservedResolvePolicyFsmExecute
moClass: observe:Observed
Type: fsm
autoCleared: true
Affected MO: extpol/reg/clients/client-[id]/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/controllers/contro-[id]/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/providers/prov-[type]/observed-[dataSrcSysId]-[id]
Affected MO: observe/observed-[dataSrcSysId]-[id]
```

fsmRmtErrObserveObservedResolveResourceFsm:Execute

Fault Code: F78932

Message: [FSM:STAGE:REMOTE-ERROR]: Resolve Resource FSM Execute(FSM-STAGE:sam:dme:ObserveObservedResolveResourceFsm:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78932
mibFaultName: fsmRmtErrObserveObservedResolveResourceFsmExecute
moClass: observe:Observed
Type: fsm
autoCleared: true
Affected MO: extpol/reg/clients/client-[id]/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/controllers/contro-[id]/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/providers/prov-[type]/observed-[dataSrcSysId]-[id]
Affected MO: observe/observed-[dataSrcSysId]-[id]
```

fsmRmtErrObserveObservedResolveVMFsm:Execute

Fault Code: F78933

Message: [FSM:STAGE:REMOTE-ERROR]: Resolve VM FSM Execute(FSM-STAGE:sam:dme:ObserveObservedResolveVMFsm:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78933
mibFaultName: fsmRmtErrObserveObservedResolveVMFsmExecute
moClass: observe:Observed
Type: fsm
autoCleared: true
Affected MO: extpol/reg/clients/client-[id]/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/controllers/contro-[id]/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/providers/prov-[type]/observed-[dataSrcSysId]-[id]
Affected MO: observe/observed-[dataSrcSysId]-[id]
```

fsmRmtErrObserveObservedResolveControllerFsm:Execute

Fault Code: F78934

Message: [FSM:STAGE:REMOTE-ERROR]: Resolve Mgmt Controller FSM Execute(FSM-STAGE:sam:dme:ObserveObservedResolveControllerFsm:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F78934
mibFaultName: fsmRmtErrObserveObservedResolveControllerFsmExecute
moClass: observe:Observed
Type: fsm
autoCleared: true
Affected MO: extpol/reg/clients/client-[id]/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/controllers/contro-[id]/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/providers/prov-[type]/observed-[dataSrcSysId]-[id]
Affected MO: observe/observed-[dataSrcSysId]-[id]
```

fsmRmtErrMgmtControllerRegistryConfig:Remove

Fault Code: F78939

Message: [FSM:STAGE:REMOTE-ERROR]: Deleting registry information from local config file(FSM-STAGE:sam:dme:MgmtControllerRegistryConfig:Remove)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: remove-failed
mibFaultCode: F78939
mibFaultName: fsmRmtErrMgmtControllerRegistryConfigRemove
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
```

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerRegistryConfig:RemovePeer

Fault Code: F78939

Message: [FSM:STAGE:REMOTE-ERROR]: Deleting registry information from peer config file(FSM-STAGE:sam:dme:MgmtControllerRegistryConfig:RemovePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: remove-peer-failed
mibFaultCode: F78939

mibFaultName: fsmRmtErrMgmtControllerRegistryConfigRemovePeer
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt

```
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt
```

fsmRmtErrGmetaHolderInventory:BeginInventory

Fault Code: F79048

Message: [FSM:STAGE:REMOTE-ERROR]: Begin inventory stages(FSM-STAGE:sam:dme:GmetaHolderInventory:BeginInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: begin-inventory-failed
mibFaultCode: F79048
mibFaultName: fsmRmtErrGmetaHolderInventoryBeginInventory
moClass: gmeta:Holder
Type: fsm
autoCleared: true
Affected MO: gmeta/category-[category]-provider-[provider]
```

fsmRmtErrGmetaHolderInventory:CheckInventoryStatus

Fault Code: F79048

Message: [FSM:STAGE:REMOTE-ERROR]: Throttle inventory(FSM-STAGE:sam:dme:GmetaHolderInventory:CheckInventoryStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-inventory-status-failed
mibFaultCode: F79048
mibFaultName: fsmRmtErrGmetaHolderInventoryCheckInventoryStatus
moClass: gmeta:Holder
Type: fsm
autoCleared: true
Affected MO: gmeta/category-[category]-provider-[provider]
```

fsmRmtErrGmetaHolderInventory:EndInventory

Fault Code: F79048

Message: [FSM:STAGE:REMOTE-ERROR]: End inventory stages(FSM-STAGE:sam:dme:GmetaHolderInventory:EndInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: end-inventory-failed
mibFaultCode: F79048
mibFaultName: fsmRmtErrGmetaHolderInventoryEndInventory
moClass: gmeta:Holder
Type: fsm
autoCleared: true
Affected MO: gmeta/category-[category]-provider-[provider]
```

fsmRmtErrGmetaHolderInventory:FullInventory

Fault Code: F79048

Message: [FSM:STAGE:REMOTE-ERROR]: Full inventory stages(FSM-STAGE:sam:dme:GmetaHolderInventory:FullInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: full-inventory-failed
mibFaultCode: F79048
mibFaultName: fsmRmtErrGmetaHolderInventoryFullInventory
moClass: gmeta:Holder
Type: fsm
autoCleared: true
Affected MO: gmeta/category-[category]-provider-[provider]
```

fsmRmtErrGmetaHolderInventory:ReportFaultInventory

Fault Code: F79048

Message: [FSM:STAGE:REMOTE-ERROR]: Report fault inventory to UCS-Central(FSM-STAGE:sam:dme:GmetaHolderInventory:ReportFaultInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: report-fault-inventory-failed
mibFaultCode: F79048
mibFaultName: fsmRmtErrGmetaHolderInventoryReportFaultInventory
moClass: gmeta:Holder
Type: fsm
autoCleared: true
Affected MO: gmeta/category-[category]-provider-[provider]
```

fsmRmtErrGmetaHolderInventory:ReportOrgInventory

Fault Code: F79048

Message: [FSM:STAGE:REMOTE-ERROR]: Report org inventory to UCS-Central(FSM-STAGE:sam:dme:GmetaHolderInventory:ReportOrgInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: report-org-inventory-failed
mibFaultCode: F79048
mibFaultName: fsmRmtErrGmetaHolderInventoryReportOrgInventory
moClass: gmeta:Holder
Type: fsm
autoCleared: true
Affected MO: gmeta/category-[category]-provider-[provider]
```

fsmRmtErrGmetaHolderInventory:ReportPhysicalInventory

Fault Code: F79048

Message: [FSM:STAGE:REMOTE-ERROR]: Report physical inventory to UCS-Central(FSM-STAGE:sam:dme:GmetaHolderInventory:ReportPhysicalInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: report-physical-inventory-failed
mibFaultCode: F79048
mibFaultName: fsmRmtErrGmetaHolderInventoryReportPhysicalInventory
moClass: gmeta:Holder
Type: fsm
```

```
autoCleared: true
Affected MO: gmeta/category-[category]-provider-[provider]
```

fsmRmtErrGmetaHolderInventory:ReportStorageInventory

Fault Code: F79048

Message: [FSM:STAGE:REMOTE-ERROR]: Report storage inventory to UCS-Central(FSM-STAGE:sam:dme:GmetaHolderInventory:ReportStorageInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: report-storage-inventory-failed
mibFaultCode: F79048
mibFaultName: fsmRmtErrGmetaHolderInventoryReportStorageInventory
moClass: gmeta:Holder
Type: fsm
autoCleared: true
Affected MO: gmeta/category-[category]-provider-[provider]
```

fsmRmtErrComputePhysicalCimcSessionDelete:Execute

Fault Code: F79049

Message: [FSM:STAGE:REMOTE-ERROR]: Terminating Cimc Sessions(FSM-STAGE:sam:dme:ComputePhysicalCimcSessionDelete:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F79049
mibFaultName: fsmRmtErrComputePhysicalCimcSessionDeleteExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrPolicyControlledTypeOperate:ResolveAll

Fault Code: F79052

Message: [FSM:STAGE:REMOTE-ERROR]: Resolving controlled type global policies(FSM-STAGE:sam:dme:PolicyControlledTypeOperate:ResolveAll)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-all-failed
mibFaultCode: F79052
mibFaultName: fsmRmtErrPolicyControlledTypeOperateResolveAll
moClass: policy:ControlledType
Type: fsm
autoCleared: true
Affected MO: sys/control-ep-[type]/cfg-backup-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/comm-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/datetime-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/discovery-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/dns-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/equipment-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/fabric-fw-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/fault-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/mep-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/monitoring-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/portconfig-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/powermgmt-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/psu-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/security-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/storage-autoconfig-ctrl/ctrlled-type-[type]
```

fsmRmtErrFabricVnetEpSyncEpPushVnetEpDeletion:Sync

Fault Code: F79059

Message: [FSM:STAGE:REMOTE-ERROR]: Update resource-mgr with VnetEp deletion(FSM-STAGE:sam:dme:FabricVnetEpSyncEpPushVnetEpDeletion:Sync)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sync-failed
mibFaultCode: F79059
mibFaultName: fsmRmtErrFabricVnetEpSyncEpPushVnetEpDeletionSync
moClass: fabric:VnetEpSyncEp
Type: fsm
autoCleared: true
Affected MO: extpol/reg/providers/prov-[type]/syncEp
```

fsmRmtErrSwEthLanFlowMonDeploy:UpdateEthFlowMon

Fault Code: F79079

Message: [FSM:STAGE:REMOTE-ERROR]: Ethernet traffic flow monitoring configuration on [switchId](FSM-STAGE:sam:dme:SwEthLanFlowMonDeploy:UpdateEthFlowMon)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-eth-flow-mon-failed
mibFaultCode: F79079
mibFaultName: fsmRmtErrSwEthLanFlowMonDeployUpdateEthFlowMon
moClass: sw:EthLanFlowMon
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/ethlanflowmon
```

fsmRmtErrMgmtIPv6IfAddrSwMgmtOobIpv6IfConfig:Switch

Fault Code: F79105

Message: [FSM:STAGE:REMOTE-ERROR]: configuring the out-of-band IPv6 interface(FSM-STAGE:sam:dme:MgmtIPv6IfAddrSwMgmtOobIpv6IfConfig:Switch)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: switch-failed
mibFaultCode: F79105
mibFaultName: fsmRmtErrMgmtIPv6IfAddrSwMgmtOobIpv6IfConfigSwitch
moClass: mgmt:IPv6IfAddr
Type: fsm
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
```

sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/fex-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:

sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/switch-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/switch-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6

fsmRmtErrComputePhysicalUpdateBoardController:CheckPowerAvailability

Fault Code: F79107

Message: [FSM:STAGE:REMOTE-ERROR]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalUpdateBoardController:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F79107
mibFaultName: fsmRmtErrComputePhysicalUpdateBoardControllerCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]

fsmRmtErrComputePhysicalUpdateBoardController:PollBoardCtrlPowerCycle

Fault Code: F79107

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Board Controller power cycle to complete(FSM-STAGE:sam:dme:ComputePhysicalUpdateBoardController:PollBoardCtrlPowerCycle)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-board-ctrl-power-cycle-failed
mibFaultCode: F79107
mibFaultName: fsmRmtErrComputePhysicalUpdateBoardControllerPollBoardCtrlPowerCycle

```
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalUpdateBoardController:PollUpdateStatus

Fault Code: F79107

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Board Controller update to complete(FSM-STAGE:sam:dme:ComputePhysicalUpdateBoardController:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F79107
mibFaultName: fsmRmtErrComputePhysicalUpdateBoardControllerPollUpdateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalUpdateBoardController:PowerCycleBoard

Fault Code: F79107

Message: [FSM:STAGE:REMOTE-ERROR]: Power cycle the board controller(FSM-STAGE:sam:dme:ComputePhysicalUpdateBoardController:PowerCycleBoard)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-cycle-board-failed
mibFaultCode: F79107
mibFaultName: fsmRmtErrComputePhysicalUpdateBoardControllerPowerCycleBoard
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalUpdateBoardController:PowerDeployWait

Fault Code: F79107

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalUpdateBoardController:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F79107
mibFaultName: fsmRmtErrComputePhysicalUpdateBoardControllerPowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalUpdateBoardController:PrepareForUpdate

Fault Code: F79107

Message: [FSM:STAGE:REMOTE-ERROR]: Prepare for BoardController update(FSM-STAGE:sam:dme:ComputePhysicalUpdateBoardController:PrepareForUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: prepare-for-update-failed
mibFaultCode: F79107
mibFaultName: fsmRmtErrComputePhysicalUpdateBoardControllerPrepareForUpdate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalUpdateBoardController:ServerPowerOff

Fault Code: F79107

Message: [FSM:STAGE:REMOTE-ERROR]: Power off server [serverId](FSM-STAGE:sam:dme:ComputePhysicalUpdateBoardController:ServerPowerOff)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: server-power-off-failed
mibFaultCode: F79107
mibFaultName: fsmRmtErrComputePhysicalUpdateBoardControllerServerPowerOff
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalUpdateBoardController:ServerPowerOn

Fault Code: F79107

Message: [FSM:STAGE:REMOTE-ERROR]: Power on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalUpdateBoardController:ServerPowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: server-power-on-failed
mibFaultCode: F79107
mibFaultName: fsmRmtErrComputePhysicalUpdateBoardControllerServerPowerOn
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalUpdateBoardController:UpdateRequest

Fault Code: F79107

Message: [FSM:STAGE:REMOTE-ERROR]: Sending Board Controller update request to CIMC(FSM-STAGE:sam:dme:ComputePhysicalUpdateBoardController:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-request-failed
mibFaultCode: F79107
mibFaultName: fsmRmtErrComputePhysicalUpdateBoardControllerUpdateRequest
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrExtvmmNetworkSetsDeploy:Local

Fault Code: F79143

Message: [FSM:STAGE:REMOTE-ERROR]: VMNetworkDefinition configuration on local fabric(FSM-STAGE:sam:dme:ExtvmmNetworkSetsDeploy:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F79143
mibFaultName: fsmRmtErrExtvmmNetworkSetsDeployLocal
moClass: extvmm:NetworkSets
Type: fsm
autoCleared: true
Affected MO: fabric/lan/network-sets
```

fsmRmtErrExtvmmNetworkSetsDeploy:Peer

Fault Code: F79143

Message: [FSM:STAGE:REMOTE-ERROR]: VMNetworkDefinition configuration on peer fabric(FSM-STAGE:sam:dme:ExtvmmNetworkSetsDeploy:Peer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: peer-failed
mibFaultCode: F79143
```

```
mibFaultName: fsmRmtErrExtvmmNetworkSetsDeployPeer
moClass: extvmm:NetworkSets
Type: fsm
autoCleared: true
Affected MO: fabric/lan/network-sets
```

fsmRmtErrComputePhysicalConfigBoard:ConfigMemoryPolicy

Fault Code: F79147

Message: [FSM:STAGE:REMOTE-ERROR]: Configure Memory Configuration Policy on server [dn](FSM-STAGE:sam:dme:ComputePhysicalConfigBoard:ConfigMemoryPolicy)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-memory-policy-failed
mibFaultCode: F79147
mibFaultName: fsmRmtErrComputePhysicalConfigBoardConfigMemoryPolicy
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalResetMemoryErrors:Execute

Fault Code: F79148

Message: [FSM:STAGE:REMOTE-ERROR]: Resetting memory errors on server [dn](FSM-STAGE:sam:dme:ComputePhysicalResetMemoryErrors:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F79148
mibFaultName: fsmRmtErrComputePhysicalResetMemoryErrorsExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrMgmtControllerExtMgmtInterfaceConfig:Active

Fault Code: F79154

Message: [FSM:STAGE:REMOTE-ERROR]: external in-band mgmt interface configuration on Active CIMC(FSM-STAGE:sam:dme:MgmtControllerExtMgmtInterfaceConfig:Active)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: active-failed
mibFaultCode: F79154
mibFaultName: fsmRmtErrMgmtControllerExtMgmtInterfaceConfigActive
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerExtMgmtInterfaceConfig:CIMCVlanCfgLocal

Fault Code: F79154

Message: [FSM:STAGE:REMOTE-ERROR]: in-band vlan configuration on Local CIMC(FSM-STAGE:sam:dme:MgmtControllerExtMgmtInterfaceConfig:CIMCVlanCfgLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: cimcvlan-cfg-local-failed
mibFaultCode: F79154
mibFaultName: fsmRmtErrMgmtControllerExtMgmtInterfaceConfigCIMCVlanCfgLocal
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt

Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerExtMgmtInterfaceConfig:CIMCVlanCfgPeer

Fault Code: F79154

Message: [FSM:STAGE:REMOTE-ERROR]: in-band vlan configuration on Peer CIMC(FSM-STAGE:sam:dme:MgmtControllerExtMgmtInterfaceConfig:CIMCVlanCfgPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: cimcvlan-cfg-peer-failed
mibFaultCode: F79154
mibFaultName: fsmRmtErrMgmtControllerExtMgmtInterfaceConfigCIMCVlanCfgPeer
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt

Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerExtMgmtInterfaceConfig:CMCVlanCfg

Fault Code: F79154

Message: [FSM:STAGE:REMOTE-ERROR]: in-band vlan configuration on CMC(FSM-STAGE:sam:dme:MgmtControllerExtMgmtInterfaceConfig:CMCVlanCfg)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: cmcvlan-cfg-failed
mibFaultCode: F79154
mibFaultName: fsmRmtErrMgmtControllerExtMgmtInterfaceConfigCMCVlanCfg
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerExtMgmtInterfaceConfig:CMCVlanCfgPeer

Fault Code: F79154

Message: [FSM:STAGE:REMOTE-ERROR]: in-band vlan configuration on CMC(FSM-STAGE:sam:dme:MgmtControllerExtMgmtInterfaceConfig:CMCVlanCfgPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: cmcvlan-cfg-peer-failed
mibFaultCode: F79154
mibFaultName: fsmRmtErrMgmtControllerExtMgmtInterfaceConfigCMCVlanCfgPeer

moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt

Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerExtMgmtInterfaceConfig:StandbyCMCVlanCfg

Fault Code: F79154

Message: [FSM:STAGE:REMOTE-ERROR]: in-band vlan configuration on CMC(FSM-STAGE:sam:dme:MgmtControllerExtMgmtInterfaceConfig:StandbyCMCVlanCfg)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: standbycmcvlan-cfg-failed
mibFaultCode: F79154
mibFaultName: fsmRmtErrMgmtControllerExtMgmtInterfaceConfigStandbyCMCVlanCfg
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrComputeRackUnitCreateDhcpEntry:ExecuteLocal

Fault Code: F79155

Message: [FSM:STAGE:REMOTE-ERROR]: Creating host entry in dhcp database(FSM-STAGE:sam:dme:ComputeRackUnitCreateDhcpEntry:ExecuteLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: execute-local-failed
mibFaultCode: F79155
mibFaultName: fsmRmtErrComputeRackUnitCreateDhcpEntryExecuteLocal
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]

fsmRmtErrComputeRackUnitCreateDhcpEntry:ExecutePeer

Fault Code: F79155

Message: [FSM:STAGE:REMOTE-ERROR]: Creating host entry in dhcp database(FSM-STAGE:sam:dme:ComputeRackUnitCreateDhcpEntry:ExecutePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-peer-failed
mibFaultCode: F79155
mibFaultName: fsmRmtErrComputeRackUnitCreateDhcpEntryExecutePeer
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalServiceInfraDeploy:NicConfigLocal

Fault Code: F79156

Message: [FSM:STAGE:REMOTE-ERROR]: Configure adapter in server for service infrastructure ([assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalServiceInfraDeploy:NicConfigLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-local-failed
mibFaultCode: F79156
mibFaultName: fsmRmtErrComputePhysicalServiceInfraDeployNicConfigLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalServiceInfraDeploy:NicConfigPeer

Fault Code: F79156

Message: [FSM:STAGE:REMOTE-ERROR]: Configure adapter in server for service infrastructure ([assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalServiceInfraDeploy:NicConfigPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-config-peer-failed
mibFaultCode: F79156
mibFaultName: fsmRmtErrComputePhysicalServiceInfraDeployNicConfigPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalServiceInfraDeploy:SwConfigLocal

Fault Code: F79156

Message: [FSM:STAGE:REMOTE-ERROR]: Configure service infrastructure on primary fabric Interconnect(FSM-STAGE:sam:dme:ComputePhysicalServiceInfraDeploy:SwConfigLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-config-local-failed
mibFaultCode: F79156
mibFaultName: fsmRmtErrComputePhysicalServiceInfraDeploySwConfigLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalServiceInfraDeploy:SwConfigPeer

Fault Code: F79156

Message: [FSM:STAGE:REMOTE-ERROR]: Configure service infrastructure on secondary fabric Interconnect(FSM-STAGE:sam:dme:ComputePhysicalServiceInfraDeploy:SwConfigPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: sw-config-peer-failed
mibFaultCode: F79156
mibFaultName: fsmRmtErrComputePhysicalServiceInfraDeploySwConfigPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalServiceInfraWithdraw:NicUnConfigLocal

Fault Code: F79157

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure adapter in server for service infrastructure ([assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalServiceInfraWithdraw:NicUnConfigLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-un-config-local-failed
mibFaultCode: F79157
mibFaultName: fsmRmtErrComputePhysicalServiceInfraWithdrawNicUnConfigLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalServiceInfraWithdraw:NicUnConfigPeer

Fault Code: F79157

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure adapter in server for service infrastructure ([assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalServiceInfraWithdraw:NicUnConfigPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: nic-un-config-peer-failed
mibFaultCode: F79157
mibFaultName: fsmRmtErrComputePhysicalServiceInfraWithdrawNicUnConfigPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalServiceInfraWithdraw:SwUnConfigLocal

Fault Code: F79157

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure service infrastructure on primary fabric Interconnect(FSM-STAGE:sam:dme:ComputePhysicalServiceInfraWithdraw:SwUnConfigLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-un-config-local-failed
mibFaultCode: F79157
mibFaultName: fsmRmtErrComputePhysicalServiceInfraWithdrawSwUnConfigLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalServiceInfraWithdraw:SwUnConfigPeer

Fault Code: F79157

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure service infrastructure on secondary fabric Interconnect(FSM-STAGE:sam:dme:ComputePhysicalServiceInfraWithdraw:SwUnConfigPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sw-un-config-peer-failed
mibFaultCode: F79157
mibFaultName: fsmRmtErrComputePhysicalServiceInfraWithdrawSwUnConfigPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrSysdebugLogExportPolicyConfigure:Local

Fault Code: F79195

Message: [FSM:STAGE:REMOTE-ERROR]: configuring log file export service on local(FSM-STAGE:sam:dme:SysdebugLogExportPolicyConfigure:Local)

Explanation: Cisco UCS Manager could not set the configurations in the primary Fabric Interconnect for log file transfer to remote server.

Recommended Action:

If you see this fault, take the following actions:

1. Execute the show tech-support command and contact Cisco Technical Support.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F79195
mibFaultName: fsmRmtErrSysdebugLogExportPolicyConfigureLocal
moClass: sysdebug:LogExportPolicy
Type: fsm
autoCleared: true
Affected MO: sys/sysdebug/log-export-policy
```

fsmRmtErrSysdebugLogExportPolicyConfigure:Peer

Fault Code: F79195

Message: [FSM:STAGE:REMOTE-ERROR]: configuring log file export service on peer(FSM-STAGE:sam:dme:SysdebugLogExportPolicyConfigure:Peer)

Explanation:

Cisco UCS Manager could not set the configurations in the subordinate Fabric Interconnect (FI) for log file transfer to remote server. This fault typically appears for one of the following reasons:

- The subordinate FI is not reachable.
- The subordinate FI is experiencing an internal system error on applying the configuration.

Recommended Action: If you see this fault, take the following actions:

1. Check the FI cluster state to ensure that the subordinate FI is reachable and functioning correctly. If the subordinate FI is down, take appropriate corrective actions so that the UCS cluster goes into HA ready state.
2. If the HA state of the primary and subordinate FIs are good, execute the show tech-support command and contact Cisco Technical Support.

Fault Details

```
Severity: warning
Cause: peer-failed
mibFaultCode: F79195
mibFaultName: fsmRmtErrSysdebugLogExportPolicyConfigurePeer
moClass: sysdebug:LogExportPolicy
Type: fsm
```

```
autoCleared: true
Affected MO: sys/sysdebug/log-export-policy
```

fsmRmtErrComputePhysicalFlashController:UpdateFlashLife

Fault Code: F79197

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Flash Life update to complete(FSM-STAGE:sam:dme:ComputePhysicalFlashController:UpdateFlashLife)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-flash-life-failed
mibFaultCode: F79197
mibFaultName: fsmRmtErrComputePhysicalFlashControllerUpdateFlashLife
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrStorageFlexFlashControllerMOpsReset:Reset

Fault Code: F79258

Message: [FSM:STAGE:REMOTE-ERROR]: Resetting FlexFlashController [dn](FSM-STAGE:sam:dme:StorageFlexFlashControllerMOpsReset:Reset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: reset-failed
mibFaultCode: F79258
mibFaultName: fsmRmtErrStorageFlexFlashControllerMOpsResetReset
moClass: storage:FlexFlashController
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-flexflash-[id]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]
```

fsmRmtErrStorageFlexFlashControllerMOpsFormat:Format

Fault Code: F79259

Message: [FSM:STAGE:REMOTE-ERROR]: Formatting FlexFlash Cards in Controller [dn](FSM-STAGE:sam:dme:StorageFlexFlashControllerMOpsFormat:Format)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: format-failed
mibFaultCode: F79259
mibFaultName: fsmRmtErrStorageFlexFlashControllerMOpsFormatFormat
moClass: storage:FlexFlashController
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-flexflash-[id]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]
```

fsmRmtErrStorageFlexFlashControllerMOpsPair:Pair

Fault Code: F79260

Message: [FSM:STAGE:REMOTE-ERROR]: Configure FlexFlash Card mirroring in Controller [dn](FSM-STAGE:sam:dme:StorageFlexFlashControllerMOpsPair:Pair)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pair-failed
mibFaultCode: F79260
mibFaultName: fsmRmtErrStorageFlexFlashControllerMOpsPairPair
moClass: storage:FlexFlashController
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-flexflash-[id]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]
```

fsmRmtErrComputePhysicalEnableCimcSecureBoot:Activate

Fault Code: F79266

Message: [FSM:STAGE:REMOTE-ERROR]: Activating CIMC image(FSM-STAGE:sam:dme:ComputePhysicalEnableCimcSecureBoot:Activate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-failed
mibFaultCode: F79266
mibFaultName: fsmRmtErrComputePhysicalEnableCimcSecureBootActivate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalEnableCimcSecureBoot:PollUpdateStatus

Fault Code: F79266

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for update to complete(FSM-STAGE:sam:dme:ComputePhysicalEnableCimcSecureBoot:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F79266
mibFaultName: fsmRmtErrComputePhysicalEnableCimcSecureBootPollUpdateStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalEnableCimcSecureBoot:Reset

Fault Code: F79266

Message: [FSM:STAGE:REMOTE-ERROR]: Resetting CIMC to boot the activated version(FSM-STAGE:sam:dme:ComputePhysicalEnableCimcSecureBoot:Reset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: reset-failed
mibFaultCode: F79266
mibFaultName: fsmRmtErrComputePhysicalEnableCimcSecureBootReset
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalEnableCimcSecureBoot:UpdateRequest

Fault Code: F79266

Message: [FSM:STAGE:REMOTE-ERROR]: Sending update request to CIMC(FSM-STAGE:sam:dme:ComputePhysicalEnableCimcSecureBoot:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-request-failed
mibFaultCode: F79266
mibFaultName: fsmRmtErrComputePhysicalEnableCimcSecureBootUpdateRequest
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrIdentMetaSystemUcscUnivSync:Execute

Fault Code: F79290

Message: [FSM:STAGE:REMOTE-ERROR]: Synchronise ID universe to external identifier manager(FSM-STAGE:sam:dme:IdentMetaSystemUcscUnivSync:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: F79290
mibFaultName: fsmRmtErrIdentMetaSystemUcscUnivSyncExecute
moClass: ident:MetaSystem
Type: fsm
autoCleared: true
Affected MO: metaverse/metasys

fsmRmtErrMgmtControllerLockConfig:PowerButtonLockConfig

Fault Code: F79373

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring Power Button Lock State(FSM-STAGE:sam:dme:MgmtControllerLockConfig:PowerButtonLockConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: power-button-lock-config-failed
mibFaultCode: F79373
mibFaultName: fsmRmtErrMgmtControllerLockConfigPowerButtonLockConfig
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerPowerBudgetReclaimConfig:PowerOffReclaim

Fault Code: F79374

Message: [FSM:STAGE:REMOTE-ERROR]: Checking power-off and reclaiming power budget(FSM-STAGE:sam:dme:MgmtControllerPowerBudgetReclaimConfig:PowerOffReclaim)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: power-off-reclaim-failed
mibFaultCode: F79374
mibFaultName: fsmRmtErrMgmtControllerPowerBudgetReclaimConfigPowerOffReclaim
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerPowerBudgetReclaimConfig:PowerOffWait

Fault Code: F79374

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting to confirm power-off(FSM-STAGE:sam:dme:MgmtControllerPowerBudgetReclaimConfig:PowerOffWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-off-wait-failed
mibFaultCode: F79374
mibFaultName: fsmRmtErrMgmtControllerPowerBudgetReclaimConfigPowerOffWait
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrComputePhysicalOobStorageAdminConfig:BootHost

Fault Code: F79375

Message: [FSM:STAGE:REMOTE-ERROR]: Bring-up pre-boot environment for local storage admin config(FSM-STAGE:sam:dme:ComputePhysicalOobStorageAdminConfig:BootHost)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: boot-host-failed
mibFaultCode: F79375
mibFaultName: fsmRmtErrComputePhysicalOobStorageAdminConfigBootHost
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]

fsmRmtErrComputePhysicalOobStorageAdminConfig:BootWait

Fault Code: F79375

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for system reset(FSM-STAGE:sam:dme:ComputePhysicalOobStorageAdminConfig:BootWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-wait-failed
mibFaultCode: F79375
mibFaultName: fsmRmtErrComputePhysicalOobStorageAdminConfigBootWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalOobStorageAdminConfig:CheckPowerAvailability

Fault Code: F79375

Message: [FSM:STAGE:REMOTE-ERROR]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalOobStorageAdminConfig:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F79375
mibFaultName: fsmRmtErrComputePhysicalOobStorageAdminConfigCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalOobStorageAdminConfig:OobStorageConfig

Fault Code: F79375

Message: [FSM:STAGE:REMOTE-ERROR]: Local storage admin configuration(FSM-STAGE:sam:dme:ComputePhysicalOobStorageAdminConfig:OobStorageConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-storage-config-failed
mibFaultCode: F79375
mibFaultName: fsmRmtErrComputePhysicalOobStorageAdminConfigOobStorageConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalOobStorageAdminConfig:OobStorageInventory

Fault Code: F79375

Message: [FSM:STAGE:REMOTE-ERROR]: Perform oob storage inventory with server profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalOobStorageAdminConfig:OobStorageInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-storage-inventory-failed
mibFaultCode: F79375
mibFaultName: fsmRmtErrComputePhysicalOobStorageAdminConfigOobStorageInventory
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalOobStorageAdminConfig:PowerDeployWait

Fault Code: F79375

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalOobStorageAdminConfig:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F79375
```

```
mibFaultName: fsmRmtErrComputePhysicalOobStorageAdminConfigPowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalOobStorageAdminConfig:PreSanitize

Fault Code: F79375

Message: [FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration(FSM-STAGE:sam:dme:ComputePhysicalOobStorageAdminConfig:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F79375
mibFaultName: fsmRmtErrComputePhysicalOobStorageAdminConfigPreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalOobStorageAdminConfig:Sanitize

Fault Code: F79375

Message: [FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration(FSM-STAGE:sam:dme:ComputePhysicalOobStorageAdminConfig:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F79375
mibFaultName: fsmRmtErrComputePhysicalOobStorageAdminConfigSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

```
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalOobStorageAdminConfig:Shutdown

Fault Code: F79375

Message: [FSM:STAGE:REMOTE-ERROR]: Shutting down server [dn] after local storage admin configuration(FSM-STAGE:sam:dme:ComputePhysicalOobStorageAdminConfig:Shutdown)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: shutdown-failed
mibFaultCode: F79375
mibFaultName: fsmRmtErrComputePhysicalOobStorageAdminConfigShutdown
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalOobStorageAdminConfig:TearDownVMediaLocal

Fault Code: F79375

Message: [FSM:STAGE:REMOTE-ERROR]: Tear down VMedia Local(FSM-STAGE:sam:dme:ComputePhysicalOobStorageAdminConfig:TearDownVMediaLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: tear-downvmedia-local-failed
mibFaultCode: F79375
mibFaultName: fsmRmtErrComputePhysicalOobStorageAdminConfigTearDownVMediaLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalOobStorageAdminConfig:TearDownVMediaPeer

Fault Code: F79375

Message: [FSM:STAGE:REMOTE-ERROR]: Tear down VMedia Peer(FSM-STAGE:sam:dme:ComputePhysicalOobStorageAdminConfig:TearDownVMediaPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: tear-downvmedia-peer-failed
mibFaultCode: F79375
mibFaultName: fsmRmtErrComputePhysicalOobStorageAdminConfigTearDownVMediaPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrEquipmentIOCardBaseFePresence:CheckLicense

Fault Code: F79380

Message: [FSM:STAGE:REMOTE-ERROR]: Checking license for chassis [chassisId] (iom [id])(FSM-STAGE:sam:dme:EquipmentIOCardBaseFePresence:CheckLicense)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-license-failed
mibFaultCode: F79380
mibFaultName: fsmRmtErrEquipmentIOCardBaseFePresenceCheckLicense
moClass: equipment:IOCardBase
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmRmtErrEquipmentIOCardBaseFePresence:ConfigChassisId

Fault Code: F79380

Message: [FSM:STAGE:REMOTE-ERROR]: identifying SwitchIOCard [chassisId]/[id](FSM-STAGE:sam:dme:EquipmentIOCardBaseFePresence:ConfigChassisId)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-chassis-id-failed
mibFaultCode: F79380
mibFaultName: fsmRmtErrEquipmentIOCardBaseFePresenceConfigChassisId
moClass: equipment:IOCardBase
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmRmtErrEquipmentIOCardBaseFePresence:Identify

Fault Code: F79380

Message: [FSM:STAGE:REMOTE-ERROR]: identifying IOM [chassisId]/[id](FSM-STAGE:sam:dme:EquipmentIOCardBaseFePresence:Identify)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: identify-failed
mibFaultCode: F79380
mibFaultName: fsmRmtErrEquipmentIOCardBaseFePresenceIdentify
moClass: equipment:IOCardBase
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmRmtErrEquipmentIOCardBaseFeConn:ConfigureEndPoint

Fault Code: F79381

Message: [FSM:STAGE:REMOTE-ERROR]: configuring management identity to IOM [chassisId]/[id]([side])(FSM-STAGE:sam:dme:EquipmentIOCardBaseFeConn:ConfigureEndPoint)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: configure-end-point-failed
mibFaultCode: F79381
mibFaultName: fsmRmtErrEquipmentIOCardBaseFeConnConfigureEndPoint
moClass: equipment:IOCardBase
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmRmtErrEquipmentIOCardBaseFeConn:ConfigureSwMgmtEndPoint

Fault Code: F79381

Message: [FSM:STAGE:REMOTE-ERROR]: configuring fabric interconnect [switchId] mgmt connectivity to IOM [chassisId]/[id]([side])(FSM-STAGE:sam:dme:EquipmentIOCardBaseFeConn:ConfigureSwMgmtEndPoint)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: configure-sw-mgmt-end-point-failed
mibFaultCode: F79381
mibFaultName: fsmRmtErrEquipmentIOCardBaseFeConnConfigureSwMgmtEndPoint
moClass: equipment:IOCardBase
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmRmtErrEquipmentIOCardBaseFeConn:ConfigureVifNs

Fault Code: F79381

Message: [FSM:STAGE:REMOTE-ERROR]: configuring IOM [chassisId]/[id]([side]) virtual name space(FSM-STAGE:sam:dme:EquipmentIOCardBaseFeConn:ConfigureVifNs)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: configure-vif-ns-failed
mibFaultCode: F79381
mibFaultName: fsmRmtErrEquipmentIOCardBaseFeConnConfigureVifNs
moClass: equipment:IOCardBase
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmRmtErrEquipmentIOCardBaseFeConn:DiscoverChassis

Fault Code: F79381

Message: [FSM:STAGE:REMOTE-ERROR]: triggering chassis discovery via IOM [chassisId]/[id]([side])(FSM-STAGE:sam:dme:EquipmentIOCardBaseFeConn:DiscoverChassis)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: discover-chassis-failed
mibFaultCode: F79381
mibFaultName: fsmRmtErrEquipmentIOCardBaseFeConnDiscoverChassis
moClass: equipment:IOCardBase
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmRmtErrEquipmentIOCardBaseFeConn:EnableChassis

Fault Code: F79381

Message: [FSM:STAGE:REMOTE-ERROR]: enabling chassis [chassisId] on [side] side(FSM-STAGE:sam:dme:EquipmentIOCardBaseFeConn:EnableChassis)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: enable-chassis-failed
mibFaultCode: F79381
mibFaultName: fsmRmtErrEquipmentIOCardBaseFeConnEnableChassis
moClass: equipment:IOCardBase
```

```
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmRmtErrEquipmentPsuUpdatePSU:ActivatePsu

Fault Code: F79427

Message: [FSM:STAGE:REMOTE-ERROR]: activating PSU image(FSM-STAGE:sam:dme:EquipmentPsuUpdatePSU:ActivatePsu)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-psu-failed
mibFaultCode: F79427
mibFaultName: fsmRmtErrEquipmentPsuUpdatePSUActivatePsu
moClass: equipment:Psu
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-enclosure-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fsmRmtErrEquipmentPsuUpdatePSU:PollActivateStatus

Fault Code: F79427

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for PSU activate to complete(FSM-STAGE:sam:dme:EquipmentPsuUpdatePSU:PollActivateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-activate-status-failed
mibFaultCode: F79427
mibFaultName: fsmRmtErrEquipmentPsuUpdatePSUPollActivateStatus
moClass: equipment:Psu
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
```

```
Affected MO: sys/rack-enclosure-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fsmRmtErrEquipmentPsuUpdatePSU:PollUpdateStatus

Fault Code: F79427

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for PSU update to complete(FSM-STAGE:sam:dme:EquipmentPsuUpdatePSU:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F79427
mibFaultName: fsmRmtErrEquipmentPsuUpdatePSUPollUpdateStatus
moClass: equipment:Psu
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-enclosure-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fsmRmtErrEquipmentPsuUpdatePSU:UpdateRequest

Fault Code: F79427

Message: [FSM:STAGE:REMOTE-ERROR]: sending PSU update request to CIMC(FSM-STAGE:sam:dme:EquipmentPsuUpdatePSU:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-request-failed
mibFaultCode: F79427
mibFaultName: fsmRmtErrEquipmentPsuUpdatePSUUpdateRequest
moClass: equipment:Psu
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-enclosure-[id]/psu-[id]
```

Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]

fsmRmtErrMgmtControllerUpdateCMC:PollUpdateStatus

Fault Code: F79452

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for M-series CMC update(FSM-STAGE:sam:dme:MgmtControllerUpdateCMC:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F79452
mibFaultName: fsmRmtErrMgmtControllerUpdateCMCPollUpdateStatus
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt

Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateCMC:UpdateRequest

Fault Code: F79452

Message: [FSM:STAGE:REMOTE-ERROR]: sending update request to M-series CMC(FSM-STAGE:sam:dme:MgmtControllerUpdateCMC:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: F79452
mibFaultName: fsmRmtErrMgmtControllerUpdateCMCUpdateRequest
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerActivateCMC:Activate

Fault Code: F79453

Message: [FSM:STAGE:REMOTE-ERROR]: activating backup image of M-series CMC(FSM-STAGE:sam:dme:MgmtControllerActivateCMC:Activate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: activate-failed
mibFaultCode: F79453
mibFaultName: fsmRmtErrMgmtControllerActivateCMCActivate
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerActivateCMC:PollActivation

Fault Code: F79453

Message: [FSM:STAGE:REMOTE-ERROR]: poll activation status(FSM-STAGE:sam:dme:MgmtControllerActivateCMC:PollActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-activation-failed
mibFaultCode: F79453
mibFaultName: fsmRmtErrMgmtControllerActivateCMCPollActivation
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerActivateCMC:Reset

Fault Code: F79453

Message: [FSM:STAGE:REMOTE-ERROR]: Resetting M-series CMC to boot the activated version(FSM-STAGE:sam:dme:MgmtControllerActivateCMC:Reset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: reset-failed
mibFaultCode: F79453
mibFaultName: fsmRmtErrMgmtControllerActivateCMCReset
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt

Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateAdaptor:PollUpdateStatus

Fault Code: F79454

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for update to complete(FSM-STAGE:sam:dme:MgmtControllerUpdateAdaptor:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F79454
mibFaultName: fsmRmtErrMgmtControllerUpdateAdaptorPollUpdateStatus
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateAdaptor:UpdateRequest

Fault Code: F79454

Message: [FSM:STAGE:REMOTE-ERROR]: sending update request to Adaptor(FSM-STAGE:sam:dme:MgmtControllerUpdateAdaptor:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: F79454
mibFaultName: fsmRmtErrMgmtControllerUpdateAdaptorUpdateRequest
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateAdaptor:UpdateRequestPeer

Fault Code: F79454

Message: [FSM:STAGE:REMOTE-ERROR]: sending update request to Peer Adaptor(FSM-STAGE:sam:dme:MgmtControllerUpdateAdaptor:UpdateRequestPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-request-peer-failed
mibFaultCode: F79454
mibFaultName: fsmRmtErrMgmtControllerUpdateAdaptorUpdateRequestPeer
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerActivateAdaptor:Activate

Fault Code: F79455

Message: [FSM:STAGE:REMOTE-ERROR]: activating image of Adaptor(FSM-STAGE:sam:dme:MgmtControllerActivateAdaptor:Activate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: activate-failed
mibFaultCode: F79455
mibFaultName: fsmRmtErrMgmtControllerActivateAdaptorActivate
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt

Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerActivateAdaptor:ActivatePeer

Fault Code: F79455

Message: [FSM:STAGE:REMOTE-ERROR]: activating image of Peer Adaptor(FSM-STAGE:sam:dme:MgmtControllerActivateAdaptor:ActivatePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: activate-peer-failed
mibFaultCode: F79455
mibFaultName: fsmRmtErrMgmtControllerActivateAdaptorActivatePeer
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt

Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerActivateAdaptor:PollActivateStatus

Fault Code: F79455

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for adaptor reboot to complete(FSM-STAGE:sam:dme:MgmtControllerActivateAdaptor:PollActivateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-activate-status-failed
mibFaultCode: F79455
mibFaultName: fsmRmtErrMgmtControllerActivateAdaptorPollActivateStatus
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerActivateAdaptor:PowerOffServers

Fault Code: F79455

Message: [FSM:STAGE:REMOTE-ERROR]: soft shutdown of the servers(FSM-STAGE:sam:dme:MgmtControllerActivateAdaptor:PowerOffServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: power-off-servers-failed
mibFaultCode: F79455
mibFaultName: fsmRmtErrMgmtControllerActivateAdaptorPowerOffServers

moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt

Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerActivateAdaptor:PowerOnServers

Fault Code: F79455

Message: [FSM:STAGE:REMOTE-ERROR]: Power on servers(FSM-STAGE:sam:dme:MgmtControllerActivateAdaptor:PowerOnServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: power-on-servers-failed
mibFaultCode: F79455
mibFaultName: fsmRmtErrMgmtControllerActivateAdaptorPowerOnServers
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerActivateAdaptor:Reset

Fault Code: F79455

Message: [FSM:STAGE:REMOTE-ERROR]: reseting the adaptor(FSM-STAGE:sam:dme:MgmtControllerActivateAdaptor:Reset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: reset-failed
mibFaultCode: F79455
mibFaultName: fsmRmtErrMgmtControllerActivateAdaptorReset
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerActivateAdaptor:ServersPowerOffCompletion

Fault Code: F79455

Message: [FSM:STAGE:REMOTE-ERROR]: checking for servers are powered down(FSM-STAGE:sam:dme:MgmtControllerActivateAdaptor:ServersPowerOffCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: servers-power-off-completion-failed
mibFaultCode: F79455
mibFaultName: fsmRmtErrMgmtControllerActivateAdaptorServersPowerOffCompletion
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateRaidController:Activate

Fault Code: F79456

Message: [FSM:STAGE:REMOTE-ERROR]: Activating M-series Storage Controller(FSM-STAGE:sam:dme:MgmtControllerUpdateRaidController:Activate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: activate-failed
mibFaultCode: F79456
mibFaultName: fsmRmtErrMgmtControllerUpdateRaidControllerActivate
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateRaidController:PollActivation

Fault Code: F79456

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for M-series Storage Controller activation to complete(FSM-STAGE:sam:dme:MgmtControllerUpdateRaidController:PollActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-activation-failed
mibFaultCode: F79456
mibFaultName: fsmRmtErrMgmtControllerUpdateRaidControllerPollActivation
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt

Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateRaidController:PollUpdateStatus

Fault Code: F79456

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for M-series Storage Controller update to complete(FSM-STAGE:sam:dme:MgmtControllerUpdateRaidController:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F79456
mibFaultName: fsmRmtErrMgmtControllerUpdateRaidControllerPollUpdateStatus
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateRaidController:PowerOffServers

Fault Code: F79456

Message: [FSM:STAGE:REMOTE-ERROR]: Power off servers(FSM-STAGE:sam:dme:MgmtControllerUpdateRaidController:PowerOffServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: power-off-servers-failed
mibFaultCode: F79456
mibFaultName: fsmRmtErrMgmtControllerUpdateRaidControllerPowerOffServers
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateRaidController:PowerOnServers

Fault Code: F79456

Message: [FSM:STAGE:REMOTE-ERROR]: Power on servers(FSM-STAGE:sam:dme:MgmtControllerUpdateRaidController:PowerOnServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-servers-failed
mibFaultCode: F79456
mibFaultName: fsmRmtErrMgmtControllerUpdateRaidControllerPowerOnServers
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateRaidController:ServersPowerOffCompletion

Fault Code: F79456

Message: [FSM:STAGE:REMOTE-ERROR]: checking for servers are powered down(FSM-STAGE:sam:dme:MgmtControllerUpdateRaidController:ServersPowerOffCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: servers-power-off-completion-failed
mibFaultCode: F79456
mibFaultName: fsmRmtErrMgmtControllerUpdateRaidControllerServersPowerOffCompletion
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt

Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateRaidController:UpdateRequest

Fault Code: F79456

Message: [FSM:STAGE:REMOTE-ERROR]: Sending M-series Storage Controller update request to CMC(FSM-STAGE:sam:dme:MgmtControllerUpdateRaidController:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: F79456
mibFaultName: fsmRmtErrMgmtControllerUpdateRaidControllerUpdateRequest
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt

Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateBoardController:PollUpdateStatus

Fault Code: F79457

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Board Controller update to complete(FSM-STAGE:sam:dme:MgmtControllerUpdateBoardController:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F79457
mibFaultName: fsmRmtErrMgmtControllerUpdateBoardControllerPollUpdateStatus
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateBoardController:PowerOffServers

Fault Code: F79457

Message: [FSM:STAGE:REMOTE-ERROR]: Power off servers(FSM-STAGE:sam:dme:MgmtControllerUpdateBoardController:PowerOffServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: power-off-servers-failed
mibFaultCode: F79457
mibFaultName: fsmRmtErrMgmtControllerUpdateBoardControllerPowerOffServers

moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt

Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateBoardController:PowerOnServers

Fault Code: F79457

Message: [FSM:STAGE:REMOTE-ERROR]: Power on servers(FSM-STAGE:sam:dme:MgmtControllerUpdateBoardController:PowerOnServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: power-on-servers-failed
mibFaultCode: F79457
mibFaultName: fsmRmtErrMgmtControllerUpdateBoardControllerPowerOnServers
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateBoardController:PrepareForUpdate

Fault Code: F79457

Message: [FSM:STAGE:REMOTE-ERROR]: Prepare for BoardController update(FSM-STAGE:sam:dme:MgmtControllerUpdateBoardController:PrepareForUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: prepare-for-update-failed
mibFaultCode: F79457
mibFaultName: fsmRmtErrMgmtControllerUpdateBoardControllerPrepareForUpdate
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateBoardController:ServersPowerOffCompletion

Fault Code: F79457

Message: [FSM:STAGE:REMOTE-ERROR]: checking for servers are powered down(FSM-STAGE:sam:dme:MgmtControllerUpdateBoardController:ServersPowerOffCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: servers-power-off-completion-failed
mibFaultCode: F79457
mibFaultName: fsmRmtErrMgmtControllerUpdateBoardControllerServersPowerOffCompletion
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateBoardController:UpdateRequest

Fault Code: F79457

Message: [FSM:STAGE:REMOTE-ERROR]: Sending Board Controller update request to CMC(FSM-STAGE:sam:dme:MgmtControllerUpdateBoardController:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: F79457
mibFaultName: fsmRmtErrMgmtControllerUpdateBoardControllerUpdateRequest
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrFabricCartridgeSlotEpIdentify:ExecuteLocal

Fault Code: F79464

Message: [FSM:STAGE:REMOTE-ERROR]: identifying a cartridge in [chassisId]/[slotId] via CMC(FSM-STAGE:sam:dme:FabricCartridgeSlotEpIdentify:ExecuteLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-local-failed
mibFaultCode: F79464
mibFaultName: fsmRmtErrFabricCartridgeSlotEpIdentifyExecuteLocal
moClass: fabric:CartridgeSlotEp
Type: fsm
autoCleared: true
Affected MO: fabric/server/chassis-[chassisId]/cart-slot-[slotId]
```

fsmRmtErrFabricCartridgeSlotEpIdentify:ExecutePeer

Fault Code: F79464

Message: [FSM:STAGE:REMOTE-ERROR]: identifying a cartridge in [chassisId]/[slotId] via CMC(FSM-STAGE:sam:dme:FabricCartridgeSlotEpIdentify:ExecutePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-peer-failed
mibFaultCode: F79464
mibFaultName: fsmRmtErrFabricCartridgeSlotEpIdentifyExecutePeer
moClass: fabric:CartridgeSlotEp
Type: fsm
autoCleared: true
Affected MO: fabric/server/chassis-[chassisId]/cart-slot-[slotId]
```

fsmRmtErrFabricComputeMSlotEpIdentify:ExecuteLocal

Fault Code: F79465

Message: [FSM:STAGE:REMOTE-ERROR]: identifying a server unit in [chassisId]/[slotId]/[serverInstanceId] via CIMC(FSM-STAGE:sam:dme:FabricComputeMSlotEpIdentify:ExecuteLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-local-failed
mibFaultCode: F79465
mibFaultName: fsmRmtErrFabricComputeMSlotEpIdentifyExecuteLocal
moClass: fabric:ComputeMSlotEp
Type: fsm
```

```
autoCleared: true
Affected MO: fabric/server/chassis-[chassisId]/cart-slot-[slotId]/ins-[serverInstanceId]
```

fsmRmtErrFabricComputeMSlotEpIdentify:ExecutePeer

Fault Code: F79465

Message: [FSM:STAGE:REMOTE-ERROR]: identifying a server in [chassisId]/[slotId]/[serverInstanceId] via CIMC(FSM-STAGE:sam:dme:FabricComputeMSlotEpIdentify:ExecutePeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-peer-failed
mibFaultCode: F79465
mibFaultName: fsmRmtErrFabricComputeMSlotEpIdentifyExecutePeer
moClass: fabric:ComputeMSlotEp
Type: fsm
autoCleared: true
Affected MO: fabric/server/chassis-[chassisId]/cart-slot-[slotId]/ins-[serverInstanceId]
```

fsmRmtErrEquipmentChassisOobStorageAdminCfg:OobStorageConfig

Fault Code: F79466

Message: [FSM:STAGE:REMOTE-ERROR]: Local storage admin configuration(FSM-STAGE:sam:dme:EquipmentChassisOobStorageAdminCfg:OobStorageConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-storage-config-failed
mibFaultCode: F79466
mibFaultName: fsmRmtErrEquipmentChassisOobStorageAdminCfgOobStorageConfig
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisOobStorageAdminCfg:OobStorageInventory

Fault Code: F79466

Message: [FSM:STAGE:REMOTE-ERROR]: Perform oob storage inventory after admin configuration(FSM-STAGE:sam:dme:EquipmentChassisOobStorageAdminCfg:OobStorageInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: oob-storage-inventory-failed
mibFaultCode: F79466
mibFaultName: fsmRmtErrEquipmentChassisOobStorageAdminCfgOobStorageInventory
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrComputeServerUnitDiscover:BiosPostCompletion

Fault Code: F79472

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for BIOS POST completion from CIMC on server [chassisId]/[slotId]/[serverInstanceId](FSM-STAGE:sam:dme:ComputeServerUnitDiscover:BiosPostCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: F79472
mibFaultName: fsmRmtErrComputeServerUnitDiscoverBiosPostCompletion
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmRmtErrComputeServerUnitDiscover:BladeBootWait

Fault Code: F79472

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for system reset on server [chassisId]/[slotId]/[serverInstanceId](FSM-STAGE:sam:dme:ComputeServerUnitDiscover:BladeBootWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: blade-boot-wait-failed
mibFaultCode: F79472
mibFaultName: fsmRmtErrComputeServerUnitDiscoverBladeBootWait
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmRmtErrComputeServerUnitDiscover:BmcConfigPnuOS

Fault Code: F79472

Message: [FSM:STAGE:REMOTE-ERROR]: provisioning a bootable device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputeServerUnitDiscover:BmcConfigPnuOS)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-config-pnuos-failed
mibFaultCode: F79472
mibFaultName: fsmRmtErrComputeServerUnitDiscoverBmcConfigPnuOS
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmRmtErrComputeServerUnitDiscover:BmcFactoryReset

Fault Code: F79472

Message: [FSM:STAGE:REMOTE-ERROR]: performing factory reset of server [chassisId]/[slotId]/[serverInstanceId](FSM-STAGE:sam:dme:ComputeServerUnitDiscover:BmcFactoryReset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-factory-reset-failed
mibFaultCode: F79472
mibFaultName: fsmRmtErrComputeServerUnitDiscoverBmcFactoryReset
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmRmtErrComputeServerUnitDiscover:BmcInventory

Fault Code: F79472

Message: [FSM:STAGE:REMOTE-ERROR]: getting inventory of server [chassisId]/[slotId]/[serverInstanceId] via CIMC(FSM-STAGE:sam:dme:ComputeServerUnitDiscover:BmcInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-inventory-failed
mibFaultCode: F79472
mibFaultName: fsmRmtErrComputeServerUnitDiscoverBmcInventory
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmRmtErrComputeServerUnitDiscover:BmcShutdownDiscovered

Fault Code: F79472

Message: [FSM:STAGE:REMOTE-ERROR]: Shutdown the server [chassisId]/[slotId]/[serverInstanceId]; deep discovery completed(FSM-STAGE:sam:dme:ComputeServerUnitDiscover:BmcShutdownDiscovered)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bmc-shutdown-discovered-failed
mibFaultCode: F79472
mibFaultName: fsmRmtErrComputeServerUnitDiscoverBmcShutdownDiscovered
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmRmtErrComputeServerUnitDiscover:BootPnuos

Fault Code: F79472

Message: [FSM:STAGE:REMOTE-ERROR]: power server [chassisId]/[slotId]/[serverInstanceId] on with pre-boot environment(FSM-STAGE:sam:dme:ComputeServerUnitDiscover:BootPnuos)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-pnuos-failed
mibFaultCode: F79472
mibFaultName: fsmRmtErrComputeServerUnitDiscoverBootPnuos
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmRmtErrComputeServerUnitDiscover:CimcPresence

Fault Code: F79472

Message: [FSM:STAGE:REMOTE-ERROR]: checking CIMC of server [chassisId]/[slotId]/[serverInstanceId](FSM-STAGE:sam:dme:ComputeServerUnitDiscover:CimcPresence)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cimc-presence-failed
mibFaultCode: F79472
mibFaultName: fsmRmtErrComputeServerUnitDiscoverCimcPresence
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmRmtErrComputeServerUnitDiscover:CleanupNicConfigLocal

Fault Code: F79472

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure local adapter in server [chassisId]/[slotId]/[serverInstanceId](FSM-STAGE:sam:dme:ComputeServerUnitDiscover:CleanupNicConfigLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cleanup-nic-config-local-failed
mibFaultCode: F79472
```

```
mibFaultName: fsmRmtErrComputeServerUnitDiscoverCleanupNicConfigLocal
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmRmtErrComputeServerUnitDiscover:CleanupNicConfigPeer

Fault Code: F79472

Message: [FSM:STAGE:REMOTE-ERROR]: Unconfigure peer adapter in server [chassisId]/[slotId]/[serverInstanceId](FSM-STAGE:sam:dme:ComputeServerUnitDiscover:CleanupNicConfigPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: cleanup-nic-config-peer-failed
mibFaultCode: F79472
mibFaultName: fsmRmtErrComputeServerUnitDiscoverCleanupNicConfigPeer
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmRmtErrComputeServerUnitDiscover:ConfigUserAccess

Fault Code: F79472

Message: [FSM:STAGE:REMOTE-ERROR]: configuring external user access to server [chassisId]/[slotId]/[serverInstanceId](FSM-STAGE:sam:dme:ComputeServerUnitDiscover:ConfigUserAccess)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-user-access-failed
mibFaultCode: F79472
mibFaultName: fsmRmtErrComputeServerUnitDiscoverConfigUserAccess
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmRmtErrComputeServerUnitDiscover:HandlePooling

Fault Code: F79472

Message: [FSM:STAGE:REMOTE-ERROR]: Invoke post-discovery policies on server [chassisId]/[slotId]/[serverInstanceId](FSM-STAGE:sam:dme:ComputeServerUnitDiscover:HandlePooling)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: handle-pooling-failed
mibFaultCode: F79472
mibFaultName: fsmRmtErrComputeServerUnitDiscoverHandlePooling
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmRmtErrComputeServerUnitDiscover:PreSanitize

Fault Code: F79472

Message: [FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration server [chassisId]/[slotId]/[serverInstanceId](FSM-STAGE:sam:dme:ComputeServerUnitDiscover:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F79472
mibFaultName: fsmRmtErrComputeServerUnitDiscoverPreSanitize
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmRmtErrComputeServerUnitDiscover:ReadSmbios

Fault Code: F79472

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for SMBIOS table from CIMC on server [chassisId]/[slotId]/[serverInstanceId](FSM-STAGE:sam:dme:ComputeServerUnitDiscover:ReadSmbios)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: read-smbios-failed
mibFaultCode: F79472
mibFaultName: fsmRmtErrComputeServerUnitDiscoverReadSmbios
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmRmtErrComputeServerUnitDiscover:Sanitize

Fault Code: F79472

Message: [FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration server [chassisId]/[slotId]/[serverInstanceId](FSM-STAGE:sam:dme:ComputeServerUnitDiscover:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F79472
mibFaultName: fsmRmtErrComputeServerUnitDiscoverSanitize
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmRmtErrComputeServerUnitDiscover:UnconfigCimcVMedia

Fault Code: F79472

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning all mappings for vmedia(FSM-STAGE:sam:dme:ComputeServerUnitDiscover:UnconfigCimcVMedia)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-cimcvmedia-failed
mibFaultCode: F79472
mibFaultName: fsmRmtErrComputeServerUnitDiscoverUnconfigCimcVMedia
moClass: compute:ServerUnit
Type: fsm
```

```
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmRmtErrComputeServerUnitDiscover:UnconfigExtMgmtGw

Fault Code: F79472

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning all ext mgmt bmc gateway for vmedia(FSM-STAGE:sam:dme:ComputeServerUnitDiscover:UnconfigExtMgmtGw)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-ext-mgmt-gw-failed
mibFaultCode: F79472
mibFaultName: fsmRmtErrComputeServerUnitDiscoverUnconfigExtMgmtGw
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmRmtErrComputeServerUnitDiscover:UnconfigExtMgmtRules

Fault Code: F79472

Message: [FSM:STAGE:REMOTE-ERROR]: cleaning all ext mgmt rules for vmedia(FSM-STAGE:sam:dme:ComputeServerUnitDiscover:UnconfigExtMgmtRules)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-ext-mgmt-rules-failed
mibFaultCode: F79472
mibFaultName: fsmRmtErrComputeServerUnitDiscoverUnconfigExtMgmtRules
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
```

fsmRmtErrMgmtIfFaPresence:CheckLicense

Fault Code: F79473

Message: [FSM:STAGE:REMOTE-ERROR]: Checking license for chassis [chassisId] (iom [id])(FSM-STAGE:sam:dme:MgmtIfFaPresence:CheckLicense)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: check-license-failed
mibFaultCode: F79473
mibFaultName: fsmRmtErrMgmtIfFaPresenceCheckLicense
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]

Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmRmtErrMgmtIfFaPresence:Identify

Fault Code: F79473

Message: [FSM:STAGE:REMOTE-ERROR]: Identifying Shared IO Module [chassisId]/[id](FSM-STAGE:sam:dme:MgmtIfFaPresence:Identify)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: identify-failed
mibFaultCode: F79473
mibFaultName: fsmRmtErrMgmtIfFaPresenceIdentify
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]

Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmRmtErrMgmtIfFaConn:ConfigureVifNs

Fault Code: F79474

Message: [FSM:STAGE:REMOTE-ERROR]: configuring Shared IO Module [chassisId]/[id] virtual name space(FSM-STAGE:sam:dme:MgmtIfFaConn:ConfigureVifNs)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: configure-vif-ns-failed
mibFaultCode: F79474
mibFaultName: fsmRmtErrMgmtIfFaConnConfigureVifNs
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]

Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmRmtErrMgmtIfFaConn:DiscoverChassis

Fault Code: F79474

Message: [FSM:STAGE:REMOTE-ERROR]: triggering chassis discovery via Shared IO Module path [chassisId]/[id](FSM-STAGE:sam:dme:MgmtIfFaConn:DiscoverChassis)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: discover-chassis-failed
mibFaultCode: F79474
mibFaultName: fsmRmtErrMgmtIfFaConnDiscoverChassis
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]

Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmRmtErrMgmtIfFaConn:DiscoverSasExpander

Fault Code: F79474

Message: [FSM:STAGE:REMOTE-ERROR]: Identifying SAS Expander(FSM-STAGE:sam:dme:MgmtIfFaConn:DiscoverSasExpander)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: discover-sas-expander-failed
mibFaultCode: F79474
mibFaultName: fsmRmtErrMgmtIfFaConnDiscoverSasExpander
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
```

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmRmtErrMgmtIfFaConn:OobStorageInventory

Fault Code: F79474

Message: [FSM:STAGE:REMOTE-ERROR]: Identifying Oob Storage(FSM-STAGE:sam:dme:MgmtIfFaConn:OobStorageInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: oob-storage-inventory-failed
mibFaultCode: F79474
mibFaultName: fsmRmtErrMgmtIfFaConnOobStorageInventory
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:

sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]

Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmRmtErrMgmtIfFaConn:SharedIOModuleInventory

Fault Code: F79474

Message: [FSM:STAGE:REMOTE-ERROR]: Identifying Shared IO Module in Chassis-[chassisId](FSM-STAGE:sam:dme:MgmtIfFaConn:SharedIOModuleInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: sharediomodule-inventory-failed
mibFaultCode: F79474
mibFaultName: fsmRmtErrMgmtIfFaConnSharedIOModuleInventory
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmRmtErrEquipmentIOCardEvacuate:Execute

Fault Code: F79485

Message: [FSM:STAGE:REMOTE-ERROR]: Stop all active flows on IOM [dn] connected to fabric [switchId](FSM-STAGE:sam:dme:EquipmentIOCardEvacuate:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: F79485
mibFaultName: fsmRmtErrEquipmentIOCardEvacuateExecute
moClass: equipment:IOCard
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]

fsmRmtErrEquipmentIOCardResetEvacuate:Execute

Fault Code: F79486

Message: [FSM:STAGE:REMOTE-ERROR]: Restarting all stopped flows on IOM [dn] connected to fabric [switchId](FSM-STAGE:sam:dme:EquipmentIOCardResetEvacuate:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F79486
mibFaultName: fsmRmtErrEquipmentIOCardResetEvacuateExecute
moClass: equipment:IOCard
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmRmtErrComputePhysicalClearTPM:BiosPostCompletion

Fault Code: F79491

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for BIOS POST completion from CIMC(FSM-STAGE:sam:dme:ComputePhysicalClearTPM:BiosPostCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: F79491
mibFaultName: fsmRmtErrComputePhysicalClearTPMBiosPostCompletion
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalClearTPM:BladePowerOff

Fault Code: F79491

Message: [FSM:STAGE:REMOTE-ERROR]: Power off server for reconfiguring Bios(FSM-STAGE:sam:dme:ComputePhysicalClearTPM:BladePowerOff)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: blade-power-off-failed
mibFaultCode: F79491
mibFaultName: fsmRmtErrComputePhysicalClearTPMBladePowerOff
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalClearTPM:BladePowerOn

Fault Code: F79491

Message: [FSM:STAGE:REMOTE-ERROR]: Power on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalClearTPM:BladePowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: blade-power-on-failed
mibFaultCode: F79491
mibFaultName: fsmRmtErrComputePhysicalClearTPMBladePowerOn
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalClearTPM:BootHost

Fault Code: F79491

Message: [FSM:STAGE:REMOTE-ERROR]: Reboot host OS for server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalClearTPM:BootHost)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-host-failed
mibFaultCode: F79491
mibFaultName: fsmRmtErrComputePhysicalClearTPMBootHost
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalClearTPM:Clear

Fault Code: F79491

Message: [FSM:STAGE:REMOTE-ERROR]: Clear TPM for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalClearTPM:Clear)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: clear-failed
mibFaultCode: F79491
mibFaultName: fsmRmtErrComputePhysicalClearTPMClear
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalClearTPM:PreSanitize

Fault Code: F79491

Message: [FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration server [serverId](FSM-STAGE:sam:dme:ComputePhysicalClearTPM:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: pre-sanitize-failed
mibFaultCode: F79491
mibFaultName: fsmRmtErrComputePhysicalClearTPMPreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalClearTPM:ReadSmBios

Fault Code: F79491

Message: [FSM:STAGE:REMOTE-ERROR]: Reading SMBIOS 204 response(FSM-STAGE:sam:dme:ComputePhysicalClearTPM:ReadSmBios)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: read-sm-bios-failed
mibFaultCode: F79491
mibFaultName: fsmRmtErrComputePhysicalClearTPMReadSmBios
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalClearTPM:ReconfigBios

Fault Code: F79491

Message: [FSM:STAGE:REMOTE-ERROR]: Reconfiguring BIOS Settings and Boot Order of server [serverId] for service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalClearTPM:ReconfigBios)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: reconfig-bios-failed
mibFaultCode: F79491
mibFaultName: fsmRmtErrComputePhysicalClearTPMReconfigBios
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalClearTPM:Sanitize

Fault Code: F79491

Message: [FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration server [serverId](FSM-STAGE:sam:dme:ComputePhysicalClearTPM:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F79491
mibFaultName: fsmRmtErrComputePhysicalClearTPMSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalClearTPM:SetupVmedia

Fault Code: F79491

Message: [FSM:STAGE:REMOTE-ERROR]: Provisioning a V-Media device with a bootable BIOS image for server [dn](FSM-STAGE:sam:dme:ComputePhysicalClearTPM:SetupVmedia)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: setup-vmedia-failed
mibFaultCode: F79491
mibFaultName: fsmRmtErrComputePhysicalClearTPMSetupVmedia
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalClearTPM:StopVMediaLocal

Fault Code: F79491

Message: [FSM:STAGE:REMOTE-ERROR]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalClearTPM:StopVMediaLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: stopvmedia-local-failed
mibFaultCode: F79491
mibFaultName: fsmRmtErrComputePhysicalClearTPMStopVMediaLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalClearTPM:StopVMediaPeer

Fault Code: F79491

Message: [FSM:STAGE:REMOTE-ERROR]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalClearTPM:StopVMediaPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: stopvmedia-peer-failed
mibFaultCode: F79491
mibFaultName: fsmRmtErrComputePhysicalClearTPMStopVMediaPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalClearTPM:UnconfigVmedia

Fault Code: F79491

Message: [FSM:STAGE:REMOTE-ERROR]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalClearTPM:UnconfigVmedia)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unconfig-vmedia-failed
mibFaultCode: F79491
mibFaultName: fsmRmtErrComputePhysicalClearTPMUnconfigVmedia
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrEquipmentIOCardResetPeerCmc:Execute

Fault Code: F79542

Message: [FSM:STAGE:REMOTE-ERROR]: Resetting Chassis Management Controller on Peer IOM [chassisId]/[id](FSM-STAGE:sam:dme:EquipmentIOCardResetPeerCmc:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F79542
mibFaultName: fsmRmtErrEquipmentIOCardResetPeerCmcExecute
moClass: equipment:IOCard
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmRmtErrSwExtUtilityConfPortBreakout:ConfigSwA

Fault Code: F79564

Message: [FSM:STAGE:REMOTE-ERROR]: Configure port breakout mode mode on fabric interconnect [id](FSM-STAGE:sam:dme:SwExtUtilityConfPortBreakout:ConfigSwA)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-sw-afailed
mibFaultCode: F79564
mibFaultName: fsmRmtErrSwExtUtilityConfPortBreakoutConfigSwA
moClass: sw:ExtUtility
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/ext
```

fsmRmtErrSwExtUtilityConfPortBreakout:ConfigSwB

Fault Code: F79564

Message: [FSM:STAGE:REMOTE-ERROR]: Configure port breakout mode on fabric interconnect [id](FSM-STAGE:sam:dme:SwExtUtilityConfPortBreakout:ConfigSwB)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-sw-bfailed
mibFaultCode: F79564
mibFaultName: fsmRmtErrSwExtUtilityConfPortBreakoutConfigSwB
moClass: sw:ExtUtility
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/ext
```

fsmRmtErrSwExtUtilityConfPortBreakout:PortInventorySwA

Fault Code: F79564

Message: [FSM:STAGE:REMOTE-ERROR]: Performing local port inventory of switch [id](FSM-STAGE:sam:dme:SwExtUtilityConfPortBreakout:PortInventorySwA)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: port-inventory-sw-afailed
mibFaultCode: F79564
mibFaultName: fsmRmtErrSwExtUtilityConfPortBreakoutPortInventorySwA
moClass: sw:ExtUtility
Type: fsm
```

```
autoCleared: true
Affected MO: sys/switch-[id]/ext
```

fsmRmtErrSwExtUtilityConfPortBreakout:PortInventorySwB

Fault Code: F79564

Message: [FSM:STAGE:REMOTE-ERROR]: Performing peer port inventory of switch [id](FSM-STAGE:sam:dme:SwExtUtilityConfPortBreakout:PortInventorySwB)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: port-inventory-sw-bfailed
mibFaultCode: F79564
mibFaultName: fsmRmtErrSwExtUtilityConfPortBreakoutPortInventorySwB
moClass: sw:ExtUtility
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/ext
```

fsmRmtErrSwExtUtilityConfPortBreakout:VerifyBreakoutConfig

Fault Code: F79564

Message: [FSM:STAGE:REMOTE-ERROR]: Verifying physical port breakout config on fabric interconnect [id](FSM-STAGE:sam:dme:SwExtUtilityConfPortBreakout:VerifyBreakoutConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: verify-breakout-config-failed
mibFaultCode: F79564
mibFaultName: fsmRmtErrSwExtUtilityConfPortBreakoutVerifyBreakoutConfig
moClass: sw:ExtUtility
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/ext
```

fsmRmtErrEquipmentSwitchIOCardEvacuate:Execute

Fault Code: F79586

Message: [FSM:STAGE:REMOTE-ERROR]: Stop all active flows on FI-IOM [dn] alias fabric [switchId](FSM-STAGE:sam:dme:EquipmentSwitchIOCardEvacuate:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F79586
mibFaultName: fsmRmtErrEquipmentSwitchIOCardEvacuateExecute
moClass: equipment:SwitchIOCard
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/sw-slot-[id]
```

fsmRmtErrEquipmentSwitchIOCardResetEvacuate:Execute

Fault Code: F79587

Message: [FSM:STAGE:REMOTE-ERROR]: Restarting all stopped flows on FI-IOM [dn] alias fabric [switchId](FSM-STAGE:sam:dme:EquipmentSwitchIOCardResetEvacuate:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F79587
mibFaultName: fsmRmtErrEquipmentSwitchIOCardResetEvacuateExecute
moClass: equipment:SwitchIOCard
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/sw-slot-[id]
```

fsmRmtErrMorefImportRootApplyMoRefs:ApplyMoProps

Fault Code: F79601

Message: [FSM:STAGE:REMOTE-ERROR]: Assigning values for moref properties(FSM-STAGE:sam:dme:MorefImportRootApplyMoRefs:ApplyMoProps)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-mo-props-failed
mibFaultCode: F79601
mibFaultName: fsmRmtErrMorefImportRootApplyMoRefsApplyMoProps
moClass: moref:ImportRoot
Type: fsm
autoCleared: true
Affected MO: import-ref-root
```

fsmRmtErrMorefImportRootApplyMoRefs:DeleteAllMoRefs

Fault Code: F79601

Message: [FSM:STAGE:REMOTE-ERROR]: Deleting all moref Mo's from MIT(FSM-STAGE:sam:dme:MorefImportRootApplyMoRefs:DeleteAllMoRefs)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-all-mo-refs-failed
mibFaultCode: F79601
mibFaultName: fsmRmtErrMorefImportRootApplyMoRefsDeleteAllMoRefs
moClass: moref:ImportRoot
Type: fsm
autoCleared: true
Affected MO: import-ref-root
```

fsmRmtErrStorageEnclosureRemoveEnclosure:PollUpdateStorageInvCIMC

Fault Code: F79609

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for storage inventory from CIMCs(FSM-STAGE:sam:dme:StorageEnclosureRemoveEnclosure:PollUpdateStorageInvCIMC)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-storage-invcimc-failed
mibFaultCode: F79609
mibFaultName: fsmRmtErrStorageEnclosureRemoveEnclosurePollUpdateStorageInvCIMC
moClass: storage:Enclosure
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]
```

```
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]
Affected MO: sys/chassis-[id]/enc-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]
```

fsmRmtErrStorageEnclosureRemoveEnclosure:UpdateStorageInvCIMC

Fault Code: F79609

Message: [FSM:STAGE:REMOTE-ERROR]: Update storage inventory from CIMCs(FSM-STAGE:sam:dme:StorageEnclosureRemoveEnclosure:UpdateStorageInvCIMC)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-storage-invcimc-failed
mibFaultCode: F79609
mibFaultName: fsmRmtErrStorageEnclosureRemoveEnclosureUpdateStorageInvCIMC
moClass: storage:Enclosure
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]
Affected MO: sys/chassis-[id]/enc-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]
```

fsmRmtErrStorageEnclosureRemoveEnclosure:UpdateStorageInvCMC

Fault Code: F79609

Message: [FSM:STAGE:REMOTE-ERROR]: Update storage inventory from CMC(FSM-STAGE:sam:dme:StorageEnclosureRemoveEnclosure:UpdateStorageInvCMC)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-storage-invcmc-failed
mibFaultCode: F79609
```

mibFaultName: fsmRmtErrStorageEnclosureRemoveEnclosureUpdateStorageInvCMC
moClass: storage:Enclosure
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]
Affected MO: sys/chassis-[id]/enc-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]

fsmRmtErrStorageEnclosureRemoveEnclosure:ValidateRemoval

Fault Code: F79609

Message: [FSM:STAGE:REMOTE-ERROR]: Validate removal of enclosure [id](FSM-STAGE:sam:dme:StorageEnclosureRemoveEnclosure:ValidateRemoval)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: validate-removal-failed
mibFaultCode: F79609
mibFaultName: fsmRmtErrStorageEnclosureRemoveEnclosureValidateRemoval
moClass: storage:Enclosure
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]
Affected MO: sys/chassis-[id]/enc-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]

fsmRmtErrMgmtControllerPowerCap:Config

Fault Code: F79624

Message: [FSM:STAGE:REMOTE-ERROR]: (FSM-STAGE:sam:dme:MgmtControllerPowerCap:Config)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: config-failed
mibFaultCode: F79624
mibFaultName: fsmRmtErrMgmtControllerPowerCapConfig
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt

```
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt
```

fsmRmtErrEquipmentSystemIOControllerResetCmc:Execute

Fault Code: F79625

Message: [FSM:STAGE:REMOTE-ERROR]: Resetting Chassis Management Controller on SIOC [chassisId]/[id](FSM-STAGE:sam:dme:EquipmentSystemIOControllerResetCmc:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F79625
mibFaultName: fsmRmtErrEquipmentSystemIOControllerResetCmcExecute
moClass: equipment:SystemIOController
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
```

fsmRmtErrComputePhysicalDiskZoningInventory:BootHost

Fault Code: F79626

Message: [FSM:STAGE:REMOTE-ERROR]: Bring-up host for fetching storage inventory(FSM-STAGE:sam:dme:ComputePhysicalDiskZoningInventory:BootHost)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-host-failed
mibFaultCode: F79626
mibFaultName: fsmRmtErrComputePhysicalDiskZoningInventoryBootHost
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiskZoningInventory:BootWait

Fault Code: F79626

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for system reset(FSM-STAGE:sam:dme:ComputePhysicalDiskZoningInventory:BootWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: boot-wait-failed
mibFaultCode: F79626
mibFaultName: fsmRmtErrComputePhysicalDiskZoningInventoryBootWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiskZoningInventory:PreSanitize

Fault Code: F79626

Message: [FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration(FSM-STAGE:sam:dme:ComputePhysicalDiskZoningInventory:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F79626
mibFaultName: fsmRmtErrComputePhysicalDiskZoningInventoryPreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiskZoningInventory:Sanitize

Fault Code: F79626

Message: [FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration(FSM-STAGE:sam:dme:ComputePhysicalDiskZoningInventory:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F79626
mibFaultName: fsmRmtErrComputePhysicalDiskZoningInventorySanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiskZoningInventory:Shutdown

Fault Code: F79626

Message: [FSM:STAGE:REMOTE-ERROR]: Shutting down server(FSM-STAGE:sam:dme:ComputePhysicalDiskZoningInventory:Shutdown)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: shutdown-failed
mibFaultCode: F79626
mibFaultName: fsmRmtErrComputePhysicalDiskZoningInventoryShutdown
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiskZoningInventory:StorageInventory

Fault Code: F79626

Message: [FSM:STAGE:REMOTE-ERROR]: Collect storage inventory(FSM-STAGE:sam:dme:ComputePhysicalDiskZoningInventory:StorageInventory)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: storage-inventory-failed
mibFaultCode: F79626
mibFaultName: fsmRmtErrComputePhysicalDiskZoningInventoryStorageInventory
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrEquipmentChassisProfileConfigure:AnalyzeImpact

Fault Code: F79646

Message: [FSM:STAGE:REMOTE-ERROR]: Analyzing changes impact(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:AnalyzeImpact)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: analyze-impact-failed
mibFaultCode: F79646
mibFaultName: fsmRmtErrEquipmentChassisProfileConfigureAnalyzeImpact
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmRmtErrEquipmentChassisProfileConfigure:ApplyConfig

Fault Code: F79646

Message: [FSM:STAGE:REMOTE-ERROR]: Applying config to chassis(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:ApplyConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-config-failed
```

```
mibFaultCode: F79646
mibFaultName: fsmRmtErrEquipmentChassisProfileConfigureApplyConfig
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmRmtErrEquipmentChassisProfileConfigure:ApplyPolicies

Fault Code: F79646

Message: [FSM:STAGE:REMOTE-ERROR]: Resolving and applying policies(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:ApplyPolicies)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-policies-failed
mibFaultCode: F79646
mibFaultName: fsmRmtErrEquipmentChassisProfileConfigureApplyPolicies
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmRmtErrEquipmentChassisProfileConfigure:ApplyTemplate

Fault Code: F79646

Message: [FSM:STAGE:REMOTE-ERROR]: Applying configuration template(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:ApplyTemplate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: apply-template-failed
mibFaultCode: F79646
mibFaultName: fsmRmtErrEquipmentChassisProfileConfigureApplyTemplate
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmRmtErrEquipmentChassisProfileConfigure:EvaluateAssociation

Fault Code: F79646

Message: [FSM:STAGE:REMOTE-ERROR]: Evaluate association with chassis(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:EvaluateAssociation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: evaluate-association-failed
mibFaultCode: F79646
mibFaultName: fsmRmtErrEquipmentChassisProfileConfigureEvaluateAssociation
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmRmtErrEquipmentChassisProfileConfigure:ResolveDistributable

Fault Code: F79646

Message: [FSM:STAGE:REMOTE-ERROR]: Resolve distributable from operations manager(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:ResolveDistributable)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-distributable-failed
mibFaultCode: F79646
mibFaultName: fsmRmtErrEquipmentChassisProfileConfigureResolveDistributable
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmRmtErrEquipmentChassisProfileConfigure:ResolveDistributableNames

Fault Code: F79646

Message: [FSM:STAGE:REMOTE-ERROR]: Resolving distributable names from chassis pack(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:ResolveDistributableNames)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-distributable-names-failed
mibFaultCode: F79646
mibFaultName: fsmRmtErrEquipmentChassisProfileConfigureResolveDistributableNames
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmRmtErrEquipmentChassisProfileConfigure:ResolveImages

Fault Code: F79646

Message: [FSM:STAGE:REMOTE-ERROR]: Resolve images from operations manager(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:ResolveImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-images-failed
mibFaultCode: F79646
mibFaultName: fsmRmtErrEquipmentChassisProfileConfigureResolveImages
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmRmtErrEquipmentChassisProfileConfigure:ResolvePolicies

Fault Code: F79646

Message: [FSM:STAGE:REMOTE-ERROR]: Resolving various policies from UCS Central(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:ResolvePolicies)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-policies-failed
mibFaultCode: F79646
mibFaultName: fsmRmtErrEquipmentChassisProfileConfigureResolvePolicies
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmRmtErrEquipmentChassisProfileConfigure:ResolveSchedule

Fault Code: F79646

Message: [FSM:STAGE:REMOTE-ERROR]: Resolving schedule policy from UCS Central(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:ResolveSchedule)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-schedule-failed
mibFaultCode: F79646
mibFaultName: fsmRmtErrEquipmentChassisProfileConfigureResolveSchedule
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmRmtErrEquipmentChassisProfileConfigure:ValidatePolicyOwnership

Fault Code: F79646

Message: [FSM:STAGE:REMOTE-ERROR]: Validating policy integrity from ownership perspective(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:ValidatePolicyOwnership)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: validate-policy-ownership-failed
mibFaultCode: F79646
mibFaultName: fsmRmtErrEquipmentChassisProfileConfigureValidatePolicyOwnership
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
```

```
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmRmtErrEquipmentChassisProfileConfigure:WaitForAssocCompletion

Fault Code: F79646

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Association completion on chassis(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:WaitForAssocCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-assoc-completion-failed
mibFaultCode: F79646
mibFaultName: fsmRmtErrEquipmentChassisProfileConfigureWaitForAssocCompletion
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmRmtErrEquipmentChassisProfileConfigure:WaitForMaintPermission

Fault Code: F79646

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for ack or maint window(FSM-STAGE:sam:dme:EquipmentChassisProfileConfigure:WaitForMaintPermission)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-maint-permission-failed
mibFaultCode: F79646
mibFaultName: fsmRmtErrEquipmentChassisProfileConfigureWaitForMaintPermission
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmRmtErrEquipmentChassisAssociate:ActivateAdaptor

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: activating adaptor(FSM-STAGE:sam:dme:EquipmentChassisAssociate:ActivateAdaptor)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-adaptor-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociateActivateAdaptor
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:ActivateBrdCtlr

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: activate board controller(FSM-STAGE:sam:dme:EquipmentChassisAssociate:ActivateBrdCtlr)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-brd-ctlr-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociateActivateBrdCtlr
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:ActivateCmc

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: activating chassis management controller(FSM-STAGE:sam:dme:EquipmentChassisAssociate:ActivateCmc)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-cmc-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociateActivateCmc
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:ActivateLocalDisk

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: Activate Disk(FSM-STAGE:sam:dme:EquipmentChassisAssociate:ActivateLocalDisk)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-local-disk-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociateActivateLocalDisk
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:ActivateSasExpander

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: Activate SAS expander(FSM-STAGE:sam:dme:EquipmentChassisAssociate:ActivateSasExpander)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-sas-expander-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociateActivateSasExpander
moClass: equipment:Chassis
Type: fsm
```

```
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:ActivateStorageCtlr

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: activating raid controller(FSM-STAGE:sam:dme:EquipmentChassisAssociate:ActivateStorageCtlr)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-storage-ctlr-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociateActivateStorageCtlr
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:ChassisPeerAdapterReboot

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: Chassis Adapter Reboot(FSM-STAGE:sam:dme:EquipmentChassisAssociate:ChassisPeerAdapterReboot)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: chassis-peer-adapter-reboot-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociateChassisPeerAdapterReboot
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:ConfigChassisAdapterConnectivity

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: Configure Server to Chassis Adapter connectivity(FSM-STAGE:sam:dme:EquipmentChassisAssociate:ConfigChassisAdapterConnectivity)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-chassis-adapter-connectivity-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociateConfigChassisAdapterConnectivity
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:DeleteCurlDownloadedImages

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: Delete images downloaded from operations manager(FSM-STAGE:sam:dme:EquipmentChassisAssociate:DeleteCurlDownloadedImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-curl-downloaded-images-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociateDeleteCurlDownloadedImages
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:DeleteImagesRemote

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: Delete images downloaded from operations manager(FSM-STAGE:sam:dme:EquipmentChassisAssociate:DeleteImagesRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-images-remote-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociateDeleteImagesRemote
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:DiskZoningConfig

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: Deploy disk zoning configuration(FSM-STAGE:sam:dme:EquipmentChassisAssociate:DiskZoningConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: disk-zoning-config-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociateDiskZoningConfig
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:PollAdaptorActivation

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for adaptor activation to complete(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PollAdaptorActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-adaptor-activation-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociatePollAdaptorActivation
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:PollBrdCtlrActivation

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for board controller activation to complete(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PollBrdCtlrActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-brd-ctlr-activation-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociatePollBrdCtlrActivation
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:PollCmcActivation

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for chassis management controller activation to complete(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PollCmcActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-cmc-activation-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociatePollCmcActivation
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:PollPostDiskZoneStorageInvCIMC

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for storage inventory from CIMCs(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PollPostDiskZoneStorageInvCIMC)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-post-disk-zone-storage-invcimc-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociatePollPostDiskZoneStorageInvCIMC
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:PollSasExpanderActivate

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for Sas Expander Activate to complete(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PollSasExpanderActivate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-sas-expander-activate-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociatePollSasExpanderActivate
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:PollSasExpanderConfig

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: Poll Connection Management Settings on SAS Expanders(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PollSasExpanderConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-sas-expander-config-failed
mibFaultCode: F79647
```

```
mibFaultName: fsmRmtErrEquipmentChassisAssociatePollSasExpanderConfig
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:PollStorageCtlrActivation

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for storage controller activation to complete(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PollStorageCtlrActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-storage-ctlr-activation-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociatePollStorageCtlrActivation
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:PollUpdateAdaptor

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: Poll Update Adaptor fw(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PollUpdateAdaptor)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-adaptor-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociatePollUpdateAdaptor
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:PollUpdateCmc

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: Poll Update CMC fw(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PollUpdateCmc)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-cmc-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociatePollUpdateCmc
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:PollUpdateSasExpander

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: Update SAS expander(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PollUpdateSasExpander)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-sas-expander-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociatePollUpdateSasExpander
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:PostDiskZoneStorageInvCIMC

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: Update storage inventory from CIMCs(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PostDiskZoneStorageInvCIMC)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: post-disk-zone-storage-invcimc-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociatePostDiskZoneStorageInvCIMC
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:PostDiskZoneStorageInvCMC

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: Update storage inventory from CMC(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PostDiskZoneStorageInvCMC)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: post-disk-zone-storage-invcmc-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociatePostDiskZoneStorageInvCMC
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:PowerOffServers

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: soft shutdown of the servers(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PowerOffServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-off-servers-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociatePowerOffServers
moClass: equipment:Chassis
Type: fsm
```

```
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:PowerOnServers

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: Power on servers(FSM-STAGE:sam:dme:EquipmentChassisAssociate:PowerOnServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-servers-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociatePowerOnServers
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:SasExpanderConfig

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: Configure Connection Management Settings on SAS Expanders(FSM-STAGE:sam:dme:EquipmentChassisAssociate:SasExpanderConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sas-expander-config-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociateSasExpanderConfig
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:UnlockFirmwareImage

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: Releasing the lock obtained(FSM-STAGE:sam:dme:EquipmentChassisAssociate:UnlockFirmwareImage)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unlock-firmware-image-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociateUnlockFirmwareImage
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:UpdateAdaptor

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: Update Adaptor fw(FSM-STAGE:sam:dme:EquipmentChassisAssociate:UpdateAdaptor)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-adaptor-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociateUpdateAdaptor
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:UpdateCmc

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: Update CMC fw(FSM-STAGE:sam:dme:EquipmentChassisAssociate:UpdateCmc)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-cmc-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociateUpdateCmc
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:UpdateSasExpander

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: Update PLD(FSM-STAGE:sam:dme:EquipmentChassisAssociate:UpdateSasExpander)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-sas-expander-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociateUpdateSasExpander
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:WaitBeforeInstallation

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: Wait before installation(FSM-STAGE:sam:dme:EquipmentChassisAssociate:WaitBeforeInstallation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-before-installation-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociateWaitBeforeInstallation
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:WaitForPowerOff

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for soft-shutdown of the servers to complete(FSM-STAGE:sam:dme:EquipmentChassisAssociate:WaitForPowerOff)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-power-off-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociateWaitForPowerOff
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:copyRemote

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: Copy images to peer node(FSM-STAGE:sam:dme:EquipmentChassisAssociate:copyRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-remote-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociateCopyRemote
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisAssociate:downloadImages

Fault Code: F79647

Message: [FSM:STAGE:REMOTE-ERROR]: Download images(FSM-STAGE:sam:dme:EquipmentChassisAssociate:downloadImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: download-images-failed
mibFaultCode: F79647
mibFaultName: fsmRmtErrEquipmentChassisAssociateDownloadImages
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisDisassociate:complete

Fault Code: F79648

Message: [FSM:STAGE:REMOTE-ERROR]: Chassis disassociation completion(FSM-STAGE:sam:dme:EquipmentChassisDisassociate:complete)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: complete-failed
mibFaultCode: F79648
mibFaultName: fsmRmtErrEquipmentChassisDisassociateComplete
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEtherServerIntFIoConfig:Configure

Fault Code: F79677

Message: [FSM:STAGE:REMOTE-ERROR]: Configure interface [dn](FSM-STAGE:sam:dme:EtherServerIntFIoConfig:Configure)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: configure-failed
mibFaultCode: F79677
```

mibFaultName: fsmRmtErrEtherServerIntFIoConfigConfigure
moClass: ether:ServerIntFIo
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/rack-unit-[id]/diag/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]

fsmRmtErrMgmtControllerEnableSecureBoot:PollSecureBootStatus

Fault Code: F79679

Message: [FSM:STAGE:REMOTE-ERROR]: Poll for Secure Boot Status(FSM-STAGE:sam:dme:MgmtControllerEnableSecureBoot:PollSecureBootStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-secure-boot-status-failed
mibFaultCode: F79679
mibFaultName: fsmRmtErrMgmtControllerEnableSecureBootPollSecureBootStatus
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerEnableSecureBoot:PollUpdateStatus

Fault Code: F79679

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for CMC update(FSM-STAGE:sam:dme:MgmtControllerEnableSecureBoot:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F79679
mibFaultName: fsmRmtErrMgmtControllerEnableSecureBootPollUpdateStatus
moClass: mgmt:Controller

Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt

Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerEnableSecureBoot:Reset

Fault Code: F79679

Message: [FSM:STAGE:REMOTE-ERROR]: Resetting CMC(FSM-STAGE:sam:dme:MgmtControllerEnableSecureBoot:Reset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: reset-failed
mibFaultCode: F79679
mibFaultName: fsmRmtErrMgmtControllerEnableSecureBootReset
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerEnableSecureBoot:UpdateRequest

Fault Code: F79679

Message: [FSM:STAGE:REMOTE-ERROR]: sending update request to CMC(FSM-STAGE:sam:dme:MgmtControllerEnableSecureBoot:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: F79679
mibFaultName: fsmRmtErrMgmtControllerEnableSecureBootUpdateRequest
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrEquipmentChassisChassisUpgrade:ActivateAdaptor

Fault Code: F79682

Message: [FSM:STAGE:REMOTE-ERROR]: activating adaptor(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:ActivateAdaptor)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-adaptor-failed
mibFaultCode: F79682
mibFaultName: fsmRmtErrEquipmentChassisChassisUpgradeActivateAdaptor
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisChassisUpgrade:ActivateBrdCtlr

Fault Code: F79682

Message: [FSM:STAGE:REMOTE-ERROR]: activate board controller(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:ActivateBrdCtlr)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-brd-ctlr-failed
mibFaultCode: F79682
mibFaultName: fsmRmtErrEquipmentChassisChassisUpgradeActivateBrdCtlr
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisChassisUpgrade:ActivateCmc

Fault Code: F79682

Message: [FSM:STAGE:REMOTE-ERROR]: activating chassis management controller(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:ActivateCmc)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-cmc-failed
mibFaultCode: F79682
mibFaultName: fsmRmtErrEquipmentChassisChassisUpgradeActivateCmc
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisChassisUpgrade:ActivateLocalDisk

Fault Code: F79682

Message: [FSM:STAGE:REMOTE-ERROR]: update Local Disk(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:ActivateLocalDisk)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-local-disk-failed
mibFaultCode: F79682
mibFaultName: fsmRmtErrEquipmentChassisChassisUpgradeActivateLocalDisk
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisChassisUpgrade:ActivateSasExpander

Fault Code: F79682

Message: [FSM:STAGE:REMOTE-ERROR]: Activate SAS expander(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:ActivateSasExpander)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-sas-expander-failed
mibFaultCode: F79682
mibFaultName: fsmRmtErrEquipmentChassisChassisUpgradeActivateSasExpander
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisChassisUpgrade:ActivateStorageCtlr

Fault Code: F79682

Message: [FSM:STAGE:REMOTE-ERROR]: activating raid controller(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:ActivateStorageCtlr)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-storage-ctlr-failed
mibFaultCode: F79682
mibFaultName: fsmRmtErrEquipmentChassisChassisUpgradeActivateStorageCtlr
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisChassisUpgrade:PollAdaptorActivation

Fault Code: F79682

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for adaptor activation to complete(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:PollAdaptorActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-adaptor-activation-failed
mibFaultCode: F79682
mibFaultName: fsmRmtErrEquipmentChassisChassisUpgradePollAdaptorActivation
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisChassisUpgrade:PollBrdCtlrActivation

Fault Code: F79682

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for board controller activation to complete(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:PollBrdCtlrActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-brd-ctlr-activation-failed
mibFaultCode: F79682
mibFaultName: fsmRmtErrEquipmentChassisChassisUpgradePollBrdCtlrActivation
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisChassisUpgrade:PollCmcActivation

Fault Code: F79682

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for chassis management controller activation to complete(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:PollCmcActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-cmc-activation-failed
mibFaultCode: F79682
mibFaultName: fsmRmtErrEquipmentChassisChassisUpgradePollCmcActivation
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisChassisUpgrade:PollLocalDiskActivate

Fault Code: F79682

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for Local disk activate to complete(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:PollLocalDiskActivate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-local-disk-activate-failed
mibFaultCode: F79682
```

```
mibFaultName: fsmRmtErrEquipmentChassisChassisUpgradePollLocalDiskActivate
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisChassisUpgrade:PollSasExpanderActivate

Fault Code: F79682

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for Sas Expander Activate to complete(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:PollSasExpanderActivate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-sas-expander-activate-failed
mibFaultCode: F79682
mibFaultName: fsmRmtErrEquipmentChassisChassisUpgradePollSasExpanderActivate
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisChassisUpgrade:PollStorageCtlrActivation

Fault Code: F79682

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for storage controller activation to complete(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:PollStorageCtlrActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-storage-ctlr-activation-failed
mibFaultCode: F79682
mibFaultName: fsmRmtErrEquipmentChassisChassisUpgradePollStorageCtlrActivation
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisChassisUpgrade:PollUpdateStatus

Fault Code: F79682

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for updates to complete(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F79682
mibFaultName: fsmRmtErrEquipmentChassisChassisUpgradePollUpdateStatus
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisChassisUpgrade:PowerOffServers

Fault Code: F79682

Message: [FSM:STAGE:REMOTE-ERROR]: soft shutdown of the servers(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:PowerOffServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-off-servers-failed
mibFaultCode: F79682
mibFaultName: fsmRmtErrEquipmentChassisChassisUpgradePowerOffServers
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisChassisUpgrade:PowerOnServers

Fault Code: F79682

Message: [FSM:STAGE:REMOTE-ERROR]: Power on servers(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:PowerOnServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-servers-failed
mibFaultCode: F79682
mibFaultName: fsmRmtErrEquipmentChassisChassisUpgradePowerOnServers
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisChassisUpgrade:ResetSasExpander

Fault Code: F79682

Message: [FSM:STAGE:REMOTE-ERROR]: Reset SAS expander(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:ResetSasExpander)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: reset-sas-expander-failed
mibFaultCode: F79682
mibFaultName: fsmRmtErrEquipmentChassisChassisUpgradeResetSasExpander
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisChassisUpgrade:UpdateRequest

Fault Code: F79682

Message: [FSM:STAGE:REMOTE-ERROR]: starting updates for chassis components(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-request-failed
mibFaultCode: F79682
mibFaultName: fsmRmtErrEquipmentChassisChassisUpgradeUpdateRequest
moClass: equipment:Chassis
Type: fsm
```

```
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisChassisUpgrade:WaitForPowerOff

Fault Code: F79682

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for soft-shutdown of the servers to complete(FSM-STAGE:sam:dme:EquipmentChassisChassisUpgrade:WaitForPowerOff)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-power-off-failed
mibFaultCode: F79682
mibFaultName: fsmRmtErrEquipmentChassisChassisUpgradeWaitForPowerOff
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrMgmtControllerUpdateSasExpander:PollUpdateStatus

Fault Code: F79684

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for update to complete(FSM-STAGE:sam:dme:MgmtControllerUpdateSasExpander:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F79684
mibFaultName: fsmRmtErrMgmtControllerUpdateSasExpanderPollUpdateStatus
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
```

Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateSasExpander:UpdateRequest

Fault Code: F79684

Message: [FSM:STAGE:REMOTE-ERROR]: sending update request of SasExpander to CMC(FSM-STAGE:sam:dme:MgmtControllerUpdateSasExpander:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: F79684
mibFaultName: fsmRmtErrMgmtControllerUpdateSasExpanderUpdateRequest
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerActivateSasExpander:Activate

Fault Code: F79685

Message: [FSM:STAGE:REMOTE-ERROR]: activating backup image of SasExpander(FSM-STAGE:sam:dme:MgmtControllerActivateSasExpander:Activate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: activate-failed
mibFaultCode: F79685
mibFaultName: fsmRmtErrMgmtControllerActivateSasExpanderActivate
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerActivateSasExpander:PollActivateStatus

Fault Code: F79685

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for activate to complete(FSM-STAGE:sam:dme:MgmtControllerActivateSasExpander:PollActivateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-activate-status-failed
mibFaultCode: F79685
mibFaultName: fsmRmtErrMgmtControllerActivateSasExpanderPollActivateStatus
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt

Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerActivateSasExpander:WaitForActivation

Fault Code: F79685

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for expander to be activated(FSM-STAGE:sam:dme:MgmtControllerActivateSasExpander:WaitForActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: wait-for-activation-failed
mibFaultCode: F79685
mibFaultName: fsmRmtErrMgmtControllerActivateSasExpanderWaitForActivation
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerActivateLocalDisk:Activate

Fault Code: F79686

Message: [FSM:STAGE:REMOTE-ERROR]: activating image of LocalDisk(FSM-STAGE:sam:dme:MgmtControllerActivateLocalDisk:Activate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: activate-failed
mibFaultCode: F79686
mibFaultName: fsmRmtErrMgmtControllerActivateLocalDiskActivate
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerActivateLocalDisk:PollActivateStatus

Fault Code: F79686

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for activate to complete(FSM-STAGE:sam:dme:MgmtControllerActivateLocalDisk:PollActivateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-activate-status-failed
mibFaultCode: F79686
mibFaultName: fsmRmtErrMgmtControllerActivateLocalDiskPollActivateStatus
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrStorageLocalDiskUpdateLocalDisk:PollUpdateStatus

Fault Code: F79687

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for activate to complete(FSM-STAGE:sam:dme:StorageLocalDiskUpdateLocalDisk:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F79687
mibFaultName: fsmRmtErrStorageLocalDiskUpdateLocalDiskPollUpdateStatus
moClass: storage:LocalDisk
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]

```
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]
```

fsmRmtErrStorageLocalDiskUpdateLocalDisk:PowerOffServers

Fault Code: F79687

Message: [FSM:STAGE:REMOTE-ERROR]: soft shutdown of the servers(FSM-STAGE:sam:dme:StorageLocalDiskUpdateLocalDisk:PowerOffServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-off-servers-failed
mibFaultCode: F79687
mibFaultName: fsmRmtErrStorageLocalDiskUpdateLocalDiskPowerOffServers
moClass: storage:LocalDisk
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]
```

fsmRmtErrStorageLocalDiskUpdateLocalDisk:ServersPowerOffCompletion

Fault Code: F79687

Message: [FSM:STAGE:REMOTE-ERROR]: checking for servers are powered down(FSM-STAGE:sam:dme:StorageLocalDiskUpdateLocalDisk:ServersPowerOffCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: servers-power-off-completion-failed
mibFaultCode: F79687
```

mibFaultName: fsmRmtErrStorageLocalDiskUpdateLocalDiskServersPowerOffCompletion
moClass: storage:LocalDisk
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]

fsmRmtErrStorageLocalDiskUpdateLocalDisk:Update

Fault Code: F79687

Message: [FSM:STAGE:REMOTE-ERROR]: updating image of LocalDisk(FSM-STAGE:sam:dme:StorageLocalDiskUpdateLocalDisk:Update)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-failed
mibFaultCode: F79687
mibFaultName: fsmRmtErrStorageLocalDiskUpdateLocalDiskUpdate
moClass: storage:LocalDisk
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]

fsmRmtErrMgmtControllerUpdateUCSManagerSP:execute

Fault Code: F79699

Message: [FSM:STAGE:REMOTE-ERROR]: Updating UCS Manager firmware(FSM-STAGE:sam:dme:MgmtControllerUpdateUCSManagerSP:execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F79699
mibFaultName: fsmRmtErrMgmtControllerUpdateUCSManagerSPExecute
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateUCSManagerSP:start

Fault Code: F79699

Message: [FSM:STAGE:REMOTE-ERROR]: Scheduling UCS manager update(FSM-STAGE:sam:dme:MgmtControllerUpdateUCSManagerSP:start)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: start-failed
mibFaultCode: F79699
mibFaultName: fsmRmtErrMgmtControllerUpdateUCSManagerSPStart
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrComputePhysicalDiag:BiosPostCompletion

Fault Code: F79700

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for BIOS POST completion on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:BiosPostCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: F79700
mibFaultName: fsmRmtErrComputePhysicalDiagBiosPostCompletion
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiag:CheckPowerAvailability

Fault Code: F79700

Message: [FSM:STAGE:REMOTE-ERROR]: Check if power is available for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F79700
mibFaultName: fsmRmtErrComputePhysicalDiagCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiag:DisableScriptableVMedia

Fault Code: F79700

Message: [FSM:STAGE:REMOTE-ERROR]: disabling scriptable vmedia(FSM-STAGE:sam:dme:ComputePhysicalDiag:DisableScriptableVMedia)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: disable-scriptablevmedia-failed
mibFaultCode: F79700
```

```
mibFaultName: fsmRmtErrComputePhysicalDiagDisableScriptableVMedia
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiag:HagConnect

Fault Code: F79700

Message: [FSM:STAGE:REMOTE-ERROR]: Connect to pre-boot environment agent on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:HagConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-connect-failed
mibFaultCode: F79700
mibFaultName: fsmRmtErrComputePhysicalDiagHagConnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiag:HagDisconnect

Fault Code: F79700

Message: [FSM:STAGE:REMOTE-ERROR]: Disconnect from pre-boot environment agent on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:HagDisconnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: hag-disconnect-failed
mibFaultCode: F79700
mibFaultName: fsmRmtErrComputePhysicalDiagHagDisconnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

```
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiag:LogTransfer

Fault Code: F79700

Message: [FSM:STAGE:REMOTE-ERROR]: Transferring diag log files(FSM-STAGE:sam:dme:ComputePhysicalDiag:LogTransfer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: log-transfer-failed
mibFaultCode: F79700
mibFaultName: fsmRmtErrComputePhysicalDiagLogTransfer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiag:PnuOSIdent

Fault Code: F79700

Message: [FSM:STAGE:REMOTE-ERROR]: Identify pre-boot environment agent on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:PnuOSIdent)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pnuosident-failed
mibFaultCode: F79700
mibFaultName: fsmRmtErrComputePhysicalDiagPnuOSIdent
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiag:PowerDeployWait

Fault Code: F79700

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F79700
mibFaultName: fsmRmtErrComputePhysicalDiagPowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiag:PowerOn

Fault Code: F79700

Message: [FSM:STAGE:REMOTE-ERROR]: power on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:PowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-failed
mibFaultCode: F79700
mibFaultName: fsmRmtErrComputePhysicalDiagPowerOn
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiag:PowerOnWait

Fault Code: F79700

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for power on for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:PowerOnWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-wait-failed
mibFaultCode: F79700
mibFaultName: fsmRmtErrComputePhysicalDiagPowerOnWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiag:PreSanitize

Fault Code: F79700

Message: [FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F79700
mibFaultName: fsmRmtErrComputePhysicalDiagPreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiag:PreconfigVmediaLocal

Fault Code: F79700

Message: [FSM:STAGE:REMOTE-ERROR]: Teardown local vmedia(FSM-STAGE:sam:dme:ComputePhysicalDiag:PreconfigVmediaLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: preconfig-vmedia-local-failed
mibFaultCode: F79700
mibFaultName: fsmRmtErrComputePhysicalDiagPreconfigVmediaLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiag:PreconfigVmediaPeer

Fault Code: F79700

Message: [FSM:STAGE:REMOTE-ERROR]: Teardown peer vmedia(FSM-STAGE:sam:dme:ComputePhysicalDiag:PreconfigVmediaPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: preconfig-vmedia-peer-failed
mibFaultCode: F79700
mibFaultName: fsmRmtErrComputePhysicalDiagPreconfigVmediaPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiag:RunTests

Fault Code: F79700

Message: [FSM:STAGE:REMOTE-ERROR]: Running diagnostic tests(FSM-STAGE:sam:dme:ComputePhysicalDiag:RunTests)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: run-tests-failed
mibFaultCode: F79700
mibFaultName: fsmRmtErrComputePhysicalDiagRunTests
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiag:Sanitize

Fault Code: F79700

Message: [FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:Sanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F79700
mibFaultName: fsmRmtErrComputePhysicalDiagSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiag:SerialDebugConnect

Fault Code: F79700

Message: [FSM:STAGE:REMOTE-ERROR]: Connect to pre-boot environment agent on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:SerialDebugConnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: serial-debug-connect-failed
mibFaultCode: F79700
mibFaultName: fsmRmtErrComputePhysicalDiagSerialDebugConnect
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiag:SerialDebugDisconnect

Fault Code: F79700

Message: [FSM:STAGE:REMOTE-ERROR]: Disconnect from pre-boot environment agent on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:SerialDebugDisconnect)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: serial-debug-disconnect-failed
mibFaultCode: F79700
mibFaultName: fsmRmtErrComputePhysicalDiagSerialDebugDisconnect
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiag:SetupBootEnvironment

Fault Code: F79700

Message: [FSM:STAGE:REMOTE-ERROR]: setting up boot environment for management O/S for server(FSM-STAGE:sam:dme:ComputePhysicalDiag:SetupBootEnvironment)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: setup-boot-environment-failed
mibFaultCode: F79700
mibFaultName: fsmRmtErrComputePhysicalDiagSetupBootEnvironment
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiag:SetupVmediaLocal

Fault Code: F79700

Message: [FSM:STAGE:REMOTE-ERROR]: provisioning a virtual media device with a management O/S for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:SetupVmediaLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: setup-vmedia-local-failed
mibFaultCode: F79700
mibFaultName: fsmRmtErrComputePhysicalDiagSetupVmediaLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiag:SetupVmediaPeer

Fault Code: F79700

Message: [FSM:STAGE:REMOTE-ERROR]: provisioning a virtual media device with a management O/S for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:SetupVmediaPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: setup-vmedia-peer-failed
mibFaultCode: F79700
mibFaultName: fsmRmtErrComputePhysicalDiagSetupVmediaPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiag:Shutdown

Fault Code: F79700

Message: [FSM:STAGE:REMOTE-ERROR]: Shutting down server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDiag:Shutdown)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: shutdown-failed
mibFaultCode: F79700
mibFaultName: fsmRmtErrComputePhysicalDiagShutdown
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiag:TearDownBootEnvironment

Fault Code: F79700

Message: [FSM:STAGE:REMOTE-ERROR]: tearing down boot environment for management O/S for server(FSM-STAGE:sam:dme:ComputePhysicalDiag:TearDownBootEnvironment)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: tear-down-boot-environment-failed
mibFaultCode: F79700
mibFaultName: fsmRmtErrComputePhysicalDiagTearDownBootEnvironment
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiag:TeardownVmediaLocal

Fault Code: F79700

Message: [FSM:STAGE:REMOTE-ERROR]: Teardown local vmedia(FSM-STAGE:sam:dme:ComputePhysicalDiag:TeardownVmediaLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: teardown-vmedia-local-failed
mibFaultCode: F79700
mibFaultName: fsmRmtErrComputePhysicalDiagTeardownVmediaLocal
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiag:TeardownVmediaPeer

Fault Code: F79700

Message: [FSM:STAGE:REMOTE-ERROR]: Teardown peer vmedia(FSM-STAGE:sam:dme:ComputePhysicalDiag:TeardownVmediaPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: teardown-vmedia-peer-failed
mibFaultCode: F79700
mibFaultName: fsmRmtErrComputePhysicalDiagTeardownVmediaPeer
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalDiag:WaitForDebug

Fault Code: F79700

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for user debugging(FSM-STAGE:sam:dme:ComputePhysicalDiag:WaitForDebug)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
```

```
Cause: wait-for-debug-failed
mibFaultCode: F79700
mibFaultName: fsmRmtErrComputePhysicalDiagWaitForDebug
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalCimcSecurityConfig:KmipCertConfig

Fault Code: F79701

Message: [FSM:STAGE:REMOTE-ERROR]: Certificate configuration on CIMC for KMIP(FSM-STAGE:sam:dme:ComputePhysicalCimcSecurityConfig:KmipCertConfig)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: kmip-cert-config-failed
mibFaultCode: F79701
mibFaultName: fsmRmtErrComputePhysicalCimcSecurityConfigKmipCertConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalCimcSecurityConfig:KmipSaveCert

Fault Code: F79701

Message: [FSM:STAGE:REMOTE-ERROR]: Save CA-signed certificate on CIMC for KMIP(FSM-STAGE:sam:dme:ComputePhysicalCimcSecurityConfig:KmipSaveCert)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: kmip-save-cert-failed
mibFaultCode: F79701
mibFaultName: fsmRmtErrComputePhysicalCimcSecurityConfigKmipSaveCert
moClass: compute:Physical
Type: fsm
autoCleared: true
```

```
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrSwPortDiscoverDeploy:EnablePort

Fault Code: F79730

Message: [FSM:STAGE:REMOTE-ERROR]: FI port discover on [switchId](FSM-STAGE:sam:dme:SwPortDiscoverDeploy:EnablePort)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: enable-port-failed
mibFaultCode: F79730
mibFaultName: fsmRmtErrSwPortDiscoverDeployEnablePort
moClass: sw:PortDiscover
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/discover
```

fsmRmtErrPolicyPolicyScopeContReportPolicyFailFsm:ReportError

Fault Code: F79733

Message: [FSM:STAGE:REMOTE-ERROR]: (FSM-STAGE:sam:dme:PolicyPolicyScopeContReportPolicyFailFsm:ReportError)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: report-error-failed
mibFaultCode: F79733
mibFaultName: fsmRmtErrPolicyPolicyScopeContReportPolicyFailFsmReportError
moClass: policy:PolicyScopeCont
Type: fsm
autoCleared: true
Affected MO: extpol/reg/clients/client-[id]/scope-cont-[appType]
Affected MO: extpol/reg/controllers/contro-[id]/scope-cont-[appType]
Affected MO: extpol/reg/providers/prov-[type]/scope-cont-[appType]
Affected MO: extpol/reg/scope-cont-[appType]
Affected MO: policy-ep/scope-cont-[appType]
```

fsmRmtErrPolicyRequestorResolveFromCentral:ResolveFromOpsMgr

Fault Code: F79734

Message: [FSM:STAGE:REMOTE-ERROR]: Resolve objects from operations manager(FSM-STAGE:sam:dme:PolicyRequestorResolveFromCentral:ResolveFromOpsMgr)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-from-ops-mgr-failed
mibFaultCode: F79734
mibFaultName: fsmRmtErrPolicyRequestorResolveFromCentralResolveFromOpsMgr
moClass: policy:Requestor
Type: fsm
autoCleared: true
Affected MO:
sys/control-ep-[type]/source-[sourceDme]/context-[name]/scope-[policyType]-[resolveType]-[policyName]/requestor-[name]
```

fsmRmtErrPolicyRequestorResolveFromCentral:ResolveFromPolicyMgr

Fault Code: F79734

Message: [FSM:STAGE:REMOTE-ERROR]: Resolve objects from policy manager(FSM-STAGE:sam:dme:PolicyRequestorResolveFromCentral:ResolveFromPolicyMgr)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: resolve-from-policy-mgr-failed
mibFaultCode: F79734
mibFaultName: fsmRmtErrPolicyRequestorResolveFromCentralResolveFromPolicyMgr
moClass: policy:Requestor
Type: fsm
autoCleared: true
Affected MO:
sys/control-ep-[type]/source-[sourceDme]/context-[name]/scope-[policyType]-[resolveType]-[policyName]/requestor-[name]
```

fsmRmtErrMgmtControllerKvmCert:Config

Fault Code: F79785

Message: [FSM:STAGE:REMOTE-ERROR]: kvm certificate configuration(FSM-STAGE:sam:dme:MgmtControllerKvmCert:Config)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: config-failed
mibFaultCode: F79785
mibFaultName: fsmRmtErrMgmtControllerKvmCertConfig
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerKvmCert:ResetCimc

Fault Code: F79785

Message: [FSM:STAGE:REMOTE-ERROR]: Resetting Management Controller(FSM-STAGE:sam:dme:MgmtControllerKvmCert:ResetCimc)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: reset-cimc-failed
mibFaultCode: F79785
mibFaultName: fsmRmtErrMgmtControllerKvmCertResetCimc
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrEquipmentChassisFwUpgrade:DeleteCurlDownloadedImages

Fault Code: F79786

Message: [FSM:STAGE:REMOTE-ERROR]: Delete images downloaded from operations manager(FSM-STAGE:sam:dme:EquipmentChassisFwUpgrade:DeleteCurlDownloadedImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-curl-downloaded-images-failed
mibFaultCode: F79786
mibFaultName: fsmRmtErrEquipmentChassisFwUpgradeDeleteCurlDownloadedImages
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisFwUpgrade:DeleteImagesRemote

Fault Code: F79786

Message: [FSM:STAGE:REMOTE-ERROR]: Delete images downloaded from operations manager(FSM-STAGE:sam:dme:EquipmentChassisFwUpgrade:DeleteImagesRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: delete-images-remote-failed
mibFaultCode: F79786
mibFaultName: fsmRmtErrEquipmentChassisFwUpgradeDeleteImagesRemote
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisFwUpgrade:PollUpdateAdaptor

Fault Code: F79786

Message: [FSM:STAGE:REMOTE-ERROR]: Poll Update Adaptor fw(FSM-STAGE:sam:dme:EquipmentChassisFwUpgrade:PollUpdateAdaptor)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-adaptor-failed
mibFaultCode: F79786
mibFaultName: fsmRmtErrEquipmentChassisFwUpgradePollUpdateAdaptor
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisFwUpgrade:PollUpdateCmc

Fault Code: F79786

Message: [FSM:STAGE:REMOTE-ERROR]: Poll Update CMC fw(FSM-STAGE:sam:dme:EquipmentChassisFwUpgrade:PollUpdateCmc)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-cmc-failed
mibFaultCode: F79786
mibFaultName: fsmRmtErrEquipmentChassisFwUpgradePollUpdateCmc
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisFwUpgrade:PollUpdateSasExpander

Fault Code: F79786

Message: [FSM:STAGE:REMOTE-ERROR]: Poll Update SAS expander fw(FSM-STAGE:sam:dme:EquipmentChassisFwUpgrade:PollUpdateSasExpander)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-sas-expander-failed
mibFaultCode: F79786
mibFaultName: fsmRmtErrEquipmentChassisFwUpgradePollUpdateSasExpander
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisFwUpgrade:UnlockFirmwareImage

Fault Code: F79786

Message: [FSM:STAGE:REMOTE-ERROR]: Releasing the lock obtained(FSM-STAGE:sam:dme:EquipmentChassisFwUpgrade:UnlockFirmwareImage)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: unlock-firmware-image-failed
mibFaultCode: F79786
mibFaultName: fsmRmtErrEquipmentChassisFwUpgradeUnlockFirmwareImage
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisFwUpgrade:UpdateAdaptor

Fault Code: F79786

Message: [FSM:STAGE:REMOTE-ERROR]: Update Adaptor fw(FSM-STAGE:sam:dme:EquipmentChassisFwUpgrade:UpdateAdaptor)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-adaptor-failed
mibFaultCode: F79786
mibFaultName: fsmRmtErrEquipmentChassisFwUpgradeUpdateAdaptor
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisFwUpgrade:UpdateCmc

Fault Code: F79786

Message: [FSM:STAGE:REMOTE-ERROR]: Update CMC fw(FSM-STAGE:sam:dme:EquipmentChassisFwUpgrade:UpdateCmc)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-cmc-failed
mibFaultCode: F79786
```

```
mibFaultName: fsmRmtErrEquipmentChassisFwUpgradeUpdateCmc
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisFwUpgrade:UpdateSasExpander

Fault Code: F79786

Message: [FSM:STAGE:REMOTE-ERROR]: Update SAS expander fw(FSM-STAGE:sam:dme:EquipmentChassisFwUpgrade:UpdateSasExpander)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: update-sas-expander-failed
mibFaultCode: F79786
mibFaultName: fsmRmtErrEquipmentChassisFwUpgradeUpdateSasExpander
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisFwUpgrade:WaitBeforeInstallation

Fault Code: F79786

Message: [FSM:STAGE:REMOTE-ERROR]: Wait before installation(FSM-STAGE:sam:dme:EquipmentChassisFwUpgrade:WaitBeforeInstallation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-before-installation-failed
mibFaultCode: F79786
mibFaultName: fsmRmtErrEquipmentChassisFwUpgradeWaitBeforeInstallation
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisFwUpgrade:copyRemote

Fault Code: F79786

Message: [FSM:STAGE:REMOTE-ERROR]: Copy images to peer node(FSM-STAGE:sam:dme:EquipmentChassisFwUpgrade:copyRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: copy-remote-failed
mibFaultCode: F79786
mibFaultName: fsmRmtErrEquipmentChassisFwUpgradeCopyRemote
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrEquipmentChassisFwUpgrade:downloadImages

Fault Code: F79786

Message: [FSM:STAGE:REMOTE-ERROR]: Download images(FSM-STAGE:sam:dme:EquipmentChassisFwUpgrade:downloadImages)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: download-images-failed
mibFaultCode: F79786
mibFaultName: fsmRmtErrEquipmentChassisFwUpgradeDownloadImages
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrFabricReservedVlanDeploy:ConfigSwitchLocal

Fault Code: F79793

Message: [FSM:STAGE:REMOTE-ERROR]: Reserved VLAN configuration on Local FI(FSM-STAGE:sam:dme:FabricReservedVlanDeploy:ConfigSwitchLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-switch-local-failed
mibFaultCode: F79793
mibFaultName: fsmRmtErrFabricReservedVlanDeployConfigSwitchLocal
moClass: fabric:ReservedVlan
Type: fsm
autoCleared: true
Affected MO: fabric/lan/fab-reserved-vlans
```

fsmRmtErrFabricReservedVlanDeploy:ConfigSwitchPeer

Fault Code: F79793

Message: [FSM:STAGE:REMOTE-ERROR]: Reserved VLAN configuration on Peer FI(FSM-STAGE:sam:dme:FabricReservedVlanDeploy:ConfigSwitchPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: config-switch-peer-failed
mibFaultCode: F79793
mibFaultName: fsmRmtErrFabricReservedVlanDeployConfigSwitchPeer
moClass: fabric:ReservedVlan
Type: fsm
autoCleared: true
Affected MO: fabric/lan/fab-reserved-vlans
```

fsmRmtErrFabricReservedVlanDeploy:WaitForUserAck

Fault Code: F79793

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for User Acknowledgment to configuration on primary(FSM-STAGE:sam:dme:FabricReservedVlanDeploy:WaitForUserAck)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-user-ack-failed
mibFaultCode: F79793
mibFaultName: fsmRmtErrFabricReservedVlanDeployWaitForUserAck
moClass: fabric:ReservedVlan
Type: fsm
```

```
autoCleared: true
Affected MO: fabric/lan/fab-reserved-vlans
```

fsmRmtErrQosclassSlowDrainConfigQoSSlowDrain:SetLocal

Fault Code: F79801

Message: [FSM:STAGE:REMOTE-ERROR]: QoS SlowDrain configuration on primary(FSM-STAGE:sam:dme:QosclassSlowDrainConfigQoSSlowDrain:SetLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-local-failed
mibFaultCode: F79801
mibFaultName: fsmRmtErrQosclassSlowDrainConfigQoSSlowDrainSetLocal
moClass: qosclass:SlowDrain
Type: fsm
autoCleared: true
Affected MO: fabric/lan/classes/slow-drain
```

fsmRmtErrQosclassSlowDrainConfigQoSSlowDrain:SetPeer

Fault Code: F79801

Message: [FSM:STAGE:REMOTE-ERROR]: QoS SlowDrain configuration on secondary(FSM-STAGE:sam:dme:QosclassSlowDrainConfigQoSSlowDrain:SetPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-peer-failed
mibFaultCode: F79801
mibFaultName: fsmRmtErrQosclassSlowDrainConfigQoSSlowDrainSetPeer
moClass: qosclass:SlowDrain
Type: fsm
autoCleared: true
Affected MO: fabric/lan/classes/slow-drain
```

fsmRmtErrQosclassSlowDrainConfigQoSSlowDrainFex:SetLocal

Fault Code: F79802

Message: [FSM:STAGE:REMOTE-ERROR]: QoS SlowDrain configuration on primary(FSM-STAGE:sam:dme:QosclassSlowDrainConfigQoSSlowDrainFex:SetLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-local-failed
mibFaultCode: F79802
mibFaultName: fsmRmtErrQosclassSlowDrainConfigQoSSlowDrainFexSetLocal
moClass: qosclass:SlowDrain
Type: fsm
autoCleared: true
Affected MO: fabric/lan/classes/slow-drain
```

fsmRmtErrQosclassSlowDrainConfigQoSSlowDrainFex:SetPeer

Fault Code: F79802

Message: [FSM:STAGE:REMOTE-ERROR]: QoS SlowDrain configuration on secondary(FSM-STAGE:sam:dme:QosclassSlowDrainConfigQoSSlowDrainFex:SetPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-peer-failed
mibFaultCode: F79802
mibFaultName: fsmRmtErrQosclassSlowDrainConfigQoSSlowDrainFexSetPeer
moClass: qosclass:SlowDrain
Type: fsm
autoCleared: true
Affected MO: fabric/lan/classes/slow-drain
```

fsmRmtErrComputePhysicalExecuteActions:BiosPostCompletion

Fault Code: F79815

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for BIOS POST completion from CIMC on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalExecuteActions:BiosPostCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: F79815
mibFaultName: fsmRmtErrComputePhysicalExecuteActionsBiosPostCompletion
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalExecuteActions:ExecutePMAction

Fault Code: F79815

Message: [FSM:STAGE:REMOTE-ERROR]: Execute a persistent memory action on a server [dn](FSM-STAGE:sam:dme:ComputePhysicalExecuteActions:ExecutePMAction)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: executepmaction-failed
mibFaultCode: F79815
mibFaultName: fsmRmtErrComputePhysicalExecuteActionsExecutePMAction
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalExecuteActions:PowerOn

Fault Code: F79815

Message: [FSM:STAGE:REMOTE-ERROR]: Power on server for configuration of service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalExecuteActions:PowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-on-failed
mibFaultCode: F79815
mibFaultName: fsmRmtErrComputePhysicalExecuteActionsPowerOn
moClass: compute:Physical
```

```
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalExecuteActions:SoftShutdown

Fault Code: F79815

Message: [FSM:STAGE:REMOTE-ERROR]: Soft shutdown of server [dn](FSM-STAGE:sam:dme:ComputePhysicalExecuteActions:SoftShutdown)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: soft-shutdown-failed
mibFaultCode: F79815
mibFaultName: fsmRmtErrComputePhysicalExecuteActionsSoftShutdown
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrEquipmentChassisFanPolicyConfig:Execute

Fault Code: F79816

Message: [FSM:STAGE:REMOTE-ERROR]: Deploying Fan policy changes on chassis [id](FSM-STAGE:sam:dme:EquipmentChassisFanPolicyConfig:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F79816
mibFaultName: fsmRmtErrEquipmentChassisFanPolicyConfigExecute
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrComputePhysicalNvmeSwitchRecovery:CheckStatus

Fault Code: F79817

Message: [FSM:STAGE:REMOTE-ERROR]: Get Recovery status for NVMe Switch(FSM-STAGE:sam:dme:ComputePhysicalNvmeSwitchRecovery:CheckStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-status-failed
mibFaultCode: F79817
mibFaultName: fsmRmtErrComputePhysicalNvmeSwitchRecoveryCheckStatus
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalNvmeSwitchRecovery:Execute

Fault Code: F79817

Message: [FSM:STAGE:REMOTE-ERROR]: Execute NVMe Switch recovery(FSM-STAGE:sam:dme:ComputePhysicalNvmeSwitchRecovery:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F79817
mibFaultName: fsmRmtErrComputePhysicalNvmeSwitchRecoveryExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalNvmeSwitchRecovery:WaitForAck

Fault Code: F79817

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for user ack(FSM-STAGE:sam:dme:ComputePhysicalNvmeSwitchRecovery:WaitForAck)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: wait-for-ack-failed
mibFaultCode: F79817
mibFaultName: fsmRmtErrComputePhysicalNvmeSwitchRecoveryWaitForAck
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrMgmtControllerUpdateStorageServerCMC:PollUpdateStatus

Fault Code: F79819

Message: [FSM:STAGE:REMOTE-ERROR]: waiting for c3260 CMC update(FSM-STAGE:sam:dme:MgmtControllerUpdateStorageServerCMC:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F79819
mibFaultName: fsmRmtErrMgmtControllerUpdateStorageServerCMCPollUpdateStatus
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
```

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateStorageServerCMC:UpdateRequest

Fault Code: F79819

Message: [FSM:STAGE:REMOTE-ERROR]: sending update request to c3260 CMC(FSM-STAGE:sam:dme:MgmtControllerUpdateStorageServerCMC:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: F79819
mibFaultName: fsmRmtErrMgmtControllerUpdateStorageServerCMCUpdateRequest
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt

Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerActivateStorageServerCMC:Activate

Fault Code: F79820

Message: [FSM:STAGE:REMOTE-ERROR]: activating backup image of c3260 CMC(FSM-STAGE:sam:dme:MgmtControllerActivateStorageServerCMC:Activate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: activate-failed
mibFaultCode: F79820
mibFaultName: fsmRmtErrMgmtControllerActivateStorageServerCMCActivate
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerActivateStorageServerCMC:PollActivation

Fault Code: F79820

Message: [FSM:STAGE:REMOTE-ERROR]: poll activation status(FSM-STAGE:sam:dme:MgmtControllerActivateStorageServerCMC:PollActivation)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-activation-failed
mibFaultCode: F79820
mibFaultName: fsmRmtErrMgmtControllerActivateStorageServerCMCPollActivation
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerActivateStorageServerCMC:Reset

Fault Code: F79820

Message: [FSM:STAGE:REMOTE-ERROR]: Resetting c3260 CMC to boot the activated version(FSM-STAGE:sam:dme:MgmtControllerActivateStorageServerCMC:Reset)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: reset-failed
mibFaultCode: F79820
mibFaultName: fsmRmtErrMgmtControllerActivateStorageServerCMCReset
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
```

Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpgradeBoardController:PollUpdateStatus

Fault Code: F79821

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for Board Controller update to complete(FSM-STAGE:sam:dme:MgmtControllerUpgradeBoardController:PollUpdateStatus)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-update-status-failed
mibFaultCode: F79821
mibFaultName: fsmRmtErrMgmtControllerUpgradeBoardControllerPollUpdateStatus
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt

Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpgradeBoardController:PowerOffServers

Fault Code: F79821

Message: [FSM:STAGE:REMOTE-ERROR]: Power off servers(FSM-STAGE:sam:dme:MgmtControllerUpgradeBoardController:PowerOffServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: power-off-servers-failed
mibFaultCode: F79821
mibFaultName: fsmRmtErrMgmtControllerUpgradeBoardControllerPowerOffServers
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt

Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpgradeBoardController:PowerOnServers

Fault Code: F79821

Message: [FSM:STAGE:REMOTE-ERROR]: Power on servers(FSM-STAGE:sam:dme:MgmtControllerUpgradeBoardController:PowerOnServers)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: power-on-servers-failed
mibFaultCode: F79821
mibFaultName: fsmRmtErrMgmtControllerUpgradeBoardControllerPowerOnServers
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpgradeBoardController:PrepareForUpdate

Fault Code: F79821

Message: [FSM:STAGE:REMOTE-ERROR]: Prepare for BoardController update(FSM-STAGE:sam:dme:MgmtControllerUpgradeBoardController:PrepareForUpdate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: prepare-for-update-failed
mibFaultCode: F79821
mibFaultName: fsmRmtErrMgmtControllerUpgradeBoardControllerPrepareForUpdate

moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt

Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpgradeBoardController:ServersPowerOffCompletion

Fault Code: F79821

Message: [FSM:STAGE:REMOTE-ERROR]: checking if the servers are powered down(FSM-STAGE:sam:dme:MgmtControllerUpgradeBoardController:ServersPowerOffCompletion)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: servers-power-off-completion-failed
mibFaultCode: F79821
mibFaultName: fsmRmtErrMgmtControllerUpgradeBoardControllerServersPowerOffCompletion
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpgradeBoardController:UpdateRequest

Fault Code: F79821

Message: [FSM:STAGE:REMOTE-ERROR]: Sending Board Controller update request to CMC(FSM-STAGE:sam:dme:MgmtControllerUpgradeBoardController:UpdateRequest)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: F79821
mibFaultName: fsmRmtErrMgmtControllerUpgradeBoardControllerUpdateRequest
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrComputePhysicalReinitializeVirtualDrive:ExecuteVDAction

Fault Code: F79835

Message: [FSM:STAGE:REMOTE-ERROR]: Execute Storage Configuration(FSM-STAGE:sam:dme:ComputePhysicalReinitializeVirtualDrive:ExecuteVDAction)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: executevdaction-failed
mibFaultCode: F79835
mibFaultName: fsmRmtErrComputePhysicalReinitializeVirtualDriveExecuteVDAction
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrEquipmentChassisPowerSavePolicyConfig:Execute

Fault Code: F79844

Message: [FSM:STAGE:REMOTE-ERROR]: Deploying Power Save policy changes on chassis [id](FSM-STAGE:sam:dme:EquipmentChassisPowerSavePolicyConfig:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F79844
mibFaultName: fsmRmtErrEquipmentChassisPowerSavePolicyConfigExecute
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmRmtErrFcpoolOuisDeploy:Local

Fault Code: F79846

Message: [FSM:STAGE:REMOTE-ERROR]: Deploy OUI to Local Fabric-Interconnect(FSM-STAGE:sam:dme:FcpoolOuisDeploy:Local)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: local-failed
mibFaultCode: F79846
mibFaultName: fsmRmtErrFcpoolOuisDeployLocal
moClass: fcpool:Ouis
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/oui-pool-[name]
```

fsmRmtErrFcpoolOuisDeploy:Remote

Fault Code: F79846

Message: [FSM:STAGE:REMOTE-ERROR]: Deploy OUI to Remote Fabric-Interconnect(FSM-STAGE:sam:dme:FcpoolOuisDeploy:Remote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: remote-failed
mibFaultCode: F79846
mibFaultName: fsmRmtErrFcpoolOuisDeployRemote
moClass: fcpool:Ouis
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/oui-pool-[name]
```

fsmRmtErrMgmtControllerUpdateSecureFPGA:ActivateLocal

Fault Code: F79850

Message: [FSM:STAGE:REMOTE-ERROR]: Activating Secure FPGA on Local FI(FSM-STAGE:sam:dme:MgmtControllerUpdateSecureFPGA:ActivateLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: activate-local-failed
mibFaultCode: F79850
mibFaultName: fsmRmtErrMgmtControllerUpdateSecureFPGAActivateLocal
moClass: mgmt:Controller
```

Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt

Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateSecureFPGA:ActivateRemote

Fault Code: F79850

Message: [FSM:STAGE:REMOTE-ERROR]: Activating Secure FPGA on Remote FI(FSM-STAGE:sam:dme:MgmtControllerUpdateSecureFPGA:ActivateRemote)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: activate-remote-failed
mibFaultCode: F79850
mibFaultName: fsmRmtErrMgmtControllerUpdateSecureFPGAActivateRemote
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrMgmtControllerUpdateSecureFPGA:PollActivate

Fault Code: F79850

Message: [FSM:STAGE:REMOTE-ERROR]: Updating the FPGA Status after reboot(FSM-STAGE:sam:dme:MgmtControllerUpdateSecureFPGA:PollActivate)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: poll-activate-failed
mibFaultCode: F79850
mibFaultName: fsmRmtErrMgmtControllerUpdateSecureFPGAPollActivate
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmRmtErrPfcWatchDogConfigPfcWatchDog:SetLocal

Fault Code: F79851

Message: [FSM:STAGE:REMOTE-ERROR]: Global PFC Watch Dog configuration on primary(FSM-STAGE:sam:dme:PfcWatchDogConfigPfcWatchDog:SetLocal)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-local-failed
mibFaultCode: F79851
mibFaultName: fsmRmtErrPfcWatchDogConfigPfcWatchDogSetLocal
moClass: pfc:WatchDog
Type: fsm
autoCleared: true
Affected MO: fabric/lan/watch-dog
```

fsmRmtErrPfcWatchDogConfigPfcWatchDog:SetPeer

Fault Code: F79851

Message: [FSM:STAGE:REMOTE-ERROR]: Global PFC Watch Dog configuration on secondary(FSM-STAGE:sam:dme:PfcWatchDogConfigPfcWatchDog:SetPeer)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: set-peer-failed
mibFaultCode: F79851
mibFaultName: fsmRmtErrPfcWatchDogConfigPfcWatchDogSetPeer
moClass: pfc:WatchDog
Type: fsm
autoCleared: true
Affected MO: fabric/lan/watch-dog
```

fsmRmtErrMgmtControllerConfigureSwPersonalities:Execute

Fault Code: F79867

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring Software Personality Name(FSM-STAGE:sam:dme:MgmtControllerConfigureSwPersonalities:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: F79867
mibFaultName: fsmRmtErrMgmtControllerConfigureSwPersonalitiesExecute
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt

```
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt
```

fsmRmtErrComputePhysicalConfigureServerPersonality:Execute

Fault Code: F79868

Message: [FSM:STAGE:REMOTE-ERROR]: Configuring Server Personality(FSM-STAGE:sam:dme:ComputePhysicalConfigureServerPersonality:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F79868
mibFaultName: fsmRmtErrComputePhysicalConfigureServerPersonalityExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalBiosPasswordReset:BladePowerOn

Fault Code: F79871

Message: [FSM:STAGE:REMOTE-ERROR]: Power on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalBiosPasswordReset:BladePowerOn)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: blade-power-on-failed
mibFaultCode: F79871
mibFaultName: fsmRmtErrComputePhysicalBiosPasswordResetBladePowerOn
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

```
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalBiosPasswordReset:CheckPowerAvailability

Fault Code: F79871

Message: [FSM:STAGE:REMOTE-ERROR]: Check if power can be allocated to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalBiosPasswordReset:CheckPowerAvailability)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: check-power-availability-failed
mibFaultCode: F79871
mibFaultName: fsmRmtErrComputePhysicalBiosPasswordResetCheckPowerAvailability
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalBiosPasswordReset:Execute

Fault Code: F79871

Message: [FSM:STAGE:REMOTE-ERROR]: Resetting BIOS Password for server [serverId](FSM-STAGE:sam:dme:ComputePhysicalBiosPasswordReset:Execute)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F79871
mibFaultName: fsmRmtErrComputePhysicalBiosPasswordResetExecute
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalBiosPasswordReset:PowerDeployWait

Fault Code: F79871

Message: [FSM:STAGE:REMOTE-ERROR]: Waiting for power allocation to server [serverId](FSM-STAGE:sam:dme:ComputePhysicalBiosPasswordReset:PowerDeployWait)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: power-deploy-wait-failed
mibFaultCode: F79871
mibFaultName: fsmRmtErrComputePhysicalBiosPasswordResetPowerDeployWait
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalBiosPasswordReset:PreSanitize

Fault Code: F79871

Message: [FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration server [serverId](FSM-STAGE:sam:dme:ComputePhysicalBiosPasswordReset:PreSanitize)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: F79871
mibFaultName: fsmRmtErrComputePhysicalBiosPasswordResetPreSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalBiosPasswordReset:ReconfigBios

Fault Code: F79871

Message: [FSM:STAGE:REMOTE-ERROR]: Reconfiguring BIOS Settings and Boot Order of server [serverId] for service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalBiosPasswordReset:ReconfigBios)

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: warning
Cause: reconfig-bios-failed
mibFaultCode: F79871
mibFaultName: fsmRmtErrComputePhysicalBiosPasswordResetReconfigBios
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalBiosPasswordReset:ReconfigUuid

Fault Code: F79871

Message: [FSM:STAGE:REMOTE-ERROR]: Reconfiguring logical UUID of server [serverId] for service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalBiosPasswordReset:ReconfigUuid)

Explanation: None set.

Recommended Action: None set.

Fault Details

```
Severity: warning
Cause: reconfig-uuid-failed
mibFaultCode: F79871
mibFaultName: fsmRmtErrComputePhysicalBiosPasswordResetReconfigUuid
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalBiosPasswordReset:Sanitize

Fault Code: F79871

Message: [FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration server [serverId](FSM-STAGE:sam:dme:ComputePhysicalBiosPasswordReset:Sanitize)

Explanation: None set.

Recommended Action: None set.

Fault Details

```
Severity: warning
Cause: sanitize-failed
mibFaultCode: F79871
```

```
mibFaultName: fsmRmtErrComputePhysicalBiosPasswordResetSanitize
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrComputePhysicalCimcSecurityUnconfig:KmipDelCert

Fault Code: F79872

Message: [FSM:STAGE:REMOTE-ERROR]: Certificate Deletion on CIMC for KMIP(FSM-STAGE:sam:dme:ComputePhysicalCimcSecurityUnconfig:KmipDelCert)

Explanation: None set.

Recommended Action: None set.

Fault Details

```
Severity: warning
Cause: kmip-del-cert-failed
mibFaultCode: F79872
mibFaultName: fsmRmtErrComputePhysicalCimcSecurityUnconfigKmipDelCert
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmRmtErrEquipmentChassisPowerExtendedPolicyConfig:Execute

Fault Code: F79896

Message: [FSM:STAGE:REMOTE-ERROR]: Deploying Power Extended policy changes on chassis [id](FSM-STAGE:sam:dme:EquipmentChassisPowerExtendedPolicyConfig:Execute)

Explanation: None set.

Recommended Action: None set.

Fault Details

```
Severity: warning
Cause: execute-failed
mibFaultCode: F79896
mibFaultName: fsmRmtErrEquipmentChassisPowerExtendedPolicyConfigExecute
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmFailEquipmentChassisRemoveChassis

Fault Code: F999447

Message: [FSM:FAILED]: sam:dme:EquipmentChassisRemoveChassis

Explanation: None set.

Recommended Action: None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999447
mibFaultName: fsmFailEquipmentChassisRemoveChassis
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmFailEquipmentLocatorLedSetLocatorLed

Fault Code: F999448

Message: [FSM:FAILED]: sam:dme:EquipmentLocatorLedSetLocatorLed

Explanation: None set.

Recommended Action: None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999448
mibFaultName: fsmFailEquipmentLocatorLedSetLocatorLed
moClass: equipment:LocatorLed
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/locator-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/locator-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/locator-led
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/locator-led
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/chassis-[id]/locator-led
Affected MO: sys/chassis-[id]/psu-[id]/locator-led
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/chassis-[id]/slot-[id]/locator-led
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/fex-[id]/locator-led
Affected MO: sys/fex-[id]/psu-[id]/locator-led
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/fex-[id]/slot-[id]/locator-led
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/locator-led
```

Affected MO: sys/rack-enclosure-[id]/psu-[id]/locator-led
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/rack-unit-[id]/ext-board-[id]/locator-led
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/rack-unit-[id]/locator-led
Affected MO: sys/rack-unit-[id]/psu-[id]/locator-led
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/switch-[id]/locator-led
Affected MO: sys/switch-[id]/psu-[id]/locator-led

fsmFailMgmtControllerExtMgmtIfConfig

Fault Code: F999558 **Message:** [FSM:FAILED]: sam:dme:MgmtControllerExtMgmtIfConfig **Explanation:** None set.

Recommended Action: None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F999558
mibFaultName: fsmFailMgmtControllerExtMgmtIfConfig
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailFabricComputeSlotEpIdentify

Fault Code: F999559

Message: [FSM:FAILED]: sam:dme:FabricComputeSlotEpIdentify

Explanation: None set.

Recommended Action: None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F999559
mibFaultName: fsmFailFabricComputeSlotEpIdentify
moClass: fabric:ComputeSlotEp
Type: fsm
autoCleared: true
Affected MO: fabric/server/chassis-[chassisId]/slot-[slotId]

fsmFailComputeBladeDiscover

Fault Code: F999560

Message: [FSM:FAILED]: sam:dme:ComputeBladeDiscover

Explanation: None set.

Recommended Action: None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999560
mibFaultName: fsmFailComputeBladeDiscover
moClass: compute:Blade
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

fsmFailEquipmentChassisPsuPolicyConfig

Fault Code: F999573

Message: [FSM:FAILED]: sam:dme:EquipmentChassisPsuPolicyConfig

Explanation: None set.

Recommended Action: None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999573
mibFaultName: fsmFailEquipmentChassisPsuPolicyConfig
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmFailAdaptorHostFcIfResetFcPersBinding

Fault Code: F999574 **Message:** [FSM:FAILED]: sam:dme:AdaptorHostFcIfResetFcPersBinding **Explanation:** None set.

Recommended Action: None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999574
mibFaultName: fsmFailAdaptorHostFcIfResetFcPersBinding
moClass: adaptor:HostFcIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]
```

fsmFailFabricLanCloudSwitchMode

Fault Code: F999579

Message: [FSM:FAILED]: sam:dme:FabricLanCloudSwitchMode

Explanation: None set.

Recommended Action: None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999579
mibFaultName: fsmFailFabricLanCloudSwitchMode
moClass: fabric:LanCloud
Type: fsm
autoCleared: true
Affected MO: fabric/lan
```

fsmFailVnicProfileSetDeploy

Fault Code: F999590

Message: [FSM:FAILED]: sam:dme:VnicProfileSetDeploy

Explanation: None set.

Recommended Action: None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999590
mibFaultName: fsmFailVnicProfileSetDeploy
moClass: vnic:ProfileSet
Type: fsm
autoCleared: true
Affected MO: fabric/lan/profiles
```

fsmFailCommSvcEpUpdateSvcEp

Fault Code: F999616

Message: [FSM:FAILED]: sam:dme:CommSvcEpUpdateSvcEp

Explanation: None set.

Recommended Action: None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999616
mibFaultName: fsmFailCommSvcEpUpdateSvcEp
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmFailCommSvcEpRestartWebSvc

Fault Code: F999617

Message: [FSM:FAILED]: sam:dme:CommSvcEpRestartWebSvc

Explanation: None set.

Recommended Action: None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999617
mibFaultName: fsmFailCommSvcEpRestartWebSvc
moClass: comm:SvcEp
Type: fsm
autoCleared: true
Affected MO: sys/svc-ext
```

fsmFailAaaEpUpdateEp

Fault Code: F999619

Message: [FSM:FAILED]: sam:dme:AaaEpUpdateEp

Explanation:

Cisco UCS Manager could not set the configurations for AAA servers.

Recommended Action:

Check the error for the failed FSM stage and take the recommended action for that stage.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999619
mibFaultName: fsmFailAaaEpUpdateEp
moClass: aaa:Ep
Type: fsm
autoCleared: true
Affected MO: sys/ldap-ext
Affected MO: sys/radius-ext
Affected MO: sys/tacacs-ext
```

fsmFailAaaRealmUpdateRealm

Fault Code: F999620

Message: [FSM:FAILED]: sam:dme:AaaRealmUpdateRealm

Explanation: Cisco UCS Manager could not set the configurations for Authentication Realm.

Recommended Action: Check the error for the failed FSM stage and take the recommended action for that stage.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999620
mibFaultName: fsmFailAaaRealmUpdateRealm
moClass: aaa:Realm
Type: fsm
autoCleared: true
Affected MO: sys/auth-realm
```

fsmFailAaaUserEpUpdateUserEp

Fault Code: F999621

Message: [FSM:FAILED]: sam:dme:AaaUserEpUpdateUserEp

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999621
mibFaultName: fsmFailAaaUserEpUpdateUserEp
moClass: aaa:UserEp
Type: fsm
autoCleared: true
Affected MO: sys/user-ext
```

fsmFailPkiEpUpdateEp

Fault Code: F999622

Message: [FSM:FAILED]: sam:dme:PkiEpUpdateEp

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999622
mibFaultName: fsmFailPkiEpUpdateEp
moClass: pki:Ep
Type: fsm
autoCleared: true
Affected MO: sys/pki-ext
```

fsmFailSysfileMutationSingle

Fault Code: F999640

Message: [FSM:FAILED]: sam:dme:SysfileMutationSingle

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999640
mibFaultName: fsmFailSysfileMutationSingle
moClass: sysfile:Mutation
Type: fsm
autoCleared: true
Affected MO: sys/corefiles/file-[name]|[switchId]/mutation
Affected MO: sys/corefiles/mutation
```

fsmFailSysfileMutationGlobal

Fault Code: F999641

Message: [FSM:FAILED]: sam:dme:SysfileMutationGlobal

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999641
mibFaultName: fsmFailSysfileMutationGlobal
moClass: sysfile:Mutation
Type: fsm
autoCleared: true
Affected MO: sys/corefiles/file-[name]|[switchId]/mutation
Affected MO: sys/corefiles/mutation
```

fsmFailSysdebugManualCoreFileExportTargetExport

Fault Code: F999644

Message: [FSM:FAILED]: sam:dme:SysdebugManualCoreFileExportTargetExport

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999644
mibFaultName: fsmFailSysdebugManualCoreFileExportTargetExport
moClass: sysdebug:ManualCoreFileExportTarget
Type: fsm
```

```
autoCleared: true
Affected MO: sys/corefiles/file-[name]|[switchId]/export-to-[hostname]
```

fsmFailSysdebugAutoCoreFileExportTargetConfigure

Fault Code: F999645

Message: [FSM:FAILED]: sam:dme:SysdebugAutoCoreFileExportTargetConfigure

Explanation: Cisco UCS Manager could not set the configurations for auto core transfer to remote TFTP server.

Recommended Action: Check the error for the failed FSM stage and take the recommended action for that stage.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999645
mibFaultName: fsmFailSysdebugAutoCoreFileExportTargetConfigure
moClass: sysdebug:AutoCoreFileExportTarget
Type: fsm
autoCleared: true
Affected MO: sys/sysdebug/file-export
```

fsmFailSysdebugLogControlEpLogControlPersist

Fault Code: F999646

Message: [FSM:FAILED]: sam:dme:SysdebugLogControlEpLogControlPersist

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999646
mibFaultName: fsmFailSysdebugLogControlEpLogControlPersist
moClass: sysdebug:LogControlEp
Type: fsm
autoCleared: true
Affected MO: sys/sysdebug/logcontrol
```

fsmFailSwAccessDomainDeploy

Fault Code: F999674

Message: [FSM:FAILED]: sam:dme:SwAccessDomainDeploy

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999674
mibFaultName: fsmFailSwAccessDomainDeploy
moClass: sw:AccessDomain
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/access-eth
```

fsmFailSwEthLanBorderDeploy

Fault Code: F999675

Message: [FSM:FAILED]: sam:dme:SwEthLanBorderDeploy

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999675
mibFaultName: fsmFailSwEthLanBorderDeploy
moClass: sw:EthLanBorder
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/border-eth
```

fsmFailSwFcSanBorderDeploy

Fault Code: F999676

Message: [FSM:FAILED]: sam:dme:SwFcSanBorderDeploy

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999676
mibFaultName: fsmFailSwFcSanBorderDeploy
moClass: sw:FcSanBorder
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/border-fc
```

fsmFailSwUtilityDomainDeploy

Fault Code: F999677

Message: [FSM:FAILED]: sam:dme:SwUtilityDomainDeploy

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999677
mibFaultName: fsmFailSwUtilityDomainDeploy
moClass: sw:UtilityDomain
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/utility-eth
```

fsmFailSyntheticFsObjCreate

Fault Code: F999681

Message: [FSM:FAILED]: sam:dme:SyntheticFsObjCreate

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999681
mibFaultName: fsmFailSyntheticFsObjCreate
moClass: synthetic:FsObj
Type: fsm
autoCleared: true
Affected MO: sys/file-[name]
```

fsmFailFirmwareDownloaderDownload

Fault Code: F999690

Message: [FSM:FAILED]: sam:dme:FirmwareDownloaderDownload

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999690
mibFaultName: fsmFailFirmwareDownloaderDownload
moClass: firmware:Downloader
Type: fsm
autoCleared: true
Affected MO: sys/fw-catalogue/dnld-[fileName]
```

fsmFailFirmwareImageDelete

Fault Code: F999691

Message: [FSM:FAILED]: sam:dme:FirmwareImageDelete

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999691
mibFaultName: fsmFailFirmwareImageDelete
moClass: firmware:Image
Type: fsm
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/boardController/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
```

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/image-[name]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/image-[name]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/image-[name]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/image-[name]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/image-[name]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/image-[name]
Affected MO: sys/fex-[id]/mgmt/image-[name]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/image-[name]
Affected MO: sys/fw-catalogue/image-[name]
Affected MO: sys/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/image-[name]
Affected MO: sys/rack-unit-[id]/mgmt/image-[name]
Affected MO: sys/switch-[id]/mgmt/image-[name]

fsmFailMgmtControllerUpdateSwitch

Fault Code: F999693

Message: [FSM:FAILED]: sam:dme:MgmtControllerUpdateSwitch

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F999693

mibFaultName: fsmFailMgmtControllerUpdateSwitch
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt

Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailMgmtControllerUpdateIOM

Fault Code: F999694

Message: [FSM:FAILED]: sam:dme:MgmtControllerUpdateIOM

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F999694
mibFaultName: fsmFailMgmtControllerUpdateIOM
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailMgmtControllerActivateIOM

Fault Code: F999695

Message: [FSM:FAILED]: sam:dme:MgmtControllerActivateIOM

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F999695
mibFaultName: fsmFailMgmtControllerActivateIOM
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailMgmtControllerUpdateBMC

Fault Code: F999696

Message: [FSM:FAILED]: sam:dme:MgmtControllerUpdateBMC

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F999696
mibFaultName: fsmFailMgmtControllerUpdateBMC
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailMgmtControllerActivateBMC

Fault Code: F999697

Message: [FSM:FAILED]: sam:dme:MgmtControllerActivateBMC

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F999697
mibFaultName: fsmFailMgmtControllerActivateBMC
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailCallhomeEpConfigCallhome

Fault Code: F999710

Message: [FSM:FAILED]: sam:dme:CallhomeEpConfigCallhome

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed

mibFaultCode: F999710
mibFaultName: fsmFailCallhomeEpConfigCallhome
moClass: callhome:Ep
Type: fsm
autoCleared: true
Affected MO: call-home

fsmFailMgmtIfSwMgmtOobIfConfig

Fault Code: F999713

Message: [FSM:FAILED]: sam:dme:MgmtIfSwMgmtOobIfConfig

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F999713
mibFaultName: fsmFailMgmtIfSwMgmtOobIfConfig
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmFailMgmtIfSwMgmtInbandIfConfig

Fault Code: F999714

Message: [FSM:FAILED]: sam:dme:MgmtIfSwMgmtInbandIfConfig

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F999714
mibFaultName: fsmFailMgmtIfSwMgmtInbandIfConfig
moClass: mgmt:If
Type: fsm
autoCleared: true

Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]

Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmFailMgmtIfVirtualIfConfig

Fault Code: F999719

Message: [FSM:FAILED]: sam:dme:MgmtIfVirtualIfConfig

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F999719
mibFaultName: fsmFailMgmtIfVirtualIfConfig
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmFailMgmtIfEnableVip

Fault Code: F999720

Message: [FSM:FAILED]: sam:dme:MgmtIfEnableVip

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F999720
mibFaultName: fsmFailMgmtIfEnableVip
moClass: mgmt:If
Type: fsm

autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]

Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmFailMgmtIfDisableVip

Fault Code: F999721

Message: [FSM:FAILED]: sam:dme:MgmtIfDisableVip

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F999721
mibFaultName: fsmFailMgmtIfDisableVip
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmFailMgmtIfEnableHA

Fault Code: F999722

Message: [FSM:FAILED]: sam:dme:MgmtIfEnableHA

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F999722
mibFaultName: fsmFailMgmtIfEnableHA
moClass: mgmt:If

Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]

Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmFailMgmtBackupBackup

Fault Code: F999723

Message: [FSM:FAILED]: sam:dme:MgmtBackupBackup

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F999723
mibFaultName: fsmFailMgmtBackupBackup
moClass: mgmt:Backup
Type: fsm
autoCleared: true
Affected MO: sys/backup-[hostname]

fsmFailMgmtImporterImport

Fault Code: F999724

Message: [FSM:FAILED]: sam:dme:MgmtImporterImport

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F999724
mibFaultName: fsmFailMgmtImporterImport
moClass: mgmt:Importer
Type: fsm
autoCleared: true
Affected MO: sys/import-config-[hostname]

fsmFailStatsCollectionPolicyUpdateEp

Fault Code: F999782

Message: [FSM:FAILED]: sam:dme:StatsCollectionPolicyUpdateEp

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999782
mibFaultName: fsmFailStatsCollectionPolicyUpdateEp
moClass: stats:CollectionPolicy
Type: fsm
autoCleared: true
Affected MO: stats/coll-policy-[name]
```

fsmFailQosclassDefinitionConfigGlobalQoS

Fault Code: F999785

Message: [FSM:FAILED]: sam:dme:QosclassDefinitionConfigGlobalQoS

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999785
mibFaultName: fsmFailQosclassDefinitionConfigGlobalQoS
moClass: qosclass:Definition
Type: fsm
autoCleared: true
Affected MO: fabric/lan/classes
```

fsmFailEpqosDefinitionDeploy

Fault Code: F999789

Message: [FSM:FAILED]: sam:dme:EpqosDefinitionDeploy

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999789
mibFaultName: fsmFailEpqosDefinitionDeploy
moClass: epqos:Definition
Type: fsm
autoCleared: true
Affected MO: org-[name]/ep-qos-[name]
```

fsmFailEpqosDefinitionDelTaskRemove

Fault Code: F999790

Message: [FSM:FAILED]: sam:dme:EpqosDefinitionDelTaskRemove

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999790
mibFaultName: fsmFailEpqosDefinitionDelTaskRemove
moClass: epqos:DefinitionDelTask
Type: fsm
autoCleared: true
Affected MO: org-[name]/ep-qos-deletion-[defIntId]
```

fsmFailEquipmentIOCardResetCmc

Fault Code: F999843

Message: [FSM:FAILED]: sam:dme:EquipmentIOCardResetCmc

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999843
mibFaultName: fsmFailEquipmentIOCardResetCmc
moClass: equipment:IOCard
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmFailMgmtControllerUpdateUCSManager

Fault Code: F999855

Message: [FSM:FAILED]: sam:dme:MgmtControllerUpdateUCSManager

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999855
mibFaultName: fsmFailMgmtControllerUpdateUCSManager
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
```

Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailMgmtControllerSysConfig

Fault Code: F999863

Message: [FSM:FAILED]: sam:dme:MgmtControllerSysConfig

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F999863
mibFaultName: fsmFailMgmtControllerSysConfig
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailAdaptorExtEthIfPathReset

Fault Code: F999892

Message: [FSM:FAILED]: sam:dme:AdaptorExtEthIfPathReset

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999892
mibFaultName: fsmFailAdaptorExtEthIfPathReset
moClass: adaptor:ExtEthIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/ext-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]
```

fsmFailAdaptorHostEthIfCircuitReset

Fault Code: F999897

Message: [FSM:FAILED]: sam:dme:AdaptorHostEthIfCircuitReset

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999897
mibFaultName: fsmFailAdaptorHostEthIfCircuitReset
moClass: adaptor:HostEthIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]
```

fsmFailAdaptorHostFcIfCircuitReset

Fault Code: F999898

Message: [FSM:FAILED]: sam:dme:AdaptorHostFcIfCircuitReset

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999898
```

```
mibFaultName: fsmFailAdaptorHostFcIfCircuitReset
moClass: adaptor:HostFcIf
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-fc-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]
```

fsmFailExtvmmProviderConfig

Fault Code: F999919

Message: [FSM:FAILED]: sam:dme:ExtvmmProviderConfig

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999919
mibFaultName: fsmFailExtvmmProviderConfig
moClass: extvmm:Provider
Type: fsm
autoCleared: true
Affected MO: sys/extvm-mgmt/vm-[name]
```

fsmFailExtvmmKeyStoreCertInstall

Fault Code: F999920

Message: [FSM:FAILED]: sam:dme:ExtvmmKeyStoreCertInstall

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999920
mibFaultName: fsmFailExtvmmKeyStoreCertInstall
moClass: extvmm:KeyStore
Type: fsm
autoCleared: true
Affected MO: sys/extvm-mgmt/key-store
```

fsmFailExtvmmSwitchDelTaskRemoveProvider

Fault Code: F999921

Message: [FSM:FAILED]: sam:dme:ExtvmmSwitchDelTaskRemoveProvider

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999921
mibFaultName: fsmFailExtvmmSwitchDelTaskRemoveProvider
moClass: extvmm:SwitchDelTask
Type: fsm
autoCleared: true
Affected MO: sys/extvm-mgmt/vsw-deltask-[swIntId]
```

fsmFailExtvmmMasterExtKeyConfig

Fault Code: F999938

Message: [FSM:FAILED]: sam:dme:ExtvmmMasterExtKeyConfig

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999938
mibFaultName: fsmFailExtvmmMasterExtKeyConfig
moClass: extvmm:MasterExtKey
Type: fsm
autoCleared: true
Affected MO: sys/extvm-mgmt/ext-key
```

fsmFailCapabilityUpdaterUpdater

Fault Code: F999944

Message: [FSM:FAILED]: sam:dme:CapabilityUpdaterUpdater

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999944
mibFaultName: fsmFailCapabilityUpdaterUpdater
moClass: capability:Updater
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/updater-[fileName]
```

fsmFailFirmwareDistributableDelete

Fault Code: F999946

Message: [FSM:FAILED]: sam:dme:FirmwareDistributableDelete

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999946
mibFaultName: fsmFailFirmwareDistributableDelete
moClass: firmware:Distributable
Type: fsm
autoCleared: true
Affected MO: sys/fw-catalogue/distrib-[name]
```

fsmFailCapabilityCatalogueDeployCatalogue

Fault Code: F999971

Message: [FSM:FAILED]: sam:dme:CapabilityCatalogueDeployCatalogue

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999971
mibFaultName: fsmFailCapabilityCatalogueDeployCatalogue
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmFailEquipmentFexRemoveFex

Fault Code: F999982

Message: [FSM:FAILED]: sam:dme:EquipmentFexRemoveFex

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999982
mibFaultName: fsmFailEquipmentFexRemoveFex
moClass: equipment:Fex
Type: fsm
autoCleared: true
Affected MO: sys/fex-[id]
```

fsmFailEquipmentLocatorLedSetFeLocatorLed

Fault Code: F999983

Message: [FSM:FAILED]: sam:dme:EquipmentLocatorLedSetFeLocatorLed

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999983
mibFaultName: fsmFailEquipmentLocatorLedSetFeLocatorLed
moClass: equipment:LocatorLed
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/locator-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/locator-led
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/locator-led
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/locator-led
```

Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/chassis-[id]/locator-led
Affected MO: sys/chassis-[id]/psu-[id]/locator-led
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/chassis-[id]/slot-[id]/locator-led
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/fex-[id]/locator-led
Affected MO: sys/fex-[id]/psu-[id]/locator-led
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/fex-[id]/slot-[id]/locator-led
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/rack-enclosure-[id]/psu-[id]/locator-led
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/rack-unit-[id]/ext-board-[id]/locator-led
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/rack-unit-[id]/locator-led
Affected MO: sys/rack-unit-[id]/psu-[id]/locator-led
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/switch-[id]/locator-led
Affected MO: sys/switch-[id]/psu-[id]/locator-led

fsmFailEquipmentChassisPowerCap

Fault Code: F999984

Message: [FSM:FAILED]: sam:dme:EquipmentChassisPowerCap

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F999984
mibFaultName: fsmFailEquipmentChassisPowerCap
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]

fsmFailEquipmentIOCardMuxOffline

Fault Code: F999985

Message: [FSM:FAILED]: sam:dme:EquipmentIOCardMuxOffline

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F999985
mibFaultName: fsmFailEquipmentIOCardMuxOffline
moClass: equipment:IOCard
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmFailComputePhysicalAssociate

Fault Code: F1000013

Message: [FSM:FAILED]: sam:dme:ComputePhysicalAssociate

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000013
mibFaultName: fsmFailComputePhysicalAssociate
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailComputePhysicalDisassociate

Fault Code: F1000014

Message: [FSM:FAILED]: sam:dme:ComputePhysicalDisassociate

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000014
mibFaultName: fsmFailComputePhysicalDisassociate
moClass: compute:Physical
```

```
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailComputePhysicalPowerCap

Fault Code: F1000015

Message: [FSM:FAILED]: sam:dme:ComputePhysicalPowerCap

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000015
mibFaultName: fsmFailComputePhysicalPowerCap
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailComputePhysicalDecommission

Fault Code: F1000016

Message: [FSM:FAILED]: sam:dme:ComputePhysicalDecommission

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000016
mibFaultName: fsmFailComputePhysicalDecommission
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailComputePhysicalSoftShutdown

Fault Code: F1000017

Message: [FSM:FAILED]: sam:dme:ComputePhysicalSoftShutdown

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000017
mibFaultName: fsmFailComputePhysicalSoftShutdown
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailComputePhysicalHardShutdown

Fault Code: F1000018

Message: [FSM:FAILED]: sam:dme:ComputePhysicalHardShutdown

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000018
mibFaultName: fsmFailComputePhysicalHardShutdown
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailComputePhysicalTurnup

Fault Code: F1000019

Message: [FSM:FAILED]: sam:dme:ComputePhysicalTurnup

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000019
mibFaultName: fsmFailComputePhysicalTurnup
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailComputePhysicalPowercycle

Fault Code: F1000020

Message: [FSM:FAILED]: sam:dme:ComputePhysicalPowercycle

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000020
mibFaultName: fsmFailComputePhysicalPowercycle
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailComputePhysicalHardreset

Fault Code: F1000021

Message: [FSM:FAILED]: sam:dme:ComputePhysicalHardreset

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
```

```
mibFaultCode: F1000021
mibFaultName: fsmFailComputePhysicalHardreset
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailComputePhysicalSoftreset

Fault Code: F1000022

Message: [FSM:FAILED]: sam:dme:ComputePhysicalSoftreset

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000022
mibFaultName: fsmFailComputePhysicalSoftreset
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailComputePhysicalSwConnUpd

Fault Code: F1000023

Message: [FSM:FAILED]: sam:dme:ComputePhysicalSwConnUpd

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000023
mibFaultName: fsmFailComputePhysicalSwConnUpd
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailComputePhysicalBiosRecovery

Fault Code: F1000024

Message: [FSM:FAILED]: sam:dme:ComputePhysicalBiosRecovery

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000024
mibFaultName: fsmFailComputePhysicalBiosRecovery
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailComputePhysicalCmosReset

Fault Code: F1000026

Message: [FSM:FAILED]: sam:dme:ComputePhysicalCmosReset

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000026
mibFaultName: fsmFailComputePhysicalCmosReset
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailComputePhysicalResetBmc

Fault Code: F1000027

Message: [FSM:FAILED]: sam:dme:ComputePhysicalResetBmc

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000027
mibFaultName: fsmFailComputePhysicalResetBmc
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailEquipmentIOCardResetIom

Fault Code: F1000028

Message: [FSM:FAILED]: sam:dme:EquipmentIOCardResetIom

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000028
mibFaultName: fsmFailEquipmentIOCardResetIom
moClass: equipment:IOCard
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmFailComputeRackUnitDiscover

Fault Code: F1000034

Message: [FSM:FAILED]: sam:dme:ComputeRackUnitDiscover

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000034
```

```
mibFaultName: fsmFailComputeRackUnitDiscover
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmFailLsServerConfigure

Fault Code: F1000035

Message: [FSM:FAILED]: sam:dme:LsServerConfigure

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000035
mibFaultName: fsmFailLsServerConfigure
moClass: ls:Server
Type: fsm
autoCleared: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fsmFailSwEthMonDeploy

Fault Code: F1000040

Message: [FSM:FAILED]: sam:dme:SwEthMonDeploy

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000040
mibFaultName: fsmFailSwEthMonDeploy
moClass: sw:EthMon
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/lanmon-eth/mon-[name]
```

fsmFailSwFcMonDeploy

Fault Code: F1000041

Message: [FSM:FAILED]: sam:dme:SwFcMonDeploy

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000041
mibFaultName: fsmFailSwFcMonDeploy
moClass: sw:FcMon
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/sanmon-fc/mon-[name]
```

fsmFailFabricSanCloudSwitchMode

Fault Code: F1000042

Message: [FSM:FAILED]: sam:dme:FabricSanCloudSwitchMode

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000042
mibFaultName: fsmFailFabricSanCloudSwitchMode
moClass: fabric:SanCloud
Type: fsm
autoCleared: true
Affected MO: fabric/san
```

fsmFailComputePhysicalUpdateExtUsers

Fault Code: F1000048

Message: [FSM:FAILED]: sam:dme:ComputePhysicalUpdateExtUsers

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
```

```
mibFaultCode: F1000048
mibFaultName: fsmFailComputePhysicalUpdateExtUsers
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailSysdebugTechSupportInitiate

Fault Code: F1000052

Message: [FSM:FAILED]: sam:dme:SysdebugTechSupportInitiate

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000052
mibFaultName: fsmFailSysdebugTechSupportInitiate
moClass: sysdebug:TechSupport
Type: fsm
autoCleared: true
Affected MO: sys/tech-support-files/tech-support-[creationTS]
```

fsmFailSysdebugTechSupportDeleteTechSupFile

Fault Code: F1000053

Message: [FSM:FAILED]: sam:dme:SysdebugTechSupportDeleteTechSupFile

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000053
mibFaultName: fsmFailSysdebugTechSupportDeleteTechSupFile
moClass: sysdebug:TechSupport
Type: fsm
autoCleared: true
Affected MO: sys/tech-support-files/tech-support-[creationTS]
```

fsmFailSysdebugTechSupportDownload

Fault Code: F1000054

Message: [FSM:FAILED]: sam:dme:SysdebugTechSupportDownload

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000054
mibFaultName: fsmFailSysdebugTechSupportDownload
moClass: sysdebug:TechSupport
Type: fsm
autoCleared: true
Affected MO: sys/tech-support-files/tech-support-[creationTS]
```

fsmFailComputePhysicalUpdateAdaptor

Fault Code: F1000083

Message: [FSM:FAILED]: sam:dme:ComputePhysicalUpdateAdaptor

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000083
mibFaultName: fsmFailComputePhysicalUpdateAdaptor
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailComputePhysicalActivateAdaptor

Fault Code: F1000084

Message: [FSM:FAILED]: sam:dme:ComputePhysicalActivateAdaptor

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000084
mibFaultName: fsmFailComputePhysicalActivateAdaptor
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailCapabilityCatalogueActivateCatalog

Fault Code: F1000085

Message: [FSM:FAILED]: sam:dme:CapabilityCatalogueActivateCatalog

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000085
mibFaultName: fsmFailCapabilityCatalogueActivateCatalog
moClass: capability:Catalogue
Type: fsm
autoCleared: true
Affected MO: capabilities
```

fsmFailCapabilityMgmtExtensionActivateMgmtExt

Fault Code: F1000086

Message: [FSM:FAILED]: sam:dme:CapabilityMgmtExtensionActivateMgmtExt

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000086
mibFaultName: fsmFailCapabilityMgmtExtensionActivateMgmtExt
moClass: capability:MgmtExtension
Type: fsm
autoCleared: true
Affected MO: capabilities/ep/mgmt-ext
```

fsmFailLicenseDownloaderDownload

Fault Code: F1000090

Message: [FSM:FAILED]: sam:dme:LicenseDownloaderDownload

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000090
mibFaultName: fsmFailLicenseDownloaderDownload
moClass: license:Downloader
Type: fsm
autoCleared: true
Affected MO: sys/license/dnld-[fileName]
```

fsmFailLicenseFileInstall

Fault Code: F1000091

Message: [FSM:FAILED]: sam:dme:LicenseFileInstall

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000091
mibFaultName: fsmFailLicenseFileInstall
moClass: license:File
Type: fsm
autoCleared: true
Affected MO: sys/license/file-[scope]:[id]
```

fsmFailLicenseFileClear

Fault Code: F1000092

Message: [FSM:FAILED]: sam:dme:LicenseFileClear

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000092
mibFaultName: fsmFailLicenseFileClear
moClass: license:File
Type: fsm
autoCleared: true
Affected MO: sys/license/file-[scope]:[id]
```

fsmFailLicenseInstanceUpdateFlexlm

Fault Code: F1000093

Message: [FSM:FAILED]: sam:dme:LicenseInstanceUpdateFlexlm

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000093
mibFaultName: fsmFailLicenseInstanceUpdateFlexlm
moClass: license:Instance
Type: fsm
autoCleared: true
Affected MO: sys/license/feature-[name]-[vendor]-[version]/inst-[scope]
```

fsmFailComputePhysicalConfigSoL

Fault Code: F1000123

Message: [FSM:FAILED]: sam:dme:ComputePhysicalConfigSoL

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000123
mibFaultName: fsmFailComputePhysicalConfigSoL
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
```

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]

fsmFailComputePhysicalUnconfigSoL

Fault Code: F1000124

Message: [FSM:FAILED]: sam:dme:ComputePhysicalUnconfigSoL

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1000124
mibFaultName: fsmFailComputePhysicalUnconfigSoL
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]

fsmFailPortPIoInCompatSfpPresence

Fault Code: F1000129

Message: [FSM:FAILED]: sam:dme:PortPIoInCompatSfpPresence

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1000129
mibFaultName: fsmFailPortPIoInCompatSfpPresence
moClass: port:PIo
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]

```
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]
```

fsmFailComputePhysicalDiagnosticInterrupt

Fault Code: F1000156

Message: [FSM:FAILED]: sam:dme:ComputePhysicalDiagnosticInterrupt

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000156
mibFaultName: fsmFailComputePhysicalDiagnosticInterrupt
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailSysdebugCoreDownload

Fault Code: F1000173

Message: [FSM:FAILED]: sam:dme:SysdebugCoreDownload

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000173
mibFaultName: fsmFailSysdebugCoreDownload
moClass: sysdebug:Core
Type: fsm
autoCleared: true
Affected MO: sys/corefiles/file-[name]|[switchId]
```

fsmFailEquipmentChassisDynamicReallocation

Fault Code: F1000174

Message: [FSM:FAILED]: sam:dme:EquipmentChassisDynamicReallocation

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000174
mibFaultName: fsmFailEquipmentChassisDynamicReallocation
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmFailComputePhysicalResetKvm

Fault Code: F1000203

Message: [FSM:FAILED]: sam:dme:ComputePhysicalResetKvm

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000203
mibFaultName: fsmFailComputePhysicalResetKvm
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailMgmtControllerOnline

Fault Code: F1000209

Message: [FSM:FAILED]: sam:dme:MgmtControllerOnline

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1000209
mibFaultName: fsmFailMgmtControllerOnline
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt

Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailComputeRackUnitOffline

Fault Code: F1000210

Message: [FSM:FAILED]: sam:dme:ComputeRackUnitOffline

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1000210
mibFaultName: fsmFailComputeRackUnitOffline
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]

fsmFailEquipmentLocatorLedSetFiLocatorLed

Fault Code: F1000227

Message: [FSM:FAILED]: sam:dme:EquipmentLocatorLedSetFiLocatorLed

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1000227
mibFaultName: fsmFailEquipmentLocatorLedSetFiLocatorLed
moClass: equipment:LocatorLed
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/locator-led

Affected MO: sys/chassis-[id]/blade-[slotId]/locator-led
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/locator-led
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/locator-led
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/chassis-[id]/locator-led
Affected MO: sys/chassis-[id]/psu-[id]/locator-led
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/chassis-[id]/slot-[id]/locator-led
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/fex-[id]/locator-led
Affected MO: sys/fex-[id]/psu-[id]/locator-led
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/fex-[id]/slot-[id]/locator-led
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/rack-enclosure-[id]/psu-[id]/locator-led
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/locator-led
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/locator-led
Affected MO: sys/rack-unit-[id]/ext-board-[id]/locator-led
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/rack-unit-[id]/locator-led
Affected MO: sys/rack-unit-[id]/psu-[id]/locator-led
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/locator-led
Affected MO: sys/switch-[id]/locator-led
Affected MO: sys/switch-[id]/psu-[id]/locator-led

fsmFailFabricEpMgrConfigure

Fault Code: F1000254

Message: [FSM:FAILED]: sam:dme:FabricEpMgrConfigure

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1000254
mibFaultName: fsmFailFabricEpMgrConfigure
moClass: fabric:EpMgr
Type: fsm
autoCleared: true
Affected MO: fabric/[id]

fsmFailVnicProfileSetDeployAlias

Fault Code: F1000263

Message: [FSM:FAILED]: sam:dme:VnicProfileSetDeployAlias

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000263
mibFaultName: fsmFailVnicProfileSetDeployAlias
moClass: vnic:ProfileSet
Type: fsm
autoCleared: true
Affected MO: fabric/lan/profiles
```

fsmFailSwPhysConfPhysical

Fault Code: F1000279

Message: [FSM:FAILED]: sam:dme:SwPhysConfPhysical

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000279
mibFaultName: fsmFailSwPhysConfPhysical
moClass: sw:Phys
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/phys
```

fsmFailExtvmmEpClusterRole

Fault Code: F1000294

Message: [FSM:FAILED]: sam:dme:ExtvmmEpClusterRole

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000294
mibFaultName: fsmFailExtvmmEpClusterRole
moClass: extvmm:Ep
Type: fsm
autoCleared: true
Affected MO: sys/extvm-mgmt
```

fsmFailVmLifeCyclePolicyConfig

Fault Code: F1000299

Message: [FSM:FAILED]: sam:dme:VmLifeCyclePolicyConfig

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000299
mibFaultName: fsmFailVmLifeCyclePolicyConfig
moClass: vm:LifeCyclePolicy
Type: fsm
autoCleared: true
Affected MO: org-[name]/vm-lc-policy
```

fsmFailEquipmentBeaconLedIlluminate

Fault Code: F1000302

Message: [FSM:FAILED]: sam:dme:EquipmentBeaconLedIlluminate

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000302
mibFaultName: fsmFailEquipmentBeaconLedIlluminate
moClass: equipment:BeaconLed
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/beacon
Affected MO: sys/chassis-[id]/blade-[slotId]/beacon
```

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/beacon
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/chassis-[id]/psu-[id]/beacon
Affected MO: sys/chassis-[id]/slot-[id]/beacon
Affected MO: sys/chassis-[id]/slot-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/chassis-[id]/xfm-slot-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/fex-[id]/beacon
Affected MO: sys/fex-[id]/psu-[id]/beacon
Affected MO: sys/fex-[id]/slot-[id]/beacon
Affected MO: sys/fex-[id]/slot-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/rack-enclosure-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/rack-enclosure-[id]/psu-[id]/beacon
Affected MO: sys/rack-unit-[id]/beacon
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/rack-unit-[id]/psu-[id]/beacon
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/beacon
Affected MO: sys/switch-[id]/psu-[id]/beacon
Affected MO: sys/switch-[id]/slot-[id]/beacon

fsmFailEtherServerIntFIoConfigSpeed

Fault Code: F1000311

Message: [FSM:FAILED]: sam:dme:EtherServerIntFIoConfigSpeed

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1000311
mibFaultName: fsmFailEtherServerIntFIoConfigSpeed
moClass: ether:ServerIntFIo
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/rack-unit-[id]/diag/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]

fsmFailComputePhysicalUpdateBIOS

Fault Code: F1000321

Message: [FSM:FAILED]: sam:dme:ComputePhysicalUpdateBIOS

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000321
mibFaultName: fsmFailComputePhysicalUpdateBIOS
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailComputePhysicalActivateBIOS

Fault Code: F1000322

Message: [FSM:FAILED]: sam:dme:ComputePhysicalActivateBIOS

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000322
mibFaultName: fsmFailComputePhysicalActivateBIOS
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailIdentIdentRequestUpdateIdent

Fault Code: F1000352

Message: [FSM:FAILED]: sam:dme:IdentIdentRequestUpdateIdent

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
```

```
mibFaultCode: F1000352
mibFaultName: fsmFailIdentIdentRequestUpdateIdent
moClass: ident:IdentRequest
Type: fsm
autoCleared: true
Affected MO: metaverse/metasys/IdentQ-[id]
```

fsmFailIdentMetaSystemSync

Fault Code: F1000353

Message: [FSM:FAILED]: sam:dme:IdentMetaSystemSync

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000353
mibFaultName: fsmFailIdentMetaSystemSync
moClass: ident:MetaSystem
Type: fsm
autoCleared: true
Affected MO: metaverse/metasys
```

fsmFailComputePhysicalResetIpmi

Fault Code: F1000366

Message: [FSM:FAILED]: sam:dme:ComputePhysicalResetIpmi

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000366
mibFaultName: fsmFailComputePhysicalResetIpmi
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailComputePhysicalFwUpgrade

Fault Code: F1000367

Message: [FSM:FAILED]: sam:dme:ComputePhysicalFwUpgrade

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000367
mibFaultName: fsmFailComputePhysicalFwUpgrade
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailComputeRackUnitAdapterReset

Fault Code: F1000368

Message: [FSM:FAILED]: sam:dme:ComputeRackUnitAdapterReset

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000368
mibFaultName: fsmFailComputeRackUnitAdapterReset
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmFailPortPIoInCompatSfpReplaced

Fault Code: F1000398

Message: [FSM:FAILED]: sam:dme:PortPIoInCompatSfpReplaced

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000398
mibFaultName: fsmFailPortPIoInCompatSfpReplaced
moClass: port:PIo
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO:
sys/chassis-[id]/slot-[id]/shared-io-module/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/aggr-port-[aggrPortId]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]
```

fsmFailExtpolEpRegisterFsm

Fault Code: F1000399

Message: [FSM:FAILED]: sam:dme:ExtpolEpRegisterFsm

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000399
mibFaultName: fsmFailExtpolEpRegisterFsm
moClass: extpol:Ep
Type: fsm
autoCleared: true
Affected MO: extpol
```

fsmFailExtpolRegistryCrossDomainConfig

Fault Code: F1000400

Message: [FSM:FAILED]: sam:dme:ExtpolRegistryCrossDomainConfig

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000400
mibFaultName: fsmFailExtpolRegistryCrossDomainConfig
moClass: extpol:Registry
Type: fsm
autoCleared: true
Affected MO: extpol/reg
```

fsmFailExtpolRegistryCrossDomainDelete

Fault Code: F1000401

Message: [FSM:FAILED]: sam:dme:ExtpolRegistryCrossDomainDelete

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000401
mibFaultName: fsmFailExtpolRegistryCrossDomainDelete
moClass: extpol:Registry
Type: fsm
autoCleared: true
Affected MO: extpol/reg
```

fsmFailNfsMountInstMount

Fault Code: F1000417

Message: [FSM:FAILED]: sam:dme:NfsMountInstMount

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000417
mibFaultName: fsmFailNfsMountInstMount
moClass: nfs:MountInst
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/nfs-mount-inst-[name]
```

fsmFailNfsMountInstUnmount

Fault Code: F1000418

Message: [FSM:FAILED]: sam:dme:NfsMountInstUnmount

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000418
mibFaultName: fsmFailNfsMountInstUnmount
moClass: nfs:MountInst
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/nfs-mount-inst-[name]
```

fsmFailNfsMountDefReportNfsMountSuspend

Fault Code: F1000419

Message: [FSM:FAILED]: sam:dme:NfsMountDefReportNfsMountSuspend

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000419
mibFaultName: fsmFailNfsMountDefReportNfsMountSuspend
moClass: nfs:MountDef
Type: fsm
autoCleared: true
Affected MO: nfs-ep/nfs-mount-def-[name]
```

fsmFailStorageSystemSync

Fault Code: F1000435

Message: [FSM:FAILED]: sam:dme:StorageSystemSync

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000435
mibFaultName: fsmFailStorageSystemSync
moClass: storage:System
Type: fsm
autoCleared: true
Affected MO: storage-ep/system
```

fsmFailFirmwareSystemDeploy

Fault Code: F1000448

Message: [FSM:FAILED]: sam:dme:FirmwareSystemDeploy

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000448
mibFaultName: fsmFailFirmwareSystemDeploy
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmFailFirmwareSystemApplyCatalogPack

Fault Code: F1000449

Message: [FSM:FAILED]: sam:dme:FirmwareSystemApplyCatalogPack

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000449
mibFaultName: fsmFailFirmwareSystemApplyCatalogPack
moClass: firmware:System
Type: fsm
autoCleared: true
Affected MO: sys/fw-system
```

fsmFailComputeServerDiscPolicyResolveScrubPolicy

Fault Code: F1000466

Message: [FSM:FAILED]: sam:dme:ComputeServerDiscPolicyResolveScrubPolicy

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000466
mibFaultName: fsmFailComputeServerDiscPolicyResolveScrubPolicy
moClass: compute:ServerDiscPolicy
Type: fsm
autoCleared: true
Affected MO: org-[name]/server-discovery
```

fsmFailSwFcSanBorderActivateZoneSet

Fault Code: F1000479

Message: [FSM:FAILED]: sam:dme:SwFcSanBorderActivateZoneSet

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000479
mibFaultName: fsmFailSwFcSanBorderActivateZoneSet
moClass: sw:FcSanBorder
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/border-fc
```

fsmFailExtpolEpRepairCert

Fault Code: F1000486

Message: [FSM:FAILED]: sam:dme:ExtpolEpRepairCert

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000486
mibFaultName: fsmFailExtpolEpRepairCert
moClass: extpol:Ep
Type: fsm
autoCleared: true
Affected MO: extpol
```

fsmFailPolicyControlEpOperate

Fault Code: F1000487

Message: [FSM:FAILED]: sam:dme:PolicyControlEpOperate

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000487
mibFaultName: fsmFailPolicyControlEpOperate
moClass: policy:ControlEp
Type: fsm
autoCleared: true
Affected MO: sys/control-ep-[type]
```

fsmFailPolicyPolicyScopeReleasePolicyFsm

Fault Code: F1000488

Message: [FSM:FAILED]: sam:dme:PolicyPolicyScopeReleasePolicyFsm

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000488
mibFaultName: fsmFailPolicyPolicyScopeReleasePolicyFsm
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]

fsmFailPolicyPolicyScopeReleaseOperationFsm

Fault Code: F1000489

Message: [FSM:FAILED]: sam:dme:PolicyPolicyScopeReleaseOperationFsm

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1000489
mibFaultName: fsmFailPolicyPolicyScopeReleaseOperationFsm
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]

fsmFailPolicyPolicyScopeReleaseStorageFsm

Fault Code: F1000490

Message: [FSM:FAILED]: sam:dme:PolicyPolicyScopeReleaseStorageFsm

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed

mibFaultCode: F1000490
mibFaultName: fsmFailPolicyPolicyScopeReleaseStorageFsm
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]

fsmFailPolicyPolicyScopeResolveManyPolicyFsm

Fault Code: F1000491

Message: [FSM:FAILED]: sam:dme:PolicyPolicyScopeResolveManyPolicyFsm

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1000491
mibFaultName: fsmFailPolicyPolicyScopeResolveManyPolicyFsm
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]

fsmFailPolicyPolicyScopeResolveManyOperationFsm

Fault Code: F1000492

Message: [FSM:FAILED]: sam:dme:PolicyPolicyScopeResolveManyOperationFsm

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000492
mibFaultName: fsmFailPolicyPolicyScopeResolveManyOperationFsm
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

fsmFailPolicyPolicyScopeResolveManyStorageFsm

Fault Code: F1000493

Message: [FSM:FAILED]: sam:dme:PolicyPolicyScopeResolveManyStorageFsm

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000493
mibFaultName: fsmFailPolicyPolicyScopeResolveManyStorageFsm
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

fsmFailPolicyPolicyScopeReleaseManyPolicyFsm

Fault Code: F1000494

Message: [FSM:FAILED]: sam:dme:PolicyPolicyScopeReleaseManyPolicyFsm

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000494
mibFaultName: fsmFailPolicyPolicyScopeReleaseManyPolicyFsm
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

fsmFailPolicyPolicyScopeReleaseManyOperationFsm

Fault Code: F1000495

Message: [FSM:FAILED]: sam:dme:PolicyPolicyScopeReleaseManyOperationFsm

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000495
mibFaultName: fsmFailPolicyPolicyScopeReleaseManyOperationFsm
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
```

policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]

fsmFailPolicyPolicyScopeReleaseManyStorageFsm

Fault Code: F1000496

Message: [FSM:FAILED]: sam:dme:PolicyPolicyScopeReleaseManyStorageFsm

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000496
mibFaultName: fsmFailPolicyPolicyScopeReleaseManyStorageFsm
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

fsmFailPolicyPolicyScopeResolveAllPolicyFsm

Fault Code: F1000497

Message: [FSM:FAILED]: sam:dme:PolicyPolicyScopeResolveAllPolicyFsm

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000497
mibFaultName: fsmFailPolicyPolicyScopeResolveAllPolicyFsm
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
```

extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]

fsmFailPolicyPolicyScopeResolveAllOperationFsm

Fault Code: F1000498

Message: [FSM:FAILED]: sam:dme:PolicyPolicyScopeResolveAllOperationFsm

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1000498
mibFaultName: fsmFailPolicyPolicyScopeResolveAllOperationFsm
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]

fsmFailPolicyPolicyScopeResolveAllStorageFsm

Fault Code: F1000499

Message: [FSM:FAILED]: sam:dme:PolicyPolicyScopeResolveAllStorageFsm

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical

Cause: fsm-failed
mibFaultCode: F1000499
mibFaultName: fsmFailPolicyPolicyScopeResolveAllStorageFsm
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]

fsmFailPolicyPolicyScopeReleaseAllPolicyFsm

Fault Code: F1000500

Message: [FSM:FAILED]: sam:dme:PolicyPolicyScopeReleaseAllPolicyFsm

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1000500
mibFaultName: fsmFailPolicyPolicyScopeReleaseAllPolicyFsm
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]

fsmFailPolicyPolicyScopeReleaseAllOperationFsm

Fault Code: F1000501

Message: [FSM:FAILED]: sam:dme:PolicyPolicyScopeReleaseAllOperationFsm

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000501
mibFaultName: fsmFailPolicyPolicyScopeReleaseAllOperationFsm
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

fsmFailPolicyPolicyScopeReleaseAllStorageFsm

Fault Code: F1000502

Message: [FSM:FAILED]: sam:dme:PolicyPolicyScopeReleaseAllStorageFsm

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000502
mibFaultName: fsmFailPolicyPolicyScopeReleaseAllStorageFsm
moClass: policy:PolicyScope
Type: fsm
autoCleared: true
Affected MO:
extpol/reg/clients/client-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/controllers/contro-[id]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/providers/prov-[type]/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
extpol/reg/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
Affected MO:
policy-ep/scope-cont-[appType]/context-[name]/scope-[policyType]-[resolveType]-[policyName]
```

fsmFailMgmtExportPolicyReportConfigCopy

Fault Code: F1000524

Message: [FSM:FAILED]: sam:dme:MgmtExportPolicyReportConfigCopy

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000524
mibFaultName: fsmFailMgmtExportPolicyReportConfigCopy
moClass: mgmt:ExportPolicy
Type: fsm
autoCleared: true
Affected MO: org-[name]/cfg-exp-policy-[name]
Affected MO: org-[name]/db-backup-policy-[name]
```

fsmFailExtpolProviderReportConfigImport

Fault Code: F1000525

Message: [FSM:FAILED]: sam:dme:ExtpolProviderReportConfigImport

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000525
mibFaultName: fsmFailExtpolProviderReportConfigImport
moClass: extpol:Provider
Type: fsm
autoCleared: true
Affected MO: extpol/reg/providers/prov-[type]
```

fsmFailObserveObservedResolvePolicyFsm

Fault Code: F1000531

Message: [FSM:FAILED]: sam:dme:ObserveObservedResolvePolicyFsm

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000531
mibFaultName: fsmFailObserveObservedResolvePolicyFsm
moClass: observe:Observed
Type: fsm
autoCleared: true
Affected MO: extpol/reg/clients/client-[id]/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/controllers/contro-[id]/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/providers/prov-[type]/observed-[dataSrcSysId]-[id]
Affected MO: observe/observed-[dataSrcSysId]-[id]
```

fsmFailObserveObservedResolveResourceFsm

Fault Code: F1000532

Message: [FSM:FAILED]: sam:dme:ObserveObservedResolveResourceFsm

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000532
mibFaultName: fsmFailObserveObservedResolveResourceFsm
moClass: observe:Observed
Type: fsm
autoCleared: true
Affected MO: extpol/reg/clients/client-[id]/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/controllers/contro-[id]/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/providers/prov-[type]/observed-[dataSrcSysId]-[id]
Affected MO: observe/observed-[dataSrcSysId]-[id]
```

fsmFailObserveObservedResolveVMFsm

Fault Code: F1000533

Message: [FSM:FAILED]: sam:dme:ObserveObservedResolveVMFsm

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000533
mibFaultName: fsmFailObserveObservedResolveVMFsm
moClass: observe:Observed
Type: fsm
autoCleared: true
Affected MO: extpol/reg/clients/client-[id]/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/controllers/contro-[id]/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/providers/prov-[type]/observed-[dataSrcSysId]-[id]
Affected MO: observe/observed-[dataSrcSysId]-[id]
```

fsmFailObserveObservedResolveControllerFsm

Fault Code: F1000534

Message: [FSM:FAILED]: sam:dme:ObserveObservedResolveControllerFsm

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000534
mibFaultName: fsmFailObserveObservedResolveControllerFsm
moClass: observe:Observed
Type: fsm
autoCleared: true
Affected MO: extpol/reg/clients/client-[id]/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/controllers/contro-[id]/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/observed-[dataSrcSysId]-[id]
Affected MO: extpol/reg/providers/prov-[type]/observed-[dataSrcSysId]-[id]
Affected MO: observe/observed-[dataSrcSysId]-[id]
```

fsmFailMgmtControllerRegistryConfig

Fault Code: F1000539

Message: [FSM:FAILED]: sam:dme:MgmtControllerRegistryConfig

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000539
```

mibFaultName: fsmFailMgmtControllerRegistryConfig
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt

```
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt
```

fsmFailGmetaHolderInventory

Fault Code: F1000648

Message: [FSM:FAILED]: sam:dme:GmetaHolderInventory

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000648
mibFaultName: fsmFailGmetaHolderInventory
moClass: gmeta:Holder
Type: fsm
autoCleared: true
Affected MO: gmeta/category-[category]-provider-[provider]
```

fsmFailComputePhysicalCimcSessionDelete

Fault Code: F1000649

Message: [FSM:FAILED]: sam:dme:ComputePhysicalCimcSessionDelete

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000649
mibFaultName: fsmFailComputePhysicalCimcSessionDelete
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailPolicyControlledTypeOperate

Fault Code: F1000652

Message: [FSM:FAILED]: sam:dme:PolicyControlledTypeOperate

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000652
mibFaultName: fsmFailPolicyControlledTypeOperate
moClass: policy:ControlledType
Type: fsm
autoCleared: true
Affected MO: sys/control-ep-[type]/cfg-backup-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/comm-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/datetime-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/discovery-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/dns-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/equipment-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/fabric-fw-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/fault-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/mep-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/monitoring-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/portconfig-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/powermgmt-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/psu-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/security-ctrl/ctrlled-type-[type]
Affected MO: sys/control-ep-[type]/storage-autoconfig-ctrl/ctrlled-type-[type]
```

fsmFailFabricVnetEpSyncEpPushVnetEpDeletion

Fault Code: F1000659

Message: [FSM:FAILED]: sam:dme:FabricVnetEpSyncEpPushVnetEpDeletion

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000659
mibFaultName: fsmFailFabricVnetEpSyncEpPushVnetEpDeletion
moClass: fabric:VnetEpSyncEp
Type: fsm
autoCleared: true
Affected MO: extpol/reg/providers/prov-[type]/syncEp
```

fsmFailSwEthLanFlowMonDeploy

Fault Code: F1000679

Message: [FSM:FAILED]: sam:dme:SwEthLanFlowMonDeploy

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000679
mibFaultName: fsmFailSwEthLanFlowMonDeploy
moClass: sw:EthLanFlowMon
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/ethlanflowmon
```

fsmFailMgmtIPv6IfAddrSwMgmtOobIpv6IfConfig

Fault Code: F1000705

Message: [FSM:FAILED]: sam:dme:MgmtIPv6IfAddrSwMgmtOobIpv6IfConfig

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000705
mibFaultName: fsmFailMgmtIPv6IfAddrSwMgmtOobIpv6IfConfig
moClass: mgmt:IPv6IfAddr
Type: fsm
autoCleared: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
```

Affected MO:
sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/fex-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO:
sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6

Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/switch-[id]/ifConfig-ipv6/if-ipv6
Affected MO: sys/switch-[id]/mgmt/if-[id]/ifConfig-ipv6/if-ipv6

fsmFailComputePhysicalUpdateBoardController

Fault Code: F1000707

Message: [FSM:FAILED]: sam:dme:ComputePhysicalUpdateBoardController

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1000707
mibFaultName: fsmFailComputePhysicalUpdateBoardController
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]

fsmFailExtvmmNetworkSetsDeploy

Fault Code: F1000743

Message: [FSM:FAILED]: sam:dme:ExtvmmNetworkSetsDeploy

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1000743
mibFaultName: fsmFailExtvmmNetworkSetsDeploy
moClass: extvmm:NetworkSets
Type: fsm
autoCleared: true
Affected MO: fabric/lan/network-sets

fsmFailComputePhysicalConfigBoard

Fault Code: F1000747

Message: [FSM:FAILED]: sam:dme:ComputePhysicalConfigBoard

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000747
mibFaultName: fsmFailComputePhysicalConfigBoard
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailComputePhysicalResetMemoryErrors

Fault Code: F1000748

Message: [FSM:FAILED]: sam:dme:ComputePhysicalResetMemoryErrors

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000748
mibFaultName: fsmFailComputePhysicalResetMemoryErrors
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailMgmtControllerExtMgmtInterfaceConfig

Fault Code: F1000754

Message: [FSM:FAILED]: sam:dme:MgmtControllerExtMgmtInterfaceConfig

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1000754
mibFaultName: fsmFailMgmtControllerExtMgmtInterfaceConfig
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt

```
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt
```

fsmFailComputeRackUnitCreateDhcpEntry

Fault Code: F1000755

Message: [FSM:FAILED]: sam:dme:ComputeRackUnitCreateDhcpEntry

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000755
mibFaultName: fsmFailComputeRackUnitCreateDhcpEntry
moClass: compute:RackUnit
Type: fsm
autoCleared: true
Affected MO: sys/rack-unit-[id]
```

fsmFailComputePhysicalServiceInfraDeploy

Fault Code: F1000756

Message: [FSM:FAILED]: sam:dme:ComputePhysicalServiceInfraDeploy

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000756
mibFaultName: fsmFailComputePhysicalServiceInfraDeploy
moClass: compute:Physical
Type: fsm
```

```
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailComputePhysicalServiceInfraWithdraw

Fault Code: F1000757

Message: [FSM:FAILED]: sam:dme:ComputePhysicalServiceInfraWithdraw

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000757
mibFaultName: fsmFailComputePhysicalServiceInfraWithdraw
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailSysdebugLogExportPolicyConfigure

Fault Code: F1000795

Message: [FSM:FAILED]: sam:dme:SysdebugLogExportPolicyConfigure

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000795
mibFaultName: fsmFailSysdebugLogExportPolicyConfigure
moClass: sysdebug:LogExportPolicy
Type: fsm
autoCleared: true
Affected MO: sys/sysdebug/log-export-policy
```

fsmFailComputePhysicalFlashController

Fault Code: F1000797

Message: [FSM:FAILED]: sam:dme:ComputePhysicalFlashController

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000797
mibFaultName: fsmFailComputePhysicalFlashController
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailStorageFlexFlashControllerMOpsReset

Fault Code: F1000858

Message: [FSM:FAILED]: sam:dme:StorageFlexFlashControllerMOpsReset

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000858
mibFaultName: fsmFailStorageFlexFlashControllerMOpsReset
moClass: storage:FlexFlashController
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-flexflash-[id]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]
```

fsmFailStorageFlexFlashControllerMOpsFormat

Fault Code: F1000859

Message: [FSM:FAILED]: sam:dme:StorageFlexFlashControllerMOpsFormat

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000859
mibFaultName: fsmFailStorageFlexFlashControllerMOpsFormat
moClass: storage:FlexFlashController
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-flexflash-[id]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]
```

fsmFailStorageFlexFlashControllerMOpsPair

Fault Code: F1000860

Message: [FSM:FAILED]: sam:dme:StorageFlexFlashControllerMOpsPair

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000860
mibFaultName: fsmFailStorageFlexFlashControllerMOpsPair
moClass: storage:FlexFlashController
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-flexflash-[id]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]
```

fsmFailComputePhysicalEnableCimcSecureBoot

Fault Code: F1000866

Message: [FSM:FAILED]: sam:dme:ComputePhysicalEnableCimcSecureBoot

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000866
```

```
mibFaultName: fsmFailComputePhysicalEnableCimcSecureBoot
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailIdentMetaSystemUcscUnivSync

Fault Code: F1000890

Message: [FSM:FAILED]: sam:dme:IdentMetaSystemUcscUnivSync

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000890
mibFaultName: fsmFailIdentMetaSystemUcscUnivSync
moClass: ident:MetaSystem
Type: fsm
autoCleared: true
Affected MO: metaverse/metasys
```

fsmFailMgmtControllerLockConfig

Fault Code: F1000973

Message: [FSM:FAILED]: sam:dme:MgmtControllerLockConfig

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000973
mibFaultName: fsmFailMgmtControllerLockConfig
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
```

sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailMgmtControllerPowerBudgetReclaimConfig

Fault Code: F1000974

Message: [FSM:FAILED]: sam:dme:MgmtControllerPowerBudgetReclaimConfig

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000974
mibFaultName: fsmFailMgmtControllerPowerBudgetReclaimConfig
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
```

```
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt
```

fsmFailComputePhysicalOobStorageAdminConfig

Fault Code: F1000975

Message: [FSM:FAILED]: sam:dme:ComputePhysicalOobStorageAdminConfig

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000975
mibFaultName: fsmFailComputePhysicalOobStorageAdminConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailEquipmentIOCardBaseFePresence

Fault Code: F1000980

Message: [FSM:FAILED]: sam:dme:EquipmentIOCardBaseFePresence

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000980
mibFaultName: fsmFailEquipmentIOCardBaseFePresence
moClass: equipment:IOCardBase
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmFailEquipmentIOCardBaseFeConn

Fault Code: F1000981

Message: [FSM:FAILED]: sam:dme:EquipmentIOCardBaseFeConn

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1000981
mibFaultName: fsmFailEquipmentIOCardBaseFeConn
moClass: equipment:IOCardBase
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmFailEquipmentPsuUpdatePSU

Fault Code: F1001027

Message: [FSM:FAILED]: sam:dme:EquipmentPsuUpdatePSU

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001027
mibFaultName: fsmFailEquipmentPsuUpdatePSU
moClass: equipment:Psu
Type: fsm
autoCleared: true
```

Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-enclosure-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]

fsmFailMgmtControllerUpdateCMC

Fault Code: F1001052

Message: [FSM:FAILED]: sam:dme:MgmtControllerUpdateCMC

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1001052
mibFaultName: fsmFailMgmtControllerUpdateCMC
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt

Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailMgmtControllerActivateCMC

Fault Code: F1001053

Message: [FSM:FAILED]: sam:dme:MgmtControllerActivateCMC

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1001053
mibFaultName: fsmFailMgmtControllerActivateCMC
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailMgmtControllerUpdateAdaptor

Fault Code: F1001054

Message: [FSM:FAILED]: sam:dme:MgmtControllerUpdateAdaptor

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1001054
mibFaultName: fsmFailMgmtControllerUpdateAdaptor
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailMgmtControllerActivateAdaptor

Fault Code: F1001055

Message: [FSM:FAILED]: sam:dme:MgmtControllerActivateAdaptor

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1001055
mibFaultName: fsmFailMgmtControllerActivateAdaptor
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailMgmtControllerUpdateRaidController

Fault Code: F1001056

Message: [FSM:FAILED]: sam:dme:MgmtControllerUpdateRaidController

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed

mibFaultCode: F1001056
mibFaultName: fsmFailMgmtControllerUpdateRaidController
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt

Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailMgmtControllerUpdateBoardController

Fault Code: F1001057

Message: [FSM:FAILED]: sam:dme:MgmtControllerUpdateBoardController

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1001057
mibFaultName: fsmFailMgmtControllerUpdateBoardController
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailFabricCartridgeSlotEpIdentify

Fault Code: F1001064

Message: [FSM:FAILED]: sam:dme:FabricCartridgeSlotEpIdentify

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1001064
mibFaultName: fsmFailFabricCartridgeSlotEpIdentify
moClass: fabric:CartridgeSlotEp
Type: fsm
autoCleared: true
Affected MO: fabric/server/chassis-[chassisId]/cart-slot-[slotId]

fsmFailFabricComputeMSlotEpIdentify

Fault Code: F1001065

Message: [FSM:FAILED]: sam:dme:FabricComputeMSlotEpIdentify

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001065
mibFaultName: fsmFailFabricComputeMSlotEpIdentify
moClass: fabric:ComputeMSlotEp
Type: fsm
autoCleared: true
Affected MO: fabric/server/chassis-[chassisId]/cart-slot-[slotId]/ins-[serverInstanceId]
```

fsmFailEquipmentChassisOobStorageAdminCfg

Fault Code: F1001066

Message: [FSM:FAILED]: sam:dme:EquipmentChassisOobStorageAdminCfg

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001066
mibFaultName: fsmFailEquipmentChassisOobStorageAdminCfg
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmFailComputeServerUnitDiscover

Fault Code: F1001072

Message: [FSM:FAILED]: sam:dme:ComputeServerUnitDiscover

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
```

mibFaultCode: F1001072
mibFaultName: fsmFailComputeServerUnitDiscover
moClass: compute:ServerUnit
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]

fsmFailMgmtIfFaPresence

Fault Code: F1001073

Message: [FSM:FAILED]: sam:dme:MgmtIfFaPresence

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1001073
mibFaultName: fsmFailMgmtIfFaPresence
moClass: mgmt:If
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fsmFailMgmtIfFaConn

Fault Code: F1001074

Message: [FSM:FAILED]: sam:dme:MgmtIfFaConn

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1001074
mibFaultName: fsmFailMgmtIfFaConn
moClass: mgmt:If
Type: fsm
autoCleared: true

Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt/if-[id]

```
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]
```

fsmFailEquipmentIOCardEvacuate

Fault Code: F1001085

Message: [FSM:FAILED]: sam:dme:EquipmentIOCardEvacuate

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001085
mibFaultName: fsmFailEquipmentIOCardEvacuate
moClass: equipment:IOCard
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmFailEquipmentIOCardResetEvacuate

Fault Code: F1001086

Message: [FSM:FAILED]: sam:dme:EquipmentIOCardResetEvacuate

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001086
mibFaultName: fsmFailEquipmentIOCardResetEvacuate
moClass: equipment:IOCard
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmFailComputePhysicalClearTPM

Fault Code: F1001091

Message: [FSM:FAILED]: sam:dme:ComputePhysicalClearTPM

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001091
mibFaultName: fsmFailComputePhysicalClearTPM
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailEquipmentIOCardResetPeerCmc

Fault Code: F1001142

Message: [FSM:FAILED]: sam:dme:EquipmentIOCardResetPeerCmc

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001142
mibFaultName: fsmFailEquipmentIOCardResetPeerCmc
moClass: equipment:IOCard
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fsmFailSwExtUtilityConfPortBreakout

Fault Code: F1001164

Message: [FSM:FAILED]: sam:dme:SwExtUtilityConfPortBreakout

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001164
mibFaultName: fsmFailSwExtUtilityConfPortBreakout
moClass: sw:ExtUtility
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/ext
```

fsmFailEquipmentSwitchIOCardEvacuate

Fault Code: F1001186

Message: [FSM:FAILED]: sam:dme:EquipmentSwitchIOCardEvacuate

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001186
mibFaultName: fsmFailEquipmentSwitchIOCardEvacuate
moClass: equipment:SwitchIOCard
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/sw-slot-[id]
```

fsmFailEquipmentSwitchIOCardResetEvacuate

Fault Code: F1001187

Message: [FSM:FAILED]: sam:dme:EquipmentSwitchIOCardResetEvacuate

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001187
mibFaultName: fsmFailEquipmentSwitchIOCardResetEvacuate
moClass: equipment:SwitchIOCard
Type: fsm
```

```
autoCleared: true
Affected MO: sys/chassis-[id]/sw-slot-[id]
```

fsmFailMorefImportRootApplyMoRefs

Fault Code: F1001201

Message: [FSM:FAILED]: sam:dme:MorefImportRootApplyMoRefs

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001201
mibFaultName: fsmFailMorefImportRootApplyMoRefs
moClass: moref:ImportRoot
Type: fsm
autoCleared: true
Affected MO: import-ref-root
```

fsmFailStorageEnclosureRemoveEnclosure

Fault Code: F1001209

Message: [FSM:FAILED]: sam:dme:StorageEnclosureRemoveEnclosure

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001209
mibFaultName: fsmFailStorageEnclosureRemoveEnclosure
moClass: storage:Enclosure
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]
Affected MO: sys/chassis-[id]/enc-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]
```

fsmFailMgmtControllerPowerCap

Fault Code: F1001224

Message: [FSM:FAILED]: sam:dme:MgmtControllerPowerCap

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001224
mibFaultName: fsmFailMgmtControllerPowerCap
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
```

Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailEquipmentSystemIOControllerResetCmc

Fault Code: F1001225

Message: [FSM:FAILED]: sam:dme:EquipmentSystemIOControllerResetCmc

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1001225
mibFaultName: fsmFailEquipmentSystemIOControllerResetCmc
moClass: equipment:SystemIOController
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/slot-[id]

fsmFailComputePhysicalDiskZoningInventory

Fault Code: F1001226

Message: [FSM:FAILED]: sam:dme:ComputePhysicalDiskZoningInventory

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001226
mibFaultName: fsmFailComputePhysicalDiskZoningInventory
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailEquipmentChassisProfileConfigure

Fault Code: F1001246

Message: [FSM:FAILED]: sam:dme:EquipmentChassisProfileConfigure

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001246
mibFaultName: fsmFailEquipmentChassisProfileConfigure
moClass: equipment:ChassisProfile
Type: fsm
autoCleared: true
Affected MO: org-[name]/cp-[name]
Affected MO: org-[name]/cp-tier-[name]/cp-[name]
```

fsmFailEquipmentChassisAssociate

Fault Code: F1001247

Message: [FSM:FAILED]: sam:dme:EquipmentChassisAssociate

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001247
mibFaultName: fsmFailEquipmentChassisAssociate
moClass: equipment:Chassis
Type: fsm
```

```
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmFailEquipmentChassisDisassociate

Fault Code: F1001248

Message: [FSM:FAILED]: sam:dme:EquipmentChassisDisassociate

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001248
mibFaultName: fsmFailEquipmentChassisDisassociate
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmFailEtherServerIntFIoConfig

Fault Code: F1001277

Message: [FSM:FAILED]: sam:dme:EtherServerIntFIoConfig

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001277
mibFaultName: fsmFailEtherServerIntFIoConfig
moClass: ether:ServerIntFIo
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/diag/port-[portId]
Affected MO: sys/chassis-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/[type]/port-[portId]
Affected MO: sys/chassis-[id]/sw-slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/rack-unit-[id]/diag/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]
```

fsmFailMgmtControllerEnableSecureBoot

Fault Code: F1001279

Message: [FSM:FAILED]: sam:dme:MgmtControllerEnableSecureBoot

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001279
mibFaultName: fsmFailMgmtControllerEnableSecureBoot
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
```

Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailEquipmentChassisChassisUpgrade

Fault Code: F1001282

Message: [FSM:FAILED]: sam:dme:EquipmentChassisChassisUpgrade

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1001282
mibFaultName: fsmFailEquipmentChassisChassisUpgrade
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]

fsmFailMgmtControllerUpdateSasExpander

Fault Code: F1001284

Message: [FSM:FAILED]: sam:dme:MgmtControllerUpdateSasExpander

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1001284
mibFaultName: fsmFailMgmtControllerUpdateSasExpander
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt

Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailMgmtControllerActivateSasExpander

Fault Code: F1001285

Message: [FSM:FAILED]: sam:dme:MgmtControllerActivateSasExpander

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1001285
mibFaultName: fsmFailMgmtControllerActivateSasExpander
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailMgmtControllerActivateLocalDisk

Fault Code: F1001286

Message: [FSM:FAILED]: sam:dme:MgmtControllerActivateLocalDisk

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1001286
mibFaultName: fsmFailMgmtControllerActivateLocalDisk
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt

Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailStorageLocalDiskUpdateLocalDisk

Fault Code: F1001287

Message: [FSM:FAILED]: sam:dme:StorageLocalDiskUpdateLocalDisk

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001287
mibFaultName: fsmFailStorageLocalDiskUpdateLocalDisk
moClass: storage:LocalDisk
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]
```

fsmFailMgmtControllerUpdateUCSManagerSP

Fault Code: F1001299

Message: [FSM:FAILED]: sam:dme:MgmtControllerUpdateUCSManagerSP

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001299
mibFaultName: fsmFailMgmtControllerUpdateUCSManagerSP
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
```

Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailComputePhysicalDiag

Fault Code: F1001300

Message: [FSM:FAILED]: sam:dme:ComputePhysicalDiag

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001300
mibFaultName: fsmFailComputePhysicalDiag
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailComputePhysicalCimcSecurityConfig

Fault Code: F1001301

Message: [FSM:FAILED]: sam:dme:ComputePhysicalCimcSecurityConfig

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001301
mibFaultName: fsmFailComputePhysicalCimcSecurityConfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailSwPortDiscoverDeploy

Fault Code: F1001330

Message: [FSM:FAILED]: sam:dme:SwPortDiscoverDeploy

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001330
mibFaultName: fsmFailSwPortDiscoverDeploy
moClass: sw:PortDiscover
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/discover
```

fsmFailPolicyPolicyScopeContReportPolicyFailFsm

Fault Code: F1001333

Message: [FSM:FAILED]: sam:dme:PolicyPolicyScopeContReportPolicyFailFsm

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001333
mibFaultName: fsmFailPolicyPolicyScopeContReportPolicyFailFsm
moClass: policy:PolicyScopeCont
Type: fsm
autoCleared: true
Affected MO: extpol/reg/clients/client-[id]/scope-cont-[appType]
Affected MO: extpol/reg/controllers/contro-[id]/scope-cont-[appType]
Affected MO: extpol/reg/providers/prov-[type]/scope-cont-[appType]
Affected MO: extpol/reg/scope-cont-[appType]
Affected MO: policy-ep/scope-cont-[appType]
```

fsmFailPolicyRequestorResolveFromCentral

Fault Code: F1001334

Message: [FSM:FAILED]: sam:dme:PolicyRequestorResolveFromCentral

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
```

mibFaultCode: F1001334
mibFaultName: fsmFailPolicyRequestorResolveFromCentral
moClass: policy:Requestor
Type: fsm
autoCleared: true
Affected MO:
sys/control-ep-[type]/source-[sourceDme]/context-[name]/scope-[policyType]-[resolveType]-[policyName]/requestor-[name]

fsmFailMgmtControllerKvmCert

Fault Code: F1001385

Message: [FSM:FAILED]: sam:dme:MgmtControllerKvmCert

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1001385
mibFaultName: fsmFailMgmtControllerKvmCert
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt

Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailEquipmentChassisFwUpgrade

Fault Code: F1001386

Message: [FSM:FAILED]: sam:dme:EquipmentChassisFwUpgrade

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1001386
mibFaultName: fsmFailEquipmentChassisFwUpgrade
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]

fsmFailFabricReservedVlanDeploy

Fault Code: F1001393

Message: [FSM:FAILED]: sam:dme:FabricReservedVlanDeploy

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001393
mibFaultName: fsmFailFabricReservedVlanDeploy
moClass: fabric:ReservedVlan
Type: fsm
autoCleared: true
Affected MO: fabric/lan/fab-reserved-vlans
```

fsmFailQosclassSlowDrainConfigQoSSlowDrain

Fault Code: F1001401

Message: [FSM:FAILED]: sam:dme:QosclassSlowDrainConfigQoSSlowDrain

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001401
mibFaultName: fsmFailQosclassSlowDrainConfigQoSSlowDrain
moClass: qosclass:SlowDrain
Type: fsm
autoCleared: true
Affected MO: fabric/lan/classes/slow-drain
```

fsmFailQosclassSlowDrainConfigQoSSlowDrainFex

Fault Code: F1001402

Message: [FSM:FAILED]: sam:dme:QosclassSlowDrainConfigQoSSlowDrainFex

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001402
mibFaultName: fsmFailQosclassSlowDrainConfigQoSSlowDrainFex
moClass: qosclass:SlowDrain
Type: fsm
autoCleared: true
Affected MO: fabric/lan/classes/slow-drain
```

fsmFailComputePhysicalExecuteActions

Fault Code: F1001415

Message: [FSM:FAILED]: sam:dme:ComputePhysicalExecuteActions

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001415
mibFaultName: fsmFailComputePhysicalExecuteActions
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailEquipmentChassisFanPolicyConfig

Fault Code: F1001416

Message: [FSM:FAILED]: sam:dme:EquipmentChassisFanPolicyConfig

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001416
mibFaultName: fsmFailEquipmentChassisFanPolicyConfig
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmFailComputePhysicalNvmeSwitchRecovery

Fault Code: F1001417

Message: [FSM:FAILED]: sam:dme:ComputePhysicalNvmeSwitchRecovery

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001417
mibFaultName: fsmFailComputePhysicalNvmeSwitchRecovery
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailMgmtControllerUpdateStorageServerCMC

Fault Code: F1001419

Message: [FSM:FAILED]: sam:dme:MgmtControllerUpdateStorageServerCMC

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001419
mibFaultName: fsmFailMgmtControllerUpdateStorageServerCMC
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
```

Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailMgmtControllerActivateStorageServerCMC

Fault Code: F1001420

Message: [FSM:FAILED]: sam:dme:MgmtControllerActivateStorageServerCMC

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1001420
mibFaultName: fsmFailMgmtControllerActivateStorageServerCMC
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt

Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailMgmtControllerUpgradeBoardController

Fault Code: F1001421

Message: [FSM:FAILED]: sam:dme:MgmtControllerUpgradeBoardController

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1001421
mibFaultName: fsmFailMgmtControllerUpgradeBoardController
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:

sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailComputePhysicalReinitializeVirtualDrive

Fault Code: F1001435

Message: [FSM:FAILED]: sam:dme:ComputePhysicalReinitializeVirtualDrive

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1001435
mibFaultName: fsmFailComputePhysicalReinitializeVirtualDrive
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]

```
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailEquipmentChassisPowerSavePolicyConfig

Fault Code: F1001444

Message: [FSM:FAILED]: sam:dme:EquipmentChassisPowerSavePolicyConfig

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001444
mibFaultName: fsmFailEquipmentChassisPowerSavePolicyConfig
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

fsmFailFcpoolOuisDeploy

Fault Code: F1001446

Message: [FSM:FAILED]: sam:dme:FcpoolOuisDeploy

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001446
mibFaultName: fsmFailFcpoolOuisDeploy
moClass: fcpool:Ouis
Type: fsm
autoCleared: true
Affected MO: sys/switch-[id]/oui-pool-[name]
```

fsmFailMgmtControllerUpdateSecureFPGA

Fault Code: F1001450

Message: [FSM:FAILED]: sam:dme:MgmtControllerUpdateSecureFPGA

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1001450
mibFaultName: fsmFailMgmtControllerUpdateSecureFPGA
moClass: mgmt:Controller
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt

Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fsmFailPfcWatchDogConfigPfcWatchDog

Fault Code: F1001451

Message: [FSM:FAILED]: sam:dme:PfcWatchDogConfigPfcWatchDog

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1001451
mibFaultName: fsmFailPfcWatchDogConfigPfcWatchDog
moClass: pfc:WatchDog
Type: fsm
autoCleared: true
Affected MO: fabric/lan/watch-dog

fsmFailMgmtControllerConfigureSwPersonalities

Fault Code: F1001467

Message: [FSM:FAILED]: sam:dme:MgmtControllerConfigureSwPersonalities

Explanation:

None set.

Recommended Action:

None set.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: F1001467
mibFaultName: fsmFailMgmtControllerConfigureSwPersonalities
moClass: mgmt:Controller
Type: fsm

autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/adaptor-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/sas-expander-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/board/storage-[type]-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/boardController/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/enc-[id]/disk-[id]/mgmt
Affected MO:
sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]/mgmt
Affected MO: sys/chassis-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/mgmt
Affected MO: sys/chassis-[id]/sas-expander-[id]/mgmt
Affected MO: sys/chassis-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/shared-io-module/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/storage-[type]-[id]/mgmt
Affected MO: sys/chassis-[id]/sw-slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/sas-expander-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/frucomp-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/enc-[id]/disk-[id]/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt

```
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt
```

fsmFailComputePhysicalConfigureServerPersonality

Fault Code: F1001468

Message: [FSM:FAILED]: sam:dme:ComputePhysicalConfigureServerPersonality

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001468
mibFaultName: fsmFailComputePhysicalConfigureServerPersonality
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailComputePhysicalBiosPasswordReset

Fault Code: F1001471

Message: [FSM:FAILED]: sam:dme:ComputePhysicalBiosPasswordReset

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001471
mibFaultName: fsmFailComputePhysicalBiosPasswordReset
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailComputePhysicalCimcSecurityUnconfig

Fault Code: F1001472

Message: [FSM:FAILED]: sam:dme:ComputePhysicalCimcSecurityUnconfig

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001472
mibFaultName: fsmFailComputePhysicalCimcSecurityUnconfig
moClass: compute:Physical
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/chassis-[id]/cartridge-[slotId]/server-[serverInstanceId]
Affected MO: sys/rack-unit-[id]
```

fsmFailEquipmentChassisPowerExtendedPolicyConfig

Fault Code: F1001496

Message: [FSM:FAILED]: sam:dme:EquipmentChassisPowerExtendedPolicyConfig

Explanation:

None set.

Recommended Action:

None set.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: F1001496
mibFaultName: fsmFailEquipmentChassisPowerExtendedPolicyConfig
moClass: equipment:Chassis
Type: fsm
autoCleared: true
Affected MO: sys/chassis-[id]
```

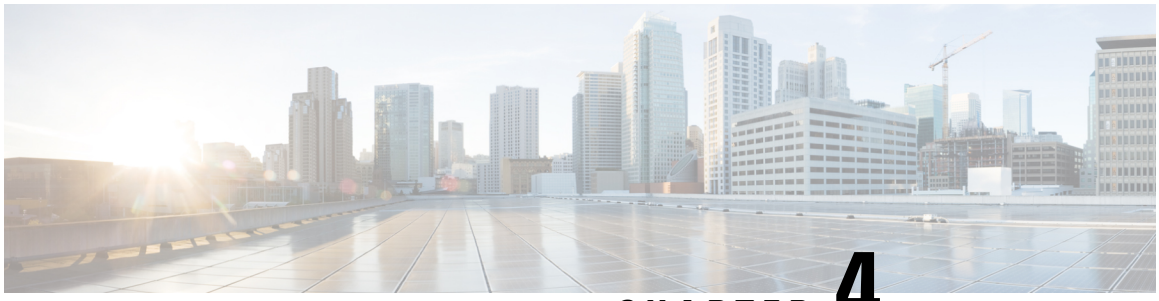

CHAPTER 4

Call Home Faults

- About Call Home Messages, on page 2451
- Cisco UCS Faults that Raise Call Home Alerts, on page 2451
- Cisco UCS Faults and Call Home Priority Levels, on page 2463

About Call Home Messages

When you configure Call Home to send messages, Cisco UCS Manager executes the appropriate command line interface (CLI) show command and attaches the command output to the message.

Cisco UCS delivers Call Home messages in the following formats:

- The short text format—A one- or two-line description of the fault that is suitable for pagers or printed reports.
- Full text format—Fully formatted message with detailed information that is suitable for human reading.
- XML machine readable format—Uses Extensible Markup Language (XML) and Adaptive Messaging Language (AML) XML schema definition (XSD). The AML XSD is published on the Cisco.com website at https://www.cisco.com/. The XML format enables communication with the Cisco Systems Technical Assistance Center.

Cisco UCS Faults that Raise Call Home Alerts

If Smart Call Home is configured in the Cisco UCS instance, every fault listed in this section raises a Smart Call Home event to the Cisco Smart Call Home system.

Note All Cisco UCS Manager faults that raise Call Home alerts are documented in “Cisco UCS Faults” The type of Call Home alert is included in the CallHome line of the Fault Details section for each fault.

You can also find additional information about Call Home faults in the Unified Computing System (UCS) section of Monitoring Details for Cisco SMARTnet Service with Smart Call Home.

Faults Raised by a Fabric Interconnect

Diagnostic Faults Raised by a Fabric Interconnect

TestFabricPort

Details

Severity: Major

Customer Notification: Yes

Service Request: Yes, if ports_failed > 25%

Cisco UCS Manager CLI: show diagnostic result module all

Call Home Support: 3.0, 3.1

Explanation

This fault typically occurs because one or more of the ports have failed this diagnostic test either during the Power-On-Self-Test or during the run time monitoring. As a result, the Cisco UCS Manager shuts down the affected ports. The network connectivity to the devices connected on the failed ports is affected.

Recommended Action

If you see this fault, take the following actions:

1. If the failed port or ports are located in an expansion module, remove and re-insert the module.

   Follow the instructions outlined in the hardware installation guide for the fabric interconnect on how to insert the modules.
2. Remove and re-insert the SFP or SFP+ and ensure the SFP or SFP+ is seated properly.
3. Insert the suspected faulty SFP or SFP+ into a working port. If the working port becomes faulty, then the SFP or SFP+ is faulty. Consider replacing the faulty SFP or SFP+.
4. If the SFP or SFP+ is working, then the module hardware is faulty.
   a. a. If the fixed module is affected, consider replacing the fabric interconnect.
   b. b. If an expansion module is affected, consider replacing the faulty module.

   Schedule a downtime for the Cisco UCS instance to replace the hardware.

TestForwardingEngine

Details

Severity: Major

Customer Notification: Yes

Service Request: Yes, if ports_failed > 25%

Cisco UCS Manager CLI: show diagnostic result module all

Call Home Support: 3.0, 3.1

Explanation

One or more ports have failed this diagnostic test either during the Power-On-Self-Test or during the run time monitoring. As a result, the Cisco UCS Manager shuts down the affected ports. The network connectivity to the devices connected on the failed ports is affected.

Recommended Action

If you see this fault, take the following actions:

1. If the failed port or ports are located in an expansion module, remove and re-insert the module.

   Follow the instructions outlined in the hardware installation guide for the fabric interconnect on how to insert the modules.

2. Remove and re-insert the SFP or SFP+ and ensure the SFP or SFP+ is seated properly.
3. Insert the suspected faulty SFP or SFP+ into a working port. If the working port becomes faulty, then the SFP or SFP+ is faulty. Consider replacing the faulty SFP or SFP+.
4. If the SFP or SFP+ is working, then the module hardware is faulty.
   a. If the fixed module is affected, consider replacing the fabric interconnect.
   b. If an expansion module is affected, consider replacing the faulty module.

   Schedule a downtime for the Cisco UCS instance to replace the hardware.

TestForwardingEnginePort

Details

Severity: Major

Customer Notification: Yes

Service Request: Yes, if ports_failed > 25%

Cisco UCS Manager CLI: show diagnostic result module all

Call Home Support: 3.0, 3.1

Explanation

One or more ports have failed this diagnostic test either during the Power-On-Self-Test or during the run time monitoring. As a result, the Cisco UCS Manager shuts down the affected ports. the network connectivity to the devices connected on the failed ports is affected.

Recommended Action

If you see this fault, take the following actions:

1. If the failed port or ports are located in an expansion module, remove and re-insert the module.

   Follow the instructions outlined in the hardware installation guide for the fabric interconnect on how to insert the modules.

2. Remove and re-insert the SFP or SFP+ and ensure the SFP or SFP+ is seated properly.
3. Insert the suspected faulty SFP or SFP+ into a working port. If the working port becomes faulty, then the SFP or SFP+ is faulty. Consider replacing the faulty SFP or SFP+.
4. If the SFP or SFP+ is working, then the module hardware is faulty.
   a. If the fixed module is affected, consider replacing the fabric interconnect.

b. If an expansion module is affected, consider replacing the faulty module.

Schedule a downtime for the Cisco UCS instance to replace the hardware.

TestFrontPort

Details

Severity: Major

Customer Notification: Yes

Service Request: Yes, if ports_failed > 25%

Cisco UCS Manager CLI: show diagnostic result module all

Call Home Support: 3.0, 3.1

Explanation

One or more ports have failed this diagnostic test either during the Power-On-Self-Test or during the run time monitoring. As a result, the Cisco UCS Manager shuts down the affected ports. The network connectivity to the devices connected on the failed ports is affected.

Recommended Action

If you see this fault, take the following actions:

1. Move the devices connected on the affected ports to other functional ports of the fabric interconnect or to another fabric interconnect.
2. If the failed port or ports are located in an expansion module, do the following:
   a. Remove and re-insert the module.

      Follow the instructions outlined in the hardware installation guide for the fabric interconnect on how to insert the modules.

   b. If the problem persists and if all of the ports are required to be functional on the fabric interconnect, schedule a downtime and replace the expansion module.
3. If the failed port or ports are located in the fixed module and all ports are required to be functional on the fabric interconnect, schedule a downtime and replace the fabric interconnect.

TestInbandPort

Details

Severity: Major

Customer Notification: Yes

Service Request: Yes

Cisco UCS Manager CLI: show diagnostic result module all

Call Home Support: 3.0, 3.1

Explanation

This fault typically occurs because the inband connectivity to the fabric interconnect is experiencing a failure. The fabric interconnect uses inband connectivity for the control plane protocols to connect to

peers such as servers, LAN switches, and SAN switches. Examples of these control plane protocols include DCX, STP, LACP, and FSPF. If a fabric interconnect cannot run the appropriate control plane protocols, it can no longer function and the Cisco UCS Manager shuts down all of the ports on the fabric interconnect to avoid topology problems.

Recommended Action

If you see this fault, schedule a downtime and replace the fabric interconnect.

TestFabricEngine

Details

Severity: Major

Customer Notification: Yes

Service Request: Yes

Cisco UCS Manager CLI: show diagnostic result module all

Call Home Support: 3.0, 3.1

Explanation

This fault typically occurs because the fabric ASIC has reported a major failure. Connectivity among all of the ports depends upon the fabric ASIC. Therefore, the Cisco UCS Manager shuts down all ports on the fabric interconnect.

Recommended Action

If you see this fault, schedule a downtime and replace the fabric interconnect.

TestSPROM

Details

Severity: Major

Customer Notification: Yes

Service Request: Yes

Cisco UCS Manager CLI: show diagnostic result module all

Call Home Support: 3.0, 3.1

Explanation

This fault typically occurs when the Cisco UCS Manager cannot bring the affected module online because the module type is unidentified. For the expansion modules, the Cisco UCS Manager determines the module type from information stored in the module SPROM. If you see this error, the checksum calculation for the SPROM content has most likely failed.

This fault can only occur on the expansion modules. It cannot occur on the fixed module.

Recommended Action

If you see this fault, take the following actions:

1. Move the devices connected on the affected ports to other functional ports of the fabric interconnect or to another fabric interconnect:
2. Remove and re-insert the module to ensure that all pins are in good contact with the backplane.

Follow the instructions outlined in the hardware installation guide for the fabric interconnect on how to insert the modules.

3. If the problem persists after multiple re-insertions, schedule a downtime and replace the faulty module.

TestOBFL

Details

Severity: Minor

Customer Notification: Yes

Service Request: Yes

Cisco UCS Manager CLI: show diagnostic result module all

Call Home Support: 3.0, 3.1

Explanation

This fault typically occurs because the onboard fault logging (OBFL) flash has failed. The Cisco UCS Manager logs hardware failure messages to this flash component. That logging function is lost. However, other logs, such as the syslog, are not affected and can continue to work normally.

This fault does not affect the normal operation of the fabric interconnect. The fault can only occur on the fixed module. It cannot occur on the expansion modules.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at http://www.cisco.com/tac. Also refer to the *Release Notes for Cisco UCS Manager and the Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

TestLED

Details

Severity: Minor

Customer Notification: Yes

Service Request: No

Cisco UCS Manager CLI: show diagnostic result module all

Call Home Support: 3.0, 3.1

Explanation

This fault typically occurs when the Cisco UCS Manager cannot access the LED controls on a module. However, because the LED control uses the same transport mechanism that controls other key components on a module, this fault can indicate other failures. This fault can be caused by a bent pin on the module or fabric interconnect.

This fault can only occur on the expansion modules. It cannot occur on the fixed module.

Recommended Action

If you see this fault, take the following actions:

1. Move the devices connected on the affected ports to other functional ports of the fabric interconnect or to another fabric interconnect:

2. Remove and re-insert the module to ensure that all pins are in good contact with the backplane.

   Follow the instructions outlined in the hardware installation guide for the fabric interconnect on how to insert the modules.

3. If this failure continues after re-insertion, insert this module into a known good fabric interconnect to determine whether the same failure occurs.

4. If the problem persists, schedule a downtime and replace the faulty module.

Environmental Faults Raised by a Fabric Interconnect

Temperature Alarm

Details

Severity: Major

Customer Notification: Yes

Service Request: No

Cisco UCS Manager CLI: show environment

Call Home Support: 3.0, 3.1

Explanation

This fault typically occurs because the temperature sensor reports that the affected chassis has exceeded the major or minor threshold value and is at a dangerously high temperature. If the operating temperature is not reduced, the system shuts down the affected chassis to avoid causing permanent damage. The chassis is powered back on after the temperature returns to a reasonable level.

Each chassis needs at least seven functional fans to maintain operating temperature.

Recommended Action

If you see this fault, take the following actions:

1. If the fault report includes **fan_failure_found**, do the following:

   a. In either the Cisco UCS Manager CLI or the Cisco UCS Manager GUI, check the status of the affected fan to determine whether the temperature-related alarm is due to the failure of a fan.

   b. Ensure that a minimum of seven fans are installed in the chassis and are functioning properly.

   c. Check the fan-related syslog messages to see the exact reason for the failure. For example, the fan may have become non-operational.

   d. Replace the faulty fan to resolve the issue.

2. If the fault report includes **temp_current >= maj_threshold or temp_current =< min_threshold**, do the following:

   a. In either the Cisco UCS Manager CLI or the Cisco UCS Manager GUI, view the acceptable temperature and voltage parameters and determine how much of the outlet or inlet temperature has reached or exceeded over the major or minor threshold value.

   b. Verify the following to ensure that the site where the chassis is installed meets the site guidelines:

      - The area is dry, clean, well-ventilated and air-conditioned.

- The air conditioner is working correctly and maintains an ambient temperature of 0 to 40 degrees C.
- The chassis is installed in an open rack whenever possible. If the installation on an enclosed rack is unavoidable, ensure that the rack has adequate ventilation.
- The ambient airflow is unblocked to ensure normal operation. If the airflow is blocked or restricted, or if the intake air is too warm, an over temperature condition can occur.
- The clearance around the ventilation openings of the chassis are at least 6 inches (15.24 cm).
- The chassis is not in an overly congested rack or is not directly next to another equipment rack. Heat exhaust from other equipment can enter the inlet air vents and cause an over temperature condition.
- The equipment near the bottom of a rack is not generating excessive heat that is drawn upward and into the intake ports of the chassis. The warm air can cause an over temperature condition.
- The cables from other equipment does not obstruct the airflow through the chassis or impair access to the power supplies or the cards. Route the cables away from any field-replaceable components to avoid disconnecting cables unnecessarily for equipment maintenance or upgrades.

PowerSupplyFailure

Details

Severity: Major

Customer Notification: Yes

Service Request: Yes

Cisco UCS Manager CLI: show environment

Call Home Support: 3.0, 3.1

Explanation

This fault typically occurs because a failure was recorded in the affected power supply unit and the affected component is working with only one power supply unit.

Recommended Action

If you see this fault, take the following actions:

1. Check the power supply unit that has the problem, as follow:
   - In the Cisco UCS Manager CLI, execute the show environment power command
   - In the Cisco UCS Manager GUI, view the PSUs tab of the Chassis node on the Equipment tab.
2. Verify that the power cord is properly connected to the power supply and to the power source.
3. Ensure that the fabric interconnect is supplied with 220V (this is the only supported power supply configuration).
4. Ensure that the power supply is properly inserted and plugged in.

5. If problem persists, remove and re-insert the power-supply unit.
6. If the power supply light is still not green and the status continues to show fail or shutdown, replace the faulty power supply unit.

TEMPERATURE_ALARM --- Sensor

Details

Severity: Major

Customer Notification: Yes

Service Request: Yes

Cisco UCS Manager CLI: show environment

Call Home Support: 3.0, 3.1

Explanation

This fault typically occurs because the Cisco UCS Manager cannot access a temperature sensor. As a result, the Cisco UCS Manager cannot monitor or regulate the temperature for the affected component. The affected temperature sensor could be for a chassis, power supply, or module.

Recommended Action

If you see this fault, take the following actions:

1. View the logs to determine the set of sensors that has failed, as follow:
   - In the Cisco UCS Manager CLI, execute the show logging command
   - In the Cisco UCS Manager GUI, view the logs under the Faults, Events, and Audit Log node on the Admin tab.
2. If the failed sensors are on an expansion module or a power supply, do the following:
   a. Remove and re-insert the power supply or module.

      Follow the instructions outlined in the hardware installation guide for the fabric interconnect on how to insert the modules.

   b. If the failure continues to persist after multiple re-insertions, replace the faulty power supply unit or the module.
3. If the failed sensors are on the fixed module, replace the fabric interconnect as it can no longer regulate and monitor the chassis temperature.

TestFAN -- fan speed speed out of range >= expected. speed rpm

Details

Severity: Major

Customer Notification: Yes

Service Request: No

Cisco UCS Manager CLI: show environment

Call Home Support: 3.0, 3.1

Explanation

This fault typically occurs because the Cisco UCS Manager has detected a fan that is running at a speed that is too slow or too fast. A malfunctioning fan can affect the operating temperature of the chassis.

Recommended Action

If you see this fault, take the following actions:

1. If the fan is running below the expected speed, ensure that the fan blades are not blocked.
2. If the fan is running above the expected speed, remove and re-insert the fan.

Multiple fans missing or failed

Details

Severity: Major

Customer Notification: Yes

Service Request: No

Cisco UCS Manager CLI: show environment

Explanation

This fault typically occurs because the Cisco UCS Manager has detected multiple fan failures. The malfunctioning fans can result in high operating temperatures, affect performance, and cause the Cisco UCS Manager to shut down the affected component.

Recommended Action

If you see this fault, take the following actions:

1. If the chassis fans have failed, do the following:
   a. Check the fan status.
   b. Ensure that at least seven fans are installed and functioning properly.
   c. Check the fan-related syslog messages to see the exact reason for the failure. The fans may have become non-operational.
   d. Replace the faulty fans to resolve the issue.
2. If the power supply fans have failed and the power supply is operational, do the following:
   a. Check the fan status.
   b. Remove and re-insert the power supply and verify whether the fan is operational.
   c. If the problem persists, replace the power-supply.

One fan missing or failed

Details

Severity: Minor

Customer Notification: Yes

Service Request: No

Cisco UCS Manager CLI: show environment

Call Home Support: 3.0, 3.1

Explanation

This fault typically occurs because the Cisco UCS Manager has determined that a single fan is missing or has failed. A single missing or malfunctioning fan does not affect performance. A minimum of seven fans are required for a chassis to be operational.

Recommended Action

If you see this fault, take the following actions:

1. If the chassis fans have failed, do the following:
   a. Check the fan status.
   b. Ensure that at least seven fans are installed and functioning properly.
   c. Check the fan-related syslog messages to see the exact reason for the failure. The fan may have become non-operational.
   d. Replace the faulty fan to resolve the issue.
2. If the power supply fans have failed and the power supply is operational, do the following:
   a. Check the fan status.
   b. Remove and re-insert the power supply and verify whether the fan is operational.
   c. If the problem persists, replace the power-supply.

Faults Raised by Syslog

No license installed for feature, is on grace license, will expire in DD HH

Details

Severity: Major

Customer Notification: Yes

Service Request: No

Cisco UCS Manager CLI: show logging

Call Home Support: 3.0, 3.1

Explanation

The evaluation license installed for the affected feature is running under a grace period. The grace period expires on the date shown in the log at which time the Cisco UCS Manager disables the feature. To obtain more details, follow the instructions in the licensing chapter of the *Cisco UCS Manager CLI Configuration Guide* or the *Cisco UCS Manager GUI Configuration Guide*.

The impact on performance depends upon whether the affected feature is implemented.

Recommended Action

If you see this fault, obtain a permanent license for the affected feature through one of the following channels:

- Contact your local Cisco sales representative.
- Use the ordering tool at https://www.cisco.com/c/en/us/buy.html.

License for feature, will expire in HH MM

Details

Severity: Major

Customer Notification: Yes

Service Request: No

Cisco UCS Manager CLI: show logging

Call Home Support: 3.0, 3.1

Explanation

The evaluation license installed for the affected feature expires within the number of hours and minutes listed in the alert. When that period expires, the Cisco UCS Manager disables the feature. To obtain more details, follow the instructions in the licensing chapter of the *Cisco UCS Manager CLI Configuration Guide* or the *Cisco UCS Manager GUI Configuration Guide*.

Recommended Action

If you see this fault, obtain a permanent license for the affected feature through one of the following channels:

- Contact your local Cisco sales representative.
- Use the ordering tool at https://www.cisco.com/c/en/us/buy.html.

License has expired for feature

Details

Severity: Major

Customer Notification: Yes

Service Request: No

Cisco UCS Manager CLI: show logging

Call Home Support: 3.0, 3.1

Explanation

The evaluation license installed for the affected feature has expired, and the Cisco UCS Manager has disabled the feature. To obtain more details, follow the instructions in the licensing chapter of the *Cisco UCS Manager CLI Configuration Guide* or the *Cisco UCS Manager GUI Configuration Guide*.

Recommended Action

If you see this fault, obtain a permanent license for the affected feature through one of the following channels:

- Contact your local Cisco sales representative.

- Use the ordering tool at https://www.cisco.com/c/en/us/buy.html.

License file is missing for feature

Details

Severity: Major

Customer Notification: Yes

Service Request: No

Cisco UCS Manager CLI: show logging

Call Home Support: 3.0, 3.1

Explanation

The previously installed license for the affected feature is missing from the fabric interconnect configuration storage, and the Cisco UCS Manager has disabled the feature. This issue can occur in rare circumstances such as flash corruption. To obtain more details, follow the instructions in the licensing chapter of the *Cisco UCS Manager CLI Configuration Guide* or the *Cisco UCS Manager GUI Configuration Guide*.

Recommended Action

If you see this fault, re-install the license from the license backup.

Cisco UCS Faults and Call Home Priority Levels

Because Call Home is present across several Cisco product lines, Call Home has developed its own standardized priority levels. The following table describes how the underlying Cisco UCS fault levels map to the Call Home priority levels.

Table 1: Mapping of Cisco UCS Faults and Call Home Priority Levels

dsfdsUCS Fault	Call Home Priority	SCH Priority
—	(9) Catastrophic	—
—	(8) Disaster	—
—	(7) Fatal	—
(6) Critical	(6) Critical	Major
(5) Major	(5) Major	Major
(4) Minor	(4) Minor	Minor
(3) Warning	(3) Warning	Minor
—	(2) Notification	Minor
(1) Info	(1) Normal	Minor

When Call Home information is communicated in an e-mail format, the priority levels and faults appear in the following places.

- The SCH priority is communicated in the e-mail subject line.
- The Call Home priority is communicated as a “Severity Level:” header to the e-mail message.
- The UCS fault information is attached in the body of the e-mail.
- The UCS fault severity is identified within the attachment as “severity=”.

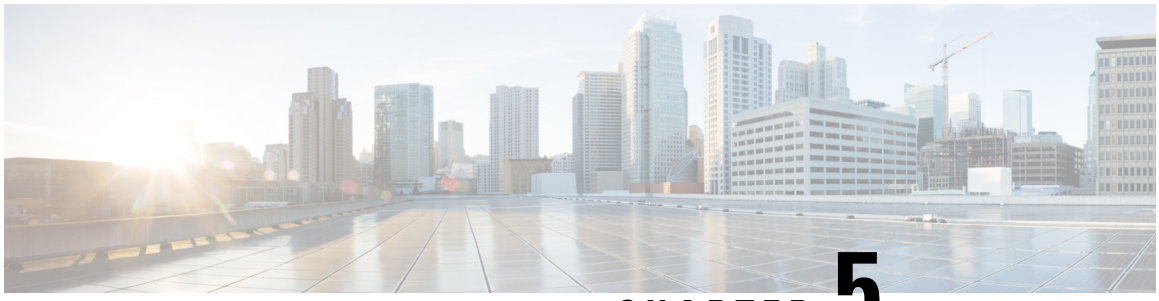

CHAPTER 5

Transient Faults

- Troubleshooting Transient Faults, on page 2465
- Initial Setup and Discovery Faults, on page 2465
- Virtual Machine Startup Faults, on page 2469

Troubleshooting Transient Faults

Transient faults can occur during initial set up and discovery or when a server or virtual machine starts up. You can typically ignore these transient faults, as Cisco UCS Manager clears them automatically.

Initial Setup and Discovery Faults

The table describes the transient faults that you may see during the initial setup and discovery process. The Cisco UCS Manager clears these faults. If you see them during the initial setup or discovery process, you can safely ignore these faults.

Table 2: Transient Faults that Occur during Initial Setup and Discovery Process

Fault Code	Fault Text	Description
F16581	[FSM:STAGE:RETRY:]: user configuration to	The FSM could not send the user configuration to the subordinate fabric interconnect during the initial cluster configuration or the setup.
F16745	[FSM:STAGE:RETRY:]: QoS Classification Definition classification configuration on	The FSM could not send the quality of the service configuration to the subordinate fabric interconnect during the initial cluster configuration or the setup.
F16725	[FSM:STAGE:RETRY:]: VM profile configuration on external VM	The FSM could not send the VM profile configuration to the the subordinate fabric interconnect during the initial cluster configuration or the setup.

Fault Code	Fault Text	Description
F16580	[FSM:STAGE:RETRY:]: realm configuration to [illegible]	The FSM could not send the security configuration to the subordinate fabric interconnect during the initial cluster configuration or the setup.
F16724	[FSM:STAGE:RETRY:]: external VM manager configuration on local [illegible]	The FSM could not send the VM manager configuration to the primary fabric interconnect during the initial cluster configuration or the setup.
F16579	[FSM:STAGE:RETRY:]: external aaa server configuration to [illegible]	The FSM could not send the security configuration to the subordinate fabric interconnect during the initial cluster configuration or the setup.
F16749	[FSM:STAGE:RETRY:]: Uplink eth port configuration on [illegible]	The FSM could not send the eth-uplink configuration to the fabric interconnects during the initial cluster configuration or the setup.
F16749	[FSM:STAGE:RETRY:]: internal network configuration on [illegible]	The FSM could not send the internal network configuration to the fabric interconnects during the initial cluster configuration or the setup.
F16749	[FSM:STAGE:RETRY:]: Uplink fc port configuration on [illegible]	The FSM could not send the fibre channel uplink configuration to the fabric interconnects during the initial cluster configuration or the setup.
F16680	[FSM:STAGE:RETRY:]: Enable virtual interface on local fabric [illegible]	The FSM could not send the virtual interface configuration to the fabric interconnects during the initial cluster configuration or the setup.
F16579	[FSM:STAGE:RETRY:]: keyring configuration on [illegible]	The FSM could not send the security configuration to the subordinate fabric interconnect during the initial cluster configuration or the setup.

Fault Code	Fault Text	Description
F16539	[FSM:STAGE:RETRY:]: Fabric interconnect mode configuration to primary (FSM-STAGE:sam:dme:FabricCloudSwitchModeConfigPe)	The FSM could not send the end-host mode configuration on to the primary fabric interconnect during the initial cluster configuration or the setup.
F0429	Fabric Interconnect A, HA functionality not ready	The cluster configuration cannot be completed until the chassis discovery is completed.
F0400	Chassis 1 connectivity configuration: un-acknowledged	Cisco UCS Manager discovered the chassis with only one link in the first attempt although the chassis discovery policy is configured for four links. Cisco UCS Manager reacknowledges the chassis to activate the other links.
F0401	IOM 1/2 (B) current connectivity does not match discovery policy: unsupported-connectivity	Cisco UCS Manager discovered the chassis with only one link in the first attempt although the chassis discovery policy is configured for four links. Cisco UCS Manager can clear this fault when the communication is established between the chassis and the fabric interconnect with that link.
F0440	Chassis discovery policy conflict: Link IOM 1/2/2 to fabric interconnect B:1/1 not configured	Cisco UCS Manager discovered the chassis with only one link in the first attempt although the chassis discovery policy is configured for four links. Until the discovery is successful with that link, the remaining links cannot be marked as active. Cisco UCS Manager can clear this fault when the communication is established between the chassis and the fabric interconnect with that link.
F0332	AssociatePnuOSLocalDiskConfig fails with Service-Unavailable	During discovery, the server association failed due to an error when configuring the local disk controller. The associated remote invocation error code is 4106.

Fault Code	Fault Text	Description
F0277	ether port 1 on fabric interconnect B oper state: link-up, reason: FEX not configured	Cisco UCS Manager discovered the chassis with only one link in the first attempt although the chassis discovery policy is configured for four links. Until the discovery is successful with that link, the remaining links cannot be marked as active.
F0276	ether port 4 on fabric interconnect B oper state: link-down, reason: Link failure or not-connected	One or more of the links on the chassis flapped during the initial discovery. This fault is generated when the link is down during the flapping.
F0206	Adapter 1/2/1 is unreachable	During discovery, the adapter information cannot be accessed from the server. This fault clears as soon as the information is available.
F0283	VIF 1 / 2 B-42/44 down, reason: Bound Physical Interface Down	The internal VIF that Cisco UCS Manager uses during discovery failed.
F0367	No link between IOM port 1/1/2 and fabric interconnect A:1/2	The ethernet server ports flapped on the fabric interconnect during the initial discovery, because the discovery policy was configured for more than one link. Cisco UCS Manager clears this fault when the initial discovery succeeds with one link and the other links can be marked as active.
F0399	Current connectivity for chassis 1 does not match discovery policy: unsupported-connectivity	Cisco UCS Manager discovered the chassis with only one link in the first attempt although the chassis discovery policy is configured for four links. Until the discovery is successful with that link, the remaining links cannot be marked as active.
F16520	[FSM:STAGE:RETRY:]: Identify pre-boot environment agent on server 1/2 (FSM:STAGE:sam:dme:ComputeBladeDiscoverPnOS:Identify)	The FSM failed to identify the pre-boot environment on the server during discovery.

Fault Code	Fault Text	Description
F77960	[FSM:STAGE:REMOTE-ERROR]: Result: end-point-unavailable Code: unspecified Message: Waiting for BIOS POST Completion information from IBMC(sam:dme:ComputeBladeDiscoverBiosPostCompletion)	The FSM did not receive a response from the server during discovery and is waiting for the BIOS POST completion information.
F0320	Server 1/1 (service profile:) has an invalid FRU: mismatch-identity-unestablishable	Cisco UCS Manager could not identify the FRUs from the servers during initial discovery.
F77959	[FSM:STAGE:REMOTE-ERROR]: Result: unidentified-fail Code: ERR-0505-IBMC-fru-retrieval-error Message: Could not get Fru from 7f060101, dn=fabric/server/chassis-1/slot-1 (sam:dme:FabricComputeSlotEpIdentify:ExecuteLocal)	Cisco UCS Manager could not identify the FRUs from the servers during initial discovery.
F16406	[FSM:STAGE:RETRY:]: triggering chassis discovery via IOM [FSM:STAGE:sam:dme:EquipmentChassisDiscoverChassis)	In a cluster configuration, after Cisco UCS Manager discovers the chassis through the I/O module connected to the primary fabric interconnect, it raises discovery through the I/O module connected to the secondary fabric interconnect. F0401

Virtual Machine Startup Faults

When you power on a virtual machine on a server that has network adaptors connected to a distributed virtual wwitch through a port profile, the Events tab of the VMware vCenter may display the following event:

```
Virtual machine powered On with vNICs connected to dvPorts that have a
port level configuration, which might be different from the dvPort group
configuration.
```

If you see this event, you can safely ignore it.

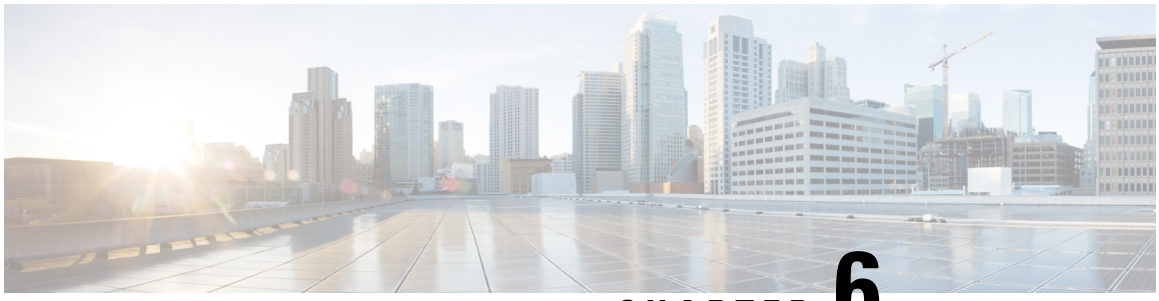

CHAPTER 6

System Event Log Messages

- Information about System Event Log Messages, on page 2471
- SEL File, on page 2471
- SEL Policy, on page 2471

Information about System Event Log Messages

The system event log (SEL) resides on the CIMC in NVRAM. It records most server-related events, such as over- and under-voltage, temperature events, fan events, events from the BIOS, and so on. It also records platform errors such as memory errors, CPU errors, and so on.

The SEL is mainly used for troubleshooting purposes. UCSM uses SEL records to provide mechanisms for proactive health monitoring of the system (for example, faults and error statistics).

Note For more information about the SEL, including how to view the SEL for each server and configure the SEL policy, see the Cisco UCS configuration guides accessible through the Cisco UCS B-Series Servers Documentation Roadmap.

SEL File

The SEL file is approximately 40 KB in size, and no further events are recorded when it is full. It must be cleared before additional events can be recorded.

SEL Policy

The SEL policy can be configured to backup the SEL to a remote server, and, optionally to clear the SEL after a backup operation occurs. A back up operation can be triggered based upon the following actions defined by the user as a part of SEL backup policy.

- On SEL log full
- On change of server association

- On expiration of timer interval, and so on.

User can also manually backup or clear the SEL.

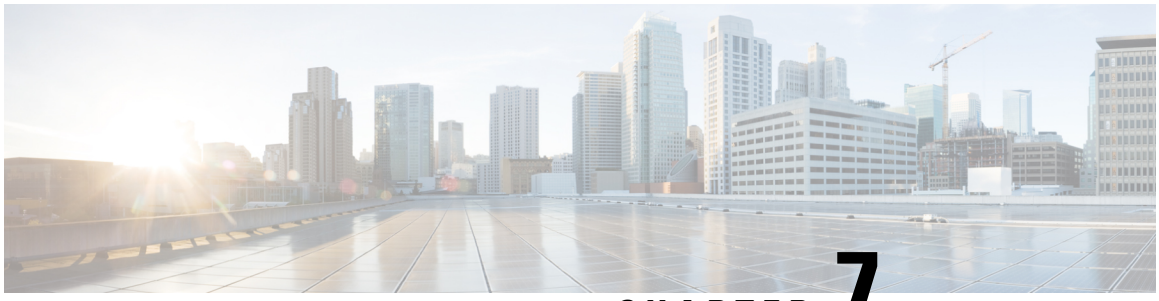

CHAPTER 7

Baseboard Management Controller Messages

- Baseboard Management Controller Messages, on page 2473
- SEL Device, on page 2473
- Sensor Data Record Device, on page 2474
- Event Receiver Device, on page 2475
- BMC Commands, on page 2475
- SEL Record Examples, on page 2479

Baseboard Management Controller Messages

The Baseboard Management Controller (BMC) provides the interface to the System Event Log (SEL). The SEL can be accessed from the system side as well as from other external interfaces. The BMC uses a message handler to route messages between the different interfaces. It also monitors and manages the system board, including temperatures and voltages.

SEL Device

The SEL is a nonvolatile repository for system events. The SEL device is separate from the event receiver device and accepts commands to manage the contents.

SEL Event Record Format

The SEL messages are logged as a 16 byte string that contains the information about the change that triggered the message.

- Byte 1 and 2 is the record ID.
- Byte 3 is the record type.
- Bytes 4, 5, 6, and 7 is the timestamp
- Bytes 8 and 9 is the generator ID.
- Byte 10 is the version of the event message format.
- Byte 11 is the sensor type.

- Byte 12 is the sensor number.
- Byte 13 is either the event dir (assertion/deassertion event) or the event type.
- Byte 14, 15, and 16 are links to the event data field contents and determines whether the sensor class is about threshold, discrete, or original equipment manufacturer (OEM) settings.

Sensor Initialization Agent

The Sensor Initialization Agent is not a logical device, but a collection of functions and services specific to handling SDR information. The Sensor Initialization Agent works directly with the content of SDRs, in particular, with the sensor data records and the device locator records.

The agent uses the SDR information for sensor and IPMB device initialization during system startup. The agent interprets sensor data records and is directed by the init required fields to load thresholds to sensors that have the threshold initialization required bit set in the SDR records. Other bits in the record direct the agent to enable sensors and devices that come up with sensors, events, or both disabled.

The agent function runs at system power-up and at any system hard resets. We recommend that you run the agent function when the BMC first receives standby power.

In systems that implement power management, the system management software takes additional steps to restore intermediate settings after the system has powered up.

Sensor Data Record Device

The Sensor Data Record (SDR) device provides the interface to the sensor data records. A set of commands store and retrieve sensor data records. The SDR device provides a set of commands for discovering, configuring, and accessing sensors.

SDR Repository Interface

The SDR repository holds sensor, device locator, and entity association records for all sensors in the platform management subsystem. The BMC provides this interface to the SDR repository. The sensor data records can be accessed by using SDR commands.

Modal and Nonmodal SDR Repositories

There are two SDR repository implementations: modal and nonmodal.

A modal SDR repository is only updated when the controller is in SDR repository update mode. SDR information is kept in nonvolatile storage devices. Lengthy write operations during update can be required, which can interfere with other controller operations. For example, the SDR repository can be stored in a flash device that also holds a portion of the management controller code. A modal SDR repository implementation allows the functions associated with that code to be temporarily unavailable during the update process.

A nonmodal SDR repository can be written to at any time. Writing to the SDR does not impact the operation of other commands in the management controller.

Event Receiver Device

Event messages are special messages sent to management controllers when they detect significant or critical system management events. This includes messages for events such as temperature threshold exceeded, voltage threshold exceeded, power fault, and so on. The device generating an event message notifies the system by sending the message to the event receiver device.

Messages from the event receiver device are directly written into the system event log. The appropriate **Add SEL Entry** command is sent directly to the SEL device.

BMC Commands

SEL, SDR, and event commands are designed so that the devices that implement those command sets are isolated from the contents of the message. The devices do not interpret the messages. The event receiver device receives and routes event messages. The SEL devices retrieve and store log entries. The SDR devices retrieve and store sensor data records.

SEL Device Commands

These are the available SEL device commands:

Table 3: SEL Device Commands

Command	Description
Get SEL Info	This command returns the number of entries in the SEL, the SEL command version, and the timestamp for the most recent entry and delete or clear.
Get SEL Allocation Info	This command returns the number of possible allocation units, the amount of usable free space (in allocation units), the allocation unit size (in bytes), and the size of the largest contiguous free region (in allocation units). The allocation unit size is the number of bytes in which storage is allocated. For example, if a 16 byte record is to be added, and the SEL has a 32 byte allocation unit size, the record takes up 32 bytes of storage.
Reserve SEL	This command sets the present owner of the SEL, as identified by the software ID or by the requester slave address from the command. The reservation process provides a limited amount of protection at repository access from the Intelligent Platform Management Interface (IPMB) when records are being deleted or incrementally read.

Command	Description
Get SEL Entry	This command retrieves entries from the SEL. The record data field in the response returns the 16 bytes of data from the SEL event record.
Add SEL Entry	This command enables the BIOS to add records to the system event log. Normally, the SEL device and the event receiver service are incorporated into the same management controller. In this case, BIOS or the system SMI handler adds its own events to the SEL by formatting an event message and sending it to the SEL device rather than by using this command.
Partial Add SEL Entry	This command is a version of the **Add SEL Entry** command. It allows the record to be incrementally added to the SEL. This command must be preceded by a **Reserve SEL** command. The first partial add must be to offset 0000h, and subsequent partial adds must be done sequentially, with no gaps or overlap between the adds.
Delete SEL Entry	This command deletes the specified entry in the SEL.
Clear SEL	This command erases the SEL contents. This process can take several seconds, based on the type of storage device. The command also shows the status of the erasure.
Get SEL Time	This command returns the time from the SEL device,which uses it for event timestamps.
Set SEL Time	This command initializes the time setting in the SEL device, which uses it for event timestamps.
Get Auxiliary Log Status	This command allows remote software to know whether new information has been added to machine check architecture (MCA) log. The MCA log is a storage area that can be implemented in Intel Itanium-based computer systems and holds information from an MCA handler running from system firmware.
Set Auxiliary Log Status	This command can be used by system software or firmware to set the status returned by the Get Auxiliary Log Status command. Some implementations mght use a private mechanism to set this status, in which case this command can not be provided even if the Get Auxiliary Log Status command is provided.

SDR Repository Device Commands

The following commands control the SDR repository device actions:

Table 4: SDR Repository Device Commands

Command	Description
Get SDR Repository Info	This command returns the SDR command version for the SDR repository. It also returns a timestamp for the last add, delete, or clear commands.
Get SDR Repository Allocation Info	This command returns the number of possible allocation units, the amount of usable free space (in allocation units), the allocation unit size (in bytes), and the size of the largest contiguous free region (in allocation units). The allocation unit size is the number of bytes in which storage is allocated. For example, if a 20 byte record is to be added, and the SDR repository has a 16 byte allocation unit size, then the record would take up 32 bytes of storage.
Reserve SDR Repository	This command sets the present owner of the repository, as identified by the software ID or the requester slave address from the command. The reservation process provides a limited amount of protection on repository access from the IPMB when records are being deleted or incrementally read.
Get SDR	This command returns the sensor record specified by the record ID. The command also accepts a byte range specification that allows a selected portion of the record to be retrieved (incremental read). The **Reserve SDR Repository** command must be issued first for an incremental read to an offset other than 0000h. (The **Get SDR Repository** Info command should be used to verify the version of the SDR repository before sending other SDR repository commands. The command format and operation could change between versions.)
Add SDR	This command adds the specified sensor record to the SDR repository and returns its record ID. The data passed in the request must contain all of the SDR data.
Partial Add SDR	This command is a version of the **Add SDR** command that allows the record to be incrementally added to the repository. This command must be preceded by a **Reserve SDR Repository** command. The first partial add must be to offset 0000h, and partial adds must be done sequentially, with no gaps or overlap between the adds.

Command	Description
Delete SDR	This command deletes the sensor record specified by record ID. The requester ID and the reservation ID must also match the owner of the SDR repository.
Clear SDR Repository	This command clears all records from the SDR repository and reinitializes the SDR repository subsystem. The requestor ID and reservation ID information must match the present owner of the SDR repository. We recommend that this command not be used within your utilities and system management software.
Get SDR Repository Time	This command returns the time setting from the SDR repository device, which the SDR repository devices uses for tracking when changes to the SDR repository are made.
Set SDR Repository Time	This command initializes the time setting in the SDR repository device, which the SDR repository devices uses for tracking when changes to the SDR repository are made.
Enter SDR Repository Update Mode	This command enters a mode that allows a subset of normal commands. Available commands are **Get Device ID**, **Get SDR**, **Add SDR**, **Partial Add SDR** and **Clear SDR Repository**.
Exit SDR Repository Update Mode	This command exits the SDR repository update mode and restores normal use of all commands.
Run Initialization Agent	This command runs the initialization agent and can also check the status of the agent.

Event Receiver Commands

The following commands can be executed on the event receiver device:

Table 5: Event Receiver Commands

Command	Description
Set Event Receiver	This is a global command to tell a controller where to send event messages. The slave address and LUN of the event receiver must be provided. A value FFh for the event receiver slave address disables the generation of event messages.
Get Event Receiver	This is a global command to retrieve the present setting for the event receiver slave address and LUN.

Command	Description
Platform Event Message	This command is a request for the BMC to process event data that the command contains. The data is logged to the SEL.

SEL Record Examples

Examples that are reported to the SEL Repository are provided here. The raw record contains 16 bytes and are dislayed in the examples as hexadecimal values. Following the arrow is the translation of the data. The |-pipes are separators for ease of reading the translation.

Device Presence Changes

These are examples of presence assertions. This shows a boot-up process.

```
54 01 02 3c 0c 00 00 01 00 04 12 83 6f 01 ff 00   ------------> 154 | 01/01/1970 00:52:12
| BIOS
| System Event #0x83 | OEM System Boot Event |  | Asserted
55 01 02 3d 0c 00 00 20 00 04 25 53 08 01 ff ff   ------------> 155 | 01/01/1970 00:52:13
| BMC
  | Entity presence BIOS_POST_CMPLT #0x53 | Device Present | Asserted
56 01 02 54 0c 00 00 20 00 04 25 52 08 00 ff ff   ------------> 156 | 01/01/1970 00:52:36
| BMC
  | Entity presence MAIN_POWER #0x52 | Device Absent | Asserted
57 01 02 25 00 00 00 20 00 04 25 41 08 01 ff ff   ------------> 157 | 01/01/1970 00:00:37
| BMC
  | Entity presence MEZZ_PRS #0x41 | Device Present | Asserted
58 01 02 25 00 00 00 20 00 04 25 43 08 00 ff ff   ------------> 158 | 01/01/1970 00:00:37
| BMC
  | Entity presence HDD1_PRS #0x43 | Device Absent | Asserted
59 01 02 25 00 00 00 20 00 04 25 45 08 01 ff ff   ------------> 159 | 01/01/1970 00:00:37
| BMC
  | Entity presence P1_PRESENT #0x45 | Device Present | Asserted
5a 01 02 25 00 00 00 20 00 04 25 47 08 00 ff ff   ------------> 15a | 01/01/1970 00:00:37
| BMC
  | Entity presence DDR3_P2_D2_PRS #0x47 | Device Absent | Asserted
5b 01 02 25 00 00 00 20 00 04 25 49 08 00 ff ff   ------------> 15b | 01/01/1970 00:00:37
| BMC
  | Entity presence DDR3_P2_E2_PRS #0x49 | Device Absent | Asserted
5c 01 02 25 00 00 00 20 00 04 25 4b 08 00 ff ff   ------------> 15c | 01/01/1970 00:00:37
| BMC
  | Entity presence DDR3_P2_F2_PRS #0x4b | Device Absent | Asserted
5d 01 02 26 00 00 00 20 00 04 25 4d 08 00 ff ff   ------------> 15d | 01/01/1970 00:00:38
| BMC
  | Entity presence DDR3_P1_A2_PRS #0x4d | Device Absent | Asserted
5e 01 02 26 00 00 00 20 00 04 25 4f 08 00 ff ff   ------------> 15e | 01/01/1970 00:00:38
| BMC
  | Entity presence DDR3_P1_B2_PRS #0x4f | Device Absent | Asserted
5f 01 02 26 00 00 00 20 00 04 25 51 08 00 ff ff   ------------> 15f | 01/01/1970 00:00:38
| BMC
  | Entity presence DDR3_P1_C2_PRS #0x51 | Device Absent | Asserted
60 01 02 26 00 00 00 20 00 04 25 53 08 01 ff ff   ------------> 160 | 01/01/1970 00:00:38
| BMC
  | Entity presence BIOS_POST_CMPLT #0x53 | Device Present | Asserted
```

LED Color Changes

These are examples of LED color changes written into the SEL Repository.

```
34 05 02 2f 00 00 00 20 00 04 24 56 7f 00 04 10   ------------> 534 | 01/01/1970 00:00:47
| BMC
  | Platform alert LED_MEZZ_TP_FLT #0x56 | LED is off | Asserted
35 05 02 30 00 00 00 20 00 04 24 56 7f 07 04 10   ------------> 535 | 01/01/1970 00:00:48
| BMC
  | Platform alert LED_MEZZ_TP_FLT #0x56 | LED color is red | Asserted
36 05 02 30 00 00 00 20 00 04 24 58 7f 00 04 10   ------------> 536 | 01/01/1970 00:00:48
| BMC
  | Platform alert LED_SYS_ACT #0x58 | LED is off | Asserted
37 05 02 31 00 00 00 20 00 04 24 58 7f 04 04 10   ------------> 537 | 01/01/1970 00:00:49
| BMC
  | Platform alert LED_SYS_ACT #0x58 | LED color is green | Asserted
38 05 02 31 00 00 00 20 00 04 24 5a 7f 00 04 10   ------------> 538 | 01/01/1970 00:00:49
| BMC
  | Platform alert LED_SAS1_FAULT #0x5a | LED is off | Asserted
39 05 02 32 00 00 00 20 00 04 24 5a 7f 05 04 10   ------------> 539 | 01/01/1970 00:00:50
| BMC
  | Platform alert LED_SAS1_FAULT #0x5a | LED color is amber | Asserted
```

Voltage Changes

These are examples of SEL messages when voltage thresholds are crossed.

```
7b 09 02 3d 19 00 00 20 00 04 02 00 01 52 b5 b7   ------------> 97b | 01/01/1970 01:47:41
| BMC
  | Voltage P3V_BAT_SCALED #0x00 | Lower critical - going low | Asserted | Reading 2.39 <
Threshold 2.42 Volts
8d 09 02 5b 19 00 00 20 00 04 02 00 81 52 bc b7   ------------> 98d | 01/01/1970 01:48:11
| BMC
  | Voltage P3V_BAT_SCALED #0x00 | Lower critical - going low | Deasserted | Reading 2.48
> Threshold 2.42 Volts
```

Temperature Changes

These are examples of SEL messages when temperature thresholds are crossed.

```
00 02 02 2b 00 00 00 20 00 04 19 18 05 00 ff ff   ------------> 200 | 01/01/1970 00:00:43
| BMC
  | Chip Set IOH_THERMTRIP_N #0x18 | Limit Not Exceeded | Asserted
12 02 02 31 00 00 00 20 00 04 07 19 05 00 ff ff   ------------> 212 | 01/01/1970 00:00:49
| BMC
  | Processor P2_THERMTRIP_N #0x19 | Limit Not Exceeded | Asserted
13 02 02 32 00 00 00 20 00 04 07 1a 05 00 ff ff   ------------> 213 | 01/01/1970 00:00:50
| BMC
  | Processor P1_THERMTRIP_N #0x1a | Limit Not Exceeded | Asserted
```

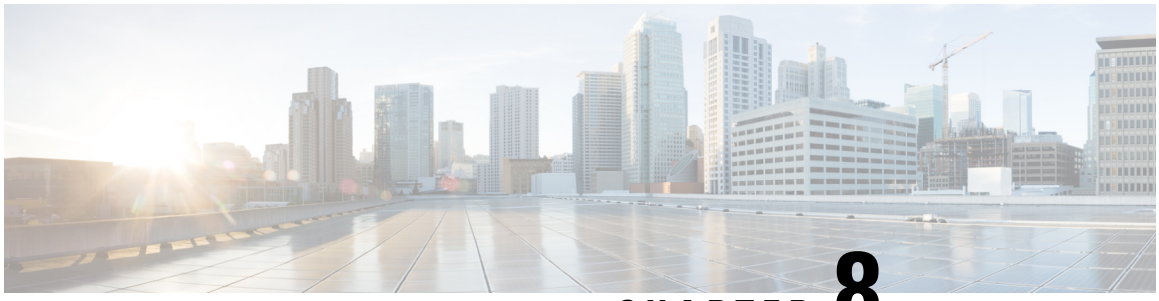

CHAPTER 8

BIOS Messages

- POST Error Messages and Handling, on page 2481
- BIOS Message Severities, on page 2481
- BIOS Message Format, on page 2482
- BIOS Messages and Codes, on page 2482
- Cisco BIOS Messages and Codes, on page 2490

POST Error Messages and Handling

The BIOS outputs the current boot progress codes to the System Event Log (SEL) and to the UCS Manager. Progress codes are 32 bit quantities plus optional data. The 32 bits include class, subclass, and operation information. The class and subclass fields point to the type of hardware that is being initialized. The operation field represents the specific initialization activity.

Based on the data bit availability to display progress codes, a progress code can be customized to fit the data width. The higher the data bit, the higher the granularity of information that can be sent on the progress port. The progress codes can be reported by the system BIOS or optional ROMs.

BIOS Message Severities

BIOS messages have these severities:

- Minor—The system continues booting in a degraded state. The user might want to replace the unit. The POST Error Pause option setting in the BIOS setup does not have any effect on this error.
- Major—The POST Error Pause option setting in the BIOS setup determines whether the error manager pauses the system to allow the user to take immediate corrective action or the system continues the booting process.

Note For the **0048 Password check failed** message, the system halts, and after the next reset or reboot, displays the error code on the screen.

When the F2 key is pressed on the keyboard, the error message is displayed on the screen, and an error is logged to the SEL with the error code. The system cannot boot unless the error is resolved. The faulty part must be replaced, and the system must be restarted.

BIOS Message Format

The table describes the format used in BIOS messages.

Table 6:

Generator ID	Sensor Type Code	Sensor number	Type code	Event Data1	Event Data2	Event Data3
33h (BIOS POST)	**0Fh** (System Firmware Progress)	**0Fh** (System Firmware Progress)	**6Fh** (Sensor Specific Offset)	**A0h** (OEM Codes in Data2 and Data3)	**xxh** (Low Byte of POST Error Code)	**xxh** (Low Byte of POST Error Code)

BIOS Messages and Codes

The table lists messages that are from the baseline Intel BIOS and are present in the Cisco version of the BIOS.

Table 7: List of BIOS messages and codes

Error Code	Severity	Error Message	Possible Needed Response
9687	Fatal	DXE core component encountered a illegal software state error.	Replace faulty part and restart.
8565	Major	DIMM_C2 component encountered a Serial Presence Detection (SPD) fail error.	Replace DIMM_C2.
8567	Major	DIMM_D2 component encountered a Serial Presence Detection (SPD) fail error.	Replace DIMM_D2.

Error Code	Severity	Error Message	Possible Needed Response
85A2	Major	DIMM_B1 uncorrectable ECC error encountered.	Replace DIMM_B1.
85AB	Major	DIMM_F2 uncorrectable ECC error encountered.	Replace DIMM_F2.
9000	Major	Unspecified processor component has encountered a non-specific error.	Restart. If failure, replace.
0xB6A3	Major	DXE boot services driver unrecognized.	Restart. If failure, replace.
8604	Minor	Chipset reclaim of noncritical variables complete.	Restart. If failure, replace.
9223	Minor	Keyboard component was not detected.	Restart. If failure, replace.
9266	Minor	Local console component encountered a controller error.	Restart. If failure, replace.
9286	Minor	Remote console component encountered a controller error.	Restart. If failure, replace.
94C6	Minor	LPC component encountered a controller error.	Restart. If failure, replace.
95A7	Minor	PCI component encountered a read error.	Restart. If failure, replace.
9609	Minor	Unspecified software component encountered a start error.	Restart. If failure, replace.
0xA028	Minor	Processor component encountered a high-voltage error.	Restart. If failure, replace.
0xA501	Minor	ATA/ATPI ATA SMART is disabled.	Enable.
192	Fatal	Processor 0x cache size mismatch detected.	Replace faulty part and restart.

Error Code	Severity	Error Message	Possible Needed Response
194	Fatal	Processor 0x family mismatch detected.	Replace faulty part and restart.
196	Fatal	Processor 0x model mismatch.	Replace faulty part and restart.
197	Fatal	Processor 0x speeds mismatched.	Replace faulty part and restart.
198	Fatal	Processor 0x family is not supported.	Replace faulty part and restart.
9667	Fatal	PEI module component encountered an illegal software state error.	Replace faulty part and restart.
96A7	Fatal	DXE boot services driver component encountered an illegal software state error.	Replace faulty part and restart.
960000000	Fatal	SMM driver component encountered an illegal software state error.	Replace faulty part and restart.
0xA421	Fatal	PCI component encountered a SERR error.	Replace faulty part and restart.
0xA5A1	Fatal	PCI Express component encountered a SERR error.	Replace faulty part and restart.
12	Major	CMOS date / time not set.	Set the time and date. how?
48	Major	Password check failed.	Verify user password. Restart. If failure, apply admin password. Replace if necessary.
113	Major	Fixed media SAS RAID firmware cannot run properly.	Reflash firmware. Restart. If failure, replace.
140	Major	PCI component encountered a PERR error.	Restart. If failure, replace.
141	Major	PCI resource conflict.	Restart. If failure, replace.

Error Code	Severity	Error Message	Possible Needed Response
146	Major	PCI out of resources error.	Review resource allocation. Remove unneeded resources. Restart. If failure, replace.
195	Major	Processor 0x Intel QPI speed mismatch.	Restart. If failure, replace.
019F	Major	Processor and chipset stepping configuration is unsupported.	Restart. If failure, replace.
5220	Major	CMOS/NVRAM configuration cleared	Reset configurations. Restart. If failure, replace.
5221	Major	Passwords cleared by jumper.	Reset passwords. Restart. If failure, replace.
5224	Major	Password clear jumper is set.	Restart. If failure, replace.
8160	Major	Processor 01 unable to apply microcode update.	Restart. If failure, replace.
8161	Major	Processor 02 unable to apply microcode update.	Restart. If failure, replace.
8190	Major	Watchdog timer failed on last boot.	Restart. If failure, replace.
8198	Major	OS boot watchdog timer failure.	Reset timer. If failure, replace.
8300	Major	Baseboard management controller failed self test.	Restart. If failure, replace.
84F2	Major	Baseboard management controller failed to respond.	Restart. If failure, replace.
84F3	Major	Baseboard management controller in update mode.	Complete update, then restart.
84F4	Major	Sensor data record empty.	Review files. If none, restart.
8500	Major	Memory component could not be configured in the selected RAS mode.	Restart. If failure, replace.
8501	Major	DIMM population error.	Restart. If failure, replace.

Error Code	Severity	Error Message	Possible Needed Response
8502	Major	CLTT configuration failure error.	Restart. If failure, replace.
8520	Major	DIMM_A1 failed self test (BIST).	Replace DIMM_A1.
8521	Major	DIMM_A2 failed self test (BIST).	Replace DIMM_A2.
8522	Major	DIMM_B1 failed self test (BIST).	Replace DIMM_B1.
8523	Major	DIMM_B2 failed self test (BIST).	Replace DIMM_B2.
8524	Major	DIMM_C1 failed self test (BIST).	Replace DIMM_C1.
8525	Major	DIMM_C2 failed self test (BIST).	Replace DIMM_C2.
8526	Major	DIMM_D1 failed self test (BIST).	Replace DIMM_D1.
8527	Major	DIMM_D2 failed self test (BIST).	Replace DIMM_D2.
8528	Major	DIMM_E1 failed self test (BIST).	Replace DIMM_E1
8562	Major	DIMM_B1 component encountered a Serial Presence Detection (SPD) fail error.	Replace DIMM_B1
8563	Major	DIMM_B2 component encountered a Serial Presence Detection (SPD) fail error.	Replace DIMM_B2.
8564	Major	DIMM_C1 component encountered a Serial Presence Detection (SPD) fail error.	Replace DIMM_C1.
8566	Major	DIMM_D1 component encountered a Serial Presence Detection (SPD) fail error.	Replace DIMM_D1.

Error Code	Severity	Error Message	Possible Needed Response
8568	Major	DIMM_E1 component encountered a Serial Presence Detection (SPD) fail error.	Replace DIMM_E1.
8569	Major	DIMM_E2 component encountered a Serial Presence Detection (SPD) fail error.	Replace DIMM_E2.
856A	Major	DIMM_F1 component encountered a Serial Presence Detection (SPD) fail error.	Replace DIMM_F1.
856B	Major	DIMM_F2 component encountered a Serial Presence Detection (SPD) fail error.	Replace DIMM_F2.
85A0	Major	DIMM_A1 uncorrectable ECC error encountered.	Replace DIMM_A1.
85A1	Major	DIMM_A2 uncorrectable ECC error encountered.	Replace DIMM_A2.
85A3	Major	DIMM_B2 uncorrectable ECC error encountered.	Replace DIMM_B2.
85A4	Major	DIMM_C1 uncorrectable ECC error encountered.	Replace DIMM_C1.
85A5	Major	DIMM_C2 uncorrectable ECC error encountered.	Replace DIMM_C2.
85A6	Major	DIMM_D1 uncorrectable ECC error encountered.	Replace DIMM_D1.
85A7	Major	DIMM_D2 uncorrectable ECC error encountered.	Replace DIMM_D2.
85A8	Major	DIMM_E1 uncorrectable ECC error encountered.	Replace DIMM_E1.
85A9	Major	DIMM_E2 uncorrectable ECC error encountered.	Replace DIMM_E2.
85AA	Major	DIMM_F1 uncorrectable ECC error encountered.	Replace DIMM_F1.

Error Code	Severity	Error Message	Possible Needed Response
92A3	Major	Serial port component was not detected.	Restart if component exists. If failure, replace. If no component, add.
92A9	Major	Serial port component encountered a resource conflict error.	Restart. If failure, replace.
94C9	Major	LPC component encountered a resource conflict error.	Restart. If failure, replace.
0xA022	Major	Processor component encountered a mismatch error.	Restart. If failure, replace.
0xA5A4	Major	PCI Express IBIST error.	Restart. If failure, replace.
0108	Minor	Keyboard component encountered a locked error.	Unlock the keyboard. how?
0109	Minor	Keyboard component encountered a stuck key error.	Restart. If failure, replace.
0193	Minor	Processor 0x stepping mismatch.	Restart. If failure, replace.
8180	Minor	Processor 0x microcode update not found.	Restart. If failure, replace.
84FF	Minor	System event log full.	Export event log and delete files.
9226	Minor	Keyboard component encountered a controller error.	Restart. If failure, replace.
9243	Minor	Mouse component was not detected.	Restart.
9246	Minor	Mouse component encountered a controller error.	Restart.
9268	Minor	Local uonsole component encountered an output error.	Restart.

Error Code	Severity	Error Message	Possible Needed Response
9269	Minor	Local uonsole component encountered a resource conflict error.	Restart.
9287	Minor	Remote uonsole component encountered an input error.	Restart.
9288	Minor	Remote uonsole component encountered an output error.	Restart.
92C6	Minor	Serial port controller error.	Restart. If failure, replace.
92C7	Minor	Serial port component encountered an input error.	Restart. If failure, replace.
92C8	Minor	Serial port component encountered an output error.	Restart. If failure, replace.
9506	Minor	ATA/ATPI component encountered a controller error.	Restart. If failure, replace.
95A6	Minor	PCI component encountered a controller error.	Restart. If failure, replace.
95A8	Minor	PCI component encountered a write error.	Restart. If failure, replace.
9641	Minor	PEI Core component encountered a load error.	Restart. If failure, replace.
96AB	Minor	DXE boot services driver component encountered invalid configuration.	Restart. If failure, replace.
0xA000	Minor	TPM device not detected.	Add TPM device, otherwise replace.
0xA001	Minor	TPM device missing or not responding.	Add TPM device if needed, otherwise replace.
0xA002	Minor	TPM device failure.	Replace TMP device.
0xA003	Minor	TPM device failed self test.	Replace TPM device.

Error Code	Severity	Error Message	Possible Needed Response
0xA027	Minor	Processor component encountered a low-voltage error.	Proceed but monitor. If other errors appear, replace.
0xA500	Minor	ATA/ATPI ATA bus SMART not supported.	Add, then restart. If fails again, replace.
0xA5A0	Minor	PCI Express component encountered a PERR error.	Restart. If fails again, replace.
0xA6A0	Minor	DXE boot services driver Not enough memory available to shadow a legacy option ROM.	Proceed if shadow memory is not required. Otherwise, remove unnecessary options to free memory.

Cisco BIOS Messages and Codes

The table describes additional messages unique to the Cisco BIOS.

Table 8: Additional messages unique to Cisco BIOS

Code	Severity	message	Added/Changed	Action
E000	Major	Memory RAS mirror fail.	Added.	Replace failed DIMMs.
E001	Major	Memory RAS spare fail.	Added.	Replace failed DIMMs.
E00A	Major	Memory BMC SPD read fail.	Added.	Replace failed DIMMs.
E1xx	Major	DIMM xx disabled.	Changed from 854x.	Replace any failed DIMMs and verify DIMMs in valid configuration
E2xx	Major	DIMM xx component encountered a Serial Presence Detection (SPD) fail error.	Changed from 856x.	Replace failed DIMM.
E3xx	Major	DIMM xx encountered a mismatch error.	Added.	Replace mismatched DIMM.

Code	Severity	message	Added/Changed	Action
E4xx	Major	DIMM xx failed self test (BIST).	Changed from 852x.	Replace failed DIMM.
E500	Major	Memory-other DIMM failed.	Added.	Replace failed DIMM.
E600	Major	Memory-invalid population.	Added.	Replace failed DIMM.
E700	Major	Memory-mismatch population.	Added.	Replace failed DIMM.
E800	Major	Memory-SPD error.	Added.	Replace failed DIMM.
E900	Major	Memory-platform specific.	Added.	Replace failed DIMM.
D000	Fatal (blade will not boot)	Unsupported SPI flash.	Added.	Blade manufactured with wrong SPI flash part. Return materials authorization (RMA) the blade.