Cisco Secure Network Analytics

Failover Configuration Guide 7.5.3

Table of Contents

Introduction **5**

Before you Begin 5

Data Store Deployments 5

Security Analytics and Logging (OnPrem) 5

Appliance Status 5

Configuration Requirements 6

Admin User 6

Back up Configuration Files and Databases 6

Certificates 6

Failover Roles 6

Configuration Order 6

Configuration Changes 7

Software Version 7

Saving the Failover Configuration 7

Primary Manager 7

Secondary Manager (Read-Only) 7

Passwords 7

Domain Changes 7

Flow Collectors 8

External Authentication Services 8

External Services 8

Changing Roles 8

Certificates 8

Restoring the Primary Manager 8

Rebooting the Primary Manager 8

Changing Network Interfaces 9

Failover Configuration Overview **10**

1. Plan Failover Roles **11**

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

2. Back up Manager Configuration and Databases **12**
1. Create a Backup Configuration File 12
2. Back up the Manager Databases 13
1. Back up the Databases 13
2. Confirm Database Backup 15
3. Back up the Appliance Configuration 15
3. Add Certificates to Trust Stores **17**
Trust Store Requirements 17
Uploading Certificates to the Trust Store 17
1. Download the Appliance Identity Certificates 17
2. Add Certificates to the Manager Trust Stores 18
Configuring Failover Following Data Store Initialization **19**
Configuring Your Failover Pair 19
Adding a Manager after the Data Store is Initialized 19
4. Configure the Failover Pair **21**
Before you Begin 21
1. Confirm Manager Appliance Status 21
2. Configure the Secondary Manager 22
3. Configure the Primary Manager 23
5. Confirm the Failover Configuration **24**
1. Confirm Configuration Changes 24
2. Confirm Flow Collection 25
Changing Failover Roles **27**
Time 27
1. Back up the Primary Manager 27
2. Confirm the Appliance Status 27
3. Change the Failover Configuration 28
1. Change the Primary Manager to Secondary 28
2. Change the Secondary Manager to Primary 29
4. Confirm your Configuration Changes 29

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

Changing Network Interfaces **30**
1. Delete the Failover Configuration 30
2. Change Manager Network Interfaces 30
3. Configure Manager Failover 30
Deleting the Failover Configuration **31**
1. Confirm Appliance Status 31
2. Review the Failover Roles 32
3. Delete the Failover Configuration 33
4. Remove the Secondary Manager from Central Management 33
5. Delete the Secondary Manager Certificates 34
6. Reset the Secondary Manager to Factory Defaults 34
Troubleshooting **35**
Manager is Offline or Fails 35
Trust Errors 36
Flows Do Not Display on Secondary Manager 36
Password Expiration 36
Analytics Jobs are Lagging 37
The secondary Manager has been promoted to primary Manager 37
An appliance went down due to degradation 37
Contacting Support **38**
Change History **39**

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

Introduction

Use the failover configuration to establish a failover relationship between two Cisco Secure Network Analytics Managers (formerly Stealthwatch Management Consoles or SMCs) so that one of them serves as a backup to the other.

If the primary Manager fails, you can manually set the secondary Manager to become the primary Manager to continue monitoring the system.

> ⚠ If your primary Manager goes offline, please note that the Managers do not swap roles automatically. Make sure you change the Manager roles in the order shown in this guide.

Before you Begin

Before you start the failover configuration, install your Cisco Secure Network Analytics (formerly Stealthwatch) appliances and complete the system configuration. For instructions, refer to your Cisco Secure Network Analytics installation guides and the Cisco Secure Network Analytics System Configuration Guide.

Also, review the details and instructions in this guide, so you are prepared for the failover configuration requirements and implementation.

Data Store Deployments

If you are using a Data Store deployment with your Secure Network Analytics system, we recommend that you configure Failover before initializing the Data Store. If you have a Data Store that you have already initialized, refer to **Configuring Failover Following Data Store Initialization**.

Security Analytics and Logging (OnPrem)

If Cisco Security Analytics and Logging (On Premises) is enabled on one Manager, make sure it is enabled on the other Manager before you start the failover configuration.

To enable Security Analytics and Logging (OnPrem) on both Managers, refer to the Cisco Security Analytics and Logging (On Premises): Firepower Event Integration Guide.

Appliance Status

Before you start any configuration changes in Secure Network Analytics, make sure the appliance status is shown as Connected. We include instructions to review the status in this guide.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

> ⚠ Do not change any other configurations or add or remove appliances from Central Management until you have finished the failover configuration.

Configuration Requirements

This guide includes details that are critical for a successful configuration, including:

Admin User

To configure failover, log in to your Managers as the admin user.

Back up Configuration Files and Databases

Plan time to back up each Manager configuration and database. You will need the backup files if there is a problem with the failover configuration, and you need both backups to restore a Manager completely. For instructions, refer to **2. Back up Manager Configuration and Databases**.

Certificates

Make sure you save the correct certificates to the required appliance Trust Stores before you configure failover. This procedure sets up trust between appliances, so they can communicate. For instructions, refer to **3. Add Certificates to Trust Stores**.

Failover Roles

When you save the failover configuration, your primary Manager will actively monitor and manage your appliances, and your secondary Manager becomes read-only. To plan which Manager will be configured in the primary or secondary failover role, refer to **Saving the Failover Configuration** and **1. Plan Failover Roles**.

> ⚠ If you add the failover on an established system, we strongly recommend to set the established Manager as the primary and the new Manager as the secondary to prevent the existing domain configuration from being overwritten by defaults.

If your secondary Manager is managing appliances in Central Management, move them to your primary Manager (or another Manager) before you start the failover configuration. Refer to the Cisco Secure Network Analytics System Configuration Guide for instructions.

Configuration Order

Configure the secondary Manager before the primary Manager. Refer to **4. Configure the Failover Pair** for instructions.

> ⚠ Make sure you configure your secondary Manager for failover before you configure your primary Manager. When you save the failover configuration, the

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

> ⚠ secondary Manager domain configuration is deleted, so make sure you follow the instructions in order.

Configuration Changes

Do not change any other configurations or add or remove appliances from Central Management until you have finished the failover configuration.

Software Version

Ensure that the Secure Network Analytics v7.5.1 is installed on your Managers before you proceed with the instructions in this guide.

Saving the Failover Configuration

When you save the failover configuration, a trusted relationship and configuration channel is established between the primary and secondary Manager. Also, the following system changes occur:

Primary Manager

The primary Manager pushes its domain configuration, user settings, and policies to the secondary Manager.

Secondary Manager (Read-Only)

The secondary Manager domain configuration is deleted. It will become read-only for all users and synchronize with the primary Manager.

Passwords

The primary Manager pushes its local users and password credentials to the secondary Manager, so they are synchronized. This means you will use the same password to log in to your primary Manager and secondary Manager. To change the password on the secondary Manager, log in to your primary Manager.

Domain Changes

The primary Manager automatically shares any domain configuration changes with the secondary Manager, such as host groups, users, and policies.

If you change the domain configuration on the primary Manager while the communication channel to the secondary Manager is down (Config Channel Down), the primary Manager will send a full configuration push as soon as the secondary Manager communication channel is restored.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

Flow Collectors

The Flow Collectors automatically send their data to both Managers.

External Authentication Services

External authentication services (such as LDAP, TACACS+, and RADIUS) are only available on the primary Manager. Before you can use configured external authentication services on a secondary Manager, you need to promote the secondary Manager to primary.

External Services

If an external service is configured on the primary Manager, make sure you configure it on the secondary Manager. For example, if you enable the Threat Feed on the primary Manager, enable it on the secondary Manager.

Changing Roles

If you need to promote your secondary Manager to the primary failover role, make sure you change the roles in order. The order is critical, and they do not swap roles automatically.

- If your primary Manager is offline, refer to **Troubleshooting** for more information.
- To change failover roles, refer to **Changing Failover Roles**.

Certificates

When your Managers are configured for failover, the Trust Stores are updated automatically as follows:

- The secondary Manager identity certificate and root certificate (if applicable) are added to the Trust Stores of all managed appliances.
- The identity certificates and root certificate (if applicable) of all managed appliances are added to the secondary Manager Trust Store when they are added to the primary Manager Central Management.

Restoring the Primary Manager

If you restore a primary Manager that is configured for failover, the secondary Manager will synchronize to the primary Manager after the restoration is completed.

Rebooting the Primary Manager

If your primary Manager goes offline because you rebooted it, it will resume the primary failover role when the appliance status returns to Connected and it detects the secondary Manager.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

- If the primary Manager role changes to secondary and does not resolve itself, refer to **Troubleshooting**.
- To change failover roles, refer to **Changing Failover Roles**.

Changing Network Interfaces

If your Managers are configured for failover, delete the failover relationship before you change your Manager network interfaces, host name, or network domain name. For details, refer to **Changing Network Interfaces**.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

Failover Configuration Overview

To configure failover, make sure you complete the following procedures:

1. **Plan Failover Roles**
2. **Back up Manager Configuration and Databases**
3. **Add Certificates to Trust Stores**
4. **Configure the Failover Pair**
5. **Confirm the Failover Configuration**

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

1. Plan Failover Roles

Before you start the failover configuration, plan which Manager will be configured in the primary or secondary failover role.

If you add the failover on an established system, we strongly recommend to set the established Manager as the primary and the new Manager as the secondary to prevent the existing domain configuration from being overwritten by defaults.

> ⚠ Before you start the failover configuration, make sure Security Analytics and Logging (OnPrem) is enabled on both Managers. To enable Security Analytics and Logging (OnPrem) on both Managers, refer to the Cisco Security Analytics and Logging (On Premises): Firepower Event Integration Guide.

- **IP Address:** Make sure you have the IP address of each Manager.
- **Secondary Manager:** If your secondary Manager is managing appliances in Central Management, move them to your primary Manager (or another Manager) before you start the failover configuration. Refer to the Cisco Secure Network Analytics System Configuration Guide for instructions.
- **Saving the Failover Configuration:** When you save the failover configuration, your primary Manager actively monitors and manages your appliances, and your secondary Manager becomes read-only. For details, refer to **Saving the Failover Configuration**.

Planned Failover Role	Summary	IP Address
Primary Manager	Actively monitors and manages Secure Network Analytics	
Secondary Manager	Read-only	

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

2. Back up Manager Configuration and Databases

Before you configure your Managers for failover, back up each appliance configuration and database. You need both backups to restore the Managers completely.

New Installations: If your Managers are new installations and you do not need to restore the configuration in the future, you can skip this procedure. Go to **3. Add Certificates to Trust Stores**.

> ⚠ Without a backup, you will not be able to recover your files if a problem occurs during the failover configuration. For assistance, please contact Cisco Support.

1. Create a Backup Configuration File

Complete these steps to create a backup configuration file for each Manager. If your Manager also manages appliances as a Central Manager, it creates a Manager backup configuration file and a Central Management backup configuration file.

1. Log in to your **primary** Manager.
2. From the main menu, select **Configure** > **Global > Central Management**.
3. Click the ••• (**Ellipsis**) icon for the **secondary** Manager.
4. Select **Support**.
5. Select the **Configuration Files** tab.
6. Click the **Backup Actions** drop-down menu.
7. Select **Create Backup**.
8. Click **Download**. Save the file to a secure location.
9. Log in to your primary Manager. Repeat steps 2 through 8 (replacing "secondary manager" with "primary manager" in step 3) to save the backup configuration file for your primary Manager.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

2. Back up the Manager Databases

To back up the Manager database to a remote file system, you will use Central Management and the Appliance Admin interface.

1. Back up the Databases

2. Confirm Database Backup

> ⚠ Make sure you complete the procedures to back up the database on your primary Manager and secondary Manager.

1. Back up the Databases

Use the following instructions to back up your Manager database. Also, review the following:

- **Space:** Make sure the remote file system has enough space to store the database backup.
- **Time:** After you back up the database once, subsequent backups will be quicker because the process backs up only what has changed since the last backup. This process backs up approximately 0.5 GB to 2 GB of data per minute.

1. Log in to your Manager Appliance Admin interface.

   In Central Management, click the Manager ••• (**Ellipsis**) icon > **View Appliance Statistics**.

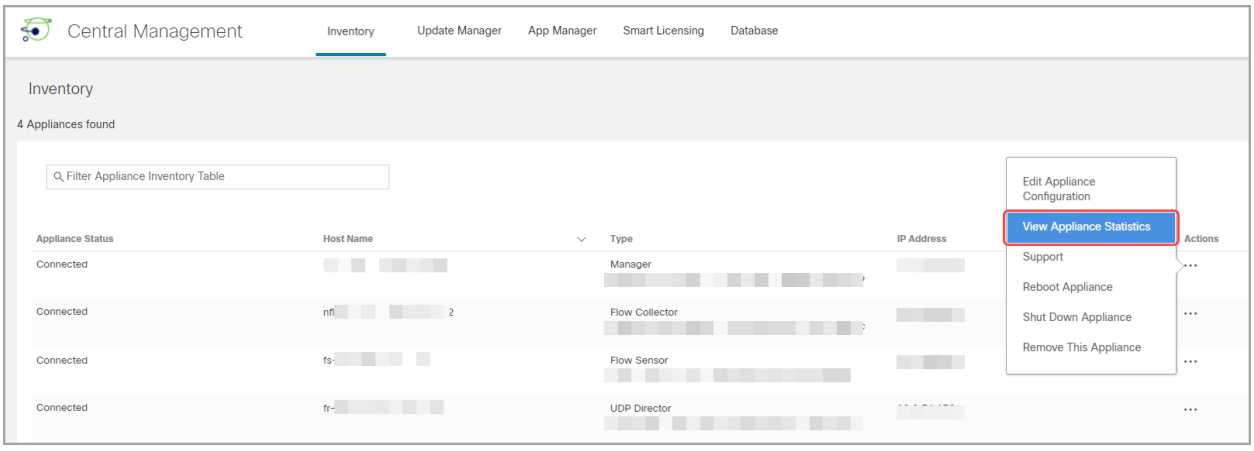

2. Determine how much space you will need on the remote file system to store the database backup as follows:

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

- Click **Home**.
- Locate the **Disk Usage** section.
- Review the **Used (byte)** column for the **/lancope/var** file system. You will need at least this much space plus 15% more on the remote file system to store the database backup.

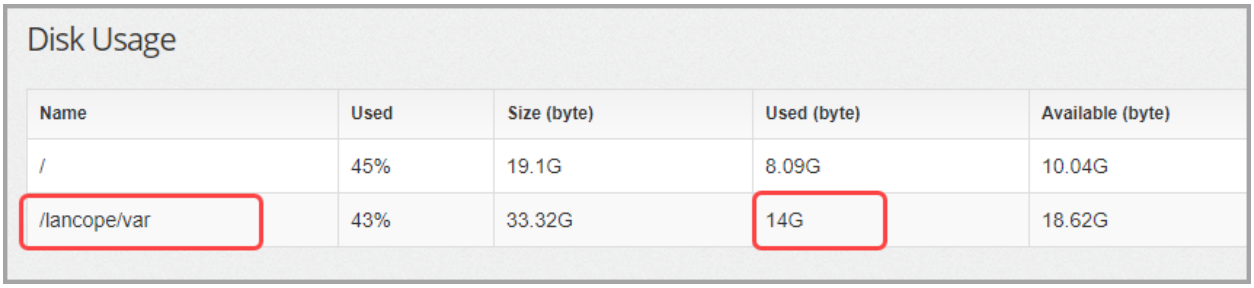

3. Click **Configuration** > **Remote File System**.

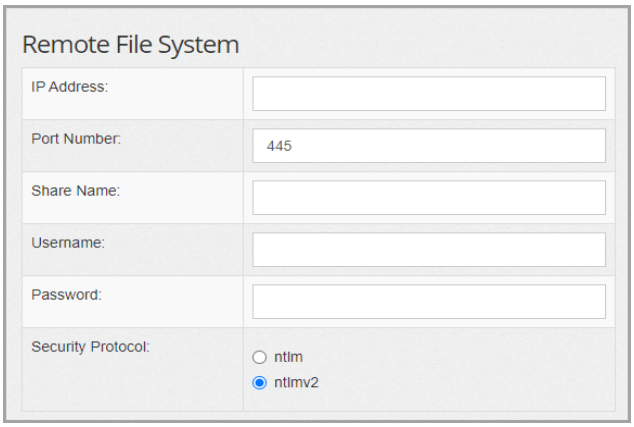

4. Complete the fields using the settings for the remote file system where you want to store the backup files.

   The Secure Network Analytics file share uses the CIFS (Common Internet File System) protocol, also known as SMB (Server Message Block).

5. Click **Apply** to place the settings in the configuration file.

   If the Apply button is not enabled after you enter the password, click once in a blank area on the Remote File System page to enable it.

6. Click **Test** to verify that the Secure Network Analytics appliance and the remote file system can communicate with each other.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

Confirm you see the following message at the bottom of the Remote File System page when the test is complete.



7. Click **Support** > **Backup/Restore Database**.
8. Click **Create Backup**. This process may take a long time.

    - After the backup process starts, you can mouse away from the page without interrupting the process. However, if you click **Cancel** while the backup is in progress, you may not be able to resume the backup without restarting the appliance.
    - Follow the on-screen prompts until the backup is completed.
    - To view details of the backup process, click **View Log**.

9. Click **Close** to close the progress window.

2. Confirm Database Backup

Repeat the procedures in **2. Back up the Manager Databases** and confirm you've saved the database backup for each Manager.

3. Back up the Appliance Configuration

Without a backup, you will not be able to recover your files if a problem occurs during the update process. These steps are important to help minimize data loss.

> Make sure to back up each appliance configuration.

Use the following instructions to select an appliance from the Appliance Manager and create a backup file of the configuration settings.

1. Open **Central Management** > **Appliance Manager**.
2. Click the **Actions** menu for the Manager.

    - **All Managed Appliances:** To back up the configuration of all appliances managed by the Central Manager, select your primary Manager.
    - **Individual Managed Appliance:** To back up the configuration of an individual appliance in Central Management, select the Actions menu for the appliance. For example, if you only need to back up your Flow Sensor, select the Flow Sensor Actions menu.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

3. Select **Support**.
4. Select the **Configuration Files** tab.
5. Click the **Backup Actions** drop-down.
6. Select **Create Backup**.

   Manager and Central Manager: When you back up your primary Manager and Central Manager, there will be a Manager backup configuration file and a Central Management backup configuration file.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

3. Add Certificates to Trust Stores

Use the following instructions to save the required appliance identity certificates and root certificates (if applicable) to the Trust Stores.

Trust Store Requirements

The instructions will guide you through the following requirements:

- Adding the secondary Manager certificates to the primary Manager Trust Store.
- Adding the primary Manager certificates to the secondary Manager Trust Store.

Uploading Certificates to the Trust Store

Upload each appliance identity certificate (leaf) and root certificate (if applicable) individually.

1. Download the Appliance Identity Certificates

Use the following instructions to download and save your appliance identity certificates. The steps vary based on the browser you are using.

If your certificates are already saved, you can skip this procedure. Go to **2. Add Certificates to the Manager Trust Stores**.

> You can also click the lock/security icon in your browser. Follow the on-screen prompts to download your certificates. The steps vary based on the browser you are using.

1. In the browser address bar, replace the path after the IP address or host name with the following: **/secrets/v1/server-identity**

   For example: https://<IPaddress>/secrets/v1/server-identity

2. Follow the on-screen prompts to save the certificate.

   Open: To view the file, select a text file format.

   Troubleshooting: If you do not see the prompt to download the certificate, check your Downloads folder in case it was downloaded automatically, or try a different browser.

3. Repeat steps 1 and 2 on each Manager.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

2. Add Certificates to the Manager Trust Stores

Use the following instructions to save your secondary Manager appliance identity certificate (leaf) and root certificate (if applicable) to the primary Manager Trust Store.

1. Log in to your Manager.
2. From the main menu, select **Configure** > **Global > Central Management**.
3. Confirm the Appliance Status is shown as Connected.
4. Click the ••• (**Ellipsis**) icon in the **Actions** column for the Manager.
5. Select **Edit Appliance Configuration**.
6. Click the **General** tab, locate the **Trust Store** section.
7. Click **Add New**.

> ⚠ Make sure you upload each appliance identity certificate (leaf) and root certificate (if applicable) individually.

8. In the **Friendly Name** field, enter a name for the certificate.
9. Click **Choose File**. Select the certificate.
10. Click **Add Certificate**. Confirm the certificate is shown in the Trust Store list.
11. Repeat steps 6 through 9 to add any other required certificates to the Trust Store.

    - If you are logged in to the secondary Manager, add the primary Manager appliance identity (leaf) and root certificates (if applicable).
    - If you are logged in to the primary Manager, add the secondary Manager appliance identity (leaf) and root certificates (if applicable).

12. Click **Apply Settings**. Follow the on-screen prompts.
13. **Connected:** On the Central Management Inventory page, confirm the Appliance Status returns to Connected.
14. Repeat steps 1 through 13 on the other Manager.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

Configuring Failover Following Data Store Initialization

If you've deployed Secure Network Analytics with a Data Store, make sure you configure Failover before you initialize the Data Store. If you configure Failover after you've initialized the Data Store, follow the instructions in the section below to configure the secondary Manager for secure communication with the Data Store.

The process for configuring failover following Data Store initialization is summarized below.

1. Configure your failover pair.
2. Add a secondary Manager.

Configuring Your Failover Pair

Configure your failover pair by following the instructions in the **4. Configure the Failover Pair** section of this guide. Once this process is complete, you will see a "Data Store Not Configured" message in the Central Management Inventory for the secondary Manager. Follow the **Adding a Manager after the Data Store is Initialized** to configure the secondary Manager.

Adding a Manager after the Data Store is Initialized

Use the following instructions to add a Manager to your Data Store if you've already initialized the Data Store.

1. **RFD:** Follow the instructions in the Resetting Factory Defaults section of the Secure Network Analytics System Configuration Guide.

> You can choose to keep or discard your current network settings. If you discard them, you must reconfigure these network settings.

2. Follow the instructions in 1. Configuring Your Environment using First Time Setup and 2. Configuring the Managed System in the Secure Network Analytics System Configuration Guide to configure the appliance and add it to Central Management. Configure the appliance in First Time Setup.
3. Log in to the Primary Manager appliance console as sysadmin.
4. Select **Data Store**.
5. Select **SSH**. Wait while SSH is enabled across your appliances.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

6. Confirm all the appliances show the Appliance Status as **Connected** in the Central Management then go to the next step.
7. From the **Data Store** menu, select **New Appliances**. Follow the on-screen prompts.
8. Exit SystemConfig.

> When you exit the Data Store menu, the system restores your previous SSH settings.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

4. Configure the Failover Pair

Use the following instructions to configure your Managers for failover. When you save the failover configuration, the secondary Manager domain configuration is deleted. It will become read-only and synchronize with the primary Manager. For details, refer to **Saving the Failover Configuration**.

Before you Begin

Make sure you complete the following procedures before you start these instructions:

1. **Plan Failover Roles**
2. **Back up Manager Configuration and Databases**
3. **Add Certificates to Trust Stores**

> ⚠ Make sure you configure your secondary Manager for failover before you configure your primary Manager. When you save the failover configuration, the secondary Manager domain configuration is deleted, so make sure you follow the instructions in order.

1. Confirm Manager Appliance Status

1. Log in to your **primary** Manager.
2. From the main menu, select **Configure** > **Global > Central Management**.
3. Confirm the Appliance Status for each appliance is shown as **Connected**.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

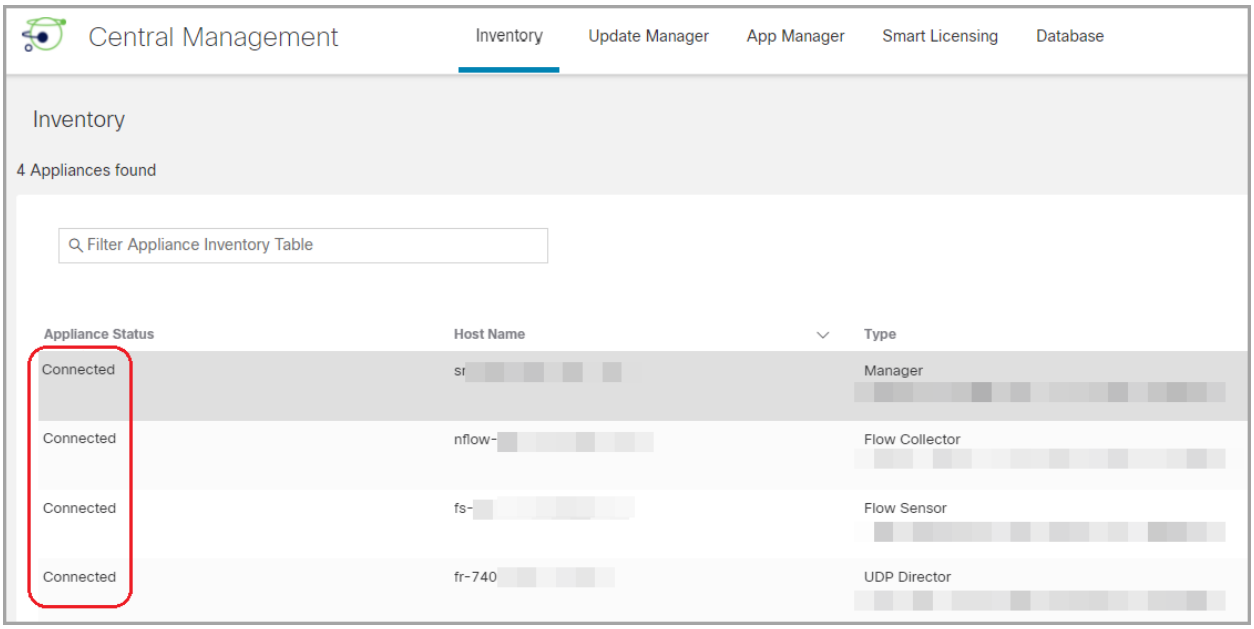

2. Configure the Secondary Manager

When you save the failover configuration, the secondary Manager domain configuration is deleted. It will become read-only and synchronize with the primary Manager. For details, refer to **Saving the Failover Configuration**.

1. In the **secondary** Manager, click the **Security Insight dashboard** tab.
2. From the main menu, select **Configure** > **Global** > **Manager Configuration**.
3. Click the **Failover Configuration** tab.
4. Click the **Failover Role** drop-down menu. Select **Secondary**.

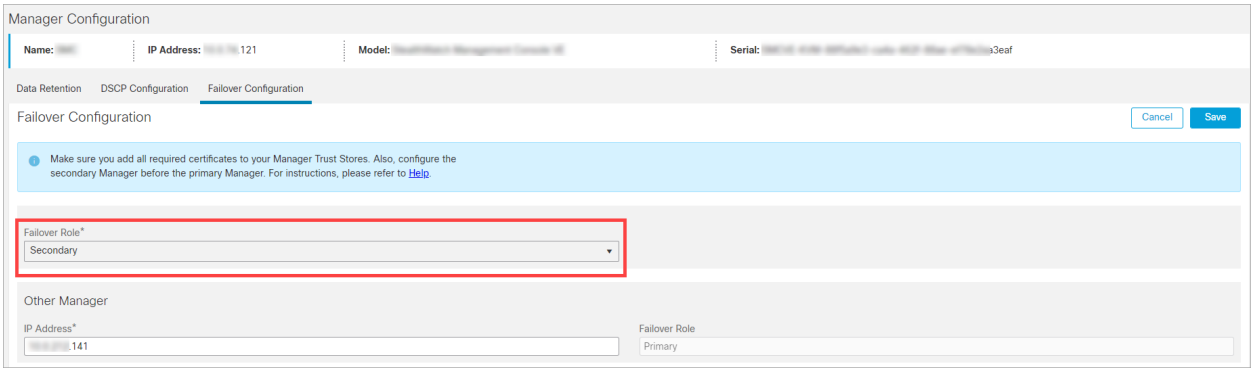

5. In the **IP Address** field, enter the IP address of your other Manager. This will be your primary Manager.
6. Click **Save**.
7. Follow the on-screen prompts to save your changes.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

3. Configure the Primary Manager

1. In the **primary** Manager, click the **Security Insight dashboard** tab.
2. From the main menu, select **Configure** > **Global** > **Manager Configuration**.
3. Click the **Failover** tab.
4. Click the **Failover Role** drop-down menu. Select **Primary**.

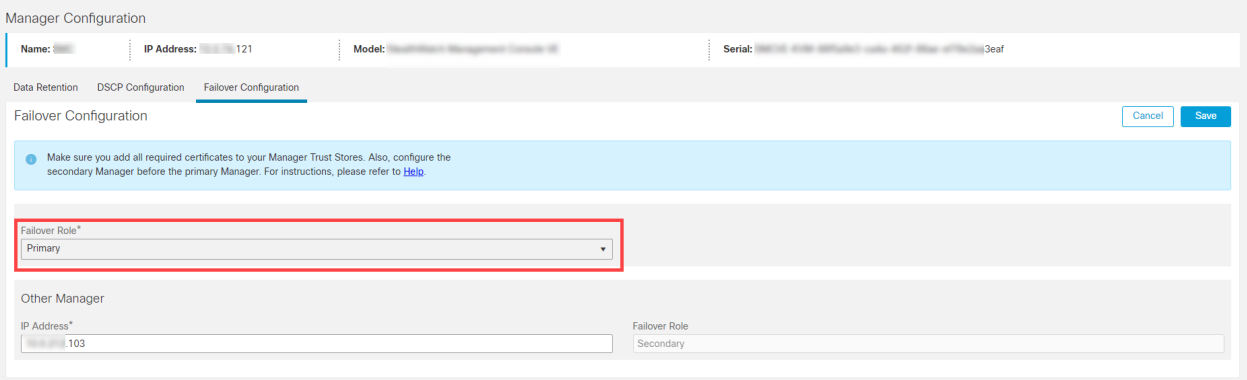

5. In the **IP Address** field, enter the IP address of your secondary Manager.
6. Click **Save**.
7. Follow the on-screen prompts to save your changes.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

5. Confirm the Failover Configuration

Use the following instructions to confirm your Managers are configured for failover and communicating.

1. Confirm Configuration Changes

Confirm your primary Manager shows the failover configuration changes. Also, confirm the appliance status for each appliance is shown as Connected.

1. In the primary Manager, open Central Management.

   Select **Configure** > **Global > Central Management**.

2. Confirm the following:

   - The secondary Manager is shown in the inventory.
   - The Appliance Status for each appliance is shown as Connected.

Confirming the Primary and Secondary Manager are Shown

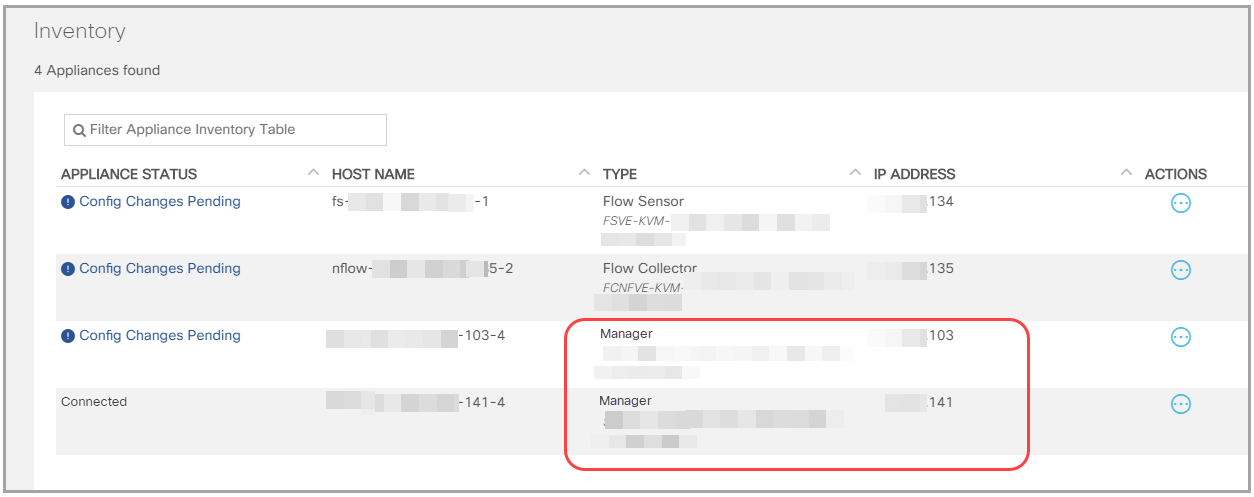

> Wait while Central Management updates. The appliance status for your appliances will show **Config Changes Pending** before showing the status as **Connected**.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

Confirming All Appliances are Connected

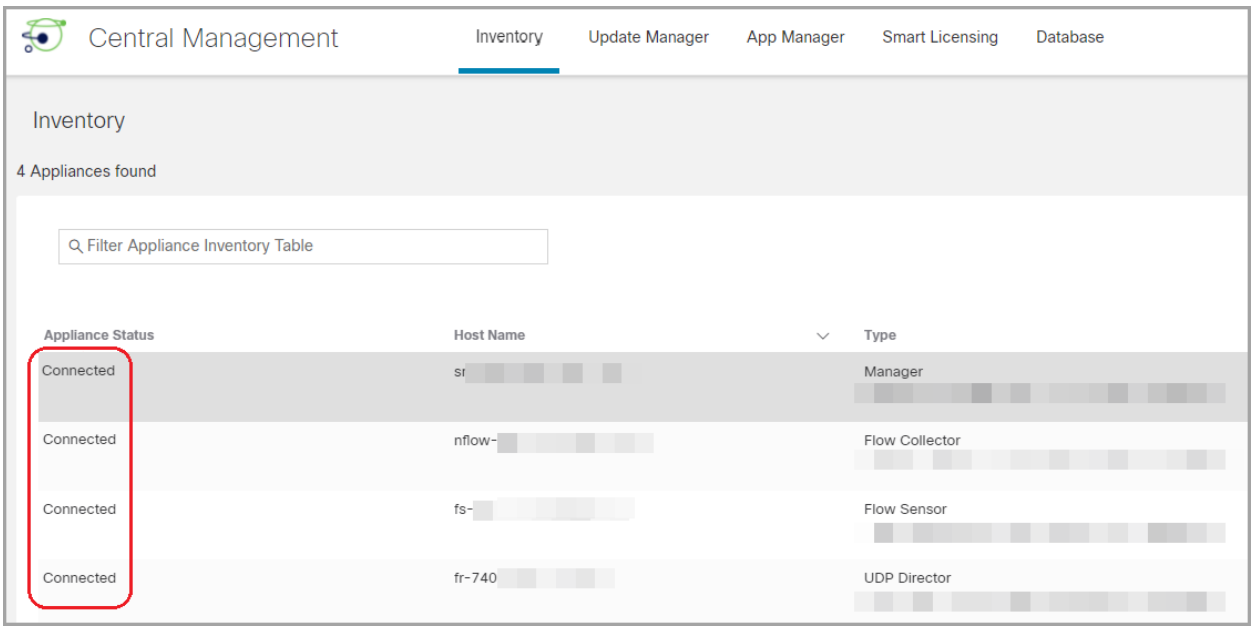

2. Confirm Flow Collection

Use the following instructions to confirm the secondary Manager is operating as read-only and is receiving flows.

1. Log in to your **secondary Manager**.
2. You should see a notification that your Manager is read-only. If your secondary Manager has not changed to read-only, check your failover configuration.

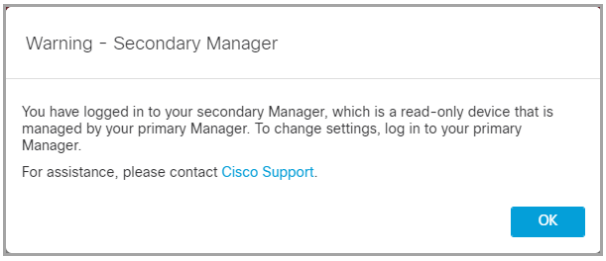

3. On the Security Insight dashboard, review the Flow Collection Trend.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

4. **If flow collection is in progress,** no further action is required. You are finished with the failover configuration.

   If flow collection stopped, use Central Management to reboot your Flow Collectors and secondary Manager in the following order (or refer to **Troubleshooting**):

   - Log in to your primary Manager.
   - From the main menu, select **Configure** > **Global > Central Management**.
   - Locate the Flow Collector.
   - Click the ••• (**Ellipsis**) icon in the **Actions** column.
   - Select **Reboot Appliance**. Follow the on-screen prompts.
   - **Flow Collectors:** Repeat these steps to reboot every Flow Collector in Central Management.
   - **Secondary Manager:** Repeat these steps to reboot your secondary Manager.

> ⚠ If your primary Manager goes offline because you rebooted it, it will resume the primary failover role when the appliance status returns to Connected and it detects the secondary Manager. If the primary Manager role changes to secondary and does not resolve itself, refer to **Troubleshooting**.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

Changing Failover Roles

Use the following instructions to change the primary and secondary Manager roles. Please note that they do not swap roles automatically.

> ⚠ When you change the failover configuration, the secondary Manager domain configuration is deleted, so make sure you follow the instructions in order.

Time

When you promote a secondary Manager to primary, it may take at least 1 hour for all appliances to change from **Config Channel Down** to **Connected**. Monitor the status in Central Management. Refer to **5. Confirm the Failover Configuration** for details.

1. Back up the Primary Manager

Before you change the failover roles, back up the primary Manager in case you need to restore the configuration in the future. Refer to **2. Back up Manager Configuration and Databases** for details.

2. Confirm the Appliance Status

1. Log in to your primary Manager.
2. From the main menu, select **Configure** > **Global > Central Management**.
3. Confirm the Appliance Status for each appliance is shown as **Connected**.

    - **Managers:** If the appliance status for the primary or secondary Manager is shown as Config Channel Down, check your communication settings and refer to **Troubleshooting**.
    - **Other Appliances:** If the appliance status for the Flow Collectors, Data Nodes, Flow Sensors, or UDP Directors is shown as Config Channel Down, use your configuration settings to check and reboot the appliance. For additional troubleshooting, refer to the Cisco Secure Network Analytics System Configuration Guide.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

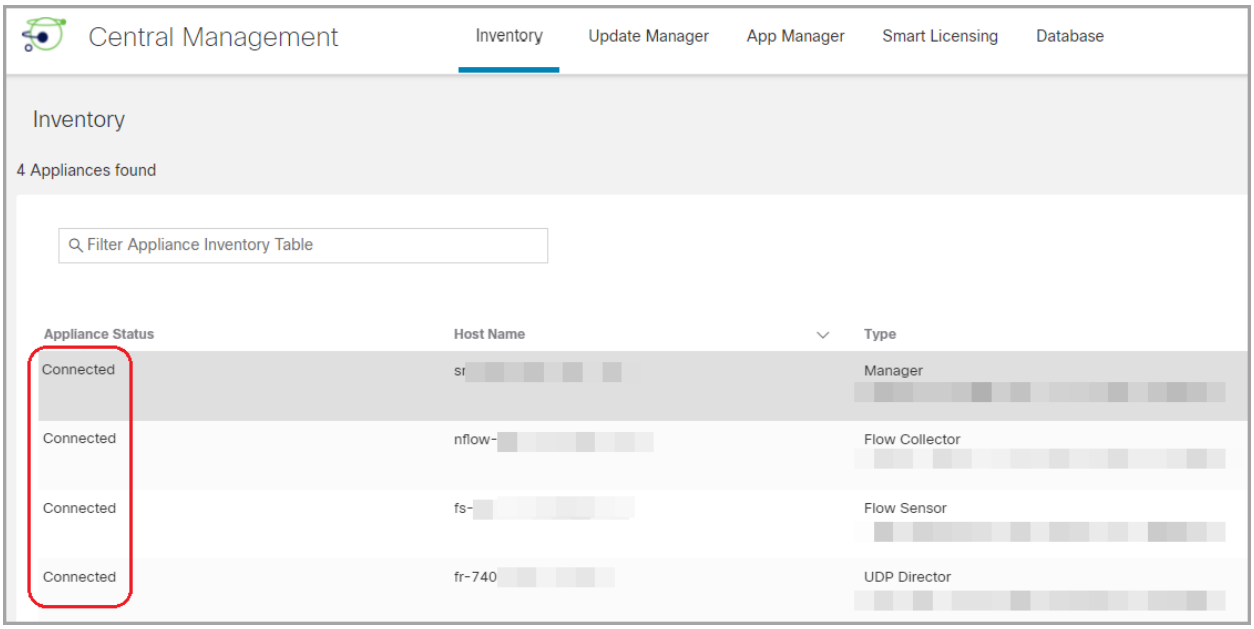

3. Change the Failover Configuration

Use the following instructions to change your primary Manager to secondary and promote your secondary Manager to primary.

In this configuration, your primary Manager becomes the secondary Manager, and its domain configuration is deleted. It will become read-only and synchronize with the newly- promoted primary Manager. For details, refer to **Saving the Failover Configuration**.

> ⚠ Do not add or remove appliances from Central Management until you've finished the failover configuration changes.

1. Change the Primary Manager to Secondary

1. In the current **primary** Manager, click the **Security Insight dashboard** tab.
2. From the main menu, select **Configure** > **Global > Manager Configuration**.
3. Click the **Failover Configuration** tab.
4. Confirm the **Failover Role** is shown as **Primary**.

   If your primary Manager is shown as Secondary, refer to **Troubleshooting**.

5. Click the **Failover Role** drop-down menu. Select **Secondary**.
6. Click **Save**.
7. Follow the on-screen prompts to save your changes.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

2. Change the Secondary Manager to Primary

1. Log in to your **secondary** Manager.
2. From the main menu, select **Configure** > **Global > Manager Configuration**.
3. Click the **Failover Configuration** tab.
4. Confirm the **Failover Role** is shown as **Secondary**.
5. Click the **Failover Role** drop-down menu. Select **Primary**.
6. Click **Save**.
7. Follow the on-screen prompts to save your changes.

4. Confirm your Configuration Changes

To confirm your failover configuration changes, go to **5. Confirm the Failover Configuration** and follow the instructions.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

Changing Network Interfaces

If your Managers are configured for failover, delete the failover relationship before you change the Manager`s network interfaces, host name, or network domain name. The overall steps are as follows:

> ⚠ If you delete the failover configuration, all domain configuration data will be deleted from the secondary Manager. Make sure you follow all instructions in order.

1. Delete the Failover Configuration

For instructions, refer to **Deleting the Failover Configuration**.

2. Change Manager Network Interfaces

Follow the instructions in the SSL/TLS Certificates for Managed Appliances Guide.

As part of the procedure, you will remove the appliance from Central Management temporarily. Also, make sure you follow the on-screen prompts and review if regenerating the certificate is required or if you can choose to preserve it.

> ⚠ If you are using custom certificates, save your certificates before you change your network settings (host name, network domain name, or IP address) in case you accidentally overwrite them. Follow the instructions in the SSL/TLS Certificates for Managed Appliances Guide or contact Cisco Support.

3. Configure Manager Failover

Follow the instructions in this guide to configure failover. Make sure you back up your Managers and add any new certificates to the Manager Trust Stores.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

Deleting the Failover Configuration

Before you delete the failover configuration, confirm the status of both Managers and follow the instructions in order.

> ⚠ If you delete the failover configuration, all domain configuration data will be deleted from the secondary Manager.

1. Confirm Appliance Status

Before you start, confirm the primary Manager shows the secondary Manager as a managed appliance, and confirm both Managers are shown as Connected.

1. Log in to your **primary** Manager.
2. Select **Configure** > **Global > Central Management**.
3. Confirm the Appliance Status for each appliance is shown as **Connected**.

    - **Managers:** If the appliance status for the primary or secondary Manager is shown as Config Channel Down, check your communication settings and refer to **Troubleshooting**.
    - **Other Appliances:** If the appliance status for the Flow Collectors, Flow Sensors, or UDP Directors is shown as Config Channel Down, check your configuration settings and use Central Management to reboot the appliance (••• **(Ellipsis) icon** > **Reboot Appliance**). For additional troubleshooting, refer to the Cisco Secure Network Analytics System Configuration Guide.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

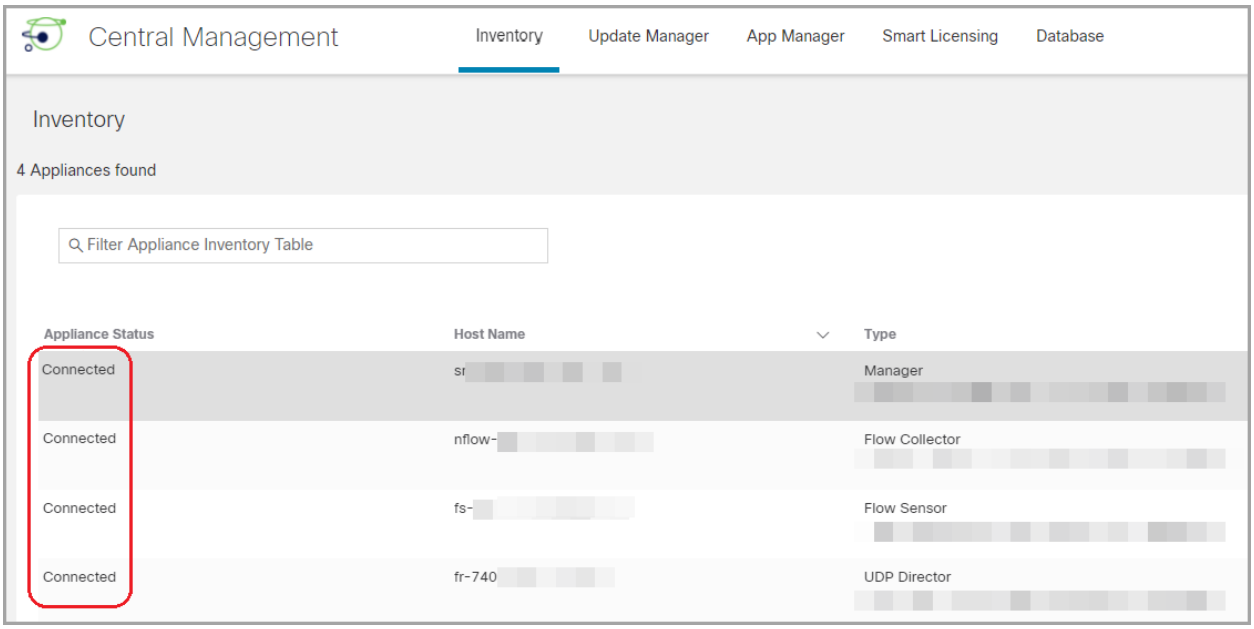

2. Review the Failover Roles

1. In the **primary** Manager, click the **Security Insight dashboard** tab.
2. From the main menu, select **Configure** > **Global** > **Manager Configuration**.
3. Click the **Failover Configuration** tab.
4. Confirm the **Failover Role** is shown as **Primary**.

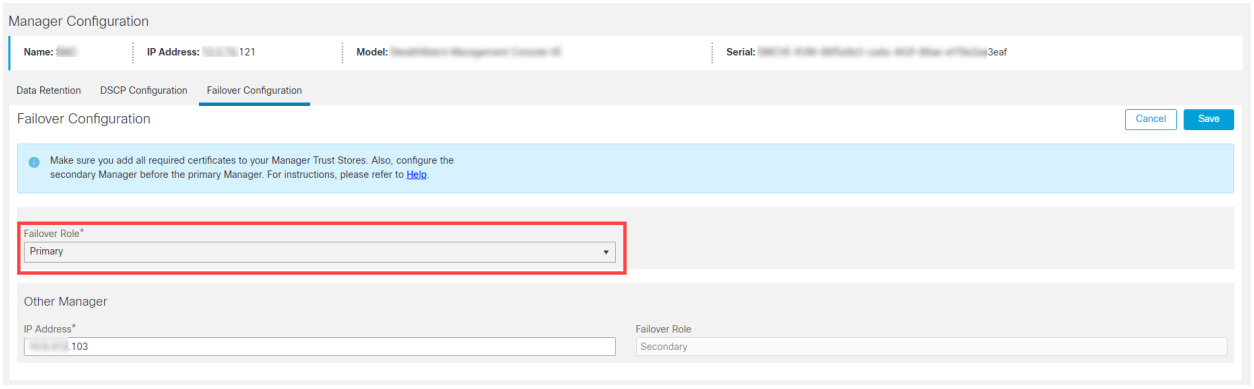

5. Log in to your **secondary** Manager. Follow steps 1 through 4 to confirm the **Failover Role** is shown as **Secondary**.

    - If the failover roles are correct for each Manager, keep the Failover Configuration tabs open on both Managers, and go to **3. Delete the Failover Configuration**.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

- If both Managers are shown as secondary, update the failover configuration so you have one primary Manager and one secondary Manager before you proceed with deleting. For instructions, refer to **Changing Failover Roles**.

> ⚠ Make sure you follow the configuration order and instructions in **Changing Failover Roles**. For assistance, please contact Cisco Support.

3. Delete the Failover Configuration

Use the following instructions to delete failover configuration. Make sure you follow these instructions in order.

> ⚠ If you delete the failover configuration, all domain configuration data will be deleted from the secondary Manager.

1. Go to the **Failover Configuration** tab on the **primary** Manager.
2. Click **Delete**.
3. Follow the on-screen prompts to delete the failover configuration.

> ⚠ If you delete the failover configuration, all domain configuration data will be deleted from the secondary Manager.

4. Go to the **Failover Configuration** tab on the **secondary** Manager.
5. Click **Delete**.
6. Follow the on-screen prompts to delete the failover configuration.

4. Remove the Secondary Manager from Central Management

1. In the **primary** Manager, open Central Management.

   Select **Configure** > **Global > Central Management**.

2. Locate the **secondary** Manager.

> ⚠ Confirm the IP address of the secondary Manager before you remove it.

3. Click the ••• (**Ellipsis**) icon. Select **Remove This Appliance**.
4. Follow the on-screen prompts to remove the secondary Manager from Central Management.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

5. Delete the Secondary Manager Certificates

Use the following instructions to delete the secondary Manager certificates from the other appliance Trust Stores.

> ⚠ Make sure you only delete outdated certificates that are no longer valid. If you delete current certificates, it will break communication with your system.

1. Return to Central Management in the primary Manager. Confirm the following:
   - The secondary Manager is no longer shown in inventory.
   - The Appliance Status for each appliance returns to Connected.
2. Click the ••• (**Ellipsis**) icon for the an appliance.
3. Select **Edit Appliance Configuration**.
4. Click the **General** tab. Locate the **Trust Store** section.
5. Locate the secondary Manager certificates.
6. Click **Delete** to remove each secondary Manager certificate from the Trust Store.
7. Repeat steps 2 though 6 on each appliance in Central Management.

6. Reset the Secondary Manager to Factory Defaults

To use the secondary Manager, reset the factory defaults. Follow the instructions in the Cisco Secure Network Analytics System Configuration Guide.

The procedure includes completing the following steps:

- Resetting the appliance to factory defaults.
- Configuring the IP address.
- Configuring the Manager using First Time Setup (SystemConfig).

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

Troubleshooting

Manager is Offline or Fails

Your primary Manager may go offline if the network is down, if you shut down the Manager and reboot it, or for other various reasons.

If your primary Manager goes offline because you rebooted it, it will resume the primary failover role when the appliance status returns to Connected and it detects the secondary Manager.

If the primary Manager role changes to secondary and does not resolve itself, review the following scenarios to determine what you need to do.

> For assistance, please contact Cisco Support.

If...	And...	Then...
The primary Manager fails or is shut down and rebooted,	You have manually promoted an existing secondary Manager to primary, and it is online,	When the original primary Manager reboots and reconnects, it may resume the primary failover role, and the manually promoted Manager may change to the secondary role. Verify the failover roles after both Managers are Connected. If you need to change the roles, refer to **Changing Failover Roles**.
The primary Manager fails or is shut down and rebooted,	You have not manually promoted an existing secondary Manager to primary, so there is no primary Manager online,	When you reboot the original primary Manager, both the original primary Manager and the original secondary Manager will be in the secondary role. Promote one of them to be the primary Manager. For instructions, refer to **Changing Failover Roles**.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

If...	And...	Then...
The network goes down and is restored,	You have manually promoted an existing secondary Manager to primary, and it is online,	When the network is restored, the original primary Manager may resume the primary failover role, and the manually promoted Manager may change to the secondary role. Verify the failover roles after both Managers are Connected. If you need to change the roles, refer to **Changing Failover Roles**.
The network goes down and is restored,	You have not manually promoted an existing secondary Manager to primary, so there is no primary Manager online,	The original primary Manager automatically resumes its role as primary, and the original secondary Manager automatically resumes its role as secondary Manager.

Trust Errors

If you receive an error that your Manager is not trusted, check the certificates in the Trust Store. Refer to **3. Add Certificates to Trust Stores** for instructions.

Flows Do Not Display on Secondary Manager

If the secondary Manager doesn't display flows, make sure the secondary Manager certificates are saved to the Flow Collector Trust Store. Refer to **3. Add Certificates to Trust Stores** for instructions.

Password Expiration

When the failover configuration is saved, the primary Manager pushes its local users and password credentials to the secondary Manager, so they are synchronized. This means you will use the same password to log in to your primary Manager and secondary Manager. To change the password on the secondary Manager, log in to your primary Manager.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

If your primary Manager is down and the password expires, you cannot change your password using the secondary Manager. In this case, wait until the primary Manager appliance status returns to Connected so you can change your password.

- To reset your passwords to the default, refer to the Cisco Secure Network Analytics System Configuration Guide.
- If you need to reset factory defaults on your primary Manager, process a return merchandise authorization, or re-deploy it, you also need to reset factory defaults on your secondary Manager and then reconfigure the failover relationship. To reset factory defaults, refer to the Cisco Secure Network Analytics System Configuration Guide. For assistance, please contact Cisco Support.

Analytics Jobs are Lagging

In both of the following instances, the "Analytics performance has degraded" system alarm will be triggered.

The secondary Manager has been promoted to primary Manager

When you change the role of the primary Manager to that of the secondary Manager, and more than 5 hours has passed before the original primary Manager has been recovered and re-assigned to the primary role, the "Analytics performance has degraded" system alarm will be triggered. Analytics will recover and run the jobs that occurred during the last 6 hours, while the original primary Manager was down. Job performance will continue to lag until your system has processed all jobs from the last 6 hours and begins to process jobs in real time.

An appliance went down due to degradation

If your system is experiencing degradation (which is usually due to insufficient resources such as CPU or memory), jobs will begin to lag. If this lag exceeds 5 hours, then the "Analytics performance has degraded" system alarm will be triggered. At this point, results will be incomplete and unreliable.

A possible cause for this failure is that you have increased the flows per second beyond what is supported in your setup. To resolve this, either reduce the flows per second or increase the resources on the Manager, the Data Store, or both. If you cannot resolve the issue, contact Cisco Support.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

Contacting Support

If you need technical support, please do one of the following:

- Contact your local Cisco Partner
- Contact Cisco Support
- To open a case by web: http://www.cisco.com/c/en/us/support/index.html
- For phone support: 1-800-553-2447 (U.S.)
- For worldwide support numbers: https://www.cisco.com/c/en/us/support/web/tsd-cisco-worldwide-contacts.html

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

Change History

Document Version	Published Date	Description
1_0	July 28, 2025	Initial Version.
1_1	July 31, 2026	Updated primary failover behavior after Manager recovery.

© 2026 Cisco Systems, Inc. and/or its affiliates. All rights reserved.

Copyright Information

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: https://www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2026 Cisco Systems, Inc. and/or its affiliates.
All rights reserved.