Cisco Remote PHY Device High Availability Configuration Guide for Cisco 1x2 / Compact Shelf RPD Software 4.1

First Published: 2018-03-30

Americas Headquarters
Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
http://www.cisco.com
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

© 2018 Cisco Systems, Inc. All rights reserved.

CONTENTS

CHAPTER 1 **Cisco Remote PHY Line Card and Supervisor Redundancy** 1

Hardware Compatibility Matrix for Cisco Remote PHY Device 1

Information About Remote PHY Line Card and Superviosr Redundancy 2

Line Card Redundancy 2

Supervisor Redundancy 3

How to Configure Remote PHY Line Card Redundancy 4

Configuring DPIC Ports 4

Configuring RPD 4

Configuring Remote PHY Line Card Redundancy 5

Verifying Remote PHY Line Card Redundancy Configuration 5

Feature Information for Remote PHY Line Card and Supervisor Redundancy 5

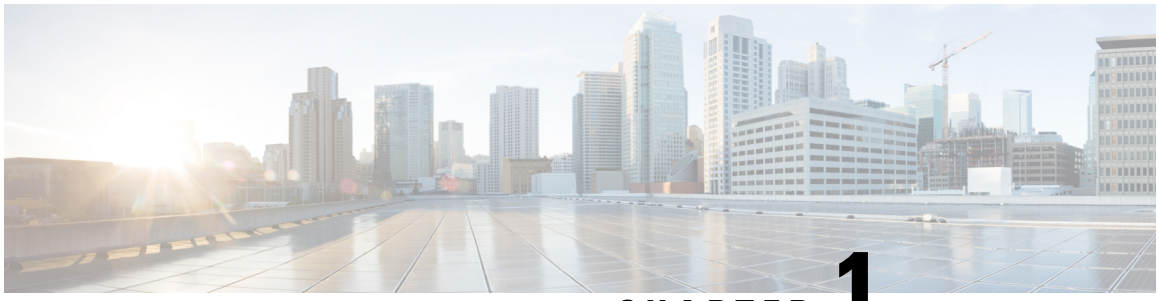

CHAPTER 1

Cisco Remote PHY Line Card and Supervisor Redundancy

Finding Feature Information

Your software release may not support all the features that are documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. The Feature Information Table at the end of this document provides information about the documented features and lists the releases in which each feature is supported.

Use Cisco Feature Navigator to find information about the platform support and Cisco software image support. To access Cisco Feature Navigator, go to the link http://tools.cisco.com/ITDIT/CFN/. You do not require a cisco.com login account.

- Hardware Compatibility Matrix for Cisco Remote PHY Device, on page 1
- Information About Remote PHY Line Card and Superviosr Redundancy, on page 2
- How to Configure Remote PHY Line Card Redundancy, on page 4
- Feature Information for Remote PHY Line Card and Supervisor Redundancy, on page 5

Hardware Compatibility Matrix for Cisco Remote PHY Device

Note Unless otherwise specified, the hardware components introduced in a given Cisco Remote PHY Device Software Release are supported in all subsequent releases.

Table 1: Hardware Compatibility Matrix for the Cisco Remote PHY Device

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Node	Cisco 1x2 / Compact Shelf RPD Software 2.1 and Later Releases

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Intelligent Node (iNode)	Cisco 1x2 / Compact Shelf RPD Software 4.1 and Later Releases Cisco Intelligent Remote PHY Device 1x2 • PID—iRPD-1X2= • PID—iRPD-1X2-PKEY=

Note The -PKEY suffix in the PID indicates units that enable the SCTE-55-2 Out-of-Band protocol support.

Information About Remote PHY Line Card and Superviosr Redundancy

Line Card Redundancy

In Remote PHY (R-PHY) configuration, RPDs connect to both active linecard and standby linecard, and have active connections to active linecard, standby connections to standby linecard. From RPD side, it connects to active core and standby core independently.

Each RPD has one principal core, and may have several auxiliary cores. LCHA needs to support multiple cores. These cores are on the same linecard or different linecards. The port on the standby linecard can protect all the same ports on the active linecards.

Figure 1: Multiple cores on the same line card

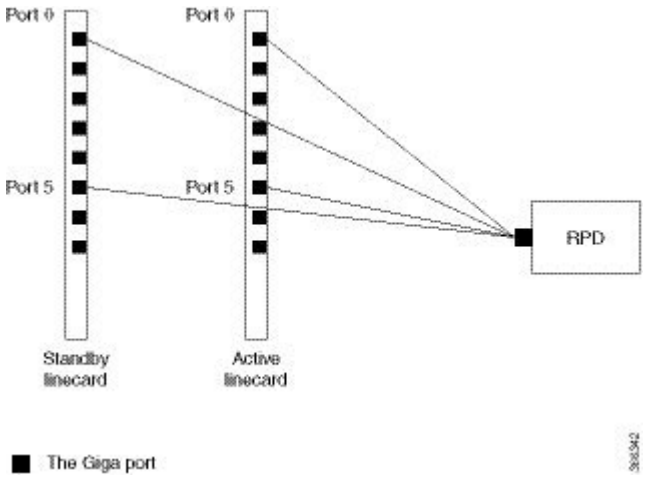

In the figure above, the RPD has multiple cores connected to the same active linecard. In order to support LCHA, RPD needs to connect to the same port on the standby linecard. In this way, RPD has several standby cores to protect the active cores. The standby core have the same resource as the active core.

When multiple cores connect to different active linecards, if they connect to different ports of the linecard, there will have different standby cores. If active core connects to the same port on different linecard, they share one standby core.

Figure 2: Multiple cores on different line cards

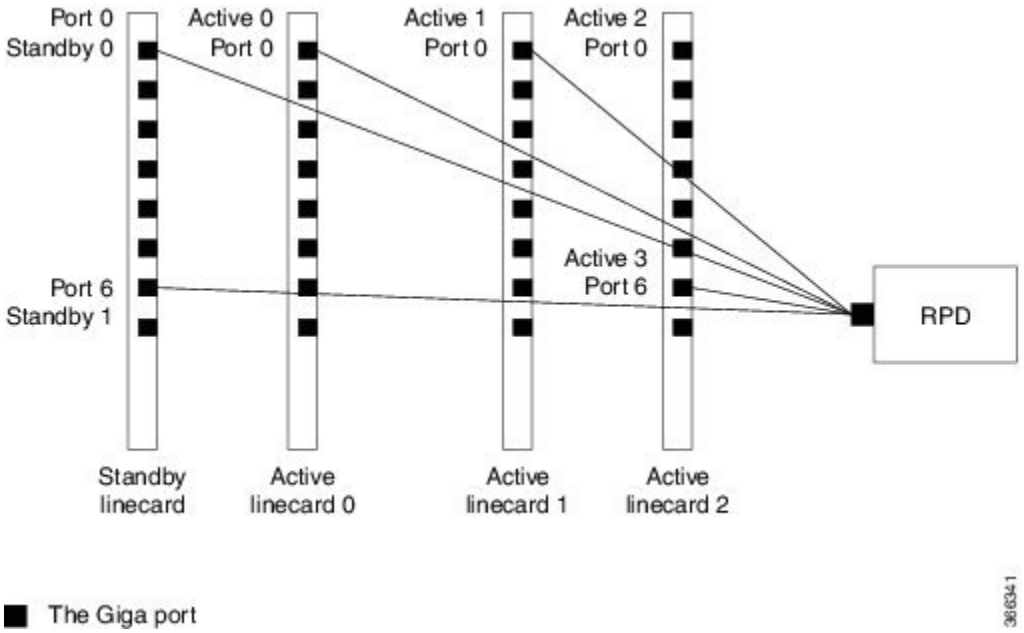

In the figure above, RPD have two standby cores. One standby core connects to port 6 of the standby linecard, it can protect the active core which connects to port 6 of the active linecard 2. The other standby core connects to port 0 of the standby linecard, it can protect the active cores connect to port 0 of linecard 0 and linecard 1. So for the standby core 0, it contains the resource for both active core 0 and active core 1.

When active linecard 0 fails over to standby linecard, the standby core 1 will be deleted, the standby core 0 will bring the resource of active core 0 to active. When linecard 2 fails over to standby linecard, the standby core 0 will be deleted, and standby core 1 will become active for active core 3.

For more information about Line Card Redundancy, see Line Card Redundancy.

Supervisor Redundancy

Compared to the SUP high availability recover process in iCMTS configuration, the Remote PHY SUP high availability recover process has RPD status change as shown in the example below:

```
show cable rpd 0004.9f00.0625 lcha-cores
MAC Address     IP Address    I/F        State         Role  HA   Name
0004.9f00.0625  120.105.6.10  Te0/1/1    recovering    Pri   Act  node1
0004.9f00.0625  120.105.6.10  Te9/1/1    recovering    NA    Sby  node1

show cable rpd 0004.9f00.0625 lcha-cores
MAC Address     IP Address    I/F        State         Role  HA   Name
0004.9f00.0625  120.105.6.10  Te0/1/1    init(l2tp)    Pri   Act  node1
0004.9f00.0625  120.105.6.10  Te9/1/1    init(l2tp)    NA    Sby  node1

show cable rpd 0004.9f00.0625 lcha-cores
MAC Address     IP Address    I/F        State         Role  HA   Name
```

```
0004.9f00.0625  120.105.6.10  Te0/1/1    online          Pri   Act  node1
0004.9f00.0625  120.105.6.10  Te9/1/1    online          NA    Sby  node1
```

The status of the RPD changes from recovering to online, indicating that the SUP redundancy is working in the Remote PHY configuration.

For more information about SUP redundancy, see Supervisor Redundancy.

How to Configure Remote PHY Line Card Redundancy

This section describes how to configure Remote PHY (R-PHY) Line Card Redundancy on Cisco cBR-8.

Configuring DPIC Ports

Note Sub-interfaces are not supported for DPIC interfaces on linecards in slots 0-3 and 6-9.

The following example shows how to configure DPIC port to support Remote PHY Line Card Redundancy:

```
Router# configure terminal
Router(config)# interface TenGigabitEthernet8/1/0
Router(config-if)# vrf forwarding te80
Router(config-if)# ip address 80.6.16.166 255.255.255.0
Router(config-if)# ip mtu 1500
Router(config-if)# exit
Router(config)# interface TenGigabitEthernet8/1/1
Router(config-if)# vrf forwarding te81
Router(config-if)# ip address 80.6.16.167 255.255.255.0
Router(config-if)# ip mtu 1500
Router(config-if)# exit
Router(config)# interface TenGigabitEthernet6/1/0
Router(config-if)# vrf forwarding te60
Router(config-if)# ip address 80.6.16.186 255.255.255.0
Router(config-if)# ip mtu 1500
Router(config-if)# exit
Router(config)# interface TenGigabitEthernet6/1/1
Router(config-if)# vrf forwarding te61
Router(config-if)# ip address 80.6.16.187 255.255.255.0
Router(config-if)# ip mtu 1500
```

Configuring RPD

The following example shows how to configure RPD to support Remote PHY Line Card Redundancy:

```
Router# configure terminal
Router(config)# cable rpd node1
Router(config-rpd)# identifier 0004.9f03.0055
Router(config-rpd)# core-interface te8/1/0
Router(config-rpd-core)# principal
Router(config-rpd-core)# rpd-ds 0 downstream-cable 8/1/0 profile 0
Router(config-rpd-core)# rpd-us 0 upstream-cable 8/1/0 profile 0
Router(config-rpd-core)# exit
Router(config-rpd)# core-interface te8/1/1
Router(config-rpd-core)# rpd-ds 0 downstream-cable 8/1/1 profile 0
Router(config-rpd-core)# rpd-us 0 upstream-cable 8/1/1 profile 0
Router(config-rpd-core)# exit
```

```
Router(config-rpd)# exit
Router(config)# cable rpd node2
Router(config-rpd)# identifier 0004.9f03.0163
Router(config-rpd)# core-interface te8/1/2
Router(config-rpd-core)# principal
Router(config-rpd-core)# rpd-ds 0 downstream-cable 8/0/1 profile 1
Router(config-rpd-core)# rpd-us 0 upstream-cable 8/0/2 profile 2
```

Configuring Remote PHY Line Card Redundancy

The following example shows how to configure Remote PHY Line Card Redundancy:

```
Router# configure terminal
Router(config)# redundancy
Router(config-red)# mode sso
Router(config-red)# linecard-group 0 internal-switch
Router(config-red-lc)# class 1:N
Router(config-red-lc)# member slot 8 primary
Router(config-red-lc)# member slot 6 secondary
Router(config-red-lc)# no revertive
```

Verifying Remote PHY Line Card Redundancy Configuration

To verify the Remote PHY line card redundancy configuration, use the example below:

```
Router# show redundancy linecard all
              LC     My          Peer         Peer      Peer
Slot Subslot  Group  State       State        Slot      Subslot  Role     Mode
-------------------------------------------------------------------------------
 8   -        0      Active      Stdby Warm   6         -        Active   Primary
 6   -        0      -           -            Multiple  None     Standby  Secondary

Router# show cable rpd lcha-cores
MAC Address     IP Address       I/F       State           Core Role  HA Role
0004.9f03.0055  80.6.16.15       Te6/1/0   online          Principal  Standby
0004.9f03.0055  80.6.16.15       Te8/1/0   online          Principal  Active
0004.9f03.0163  80.6.16.16       Te6/1/1   online          Principal  Standby
0004.9f03.0163  80.6.16.16       Te8/1/1   online          Principal  Active

Router# show cable rpd
MAC Address     IP Address       I/F       State           Core Role  HA Role
0004.9f03.0055  80.6.16.15       Te6/1/0   online          Principal  Active
0004.9f03.0163  80.6.16.16       Te6/1/1   online          Principal  Active
```

Feature Information for Remote PHY Line Card and Supervisor Redundancy

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Table 2: Feature Information for Remote PHY Line Card and Supervisor Redundancy

Feature Name	Releases	Feature Information
Remote PHY LCHA	Cisco 1x2 / Compact Shelf RPD Software 3.1	This feature was integrated into the Cisco Remote PHY Device.
Remote PHY SUPHA	Cisco 1x2 / Compact Shelf RPD Software 3.1	This feature was integrated into the Cisco Remote PHY Device.