Cisco Remote PHY Device Software Configuration Guide for Cisco 1x2 RPD Software 1.1

First Published: 2017-04-07

Last Modified: 2018-08-10

Americas Headquarters
Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
http://www.cisco.com
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

© 2017-2018 Cisco Systems, Inc. All rights reserved.

CONTENTS

PART I **Cisco Remote PHY System Overview** 11

CHAPTER 1 **Cisco Remote PHY System Overview** 1

- Introduction 1
- Hardware Compatibility Matrix for Cisco Remote PHY Device 2
- Benefits 3
- Cisco CCAP RF Line Card for R-PHY 3
- Cisco Digital Physical Interface Card 3
- Cisco Remote PHY Device 4
- Network Architecture 5
- Network Topologies 5

PART II **Cisco Remote PHY System Bring Up** 7

CHAPTER 2 **Cisco Remote PHY System Bring Up** 9

- Hardware Compatibility Matrix for Cisco Remote PHY Device 9
- Information about Bring Up 10
- How to Bring Up 10
  - Configuring DHCP Server 10
  - Configuring PTP 12
  - Configuring cBR-8 13

PART III **Remote PHY Provisioning** 15

CHAPTER 3 **Network Authentication** 17

- Hardware Compatibility Matrix for Cisco Remote PHY Device 17

Information about Network Authentication 18
How to Enable Network Authentication 18
Installing Certificates in Radius Server 18
Configuring Radius Server 19
Configuring Switch 19
Verifing Authentication Status 20

CHAPTER 4 **Synchronizing Time on Cisco Remote PHY Devices** 21
Hardware Compatibility Matrix for Cisco Remote PHY Device 21
Information about Time Synchronization 22
Remote DTI 22
Restrictions for Configuring Time Synchronization 22
How to Configure Time Synchronization 23
Configuring Time Interface and PTP domain 23
Verifying Time Interface and PTP Domain Configuration 24
Configure RPD PTP Connection 25
Verifying RPD PTP Connection Configuration 25
Associate R-DTI with RPD 25
Verifying Associating R-DTI with RPD 26
Verifying PTP Clock Functioning 28
Verifying PTP Clock Running Domain 28
Verifying Time Sync State 28
Verifying Time Sync Statistics 29
Configuration Examples 30
Example: Configuring Time Interface and PTP Domain 30
Example: Configure RPD PTP Connection 30
Example: Associate R-DTI with RPD 31
Feature Information for Synchronizing Time on R-PHY Devices 31

CHAPTER 5 **DEPI/UEPI/L2TP integration with Cisco Remote PHY Device** 33
Hardware Compatibility Matrix for Cisco Remote PHY Device 33
Information about DEPI/UEPI/L2TP integration with RPD 34
DEPI 34
UEPI 34

How to Configure DEPI/UEPI/L2TP integration with RPD 34
Configuring depi-class/l2tp-class Pair 35
Verifying the RPD Status 35
Display DEPI Related Information 35
Feature Information for DEPI/UEPI/L2TP integration with RPD 36

CHAPTER 6 DEPI Latency Measurement 37
Hardware Compatibility Matrix for Cisco Remote PHY Device 37
Information about DEPI Latency Measurement 38
How to Configure DLM 38
Configuring DLM 38
Verifying DLM Configuration 39
Example: DLM Configuration 39
Feature Information for DLM 39

CHAPTER 7 Multiple Cores 41
Hardware Compatibility Matrix for Cisco Remote PHY Device 41
Information about Multiple Cores 42
Restrictions for Multiple Cores Configuration 42
How to Configure Multiple Cores 42
Configuring Multiple Cores 43
Verifying Multiple Cores Configuration 43

PART IV Cisco Remote PHY Controller Profile and RPD Configuration 45

CHAPTER 8 Cisco Remote PHY Controller Profile and RPD Configuration 47
Hardware Compatibility Matrix for Cisco Remote PHY Device 48
Controller Profile and RPD 48
RPD Configurations 49
Prerequisites for Configuring Controller Profile and RPD 50
Restrictions for Configuring Controller Profile and RPD 50
Configure Controller Profile and RPD 50
Configure Upstream Controller Profile 51
Verify Upstream Controller Profile Configuration 51

Configure RPD for US Controller Profile 52
Configure Downstream Controller Profile 53
Verify Downstream Controller Profile Configuration 53
Configure RPD for DS Controller Profile 54
Verify RPD Association with Controller Profile 54
Configure Downstream Sharing 54
Configure Controller in Fiber Node 55
Verify CM RPD Association 55
Display GCP Ralated Information 55
Display DEPI Related Information 56
Troubleshooting Tips 57
Configuration Examples 58
Example: Controller Profile Configuration 58
Example: Downstream Sharing Configuration 58
Feature Information for Remote PHY Controller Profile and RPD Configuration 59

PART V **Cisco Remote PHY Device Downstream Virtual Splitting 61**

CHAPTER 9 **Cisco Remote PHY Device Downstream Virtual Splitting 63**
Hardware Compatibility Matrix for Cisco Remote PHY Device 63
Information about RPD Downstream Virtual Splitting 64
Configure RPD Downstream Virtual Splitting 64
Configure Multicast DEPI Pool 65
Enable Multicast Sharing under Downstream Controller Profile 65
Configure the RPD with the Same Downstream Controller and Profile 66
Configure the RPDs to different fiber-nodes 66
Configure the RPDs to MAC Domain 66
Enable Multicast on Cisco cBR-8 Router 67
Enable Multicast on Layer 2 Switch 67
Enable Multicast on Layer 3 Router 67
Verify RPD Downstream Virtual Splitting Configuration on cBR-8 Side 68
Verify RPD Virtual Downstream Splitting Configuration on Node Side 69
Example: RPD Downstream Virtual Splitting Configuration 69
Feature Information for RPD Downstream Virtual Splitting 71

PART VI Cisco Remote PHY Video Configuration 73

CHAPTER 10 Cisco Remote PHY Video Configuration 75

Hardware Compatibility Matrix for Cisco Remote PHY Device 75

Hardware Compatibility Matrix for Cisco Remote PHY Device 76

Information About R-PHY Video Configuration 77

How to Configure R-PHY Video 77

Configuring Downstream Controller Profile 77

Configuring RPD 78

Configuring Downstream Sharing 78

Configuring Video 79

Example: R-PHY Video Configuration 79

Feature Information for Remote PHY Video 80

PART VII Cisco Remote PHY Out of Band 81

CHAPTER 11 Cisco Remote PHY Out of Band 83

Hardware Compatibility Matrix for Cisco Remote PHY Device 83

Information About Out of Band 84

How to Configure 55-1 OOB 84

Configuring Global 55-1 OOB 84

Configuring Profile for 55-1 OOB 84

Configuring Remote PHY Device for 55-1 OOB 85

Example: OOB Configuration 85

Feature Information for OOB 86

PART VIII Cisco Remote PHY Line Card and Supervisor Redundancy 87

CHAPTER 12 Cisco Remote PHY Line Card and Supervisor Redundancy 89

Hardware Compatibility Matrix for Cisco Remote PHY Device 89

Information About Remote PHY Line Card and Supervisor Redundancy 90

Line Card Redundancy 90

Supervisor Redundancy 91

How to Configure Remote PHY Line Card Redundancy 92
Configuring DPIC Ports 92
Configuring RPD 92
Configuring Remote PHY Line Card Redundancy 93
Verifying Remote PHY Line Card Redundancy Configuration 93
Feature Information for Remote PHY Line Card and Supervisor Redundancy 93

PART IX **Cisco Remote PHY Management** 95

CHAPTER 13 **Secure Software Download** 97
Hardware Compatibility Matrix for Cisco Remote PHY Device 97
Information About Secure Software Download 98
Prerequisites for Upgrading Software using SSD 98
How to Upgrade Software from RPD and Cisco cBR Using SSD 98
Initiating RPD Software Upgrade from Cisco cBR 99
Initiating Software Upgrade from RPD Using SSD 99
Verifying Software Upgrade Using SSD Configuration 99
Examples for Upgrading HA RPHY Software 100
Example: HA RPHY Software Upgrade from Cisco cBR 100
Example: HA RPHY Software Upgrade from FCC or Master eRPD 100
Feature Information for Secure Software Download 100

CHAPTER 14 **Cisco Remote PHY Fault Management** 103
Information About Fault Management 103
RPD Event Reporting 103
Restrictions for Configuring RPD Events 103
How to Configure RPD Events 104
Configuring RPD Events 104
Applying the Event Profile to RPD 104
Getting RPD Events 105
Clearing All Events on Cisco cBR Database 105
Viewing the RPD Events 105
Viewing RPD Events Using Log 105
Configuration Examples 106

Example: RPD Event Configuration 106
Example: RPD Event Configuration 106
Feature Information for R-PHY Fault Management 107

CHAPTER 15 **Cisco Remote PHY Device Operations and Debugging** 109
Hardware Compatibility Matrix for Cisco Remote PHY Device 109
Information about RPD Operations and Debugging 110
Prerequisites for RPD Operations 110
How to Access and Debug RPD 110
Accessing RPD using SSH 110
Disabling SSH Login Password 111
Debugging RPD 111
Verifying Disabled SSH Password Login 112
Configuration Examples 112
Example: Generating a New NMS pubkey 112
Example: Adding NMS pubkey in RPD 112
Feature Information for RPD Operations and Debugging 113

PART I

Cisco Remote PHY System Overview

- Cisco Remote PHY System Overview, on page 1

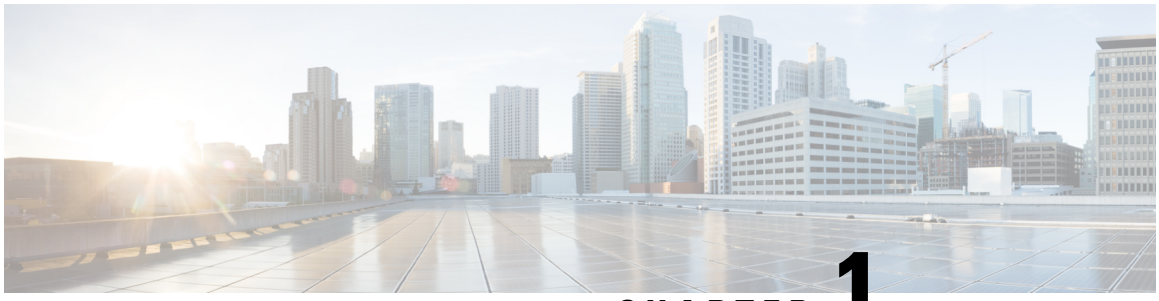

CHAPTER 1

Cisco Remote PHY System Overview

Finding Feature Information

Your software release may not support all the features that are documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. The Feature Information Table at the end of this document provides information about the documented features and lists the releases in which each feature is supported.

- Introduction, on page 1
- Hardware Compatibility Matrix for Cisco Remote PHY Device, on page 2
- Benefits, on page 3
- Cisco CCAP RF Line Card for R-PHY, on page 3
- Cisco Digital Physical Interface Card, on page 3
- Cisco Remote PHY Device, on page 4
- Network Architecture, on page 5
- Network Topologies, on page 5

Introduction

Driven by market evolution towards triple-play services, cable operators in emerging markets are seeking standardized and digital fiber-based solutions for economical and future proof access technologies. Much of the demand is driven by the need to provide higher bandwidth packet transport for Internet connectivity, video and voice services.

Data Over Cable Systems Interface Standard (DOCSIS®) is a standardized technology for services over cable and thus has strong interoperability between system providers. It also provides robust Quality of Service (QoS) methods, ensuring packet delivery during periods of network congestion. Traditionally, DOCSIS runs on linear fiber (or HFC) to provide service and is not naturally applicable for digital fiber. Cisco has bridged the gap by introducing a new access technology called the Remote PHY.

Existing Architecture

In the emerging markets, most triple-play consumers live in multi-tenant buildings (referred to as Multi Dwelling Units or MDU) with the number of residents usually being less than 500 residents per building or cluster. These buildings are typically served by fiber with one of several “final 100 meter” technologies installed in the buildings. These technologies include fiber, twisted pair, Ethernet, and coaxial. Cable operators have access to the cable in the building and use this cable for their services. Several technologies exist for enabling two-way services over cable. These include a number of proprietary and vendor-specific methods.

However, a standards-based approach to using cable is typically preferred by operators, since this ensures vendor interoperability.

Need for the Cisco Remote PHY Solution

DOCSIS and EuroDOCSIS are standards that define two-way operation over a cable network. DOCSIS provides the necessary Quality of Service (QoS) tools for ensuring voice call connectivity during periods of network congestion that are anticipated in triple-play networks. DOCSIS is a robust and mature technology for voice, video, and IP video services.

The Cisco Remote PHY solution leverages existing IP technologies like Ethernet PON (EPON), Gigabit-capable Passive Optical Networks (GPON), and Metro Ethernet (MetroE) equipment; it deploys DOCSIS in MDUs over digital fiber to enable two-way services over cable.

Hardware Compatibility Matrix for Cisco Remote PHY Device

Note Unless otherwise specified, the hardware components introduced in a given Cisco Remote PHY Device Software Release are supported in all subsequent releases.

Table 1: Hardware Compatibility Matrix for the Cisco Remote PHY Device

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Node	**Cisco 1x2 / Compact Shelf RPD Software 2.1 and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2= **Cisco 1x2 / Compact Shelf RPD Software 2.1a and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2-PKEY=
Cisco GS7000 Super High Output Intelligent Node (iNode)	**and Later Releases** Cisco Intelligent Remote PHY Device 1x2 • PID—iRPD-1X2= • PID—iRPD-1X2-PKEY=

Note The -PKEY suffix in the PID indicates units that enable the SCTE-55-2 Out-of-Band protocol support.

Benefits

The Cisco Remote PHY solution provides a cost-effective digital fiber-based DOCSIS solution that uses Ethernet PON (EPON), Gigabit-capable Passive Optical Networks (GPON), or Metro Ethernet (MetroE) as the transmission network between the Cisco CMTS and CM. Both the PON technology and DOCSIS is used in the same network.

- Simple and low cost PON transmission as opposed to costly HFC transformation.
- Reduced investment cost including capital and operational expenditure.
- Low-cost yet highly stable Cisco GS7000 node (includes only the PHY layer).
- Reduced CMTS hardware complexity.
- No restriction on Converged Interconnect Network (CIN) network.
- Futureproof architecture. Easy to migrate as the hardware and control functions are on separate layers.
- End-to-end QoS assurance provided by DOCSIS.
- Support for all DOCSIS services.
- Support for existing DOCSIS network provisioning system.
- High access bandwidth.
- With deep fiber, the optical noise contribution to SNR is eliminated. As a result, the remote QAM modulator runs at higher orders of modulation as compared to a centralized QAM modulator.

Cisco CCAP RF Line Card for R-PHY

The Cisco CCAP RF line card for remote PHY architecture is available in two flavours:

- CBR-LC-8D31-16U30—This RF line card with the downstream and upstream PHY modules can be connected with the Cisco GS7000 node by configuring it using the **card cBR-CCAP-LC-40G r-phy** command.
- CBR-CCAP-LC-40G-R—This RF line card with no downstream and upstream PHY modules can be connected with the Cisco GS7000 node.

Cisco Digital Physical Interface Card

The Cisco Digital Physical Interface Card (DPIC) transmits and receives RF signals between the subscriber and headend over the hybrid fiber-coaxial (HFC) system and is DOCSIS-compliant. This interface card is designed specifically for the Cisco cBR router. The PID is cBR-DPIC-8X10G.

The DPIC is installed in the CMTS and connected to the Cisco GS7000 node via the EPON, GPON, or Metro Ethernet. It supports both downstream and upstream traffic. Both the downstream and upstream traffic share the same ports.

The DPIC supports:

- Eight ten gigabit ethernet SFP+ interfaces
- 80 gigabit non-blocking switching architecture with 40+40 protection scheme
- 40 gigabit DOCSIS traffic bandwidth when connected with the Cisco CBR-CCAP-LC-40G-R line card
- Cisco SFP-10G-SR-S/Cisco SFP-10G-LR-S/Cisco SFP-10G-ZR-S/Cisco SFP-10G-ER-S optic modules
- MACSec and 1588 TC

Cisco Remote PHY Device

The Cisco Remote PHY Device (RPD) has two variants – The standard RPD and the newer Intelligent RPD (iRPD). The standard RPD resides inside the Cisco GS7000 node while the Intelligent RPD (iRPD) resides inside the Intelligent Node. Below are some of its features:

- Full spectrum DOCSIS 3.0 support
- Full spectrum DOCSIS 3.1 support
- Converged broadcast, narrowcast, and VOD video support
- Out of Band (OOB) signaling support
- Dual 10GBE SFP/SFP+ backhaul connectivity
- Support of Daisy Chain architecture topology
- CCAP support
- Support of optical overlay architectures

Additionally, the Cisco Intelligent Remote PHY Device (iRPD) provides an interface to the Intelligent Node RF section.This interface supports control plane communication that allows more extensive diagnostic and configuration control. The Intelligent Node supports touch-less configuration, per port spectrum capture, power-savings mode, and other enhanced features.

Figure 1: Cisco RPD

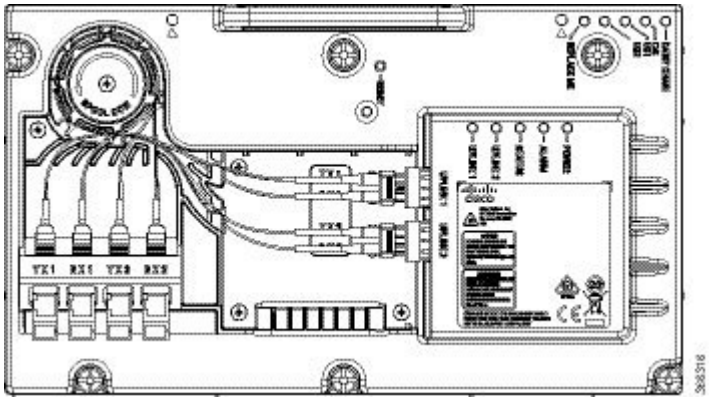

Network Architecture

The Cisco Remote PHY solution supports the *Single Controller Sharing* architecture. In this architecture, multiple Cisco GS7000 equipments share the downstream and upstream channels of a Cisco RF line card in a cisco cBR chassis.

Figure 2: Single Controller Sharing Architecture

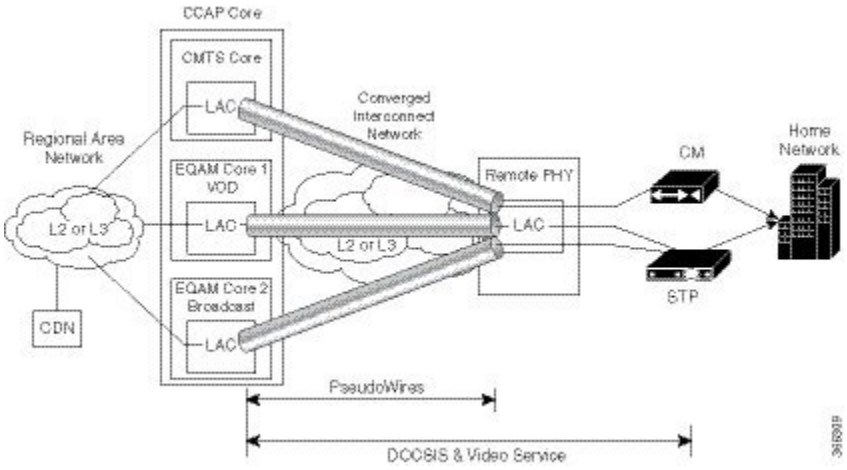

Network Topologies

The Cisco Remote PHY solution supports the following Ethernet-based networking topologies.

Figure 3: Standard Deployment

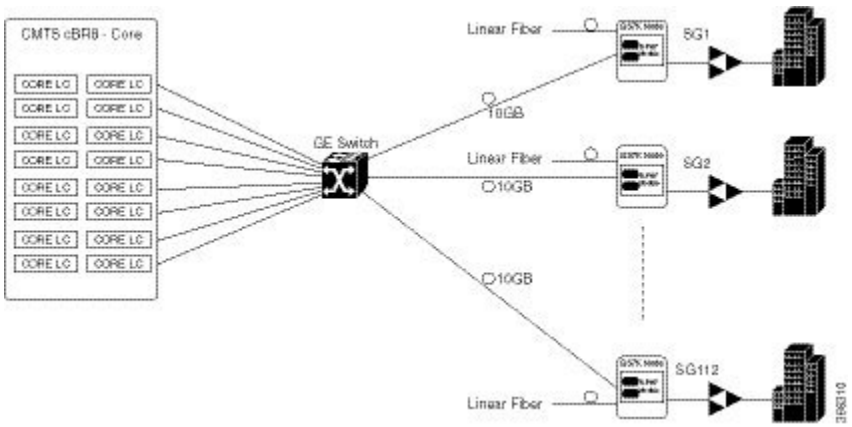

PART II

Cisco Remote PHY System Bring Up

- Cisco Remote PHY System Bring Up, on page 9

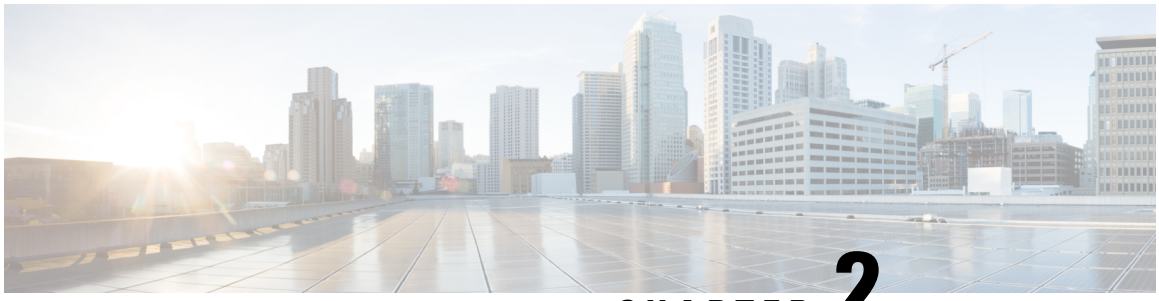

CHAPTER 2

Cisco Remote PHY System Bring Up

Finding Feature Information

Your software release may not support all the features that are documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. The Feature Information Table at the end of this document provides information about the documented features and lists the releases in which each feature is supported.

- Hardware Compatibility Matrix for Cisco Remote PHY Device, on page 9
- Information about Bring Up, on page 10
- How to Bring Up, on page 10

Hardware Compatibility Matrix for Cisco Remote PHY Device

Note Unless otherwise specified, the hardware components introduced in a given Cisco Remote PHY Device Software Release are supported in all subsequent releases.

Table 2: Hardware Compatibility Matrix for the Cisco Remote PHY Device

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Node	**Cisco 1x2 / Compact Shelf RPD Software 2.1 and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2= **Cisco 1x2 / Compact Shelf RPD Software 2.1a and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2-PKEY=

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Intelligent Node (iNode)	**and Later Releases** Cisco Intelligent Remote PHY Device 1x2 • PID—iRPD-1X2= • PID—iRPD-1X2-PKEY=

Note The -PKEY suffix in the PID indicates units that enable the SCTE-55-2 Out-of-Band protocol support.

Information about Bring Up

Bring up process is prerequisite to the operation of the remote PHY system, just like the cable modem bring up in a DOCSIS system.

How to Bring Up

This section describes how to bring up RPD on Cisco cBR-8.

Configuring DHCP Server

To configure DHCP server, follow the steps below:

Procedure

Step 1 Add option for CCAP-Core. Fill in the name, DHCP type, and vendor option string as shown in the figure below.

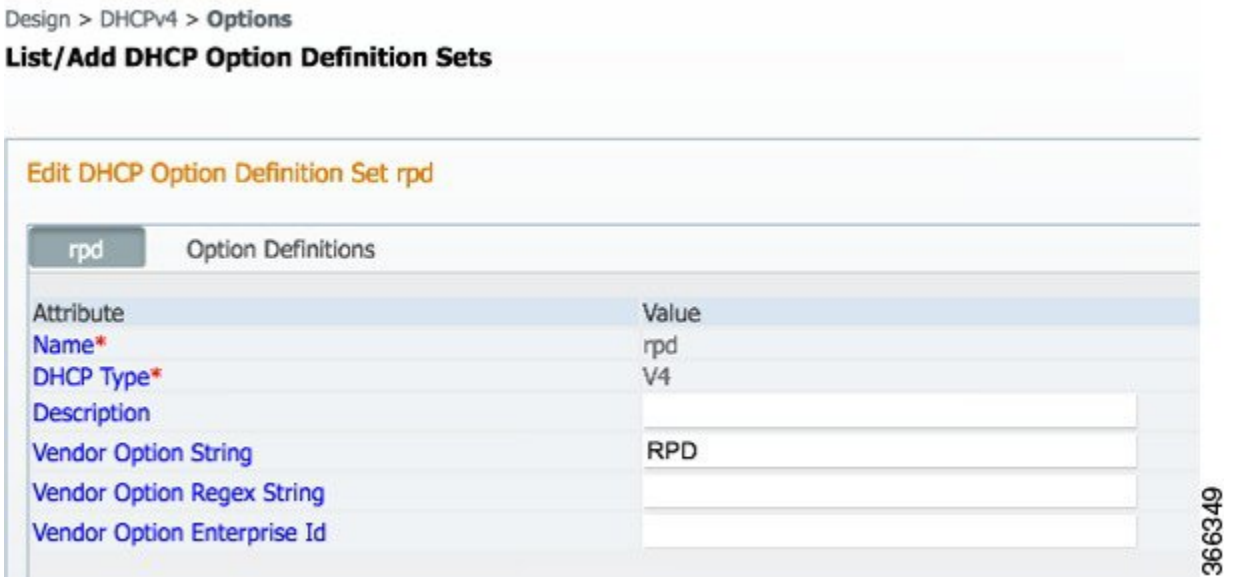

Step 2 Define option. Fill in the option number and name as shown in the figure below.

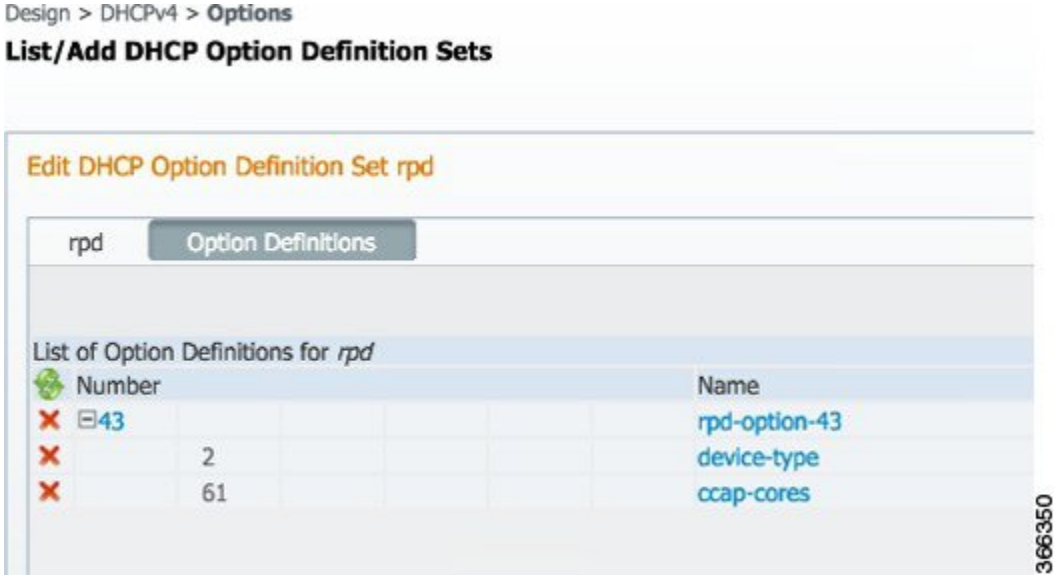

Step 3 Define suboption. Fill in the name, type and repeat of suboption 61 as shown in the figure below..

Step 4 Add the option into policy as shown in the figure below. Replace the IP address 120.102.15.1 in the figure to the DPIC port IP address.

Configuring PTP

To configure PTP, use the following example as reference:

On cBR-8 router:

```
interface Loopback1588
  ip address 159.159.159.4 255.255.255.255
interface TenGigabitEthernet5/1/3   /* connect to ASR903 */
  ip address 192.104.10.4 255.255.255.0

ip route 10.90.3.93 255.255.255.255 192.104.10.93   /* route to ASR903 loopback ip */

ptp clock ordinary domain 0
  servo tracking-type R-DTI
  clock-port slave-from-903 slave
    delay-req interval -4
    sync interval -5
    sync one-step
    transport ipv4 unicast interface Lo1588 negotiation
    clock source 10.90.3.93   /* ASR903 loopback ip */

ptp r-dti 1
```

```
  ptp-domain 0   /* same domain number with ptp server */
  clock-port 1
    ethernet 1   /* default value is same index with clock-port index, for RPD, ethernet
1=vbh0, ethernet 2=vbh1 */
    clock-source 10.90.3.93 gateway 93.3.10.2   /* clock-source is ASR093 loopback ip,
gateway is ASR903 BDI ID for node */
```

On ASR903 router as PTP master:

```
ptp clock ordinary domain 0
 clock-port Master-to-all-cBR8 master
  sync interval -5
  sync one-step
  transport ipv4 unicast interface Lo1588 negotiation

interface Loopback1588
 ip address 10.90.3.93 255.255.255.255

interface GigabitEthernet0/3/5
 no ip address
 negotiation auto
 cdp enable
 service instance 31 ethernet   /* 31 is vlan id */
  encapsulation dot1q 31
  rewrite ingress tag pop 1 symmetric
  bridge-domain 31
 service instance 32 ethernet
  encapsulation dot1q 32
  rewrite ingress tag pop 1 symmetric
  bridge-domain 32
interface BDI31   /* for cBR, SUP PIC */
 ip address 192.104.10.93 255.255.255.0
 no shut
interface BDI32   /* For RPD */
 ip address 93.3.10.2 255.255.255.0
 no shut

ip route 159.159.159.4 255.255.255.255 192.104.10.48   /* route to cbr-8 loopback ip */
```

Configuring cBR-8

To configure the cBR-8 to bring up the RPD, use the following example as reference:

```
/* D-PIC TenGiga interface config */
interface TenGigabitEthernet0/1/0
  ip address 93.3.10.1 255.255.255.0
  ip helper-address 20.1.0.33

/* Downstream/Upstream controller profile */
cable downstream controller-profile 101
rf-chan 0 95
  type DOCSIS
  frequency 381000000
  rf-output NORMAL
  qam-profile 1
  docsis-channel-id 1

cable upstream controller 201
  us-channel 0 channel-width 1600000 1600000
  us-channel 0 docsis-mode atdma
  us-channel 0 minislot-size 4
```

```
  us-channel 0 modulation-profile 221
  no us-channel 1 shutdown

/* RPD configuration */
cable rpd node1
  identifier 0004.9f03.0061
  core-interface Te0/1/0
    rpd-ds 0 downstream-cable 0/0/0 profile 101
    rpd-us 0 upstream-cable 0/0/0 profile 201
  r-dti 1
  rpd-event profile 0
  rpd-55d1-us-event profile 0

interface Cable0/0/0
  load-interval 30
  downstream Downstream-Cable 0/0/0 rf-channel 0-23
  upstream 0 Upstream-Cable 0/0/0 us-channel 0
  upstream 1 Upstream-Cable 0/0/0 us-channel 1
  upstream 2 Upstream-Cable 0/0/0 us-channel 2
  upstream 3 Upstream-Cable 0/0/0 us-channel 3
  cable upstream bonding-group 1
    upstream 0
    upstream 1
    upstream 2
    upstream 3
    attributes 80000001
    cable bundle 1
  cable ip-init ipv6
interface Wideband-Cable0/0/0:0
  cable bundle 1
  cable rf-channels channel-list 0-7 bandwidth-percent 10
interface Wideband-Cable0/0/0:1
  cable bundle 1
  cable rf-channels channel-list 8-15 bandwidth-percent 10
cable fiber-node 200
  downstream Downstream-Cable 0/0/0
  upstream Upstream-Cable 0/0/0
```

PART III

Remote PHY Provisioning

- Network Authentication, on page 17
- Synchronizing Time on Cisco Remote PHY Devices, on page 21
- DEPI/UEPI/L2TP integration with Cisco Remote PHY Device, on page 33
- DEPI Latency Measurement, on page 37
- Multiple Cores, on page 41

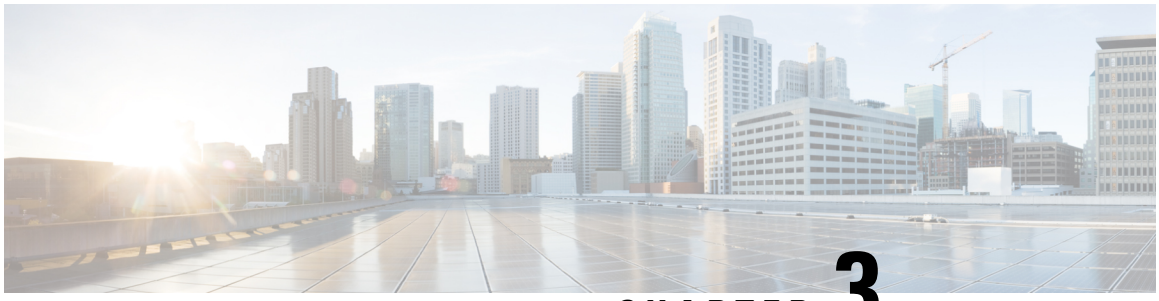

CHAPTER 3

Network Authentication

This document describes the Remote PHY device network authentication on the Cisco cBR Series Converged Broadband Router.

Finding Feature Information

Your software release may not support all the features that are documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. The Feature Information Table at the end of this document provides information about the documented features and lists the releases in which each feature is supported.

- Hardware Compatibility Matrix for Cisco Remote PHY Device, on page 17
- Information about Network Authentication, on page 18
- How to Enable Network Authentication, on page 18

Hardware Compatibility Matrix for Cisco Remote PHY Device

Note Unless otherwise specified, the hardware components introduced in a given Cisco Remote PHY Device Software Release are supported in all subsequent releases.

Table 3: Hardware Compatibility Matrix for the Cisco Remote PHY Device

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Node	**Cisco 1x2 / Compact Shelf RPD Software 2.1 and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2= **Cisco 1x2 / Compact Shelf RPD Software 2.1a and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2-PKEY=

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Intelligent Node (iNode)	**and Later Releases** Cisco Intelligent Remote PHY Device 1x2 • PID—iRPD-1X2= • PID—iRPD-1X2-PKEY=

Note The -PKEY suffix in the PID indicates units that enable the SCTE-55-2 Out-of-Band protocol support.

Information about Network Authentication

RPD must be able to operate in both authenticated and unauthenticated networks. Whether authentication is required for an RPD is determined by the network that it is connected to. In some cases, RPD is located in an untrusted network, and it must connect to devices inside the trusted network, which presents a potential security vulnerability. 802.1x is introduced to provide authentication services to eliminate the potential security issues.

802.1x is a Layer 2 protocol that uses EAP (Extensible Authentication Protocol) to provide authentication services. Following certificates are needed to use the network authentication:

- Cablelabs Root CA certificate: caRoot.pem
- CableLabs Device CA Certificate: deviceCA.pem
- RPD Certificate: rpdCert.pem, private key: rpd.key
- Cablelabs Service Provider CA Certificate: spCA.pem
- AAA Server Certificate: aaaCert.pem, private key: aaa.key

How to Enable Network Authentication

This section describes how to enable network authentication for RPD.

Installing Certificates in Radius Server

To install the certificate in Radius server, follow the steps below:

Procedure

Step 1 Combine CA certificate for AAA server.

Example:

```
cat spCA.pem caRoot.pem > ca_root_srv.pem
```

Step 2 In freeRadius Server, copy "ca_root_srv.pem", "spCA.pem", "aaaCert.pem" and "aaa.key" to "/etc/freeradius/certs".

Configuring Radius Server

To install the certificate in RPD, follow the steps below:

Procedure

Step 1 Define a new client in /etc/freeradius/clients.conf.

Example:

```
client rphytest_ng13 {
        ipaddr = 20.5.0.36
        secret = rphytest
        shortname = ng13_switch
        require_message_authenticator = yes
}
```

The "ipaddr" is the switch's management ip address.

Step 2 In "/etc/freeradius/eap.conf", change the following lines in "tls" to specify the server's private key file and certificate files.

Example:

```
tls {
      …
        private_key_file = ${certdir}/aaa.key
        certificate_file = ${certdir}/aaaCert.pem
        CA_file = ${cadir}/ca_root_srv.pem
}
```

Step 3 Start radius in radius sever.

Example:

```
sudo freeradius
```

Make sure only one freeradius instance is running.

Configuring Switch

To configure the switch, follow the steps below:

Note This procedure is for Catalyst 3750 switch, other switch may use different commands.

Procedure

Step 1 Add the following configuration in global configuration mode.

Example:

```
dot1x system-auth-control   /* enable 802.1x */
aaa new-model
aaa authentication dot1x default group radius
radius-server host 10.79.41.103 auth-port 1812 key rphytest
```

Step 2 Add the following configuration under interface which connects to RPD.

Example:

```
authentication port-control auto
dot1x pae authenticator
```

Verifying Authentication Status

To displays dot1x authentication information for RPD, use the **show dot1x** command as shown in the following example:

```
Router# show dot1x summary
 Interface        Core-id                  EAP_Received     Status
 vbh0             CORE-3415960568          True             UP

Router# show dot1x detail
Interface        Core-id                  EAP_Received        Status
vbh0             CORE-3415960568          True                UP
bssid=01:80:c2:00:00:03
freq=0
ssid=
id=0
mode=station
pairwise_cipher=NONE
group_cipher=NONE
key_mgmt=IEEE 802.1X (no WPA)
wpa_state=COMPLETED
ip_address=30.85.40.47
address=00:04:9f:00:03:73
Supplicant PAE state=AUTHENTICATED
suppPortStatus=Authorized
EAP state=SUCCESSselected
Method=13 (EAP-TLS)EAP TLS
cipher=ECDHE-RSA-AES256-SHA
tls_session_reused=0
eap_session_id=0d53798f5b46014cc92a4ac1151521bae6a14c98f919eb5e8c81a701b7272be7f812e7e5a75881768d74d311795a3b1f0e37bfa7fff7dcc4685d36f216bec59850
uuid=ab722cfb-84dc-5835-a905-edfec20f78c3
```

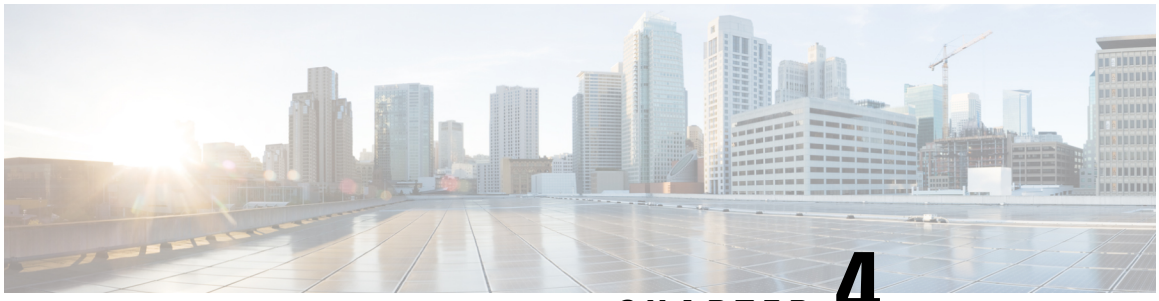

CHAPTER 4

Synchronizing Time on Cisco Remote PHY Devices

This section explains how to synchronize time on the Remote PHY (R-PHY) devices and CCAP core of the Cisco cBR Router.

- Hardware Compatibility Matrix for Cisco Remote PHY Device, on page 21
- Information about Time Synchronization, on page 22
- How to Configure Time Synchronization, on page 23
- Configuration Examples, on page 30
- Feature Information for Synchronizing Time on R-PHY Devices, on page 31

Hardware Compatibility Matrix for Cisco Remote PHY Device

Note Unless otherwise specified, the hardware components introduced in a given Cisco Remote PHY Device Software Release are supported in all subsequent releases.

Table 4: Hardware Compatibility Matrix for the Cisco Remote PHY Device

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Node	**Cisco 1x2 / Compact Shelf RPD Software 2.1 and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2= **Cisco 1x2 / Compact Shelf RPD Software 2.1a and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2-PKEY=

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Intelligent Node (iNode)	**and Later Releases** Cisco Intelligent Remote PHY Device 1x2 • PID—iRPD-1X2= • PID—iRPD-1X2-PKEY=

Note The -PKEY suffix in the PID indicates units that enable the SCTE-55-2 Out-of-Band protocol support.

Information about Time Synchronization

In a Remote PHY system, synchronizing its local timestamp and reference frequency to the cable converged access platform core function (CCAP Core) is important. The protocol used for this feature, the Precision Time Protocol (PTP), helps in synchronizing time between a CCAP core function and a series of remote PHY devices (RPD) that enable R-PHY and provides support for converged DOCSIS, video, and out-of-band (OOB) services.

Cisco CBR-8 supports PTP Ordinary Clock (OC) slave mode, in which the PTP slave ports are from the backhaul 10GE Ethernet ports or the management Ethernet ports of SUP PIC.

Remote DTI

Remote DOCSIS Timing Interface (R-DTI) is the network synchronization protocol used between CCAP-core and R-PHY. When traffic from the CCAP-Core is received on the downstream receiver, the following processes occur:

- Terminates DEPI framing
- Extracts the payload, frames it, modulates, and transmits it out

During the upstream process, the signal is received from the coax and the system demodulates it. From the FEC payload, the DOCSIS frames are extracted and placed in the UEPI encapsulation. The frames are then transmitted through the upstream transmitter to the CCAP core. A local CPU manages DEPI and GCP control planes, and interfaces with network management. A clocking circuit interfaces with the R-DTI and manages clocking for the R-DTI entity.

The GS7000 R-PHY supports map re-stamp option.

Restrictions for Configuring Time Synchronization

The following restrictions are applicable to configuring time synchronization on Cisco cBR-8.

- Cisco cBR-8 supports PTP slave on both SUP-PIC and DPIC.

- Cisco RPD PTP does not support pass-through mode. Pass-through mode means RPDs are communicating with PTP server through cBR-8, and cBR-8 is PTP unware of the communication between RPDs with PTP server.

How to Configure Time Synchronization

Note To know more about the commands referenced in this module, see the Cisco IOS Master Command List.

Configuring Time Interface and PTP domain

To configure time interface and PTP domain, use the following procedure.

```
enable
configure terminal
interface type [slot_#/]port_#
interface Loopback1588
  ip address <IP Address/subnet>

interface TenGigabitEthernet<slot/port>
  ip address <IP Address/subnet>

ip route < PTP master IP Address/subnet> < loopback IP Address>

ptp clock ordinary domain 0 (This is for CBR PTP connection)
 servo tracking-type R-DTI
 clock-port slave-from-903 slave
  delay-req interval -4
  sync interval -5
  sync one-step
  transport ipv4 unicast interface Lo1588 negotiation
  clock source < PTP master loopback IP Address>
```

The following table explains the parameters used in this example:

Table 5: Parameters for time interface and PTP domain configuration

Parameter	Description	Value Range	Default Value
ptp r-dti [id]		1-64	
description	R-DTI name or description		
ptp-domain [id]	Domain number of IEEE 1588	0-127	
local-priority [value]	Set local priority	128	128
priority1 [value]	Set priority1	0-255	128
priority2 [value]	Set priority2	0-255	255

Parameter	Description	Value Range	Default Value
mode [value]	R-DTI mode	other, slave master	slave
profile [value]	Set PTP ITU-T profile	default/G.8275.2	default
clock-port [id]	Configure clock port	1-32	
state [value]	Set Ethernet port admin status	other, up, down, testing	up
ethenet [value]	Set Ethernet port for clock port	0-32	The default value is clock port index
clock source [ip] gateway [ip]	Set clock address	ipv4 address, ipv6 address	
clock alternate-first	Select alternate source first		
transport [value]	Set transport encapsulation	other, ipv4, ipv6	ipv4
transport cos [value]	COS of 802.1Q	0-7	6
transport dscp [value]	DSCP of IP differentiated services	0-63	47
local-priority [value]	Set local priority	1-255	128
sync interval [value]	Set an interval for sync packets	0-7(-7 -0)	
announce interval [value]	Set an interval for announcement packets	0-3(-3 -0)	
delay-req interval [value]	Set an interval for PTP delay-req packets0-7(-7 -0)		
announce timeout [value]	Set timeout interval for announcement packets	3-255	
unicast grant-duration [value]	Set the grant duration time in seconds for unicast	60-1000	300
description	Clock port name or description		

Verifying Time Interface and PTP Domain Configuration

The following example shows how to verify the time interface and PTP domain configuration:

```
Router# show ptp clock running domain 0
Load for five secs: 5%/2%; one minute: 6%; five minutes: 6%
No time source, 15:16:20.421 CST Wed Mar 15 2017

                     PTP Ordinary Clock [Domain 0]
State          Ports Pkts sent Pkts rcvd Redundancy Mode
PHASE_ALIGNED  1     3687693   11177073  Hot standby
                              PORT SUMMARY
                                          PTP Master
Name           Tx Mode Role  Transport State Sessions Port Addr
slave-from-903 unicast slave Lo1588    Slave 2        10.10.10.11

                             SESSION INFORMATION
slave-from-903 [Lo1588] [Sessions 2]
Peer addr       Pkts in Pkts out In Errs Out Errs
10.10.10.11      5588900 1843789  0       0
10.10.10.12      5588173 1843904  0       0
```

Configure RPD PTP Connection

To configure RPD PTP connection, use the following commands.

```
enable
configure terminal
interface type [slot_#/]port_#
ptp r-dti 1 (RPD PTP connection)
 ptp-domain 0
 clock-port <same domain number with PTP server>
   clock source ip <IP Address> gateway ip <IP Address>
   clock source ip <IP Address> gateway ip <IP Address> alternate
  !--<clock-source is PTP master loopback ip, gw is the next hop to reach the ptp master
>--!
```

Verifying RPD PTP Connection Configuration

The following example shows how to verify the RPD PTP Connection configuration:

```
Router# show ptp clock 0 config
Domain/Mode         :   0/OC_SLAVE
Priority 1/2/local  : 128/255/128
Profile             : 001b19000100-000000 E2E
Total Ports/Streams : 1  /2
--PTP Port   1, Enet Port   1 ----
  Port local Address :10.10.10.11
  Unicast   Duration :300 Sync Interval : -4
  Announce  Interval :  0 Timeout       : 11
  Delay-Req Intreval : -4 Pdelay-req    : -4
  Priority  local    :128 COS:  6   DSCP: 47
  ==Stream 0 : Port 1  Master IP: 10.10.10.11
  ==Stream 1 : Port 1  Master IP: 10.10.10.11
```

Associate R-DTI with RPD

To associate R-DTthe local prefix SID associated to the segment ID, use the following commands.

```
enable
configure terminal
interface type [slot_#/]port_#
cable rpd node1
```

```
identifier 0044.4f04.0044 (node vbh0 mac)
 core-interface Te3/1/0
 rpd-ds 0 downstream-cable 3/0/0 profile 3
 rpd-us 0 upstream-cable 3/0/0 profile 3
r-dti 1
rpd-event profile 0
rpd-55d1-us-event profile 0
```

Verifying Associating R-DTI with RPD

The following example shows how to verify whether the RPD is associated to R-DTI:

```
Router# show running-config
Load for five secs: 8%/2%; one minute: 9%; five minutes: 9%
Time source is user configuration, 11:00:17.381 CST Wed Mar 22 2017
Building configuration...
Current configuration : 107879 bytes
!
! Last configuration change at 10:59:23 CST Wed Mar 22 2017
!
version 16.6
service timestamps debug datetime msec localtime show-timezone
service timestamps log datetime msec localtime show-timezone
service internal
no platform punt-keepalive disable-kernel-core
platform ipccl log-history 0
platform punt-policer 10 10
platform punt-policer 10 10 high
platform punt-policer 80 10
platform punt-sbrl subscriber rate no-drop
platform shell
!
hostname RphyNode-L09
!
boot-start-marker
boot system harddisk:cbrsup-universalk9.16.05.01prd9.SPA.bin
boot-end-marker
!
!
----
!
cable tag 10
 name docsis1.0
 docsis-version docsis10
!
cable tag 11
 name docsis1.1
 docsis-version docsis11
!
-----
cable load-balance docsis-group 1
 restricted
 upstream Upstream-Cable 3/0/3 us-channel 0-3
 method utilization
 threshold load 15
 threshold load minimum 2
 policy pure-ds-load
 init-tech-list 4
 interval 60
 tag docsis1.0
 tag docsis1.1
 tag docsis2.0
 tag docsis3.0
```

```
!
---
cable metering ipdr-d3 session 1 type 1
cable metering source-interface TenGigabitEthernet4/1/1
cable modem remote-query 30 public
cable modem vendor 00.02.00 "Apache-ACB"
cable modem vendor E8.6D.52 "Motorola"
cable modem vendor 00.1F.E1 "Ambit"
cable modem vendor 00.1F.E2 "Ambit"
cable modem vendor 00.D0.DD "Sunrise"
!
!
----
!
no network-clock synchronization automatic
!
ptp clock boundary domain 0
 servo tracking-type R-DTI
 clock-port slave-from-903 slave
  delay-req interval -4
  sync interval -5
  sync one-step
  transport ipv4 unicast interface Lo1588 negotiation
  clock source 10.10.10.11
  clock source 192.168.0.0
 clock-port master-local master
  transport ipv4 unicast interface Lo1588 negotiation
!
-----
r-dti 2
 rpd-event profile 0
 rpd-55d1-us-event profile 0
!
ptp r-dti 2
 ptp-domain 0
 clock-port 1
   clock source ip 10.10.10.11
   clock source ip 192.168.0.0 alternate
!
ptp r-dti 3
 ptp-domain 0
 clock-port 1
   clock source ip 10.10.10.11
   clock source ip 192.168.0.0 alternate
!
ptp r-dti 10
 ptp-domain 0
 clock-port 1
   clock source ip 10.10.10.11
   clock source ip 192.168.0.0 alternate
   announce interval -3
   announce timeout 3
!
ptp r-dti 11
 ptp-domain 0
 priority1 101
 priority2 102
 local-priority 100
 clock-port 2
   ethernet 1
   clock alternate-first
   clock source ip 10.10.10.11
   clock source ip 192.168.0.0 alternate
   transport cos 0
```

```
   transport dscp 63
   sync interval -1
   announce timeout 255
   delay-req interval -7
   unicast grant-duration 60
   local-priority 255
!
ptp r-dti 12
 ptp-domain 0
 clock-port 1
   ethernet 0
   clock source ip 10.10.10.11
!
ptp r-dti 60
 ptp-domain 0
!
cable video
!
end
```

Verifying PTP Clock Functioning

To verify whether the PTP Clock is running, use the following commands:

```
Router#show ptp clock running
Load for five secs: one minute: 5%; five minutes:
Time source is NTP, 14 CST Fri Feb 17 2017
PTP Ordinary clock [Domain 0]
State         Ports pkts sent pkts rcvd Redundancy Mode
PHASE-ALIGNED 1     7339500   22245593  Hot standby
   Port Summary
Name           Tx Mode Role  Transport State Sessions PTP Master Port Addr
slave-from-903 unicast slave  L01588    Slave 2        10.10.10.11
```

Verifying PTP Clock Running Domain

The following example shows how to verify the PTP clock running domain:

```
Router#show ptp clock running domain 0
Load for five secs: 5%/2%; one minute: 6%; five minutes: 6%
No time source, 15:16:20.421 CST Wed Mar 15 2017
                      PTP Ordinary Clock [Domain 0]
State          Ports Pkts sent Pkts rcvd Redundancy Mode
PHASE_ALIGNED  1     3687693   11177073  Hot standby
                               PORT SUMMARY
                                                PTP Master
Name           Tx Mode Role  Transport State Sessions Port Addr
slave-from-903 unicast slave Lo1588    Slave 2        10.10.10.11

                              SESSION INFORMATION
slave-from-903 [Lo1588] [Sessions 2]
Peer addr       Pkts in Pkts out In Errs Out Errs
10.10.10.11      5588900 1843789  0       0
192.168.0.10     5588173 1843904  0       0
```

Verifying Time Sync State

To verify the status of time synchronization, use the show ptp clock <n> state command as given in the following example:

```
Router# show ptp clock 0 state
apr state       : PHASE_LOCK
clock state     : SUB_SYNC
current tod     : 1485414295   Thu Jan 26 07:04:55 2017
active stream   : 0
==stream    0   :
  port id       :                0
  master ip     :       10.10.10.11
  stream state  :       PHASE_LOCK
  Master offset :             -405
  Path    delay :           -17071
  Forward delay :           -17476
  Reverse delay :           -16623
  Freq offset   :          -291143
  1Hz  offset   :             -676
==stream    1   :
  port id       :                0
  master ip     :      192.168.0.11
  stream state  :       PHASE_LOCK
  Master offset :             -369
  Path    delay :            -1619
  Forward delay :            -1988
  Reverse delay :            -1260
  Freq offset   :          -297905
  1Hz  offset   :             -664
```

Verifying Time Sync Statistics

To verify the statistics of the time synchronization, use the show ptp clock <n> state command as given in the following example:

```
Router# show ptp clock 0 statistics
 AprState    4  :
  2@0-00:06:51.568 1@0-00:06:41.930 0@0-00:04:17.925
  4@0-00:03:58.724
 ClockState  5  :
  5@0-00:07:12.640 4@0-00:07:10.182 3@0-00:07:06.825
  2@0-00:06:51.825 1@0-00:06:51.530
 BstPktStrm  1  :
  0@0-00:06:42.029
 SetTime     1  :
  1000000000@0-00:04:00.045
 StepTime    1  :
  125126755@0-00:06:14.670
 AdjustTime  64 :
  -676@0-07:34:32.546 -733@0-07:33:31.545  -838@0-07:32:30.546
  -892@0-07:31:29.545 -935@0-07:30:28.545 -1033@0-07:29:27.545
  -914@0-07:28:26.546  916@0-07:26:24.545  2507@0-07:25:18.170
streamId  msgType           rx     rxProcessed lost        tx
 0        SYNC              433439 433439      4294574083  0
 0        DELAY REQUEST     0      0           0           433439
 0        P-DELAY REQUEST   0      0           0           0
 0        P-DELAY RESPONSE  0      0           0           0
 0        FOLLOW UP         0      0           0           0
 0        DELAY RESPONSE    433437 433437      4294548766  0
 0        P-DELAY FOLLOWUP  0      0           0           0
 0        ANNOUNCE          27098  27098       0           0
 0        SIGNALING         285    285         0           285
 0        MANAGEMENT        0      0           0           0
   TOTAL                    894259 894259      8589122849  433724
 1        SYNC              433435 433435      4294574085  0
 1        DELAY REQUEST     0      0           0           433439
 1        P-DELAY REQUEST   0      0           0           0
```

```
 1        P-DELAY RESPONSE  0      0           0           0
 1        FOLLOW UP         0      0           0           0
 1        DELAY RESPONSE    10351  10351       4104        0
 1        P-DELAY FOLLOWUP  0      0           0           0
 1        ANNOUNCE          27098  27098       4294901760  0
 1        SIGNALING         285    285         0           285
 1        MANAGEMENT        0      0           0           0
   TOTAL                    471169 471169      8589479949  433724
```

Configuration Examples

This section provides examples for configuring Cisco cBR for time synchronization.

Example: Configuring Time Interface and PTP Domain

The following example shows how to configure time interface and PTP domain:

```
enable
configure terminal
interface Loopback1588
ip address 10.10.10.11 255.255.255.224

interface TenGigabitEthernet5/1/3 (connect to PTP master)
ip address 192.168.0.13 255.255.255.224

ip route 10.10.10.11 255.255.255.224 192.168.0.12   (route to PTP master loopback ip)

ptp clock ordinary domain 0 (This is for cbr ptp connection)
 servo tracking-type R-DTI
 clock-port slave-from-903 slave
 delay-req interval -4
 sync interval -5
 sync one-step
 transport ipv4 unicast interface Lo1588 negotiation
 clock source 10.10.1.11 (PTP master loopback ip)
```

Example: Configure RPD PTP Connection

The following example shows how to configure RPD PTP connection:

```
enable
configure terminal
ptp r-dti 1
ptp-domain 0
 mode slave
 priority1 128
 priority2 255
 local-priority 128
 clock-port 1
   ethernet 1
   …
 clock-port 2
   ethernet 2
   …
clock-port 1
   ethernet 1
   state up
   transport ipv4
   clock source ip 10.10.1.12 gw 10.10.1.1
    clock source ip 192.168.0.0 gateway ip 10.10.1.2 alternate
   transport cos 6
```

```
   transport dscp 47
   sync interval -4
   announce interval 0
   announce timeout 11
   delay-req interval -4
   unicast grant-duration 300
   local-priority 128
```

Example: Associate R-DTI with RPD

The following example shows how to associate R-DTI with RPD:

```
enable
configure terminal
cable rpd node1
 identifier 0004.9f03.0061 (node vbh0 mac)
 core-interface Te3/1/0
 rpd-ds 0 downstream-cable 3/0/0 profile 3
 rpd-us 0 upstream-cable 3/0/0 profile 3
r-dti 1
 rpd-event profile 0
rpd-55d1-us-event profile 0
```

Feature Information for Synchronizing Time on R-PHY Devices

Use Cisco Feature Navigator to find information about the platform support and software image support. Cisco Feature Navigator enables you to determine which software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to the www.cisco.com/go/cfn link. An account on the Cisco.com page is not required.

Note The following table lists the software release in which a given feature is introduced. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Table 6: Feature Information for Synchronizing Time on R-PHY Devices

Feature Name	Releases	Feature Information
Synchronizing Time on R-PHY Devices	Cisco 1x2 RPD Software 1.1	This feature was introduced on the Cisco Remote PHY Device.

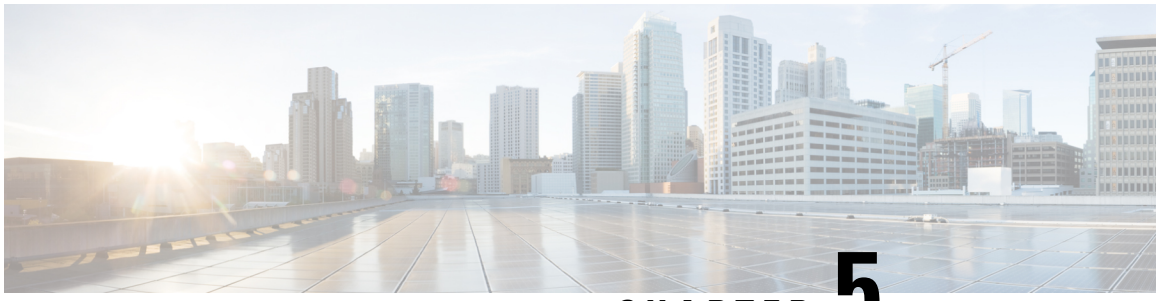

CHAPTER 5

DEPI/UEPI/L2TP integration with Cisco Remote PHY Device

This document describes how to configure the DEPI/UEPI/L2TP integration with RPD on the Cisco cBR Series Converged Broadband Router.

Finding Feature Information

Your software release may not support all the features that are documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. The Feature Information Table at the end of this document provides information about the documented features and lists the releases in which each feature is supported.

- Hardware Compatibility Matrix for Cisco Remote PHY Device, on page 33
- Information about DEPI/UEPI/L2TP integration with RPD, on page 34
- How to Configure DEPI/UEPI/L2TP integration with RPD, on page 34
- Feature Information for DEPI/UEPI/L2TP integration with RPD, on page 36

Hardware Compatibility Matrix for Cisco Remote PHY Device

Note Unless otherwise specified, the hardware components introduced in a given Cisco Remote PHY Device Software Release are supported in all subsequent releases.

Table 7: Hardware Compatibility Matrix for the Cisco Remote PHY Device

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Node	**Cisco 1x2 / Compact Shelf RPD Software 2.1 and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2= **Cisco 1x2 / Compact Shelf RPD Software 2.1a and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2-PKEY=
Cisco GS7000 Super High Output Intelligent Node (iNode)	**and Later Releases** Cisco Intelligent Remote PHY Device 1x2 • PID—iRPD-1X2= • PID—iRPD-1X2-PKEY=

Note The -PKEY suffix in the PID indicates units that enable the SCTE-55-2 Out-of-Band protocol support.

Information about DEPI/UEPI/L2TP integration with RPD

DEPI

Downstream External PHY Interface (DEPI) is the downstream interface between the CCAP Core and the RPD. R-DEPI is based on DEPI. More specifically, it is an IP pseudowire between the MAC and PHY in an MHAv2 system that contains both a data path for DOCSIS frames, video packets, and OOB packets, as well as a control path for setting up, maintaining, and tearing down sessions.

UEPI

Upstream External PHY Interface (UEPI) is the upstream interface between the RPD and the CCAP Core. Like DEPI, it is an IP pseudowire between the PHY and MAC in an MHAv2 system that contains both a data path for DOCSIS frames, and a control path for setting up, maintaining, and tearing down sessions.

How to Configure DEPI/UEPI/L2TP integration with RPD

This section describes how to configure DEPI/UEPI/L2TP integration with RPD.

Configuring depi-class/l2tp-class Pair

It's not permitted to change the default l2tp-class configuration (rphy-l2tp-global-class) for R-DEPI by user, because the parameter values are fine tuned to accommodate most common cases.

If user wants to use parameter values other than the default ones, they can use manually defined depi-class/l2tp-class pair. To do so, follow the example below:

```
Router# configure terminal
Router(config)# l2tp-class l2tp_demo
Router(config-l2tp-class)#exit
Router(config)# depi-class depi_demo
Router(config-depi-class)#l2tp-class l2tp_demo
Router(config-depi-class)#exit
Router(config)#cable rpd node
Router(config-rpd)#core-interface Te1/1/7
Router(config-rpd-core)#depi depi_demo /* Be sure to configure when the RPD core is offline*/
Router(config-rpd-core)#end
```

Verifying the RPD Status

To verify the RPD status, use the **show cable rpd** command as shown in the example below:

```
Router# show cable rpd
Load for five secs: 6%/1%; one minute: 5%; five minutes: 5%
No time source, *04:52:03.936 UTC Tue Jan 17 2017

MAC Address     IP Address    I/F      State       Role   HA    Name
0004.9f00.0901  91.0.10.10    Te1/1/0  init(l2tp)  Pri    Act   node
```

Display DEPI Related Information

To display the Downstream External PHY Interface (DEPI) related information, use the command as shown in the following example:

```
Router#show cable rpd depi

DEPI Tunnel and Session Information Total tunnels 1 sessions 26
LocTunID   RemTunID   Remote Device  State  Remote Address  Sessn L2TP Class
                                                           Count
338514820  671581873  0004.9f00.0901 est    10.10.10.11     26    rphy-l2tp-gl...

LocID      RemID      Pseudowire      State  Last Chg Uniq ID    Type Mode RemSt
0x41040008 0x00000B02 US1/0/0:2(R)    est    00:34:57 21          P    PSP  UP
0x41010000 0x00000600 US1/0/0:0(D)    est    00:34:57 11          P    PSP  UP
0x00002006 0x00000405 DS1/0/0:5       est    00:34:57 6           P    PSP  UP
0x00002004 0x00000403 DS1/0/0:3       est    00:34:57 4           P    PSP  UP
0x4100000C 0x00000D03 US1/0/0:3(M)    est    00:34:57 23          P    PSP  UP
0x00002002 0x00000401 DS1/0/0:1       est    00:34:57 2           P    PSP  UP
0x00002007 0x00000406 DS1/0/0:6       est    00:34:57 7           P    PSP  UP
0x00002008 0x00000407 DS1/0/0:7       est    00:34:57 8           P    PSP  UP
0x4101000C 0x00000603 US1/0/0:3(D)    est    00:34:57 24          P    PSP  UP
0x41000004 0x00000D01 US1/0/0:1(M)    est    00:34:57 15          P    PSP  UP
0x00002001 0x00000400 DS1/0/0:0       est    00:34:57 1           P    PSP  UP
0x41080008 0x00000F02 US1/0/0:2(S)    est    00:34:57 22          P    PSP  UP
0x41010004 0x00000601 US1/0/0:1(D)    est    00:34:57 16          P    PSP  UP
0x41020000 0x00000800 US1/0/0:0(B)    est    00:34:57 12          P    PSP  UP
0x00002009 0x00000408 DS1/0/0:8       est    00:34:57 9           P    PSP  UP
0x41010008 0x00000602 US1/0/0:2(D)    est    00:34:57 20          P    PSP  UP
0x41000008 0x00000D02 US1/0/0:2(M)    est    00:34:57 19          P    PSP  UP
```

```
0x4108000C 0x00000F03 US1/0/0:3(S)     est     00:34:57 26          P     PSP  UP
0x00002003 0x00000402 DS1/0/0:2        est     00:34:57 3           P     PSP  UP
0x41080000 0x00000F00 US1/0/0:0(S)     est     00:34:57 14          P     PSP  UP
0x41040004 0x00000B01 US1/0/0:1(R)     est     00:34:57 17          P     PSP  UP
0x41080004 0x00000F01 US1/0/0:1(S)     est     00:34:57 18          P     PSP  UP
0x41000000 0x00000D00 US1/0/0:0(M)     est     00:34:56 10          P     PSP  UP
0x00002005 0x00000404 DS1/0/0:4        est     00:34:56 5           P     PSP  UP
0x4104000C 0x00000B03 US1/0/0:3(R)     est     00:34:56 25          P     PSP  UP
0x41040000 0x00000B00 US1/0/0:0(R)     est     00:34:56 13          P     PSP  UP

outer#show cable rpd 0004.9f03.0214 te7/1/0 depi tunnel

Load for five secs: 7%/2%; one minute: 6%; five minutes: 6%
No time source, *12:41:44.228 CST Mon Mar 20 2017

LocTunID   RemTunID   Remote Device  State  Remote Address  Sessn L2TP Class
                                                           Count
3388764998 1054297851 0004.9f03.0214 est    10.10.10.11     29    rphy-l2tp-gl...
```

Table 8: show cable rpd depi Field Descriptions

Field	Description
LocID	Local session ID.
RemID	Remote session ID.
US1/0/0:2(R)	US means UEPI session, DS means DEPI session. This string means UEPI session on line card slot 1, controller 0, rf-channel 2.
est in State	Established state.
P in Type	On primary line card.

Feature Information for DEPI/UEPI/L2TP integration with RPD

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Table 9: Feature Information for DEPI/UEPI/L2TP integration with RPD

Feature Name	Releases	Feature Information
DEPI/UEPI/L2TP integration with RPD	Cisco 1x2 RPD Software 1.1	This feature was introduced on the Cisco cBR Series Converged Broadband Routers.

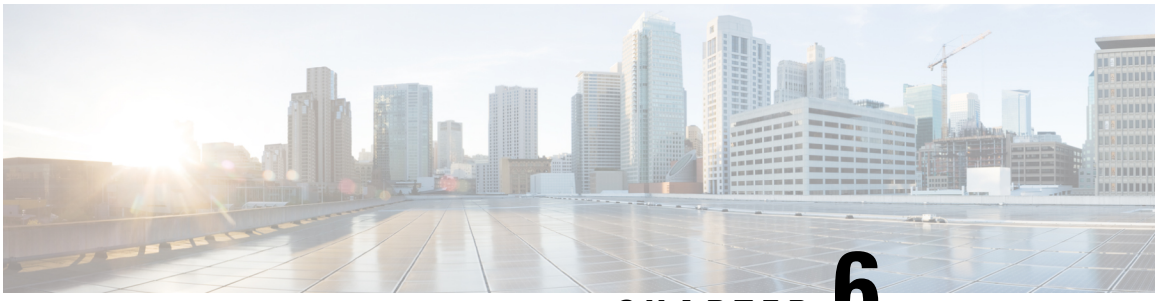

CHAPTER 6

DEPI Latency Measurement

This document describes how to configure the DEPI latency measurement on the Cisco cBR Series Converged Broadband Router.

Finding Feature Information

Your software release may not support all the features that are documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. The Feature Information Table at the end of this document provides information about the documented features and lists the releases in which each feature is supported.

- Hardware Compatibility Matrix for Cisco Remote PHY Device, on page 37
- Information about DEPI Latency Measurement, on page 38
- How to Configure DLM, on page 38
- Example: DLM Configuration, on page 39
- Feature Information for DLM, on page 39

Hardware Compatibility Matrix for Cisco Remote PHY Device

Note Unless otherwise specified, the hardware components introduced in a given Cisco Remote PHY Device Software Release are supported in all subsequent releases.

Table 10: Hardware Compatibility Matrix for the Cisco Remote PHY Device

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Node	**Cisco 1x2 / Compact Shelf RPD Software 2.1 and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2= **Cisco 1x2 / Compact Shelf RPD Software 2.1a and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2-PKEY=
Cisco GS7000 Super High Output Intelligent Node (iNode)	**and Later Releases** Cisco Intelligent Remote PHY Device 1x2 • PID—iRPD-1X2= • PID—iRPD-1X2-PKEY=

Note The -PKEY suffix in the PID indicates units that enable the SCTE-55-2 Out-of-Band protocol support.

Information about DEPI Latency Measurement

The DEPI Latency Measurement (DLM) packet is a specific type of data packet used for measuring the network latency between the CCAP core and the RPD. There are two types of DLM packets, ingress DLM packet and egress DLM packet. The ingress DLM measures the latency between the CCAP core and the ingress point in the RPD, and the egress DLM measures the latency between the CCAP core and the egress point of the RPD. For now, only the ingress DLM is supported. Egress DLM will be supported in the future if required.

How to Configure DLM

This section describes how to configure DLM on Cisco cBR-8.

Configuring DLM

To configure DLM, complete the following procedure. DLM is disabled by default, only enabled when configured.

```
configure terminal
cable rpd name
```

```
core-interface interface_name
network-delay dlm interval_in_seconds
```

Verifying DLM Configuration

To verify the DLM configuration, use the **show cable rpd dlm** command as shown in the example below:

```
Router# show cable rpd 0000.bbaa.0002 dlm
Load for five secs: 4%/1%; one minute: 4%; five minutes: 4%
Time source is NTP, 13:12:36.253 CST Sun Jan 1 2017
DEPI Latency Measurement (ticks) for 0000.bbaa.0002
 Last Average DLM:              4993
 Average DLM (last 10 samples): 4990
 Max DLM since system on:       5199
 Min DLM since system on:       4800
 Sample #     Latency (usecs)
 x------------x------------
 0            491
 1            496
 2            485
 3            492
 4            499
 5            505
 6            477
 7            474
 8            478
 9            471
```

The table below shows descriptions for the fields displayed by this command:

Table 11: show cable rpd dlm Field Descriptions

Field	Description
Last Average DLM	It means the last time average DLM (AD). At first, the Last Average DLM (LAD) is always 0, when the absolute value of (LAD - AD) exceeds or equal to 75us, LAD will be updated to be the value of AD, MAP advance triggered to update, AD will keep updating with the last (latest) 10 samples.

Example: DLM Configuration

The following example shows how to configure DLM:

```
Router# configure terminal
Router(config)#cable rpd 1
Router(config-rpd)#core-interface tenGigabitEthernet 3/1/0
Router(config-rpd-core)#network-delay dlm 10
```

Feature Information for DLM

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Table 12: Feature Information for DLM

Feature Name	Releases	Feature Information
DEPI Latency Measurement	Cisco 1x2 RPD Software 1.1	This feature was introduced on the Cisco cBR Series Converged Broadband Routers.

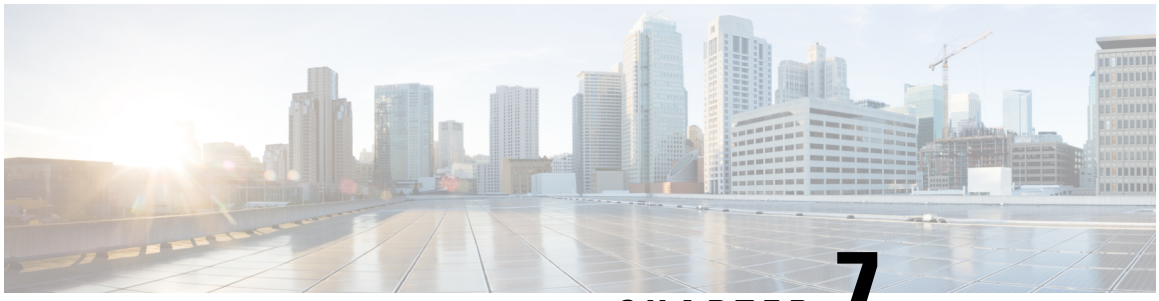

CHAPTER 7

Multiple Cores

This document describes the multiple cores in the Remote PHY system.

Finding Feature Information

Your software release may not support all the features that are documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. The Feature Information Table at the end of this document provides information about the documented features and lists the releases in which each feature is supported.

- Hardware Compatibility Matrix for Cisco Remote PHY Device, on page 41
- Information about Multiple Cores, on page 42
- How to Configure Multiple Cores, on page 42

Hardware Compatibility Matrix for Cisco Remote PHY Device

Note Unless otherwise specified, the hardware components introduced in a given Cisco Remote PHY Device Software Release are supported in all subsequent releases.

Table 13: Hardware Compatibility Matrix for the Cisco Remote PHY Device

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Node	**Cisco 1x2 / Compact Shelf RPD Software 2.1 and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2= **Cisco 1x2 / Compact Shelf RPD Software 2.1a and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2-PKEY=

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Intelligent Node (iNode)	**and Later Releases** Cisco Intelligent Remote PHY Device 1x2 • PID—iRPD-1X2= • PID—iRPD-1X2-PKEY=

Note The -PKEY suffix in the PID indicates units that enable the SCTE-55-2 Out-of-Band protocol support.

Information about Multiple Cores

The RPD can be managed by more than one CCAP core. An RPD is controlled by exactly one principal CCAP core and zero or more auxiliary CCAP core(s). Each CCAP core manages a subset of RPD resources, e.g., particular channels or RF ports.

Principal core is responsible for the configuration of common parameters for the RPD and for certain device management functions. Principal core can provide DOCSIS, video or OOB service. Auxiliary cores are responsible for providing video or OOB services. They are restricted to the resource set assigned to them by the principal core.

Restrictions for Multiple Cores Configuration

The following restrictions are applicable to mutiple cores configuration:

- Maximum four cores are supported.
- DOCSIS controllers can only be configured to principal core, while video controllers can be configured to all cores.
- Only one core can be principal, the rest will be auxiliary.
- Principal core needs to be configured explicitly.
- At least one DOCSIS downstream controller and one upstream controller are needed for principal core.
- No upstream controller for auxiliary core and at least one downstream controller is needed for auxiliary core.
- Only single CMTS is supported.
- No downstram frequency and channel id overlap is allowed for all the cores.

How to Configure Multiple Cores

This section describes how to configure multiple cores on Cisco cBR-8.

Configuring Multiple Cores

To configure the multiple cores, follow the example below:

```
Router(config)# cable rpd sjc_block22   /* unique name for each rpd */
Router(config-rpd)# description rpd for sjc block 22
Router(config-rpd)# identifier 1122.3344.5566   /* unique id for each rpd.*/
Router(config-rpd)# rpd-ds 0 power-level 5   /* DS max-carrier and power-level info */
Router(config-rpd)# rpd-ds 0 dedicated-cw-tone cw1   /* DS pilot tone info */
Router(config-rpd)# core-interface Te3/1/0   /* Core side interface (D-PIC interface) for
services below */
Router(config-rpd-core)# principal   /* Specify the principal core */
Router(config-rpd-core)# rpd-ds 0 controller downstream-cable 3/0/0 profile 100 /* DS docsis
 channel config*/
Router(config-rpd-core)# rpd-ds 0 controller downstream-cable 3/0/1 profile 200 /* DS docsis
 channel config*/
Router(config-rpd-core)# rpd-ds 0 downstream-cable 3/0/2 profile 300 /* DS video channel
config*/
Router(config-rpd-core)# rpd-ds 0 downstream-cable 3/0/3 profile 400 /* DS video channel
config*/
Router(config-rpd-core)# rpd-us 0 upstream-cable 3/0/0 profile 101 /* US 0 docsis channel
config*/
Router(config-rpd-core)# rpd-us 1 upstream-cable 3/0/1 profile 101   /* US 1 docsis channel
 config*/
Router(config-rpd-core)# depi depi_rpd_block22    /* RPD DEPI configuration.*/
Router(config-rpd-core)# exit
Router(config-rpd)# core-interface Te9/1/1 /* Support multiple core-interface for cases
such as video is using separate LC*/
Router(config-rpd-core)# rpd-ds 0 downstream-cable 9/0/1 profile 200  /* DS video channel
config*/
Router(config-rpd-core)# depi depi_rpd_block22    /* RPD DEPI configuration.*/
Router(config-rpd-core)# exit
Router(config-rpd)# r-dti 1
Router(config-rpd)# rpd-event profile 0
Router(config-rpd)# rpd-55d1-us-event profile 0
```

Verifying Multiple Cores Configuration

To display the information of the principal and auxiliary cores, use the **show cable rpd** command as shown in the example below:

```
Router# show cable rpd
MAC Address     IP Address         I/F          State        Role HA  Name
0004.9f00.0907  120.100.2.20     Te1/1/6   online       Pri   Act  node
0004.9f00.0907  120.100.2.20     Te1/1/0   online       Aux  Act  node
0004.9f00.0907  120.100.2.20     Te1/1/1   online       Aux  Act  node
0004.9f00.0907  120.100.2.20     Te1/1/2   online       Aux  Act  node
```

Note Only the active cores are displayed, stand-by cores are hidden.

PART IV

Cisco Remote PHY Controller Profile and RPD Configuration

- Cisco Remote PHY Controller Profile and RPD Configuration, on page 47

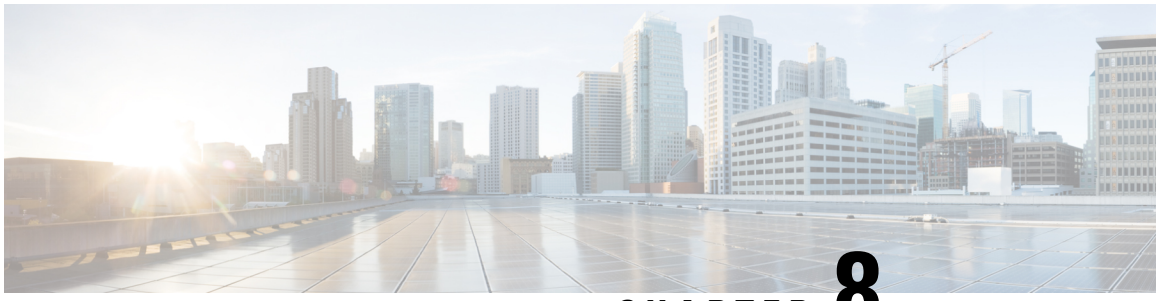

CHAPTER 8

Cisco Remote PHY Controller Profile and RPD Configuration

The Remote PHY (R-PHY) Controller Profile includes upstream controller-profile and downstream controller-profile. Upstream controller-profile is used to specify the upstream (US) channels and related parameters, which are part of a specific profile, similar to the following:

- Channel width
- DOCSIS mode
- Frequency
- Minislot size
- Modulation-profile

The downstream controller-profile is used to specify the RF channels and their RF parameters that belong to a specific profile, including the following details:

- Channel type (DOCSIS, Video Sync, Video Async)
- Frequency
- RF output
- QAM-profile (annex, modulation, inter-leaver, symbol rate, and so on)

Finding Feature Information

Your software release may not support all the features that are documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. The Feature Information Table at the end of this document provides information about the documented features and lists the releases in which each feature is supported.

- Hardware Compatibility Matrix for Cisco Remote PHY Device, on page 48
- Controller Profile and RPD, on page 48
- Configure Controller Profile and RPD, on page 50
- Troubleshooting Tips, on page 57
- Configuration Examples, on page 58
- Feature Information for Remote PHY Controller Profile and RPD Configuration, on page 59

Hardware Compatibility Matrix for Cisco Remote PHY Device

Note Unless otherwise specified, the hardware components introduced in a given Cisco Remote PHY Device Software Release are supported in all subsequent releases.

Table 14: Hardware Compatibility Matrix for the Cisco Remote PHY Device

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Node	**Cisco 1x2 / Compact Shelf RPD Software 2.1 and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2= **Cisco 1x2 / Compact Shelf RPD Software 2.1a and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2-PKEY=
Cisco GS7000 Super High Output Intelligent Node (iNode)	**and Later Releases** Cisco Intelligent Remote PHY Device 1x2 • PID—iRPD-1X2= • PID—iRPD-1X2-PKEY=

Note The -PKEY suffix in the PID indicates units that enable the SCTE-55-2 Out-of-Band protocol support.

Controller Profile and RPD

The Controller Profile functions in a similar way to the controller integrated-cable Slot/Bay/Port (for downstream controller) or upstream-cable Slot/Bay/Port (for upstream controller) in I-CMTS. However if a Controller Profile is not associated to an RPD, physical resources cannot be allocated.

You can either unicast or multicast this profile. Multicast profile is used for DS sharing. You can multicast the same traffic to all RPDs in the multicast group, or to applications such as switched digital video (SDV) or BC video.

An R-PHY configuration consists of one principal core interface and one auxiliary core interface. The principal core specifies the DPIC interface to which the RPD connects. Auxiliary core interfaces specify the external

DPIC interfaces that can be used for downstream sharing. Auxiliary core is used in this release only for video multicast and video OOB.

Configuring Controller Profile and cable RPD are the prerequisites for configuring R-PHY video.

The following table lists the DSCP value for different kinds of items.

Item	Per-Hop-Behavior (PHB)	DSCP Value
DOCSIS data (L2TP)	Best Effort	0
PTP	EF	46
GCP	Best Effort	0
MAP/UCD (L2TP, DOCSIS control)	EF	46
BWR and RNG-REG	EF	46
Video	CS4	32
MDD (L2TP, DOCSIS control), voice	CS5	40

RPD Configurations

Compared to the iCMTS configuration, R-PHY configuration supports the following features:

- Up to 512 RPDs per CBR-8 chassis and 64 RPDs per CBR-CCAP-LC-40G-R line card
- 128 separate service groups per CBR-8 chassis
- 32 downstream controllers and up to 768 downstream channels per CBR-CCAP-LC-40G-R line card
- Up to 158 downstream channels (0-157) per downstream controller
- 64 upstream controllers and 128 upstream channels per CBR-CCAP-LC-40G-R line card

Note In Cisco IOS XE Fuji 16.8.1 and earlier releases, although 128 maximum upstream SCQAM channels per CBR-CCAP-LC-40G-R line card could be configured, the upstream maximum throughput per CBR-CCAP-LC-40G-R line card is 3 Gbps which is due to USJIB limitation. So, if the the upstream maximum throughput per CBR-CCAP-LC-40G-R line card is higher than 3 Gbpsm, upstream service cannot be guranteed.

Cisco IOS XE Fuji 16.9.1 and later releases support 10 Gbps of upstream throughput on the CBR-CCAP-LC-40G and CBR-CCAP-LC-40G-R line cards on the Cisco cBR Series Converged Broadband Router.

In the R-PHY configuration, the following mapping relationships are supported between the controller and the port on RPD:

- Downstream 1:N (N>= 2) mapping: one DS controller is shared by several RPDs and one DS controller is mapped to one DS port of all these RPDs, that is “DS virtual split”, all these DS ports share the same signals from the same DS controller.
- Downstream N:1 mapping: several DS controllers are mapped into the same DS port of one RPD. Notice: the DS channels in these DS controller should use different rf-channel numbers
- Downstream N:N mapping: mixed 1:N and N:1 mapping. For example: several DS controllers are mapped into one DS port of one RPD. But at the same time they are “virtual split” DS controllers and are shared by several RPDs.
- Upstream 1:N(N<=8) mapping: one US controller can be shared by N (N<=8) US ports of multiple RPDs. Currently max two US ports are supported on one RPD, and for each US port, one US controller can be configured.

  For the two US ports of one RPD, the same US controller number can be configured.

Note Downstream 1:1 mapping is not supported under 512 RPD configuration, but still supported under smaller scale configuration.

Prerequisites for Configuring Controller Profile and RPD

The following restrictions are applicable to configuring controller profiles:

- All channels within the profiles of an RPD must be unique. Frequencies must not overlap each other.
- The principal core must contain at least one DOCSIS downstream profile
- Auxiliary core should contain only video and out-of-band profiles
- A DS controller can be associated to only one profile

Restrictions for Configuring Controller Profile and RPD

The following restrictions are applicable to configuring upstream controller profiles:

- Legacy controller configuration commands are not supported
- Legacy controller configuration cannot be shown in running-configuration

Configure Controller Profile and RPD

Note To know more about the commands referenced in this module, see the Cisco IOS Master Command List.

Configure Upstream Controller Profile

To configure the upstream controller-profile, use the cable upstream controller-profile command, as given in the following example:

```
Router#cable upstream controller-profile 4
  cable def-phy-burst 0
  us-channel 0 chan-class-id 0
  us-channel 0 channel-width 1600000 1600000
  us-channel 0 docsis-mode atdma
  us-channel 0 equalization-coefficient
  us-channel 0 frequency 50000000
  us-channel 0 hop-priority frequency modulation channel-width
  us-channel 0 ingress-noise-cancellation 100
  us-channel 0 maintain-psd
  us-channel 0 max-logical-chans 1
  us-channel 0 minislot-size 4
  us-channel 0 modulation-profile 221
  us-channel 0 power-level 0
  us-channel 0 rng-holdoff 0
  us-channel 0 shutdown
  us-channel 0 specsvl error-adaptive-profile 1
  us-channel 0 threshold cnr-profiles 25 13
  us-channel 0 threshold corr-fec 3
  us-channel 0 threshold hysteresis 3
  us-channel 0 threshold snr-profiles 25 13
  us-channel 0 threshold uncorr-fec 1
  ...
  end
```

Verify Upstream Controller Profile Configuration

To verify the Upstream controller profile configuration, use the **show cable downstream controller-profile** command or **show running-config | section upstream controller-profile** <*ID*> command, as shown in the following example:

```
Router#show cable upstream controller-profile 0
Load for five secs: 2%/0%; one minute: 3%; five minutes: 3%
Time source is NTP, 15:14:27.916 CST Fri Feb 24 2017

Upstream controller-profile 0
Description:
Upstream controller-profile 0 is being used by controller Upstream-Cable:
8/0/1,  8/0/0
  Controller Upstream-Cable
    ...
  Upstream-channel 0
    chan-class-id                : 0x0
    channel-width                : 1600000 1600000
    docsis-mode                  : atdma
    ...
```

Example for the **show running-config | section upstream controller-profile <ID>** command

```
Router#show running-config | s cable upstream controller-profile 0
cable upstream controller-profile 0
 us-channel 0 channel-width 1600000 1600000
 us-channel 0 docsis-mode atdma
 us-channel 0 equalization-coefficient
 us-channel 0 frequency 6000000
 us-channel 0 minislot-size 4
 us-channel 0 modulation-profile 221
```

```
 no us-channel 0 shutdown
 us-channel 1 channel-width 1600000 1600000
 us-channel 1 docsis-mode atdma
 us-channel 1 equalization-coefficient
 us-channel 1 frequency 7600000
 us-channel 1 minislot-size 4
 us-channel 1 modulation-profile 221
 no us-channel 1 shutdown
 us-channel 2 channel-width 1600000 1600000
 us-channel 2 docsis-mode atdma
 us-channel 2 equalization-coefficient
 us-channel 2 frequency 9200000
 us-channel 2 minislot-size 4
 us-channel 2 modulation-profile 221
 no us-channel 2 shutdown
 us-channel 3 channel-width 1600000 1600000
 us-channel 3 docsis-mode atdma
 us-channel 3 equalization-coefficient
 us-channel 3 frequency 10800000
 us-channel 3 minislot-size 4
 us-channel 3 modulation-profile 221
 no us-channel 3 shutdown
 us-channel 4 channel-width 1600000 1600000
 us-channel 4 docsis-mode atdma
 us-channel 4 frequency 12400000
 us-channel 4 minislot-size 4
 us-channel 4 modulation-profile 221
 no us-channel 4 shutdown
 us-channel 5 channel-width 1600000 1600000
 us-channel 5 docsis-mode atdma
 us-channel 5 frequency 14000000
 us-channel 5 minislot-size 4
 us-channel 5 modulation-profile 221
```

Configure RPD for US Controller Profile

To configure RPD for associating an upstream controller-profile, using the **rpd-ds** <*port-id*> **Upstream-Cable** <*slot/sub-slot/controller*> *[profile <id>]* command, as given in the following example:

```
Router#cable rpd 1
 identifier 0004.9f00.0743
 core-interface Te8/1/0
  principal
  rpd-us 0 upstream-cable 8/0/0 profile 0
  rpd-us 1 upstream-cable 8/0/1 profile 4
 r-dti 11
 rpd-event profile 0
 rpd-55d1-us-event profile 0
---
end
```

The Remote PHY (R-PHY) Controller Profile now provides a new summary that displays the Per RPD us port description. The summary helps distinguish between the different controllers that share the same description of us-channels.

For example, the **show cable modem rpd all summary** command displays the following information:

```
Router#show cable modem rpd all summary

Load for five secs: 5%/0%; one minute: 5%; five minutes: 5%
No time source, *15:36:49.777 UTC Thu Mar 8 2018

RPD ID: badb.ad13.417c
```

```
Interface                      Cable Modem                                  Description
          Total Reg Oper  Unreg Offline Wideband initRC initD initIO initO
C9/0/4/U0  1     0   0     1     0       0        1      0     0      0  badb.ad13.417c us
 0
C9/0/4/U1  2     0   0     2     0       0        2      0     0      0  badb.ad13.417c us
 0
C9/0/4/U3  1     0   0     1     0       0        1      0     0      0  badb.ad13.417c us
 0
C9/0/5/U0  2     0   0     2     0       0        2      0     0      0  badb.ad13.417c us
 1
C9/0/5/U1  1     0   0     1     0       0        1      0     0      0  badb.ad13.417c us
 1

RPD ID: badb.ad13.41fa
Interface                      Cable Modem                                  Description
          Total Reg   Oper  Unreg Offline Wideband initRC initD initIO initO
C9/0/2/U0  2     0     0     2     0       1        1      0     0      1  badb.ad13.41fa
us 0
C9/0/2/U1  1     0     0     1     0       0        1      0     0      0  badb.ad13.41fa
us 0
C9/0/2/U3  1     0     0     1     0       0        1      0     0      0  badb.ad13.41fa
us 0
C9/0/3/U1  1     0     0     1     0       0        1      0     0      0  badb.ad13.41fa
us 1
C9/0/3/U2  2     0     0     2     0       0        2      0     0      0  badb.ad13.41fa
us 1
C9/0/3/U3  1     0     0     1     0       0        1      0     0      0  badb.ad13.41fa
us 1
```

Note The length of configurable limitation is 20 characters while there are 80 characters reserved.

Configure Downstream Controller Profile

To configure downstream controller profile, use the following commands:

```
configure terminal
cable downstream controller-profile <profile ID>
multicast-pool <id>
rf-chan 20 47
type video <SYNC | ASYNC>
frequency 231000000
rf-output NORMAL
qam-profile <profile ID>
```

The *multicast-pool <id>* defines the DEPI multicast group. The type video *<SYNC | ASYNC>* defines synchronous or asynchronous mode.

Verify Downstream Controller Profile Configuration

To verify the Downstream controller profile configuration, use the show cable downstream controller-profile command as shown in the following example:

```
Router#show running-config | section downstream controller-profile
cable downstream controller-profile 0
 rf-chan 0 3
  type DOCSIS
  frequency 111000000
  rf-output NORMAL
```

```
 qam-profile 1
 docsis-channel-id 1
```

Configure RPD for DS Controller Profile

To configure RPD for associating a downstream controller-profile, use the following commands:

```
configure terminal
cable rpd RPD01
identifier 0004.9f31.0435
core-interface Te3/1/0
principal
rpd-ds 0 downstream-cable 3/0/0 profile 1
rpd-ds 0 downstream-cable 3/0/1 profile 2
rpd-us 0 upstream-cable 3/0/0 profile 1
core-interface te6/1/0
rpd-ds 0 downstream-cable 6/0/0 profile 2
r-dti 1
rpd-event profile 0
rpd-55d1-us-event profile 0
```

The **rpd-ds** *0* **downstream-cable** *3/0/0 profile 1* associates *controller 3/0/0* with *profile 1*, which is a DOCSIS profile.

The **rpd-ds** *0* **downstream-cable** *3/0/1 profile 2* associates *controller 3/0/1* with *profile 3*, which is a video profile.

The *core-interface te6/1/0* defines an auxiliary interface for this RPD. This auxiliary interface is used to configure downstream sharing across line cards.

Verify RPD Association with Controller Profile

To verify the downstream controller profile association with RPD, use the **show running-config | section cable rpd <ID>** command as shown in the following example:

```
Router#show running-config | section cable rpd RPD01
cable rpd toi-test1
 identifier 0000.1cbf.0000
 core-interface Te2/1/0
  principal
  rpd-ds 0 downstream-cable 2/0/9 profile 0
 rpd-event profile 0
rpd-55d1-us-event profile 0
```

Configure Downstream Sharing

This configuration is optional. DS sharing is used for multicast (MC) traffic. To configure downstream sharing, use the following commands:

```
configure terminal
cable rpd RPD01
core-interface Te3/1/0
principal
rpd-ds 0 downstream-cable 3/0/1 profile 2
cable rpd RPD02
core-interface te3/1/0
principal
rpd-ds 0 downstream-cable 3/0/1 profile 2
```

Note All RDPs in the same multicast group should have the same controller and profile association.

Configure Controller in Fiber Node

To configure the controllers in fiber-node, use the **cable fiber-node** command, as given in the following example:

```
cable fiber-node 113
 downstream Downstream-Cable 8/0/0
 upstream Upstream-Cable 8/0/1
```

Verify CM RPD Association

To verify the RPD associated with the cable modem, use the **show cable modem rpd** command as shown in the following example:

```
Router# show cable modem rpd 0004.9f03.0249
Load for five secs: 4%/2%; one minute: 3%; five minutes: 4%
Time source is NTP, 10:48:11.763 CST Tue Feb 28 2017
                                                                                D
MAC Address    IP Address      I/F           MAC               Prim  RxPwr  Timing Num I
                                             State             Sid   (dBmv) Offset CPE P
0023.be5a.bb6c 10.10.10.12     C6/0/0/UB     w-online          5     0.00   862    0   N
1859.3356.8876 10.10.10.13     C6/0/0/UB     w-online          6     0.50   907    0   N
```

Display GCP Ralated Information

To display Generic Control Plane (GCP) related information of the RPD, use the command as shown in the following example:

```
Router#show cable rpd 0004.9f03.0280 Te3/1/0 gcp-state

MAC Address     IP Address       I/F       State        Role HA  Name
0004.9f03.0280  10.10.10.11      Te3/1/0   ready        Pri  Act 2

A06#show cable rpd 0004.9f03.0280 Te3/1/0 gcp-state
MAC Address     IP Address       I/F       State        Role HA  Name
0004.9f03.0280  10.10.10.11      Te3/1/0   ready        Pri  Act 2

Router#show cable rpd name node te1/1/0 gcp-session

GCP Session ID : 10
Core Address   : 10.100.10.11:8190
RPD Address    : 10.10.10.11:60656
Next Hop MAC   : 0004.9F00.0901
Session State  : Active

Packet Statistics:
========================
Rx          : 5038
Tx          : 5034
Rx Dropped : 0
Tx Dropped : 0
```

```
Message Statistics:
=========================
Rx         : 5948
Tx         : 5954
Rx Dropped : 7
Tx Dropped : 0
Rx Illegal : 0
Tx Illegal : 0

Router#show cable rpd 120.102.6.7 te9/1/1 gcp-transaction
 Load for five secs: 3%/1%; one minute: 4%; five minutes: 4%
No time source, *10:22:57.158 CST Thu Mar 16 2017

RPD ID           I/F        TRANS ID   GCP MSG TYPE             RCP MSG TYPE   TIMESTAMP
---------------- ---------- ---------- ------------------------ --------------
-------------------------
0004.9f31.1007   Te9/1/1    7452       GCP_MSG_ID_EDS_RSP       TYPE_REX       2017-03-16
10:22:54.440
0004.9f31.1007   Te9/1/1    7452       GCP_MSG_ID_EDS           TYPE_REX       2017-03-16
10:22:54.415
0004.9f31.1007   Te9/1/1    7451       GCP_MSG_ID_EDS_RSP       TYPE_REX       2017-03-16
10:22:54.240
0004.9f31.1007   Te9/1/1    7451       GCP_MSG_ID_EDS           TYPE_REX       2017-03-16
10:22:54.215
0004.9f31.1007   Te9/1/1    7450       GCP_MSG_ID_EDS_RSP       TYPE_REX       2017-03-16
10:22:54.040
0004.9f31.1007   Te9/1/1    7450       GCP_MSG_ID_EDS           TYPE_REX       2017-03-16
10:22:54.015
0004.9f31.1007   Te9/1/1    7449       GCP_MSG_ID_EDS_RSP       TYPE_REX       2017-03-16
10:22:53.836
0004.9f31.1007   Te9/1/1    7449       GCP_MSG_ID_EDS           TYPE_REX       2017-03-16
10:22:53.815
0004.9f31.1007   Te9/1/1    7448       GCP_MSG_ID_EDS_RSP       TYPE_REX       2017-03-16
10:22:50.236
0004.9f31.1007   Te9/1/1    7448       GCP_MSG_ID_EDS           TYPE_REX       2017-03-16
10:22:50.215
0004.9f31.1007   Te9/1/1    7447       GCP_MSG_ID_EDS_RSP       TYPE_REX       2017-03-16
10:22:50.038
0004.9f31.1007   Te9/1/1    7447       GCP_MSG_ID_EDS           TYPE_REX       2017-03-16
10:22:50.015
0004.9f31.1007   Te9/1/1    7446       GCP_MSG_ID_EDS_RSP       TYPE_REX       2017-03-16
10:22:49.839
0004.9f31.1007   Te9/1/1    7446       GCP_MSG_ID_EDS           TYPE_REX       2017-03-16
10:22:49.815
```

Display DEPI Related Information

To display the Downstream External PHY Interface (DEPI) related information, use the command as shown in the following example:

```
Router#show cable rpd depi

DEPI Tunnel and Session Information Total tunnels 1 sessions 26
LocTunID   RemTunID   Remote Device  State  Remote Address  Sessn L2TP Class
                                                           Count
338514820  671581873  0004.9f00.0901 est    10.10.10.11     26    rphy-l2tp-gl...

LocID      RemID      Pseudowire      State  Last Chg Uniq ID    Type Mode RemSt
0x41040008 0x00000B02 US1/0/0:2(R)    est    00:34:57 21          P    PSP  UP
0x41010000 0x00000600 US1/0/0:0(D)    est    00:34:57 11          P    PSP  UP
0x00002006 0x00000405 DS1/0/0:5       est    00:34:57 6           P    PSP  UP
0x00002004 0x00000403 DS1/0/0:3       est    00:34:57 4           P    PSP  UP
```

```
0x4100000C 0x00000D03 US1/0/0:3(M)     est    00:34:57 23          P    PSP  UP
0x00002002 0x00000401 DS1/0/0:1        est    00:34:57 2           P    PSP  UP
0x00002007 0x00000406 DS1/0/0:6        est    00:34:57 7           P    PSP  UP
0x00002008 0x00000407 DS1/0/0:7        est    00:34:57 8           P    PSP  UP
0x4101000C 0x00000603 US1/0/0:3(D)     est    00:34:57 24          P    PSP  UP
0x41000004 0x00000D01 US1/0/0:1(M)     est    00:34:57 15          P    PSP  UP
0x00002001 0x00000400 DS1/0/0:0        est    00:34:57 1           P    PSP  UP
0x41080008 0x00000F02 US1/0/0:2(S)     est    00:34:57 22          P    PSP  UP
0x41010004 0x00000601 US1/0/0:1(D)     est    00:34:57 16          P    PSP  UP
0x41020000 0x00000800 US1/0/0:0(B)     est    00:34:57 12          P    PSP  UP
0x00002009 0x00000408 DS1/0/0:8        est    00:34:57 9           P    PSP  UP
0x41010008 0x00000602 US1/0/0:2(D)     est    00:34:57 20          P    PSP  UP
0x41000008 0x00000D02 US1/0/0:2(M)     est    00:34:57 19          P    PSP  UP
0x4108000C 0x00000F03 US1/0/0:3(S)     est    00:34:57 26          P    PSP  UP
0x00002003 0x00000402 DS1/0/0:2        est    00:34:57 3           P    PSP  UP
0x41080000 0x00000F00 US1/0/0:0(S)     est    00:34:57 14          P    PSP  UP
0x41040004 0x00000B01 US1/0/0:1(R)     est    00:34:57 17          P    PSP  UP
0x41080004 0x00000F01 US1/0/0:1(S)     est    00:34:57 18          P    PSP  UP
0x41000000 0x00000D00 US1/0/0:0(M)     est    00:34:56 10          P    PSP  UP
0x00002005 0x00000404 DS1/0/0:4        est    00:34:56 5           P    PSP  UP
0x4104000C 0x00000B03 US1/0/0:3(R)     est    00:34:56 25          P    PSP  UP
0x41040000 0x00000B00 US1/0/0:0(R)     est    00:34:56 13          P    PSP  UP

outer#show cable rpd 0004.9f03.0214 te7/1/0 depi tunnel

Load for five secs: 7%/2%; one minute: 6%; five minutes: 6%
No time source, *12:41:44.228 CST Mon Mar 20 2017

LocTunID   RemTunID   Remote Device  State  Remote Address  Sessn L2TP Class
                                                           Count
3388764998 1054297851 0004.9f03.0214 est    10.10.10.11     29    rphy-l2tp-gl...
```

Table 15: show cable rpd depi Field Descriptions

Field	Description
LocID	Local session ID.
RemID	Remote session ID.
US1/0/0:2(R)	US means UEPI session, DS means DEPI session. This string means UEPI session on line card slot 1, controller 0, rf-channel 2.
est in State	Established state.
P in Type	On primary line card.

Troubleshooting Tips

Refer to the following troubleshooting tips if configuration errors occur.

If you configure DS controller profile and cable RPD, you can check the controller status, regardless of the status of the RPD. If the channel's state is DOWN, use verbose option to view the reason.

```
Router#show controllers downstream-Cable 6/0/1 rf-channel 20 <verbose>
Chan State Admin Frequency Type       Annex Mod  srate Interleaver dcid output
20    UP    UP   231000000 VIDEO-SYNC B     256   5361  I128-J1     -   NORMAL
```

Configuration Examples

This section provides example configurations for the R-PHY Controller Profile.

Example: Controller Profile Configuration

Upstream Controller Profile Configuration

```
configure terminal
cable upstream controller-profile 2
  cable def-phy-burst 0
  us-channel 0 chan-class-id 0
  us-channel 0 channel-width 1600000 1600000
  us-channel 0 docsis-mode atdma
  us-channel 0 equalization-coefficient
  us-channel 0 frequency 50000000
  us-channel 0 hop-priority frequency modulation channel-width
  us-channel 0 ingress-noise-cancellation 100
  us-channel 0 maintain-psd
  us-channel 0 max-logical-chans 1
  us-channel 0 minislot-size 4
  us-channel 0 modulation-profile 221
  us-channel 0 power-level 0
  us-channel 0 rng-holdoff 0
  us-channel 0 shutdown
  us-channel 0 specsvl error-adaptive-profile 1
  us-channel 0 threshold cnr-profiles 25 13
  us-channel 0 threshold corr-fec 3
  us-channel 0 threshold hysteresis 3
  us-channel 0 threshold snr-profiles 25 13
  us-channel 0 threshold uncorr-fec 1
  ...
  end
```

Downstream Controller Profile Configuration

```
configure terminal
cable downstream controller-profile 1
multicast-pool 20
Rf-channel 0 15
Type docsis
Frequency 111000000
Rf-output NORMAL
Qam-profile 1
Docsis-channel-id 1
cable downstream controller-profile 2
multicast-pool 20
Rf-channel 20 47
Type video sync
Frequency 231000000
Rf-output NORMAL
Qam-profile 14
```

Example: Downstream Sharing Configuration

```
cable rpd RPD01
identifier 0004.9f31.0979
core-interface te6/1/0
principal
```

```
rpd-ds 0 downstream-cable 6/0/0 profile 1
rpd-ds 0 downstream-cable 6/0/1 profile 2
rpd-us 0 upstream-cable 6/0/0 profile 1
r-dti 6
rpd-event profile 0
rpd-55d1-us-event profile 0
cable rpd RPD2
identifier 0004.9f31.1437
core-interface Te3/1/0
principal
rpd-ds 0 downstream-cable 3/0/0 profile 1
rpd-us 0 upstream-cable 3/0/0 profile 1
core-interface Te6/1/0
rpd-ds 0 downstream-cable 6/0/1 profile 2
r-dti 3
rpd-event profile 0
rpd-55d1-us-event profile 0
```

Feature Information for Remote PHY Controller Profile and RPD Configuration

Use Cisco Feature Navigator to find information about the platform support and software image support. Cisco Feature Navigator enables you to determine which software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to the www.cisco.com/go/cfn link. An account on the Cisco.com page is not required.

Note The following table lists the software release in which a given feature is introduced. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Table 16: Feature Information for Remote PHY Controller Profile and RPD Configuration

Feature Name	Releases	Feature Information
Large Scale Controller Support (32DS/64US) with node	Cisco 1x2 RPD Software 1.1	This feature was introduced on the Cisco Remote PHY Device.
256 RPD Support per Chassis	Cisco 1x2 RPD Software 1.1	This feature was introduced on the Cisco Remote PHY Device.
Controller profile configuration	Cisco 1x2 RPD Software 1.1	This feature was introduced on the Cisco Remote PHY Device.
US 128 channels	Cisco 1x2 RPD Software 1.1	This feature was introduced on the Cisco Remote PHY Device.

PART V

Cisco Remote PHY Device Downstream Virtual Splitting

- Cisco Remote PHY Device Downstream Virtual Splitting, on page 63

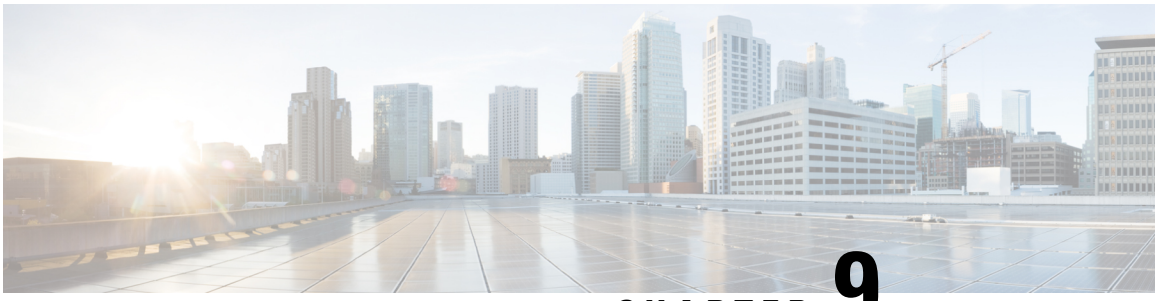

CHAPTER 9

Cisco Remote PHY Device Downstream Virtual Splitting

This document provides information on how to configure downstream virtual splitting on Remote PHY systems.

Finding Feature Information

Your software release may not support all the features that are documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. The Feature Information Table at the end of this document provides information about the documented features and lists the releases in which each feature is supported.

- Hardware Compatibility Matrix for Cisco Remote PHY Device, on page 63
- Information about RPD Downstream Virtual Splitting, on page 64
- Configure RPD Downstream Virtual Splitting, on page 64
- Example: RPD Downstream Virtual Splitting Configuration, on page 69
- Feature Information for RPD Downstream Virtual Splitting, on page 71

Hardware Compatibility Matrix for Cisco Remote PHY Device

Note Unless otherwise specified, the hardware components introduced in a given Cisco Remote PHY Device Software Release are supported in all subsequent releases.

Table 17: Hardware Compatibility Matrix for the Cisco Remote PHY Device

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Node	**Cisco 1x2 / Compact Shelf RPD Software 2.1 and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2= **Cisco 1x2 / Compact Shelf RPD Software 2.1a and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2-PKEY=
Cisco GS7000 Super High Output Intelligent Node (iNode)	**and Later Releases** Cisco Intelligent Remote PHY Device 1x2 • PID—iRPD-1X2= • PID—iRPD-1X2-PKEY=

Note The -PKEY suffix in the PID indicates units that enable the SCTE-55-2 Out-of-Band protocol support.

Information about RPD Downstream Virtual Splitting

The primary use case for multicast delivery between CCAP-core and the RPD is for the delivery of broadcast video services from a single CCAP-core element to a number of RPDs. This allows the system to scale by allowing a single CCAP-core element to generate and serve streams to all the RPDs that are configured to receive the same broadcast lineup. Since broadcast serving groups are quite large (~100,000 or more subscribers), using multicast to deliver the same copy to hundreds of remote PHY devices provides significant cost savings for operators. This mechanism can be used for broadcast video delivered via MPEG QAM channels or for that delivered via IP over DOCSIS. It is meant for the replication of an entire QAM channel to multiple RPDs.

Configure RPD Downstream Virtual Splitting

This section describes how to configure RPD Downstream Virtual Splitting on Cisco cBR-8.

Note To know more about the commands referenced in this module, see the Cisco IOS Master Command List.

Configure Multicast DEPI Pool

To configure the multicast DEPI pool, complete the following procedure:

```
configure terminal
cable depi multicast pool id
{ip|ipv6} address ip mask
```

To verify the multicast DEPI pool configuration, use the **show cable depi multicast pool** command as shown in the example below:

```
Router# show cable depi multicast pool
Load for five secs: 4%/0%; one minute: 5%; five minutes: 5%
No time source, *09:23:41.545 CST Mon Apr 23 2018
POOL ID    Net IP           Net Mask         Redundant DESCRIPTION
1          227.0.0.0        255.255.255.0    FALSE
2          228.0.0.0        255.255.254.0    FALSE
127        227.226.225.0    255.255.255.0    FALSE     to TE9/1/1+TE9/1/7

POOL ID    IPv6                                              Redundant DESCRIPTION
6          FF3A::9000:0/126                                  FALSE
```

Enable Multicast Sharing under Downstream Controller Profile

To enable the multicast sharing under downstream controller profile, complete the following procedure:

```
configure terminal
cable downstream controller-profile id
multicast-pool id
```

Then configure the other parameters of the controller profile and related RF channels.

Starting from Cisco 1x2 / Compact Shelf RPD Software 3.1, user can change the multicast pool for the downstream sharing controllers without configuring the RPD. See the following example for detailed configuration:

```
Router#config terminal
Router(config)#cable downstream controller-profile 111
Warning: changes to this profile will affect the following controllers:
Downstream controller-profile 111 is being used by controller Downstream-Cable:
         6/0/0,  6/0/1,

Confirm to continue? [no]: yes
Router(config-controller-profile)#multicast-pool 50
This profile is being used by the following RPDs:
Controller RPD DS Port List:
  RPD ID           I/F       Name
  ---------------- --------- ----------------
  0004.9f03.0214   Te6/1/0   rpd_b
  000c.2923.9991   Te6/1/0   rpd_a               ...

Confirm to continue? [no]: yes
```

To verify the multicast sharing is enabled under the downstream controller profile, use the **show cable downstream controller-profile** command as shown in the example below:

```
Router# show cable downstream controller-profile 1
Load for five secs: 8%/1%; one minute: 10%; five minutes: 10%
No time source, *07:14:32.551 CST Tue Nov 15 2016
Downstream controller-profile 1
```

```
Description:
Downstream controller-profile 1 is being used by controller Downstream-Cable:
  3/0/0,
  Admin:  UP
  MaxOfdmSpectrum: 0
  MaxCarrier: 128
  BasePower: 33.0 dBmV
  Mode: normal
  Frequency profile: unconfigured
  DS Splitting: Yes
  Multicast Pool ID: 1
```

Configure the RPD with the Same Downstream Controller and Profile

To configure the RPDs with the same downstream controller and profile, complete the following procedure:

```
configure terminal
cable rpd name
identifier id
core-interface TenGigabitEthernet slot/subslot/port
principal
rpd-ds 0 downstream-cable slot/subslot/port profile id
rpd-us 0 upstream-cable slot/subslot/port profile id
r-dti id
rpd-event profile id
```

Note Configure at least 2 RPDs with the same downstream controller and profile to implement the multicast DEPI.

Configure the RPDs to different fiber-nodes

To configure the RPDs to different fiber-nodes, complete the following procedure:

```
configure terminal
cable fiber-node id
downstream Downstream-Cable slot/subslot/port
upstream Upstream-Cable slot/subslot/port
```

Note Configure at least 2 fiber-nodes with the same downstream controller to implement the multicast DEPI.

Configure the RPDs to MAC Domain

To configure the RPDs to the MAC domain, complete the following procedure:

```
configure terminal
interface cable slot/subslot/port
downstream Downstream-Cable slot/subslot/port rf-channel id
upstream index Upstream-Cable slot/subslot/port us-channel index
cable upstream index jumbo-grants
```

```
cable upstream balance-scheduling
cable upstream bonding-group id
upstream id
attributes 800000F0
cable bundle id
cable map-advance static value
cable sid-cluster-group num-of-cluster value
cable sid-cluster-switching max-request value
```

Note Different RPDs can be configured to share the same downstream controller under one MAC domain or different MAC domains.

Enable Multicast on Cisco cBR-8 Router

To enable the multicast on cBR-8, complete the following procedure:

```
configure terminal
ip multicast-routing distributed
```

Enable Multicast on Layer 2 Switch

To enable multicast on Layer 2 switch, complete the following procedure:

```
configure terminal
ip igmp snooping
vlan configuration vlan
ip igmp snooping querier ip
```

Only need to create IGMP Snooping Group on one switch between DPIC and RPD.

Create IGMP Snooping Group under vlan which is used for connection between DPIC and RPD.

IP address used for IGMP snooping querier can be any address that is not conflict with the existing IP address in the system.

Enable Multicast on Layer 3 Router

To enable multicast on Layer 3 router, complete the following procedure:

```
configure terminal
ip pim ssm default
interface gigabitEthernet 0/0/0
ip pim sparse-dense-mode
ip igmp version 3
```

SSM must be enabled on all routers between DPIC and RPD.

All PIM neighbor must be enabled on all routers.

PIM neighbor can use sparse-dense-mode or sparse-mode.

Verify RPD Downstream Virtual Splitting Configuration on cBR-8 Side

To verify the RPD Downstream Virtual Splitting configuration on cBR-8 side, complete the procedure as shown in the example below, and check if these criteria are met:

- The remote session ID begins with 0x8 in the output of the **show cable rpd depi | in Ds** command.

```
Router# show cable rpd depi | in Ds
0x40003F21 0x80003D22 1377638051 Ds3/0/0:0       est    04:20:36 1          P
0x40003F31 0x80003D32 1377638051 Ds3/0/0:16      est    04:20:35 3          P
0x40003F41 0x80003D42 1377638051 Ds3/0/0:32      est    04:20:35 5          P
0x40003F39 0x80003D3A 1377638051 Ds3/0/0:24      est    04:20:35 4          P
0x40003F29 0x80003D2A 1377638051 Ds3/0/0:8       est    04:20:34 2          P
0x40103F21 0x80003D22 1404837649 Ds3/0/0:0       est    00:07:21 14         P
0x40103F39 0x80003D3A 1404837649 Ds3/0/0:24      est    00:07:21 17         P
0x40103F41 0x80003D42 1404837649 Ds3/0/0:32      est    00:07:21 18         P
0x40103F29 0x80003D2A 1404837649 Ds3/0/0:8       est    00:07:21 15         P
0x40103F31 0x80003D32 1404837649 Ds3/0/0:16      est    00:07:21 16         P
```

- There is assigned IP and pool ID in the output of the **show cable depi multicast ip all** command.

```
Router# show cable depi multicast ip all
Load for five secs: 7%/2%; one minute: 8%; five minutes: 8%
No time source, *23:00:55.344 CST Sun Nov 13 2016
ASSIGNED IP      POOL ID    CONTROLLER
225.225.225.0    1          3/0/0
```

- The cable modem is online in the output of the **show cable modem rpd** command.

```
Router# show cable modem
Load for five secs: 8%/3%; one minute: 9%; five minutes: 9%
No time source, *16:06:52.191 CST Thu Mar 2 2017

 D
MAC Address    IP Address      I/F           MAC               Prim  RxPwr  Timing Num
 I
                                             State             Sid   (dBmv) Offset CPE
 P
5039.558a.6c1c 40.242.0.17     C7/0/0/U1     online            5     0.50   816    0
 N
5039.558a.754a 40.242.9.201    C7/0/0/U0     online            6     0.00   814    0
 N
5039.558a.754e 40.242.9.207    C7/0/0/U0     online            7     0.00   814    0
 N
5039.558a.6b98 40.242.0.16     C7/0/0/U0     online            8     0.00   817    0
 N
0025.2e34.4380 40.242.62.172   C7/0/1/U1     online            2     0.00   783    0
 N

Router# show cable rpd
Load for five secs: 8%/3%; one minute: 9%; five minutes: 9%
No time source, *16:06:55.706 CST Thu Mar 2 2017

MAC Address     IP Address       I/F       State        Role HA  Name
0004.9f03.0214  120.105.4.7      Te7/1/0   online       Pri  Act rpd_b
000c.2923.9991  120.105.4.6      Te7/1/0   online       Pri  Act rpd_a
000c.2923.9991  120.105.4.6      Te6/1/0   online       Aux  Act rpd_a

Router# show cable modem rpd 0004.9f03.0214
Load for five secs: 8%/3%; one minute: 9%; five minutes: 9%
No time source, *16:07:07.790 CST Thu Mar 2 2017

 D
```

```
MAC Address    IP Address      I/F           MAC               Prim  RxPwr  Timing Num
 I
                                             State             Sid   (dBmv) Offset CPE
 P
5039.558a.6c1c 40.242.0.17     C7/0/0/U1     online            5     0.50   816    0
 N
5039.558a.754a 40.242.9.201    C7/0/0/U0     online            6     0.00   814    0
 N
5039.558a.754e 40.242.9.207    C7/0/0/U0     online            7     0.00   814    0
 N
```

Verify RPD Virtual Downstream Splitting Configuration on Node Side

To verify the RPD Downstream Virtual Splitting configuration on node side, complete the procedure on RPD as shown in the example below, and check if these criteria are met:

- All L2TP session ID must be start with 800.

```
RPD# show l2tp session
L2TP Tunnel Information Total tunnels 1 sessions 13
LocSessID RemSessID LocTunID  RemTunID  State Type       Last Chg
80003d22  40103f21  9fef9255  53bc1f11  est   MCM        07:10:54 2016-11-13
80003d2a  40103f29  9fef9255  53bc1f11  est   MCM        07:10:57 2016-11-13
80003d42  40103f41  9fef9255  53bc1f11  est   MCM        07:10:56 2016-11-13
80003d32  40103f31  9fef9255  53bc1f11  est   MCM        07:10:59 2016-11-13
80003d3a  40103f39  9fef9255  53bc1f11  est   MCM        07:10:56 2016-11-13
```

- All downstream DEPI SrcIP must be multicast IP that is the same as cBR-8 side.

```
RPD# show downstream depi configuration
Channel PwSubtype     SessionId  SrcIp
0       MCM           2147499298 225.225.225.0
8       MCM           2147499306 225.225.225.0
16      MCM           2147499314 225.225.225.0
24      MCM           2147499322 225.225.225.0
32      MCM           2147499330 225.225.225.0
```

Example: RPD Downstream Virtual Splitting Configuration

The following example shows how to configure RPD Downstream Virtual Splitting:

```
Router# configure terminal
Router(config)# cable depi multicast pool 1
Router(config-multicast-pool)# ip address 225.225.225.0 255.255.255.0
Router(config-multicast-pool)# exit
Router(config)# cable downstream controller-profile 0
Router(config-controller-profile)# multicast-pool 1
Router(config-controller-profile)# max-carrier 128
Router(config-controller-profile)# base-channel-power 34
Router(config-controller-profile)# rf-chan 0 95
Router (config-prof-rf-chan)# type DOCSIS
Router (config-prof-rf-chan)# frequency 285000000
Router (config-prof-rf-chan)# rf-output NORMAL
Router (config-prof-rf-chan)# qam-profile 1
Router (config-prof-rf-chan)# power-adjust 0
Router (config-prof-rf-chan)# docsis-channel-id 1
Router (config-prof-rf-chan)# end
Router# configure terminal
```

```
Router(config)# cable rpd node_1
Router(config-rpd)# identifier 0004.9f03.0214
Router(config-rpd)# core-interface Te9/1/0
Router(config-rpd-core)# principal
Router(config-rpd-core)# rpd-ds 0 downstream-cable 9/0/0 profile 0
Router(config-rpd-core)# rpd-us 0 upstream-cable 9/0/0 profile 221
Router(config-rpd-core)# exit
Router(config-rpd)# r-dti 20
Router(config-rpd)# rpd-event profile 0
Router(config-rpd)# rpd-55d1-us-event profile 0
Router(config-rpd)# exit
Router(config)# cable rpd node_2
Router(config-rpd)# identifier 000c.2923.9991
Router(config-rpd)# core-interface Te9/1/0
Router(config-rpd-core)# principal
Router(config-rpd-core)# rpd-ds 0 downstream-cable 9/0/0 profile 0
Router(config-rpd-core)# rpd-us 0 upstream-cable 9/0/1 profile 221
Router(config-rpd-core)# exit
Router(config-rpd)# r-dti 20
Router(config-rpd)# rpd-event profile 0
Router(config-rpd)# rpd-55d1-us-event profile 0
Router(config-rpd)# exit
Router(config)# cable fiber-node 100
Router(config-fiber-node)# downstream Downstream-Cable 9/0/0
Router(config-fiber-node)# upstream Upstream-Cable 9/0/0
Router(config-fiber-node)# exit
Router(config)# cable fiber-node 101
Router(config-fiber-node)# downstream Downstream-Cable 9/0/0
Router(config-fiber-node)# upstream Upstream-Cable 9/0/1
Router(config-fiber-node)# exit
Router(config)# interface Cable 9/0/0
Router(config-if)# downstream Downstream-Cable 9/0/0 rf-channel 0
Router(config-if)# downstream Downstream-Cable 9/0/0 rf-channel 8
Router(config-if)# upstream 0 Upstream-Cable 9/0/0 us-channel 0
Router(config-if)# upstream 1 Upstream-Cable 9/0/0 us-channel 1
Router(config-if)# upstream 2 Upstream-Cable 9/0/0 us-channel 2
Router(config-if)# upstream 3 Upstream-Cable 9/0/0 us-channel 3
Router(config-if)# upstream 4 Upstream-Cable 9/0/1 us-channel 0
Router(config-if)# upstream 5 Upstream-Cable 9/0/1 us-channel 1
Router(config-if)# upstream 6 Upstream-Cable 9/0/1 us-channel 2
Router(config-if)# upstream 7 Upstream-Cable 9/0/1 us-channel 3
Router(config-if)# cable upstream 0 jumbo-grants
Router(config-if)# cable upstream balance-scheduling
Router(config-if)# cable upstream bonding-group 1
Router(config-upstream-bonding)# upstream 0
Router(config-upstream-bonding)# upstream 1
Router(config-upstream-bonding)# upstream 2
Router(config-upstream-bonding)# upstream 3
Router(config-upstream-bonding)# attributes 800000F0
Router(config-upstream-bonding)# exit
Router(config-if)# cable upstream bonding-group 2
Router(config-upstream-bonding)# upstream 4
Router(config-upstream-bonding)# upstream 5
Router(config-upstream-bonding)# upstream 6
Router(config-upstream-bonding)# upstream 7
Router(config-upstream-bonding)# attributes 8000000F
Router(config-upstream-bonding)# exit
Router(config-if)# cable bundle 1
Router(config-if)# cable map-advance static 1000
Router(config-if)# cable sid-cluster-group num-of-cluster 2
Router(config-if)# cable sid-cluster-switching max-request 2
Router(config-if)# exit
Router(config)# ip multicast-routing distributed
Router(config)# interface TenGigabitEthernet 9/1/0
```

```
Router(config-if)# ip address 192.168.3.1 255.255.255.0
Router(config-if)# end
```

Feature Information for RPD Downstream Virtual Splitting

Use Cisco Feature Navigator to find information about the platform support and software image support. Cisco Feature Navigator enables you to determine which software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to the www.cisco.com/go/cfn link. An account on the Cisco.com page is not required.

Note The following table lists the software release in which a given feature is introduced. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Table 18: Feature Information for RPD Downstream Virtual Splitting

Feature Name	Releases	Feature Information
DS virtual splitting	Cisco 1x2 RPD Software 1.1	This feature was introduced on the Cisco cBR Series Converged Broadband Routers.

PART VI

Cisco Remote PHY Video Configuration

- Cisco Remote PHY Video Configuration, on page 75

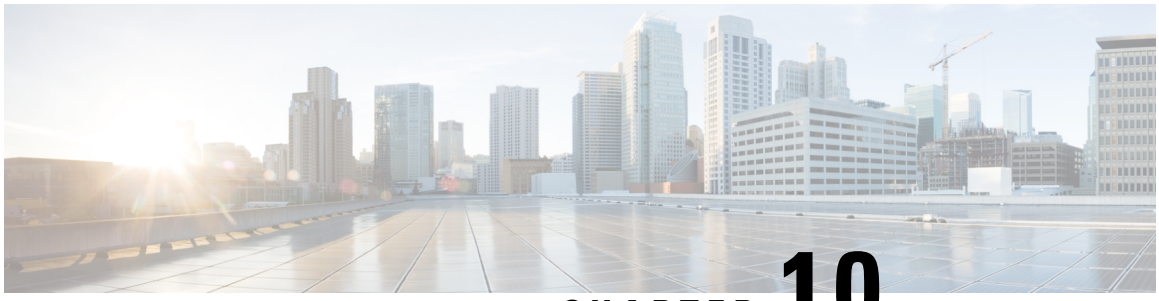

CHAPTER 10

Cisco Remote PHY Video Configuration

Finding Feature Information

Your software release may not support all the features that are documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. The Feature Information Table at the end of this document provides information about the documented features and lists the releases in which each feature is supported.

- Hardware Compatibility Matrix for Cisco Remote PHY Device, on page 75
- Hardware Compatibility Matrix for Cisco Remote PHY Device, on page 76
- Information About R-PHY Video Configuration, on page 77
- How to Configure R-PHY Video, on page 77
- Example: R-PHY Video Configuration, on page 79
- Feature Information for Remote PHY Video, on page 80

Hardware Compatibility Matrix for Cisco Remote PHY Device

Note Unless otherwise specified, the hardware components introduced in a given Cisco Remote PHY Device Software Release are supported in all subsequent releases.

Table 19: Hardware Compatibility Matrix for the Cisco Remote PHY Device

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Node	**Cisco 1x2 / Compact Shelf RPD Software 2.1 and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2= **Cisco 1x2 / Compact Shelf RPD Software 2.1a and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2-PKEY=

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Intelligent Node (iNode)	**and Later Releases** Cisco Intelligent Remote PHY Device 1x2 • PID—iRPD-1X2= • PID—iRPD-1X2-PKEY=

Note The -PKEY suffix in the PID indicates units that enable the SCTE-55-2 Out-of-Band protocol support.

Hardware Compatibility Matrix for Cisco Remote PHY Device

Note Unless otherwise specified, the hardware components introduced in a given Cisco Remote PHY Device Software Release are supported in all subsequent releases.

Table 20: Hardware Compatibility Matrix for the Cisco Remote PHY Device

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Node	**Cisco 1x2 / Compact Shelf RPD Software 2.1 and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2= **Cisco 1x2 / Compact Shelf RPD Software 2.1a and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2-PKEY=
Cisco GS7000 Super High Output Intelligent Node (iNode)	**and Later Releases** Cisco Intelligent Remote PHY Device 1x2 • PID—iRPD-1X2= • PID—iRPD-1X2-PKEY=

Note The -PKEY suffix in the PID indicates units that enable the SCTE-55-2 Out-of-Band protocol support.

Information About R-PHY Video Configuration

The controller profile specifies the RF channels that belong to this profile and their RF parameters. Profile can either be unicast or multicast.

Multicast profile is used for downstream sharing. Multiple Remote PHY Devices (RPDs) can be configured to receive the same downstream controller. The traffic is multicast to all RPDs configured to receive the downstream controller. Applications include Video on Demand (VOD), Switched Digital Video (SDV) and Broadcast Video.

There is one principal core interface, and up to four auxiliary core interfaces in the RPD configuration. Principal core specifies the DPIC interface with which RPD connects. Auxiliary cores specify external DPIC interfaces that can be used for downstream sharing. Auxiliary core is currently used for narrowcast video, broadcast video and out-of-band data signaling path (OOB) only.

How to Configure R-PHY Video

This section describes how to configure R-PHY video on Cisco cBR-8.

Configuring Downstream Controller Profile

To configure the donwstream controller profile, use the example below:

```
Router# configure terminal
Router(config)# cable depi multicast pool 20
Router(config-multicast-pool)# ip address 225.28.0.0  255.255.0.0
Router(config-multicast-pool)# exit
Router(config)# cable downstream controller-profile 1
Router(config-controller-profile)# multicast-pool 20
Router(config-controller-profile)# rf-chan 0 15
Router(config-prof-rf-chan)# type docsis
Router(config-prof-rf-chan)# frequency 111000000
Router(config-prof-rf-chan)# rf-output normal
Router(config-prof-rf-chan)# qam-profile 1
Router(config-prof-rf-chan)# docsis-channel-id 1
Router(config-prof-rf-chan)# exit
Router(config-controller-profile)# rf-chan 16 19
Router(config-prof-rf-chan)# type video sync
Router(config-prof-rf-chan)# frequency 699000000
Router(config-prof-rf-chan)# rf-output normal
Router(config-prof-rf-chan)# qam-profile 1
Router(config-prof-rf-chan)# exit
Router(config-controller-profile)# exit
Router(config)# cable downstream controller-profile 2
Router(config-controller-profile)# multicast-pool 1
Router(config-controller-profile)# rf-chan 20 47
Router(config-prof-rf-chan)# type video sync
Router(config-prof-rf-chan)# frequency 231000000
Router(config-prof-rf-chan)# rf-output normal
Router(config-prof-rf-chan)# qam-profile 4
```

In the above example,two profiles are configured, profile 1 is a mixed profile, profile 2 is a video only profile.

Configuring RPD

To configure the RPD to include the controller profile, follow the example below:

```
Router# configure terminal
Router(config)# cable rpd RPD01
Router(config-rpd)# identifier 0004.9f31.0455
Router(config-rpd)# core-interface Te3/1/0
Router(config-rpd-core)# principal
Router(config-rpd-core)# rpd-ds 0 downstream-cable 3/0/0 profile 1
Router(config-rpd-core)# rpd-ds 0 downstream-cable 3/0/1 profile 2
Router(config-rpd-core)# rpd-us 0 upstream-cable 3/0/0 profile 1
Router(config-rpd-core)# exit
Router(config-rpd)# core-interface te6/1/0
Router(config-rpd-core)# rpd-ds 0 downstream-cable 6/0/0 profile 2
Router(config-rpd-core)# exit
Router(config-rpd)# r-dti 1
Router(config-rpd)# rpd-event profile 0
Router(config-rpd)# rpd-55d1-us-event profile 0
```

Note

- All channels within the profiles of a RPD must be unique, frequencies must not overlap each other.
- There must be at least one DOCSIS downstream profile in the principal core.
- Auxiliary core must only contain video and out-of-band profiles.
- A downstream controller can only be associated to one profile.

Configuring Downstream Sharing

Downstream sharing is used for multicast (MC) traffic. To configure downstream sharing, follow the example below:

```
Router# configure terminal
Router(config)# cable rpd RPD01
Router(config-rpd)# core-interface Te3/1/0
Router(config-rpd-core)# principal
Router(config-rpd-core)# rpd-ds 0 downstream-cable 3/0/1 profile 2
Router(config-rpd-core)# exit
Router(config-rpd)# exit
Router(config)# cable rpd RPD02
Router(config-rpd)# core-interface te3/1/0
Router(config-rpd-core)# principal
Router(config-rpd-core)# rpd-ds 0 downstream-cable 3/0/1 profile 2
Router(config-rpd-core)# exit
Router(config-rpd)# exit
Router(config)# cable rpd RPD03
Router(config-rpd)# core-interface te6/1/0
Router(config-rpd-core)# principal
Router(config-rpd-core)# rpd-ds 0 downstream-cable 6/0/1 profile 3
Router(config-rpd-core)# exit
Router(config-rpd)# core-interface te3/1/0
Router(config-rpd-core)# rpd-ds 0 downstream-cable 3/0/1 profile 2
```

Note All RPDs in the same multicast group have the same controller and profile association.

Configuring Video

To configure Video, see Cisco Converged Broadband Routers Video Configuration Guide for Cisco IOS XE Everest 16.5.1.

Example: R-PHY Video Configuration

The following example shows how to configure Remote-PHY video:

```
Router# configure terminal
Router(config)# cable downstream qam-profile 7
Router(config-qam-prof)# annex B modulation 256
Router(config-qam-prof)# interleaver-depth I32-J4
Router(config-qam-prof)# symbol-rate 5361
Router(config-qam-prof)# spectrum-inversion off
Router(config-qam-prof)# description default-annex-b-256-qam
Router(config-qam-prof)# exit
Router(config)# cable depi multicast pool 20
Router(config-multicast-pool)# ip address 225.28.0.0 255.255.0.0
Router(config-multicast-pool)# exit
Router(config)# cable downstream controller-profile 1
Router(config-controller-profile)# multicast-pool 20
Router(config-controller-profile)# rf-channel 0 15
Router(config-prof-rf-chan)# type docsis
Router(config-prof-rf-chan)# frequency 111000000
Router(config-prof-rf-chan)# rf-output NORMAL
Router(config-prof-rf-chan)# qam-profile 7
Router(config-prof-rf-chan)# docsis-channel-id 1
Router(config-prof-rf-chan)# exit
Router(config-controller-profile)# exit
Router(config)# cable downstream controller-profile 2
Router(config-controller-profile)# multicast-pool 20
Router(config-controller-profile)# rf-channel 20 47
Router(config-prof-rf-chan)# type video sync
Router(config-prof-rf-chan)# frequency 231000000
Router(config-prof-rf-chan)# rf-output NORMAL
Router(config-prof-rf-chan)# qam-profile 7
Router(config-prof-rf-chan)# exit
Router(config-controller-profile)# exit
Router(config)# cable rpd RPD01
Router(config-rpd)# identifier 0004.9f31.0979
Router(config-rpd)# core-interface te6/1/0
Router(config-rpd-core)# principal
Router(config-rpd-core)# rpd-ds 0 downstream-cable 6/0/0 profile 1
Router(config-rpd-core)# rpd-ds 0 downstream-cable 6/0/1 profile 2
Router(config-rpd-core)# rpd-us 0 upstream-cable 6/0/0 profile 1
Router(config-rpd-core)# exit
Router(config-rpd)# r-dti 6
Router(config-rpd)# rpd-event profile 0
Router(config-rpd)# rpd-55d1-us-event profile 0
Router(config-rpd)# exit
Router(config)# cable rpd RPD2
Router(config-rpd)# identifier 0004.9f31.1437
```

```
Router(config-rpd)# core-interface Te3/1/0
Router(config-rpd-core)# principal
Router(config-rpd-core)# rpd-ds 0 downstream-cable 3/0/0 profile 1
Router(config-rpd-core)# rpd-us 0 upstream-cable 3/0/0 profile 1
Router(config-rpd-core)# exit
Router(config-rpd)# core-interface Te6/1/0
Router(config-rpd-core)# rpd-ds 0 downstream-cable 6/0/1 profile 2
Router(config-rpd-core)# exit
Router(config-rpd)# r-dti 3
Router(config-rpd)# rpd-event profile 0
Router(config-rpd)# rpd-55d1-us-event profile 0
Router(config-rpd)# exit
Router(config)# cable video
Router(config-video)# service-distribution-group RPD_SDG
Router(config-video-sdg)# rpd downstream-cable 6/0/1
Router(config-video-sdg)# exit
Router(config-video)# virtual-carrier-group RPC_VCG
Router(config-video-vcg)# rf-channel 20-47 tsid 20-47 output-port-number 20-47
Router(config-video-vcg)# exit
Router(config-video)# bind-vcg
Router(config-video-bd)# vcg RPC_VCG sdg RPD_SDG
Router(config-video-bd)# exit
Router(config-video)# logical-edge-device RPD_LED
Router(config-video-led)# protocol table-based
Router(config-video-led-protocol)# virtual-edge-input-ip 174.102.1.1 input-port-number 1
Router(config-video-led-protocol)# vcg RPD_VCG
Router(config-video-led-protocol)# active
Router(config-video-led-protocol)# table-based
Router(config-video-tb)# vcg RPD_VCG
Router(config-video-tb-vcg)# rf-channel 20-47
Router(config-video-tb-vcg-sess)# session tbsession-1 input-port 1 start-udp-port 49152
num-sessions-per-qam 20 processing-type remap start-program 1 bit-rate 1800000
```

Feature Information for Remote PHY Video

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Table 21: Feature Information for Remote PHY Video

Feature Name	Releases	Feature Information
RPHY Video PME VOD	Cisco 1x2 RPD Software 1.1	This feature was introduced on the Cisco Remote PHY Device.
RPHY Video Pre-Encrypted MPTS Pass-Thru Support	Cisco 1x2 RPD Software 1.1	This feature was introduced on the Cisco Remote PHY Device.
RPHY Pre-encrypted Broadcast Video Support	Cisco 1x2 / Compact Shelf RPD Software 2.1	This support was introduced on the Cisco Remote PHY Device 1x2.

PART VII

Cisco Remote PHY Out of Band

- Cisco Remote PHY Out of Band, on page 83

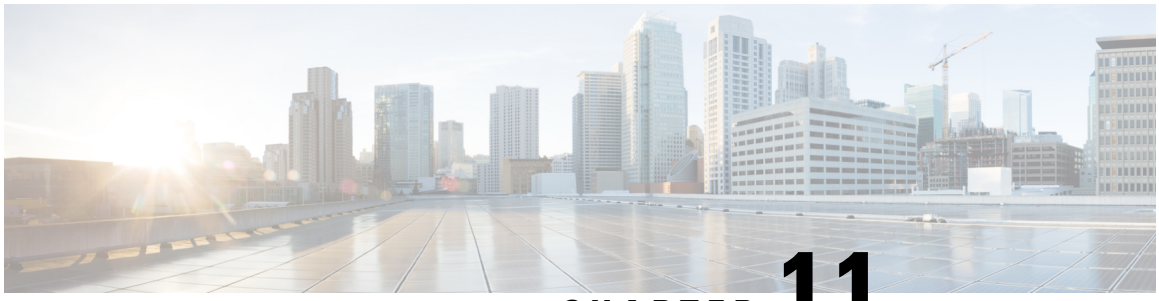

CHAPTER 11

Cisco Remote PHY Out of Band

Finding Feature Information

Your software release may not support all the features that are documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. The Feature Information Table at the end of this document provides information about the documented features and lists the releases in which each feature is supported.

- Hardware Compatibility Matrix for Cisco Remote PHY Device, on page 83
- Information About Out of Band, on page 84
- How to Configure 55-1 OOB , on page 84
- Example: OOB Configuration, on page 85
- Feature Information for OOB, on page 86

Hardware Compatibility Matrix for Cisco Remote PHY Device

Note Unless otherwise specified, the hardware components introduced in a given Cisco Remote PHY Device Software Release are supported in all subsequent releases.

Table 22: Hardware Compatibility Matrix for the Cisco Remote PHY Device

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Node	**Cisco 1x2 / Compact Shelf RPD Software 2.1 and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2= **Cisco 1x2 / Compact Shelf RPD Software 2.1a and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2-PKEY=

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Intelligent Node (iNode)	**and Later Releases** Cisco Intelligent Remote PHY Device 1x2 • PID—iRPD-1X2= • PID—iRPD-1X2-PKEY=

Note The -PKEY suffix in the PID indicates units that enable the SCTE-55-2 Out-of-Band protocol support.

Information About Out of Band

Out of Band (OOB) data is used by set-top boxes on the cable plant for the delivery of data streams that support set-top box operation in the downstream and to convey responses and commands from the STB in the upstream.

The two OOB systems are OOB 55-1 and OOB 55-2. The OOB 55-2 system has a scheduled TDMA upstream, which is intolerant of packet network latency. The SCTE 55-1 system does not include such upstream scheduling capabilities, however requires multiple upstream frequencies to operate.

How to Configure 55-1 OOB

This section describes how to configure OOB on Cisco cBR-8.

Configuring Global 55-1 OOB

To configure OOB, complete the following procedure:

```
configure terminal
cable oob
virtual-om o-id
ip ip subnet_mask
join-group ip source-ip ip out-group ip
virtual-arpd id
ip ip subnet_mask
nc ip udp-port number
source-id s-id
```

Configuring Profile for 55-1 OOB

To configure profile to use OOB, complete the following procedure:

```
configure terminal
controller downstream-oob 55d1-profile dp-id
no ds-channel 0 rf-mute
```

```
no ds-channel 0 shutdown
ds-channel 0 frequency f-value
ds-channel 0 poweradjust p-value
controller upstream-oob 55d1-profile up-id
no us-channel 0 shutdown
us-channel 0 frequency f-value
us-channel 0 varpd-portid va-id (ID range is 1-6) varpd-demodid vd-id
no us-channel 1 shutdown
us-channel 1 frequency f-value
us-channel 1 varpd-portid va-id varpd-demodid vd-id
no us-channel 2 shutdown
us-channel 2 frequency f-value
us-channel 2 varpd-portid va-id varpd-demodid vd-id
```

Configuring Remote PHY Device for 55-1 OOB

To configure the RPD to use OOB, complete the following procedure:

```
configure terminal
cable rpd name
identifier id
no sbfd enable
core-interface TenGigabitEthernet slot/subslot/port
principal
rpd-ds 0 downstream-oob-vom o-id profile dp-id
rpd-us 0 upstream-oob-varpd a-id profile up-id
rpd-us 1 upstream-oob-varpd a-id profile up-id
r-dti value
rpd-event profile id
```

Example: OOB Configuration

The following example shows how to configure OOB:

```
Router#configure terminal
Router(config)# cable oob
Router(config-oob)# virtual-om 1
Router(config-oob-vom)# ip 100.100.100.100 255.255.255.0
Router(config-oob-vom)# join-group 235.1.1.1 source-ip 2.3.4.5 out-group 239.2.2.2
Router(config-oob-vom)# exit

Router(config-oob)# virtual-arpd 1
Router(config-oob-varpd)# ip 32.32.32.32 255.255.255.0
Router(config-oob-varpd)# nc 3.3.3.3 udp-port 100
Router(config-oob-varpd)# source-id 1
Router(config-oob-varpd)# exit
Router(config-oob)# exit

Router(config)# controller downstream-OOB 55d1-profile 1
Router(config-profile)# no ds-channel 0 rf-mute
Router(config-profile)# no ds-channel 0 shutdown
Router(config-profile)# ds-channel 0 frequency 70000000
Router(config-profile)# ds-channel 0 poweradjust 1
Router(config-profile)# exit
```

```
Router(config)# controller upstream-OOB 55d1-profile 1
Router(config-profile)# no us-channel 0 shutdown
Router(config-profile)# us-channel 0 frequency 5216000
Router(config-profile)# us-channel 0 varpd-portid 3 varpd-demodid 2
Router(config-profile)# no us-channel 1 shutdown
Router(config-profile)# us-channel 1 frequency 6000000
Router(config-profile)# us-channel 1 varpd-portid 3 varpd-demodid 4
Router(config-profile)# no us-channel 2 shutdown
Router(config-profile)# us-channel 2 frequency 8000000
Router(config-profile)# us-channel 2 varpd-portid 3 varpd-demodid 6
Router(config-profile)# exit

Router(config)# cable rpd node1
Router(config-rpd)# identifier 0004.9f00.0685
Router(config-rpd)# no sbfd enable
Router(config-rpd)# core-interface Te7/1/0
Router(config-rpd-core)# principal
Router(config-rpd-core)# rpd-ds 0 downstream-cable 7/0/0 profile 3
Router(config-rpd-core)# rpd-ds 0 downstream-oob-vom 1 profile 1
Router(config-rpd-core)# rpd-us 0 upstream-cable 7/0/0 profile 3
Router(config-rpd-core)# rpd-us 0 upstream-oob-varpd 1 profile 1
Router(config-rpd-core)# exit

Router(config-rpd)# r-dti 1
Router(config-rpd)# rpd-event profile 0
Router(config-rpd)# rpd-55d1-us-event profile 0
```

Feature Information for OOB

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Table 23: Feature Information for OOB

Feature Name	Releases	Feature Information
Out of Band	Cisco 1x2 RPD Software 1.1	This feature was introduced on the Cisco Remote PHY Device.
Support for OOB 55-2	Cisco 1x2 / Compact Shelf RPD Software 2.1	This feature was introduced on the Cisco Remote PHY Device 1x2.

PART VIII

Cisco Remote PHY Line Card and Supervisor Redundancy

- Cisco Remote PHY Line Card and Supervisor Redundancy, on page 89

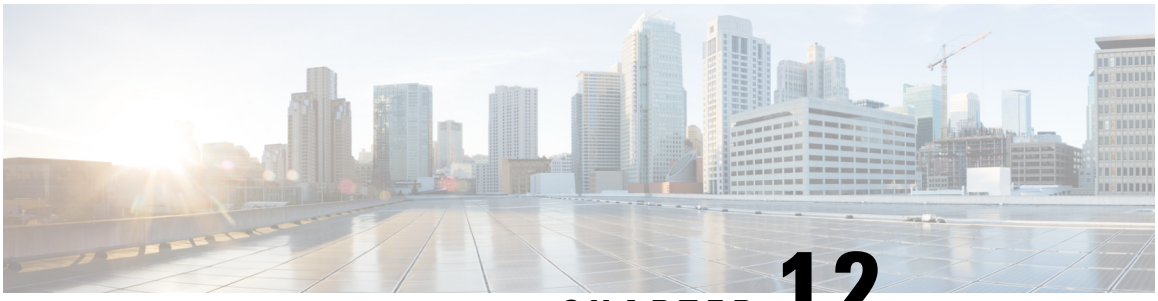

CHAPTER 12

Cisco Remote PHY Line Card and Supervisor Redundancy

- Hardware Compatibility Matrix for Cisco Remote PHY Device, on page 89
- Information About Remote PHY Line Card and Supervisor Redundancy, on page 90
- How to Configure Remote PHY Line Card Redundancy, on page 92
- Feature Information for Remote PHY Line Card and Supervisor Redundancy, on page 93

Hardware Compatibility Matrix for Cisco Remote PHY Device

Note Unless otherwise specified, the hardware components introduced in a given Cisco Remote PHY Device Software Release are supported in all subsequent releases.

Table 24: Hardware Compatibility Matrix for the Cisco Remote PHY Device

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Node	**Cisco 1x2 / Compact Shelf RPD Software 2.1 and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2= **Cisco 1x2 / Compact Shelf RPD Software 2.1a and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2-PKEY=

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Intelligent Node (iNode)	**and Later Releases** Cisco Intelligent Remote PHY Device 1x2 • PID—iRPD-1X2= • PID—iRPD-1X2-PKEY=

Note The -PKEY suffix in the PID indicates units that enable the SCTE-55-2 Out-of-Band protocol support.

Information About Remote PHY Line Card and Supervisor Redundancy

Line Card Redundancy

In Remote PHY (R-PHY) configuration, RPDs connect to both active linecard and standby linecard, and have active connections to active linecard, standby connections to standby linecard. From RPD side, it connects to active core and standby core independently.

Each RPD has one principal core, and may have several auxiliary cores. LCHA needs to support multiple cores. These cores are on the same linecard or different linecards. The port on the standby linecard can protect all the same ports on the active linecards.

Figure 4: Multiple cores on the same line card

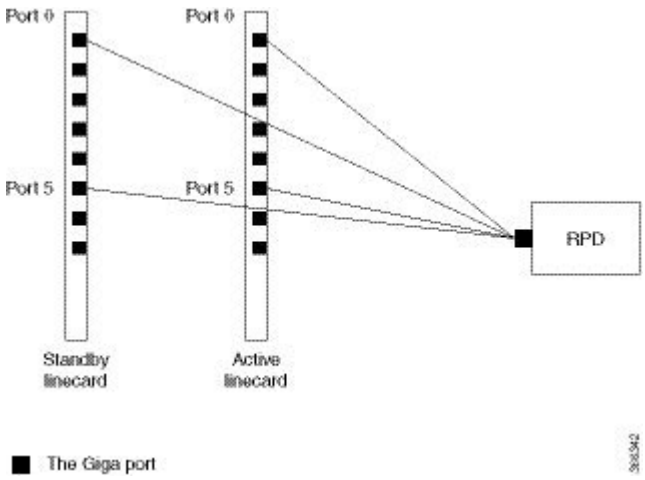

In the figure above, the RPD has multiple cores connected to the same active linecard. In order to support LCHA, RPD needs to connect to the same port on the standby linecard. In this way, RPD has several standby cores to protect the active cores. The standby core have the same resource as the active core.

When multiple cores connect to different active linecards, if they connect to different ports of the linecard, there will have different standby cores. If active core connects to the same port on different linecard, they share one standby core.

Figure 5: Multiple cores on different line cards

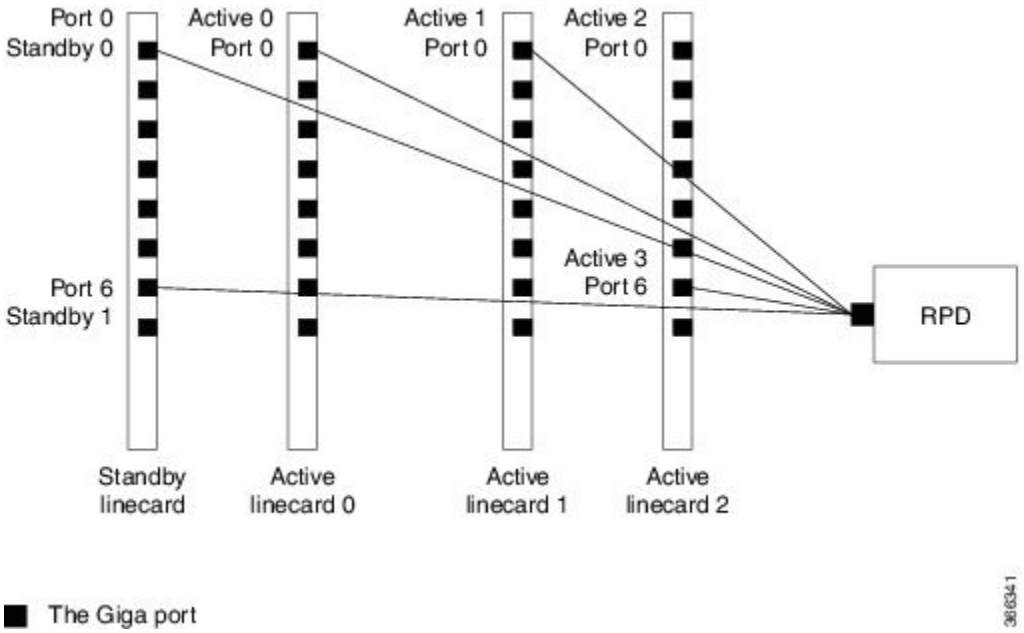

In the figure above, RPD have two standby cores. One standby core connects to port 6 of the standby linecard, it can protect the active core which connects to port 6 of the active linecard 2. The other standby core connects to port 0 of the standby linecard, it can protect the active cores connect to port 0 of linecard 0 and linecard 1. So for the standby core 0, it contains the resource for both active core 0 and active core 1.

When active linecard 0 fails over to standby linecard, the standby core 1 will be deleted, the standby core 0 will bring the resource of active core 0 to active. When linecard 2 fails over to standby linecard, the standby core 0 will be deleted, and standby core 1 will become active for active core 3.

For more information about Line Card Redundancy, see Line Card Redundancy.

Supervisor Redundancy

Compared to the SUP high availability recover process in iCMTS configuration, the Remote PHY SUP high availability recover process has RPD status change as shown in the example below:

```
show cable rpd 0004.9f00.0625 lcha-cores
MAC Address     IP Address    I/F        State         Role  HA   Name
0004.9f00.0625  120.105.6.10  Te0/1/1    recovering    Pri   Act  node1
0004.9f00.0625  120.105.6.10  Te9/1/1    recovering    NA    Sby  node1

show cable rpd 0004.9f00.0625 lcha-cores
MAC Address     IP Address    I/F        State         Role  HA   Name
0004.9f00.0625  120.105.6.10  Te0/1/1    init(l2tp)    Pri   Act  node1
0004.9f00.0625  120.105.6.10  Te9/1/1    init(l2tp)    NA    Sby  node1

show cable rpd 0004.9f00.0625 lcha-cores
MAC Address     IP Address    I/F        State         Role  HA   Name
```

```
0004.9f00.0625  120.105.6.10  Te0/1/1    online          Pri   Act  node1
0004.9f00.0625  120.105.6.10  Te9/1/1    online          NA    Sby  node1
```

The status of the RPD changes from recovering to online, indicating that the SUP redundancy is working in the Remote PHY configuration.

For more information about SUP redundancy, see Supervisor Redundancy.

How to Configure Remote PHY Line Card Redundancy

This section describes how to configure Remote PHY (R-PHY) Line Card Redundancy on Cisco cBR-8.

Configuring DPIC Ports

If the `cable depi fragment off` option is enabled on the Cisco cBR router, configure MTU as 2350 on routers between the Cisco cBR router and the RPDs. If the `cable depi fragment off` option is disabled, the MTU must be 1500 on the routers.

Note Ensure that the DPIC should be MTU-adjustable to avoid DPIC control and data plane MTU mismatch when the `cable depi fragment off` option is enabled.

The following example shows how to configure DPIC port to support Remote PHY Line Card Redundancy:

```
Router# configure terminal
Router(config)# interface TenGigabitEthernet8/1/0
Router(config-if)# vrf forwarding te80
Router(config-if)# ip address 80.6.16.166 255.255.255.0
Router(config-if)# ip mtu 1500
Router(config-if)# exit
Router(config)# interface TenGigabitEthernet8/1/1
Router(config-if)# vrf forwarding te81
Router(config-if)# ip address 80.6.16.167 255.255.255.0
Router(config-if)# ip mtu 1500
Router(config-if)# exit
Router(config)# interface TenGigabitEthernet6/1/0
Router(config-if)# vrf forwarding te60
Router(config-if)# ip address 80.6.16.186 255.255.255.0
Router(config-if)# ip mtu 1500
Router(config-if)# exit
Router(config)# interface TenGigabitEthernet6/1/1
Router(config-if)# vrf forwarding te61
Router(config-if)# ip address 80.6.16.187 255.255.255.0
Router(config-if)# ip mtu 1500
```

Configuring RPD

The following example shows how to configure RPD to support Remote PHY Line Card Redundancy:

```
Router# configure terminal
Router(config)# cable rpd node1
Router(config-rpd)# identifier 0004.9f03.0055
Router(config-rpd)# core-interface te8/1/0
Router(config-rpd-core)# principal
Router(config-rpd-core)# rpd-ds 0 downstream-cable 8/1/0 profile 0
Router(config-rpd-core)# rpd-us 0 upstream-cable 8/1/0 profile 0
```

```
Router(config-rpd-core)# exit
Router(config-rpd)# core-interface te8/1/1
Router(config-rpd-core)# rpd-ds 0 downstream-cable 8/1/1 profile 0
Router(config-rpd-core)# rpd-us 0 upstream-cable 8/1/1 profile 0
Router(config-rpd-core)# exit
Router(config-rpd)# exit
Router(config)# cable rpd node2
Router(config-rpd)# identifier 0004.9f03.0163
Router(config-rpd)# core-interface te8/1/2
Router(config-rpd-core)# principal
Router(config-rpd-core)# rpd-ds 0 downstream-cable 8/0/1 profile 1
Router(config-rpd-core)# rpd-us 0 upstream-cable 8/0/2 profile 2
```

Configuring Remote PHY Line Card Redundancy

The following example shows how to configure Remote PHY Line Card Redundancy:

```
Router# configure terminal
Router(config)# redundancy
Router(config-red)# mode sso
Router(config-red)# linecard-group 0 internal-switch
Router(config-red-lc)# class 1:N
Router(config-red-lc)# member slot 8 primary
Router(config-red-lc)# member slot 6 secondary
Router(config-red-lc)# no revertive
```

Verifying Remote PHY Line Card Redundancy Configuration

To verify the Remote PHY line card redundancy configuration, use the example below:

```
Router# show redundancy linecard all
              LC     My         Peer        Peer      Peer
Slot Subslot  Group  State      State       Slot      Subslot  Role     Mode
-------------------------------------------------------------------------------
 8   -        0      Active     Stdby Warm  6         -        Active   Primary
 6   -        0      -          -           Multiple  None     Standby  Secondary

Router# show cable rpd lcha-cores
MAC Address     IP Address       I/F       State            Core Role  HA Role
0004.9f03.0055  80.6.16.15       Te6/1/0   online           Principal  Standby
0004.9f03.0055  80.6.16.15       Te8/1/0   online           Principal  Active
0004.9f03.0163  80.6.16.16       Te6/1/1   online           Principal  Standby
0004.9f03.0163  80.6.16.16       Te8/1/1   online           Principal  Active

Router# show cable rpd
MAC Address     IP Address       I/F       State            Core Role  HA Role
0004.9f03.0055  80.6.16.15       Te6/1/0   online           Principal  Active
0004.9f03.0163  80.6.16.16       Te6/1/1   online           Principal  Active
```

Feature Information for Remote PHY Line Card and Supervisor Redundancy

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Table 25: Feature Information for Remote PHY Line Card and Supervisor Redundancy

Feature Name	Releases	Feature Information
Remote PHY LCHA	Cisco 1x2 RPD Software 1.1	This feature was introduced on the Cisco Remote PHY Device.
Remote PHY SUPHA	Cisco 1x2 RPD Software 1.1	This feature was introduced on the Cisco Remote PHY Device.

PART IX

Cisco Remote PHY Management

- Secure Software Download, on page 97
- Cisco Remote PHY Fault Management, on page 103
- Cisco Remote PHY Device Operations and Debugging, on page 109

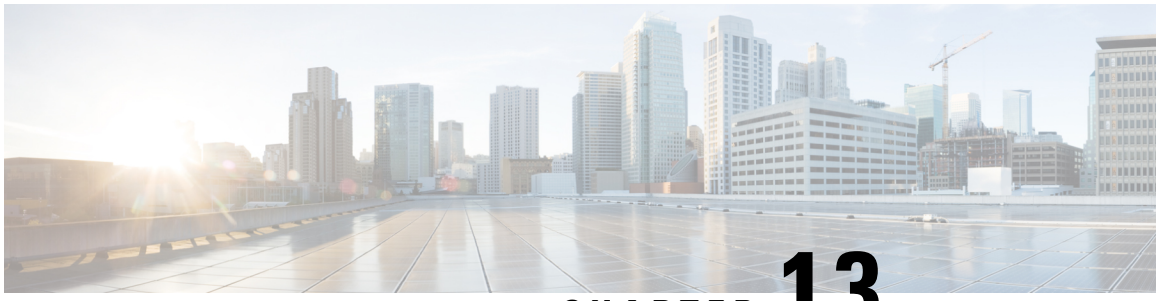

CHAPTER 13

Secure Software Download

This document describes how to upgrade software from RPD and Cisco cBR by using Secure Software Download feature.

- Hardware Compatibility Matrix for Cisco Remote PHY Device, on page 97
- Information About Secure Software Download, on page 98
- How to Upgrade Software from RPD and Cisco cBR Using SSD, on page 98
- Examples for Upgrading HA RPHY Software, on page 100
- Feature Information for Secure Software Download, on page 100

Hardware Compatibility Matrix for Cisco Remote PHY Device

Note Unless otherwise specified, the hardware components introduced in a given Cisco Remote PHY Device Software Release are supported in all subsequent releases.

Table 26: Hardware Compatibility Matrix for the Cisco Remote PHY Device

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Node	**Cisco 1x2 / Compact Shelf RPD Software 2.1 and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2= **Cisco 1x2 / Compact Shelf RPD Software 2.1a and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2-PKEY=

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Intelligent Node (iNode)	**and Later Releases** Cisco Intelligent Remote PHY Device 1x2 • PID—iRPD-1X2= • PID—iRPD-1X2-PKEY=

Note The -PKEY suffix in the PID indicates units that enable the SCTE-55-2 Out-of-Band protocol support.

Information About Secure Software Download

The secure software download (SSD) feature allows you to authenticate the source of a code file and verify the downloaded code file before using it in your system. The SSD is applicable to Remote PHY (R-PHY) devices installed in unsecure locations.

The Remote PHY architecture allows RPDs to download code. Hence, authenticating the source and checking the integrity of the downloaded code is important.

To authenticate and verify downloading of the code, SSD helps in verifying the manufacturer signature and the operator signature, if any. The manufacturer signature affirms the source and integrity of the code file to the RPD. If an additional signature is available from the operator, the RPD verifies both signatures with a certificate chain before accepting a code file.

Prerequisites for Upgrading Software using SSD

The following prerequisites are applicable to upgrading RPD software using SSD:

- The R-PHY node supports downloading software initiated through the GCP message sent from Cisco cBR.
- RPD supports a secure software download initiated using SSH and CLI directly on the RPD.
- R-PHY uses TFTP or HTTP to access the server to retrieve the software update file.

How to Upgrade Software from RPD and Cisco cBR Using SSD

Note To know more about the commands referenced in this module, see the Cisco IOS Master Command List.

Initiating RPD Software Upgrade from Cisco cBR

The RPD software upgrade can be initiated from Cisco cBR-8 Router. Use the following commands for initiating the upgrade:

```
cable rpd {all|oui|slot|RPD IP|RPD MAC} ssd server_IP {
            tftp|http} file_name [c-cvc-c|m-cvc-c]
                [CVC Chain File Name]
```

Initiating Software Upgrade from RPD Using SSD

If you want to initiate the software upgrade from RPD, set the SSD parameters on RPD. Use the following commands.

Setting the value for SSD CVC (Manufacturer's and Co-signer Code Validation Certificates) parameter is optional.

Configure the values for the following parameters

- SSD server IP address
- Filename
- Transport method

```
ssd set server server_IP filename file_name transport {tftp|http}
ssd set cvc {manufacturer|co-signer} cvc_chain_file_name
ssd control start
```

Verifying Software Upgrade Using SSD Configuration

To display the RPD SSD status, use the **cable rpd [all|oui|slot|RPD IP|RPD MAC] ssd status** command as given in the following example.

```
Router# cable rpd all ssd status
RPD-ID         ServerAddress Protocol Status            Filename
0004.9f00.0591 192.0.2.0     TFTP     ImageDownloading
image/RPD_seres_rpd_20170216_010001.itb.SSA
0004.9f00.0861 192.0.2.2     TFTP     CodeFileVerified
userid/RPD_seres_rpd_20170218_010001.itb.SSA
0004.9f03.0091 192.0.2.1    TFTP    ImageDownloadFail chuangli/openwrt-seres-rpd-rdb.itb.SSA
```

The available statuses are the following:

- CVCVerified
- CVCRejected
- CodeFileVerified
- CodeFileRejected
- ImageDownloading
- ImageDownloadSucceed
- ImageDownloadFail

- MissRootCA

Examples for Upgrading HA RPHY Software

See examples for the software upgrade from cBR-8 and FCC or master eRPD.

Example: HA RPHY Software Upgrade from Cisco cBR

```
Router# upgrade set server 203.0.113.1 filename bundle/test.itb.sign transport http
Router# upgrade control show config

file path: bundle/test.itb.sign
server: 203.0.113.1
transport: HTTP
Router# upgrade control start
Router# upgrade control show status.
Downloading image on FCC.


Router# cable rpd group all upgrade 203.0.113.2 http bundle/test.itb.sign
Router# cable rpd group all upgrade status
This group 0027.900a.4c1a is not HA-Shelf group.
GROUP-ID: 7abd.44a1.0000
ServerAddress: 203.0.113.2
Protocol: HTTP
Status: Image downloading on RPDLC
Filename: bundle/test.itb.sign
```

Example: HA RPHY Software Upgrade from FCC or Master eRPD

```
Router# upgrade set server 203.0.113.2 filename bundle/test.itb.sign transport http
Router# upgrade control start
Router# upgrade control show status
Downloading image on FCC.
Router# upgrade control abort
Abort software upgrade process successfully.
Router# upgrade control show status
Image download aborted.


Router# show cable rpd-upgrade group all status
GROUP-ID: 7abd.44a1.0000
ServerAddress: 203.0.113.2
Protocol: HTTP
Status: Idle
Filename: bundle/test.itb.sign
```

Feature Information for Secure Software Download

Use Cisco Feature Navigator to find information about the platform support and software image support. Cisco Feature Navigator enables you to determine which software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to the www.cisco.com/go/cfn link. An account on the Cisco.com page is not required.

Note The following table lists the software release in which a given feature is introduced. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Table 27: Feature Information for Secure Software Download

Feature Name	Releases	Feature Information
Upgrade Software Image	Cisco Smart PHY 7200	This feature was introduced on the Cisco Remote PHY Device.

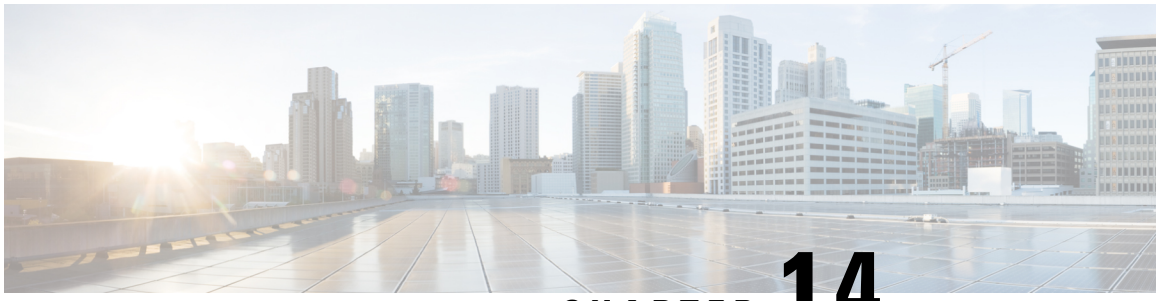

CHAPTER 14

Cisco Remote PHY Fault Management

This document describes how to configure the events for fault management on the Cisco cBR Series Converged Broadband Router.

- Information About Fault Management, on page 103
- How to Configure RPD Events, on page 104
- Configuration Examples , on page 106
- Feature Information for R-PHY Fault Management, on page 107

Information About Fault Management

Fault management on RPD is required for remote monitoring, detection, diagnosis, reporting, and correcting the issues.

The Fault management module provides the following support:

- RPD can send events to the CCAP core
- CCAP core can get events from RPD
- Send RPD events using SNMP traps
- On the CCAP core, view log in to the CLI
- SNMP poll events are supported

RPD Event Reporting

An RPD logs events, generates asynchronous notifications that indicate malfunction situations, and notifies the operator about important events. The RPD event reporting includes two methods of reporting.

- During the initialization of RPD, CCAP core synchronizes events from the RPD.
- During run-time operations, RPD notifies the CCAP Core of the events

Restrictions for Configuring RPD Events

Following restrictions are applicable:

A maximum of 1000 events are retained on Cisco cBR. The RPD retains 1000 events locally and 1000 events in pending state.

How to Configure RPD Events

Note To know more about the commands referenced in this module, see the Cisco IOS Master Command List.

Configuring RPD Events

You can configure an event profile and apply it to RPD. Use the following commands to configure RPD events:

```
configure terminal
cable profile rpd-55d1-us-event <profile_id>
  corrected-cells-threshold <threshold value>
  high-power-threshold <threshold value>
  low-power-threshold <threshold value>
  total-cells-threshold <threshold value>
  uncorrectable-cells-threshold <threshold value>
```

- corrected-cells-threshold -- <1-65535> US Excessive Corrected Cells Threshold
- high-power-threshold -- <-16 - 16> High power threshold in dBmV
- low-power-threshold -- <-16 - 16> Low power threshold in dBmV
- total-cells-threshold -- <1-65535> US Excessive Total Cells Threshold
- uncorrectable-cells-threshold -- <1-65535> US Excessive Uncorrectable Cells Threshold

You must enable-notifications for the RPD to report any event to the core.

Applying the Event Profile to RPD

Use the following commands to apply the Event Profile to an RPD:

```
enable
configure terminal
cable rpd rpd_name
rpd-55d1-us-event profile profile_id
```

Note If RPD is online when changing the profile, reset the RPD, after you change the profile.

Getting RPD Events

To retrieve events from RPD, use the **cable rpd [RPD IP|RPD MAC|all] event {locallog|pending}** command, as given in the following example:

```
Router#cable rpd 30.84.2.111 event pending
```

Clearing All Events on Cisco cBR Database

To remove all Events on Cisco cBR, use the clear cable rpd all event command, as given in the following example:

```
Router#clear cable rpd all event
```

Viewing the RPD Events

To view all RPD Events, use the **show cable rpd [RPD IP|RPD MAC] event** command as given in the following example.

```
Router# show cable rpd 93.3.50.7 event
RPD            EventId    Level Count  LastTime       Message
0004.9f00.0861 66070204   Error  1     Feb21 12:11:06 GCP Connection Failure
CCAP-IP=30.85.33.2;RPD-ID=0004.9f00.0861;
0004.9f00.0861 2148074241 Error  1     Feb21 12:11:25 Session failed:connecting timeout,
@SLAVE: 93.3.50.7:None --> 30.85.33.2:8190;RPD-ID=0004.9f00.0861;
```

To view specific RPD event groups, use the **show cable rpd event group [RPD IP|RPD MAC] [fcc|slot]** command as shown in this example.

```
Router# show cab rpd event group 7abd.44a1.0000 fcc
RPD            EventId         Level Count  LastTime       Message
7abd.44a1.0040 66070303 Criti  2            Oct16 20:50:35 FCC event
example;GROUP-ID=7abd.44a1.0000;
                                                        SLOT-ID=FCC;RPD-ID=7abd.44a1.0040;
```

```
Router# show cab rpd event group 7abd.44a1.0000 slot 9
RPD            EventId         Level Count  LastTime         Message
7abd.44a1.0140 66070700 Notic  1           Oct16 17:20:34   RPD=7a:bd:44:a1:01:40 PTP clock
 synchronized to Master=10.90.3.93;GROUP-ID=7abd.44a1.0000;

SLOT-ID=LC9;RPD-ID=7abd.44a1.0140;
```

Viewing RPD Events Using Log

To view all RPD Events, use the show logging command, as given in the following example.

```
Router# show logging | include RPD-ID=0004.9f00.0861
004181: Feb 21 12:18:59.649 CST: %RPHYMAN-3-RPD_EVENT_ERROR:  CLC5: rphyman:
GCP Connection Failure CCAP-IP=30.85.33.2;RPD-ID=0004.9f00.0861;EVENT-ID=66070204;
FirstTime=2017-2-21,12:11:6.0;
LastTime=2017-2-21,12:11:6.0;
Count=1;PendingQueue;
004185: Feb 21 12:19:18.875 CST: %RPHYMAN-3-RPD_EVENT_ERROR:  CLC5: rphyman:
```

```
Session failed:connecting timeout, @SLAVE: 93.3.50.7:None --> 10.10.10.12:1190;
RPD-ID=0004.9f00.0861;
EVENT-ID=2148074241;
FirstTime=2017-2-21,12:11:25.0;
LastTime=2017-2-21,12:11:25.0;
Count=1;PendingQueue;
```

Configuration Examples

This section provides example for the fault management configuration on Cisco cBR-8.

Example: RPD Event Configuration

```
enable
configure terminal
cable profile rpd-event 6
    priority emergency 0x3
    priority alert 0x3
    priority critical 0x3
    priority error 0x3
    priority warning 0x3
    priority notice 0x3
    priority informational 0x3
    enable-notify
cable rpd node6
    identifier badb.ad13.5e08
    core-interface Te3/1/5
        principal
        rpd-ds 0 downstream-cable 3/0/17 profile 10
        rpd-us 0 upstream-cable 3/0/34 profile 13
    r-dti 16
    rpd-event profile 6
```

Example: RPD Event Configuration

```
cable profile rpd-event 6
  priority warning 0x3
  enable-notify

cable profile rpd-55d1-us-event 10
  corrected-cells-threshold 11
  high-power-threshold 7
  low-power-threshold 2
  total-cells-threshold 20
  uncorrectable-cells-threshold 8

  cable rpd node 6
    identifier badb.ad13.5e08
    core-interface Te3/1/5
      principal
      rpd-ds 0 downstream-cable 3/0/17 profile 10
      rpd-us 0 upstream-cable 3/0/34 profile 13
    r-dti 16
    rpd-event profile 6
    rpd-55d1-us-event profile 10
```

Feature Information for R-PHY Fault Management

Use Cisco Feature Navigator to find information about the platform support and software image support. Cisco Feature Navigator enables you to determine which software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to the www.cisco.com/go/cfn link. An account on the Cisco.com page is not required.

Note The following table lists the software release in which a given feature is introduced. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Table 28: Feature Information for R-PHY Fault Management

Feature Name	Releases	Feature Information
R-PHY Fault Management	Cisco 1x2 RPD Software 1.1	This feature was introduced on the Cisco Remote PHY Device.

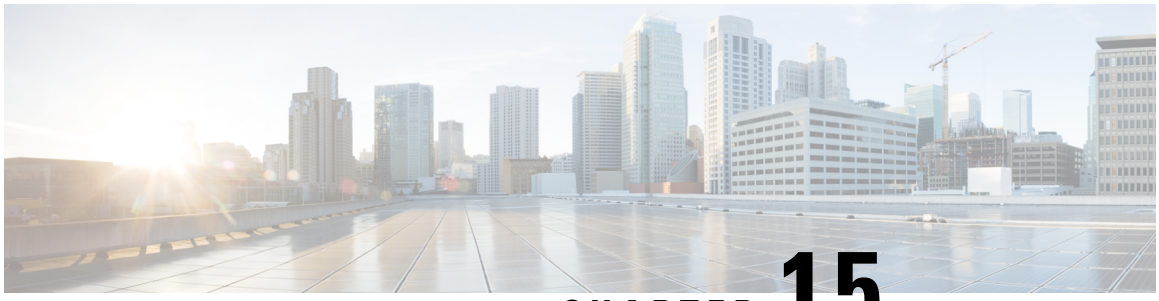

CHAPTER 15

Cisco Remote PHY Device Operations and Debugging

This document describes the RPD operations and debugging of an RPD.

- Hardware Compatibility Matrix for Cisco Remote PHY Device, on page 109
- Information about RPD Operations and Debugging, on page 110
- How to Access and Debug RPD, on page 110
- Configuration Examples, on page 112
- Feature Information for RPD Operations and Debugging, on page 113

Hardware Compatibility Matrix for Cisco Remote PHY Device

Note Unless otherwise specified, the hardware components introduced in a given Cisco Remote PHY Device Software Release are supported in all subsequent releases.

Table 29: Hardware Compatibility Matrix for the Cisco Remote PHY Device

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Node	**Cisco 1x2 / Compact Shelf RPD Software 2.1 and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2= **Cisco 1x2 / Compact Shelf RPD Software 2.1a and Later Releases** Cisco Remote PHY Device 1x2 • PID—RPD-1X2-PKEY=

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Super High Output Intelligent Node (iNode)	**and Later Releases** Cisco Intelligent Remote PHY Device 1x2 • PID—iRPD-1X2= • PID—iRPD-1X2-PKEY=

Note The -PKEY suffix in the PID indicates units that enable the SCTE-55-2 Out-of-Band protocol support.

Information about RPD Operations and Debugging

The operators might need secure remote access to the RPD for activities such as setting up the RPD before the installation, maintenance, or troubleshooting. The RPD supports Secure Shell (SSH) server that allows secure access to the RPD.

Prerequisites for RPD Operations

The following prerequisites are applicable for debugging or checking RPD operations:

- RPD has established GCP connection with the CCAP-core, and RPD IP address is retrievable from CCAP-core.
- RPD is assigned an IP address through the DHCP process, and the IP address is retrievable from the DHCP server.

How to Access and Debug RPD

Note To know more about the commands referenced in this module, see the Cisco IOS Master Command List.

Accessing RPD using SSH

After logging in to the RPD for the first time, the system shows a security warning.

```
SECURITY WARNING: ssh password login is accessible!
Please use pubkey login and set password login off!
```

The following procedure shows how to use SSH to access RPD without password from NMS.

1. Check whether NMS already has an SSH key. If yes, do not generate a new key.
2. Generate a new SSH key in NMS.

```
cat ~/.ssh/id_rsa.pub
ssh-keygen -t rsa
```

3. Add the NMS public key in RPD.

```
ssh pubkey add ?
LINE          NMS's pubkey
```

4. Verify whether NMS can connect using SSH to RPD without a password.

```
ssh -l admin <RPD ip>
```

Disabling SSH Login Password

Use the following commands to apply the Event Profile to an RPD:

```
R-PHY#conf t
R-PHY(config)#ssh password ?
off                  disable ssh password login
on                   enable ssh password login
R-PHY(config)#ssh password off
R-PHY(config)#end
```

Debugging RPD

Use the following procedure to debug RPD:

1. Disable RPD auto reboot by setting the reboot hold.

```
R-PHY# set reboot hold
```

2. Secure copy the logs of RPD to the server using the following command.

```
logging provision-archive scp server_ip user_id dst_location
```

3. Collect the show CLI output.

   For RPD online issues, check which status is failed. You can check the following outputs:

   - show provision all
   - show provision history
   - show dot1x detail
   - show dhcp
   - show tod
   - show ptp clock 0 config
   - show ptp clock 0 state

   For modem online issue, check ds/us config and l2tp session.

   You can collect the following outputs:

   - show downstream channel configuration
   - show downstream channel counter dps (show multiple times)

- show downstream depi configuration
- show upstream channel configuration <port number> <channel number>
- show upstream iuc counter <port number> <channel number> (show multiple times)
- show upstream map counter <port number> <channel number> (show multiple times)
- show upstream uepi configuration
- show l2tp tunnel
- show l2tp session

4. Enable RPD auto reboot, after collecting all logs and CLI output.

```
R-PHY#clear reboot hold
```

Verifying Disabled SSH Password Login

To check whether the SSH logging in using a password is disabled, use the show ssh session command as given in the following example.

```
R-PHY#show ssh session
connected session: 1
ssh password auth: off
ssh NMS pubkey num: 1
R-PHY#
```

Configuration Examples

This section provides example for the fault management configuration on R-PHY.

Example: Generating a New NMS pubkey

```
$ cat ~/.ssh/id_rsa.pub

$ ssh-keygen -t rsa

$ cat ~/.ssh/id_rsa.pub
ssh-rsa AAAAB3NzaC1yc2EAAAABIwAAAgEAtQCXVFmRIwemejbTx0+U8taMq5n4Zetu
71xb+dtHV8Rr0wejiK1YJkT93n9hcBxsjHRu76bLp99l+DDNL3+THljwnMQC1CsdvRmGXoe
Gf1mT9aTlGDf/ RW9ZywY9t8Kep9VnANu2DWSoh0wg2pE49HFOJAbGfuFOvPEdwZGGDMQNWs
Eq/3xAQjBxajQqfgu4IqjVzKoo4PM/xx9X4Z1aMwxS3DvyN7L8O0o33mcDNsasl3SslIjMSNfq
YpwOFvQve8c2onrYHUx2p3BwQOb/b0FzFQhZMTBXm/pDMXq/fkkD0uguk1xOGnqAATMJsSHIN
0UOdvbzhhmrFRBBM4NzqQG5kNt7KvnWgxE7HdalERvMyBC2MCGbFSHmQFyWmHBHPPmLIxK98W
XutoR8fzzs+4hingZ4X9DMMNwTQ6WOzjuKq6iU= userid@example.cisco.com
```

Example: Adding NMS pubkey in RPD

```
R-PHY#conf t
R-PHY(config)#ssh pubkey add ?
LINE                 NMS's pubkey
R-PHY(config)#ssh pubkey add ssh-rsa AAAAB3NzaC1yc26876bhjdsk
EEEAAAABIwAAAgErP3nFp0v0k3Nf4UvSTuOOQi2h0mAfAtQCXVFmRIwemejbTx0+U8taM
```

```
q5n4Zetu71xb+dtHV8Rr0wejiK1YJkT93n9hcBxsjHRu76bLp99l+DDNL3+THljwnMQC1
CsdvRmGXoeGf1mT9aTlGDf/YfKxZMozMnR9qlGJFXlRAwGMsCRlllnV6IkFyh59P9Udkd
SSWv+QL8lCftWBmMnyt/CkqL98NK0Vp0gIYRv7UKCwhK40c8X7PhzxCmKVFTUv3bf9VIP
NA2esgzKDFpoJZkqCjrnXU1Xu0Oj8Twci7f0ytSrFxVKuWp4XZbVDpWGH90BOQR8gKHmq
urP3nFp0v0k3Nf4UvSTuOOQi2h0mAf+9wzm+ab41ToadUbMawHyFYyuU= xxx@xxx.xxx.com
R-PHY(config)#end

R-PHY#show ssh nms-pubkey ssh-rsa AAAAB3NzaC1yc2EAAAABIwAAAgEAtQCXVFm
RIwemejbTx0+U8taMq5n4Zetu71xb+dtHV8Rr0wejiK1YJkT93n9hcBxsjHRu76bLp99l
+DDNL3+THljwnMQC1CsdvRmGXoeGf1mT9aTlGDf/YfKxZMozMnR9qlGJFXlRAwGMsCRll
lnV6IkFyh59P9UdkdSSWv+QL8lCftWBmMnyt/CkqL98NK0Vp0gIYRv7UKCwhK40c8X7Ph
zxCmKVFTUv3bf9VIPNA2esgzKDFpRvMyBC2MCGbFSHmQFyWmHBHPPmLIxK98WXutoR8fzz
s+4hingZ4X9DMMNwTQ6WOzjuKq6iU= xxx@xxx.xxx.com
```

Feature Information for RPD Operations and Debugging

Use Cisco Feature Navigator to find information about the platform support and software image support. Cisco Feature Navigator enables you to determine which software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to the www.cisco.com/go/cfn link. An account on the Cisco.com page is not required.

Note The following table lists the software release in which a given feature is introduced. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Table 30: Feature Information for RPD Operations and Debugging

Feature Name	Releases	Feature Information
RPD Operations and Debugging	Cisco 1x2 RPD Software 1.1	This feature was introduced on the Cisco Remote PHY Device.