Cisco Nexus 1000V System Management Configuration Guide, Release 4.2(1)SV2(2.1)

First Published: June 21, 2013

Last Modified: July 14, 2014

Americas Headquarters
Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
http://www.cisco.com
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

Text Part Number: OL-28792-01

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: http://www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

© 2009-2013 Cisco Systems, Inc. All rights reserved.

CONTENTS

Preface

Preface xv

Audience xv

Document Conventions xv

Related Documentation for Nexus 1000V Series NX-OS Software for VMware vSphere xvii

Documentation Feedback xviii

Obtaining Documentation and Submitting a Service Request xviii

CHAPTER 1

New and Changed Information 1

New and Changed Information 1

CHAPTER 2

Overview 3

System Management Overview 3

CDP 3

Domains 4

Server Connections 4

Configuration Management 4

File Management 4

User Management 4

NTP 4

Local SPAN and ERSPAN 4

SNMP 5

NetFlow 5

System Messages 5

iSCSI Multipath 5

Troubleshooting 5

CHAPTER 3

Configuring CDP 7

Information About CDP 7
High Availability 8
Guidelines and Limitations 8
Default Settings 8
Configuring CDP 9
CDP Global Configuration 9
Enabling or Disabling CDP Globally 9
Advertising a CDP Version 9
Configuring CDP Options 10
CDP Interface Configuration 12
Enabling CDP on an Interface 12
Disabling CDP on an Interface 13
Monitoring CDP Statistics 14
Clearing CDP Statistics 14
Verifying the CDP Configuration 14
Configuration Example for CDP 15
Feature History for CDP 15

CHAPTER 4 **Configuring the Domain 17**
Information About Domains 17
Layer 3 Control 17
Guidelines and Limitations 18
Default Settings 19
Configuring the Domain 19
Creating a Domain 19
Changing to Layer 3 Transport 21
Changing to Layer 2 Transport 23
Creating a Port Profile for Layer 3 Control 24
Creating a Control VLAN 26
Creating a Packet VLAN 27
Feature History for the VSM Domain 28

CHAPTER 5 **Managing Server Connections 31**
Information About Server Connections 31
Guidelines and Limitations 32

Connecting to the vCenter Server 32
Validating vCenter Server Certificates 34
Installing Certificates 34
Verifying vCenter Server Certificates 34
Disconnecting From the vCenter Server 35
Removing the DVS from the vCenter Server 35
Removing the DVS from the vCenter Server When the VSM Is Not Connected 36
Configuring the Admin User or Admin Group 36
Removing the DVS from the vCenter Server Using the Graphical User Interface 37
Configuring Host Mapping 38
Information about Host Server Connections 38
Removing Host Mapping from a Module 38
Mapping to a New Host 39
Viewing Host Mapping 39
Verifying Connections 40
Verifying the Domain 40
Verifying the Configuration 41
Verifying Module Information 42
Feature History for Server Connections 43

CHAPTER 6 **Managing the Configuration** 45
Information About Configuration Management 45
Changing the Switch Name 45
Configuring a Message of the Day 46
Verifying the Configuration 47
Verifying the Software and Hardware Versions 47
Verifying the Running Configuration 48
Comparing the Startup and Running Configurations 49
Verifying the Interface Configuration 50
Verifying the Interface Configuration in a Brief Version 51
Verifying an Interface Configuration in a Detailed Version 51
Verifying All Interfaces in a Brief Version 52
Verifying the Running Configuration for all Interfaces 52
Saving a Configuration 53
Erasing a Configuration 53

Feature History for Configuration Management 54

CHAPTER 7 Working with Files 55

Information About Files 55

Navigating the File System 56

Specifying File Systems 56

Identifying the Directory You are Working From 56

Changing Your Directory 57

Listing the Files in a File System 58

Identifying Available File Systems for Copying Files 58

Using Tab Completion 59

Copying and Backing Up Files 59

Creating a Directory 61

Removing an Existing Directory 61

Moving Files 62

Deleting Files or Directories 63

Compressing Files 63

Uncompressing Files 64

Directing Command Output to a File 65

Verifying a Configuration File before Loading 66

Rolling Back to a Previous Configuration 66

Displaying Files 67

Displaying File Contents 67

Displaying Directory Contents 67

Displaying File Checksums 68

Displaying the Last Lines in a File 68

Feature History for File Management 69

CHAPTER 8 Managing Users 71

Information About User Management 71

Displaying Current User Access 71

Sending a Message to Users 72

Feature History for User Management 72

CHAPTER 9 Configuring NTP 73

Information about NTP 73
NTP Peers 74
High Availability 74
Prerequisites for NTP 75
Guidelines and Limitations for NTP 75
Default Settings for NTP 75
Configuring an NTP Server and Peer 75
Clearing NTP Sessions 76
Clearing NTP Statistics 76
Verifying the NTP Configuration 76
NTP Example Configuration 77
Feature History for NTP 77

CHAPTER 10 **Configuring Local SPAN and ERSPAN 79**
Information About SPAN and ERSPAN 79
SPAN Sources 79
Characteristics of SPAN Sources 80
SPAN Destinations 80
Characteristics of Local SPAN Destinations 80
Characteristics of ERSPAN Destinations 81
Local SPAN 81
Encapsulated Remote SPAN 81
Network Analysis Module 82
SPAN Sessions 82
Guidelines and Limitations for SPAN 83
Default Settings for SPAN 84
Configuring SPAN 84
Configuring a Local SPAN Session 85
Configuring an ERSPAN Port Profile 87
Configuring an ERSPAN Session 90
Shutting Down a SPAN Session from Global Configuration Mode 93
Shutting Down a SPAN Session from Monitor Configuration Mode 94
Resuming a SPAN Session from Global Configuration Mode 95
Resuming a SPAN Session from Monitor Configuration Mode 96
Configuring the Allowable ERSPAN Flow IDs 97

Verifying the SPAN Configuration 98
Configuration Example for an ERSPAN Session 98
Example of Configuring a SPAN Session 99
Example of a Configuration to Enable SPAN Monitoring 99
Feature History for SPAN and ERSPAN 100

CHAPTER 11 Configuring SNMP 101
Information About SNMP 101
SNMP Functional Overview 101
SNMP Notifications 102
SNMPv3 102
Security Models and Levels for SNMPv1, v2, v3 102
User-Based Security Model 103
CLI and SNMP User Synchronization 104
Group-Based SNMP Access 104
High Availability 105
Guidelines and Limitations for SNMP 105
Default Settings for SNMP 105
Configuring SNMP 105
Configuring SNMP Users 106
Enforcing SNMP Message Encryption for All Users 107
Creating SNMP Communities 107
Filtering SNMP Requests 108
Configuring SNMP Notification Receivers 109
Configuring a Host Receiver for SNMPv1 Traps 109
Configuring a Host Receiver for SNMPv2c Traps or Informs 110
Configuring a Host Receiver for SNMPv3 Traps or Informs 110
Configuring the Notification Target User 111
Enabling SNMP Notifications 112
Disabling LinkUp/LinkDown Notifications on an Interface 113
Enabling a One-time Authentication for SNMP over TCP 114
Assigning the SNMP Switch Contact and Location Information 114
Disabling SNMP 115
Modifying the AAA Synchronization Time 115
Verifying the SNMP Configuration 116

Configuration Example for SNMP 116
MIBs 117
Feature History for SNMP 118

CHAPTER 12 Configuring NetFlow 119
Information About NetFlow 119
What is a Flow 119
Flow Record Definition 120
Predefined Flow Records 121
Accessing NetFlow Data 123
Command-line Interface for NetFlow 123
Flow Monitor 123
Flow Exporter 123
NetFlow Collector 124
Exporting Flows to the NetFlow Collector Server 124
What NetFlow Data Looks Like 126
Network Analysis Module 126
High Availability for NetFlow 126
Prerequisites for NetFlow 126
Guidelines and Limitations for NetFlow 127
Default Settings for NetFlow 127
Enabling the NetFlow Feature 128
Configuring Netflow 129
Defining a Flow Record 129
Defining a Flow Exporter 130
Defining a Flow Monitor 132
Assigning a Flow Monitor to an Interface 134
Adding a Flow Monitor to a Port Profile 135
Verifying the NetFlow Configuration 136
Netflow Example Configuration 139
Related Documents for NetFlow 140
Feature History for NetFlow 140

CHAPTER 13 Configuring System Message Logging 141
Information About System Message Logging 141

System Message Logging Facilities 142
Guidelines and Limitations for System Message Logging 146
Default System Message Logging Settings 146
Configuring System Message Logging 147
Configuring System Message Logging to Terminal Sessions 147
Restoring System Message Logging Defaults for Terminal Sessions 148
Configuring System Message Logging for Modules 148
Restoring System Message Logging Defaults for Modules 149
Configuring System Message Logging for Facilities 149
Restoring System Message Logging Defaults for Facilities 150
Configuring syslog Servers 151
Restoring System Message Logging Defaults for Servers 151
Using a UNIX or Linux System to Configure Logging 151
Displaying Log Files 152
Verifying the System Message Logging Configuration 153
System MEssage Logging Example Configuration 156
Feature History for System Message Logging 156

CHAPTER 14 Configuring iSCSI Multipath 157
Information About iSCSI Multipath 157
Overview 158
Supported iSCSI Adapters 158
iSCSI Multipath Setup on the VMware Switch 159
Guidelines and Limitations 160
Pre-requisites 161
Default Settings 161
Configuring iSCSI Multipath 162
Uplink Pinning and Storage Binding 162
Process for Uplink Pinning and Storage Binding 162
Creating a Port Profile for a VMkernel NIC 162
Creating VMkernel NICs and Attaching the Port Profile 164
Manually Pinning the NICs 165
Identifying the iSCSI Adapters for the Physical NICs 167
Identifying iSCSI Adapters on the vSphere Client 167
Identifying iSCSI Adapters on the Host Server 168

Binding the VMkernel NICs to the iSCSI Adapter 168
Converting to a Hardware iSCSI Configuration 169
Converting to a Hardware iSCSI Configuration 170
Removing the Binding to the Software iSCSI Adapter 171
Adding the Hardware NICs to the DVS 171
Changing the VMkernel NIC Access VLAN 172
Process for Changing the Access VLAN 172
Changing the Access VLAN 173
Verifying the iSCSI Multipath Configuration 175
Managing Storage Loss Detection 176
Related Documents 178
Feature History for iSCSI Multipath 178

CHAPTER 15 **Configuring VSM Backup and Recovery 179**
Information About VSM Backup and Recovery 179
Guidelines and Limitations 179
Configuring VSM Backup and Recovery 180
Backing Up the VSM 180
Backing Up the VSM on ESX Server 180
Performing a Backup of the VSM VM 180
Performing a Periodic Backup 186
Exporting a Backup VSB Configuration on Cisco Nexus Cloud Services Platform Server 186
Exporting a VSB 186
Copying the Exported VSB to an External Storage Location 189
Recovering the VSM 190
Recovering the VSM on ESX Server 190
Deploying the Backup VSM VM 191
Erasing the Old Configuration 198
Restoring the Backup Configuration on the VSM 199
Recovering a VSM with a Backup Configuration File on Cisco Nexus Cloud Services Platform Server 205
Importing a VSB 206
Recovering a VSM with a Backup Configuration File 208
Verifying the Export and Import of a VSB 212

Feature History for VSM Backup and Recovery 213

CHAPTER 16 Enabling vTracker 215

Information About vTracker 216

Guidelines and Limitations 217

Default Settings for vTracker Parameters 217

Enabling vTracker Globally 217

Upstream View 219

Upstream View Overview 219

Displaying Upstream View 220

Upstream View Field Description 220

Virtual Machine (VM) View 221

Virtual Machine (VM) View Overview 221

Displaying the VM vNIC View 222

VM vNIC View Field Description 223

Displaying the VM Info View 224

VM Info View Field Description 225

Module pNIC View 227

Module pNIC View Overview 227

Displaying the Module pNIC View 227

Module pNIC View Field Description 228

VLAN View 228

VLAN View Overview 228

Displaying the VLAN View 229

VLAN View Field Description 229

VMotion View 230

VMotion View Overview 230

Displaying the VMotion View 230

VMotion View Field Description 231

Feature History for vTracker 232

CHAPTER 17 Configuring Virtualized Workload Mobility 233

Information About Virtualized Workload Mobility (DC to DC vMotion) 233

Stretched Cluster 233

Split Cluster 234

Prerequisites for Virtualized Workload Mobility (DC to DC vMotion) 234
Guidelines and Limitations 234
Physical Site Considerations 234
Handling Inter-Site Link Failures 235
Headless Mode of Operation 235
Handling Additional Distance/Latency Between the VSM and VEM 235
Migrating a VSM 236
Migrating a VSM Hosted on an ESX 236
Verifying and Monitoring the Virtualized Workload Mobility (DC to DC vMotion) Configuration 237
Feature History for Virtualized Workload Mobility (DC to DC vMotion) 237

Preface

The Preface contains the following sections:

- Audience, page xv
- Document Conventions, page xv
- Related Documentation for Nexus 1000V Series NX-OS Software for VMware vSphere, page xvii
- Documentation Feedback, page xviii
- Obtaining Documentation and Submitting a Service Request, page xviii

Audience

This publication is for experienced network administrators who configure and maintain Cisco Nexus devices.

This guide is for network and server administrators with the following experience and knowledge:

Note Knowledge of VMware vNetwork Distributed Switch is not required.

- An understanding of virtualization
- An understanding of the corresponding hypervisor management software for your switch, such as VMware vSwitch, Microsoft System Center Virtual Machine Manager (SCVMM), or OpenStack.

Document Conventions

Command descriptions use the following conventions:

Convention	Description
bold	Bold text indicates the commands and keywords that you enter literally as shown.
Italic	Italic text indicates arguments for which the user supplies the values.

Convention	Description
[x]	Square brackets enclose an optional element (keyword or argument).
[x | y]	Square brackets enclosing keywords or arguments separated by a vertical bar indicate an optional choice.
{x | y}	Braces enclosing keywords or arguments separated by a vertical bar indicate a required choice.
[x {y | z}]	Nested set of square brackets or braces indicate optional or required choices within optional or required elements. Braces and a vertical bar within square brackets indicate a required choice within an optional element.
`variable`	Indicates a variable for which you supply values, in context where italics cannot be used.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.

Examples use the following conventions:

Convention	Description
`screen font`	Terminal sessions and information the switch displays are in screen font.
`boldface screen font`	Information you must enter is in boldface screen font.
italic screen font	Arguments for which you supply values are in italic screen font.
< >	Nonprinting characters, such as passwords, are in angle brackets.
[ ]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

This document uses the following conventions:

Note Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the manual.

Caution Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

Related Documentation for Nexus 1000V Series NX-OS Software for VMware vSphere

This section lists the documents used with the Cisco Nexus 1000V and available on Cisco.com at the following URL:

http://www.cisco.com/en/US/products/ps9902/tsd_products_support_series_home.html

General Information

Cisco Nexus 1000V Documentation Roadmap

Cisco Nexus 1000V Release Notes

Cisco Nexus 1000V and VMware Compatibility Information

Install and Upgrade

Cisco Nexus 1000V Installation and Upgrade Guide

Configuration Guides

Cisco Nexus 1000V High Availability and Redundancy Configuration Guide

Cisco Nexus 1000V Interface Configuration Guide

Cisco Nexus 1000V Layer 2 Switching Configuration Guide

Cisco Nexus 1000V License Configuration Guide

Cisco Nexus 1000V Network Segmentation Manager Configuration Guide

Cisco Nexus 1000V Port Profile Configuration Guide

Cisco Nexus 1000V Quality of Service Configuration Guide

Cisco Nexus 1000V REST API Plug-In Configuration Guide

Cisco Nexus 1000V Security Configuration Guide

Cisco Nexus 1000V System Management Configuration Guide

Cisco Nexus 1000V VXLAN Configuration Guide

Cisco Nexus 1000V VXLAN Gateway Configuration Guide

Cisco Nexus 1000V VDP Configuration Guide

Cisco Nexus 1000V DFA Configuration Guide

Reference Guides

Cisco Nexus 1000V Command Reference

Cisco Nexus 1000V Resource Availability Reference

Troubleshooting and Alerts

Cisco Nexus 1000V Troubleshooting Guide

Cisco NX-OS System Messages Reference

Cloud Services Platform Documentation

The *Cisco Cloud Services Platform* documentation is available at http://www.cisco.com/en/US/products/ps12752/tsd_products_support_series_home.html.

Virtual Security Gateway Documentation

The *Cisco Virtual Security Gateway for Nexus 1000V Series Switch* documentation is available at http://www.cisco.com/en/US/products/ps13095/tsd_products_support_series_home.html.

ASA 1000V Cloud Firewall Documentation

The *ASA 1000V Cloud Firewall* documentation is available at http://www.cisco.com/en/US/products/ps12233/tsd_products_support_series_home.html.

Documentation Feedback

To provide technical feedback on this document, or to report an error or omission, please send your comments to: ciscodfa-docfeedback@cisco.com.

We appreciate your feedback.

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, using the Cisco Bug Search Tool (BST), submitting a service request, and gathering additional information, see *What's New in Cisco Product Documentation*, at: http://www.cisco.com/c/en/us/td/docs/general/whatsnew/whatsnew.html.

Subscribe to *What's New in Cisco Product Documentation*, which lists all new and revised Cisco technical documentation as an RSS feed and delivers content directly to your desktop using a reader application. The RSS feeds are a free service.

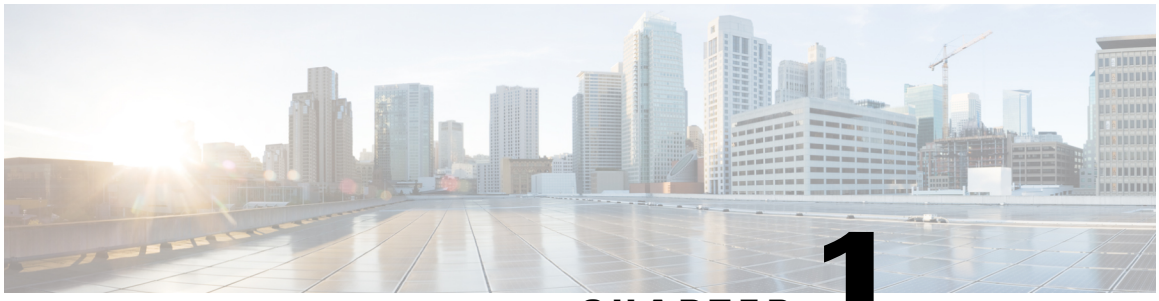

CHAPTER 1

New and Changed Information

This chapter contains the following sections:

- New and Changed Information, page 1

New and Changed Information

Table 1: New and Changed Features

Content	Description	Changed in Release	Where Documented
vCenter Server Certificates Validation	This feature is introduced. It allows you to validate the certificates received from the vCenter Server.	4.2(1)SV2(2.1a)	Validating vCenter Server Certificates, on page 34
vTracker	This feature is introduced.	4.2(1)SV2(1.1)	Enabling vTracker, on page 215
Virtualized Workload Mobility (DC to DC vMotion)	Addresses the Cisco Nexus 1000V across two physical data centers.	4.2(1)SV1(4a)	Configuring Virtualized Workload Mobility, on page 233
DVS Deletion	Allows for the deletion of the DVS from the vCenter Server when there is no connectivity to the VSMs.	4.2(1)SV1(4a)	Managing Server Connections, on page 31
VSM Backup	Allows for the restoration of VSMs when both VSMs have been deleted in an HA environment.	4.2(1)SV1(4a)	Configuring VSM Backup and Recovery, on page 179
Enable NetFlow feature	You can enable/disable the NetFlow feature.	4.2(1)SV1(4)	Configuring NetFlow, on page 119
Add port profile as Local SPAN source	Allows you to use a port profile as a source for Local SPAN monitor traffic.	4.2(1)SV1(4)	Configuring Local SPAN and ERSPAN, on page 79

Content	Description	Changed in Release	Where Documented
Add port profile as ERSPAN source	Allows you to use a port profile as a source for ERSPAN monitor traffic.	4.2(1)SV1(4)	Configuring Local SPAN and ERSPAN, on page 79
Hardware iSCSI Multipath	Allows you to use a hardware iSCSI adapter for multipathing.	4.2(1)SV1(4)	Configuring iSCSI Multipath, on page 157
SNMP MIBs added	Added list of supported MIBs.	4.2(1)SV1(4)	Configuring SNMP, on page 101
Network Analysis Module (NAM)	NAM support for NetFlow data sources	4.2(1)SV1(4)	Configuring NetFlow, on page 119
	NAM support for ERSPAN data sources	4.0(4)SV1(3)	Configuring Local SPAN and ERSPAN, on page 79
ERSPAN Type-III header	Provides the ERSPAN Type-III extended format header frame that enhances support for network management, intrusion detection, and lawful intercept	4.0(4)SV1(3)	Configuring Local SPAN and ERSPAN, on page 79
Layer 3 Control	Allows a VSM to be Layer 3 accessible and control hosts that reside in a separate Layer 2 network.	4.0(4)SV1(2)	Configuring the Domain, on page 17
iSCSI Multipath	Allows multiple routes between a server and its storage devices.	4.0(4)SV1(2)	Configuring iSCSI Multipath, on page 157

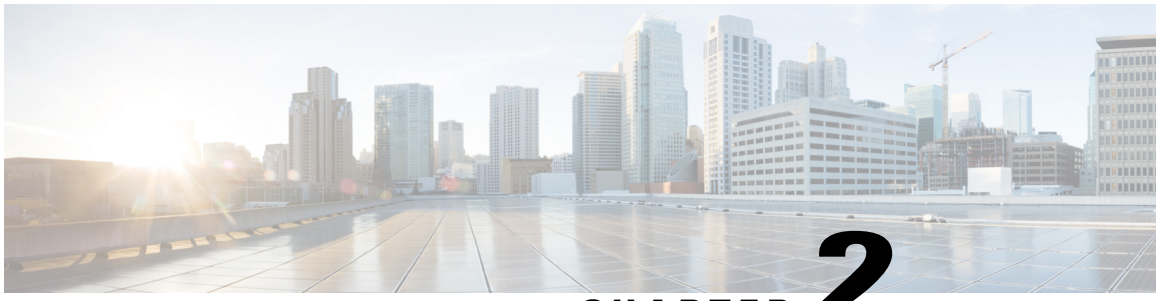

CHAPTER 2

Overview

This chapter contains the following sections:

- System Management Overview , page 3

System Management Overview

This chapter describes the following system management features:

- CDP
- Domains
- Server Connections
- Configuration Management
- File Management
- User Management
- NTP
- Local SPAN and ERSPAN
- SNMP System Messages
- NetFlow
- System Messages
- iSCSI Multipath
- Troubleshooting

CDP

The Cisco Discovery Protocol (CDP) runs over the data link layer and is used to advertise information to all attached Cisco devices and to discover and view information about attached Cisco devices. CDP runs on all Cisco-manufactured equipment.

Domains

You must create a domain ID for Cisco Nexus 1000V. This process is part of the initial setup of the Cisco Nexus 1000V when you are installing the software. If you need to create a domain ID later, use the **saves-domain** command.

You can establish Layer 3 Control in your VSM domain, which means that your VSM is Layer 3 accessible and able to control hosts that reside in a separate Layer 2 network.

Server Connections

In order to connect to vCenter Server or an ESX server, you must first define the connection in the Cisco Nexus 1000V. Managing Server Connections describes how to connect and disconnect with vCenter Server and viewing connections.

Configuration Management

The Cisco Nexus 1000V enables you to change the switch name, configure messages of the day, and display, save, and erase configuration files.

File Management

Using a single interface, you can manage the file system including:

- Flash memory file systems
- Network file systems (TFTP and FTP)
- Any other endpoint for reading or writing data (such as the running configuration)

User Management

You can identify the users who are currently connected to the device and send a message to either a single user or all users.

NTP

The Network Time Protocol (NTP) synchronizes timekeeping among a set of distributed time servers and clients. This synchronization allows you to correlate events when you receive system logs and other time-specific events from multiple network devices.

Local SPAN and ERSPAN

The Ethernet switched port analyzer (SPAN) enables you to monitor traffic in and out of your device and duplicate packets from source ports to destination ports. For information about configuring SPAN, see

Configuring a Local SPAN Session. You can also use the Cisco Network Analysis Module (NAM) to monitor ERSPAN data sources for application performance, traffic analysis, and packet header analysis. To use NAM to monitoring the Cisco Nexus 1000V ERSPAN data sources, see the *Cisco Nexus 1010 Network Analysis Module Installation and Configuration Note*.

SNMP

The Simple Network Management Protocol (SNMP) is an application-layer protocol that provides a message format for communication between SNMP managers and agents. SNMP provides a standardized framework and a common language that you can use to use to monitor and manage devices in a network.

NetFlow

NetFlow gives visibility into traffic that transits the virtual switch by characterizing IP traffic based on its source, destination, timing, and application information. You can use this information to assess network availability and performance, assist in meeting regulatory requirements (compliance), and help with troubleshooting.

You can also use the Cisco Network Analysis Module (NAM) to monitor NetFlow data sources.

System Messages

You can use system message logging to control the destination and to filter the severity level of messages that system processes generate. You can configure logging to a terminal session, a log file, and syslog servers on remote systems. System message logging is based on RFC 3164.

For more information about the system message format and the messages that the device generates, see the *Cisco Nexus 1000V Series NX-OS System Messages Reference*.

iSCSI Multipath

The iSCSI multipath feature sets up multiple routes between a server and its storage devices for maintaining a constant connection and balancing the traffic load.

Troubleshooting

Ping and trace route are among the available troubleshooting tools. For more information, see the *Cisco Nexus 1000V Troubleshooting Guide*.

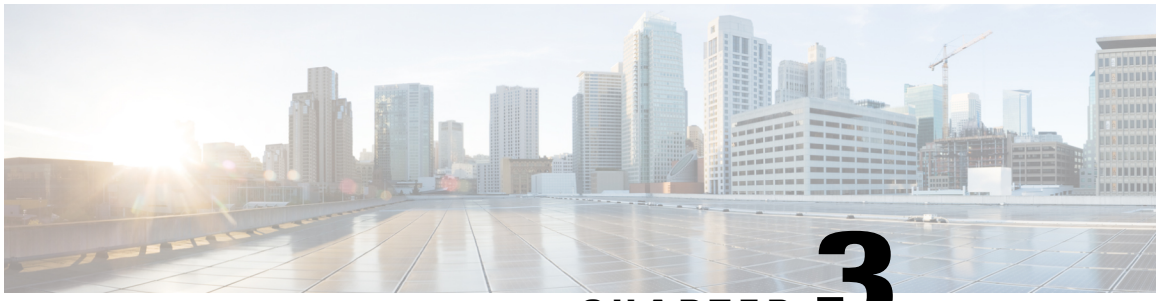

CHAPTER 3

Configuring CDP

This chapter contains the following sections:

- Information About CDP, page 7
- Guidelines and Limitations, page 8
- Default Settings, page 8
- Configuring CDP, page 9

Information About CDP

The Cisco Discovery Protocol (CDP), which runs over the data link layer, is used to advertise information to all attached Cisco devices and to discover and view information about attached Cisco devices. CDP runs on all Cisco-manufactured equipment.

Each device that you configure for CDP sends periodic advertisements to a multicast address. Each device advertises at least one address at which it can receive SNMP messages. The advertisements also contain hold time information, which indicates the length of time that a receiving device should hold CDP information before discarding it. You can configure the advertisement or refresh timer and the hold timer.

CDP Version 2 (CDPv2) allows you to track instances where the native VLAN ID or port duplex states do not match between connecting devices.

CDP advertises the following type-length-value fields (TLVs):

- Device ID
- Address
- Port ID
- Capabilities
- Version
- Platform
- Native VLAN
- Full/half duplex

- Maximum Transmission Unit (MTU)
- Sysname
- SysObjectID
- Management address
- Physical location

All CDP packets include a VLAN ID. The CDP packet is untagged, so it goes over the native/access VLAN, which is then also added to the packet.

High Availability

Stateless restarts are supported for CDP. After a reboot or a supervisor switchover, the running configuration is applied.

Guidelines and Limitations

- CDP gathers protocol addresses of neighboring devices and discovers the platform of those devices. CDP runs over the data link layer only. With CDP, two systems that support different Layer 3 protocols can learn about each other.
- CDP can discover up to 256 neighbors per port if the port is connected to a hub with 256 connections.
- CDP must be enabled globally before you can configure CDP on an interface. CDP is enabled globally by default.
- You can configure CDP on physical interfaces and port channels only.

Default Settings

Parameters	Default
CDP	Enabled globally and on all interfaces
CDP version	Version 2
CDP device ID	System name
CDP timer	60 seconds
CDP hold timer	180 seconds

Configuring CDP

This section includes the following topics:

- CDP Global Configuration
- Enabling CDP on an Interface
- Disabling CDP on an Interface

CDP Global Configuration

This section includes the following topics:

- Enabling or Disabling CDP Globally
- Advertising a CDP Version
- Configuring CDP Options

Enabling or Disabling CDP Globally

Be sure you understand that when you globally disable the CDP feature, all CDP configurations are removed.

Before You Begin

Before beginning this procedure, you must be logged in to the CLI in EXEC mode.

Procedure

	Command or Action	Purpose
Step 1	switch# **config t**	Places you in global configuration mode.
Step 2	switch(config)# [**no**] **cdp enable**	Enables or disables the CDP feature globally.

```
switch# config t
switch(config)# no cdp enable
```

Advertising a CDP Version

Before beginning this procedure, be sure you have know the following information:

- The version of CDP currently supported on the device.
- Only one version of CDP (version 1 or version 2) is advertised at a time for all uplinks and port channels on the switch.

Before You Begin

Before beginning this procedure, you must be logged in to the CLI in EXEC mode.

Procedure

	Command or Action	Purpose
Step 1	switch# **config t**	Places you in global configuration mode.
Step 2	switch(config)# **cdp advertise** {**v1** | **v2**}	Assigns the CDP version to advertise: • CDP Version 1 • CDP Version 2
Step 3	switch(config)# **show cdp global**	(Optional) Displays the CDP version that is being advertised or sent to other devices.
Step 4	switch(config)# **copy running-config startup-config**	(Optional) Copies the running configuration to the startup configuration.

```
switch# config t
switch(config)# cdp advertise v1
switch(config)# show cdp global
Global CDP information:
    CDP enabled globally
    Sending CDP packets every 60 seconds
    Sending a holdtime value of 180 seconds
    Sending CDPv2 advertisements is disabled
    Sending DeviceID TLV in Default Format
switch(config)# copy running-config startup-config
```

Configuring CDP Options

You can configure the following for CDP:

- The device ID format to use

Note Only the system-name device ID format is supported

- The maximum hold time for neighbor information
- The refresh time for sending advertisements

Note You can view output from the upstream Catalyst 6500 Series switch by using the **show cdp neighbor command**.

Before You Begin

Before beginning this procedure, be sure you know the following information:

- How long you want CDP to retain neighbor information if you are setting the holdtime.
- How often you want CDP to advertise if you are setting the CDP timer.

Procedure

	Command or Action	Purpose
Step 1	switch# **config t**	Places you in global configuration mode.
Step 2	switch(config)# **cdp format device-id system-name**	(Optional) Specifies that CDP uses the system name for the device ID format.
Step 3	switch(config)# **show cdp neighbors**	Displays your device from the upstream device.
Step 4	switch(config)# **show cdp neighbors**	Displays the upstream device from your device.
Step 5	switch(config)# **cdp holdtime** *seconds*	(Optional) Sets the maximum amount of time that CDP holds onto neighbor information before discarding it. • The range for the *seconds* argument is from 10 to 255 seconds. • The default is 180 seconds.
Step 6	switch(config)# **cdp timer** *seconds*	(Optional) Sets the refresh time for CDP to send advertisements to neighbors. • The range for the *seconds* argument is from 5 to 254 seconds.
Step 7	switch(config)# **show cdp global**	(Optional) Displays the CDP version that is being advertised or sent to other devices.
Step 8	switch(config)# **copy running-config startup-config**	(Optional) Copies the running configuration to the startup configuration.

```
switch# config t
switch(config)# cdp format device-id system-name
switch# show cdp neighbors
Capability Codes: R - Router, T - Trans Bridge, B - Source Route Bridge
                  S - Switch, H - Host, I - IGMP, r - Repeater, P - Phone

Device ID        Local Intrfce     Holdtme    Capability  Platform  Port ID

02000c000000     Gig 1/16          14             S       Soft Swit Eth 2/4
```

```
02000c000000     Gig 1/17          14             S       Soft Swit Eth 2/5
02000c000000     Gig 1/14          14             S       Soft Swit Eth 2/2
02000c000000     Gig 1/15          14             S       Soft Swit Eth 2/3
02000c000000     Gig 1/18          13             S       Soft Swit
switch(config)# show cdp neighbors
Capability Codes: R - Router, T - Trans-Bridge, B - Source-Route-Bridge
                  S - Switch, H - Host, I - IGMP, r - Repeater,
                  V - VoIP-Phone, D - Remotely-Managed-Device,
                  s - Supports-STP-Dispute

Device ID              Local Intrfce   Hldtme  Capability  Platform      Port ID

swordfish-6k-2         Eth2/2          169     R S I    WS-C6503-E    Gig1/14
swordfish-6k-2         Eth2/3          139     R S I    WS-C6503-E    Gig1/15
swordfish-6k-2         Eth2/4          135     R S I    WS-C6503-E    Gig1/16
swordfish-6k-2         Eth2/5          177     R S I    WS-C6503-E    Gig1/17
swordfish-6k-2         Eth2/6          141     R S I    WS-C6503-E    Gig1/18
switch(config)# cdp holdtime 10
switch(config)# cdp timer 5
switch(config)# show cdp global
Global CDP information:
    CDP enabled globally
    Sending CDP packets every 5 seconds
    Sending a holdtime value of 10 seconds
    Sending CDPv2 advertisements is disabled
    Sending DeviceID TLV in Mac Address Format
switch(config-if)# copy running-config startup-config
```

CDP Interface Configuration

This section includes the following procedures:

- Enabling CDP on an Interface
- Disabling CDP on an Interface

Enabling CDP on an Interface

Although CDP is enabled by default on all interfaces, should it become disabled, you can use this procedure to enable it again.

Procedure

	Command or Action	Purpose
Step 1	switch# **config t**	Places you in global configuration mode.
Step 2	switch(config)# **interface** *interface-type number*	Places you in interface configuration mode for the specific interface.
Step 3	switch(config-if)# **no cdp enable**	Disables CDP on this interface.
Step 4	switch(config-if)# **cdp enable**	Enables CDP on this interface.
Step 5	switch(config-if)# **show cdp interface** *interface-type number*	(Optional) Displays CDP information for the specified interface.

	Command or Action	Purpose
Step 6	switch(config)# **copy running-config startup-config**	(Optional) Copies the running configuration to the startup configuration.

```
switch# config t
switch(config)# interface port-channel 2
switch(config-if)# no cdp enable
switch(config-if)# cdp enable
switch(config-if)# show cdp interface mgmt0
mgmt0 is up
    CDP disabled on interface
    Sending CDP packets every 60 seconds
    Holdtime is 180 seconds
switch(config)# copy running-config startup-config
```

Disabling CDP on an Interface

Before You Begin

Before beginning this procedure, be sure of the following:

- CDP is currently enabled on the device.

Note If CDP is disabled on the device, it is also disabled for all interfaces.

- CDP is currently enabled on the specific interface you want to configure.

Procedure

	Command or Action	Purpose
Step 1	switch# **config t**	Places you in global configuration mode.
Step 2	switch(config)# **interface** *interface-type number*	Places you in interface configuration mode for the specific interface.
Step 3	switch(config-if)# **no cdp enable**	Disables CDP on this interface.
Step 4	switch(config-if)# **show cdp interface** *interface-type number*	(Optional) Displays CDP information for the specified interface.
Step 5	switch(config)# **copy running-config startup-config**	(Optional) Copies the running configuration to the startup configuration.

```
switch# config t
switch(config)# interface mgmt0
switch(config-if)# no cdp enable
switch(config-if)# show cdp interface mgmt0
mgmt0 is up
    CDP disabled on interface
    Sending CDP packets every 60 seconds
    Holdtime is 180 seconds
switch(config)# copy running-config startup-config
```

Monitoring CDP Statistics

Command	Purpose
show cdp traffic interface *interface-type slot/port*	Displays the CDP traffic statistics on an interface.

Clearing CDP Statistics

Use one of the following commands to clear CDP statistics:

Command	Purpose
clear cdp counters	Clears CDP statistics on all interfaces.
clear cdp counters interface *number*	Clears CDP statistics on the specified interface.
clear cdp table	Clears the CDP cache for one or all interfaces.

Verifying the CDP Configuration

Use one of the following commands to verify the configuration:

Command	Purpose
show cdp all	Displays all interfaces that have CDP enabled.
show cdp entry {**all** | **name** *entry-name*}	Displays the CDP database entries.
show cdp global	Displays the CDP global parameters.
show cdp interface *interface-type slot/port*	Displays the CDP interface status.
show cdp neighbors {**detail** | **interface** *interface-type slot/port*}	Displays the CDP neighbor status.

Configuration Example for CDP

This example shows how to enable the CDP feature and configures the refresh and hold timers:

```
switch# config t
switch(config)# cdp enable
switch(config)# cdp timer 50
switch(config)# cdp holdtime 100
```

Feature History for CDP

Feature	Releases	Feature Information
CDP	4.0(4)SV1(1)	This feature was introduced.

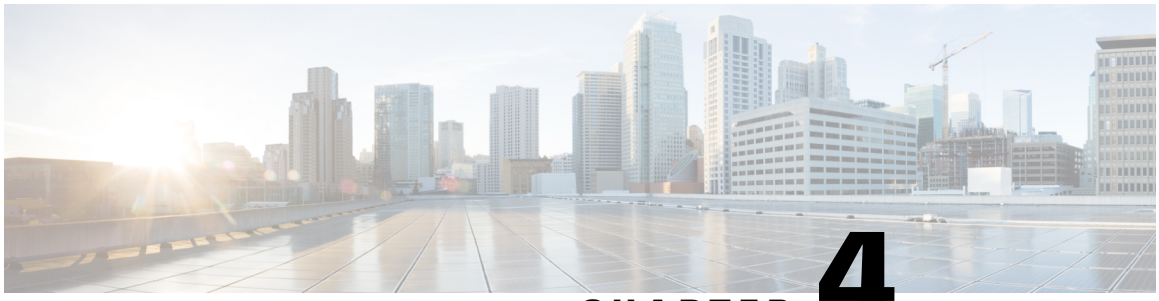

CHAPTER 4

Configuring the Domain

This chapter contains the following sections:

- Information About Domains, page 17
- Guidelines and Limitations, page 18
- Default Settings, page 19
- Configuring the Domain, page 19
- Feature History for the VSM Domain, page 28

Information About Domains

You must create a domain for the Cisco Nexus 1000V and then add control and packet VLANs for communication and management. This process is part of the initial setup of the Cisco Nexus 1000V when you install the software. If you need to create a domain later, you can do so by using the **setup** command or the procedures described in this chapter.

Layer 3 Control

Layer 3 control, or IP connectivity, is supported between the Virtual Supervisor Module (VSM) and the Virtual Ethernet Module (VEM) for control and packet traffic. With Layer 3 control, a VSM can be Layer 3 accessible and can control hosts that reside in a separate Layer 2 network. In the Layer 3 mode, all the VEMs hosts that are managed by VSM and the VSM can be in different networks.

To implement Layer 3 control, you must configure the VSM in Layer 3 mode.

In this figure, VSM 1 controls VEMs in Layer 2 Network A and VSM 2 controls VEMs in Layer 2 Network B.

Figure 1: Example of Layer 3 Control IP Connectivity

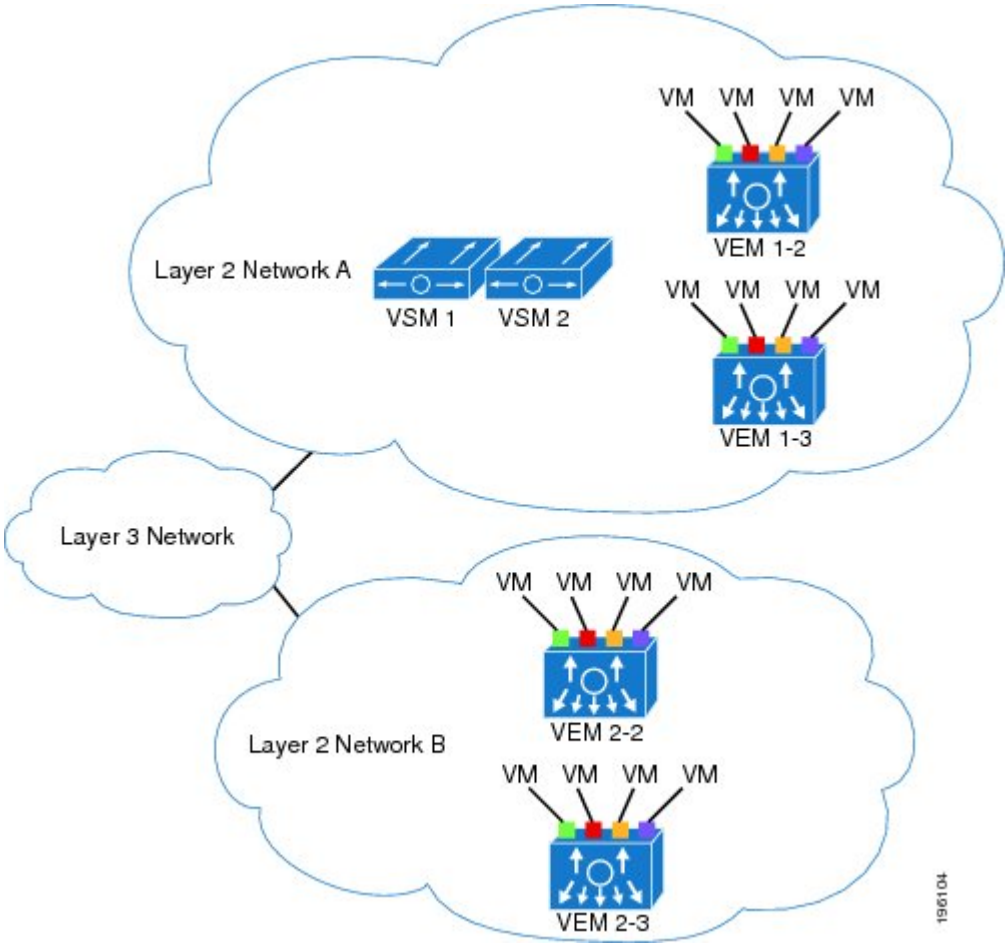

Guidelines and Limitations

- UDP port 4785 is required for Layer 3 communication between the VSM and VEM. If you have a firewall in your network and are configuring Layer 3 control, make sure that UDP port 4785 is open on your upstream switch or firewall device. For more information, see the documentation for your upstream switch or firewall device.
- In a Layer 2 network, you can switch between the Layer 2 and Layer 3 transport modes, but when you do so, the modules might be out of service briefly.
- The capability attribute (Layer 3 control) cannot be inherited from the port profile.
- Different hosts can use different VLANs for Layer 3 control.
- A port profile used for Layer 3 control must be an access port profile. It cannot be a trunk port profile. The port profile created for Layer 3 control, can only be used for vmknic ports and not for VM ports, specifically VSM ports if VSM is hosted on the DVS.

- You must configure Layer 3 (L3) capability control only for a vmk interface. If you add L3 capability control on a virtual ethernet (veth) interface, the system VLAN becomes ineffective for that veth.
- We recommend that if you are using the VMware kernel NIC for Layer 3 Control, you do not use it for any other purpose. For example, do not also use the Layer 3 Control VMware kernel NIC for VMotion or network file system (NFS) mount.
- You must configure control VLANs, packet VLANs, and management VLANs as regular VLANs and not as private VLANs.

Default Settings

Parameter	Default
VMware port group name (port-profile)	The name of the port profile
SVS mode (svs-domain)	Layer 3
Switchport mode (port-profile)	Access
State (port-profile)	Disabled
State (VLAN)	Active
Shut state (VLAN)	No shutdown

Configuring the Domain

This section includes the following procedures:

- Creating a Domain
- Changing to Layer 3 Transport
- Changing to Layer 2 Transport
- Creating a Port Profile for Layer 3 Control
- Creating a Control VLAN
- Creating a Packet VLAN

Creating a Domain

You can create a domain for the Cisco Nexus 1000V that identifies the VSM and VEMs and then add control and packet VLANs for communication and management. This process is part of the initial setup of the Cisco Nexus 1000V when installing the software. If you need to create a domain after initial setup, you can do so by using this procedure.

Note We recommend the following:

- Use one VLAN for control traffic and a different VLAN for packet traffic.
- Use a distinct VLAN for each instances of Cisco Nexus 1000V (different domains)

Before You Begin

Before beginning this procedure, you must be logged in to the CLI in EXEC mode.

You must know the following information:

- If two or more VSMs share the same control and/or packet VLAN, the domain helps identify the VEMs managed by each VSM.
- A unique domain ID for this Cisco Nexus 1000V instance.
- Identity of the VLANs to be used for control and packet traffic.
- The **svs mode** command in the SVS Domain Configuration mode is not used and has no effect on a configuration.

Procedure

	Command or Action	Purpose
Step 1	switch# **config terminal**	Places you in global configuration mode.
Step 2	switch(config)# **svs-domain**	Places you in SVS domain configuration mode.
Step 3	switch(config-svs-domain)# **domain id** *number*	Creates the domain ID for this Cisco Nexus 1000V instance.
Step 4	switch(config-svs-domain)# **control vlan** *number*	Assigns the control VLAN for this domain.
Step 5	switch(config-svs-domain)# **packet vlan** *number*	Assigns the packet VLAN for this domain.
Step 6	switch(config--svs-domain)# **show svs domain**	(Optional) Displays the domain configuration.
Step 7	switch(config-svs-domain)# **exit**	Returns you to global configuration mode.
Step 8	switch(config)# **copy running-config startup-config**	(Optional) Copies the running configuration to the startup configuration.

```
switch# config terminal
switch(config)# svs-domain
switch(config-svs-domain)# domain id 100
switch(config-svs-domain)# control vlan 190
switch(config-svs-domain)# packet vlan 191
switch(config-vlan)# exit
```

```
switch(config)# show svs domain
SVS domain config:
Domain id: 317
Control vlan: 317
Packet vlan: 317
L2/L3 Control mode: L2
L3 control interface: NA
Status: Config push to VC successful.

Note: Control VLAN and Packet VLAN are not used in L3 mode.

switch(config)#
switch(config)# copy run start
[########################################] 100%
switch(config)#
```

Changing to Layer 3 Transport

This procedure requires you to disable the control and packet VLANs. You cannot change to Layer 3 Control before disabling the control and packet VLANs.

Before You Begin

Before beginning this procedure, you must be logged in to the CLI in EXEC mode.

You have already configured the Layer 3 interface (mgmt 0 or control 0) and assigned an IP address.

When control 0 is used for Layer 3 transport, proxy-arp must be enabled on the control 0 VLAN gateway router.

Procedure

	Command or Action	Purpose
Step 1	switch(config)# **show svs domain**	Displays the existing domain configuration, including control and packet VLAN IDs.
Step 2	switch# **config t**	Places you in global configuration mode.
Step 3	switch(config)# **svs-domain**	Places you in SVS domain configuration mode.
Step 4	switch(config-svs-domain)# **no packet vlan**	Removes the packet VLAN configuration.
Step 5	switch(config-svs-domain)# **no control vlan**	Removes the control VLAN configuration.
Step 6	switch(config-svs-domain)# **show svs domain**	(Optional) Displays the domain configuration.
Step 7	switch(config-svs-domain)# **svs mode L3 interface** { **mgmt0** | **control0** }	Configures Layer 3 transport mode for the VSM domain. If configuring Layer 3 transport, then you must designate which interface to use; and the interface must already have an IP address configured.

	Command or Action	Purpose
Step 8	switch(config--svs-domain)# **show svs domain**	(Optional) Displays the new Layer 3 control mode configuration for this VSM domain.
Step 9	switch(config-svs-domain)# **[no] control type multicast**	Configures the control type multicast in Layer 3 mode on the VSM.
Step 10	switch(config--svs-domain)# **show svs domain**	(Optional) Displays the control type multicast status in Layer 3 mode on the VSM.
Step 11	switch(config)# **copy running-config startup-config**	(Optional) Copies the running configuration to the startup configuration.

```
switch(config)# show svs domain
SVS domain config:
  Domain id:    100
  Control vlan: 100
  Packet vlan:  101
  L2/L3 Control mode: L2
  L3 control interface:  NA
  Status: Config push to VC successful.
switch# config t
switch(config)# svs-domain
switch(config-svs-domain)# no packet vlan
switch(config-svs-domain)# no control vlan
switch(config)# show svs domain
SVS domain config:
  Domain id:    100
  Control vlan: 1
  Packet vlan:  1
  L2/L3 Control mode: L2
  L2/L3 Control interface: NA
  Status: Config push to VC successful.
switch(config-svs-domain)# svs mode l3 interface mgmt0
SVS domain config:
  Domain id:    100
  Control vlan: NA
  Packet vlan:  NA
  L2/L3 Control mode: L3
  L3 control interface: mgmt0
  Status: Config push to VC successful.
switch(config-svs-domain)# show svs domain

switch(config-svs-domain)# control type multicast
switch(config)# show svs domain
SVS domain config:
  Domain id:    343
  Control vlan:  NA
  Packet vlan:   NA
  L2/L3 Control mode: L3
  L3 control interface: mgmt0
  Status: Config push to VC successful.
  Control type multicast: Yes

switch(config-svs-domain)# no control type multicast
switch(config)# show svs domain
SVS domain config:
  Domain id:    343
  Control vlan:  NA
```

```
  Packet vlan:   NA
  L2/L3 Control mode: L3
  L3 control interface: mgmt0
  Status: Config push to VC in progress.
  Control type multicast: No
  Limitation : Control type multicast is configured. It is not applicable in svs L2 mode.

switch(config-svs-domain)# copy running-config startup-config
[########################################] 100%
switch(config-svs-domain)#
```

Changing to Layer 2 Transport

You can change the transport mode to Layer 2 for the VSM domain control and packet traffic. The transport mode is Layer 3 by default, but if it is changed, you can use this procedure to configure it again as Layer 2.

This procedure requires you to configure a control VLAN and a packet VLAN. You cannot configure these VLANs if the VSM domain capability is Layer 3 Control. You will first change the svs domain mode to Layer 2 and then configure the control VLAN and packet VLAN.

Before You Begin

Before beginning this procedure, you must be logged in to the CLI in EXEC mode.

Procedure

	Command or Action	Purpose
Step 1	switch(config)# **show svs domain**	Displays the existing domain configuration, including control and packet VLAN IDs and the Layer 3 interface configuration.
Step 2	switch# **config t**	Places you in global configuration mode.
Step 3	switch(config)# **svs-domain**	Places you in SVS domain configuration mode.
Step 4	switch(config-svs-domain)# **svs mode L2**	Configures Layer 2 transport mode for the VSM domain.
Step 5	switch(config-svs-domain)# **control vlan** *vlanID*	Configures the specified VLAN ID as the control VLAN for the VSM domain.
Step 6	switch(config-svs-domain)# **packet vlan***vlanID*	Configures the specified VLAN ID as the packet VLAN for the VSM domain.
Step 7	switch(config-svs-domain)# **show svs domain**	(Optional) Displays the new Layer 2 control mode configuration for this VSM domain.
Step 8	switch(config)# **copy running-config startup-config**	(Optional) Copies the running configuration to the startup configuration.

```
switch# show svs domain
SVS domain config:
Domain id: 317
```

```
Control vlan: NA
Packet vlan: NA
L2/L3 Control mode: L3
L3 control interface: mgmt0
Status: Config push to VC successful.
Control type multicast: No
switch# config t
switch(config)# svs-domain
switch(config-svs-domain)# svs mode l2
switch(config-svs-domain)# control vlan 100
switch(config-svs-domain)# packet vlan 101
switch(config-svs-domain)# show svs domain
SVS domain config:
  Domain id:    100
  Control vlan: 100
  Packet vlan:  101
  L2/L3 Control mode: L2
  L3 control interface: NA
  Status: Config push to VC successful.
switch(config-svs-domain)# copy running-config startup-config
[########################################] 100%
```

Creating a Port Profile for Layer 3 Control

You can allow the VSM and VEM to communicate over IP for control and packet traffic.

Before You Begin

Before beginning this procedure, you must be logged in to the CLI in EXEC mode.

You must know the following information:

- The transport mode for the VSM domain has already been configured as Layer 3.
- All VEMs belong to the same Layer 2 domain.
- The VEM VM kernel NIC connects to this Layer 3 control port profile when you add the host to the Cisco Nexus 1000V DVS.
- Only one VM kernel NIC can be assigned to this Layer 3 control port profile per host.
- The VLAN ID for the VLAN you are adding to this Layer 3 control port profile:
  - The VLAN must already be created on the Cisco Nexus 1000V.
  - The VLAN assigned to this Layer 3 control port profile must be a system VLAN.
  - One of the uplink ports must already have this VLAN in its system VLAN range.
- The port profile must be an access port profile. It cannot be a trunk port profile. This procedure includes steps to configure the port profile as an access port profile.
- More than one port profile can be configured with the **capability L3 control** command. These can only be used for vmknic ports and not for VM ports, specifically VSM ports if VSM is hosted on the DVS.
- Different hosts can use different VLANs for Layer 3 control.
- VEM modules will not register to the VSM before a vmkernel interface (vmk) is migrated to a Layer 3 control capable port profile.

Procedure

	Command or Action	Purpose
Step 1	switch# **config terminal**	Places you in global configuration mode.
Step 2	switch(config)# **port-profile** *name*	Creates a port profile and places you into Port Profile Configuration mode for the named port profile. The *name* argument can be up to 80 characters and must be unique for each port profile on the Cisco Nexus 1000V.
Step 3	switch(config-port-prof)# **capability l3control**	Allows the port to be used for IP connectivity.
Step 4	switch(config-port-prof)# **vmware port-group** [*name*]	Designates the port profile as a VMware port group. The port profile is mapped to a VMware port group of the same name. When a vCenter Server connection is established, the port group created in Cisco Nexus 1000V is then distributed to the virtual switch on the vCenter Server. If you do not specify a name, then the port group name will be the same as the port profile name. If you want to map the port profile to a different port group name, use the alternate name.
Step 5	switch(config-port-prof)# **switchport mode access**	Designates that the interfaces are switch access ports (the default).
Step 6	switch(config-port-prof)# **switchport access vlan** *vlanID*	Assigns the system VLAN ID to the access port for this Layer 3 control port profile.
Step 7	switch(config-port-prof)# **no shutdown**	Administratively enables all ports in the profile.
Step 8	switch(config-port-prof)# **system vlan** *vlanID*	Adds the system VLAN to this Layer 3 control port profile. This command ensures that, when the host is added for the first time or rebooted later, the VEM can reach the VSM. One of the uplink ports must have this VLAN in its system VLAN range.
Step 9	switch(config-port-prof)# **state enabled**	Enables the Layer 3 control port profile. The configuration for this port profile is applied to the assigned ports, and the port group is created in the VMware vSwitch on vCenter Server.
Step 10	switch(config-port-prof)# **show port-profile name** *name*	(Optional) Displays the current configuration for the port profile.
Step 11	switch(config)# **copy running-config startup-config**	(Optional) Copies the running configuration to the startup configuration.

```
switch# config terminal
switch(config)# port-profile l3control-150
switch(config-port-prof)# capability l3control
switch(config-port-prof)# vmware port-group
switch(config-port-prof)# switchport mode access
switch(config-port-prof)# switchport access vlan 150
switch(config-port-prof)# no shutdown
switch(config-port-prof)# system vlan 150
switch(config-port-prof)# state enabled
switch(config-port-prof)# show port-profile name l3control-150
port-profile l3control-150
  description:
  type: vethernet
  status: enabled
  capability l3control: yes
  pinning control-vlan: 8
  pinning packet-vlan: 8
  system vlans: 150
  port-group: l3control-150
  max ports: 32
  inherit:
  config attributes:
    switchport mode access
    switchport access vlan 150
    no shutdown
  evaluated config attributes:
    switchport mode access
    switchport access vlan 150
    no shutdown
  assigned interfaces:
switch(config-port-prof)# copy running-config startup-config
```

Creating a Control VLAN

Before You Begin

Before beginning this procedure, you must be logged in to the CLI in EXEC mode.

Be sure you have already configured and enabled the required switched virtual interface (SVI) using the document, *Cisco Nexus 1000V Interface Configuration Guide*. The SVI is also called the VLAN interface and provides communication between VLANs.

You must know the following:

- If Layer 3 Control is configured on your VSM, you cannot create a control VLAN. You must first disable Layer 3 Control.
- How VLANs are numbered.
- That newly created VLANs remain unused until Layer 2 ports are assigned to them.

Procedure

	Command or Action	Purpose
Step 1	switch# **config t**	Places you in global configuration mode.
Step 2	switch(config)# **vlan** *30*	Creates VLAN ID 30 for control traffic and places you in VLAN configuration mode.

	Command or Action	Purpose
		Note If you enter a VLAN ID that is assigned to an internally allocated VLAN, the CLI returns an error message.
Step 3	switch(config-vlan)# **name** *cp_control*	Adds the descriptive name, cp_control, to this VLAN.
Step 4	switch(config-vlan)# **state** *active*	Changes the operational state of the VLAN to active.
Step 5	switch(config-vlan)# **show vlan id** *30*	(Optional) Displays the configuration for VLAN ID 30.
Step 6	switch(config)# **copy running-config startup-config**	(Optional) Copies the running configuration to the startup configuration.

```
switch# config t
switch(config)# vlan 30
switch(config-vlan)# name cp_control
switch(config-vlan)# state active
switch(config-vlan)# show vlan id 30
VLAN Name                             Status    Ports
---- -------------------------------- --------- -------------------------------
30   cp_control                       active

VLAN Type MTU
---- -----
5    enet 1500

Remote SPAN VLAN
----------------
Disabled

Primary  Secondary  Type             Ports
-------  ---------  ---------------  ------------------------------------------
switch(config-vlan)# copy running-config startup-config
```

Creating a Packet VLAN

Before You Begin

Before beginning this procedure, be sure you have done the following:

- Logged in to the CLI in EXEC mode
- Configured and enabled the required switched virtual interface (SVI)
- Familiarized yourself with how VLANs are numbered.

Note Newly created VLANs remain unused until Layer 2 ports are assigned to them.

Procedure

	Command or Action	Purpose
Step 1	switch# **config t**	Places you in global configuration mode.
Step 2	switch(config)# **vlan** *vlan-id*	Creates VLAN ID for packet traffic and places you in VLAN configuration mode. **Note** If you enter a VLAN ID that is assigned to an internally allocated VLAN, the CLI returns an error message.
Step 3	switch(config-vlan)# **name** *vlan-name*	Adds the descriptive name to this VLAN.
Step 4	switch(config-vlan)# **state** *vlan-state*	Changes the operational state of the VLAN to active or suspend.
Step 5	switch(config-vlan)# **show vlan id** *vlan-id*	(Optional) Displays the configuration for the VLAN ID.
Step 6	switch(config-vlan)# **exit**	Returns you to global configuration mode.
Step 7	switch(config)# **copy running-config startup-config**	(Optional) Copies the running configuration to the startup configuration.

```
switch# config t
switch(config)# vlan 31
switch(config-vlan)# name cp_packet
switch(config-vlan)# state active
switch(config-vlan)# exit
switch(config)# show vlan id 31

VLAN Name                             Status    Ports
---- -------------------------------- --------- -------------------------------
31   cp_packet                        active

VLAN Type MTU
---- -----
5    enet 1500

Remote SPAN VLAN
----------------
Disabled

Primary  Secondary  Type              Ports
-------  ---------  ---------------   ------------------------------------------

switch(config)# copy run start
[########################################] 100%
switch(config)#
```

Feature History for the VSM Domain

This table only includes updates for those releases that have resulted in additions to the feature.

Feature Name	Releases	Feature Information
Layer 3 Control	4.0(4)SV1(2)	Added the following information: • About Layer 3 Control • Guidelines and Limitations • Changing to Layer 2 Transport • Changing to Layer 3 Transport • Creating a Port Profile for Layer 3 Control
VSM Domain	4.0(4)SV1(1)	This feature was introduced.

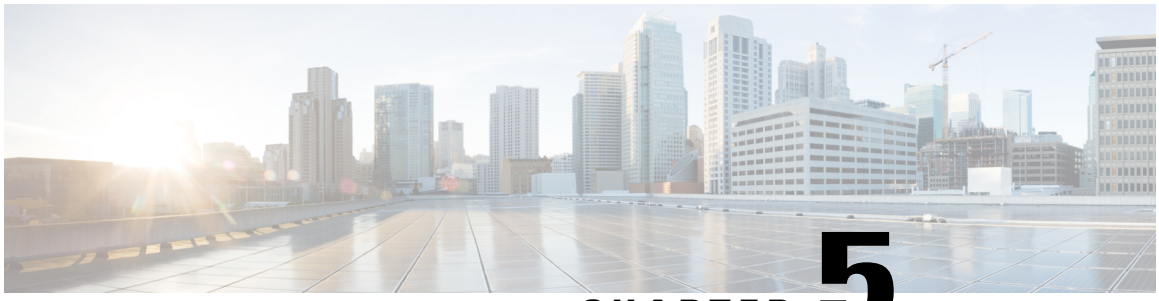

CHAPTER 5

Managing Server Connections

This chapter contains the following sections:

- Information About Server Connections, page 31
- Guidelines and Limitations, page 32
- Connecting to the vCenter Server, page 32
- Validating vCenter Server Certificates, page 34
- Disconnecting From the vCenter Server, page 35
- Removing the DVS from the vCenter Server, page 35
- Removing the DVS from the vCenter Server When the VSM Is Not Connected, page 36
- Configuring Host Mapping, page 38
- Verifying Connections, page 40
- Verifying the Domain, page 40
- Verifying the Configuration , page 41
- Verifying Module Information, page 42
- Feature History for Server Connections, page 43

Information About Server Connections

In order to connect to vCenter Server or an ESX server, you must first define the connection in theCisco Nexus 1000V including the following:

- A connection name
- The protocol used
- The server IP address
- The server DNS name
- All communication with vCenter Server is secured by the Transport Layer Security (TLS) protocol.

Guidelines and Limitations

A single Virtual Supervisor Module (VSM) can only connect to one vCenter Server at a time. A single VSM cannot connect to multiple vCenter Server at once.

Connecting to the vCenter Server

Before You Begin

Before beginning this procedure, you must be logged in to the CLI in EXEC mode.

You must know the following:

- The datacenter name
- The vCenter Server IP address or hostname.

You must be sure the following is set up:

- The vCenter Server management station is installed and running.
- The ESX servers are installed and running.
- The Cisco Nexus 1000V appliance is installed.
- The management port is configured.
- The DNS is already configured if you are configuring a connection using a hostname.
- An extension with vCenter Server has been registered. The extension includes the extension key and public certificate for the VSM. vCenter Server uses the extension to verify the authenticity of the request it receives from the VSM. For instructions about adding and registering an extension, see the *Cisco Nexus 1000V Installation and Upgrade Guide*.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Places you in global configuration mode.
Step 2	switch(config)# **svs connection** *name*	Places you in connection configuration mode for adding this connection between the Cisco Nexus 1000V and either a particular ESX server or vCenter Server. By using a name, information for multiple connections can be stored in the configuration.
Step 3	switch(config-svs-conn)# **protocol vmware-vim**	Use the **http** keyword to specify that this connection uses the VIM protocol. This command is stored locally. **http**: Specifies that the VIM protocol runs over HTTP. The default is to use HTTP over SSL (HTTPS).
Step 4	Do one of the following:	• If you are configuring an IP address, go to Step 5. • If you are configuring a hostname, go to Step 6.

	Command or Action	Purpose
Step 5	switch(config-svs-conn)# **remote ip address** *ipaddress*	Specifies the IP address of the ESX server or vCenter Server for this connection. This command is stored locally. Go to step 7 to configure the datacenter name.
Step 6	switch(config-svs-conn)# **remote hostname** *hostname*	Specifies the DNS name of the ESX server or vCenter Server for this connection. This command is stored locally. **Note** DNS is already configured.
Step 7	switch(config-svs-conn)# **remote port** *port number*	Specifies the HTTP port number of vCenter for this connection. The default port number is 80. Though the communication is HTTPS, vCenter receives the packets on its HTTP port.
Step 8	switch(config-svs-conn)# **vmware dvs datacenter-name** [*folder/*] *name*	Identifies the datacenter name in the vCenter Server where the Cisco Nexus 1000V is to be created as a distributed virtual switch (DVS). You can use this command before or after connecting. The datacenter name is stored locally. **Note** The Nexus 1000V folder name must be same in the vCenter Server and in the VSM. If the Nexus 1000V folder is renamed in the vCenter Server, you must manually rename the folder name in the VSM. The names are not automatically synchronized, and if they are not the same, the DVS connection between the VSM and vCenter Server is broken.
Step 9	switch(config-svs-conn)# **connect**	Initiates the connection. If the username and password have not been configured for this connection, the you are prompted for a username and password. The default is no connect. There can be only one active connection at a time. If a previously defined connection is up, an error message appears and the command is rejected until you close the previous connection by entering no connect.

```
switch# config t
switch(config)# svs connection VC
switch(config-svs-conn)# protocol vmware-vim
switch(config-svs-conn)# remote ip address 192.168.0.1
switch(config-svs-conn)# remote port 80
switch(config-svs-conn)# vmware dvs datacenter-name Hamilton-DC
switch(config-svs-conn)# connect
switch# show svs connections
connection VC:
    ip address: 192.168.0.1
    protocol: vmware-vim https
    certificate: default
    datacenter name: Hamilton-DC
    DVS uuid: ac 36 07 50 42 88 e9 ab-03 fe 4f dd d1 30 cc 5c
    config status: Enabled
    operational status: Connected
switch#
```

Validating vCenter Server Certificates

The VSM can validate the certificate presented by vCenter Server to authenticate it. The certificate may be self-signed or signed by a Certificate Authority (CA). The validation is done every time the VSM connects to the vCenter Server. If the certificate authentication fails, a warning is generated but the connection is not impaired.

Installing Certificates

Before You Begin

Check if a vCenter Server certificate can be received:

1. Run the following command and store the output of this command in a file, for example, `sconnect_out`.

   ```
   openssl s_client -connect vCenterServer_IPaddress:443 -showcerts
   ```

2. Add information about the certificates in a file named `cacerts.pem`.
3. Verify that a certificate is received from the vCenter Server:

   ```
   openssl verify -CAfile cacerts.pem sconnect_out
   ```

For more information about the OpenSSL commands, go to www.openssl.org.

Procedure

Step 1 Create a file named `cacerts.pem` in `bootflash:`.

Step 2 Add a list of trusted certificates in the `cacerts.pem` file.
You can add the self-signed certificate of the vCenter Server or the list of root certificate authorities that your security policy allows. The information about each certificate must be included within the following lines:

```
-----BEGIN CERTIFICATE-----

-----END CERTIFICATE-----
```

Verifying vCenter Server Certificates

To verify a vCenter Server certificate, use the **show svs connections** command.

```
switch# show svs connections
connection vc:
    ip address: 172.23.181.103
    remote port: 80
    protocol: vmware-vim https
    certificate: default
    ssl-cert: Authenticated
    . . .
```

If the authentication fails or the `bootflash:/cacerts.pem` file is not present, the following message is displayed:

```
ssl-cert: self-signed or not authenticated
```

In addition, the following warning message is displayed for five times or less after every 3 minutes:

```
VMS-1-CONN_SSL_NOAUTH: SSL AUTHENTICATION failure
```

Disconnecting From the vCenter Server

You can disconnect from the vCenter Server, for example, after correcting a vCenter Server configuration.

Before You Begin

Before beginning this procedure, be sure you have done the following:

- Logged in to the Cisco Nexus 1000V in EXEC mode.
- Configured a Cisco Nexus 1000V connection
- Connected the Cisco Nexus 1000V to vCenter Server/ESX.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Places you in global configuration mode.
Step 2	switch(config)# **svs connection** *name*	Places you in a global configuration submode for the connection to vCenter Server.
Step 3	switch(config-svs-conn)# **no connect**	Closes the connection.

```
switch# config t
switch# (config#) svs connection vcWest
switch# (config-svs-conn)# no connect
```

Removing the DVS from the vCenter Server

Use this procedure to remove the Distributed Virtual Switch (DVS) from the vCenter Server.

Before You Begin

Before beginning this procedure, be sure you have done the following:

- Logged in to the Cisco Nexus 1000V in EXEC mode
- Configured a connection to the vCenter Server
- Connected the Cisco Nexus 1000V to vCenter Server/ESX
- Checked that the server administrator has removed all of the hosts that are connected to the Cisco Nexus 1000V from the VI client. For more information, see the VMware documentation.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Places you in global configuration mode.
Step 2	switch(config)# **svs connection** *name*	Places you in a global configuration submode for the connection to vCenter Server.
Step 3	switch(config-svs-conn)# **no vmware dvs**	Removes the DVS associated with the specified connection from the vCenter Server.

```
switch# config t
switch(config)# svs connection vcWest
switch(config-svs-conn)# no vmware dvs
```

Removing the DVS from the vCenter Server When the VSM Is Not Connected

Configuring the ability to delete the DVS when the VSM is not connected to the vCenter Server is a two-step process:

Procedure

Step 1 Configure the admin user or group. See the Configuring the Admin User or Admin Group section.

Step 2 Remove the DVS from the vCenter Server. See the Removing the DVS from the vCenter Server section

Configuring the Admin User or Admin Group

Before You Begin

Before beginning this procedure, ensure that the system administrator has created an admin user or admin group on vCenter Server to manage and delete the DVS. This user should not be given any other permissions such as deploying VMs or hosts, and so on. The admin user name configured on the VSM should be the same as the username on vCenter Server.

Procedure

Step 1 Determine the name of the DVS.

Example:

Step 2 Configure the admin user in the vCenter Server.

Example:

Note You can also configure an admin group by entering the **admin group** *groupname* command.

Step 3 Verify that the admin user has been created.

Example:

```
switch# show svs connections

connection VC:
    ipaddress: 10.104.63.16
    remote port: 80
    protocol: VMware-vim https
    certificate: default
    datacenter name: N1K-DC
    admin:
    DVS uuid: a2 ...
    config status: Enabled
    operational status: Connected
    sync status: Complete
    version: VMware vCenter Server 4.1.0 build 258902

switch# config t
switch(config)# svs connection VC
switch(config-svs-conn) # admin user NAuser
switch(config-svs-conn) #show svs connections

connection VC:
    ipaddress: 10.104.63.16
    remote port: 80
    protocol: VMware-vim https
    certificate: default
    datacenter name: N1K-DC
    admin: NAuser(user)
    DVS uuid: a2 ...
    config status: Enabled
    operational status: Connected
    sync status: Complete
    version: VMware vCenter Server 4.1.0 build 258902
```

Removing the DVS from the vCenter Server Using the Graphical User Interface

Procedure

Step 1 Log in to the vCenter Server through the VMware vSphere Client with the admin user account

Step 2 In the vSphere Client left pane, choose the data center.

Step 3 Click **Hosts and Clusters** > **Networking**.

Step 4 Right-click the **DVS** and choose **Remove**.

Configuring Host Mapping

This section includes the following topics:

- Information about Host Mapping
- Removing Host Mapping from a Module
- Mapping to a New Host
- Viewing Host Mapping

Information about Host Server Connections

When a VSM detects a new Virtual Ethernet Module (VEM), it automatically assigns a free module number to the VEM and then maintains the mapping between the module number and the universally unique identifier (UUID) of a host server. This mapping is used to assign the same module number to a given host server.

Removing Host Mapping from a Module

Before You Begin

Before beginning this procedure, be sure you have done the following:

- Logged in to theCisco Nexus 1000V in EXEC mode.
- Removed the host from the Cisco Nexus 1000V DVS on vCenter

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Places you in global configuration mode.
Step 2	switch(config)# **no vem** *module-number*	Removes the specified module from software. **Note** If the module is still present in the slot, the command is rejected, as shown in this example.
Step 3	switch(config)# **show module vem mapping**	(Optional) Displays the mapping of modules to host servers.
Step 4	switch(config)# **copy running-config startup-config**	Copies the running configuration to the startup configuration.

```
switch# configure terminal
switch(config)# no vem 4
switch(config)# no vem 3
cannot modify slot 3: host module is inserted
switch(config)# show module vem mapping
```

```
Mod     Status          UUID                                    License Status
---     -----------     ------------------------------------    --------------
  3      powered-up     93312881-309e-11db-afa1-0015170f51a8    licensed
switch(config-vem-slot)# copy running-config startup-config
```

Mapping to a New Host

Before You Begin

Before beginning this procedure, be sure you have done the following:

- Logged in to the CLI in EXEC mode
- Removed the host from the Cisco Nexus 1000V DVS on vCenter

Note If you do not first remove the existing host server mapping, the new host server is assigned a different module number.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Places you in global configuration mode.
Step 2	switch(config)# **vem** *module number*	Places you in VEM slot configuration mode.
Step 3	switch(config-vem-slot)# **host vmware id** *server-bios-uuid*	Assigns a different host server UUID to the specified module.
Step 4	switch(config-vem-slot)# **show module vem mapping**	(Optional) Displays the mapping of modules to host servers.
Step 5	switch(config-vem-slot)# **copy running-config startup-config**	Copies the running configuration to the startup configuration.

```
switch# config t
switch(config)# vem 3
switch(config-vem-slot)# host vmware id 6dd6c3e3-7379-11db-abcd-000bab086eb6
switch(config-vem-slot)# show module vem mapping
Mod     Status          UUID                                    License Status
---     -----------     ------------------------------------    --------------
  3      powered-up     93312881-309e-11db-afa1-0015170f51a8    licensed
  4          absent     6dd6c3e3-7379-11db-abcd-000bab086eb6    licensed

switch(config-vem-slot)# copy running-config startup-config
```

Viewing Host Mapping

- Use this procedure in EXEC mode to view the mapping of modules to host servers.

Procedure

Display the mapping on modules to host servers by entering the following command: **show module vem mapping**

```
Mod Status      UUID                                 License Status
--- ----------- ------------------------------------ --------------
3   powered-up  93312881-309e-11db-afa1-0015170f51a8  licensed
n1000v(config)#
```

Verifying Connections

Use this procedure to view and verify connections.

Before You Begin

- You are logged in to the CLI in any command mode.
- You have configured the connection using the Connecting to the vCenter Server procedure.
- The Cisco Nexus 1000V is connected to vCenter Server/ESX.

Procedure

show svs connections [*name*]
Displays the current connections to the Cisco Nexus 1000V.

Note Network connectivity issues may shut down your connection to the vCenter Server. When network connectivity is restored, the Cisco Nexus 1000V will not automatically restore the connection. In this case, you must restore the connection manually using the following command sequence **no connect**

connect

```
n1000v# show svs connections vc
Connection vc:
IP address: 172.28.15.206
Protocol: vmware-vim https
vmware dvs datacenter-name: HamiltonDC
ConfigStatus: Enabled
OperStatus: Connected
n1000v#
```

Verifying the Domain

Use this procedure to view and verify the configured domain.

Before You Begin

- You are logged in to the CLI in any command mode.
- You have configured a domain using the Creating a Domain procedure.

Procedure

show svs domain

Example:

```
n1000v# show svs domain
SVS domain config:
Domain id: 98
Control vlan: 70
Packet vlan: 71
Sync state: -
n1000v#
```

Display the domain configured on the Cisco Nexus 1000V.

Verifying the Configuration

Use one of the following commands to verify the configuration:

Command	Description
show running-config	Displays the current configuration. If the Cisco Nexus 1000V is not connected to a vCenter Server or ESX server, the output is limited to connection-related information.
show svs connections [*name*]	Displays the current connections to the Cisco Nexus 1000V. **Note** Network connectivity issues may shut down your connection to the vCenter Server. When network connectivity is restored, the Cisco Nexus 1000V will not automatically restore the connection. In this case, you must restore the connection manually using the following command sequence: **no connect** **connect**
show svs domain	Displays the domain configured on the Cisco Nexus 1000V.
show module	Displays module information.
show server_info	Displays server information.
show interface brief	Displays interface information, including the uplinks to vCenter Server.
show interface virtual	Displays virtual interface information.

Command	Description
show module vem mapping	Displays the mapping of modules to host servers.

Verifying Module Information

Use this procedure to display and verify module information, including a view of the DVS from Cisco Nexus 1000V.

Before You Begin

- You are logged in to the CLI in any command mode.
- You have configured the Cisco Nexus 1000V connection using the Connecting to the vCenter Server procedure.
- TheCisco Nexus 1000V is connected to vCenter Server/ESX.
- The Server Administrator has already added the host runningCisco Nexus 1000V to the DVS invCenter Server.

Procedure

Step 1 **show module**

Example:

```
n1000v# show module
Mod Ports Module-Type Model Status
--- ----- -------------------------------- ------------------ ------------
1 1 Virtual Supervisor Module Nexus1000V active *
2 48 Virtual Ethernet Module ok
3 48 Virtual Ethernet Module ok
Mod Sw Hw World-Wide-Name(s) (WWN)
--- -------------- ------ --------------------------------------------------
1 4.0(0)S1(0.82) 0.0 --
2 NA 0.0 --
3 NA 0.0 --
Mod MAC-Address(es) Serial-Num
--- -------------------------------------- ----------
1 00-19-07-6c-5a-a8 to 00-19-07-6c-62-a8 NA
2 02-00-0c-00-02-00 to 02-00-0c-00-02-80 NA
3 02-00-0c-00-03-00 to 02-00-0c-00-03-80 NA
Mod Server-IP Server-UUID Server-Name
--- --------------- ------------------------------------ --------------------
1 172.18.217.180 esx-1
2 172.18.117.44 487701ee-6e87-c9e8-fb62-001a64d20a20 esx-2
3 172.18.217.3 4876efdd-b563-9873-8b39-001a64644a24 esx-3
* this terminal session
```

Displays module information.

Step 2 **show server_info**

Example:

```
n1000v# show server_info
Mod Status UUID
```

```
--- ----------- ----
2 powered-up 34303734-3239-5347-4838-323130344654
3 absent 371e5916-8505-3833-a02b-74a4122fc476
4 powered-up 4880a7a7-7b51-dd96-5561-001e4f3a22f9
5 absent 48840e85-e6f9-e298-85fc-001e4f3a2326
6 powered-up eb084ba6-3b35-3031-a6fe-255506d10cd0
n1000v#
```

Displays server information.

Step 3 show interface brief

Example:

```
n1000v# show interface brief
--------------------------------------------------------------------------------
Port VRF Status IP Address Speed MTU
--------------------------------------------------------------------------------
mgmt0 -- up 172.28.15.211 1000 1500
--------------------------------------------------------------------------------
Ethernet VLAN Type Mode Status Reason Speed Port
Interface Ch #
--------------------------------------------------------------------------------
Eth2/2 1 eth trunk up none a-1000(D) --
--------------------------------------------------------------------------------
Interface VLAN Type Mode Status Reason MTU
--------------------------------------------------------------------------------
Example
n1000v#
```

Displays interface information, including the uplinks to vCenter Server.

Step 4 **show interface virtual**

Example:

```
n1000v# show interface virtual
--------------------------------------------------------------------------------
Port Adapter Owner Mod Host
--------------------------------------------------------------------------------
Veth49 R-VM-1 2 mcs-srvr35
```

Displays virtual interface information.

Feature History for Server Connections

Feature Name	Releases	Feature Information
vCenter Server Certificates Validation	4.2(1)SV2(2.1a)	This feature was introduced.
DVS Deletion	4.2(1)SV1(4a)	This feature was added.
Server Connections	4.0(4)SV1(1)	This feature was introduced.

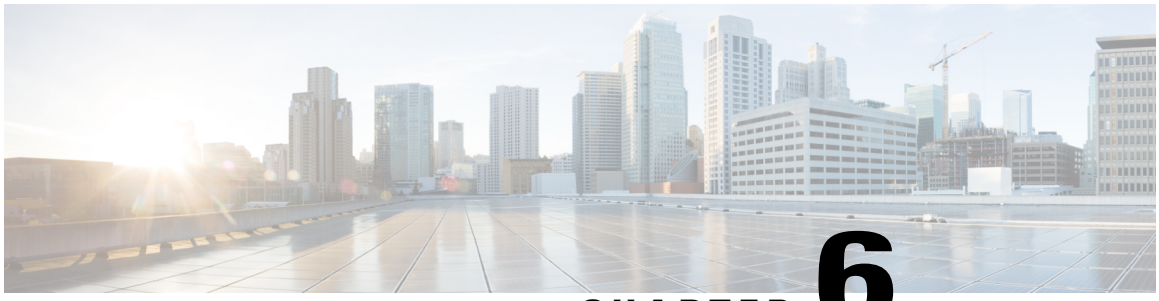

CHAPTER 6

Managing the Configuration

This chapter contains the following sections:

- Information About Configuration Management, page 45
- Changing the Switch Name, page 45
- Configuring a Message of the Day, page 46
- Verifying the Configuration, page 47
- Verifying the Interface Configuration, page 50
- Saving a Configuration, page 53
- Erasing a Configuration, page 53
- Feature History for Configuration Management, page 54

Information About Configuration Management

The Cisco Nexus 1000V enables you to change the switch name, configure messages of the day, and display, save, and erase configuration files.

Changing the Switch Name

Use this procedure to change the switch name or prompt from the default (switch#) to another character string.

If the VSM is connected to the OpenStack controller, then this procedure also changes the Dynamic Vectoring and Streaming (DVS) engine that the VSM is managing. If you make an error when renaming the DVS, a syslog is generated and the DVS on the OpenStack controller continues to use the old DVS name.

Before You Begin

Before beginning this procedure, you must be logged in to the CLI in configuration mode.

Procedure

	Command or Action	Purpose
Step 1	switch(config)# **switchname**	Changes the switch prompt.

```
switch(config)# switchname metro
metro(config)# exit
metro#
```

Configuring a Message of the Day

Use this procedure to configure a message of the day (MOTD) to display before the login prompt on the terminal when a user logs in.

- The banner message can be up to 40 lines with up to 80 characters per line.
- Use the following guidelines when choosing your delimiting character:
  - Do not use the delimiting-character in the message string.
  - Do not use " and % as delimiters.
- The following tokens can be used in the the message of the day:
  - $(hostname) displays the host name for the switch.
  - $(line) displays the vty or tty line or name.

Before You Begin

Before beginning this procedure, you must be logged in to the CLI in configuration mode.

Procedure

	Command or Action	Purpose
Step 1	switch(config)# **banner motd** [*delimiting-character message delimiting-character*]	Configures a banner message of the day with the following features: • Up to 40 lines • Up to 80 characters per line • Enclosed in delimiting character, such as # • Can span multiple lines • Can use tokens
Step 2	switch(config)# **show banner motd**	Displays the configured banner message.

```
switch(config)# banner motd #April 16, 2011 Welcome to the svs#
switch(config)# show banner motd
April 16, 2011 Welcome to the Switch
```

Verifying the Configuration

Use this section to view the switch configuration. This section includes the following topics:

- Verifying the Software and Hardware Versions
- Verifying the Running Configuration
- Comparing the Startup and Running Configurations
- Verifying the Interface Configuration

Verifying the Software and Hardware Versions

Use this command to view the versions of software and hardware on your system, for example, to verify the version before and after an upgrade.

Before You Begin

Before beginning this procedure, you must be logged in to the CLI EXEC mode.

Procedure

	Command or Action	Purpose
Step 1	swtich# **show version**	Displays the versions of system software and hardware that are currently running on the switch,

```
switch# show version
Cisco Nexus Operating System (NX-OS) Software
TAC support: http://www.cisco.com/tac
Copyright (c) 2002-2009, Cisco Systems, Inc. All rights reserved.
The copyrights to certain works contained in this software are
owned by other third parties and used and distributed under
license. Certain components of this software are licensed under
the GNU General Public License (GPL) version 2.0 or the GNU
Lesser General Public License (LGPL) Version 2.1. A copy of each
such license is available at
http://www.opensource.org/licenses/gpl-2.0.php and
http://www.opensource.org/licenses/lgpl-2.1.php

Software
  loader:    version 1.2(2)
  kickstart: version 4.0(4)SV1(1)
  system:    version 4.0(4)SV1(1)
  kickstart image file is:
  kickstart compile time:  4/2/2009 23:00:00
  system image file is:    bootflash:/svs.bin
  system compile time:     4/2/2009 23:00:00 [04/23/2009 09:55:29]
```

```
Hardware
  Cisco Nexus 1000V Chassis ("Virtual Supervisor Module")
  Intel(R) Xeon(R) CPU         with 1034780 kB of memory.
  Processor Board ID T5056893321

  Device name: n1000v
  bootflash:    3897832 kB

Kernel uptime is 0 day(s), 0 hour(s), 2 minute(s), 55 second(s)


plugin
  Core Plugin, Ethernet Plugin
```

Verifying the Running Configuration

Use this procedure to view the configuration currently running on the system.

Before You Begin

Before beginning this procedure, you must be logged in to the CLI in any command mode.

Procedure

	Command or Action	Purpose
Step 1	switch# **show running-config**	Displays the versions of system software and hardware that are currently running on the switch.

```
switch# show running-config
version 4.0(4)SV1(1)
username admin password 5 $1$ouYE/pRM$/j4/2lg3RMd4PhE.1Z1S.0  role network-admin
telnet server enable
ip domain-lookup
ip host switch 172.23.232.141
kernel core target 0.0.0.0
kernel core limit 1
system default switchport
vem 3
  host vmware id 89130a67-e66b-3e57-ad25-547750bcfc7e
snmp-server user admin network-admin auth md5 0xb64ad6879970f0e57600c443287a79f0 priv
0xb64ad6879970f0e57600c443287a79f0 localizedkey
snmp-server enable traps license
vrf context management
  ip route 0.0.0.0/0 172.23.232.1
switchname switch
vlan 1,260-269
vdc n1000v id 1
  limit-resource vlan minimum 16 maximum 513
  limit-resource monitor-session minimum 0 maximum 64
  limit-resource vrf minimum 16 maximum 8192
  limit-resource port-channel minimum 0 maximum 256
  limit-resource u4route-mem minimum 32 maximum 80
  limit-resource u6route-mem minimum 16 maximum 48
port-profile Unused_Or_Quarantine_Uplink
  description "Port-group created for Nexus1000V internal usage. Do not use."
  capability uplink
  vmware port-group
  shutdown
  state enabled
port-profile Unused_Or_Quarantine_Veth
  description "Port-group created for Nexus1000V internal usage. Do not use."
  vmware port-group
```

```
  shutdown
  state enabled
port-profile system-uplink
  capability uplink
  vmware port-group
  switchport mode trunk
  switchport trunk allowed vlan 260-261
  no shutdown
  system vlan 260-261
  state enabled
port-profile vm-uplink
  capability uplink
  vmware port-group
  switchport mode access
  switchport access vlan 262
  no shutdown
  state enabled
port-profile data262
  vmware port-group
  switchport access vlan 262
  no shutdown
  state enabled

interface Ethernet3/2
  inherit port-profile system-uplink

interface Ethernet3/3
  inherit port-profile vm-uplink

interface mgmt0
  ip address 172.23.232.141/24

interface control0
line vty
  session-limit 32
boot kickstart bootflash:/kick.bin sup-1
boot system bootflash:/svs.bin sup-1
boot kickstart bootflash:/kick.bin sup-2
boot system bootflash:/svs.bin sup-2
svs-domain
  domain id 141
  control vlan 260
  packet vlan 261
  svs mode L2
svs connection vc
  protocol vmware-vim
  remote hostname 172.23.231.201
  vmware dvs uuid "2c 6f 3d 50 62 f3 7f 4d-dc 00 70 e2 52 77 ca 15" datacenter-name HamiltonDC

  connect

switch#
```

Comparing the Startup and Running Configurations

Before You Begin

Before beginning this procedure, you must be logged in to the CLI in any command mode.

Procedure

	Command or Action	Purpose
Step 1	swtich# **show running-config diff**	Displays the difference between the startup configuration and the running configuration currently on the switch.

```
switch# show running-config diff
*** Startup-config
--- Running-config
***************
*** 1,7 ****
  version 4.0(1)
- system mem-thresholds minor 0 severe 0 critical 0
  vrf context management
    ip route 0.0.0.0/0 10.78.1.1
  switchname DCOS-112-S10
  vlan 80,110-111,150,160,170
  vdc DCOS-112-S10 id 1
--- 1,6 ----
***************
*** 116,131 ****
    ip address 10.78.1.112/24
  interface Vethernet49
    inherit port-profile vlan160
- interface Vethernet65
-   inherit port-profile vlan170
  interface Vethernet50
    inherit port-profile vlan160
  interface Vethernet66
    inherit port-profile vlan170
  ip route 0.0.0.0/0 10.78.1.1
  vlan 80-80, 110-110, 111-111, 150-150, 160-160, 170-170

--- 115,130 ----
    ip address 10.78.1.112/24

  interface Vethernet49
    inherit port-profile vlan160

  interface Vethernet50
    inherit port-profile vlan160

+ interface Vethernet65
+   inherit port-profile vlan170
+
  interface Vethernet66
    inherit port-profile vlan170
  ip route 0.0.0.0/0 10.78.1.1
  vlan 80-80, 110-110, 111-111, 150-150, 160-160, 170-170

switch#
```

Verifying the Interface Configuration

This section includes the following procedures:

- Verifying a Brief Version of an Interface Configuration
- Verifying a Detailed Version of an Interface Configuration
- Verifying a Brief Version of all Interfaces

- Verifying the Running Configuration for all Interfaces

Verifying the Interface Configuration in a Brief Version

Before You Begin

Before beginning this procedure, you must be logged in to the CLI in any command mode.

Procedure

	Command or Action	Purpose
Step 1	switch# **show interface** {*type*} {*name*} **brief**	Displays a brief version of information about the specified interface configuration.

```
switch# show interface mgmt 0 brief

--------------------------------------------------------------------------------
Port   VRF          Status IP Address                              Speed    MTU
--------------------------------------------------------------------------------
mgmt0  --           up     10.78.1.63                              1000     1500
```

Verifying an Interface Configuration in a Detailed Version

Before You Begin

Before beginning this procedure, you must be logged in to the CLI in any command mode.

Procedure

	Command or Action	Purpose
Step 1	switch# **show interface** {*type*} {*name*}	Displays details about the specified interface configuration.

```
switch# show interface mgmt 0
mgmt0 is up
  Hardware: Ethernet, address: 0050.5689.3321 (bia 0050.5689.3321)
  Internet Address is 172.23.232.141/24
  MTU 1500 bytes, BW 1000000 Kbit, DLY 10 usec,
     reliability 255/255, txload 1/255, rxload 1/255
  Encapsulation ARPA
  full-duplex, 1000 Mb/s
  Auto-Negotiation is turned on
    4961 packets input, 511995 bytes
    0 multicast frames, 0 compressed
    0 input errors, 0 frame, 0 overrun, 0 fifo
    245 packets output, 35853 bytes
    0 underrun, 0 output errors, 0 collisions
    0 fifo, 0 carrier errors
```

Verifying All Interfaces in a Brief Version

Before You Begin

Before beginning this procedure, you must be logged in to the CLI in any command mode.

Procedure

	Command or Action	Purpose
Step 1	switch# **show interface brief**	Displays a brief version of all interface configurations on your system.

```
switch# show interface brief

--------------------------------------------------------------------------------
Port     VRF          Status IP Address                       Speed    MTU
--------------------------------------------------------------------------------
mgmt0     --           up     172.23.232.141                   1000     1500

--------------------------------------------------------------------------------
Ethernet      VLAN   Type Mode   Status  Reason                   Speed     Port
Interface                                                                   Ch #
--------------------------------------------------------------------------------
Eth3/2        1      eth  trunk  up      none                       1000(D) --
Eth3/3        262    eth  access up      none                     1000(D) --
--------------------------------------------------------------------------------
Interface     VLAN   Type Mode   Status  Reason                   MTU
--------------------------------------------------------------------------------
Veth81        630    virt access up      none                     1500
Veth82        630    virt access up      none                     1500
Veth224       631    virt access up      none                     1500
Veth225       1      virt access nonPcpt nonParticipating         1500
switch#
```

Verifying the Running Configuration for all Interfaces

The output for the command, **show running-config interface** differs from the output of the **show interface** command.

Before You Begin

Before beginning this procedure, you must be logged in to the CLI in any command mode.

Procedure

	Command or Action	Purpose
Step 1	switch# **show running-config interface**	Displays the running configuration for all interfaces on your system.

```
switch# show running-config interface
version 4.0(1)
```

```
interface Ethernet3/2
  switchport
  inherit port-profile sftrunk

interface Ethernet3/6
  switchport
  inherit port-profile vmuplink

interface Ethernet6/2
  switchport
  inherit port-profile alluplink

interface mgmt0
  ip address 10.78.1.63/24

interface Vethernet81
  inherit port-profile vm630

interface Vethernet82
  inherit port-profile vm630

interface Vethernet224
  inherit port-profile vm631

interface Vethernet225

switch#
```

Saving a Configuration

Use this procedure to save the running configuration to the startup configuration so that your changes are retained in the configuration file the next time you start the system.

Before You Begin

Before beginning this procedure, you must be logged in to the CLI in any command mode.

Procedure

	Command or Action	Purpose
Step 1	switch# **copy running-config startup-config**	(Optional) Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

```
switch# copy run start
[########################################] 100%
switch#
```

Erasing a Configuration

Use this procedure to erase a startup configuration.

Caution The **write erase** command erases the entire startup configuration with the exception of loader functions, the license configuration, and the certificate extension configuration

Before You Begin

Before beginning this procedure, you must be logged in to the CLI in any command mode.

Procedure

	Command or Action	Purpose
Step 1	switch# **write erase** [**boot** | **debug**]	The existing startup configuration is completely erased and all settings revert to their factory defaults. The running configuration is not affected. The following parameters are used with this command: • boot: Erases the boot variables and the mgmt0 IP configuration. • debug: Erases the debug configuration.

```
switch# write erase debug
```

Feature History for Configuration Management

Feature Name	Releases	Feature Information
Configuration Management	4.0(4)SV1(1)	This feature was introduced.

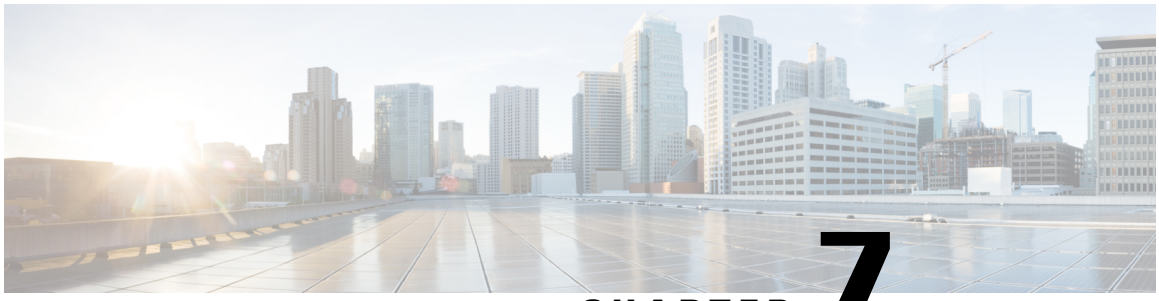

CHAPTER 7

Working with Files

This chapter contains the following sections:

- Information About Files, page 55
- Navigating the File System, page 56
- Copying and Backing Up Files, page 59
- Creating a Directory, page 61
- Removing an Existing Directory, page 61
- Moving Files, page 62
- Deleting Files or Directories, page 63
- Compressing Files, page 63
- Uncompressing Files, page 64
- Directing Command Output to a File, page 65
- Verifying a Configuration File before Loading, page 66
- Rolling Back to a Previous Configuration , page 66
- Displaying Files, page 67
- Feature History for File Management, page 69

Information About Files

The Cisco Nexus 1000V file system provides a single interface to all the file systems that the Cisco Nexus 1000V switch uses, including:

- Flash memory file systems
- Network file systems (TFTP and FTP)
- Any other endpoint for reading or writing data (such as the running configuration)

Navigating the File System

This section describes how to navigate the file system and includes the following topics:

- Specifying File Systems
- Identifying the Directory You are Working From
- Changing Your Directory
- Listing the Files in a File System
- Identifying Available File Systems for Copying Files
- Using Tab Completion

Specifying File Systems

The syntax for specifying a file system is *<file system name>*:[//*server*/]. The following table describes file system syntax.

File System Name	Server	Description
bootflash	sup-active sup-local sup-1 module-1	Internal memory located on the active supervisor used for storing system images, configuration files, and other miscellaneous files. Cisco Nexus 1000V CLI defaults to the bootflash: file system
	sup-standby sup-remote sup-2 module-2	Internal memory located on the standby supervisor used for storing system images, configuration files, and other miscellaneous files.
volatile	—	Volatile random-access memory (VRAM) located on a supervisor module used for temporary or pending changes.

Identifying the Directory You are Working From

You can display the directory name of your current CLI location.

Before You Begin

Before beginning this procedure, you must be logged in to the CLI in any command mode.

Procedure

	Command or Action	Purpose
Step 1	switch# **pwd**	Displays the present working directory.

```
switch# pwd
bootflash:
```

Changing Your Directory

You can change your location in the CLI, from one directory or file system to another.

Cisco Nexus 1000V CLI defaults to the bootflash: file system.

Note Any file saved in the volatile: file system is erased when the switch reboots.

Before You Begin

Before beginning this procedure, you must be logged in to the CLI in any command mode.

Procedure

	Command or Action	Purpose
Step 1	switch# **pwd**	Displays the directory name of your current CLI location.
Step 2	switch# **cd directory name** • switch# **cd bootflash:** Changes your CLI location to the root directory on the bootflash: file system. • switch# **cd bootflash:mydir** Changes your CLI location to the mydir directory that resides in the bootflash: file system. • switch# **cd mystorage** Changes your CLI location to the mystorage directory that resides within the current directory. If the current directory is bootflash: mydir, this command changes the current directory to bootflash: mydir/mystorage.	Changes your CLI location to the root directory on the bootflash: file system.

```
switch# pwd
volatile:
switch# cd bootflash:

switch# pwd
volatile:
switch# cd bootflash:mydir
switch# pwd
volatile:
switch# cd mystorage
```

Listing the Files in a File System

Procedure

	Command or Action	Purpose
Step 1	switch# **dir** [*directory* | *filename*]	Displays the contents of a directory or file.

```
switch# dir lost+found/
      49241     Jul 01 09:30:00 2008  diagclient_log.2613
      12861     Jul 01 09:29:34 2008  diagmgr_log.2580
         31     Jul 01 09:28:47 2008  dmesg
       1811     Jul 01 09:28:58 2008  example_test.2633
         89     Jul 01 09:28:58 2008  libdiag.2633
      42136     Jul 01 16:34:34 2008  messages
         65     Jul 01 09:29:00 2008  otm.log
        741     Jul 01 09:29:07 2008  sal.log
         87     Jul 01 09:28:50 2008  startupdebug

Usage for log://sup-local
   51408896 bytes used
  158306304 bytes free
  209715200 bytes total
switch#
```

Identifying Available File Systems for Copying Files

Before You Begin

Before beginning this procedure, you must be logged in to the CLI in EXEC mode.

Procedure

	Command or Action	Purpose
Step 1	switch# **copy ?**	Displays the source file systems available to the copy command.
Step 2	switch# **copy filename ?**	Displays the destination file systems available to the copy command for a specific file.

```
switch# copy ?
bootflash: Select source filesystem
core: Select source filesystem
debug: Select source filesystem
ftp: Select source filesystem
licenses Backup license files
log: Select source filesystem
nvram: Select source filesystem
running-config Copy running configuration to destination
scp: Select source filesystem
sftp: Select source filesystem
startup-config Copy startup configuration to destination
system: Select source filesystem
tftp: Select source filesystem
volatile: Select source filesystem
```

Using Tab Completion

You can have the CLI complete a partial file name in a command.

Procedure

	Command or Action	Purpose
Step 1	switch# **show file** *filesystem name: partial filename* <Tab>	Completes the filename when you type a partial filename and then press Tab and if the characters you typed are unique to a single file. If not, the CLI lists a selection of file names that match the characters that you typed. You can then retype enough characters to make the file name unique; and CLI completes the filename for you.
Step 2	switch# **show file bootflash:c** <Tab>	Completes the file name for you

```
n1000v# show file bootflash: nexus-1000v-
bootflash:nexus-1000v-dplug-mzg.4.0.4.SV1.0.42.bin
bootflash:nexus-1000v-mzg.4.0.4.SV1.0.42.bin
bootflash:nexus-1000v-kickstart-mzg.4.0.4.SV1.0.42.bin
n1000v# show file bootflash:c<Tab>
-----BEGIN RSA PRIVATE KEY-----
MIICXgIBAAKBgQDSq93BrlHcg3bX1jXDMY5c9+yZSST3VhuQBqogvCPDGeLecA+j
...
...
n1000v#
```

Copying and Backing Up Files

You can copy a file, such as a configuration file, to save it or reuse it at another location. If your internal file systems are corrupted, you could potentially lose your configuration. Save and back up your configuration files periodically. Also, before installing or migrating to a new software configuration, back up the existing configuration files.

Note Use the **dir** command to ensure that enough space is available in the destination file system. If enough space is not available, use the **delete** command to remove unneeded files.

Before You Begin

Before beginning this procedure, you must be of the following:

- You are logged in to the CLI through a Telnet, or SSH connection.
- Your device has a route to the destination if you are copying to a remote location. Your device and the remote destination must be in the same subnetwork if you do not have a router or default gateway to route traffic between subnets.
- Your device has connectivity to the destination. Use the **ping** command to be sure.
- The source configuration file is in the correct directory on the remote server.
- The permissions on the source file are set correctly. Permissions on the file should be set to world-read.

Procedure

	Command or Action	Purpose
Step 1	switch# **copy** [*source filesystem:*] *filename* [*destination filesystem*:] *filename* • switch# **copy system:running-config** *system* **run.cfg** Saves a copy of the running configuration to a remote switch. • switch# **copy bootflash:** *system_image* **bootflash:**//*sup-standby/system_image* Copies a file from bootflash in the active supervisor module to bootflash in the standby supervisor module. • switch# **copy system:running-config bootflash:***config* Copies a running configuration to the bootflash: file system. • switch# **copy scp:**[//[*username@*]*server*][/*path*]/*filename* Copies a source or destination URL for a network server that supports Secure Shell (SSH) and accepts copies of files using the secure copy protocol (scp). • switch# **copy sftp:**[//[*username@*]*server*][/*path*]/*filename*/// Copies a source or destination URL for an SSH FTP (SFTP) network server • switch# **copy system:running-config** *bootflash:my-config* Places a back up copy of the running configuration on the bootflash: file system (ASCII file). • switch# **copy bootflash:** *filename* **bootflash:***directory*/*filename* Copies the specified file from the root directory of the bootflash: file system to the specified directory. • switch# **copy** *filename directory*/*filename* Copies a file within the current file system.	Copies a file from the specified source location to the specified destination location.

	Command or Action	Purpose
	• switch# **copy tftp:**[*//server*[*:port*]][*/path*]*/filename* Copies the source file to the running configuration on the switch, and configures the switch as the file is parsed line by line.	

```
switch# copy system:running-config tftp://10.10.1.1/home/configs/switch3-run.cfg
switch# copy bootflash:system_image bootflash://sup-2/system_image
switch# copy system:running-config bootflash:my-config
switch# copy scp://user@10.1.7.2/system-image bootflash:system-image
switch# copy sftp://172.16.10.100/myscript.txt volatile:myscript.txt
switch# copy system:running-config bootflash:my-config
switch# copy bootflash:samplefile bootflash:mystorage/samplefile

switch# copy samplefile mystorage/samplefile
switch# copy tftp://10.10.1.1/home/configs/switch3-run.cfg system:running-config
```

Creating a Directory

Procedure

	Command or Action	Purpose
Step 1	switch# **mkdir** *directory name* • **mkdir** {**bootflash:** | **debug:** | **volatile:**} Specifies the directory name you choose: ◦ bootflash: ◦ debug: ◦ volatile: • switch# **mkdir bootflash:***directory name* Creates a directory that you name in the bootflash: directory.	Creates a directory at the current directory level.

```
switch# mkdir test
switch# mkdir bootflash:test
```

Removing an Existing Directory

This command is valid only on Flash file systems.

Before You Begin

Before beginning this procedure, be sure of the following:

- You are logged in to the CLI.
- The directory you want to remove is empty.

Procedure

	Command or Action	Purpose
Step 1	switch# **rmdir** [**filesystem:**[//**module**/]]*directory* • switch# **rmdir** *directory* Removes the specified directory at the current directory level. • switch# **rmdir** {**bootflash:** | **debug:** | **volatile:**} *directory* Removes a directory from the file system.	Removes a directory. The directory name is case sensitive.

```
switch# rmdir test
switch# rmdir bootflash:test
```

Moving Files

Caution If a file with the same name already exists in the destination directory, that file is overwritten by the moved file.

The move will not complete if there is not enough space in the destination directory.

Before You Begin

Before beginning this procedure, you must be logged in to the CLI.

Procedure

	Command or Action	Purpose
Step 1	switch# **move** {*source path and filename*} {*destination path and filename*} • switch# **move** *filename path*/*filename* Moves the file from one directory to another in the current file system.	Moves the file from one directory to another in the same file system (bootflash:).

```
switch# move bootflash:samplefile bootflash:mystorage/samplefile
switch# move samplefile mystorage/samplefile
```

Deleting Files or Directories

You can delete files or directories on a Flash Memory device.

Caution When deleting, if you specify a directory name instead of a file name, the entire directory and its contents are deleted.

Before You Begin

You must understand the following information:

- When you delete a file, the software erases the file.
- If you attempt to delete the configuration file or image specified by the CONFIG_FILE or BOOTLDR environment variable, the system prompts you to confirm the deletion.
- If you attempt to delete the last valid system image specified in the BOOT environment variable, the system prompts you to confirm the deletion.

Procedure

	Command or Action	Purpose
Step 1	switch# **delete** [**bootflash:** | **debug:** | **log:** | **volatile:**] *filename* or *directory name* • switch# **delete** *filename* Deletes the named file from the current working directory. • switch# **delete bootflash:***directory name* Deletes the named directory and its contents.	Deletes a specified file or directory.

```
switch# delete bootflash:dns_config.cfg
switch# delete dns_config.cfg
```

Compressing Files

Before You Begin

Before beginning this procedure, you must be logged in to the CLI.

Procedure

	Command or Action	Purpose
Step 1	switch# **show** *command* > [*path*] *filename*	Directs the **show** command output to a file.

	Command or Action	Purpose
Step 2	switch# **dir**	Displays the contents of the current directory, including the new file created in the first step.
Step 3	switch# **gzip** [*path*] *filename*	Compresses the specified file
Step 4	switch# **dir**	Displays the contents of the specified directory, including the newly-compressed file. Shows the difference in the file size of the newly-compressed file.

```
switch# show system internal l2fm event-history errors >errorsfile
switch# dir
       2687     Jul 01 18:17:20 2008  errorsfile
      16384     Jun 30 05:17:51 2008  lost+found/
       4096     Jun 30 05:18:29 2008  routing-sw/
         49     Jul 01 17:09:18 2008  sample_test.txt
    1322843     Jun 30 05:17:56 2008  nexus-1000v-dplug-mzg.4.0.4.SV1.0.42.bin
   21629952     Jun 30 05:18:02 2008  nexus-1000v-kickstart-mzg.4.0.4.SV1.0.42.bin
   39289400     Jun 30 05:18:14 2008  nexus-1000v-mzg.4.0.4.SV1.0.42.bin

Usage for bootflash://
  258408448 bytes used
 2939531264 bytes free
 3197939712 bytes total
switch# gzip bootflash:errorsfile
switch# dir
       1681     Jun 30 05:21:08 2008  cisco_svs_certificate.pem
        703     Jul 01 18:17:20 2008  errorsfile.gz
      16384     Jun 30 05:17:51 2008  lost+found/
       4096     Jun 30 05:18:29 2008  routing-sw/
         49     Jul 01 17:09:18 2008  sample_test.txt
    1322843     Jun 30 05:17:56 2008  nexus-1000v-dplug-mzg.4.0.4.SV1.0.42.bin
   21629952     Jun 30 05:18:02 2008  nexus-1000v-kickstart-mzg.4.0.4.SV1.0.42.bin
   39289400     Jun 30 05:18:14 2008  nexus-1000v-mzg.4.0.0.S1.0.34.bin

Usage for bootflash://
  258408448 bytes used
 2939531264 bytes free
 3197939712 bytes total
switch#
```

Uncompressing Files

You can uncompress (unzip) a specified file that is compressed using LZ77 coding.

Before You Begin

Before beginning this procedure, you must be logged in to the CLI.

Procedure

	Command or Action	Purpose
Step 1	switch# **gunzip** [*path*] *filename*	Uncompresses the specified file. The filename is case sensitive .

	Command or Action	Purpose
Step 2	switch# **dir**	Displays the contents of a directory, including the newly uncompressed file.

```
switch# gunzip bootflash:errorsfile.gz
switch# dir bootflash:
       2687     Jul 01 18:17:20 2008  errorsfile
      16384     Jun 30 05:17:51 2008  lost+found/
       4096     Jun 30 05:18:29 2008  routing-sw/
         49     Jul 01 17:09:18 2008  sample_test.txt
    1322843     Jun 30 05:17:56 2008  nexus-1000v-dplug-mzg.4.0.0.SV1.0.42.bin
   21629952     Jun 30 05:18:02 2008  nexus-1000v-kickstart-mzg.4.0.4.SV1.0.42.bin
   39289400     Jun 30 05:18:14 2008  nexus-1000v-mzg.4.0.0.SV1.0424.bin

Usage for bootflash://sup-local
  258408448 bytes used
 2939531264 bytes free
 3197939712 bytes total
DCOS-112-R5#
```

Directing Command Output to a File

Procedure

	Command or Action	Purpose
Step 1	switch# **show running-config >** [*path* | *filename*] • switch# **show running-config > volatile:***filename* Directs the output of the command, **show running-config**, to the specified filename on the volatile file system. • switch# **show running-config > bootflash:***filename* Directs the output of the command, **show running-config**, to the specified file in bootflash. • switch# **show running-config > tftp:**// *ipaddress*/*filename* Directs the output of the command, **show running-config**, to the specified file on a TFTP server. • switch# **show interface >** *filename* Directs the output of the command, **show interface**, to the specified file at the same directory level, for example, in bootflash.	Directs the output of the command, **show running-config**, to a path and filename.

```
switch# show running-config > volatile:switch1-run.cfg
switch# show running-config > bootflash:switch2-run.cfg
switch# show running-config > tftp://10.10.1.1/home/configs/switch3-run.cfg
switch# show interface > samplefile
```

Verifying a Configuration File before Loading

You can verify the integrity of an image before loading it. This command can be used for both the system and kickstart images.

Procedure

	Command or Action	Purpose
Step 1	switch# **copy** *source path* and *file* **system:running-config**	Copies the source file to the running configuration on the switch, and configures the switch as the file is parsed line by line.
Step 2	switch# **show version image** [**bootflash:** | **modflash:** |**volatile:**]	Validates the specified image. bootflash:—specifies bootflash as the directory name. volatile:—Specifies volatile as the directory name. modflash:—Specifies modflash as the directory name.

```
switch# copy tftp://10.10.1.1/home/configs/switch3-run.cfg system:running-config
switch# show version image bootflash:isan.bin
  image name: nexus-1000v-mz.4.0.4.SV1.1.bin
  bios:       version unavailable
  system:     version 4.0(4)SV1(1)
  compiled:   4/2/2009 23:00:00 [04/23/2009 09:55:29]
```

Rolling Back to a Previous Configuration

You can recover your configuration from a previously saved version.

Note Each time you use a **copy running-config startup-config** command, a binary file is created and the ASCII file is updated. A valid binary configuration file reduces the overall boot time significantly. A binary file cannot be uploaded, but its contents can be used to overwrite the existing startup configuration. The **write erase** command clears the binary file.

Procedure

	Command or Action	Purpose
Step 1	switch# **copy running-config bootflash:** {*filename*}	Reverts to a snapshot copy of a previously saved running configuration (binary file).
Step 2	switch# **copy bootflash:** {*filename*} **startup-config**	Reverts to a configuration copy that was previously saved in the bootflash: file system (ASCII file).

```
switch# copy running-config bootflash:June03-Running
switch# copy bootflash:my-config startup-config
```

Displaying Files

This section describes how to display information about files and includes the following procedures:

- Displaying File Contents
- Displaying Directory Contents
- Displaying File Checksums
- Displaying the Last Lines in a File

Displaying File Contents

Before You Begin

Before beginning this procedure, you must be logged in to the CLI.

Procedure

	Command or Action	Purpose
Step 1	switch# **show file** [**bootflash:** | **debug**: | **volatile:**] *filename*	Displays the contents of the specified file.

```
switch# show file bootflash:sample_test.txt
config t
Int veth1/1
no shut
end
show int veth1/1

switch#
```

Displaying Directory Contents

You can display the contents of a directory or file system.

Before You Begin

Before beginning this procedure, you must be logged in to the CLI.

Procedure

	Command or Action	Purpose
Step 1	switch# **pwd**	Displays the present working directory.
Step 2	switch# **dir**	Displays the contents of the directory.

```
switch# pwd
bootflash:
switch# dir

Usage for volatile://
         0 bytes used
   20971520 bytes free
   20971520 bytes total
switch#
```

Displaying File Checksums

You can display checksums for checking file integrity.

Procedure

	Command or Action	Purpose
Step 1	switch# **show file** *filename* [**cksum** | **md5sum**]**show file** {**bootflash:** | **volatile:** | **debug:**} *filename* [**cksum** | **md5sum**]	Provides the checksum or MD5 checksum of the file for comparison with the original file. Provides the Message-Digest Algorithm 5 (MD5) checksum of the file. MD5 is an electronic fingerprint for the file.

```
switch# show file bootflash:cisco_svs_certificate.pem cksum
266988670
switch# show file bootflash:cisco_svs_certificate.pem md5sum
d3013f73aea3fda329f7ea5851ae81ff
```

Displaying the Last Lines in a File

Before You Begin

Before beginning this procedure, you must be logged in to the CLI in EXEC mode.

Procedure

	Command or Action	Purpose
Step 1	switch# **tail** {*path*}[*filename*] {*Number of lines*}	Displays the requested number of lines from the end of the specified file.

	Command or Action	Purpose
		The range for the number of lines is from 0 to 80.

```
switch# tail bootflash:errorsfile 5

20) Event:E_DEBUG, length:34, at 171590 usecs after Tue Jul  1 09:29:05 2008
    [102] main(326): stateless restart
```

Feature History for File Management

Feature Name	Releases	Feature Information
File Management	4.0(4)SV1(1)	This feature was introduced.

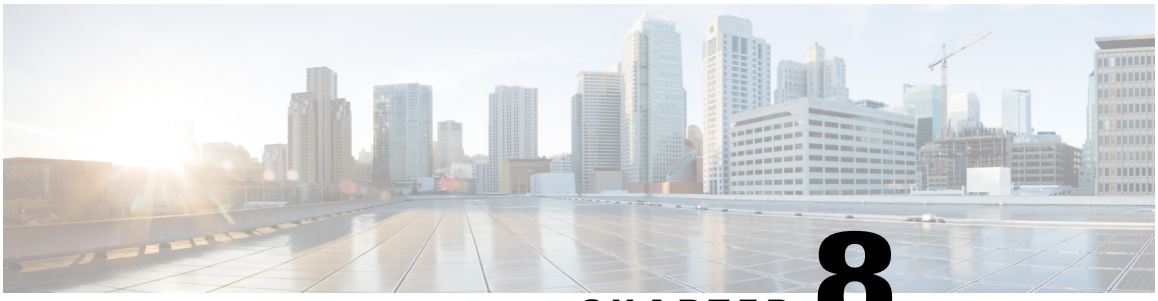

CHAPTER 8

Managing Users

This chapter contains the following sections:

- Information About User Management, page 71
- Displaying Current User Access , page 71
- Sending a Message to Users, page 72
- Feature History for User Management, page 72

Information About User Management

You can identify the users currently connected to the device and send a message to either a single user or all users.

For information about creating user accounts and assigning user roles, see the *Cisco Nexus 1000V Security Configuration Guide* .

Displaying Current User Access

You can display all users currently accessing the switch.

Before You Begin

Before beginning this procedure, you must be logged in to the CLI.

Procedure

	Command or Action	Purpose
Step 1	switch# **show users**	Displays a list of users who are currently accessing the system.

```
switch# show users
NAME     LINE         TIME         IDLE          PID COMMENT
```

```
admin    pts/0        Jul  1 04:40 03:29        2915 (::ffff:64.103.145.136)
admin    pts/2        Jul  1 10:06 03:37        6413 (::ffff:64.103.145.136)
admin    pts/3        Jul  1 13:49   .          8835 (171.71.55.196)*
switch#
```

Sending a Message to Users

You can send a message to all active CLI users currently using the system.

Before You Begin

Before beginning this procedure, you must be logged in to the CLI.

Procedure

	Command or Action	Purpose
Step 1	switch# **send** {*session device*} *line*	Sends a message to users currently logged in to the system. • The *session*argument sends the message to a specified pts/tty device type. • The *device* argument specifies the device type. • The *line* argument is a message of up to 80 alphanumeric characters in length.

```
switch# send Hello. Shutting down the system in 10 minutes.

Broadcast Message from admin@switch
        (/dev/pts/34) at 8:58 ...

Hello. Shutting down the system in 10 minutes.


switch#
```

Feature History for User Management

Feature Name	Releases	Feature Information
User Management	4.0(4)SV1(1)	This feature was introduced.

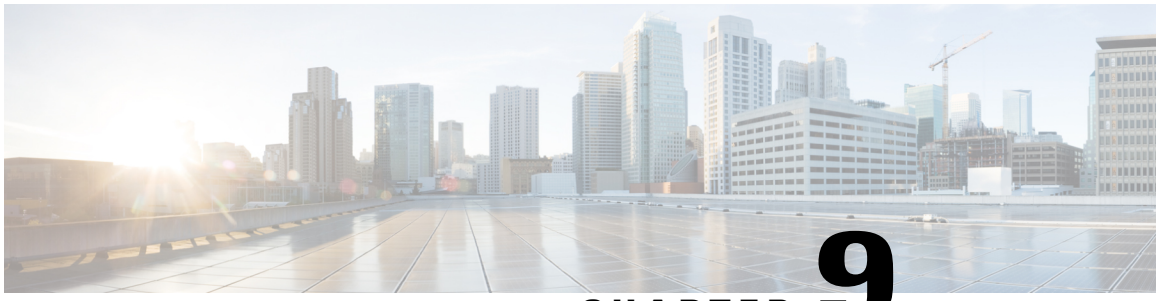

CHAPTER 9

Configuring NTP

This chapter contains the following sections:

- Information about NTP, page 73
- Prerequisites for NTP, page 75
- Guidelines and Limitations for NTP, page 75
- Default Settings for NTP, page 75
- Configuring an NTP Server and Peer, page 75
- Verifying the NTP Configuration, page 76
- NTP Example Configuration, page 77
- Feature History for NTP, page 77

Information about NTP

The Network Time Protocol (NTP) synchronizes timekeeping among a set of distributed time servers and clients. This synchronization allows you to correlate events when you receive system logs and other time-specific events from multiple network devices.

NTP uses the User Datagram Protocol (UDP) as its transport protocol. All NTP communication uses the Universal Time Coordinated (UTC) standard. An NTP server usually receives its time from an authoritative time source, such as a radio clock or an atomic clock attached to a time server. NTP distributes this time across the network. NTP is extremely efficient; no more than one packet per minute is necessary to synchronize two machines to within a millisecond of each other.

NTP uses a stratum to describe how many NTP hops away that a network device is from an authoritative time source. A stratum 1 time server has an authoritative time source (such as an atomic clock) directly attached to the server. A stratum 2 NTP server receives its time through NTP from a stratum 1 NTP server, which in turn connects to the authoritative time source.

NTP avoids synchronizing to a network device that may keep accurate time. NTP never synchronizes to a system that is not synchronized itself. NTP compares the time reported by several network devices and does not synchronize to a network device that has a time that is significantly different than the others, even if its stratum is lower.

Cisco NX-OS cannot act as a stratum 1 server. You cannot connect to a radio or atomic clock. We recommend that the time service that you use for your network is derived from the public NTP servers available on the Internet.

If the network is isolated from the Internet, Cisco NX-OS allows you to configure a network device so that the device acts as though it is synchronized through NTP, when it has determined the time by using other means. Other network devices can then synchronize to that network device through NTP.

Note NTP supports IPv4 addresses.

NTP Peers

NTP allows you to create a peer relationship between two networking devices. A peer can provide time on its own or connect to an NTP server. If both the local device and the remote peer point to different NTP servers, your NTP service is more reliable. The local device maintains the right time even if its NTP server fails by using the time from the peer.

The following figure shows a network with two NTP stratum 2 servers and two switches.

Figure 2: NTP Peer and Server Association

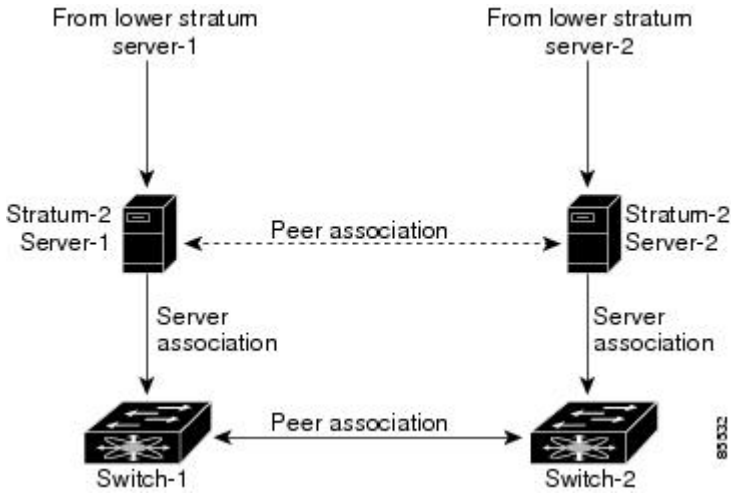

In this configuration, switch 1 and switch 2 are NTP peers. switch 1 uses stratum-2 server 1, while switch 2 uses stratum-2 server 2. If stratum-2 server-1 fails, switch 1 maintains the correct time through its peer association with switch 2.

High Availability

Stateless restarts are supported for NTP. After a reboot or a supervisor switchover, the running configuration is applied.

You can configure NTP peers to provide redundancy in case an NTP server fails.

Prerequisites for NTP

You must have connectivity to at least one server that is running NTP.

Guidelines and Limitations for NTP

- You should have a peer association with another device only when you are sure that your clock is reliable (which means that you are a client of a reliable NTP server).
- A peer configured alone takes on the role of a server and should be used as a backup. If you have two servers, you can configure several devices to point to one server and the remaining devices point to the other server. You can then configure a peer association between these two servers to create a more reliable NTP configuration.
- If you only have one server, you should configure all the devices as clients to that server.
- You can configure up to 64 NTP entities (servers and peers).

Default Settings for NTP

Parameter	Default
NTP	Enabled

Configuring an NTP Server and Peer

You can configure NTP using IPv4 addresses or domain name server (DNS) names.

Before You Begin

Before beginning this procedure, you must be logged in to the CLI in EXEC mode.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Places you in global configuration mode.
Step 2	switch(config)# **ntp server** {*ip-address* | *dns-name*}	Forms an association with a server.
Step 3	switch(config)# **ntp peer** {*ip-address* | *dns-name*}	Forms an association with a peer. You can specify multiple peer associations.
Step 4	switch(config)# **show ntp peers**	(Optional) Displays the configured server and peers.

	Command or Action	Purpose
		Note A domain name is resolved only when you have a DNS server configured.
Step 5	switch(config)# **copy running-config startup-config**	(Optional) Saves the running configuration persistently through reboots and restarts by copying it to the startup configuration.

```
switch# configure terminal
switch(config)# ntp server 192.0.2.10
switch(config# ntp peer 2001:0db8::4101
```

Clearing NTP Sessions

Command	Purpose
clear ntp session	Clears the NTP sessions.

Clearing NTP Statistics

Command	Purpose
clear ntp statistics	Clears the NTP sessions.

Verifying the NTP Configuration

Use one of the following commands to verify the configuration:

Command	Purpose
show ntp peer-status	Displays the status for all NTP servers and peers.
show ntp peers	Displays all the NTP peers.
show ntp statistics {**io** | **local** | **memory** | peer {*ip-address* | *dns-name*}	Displays the NTP statistics.

NTP Example Configuration

This example configures an NTP server:

Procedure

Step 1 switch# **configure terminal**
Enters global configuration mode.

Step 2 **ntp server 192.0.2.10**
Configures an NTP server.

Feature History for NTP

Feature Name	Releases	Feature Information
NTP	4.0(4)SV1(1)	This feature was introduced.

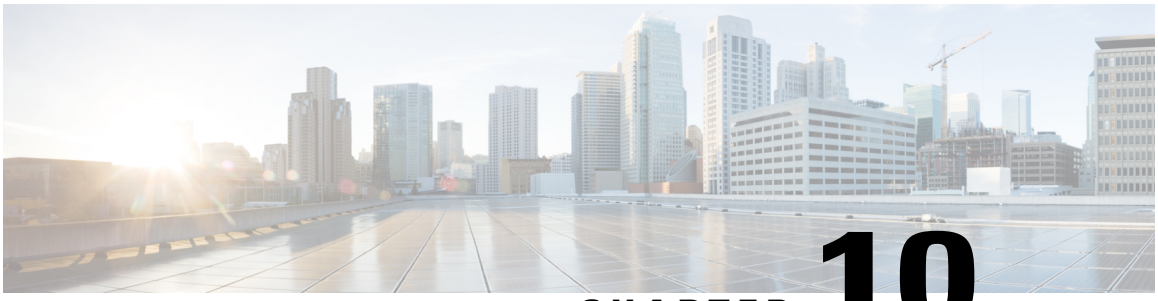

CHAPTER 10

Configuring Local SPAN and ERSPAN

This chapter contains the following sections:

- Information About SPAN and ERSPAN, page 79
- Guidelines and Limitations for SPAN, page 83
- Default Settings for SPAN, page 84
- Configuring SPAN, page 84
- Verifying the SPAN Configuration, page 98
- Configuration Example for an ERSPAN Session, page 98
- Feature History for SPAN and ERSPAN, page 100

Information About SPAN and ERSPAN

The Switched Port Analyzer (SPAN) feature (sometimes called port mirroring or port monitoring) allows network traffic to be analyzed by a network analyzer such as a Cisco SwitchProbe or other Remote Monitoring (RMON) probes.

SPAN allows you to monitor traffic on one or more ports, or one or more VLANs, and send the monitored traffic to one or more destination ports where the network analyzer is attached.

SPAN Sources

The interfaces from which traffic can be monitored are called SPAN sources. These sources include Ethernet, virtual Ethernet, port-channel, port profile, and VLAN. When a VLAN is specified as a SPAN source, all supported interfaces in the VLAN are SPAN sources. When a port profile is specified as a SPAN source, all ports that inherit the port profile are SPAN sources. Traffic can be monitored in the receive direction, the transmit direction, or both directions for Ethernet and virtual Ethernet source interfaces as described by the following:

- Receive source (Rx)—Traffic that enters the switch through this source port is copied to the SPAN destination port.

- Transmit source (Tx)—Traffic that exits the switch through this source port is copied to the SPAN destination port

Characteristics of SPAN Sources

A local SPAN source has these characteristics:

- Can be port type Ethernet, virtual Ethernet, port channel, port profile, or VLAN.
- Cannot be a destination port or port profile
- Can be configured to monitor the direction of traffic —receive, transmit, or both.
- Can be in the same or different VLANs.
- For VLAN SPAN sources, all active ports in the source VLAN are included as source ports.
- Must be on the same host Virtual Ethernet Module (VEM) as the destination port.
- For port profile sources, all active interfaces attached to the port profile are included as source ports.

SPAN Destinations

SPAN destinations refer to the interfaces that monitor source ports.

Characteristics of Local SPAN Destinations

Each local SPAN session must have at least one destination port (also called a monitoring port) that receives a copy of traffic from the source ports or VLANs. A destination port has these characteristics:

- Can be any physical or virtual Ethernet port, a port channel, or a port profile.
- Cannot be a source port or port profile.
- Is excluded from the source list and is not monitored if it belongs to a source VLAN of any SPAN session or a source port profile.
- Receives copies of transmitted and received traffic for all monitored source ports in the same VEM module. If a destination port is oversubscribed, it can become congested. This congestion can affect traffic forwarding on one or more of the source ports.
- Must not be private VLAN mode.
- A destination port can only monitor sources on the same host (VEM)
- Destination ports in access mode receive monitored traffic on all the VLANs.
- Do not receive any forwarded traffic except copies of transmitted and received traffic for all monitored source ports.
- Destination ports in trunk mode receive monitored traffic only on the allowed VLANs in the trunk configuration.

Characteristics of ERSPAN Destinations

- An ERSPAN destination is specified by an IP address.
- In ERSPAN, the source SPAN interface and destination SPAN interface may be on different devices interconnected by an IP network. ERSPAN traffic is Generic Routing Encapsulation (GRE-encapsulated).

Local SPAN

In Local SPAN, the source interface and destination interface are on the same VEM. The network analyzer is attached directly to the SPAN destination port. The SPAN source can be a port, a VLAN interface, or a port profile.The destination can be a port or port profile.

The diagram shows that traffic transmitted by host A is received on the SPAN source interface. Traffic (ACLs, QoS, and so forth) is processed as usual. Traffic is then replicated. The original packet is forwarded on toward host B. The replicated packet is then sent to the destination SPAN interface where the monitor is attached.

Local SPAN can replicate to one or more destination ports. Traffic can be filtered so that only traffic of interest is sent out the destination SPAN interface.

Local SPAN can monitor all traffic received on the source interface including Bridge Protocol Data Unit (BPDU).

Figure 3: Local SPAN

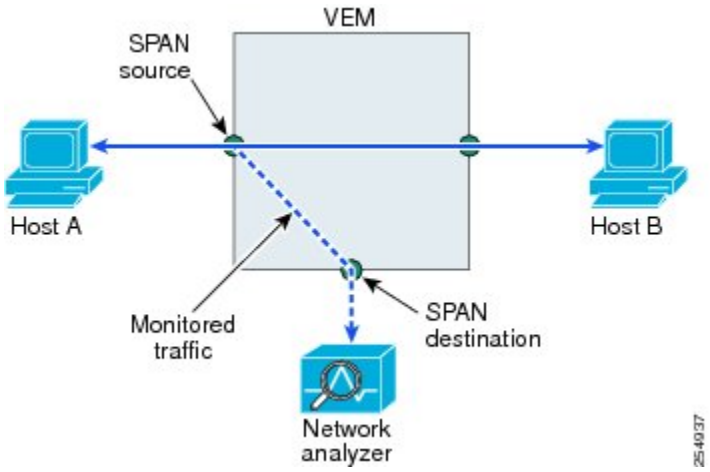

Encapsulated Remote SPAN

Encapsulated remote SPAN (ERSPAN) monitors traffic in multiple network devices across an IP network and sends that traffic in an encapsulated envelope to destination analyzers. In contrast, Local SPAN cannot forward traffic through the IP network. ERSPAN can be used to monitor traffic remotely. ERSPAN sources can be ports, VLANs, or port profiles.

In the following figure, the ingress and egress traffic for Host A are monitored using ERSPAN. Encapsulated ERSPAN packets are routed from Host A through the routed network to the destination device where they

are decapsulated and forwarded to the attached network analyzer. The destination may also be on the same Layer 2 network as the source.

Figure 4: ERSPAN Example

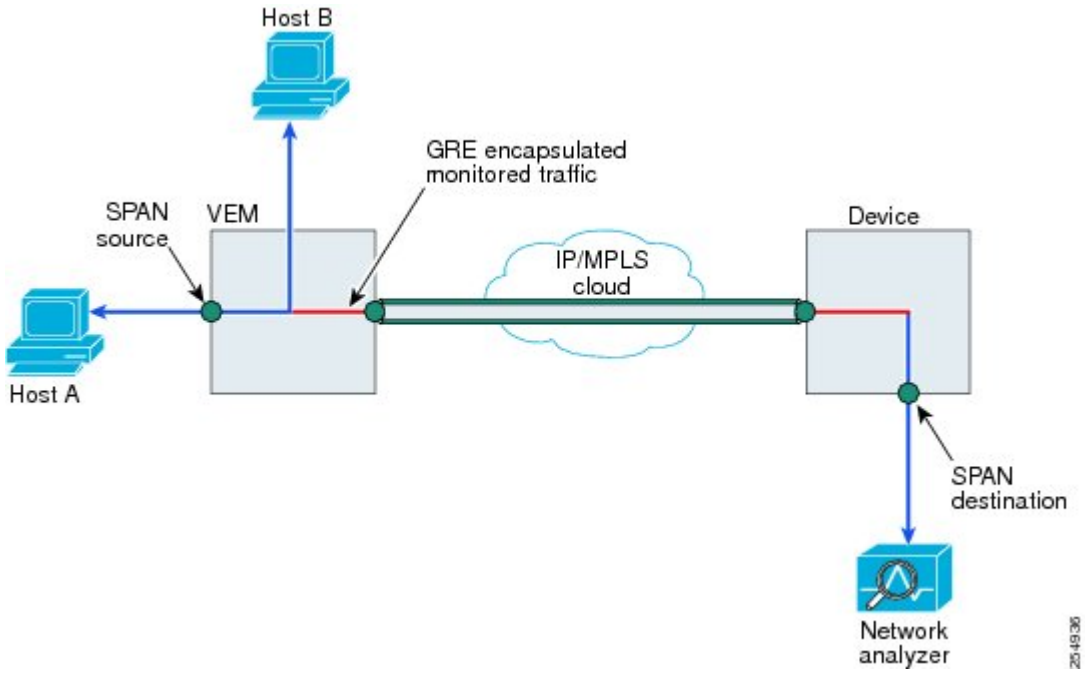

Network Analysis Module

You can also use the Cisco Network Analysis Module (NAM) to monitor ERSPAN data sources for application performance, traffic analysis, and packet header analysis.

To use NAM for monitoring the Cisco Nexus 1000V ERSPAN data sources, see the *Cisco Nexus 1010 Network Analysis Module Installation and Configuration Note.*

SPAN Sessions

You can create up to 64 total SPAN sessions (Local SPAN plus ERSPAN) on the VEM.

You must configure an ERSPAN session ID that is added to the ERSPAN header of the encapsulated frame to differentiate between ERSPAN streams of traffic at the termination box. You can also configure the range of flow ID numbers.

When trunk ports are configured as SPAN sources and destinations, you can filter VLANs to send to the destination ports from among those allowed. Both sources and destinations must be configured to allow the VLANs.

The following figure shows one example of a VLAN-based SPAN configuration in which traffic is copied from three VLANs to three specified destination ports. You can choose which VLANs to allow on each destination port to limit the traffic transmitted. In the figure, the device transmits packets from one VLAN at each destination port. The destinations in this example are trunks on which allowed VLANs are configured.

Note VLAN-based SPAN sessions cause all source packets to be copied to all destinations, whether the packets are required at the destination or not. VLAN traffic filtering occurs at transmit destination ports.

Figure 5: VLAN-based SPAN Configuration Example

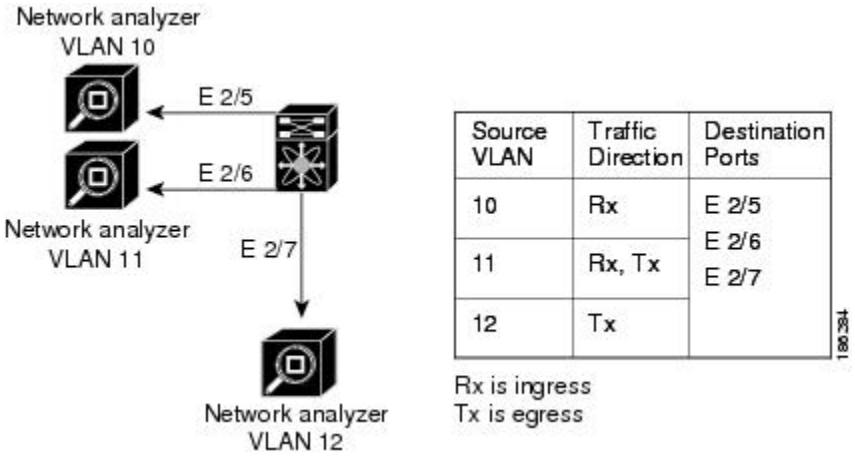

Guidelines and Limitations for SPAN

- A maximum of 64 SPAN sessions (Local SPAN plus ERSPAN) can be configured on the Virtual Supervisor Module (VSM).
- A maximum of 32 source VLANs are allowed in a session.
- A maximum of 32 destination interfaces are allowed for a Local SPAN session.
- A maximum of 8 destination port-profiles are allowed for a Local SPAN session.
- A maximum of 16 source port-profiles are allowed in a session.
- A maximum of 128 source interfaces are allowed in a session.

Caution Overload Potential

To avoid an overload on uplink ports, use caution when configuring ERSPAN, especially when sourcing VLANs. The uplink that the VM kernel uses might get overloaded due to ERSPAN traffic. VSM-VEM communication might also be impacted. For example, when the Nexus 1000V is configured for Layer 3 connectivity, both AIPC traffic and ERSPAN traffic use the same VM kernel NIC.

- A port can be configured in a maximum of four SPAN sessions.
- A port can be a source in a maximum of four SPAN sessions.

- You cannot configure a port as both a source and destination port.
- In a SPAN session, packets that source ports receive may be replicated even though they are not transmitted on the ports. The following are examples of this behavior:
  - Traffic that results from flooding
  - Broadcast and multicast traffic
- For VLAN SPAN sessions switched on the same VLAN with both receive and transmit configured, two packets (one from receive and one from transmit) are forwarded from the destination port.
- ERSPAN traffic might compete with regular data traffic.
- Only ERSPAN source sessions are supported. Destination sessions are not supported.
- When a session is configured through the ERSPAN configuration commands, the session ID and the session type cannot be changed. In order to change them, you must first delete the session and then create a new session.

Default Settings for SPAN

Parameters	Default
State	SPAN sessions are created in the shut state.
Description	blank
Traffic direction for source interface or port profile	both
Traffic direction for source VLAN	receive (ingress or RX)

Configuring SPAN

This section describes how to configure SPAN and includes the following procedures:

- Configuring a Local SPAN Session
- Configuring an ERSPAN Port Profile
- Configuring an ERSPAN Session
- Shutting Down a SPAN Session
- Resuming a SPAN Session
- Verifying the SPAN Configuration

Configuring a Local SPAN Session

This procedure involves creating the SPAN session in monitor configuration mode, and then, optionally, configuring allowed VLANs in interface configuration mode.

It is important to know the following information about SPAN:

- SPAN sessions are created in the shut state by default.
- When you create a SPAN session that already exists, any additional configuration is added to that session. To make sure the session is cleared of any previous configuration, you can delete the session first. This procedure includes how to do this.
- The source and destination ports are already configured in either access or trunk mode. For more information, see the *Cisco Nexus 1000V Interface Configuration Guide*.

Before You Begin

Before beginning this procedure, you must be logged in to the CLI in EXEC mode and be sure you know the number of the SPAN session you are going to configure.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **no monitor session** *session-number*	Clears the specified session.
Step 3	switch(config)# **monitor session** *session-number*	Creates a session with the given session number and places you in monitor configuration mode to further configure the session.
Step 4	switch(config-monitor)# **description** *description*	Adds a description for the specified SPAN session. The *description* can be up to 32 alphanumeric characters. The default is blank (no description)
Step 5	switch(config-monitor)# **source** {**interface** {*type*} {*id*} | **vlan** {*id* | *range*} | **port-profile** {*name*}} [**rx** | **tx** | **both**]	For the specified session, configures the sources and the direction of traffic to monitor. • For the *type* argument, specify the interface type—Ethernet or vEthernet. • For the *id* argument, specify the vEthernet number, the Ethernet slot/port, or the VLAN ID to monitor. • For the *range* argument, specify the VLAN range to monitor. • For the *name* argument, specify the name of the existing port profile. This port profile is different from the port profile created to carry ERSPAN packets through the IP network as defined in the

	Command or Action	Purpose
		"Configuring an ERSPAN Port Profile" section on page 9-9 • For the **traffic direction** keywords, specify as follows: ◦ **rx** which is the VLAN default indicates receive. ◦ **tx** indicates transmit. ◦ **both**is the default keyword
Step 6	Repeat Step 5 to configure additional SPAN sources.	(Optional)
Step 7	switch(config-monitor)# **filter vlan** {*id* | *range*}	(Optional) For the specified SPAN session, configures the filter from among the source VLANs.
Step 8	Repeat Step 7 to configure all source VLANs to filter.	(Optional)
Step 9	switch(config-monitor)# **destination** {**interface** {*type*} {*id* | *range*} | **port-profile** {*name*}}	For the specified SPAN session, configures the destination(s) for copied source packets. • For the *type* argument, specify the interface type—Ethernet or vEthernet. • For the *id* argument, specify the vEthernet number or the Ethernet slot/port to monitor. • For the *name* argument specify the name of the port profile to monitor.
Step 10	Repeat Step 9 to configure all SPAN destination ports.	(Optional)
Step 11	switch(config-monitor)# **no shut**	Enables the SPAN session. By default, the session is created in the shut state.
Step 12	switch(config-monitor)# **exit**	(Optional) Exits monitor configuration mode and places you in interface configuration mode.
Step 13	switch(config-if)# **show monitor session** *session-number*	(Optional) Displays the configured monitor session.
Step 14	switch(config-if)# **show interface** {*type*} {*id*} **switchport**	Displays the configured port including allowed VLANs. • For the *type* argument, specify the interface type—Ethernet or vEthernet. • For the *id* argument, specify the vEthernet number or the Ethernet slot/port to monitor.

	Command or Action	Purpose
Step 15	switch(config-if)# **copy running-config startup-config**	(Optional) Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

```
switch# configure terminal
switch(config)# no monitor session 3
switch(config)# monitor session 3
switch(config-monitor)# description my_span_session_3
switch(config-monitor)# source interface ethernet 2/1-3, ethernet 3/1 rx
switch(config-monitor)# filter vlan 3-5, 7
switch(config-monitor)# destination interface ethernet 2/5, ethernet 3/7
switch(config-monitor)# no shut
switch(config-monitor)# exit
switch(config-if)# show monitor session 3
switch(config-if)# show interface ethernet 2/5 switchport
switch(config-if)# copy running-config startup-config
```

Configuring an ERSPAN Port Profile

You can configure a port profile on the VSM to carry ERSPAN packets through the IP network to a remote destination analyzer.

You must complete this configuration for all hosts in vCenter Server.

The ERSPAN configuration requires a L3 capable port-profile. To configure this feature in a L2 mode, you must configure the L3 capable port profile as described in this section. However, if you configure this feature in a L3 mode, then you must use the existing L3 capable port profile.

This procedure includes steps to configure the port profile for the following requirements:

- ERSPAN for Layer 3 control.
- An access port profile. It cannot be a trunk port profile.

Only one VMKNIC can be assigned to this Layer 3 control port profile per host as follows:

- If more than one VMKNIC is assigned to a host, the first one assigned takes effect. The second one is not considered a Layer 3 control VMKNIC.
- If more than one VMKNIC is assigned to a host, and you remove the second assigned one, the VEM does not use the first assigned one. Instead, you must remove both VMKNICs and then add one back.

Before You Begin

Before beginning this procedure, be sure you have done the following:

- Logged in to the CLI in EXEC mode
- Established the name to be used for this port profile

Note The port profile name is used to configure the VM Kernal NIC (VMKNIC). A VMKNIC is required on each ESX host to send ERSPAN-encapsulated IP packets; and must have IP connectivity to the ERSPAN destination IP address.

- Established the name of the VMware port group to which this profile maps.
- Created the system VLAN that sends IP traffic to the ERSPAN destination; and you know the VLAN ID that will be used in this configuration.
- Obtained the VMware documentation for adding a new virtual adapter.

Note In order to ensure VSM-VEM control communication messages are not dropped, it is recommended to configure the QoS queuing feature on the uplink interface to which the vmknic with capability L3 control is mapped. For more details, see the *Cisco Nexus 1000V Quality of Service Configuration Guide*.

For more information about system port profiles, see the *Cisco Nexus 1000V Port Profile Configuration Guide*.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **port-profile** *port_profile_name*	Creates the port profile and places you in global configuration mode for the specified port profile. This command saves the port profile in the running configuration. The port profile name can be up to 80 characters and must be unique for each port profile on the Cisco Nexus 1000V.
Step 3	switch(config-prot-prof)# **capability l3control**	Configures the port profile to carry ERSPAN traffic and saves the port profile in the running configuration.
Step 4	switch(config-prot-prof)# **vmware port-group** *name*	Designates the port profile as a VMware port group and adds the name of the VMware port group to which this profile maps. This command saves the settings in the running configuration. The port profile is mapped to a VMware port group of the same name. When a vCenter Server connection is established, the port group created in Cisco Nexus 1000V is then distributed to the virtual switch on the vCenter Server. The *name* argument is the same as the port profile name if you do not specify a port group name. If you want to map the port profile to a different port group name, use the name option followed by the alternate name.

	Command or Action	Purpose
Step 5	switch(config-prot-prof)# **switchport mode access**	Designates the interfaces as switch access ports (the default).
Step 6	switch(config-prot-prof)# **switchport access vlan** *id*	Assigns a VLAN ID to the access port for this port profile and saves the setting in the running configuration. This VLAN is used to send IP traffic to the ERSPAN destination.
Step 7	switch(config-prot-prof)# **no shutdown**	Enables the interface in the running configuration.
Step 8	switch(config-prot-prof)# **system vlan** *id*	Associates the system VLAN ID with the port profile and saves it in the running configuration. The ID must match the VLAN ID that is assigned to the access port. If it does not match, then the following error message is generated: `ERROR: System vlan being set does not match the switchport access vlan 2`
Step 9	switch(config-prot-prof)# **state enabled**	Enables the port profile in the running configuration. This port profile is now ready to send out ERSPAN packets on all ESX hosts with ERSPAN sources.
Step 10	switch(config-prot-prof)# **show port-profile name** *port_profile_name*	(Optional) Displays the configuration for the specified port profile as it exists in the running configuration.
Step 11	switch(config-port-prof)# **copy running-config startup-config**	(Optional) Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.
Step 12	Using the VMware documentation, go to vSphere Client and configure a VMKNIC on each ESX Host for sending ERSPAN-encapsulated packets. Make sure that the VMKNIC points to this port profile as a new virtual adapter. This VMKNIC must have IP connectivity to the ERSPAN destination IP address.	

```
switch# configure terminal
switch(config)# port-profile erspan_profile
switch(config-port-prof)# capability l3control
switch(config-port-prof)# vmware port-group erspan
switch(config-port-prof)# switchport mode access
switch(config-port-prof)# switchport access vlan 2
switch(config-port-prof)# no shutdown
switch(config-port-prof)# system vlan 2
switch(config-port-prof)# state enabled
```

```
switch(config-port-prof)# show port-profile name erspan
port-profile erspan
  description:
  status: enabled
  capability uplink: no
  capability l3control: yes
  system vlans: 2
  port-group: access
  max-ports: 32
  inherit:
  config attributes:
    switchport access vlan 2
    no shutdown
  evaluated config attributes:
    switchport access vlan 2
    no shutdown
  assigned interfaces:
n1000v(config-port-prof)# copy running-config startup-config
```

Configuring an ERSPAN Session

This procedure involves creating the SPAN session in ERSPAN source configuration mode (config-erspan-source).

SPAN sessions are created in the shut state by default.

When you create a SPAN session that already exists, any additional configuration is added to that session. To make sure the session is cleared of any previous configuration, you can delete the session first. The step to do this is included in the procedure.

Before You Begin

Before beginning this procedure, be sure you have done the following:

- Logged in to the CLI in EXEC mode
- Obtained the number of the SPAN session that you are going to configure
- Configured an ERSPAN-capable port profile on the VSM
- Using the VMware documentation for adding a new virtual adapter, you have already configured the required VMKNIC on each ESX host. The VMKNIC must have IP connectivity to the ERSPAN destination IP address for sending ERSPAN-encapsulated packets.
- ERSPAN traffic uses GRE encapsulation. If there are firewalls between the ERSPAN source and destinations, we recommend that you set a rule to allow GRE traffic. This traffic could be identified by IP protocol number 47.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **no monitor session** *session-number*	Clears the specified session.

	Command or Action	Purpose
Step 3	switch(config)# **monitor session** *session-number* **type erspan-source**	Creates a session with the given session number and places you in ERSPAN source configuration mode. This configuration is saved in the running configuration.
Step 4	switch(config-erspan-src)# **description** *description*	For the specified ERSPAN session, adds a description and saves it in the running configuration. The *description* can be up to 32 alphanumeric characters The default is blank (no description)
Step 5	switch(config-erspan-src)#**source** {**interface** *type* {*number*| *range*} | **vlan** {*number* | *range*} | **port-profile** {*name*}} [**rx** | **tx** | **both**]	For the specified session, configures the sources and the direction of traffic to monitor and saves them in the running configuration. • For the *type* argument, specify the interface type—ethernet, port-channel, vethernet. • For the *number* argument, specify the interface slot/port or range; or the VLAN number or range to monitor. • For the *name* argument, specify the name of the existing port profile. • For the traffic direction keywords, specify as follows: ◦ **rx** which is the VLAN default indicates receive. ◦ **tx** indicates transmit. ◦ **both**is the default keyword
Step 6	Repeat Step 5 to configure additional ERSPAN sources.	(Optional)
Step 7	switch(config-erspan-src)# **filter vlan** {*number* | *range*}	(Optional) For the specified ERSPAN session, configures the VLANs, VLAN lists, or VLAN ranges to be monitored; and saves the VLAN arguments to the running configuration. On the monitor port, only the traffic from the VLANs that match the VLAN filter list are replicated to the destination.
Step 8	Repeat Step 7 to configure all source VLANs to filter.	(Optional)
Step 9	switch(config-erspan-src)# **destination ip** *ip_address*	Configures the IP address of the host to which the encapsulated traffic is sent in this monitor session and saves it in the running configuration.

	Command or Action	Purpose
Step 10	switch(config-erspan-src)# **ip ttl** *ttl_value*	(Optional) Specifies the IP time-to-live value, from 1 to 255, for ERSPAN packets in this monitor session and saves it in the running configuration.
Step 11	switch(config-erspan-src)# **ip prec** *precedence_value*	(Optional) Specifies the IP precedence value, from 0 to 7, for the ERSPAN packets in this monitor session and saves it in the running configuration. The default value is 0.
Step 12	switch(config-erspan-src)# **ip dscp** *dscp_value*	(Optional) Specifies the IP DSCP value, from 0 to 63. for the ERSPAN packets in this monitor session and saves it in the running configuration. The default is 0.
Step 13	switch(config-erspan-src)# **mtu** *mtu_value*	(Optional) Specifies an MTU size (from 50 to 1500) for ERSPAN packets in this monitor session and saves it in the running configuration. The 1500 MTU size limit includes a 50 byte overhead added to monitored packets by ERSPAN. Packets larger than this size are truncated. The default is 1500. **Note** If the ERSPAN destination is a Cisco 6500 switch, truncated ERSPAN packets are dropped unless the **no mls verify ip length consistent** command is configured on the Cisco 6500.
Step 14	switch(config-erspan-src)# **header-type** *value*	Specifies the ERSPAN header type (2 or 3) used for ERSPAN encapsulation for this monitor session as follows: • 2 is the ERPSPANv2 header type (the default) • 3 is the ERSPANv3 header type (Used with NAM setups. Any other type of destination works only with the default v2 headers.)
Step 15	switch(config-erspan-src)# **erspan-id** *flow_id*	Adds an ERSPAN ID from 1 to 1023) to the session configuration and saves it in the running configuration. The session ERSPAN ID is added to the ERSPAN header of the encapsulated frame and can be used at the termination box to differentiate between various ERSPAN streams of traffic.
Step 16	switch(config-erspan-src)# **no shut**	Enables the ERSPAN session and saves it in the running configuration. By default, the session is created in the shut state.

	Command or Action	Purpose
Step 17	switch(config-erspan-src)# **show monitor session** *session_id*	(Optional) Displays the ERSPAN session configuration as it exists in the running configuration
Step 18	switch(config-erspan-src)# **copy running-config startup-config**	(Optional) Saves the running configuration persistently through reboots and restarts by copying it to the startup configuration.

```
switch# configure terminal
switch(config)# no monitor session 3
switch(config)# monitor session 3 type erspan
switch(config-erspan-src)# description my_erspan_session_3
switch(config-erspan-src)# source interface ethernet 2/1-3, ethernet 3/1 rx
switch(config-erspan-src)# filter vlan 3-5, 7
switch(config-erspan-src)# destination ip 10.54.54.1
switch(config-erspan-src)# ip ttl 64
switch(config-erspan-src)# ip prec 1
switch(config-erspan-src)# ip dscp 24
switch(config-erspan-src)# mtu 1000
switch(config-erspan-src)# header-type 2
switch(config-erspan-src)# erspan-id 51
switch(config-erspan-src)# no shut
switch(config-erspan-src)# show monitor session 3
switch(config-erspan-src)# copy running-config startup-config
```

Shutting Down a SPAN Session from Global Configuration Mode

Before You Begin

Before beginning this procedure, be sure you have done the following:

- Logged in to the CLI in EXEC mode.
- Determined which session you want to shutdown

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **monitor session** {*session-number* | *session-range* | **all**} **shut**	Shuts down the specified SPAN monitor session(s) from global configuration mode. • The *session-number* argument specifies a particular SPAN session number. • The *session-range* argument specifies a range of SPAN sessions from 1 to 64. • The **all** keyword specifies all SPAN monitor sessions.

	Command or Action	Purpose
Step 3	switch(config)# **show monitor**	(Optional) Displays the status of the SPAN sessions.
Step 4	switch(config)# **copy running-config startup-config**	(Optional) Saves the running configuration persistently through reboots and restarts by copying it to the startup configuration.

```
switch# configure terminal
switch(config)# monitor session 3 shut
switch(config)# show monitor
switch(config)# copy running-config startup-config
```

Shutting Down a SPAN Session from Monitor Configuration Mode

Before You Begin

Before beginning this procedure, be sure you have done the following:

- Logged in to the CLI in EXEC mode.
- Determined which session you want to shutdown

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **monitor session** {*session-number* | *session-range* | **all**} **[type erspan-source]**	Specifies the SPAN monitor session(s)) you want to shut down from monitor-configuration mode. • The *session-number* argument specifies a particular SPAN session number. • The *session-range* argument specifies a range of SPAN sessions from 1 to 64. • The **all** keyword specifies all SPAN monitor sessions.
Step 3	switch(config)# **shut**	Shuts down the specified SPAN monitor session(s) from monitor configuration mode.
Step 4	switch(config-monitor)# **show monitor**	(Optional) Displays the status of the SPAN sessions.

	Command or Action	Purpose
Step 5	switch(config-monitor)# **copy running-config startup-config**	(Optional) Saves the running configuration persistently through reboots and restarts by copying it to the startup configuration.

```
switch# configure terminal
switch(config)# monitor session 3
switch(config-monitor)# shut
switch(config-monitor)# show monitor
switch(config-monitor)# copy running-config startup-config
```

Resuming a SPAN Session from Global Configuration Mode

You can discontinue copying packets from one source and destination and then resume from another source and destination in global configuration mode.

Before You Begin

Before beginning this procedure, be sure you have done the following:

- Logged in to the CLI in EXEC mode.
- Determined which SPAN session that you want to configure.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# [**no**]**monitor session** {*session-number* | *session-range* | **all**} **shut**	Shuts down the specified SPAN monitor session(s) from global configuration mode. • The *session-number* argument specifies a particular SPAN session number. • The *session-range* argument specifies a range of SPAN sessions from 1 to 64. • The **all** keyword specifies all SPAN monitor sessions.
Step 3	switch(config)# **show monitor**	(Optional) Displays the status of the SPAN sessions.
Step 4	switch(config)# **copy running-config startup-config**	(Optional) Saves the running configuration persistently through reboots and restarts by copying it to the startup configuration.

```
switch# configure terminal
switch(config)# no monitor session 3 shut
switch(config)# show monitor
switch(config)# copy running-config startup-config
```

Resuming a SPAN Session from Monitor Configuration Mode

You can discontinue copying packets from one source and destination and then resume from another source and destination in monitor configuration mode.

Before You Begin

Before beginning this procedure, be sure you have done the following:

- Logged in to the CLI in EXEC mode.
- Determined which SPAN session that you want to configure.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# [**no**] **monitor session** {*session-number* | *session-range* | **all**} **shut**	Shuts down the specified SPAN monitor session(s) from monitor configuration mode. • The *session-number* argument specifies a particular SPAN session number. • The *session-range* argument specifies a range of SPAN sessions from 1 to 64. • The **all** keyword specifies all SPAN monitor sessions.
Step 3	switch(config-monitor)# **show monitor**	(Optional) Displays the status of the SPAN sessions.
Step 4	switch(config-monitor)# **show monitor session** *session-id*	(Optional) Displays detailed configuration and status of a specific SPAN session for verification.
Step 5	switch(config-monitor)# **copy running-config startup-config**	(Optional) Saves the running configuration persistently through reboots and restarts by copying it to the startup configuration.

```
switch# configure terminal
switch(config)# monitor session 3
switch(config-monitor)# no shut
```

```
switch(config-monitor)# show monitor
switch(config-monitor)# show monitor session 3
switch(config-monitor)# copy running-config startup-config
```

Configuring the Allowable ERSPAN Flow IDs

Use this procedure to restrict the allowable range of available flow IDs that can be assigned to ERSPAN sessions

The available ERSPAN flow IDs are from 1 to 1023.

Before You Begin

Before beginning this procedure, be sure you have done the following:

- Logged in to the CLI in EXEC mode.
- Determined the restricted range of ERSPAN flow IDs that you want to designate.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# [**no**] **limit-resource erspan-flow-id minimum** *min_val* **maximum** *max_va*l	Restricts the allowable range of ERSPAN flow IDs that can be assigned. The allowable range is from 1 to 1023. The defaults are as follows: The minimum value = 1 The maximum value = 1023 The **no** form of this command removes any configured values and restores default values.
Step 3	switch(config)# **show running monitor**	(Optional) Displays changes to the default limit-resource erspan-flow-id values for verification
Step 4	switch(config)# **copy running-config startup-config**	(Optional) Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

```
switch# configure terminal
switch(config)# limit-resource erspan-flow-id minimum 20 maximum 40
switch(config)# show monitor
switch(config)# show running monitor
switch(config)# copy running-config startup-config
```

Verifying the SPAN Configuration

Use one of the following commands to verify the configuration:

Command	Purpose
show monitor session {**all** | *session-number* | **range** *session-range*} [**brief**]	Displays the SPAN session configuration.
show monitor	Displays Ethernet SPAN information.
module vem *module-number* **execute vemcmd show span**	Displays the configured SPAN sessions on a VEM module.
show port-profile name *port_profile_name*	Displays a port profile.

Configuration Example for an ERSPAN Session

The following example shows how to create an ERSPAN session for a source Ethernet interface and destination IP address on the Cisco Nexus 1000V.CSCtn56340 Packets arriving at the destination IP are identified by the ID 999 in their header.

```
switch# monitor session 2 type erspan-source
switch(config-erspan-src)# source interface ethernet 3/3
switch(config-erspan-src)# source port-profile my_profile_src
switch(config-erspan-src)# destination ip 10.54.54.1
switch(config-erspan-src)# erspan-id 999
switch(config-erspan-src)# mtu 1000
switch(config-erspan-src)# no shut

switch(config-erspan-src)# show monitor session 2
   session 2
---------------
type              : erspan-source
state             : up
source intf       :
    rx            : Eth3/3
    tx            : Eth3/3
    both          : Eth3/3
source VLANs      :
    rx            :
    tx            :
    both          :
source port-profile :
    rx            : my_profile_src
    tx            : my_profile_src
    both          : my_profile_src
filter VLANs      : filter not specified
destination IP    : 10.54.54.1
ERSPAN ID         : 999
ERSPAN TTL        : 64
ERSPAN IP Prec.   : 0
ERSPAN DSCP       : 0
ERSPAN MTU        : 1000
ERSPAN Header Type: 2

switch(config-erspan-src)# module vem 3 execute vemcmd show span
```

```
VEM SOURCE IP: 10.54.54.10

HW SSN ID   ERSPAN ID   HDR VER   DST LTL/IP
        1                 local   49,51,52,55,56
        2         999         2   10.54.54.1
```

Example of Configuring a SPAN Session

```
 switch(config)# no monitor session 1
switch(config)# monitor session 1
  switch(config-monitor)# source interface ethernet 2/1-3
  switch(config-monitor)# source interface port-channel 2
  switch(config-monitor)# source port-profile my_profile_src
  switch(config-monitor)# source vlan 3, 6-8 tx
  switch(config-monitor)# filter vlan 3-5, 7
  switch(config-monitor)# destination interface ethernet 2/5
  switch(config-monitor)# destination port-profile my_profile_dst
  switch(config-monitor)# no shut
  switch(config-monitor)# exit
switch(config)# show monitor session 1
switch(config)# copy running-config startup-config

switch(config)# show monitor session 1
   session 1
---------------
type              : local
state             : up
source intf       :
    rx            : Eth2/1 Eth2/2 Eth2/3
    tx            : Eth2/1 Eth2/2 Eth2/3
    both          : Eth2/1 Eth2/2 Eth2/3
source VLANs      :
    rx            :
    tx            : 3,6,7,8
    both          :
source port-profile :
    rx            : my_profile_src
    tx            : my_profile_src
    both          : my_profile_src
filter VLANs      : 3,4,5,7
destination ports : Eth2/5
destination port-profile : my_profile_dst

switch# module vem 3 execute vemcmd show span

VEM SOURCE IP NOT CONFIGURED.

HW SSN ID   ERSPAN ID   HDR VER   DST LTL/IP
        1                 local   49,51,52,55,56
```

Example of a Configuration to Enable SPAN Monitoring

This example shows how to configure destination ports in access or trunk mode, and enable SPAN monitoring.

```
switch# configure terminal
  switch(config)# interface ethernet 2/5
  switch(config-if)# switchport
  switch(config-if)# switchport mode trunk
  switch(config-if)# no shut
  switch(config-if)# exit
  switch(config)#
```

Feature History for SPAN and ERSPAN

Feature Name	Releases	Feature Information
Port profile as Local SPAN and ERSPAN source	4.2(1)SV1(4)	You can specify a port profile as a source for local SPAN and ERSPAN monitor traffic.
NAM support for ERSPAN data sources	4.0(4)SV1(3)	NAM support was introduced.
ERSPAN Type III header	4.0(4)SV1(3)	ERSPAN Type III header format was introduced.
SPAN and ERSPAN	4.0(4)SV1(1)	SPAN and ERSPAN were introduced.

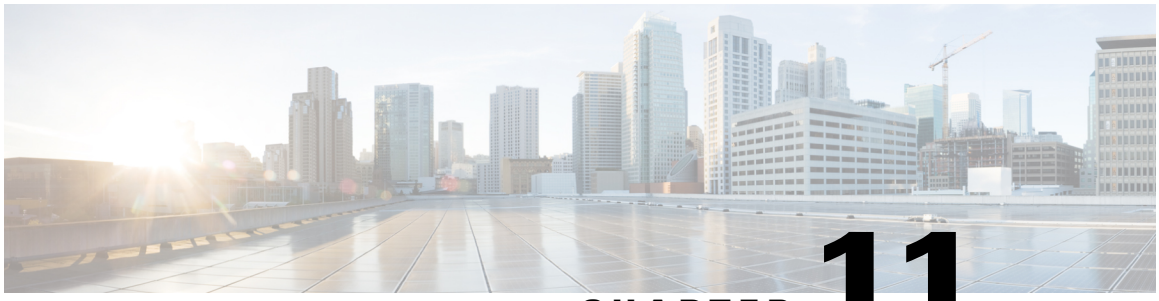

CHAPTER 11

Configuring SNMP

This chapter contains the following sections:

- Information About SNMP, page 101
- Guidelines and Limitations for SNMP, page 105
- Default Settings for SNMP, page 105
- Configuring SNMP, page 105
- Verifying the SNMP Configuration, page 116
- Configuration Example for SNMP, page 116
- MIBs, page 117
- Feature History for SNMP, page 118

Information About SNMP

The Simple Network Management Protocol (SNMP) is an application-layer protocol that provides a message format for communication between SNMP managers and agents. SNMP provides a standardized framework and a common language used for the monitoring and management of devices in a network. SNMP supports IPv4 addresses.

SNMP Functional Overview

The SNMP framework consists of three parts:

- An SNMP manager—The system used to control and monitor the activities of network devices using SNMP.
- An SNMP agent—The software component within the managed device that maintains the data for the device and reports these data, as needed, to managing systems. Cisco NX-OS supports the agent and MIB. To enable the SNMP agent, you must define the relationship between the manager and the agent.
- A managed information base (MIB)—The collection of managed objects on the SNMP agent.

SNMP is defined in RFCs 3411 to 3418.

Note SNMP Role Based Access Control (RBAC) is not supported.

Cisco NX-OS supports SNMPv1, SNMPv2c, and SNMPv3. Both SNMPv1 and SNMPv2c use a community-based form of security.

SNMP Notifications

A key feature of SNMP is the ability to generate notifications from an SNMP agent. These notifications do not require that requests be sent from the SNMP manager. Notifications can indicate improper user authentication, restarts, the closing of a connection, loss of a connection to a neighbor router, or other significant events.

Cisco NX-OS generates SNMP notifications as either traps or informs. A trap is an asynchronous, unacknowledged message sent from the agent to the SNMP managers listed in the host receiver table. Informs are asynchronous messages sent from the SNMP agent to the SNMP manager which the manager must acknowledge receipt of.

Traps are less reliable than informs because the SNMP manager does not send any acknowledgment when it receives a trap. The Cisco NX-OS cannot determine if the trap was received. An SNMP manager that receives an inform request acknowledges the message with an SNMP response protocol data unit (PDU). If the Cisco NX-OS never receives a response, it can send the inform request again.

You can configure Cisco Nexus NX-OS to send notifications to multiple host receivers.

SNMPv3

SNMPv3 provides secure access to devices by a combination of authenticating and encrypting frames over the network. The security features provided in SNMPv3 are as follows:

- Message integrity—Ensures that a packet has not been tampered with while it was in-transit.
- Authentication—Determines the message is from a valid source.
- Encryption—Scrambles the packet contents to prevent it from being seen by unauthorized sources.

SNMPv3 provides for both security models and security levels. A security model is an authentication strategy that is set up for a user and the role in which the user resides. A security level is the permitted level of security within a security model. A combination of a security model and a security level determines which security mechanism is employed when handling an SNMP packet.

Security Models and Levels for SNMPv1, v2, v3

The security level determines if an SNMP message needs to be protected from disclosure and if the message needs to be authenticated. The various security levels that exist within a security model are as follows:

- noAuthNoPriv—Security level that does not provide authentication or encryption.
- authNoPriv—Security level that provides authentication but does not provide encryption.

- authPriv—Security level that provides both authentication and encryption.

Three security models are available: SNMPv1, SNMPv2c, and SNMPv3. The security model combined with the security level determine the security mechanism applied when the SNMP message is processed.

The following table identifies what the combinations of security models and levels mean.

Model	Level	Authentication	Encryption	What Happens
v1	noAuthNoPriv	Community string	No	Uses a community string match for authentication.
v2c	noAuthNoPriv	Community string	No	Uses a community string match for authentication.
v3	authNoPriv	HMAC-MD5 or HMAC-SHA	No	Provides authentication based on the Hash-Based Message Authentication Code (HMAC) Message Digest 5 (MD5) algorithm or the HMAC Secure Hash Algorithm (SHA).
v3	authPriv	HMAC-MD5 or HMAC-SHA	DES	Provides authentication based on the HMAC-MD5 or HMAC-SHA algorithms. Provides Data Encryption Standard (DES) 56-bit encryption in addition to authentication based on the Cipher Block Chaining (CBC) DES (DES-56) standard.

User-Based Security Model

SNMPv3 User-Based Security Model (USM) refers to SNMP message-level security and offers the following services:

- Message integrity—Ensures that messages have not been altered or destroyed in an unauthorized manner and that data sequences have not been altered to an extent greater than can occur nonmaliciously.
- Message origin authentication—Ensures that the claimed identity of the user on whose behalf received data was originated is confirmed.
- Message confidentiality—Ensures that information is not made available or disclosed to unauthorized individuals, entities, or processes.

SNMPv3 authorizes management operations only by configured users and encrypts SNMP messages.

Cisco NX-OS uses two authentication protocols for SNMPv3:

- HMAC-MD5-96 authentication protocol
- HMAC-SHA-96 authentication protocol

The Cisco NX-OS uses Advanced Encryption Standard (AES) as one of the privacy protocols for SNMPv3 message encryption and conforms with RFC 3826.

The priv option offers a choice of DES or 128-bit AES encryption for SNMP security encryption. The priv option with the aes-128 token indicates that this privacy password is for generating a 128-bit AES key.The AES priv password can have a minimum of eight characters. If the passphrases are specified in cleartext, you can specify a maximum of 64 case-sensitive, alphanumeric characters. If you use the localized key, you can specify a maximum of 130 characters.

Note For an SNMPv3 operation that uses the external AAA server, you must use AES for the privacy protocol in the user configuration on the external AAA server.

CLI and SNMP User Synchronization

SNMPv3 user management can be centralized at the Access Authentication and Accounting (AAA) server level. This centralized user management allows the SNMP agent in Cisco NX-OS to leverage the user authentication service of the AAA server. After user authentication is verified, the SNMP PDUs are processed. Additionally, the AAA server is also used to store user group names. SNMP uses the group names to apply the access/role policy that is locally available in the switch.

Any configuration changes made to the user group, role, or password results in database synchronization for both SNMP and AAA.

Cisco NX-OS synchronizes a user configuration in the following ways:

- The authentication passphrase specified in the **snmp-server user** command becomes the password for the CLI user.
- The password specified in the **username** command becomes the authentication and privacy passphrases for the SNMP user.
- If you delete a user using either SNMP or the CLI, the user is deleted for both SNMP and the CLI.
- User-role mapping changes are synchronized in SNMP and the CLI.
- Role changes (deletions or modifications) from the CLI are synchronized to SNMP.

Note When you configure passphrase/password in localized key/encrypted format, Cisco NX-OS does not synchronize the user information (password, roles, and so on).

Cisco NX-OS holds the synchronized user configuration for 60 minutes by default. See Modifying the AAA Synchronization Time, on page 115 for information on how to modify this default value.

Group-Based SNMP Access

Note Because group is a standard SNMP term used industry-wide, roles are referred as groups in this SNMP section.

SNMP access rights are organized by groups. Each group in SNMP is similar to a role through the CLI. Each group is defined with read access or read-write access.

You can begin communicating with the agent once your username is created, your roles are set up by your administrator, and you are added to the roles.

High Availability

Stateless restarts for SNMP are supported. After a reboot or supervisor switchover, the running configuration is applied.

Guidelines and Limitations for SNMP

- Read-only access to some SNMP MIBs is supported. See the Cisco NX-OS MIB support list at the following URL for more information:

  http://www.cisco.com/public/sw-center/netmgmt/cmtk/mibs.shtml
- SNMP Role Based Access Control (RBAC) is not supported.
- The SNMP set command is supported by the following Cisco MIBs:
  - CISCO-IMAGE-UPGRADE-MIB
  - CISCO-CONFIG-COPY-MIB
- The recommended SNMP polling interval time is 5 minutes.

Default Settings for SNMP

Parameters	Default
license notifications	enabled

Configuring SNMP

This section includes the following topics:

- Configuring SNMP
- Users Enforcing SNMP Message Encryption
- Creating SNMP Communities
- Configuring SNMP Notification Receivers
- Configuring the Notification Target User
- Enabling SNMP Notifications
- Disabling LinkUp/LinkDown Notifications on an Interface
- Enabling a One-time Authentication for SNMP over TCP

- Assigning the SNMP Switch Contact and Location Information
- Disabling SNMP
- Modifying the AAA Synchronization Time

Configuring SNMP Users

Before You Begin

Before beginning this procedure, you must be logged in to the CLI in EXEC mode.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Places you in global configuration mode.
Step 2	switch(config)# **snmp-server user** *name* [**auth** {**md5** | **sha**} *passphrase* [**auto**] [**priv** [**aes-128**] *passphrase*] [**engineID** *id*] [**localizedkey**]]	Configures an SNMP user with authentication and privacy parameters. The *passphrase* can be any case-sensitive, alphanumeric string up to 64 characters. If you use the **localizekey** keyword, the *passphrase* can be any case-sensitive, alphanumeric string up to 130 characters. The *name* argument is the name of a user who can access the SNMP engine. The **auth** keyword enables one-time authentication for SNMP over a TCP session. It is optional. The **md5** keyword specifies HMAC MD5 algorithm for authentication. It is optional. The **sha** keyword specifies HMAC SHA algorithm for authentication. It is optional. The **priv** keyword specifies encryption parameters for the user. It is optional. The **aes-128** keyword specifies a 128-byte AES algorithm for privacy. It is optional. The **engineID** keyword specifies the engineID for configuring the notification target user (for V3 informs). It is optional. The *id* is a 12-digit colon-separated decimal number.
Step 3	switch(config-callhome)# **show snmp user**	(Optional) Displays information about one or more SNMP users.
Step 4	switch(config-callhome)# **copy running-config startup-config**	(Optional) Saves the running configuration persistently through reboots and restarts by copying it to the startup configuration.

```
switch(config)# configure terminal
switch(config)# snmp-server user Admin auth sha Axlm1234# priv Axlm1234#
switch(config)# show snmp user
_____________________________________________________________________
SNMP USERS
_____________________________________________________________________
User Auth Priv(enforce) Groups

____ ____ _____________ ______
Admin sha des(no) network-operator
admin md5 des(no) network-admin
_____________________________________________________________________
NOTIFICATION TARGET USERS (configured for sending V3 Inform)
_____________________________________________________________________
User Auth Priv

____ ____ ____
switch(config)#
```

Enforcing SNMP Message Encryption for All Users

Procedure

	Command or Action	Purpose
Step 1	switch(config)# **snmp-server globalEnforcePriv**	Enforces SNMP message encryption for all users.

```
switch(config)# snmp-server galobalEnforcePriv
switch(config)# show snmp user
_____________________________________________________________________
SNMP USERS [global privacy flag enabled]
_____________________________________________________________________

User                          Auth  Priv(enforce) Groups

____                          ____  _____________ ______
Admin                         sha   des(no)       network-operator

admin                         md5   des(no)       network-admin

_____________________________________________________________________
 NOTIFICATION TARGET USERS (configured  for sending V3 Inform)
_____________________________________________________________________

User                          Auth  Priv

____                          ____  ____
switch(config)#
```

Creating SNMP Communities

You can create SNMP communities for SNMPv1 or SNMPv2c.

Before You Begin

You must be in global configuration mode.

Procedure

	Command or Action	Purpose
Step 1	switch(config)# **snmp-server community** *name* {**ro** | **rw**}	Creates an SNMP community string.

```
switch(config)# snmp-server community public ro
switch(config)# show snmp community
Community Group / Access context acl_filter
--------------------------- -------------- ------- ----------
public network-operator
switch(config)#
```

Filtering SNMP Requests

You can assign an access list (ACL) to a community to filter incoming SNMP requests. If the assigned ACL allows the incoming request packet, SNMP processes the request. If the ACL denies the request, SNMP drops the request and sends a system message. The ACL applies to IPv4 over UDP and TCP. After creating the ACL, assign the ACL to the SNMP community. For more information on creating ACLs, see the *Cisco Nexus 1000V for VMware Security Configuration Guide*.

Use the following commands in global configuration mode to assign an ACL to a community to filter SNMP requests:

Before You Begin

Create an ACL to assign to the SNMP community. Assign the ACL to the SNMP community. Create the ACL with the following parameters:

- Source IP address
- Destination IP address
- Source Port
- Destination Port
- Protocol (UDP or TCP)

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters the global configurationmode.
Step 2	switch(config-callhome)# **snmp-server community** *community-name* **use-acl** *acl-name*	Assigns an ACL to an SNMP community to filter SNMP requests.
Step 3	switch(config-callhome)# **ip access-list acl_for_community**	Configures IP ACL.

	Command or Action	Purpose
Step 4	switch(config-callhome)# **statistics per-entry**	Configures statistics.
Step 5	switch(config-callhome)# **permit udp any any**	Permits UDP protocol.
Step 6	switch(config-callhome)# **show ip access-lists**	(Optional) Displays show command output.
Step 7	switch(config-callhome)# **snmp-server community public use-acl acl_for_community**	Configures SNMP community.
Step 8	switch(config-callhome)# **showsnmp community**	(Optional) Displays show command output.

This example shows how to filter SNMP requests:

```
switch(config)# show ip access-lists
IPV4 ACL acl_for_community
statistics per-entry
10 permit udp any any
switch(config)# show snmp community
Community Group / Access context acl_filter
--------------------------- -------------- ------- ----------
public network-operator acl_for_community
```

Configuring SNMP Notification Receivers

Configuring a Host Receiver for SNMPv1 Traps

Before You Begin

You must be in global configuration mode.

Procedure

	Command or Action	Purpose
Step 1	switch(config)# **snmp-server host** *ip-address* **traps version 1** *community* [**udp_port** *number*]	Configures a host receiver for SNMPv1 traps. The community can be any alphanumeric string up to 255 characters. The UDP port number range is from 0 to 65535.

```
switch(config)# snmp-server host 192.0.2.1 traps version 1 public
switch(config)# show snmp host
-------------------------------------------------------------------
Host                            Port Version  Level  Type   SecName

-------------------------------------------------------------------
192.0.2.1                       162  v1       noauth trap   public
```

```
--------------------------------------------------------------------
switch(config)#
```

Configuring a Host Receiver for SNMPv2c Traps or Informs

Before You Begin

You must be in global configuration mode.

Procedure

	Command or Action	Purpose
Step 1	switch(config)# **snmp-server host** *ip-address* {**traps** | **informs**} **version 2c** *community* [**udp_port** *number*]	Configures a host receiver for SNMPv2c traps or informs. The community can be any alphanumeric string up to 255 characters. The UDP port number range is from 0 to 65535.

```
switch(config)# snmp-server host 192.0.2.1 informs version 2c public
switch(config)# show snmp host
-------------------------------------------------------------------
Host                            Port Version  Level  Type   SecName

-------------------------------------------------------------------
192.0.2.1                       162  v2c      noauth inform public

-------------------------------------------------------------------
switch(config)#
```

Configuring a Host Receiver for SNMPv3 Traps or Informs

Note The SNMP manager must know the user credentials (authKey/PrivKey) based on the SNMP engine ID of the Cisco Nexus 1000V device to authenticate and decrypt the SNMPv3 messages

Before You Begin

You must be in global configuration mode.

Procedure

	Command or Action	Purpose
Step 1	switch(config)# **snmp-server host** *ip-address* {**traps** | **informs**} **version 3** {**auth** | **noauth** | **priv**} *username* [**udp_port** *number*]	Configures a host receiver for SNMPv2c traps or informs. The username can be any alphanumeric string up to 255 characters. The UDP port number range is from 0 to 65535.

```
switch# configure terminal
switch(config)# snmp-server host 192.0.2.1 informs version 3 auth Admin
switch(config)# show snmp host
-------------------------------------------------------------------
Host Port Version Level Type SecName
-------------------------------------------------------------------
192.0.2.1 162 v3 auth inform Admin
-------------------------------------------------------------------
switch(config)#
```

Configuring the Notification Target User

You must configure a notification target user on the device to send SNMPv3 inform notifications to a notification host receiver

The Cisco NX-OS uses the credentials of the notification target user to encrypt the SNMPv3 inform notification messages to the configured notification host receiver.

Note For authenticating and decrypting the received INFORM PDU, the notification host receiver should have the same user credentials as configured in Cisco NX-OS to authenticate and decrypt the inform s

Procedure

	Command or Action	Purpose
Step 1	switch(config)# **snmp-server user** *name* [**auth** {**md5** | **sha**} *passphrase* [**auto**] [**priv** [**aes-128**] *passphrase*] [**engineID** *id*]	Configures the notification target user with the specified engine ID for notification host receiver. The *id* is a 12-digit colon-separated decimal number.

```
switch(config)# snmp-server user Admin auth sha Axlm1234# priv Axlm1234#
engineID 00:00:00:63:00:01:00:10:20:15:10:03
switch(config)# show snmp user

_____________________________________________________________________
SNMP USERS [global privacy flag enabled]
_____________________________________________________________________
User Auth Priv(enforce) Groups

____ ____ _____________ ______
admin md5 des(no) network-admin
_____________________________________________________________________
NOTIFICATION TARGET USERS (configured for sending V3 Inform)
_____________________________________________________________________
User Auth Priv

____ ____ ____
Admin sha des
(EngineID 0:0:0:63:0:1:0:10:20:15:10:3)
switch(config)#
```

Enabling SNMP Notifications

You can enable or disable notifications. If you do not specify a notification name, Cisco NX-OS enables all notifications.

The following table lists the commands that enable the notifications for Cisco NX-OS MIBs.

Note The snmp-server enable traps command enables both traps and informs, depending on the configured notification host receivers.

MIB	Related Commands
All notifications	**snmp-server enable traps**
CISCO-AAA-SERVER-MIB	**snmp-server enable traps aaa**
ENITY-MIB	**snmp-server enable traps entity**
CISCO-ENTITY-FRU-CONTROL-MIB	**snmp-server enable traps entity fru**
CISCO-LICENSE-MGR-MIB	**snmp-server enable traps license**
IF-MIB	**snmp-server enable traps link**
SNMPv2-MIB	**snmp-server enable traps snmp** **snmp-server enable traps snmp authentication**

The license notifications are enabled by default. All other notifications are disabled by default.

Before You Begin

You must be in global configuration mode.

Procedure

	Command or Action	Purpose
Step 1	switch(config)# **snmp-server enable traps**	Enables all SNMP notifications.
Step 2	switch(config)# **snmp-server enable traps aaa** [**server-state-change**]	Enables the AAA SNMP notifications.
Step 3	switch(config)# **snmp-server enable traps entity** [**fru**]	Enables the ENTITY-MIB SNMP notifications.
Step 4	switch(config)# **snmp-server enable traps license**	Enables the license SNMP notification.

	Command or Action	Purpose
Step 5	switch(config)# **snmp-server enable traps link**	Enables the link SNMP notifications.
Step 6	switch(config)# **snmp-server enable traps snmp** [**authentication**]	Enables the SNMP agent notifications.

This example displays how to enable SNMP notifications:

```
switch(config)# snmp-server enable traps
switch(config)# snmp-server enable traps aaa
switch(config)# snmp-server enable traps entity
switch(config)# snmp-server enable traps license
switch(config)# snmp-server enable traps link
switch(config)# snmp-server enable traps snmp
```

Disabling LinkUp/LinkDown Notifications on an Interface

You can disable linkUp and linkDown notifications on an individual interface. You can use this limit notifications on flapping interface (an interface that transitions between up and down repeatedly).

Before You Begin

You must be in interface configuration mode.

Procedure

	Command or Action	Purpose
Step 1	switch(config-if)# **no snmp trap link-status**	Disables SNMP link-state traps for the interface. This command is enabled by default.

```
switch# show running-config interface vethernet 1
interface Vethernet1
inherit port-profile
dynpp_d50369db-2fed-405d-ad84-a6bf89718d2c_f006e797-da04-4f29-9a0f-901294bc8b8f
description TEST, Network Adapter
dvport uuid "70D66D72-CDD9-4B68-9596-27E8F8E06F6D--0"
switch# conf
Enter configuration commands, one per line. End with CNTL/Z.
switch(config)# interface vethernet 1
switch(config-if)# no snmp trap link-status
switch(config-if)# show running-config interface vethernet 1
interface Vethernet1
inherit port-profile
dynpp_d50369db-2fed-405d-ad84-a6bf89718d2c_f006e797-da04-4f29-9a0f-901294bc8b8f
description TEST, Network Adapter
dvport uuid "70D66D72-CDD9-4B68-9596-27E8F8E06F6D--0"
no snmp trap link-status
```

Enabling a One-time Authentication for SNMP over TCP

Before You Begin

You must be in global configuration mode.

Procedure

	Command or Action	Purpose
Step 1	switch(config)# **snmp-server tcp-session** [**auth**]	Enables a one-time authentication for SNMP over a TCP session. The default is disabled.

```
switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
switch(config)# snmp-server tcp-session
switch(config)# show snmp | grep "Tcp"
SNMP Tcp Authentication Flag : Enabled.
switch(config)#
```

Assigning the SNMP Switch Contact and Location Information

You can assign the switch contact information, which is limited to 32 characters (without spaces) and the switch location.

Before You Begin

Log in to the CLI in EXEC mode.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **snmp-server contact** *name*	Configures sysContact, which is the SNMP contact name.
Step 3	switch(config)# **snmp-server location** *name*	Configures sysLocation, which is the SNMP location.
Step 4	switch(config)# **show snmp**	(Optional) Displays information about one or more destination profiles.
Step 5	switch(config)# **copy running-config startup-config**	(Optional) Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

```
switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
switch(config)# snmp-server contact Admin
switch(config)# snmp-server location Lab
switch(config)# show snmp | grep sys
sys contact: Admin
sys location: Lab
switch(config)# copy running-config startup-config
```

Disabling SNMP

Before You Begin

You must be in global configuration mode.

Procedure

	Command or Action	Purpose
Step 1	switch(config)# **no snmp-server protocol enable**	Disables the SNMP protocol. This command is enabled by default.

```
switch(config)# no snmp-server protocol enable
switch(config)# show snmp | grep protocol
SNMP protocol : Disabled
switch(config)#
```

Modifying the AAA Synchronization Time

You can modify how long Cisco NX-OS holds the synchronized user configuration.

Before You Begin

You must be in global configuration mode.

Procedure

	Command or Action	Purpose
Step 1	switch(config)# **snmp-server aaa-user cache-timeout** *seconds*	Configures how long the AAA synchronized user configuration stays in the local cache. The range is from 1 to 86400 seconds. The default is 3600.

```
switch(config)# snmp-server aaa-user cache-timeout 1200
```

Verifying the SNMP Configuration

Use one of the following commands to verify the configuration:

Command	Purpose
show interface snmp-ifindex	Displays the SNMP ifIndex value for all interfaces (from IF-MIB).
show running-config snmp [**all**]	Displays the SNMP running configuration.
show snmp	Displays the SNMP status.
show snmp community	Displays the SNMP community strings.
show snmp context	Displays the SNMP context mapping.
show snmp engineID	Displays the SNMP engineID.
show snmp group	Displays SNMP roles.
show snmp session	Displays SNMP sessions.
show snmp trap	Displays the SNMP notifications enabled or disabled.
show snmp user	Displays SNMPv3 users.
show snmp host	Displays information about configured SNMP hosts.

Configuration Example for SNMP

This example shows how to configure Cisco NX-OS to send linkUp/Down notifications to one notification host receiver.

```
switch(config)# snmp-server user Admin auth sha Axlm1234# priv Axlm1234#
switch(config)# snmp-server host 192.0.2.1 traps version 3 priv Admin
switch(config)# snmp-server enable traps link
switch(config)# show snmp user
_______________________________________________________________________
SNMP USERS [global privacy flag enabled]

_______________________________________________________________________
User Auth Priv(enforce) Groups

____ ____ _____________ ______
Admin sha des(no) network-operator
admin md5 des(no) network-admin

_______________________________________________________________________
NOTIFICATION TARGET USERS (configured for sending V3 Inform)

_______________________________________________________________________
User Auth Priv

____ ____ ____
switch(config)# show snmp host
-----------------------------------------------------------------------
Host Port Version Level Type SecName
```

```
--------------------------------------------------------------------
192.0.2.1 162 v3 priv trap Admin
--------------------------------------------------------------------
switch(config)# show snmp trap | grep link
link : linkDown Yes
link : linkUp Yes
link : extended-linkDown Yes
link : extended-linkUp Yes
link : cieLinkDown Yes
link : cieLinkUp Yes
link : cisco-xcvr-mon-status-chg Yes
switch(config)#
```

MIBs

Following is information about the supported SNMP MIBs.

To locate and download the MIBs, go to the following URL: http://www.cisco.com/public/sw-center/netmgmt/cmtk/mibs.shtml.

- IF-MIB
- ENTITY-MIB
- CISCO-ENTITY-EXT-MIB-V1SMI
- CISCO-ENTITY-FRU-CONTROL-MIB
- BRIDGE-MIB
- CISCO-FLASH-MIB
- CISCO-SYSTEM-MIB
- CISCO-SYSTEM-EXT-MIB
- CISCO-FEATURE-CONTROL-MIB
- CISCO-CDP-MIB
- CISCO-VIRTUAL-NIC-MIB
- CISCO-PROCESS-MIB
- CISCO-SYSLOG-EXT-MIB
- CISCO-VLAN-MEMBERSHIP-MIB
- TCP-MIB
- UDP-MIB
- CISCO-PRIVATE-VLAN-MIB
- CISCO-SECURE-SHELL-MIB
- CISCO-IMAGE-UPGRADE-MIB
- CISCO-LICENSE-MGR-MIB
- RMON2-MIB
- CISCO-AAA-SERVER-MIB

- CISCO-AAA-SERVER-EXT-MIB
- CISCO-COMMON-MGMT-MIB
- CISCO-COMMON-ROLES-MIB
- CISCO-CONFIG-MAN-MIB
- CISCO-FTP-CLIENT-MIB
- CISCO-IMAGE-MIB
- CISCO-LAG-MIB
- CISCO-NOTIFICATION-CONTROL-MIB
- CISCO-NTP-MIB
- CISCO-RF-MIB
- CISCO-RMON-CONFIG-MIB
- CISCO-SMI
- CISCO-SNMP-TARGET-EXT-MIB
- NOTIFICATION-LOG-MIB
- IP-MIB
- SNMP-COMMUNITY-MIB
- SNMP-FRAMEWORK-MIB
- SNMP-MPD-MIB
- SNMP-NOTIFICATION-MIB
- SNMP-TARGET-MIB
- SNMP-USM-MIB
- SNMPv2-MIB

Feature History for SNMP

Feature Name	Releases	Feature Information
SNMP	4.0(4)SV1(1)	This feature was introduced.

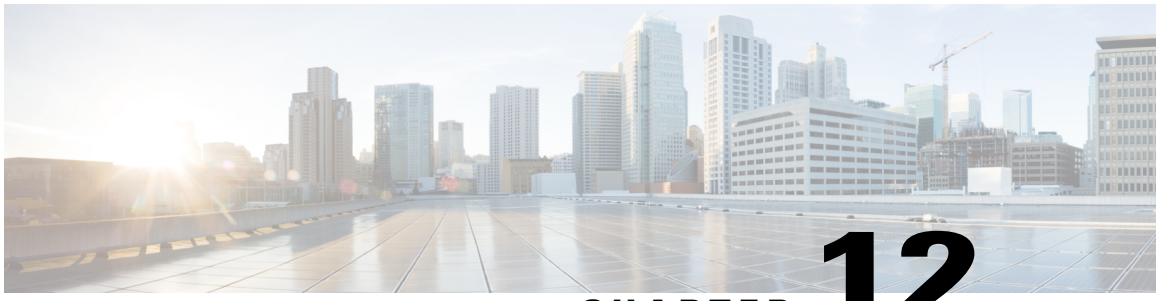

CHAPTER 12

Configuring NetFlow

This chapter contains the following sections:

- Information About NetFlow, page 119
- Prerequisites for NetFlow, page 126
- Guidelines and Limitations for NetFlow, page 127
- Default Settings for NetFlow, page 127
- Enabling the NetFlow Feature, page 128
- Configuring Netflow, page 129
- Verifying the NetFlow Configuration, page 136
- Netflow Example Configuration, page 139
- Related Documents for NetFlow, page 140
- Feature History for NetFlow, page 140

Information About NetFlow

NetFlow allows you to evaluate IP and Ethernet traffic and understand how and where it flows. NetFlow gives you visibility into traffic that transits the virtual switch by characterizing traffic based on its source, destination, timing, and application information. You can use this information to assess network availability and performance, assist in meeting regulatory requirements (compliance), and help with troubleshooting. NetFlow gathers data that you can use for accounting, network monitoring, and network planning.

What is a Flow

A flow is a one-directional stream of packets that arrives on a source interface (or subinterface), matching a set of criteria. All packets with the same source/destination IP address, source/destination ports, protocol, interface, and class of service are grouped into a flow and then packets and bytes are tallied. This condenses a large amount of network information into a database called the NetFlow cache.

You create a flow using a flow record to define the criteria for your flow. All criteria must match for the packet to count in the given flow. Flows are stored in the NetFlow cache. Flow information tells you the following:

- Source address tells you who is originating the traffic.
- Destination address tells who is receiving the traffic
- Ports characterize the application that uses the traffic
- Class of service examines the priority of the traffic
- The device interface tells how traffic is being used by the network device
- Tallied packets and bytes show the amount of traffic

Flow Record Definition

A flow record defines the information that NetFlow gathers, such as the packets in the flow and the types of counters gathered per flow. You can define new flow records or use the predefined Cisco Nexus 1000V flow record.

Predefined flow records use 32-bit counters and are not recommended for data rates above 1 Gbps. For data rates that are higher than 1 Gbps, Cisco recommends that you manually configure the records to use 64-bit counters.

The following table describes the criteria defined in a flow record.

Table 2: Flow Record Criteria

Flow Record Criteria	Description
Match	Defines the information that is matched for collection in the flow record. • ip—Data collected in the flow record matches one of the following IP options: ◦ Protocol ◦ tos (type of service) • IPv4—Data collected in the flow record matches one of the following IPv4 address options: ◦ Source address ◦ Destination address • Transport—Data collected in the flow record matches one of the following transport options: ◦ Destination port ◦ Source port

Flow Record Criteria	Description
Collect	Defines how the flow record collects information. • Counter—Collects flow record information in one of the following formats: ◦ Bytes—32-bit counter (default). ◦ Bytes long—64-bit counter (recommended for data rates that are higher than 1 Gbps). ◦ Packets—32-bit counter (default). or 64-bit counters. ◦ Packets long—64-bit counters (recommended for data rates that are higher than 1 Gbps). • timestamp sys-uptime—Collects the system uptime for the first or last packet in the flow. • transport tcp flags—Collects the TCP transport layer flags for the packets in the flow. **Note** 64-bit counters are recommended.

Predefined Flow Records

Cisco Nexus 1000V Predefined Flow Record: Netflow-Original

```
switch# show flow record netflow-original
Flow record netflow-original:
    Description: Traditional IPv4 input NetFlow with origin ASs
    No. of users: 0
    Template ID: 0
    Fields:
        match ipv4 source address
        match ipv4 destination address
        match ip protocol
        match ip tos
        match transport source-port
        match transport destination-port
        match interface input
        match interface output
        match flow direction
        collect routing source as
        collect routing destination as
        collect routing next-hop address ipv4
        collect transport tcp flags
        collect counter bytes
        collect counter packets
        collect timestamp sys-uptime first
        collect timestamp sys-uptime last
switch#
```

Note Although the following lines appear in the output of the show flow record command, the commands they are based on are not currently supported in Cisco Nexus 1000V. The use of these commands has no affect on the configuration.

```
collect routing source as
collect routing destination as
collect routing next-hop address ipv4
```

Cisco Nexus 1000V Predefined Flow Record: Netflow IPv4 Original-Input

```
switch# show flow record netflow ipv4 original-input
Flow record ipv4 original-input:
    Description: Traditional IPv4 input NetFlow
    No. of users: 0
    Template ID: 0
    Fields:
        match ipv4 source address
        match ipv4 destination address
        match ip protocol
        match ip tos
        match transport source-port
        match transport destination-port
        match interface input
        match interface output
        match flow direction
        collect routing source as
        collect routing destination as
        collect routing next-hop address ipv4
        collect transport tcp flags
        collect counter bytes
        collect counter packets
        collect timestamp sys-uptime first
        collect timestamp sys-uptime last
switch#
```

Cisco Nexus 1000V Predefined Flow Record: Netflow IPv4 Original-Output

```
switch# show flow record netflow ipv4 original-output
Flow record ipv4 original-output:
    Description: Traditional IPv4 output NetFlow
    No. of users: 0
    Template ID: 0
    Fields:
        match ipv4 source address
        match ipv4 destination address
        match ip protocol
        match ip tos
        match transport source-port
        match transport destination-port
        match interface input
        match interface output
        match flow direction
        collect routing source as
        collect routing destination as
        collect routing next-hop address ipv4
        collect transport tcp flags
        collect counter bytes
        collect counter packets
        collect timestamp sys-uptime first
        collect timestamp sys-uptime last
switch#
```

Cisco Nexus 1000V Predefined Flow Record: Netflow Protocol-Port

```
switch# show flow record netflow protocol-port
Flow record ipv4 protocol-port:
```

```
    Description: Protocol and Ports aggregation scheme
    No. of users: 0
    Template ID: 0
    Fields:
        match ip protocol
        match transport source-port
        match transport destination-port
        match interface input
        match interface output
        match flow direction
        collect counter bytes
        collect counter packets
        collect timestamp sys-uptime first
        collect timestamp sys-uptime last
switch#
```

Accessing NetFlow Data

You can use two methods to access NetFlow data:

- Command-line interface (CLI)
- NetFlow collector (a separate product from the Cisco Nexus 1000V for KVM)

Command-line Interface for NetFlow

You can use the CLI to access NetFlow data and to view what is happening in your network now.

The CLI uses a flow monitor and a flow exporter to capture and export flow records to the Netflow collector. Cisco Nexus 1000V supports the NetFlow Version 9 export format.

Note The Cisco Nexus 1000V supports UDP as the transport protocol for exporting data to up to two exporters per monitor.

Flow Monitor

A flow monitor creates an association between the following NetFlow components:

- Flow record—Consists of matching and collection criteria
- Flow exporter—Consists of the export criteria

This flow monitor enables a set, which consists of a record and an exporter. You can define this set once and reuse it multiple times. You can create multiple flow monitors for different needs. A flow monitor is applied to a specific interface or port profile in a specific direction.

Flow Exporter

Use the flow exporter to define where the flow records are sent from the cache to the reporting server, which is called the NetFlow collector. An exporter definition includes the following.

- Destination IP address

- Source IP address to spoof
- UDP port number (where the collector is listening)
- Export format

Note NetFlow export packets use the source IP address assigned to the exporter. If the exporter does not have a source IP address assigned to it, the exporter will be inactive.

NetFlow Collector

Flows are expired when they are older than the inactive or active timeout.

The NetFlow data reporting process is as follows:

1. You configure NetFlow records to define the information that NetFlow gathers.
2. You configure Netflow monitor to capture flow records to the NetFlow cache.
3. You configure NetFlow export to send flows to the collector.
4. The Cisco Nexus 1000V searches the NetFlow cache for flows that have expired and exports them to the NetFlow collector server.
5. Flows are bundled together based on space availability in the UDP export packet and based on an export timer.
6. The NetFlow collector software creates real-time or historical reports from the data.

Exporting Flows to the NetFlow Collector Server

Timers determine when a flow is exported to the NetFlow collector server. See the following figure where a flow is ready for export when one of the following occurs:

- The flow is inactive for a certain amount of time, during which no new packets are received for the flow.
- The flow has lived longer than the active timer, such as a long FTP download.

- The flow cache is full and some flows must be aged out to make room for new flows.

Figure 6: Exporting Flows to the NetFlow Collector Server

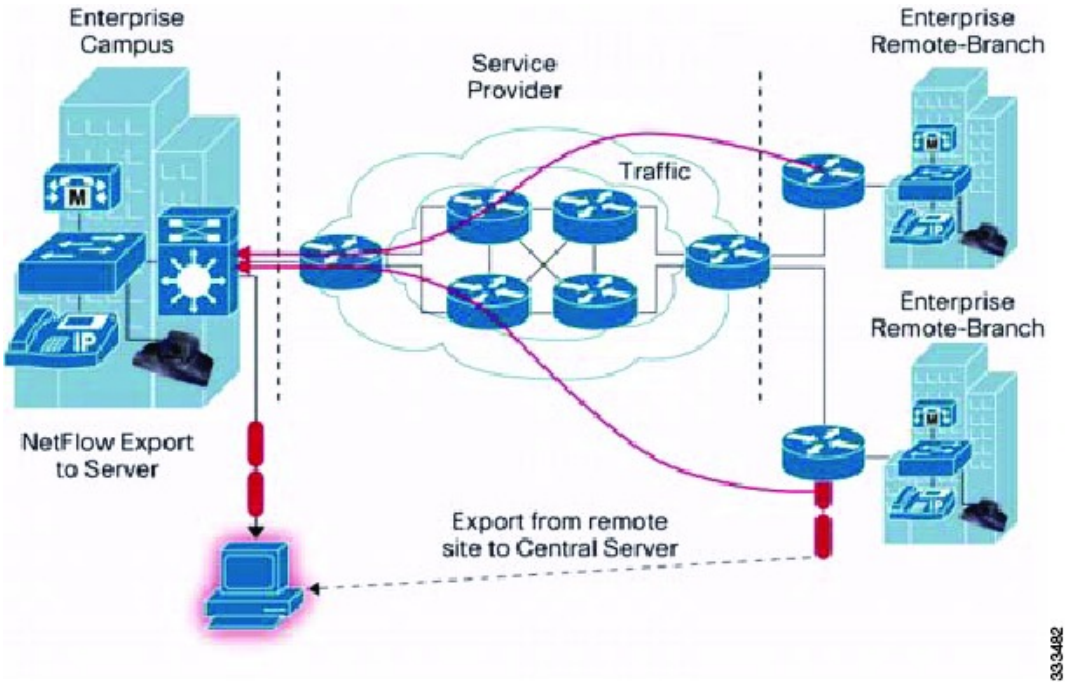

What NetFlow Data Looks Like

The following figure shows an example of NetFlow data.

Figure 7: NetFlow Cache Example

Network Analysis Module

You can also use the Cisco Network Analysis Module (NAM) to monitor NetFlow data sources. NAM enables traffic analysis views and reports such as hosts, applications, conversations, VLAN, and QoS.

High Availability for NetFlow

The Cisco Nexus 1000V supports stateful restarts for NetFlow. After a reboot or supervisor switchover, the Cisco Nexus 1000V applies the running configuration.

Prerequisites for NetFlow

- You must be aware of resource requirements because NetFlow consumes additional memory and CPU resources.

- Memory and CPU resources are provided by the Virtual Ethernet Module (VEM) hosting the flow monitor interface. Resources are limited by the number of CPU cores present on the VEM.

Guidelines and Limitations for NetFlow

- If a source is not configured, the NetFlow exporter remains disabled.
- In Cisco Nexus 1000V, the mgmt0 interface IP address of the VSM is configured by default as the source IP address for an exporter.
- Predefined flow records use 32-bit counters, which are recommended for data rates above 1 Gbps. For data rates that are higher than 1 Gbps, Cisco recommends that you manually configure the records to use 64-bit counters.
- The Cisco Nexus 1000V includes the following predefined flow records:
  - netflow-original—The Cisco Nexus 1000V predefined traditional IPv4 input NetFlow with origin ASs

    Note The routing-related fields in this predefined flow record are ignored.

  - netflow ipv4 original-input—The Cisco Nexus 1000V predefined traditional IPv4 input NetFlow
  - netflow ipv4 original-output—The Cisco Nexus 1000V predefined traditional IPv4 output NetFlow
  - netflow protocol-port—The Cisco Nexus 1000V predefined protocol and ports aggregation scheme
- Up to 256 NetFlow instances are allowed per Distributed Virtual Switch (DVS).
- Up to 32 NetFlow instances are allowed per host.
- A maximum of one flow monitor per interface per direction is allowed.
- Up to 8 flow monitors are allowed per VEM.
- Up to two flow exporters are allowed per monitor.
- Up to 32 NetFlow monitors, exporters, or records are allowed per DVS.
- Up to 8 NetFlow policies are allowed per host.
- NetFlow is not supported on port channels or interfaces in a port channel.

Default Settings for NetFlow

Parameters	Default
NetFlow version	9
source interface	mgmt0

Parameters	Default
match	direction and interface (incoming/outgoing)
flow monitor active timeout	1800
flow monitor inactive timeout	300
flow monitor cache size	4096
flow exporter UDP port transport udp command	9995
DSCP	default/best-effort (0)
VRF	default

Enabling the NetFlow Feature

Before You Begin

You are logged in to the CLI in EXEC mode.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **feature netflow**	Enables the NetFlow feature.
Step 3	switch(config)# **show feature**	(Optional) Displays the available features and whether or not they are enabled.
Step 4	switch(config)# **copy running-config startup-config**	(Optional) Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

This example shows how to enable the NetFlow feature:

```
switch# configure terminal
switch(config)# feature netflow
switch(config)#
```

Configuring Netflow

Defining a Flow Record

Before You Begin

- You know which of the options you want this flow record to match.
- You know which options you want this flow record to collect.

Note Although the following lines appear in the output of the show flow record command, the commands they are based on are not currently supported in Cisco Nexus 1000V. The use of these commands has no affect on the configuration.

```
collect routing source as
collect routing destination as
collect routing next-hop address ipv4
```

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **flow record** *name*	Creates a Flow Record by name, and places you in the CLI Flow Record Configuration mode for that specific record.
Step 3	switch(config#) **description** *string*	(Optional) Adds a description of up to 63 characters to the Flow Record and saves it to the running configuration.
Step 4	switch(config#) **match** {**ip** {**protocol** | **tos**} | **ipv4** {**destination address** | **source address**} | **transport** {**destination-port** | **source-port**}}	Defines the Flow Record to match one of the following and saves it in the running configuration. • ip: Matches one of the following IP options: ◦ protocol ◦ tos (type of service) • ipv4: Matches one of the following ipv4 address options: ◦ source address ◦ destination address • transport: Matches one of the following transport options: ◦ destination port ◦ source port

	Command or Action	Purpose
Step 5	switch(config)# **collect** {**counter** {**bytes** [**long**] | **packets** [**long**]} | **timestamp sys-uptime** | **transport tcp flags**}	Specifies a collection option to define the information to collect in the Flow Record and saves it in the running configuration. • counter: Collects Flow Record information in one of the following formats: ◦ bytes: collected in 32-bit counters unless the long 64-bit counter is specified. ◦ packets: collected in 32-bit counters unless the long 64-bit counter is specified. • timestamp sys-uptime: Collects the system up time for the first or last packet in the flow. • transport tcp flags: Collects the TCP transport layer flags for the packets in the flow.
Step 6	switch(config)# **show flow record** *name*	(Optional) Displays information about Flow Records.
Step 7	switch(config)# **copy running-config startup-config**	(Optional) Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

The following example shows how to create a flow record:

```
switch# configure terminal
switch(config)# flow record RecordTest
switch(config-flow-record)# description Ipv4flow
switch(config-flow-record)# match ipv4 destination address
switch(config-flow-record)# collect counter packets
switch(config-flow-record)# show flow record RecordTest
Flow record RecordTest:
    Description: Ipv4flow
    No. of users: 0
    Template ID: 0
    Fields:
        match ipv4 destination address
        match interface input
        match interface output
        match flow direction
        collect counter packets
switch(config-flow-record)#
```

Defining a Flow Exporter

A Flow Exporter defines where and how Flow Records are exported to the NetFlow Collector Server.

- Export format version 9 is supported.
- A maximum of two flow exporters per monitor are permitted.

Before You Begin

- You know the destination IP address of the NetFlow Collector Server.
- You know the source interface that Flow Records are sent from.
- You know the transport UDP that the Collector is listening on.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)#**flow exporter** *name*	Creates a Flow Exporter, saves it in the running configuration, and then places you in CLI Flow Exporter Configuration mode.
Step 3	switch(config-flow-exporter)# **description** *string*	Adds a description of up to 63 characters to this Flow Exporter and saves it in the running configuration.
Step 4	switch(config-flow-exporter)# **destination** {*ipv4-address* | *ipv6-address*}	Specifies the IP address of the destination interface for this Flow Exporter and saves it in the running configuration.
Step 5	switch(config-flow-exporter)# **dscp** *value*	Specifies the differentiated services codepoint value for this Flow Exporter, between 0 and 63, and saves it in the running configuration.
Step 6	switch(config-flow-exporter)# **source mgmt** *interface_number*	Specifies the interface and its number, from which the Flow Records are sent to the NetFlow Collector Server, and saves it in the running configuration.
Step 7	switch(config-flow-exporter)# **transport udp** *port-number*	Specifies the destination UDP port, between 0 and 65535, used to reach the NetFlow collecton, and saves it in the running configuration.
Step 8	switch(config-flow-exporter)# **version** {**9**}	Specifies NetFlow export version 9, saves it in the running configuration, and places you into the export version 9 configuration mode.
Step 9	switch(config-flow-exporter-version-9)# **option** {**exporter-stats** | **interface-table** | **sampler-table**} **timeout** *value*	Specifies one of the following version 9 exporter resend timers and its value, between 1 and 86400 seconds, and saves it in the running configuration. • exporter-stats • interface-table • sampler-table
Step 10	switch(config-flow-exporter-version-9)# **template data timeout** *seconds*	Sets the template data resend timer and its value, between 1 and 86400 seconds, and saves it in the running configuration.

	Command or Action	Purpose
Step 11	switch(config-flow-exporter-version-9)# **show flow exporter** [*name*]	(Optional) Displays information about the Flow Exporter.
Step 12	switch(config-flow-exporter-version-9)# **copy running-config startup-config**	Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

The following example shows how to create a flow exporter:

```
switch# configure terminal
switch(config)# flow exporter ExportTest
switch(config-flow-exporter)# description ExportHamilton
switch(config-flow-exporter)# destination 192.0.2.1
switch(config-flow-exporter)# dscp 2
switch(config-flow-exporter)# source mgmt 0
switch(config-flow-exporter)# transport udp 200
switch(config-flow-exporter)# version 9
switch(config-flow-exporter-version-9)# option exporter-stats timeout 1200
switch(config-flow-exporter-version-9)# template data timeout 1200
switch(config-flow-exporter-version-9)# show flow exporter ExportTest
Flow exporter ExportTest:
    Description: ExportHamilton
    Destination: 192.0.2.1
    VRF: default (1)
    Destination UDP Port 200
    Source Interface Mgmt0
    DSCP 2
    Export Version 9
        Exporter-stats timeout 1200 seconds
        Data template timeout 1200 seconds
    Exporter Statistics
        Number of Flow Records Exported 0
        Number of Templates Exported 0
        Number of Export Packets Sent 0
        Number of Export Bytes Sent 0
        Number of Destination Unreachable Events 0
        Number of No Buffer Events 0
        Number of Packets Dropped (No Route to Host) 0
        Number of Packets Dropped (other) 0
        Number of Packets Dropped (LC to RP Error) 0
        Number of Packets Dropped (Output Drops) 1
        Time statistics were last cleared: Never
switch(config-flow-exporter-version-9)# copy running-config startup-config
switch(config-flow-exporter-version-9)#
```

Defining a Flow Monitor

A Flow Monitor is associated with a Flow Record and a Flow Exporter.

A maximum of one flow monitor per interface per direction is permitted.

Before You Begin

- You know the name of an existing Flow Exporter to associate with this flow monitor.
- You know the name of an existing Flow Record to associate with this flow monitor. You can use either a flow record you previously created, or one of the following Cisco Nexus 1000V predefined flow records:

- netflow-original
- netflow ipv4 original-input
- netflow ipv4 original-output
- netflow protocol-port

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **flow monitor** *name*	Creates a flow monitor by name, saves it in the running configuration, and then places you in the CLI Flow Monitor Configuration mode.
Step 3	switch(config-flow-monitor)# **description** *string*	(Optional) For the specified flow monitor, adds a descriptive string of up to 63 alphanumeric characters, and saves it in the running configuration.
Step 4	switch(config-flow-monitor)# **exporter** *name*	For the specified flow monitor, adds an existing flow exporter and saves it in the running configuration.
Step 5	switch(config-flow-monitor)# **record** {*name* | **netflow** {**ipv4**}}	For the specified flow monitor, adds an existing flow record and saves it in the running configuration. • name: The name of a flow record you have previously created, or the name of a Cisco provided pre-defined flow record. • netflow: Traditional NetFlow collection schemes ipv4: Traditional IPv4 NetFlow collection schemes
Step 6	switch(config-flow-monitor)# **timeout** {**active** *value* | **inactive** *value*}	(Optional) For the specified flow monitor, specifies an aging timer and its value for aging entries from the cache, and saves them in the running configuration. • active: Active, or long, timeout. Allowable values are from 60 to 4092 seconds. Default is 1800. • inactive: Inactive or normal timeout. Allowable values are from 15 to 4092 seconds. Default is 300.
Step 7	switch(config-flow-monitor)# **cache** {**size** *value*}	(Optional) For the specified flow monitor, specifies the cache size, from 256 to 16384, entries, and saves it in the running configuration. Default is 4096. This option is used to limit the impact of the monitor cache on memory and performance.
Step 8	switch(config-flow-monitor)# **show flow monitor** [*name*]	(Optional) Displays information about existing flow monitors.

	Command or Action	Purpose
Step 9	switch(config-flow-monitor)# **copy running-config startup-config**	Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

The following example shows how to create a flow monitor:

```
switch# configure terminal
switch(config)# flow monitor MonitorTest
switch(config-flow-monitor)# description Ipv4Monitor
switch(config-flow-monitor)# exporter ExportTest
switch(config-flow-monitor)# record RecordTest
switch(config-flow-monitor)# cache size 15000
switch(config-flow-monitor)# timeout inactive 600
switch(config-flow-monitor)# show flow monitor MonitorTest
Flow Monitor monitortest:
    Use count: 0
    Inactive timeout: 600
    Active timeout: 1800
    Cache Size: 15000
switch(config-flow-monitor)#
```

Assigning a Flow Monitor to an Interface

Before You Begin

- You know the name of the flow monitor you want to use for the interface.
- You know the interface type and its number.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **interface** *interface-type interface-number*	Places you in the CLI Interface Configuration mode for the specified interface.
Step 3	switch(config)# **ip flow monitor** *name* {**input** | **output**}	For the specified interface, assigns a flow monitor for input or output packets and saves it in the running configuration.
Step 4	switch(config)# **show flow** *interface-type interface-number*	(Optional) For the specified interface, displays the NetFlow configuration.
Step 5	switch(config)# **copy running-config startup-config**	(Optional) Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

The following example shows how to assign a flow monitor to an interface:

```
switch# configure terminal
switch(config)# interface veth 2
switch(config-if)# ip flow monitor MonitorTest output
switch(config-if)# show flow interface veth 2
Interface veth 2:
    Monitor: MonitorTest
    Direction: Output
switch(config-if)#
```

Adding a Flow Monitor to a Port Profile

Before You Begin

- You are logged in to the CLI in EXEC mode.
- You have already created the flow monitor.
- If using an existing port profile, you have already created the port profile and you know its name.
- If creating a new port profile, you know the type of interface (Ethernet or vEthernet), and you know the name you want to give it.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **port-profile** [**type** {**ethernet** | **vethernet**}] *name*	Enters port profile configuration mode for the named port profile.
Step 3	switch(config-port-prof)# **ip flow monitor** *name* {**input** | **output**}	Applies a named flow monitor to the port profile for either incoming (input) or outgoing (output) traffic.
Step 4	switch(config-port-prof)# **show port-profile** [**brief** | **expand-interface** | **usage**] [**name** *profile-name*]	(Optional) Displays the configuration for verification.
Step 5	switch(config-port-prof)# **copy running-config startup-config**	(Optional) Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

This example shows how to add a flow monitor to a port profile:

```
switch# configure terminal
switch(config)# port-profile AccessProf
switch(config-port-prof)# ip flow monitor allacces4 output
switch(config-port-prof)# show port-profile name AccessProf
port-profile AccessProf
  type: vethernet
  status: disabled
  capability l3control: no
  pinning control-vlan: -
```

```
  pinning packet-vlan: -
  system vlans: none
  port-group:
  max ports: 32
  inherit:
  config attributes:
    ip flow monitor allaccess4 output
  evaluated config attributes:
    ip flow monitor allaccess4 output
  assigned interfaces:
switch(config-port-prof)#
```

Verifying the NetFlow Configuration

Use one of the following commands to verify the configuration:

Command	Purpose
show flow exporter [*name*]	Displays information about NetFlow flow exporter maps.
show flow interface [*interface-type number*]	Displays information about NetFlow interfaces.
show flow monitor [*name* [**cache module** *number* | **statistics module** *number*]]	Displays information about NetFlow flow monitors. **Note** The **show flow monitor cache module** command differs from the **show flow monitor statistics module** command in that the cache command also displays cache entries . Since each processor has its own cache, all output of these commands is based on the number of processors on the server (also called module or host). When more than one processor is involved in processing packets for a single flow, then the same flow appears for each processor.
show flow record [*name*]	Displays information about NetFlow flow records.

Example: show flow exporter

```
switch(config-flow-exporter-version-9)# show flow exporter ExportTest
Flow exporter ExportTest:
    Description: ExportHamilton
    Destination: 192.0.2.1
    VRF: default (1)
    Destination UDP Port 200
    Source Interface 2
    DSCP 2
    Export Version 9
        Exporter-stats timeout 1200 seconds
        Data template timeout 1200 seconds
    Exporter Statistics
        Number of Flow Records Exported 0
        Number of Templates Exported 0
        Number of Export Packets Sent 0
        Number of Export Bytes Sent 0
        Number of Destination Unreachable Events 0
```

```
        Number of No Buffer Events 0
        Number of Packets Dropped (No Route to Host) 0
        Number of Packets Dropped (other) 0
        Number of Packets Dropped (LC to RP Error) 0
        Number of Packets Dropped (Output Drops) 1
        Time statistics were last cleared: Never
switch(config-flow-exporter-version-9)#
```

Example: show flow interface

```
switch(config-if)# show flow interface VEth2
Interface veth2:
    Monitor: MonitorTest
    Direction: Output
switch(config-if)#
```

Example: show flow monitor

```
switch(config)# show flow monitor
Flow Monitor MonitorTest:
    Description: Ipv4Monitor
    Use count: 1
    Flow Record: test
    Flow Exporter: ExportTest
    Inactive timeout: 15
    Active timeout: 1800
    Cache Size: 15000
Flow Monitor MonitorIpv4:
    Description: exit
    Use count: 70
    Flow Record: RecordTest
    Flow Exporter: ExportIpv4
    Inactive timeout: 15
    Active timeout: 1800
    Cache Size: 4096
switch(config)#
```

Example: show flow monitor cache module

```
switch# show flow monitor test_mon cache module 5
Cache type:                           Normal
Cache size (per-processor):           4096
High Watermark:                       2
Flows added:                          102
Flows aged:                           099
    - Active timeout                  0
    - Inactive timeout                099
    - Event aged                      0
    - Watermark aged                  0
    - Emergency aged                  0
    - Permanent                       0
    - Immediate aged                  0
    - Fast aged                       0

Cache entries on Processor0
    - Active Flows:                   2
    - Free Flows:                     4094

  IPV4 SRC ADDR    IPV4 DST ADDR  IP PROT            INTF INPUT           INTF OUTPUT  FLOW
 DIRN
===============  ===============  =======  ====================  ====================
=========
        0.0.0.0  255.255.255.255  17                     Veth1
 Input
   7.192.192.10      7.192.192.2  1                      Veth1                Eth5/2
 Input

Cache entries on Processor1
    - Active Flows:                   0
    - Free Flows:                     4096
```

```
Cache entries on Processor2
    - Active Flows:                 1
    - Free Flows:                   4095

  IPV4 SRC ADDR    IPV4 DST ADDR  IP PROT            INTF INPUT           INTF OUTPUT  FLOW
 DIRN
===============  ===============  =======  ====================  ====================
=========
   7.192.192.10      7.192.192.1  1                       Veth1                Eth5/2
 Input

Cache entries on Processor3
    - Active Flows:                 0
    - Free Flows:                   4096

Cache entries on Processor4
    - Active Flows:                 0
    - Free Flows:                   4096

Cache entries on Processor5
    - Active Flows:                 0
    - Free Flows:                   4096

Cache entries on Processor6
    - Active Flows:                 0
    - Free Flows:                   4096

Cache entries on Processor7
    - Active Flows:                 0
    - Free Flows:                   4096
switch#
```

Example: show flow monitor statistics module

```
switch# show flow monitor test_mon statistics module 5
Cache type:                         Normal
Cache size (per-processor):         4096
High Watermark:                     2
Flows added:                        105
Flows aged:                         103
    - Active timeout                0
    - Inactive timeout              103
    - Event aged                    0
    - Watermark aged                0
    - Emergency aged                0
    - Permanent                     0
    - Immediate aged                0
    - Fast aged                     0

Cache entries on Processor0
    - Active Flows:                 0
    - Free Flows:                   4096

Cache entries on Processor1
    - Active Flows:                 1
    - Free Flows:                   4095

Cache entries on Processor2
    - Active Flows:                 1
    - Free Flows:                   4095

Cache entries on Processor3
    - Active Flows:                 0
    - Free Flows:                   4096

Cache entries on Processor4
    - Active Flows:                 0
    - Free Flows:                   4096

Cache entries on Processor5
    - Active Flows:                 0
```

```
    - Free Flows:                   4096

Cache entries on Processor6
    - Active Flows:                 0
    - Free Flows:                   4096

Cache entries on Processor7
    - Active Flows:                 0
    - Free Flows:                   4096
switch#
```

Example: show flow record

```
switch(config-flow-record)# show flow record RecordTest
Flow record RecordTest:
    Description: Ipv4flow
    No. of users: 0
    Template ID: 0
    Fields:
        match ipv4 destination address
        match interface input
        match interface output
        match flow direction
        collect counter packets
switch(config-flow-record)#
```

Netflow Example Configuration

The following example shows how to configure flow monitor using a new flow record and apply it to an interface:

```
switch# configure terminal
switch(config)# flow record RecordTest
switch(config-flow-record)# description Ipv4flow
switch(config-flow-record)# match ipv4 destination address
switch(config-flow-record)# collect counter packets
switch(config-flow-record)# exit
switch(config)# flow exporter ExportTest
switch(config-flow-exporter)# description ExportHamilton
switch(config-flow-exporter)# destination 192.0.2.1
switch(config-flow-exporter)# dscp 2
switch(config-flow-exporter)# source mgmt 0
switch(config-flow-exporter)# transport udp 200
switch(config-flow-exporter)# version 9
switch(config-flow-exporter-version-9)# option exporter-stats timeout 1200
switch(config-flow-exporter-version-9)# template data timeout 1200
switch(config-flow-exporter-version-9)# exit
switch(config-flow-exporter)# exit
switch(config)# flow monitor MonitorTest
switch(config-flow-monitor)# description Ipv4Monitor
switch(config-flow-monitor)# exporter ExportTest
switch(config-flow-monitor)# record RecordTest
switch(config-flow-monitor)# exit
switch(config)# interface veth 2/1
switch(config-if)# ip flow monitor MonitorTest output
switch(config-if)# show flow interface veth 2
Interface veth 2:
    Monitor: MonitorTest
    Direction: Output
switch(config-if)#
```

The following example shows how to configure flow monitor using a pre-defined record and apply it to an interface:

```
switch# configure terminal
switch(config)# flow exporter ExportTest
switch(config-flow-exporter)# description ExportHamilton
```

```
switch(config-flow-exporter)# destination 192.0.2.1
switch(config-flow-exporter)# dscp 2
switch(config-flow-exporter)# source mgmt 0
switch(config-flow-exporter)# transport udp 200
switch(config-flow-exporter)# version 9
switch(config-flow-exporter-version-9)# option exporter-stats timeout 1200
switch(config-flow-exporter-version-9)# template data timeout 1200
switch(config-flow-exporter-version-9)# exit
switch(config-flow-exporter)# exit
switch(config)# flow monitor MonitorTest
switch(config-flow-monitor)# description Ipv4Monitor
switch(config-flow-monitor)# exporter ExportTest
switch(config-flow-monitor)# record netflow-original
switch(config-flow-monitor)# exit
switch(config)# interface veth 2/1
switch(config-if)# ip flow monitor MonitorTest output
switch(config-if)# show flow interface veth 2
Interface veth 2:
    Monitor: MonitorTest
    Direction: Output
switch(config-if)#
```

Related Documents for NetFlow

Related Topic	Document Title
Cisco NetFlow Overview	http://cisco.com/en/US/products/ps6601/products_ios_protocol_group_home.html

Feature History for NetFlow

This table includes only the updates for those releases that have resulted in additions or changes to the feature.

Feature Name	Releases	Feature Information
NAM support for NetFlow data sources	4.0(4)SV1(3)	NAM support for NetFlow data sources was added.
NetFlow	4.0(4)SV1(1)	NetFlow was introduced.

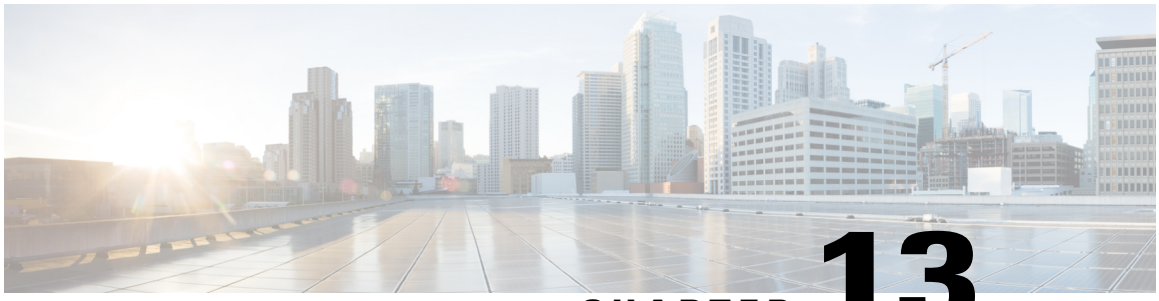

CHAPTER 13

Configuring System Message Logging

This chapter contains the following sections:

- Information About System Message Logging, page 141
- System Message Logging Facilities, page 142
- Guidelines and Limitations for System Message Logging, page 146
- Default System Message Logging Settings, page 146
- Configuring System Message Logging, page 147
- Verifying the System Message Logging Configuration, page 153
- System MEssage Logging Example Configuration, page 156
- Feature History for System Message Logging, page 156

Information About System Message Logging

You can use system message logging to control the destination and to filter the severity level of messages that system processes generate. You can configure logging to terminal sessions, a log file, and syslog servers on remote systems. System message logging supports IPv4 and IPv6 addresses.

System message logging is based on RFC 3164. For more information about the system message format and the messages that the device generates, see the *Cisco NX-OS System Messages Reference*.

By default, the device outputs messages to terminal sessions.

The following table describes the severity levels used in system messages. When you configure the severity level, the system outputs messages at that level and lower.

Level	Description
0 – emergency	System unusable
1 – alert	Immediate action needed
2 – critical	Critical condition

Level	Description
3 – error	Error condition
4 – warning	Warning condition
5 – notification	Normal but significant condition
6 – informational	Informational message only
7 – debugging	Appears during debugging only

The device logs the most recent 100 messages of severity 0, 1, or 2.

You can configure which system messages should be logged based on the facility that generated the message and its severity level.

Syslog servers run on remote systems that are configured to log system messages based on the syslog protocol. You can configure up to three syslog servers.

Note When the device first initializes, messages are sent to syslog servers only after the network is initialized.

System Message Logging Facilities

The following table lists the facilities that you can use in system message logging configuration

Facility	Description
aaa	AAA manager
aclmgr	ACL manager
adjmgr	Adjacency Manager
all	Keyword that represents all facilities
arbiter	Arbiter manager
arp	ARP manager
auth	Authorization system
authpriv	Private authorization system
bootvar	Bootvar
callhome	Call home manager

Facility	Description
capability	MIG utilities daemon
cdp	CDP manager
cert-enroll	Certificate enroll daemon
cfs	CFS manager
clis	CLIS manager
cmpproxy	CMP proxy manager
copp	CoPP manager
core	Core daemon
cron	Cron and at scheduling service
daemon	System daemons
dhcp	DHCP manager
diagclient	GOLD diagnostic client manager
diagmgr	GOLD diagnostic manager
eltm	ELTM manager
ethpm	Ethernet PM manager
evmc	EVMC manager
evms	EVMS manager
feature-mgr	Feature manager
fs-daemon	Fs daemon
ftp	File transfer system
glbp	GLBP manager
hsrp	HSRP manager
im	IM manager
ipconf	IP configuration manager

Facility	Description
ipfib	IP FIB manager
kernel	OS kernel
l2fm	L2 FM manager
l2nac	L2 NAC manager
l3vm	L3 VM manager
license	Licensing manager
local0	Local use daemon
local1	Local use daemon
local2	Local use daemon
local3	Local use daemon
local4	Local use daemon
local5	Local use daemon
local6	Local use daemon
local7	Local use daemon
lpr	Line printer system
m6rib	M6RIB manager
mail	Mail system
mfdm	MFDM manager
module	Module manager
monitor	Ethernet SPAN manager
mrib	MRIB manager
mvsh	MVSH manager
news	USENET news
nf	NF manager

Facility	Description
ntp	NTP manag
otm	GLBP manager
pblr	PBLR manager
pfstat	PFSTAT manager
pixm	PIXM manager
pixmc	PIXMC manager
pktmgr	Packet manager
platform	Platform manager
pltfm_config	PLTFM configuration manager
plugin	Plug-in manager
port-channel	Port channel manager
port_client	Port client manager
port_lb	Diagnostic port loopback test manager
qengine	Q engine manager
radius	RADIUS manager
res_mgr	Resource manager
rpm	RPM manager
security	Security manager
session	Session manager
spanning-tree	Spanning tree manager
syslog	Internal syslog manager
sysmgr	System manager
tcpudp	TCP and UDP manager
u2	U2 manager

Facility	Description
u6rib	U6RIB manager
ufdm	UFDM manager
urib	URIB manager
user	User process
uucp	Unix-to-Unix copy system
vdc_mgr	VDC manager
vlan_mgr	VLAN manager
vmm	VMM manager
vshd	VSHD manager
xbar	XBAR manager
xbar_client	XBAR client manager
xbar_driver	XBAR driver manager
xml	XML agent

Guidelines and Limitations for System Message Logging

System messages are logged to the console and the logfile by default.

Default System Message Logging Settings

Parameter	Default
Console logging	Enabled at severity level 2
Monitor logging	Enabled at severity level 5
Log file logging	Enabled to log messages at severity level 5
Module logging	Enabled at severity level 5
Facility logging	Enabled

Parameter	Default
Time-stamp units	Seconds
syslog server logging	Disabled
syslog server configuration distribution	Disabled

Configuring System Message Logging

This section includes the following topics:

- Configuring System Message Logging to Terminal Sessions
- Restoring System Message Logging Defaults for Terminal Sessions
- Configuring System Message Logging for Modules
- Restoring System Message Logging Defaults for Modules
- Configuring System Message Logging for Facilities
- Restoring System Message Logging Defaults for Facilities
- Configuring syslog Servers
- Restoring System Message Logging Defaults for Servers
- Using a UNIX or Linux System to Configure Logging
- Displaying Log Files

Configuring System Message Logging to Terminal Sessions

You can log messages by severity level to console, telnet, and SSH sessions. By default, logging is enabled for terminal sessions.

Procedure

	Command or Action	Purpose
Step 1	switch# **terminal monitor**	Enables the device to log messages to the console.
Step 2	switch# **configure terminal**	Enters global configuration mode.
Step 3	switch(config)# **logging console** [*severity-level*]	Configures the device to log messages to the console session based on a specified severity level or higher. The default severity level is 2.
Step 4	switch(config)# **show logging console**	(Optional) Displays the console logging configuration.

	Command or Action	Purpose
Step 5	switch(config)# **logging monitor** [*severity-level*]	Enables the device to log messages to the monitor based on a specified severity level or higher. The configuration applies to telnet and SSH sessions. The default severity level is 2.
Step 6	switch(config)# **show logging monitor**	(Optional) Displays the monitor logging configuration.
Step 7	switch(config)# **copy running-config startup-config**	(Optional) Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

```
switch# terminal monitor
switch# configure terminal
switch(config)# logging console 2
switch(config)# show logging console
Logging console: enabled (Severity: critical)
switch(config)# logging monitor 3
switch(config)# show logging monitor
Logging monitor: enabled (Severity: errors)
switch(config)# copy running-config startup-config
switch(config)#
```

Restoring System Message Logging Defaults for Terminal Sessions

You can use the following commands in the CLI Global Configuration mode to restore default settings for system message logging for terminal sessions.

Command	Description
no logging console [*severity-level*]	Disables the device from logging messages to the console.
no logging monitor [*severity-level*]	Disables logging messages to telnet and SSH sessions.

Configuring System Message Logging for Modules

You can configure the severity level and time-stamp units of messages logged by modules.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.

	Command or Action	Purpose
Step 2	switch(config)# **logging module** [*severity-level*]	Enables module log messages that have the specified severity level or higher. If the severity level is not specified, the default of 5 is used.
Step 3	switch(config)# **show logging module**	
Step 4	switch(config)# **logging timestamp** {**microseconds** | **milliseconds** | **seconds**}	Sets the logging time-stamp units. The default unit is seconds.
Step 5	switch(config)# show logging timestamp	(Optional) Displays the logging time-stamp units configured.
Step 6	switch(config)# **copy running-config startup-config**	(Optional) Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

The following example shows how to configure system message logging for modules.

```
switch# configure terminal
switch(config)# logging module 3
switch(config)# show logging module
Logging linecard: enabled (Severity: errors)
switch(config)# logging timestamp microseconds
switch(config)# show logging timestamp
Logging timestamp: Microseconds
switch(config)# copy running-config startup-config
switch(config)#
```

Restoring System Message Logging Defaults for Modules

You can use the following commands in the CLI Global Configuration mode to restore default settings for system message logging for modules.

Command	Description
no logging module [*severity-level*]	Restores the default severity level for logging module system messages.
no logging timestamp {**microseconds** | **milliseconds** | **seconds**}	Resets the logging time-stamp unit to the default (seconds).

Configuring System Message Logging for Facilities

Use this procedure to configure the severity level and time-stamp units of messages logged by facilities.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **logging module** [*severity-level*]	Enables module log messages that have the specified severity level or higher. If the severity level is not specified, the default of 5 is used.
Step 3	switch(config)# **show logging module**	(Optional) Displays the module logging configuration.
Step 4	switch(config)# **logging timestamp** {**microseconds** | **milliseconds** | **seconds**}	Sets the logging time-stamp units. The default unit is seconds.
Step 5	switch(config)# **show logging timestamp**	(Optional) Copies the running configuration to the startup configuration.
Step 6	switch(config)# **copy running-config startup-config**	(Optional) Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

The following example shows how to configure system message logging for modules.

```
switch# configure terminal
switch(config)# logging module 3
switch(config)# show logging module
Logging linecard: enabled (Severity: errors)
switch(config)# logging timestamp microseconds
switch(config)# show logging timestamp
Logging timestamp: Microseconds
switch(config)# copy running-config startup-config
switch(config)#
```

Restoring System Message Logging Defaults for Facilities

You can use the following commands to restore system message logging defaults for facilities.

Command	Description
no logging level [*facility severity-level*]	Restores the default logging severity level for the specified facility. If you do not specify a facility and severity level, the device resets all facilities to their default levels.
no logging timestamp {**microseconds** | **milliseconds** | **seconds**}	Resets the logging time-stamp unit to the default (seconds).

Configuring syslog Servers

Use this procedure to configure syslog servers for system message logging.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **logging server** *host* [*severity-level* [**use-vrf** *vrf-name*]]	Configures a syslog server at the specified host name or IPv4 or IPv6 address. You can limit logging of messages to a particular VRF by using the use_vrf keyword. Severity levels range from 0 to 7. The default outgoing facility is local7.
Step 3	switch(config)# **show logging server**	(Optional) Displays the syslog server configuration.
Step 4	switch(config)# **copy running-config startup-config**	(Optional) Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

The following example shows how to forward all messages on facility local7.

```
switch# configure terminal
switch(config)# logging server 10.10.2.2 7
switch(config)# show logging server
Logging server: enabled {10.10.2.2}
        server severity: debugging
        server facility: local7
switch(config)# copy running-config startup-config
switch(config)#
```

Restoring System Message Logging Defaults for Servers

You can use the following command to restore server system message logging default.

Command	Description
no logging server *host*	Removes the logging server for the specified host.

Using a UNIX or Linux System to Configure Logging

Before You Begin

The following UNIX or Linux fields must be configured for syslog.

Field	Description
Facility	Creator of the message, which can be auth, authpriv, cron, daemon, kern, lpr, mail, mark, news, syslog, user, local0 through local7, or an asterisk (*) for all. These facility designators allow you to control the destination of messages based on their origin. **Note** Check your configuration before using a local facility.
Level	Minimum severity level at which messages are logged, which can be debug, info, notice, warning, err, crit, alert, emerg, or an asterisk (*) for all. You can use none to disable a facility.
Action	Destination for messages, which can be a filename, a host name preceded by the at sign (@), or a comma-separated list of users or an asterisk (*) for all logged-in users.

Procedure

Step 1 On the UNIX or Linux system, add the following line to the file, /var/log/myfile.log:
facility.level <five tab characters> action

Step 2 Create the log file by entering these commands at the shell prompt:
$ touch /var/log/myfile.log

$ chmod 666 /var/log/myfile.log

Step 3 Make sure the system message logging daemon reads the new changes by checking myfile.log after entering this command:
$ kill -HUP ~cat /etc/syslog.pid~

Displaying Log Files

Use this procedure to display messages in the log file.

Procedure

	Command or Action	Purpose
Step 1	**show logging last** *number-lines*	Displays the last number of lines in the logging file. You can specify from 1 to 9999 for the last number of lines.

The following example shows the last five lines in the logging file.

```
switch# show logging last 5
2008 Aug 31 09:37:04 CP-beta2 %KERN-3-SYSTEM_MSG: packet_recvms
g: truncated packet (size=1514 left=1500) - kernel
2008 Aug 31 09:37:04 CP-beta2 %KERN-3-SYSTEM_MSG: packet_recvms
g: truncated packet (size=1514 left=1500) - kernel
2008 Aug 31 09:37:05 CP-beta2 %KERN-3-SYSTEM_MSG: packet_recvms
g: truncated packet (size=1514 left=1500) - kernel
2008 Aug 31 09:37:05 CP-beta2 %KERN-3-SYSTEM_MSG: packet_recvms
g: truncated packet (size=1514 left=1500) - kernel
2008 Aug 31 09:37:05 CP-beta2 %KERN-3-SYSTEM_MSG: packet_recvms
g: truncated packet (size=1514 left=1500) - kernel
switch#
```

Verifying the System Message Logging Configuration

Use one of the following commands to verify the configuration:

Command	Purpose
show logging console	Displays the console logging configuration.
show logging info	Displays the logging configuration.
show logging last *number-lines*	Displays the last number of lines of the log file.
show logging level [*facility*]	show logging level [facility]
show logging module	Displays the module logging configuration.
show logging monitor	Displays the monitor logging configuration.
show logging server	Displays the syslog server configuration.
show logging session	Displays the logging session status.
show logging status	Displays the logging status.
show logging timestamp	Displays the logging time-stamp units configuration.

Example: show logging console

```
switch# show logging console
Logging console:                disabled
switch#
```

Example: show logging info

```
switch# show logging info
Logging console:                enabled (Severity: critical)
Logging monitor:                enabled (Severity: notifications)
Logging linecard:               enabled (Severity: notifications)
Logging timestamp:              Seconds
Logging server:                 disabled
Logging logfile:                enabled
```

```
        Name - g/external/messages: Severity - notifications Size - 4194304

Facility        Default Severity        Current Session Severity
--------        ----------------        ------------------------
aaa                     2                       2
auth                    0                       0
authpriv                3                       3
bootvar                 5                       5
callhome                2                       2
cdp                     2                       2
cert_enroll             2                       2
cfs                     3                       3
confcheck               2                       2
cron                    3                       3
daemon                  3                       3
diagclient              2                       2
diagmgr                 2                       2
eth_port_channel        5                       5
ethpm                   5                       5
evmc                    5                       5
evms                    2                       2
feature-mgr             2                       2
ftp                     3                       3
ifmgr                   5                       5
igmp_1                  3                       3
ip                      2                       2
ipv6                    2                       2
kern                    6                       6
l2fm                    2                       2
licmgr                  6                       6
local0                  3                       3
local1                  3                       3
local2                  3                       3
local3                  3                       3
local4                  3                       3
local5                  3                       3
local6                  3                       3
local7                  3                       3
lpr                     3                       3
mail                    3                       3
mfdm                    2                       2
module                  5                       5
monitor                 7                       7
msp                     2                       2
mvsh                    2                       2
news                    3                       3
ntp                     2                       2
otm                     3                       3
pblr                    2                       2
pixm                    2                       2
pixmc                   2                       2
platform                5                       5
portprofile             5                       5
private-vlan            3                       3
radius                  2                       2
res_mgr                 2                       2
rpm                     2                       2
sal                     2                       2
securityd               2                       2
sksd                    3                       3
stp                     3                       3
syslog                  3                       3
sysmgr                  3                       3
ufdm                    2                       2
urib                    3                       3
user                    3                       3
uucp                    3                       3
vdc_mgr                 6                       6
vim                     5                       5
vlan_mgr                2                       2
vms                     5                       5
vshd                    5                       5
xmlma                   3                       3
```

```
0(emergencies)          1(alerts)       2(critical)
3(errors)               4(warnings)     5(notifications)
6(information)          7(debugging)
switch#
```

Example: show logging last

```
switch# show logging last 5
2008 Jul 29 17:52:42 S22-DCOS %ETHPORT-5-IF_UP: Interface Ethernet2/5 is up in mode access
2008 Jul 29 17:52:43 S22-DCOS %ETHPORT-5-IF_UP: Interface Ethernet2/2 is up in mode trunk
2008 Jul 29 17:52:43 S22-DCOS %ETHPORT-5-IF_UP: Interface Ethernet2/4 is up in mode access
2008 Jul 29 17:53:04 S22-DCOS %SYSMGR-3-BASIC_TRACE: process_cfg_write: PID 1858 with message
 rcvd cfg_action from
sap 0x545 for vdc 1 at time 1217353984 .
2008 Jul 29 17:53:04 S22-DCOS clis[2558]: CLI-3-NVDB: Batched send failed for component:
clic
switch#
```

Example: show logging level aaa

```
switch# show logging level aaa
Facility        Default Severity        Current Session Severity
--------        ----------------        ------------------------
aaa                     2                       2

0(emergencies)          1(alerts)       2(critical)
3(errors)               4(warnings)     5(notifications)
6(information)          7(debugging)
switch#
```

Example: show logging module

```
switch# show logging module
Logging linecard:               enabled (Severity: notifications)
switch#
```

Example: show logging monitor

```
switch# show logging monitor
Logging monitor:                enabled (Severity: errors)
switch#
```

Example: show logging server

```
switch# show logging server
Logging server:                 enabled
{10.10.2.2}
        server severity:        debugging
        server facility:        local7
switch#
```

Example: show logging session status

```
switch# show logging session status
Last Action Time Stamp     : Fri Nov 18 11:28:55 1910
Last Action                : Distribution Enable
Last Action Result         : Success
Last Action Failure Reason : none
switch#
```

Example: show logging status

```
switch# show logging status
Fabric Distribute     : Enabled
Session State         : IDLE
switch#
```

Example: show logging timestamp

```
switch# show logging timestamp
Logging timestamp:              Seconds
switch#
```

System MEssage Logging Example Configuration

The following example shows how to configure system message logging:

```
switch# configure terminal
switch(config)# logging console 3
switch(config)# logging monitor 3
switch(config)# logging logfile my_log 6
switch(config)# logging module 3
switch(config)# logging level aaa 2
switch(config)# logging timestamp milliseconds
switch(config)# logging distribute
switch(config)# logging server 172.28.254.253
switch(config)# logging server 172.28.254.254 5 local3
switch(config)# logging commit
switch(config)# copy running-config startup-config
switch(config)#
```

Feature History for System Message Logging

Feature Name	Releases	Feature Information
System Message Logging	4.0(4)SV1(1)	This feature was introduced.

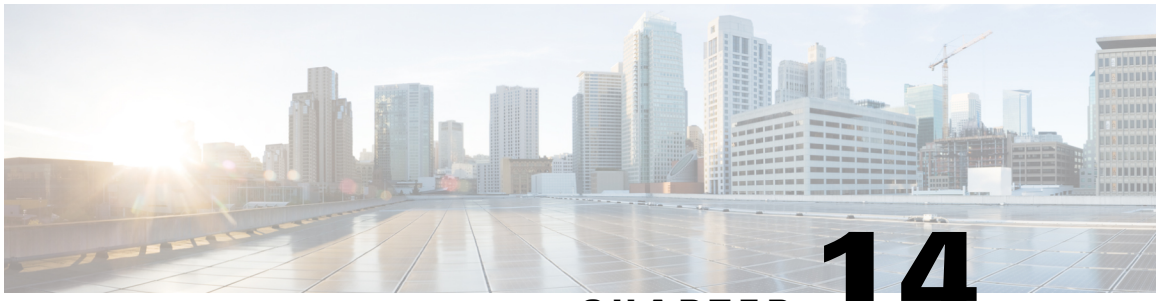

CHAPTER 14

Configuring iSCSI Multipath

This chapter contains the following sections:

- Information About iSCSI Multipath, page 157
- Guidelines and Limitations, page 160
- Pre-requisites, page 161
- Default Settings, page 161
- Configuring iSCSI Multipath, page 162
- Uplink Pinning and Storage Binding, page 162
- Converting to a Hardware iSCSI Configuration, page 169
- Changing the VMkernel NIC Access VLAN, page 172
- Verifying the iSCSI Multipath Configuration, page 175
- Managing Storage Loss Detection, page 176
- Related Documents, page 178
- Feature History for iSCSI Multipath, page 178

Information About iSCSI Multipath

This section includes the following topics:

- Overview
- Supported iSCSI Adapters
- iSCSI Multipath Setup on the VMware SwitchVirtual Switch

Overview

The iSCSI multipath feature sets up multiple routes between a server and its storage devices for maintaining a constant connection and balancing the traffic load. The multipathing software handles all input and output requests and passes them through on the best possible path. Traffic from host servers is transported to shared storage using the iSCSI protocol that packages SCSI commands into iSCSI packets and transmits them on the Ethernet network.

iSCSI multipath provides path failover. In the event a path or any of its components fails, the server selects another available path. In addition to path failover, multipathing reduces or removes potential bottlenecks by distributing storage loads across multiple physical paths.

The daemon on an KVM server communicates with the iSCSI target in multiple sessions using two or more Linux kernel NICs on the host and pinning them to physical NICs on the Cisco Nexus 1000V. Uplink pinning is the only function of multipathing provided by the Cisco Nexus 1000V. Other multipathing functions such as storage binding, path selection, and path failover are provided by code running in the Linux kernel.

Setting up iSCSI Multipath is accomplished in the following steps:

1. Uplink Pinning

   Each Linux kernel port created for iSCSI access is pinned to one physical NIC. This overrides any NIC teaming policy or port bundling policy. All traffic from the Linux kernel port uses only the pinned uplink to reach the upstream switch.

2. Storage Binding

   Each Linux kernel port is pinned to the iSCSI host bus adapter (VMHBA) associated with the physical NIC to which the Linux kernel port is pinned.

   The ESX or ESXi host creates the following VMHBAs for the physical NICs.

   - In Software iSCSI, only one VMHBA is created for all physical NICs.
   - In Hardware iSCSI, one VMHBA is created for each physical NIC that supports iSCSI offload in hardware.

For detailed information about how to use sn iSCSI storage area network (SAN), see the iSCSI SAN Configuration Guide.

Supported iSCSI Adapters

The default settings in the iSCSI Multipath configuration are listed in the following table.

Parameter	Default
Type (port-profile)	vEthernet
Description (port-profile)	None
Linux port group name (port-profile)	The name of the port profile
Switchport mode (port-profile)	Access

Parameter	Default
State (port-profile)	Disabled

iSCSI Multipath Setup on the VMware Switch

Before enabling or configuring multipathing, networking must be configured for the software or hardware iSCSI adapter. This involves creating a Linux kernel iSCSI port for the traffic between the iSCSI adapter and the physical NIC.

Uplink pinning is done manually by the admin directly on the OpenStack controller.

Storage binding is also done manually by the admin directly on the KVM host or using RCLI.

For software iSCSI, only oneVMHBA is required for the entire implementation. All Linux kernel ports are bound to this adapter. For example, in the following illustration, both vmk1 and vmk2 are bound to VMHBA35.

For hardware iSCSI, a separate adapter is required for each NIC. Each Linux kernel port is bound to the adapter of the physical KVM NIC to which it is pinned. For example, in the following illustration, vmk1 is bound to VMHBA33, the iSCSI adapter associated with vmnic1 and to which vmk1 is pinned. Similarly vmk2 is bound to VMHBA34.

Figure 8: iSCSI Multipathing

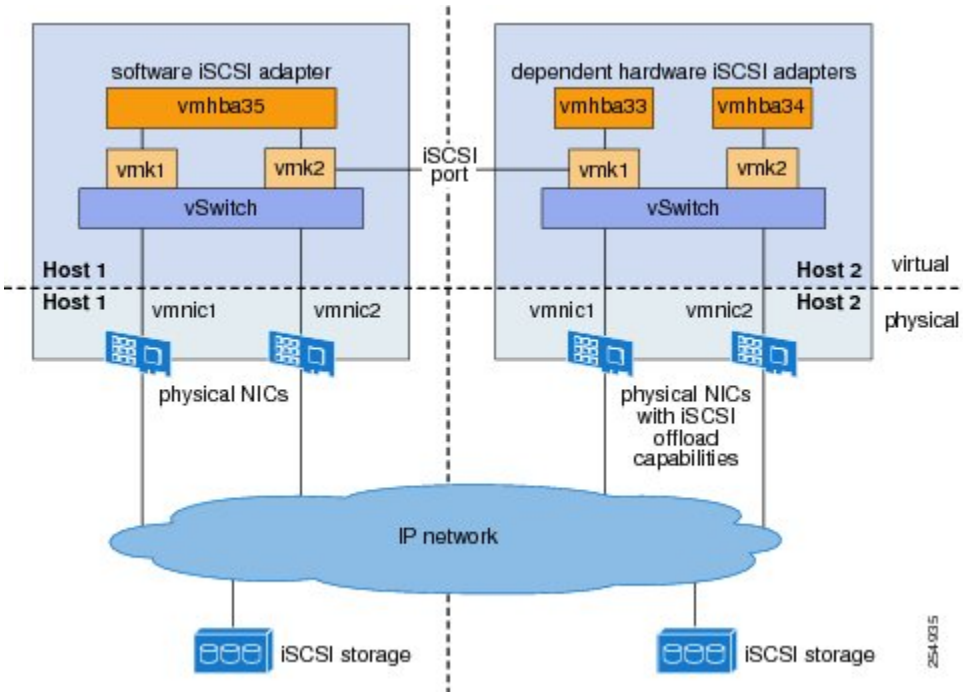

The following are the adapters and NICs used in the hardware and software iSCSI multipathing configuration shown in the iSCSI Multipath illustration.

Software HBA	Linux kernel NIC	KVM NIC
VMHBA35	1	1
	2	2
Hardware HBA		
VMHBA33	1	1
VMHBA34	2	2

Guidelines and Limitations

The following are guidelines and limitations for the iSCSI multipath feature:

- Only port profiles of type vEthernet can be configured with **capability iscsi-multipath**.
- The port profile used for iSCSI multipath must be an access port profile, not a trunk port profile.
- The following are not allowed on a port profile configured with capability iscsi-multipath:
  - The port profile cannot also be configured with **capability l3 control**
  - A system VLAN change when the port profile is inherited by VMkernel NIC.
  - An access VLAN change when the port profile is inherited by VMkernel NIC.
  - A port mode change to trunk mode.
- Only VMkernel NIC ports can inherit a port profile configured with **capability iscsi-multipath**capability iscsi-multipath.
- The Cisco Nexus 1000V imposes the following limitations if you try to override its automatic uplink pinning.
  - A VMkernel port can only be pinned to one physical NIC.
  - Multiple VMkernel ports can be pinned to a software physical NIC.
  - Only one VMkernel port can be pinned to a hardware physical NIC.
- The iSCSI initiators and storage must already be operational.
- VMkernel ports must be created before enabling or configuring the software or hardware iSCSI for multipathing.
- VMkernel networking must be functioning for the iSCSI traffic.
- Before removing from the DVS an uplink to which an activeVMkernel NIC is pinned, you must first remove the binding between the VMkernel NIC and its VMHBA. The following system message displays as a warning:

```
vsm# 2010 Nov 10 02:22:12 sekrishn-bl-vsm %VEM_MGR-SLOT8-1-VEM_SYSLOG_ALERT: sfport :
 Removing Uplink Port Eth8/3 (ltl 19), when vmknic lveth8/1 (ltl 49) is pinned to this
```

```
port for iSCSI Multipathing
```

- Hardware iSCSI is new in Cisco Nexus 1000V Release 4.2(1)SV1(5.1). If you configured software iSCSI multipathing in a previous release, the following are preserved after upgrade:
  - multipathing
  - software iSCSI uplink pinning
  - VMHBA adapter bindings
  - host access to iSCSI storage

    To leverage the hardware offload capable NICs on ESX 5.1, use the Converting to a Hardware iSCSI Configuration procedure.
- An iSCSI target and initiator should be in the same subnet.
- iSCSI multipathing on the Nexus 1000V currently only allows a single vmknic to be pinned to one vmnic.

Pre-requisites

The iSCSI Multipath feature has the following prerequisites:

- You must understand VMware iSCSI SAN storage virtualization. For detailed information about how to use VMware ESX and VMware ESXi systems with an iSCSI storage area network (SAN), see the iSCSI SAN Configuration Guide.
- You must know how to set up the iSCSI Initiator on your VMware ESX/ESXi host.
- The host is already functioning with one of the following:
  - VMware ESX 5.0 for software iSCSI
  - VMware ESX 5.1 or later for software and hardware iSCSI
- You must understand iSCSI multipathing and path failover.
- VMware kernel NICs configured to access the SAN external storage are required.

Default Settings

Parameters	Default
Type (port-profile)	vEthernet
Description (port-profile)	None
VMware port group name (port-profile)	The name of the port profile
Switchport mode (port-profile)	Access

Parameters	Default
State (port-profile)	Disabled

Configuring iSCSI Multipath

Use the following procedures to configure iSCSI Multipath:

- Uplink Pinning and Storage Binding procedure
- Converting to a Hardware iSCSI Configuration procedure
- Changing the VMkernel NIC Access VLAN procedure

Uplink Pinning and Storage Binding

Use this section to configure iSCSI multipathing between hosts and targets over iSCSI protocol by assigning the vEthernet interface to an iSCSI multipath port profile configured with a system VLAN.

Process for Uplink Pinning and Storage Binding

Refer to the following process for Uplink Pinning and Storage Binding:

- Creating a Port Profile for a VMkernel NIC procedure.
- Creating VMkernel NICs and Attaching the Port Profile procedure.

Do one of the following:

- If you want to override the automatic pinning of NICS, go to Manually Pinning the NICs procedure.
- If not, continue with storage binding.
- You have completed uplink pinning. Continue with the next step for storage binding.
- Identifying the iSCSI Adapters for the Physical NICs procedure.
- Binding the VMkernel NICs to the iSCSI Adapter procedure.
- Verifying the iSCSI Multipath Configuration procedure.

Creating a Port Profile for a VMkernel NIC

You can use this procedure to create a port profile for a VMkernel NIC.

Before You Begin

Before starting this procedure, you must know or do the following:

- You have already configured the host with one port channel that includes two or more physical NICs

- Multipathing must be configured on the interface by using this procedure to create an iSCSI multipath port profile and then assigning the interface to it.
- You are logged in to the CLI in EXEC mode.
- You know the VLAN ID for the VLAN you are adding to this iSCSI multipath port profile.
  - The VLAN must already be created on the Cisco Nexus 1000V.
  - The VLAN that you assign to this iSCSI multipath port profile must be a system VLAN.
  - One of the uplink ports must already have this VLAN in its system VLAN range.
- The port profile must be an access port profile. It cannot be a trunk port profile. This procedure includes steps to configure the port profile as an access port profile.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Places you in global configuration mode.
Step 2	switch(config)# **port-profile type vethernet***name*	Places you into the CLI Port Profile Configuration mode for the specified port profile. type: Defines the port-profile as Ethernet or vEthernet type. Once configured, this setting cannot be changed. The default is vEthernet type. If a port profile is configured as an Ethernet type, then it cannot be used to configure VMware virtual ports. name: The port profile name can be up to 80 characters and must be unique for each port profile on the Cisco Nexus 1000V.
Step 3	switch(config)# **description***profile description*	Adds a description to the port profile. This description is automatically pushed to the vCenter Server. profile description: up to 80 ASCII characters. If the description includes spaces, it must be surrounded by quotations.
Step 4	switch(config)# **vmware port-group***name*	Designates the port-profile as a VMware port group. The port profile is mapped to a VMware port group of the same name. When a vCenter Server connection is established, the port group created in Cisco Nexus 1000V is then distributed to the virtual switch on the vCenter Server. name: The Vmware port group name.If you want to map the port profile to a different port group name, use the alternate name.
Step 5	switch(config)# **switchport mode access**	Designates that the interfaces are switch access ports (the default).
Step 6	switch(config)# **switchport access vlan***vlanID*	Assigns the system VLAN ID to the access port for this port profile. The VLAN assigned to this iSCSI port profile must be a system VLAN.

	Command or Action	Purpose
Step 7	switch(config)# **no shutdown**	Administratively enables all ports in the profile.
Step 8	switch(config)# **system vlan***vlanID*	Adds the system VLAN to this port profile. This ensures that, when the host is added for the first time or rebooted later, the VEM will be able to reach the VSM. One of the uplink ports must have this VLAN in its system VLAN range.
Step 9	switch(config)# **capability iscsi-multipath**	Allows the port to be used for iSCSI multipathing. In vCenter Server, the iSCSI Multipath port profile must be selected and assigned to the VMkernel NIC port.
Step 10	switch(config)# **state enabled**	Enables the port profile. The configuration for this port profile is applied to the assigned ports, and the port group is created in the VMware vSwitch on the vCenter Server.
Step 11	switch(config)# **show port-profile name** *name*	(Optional) Displays the current configuration for the port profile.
Step 12	switch(config)# **copy running-config startup-config**	(Optional) Saves the running configuration persistently through reboots and restarts by copying it to the startup configuration.

Creating VMkernel NICs and Attaching the Port Profile

You can use this procedure to create VMkernel NICs and attach a port profile to them which triggers the automatic pinning of the VMkernel NICs to physical NICs.

- You have already created a port profile using the procedure, "Creating a Port Profile for a VMkernel NIC" procedure on page 13-6, and you know the name of this port profile.
- The VMkernel ports are created directly on the vSphere client.
- Create one VMkernel NIC for each physical NIC that carries the iSCSI VLAN. The number of paths to the storage device is the same as the number of VMkernel NIC created.
- Step 2 of this procedure triggers automatic pinning of VMkernel NICs to physical NICs, so you must understand the following rules for automatic pinning:
  - A VMkernel NIC is pinned to an uplink only if the VMkernel NIC and the uplink carry the same VLAN.
  - The hardware iSCSI NIC is picked first if there are many physical NICs carrying the iSCSI VLAN.
  - The software iSCSI NIC is picked only if there is no available hardware iSCSI NIC.
  - Two VMkernel NICs are never pinned to the same hardware iSCSI NIC.
  - Two VMkernel NICs can be pinned to the same software iSCSI NIC.

Before You Begin

Before starting this procedure, you must know or do the following

Procedure

Step 1 Create one VMkernel NIC for each physical NIC that carries the iSCSI VLAN.
For example, if you want to configure two paths, create two physical NICs on the Cisco Nexus 1000V to carry the iSCSI VLAN. The two physical NICs may carry other vlans. Create two VMkernel NICs for two paths.

Step 2 Attach the port profile configured with **capability iscsi-multipath** to the VMkernel ports.
The Cisco Nexus 1000V automatically pins the VMkernel NICs to the physical NICs.

Step 3 From the ESX host, use the command **# vemcmd show iscsi pinning** to display the auto pinning configuration for verification.

Example:

```
Example:~ # vemcmd show iscsi pinning
Vmknic    LTL      Pinned_Uplink    LTL
vmk6      49       vmnic2           19
vmk5      50       vmnic1           18
```

Manually Pinning the NICs

You can use this procedure to override the automatic pinning of NICs done by the Cisco Nexus 1000V, and manually pin the VMkernel NICs to the physical NICs.

Note If the pinning done automatically by Cisco Nexus 1000V is not optimal or if you want to change the pinning, then this procedure describes how to use the vemcmd on the ESX host to override it.

Before You Begin

Before starting this procedure, you must know or do the following:

- You are logged in to the ESX host.
- You have already created VMkernel NICs and attached a port profile to them.
- Before changing the pinning, you must remove the binding between the iSCSI VMkernel NIC and the VMHBA. This procedure includes a step for doing this.
- Manual pinning persists across ESX host reboots.Manual pinning is lost if the VMkernel NIC is moved from the DVS to the vSwitch and back.

Procedure

Step 1 List the binding for each VMHBA to identify the binding to remove (iSCSI VMkernel NIC to VMHBA) with the command **esxcli swiscsi nic list -d vmhba***nn*.

Example:

```
esxcli swiscsi nic list -d vmhba33
vmk6
    pNic name: vmnic2
    ipv4 address: 169.254.0.1
    ipv4 net mask: 255.255.0.0
    ipv6 addresses:
    mac address: 00:1a:64:d2:ac:94
    mtu: 1500
    toe: false
    tso: true
    tcp checksum: false
    vlan: true
    link connected: true
    ethernet speed: 1000
    packets received: 3548617
    packets sent: 102313
    NIC driver: bnx2
    driver version: 1.6.9
    firmware version: 3.4.4
vmk5
    pNic name: vmnic3
    ipv4 address: 169.254.0.2
    ipv4 net mask: 255.255.0.0
    ipv6 addresses:
    mac address: 00:1a:64:d2:ac:94
    mtu: 1500
    toe: false
    tso: true
    tcp checksum: false
    vlan: true
    link connected: true
    ethernet speed: 1000
    packets received: 3548617
    packets sent: 102313
    NIC driver: bnx2
    driver version: 1.6.9
    firmware version: 3.4.4
```

Step 2 Remove the binding between the iSCSI VMkernel NIC and the VMHBA.

Example:

```
Example:
esxcli swiscsi nic remove --adapter vmhba33 --nic vmk6
esxcli swiscsi nic remove --adapter vmhba33 --nic vmk5
```

If active iSCSI sessions exist between the host and targets, the iSCSI port cannot be disconnected.

Step 3 From the ESX host, display the auto pinning configuration with the command **# vemcmd show iscsi pinning**.

Example:

```
Example:
~ # vemcmd show iscsi pinning
Vmknic   LTL      Pinned_Uplink    LTL
vmk6     49       vmnic2           19
vmk5     50       vmnic1           18
```

Step 4 Manually pin the VMkernel NIC to the physical NIC, overriding the auto pinning configuration with the command **# vemcmd set iscsi pinning***vmk-ltl vmnic-ltl*.

Example:

```
Example:
~ # vemcmd set iscsi pinning 50 20
```

Step 5 Manually pin the VMkernel NIC to the physical NIC, overriding the auto pinning configuration with the command **# vemcmd set iscsi pinning***vmk-ltl vmnic-ltl*.

Example:

```
Example:
~ # vemcmd set iscsi pinning 50 20
```

Step 6 You have completed this procedure. Return to the Process for Uplink Pinning and Storage Binding, on page 162 section.

Identifying the iSCSI Adapters for the Physical NICs

You can use one of the following procedures in this section to identify the iSCSI adapters associated with the physical NICs.

- Identifying iSCSI Adapters on the vSphere Client procedure
- Identifying iSCSI Adapters on the Host Server procedure

Identifying iSCSI Adapters on the vSphere Client

You can use this procedure on the vSphere client to identify the iSCSI adapters associated with the physical NICs.

Before You Begin

Before beginning this procedure, you must know or do the following:

- You are logged in to vSphere client.

Procedure

Step 1 From the Inventory panel, select a host.

Step 2 Click the Configuration tab.

Step 3 In the Hardware panel, click Storage Adapters.
The dependent hardware iSCSI adapter is displayed in the list of storage adapters.

Step 4 Select the adapter and click. Properties.
The iSCSI Initiator Properties dialog box displays information about the adapter, including the iSCSI name and iSCSI alias.

Step 5 Locate the name of the physical NIC associated with the iSCSI adapter.
The default iSCSI alias has the following format: driver_name-vmnic#, where vmnic# is the NIC associated with the iSCSI adapter.

Step 6 You have completed this procedure. Return to the Process for Uplink Pinning and Storage Binding section.

Identifying iSCSI Adapters on the Host Server

You can use this procedure on the ESX or ESXi host to identify the iSCSI adapters associated with the physical NICs.

Before You Begin

Before beginning this procedure, you must do the following:

- You are logged in to the server host

Procedure

Step 1 Use the command **esxcfg-scsidevs –a**to list the storage adapters on the server.

Example:

```
esxcfg-scsidevs –a
vmhba33 bnx2i unbound   iscsi.vmhba33 Broadcom iSCSI Adapter
vmhba34 bnx2i online    iscsi.vmhba34 Broadcom iSCSI Adapter
```

Step 2 For each adapter, list the physical NIC bound to it using the command **esxcli swiscsi vmnic list –d***adapter-name*to list the storage adapters on the server.

Example:

```
esxcli swiscsi vmnic list -d vmhba33 | grep name
    vmnic name: vmnic2
esxcli swiscsi vmnic list -d vmhba34 | grep name
    vmnic name: vmnic3
```

For the software iSCSI adapter, all physical NICs in the server are listed. For each hardware iSCSI adaptor, one physical NIC is listed.

You have completed this procedure.

Binding the VMkernel NICs to the iSCSI Adapter

You can use this procedure to manually bind the physical VMkernel NICs to the iSCSI adapter corresponding to the pinned physical NICs.

Before You Begin

Before starting this procedure, you must know or do the following:

- You are logged in to the ESX host.
- You know the iSCSI adapters associated with the physical NICs, found in the Identifying the iSCSI Adapters for the Physical NICs procedure.

Procedure

Step 1 Find the physical NICs to which the VEM has pinned the VMkernel NICs.

Example:

```
Vmknic LTL Pinned_Uplink LTL
vmk2   48  vmnic2        18
vmk3   49  vmnic3        19
```

Step 2 Bind the physical NIC to the iSCSI adapter.

Example:

```
Example:
esxcli swiscsi nic add --adapter vmhba33 --nic vmk2

Example:
esxcli swiscsi nic add --adapter vmhba34 --nic vmk3
```

For more information, refer to Identifying the iSCSI Adapters for the Physical NICs procedure.

You have completed this procedure.

Converting to a Hardware iSCSI Configuration

You can use the procedures in this section on an ESX 5.1 host to convert from a software iSCSI to a hardware iSCSI

Before You Begin

Before starting the procedures in this section, you must know or do the following:

- You have scheduled a maintenance window for this conversion. Converting the setup from software to hardware iSCSI involves a storage update.

Procedure

Step 1 In the vSphere client, disassociate the storage configuration made on the iSCSI NIC.

Step 2 Remove the path to the iSCSI targets.

Step 3 Remove the binding between the VMkernel NIC and the iSCSI adapter using the Removing the Binding to the Software iSCSI Adapter procedure.

Step 4 Move VMkernel NIC from the Cisco Nexus 1000V DVS to the vSwitch.

Step 5 Install the hardware NICs on the ESX host, if not already installed.

Step 6 If the hardware NICs are already present on Cisco Nexus 1000V, then continue with the next step. If the hardware NICs are not already present on Cisco Nexus 1000V DVS, refer to the Adding the Hardware NICs to the DVS procedure.

Step 7 Move the VMkernel NIC back from the vSwitch to the Cisco Nexus 1000V DVS.

Step 8 Find an iSCSI adapter, using the Identifying the iSCSI Adapters for the Physical NICs procedure.

Step 9 Bind the NIC to the adapter, using the Binding the VMkernel NICs to the iSCSI Adapter procedure.

Step 10 Verify the iSCSI multipathing configuration, using the Verifying the iSCSI Multipath Configuration procedure.

Converting to a Hardware iSCSI Configuration

You can use the procedures in this section on an ESX 5.1 host to convert from a software iSCSI to a hardware iSCSI

Before You Begin

Before starting the procedures in this section, you must know or do the following:

- You have scheduled a maintenance window for this conversion. Converting the setup from software to hardware iSCSI involves a storage update.

Procedure

Step 1 In the vSphere client, disassociate the storage configuration made on the iSCSI NIC.

Step 2 Remove the path to the iSCSI targets.

Step 3 Remove the binding between the VMkernel NIC and the iSCSI adapter using the Removing the Binding to the Software iSCSI Adapter procedure.

Step 4 Move VMkernel NIC from the Cisco Nexus 1000V DVS to the vSwitch.

Step 5 Install the hardware NICs on the ESX host, if not already installed.

Step 6 If the hardware NICs are already present on Cisco Nexus 1000V, then continue with the next step. If the hardware NICs are not already present on Cisco Nexus 1000V DVS, refer to the Adding the Hardware NICs to the DVS procedure.

Step 7 Move the VMkernel NIC back from the vSwitch to the Cisco Nexus 1000V DVS.

Step 8 Find an iSCSI adapter, using the Identifying the iSCSI Adapters for the Physical NICs procedure.

Step 9 Bind the NIC to the adapter, using the Binding the VMkernel NICs to the iSCSI Adapter procedure.

Step 10 Verify the iSCSI multipathing configuration, using the Verifying the iSCSI Multipath Configuration procedure.

Removing the Binding to the Software iSCSI Adapter

You can use this procedure to remove the binding between the iSCSI VMkernel NIC and the software iSCSI adapter.

Procedure

Remove the iSCSI VMkernel NIC binding to the VMHBA.

Example:

```
Example:
esxcli swiscsi nic remove --adapter vmhba33 --nic vmk6
esxcli swiscsi nic remove --adapter vmhba33 --nic vmk5
```

You have completed this procedure. Return to the Process for Converting to a Hardware iSCSI Configuration sectio.

Adding the Hardware NICs to the DVS

You can use this procedure, if the hardware NICs are not on Cisco Nexus 1000V DVS, to add the uplinks to the DVS using the vSphere client.

Before You Begin

Before starting this procedure, you must know or do the following:

- You are logged in to vSphere client.
- This procedure requires a server reboot.

Procedure

Step 1 Select a server from the inventory panel.
Step 2 Click the Configuration tab.
Step 3 In the Configuration panel, click Networking.
Step 4 Click the vNetwork Distributed Switch.
Step 5 Click Manage Physical Adapters.
Step 6 Select the port profile to use for the hardware NIC.
Step 7 Click Click to Add NIC.
Step 8 In Unclaimed Adapters, select the physical NIC and Click OK.
Step 9 In the Manage Physical Adapters window, click OK.
Step 10 Move the iSCSI VMkernel NICs from vSwitch to the Cisco Nexus 1000V DVS. The VMkernel NICs are automatically pinned to the hardware NICs.

What to Do Next

You have completed this procedure. Return to the Process for Converting to a Hardware iSCSI Configuration section.

Changing the VMkernel NIC Access VLAN

You can use the procedures in this section to change the access VLAN, or the networking configuration, of the iSCSI VMkernel.

Process for Changing the Access VLAN

You can use the following steps to change the VMkernel NIC access VLAN:

Procedure

Step 1 In the vSphere Client, disassociate the storage configuration made on the iSCSI NIC.

Step 2 Remove the path to the iSCSI targets.

Step 3 Remove the binding between the VMkernel NIC and the iSCSI adapter using the Removing the Binding to the Software iSCSI Adapter procedure.

Step 4 Move VMkernel NIC from the Cisco Nexus 1000V DVS to the vSwitch.

Step 5 Change the access VLAN, using the Changing the Access VLAN procedure.

Step 6 Move the VMkernel NIC back from the vSwitch to the Cisco Nexus 1000V DVS.

Step 7 Find an iSCSI adapter, using the Identifying the iSCSI Adapters for the Physical NICs procedure.

Step 8 Bind the NIC to the adapter, using the Binding the VMkernel NICs to the iSCSI Adapter procedure.

Step 9 Verify the iSCSI multipathing configuration, using the Verifying the iSCSI Multipath Configuration, on page 175 procedure.

Changing the Access VLAN

Before You Begin

Before starting this procedure, you must know or do the following:

- You are logged in to the ESX host.
- You are not allowed to change the access VLAN of an iSCSI multipath port profile if it is inherited by a VMkernel NIC. Use the **show port-profile name profile-name** command to verify inheritance.

Procedure

Step 1 Remove the path to the iSCSI targets from the vSphere client.

Step 2 List the binding for each VMHBA to identify the binding to remove (iSCSI VMkernel NIC to VMHBA).

Example:

```
esxcli swiscsi nic list -d vmhbann
Example:
esxcli swiscsi nic list -d vmhba33
vmk6
    pNic name: vmnic2
    ipv4 address: 169.254.0.1
    ipv4 net mask: 255.255.0.0
    ipv6 addresses:
    mac address: 00:1a:64:d2:ac:94
    mtu: 1500
    toe: false
    tso: true
    tcp checksum: false
    vlan: true
    link connected: true
    ethernet speed: 1000
    packets received: 3548617
    packets sent: 102313
```

```
    NIC driver: bnx2
    driver version: 1.6.9
    firmware version: 3.4.4
vmk5
    pNic name: vmnic3
    ipv4 address: 169.254.0.2
    ipv4 net mask: 255.255.0.0
    ipv6 addresses:
    mac address: 00:1a:64:d2:ac:94
    mtu: 1500
    toe: false
    tso: true
    tcp checksum: false
    vlan: true
    link connected: true
    ethernet speed: 1000
    packets received: 3548617
    packets sent: 102313
    NIC driver: bnx2
    driver version: 1.6.9
    firmware version: 3.4.4
```

Step 3 Remove the iSCSI VMkernel NIC binding to the VMHBA.

Example:

```
esxcli swiscsi nic remove --adapter vmhba33 --nic vmk6 esxcli swiscsi nic remove --adapter
 vmhba33 --nic vmk5
```

Step 4 Remove the **capability iscsi-multipath** configuration from the port profile.

Example:

```
n1000v# config t
n1000v(config)# port-profile type vethernet VMK-port-profile
n1000v(config-port-prof)# no capability iscsi-multipath
```

Step 5 Remove the system VLAN.

Example:

```
n1000v# config t
n1000v(config)# port-profile type vethernet VMK-port-profile
n1000v(config-port-prof)# no system vlan 300
```

Step 6 Change the access VLAN in the port profile.

Example:

```
n1000v# config t
n1000v(config)# port-profile type vethernet VMK-port-profile
n1000v(config-port-prof)# switchport access vlan 300
```

Step 7 Add the system VLAN.

Example:

```
n1000v# config t
n1000v(config)# port-profile type vethernet VMK-port-profile
n1000v(config-port-prof)# system vlan 300
```

Step 8 Add the **capability iscsi-multipath** configuration back to the port profile.

Example:

```
n1000v# config t
```

```
n1000v(config)# port-profile type vethernet VMK-port-profile
n1000v(config-port-prof)# capability iscsi-multipath
```

What to Do Next

You have completed this procedure.

Verifying the iSCSI Multipath Configuration

Refer to the following commands and the examples.

Before You Begin

You can use the commands in this section to verify the iSCSI multipath configuration.

Command	Purpose
~ # vemcmd show iscsi pinning	Displays the auto pinning of VMkernel NICs.
esxcli swiscsi nic list -d vmhba33	Displays the iSCSI adapter binding of VMkernel NICs.
show port-profile [*brief* | *expand-interface* | *usage*] **name** [*profile-name*]	Displays the port profile configuration. See Example.

Procedure

Step 1 ~ # vemcmd show iscsi pinning

Example:

```
~ # vemcmd show iscsi pinning
Vmknic   LTL      Pinned_Uplink    LTL
vmk6     49       vmnic2           19
vmk5     50       vmnic1           18
```

Step 2 esxcli swiscsi nic list -d vmhbann

Example:

```
esxcli swiscsi nic list -d vmhba33
vmk6
    pNic name: vmnic2
    ipv4 address: 169.254.0.1
    ipv4 net mask: 255.255.0.0
    ipv6 addresses:
    mac address: 00:1a:64:d2:ac:94
    mtu: 1500
    toe: false
    tso: true
    tcp checksum: false
    vlan: true
    link connected: true
    ethernet speed: 1000
    packets received: 3548617
    packets sent: 102313
```

```
    NIC driver: bnx2
    driver version: 1.6.9
    firmware version: 3.4.4
```

Step 3 show port-profile name iscsi-profile

Example:

```
n1000v# show port-profile name iscsi-profile
port-profile iscsi-profile
 type: Vethernet
 description:
 status: enabled
 max-ports: 32
 inherit:
 config attributes:
 evaluated config attributes:
 assigned interfaces:
 port-group:
 system vlans: 254
 capability l3control: no
 capability iscsi-multipath: yes
 port-profile role: none
 port-binding: static
n1000v#
```

Managing Storage Loss Detection

This section describes the command that provides the configuration to detect storage connectivity losses and provides support when storage loss is detected. When VSMs are hosted on remote storage systems such as NFS or iSCSI, storage connectivity can be lost. This connectivity loss can cause unexpected VSM behavior.

Use the following command syntax to configure storage loss detection: **system storage-loss** { *log* | *reboot* } [*time* <*interval*>] | **no system storage-loss** [{ **log** | **reboot** }] [**time** <*interval*>]

The time interval value is the intervals at which the VSM checks for storage connectivity status. If a storage loss is detected, the syslog displays. The default interval is 30 seconds. You can configure the intervals from 30 seconds to 600 seconds. The default configuration for this command is: **system storage-loss log time** *30*

Note Configure this command in EXEC mode. Do not use configuration mode.

The following describes how this command manages storage loss detection:

- Log only: A syslog message is displayed stating that a storage loss has occurred. The administrator must take action immediately to avoid an unexpected VSM state.
- Reset: The VSM on which the storage loss is detected is reloaded automatically to avoid an unexpected VSM state.
  - Storage loss on the active VSM: The active VSM is reloaded. The standby VSM becomes active and takes control of the hosts.
  - Storage loss on the standby VSM: The standby VSM is reloaded. The active VSM continues to control the hosts.

Note Do not keep both the active and standby VSMs on the same remote storage, so that storage losses do not affect the VSM operations.

Before You Begin

Before beginning this procedure, you must know or do the following:

You are logged in to the CLI in EXEC mode.

Procedure

Step 1 **system storage-loss log time** *30*

Example:

```
n1000v# system storage-loss log time 30
n1000v#
```

Sets the time interval in seconds to check storage connectivity and log the status. Thirty seconds is the default interval.

Step 2 **copy running-config startup-config**

Example:

```
n1000v# copy run start
n1000v#
```

Example:

The following command disables the storage-loss checking. Whenever the VSMs are installed on local storage, this is the configuration we recommend.

Note Disable storage loss checking if both VSMs are in local storage.

```
n1000v# no system storage-loss
```

The following command enables storage loss detection time intervals on an active or standby VSM and displays a syslog message about the storage loss. In this example, the VSM is checked for storage loss every 60 seconds. The administrator has to take action to recover the storage and avoid an inconsistent VSM state:

```
n1000v# system storage-loss log time 60
```

The following example shows the commands you use to configure the VSM to reboot when storage loss is detected:

```
n1000v# system storage-loss reboot time 60
n1000v# copy run start
```

The following example shows the commands you use to disable storage loss checking:

```
n1000v# no system storage-loss
n1000v# copy run start
```

Saves configuration changes in the running configuration to the startup configuration in persistent memory.

Related Documents

Related Topic	Document Title
VMware SAN Configuration	VMware SAN Configuration Guide

Feature History for iSCSI Multipath

Feature	Releases	Feature Information
Hardware iSCSI Multipath	4.2(1)SV1(4)	Added support for hardware iSCSI Multipath.
Configuring iSCSI Multipath	4.0(4)SV1(1)	This feature was introduced.

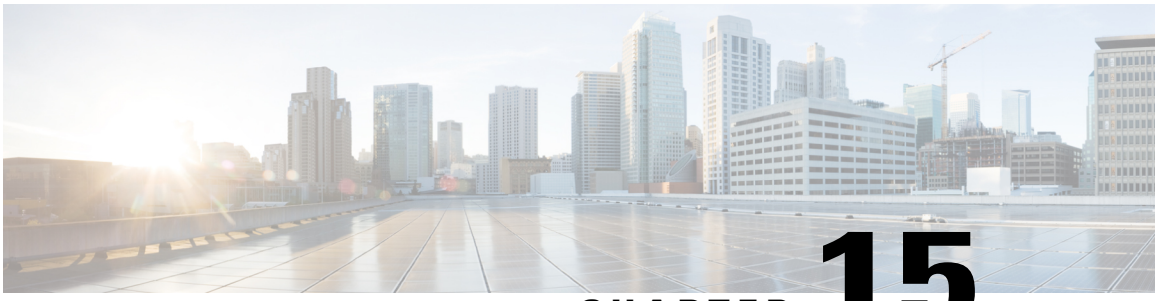

CHAPTER 15

Configuring VSM Backup and Recovery

This chapter contains the following sections:

- Information About VSM Backup and Recovery, page 179
- Guidelines and Limitations, page 179
- Configuring VSM Backup and Recovery, page 180

Information About VSM Backup and Recovery

You can use the VSM backup and recovery procedure to create a template from which the VSMs can be re-created in the event that both VSMs fail in a high availability (HA) environment.

Note We recommend that you do periodic backups after the initial backup to ensure that you have the most current configuration. See the Performing a Periodic Backup section for more information.

Guidelines and Limitations

VSM backup and recovery has the following configuration guidelines and limitations:

- Backing up the VSM VM is a onetime task.
- Backing up the VSM VM requires coordination between the network administrator and the server administrator.
- These procedures are not for upgrades and downgrades.
- These procedures require that the restoration is done on the VSM with the same release as the one from which the backup was made.
- Configuration files do not have enough information to re-create a VSM.

Configuring VSM Backup and Recovery

This section includes the following topics:

- Performing a Backup of the VSM VM
- Performing a Periodic Backup
- Recovering the VSM

Note Be aware that Cisco NX-OS commands might differ from the Cisco IOS commands.

Backing Up the VSM

This section provides information and procedure to back up the VSM on ESX and Cisco Nexus Cloud Services Platform. This section includes the following topics:

- Backing Up the VSM on ESX Server, on page 180
- Exporting a Backup VSB Configuration on Cisco Nexus Cloud Services Platform Server, on page 186

Follow the section based on your platform.

Backing Up the VSM on ESX Server

This section includes the following topics:

- Performing a Backup of the VSM VM
- Performing a Periodic Backup

Performing a Backup of the VSM VM

This section describes how to create a backup of the VSM.

Before You Begin

Before beginning this procedure, you must know or do the following:

- If the VSM is on a Virtual Ethernet Module (VEM) host, you must configure the management VLAN as a system VLAN.
- Enter the **copy running-config startup-config** command at the VSM before beginning this procedure.
- This procedure is required when there is a Certificate change, Extension key change, after an upgrade to a new release, and installation of the license.

Procedure

Step 1 Open the vSphere Client.
The vSphere Client window opens as displayed in the following illustration.

Figure 9: vSphere Client Window

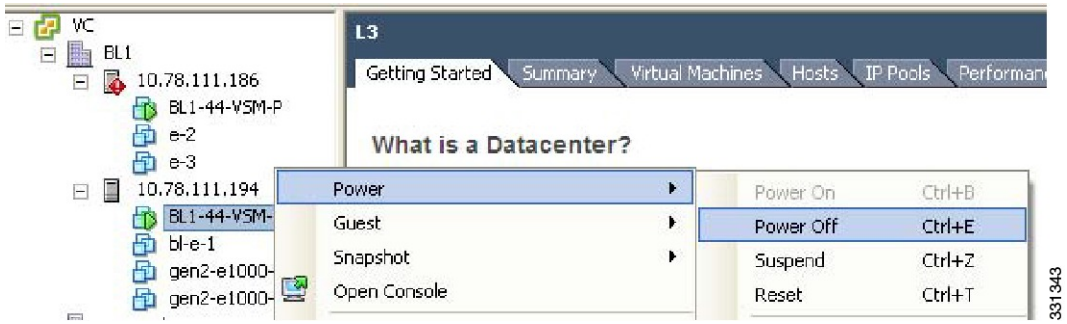

Step 2 In the left navigation pane, right-click the standby VSM. A drop-down list is displayed.

Step 3 Choose **Power > Power Off**.
The action is displayed in the Clone to Template Window.

Figure 10: Clone to Template Window

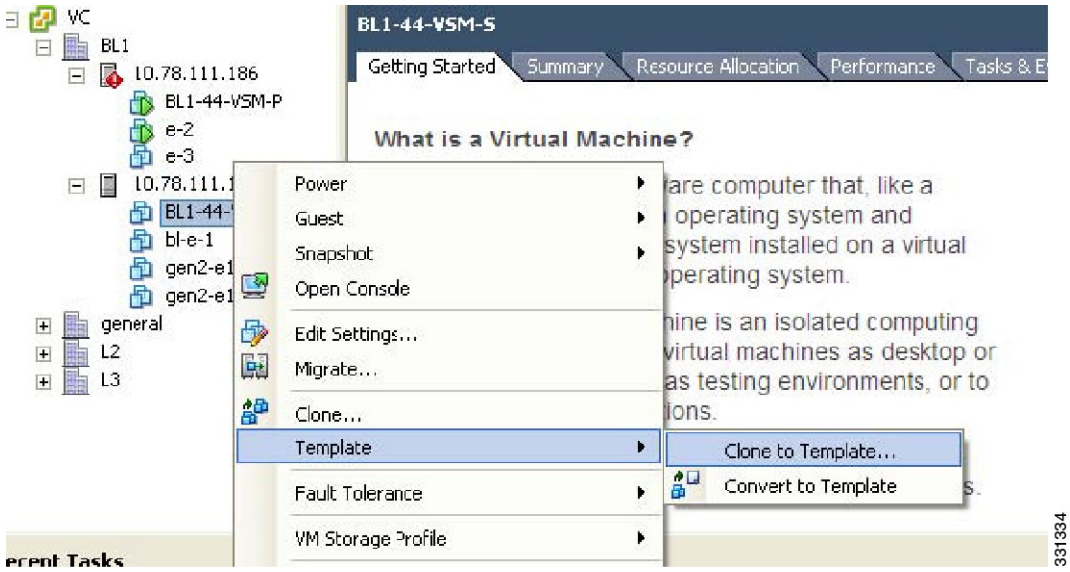

Step 4 In the left navigation pane, right-click the standby VSM.
A drop-down list is displayed.

Step 5 Choose **Template > Clone to Template**.

The Clone Virtual Machine to Template window opens.

Figure 11: Clone Virtual Machine to Template Window

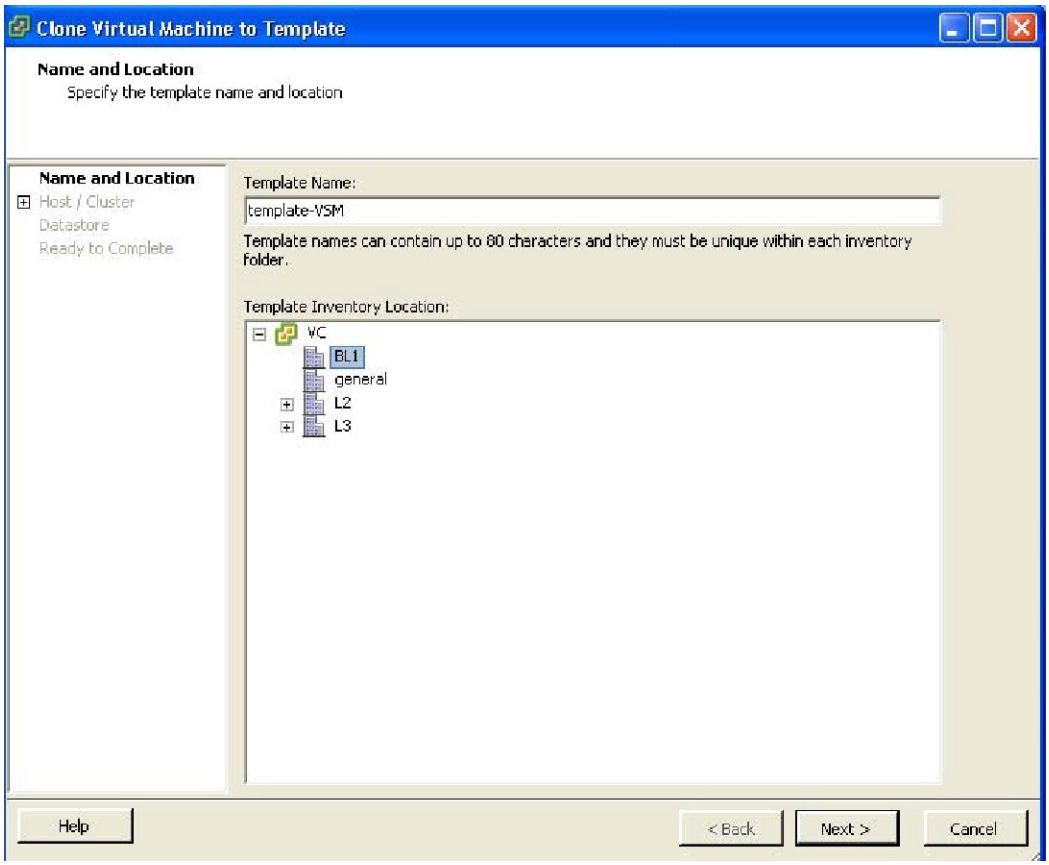

Step 6 In the Template Name field, enter a name.

Step 7 In the Template Inventory Location pane, choose a location for the template.

Step 8 Click Next.

The Choosing the Host Window opens.

Figure 12: Host Window

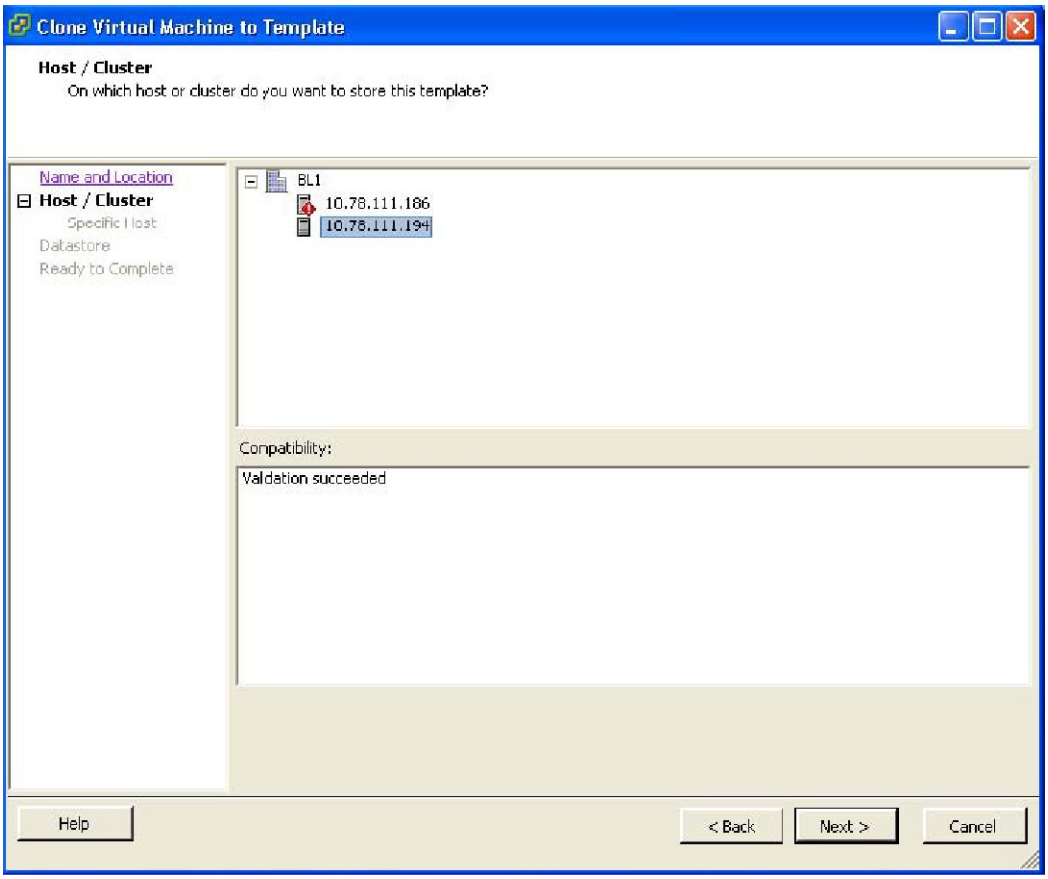

Step 9 Choose the host on which the template will be stored.

Step 10 Click Next.

The Choosing a Datastore window opens.

Figure 13: Choosing a Datastore Window

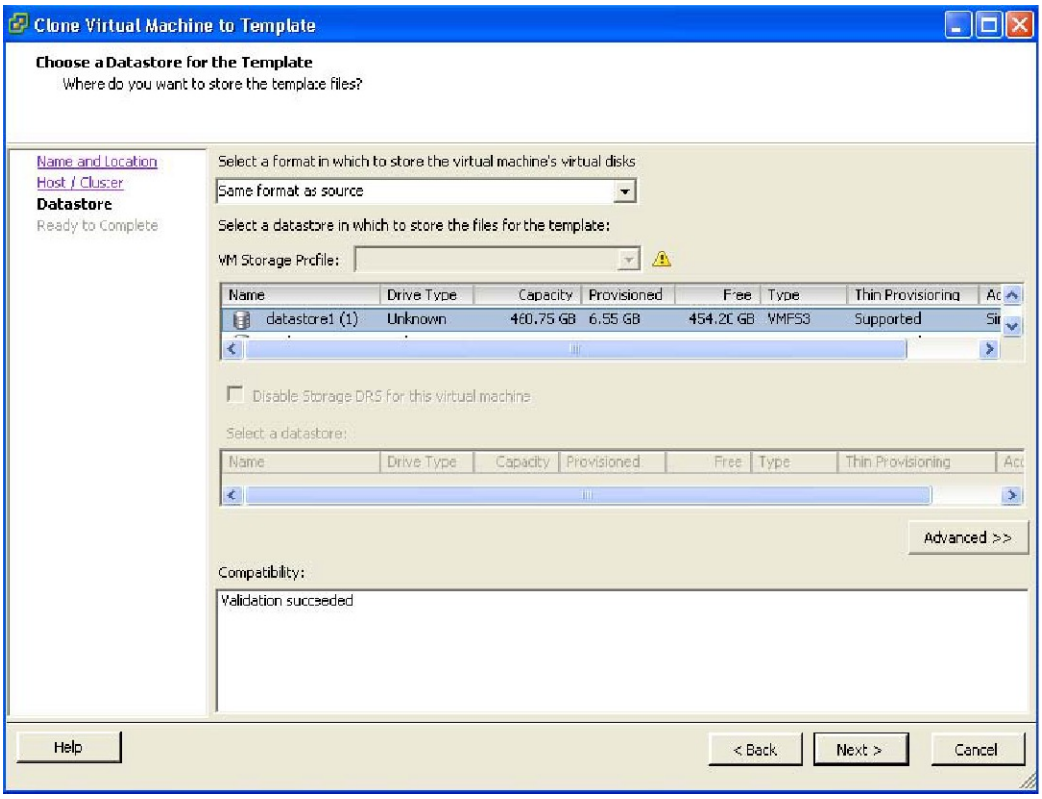

Step 11 In the Select a format in which to store the virtual machine's virtual disks drop-down list, choose Same format as source.

Step 12 Choose a datastore.

Step 13 Click Next.

The Confirming the Settings window opens.

Figure 14: Confirming the Settings Window

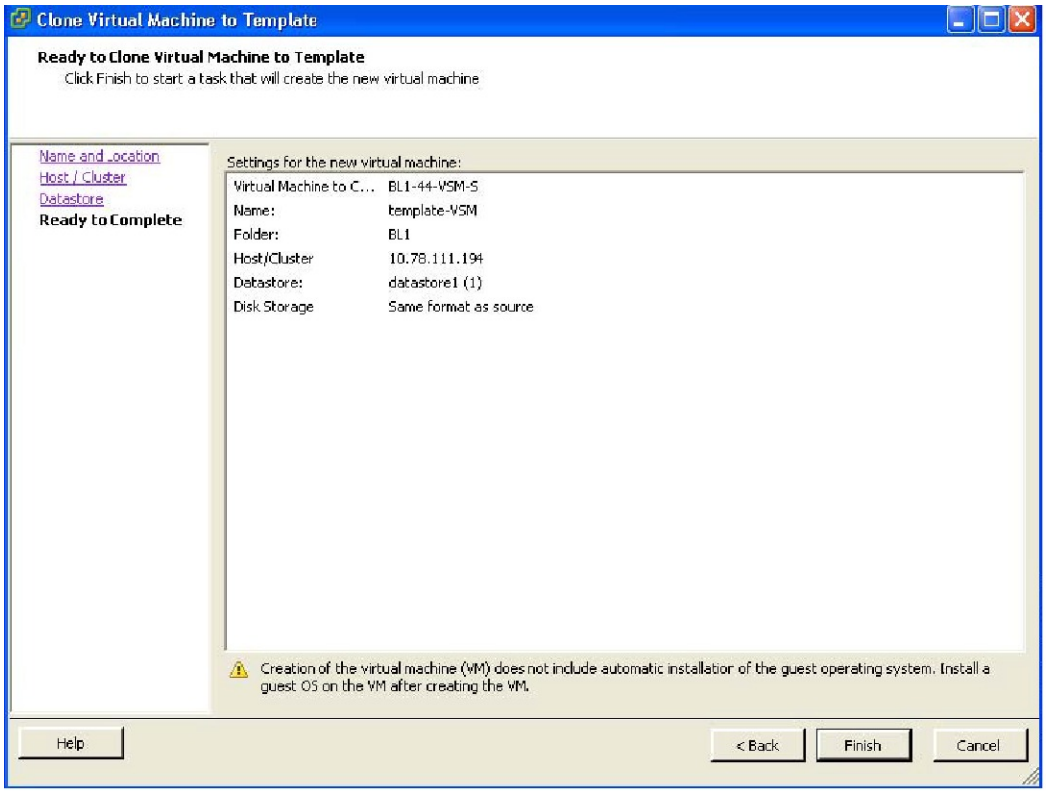

Step 14 Confirm the settings for the new virtual machine and click Finish.
The backup template is created and appears under the Virtual Machines tab.

Step 15 The Template Virtual Machine window opens.
The template creation is complete.

Figure 15: Template Virtual Machine Window

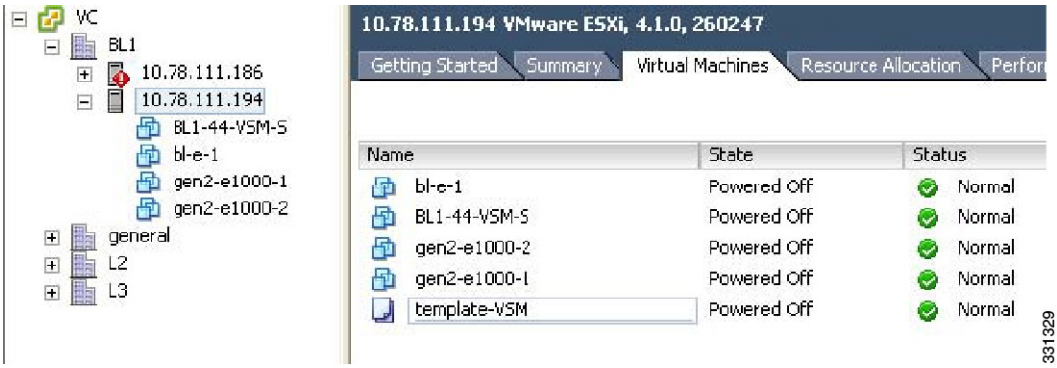

Performing a Periodic Backup

This section describes how to back up the active VSM after the initial backup of the standby VSM has been performed.

Before You Begin

The following lists some instances when you should run this procedure:

- You are on ESX platform.
- You have performed an upgrade.
- You have made a significant change to the configuration.

Procedure

Enter the command **copy running-config scp://root@10.78.19.15/tftpboot/config/** to back up the VSM.

Example:

```
switch# copy running-config scp://root@10.78.19.15/tftpboot/config/
Enter destination filename: [switch-running-config]
Enter vrf (If no input, current vrf 'default' is considered):
The authenticity of host '10.78.19.15 (10.78.19.15)' can't be established.
RSA key fingerprint is 29:bc:4c:26:e3:6f:53:91:d4:b9:fe:d8:68:4a:b4:a3.
Are you sure you want to continue connecting (yes/no)? yes
Warning: Permanently added '10.78.19.15' (RSA) to the list of known hosts.
root@10.78.19.15's password:
switch-running-config 100% 6090 6.0KB/s 00:00
switch#
```

Exporting a Backup VSB Configuration on Cisco Nexus Cloud Services Platform Server

You can export or import a VSB on the Cisco Nexus Cloud Services Platforms by creating a copy of the VSB backup file. You can store the backup copy remotely to use as a recovery mechanism or when you need to move a VSB between Cisco Nexus Cloud Services Platforms. Use the procedures in the following sections to export and import a VSB on the Cisco Nexus Cloud Services Platform.

- Exporting a VSB, on page 186
- Copying the Exported VSB to an External Storage Location, on page 189

Exporting a VSB

You can create a file for exporting a VSB.

Note You can create multiple files. Do not change the file suffix for numbering purposes. If you change the prefix for one file, you must change it for all files.

Before You Begin

Before beginning this procedure, you must know or do the following:

- Ensure that you are on Cisco Nexus Cloud Services Platform. If you want to perform this procedure on ESX platform refer to Performing a Backup of the VSM VM, on page 180.
- Log in to the CLI of theCisco Nexus Cloud Services Platform in EXEC mode.
- Know the name of the VSB for which you are creating a file to export.
- Verify that the bootflash: export-import directory is empty. If files are present in this directory, you must delete them before starting this procedure.
- Enter the **copy running-config startup-config** command at the VSB before beginning this procedure.
- Shut down the VSB that you want to back up before creating the file to export. This procedure includes a step for shutting down the VSB and then a step to restart the VSB after creating the file.

Procedure

	Command or Action	Purpose
Step 1	switch # **dir bootflash:export-import**	Displays the contents of the export-import directory for verification that the directory is empty. If there is anything in this directory, you must use the next step to delete it before proceeding.
Step 2	switch (config-vsb-config) # **delete bootflash:export-import** *foldername*	(Optional) Deletes the VSB compressed tar file and its folder created for export.
Step 3	switch # **configure terminal**	Enters global configuration mode.
Step 4	switch (config) # **virtual-service-blade** *name*	Enters the configuration mode for the named virtual service blade.
Step 5	switch (config-vsb-config) # **shutdown [primary | secondary]**	Shuts down the VSB that you are exporting from. If you have a redundant pair of Cisco Nexus Cloud Services Platforms, you must specify whether to shut down the primary or secondary.
Step 6	switch (config-vsb-config)# **show virtual-service-blade summary**	(Optional) Displays the virtual service blade configuration for verification.
Step 7	switch (config-vsb-config) # **export [primary | secondary]**	Creates a directory named for the slot ID of the exported VSB that contains a compressed tar image of the VSB. If exporting from a redundant pair of Cisco Nexus Cloud Services Platforms, you must specify whether you are exporting from the primary or secondary. **Note** The export command does not move the configuration file off of the Cisco Nexus Cloud Services Platform. The export command creates a backup copy that you must then copy to the remote storage location.

	Command or Action	Purpose
Step 8	switch (config-vsb-config) # **dir bootflash:export-import**	Displays the contents of the bootflash: export-import directory, including the directory name of the folder that contains the compressed tar image of the VSB, for verification. You need this folder name in Step 11.
Step 9	switch (config-vsb-config) # **no shutdown [primary | secondary]**	Powers on the VSB that was powered off when creating the file for export. If you have a redundant pair of Cisco Nexus Cloud Services Platforms, you must specify primary or secondary.
Step 10	switch (config-vsb-config)# **show virtual-service-blade summary**	Displays the virtual service blade configuration for verification.
Step 11	switch (config-vsb-config) # **dir bootflash:export-import** */directory-name*	Displays the contents of the Cisco Nexus Cloud Services Platform export folder, including the filename of the VSB compressed tar image. **Note** **1** You identified this folder name in Step 8. **2** You can create multiple files. Do not change the file suffix for numbering purposes. If you change the prefix for one file, then you must change it for all files.

The following example shows how to create a VSB Backup file:

```
switch# dir bootflash:export-import
DOCS-CPPA# dir export-import

Usage for bootflash://sup-local
  496164864 bytes used
 3495215104 bytes free
 3991379968 bytes total

switch-1(config-vsb-config)# delete bootflash:/export-import/1/*.*
switch-1(config-vsb-config)# delete bootflash:/export-import/1

switch-1(config-vsb-config)#
switch-1# configure terminal
switch-1(config)#
switch-1(config)# virtual-service-blade vsm-1
switch-1(config-vsb-config)#
switch-1(config-vsb-config)# shutdown secondary
switch-1(config-vsb-config)#
Example:
switch-1(config-vsb-config)# show virtual-service-blade summary

------------------------------------------------------------------------------
Name                 Role        State                    Nexus1010-Module
------------------------------------------------------------------------------
VSM1                  PRIMARY     VSB POWERED ON          Nexus1010-PRIMARY
VSM1                  SECONDARY   VSB POWERED OFF          Nexus1010-SECONDARY


Example of a successful completion of a VSB

switch-1(config-vsb-config)# export secondary
```

```
Note: export started..
Note: please be patient..
Note: please be patient..
Note: please be patient..
Note: export completed...switch-1(config-vsb-config)#


Example of an error condition while exporting a VSB

switch-1(config-vsb-config)# export primary
ERROR: Please clean export-import directory first, then proceed.
switch-1(config-vsb-config)#


Example of an error condition while exporting a secondary VSB

switch-1(config-vsb-config)# export secondary
ERROR: Cannot export active virtual-service-blade, please shut and retry.

switch-1(config-vsb-config)# dir bootflash:export-import
     4096      Sep 08 19:12:52 2011 1/

Usage for bootflash://sup-local
310870016 bytes used
3680509952 bytes free
3991379968 bytes total

switch-1(config-vsb-config)# no shutdown secondary

switch-1(config-vsb-config)#
switch-1(config-vsb-config)# show virtual-service-blade summary

------------------------------------------------------------------------------
Name                 Role        State                   Nexus1010-Module
------------------------------------------------------------------------------
VSM1                  PRIMARY     VSB POWERED ON          Nexus1010-PRIMARY
VSM1                  SECONDARY   VSB POWERED ON          Nexus1010-SECONDARY

switch-1(config-vsb-config)# dir bootflash:export-import/1
  279955021     Sep 08 19:13:21 2011  Vdisk1.img.tar.00

Usage for bootflash://sup-local
  310870016 bytes used
 3680509952 bytes free
 3991379968 bytes total
```

Copying the Exported VSB to an External Storage Location

- You can copy a VSB configuration file to a remote storage location and then delete the folder created for this purpose from the Cisco Nexus Cloud Services Platform.

Before You Begin

- You have created a file to export using the Exporting a VSB, on page 186 section and you know the name of this file and the name of the folder it resides in.

Note You can create multiple files. If so, use the first filename in this procedure. Do not change the file suffix for numbering purposes. If you change the prefix for one file, you must change it for all files.

- Log in to the CLI of the Cisco Nexus Cloud Services Platform in EXEC mode.
- Know the name of the path to a remote storage location.

- After copying the export backup file, delete the contents, including the files and folders, of the export-import directory. Do not delete the export-import folder.

Procedure

	Command or Action	Purpose
Step 1	switch # **copy bootflash:export-import** */folder-name /filename* **ftp:**	Copies the VSB image from the Cisco Nexus Cloud Services Platform export-import folder to a remote storage location.
Step 2	switch # **delete bootflash:export-import** *foldername*	Deletes the VSB compressed tar file and its folder created for export.
Step 3	switch # **dir**	Displays the contents of the export-import directory for verification.

The following example shows how to copy a VSB file to an external location:

```
switch# copy bootflash:export-import/1/Vdisk1.img.tar.00 ftp:
Enter vrf (If no input, current vrf 'default' is considered):
Enter hostname for the ftp server: 10.78.109.51
Enter username: administrator
Password:
***** Transfer of file Completed Successfully *****
switch# delete bootflash:/export-import/1/Vdisk1.img.tar.00
switch# delete bootflash:/export-import/1
switch# dir
switch#
```

Recovering the VSM

This section describes how to deploy a VSM on ESX platform by using the backup template and on Cisco Nexus Cloud Services Platform by importing a backup configuration file. This section includes the following topics:

- Recovering the VSM on ESX Server, on page 190
- Recovering a VSM with a Backup Configuration File on Cisco Nexus Cloud Services Platform Server, on page 205

Recovering the VSM on ESX Server

This section describes how to deploy a VSM by using the backup template. This section includes the following topics:

- Deploying the Backup VSM VM
- Erasing the Old Configuration
- Restoring the Backup Configuration on the VSM

Deploying the Backup VSM VM

This section describes how to deploy the backup VSM VM when the primary and secondary VSMs are not present.

Note While deploying the VSM VM, do not power it on.

Procedure

Step 1 Open the vSphere Client.
The vSphere Client window opens.

Step 2 In the left navigation pane, choose the host of the standby VSM.

Step 3 Click the Virtual Machines tab.

Step 4 Right-click the template_VSM.

Step 5 Choose Deploy Virtual Machine from this Template.

The Deploy Template Wizard window opens.

Figure 16: Deploy Template Wizard Window

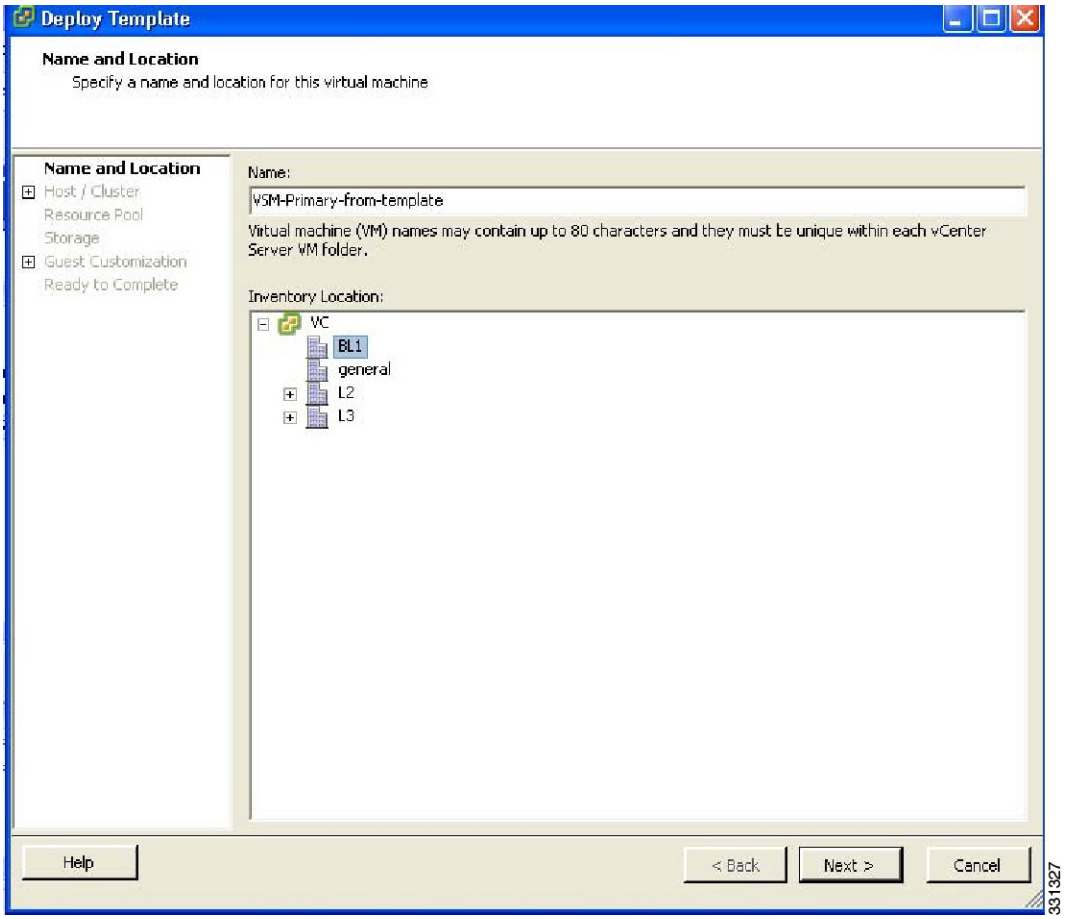

Step 6 In the Name field, enter a name for the VSM.

Step 7 In the Inventory Location pane, choose a cluster.

Step 8 Click Next.

The Choosing a Host Window opens.

Figure 17: Choosing a Host Window

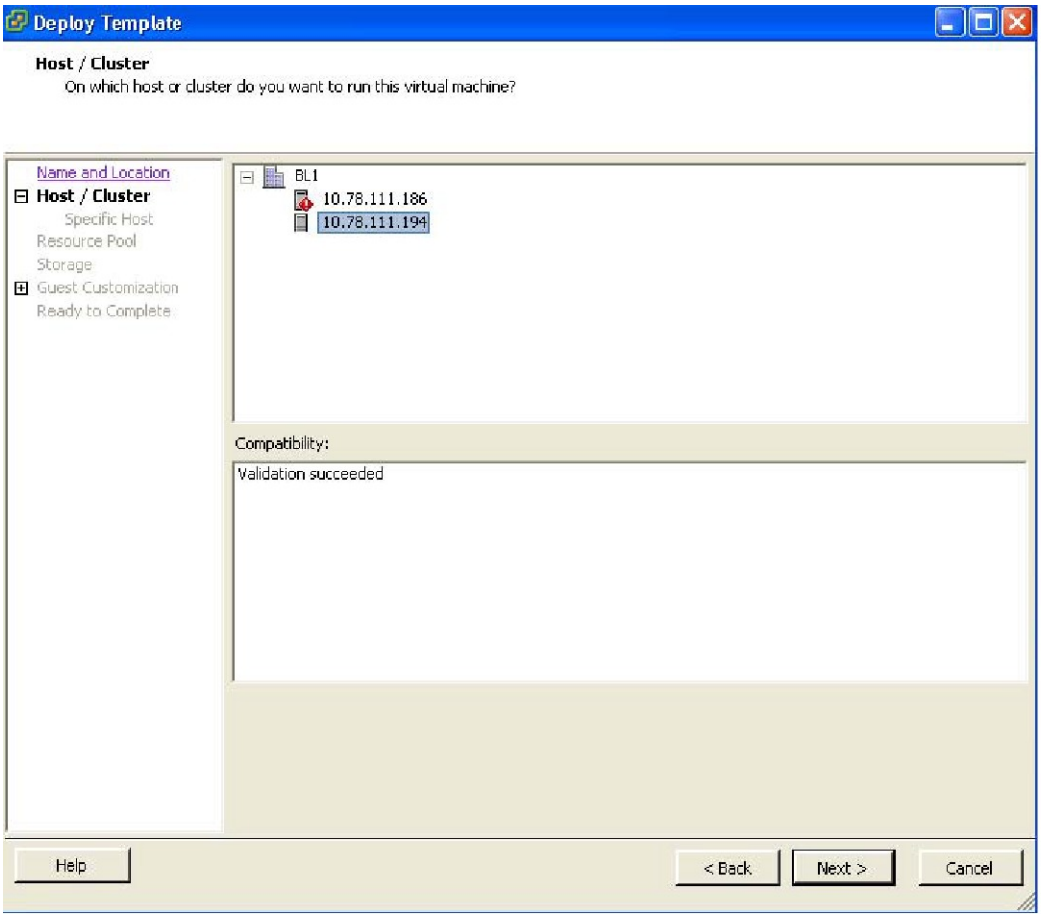

Step 9 Choose a host.

Step 10

Example:
Click Next.

The Choosing a Datastore window opens.

Figure 18: Choosing a Datastore Window

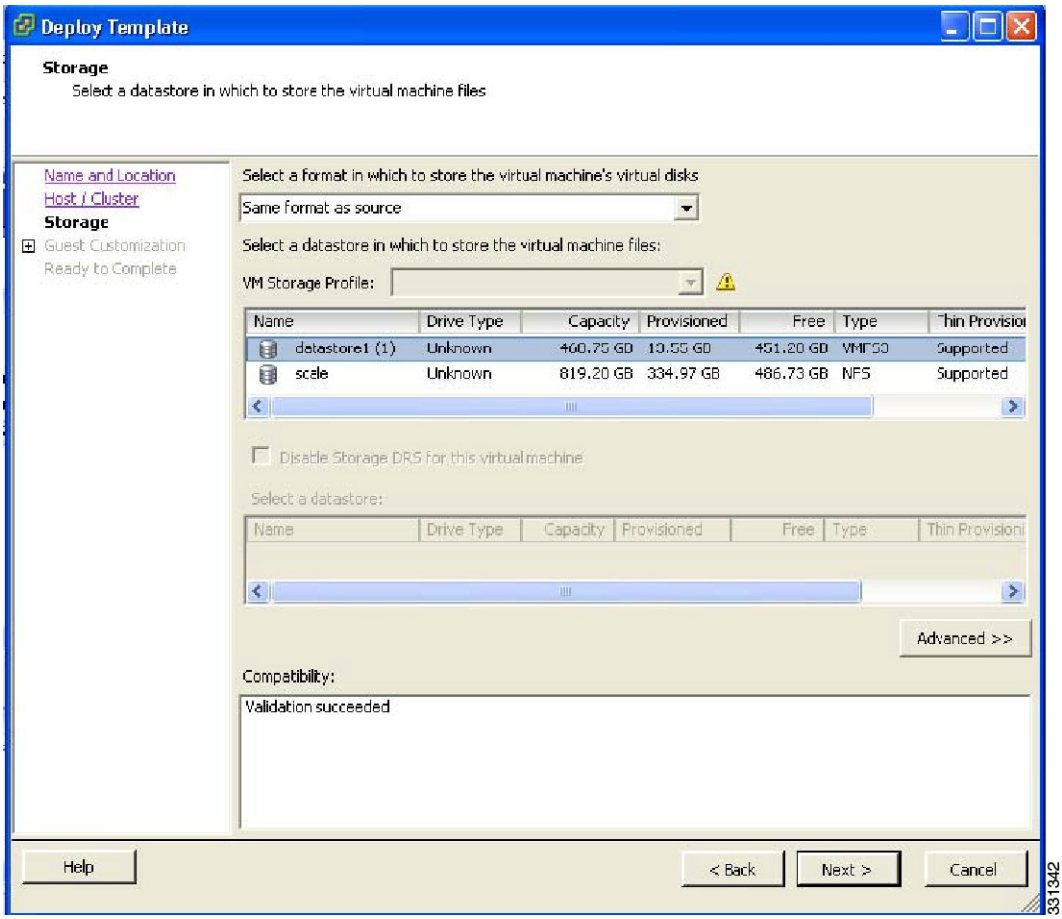

Step 11 In the Select a format in which to store the virtual machine's virtual disks drop-down list, choose Same format as source.

Step 12 Choose a datastore

Step 13 Click Next.

The Guest Customization window opens. Make sure that the Power on this virtual machine after creation check box is not checked.

Figure 19: Guest Customization Window

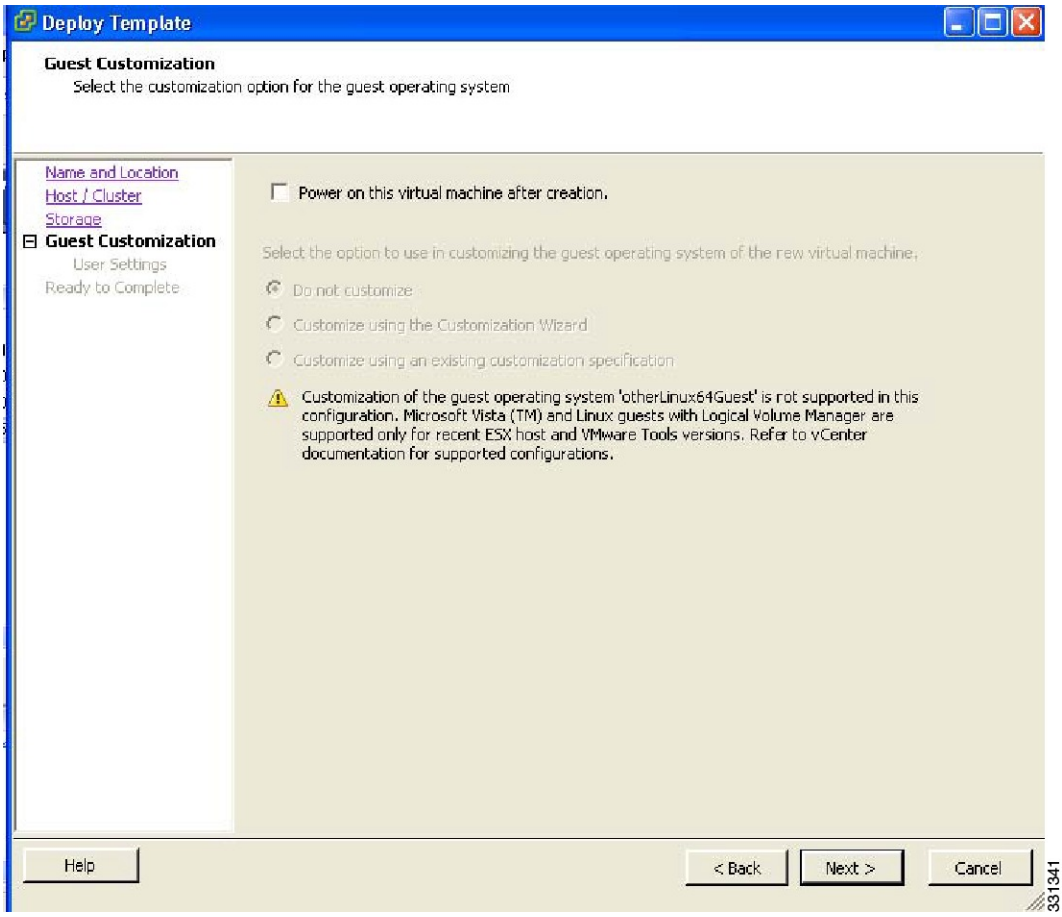

Step 14 Click Next.

The Deploy Template - Ready to Complete window opens.

Figure 20: Guest Customization Window

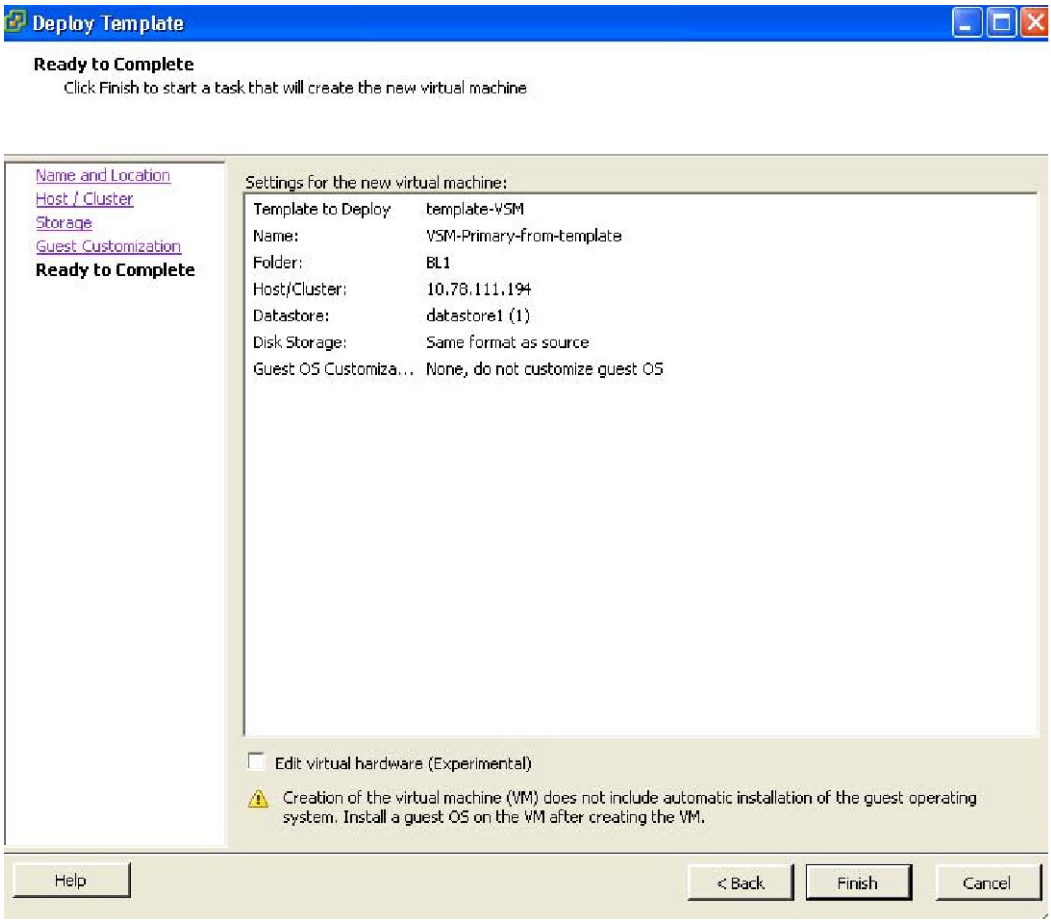

Step 15 Confirm the settings for the new virtual machine and click Finish. If the management VLAN is not available on the VEM, you must add the management interface to the vSwitch.

Step 16 Right-click the newly deployed VM.

Step 17 Choose Edit Settings.

The Virtual Machine Properties window opens.

Figure 21: Guest Customization Window

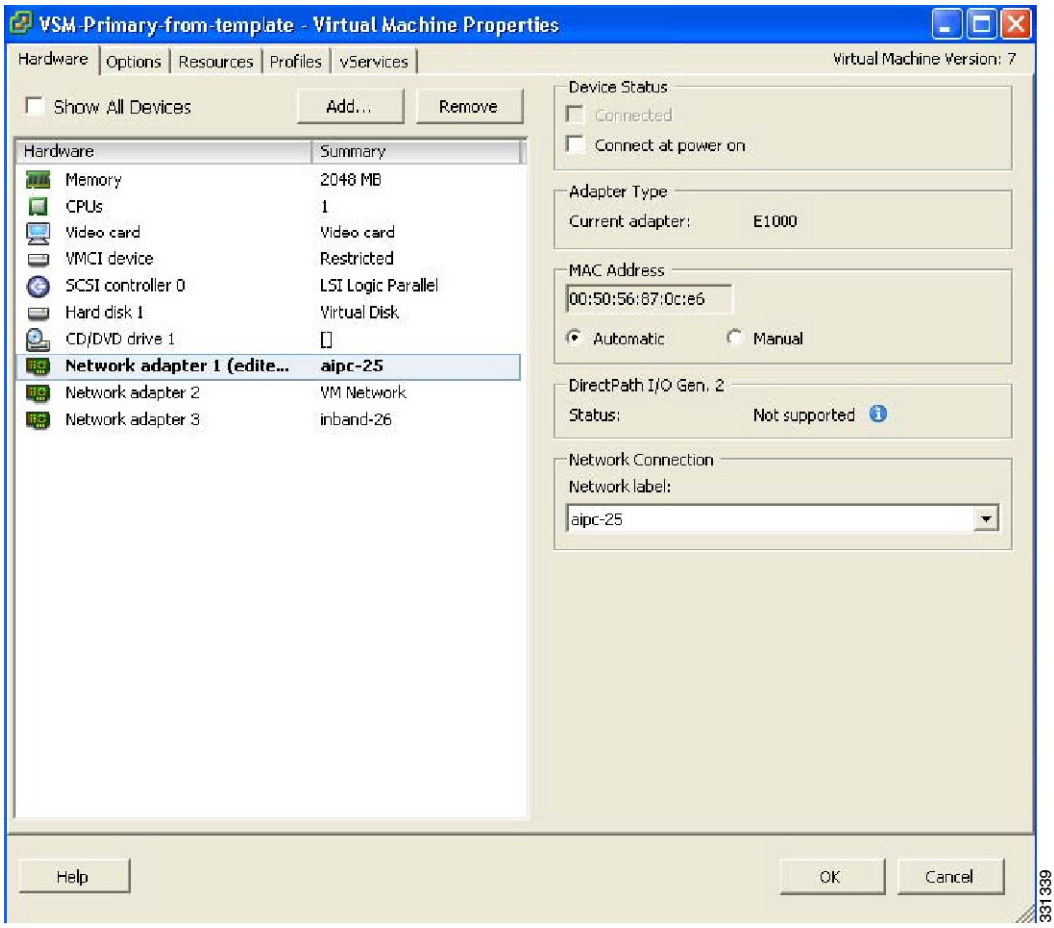

Step 18 In the Hardware / Summary pane, choose Network adapter 1.

Step 19 Uncheck the Connect at power on check box.

Step 20 Choose Network adapter 2.

Step 21 In the Device Status area, uncheck the Connect at power on check box.

Step 22 Click OK.

The Power On window opens.

Figure 22: Guest Customization Window

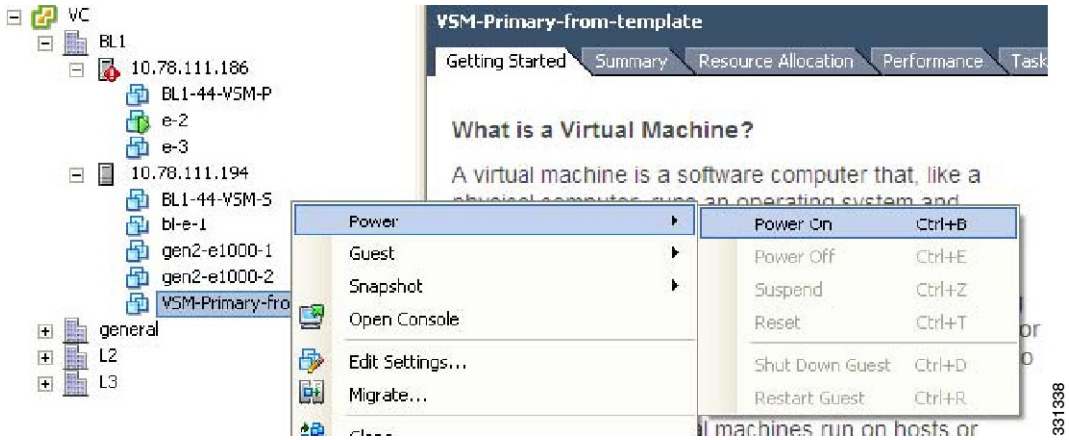

Step 23 Right-click the newly deployed VSM.
A drop-down list appears.

Step 24 Choose Power > Power On.
Deploying the backup VSM VM is complete.

Erasing the Old Configuration

This section describes how to erase the startup configuration of the newly deployed VSM.

Procedure

Step 1 Launch the virtual machine console of the newly deployed VSM.

Step 2 Set the redundancy role to primary by entering the following command:

Step 3 Copy the running configuration to the startup configuration by entering the following command:

Step 4 Erase the startup configuration by entering the following command:

Step 5 Reboot the primary and secondary VSMs by entering the following command:

This example describes how to erase the startup configuration of the newly deployed VSM

```
switch# system redundancy role primary
Setting will be activated on next reload
switch# copy running-config startup-config
scp:       sftp:          startup-config
[####################################] 100%
switch# write erase
Warning: The command will erase the startup-configurations.
Do you wish to proceed anyway? (y/n) [n] y
switch# reload
This command will reboot the system. (y/n)? [n] y
```

```
switch# reload
This command will reboot the system. (y/n)? [n] y
```

Restoring the Backup Configuration on the VSM

This section describes how to restore the backup configuration on the VSM.

Procedure

Step 1 When the VSM reboots, the System Admin Account Setup window opens.

Figure 23: System Admin Account Setup Window

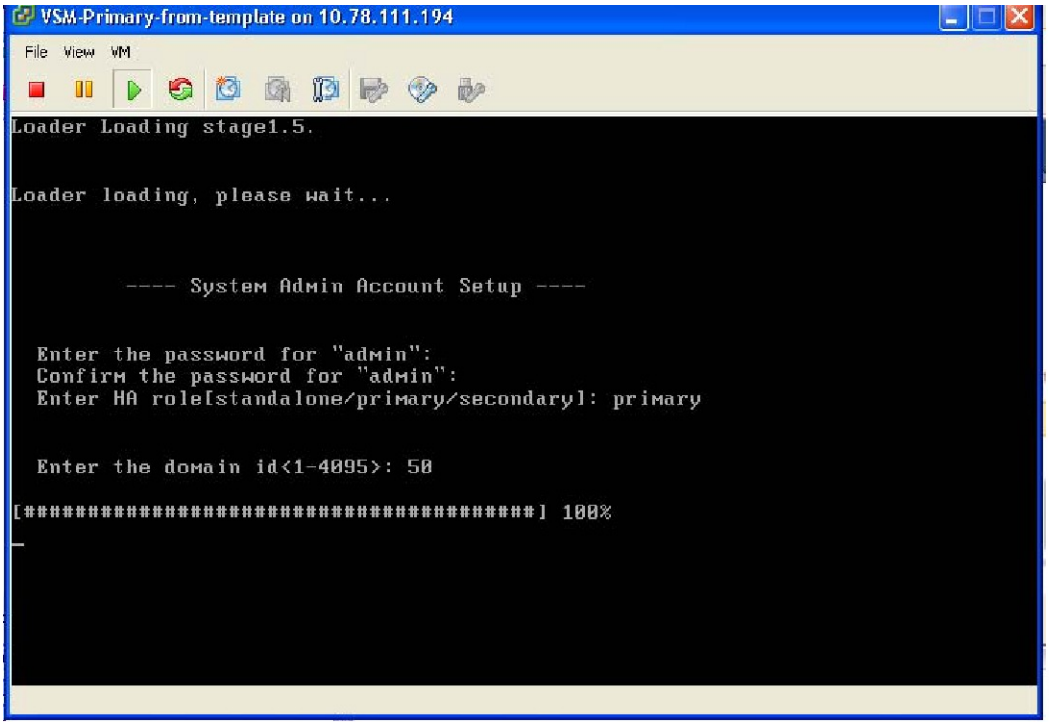

Step 2 Enter and confirm the Administrator password.

Example:

```
---- System Admin Account Setup ----
Enter the password for "admin":
Confirm the password for "admin":
```

Step 3 Enter the domain ID.

Example:

```
Enter the domain id<1-4095>: 50
```

Step 4 Enter the HA role. If you do not specify a role, standalone is assigned by default.

Example:
```
Enter HA role[standalone/primary/secondary]: primary

[########################################] 100%

         ---- Basic System Configuration Dialog ----

This setup utility will guide you through the basic configuration of
the system. Setup configures only enough connectivity for management
of the system.

Press Enter at anytime to skip a dialog. Use ctrl-c at anytime
to skip the remaining dialogs.
```

Step 5 Enter yes when you are prompted to enter the basic configuration dialog.

Example:
```
Would you like to enter the basic configuration dialog (yes/no): yes
```

Step 6 Enter no when asked to create another Login account.

Example:
```
Create another login account (yes/no) [n]: no
```

Step 7 Enter no when asked to configure a read-only SNMP community string.

Example:
```
Configure read-only SNMP community string (yes/no) [n]: no
```

Step 8 Enter no when asked to configure a read-write SNMP community string.

Example:
```
Configure read-write SNMP community string (yes/no) [n]: no
```

Step 9 Enter a name for the switch.

Example:
```
Enter the switch name:
```

Step 10 Enter yes, when asked to configure out-of-band management and then enter the mgmt0 IPv4 address and subnet mask.

Example:
```
Continue with Out-of-band (mgmt0) management configuration? [yes/no] [y]: yes
Mgmt0 IPv4 address: 172.28.15.152
Mgmt0 IPv4 netmask: 255.255.255.0
```

Step 11 Enter no when asked to configure the default gateway.

Example:
```
Configure the default-gateway: (yes/no) [y]: no

    IPv4 address of the default gateway : 172.23.233.1
```

Step 12 Enter yes when asked to enable the Telnet service.

Example:
```
Enable the telnet service? (yes/no) [y]: yes
```

Step 13 Enter yes when asked to enable the SSH service, and then enter the key type and number of key bits. For more information, see the *Cisco Nexus 1000V Security Configuration Guide*.

Example:
```
Enable the ssh service? (yes/no) [y]: yes
Type of ssh key you would like to generate (dsa/rsa) : rsa
Number of key bits <768-2048> : 1024
```

Step 14 Enter yes when asked to enable the HTTP server.

Example:
```
Enable the http-server? (yes/no) yes
```

Step 15 Enter no when asked to configure the NTP server

Example:
```
Configure NTP server? (yes/no) [n]: no
```

Step 16 Enter no when asked to configure the VEM feature level.

Example:
```
Vem feature level will be set to 4.2(1)SV1(4a).
Do you want to reconfigure? (yes/no) [n] no
```
The system now summarizes the complete configuration and prompts you to edit it.

Example:
```
The following configuration will be applied:
 interface Mgmt0
ip address 172.28.15.152 255.255.255.0
no shutdown
vrf context management
ip route 0.0.0.0/0 10.78.111.11
  no telnet server enable
  ssh key rsa 1024 force
  ssh server enable
  feature http-server
  svs-domain
    svs mode L2
    control vlan 1
    packet vlan 1
    domain id 1
```

Step 17 Enter no when asked if you would like to edit the configuration.

Example:
```
Would you like to edit the configuration? (yes/no) [n]: no

Enter SVS Control mode (L2 / L3) : L2
Enter control vlan <1-3967, 4048-4093> : 100
Enter packet vlan <1-3967, 4048-4093> : 101
```

Step 18 Enter yes when asked to use and save this configuration.

Example:
```
Use this configuration and save it? (yes/no) [y]: yes
[########################################] 100%
```
If you do not save the configuration now, then none of your changes are part of the configuration the next time the switch is rebooted. Enter yes to save the new configuration. This ensures that the kickstart and system images are also automatically configured.

Step 19 In the vSphere Client, right-click the VSM and choose Edit Settings.

The VSM Virtual Machine Properties window opens.

Figure 24: VSM Virtual Machine Properties Window

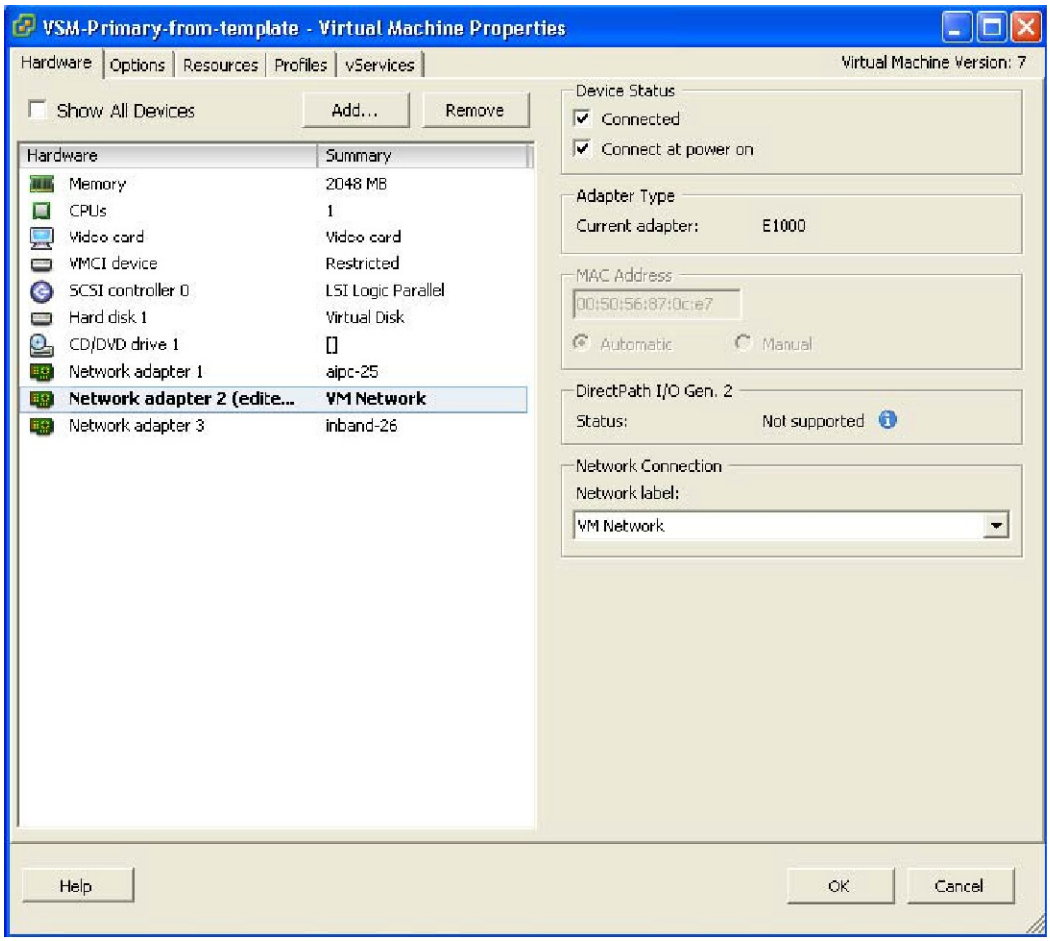

Step 20 In the Hardware/Summary pane, choose Network adapter 2.

Step 21 Check the Connect at power on check box.

Step 22 Log in to the VSM.

Step 23 Copy the backup configuration to the VSM bootflash by entering the following command:

Example:

```
switch# copy scp://root@10.78.19.15/tftpboot/backup/VSM-Backup-running-config
bootflash:
Enter vrf (If no input, current vrf 'default' is considered):
The authenticity of host '10.78.19.15 (10.78.19.15)' can't be established.
RSA key fingerprint is 29:bc:4c:26:e3:6f:53:91:d4:b9:fe:d8:68:4a:b4:a3.
Are you sure you want to continue connecting (yes/no)? yes
Warning: Permanently added '10.78.19.15' (RSA) to the list of known hosts.
root@10.78.19.15's password:
switch-running-config 100%
6090 6.0KB/s 00:00
switch#
```

Step 24 Copy the backup configuration to the running configuration by entering the following command:

Example:

```
switch# copy bootflash:VSM-Backup-running-config running-config
Disabling ssh: as its enabled right now:
Can't disable ssh for key generation:Current user is logged in through ssh
Please do a "copy running startup" to ensure the new setting takes effect
on next reboot
LACP Offload Status can be verified using "show lacp offload status"
Change in LACP Offload Status takes effect only on the next VSM Reboot
This can potentially cause modules with LACP uplinks to flap
Syntax error while parsing 'limit-resource m4route-mem minimum 58 maximum 58'
Syntax error while parsing 'limit-resource m6route-mem minimum 8 maximum 8'
Syntax error while parsing 'interface Ethernet3/2'
Syntax error while parsing 'inherit port-profile uplink-cdp'
Warning: Config saved but not pushed to vCenter Server due to inactive connection!
Warning: Config saved but not pushed to vCenter Server due to inactive connection!
Warning: Config saved but not pushed to vCenter Server due to inactive connection!
Warning: Config saved but not pushed to vCenter Server due to inactive connection!
command failed. Invalid ip address.
Syntax error while parsing 'log-level '
Syntax error while parsing 'no ip dhcp relay'
switch
```

The Virtual Machine Properties window displays.

Figure 25: Virtual Machine Properties Window

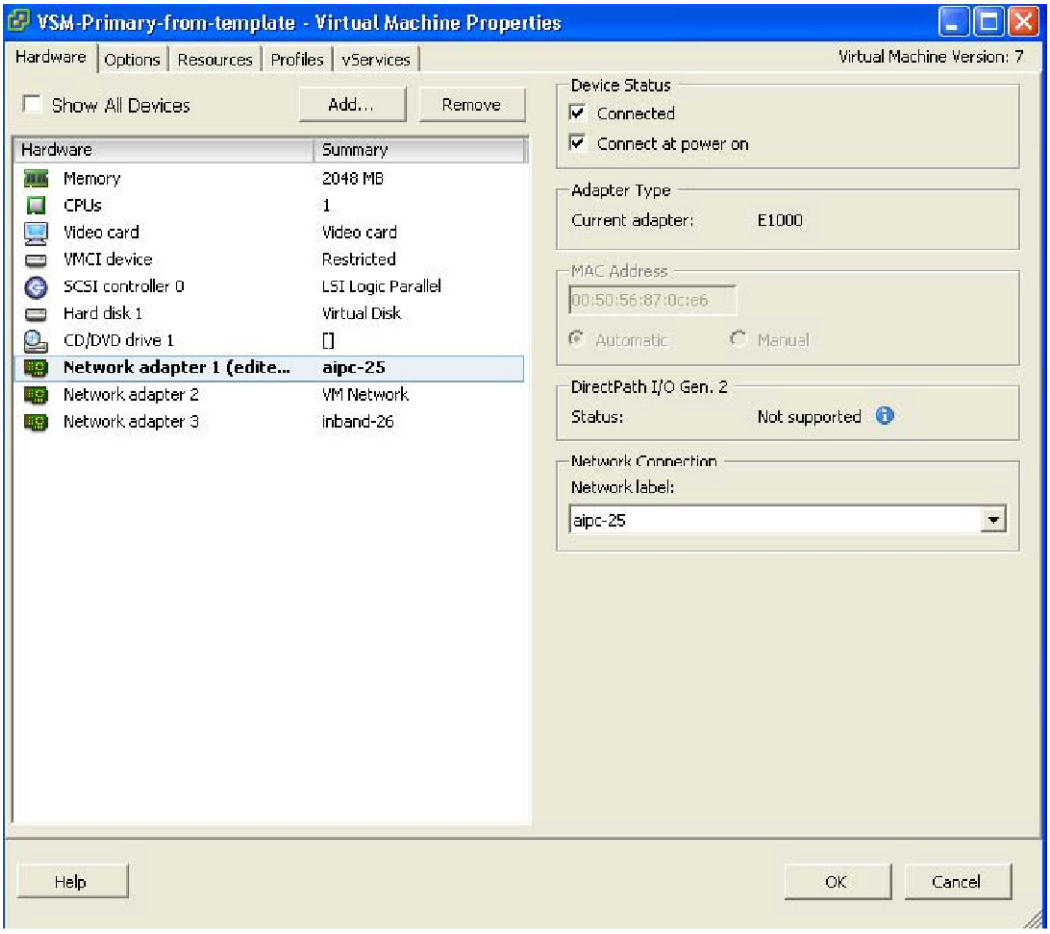

Step 25 In the Hardware / Summary pane, choose Network adapter 1.

Step 26 In the Device Status area, check the Connect at power on check box.

Step 27 Confirm that the VEMs are attached to the VSM by entering the following command:

Example:

```
switch# show module

Mod Ports Module-Type Model Status
--- ----- -------------------------------- ------------------ ------------
1 0 Virtual Supervisor Module Nexus1000V active *
3 248 Virtual Ethernet Module NA ok
Mod Sw Hw
--- ---------------- ------------------------------------------------
1 4.2(1)SV1(4a) 0.0
3 4.2(1)SV1(4a) VMware ESXi 4.0.0 Releasebuild-261974 (1.20)
Mod MAC-Address(es) Serial-Num
--- -------------------------------------- ----------
1 00-19-07-6c-5a-a8 to 00-19-07-6c-62-a8 NA
3 02-00-0c-00-03-00 to 02-00-0c-00-03-80 NA
Mod Server-IP Server-UUID Server-Name
--- --------------- ------------------------------------ --------------------
1 10.78.111.20 NA NA
3 10.78.111.186 0e973f80-e804-11de-956e-4bc311a28ede VEM-186-KLU2
* this terminal session
switch#
```

Step 28 Copy the backup configuration to the running configuration by entering the following command:

Example:

```
switch# switch# copy bootflash:VSM-Backup-running-config running-config
Disabling ssh: as its enabled right now:
Can't disable ssh for key generation:Current user is logged in through ssh
2011 Apr 26 12:21:22 switch %KERN-3-SYSTEM_MSG: redun_platform_ioctl :
Entered - kernel
2011 Apr 26 12:21:22 switch %KERN-3-SYSTEM_MSG: redun_platform_ioctl : Host
name is set switch - kernel
2011 Apr 26 12:21:22 switch %KERN-3-SYSTEM_MSG: redun_platform_ioctl :
Entered - kernel
2011 Apr 26 12:21:22 switch %KERN-3-SYSTEM_MSG: redun_platform_ioctl : Host
name is set switch - kernel
ERROR: Flow Record: Record is in use. Remove from all clients before modifying.
ERROR: Flow Record: Record is in use. Remove from all clients before modifying.
ERROR: Flow Record: Record is in use. Remove from all clients before modifying.
Please do a "copy running startup" to ensure the new setting takes effect
on next reboot
LACP Offload Status can be verified using "show lacp offload status"
Change in LACP Offload Status takes effect only on the next VSM Reboot
This can potentially cause modules with LACP uplinks to flap
2011 Apr 26 12:21:23 switch %VMS-5-DVS_NAME_CHANGE: Changed dvswitch
name to 'switch' on the vCenter Server.
Syntax error while parsing 'limit-resource m4route-mem minimum 58 maximum 58'
Syntax error while parsing 'limit-resource m6route-mem minimum 8 maximum 8'
ERROR: Port-channel interface has non-zero members!
2011 Apr 26 12:21:34 switch %MSP-5-DOMAIN_CFG_SYNC_DONE: Domain config
successfully pushed to the management server.
ERROR: Cannot change connection configuration in 'Enabled' state.
ERROR: Cannot change connection configuration in 'Enabled' state.
ERROR: Cannot change the data-center name in connected state.
command failed. Invalid ip address.
Syntax error while parsing 'log-level '
Syntax error while parsing 'no ip dhcp relay'
switch# 2011 Apr 26 12:21:35 switch last message repeated 3 times
2011 Apr 26 12:21:35 switch %ETHPORT-5-SPEED: Interface port-channel1,
operational speed changed to 1 Gbps
2011 Apr 26 12:21:35 switch %ETHPORT-5-IF_DUPLEX: Interface port-channel1,
operational duplex mode changed to Full
2011 Apr 26 12:21:35 switch %ETHPORT-5-IF_RX_FLOW_CONTROL: Interface portchannel1,
operational Receive Flow Control state changed to on
```

```
2011 Apr 26 12:21:35 switch %ETHPORT-5-IF_TX_FLOW_CONTROL: Interface portchannel1,
operational Transmit Flow Control state changed to on
VSM backup and Recovery Procedure EDCS-1017832Cisco Systems Pvt Ltd Internal Document
April-27-2011
2011 Apr 26 12:21:35 switch %ETH_PORT_CHANNEL-5-PORT_UP: port-channel1:
Ethernet3/2 is up
2011 Apr 26 12:21:35 switch %ETH_PORT_CHANNEL-5-FOP_CHANGED: portchannel1:
first operational port changed from none to Ethernet3/2
2011 Apr 26 12:21:35 switch %ETHPORT-5-IF_UP: Interface Ethernet3/2 is up in
mode trunk
2011 Apr 26 12:21:35 switch %ETHPORT-5-IF_UP: Interface port-channel1 is up in
mode trunk
switch#
```

This step is necessary if features are configured directly through the interface configuration mode for Ethernet interfaces and for features like ERSPAN/NFM.

Step 29 Copy the running-configuration to the startup-configuration by entering the following command:

Example:

```
switch# copy running-config startup-config
[########################################] 100%
switch#
```

Step 30 Create the standby VSM by using the OVA/OVF files to form an HA pair.
See the “Installing the Software from an OVA or OVF Image” section in the *Cisco Nexus 1000V Installation and Upgrade Guide*.

- For release 4.2(1)SV1(4) and later releases, deploy the OVF template from the VMware vSphere Client and choose Nexus 1000V Secondary from the Configuration drop-down list.
- For release 4.0(4)SV1(2) through release 4.0(4)SV1(3d), choose Manual Install of Nexus 1000V from the Configuration drop-down list and assign the HA role of secondary in the System Admin Setup of the VSM.

The recovery is complete.

Recovering a VSM with a Backup Configuration File on Cisco Nexus Cloud Services Platform Server

Note This procedure is only for Cisco Nexus Cloud Services Platform. If you want to perform this procedure on ESX platform refer to Deploying the Backup VSM VM, on page 191.

You can import a previously saved location backup copy of a VSB from a remote storage location to the Cisco Nexus Cloud Services Platform to recover a VSM. This section includes:

- Importing a VSB, on page 206
- Recovering a VSM with a Backup Configuration File, on page 208

Importing a VSB

Before You Begin

- Log in to the CLI of the activeCisco Nexus Cloud Services Platformin EXEC mode.
- You have previously created and saved a copy of the VSB configuration in a remote storage location using the Exporting a Backup VSB Configuration on Cisco Nexus Cloud Services Platform Server.

Note You can create multiple. If so, use only the first filename with the import command. Do not change the file suffix for numbering purposes. If you change the prefix for one file, then you must change it for all files.

- Know the name of the VSB and the path to the remote storage location.
- Verify that the bootflash: export-import directory is empty. If files are present in this directory, you must delete them before importing a VSB configuration file.

Procedure

	Command or Action	Purpose
Step 1	switch # **dir bootflash:export-import**	Displays the contents of the export-import directory for verification that the directory is empty. If there is anything in this directory, you must use the next step to delete it before proceeding.
Step 2	switch (config-vsb-config) # (optional)**delete bootflash:export-import** *foldername*	(Optional) Deletes the VSB compressed tar file and its folder created for export.
Step 3	switch # **copy ftp:***filename***bootflash:export-import**	Copies the exported image file from a remote storage location into the Cisco Nexus Cloud Services Platform export-import folder in the bootflash: repository. • The *filename* argument is the name of the export file. Multiple files may have been created. If so, copy these files into export-import directory and use only the first filename with the import command. Do not change the file suffix for numbering purposes. If you change the prefix for one file, then you must change it for all.
Step 4	switch # **configure terminal**	Enters the global configuration mode.
Step 5	switch (config) # **virtual-service-blade** *name*	Enters the configuration mode for the named virtual service blade.
Step 6	switch (config-vsb-config) # **import primary** *filename*	Powers off the primary VSB, imports the specified VSB configuration file, and then removes the configuration file from the export-import folder.

	Command or Action	Purpose
		• The filename argument is the name of the export file that you copied from the remote server to the bootflash: repository.
Step 7	switch (config-vsb-config)# **show virtual-service-blade summary**	(Optional) Displays a summary of all VSB configurations by type name, such as VSM or NAM. Verify that the primary VSB is powered off.
Step 8	Configure the network uplinks by completing the following set of tasks. These tasks might vary based on the network toplogy and uplink types: • Modifying the uplink type • Migrating from static to flexible uplink • Migrating from flexible to static uplink • Configuring port channels • Assigning uplinks to a VSB Interface	Configures your network uplinks with the procedures listed in Configuring Network Uplink Types section.
Step 9	switch # **no shutdown primary** *filename*	Powers on the primary VSB and imports the primary VSB configuration. The filename argument is the name of the imported primary VSB
Step 10	switch (config-vsb-config) # **show virtual-service-blade name** *name*	Displays the virtual service blade information for verification. From the command output, make a note of the control and management VSB Ethernet interfaces.
Step 11	switch (config-vsb-config) # **copy running-config startup-config**	Saves the running configuration persistently through reboots and restarts by copying it to the startup configuration.

The following example shows how to import a VSB backup file:

```
switch# dir bootflash export-import
DOCS-CPPA# dir export-import

Usage for bootflash://sup-local
  496164864 bytes used
 3495215104 bytes free
 3991379968 bytes total
switch#
switch-1(config-vsb-config)# delete Vdisk1.img.tar.00
switch-1(config-vsb-config)#
switch# copy ftp:Vdisk1.img.tar.00 bootflash:export-import
Enter vrf (If no input, current vrf 'default' is considered):
Enter hostname for the ftp server: 10.78.109.51
Enter username: administrator
```

```
Password:
***** Transfer of file Completed Successfully *****
switch-1# configure terminal
switch-1(configure)#
switch-1(config)# virtual-service-blade vsm-5
switch-1(config-vsb-config)#
switch-1(config-vsb-config)# import primary Vdisk1.img.tar.00
Note: import started..
Note: please be patient..
Note: Import cli returns check VSB status for completion
switch-1(config-vsb-config)#


Example:
switch-1(config-vsb-config)# show virtual-service-blade summary

--------------------------------------------------------------------------------
Name                 Role        State                     Nexus1010-Module
--------------------------------------------------------------------------------

VSM1                 PRIMARY     VSB POWERED OFF           Nexus1010-PRIMARY
VSM1                 SECONDARY   VSB POWERED ON            Nexus1010-SECONDARY


switch-1(config)# virtual-service-blade VSM1
switch-1(config)# no shutdown primary
switch-1(config)#
switch-1(config-vsb-config)# show virtual-service-blade name VSM1
virtual-service-blade VSM1
  Description:
  Slot id:        1
  Host Name:
  Management IP:
  VSB Type Name :  VSM-1.1
  vCPU:           1
  Ramsize:        2048
  Disksize:       3
  Heartbeat:      0
  HA Admin role: Primary
    HA Oper role: NONE
    Status:       VSB POWERED OFF
    Location:     PRIMARY
    SW version:
  VsbEthernet1/1/1:   control    vlan:   1306    state:     up
  VsbEthernet1/1/2:  management    vlan:   1304    state:     up
  VsbEthernet1/1/3:    packet    vlan:   1307    state:     up
  Interface:         internal    vlan:     NA    state:     up
  HA Admin role: Secondary
    HA Oper role: NONE
    Status:       VSB POWERED ON
    Location:     SECONDARY
    SW version:
  VSB Info:

switch-1(config-vsb-config)# copy running-config startup-config
```

Recovering a VSM with a Backup Configuration File

You can recover a VSM using a backup configuration file.

Before You Begin

- You have imported your backup copy of the configuration file using the instructions in Importing a VSB, on page 206.
- You have a copy of the VSM running configuration in remote storage location.
- Log in to the CLI of the Cisco Nexus Cloud Services Platform in EXEC mode.

- This procedure includes a step for updating Cisco Nexus 1000V licenses. For more information, see the *Cisco Nexus 1000V License Configuration Guide*.
- This procedure requires you to shut down the VSM management and control ports to prevent communication with VEMs and vCenter during the recovery. You must know the IDs of the VSM control and management ports and the VSB serial port.
- This procedure requires you to setup the VSM software. You must have the following information available for the VSM VSB:
  - Admin password
  - Domain ID
  - HA role (must be set to the same role as that of the VSM on which it is imported)
  - Management 0 IP address
  - Management 0 netmask
  - Default gateway IP address

Procedure

Step 1 From the Cisco Nexus Cloud Services Platform, shut down the control and management interfaces of the VSM VSB.
The VSM management and control interfaces are no longer communicating with VEMs and vCenter.

Step 2 Verify that the control and management interfaces are down.

Step 3 Power on the VSB VSM.

Step 4 Log in to the Cisco Nexus Cloud Services Platform serial port of the primary VSM.

Step 5 Erase the startup configuration.
The previous configuration is erased. You will replace it with the previously-saved backup of your running configuration in Step 11.

Step 6 Reboot the system.
The Cisco Nexus Cloud Services Platform boots up and the setup wizard starts.

Step 7 Use the setup wizard to configure the VSM. Accept defaults for all except the following:

- Admin password
- Domain ID
- HA Role (must be set to the same role as that of the VSM on which it is imported)
- Management 0 IP address
- Management 0 netmask
- Default gateway IP address

The system summarizes the new setup configuration.

Step 8 Copy the running configuration to the startup configuration using the **copy running-config startup-config**command.

Step 9 Reopen the management interface of the VSM VSB.
The VSM management interface is again communicating with VEMs and vCenter.

Step 10 Verify that the management interface is up.

Step 11 Copy your saved running configuration backup to the VSM bootflash using the **copy bootflash:** *filename*command.

Step 12 Copy the running configuration to the startup configuration.

Step 13 Reopen the control interface of the VSM VSB.
The VSM control interface is again communicating with VEMs and vCenter.

Step 14 Verify that the control interface is up.

Step 15 Check the modules at the VSM CLI.

Step 16 Enable the HA peer.
The VSM is again operating in HA mode with a primary and secondary module.

```
switch-1# configure terminal
switch-1(config)# interface vethernet1/1
switch-1(config-if)# shut

switch-1(config)# show virtual-service-blade name VSM1
virtual-service-blade VSM1
  Description:
  Slot id:        1
  Host Name:
  Management IP:
  VSB Type Name :  VSM-1.1
  vCPU:           1
  Ramsize:        2048
  Disksize:       3
  Heartbeat:      0
  HA Admin role: Primary
    HA Oper role: NONE
    Status:       VSB POWERED OFF
    Location:     PRIMARY
    SW version:
  VsbEthernet1/1/1:   control    vlan:   1306    state:     down
  VsbEthernet1/1/2:  management    vlan:   1304    state:     down
  VsbEthernet1/1/3:    packet    vlan:   1307    state:     up
  Interface:         internal    vlan:     NA    state:     up
  HA Admin role: Secondary
    HA Oper role: NONE
    Status:       VSB POWERED ON
    Location:     SECONDARY
    SW version:
  VSB Info:

switch-1(config)# virtual-service-blade VSM1
switch-1(config)# no shutdown primary
switch-1(config)#

n1000v# configure terminal
n1000v(config)# write erase
Warning: This command will erase the startup-configuration.
Do you wish to proceed anyway? (y/n)  [n] y

n1000v# reload
This command will reboot the system. (y/n)? [n] y
2009 Oct 30 21:51:34 s1 %$ VDC-1 %$ %PLATFORM-2-PFM_SYSTEM_RESET: Manual system restart
from Command Line Interface
```

```
n1000v#

---- System Admin Account Setup ----
Enter the password for "admin":
Confirm the password for "admin":
Enter the domain id<1-4095>: 152
Enter HA role[standalone/primary/secondary]: primary

[########################################] 100%

         ---- Basic System Configuration Dialog ----
This setup utility will guide you through the basic configuration of
the system. Setup configures only enough connectivity for management
of the system.
*Note: setup is mainly used for configuring the system initially,
when no configuration is present. So setup always assumes system
defaults and not the current system configuration values.
Press Enter at anytime to skip a dialog. Use ctrl-c at anytime
to skip the remaining dialogs.
Would you like to enter the basic configuration dialog (yes/no): yes
Create another login account (yes/no) [n]: no
Configure read-only SNMP community string (yes/no) [n]: no
Configure read-write SNMP community string (yes/no) [n]: no
Enter the switch name: n1000v
Continue with Out-of-band (mgmt0) management configuration? [yes/no] [y]: yes
Mgmt0 IPv4 address: 172.28.15.152
Mgmt0 IPv4 netmask: 255.255.255.0
Configure the default-gateway: (yes/no) [y]: yes

           IPv4 address of the default gateway : 172.23.233.1
Enable the telnet service? (yes/no) [y]: no
Enable the ssh service? (yes/no) [y]: no
Enable the http-server? (yes/no) [y]: no
Configure NTP server? (yes/no) [n]: no
Configure svs domain parameters? (yes/no) [y]: no
Vem feature level will be set to 4.2(1)SV1(4),
Do you want to reconfigure? (yes/no) [n] no


Example:
n1000v# copy running-config startup-config
[########################################] 100%
n1000v#

switch-1# configure terminal
switch-1(config)# interface vethernet1/2
switch-1(config-if)# no shut
switch-1(config)# show virtual-service-blade name VSM1
virtual-service-blade VSM1
. . .
VsbEthernet1/1/1:   control    vlan:   1306    state:     down
  VsbEthernet1/1/2:  management    vlan:   1304    state:     up
  VsbEthernet1/1/3:    packet    vlan:   1307    state:     up
  Interface:         internal    vlan:     NA    state:     up
. . .
switch-1(config)#


Example:
switch-1(config)# copy bootflash:VSM1-periodic-startup-config.txt running-config
switch-1(config)#

n1000v# copy running-config startup-config
[########################################] 100%
n1000v#

config t
interface vethernet slot/port
no shut

Example:
switch-1# config t
switch-1(config)# interface vethernet1/1
```

```
switch-1(config-if)# no shut

switch-1(config)# show virtual-service-blade name VSM1
virtual-service-blade VSM1
. . .
VsbEthernet1/1/1:   control    vlan:   1306    state:     up
  VsbEthernet1/1/2:  management    vlan:   1304    state:     up
  VsbEthernet1/1/3:    packet    vlan:   1307    state:     up
  Interface:         internal    vlan:     NA    state:     up
. . .
switch-1(config)#
Example:
n1000v(config)# show module
Mod Ports Module-Type                       Model              Status
--- ----- --------------------------------- ------------------ ------------
1   0     Virtual Supervisor Module         Nexus1000V         active *
2   0     Virtual Supervisor Module         Nexus1000V         ha-standby
3   248   Virtual Ethernet Module           NA                 ok
4   248   Virtual Ethernet Module           NA                 ok

Mod Sw               Hw
--- ---------------- ------------------------------------------------
1   4.2(1)SV1(4a)    0.0
2   4.2(1)SV1(4a)    0.0
3   4.2(1)SV1(4a)    VMware ESXi 4.0.0 Releasebuild-208167 (1.9)
4   4.2(1)SV1(4a)    VMware ESX 4.1.0 Releasebuild-260247 (2.0)

Mod MAC-Address(es)                       Serial-Num
--- -------------------------------------- ----------
1 00-19-07-6c-5a-a8 to 00-19-07-6c-62-a8 NA
2 00-19-07-6c-5a-a8 to 00-19-07-6c-62-a8 NA
3 02-00-0c-00-03-00 to 02-00-0c-00-03-80 NA
4 02-00-0c-00-04-00 to 02-00-0c-00-04-80 NA

Mod Server-IP       Server-UUID                           Server-Name
--- --------------- ------------------------------------ --------------------
1   10.78.109.44    NA                                   NA
2   10.78.109.44    NA                                   NA
3   10.78.109.72    44454c4c-4300-1046-8043-b6c04f563153 10.78.109.72
4   10.78.109.71    44454c4c-3300-1056-8057-b3c04f583153 10.78.109.71

* this terminal session

n1000v(config)#

switch-1(config)# enable secondary
```

Verifying the Export and Import of a VSB

Procedure

	Command or Action	Purpose
Step 1	dir bootflash:export-import/**folder-name**	Displays the contents of the export-import directory folder.
Step 2	show virtual-service-blade summary	Displays the redundancy state (active or standby) and the redundancy role (primary or secondary) for each VSB.
Step 3	show virtual-service-blade [name **name]**	Displays the configuration for a specific virtual service blade.

The following example shows export-import Directory:

```
switch-1(config-vsb-config)# dir bootflash:export-import/1
279955021 Sep 08 19:13:21 2011 Vdisk1.img.tar.00
Usage for bootflash://sup-local
310870016 bytes used
3680509952 bytes free
3991379968 bytes total
```

The following example shows Virtual Service Blade Summary:

```
switch-1(config-vsb-config)# show virtual-service-blade summary
------------------------------------------------------------------------------
Name Role State Nexus1010-Module
------------------------------------------------------------------------------
VSM1 PRIMARY VSB POWERED OFF Nexus1010-PRIMARY
VSM1 SECONDARY VSB POWERED ON Nexus1010-SECONDARY
switch# show virtual-service-blade name VSM1
virtual-service-blade VSM1
Description:
Slot id: 1
Host Name:
Management IP:
VSB Type Name : VSM-1.1
vCPU: 1
Ramsize: 2048
Disksize: 3
Heartbeat: 0
HA Admin role: Primary
HA Oper role: NONE
Status: VSB POWERED OFF
Location: PRIMARY
SW version:
VsbEthernet1/1/1: control vlan: 1306 state: down
VsbEthernet1/1/2: management vlan: 1304 state: down
VsbEthernet1/1/3: packet vlan: 1307 state: up
Interface: internal vlan: NA state: up
HA Admin role: Secondary
HA Oper role: NONE
Status: VSB POWERED ON
Location: SECONDARY
SW version:
VSB Info:
switch-1(config)#
```

Feature History for VSM Backup and Recovery

This section provides the VSM backup and Recovery feature release history.

Feature Name	Releases	Feature Information
VSM Backup and Recovery	4.2(1)SV1(4a)	This feature was introduced.

CHAPTER 16

Enabling vTracker

This chapter contains the following sections:

- Information About vTracker, page 216
- Guidelines and Limitations, page 217
- Default Settings for vTracker Parameters, page 217
- Enabling vTracker Globally, page 217
- Upstream View, page 219
- Virtual Machine (VM) View, page 221
- Module pNIC View, page 227
- VLAN View, page 228
- VMotion View, page 230
- Feature History for vTracker, page 232

Information About vTracker

The following illustration displays the vTracker setup diagram:

Figure 26: vTracker Setup Diagram in the Cisco Nexus 1000V Environment

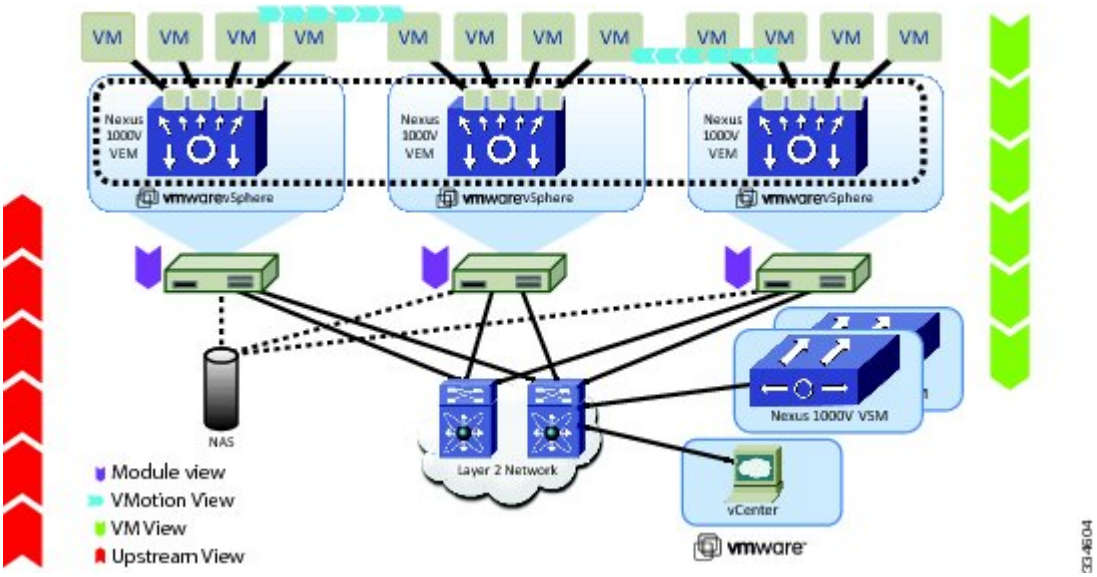

The vTracker feature on the Cisco Nexus 1000V switch provides information about the virtual network environment. Once you enable vTracker, it becomes aware of all the modules and interfaces that are connected with the switch. vTracker provides various views that are based on the data sourced from the vCenter, the Cisco Discovery Protocol (CDP), and other related systems connected with the virtual switch. You can use vTracker to troubleshoot, monitor, and maintain the systems. Using vTracker show commands, you can access consolidated network information across the following views:

- Upstream View—Provides information on all the virtual ports connected to an upstream physical switch. The view is from top of the network to the bottom.
- VM View—Supports two sets of data:
  - VM vNIC View—Provides information about the virtual machines (VMs) that are managed by the Cisco Nexus 1000V switch. The vNIC view is from the bottom to the top of the network.
  - VM Info View—VM Info View—Provides information about all the VMs that run on each server module.
- Module pNIC View—Provides information about the physical network interface cards (pNIC) that are connected to each Virtual Ethernet Module (VEM).
- VLAN View—Provides information about all the VMs that are connected to specific VLANs.
- vMotion View—Provides information about all the ongoing and previous VM migration events.

Note vTracker is available with both Essential and Advanced edition of Cisco Nexus 1000V.

Guidelines and Limitations

vTracker has the following configuration guidelines and limitations:

- For VM and VMotion views, you should connect the Virtual Supervisor Module (VSM) with the OpenStack for the vTracker **show** commands to work.
- vTracker is disabled by default.
- While the Cisco Nexus 1000V switch information is validated, the information sourced by vTracker from the OpenStack is not verifiable.
- All vTracker views are valid for a given time only, because the virtual environment is dynamic and constantly changing.
- In a scaled-up environment, vTracker can experience delays in retrieving real-time information, which is distributed across VEMs and OpenStack, among other components.

Default Settings for vTracker Parameters

Parameters	Default
feature vtracker	Disabled globally

Enabling vTracker Globally

- vTracker can be configured only globally, not on individual interfaces.
- By default, vTracker is disabled.

Before You Begin

- You are logged in to the VSM CLI in EXEC mode or the configuration mode of any node.
- vTracker does not change any VSM configuration settings or behavior. Rather, it only tracks and displays the current configuration views.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **[no] feature vtracker**	Enables the vTracker feature. Use the **no** form of this command to disable this feature.
Step 3	switch(config)# **copy running-config startup-config**	(Optional) Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

The following example enables vTracker:

```
switch# configure terminal
switch(config)# feature vtracker
switch(config)# copy running-config startup-config
```

Upstream View

Upstream View Overview

The upstream view provides end-to-end network information from the VM to the physical switch. The following is the upstream view set-up diagram:

Figure 27: Upstream View Setup Diagram in the Cisco Nexus 1000V Environment

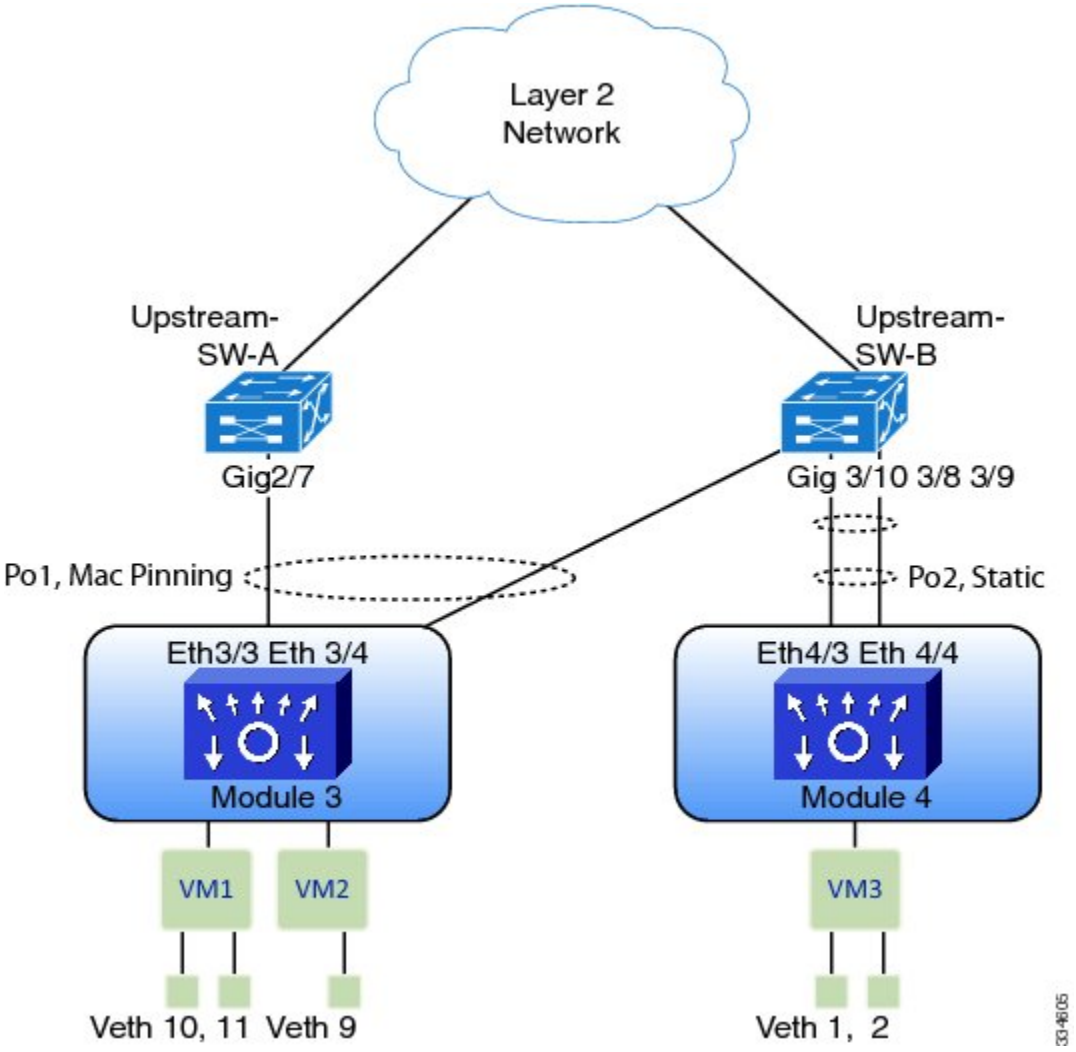

Note Cisco Discovery Protocol (CDP) neighbor information must be accessible to generate the required upstream view output. CDP must be enabled on the hosts as well as on the VSM or the Cisco Cloud Services Platform (CSP) in order for the **show vtracker upstream-view** command to work.

Displaying Upstream View

To display the upstream view, follow the given step.

Procedure

show vtracker upstream-view [**device-id** *name* | **device-ip** *IP address*]
The following examples show the vTracker upstream view in a VSM:

Example:

```
switch(config)# show vtracker upstream-view
--------------------------------------------------------------------------------
Device-Name          Device-Port Server-Name        PC-Type    Veth-interfaces
Device-IP            Local-Port  Adapter Status    PO-Intf
--------------------------------------------------------------------------------
Upstream-SW-A        Gig2/7      203.0.113.118     MacPinn    10-11
203.0.113.66         Eth3/3      vmnic2  up        Po1

Upstream-SW-B        Gig3/10     203.0.113.117     MacPinn    9
203.0.113.54         Eth3/4      vmnic3  up        Po1

                     Gig3/8      203.0.113.99      Default    1-2
                     Eth4/3      vmnic2  up        Po2

                     Gig3/9      203.0.113.99      Default    1-2
                     Eth4/4      vmnic3  up        Po2
--------------------------------------------------------------------------------
```

Example:

```
switch(config)# show vtracker upstream-view device-id Upstream-SW-A
--------------------------------------------------------------------------------
Device-Name          Device-Port Server-Name        PC-Type    Veth-interfaces
Device-IP            Local-Port  Adapter Status    PO-Intf
--------------------------------------------------------------------------------
Upstream-SW-A        Gig2/7      203.0.113.118     MacPinn    10-11
203.0.113.66         Eth3/3      vmnic2  up        Po1
--------------------------------------------------------------------------------
```

Upstream View Field Description

The column headings in the upstream view examples above is described in the following table:

Column	Description
Device-Name	Name of the neighboring device.
Device-IP	IP address of the device.
Device-Port	Port interface of the device that is connected to the Cisco Nexus 1000V Ethernet (local) port.
Local-Port	Local port interface, which is connected to the neighboring device port.
Server-Name	Name or IP address of the server module to which the local port is connected.

Column	Description
Adapter	Local port name as known by the hypervisor. For VMWare ESX or ESXi, it is known as VMNic.
Status	Local port's operational status.
PC-Type	Port-channel type of the local port. Each PC-Type has a corresponding channel-group configuration in the port profile or the interface. Supported values are as follows: • Default—channel-group auto or channel-group auto mode on • MacPinn—channel-group auto mode on mac-pinning • MacPinnRel—channel-group auto mode on mac-pinning relative • SubGrpCdp—channel-group auto mode on sub-group cdp • SubGrpMan—channel-group auto mode on sub-group manual • LACP-A—channel-group auto mode active • LACP-P—channel-group auto mode passive
PO-Intf	Port channel interface of the local port.
veth-interfaces	Available virtual Ethernet interfaces for which traffic can flow through the upstream switch. **Note** You can get similar information by entering the **show int virtual pinning** command at the VSM prompt.

Virtual Machine (VM) View

Virtual Machine (VM) View Overview

The VM view provides you with comprehensive information about the VMs that are connected with the Cisco Nexus 1000V switch.

- VM vNIC View—Provides information about all the vNICs (virtual network interface cards) adapters that are managed by the Cisco Nexus 1000V switch.

Note The VSM must be connected with the vCenter in order to generate the required VM view output. You can enter the **show svs connections** command on the VSM to verify the connection.

Displaying the VM vNIC View

To display the VM vNIC view, follow the given step.

Procedure

show vtracker vm-view vnic [**module** *number* | **vm** *name*]

Note The timeout for this command is 180 seconds.

The following examples show the vTracker VM vNIC view in a VSM:

Example:

```
switch(config)# show vtracker vm-view vnic
* Network: For Access interface - Access vlan, Trunk interface - Native vlan,
           VXLAN interface - Segment Id.
--------------------------------------------------------------------------------
Mod VM-Name         VethPort    Drv Type  Mac-Addr        State Network Pinning
    HypvPort        Adapter     Mode      IP-Addr
--------------------------------------------------------------------------------
3   gentoo-2        Veth3       Vmxnet3   0050.56b5.37de  up    339     Eth3/8
    1025            Adapter 3   access    n/a

3   gentoo-2        Veth4       E1000     0050.56b5.37df  up    339     Eth3/8
    1026            Adapter 4   access    n/a

3   gentoo-2        Veth5       Vmxnet2   0050.56b5.37dd  up    339     Eth3/8
    1024            Adapter 2   access    n/a

4   Fedora-VM1      Veth7       E1000     0050.56bb.4fc1  up    406     Eth4/3
    4258            Adapter 2   pvlan     10.104.249.49

5   Fedora-VM2      Veth1       E1000     0050.56b5.098b  up    1       Po9
    100             Adapter 1   trunk     n/a

5   Fedora-VM2      Veth2       E1000     0050.56b5.098d  up    405     Po9
    3232            Adapter 3   pvlan     10.104.249.60
--------------------------------------------------------------------------------
```

Example:

```
switch(config)# show vtracker vm-view vnic module 4
* Network: For Access interface - Access vlan, Trunk interface - Native vlan,
           VXLAN interface - Segment Id.
--------------------------------------------------------------------------------
Mod VM-Name         VethPort    Drv Type  Mac-Addr        State Network Pinning
    HypvPort        Adapter     Mode      IP-Addr
--------------------------------------------------------------------------------
4   Fedora-VM1      Veth7       E1000     0050.56bb.4fc1  up    406     Eth4/3
    4258            Adapter 2   pvlan     10.104.249.49
--------------------------------------------------------------------------------
```

VM vNIC View Field Description

The column headings in the VM vNIC view examples above are described in the following table:

Column	Description
Mod	Module number on which the VM resides.
VM-Name	VM name.
HypvPort	Generated port ID in the hypervisor. For VMware hypervisor, it is called the dvPort ID.
VethPort	vEthernet interface number in the Cisco Nexus 1000V switch.
Adapter	Network adapter number of the vEthernet interface.
Drv Type	Driver type of the network adapter. Supported values are as follows: • E1000 • E1000e • PCNet32 • Vmxnet2 • Vmxnet3
Mode	Interface modes. Supported values are as follows: • access—Access port/Virtual Extensible Local Area Network (VXLAN) port • trunk—Trunk port • pvlan—Private VLAN (PVLAN) host mode or pvlan promiscuous mode
Mac-Addr	MAC address of the network adapter.
IP-Addr	IPv4 address of the network adapter, if the VMware tools are installed on the OS.
State	Operational status of the network adapter.

Column	Description
Network	Network interface ID. Supported values are as follows: • access vlan—Access interface • trunk interface—Native VLAN • vxlan interface—Segment ID • pvlan interface—Promiscous - primary VLAN; Isolated - secondary VLAN; Community-secondary VLAN **Note** To know the interface type, refer the Mode value.
Pinning	• For LACP or static port-channels, pinning columns only display the port-channel number. The link the VM traffic travels depends upon the hashing algorithm the port-channel is using. • For a vPC CDP/Manual/MAC Pinning port-channel, each vEthernet port is pinned to a sub-group of the port-channel. The sub-group corresponds to an Ethernet or its uplink interface. This column shows the Ethernet port members of the sub-group. • If the Ethernet ports are not part of the port channel in any module, this column is blank.

Displaying the VM Info View

To display the VM Info view, follow the given step.

Procedure

show vtracker vm-view info [**module** *number* | **vm** *name*]

Note The timeout for this command is 180 seconds.

The following examples show the vTracker VM Info view in a VSM:

Example:

```
switch(config)# show vtracker vm-view info
Module 4:
   VM Name:                Fedora-VM1
   Guest Os:               Other Linux (32-bit)
   Power State:            Powered On
   VM Uuid:                421871bd-425e-c484-d868-1f65f4f1bc50
```

```
   Virtual CPU Allocated:  1
   CPU Usage:              1 %
   Memory Allocated:       256 MB
   Memory Usage:           1 %
   VM FT State:            Unknown
   Tools Running status:   Not Running
   Tools Version status:   not installed
   Data Store:             NFS1_4
   VM Uptime:              1 day 29 minutes 46 seconds

   VM Name:                Fedora-VM2
   Guest Os:               Other Linux (32-bit)
   Power State:            Powered On
   VM Uuid:                4218ab37-d56d-63e4-3b00-77849401071e
   Virtual CPU Allocated:  1
   CPU Usage:              1 %
   Memory Allocated:       256 MB
   Memory Usage:           1 %
   VM FT State:            Unknown
   Tools Running status:   Not Running
   Tools Version status:   not installed
   Data Store:             NFS1_4
   VM Uptime:              58 minutes 30 seconds

Module 5:
   VM Name:                gentoo-cluster2-1
   Guest Os:               Other (64-bit)
   Power State:            Powered Off
   VM Uuid:                4235edf5-1553-650f-ade8-39565ee3cd57
   Virtual CPU Allocated:  1
   CPU Usage:              0 %
   Memory Allocated:       512 MB
   Memory Usage:           0 %
   VM FT State:            Unknown
   Tools Running status:   Not Running
   Tools Version status:   not installed
   Data Store:             datastore1 (2)
   VM Uptime:              n/a
```

Example:

```
switch(config)# show vtracker vm-view info vm Fedora-VM1
Module 4:
   VM Name:                Fedora-VM1
   Guest Os:               Other Linux (32-bit)
   Power State:            Powered On
   VM Uuid:                421871bd-425e-c484-d868-1f65f4f1bc50
   Virtual CPU Allocated:  1
   CPU Usage:              1 %
   Memory Allocated:       256 MB
   Memory Usage:           1 %
   VM FT State:            Unknown
   Tools Running status:   Not Running
   Tools Version status:   not installed
   Data Store:             NFS1_4
   VM Uptime:              1 day 29 minutes 46 seconds
```

VM Info View Field Description

The column headings in the VM Info view examples above are described in the following table:

Column	Description
Module	Module number on which the VM resides.
VM Name	VM name.

Column	Description
Guest OS	Guest operating system name, which is running on the VM.
Power State	Operational state of the VM. Supported status values are as follows: • Unknown • Powered On • Powered Off • Suspended • Non Available
VM Uuid	UUID of the VM.
Virtual CPU Allocated	Number of the virtual CPUs allocated for the VM.
CPU Usage	VM usage in percentage.
Memory Allocated	Memory allocated to the VM in megabytes.
Memory Usage	VM memory usage in percentage.
VM FT State	Fault tolerance state of the VM. Supported values are as follows: • Unknown • FT Primary • FT Secondary • Not Available
Tools Running status	VMware tools running status. Supported values are as follows: • Unknown • Starting • Running • Not Running • Not Available

Column	Description
Tools Version status	VMware tools that display the version status. Supported values are as follows: • Unknown • Current • Need Upgrade • Not Installed • Unmanaged • Blacklisted • Supported New • Supported Old • Too New • Too Old • Not Available
Data Store	Data store name on which the VM resides.
VM Uptime	How long the VM has been running.

Module pNIC View

Module pNIC View Overview

The Module pNIC View provides information about the physical network interface cards (pNICs) that are connected to each of the VEM server module in the network.

Displaying the Module pNIC View

To display the Module pNIC view, follow the given step.

Procedure

show vtracker module-view pnic [**module** *number*]
The following examples show the vTracker Module pNIC view in a VSM:

Example:
```
switch(config)# show vtracker module-view pnic
--------------------------------------------------------------------------------
```

```
Mod  EthIf     Adapter     Mac-Address    Driver    DriverVer           FwVer
               Description
--------------------------------------------------------------------------------
3    Eth3/8    vmnic7      0050.5652.f935 igb       2.1.11.1            1.4-3
               Intel Corporation 82576 Gigabit Network Connection


4    Eth4/3    vmnic2      0050.565e.df74 e1000     8.0.3.2-1vmw-NAPI   N/A
               Intel Corporation 82546GB Gigabit Ethernet Controller


4    Eth4/4    vmnic3      0050.565e.df75 e1000     8.0.3.2-1vmw-NAPI   N/A
               Intel Corporation 82546GB Gigabit Ethernet Controller
--------------------------------------------------------------------------------
```

Example:

```
switch(config)# show vtracker module-view pnic module 3
--------------------------------------------------------------------------------
Mod  EthIf     Adapter     Mac-Address    Driver    DriverVer           FwVer
               Description
--------------------------------------------------------------------------------
3    Eth3/8    vmnic7      0050.5652.f935 igb       2.1.11.1            1.4-3
               Intel Corporation 82576 Gigabit Network Connection
--------------------------------------------------------------------------------
```

Module pNIC View Field Description

The column headings in the Module pNIC view examples above is described in the following table:

Column	Description
Mod	Server module name on which the VM resides.
EthIf	Ethernet interface ID of the server module.
Adapter	Ethernet adapter name as seen by the Hypervisor.
Description	Manufacturer name of the above adapter.
Mac-Address	MAC address of the Ethernet interface.
Driver	Driver type of the interface.
DriverVer	Driver version of the interface.
FwVer	Firmware version of the interface.

VLAN View

VLAN View Overview

The VLAN view provides information about all the VMs that are connected to a specific VLAN or a range of VLANs. It is a view from the VLAN perspective.

Displaying the VLAN View

To display the VLAN view, follow the given step.

Procedure

show vtracker vlan-view vnic [**vlan** *number/range*]
The following examples show the vTracker VLAN view in a VSM:

Example:

```
switch(config)# show vtracker vlan-view
* R = Regular Vlan,  P = Primary Vlan, C = Community Vlan
  I = Isolated Vlan, U = Invalid

--------------------------------------------------------------------------------
VLAN   Type VethPort  VM Name                  Adapter Name     Mod
--------------------------------------------------------------------------------
1      R    -         -                        -                -
233    R    -         -                        -                -
335    R    -         -                        -                -
336    R    -         -                        -                -
337    R    -         -                        -                -
338    R    -         -                        -                -
339    R    Veth3     gentoo-2                 Net Adapter 3    3
            Veth4     gentoo-2                 Net Adapter 4    3
            Veth5     gentoo-2                 Net Adapter 2    3
340    R    -         -                        -                -
341    R    -         -                        -                -
400    R    Veth1     Fedora-VM2               Net Adapter 1    5
401    R    Veth1     Fedora-VM2               Net Adapter 1    5
402    R    Veth1     Fedora-VM2               Net Adapter 1    5
403    R    -         -                        -                -
404    P    Veth6     Fedora-VM1               Net Adapter 1    4
405    C    Veth2     Fedora-VM2               Net Adapter 3    5
406    I    Veth7     Fedora-VM1               Net Adapter 2    4
--------------------------------------------------------------------------------
```

Example:

```
switch(config)# show vtracker vlan-view vlan 233-340
* R = Regular Vlan,  P = Primary Vlan, C = Community Vlan
  I = Isolated Vlan, U = Invalid

--------------------------------------------------------------------------------
VLAN   Type VethPort  VM Name                  Adapter Name     Mod
--------------------------------------------------------------------------------
233    R    -         -                        -                -
335    R    -         -                        -                -
336    R    -         -                        -                -
337    R    -         -                        -                -
338    R    -         -                        -                -
339    R    Veth3     gentoo-2                 Net Adapter 3    3
            Veth4     gentoo-2                 Net Adapter 4    3
            Veth5     gentoo-2                 Net Adapter 2    3
340    R    -         -                        -                -
--------------------------------------------------------------------------------
```

VLAN View Field Description

The column headings in the VLAN view examples above are described in the following table:

Column	Description
VLAN	VLAN ID on which the VM resides.
Type	VLAN type. Supported types are as follows: • R—Regular VLAN • P—Primary VLAN • C—Community VLAN • I—Isolated VLAN • U—Invalid VLAN
VethPort	vEthernet interface port number used by the VLAN.
VM Name	VM name of the interface.
Adapter Name	Adapter name of the interface.
Mod	Module number on which the interface resides.

VMotion View

VMotion View Overview

The vMotion view provides information about all the ongoing (if any) as well as previous VM migration events. However, only VMs that are currently being managed by the Cisco Nexus 1000V switch are displayed in the output.

Note The VSM must be connected with the vCenter in order to generate the required VMotion view output. You can enter the **show svs connections** command on the VSM to verify the connection.

Displaying the VMotion View

To display the VMotion view, follow the given step.

Procedure

show vtracker vmotion-view [**now** | **last** *number 1-100*]

Note The timeout for this command is 180 seconds.

The following examples show the vTracker VMotion view in a VSM:

Example:

```
switch(config)# show vtracker vmotion-view last 20
Note: Command execution is in progress...

Note: VM Migration events are shown only for VMs currently
      managed by Nexus 1000v.

* '-' = Module is offline or no longer attached to Nexus1000v DVS
--------------------------------------------------------------------------------
VM-Name               Src Dst   Start-Time               Completion-Time
                      Mod Mod
--------------------------------------------------------------------------------
rk-ubt-1-0046         6    4    Mon Sep  3 10:42:27 2012 OnGoing

rk-ubt-1-0045         6    4    Mon Sep  3 10:42:27 2012 OnGoing

rk-ubt-1-0031         6    4    Mon Sep  3 10:42:27 2012 Mon Sep  3 10:44:10 2012

rk-ubt-1-0021         6    4    Mon Sep  3 10:42:27 2012 Mon Sep  3 10:43:42 2012

rk-ubt-1-0023         6    3    Thu Aug 16 14:25:26 2012 Thu Aug 16 14:27:55 2012

rk-ubt-1-0029         6    3    Thu Aug 16 14:25:26 2012 Thu Aug 16 14:27:50 2012

rk-ubt-1-0024         6    3    Thu Aug 16 14:25:26 2012 Thu Aug 16 14:26:13 2012

rk-ubt-1-0025         6    3    Thu Aug 16 14:25:26 2012 Thu Aug 16 14:26:12 2012

rk-ubt-1-0026         6    3    Thu Aug 16 14:25:26 2012 Thu Aug 16 14:26:09 2012

RHEL-Tool-VmServer    -    3    Wed Aug  8 12:57:48 2012 Wed Aug  8 12:58:37 2012

--------------------------------------------------------------------------------
```

Example:

```
switch(config)# show vtracker vmotion-view now
Note: Command execution is in progress...

*Note: VM Migration events are shown only for VMs currently
      managed by Nexus 1000v.

* '-' = Module is offline or no longer attached to Nexus1000v DVS
--------------------------------------------------------------------------------
VM-Name               Src Dst   Start-Time               Completion-Time
                      Mod Mod
--------------------------------------------------------------------------------
rk-ubt-1-0046         6    4    Mon Sep  3 10:42:27 2012 OnGoing

rk-ubt-1-0045         6    4    Mon Sep  3 10:42:27 2012 OnGoing
--------------------------------------------------------------------------------
```

VMotion View Field Description

The column headings in the VMotion view examples above are described in the following table:

Column	Description
VM-Name	VM name.
Src Mod	Source module number of the migration.

Column	Description
Dst Mod	Destination module number of the migration.
Start-Time	Migration start time per the time zone defined in the Virtual Supervisor Module (VSM).
Completion-Time	Migration completion time in VSM time zone. For migration in progress, the status shows as “OnGoing.”

Feature History for vTracker

Feature Name	Releases	Feature Information
vTracker Views	4.2(1)SV2(1)	This feature was introduced.

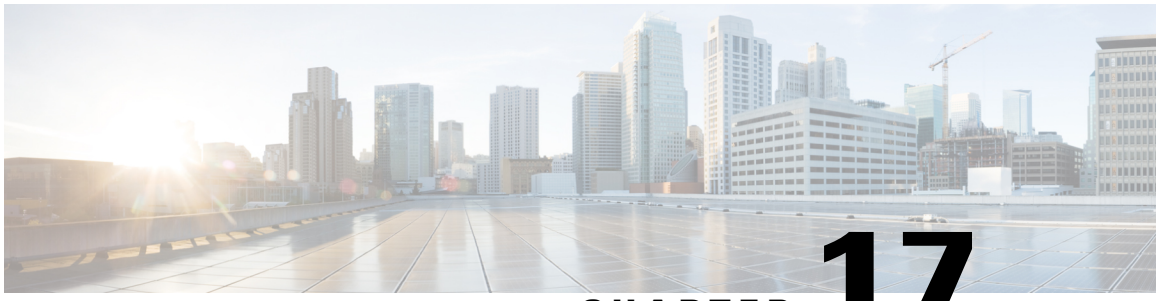

CHAPTER 17

Configuring Virtualized Workload Mobility

This chapter contains the following sections:

- Information About Virtualized Workload Mobility (DC to DC vMotion), page 233
- Prerequisites for Virtualized Workload Mobility (DC to DC vMotion), page 234
- Guidelines and Limitations, page 234
- Migrating a VSM, page 236
- Verifying and Monitoring the Virtualized Workload Mobility (DC to DC vMotion) Configuration, page 237
- Feature History for Virtualized Workload Mobility (DC to DC vMotion), page 237

Information About Virtualized Workload Mobility (DC to DC vMotion)

This section describes the Virtualized Workload Mobility (DC to DC vMotion) configurations and includes the following topics:

- Stretched Cluster
- Split Cluster

Stretched Cluster

Note A stretched cluster is a cluster with ESX/ESXi hosts in different physical locations.

In an environment where the same Cisco Nexus 1000 instance spans two data centers, this configuration allows you to have Virtual Ethernet Modules (VEMs) in different data centers be part of the same vCenter Server cluster.

By choosing this configuration, you are ensure that the VEMs in either data center (in a two data center environment) are a part of the same Dynamic Resource Scheduling (DRS) / VMware High Availability (VMW HA) / Fault Tolerance (FT) domain that allows for multiple parallel virtual machine (VM) migration events.

Split Cluster

The Split Cluster configuration is an alternate to the Stretched Cluster deployment. With this configuration, the deployment consists of one or more clusters on either physical site with no cluster that contains VEMs in multiple data centers. While this configuration allows for VM migration between physical data centers, these events are not automatically scheduled by DRS.

Prerequisites for Virtualized Workload Mobility (DC to DC vMotion)

Virtualized Workload Mobility (DC to DC vMotion) has the following prerequisite:

- Layer 2 extension between the two physical data centers over the DCI link.

Guidelines and Limitations

Virtualized Workload Mobility (DC to DC vMotion) has the following guidelines and limitations:

- The VSM HA pair must be located in the same site as their storage and the active vCenter Server.
- Layer 3 control mode is preferred.
- If you are using Link Aggregation Control Protocol (LACP) on the VEM, use LACP offload.
- Quality of Service bandwidth guarantees for control traffic over the DCI link.
- Limit the number of physical data centers to two.
- A maximum latency of 10 ms is supported for VSM-VSM control traffic when deployed across datacenters.
- A maximum latency of 100 ms is supported for VSM-VEM control traffic for both L2 and L3 mode of deployments.
- Cisco Nexus 1000V Release 5.2(1)SV3(1.1) supports deployments where vCenter and VSM are in different data centers, provided the number of hosts does not exceed 35 and the link latency does not exceed 200 milliseconds. In these types of deployments, we recommend that you do not edit port profiles when the VSM and the vCenter are disconnected.

Physical Site Considerations

When you are designing a physical site, follow these guidelines:

- Check the average and maximum latency between a Virtual Supervisor Module (VSM) and VEM.

- Follow the procedures to perform actions you would intend to do in normal operation. For example, VSM migration.
- Design the system to handle the high probability of VSM-VEM communication failures where a VEM must function in headless mode due to data center interconnect (DCI) link failures.

Handling Inter-Site Link Failures

If the DCI link or Layer 2 extension mechanism fails, a set of VEM modules might run with their last known configuration for a period of time.

Headless Mode of Operation

For the period of time that the VSM and VEM cannot communicate, the VEM continues to operate with its last known configuration. Once the DCI link connectivity is restored and the VSM-VEM communication is reestablished, the system should come back to its previous operational state. This mode type is no different than the headless mode of operation within a data center and has the following limitations for the headless VEM:

- No new ports can be brought up on the headless VEM (new VMs coming up or VMs coming up after vMotion).
- No NetFlow data exports.
- Ports shut down because DHCPS/DAI rate limits are not automatically brought up until the VSM reconnects.
- Port security options, such as aging or learning secure MAC addresses and shutting down/recovering from port-security violations, are not available until the VSM reconnects.
- The Cisco Discovery Protocol (CDP) does not function for the disconnected VEM.
- IGMP joins/leaves are not processed until the VSM reconnects.
- Queries on BRIDGE and IF-MIB processed at the VSM give the last known status for the hosts in headless mode.

Note If a VEM loses the connection to its VSM, the Vmotions to that particular VEM are blocked. The VEM shows up in the VCenter Server as having a degraded (yellow) status.

Handling Additional Distance/Latency Between the VSM and VEM

In a network where there is a considerable distance between the VSM and VEM, latency becomes a critical factor.
Because the control traffic between the VSM and VEM faces a sub-millisecond latency within a data center, latency can increase to a few milliseconds depending on the distance.

With an increased round-trip time, communication between the VSM and VEM takes longer. As you add VEMs and vEthernet interfaces, the time it takes to perform actions such as configuration commands, module insertions, port bring-up, and **show**show commands increase because that many tasks are serialized.

Migrating a VSM

This section describes how migrate a VSM from one physical site to another.

Note If you are migrating a VSM on a Cisco Nexus 1010, see the Cisco Nexus 1010 Software Configuration Guide, Release 4.2(1)SP1(3).

Migrating a VSM Hosted on an ESX

Use the following procedure to migrate a VSM that is hosted on an ESX or ESXi host from the local data center to the remote data center:

Note For information on vMotion or storage vMotion, see the VMware documentation.

Before You Begin

Before beginning this procedure, you must know or do the following:

- Reduce the amount of time where the VSM runs with remote storage in another data center.
- Do not bring up any new VMs or vMotion VMs that are hosted on any VEMs corresponding to the VSM that is being migrated.

Procedure

Step 1 Migrate the standby VSM to the backup site.

Step 2 Perform a storage vMotion for the standby VSM storage.

Step 3 switch#**system switchover**
Initiates a system switchover.

Step 4 Migrate the original active VSM to the backup site.

Step 5 Perform a storage vMotion for the original active VSM storage.

Verifying and Monitoring the Virtualized Workload Mobility (DC to DC vMotion) Configuration

Refer to the following section for verifying and monitoring the Virtualized Workload Mobility (DC to DC vMotion) configuration:

Procedure

switch#**show module**
Displays the virtualized workload mobility (DC to DC vMotion) configuration.

Feature History for Virtualized Workload Mobility (DC to DC vMotion)

Feature Name	Releases	Feature Information
Virtualized Workflow Mobility (DC to DC vMotion)	4.2(1)SV1(4a)	This feature was introduced.

INDEX

A

accessing netflow data 123
adding hardware NICs to DVS 171
advertising CDP version 9

B

binding VMkernel NICs 168

C

CDP 8, 15
  default settings 8
  feature history 15
  guidelines 8
CDP configuration 15
CDP global configuration 9
CDP interface configuration 12
changed information 1
  description 1
changing access vlan 173
changing VMkernel NIC access vlan 172
characteristics of ERSPAN destinations 81
characteristics of local SPAN destinations 80
characteristics of SPAN sources 80
clearing 14
  CDP statistics 14
clearing NTP session 76
Configuration Management 45
configuration to enable SPAN monitoring 99
configuring 19, 85, 87
  domain 19
  ERSPAN port profile 87
  local SPAN session 85
configuring CDP 9
configuring domain 18
  guideline 18
configuring ERSPAN flow IDs 97
configuring ERSPAN session 90
configuring iSCSI multipath 162
configuring SNMP 105
configuring SPAN 84
configuring SPAN session 99
configuring system message logging 147
configuring VSM backup and recovery 180
converting to hardware iSCSI configuration 169, 170
creating 19, 24, 26, 27
  control vlan 26
  domain 19
  packet vlan 27
  port profile for layer 3 control 24
creating VMkernel NICs 164
  attaching port profile 164

D

default settings 19, 217
  vTracker 217
displaying 220, 222, 224, 227, 229, 230
  upstream view 220
displaying log files 152

E

enabling 217
  globally 217
  vTracker 217
enabling CDP globally 9
enabling CDP on interface 12
encapsulated remote SPAN 81
example for ERSPAN session 98

F

feature history 28
  VSM domain 28
field description 220, 223, 225, 228, 229, 231

Flow 119
about 119
flow record 120

H

high availability 8
history 232

I

identifying iSCSI adapters 167, 168
on host server 168
on vSphere client 167
information 216
vTracker 216
information about CDP 7
information about domain 17
information about files 55
information about iSCSI multipath 157
information about NTP 73
information about SPAN and ERSPAN 79
iSCSI 160
guidelines 160
iSCSI multipath 158, 161, 178
default settings 161
eature history 178
overview 158
prerequisites 161
related documents 178
iSCSI multipath setup 159

L

layer 2 transport 23
layer 3 control 17
layer 3 transport 21
local SPAN 81
log files 152
displaying 152

M

managing 176
storage loss detection 176
manually pinning the NICs 165
module pnic view 227, 228
monitoring CDP 14

N

NetFlow 119
about 119
network analysis module 82
new and changed 1
new information 1
description 1
NTP 75
guidelines 75
NTP peers 74

O

overview 219, 221, 227, 228, 230

P

port profile for VMkernel NIC 162
process 172
changing access vlan 172

R

removing binding 171
software iSCSI adapter 171
resuming SPAN session 95, 96
global configuration mode 95

S

server connections 31
shutting down SPAN session 93, 94
monitor configuration 94
SPAN 83, 84
default settings 84
guidelines 83
SPAN and ERSPAN 100
feature history 100
SPAN destinations 80
SPAN sessions 82
SPAN sources 79
supported iSCSI adapters 158

U

uplink pinning and storage binding 162
upstream view 219, 220

user management 71

V

verifying 98, 175
    iSCSI multipath configuration 175
    SPAN configuration 98
verifying CDP configuration 14
virtual machine view 221
virtualized workload mobility 233
vlan view 228, 229
vm info view 224, 225
vm vnic view 222, 223
vmotion view 230, 231
vtracker 232
vTracker 217
    guidelines 217
    limitations 217