Cisco Nexus 6000 Series NX-OS Quality of Service Configuration Guide, Release 6.x

First Published: 2013-01-30

Last Modified: 2013-07-29

Americas Headquarters
Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
http://www.cisco.com
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

Text Part Number: OL-27931-02

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: http://www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

© 2013 Cisco Systems, Inc. All rights reserved.

CONTENTS

Preface

Preface vii

Audience vii

Document Conventions vii

Related Documentation for Cisco Nexus 6000 Series NX-OS Software ix

Documentation Feedback x

Obtaining Documentation and Submitting a Service Request xi

CHAPTER 1

New and Changed Information 1

New and Changed Information 1

CHAPTER 2

Overview 3

Information About Quality of Service 3

Modular QoS CLI 3

QoS for Traffic Directed to the CPU 4

CHAPTER 3

Configuring Classification 5

Information About Classification 5

Ingress Classification Policies 6

Licensing Requirements for Classification 6

Configuring Classification 6

Configuring Class Maps 6

Configuring CoS Classification 7

Configuring Precedence Classification 8

Configuring DSCP Classification 10

Configuring Protocol Classification 11

Configuring IP RTP Classification 12

Configuring ACL Classification 13

QoS ACL Per-Entry Statistics 14
Example: Enabling QoS Policy Statistics 14
Verifying the Classification Configuration 15

CHAPTER 4 Configuring Policy Maps 17
Information About Policy Types 17
Configuring Policy Maps 19
Creating Policy Maps 19
Configuring Type Network QoS Policies 20
Configuring Type QoS Policies 22
Configuring Type Queuing Policies 23
Enabling and Displaying QoS Statistics for Interfaces 23
Restrictions for Viewing the QoS Statistics 26
Verifying the Policy Map Configuration 27

CHAPTER 5 Configuring Marking 29
Information About Marking 29
Configuring Marking 29
Configuring DSCP Marking 29
Configuring IP Precedence Marking 31
Configuring CoS Marking 32
Required CoS Marking Configuration in a Layer 3 Topology 33
Verifying the Marking Configuration 34

CHAPTER 6 Configuring QoS on the System 37
Information About System Classes 37
System Classes 37
Default System Classes 37
MTU 37
Configuring System QoS 38
Attaching the System Service Policy 38
Restoring the Default System Service Policies 39
Configuring the Queue Limit for a Specified Fabric Extender 40
Enabling the Jumbo MTU 41
Verifying the Jumbo MTU 41

Verifying the System QoS Configuration 42

CHAPTER 7 Configuring QoS on Interfaces 43

Information About Interface QoS 43

Trust Boundaries 43

Policy for Fibre Channel Interfaces 44

Configuring Interface QoS 44

Configuring Untagged CoS 44

Configuring an Interface Service Policy 45

Configuring a Service Policy for a Layer 3 Interface 46

Changing the Bandwidth Allocated to Unicast and Multicast Traffic 46

Verifying the Interface QoS Configuration 47

CHAPTER 8 Configuring QoS on VLANs 49

Information About VLAN QoS 49

Precedence of QoS Policies 49

Example of Interface, System, and VLAN Policy Precedence 50

Example of Interface and System QoS Policy Precedence 50

Example of System and VLAN Policy Precedence 50

Example of VLAN QoS and VACL Policy Precedence 51

Limiting TCAM Entries for VLAN QoS 52

Guidelines and Limitations for VLAN QoS 52

Configuring VLAN QoS 53

Configuring or Changing the Interface QoS TCAM Limit 53

Removing the Interface QoS Limit from the TCAM 54

Configuring a Service Policy on a VLAN 54

Removing a Service Policy from a VLAN 55

Verifying the VLAN QoS Configuration 56

Feature History for VLAN QoS 56

CHAPTER 9 Configuring Queuing and Flow Control 57

Information About Queues 57

Ingress Queuing Policies 57

Egress Queuing Policies 57

Buffering and Queue Limits on the Cisco Nexus 5500 Platform 58

Information About Flow Control 59
Link-Level Flow Control 59
Priority Flow Control 59
Configuring Queuing 60
Configuring the Queue Limit for a Specified Fabric Extender 60
Configuring No-Drop Buffer Thresholds 61
Configuring the Buffer Threshold for the Cisco Nexus 2148T Fabric Extender 62
Enabling Virtual Output Queuing Limits for Unicast Traffic on the Cisco Nexus Device 63
Configuring Flow Control 63
Link-Level Flow Control 63
Configuring Priority Flow Control 63
Configuring Link-Level Flow Control 64
Verifying the Queue and Flow Control Configurations 65

CHAPTER 10 Configuring Ingress Policing 67
Information About Ingress Policing 67
Guidelines and Limitations for Ingress Policing 68
Creating a Policy Map Using a Committed Information Rate 69
Creating a Policy Map Using a Percentage of the Interface Rate 72
Verifying Ingress Policing Configuration 74
Configuration Examples for Ingress Policing 74

CHAPTER 11 QoS Configuration Examples 77
QoS Example 1 77
QoS Example 2 78
QoS Example 3 80

Preface

The preface contains the following sections:

- Audience, page vii
- Document Conventions, page vii
- Related Documentation for Cisco Nexus 6000 Series NX-OS Software, page ix
- Documentation Feedback, page x
- Obtaining Documentation and Submitting a Service Request, page xi

Audience

This publication is for network administrators who configure and maintain Cisco Nexus devices.

Document Conventions

Note As part of our constant endeavor to remodel our documents to meet our customers' requirements, we have modified the manner in which we document configuration tasks. As a result of this, you may find a deviation in the style used to describe these tasks, with the newly included sections of the document following the new format.

Command descriptions use the following conventions:

Convention	Description
bold	Bold text indicates the commands and keywords that you enter literally as shown.
Italic	Italic text indicates arguments for which the user supplies the values.
[x]	Square brackets enclose an optional element (keyword or argument).

Convention	Description
[x | y]	Square brackets enclosing keywords or arguments separated by a vertical bar indicate an optional choice.
{x | y}	Braces enclosing keywords or arguments separated by a vertical bar indicate a required choice.
[x {y | z}]	Nested set of square brackets or braces indicate optional or required choices within optional or required elements. Braces and a vertical bar within square brackets indicate a required choice within an optional element.
`variable`	Indicates a variable for which you supply values, in context where italics cannot be used.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.

Examples use the following conventions:

Convention	Description
`screen font`	Terminal sessions and information the switch displays are in screen font.
`boldface screen font`	Information you must enter is in boldface screen font.
italic screen font	Arguments for which you supply values are in italic screen font.
< >	Nonprinting characters, such as passwords, are in angle brackets.
[ ]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

This document uses the following conventions:

Note Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the manual.

Caution Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

Related Documentation for Cisco Nexus 6000 Series NX-OS Software

The entire Cisco NX-OS 6000 Series documentation set is available at the following URL:

http://www.cisco.com/en/US/products/ps12806/tsd_products_support_series_home.html

Release Notes

The release notes are available at the following URL:

http://www.cisco.com/c/en/us/support/switches/nexus-6000-series-switches/products-release-notes-list.html

Configuration Guides

These guides are available at the following URL:

http://www.cisco.com/c/en/us/support/switches/nexus-6000-series-switches/products-installation-and-configuration-guides-list.html

The documents in this category include:

- *Cisco Nexus 6000 Series NX-OS Adapter-FEX Configuration Guide*
- *Cisco Nexus 6000 Series NX-OS FabricPath Configuration Guide*
- *Cisco Nexus 6000 Series NX-OS FCoE Configuration Guide*
- *Cisco Nexus 6000 Series NX-OS Fundamentals Configuration Guide*
- *Cisco Nexus 6000 Series NX-OS Interfaces Configuration Guide*
- *Cisco Nexus 6000 Series NX-OS Layer 2 Switching Configuration Guide*
- *Cisco Nexus 6000 Series NX-OS Multicast Routing Configuration Guide*
- *Cisco Nexus 6000 Series NX-OS Quality of Service Configuration Guide*
- *Cisco Nexus 6000 Series NX-OS SAN Switching Configuration Guide*
- *Cisco Nexus 6000 Series NX-OS Security Configuration Guide*
- *Cisco Nexus 6000 Series NX-OS System Management Configuration Guide*
- *Cisco Nexus 6000 Series NX-OS Unicast Routing Configuration Guide*

Installation and Upgrade Guides

These guides are available at the following URL:

http://www.cisco.com/c/en/us/support/switches/nexus-6000-series-switches/products-installation-guides-list.html

The document in this category include:

- *Cisco Nexus 6000 Series NX-OS Software Upgrade and Downgrade Guides*

Licensing Guide

The *License and Copyright Information for Cisco NX-OS Software* is available at http://www.cisco.com/en/US/docs/switches/datacenter/sw/4_0/nx-os/license_agreement/nx-ossw_lisns.html.

Command References

These guides are available at the following URL:

http://www.cisco.com/c/en/us/support/switches/nexus-6000-series-switches/products-command-reference-list.html

The documents in this category include:

- *Cisco Nexus 6000 Series NX-OS Fabric Extender Command Reference*
- *Cisco Nexus 6000 Series NX-OS FabricPath Command Reference*
- *Cisco Nexus 6000 Series NX-OS Fundamentals Command Reference*
- *Cisco Nexus 6000 Series NX-OS Interfaces Command Reference*
- *Cisco Nexus 6000 Series NX-OS Layer 2 Interfaces Command Reference*
- *Cisco Nexus 6000 Series NX-OS Multicast Routing Command Reference*
- *Cisco Nexus 6000 Series NX-OS Quality of Service Command Reference*
- *Cisco Nexus 6000 Series NX-OS Security Command Reference*
- *Cisco Nexus 6000 Series NX-OS System Management Command Reference*
- *Cisco Nexus 6000 Series NX-OS TrustSec Command Reference*
- *Cisco Nexus 6000 Series NX-OS Unicast Routing Command Reference*
- *Cisco Nexus 6000 Series NX-OS Virtual Port Channel Command Reference*

Technical References

The *Cisco Nexus 6000 Series NX-OS MIB Reference* is available at http://www.cisco.com/en/US/docs/switches/datacenter/nexus6000/sw/mib/reference/NX6000_MIBRef.html.

Error and System Messages

The *Cisco Nexus 6000 Series NX-OS System Message Guide* is available at http://www.cisco.com/c/en/us/td/docs/switches/datacenter/nexus6000/sw/system_messages/reference/sl_nxos_book.html.

Troubleshooting Guide

The *Cisco Nexus 6000 Series NX-OS Troubleshooting Guide* is available at http://www.cisco.com/c/en/us/support/switches/nexus-6000-series-switches/tsd-products-support-troubleshoot-and-alerts.html.

Documentation Feedback

To provide technical feedback on this document, or to report an error or omission, please send your comments to: .

We appreciate your feedback.

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, using the Cisco Bug Search Tool (BST), submitting a service request, and gathering additional information, see What's New in Cisco Product Documentation.

To receive new and revised Cisco technical content directly to your desktop, you can subscribe to the What's New in Cisco Product Documentation RSS feed. RSS feeds are a free service.

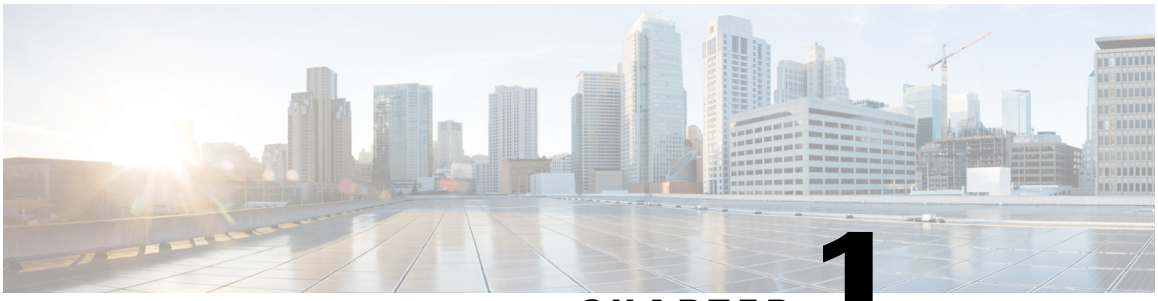

CHAPTER 1

New and Changed Information

This chapter contains the following sections:

- New and Changed Information, page 1

New and Changed Information

The following table provides an overview of the significant changes made to this configuration guide. The table does not provide an exhaustive list of all changes made to this guide or all new features in a particular release.

Feature	Release	Description	Where Documented
Ingress Policing	6.0(2)N2(1)	Policing allows you to monitor the data rates for a particular class of traffic. When the data rate exceeds user-configured values, the switch drops packets immediately. Because policing does not buffer the traffic; transmission delays are not affected. When traffic exceeds the data rate, you instruct the system to drop the packets. You can define single-rate and two-color Ingress Policing.	Configuring Ingress Policing, on page 67

New and Changed Information

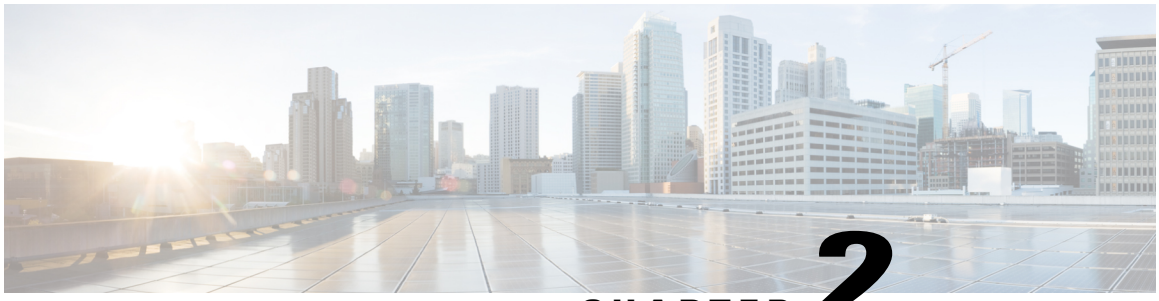

CHAPTER 2

Overview

This chapter contains the following sections:

- Information About Quality of Service, page 3
- Modular QoS CLI, page 3
- QoS for Traffic Directed to the CPU , page 4

Information About Quality of Service

The configurable Cisco NX-OS quality of service (QoS) features allow you to classify the network traffic, prioritize the traffic flow, and provide congestion avoidance.

The default QoS configuration on the device provides best-effort service for Ethernet traffic. QoS can be configured to provide additional classes of service for Ethernet traffic. Cisco NX-OS QoS features are configured using Cisco Modular QoS CLI (MQC).

In the event of congestion or collisions, Ethernet will drop packets. The higher level protocols detect the missing data and retransmit the dropped packets.

The FCoE QoS must be configured either if native FC or FCoE or FC and FCoE are in use. The FCoE QoS must be added even if Ethernet is not configured on the switch.

The following commands will enable the default QoS configuration:

```
switch(config)# system qos
switch(config-sys-qos)# service-policy type queuing input fcoe-default-in-policy
switch(config-sys-qos)# service-policy type queuing output fcoe-default-out-policy
switch(config-sys-qos)# service-policy type qos input fcoe-default-in-policy
switch(config-sys-qos)# service-policy type network-qos fcoe-default-nq-policy
```

Modular QoS CLI

The Cisco Modular QoS CLI (MQC) provides a standard set of commands for configuring QoS.

You can use MQC to define additional traffic classes and to configure QoS policies for the whole system and for individual interfaces. Configuring a QoS policy with MQC consists of the following steps:

1. Define traffic classes.
2. Associate policies and actions with each traffic class.

3 Attach policies to logical or physical interfaces as well as at the global system level.

MQC provides two command types to define traffic classes and policies:

class-map

Defines a class map that represents a class of traffic based on packet-matching criteria. Class maps are referenced in policy maps.

The class map classifies incoming packets based on matching criteria, such as the IEEE 802.1p class of service (CoS) value. Unicast and multicast packets are classified.

policy-map

Defines a policy map that represents a set of policies to be applied on a class-by-class basis to class maps.

The policy map defines a set of actions to take on the associated traffic class, such as limiting the bandwidth or dropping packets.

You define the following class-map and policy-map object types when you create them:

network-qos

Defines MQC objects that you can use for system level related actions.

qos

Defines MQC objects that you can use for classification.

queuing

Defines MQC objects that you can use for queuing and scheduling.

Note The qos type is the default for the **class-map** and **policy-map** commands, but not for the **service-policy** which requires that you specify an explicit type.

You can attach policies to interfaces or EtherChannels as well as at the global system level by using the **service-policy** command.

You can view all or individual values for MQC objects by using the **show class-map** and **show policy-map** commands.

An MQC target is an entity (such as an Ethernet interface) that represents a flow of packets. A service policy associates a policy map with an MQC target and specifies whether to apply the policy on incoming or outgoing packets. This mapping enables the configuration of QoS policies such as marking, bandwidth allocation, buffer allocation, and so on.

QoS for Traffic Directed to the CPU

The device automatically applies QoS policies to traffic that is directed to the CPU to ensure that the CPU is not flooded with packets. Control traffic, such as bridge protocol data units (BPDU) frames, is given higher priority to ensure delivery.

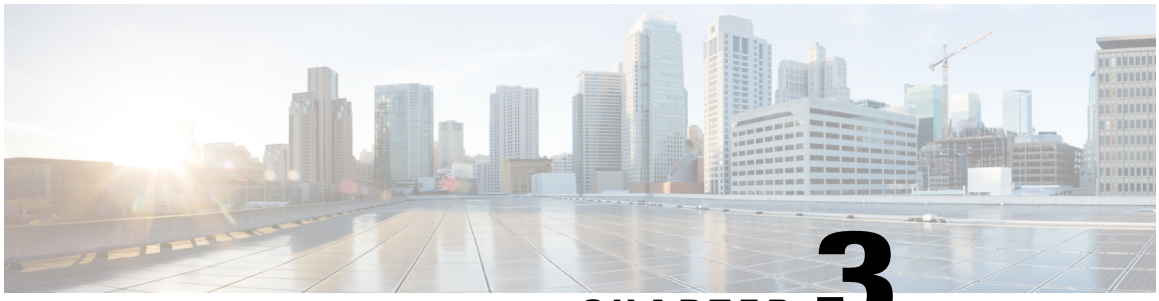

CHAPTER 3

Configuring Classification

This chapter contains the following sections:

- Information About Classification, page 5
- Ingress Classification Policies, page 6
- Licensing Requirements for Classification, page 6
- Configuring Classification, page 6
- QoS ACL Per-Entry Statistics, page 14
- Verifying the Classification Configuration, page 15

Information About Classification

Classification is the separation of packets into traffic classes. You configure the device to take a specific action on the specified classified traffic, such as policing or marking down, or other actions.

You can create class maps to represent each traffic class by matching packet characteristics with classification criteria.

Table 1: Classification Criteria

Classification Criteria	Description
Class map	Criteria specified in a named class-map object.
Precedence	Precedence value within the Type of Service (ToS) byte of the IP Header.
Differentiated Services Code Point (DSCP)	DSCP value within the DIffServ field of the IP Header.
Protocol	Selected set of protocols, including Address Resolution Protocol (ARP) and Connectionless Network Service (CLNS).

Classification Criteria	Description
IP RTP	Identify applications using Real-time Transport Protocol (RTP) by UDP port number range.
ACL	Traffic is classified by the criteria defined in the access control list (ACL).

Table 2: Supported RFCs

RFC	Title
RFC 2474	Definition of the Differentiated Services Field (DS Field) in the IPv4 and IPv6 Headers

Ingress Classification Policies

You use classification to partition traffic into classes. You classify the traffic based on the packet property (CoS field) or the packet header fields that include IP precedence, Differentiated Services Code Point (DSCP), and Layer 2 to Layer 4 parameters. The values used to classify traffic are called match criteria.

Traffic that fails to match any class is assigned to a default class of traffic called class-default.

Licensing Requirements for Classification

This feature does not require a license. Any feature not included in a license package is bundled with the Cisco NX-OS system images and is provided at no extra charge to you. For a complete explanation of the Cisco NX-OS licensing scheme, see the *Cisco NX-OS Licensing Guide*.

Configuring Classification

Configuring Class Maps

You can create or modify a class map with the **class-map** command. The class map is a named object that represents a class of traffic. In the class map, you specify a set of match criteria for classifying the packets. You can then reference class maps in policy maps.

Note The class map type default is type qos and its match criteria default is match-all.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **class-map** [**type** {**network-qos** | **qos** | **queuing**}] *class-map name*	Creates or accesses a named object that represents the specified class of traffic. Class-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters. The three class-map configuration modes are as follows: • **network-qos—**Network-wide (global) mode. CLI prompt: switch(config-cmap-nq)# • **qos—**Classification mode; this is the default mode. CLI prompt: switch(config-cmap-qos)# • **queuing—**Queuing mode. CLI prompt: switch(config-cmap-que)#
Step 3	switch(config)# **class-map** [**type qos**] [**match-all** | **match-any**] *class-map name*	(Optional) Specifies that packets must match any or all criteria that is defined for a class map. • **match-all—**Classifies traffic if packets match all criteria that is defined for a specified class map (for example, if both the defined CoS and the ACL criteria match). • **match-any—**Classifies traffic if packets match any criteria that is defined for a specified class map (for example, if either the CoS or the ACL criteria matches). Class-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.
Step 4	switch(config)# **no class-map** [**type** {**network-qos** | **qos** | **queuing**}] *class-name*	(Optional) Deletes the specified class map. **Note** Class-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.

Configuring CoS Classification

You can classify traffic based on the class of service (CoS) in the IEEE 802.1Q header. This 3-bit field is defined in IEEE 802.1p to support QoS traffic classes. CoS is encoded in the high order 3 bits of the VLAN ID Tag field and is referred to as *user_priority*.

Note The Cisco Nexus 2148 Fabric Extender does not support frames with the dot1p vlan 0 tag.

If a system class is configured with a no-drop function, the **match cos** command serves an additional purpose. The switch sends the CoS value to the adapter so that the adapter will apply a PFC pause for this CoS value.

The FCoE system class has a default CoS value of 3. You can add a **match cos** configuration to the FCoE system class to set a different CoS value. A PFC pause will be applied to traffic that matches the new value.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **class-map type qos** *class-name*	Creates a named object that represents a class of traffic. Class-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.
Step 3	switch(config-cmap-qos)# **match cos** *cos-value*	Specifies the CoS value to match for classifying packets into this class. You can configure a CoS value in the range of 0 to 7. **Note** When a Cisco Nexus 2148T Fabric Extender is connected and in use, data traffic should never be marked with a CoS value of 7. CoS 7 is reserved for control traffic transiting the Fabric Extender.
Step 4	switch(config-cmap-qos)# **no match cos** *cos-value*	(Optional) Removes the match from the traffic class.

This example shows how to classify traffic by matching packets based on a defined CoS value:

```
switch# configure terminal
switch(config)# class-map type qos match-any class_cos
switch(config-cmap-qos)# match cos 4, 5-6
```

Use the **show class-map** command to display the CoS value class-map configuration:

```
switch# show class-map class_cos
```

Configuring Precedence Classification

You can classify traffic based on the precedence value in the type of service (ToS) byte field of the IP header (either IPv4 or IPv6). The following table shows the precedence values:

Table 3: Precedence Values

Value	List of Precedence Values
<0-7>	IP precedence value

Value	List of Precedence Values
critical	Critical precedence (5)
flash	Flash precedence (3)
flash-override	Flash override precedence (4)
immediate	Immediate precedence (2)
internet	Internetwork control precedence (6)
network	Network control precedence (7)
priority	Priority precedence (1)
routine	Routine precedence (0)

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **class-map type qos match-any** *class-name*	Creates a named object that represents a class of traffic. Class-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.
Step 3	switch(config-cmap-qos)#**match precedence** *precedence-values*	Configures the traffic class by matching packets based on precedence values. For a list of precedence values, see the Precedence Values table.
Step 4	switch((config-cmap-qos)# **no match precedence** *precedence-values*	(Optional) Removes the match from the traffic class. For a list of precedence values, see the Precedence Values table.

This example shows how to classify traffic by matching packets based on the precedence value in the ToS byte field of the IP header:

```
switch# configure terminal
switch(config)# class-map type qos match-any class_precedence
switch(config-cmap-qos)# match precedence 1-2, critical
```

Use the **show class-map** command to display the IP precedence value class-map configuration:

```
switch# show class-map class_precedence
```

Configuring DSCP Classification

You can classify traffic based on the Differentiated Services Code Point (DSCP) value in the DiffServ field of the IP header (either IPv4 or IPv6).

Table 4: Standard DSCP Values

Value	List of DSCP Values
af11	AF11 dscp (001010)—decimal value 10
af12	AF12 dscp (001100)—decimal value 12
af13	AF13 dscp (001110)—decimal value 14
af21	AF21 dscp (010010)—decimal value 18
af22	AF22 dscp (010100)—decimal value 20
af23	AF23 dscp (010110)—decimal value 22
af31	AF31 dscp (011010)—decimal value 26
af32	AF32 dscp (011100)—decimal value 28
af33	AF33 dscp (011110)—decimal value 30
af41	AF41 dscp (100010)—decimal value 34
af42	AF42 dscp (100100)—decimal value 36
af43	AF43 dscp (100110)—decimal value 38
cs1	CS1 (precedence 1) dscp (001000)—decimal value 8
cs2	CS2 (precedence 2) dscp (010000)—decimal value 16
cs3	CS3 (precedence 3) dscp (011000)—decimal value 24
cs4	CS4 (precedence 4) dscp (100000)—decimal value 32
cs5	CS5 (precedence 5) dscp (101000)—decimal value 40

Value	List of DSCP Values
cs6	CS6 (precedence 6) dscp (110000)—decimal value 48
cs7	CS7 (precedence 7) dscp (111000)—decimal value 56
default	Default dscp (000000)—decimal value 0
ef	EF dscp (101110)—decimal value 46

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **class-map type qos** *class-name*	Creates a named object that represents a class of traffic. Class-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.
Step 3	switch(config-cmap-qos)# **match dscp** *dscp-list*	Configures the traffic class by matching packets based on the values in the *dscp-list* variable. For a list of DSCP values, see the Standard DSCP Values table.
Step 4	switch(config-cmap-qos)# **no match dscp** *dscp-list*	(Optional) Removes the match from the traffic class. For a list of DSCP values, see the Standard DSCP Values table.

This example shows how to classify traffic by matching packets based on the DSCP value in the DiffServ field of the IP header:

```
switch# configure terminal
switch(config)# class-map type qos match-any class_dscp
switch(config-cmap-qos)# match  dscp af21, af32
```

Use the **show class-map** command to display the DSCP class-map configuration:

```
switch# show class-map class_dscp
```

Configuring Protocol Classification

You can classify traffic based on the IPv4 Protocol field or the IPv6 Next Header field in the IP header. The following table shows the protocol arguments:

Table 5: Protocol Arguments

Argument	Description
arp	Address Resolution Protocol (ARP)
clns_es	CLNS End Systems
clns_is	CLNS Intermediate System
dhcp	Dynamic Host Configuration (DHCP)
ldp	Label Distribution Protocol (LDP)
netbios	NetBIOS Extended User Interface (NetBEUI)

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters configuration mode.
Step 2	switch(config)# **class-map type qos** *class-name*	Creates a named object that represents a class of traffic. Class-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.
Step 3	switch(config-cmap-qos)# **match protocol** {**arp** | **clns_es** | **clns_is** | **dhcp** | **ldp** | **netbios**}	Configures the traffic class by matching packets based on the specified protocol.
Step 4	switch(config-cmap-qos)# **no match protocol** {**arp** | **clns_es** | **clns_is** | **dhcp** | **ldp** | **netbios**}	(Optional) Removes the match from the traffic class.

This example shows how to classify traffic by matching packets based on the protocol field:

```
switch# configure terminal
switch(config)# class-map type qos class_protocol
switch(config-cmap-qos)# match protocol arp
```

Use the **show class-map** command to display the protocol class-map configuration:

```
switch# show class-map class_protocol
```

Configuring IP RTP Classification

The IP Real-time Transport Protocol (RTP) is a transport protocol for real-time applications that transmits data such as audio or video and is defined by RFC 3550. Although RTP does not use a common TCP or UDP

port, you typically configure RTP to use ports 16384 to 32767. UDP communications use an even port and the next higher odd port is used for RTP Control Protocol (RTCP) communications.

You can classify based on UDP port ranges, which are likely to target applications using RTP.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **class-map type qos** *class-name*	Creates a named object that represents a class of traffic. Class-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.
Step 3	switch(config-cmap-qos)# **match ip rtp** *port-number*	Configures the traffic class by matching packets based on a range of lower and upper UDP port numbers, which is likely to target applications using RTP. Values can range from 2000 to 65535.
Step 4	switch(config-cmap-qos)# **no match ip rtp** *port-number*	(Optional) Removes the match from the traffic class.

The following example shows how to classify traffic by matching packets based on UDP port ranges that are typically used by RTP applications:

```
switch# configure terminal
switch(config)# class-map type qos match-any class_rtp
switch(config-cmap-qos)# match  ip rtp 2000-2100, 4000-4100
```

Use the **show class-map** command to display the RTP class-map configuration:

```
switch# show class-map class_rtp
```

Configuring ACL Classification

You can classify traffic by matching packets based on an existing access control list (ACL). Traffic is classified by the criteria defined in the ACL. The **permit** and **deny** ACL keywords are ignored in the matching; even if a match criteria in the access-list has a **deny** action, it is still used for matching for this class.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **class-map type qos** *class-name*	Creates a named object that represents a class of traffic. Class-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.

	Command or Action	Purpose
Step 3	switch(config-cmap-qos)# **match access-group name** *acl-name*	Configures a traffic class by matching packets based on the *acl-name*. The **permit** and **deny** ACL keywords are ignored in the matching. **Note** You can only define a single ACL in a class map. You cannot add any other match criteria to a class with a **match access-group** defined.
Step 4	switch(config-cmap-qos)# **no match access-group name** *acl-name*	(Optional) Removes the match from the traffic class.

This example shows how to classify traffic by matching packets based on existing ACLs:

```
switch# configure terminal
switch(config)# class-map type qos class_acl
switch(config-cmap-qos)# match access-group name acl-01
```

Use the **show class-map** command to display the ACL class-map configuration:

```
switch# show class-map class_acl
```

QoS ACL Per-Entry Statistics

Starting with Cisco NX-OS Release 7.2(0)N1(1), for ACLs associated with QoS Policy, statistics are shown per ACE.

Due to the way statistics and policers are attached to the TCAM entries, there are certain limitations to viewing the statistics:

- Statistics per ACE in an ACL cannot be viewed if there is more than one ACE in the ACL and a policer is attached to the QoS policy.
- The above limitation applies to qos-based matches as well (for example, **match dscp** *value*, **match precedence** *value*, and so on).
    - Statistics cannot be viewed with match-all rules.
    - Statistics can be viewed only with match-any.
- Statistics per-ACE of ACL for QoS policies applied of FEX HIF ports will be shown only if policer is not present.

Example: Enabling QoS Policy Statistics

Statistics will be enabled if the user provides statistics per-entry in the ACL, which is used in QoS Policies.

```
Switch(config-acl)# show ip access-lists test_ACL1

IPV4 ACL test_ACL1
        statistics per-entry
```

```
       10 permit ip 10.10.10.1/24 20.2.2.2/24 ------>//Operation when a policer is attached//

        20 deny ip 40.4.4.4/24 any
        30 permit ip 30.3.3.3/24 11.11.11.1/24
Switch(config-acl)#
Switch(config-acl)# class-map type qos test_map
Switch(config-cmap-qos)# match access-group name test_ACL1
Switch(config-cmap-qos)# exit
Switch(config)# policy-map type qos test_pmap
Switch(config-pmap-qos)# class test_map
Switch(config-pmap-c-qos)# set qos-group 4
Switch(config-pmap-c-qos)# conf
Switch(config)# int e1/26
Switch(config-if)# service-policy type qos input test_pmap
Switch(config-if)# conf
Switch(config)# show ip access-lists test_ACL1

IPV4 ACL test_ACL1
        statistics per-entry
        10 permit ip 10.10.10.1/24 20.2.2.2/24 [match=0]--->//Operation with no policer
attached or ACL having only one entry//
        20 deny ip 40.4.4.4/24 any [match=0]
        30 permit ip 30.3.3.3/24 11.11.11.1/24 [match=0]
```

Verifying the Classification Configuration

Use one of the following commands to verify the configuration:

Command	Purpose
show class-map	Displays the class maps defined on the switch.
show policy-map [*name*]	Displays the policy maps defined on the switch. Optionally, you can display the named policy only.
running-config ipqos	Displays information about the running configuration for QoS.
startup-config ipqos	Displays information about the startup configuration for QoS.

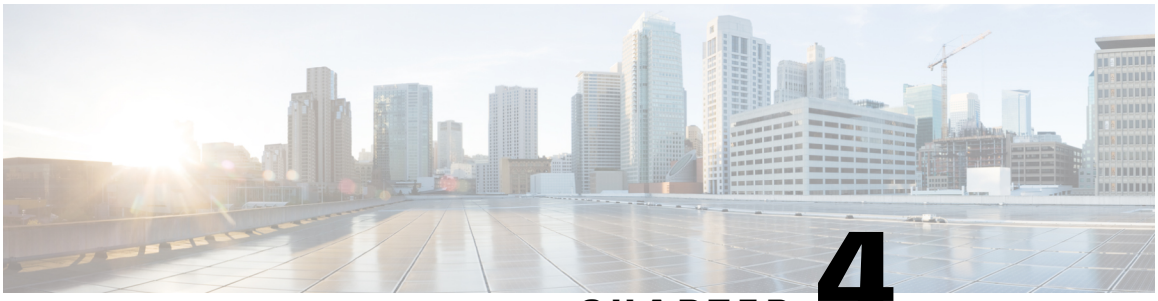

CHAPTER 4

Configuring Policy Maps

This chapter contains the following sections:

- Information About Policy Types, page 17
- Configuring Policy Maps, page 19
- Verifying the Policy Map Configuration, page 27

Information About Policy Types

The device supports a number of policy types. You create class maps in the policy types.

There are three policy types:

- Network-qos
- Queuing
- QoS

The following QoS parameters can be specified for each type of class:

- Type network-qos—A network-qos policy is used to instantiate system classes and associate parameters with those classes that are of system-wide scope.
  - Classification—The traffic that matches this class are as follows:
    - QoS Group—A class map of type network-qos identifies a system class and is matched by its associated qos-group.
  - Policy—The actions that are performed on the matching traffic are as follows:

Note A network-qos policy can only be attached to the system QoS target.

- Type queuing—A type queuing policy is used to define the scheduling characteristics of the queues associated with system classes.

Note Some configuration parameters when applied to an EtherChannel are not reflected on the configuration of the member ports.

- Classification—The traffic that matches this class are as follows:
  - QoS Group—A class map of type queuing identifies a system class and is matched by its associated QoS group.
- Policy—The actions that are performed on the matching traffic are as follows:

Note These policies can be attached to the system qos target or to any interface. The output queuing policy is used to configure output queues on the device associated with system classes.

  - Bandwidth—Sets the guaranteed scheduling deficit weighted round robin (DWRR) percentage for the system class.
  - Priority—Sets a system class for strict-priority scheduling. Only one system class can be configured for priority in a given queuing policy.

Note
- The shaping feature is not supported in the Cisco Nexus 5000 and 6000 Series Switches.
- It is recommended that you do not set the default class as priority class.

- Type qos—A type qos policy is used to classify traffic that is based on various Layer 2, Layer 3, and Layer 4 fields in the frame and to map it to system classes.

Note Some configuration parameters when applied to an EtherChannel are not reflected on the configuration of the member ports.

  - Classification—The traffic that matches this class are as follows:
    - Access Control Lists—Classifies traffic based on the criteria in existing ACLs.
    - Class of Service—Matches traffic based on the CoS field in the frame header.
    - DSCP—Classifies traffic based on the Differentiated Services Code Point (DSCP) value in the DiffServ field of the IP header.
    - IP Real Time Protocol—Classifies traffic on the port numbers used by real-time applications.
    - Precedence—Classifies traffic based on the precedence value in the type of service (ToS) field of the IP header.

Note The applied type qos policies must have the corresponding classes defined in the type network-qos policy.

- Policy—The actions that are performed on the matching traffic are as follows:

Note This policy can be attached to the system or to any interface. It applies to input traffic only.

Note When you apply a type qos service policy on a FEX fabric port, it is not rejected. However, the type QoS service policy is never applied.

  - QoS Group—Sets the QoS group that corresponds to the system class this traffic flow is mapped to.

Configuring Policy Maps

Creating Policy Maps

The **policy-map** command is used to create a named object that represents a set of policies that are to be applied to a set of traffic classes.

The following predefined policy maps are used as default service policies:

- network-qos: default-nq-policy
- Input qos: default-in-policy
- Output queuing: default-out-policy

You need to create a policy map to specify the policies for any user-defined class. In the policy map, you can configure the QoS parameters for each class. You can use the same policy map to modify the configuration of the default classes.

The device distributes all the policy-map configuration values to the attached network adapters.

Before You Begin

Before creating the policy map, define a class map for each new system class.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **policy-map** [**type** {**network-qos** | **qos** | **queuing**}] *policy-name*	Creates a named object representing a set of policies that are to be applied to a set of traffic classes. Policy-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters. The three policy-map configuration modes are as follows: • network-qos—Network-wide (global) mode. CLI prompt: switch(config-pmap-nq)# • qos—Classification mode; this is the default mode. CLI prompt: switch(config-pmap-qos)# • queuing—Queuing mode. CLI prompt: switch(config-pmap-que)#
Step 3	switch(config)# **no policy-map** [**type** {**network-qos** | **qos** | **queuing**}] *policy-name*	(Optional) Deletes the specified policy map.
Step 4	switch(config-pmap)# **class** [**type** {**network-qos** | **qos** | **queuing**}] *class-name*	Associates a class map with the policy map, and enters configuration mode for the specified system class. The three class-map configuration modes are as follows: • network-qos—Network-wide (global) mode. CLI prompt: switch(config-pmap-c-nq)# • qos—Classification mode; this is the default mode. CLI prompt: switch(config-pmap-c-qos)# • queuing—Queuing mode. CLI prompt: switch(config-pmap-c-que)# **Note** The associated class map must be the same type as the policy-map type.
Step 5	switch(config-pmap)# **no class** [**type** {**network-qos** | **qos** | **queuing**}] *class-name*	(Optional) Deletes the class map association.

Configuring Type Network QoS Policies

Type network qos policies can only be configured on the system qos attachment point. They are applied to the entire switch for a particular class.

Note If FCoE QoS policy is configured and offloaded to FEX without configuring the FCoE Network QoS policy, offloaded QoS policy on the FEX is unable to identify the FCoE class and therefore, QoS policy will not be applied on the FCoE traffic. Hence it is required to have the FCoE network QoS policy configured before offloading the FCoE QoS policy to the FEX.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **policy-map type network-qos** *policy-name*	Creates a named object that represents a set of policies that are to be applied to a set of traffic classes. Policy-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.
Step 3	switch(config-pmap-nq)# **class type network-qos** *class-name*	Associates a class map with the policy map, and enters configuration mode for the specified system class. **Note** The associated class map must be the same type as the policy map type.
Step 4	switch(config-pmap-c-nq)# **mtu** *mtu-value*	Specifies the MTU value in bytes. **Note** The *mtu-value* that you configure must be less than the value set by the **system jumbomtu** command.
Step 5	switch(config-pmap-c-nq)# **no mtu**	(Optional) Resets the MTU value in this class.
Step 6	switch(config-pmap-c-nq)# **pause no-drop**	Configures a no-drop class.
Step 7	switch(config-pmap-c)# **pause no-drop** [**pfc-cos** *pfc-cos-value*]	Configures a no-drop class. If you do not specify this command, the default policy is drop. **Note** The operation for the drop policy is a simple tail drop, where arriving packets will be dropped if the queue increases to its allocated size. The *pfc-cos-value* range is from 0 to 7. This option is supported only for for a ACL-based system class (which filters traffic using criteria other than cos-based matches). **Caution** The list of CoS values can potentially include the CoS value that is used for FCoE traffic in class-fcoe. You must determine if this is desired behavior for your topology.
Step 8	switch(config-pmap-c-nq)# **no pause no-drop**	(Optional) Removes the no-drop option from this class.
Step 9	switch(config-pmap-c-nq)# **set cos** *cos-value*	Specifies a 802.1Q CoS value which is used to mark packets on this interface. The value range is from 0 to 7.

	Command or Action	Purpose
Step 10	switch(config-pmap-c-nq)# **no set cos** *cos-value*	(Optional) Disables the marking operation in this class.

This example shows how to define a type network-qos policy map:

```
switch# configure terminal
switch(config)# policy-map type network-qos policy-que1
switch(config-pmap-nq)# class type network-qos class-que1
switch(config-pmap-c-nq)# mtu 5000
switch(config-pmap-c-nq)# set cos 4
```

Configuring Type QoS Policies

Type qos policies are used for classifying the traffic of a specific system class identified by a unique qos-group value. A type qos policy can be attached to the system or to individual interfaces for ingress traffic only.

You can set a maximum of five QoS groups for ingress traffic.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **policy-map type qos** *policy-name*	Creates a named object that represents a set of policies that are to be applied to a set of traffic classes. Policy-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.
Step 3	switch(config-pmap-qos)# [**class** | **class-default**] **type qos** *class-name*	Associates a class map with the policy map, and enters configuration mode for the specified system class. **Note** The associated class map must be the same type as the policy map type.
Step 4	switch(config-pmap-c-qos)# **set qos-group** *qos-group-value*	Configures one or more **qos-group** values to match on for classification of traffic into this class map. The list below identifies the ranges of the *qos-group-value* . There is no default value.

This example shows how to define a type qos policy map:

```
switch# configure terminal
switch(config)# policy-map type qos policy-s1
switch(config-pmap-qos)# class type qos class-s1
switch(config-pmap-c-qos)# set qos-group 2
```

Configuring Type Queuing Policies

Type queuing policies are used for scheduling and buffering the traffic of a specific system class. A type queuing policy is identified by its QoS group and can be attached to the system or to individual interfaces (except for Fabric Extender host interfaces) for input or output traffic.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **policy-map type queuing** *policy-name*	Creates a named object that represents a set of policies that are to be applied to a set of traffic classes. Policy-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.
Step 3	switch(config-pmap-que)# **class type queuing** *class-name*	Associates a class map with the policy map, and enters configuration mode for the specified system class.
Step 4	switch(config-pmap-c-que)# **priority**	Specifies that traffic in this class is mapped to a strict priority queue. **Note** Only one class in each policy map can have strict priority set on it.
Step 5	switch(config-pmap-c-que)# **no priority**	(Optional) Removes the strict priority queuing from the traffic in this class.
Step 6	switch(config-pmap-c-que)# **bandwidth percent** *percentage*	Specifies the guaranteed percentage of interface bandwidth allocated to this class. By default, no bandwidth is specified for a class. **Note** Before you can successfully allocate bandwidth to the class, you must first reduce the default bandwidth configuration on class-default and class-fcoe. **Note** If the priority and bandwidth configurations are applied as actions on the same class-map, the bandwidth configuration is ineffective.
Step 7	switch(config-pmap-c-que)# **no bandwidth percent** *percentage*	(Optional) Removes the bandwidth specification from this class.

Enabling and Displaying QoS Statistics for Interfaces

The **qos statistics** command must be enabled when you migrate to Cisco NX-OS release 7.3(0)N1(1) to enable statistics for policy maps. In addition, the existing policies need to be removed and reassigned to ensure the statistics work. Any new policy maps (that are not already configured on any interface) configured after enabling statistics would have the statistics enabled.

From Cisco NX-OS release 7.3(2)N1(1), the following changes are introduced:

- You do not need to use the **qos statistics** command to enable the QoS statistics. By default, the QoS statistics is enabled.
- The class-map and match statistics are not supported. Both these statistics are not displayed when you run the **show policy-map interface** command.
- The policer statistics are still supported and the queuing statistics are added to the **show policy-map interface** command output. Note that the queuing statistics are supported only for the Ethernet interfaces.

The detailed procedure is as follows:

Before You Begin

Enabling statistics can take up additional TCAM space. Hence, you must ensure that there is enough space available to perform this operation, given the existing configuration. Refer to CSCuq00149 for details on whether the statistics can be enabled on your switch.

Procedure

Step 1 Enter global configuration mode:
switch# **configure terminal**

Step 2 (Optional) Verify the existing status of the statistics on your switch:
switch(config)# **show policy-map vlan** *vlan-number*

Step 3 (Optional) Enable the statistics, if the existing status of the statistics is disabled on your switch:
switch(config)# **qos statistics**

Note From Cisco NX-OS release 7.3(2)N1(1), the QoS statistics is enabled by default.

Step 4 Enter VLAN configuration mode for the specified VLAN:
switch(config)# **vlan configuration** *vlan-number*

Step 5 Remove the policy from the VLAN:
switch(config-vlan-config)# **no service-policy type qos input** *policy-name*

The *policy-name* is the name assigned to the policy map.

Step 6 Enter VLAN configuration mode for the specified VLAN:
switch(config-vlan-config)# **vlan configuration** *vlan-number*

Step 7 Assign or reapply the policy map to the VLAN:
switch(config-vlan-config)# **service-policy type qos input** *policy-name*

Note The policy-name is the name assigned to the policy map. Note that the policy must be removed from all attachment points (VLANs and interfaces) before you enable the statistics on even one attachment point.

Step 8 Verify the status of the statistics on your switch:
switch(config-vlan-config)# **show policy-map vlan** *vlan-number*

Note You can also use the **show policy-map interface** command.

Note To remove the statistics, use the **no qos statistics** command, then remove and reassign the policies for them to take effect.

Example: Enabling and Displaying QoS Statistics

This example shows how to enable and display QoS statistics.

```
switch(config)# show policy-map vlan 13

Global statistics status: disabled

Vlan 13

  Service-policy (qos) input:   rq1
    policy statistics status:   disabled

    Class-map (qos):   rq1 (match-any)
      Match: cos 4
      set qos-group 2

    Class-map (qos):   class-default (match-any)
      Match: any
      set qos-group 0

switch(config)# qos statistics

Warning: Turning on the statistics would increase the TCAM utilisation. Disable the CLI if
 this is not intended.
Note that the policies need to be removed and re-applied, for statistics to take effect.


switch(config)#vlan configuration 13-59
switch(config-vlan-config)#no service-policy type qos input rq1
switch(config-vlan-config)#vlan configuration 13
switch(config-vlan-config)#service-policy type qos input rq1
switch(config-vlan-config)# show policy-map vlan 13

Global statistics status: enabled

Vlan 13

  Service-policy (qos) input:   rq1
    policy statistics status:   enabled

    Class-map (qos):   rq1 (match-any)
      3094788 packets
      Match: cos 4
        3094788 Match packets
      set qos-group 2

    Class-map (qos):   class-default (match-any)
      0 packets
      Match: any
      set qos-group 0

switch(config-vlan-config)#
```

The following example shows the output of the **show policy-map interface** command in the Cisco NX-OS release 7.3(2)N1(1).

```
switch(config)# show policy-map interface ethernet 1/49


Global statistics status :   enabled

 NOTE: Type qos policy-map configured on VLAN will take precedence
       over system-qos policy-map for traffic on the VLAN


Ethernet1/49
```

```
Service-policy (qos) input:   cos
  policy statistics status:   enabled

  Class-map (qos):   cos3 (match-all)
    Match: cos 3
    set qos-group 2
    police cir percent 60 bc 200 ms
      conformed 300579840 bytes, 899939640 bps action: transmit
      violated 43806000 bytes, 131155688 bps action: drop

  Class-map (qos):   cos4 (match-all)
    Match: cos 4
    set qos-group 4

  Class-map (qos):   class-default (match-any)
    Match: any
    set qos-group 0

Service-policy (queuing) input:   fcoe-default-in-policy
  policy statistics status:   disabled

  Class-map (queuing):   class-fcoe (match-any)
    Match: qos-group 1
    bandwidth percent 50

  Class-map (queuing):   class-default (match-any)
    Match: qos-group 0
    bandwidth percent 50

Service-policy (queuing) output:   fcoe-default-out-policy
  policy statistics status:   disabled

  Class-map (queuing):   class-fcoe (match-any)
    Match: qos-group 1
    queue dropped pkts : 0  queue received pkts : 0
    bandwidth percent 50

  Class-map (queuing):   class-default (match-any)
    Match: qos-group 0
    queue dropped pkts : 57346780  queue received pkts : 155740874
    bandwidth percent 50
```

Restrictions for Viewing the QoS Statistics

Due to the way statistics and policers are attached to the TCAM entries, there are certain limitations to viewing the statistics:

- Statistics are incremented cumulatively for each VLAN or interface where the policy is applied. The statistics are not per-interface/vlan.
- Default policies and system-level policies do not have statistics.
- Statistics per ACE in an ACL cannot be viewed if there is more than one ACE in the ACL and a policer is attached to the QoS policy.
- The above limitation applies to qos-based matches as well (for example, **match dscp** *value*, **match precedence** *value*, and so on).
  - Statistics cannot be viewed with match-all rules.
  - Statistics can be viewed only with match-any.
- Statistics per-ACE of ACL for QoS policies applied of FEX HIF ports will be shown only if policer is not present.

Verifying the Policy Map Configuration

Command	Purpose
show policy-map [*name*]	Displays the policy maps defined on the switch. Optionally, you can display the named policy only.
show policy-map interface [*interface number*]	Displays the policy map settings for an interface or all interfaces.
show policy-map system	Displays the policy map settings attached to the system qos.
show policy-map type {**network-qos** | **qos** | **queuing**} [*name*]	Displays the policy map settings for a specific policy type. Optionally, you can display the named policy only.
running-config ipqos	Displays information about the running configuration for QoS.
startup-config ipqos	Displays information about the startup configuration for QoS.

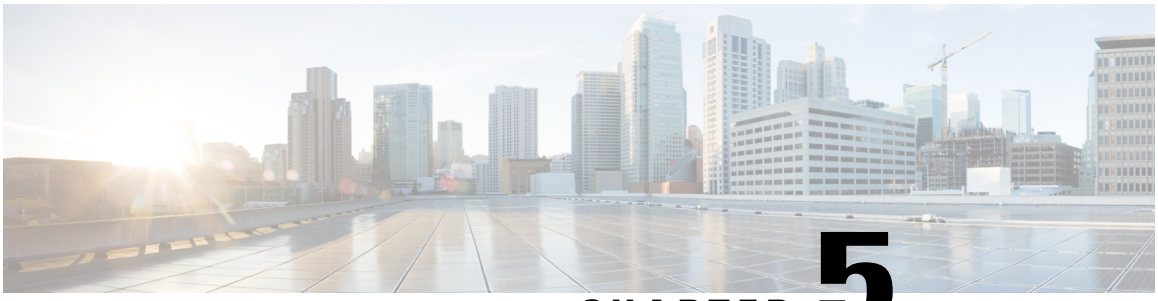

CHAPTER 5

Configuring Marking

This chapter contains the following sections:

- Information About Marking, page 29
- Configuring Marking, page 29
- Verifying the Marking Configuration, page 34

Information About Marking

Marking is a method that you use to modify the QoS fields of the incoming and outgoing packets.

You can use marking commands in traffic classes that are referenced in a policy map. The marking features that you can configure are listed below:

- DSCP
- IP precedence
- CoS

Configuring Marking

Configuring DSCP Marking

For Cisco Nexus devices, you can set the DSCP value in the six most significant bits of the DiffServ field of the IP header to a specified value. You can enter numeric values from 0 to 63, in addition to the standard DSCP values shown in the table below:

Note You can set DSCP or IP Precedence but you can not set both values because they modify the same field in the IP packet.

Table 6: Standard DSCP Values

Value	List of DSCP Values
af11	AF11 dscp (001010)—decimal value 10
af12	AF12 dscp (001100)—decimal value 12
af13	AF13 dscp (001110)—decimal value 14
af21	AF21 dscp (010010)—decimal value 18
af22	AF22 dscp (010100)—decimal value 20
af23	AF23 dscp (010110)—decimal value 22
af31	AF31 dscp (011010)—decimal value 26
af32	AF40 dscp (011100)—decimal value 28
af33	AF33 dscp (011110)—decimal value 30
af41	AF41 dscp (100010)—decimal value 34
af42	AF42 dscp (100100)—decimal value 36
af43	AF43 dscp (100110)—decimal value 38
cs1	CS1 (precedence 1) dscp (001000)—decimal value 8
cs2	CS2 (precedence 2) dscp (010000)—decimal value 16
cs3	CS3 (precedence 3) dscp (011000)—decimal value 24
cs4	CS4 (precedence 4) dscp (100000)—decimal value 32
cs5	CS5 (precedence 5) dscp (101000)—decimal value 40
cs6	CS6 (precedence 6) dscp (110000)—decimal value 48
cs7	CS7 (precedence 7) dscp (111000)—decimal value 56
default	Default dscp (000000)—decimal value 0

Value	List of DSCP Values
ef	EF dscp (101110)—decimal value 46

Procedure

	Command or Action	Purpose
Step 1	**config t**	Enters configuration mode.
Step 2	**policy-map type qos** *qos-policy-map-name*	Creates or accesses the policy map named policy-map-name, and then enters policy-map mode. The policy-map name can contain alphabetic, hyphen, or underscore characters, is case sensitive, and can be up to 40 characters.
Step 3	**class** [**type qos**] {*class-map-name* | **class-default**}	Creates a reference to class-map-name, and enters policy-map class configuration mode. Use the **class-default** keyword to select all traffic that is not currently matched by classes in the policy map.
Step 4	**set dscp** *dscp-value*	Sets the DSCP value to dscp-value. See the Standards DSCP Values table.
Step 5	**set qos-group** *y*	Specifies the qos-group. The group value can be from 1 to 5.

This example shows how to set the DSCP value to 10 and specify the qos-group to 2.

```
policy-map type qos test-bulkdata
   class type qos bulkdata
     set dscp 10
     set qos-group 2
```

Configuring IP Precedence Marking

You can set the value of the IP precedence field in bits 0 to 2 of the IPv4 type of service (ToS) field or the equivalent Traffic Class field for IPv6 of the IP header. The following table shows the precedence values:

Note You can set IP Precedence or DSCP but you can not set both values because they modify the same field in the IP packet.

Table 7: Precedence Values

Value	List of Precedence Values
<0-7>	IP precedence value
critical	Critical precedence (5)

Value	List of Precedence Values
flash	Flash precedence (3)
flash-override	Flash override precedence (4)
immediate	Immediate precedence (2)
internet	Internetwork control precedence (6)
network	Network control precedence (7)
priority	Priority precedence (1)
routine	Routine precedence (0)

Procedure

	Command or Action	Purpose
Step 1	**config t**	Enters configuration mode.
Step 2	**policy-map** [**type qos**] *qos-policy-map-name*	Creates or accesses the policy map named policy-map-name, and then enters policy-map mode. The policy-map name can contain alphabetic, hyphen, or underscore characters, is case sensitive, and can be up to 40 characters.
Step 3	**class** [**type qos**] {*class-map-name* | **class-default**}	Creates a reference to class-map-name, and enters policy-map class configuration mode. Use the **class-default** keyword to select all traffic that is not currently matched by classes in the policy map.
Step 4	**set precedence** *precedence-value*	Sets the IP precedence value to precedence-value. You can enter one of the values shown in the Precedence Values table.

```
switch(config)# policy-map type qos my_policy
switch(config-pmap-qos)# class type qos my_class
switch(config-pmap-c-qos)# set precedence 5
switch(config-pmap-c-qos)#
```

Configuring CoS Marking

The value of the CoS field is recorded in the high-order three bits of the VLAN ID Tag field in the IEEE 802.1Q header.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config) # **policy-map** [**type network-qos**] *policy-map name*	Creates or accesses the policy map named *policy-map-name* and enters policy-map mode. The policy-map name can contain alphabetic, hyphen, or underscore characters, is case sensitive, and can be up to 40 characters.
Step 3	switch(config-pmap-nq) # **class** [**type network-qos**] {*class-map name* |**class-default**}	Creates a reference to the *class-map-name* and enters policy-map class configuration mode. Use the **class-default** keyword to select all traffic that is not currently matched by classes in the policy map.
Step 4	switch(config-pmap-c-nq) # **set cos** *cos-value*	Specifies the CoS value to cos-value. The *cos-value* can range from 0 to 7. **Note** This command is supported only for egress policies.

Required CoS Marking Configuration in a Layer 3 Topology

In Layer 3 topologies, you must configure each QoS group in the network-qos policy with a unique cos value.

Procedure

	Command or Action	Purpose
Step 1	switch# **show policy-map system**	Displays the already configured policy maps and CoS values. In Layer 3 topologies, each qosgroup must have a unique CoS value. Use the **show policy-map system** command to view CoS values that have been used and that are unavailable for QoS groups.
Step 2	switch# **configure terminal**	Enters global configuration mode.
Step 3	switch(config) # **policy-map** [**type network-qos**] *policy-map name*	Creates or accesses the policy map named *policy-map-name* and enters policy-map mode. The policy-map name can contain alphabetic, hyphen, or underscore characters, is case sensitive, and can be up to 40 characters.
Step 4	switch(config-pmap-nq) # **class** [**type network-qos**] {*class-map name* |**class-default**}	Creates a reference to the class-map-name and enters policy-map class configuration mode.

	Command or Action	Purpose
		Use the **class-default** keyword to select all traffic that is not currently matched by classes in the policy map.
Step 5	switch(config-pmap-nq-c) # **set cos** *cos-value*	Specifies the CoS value. The value can range from 0 to 7. **Note** You can use this command only in egress policies. In Layer 3 topologies, each qos-group must have a unique cos configuration.

This example shows how to set the CoS value to 4 in a Layer 3 topology:

```
switch# show policy-map system
  Type network-qos policy-maps
  ============================

  policy-map type network-qos pn-01
    class type network-qos cn-01      match qos-group 1
      mtu 8500
      pause no-drop
      set cos 2
    class type network-qos cn-02      match qos-group 2
      set cos 4
      mtu 9216
    class type network-qos cn-03      match qos-group 3
      mtu 8000
      set cos 6
    class type network-qos cn-04      match qos-group 4
      mtu 8750
      set cos 7
    class type network-qos cn-ip-multicast      match qos-group 5
      set cos 5
      mtu 7500
    class type network-qos class-default      match qos-group 0
      mtu 1500
      set cos 1
...
switch# configure terminal
switch(config)# policy-map type network-qos pn-01
switch(config-pmap-nq)# class type network-qos cn-05
switch(config-pmap-c-nq)# set cos 3
```

Verifying the Marking Configuration

Use one of the following commands to verify the configuration:

Command	Purpose
show class-map	Displays the class maps defined on the switch.
show policy-map [*name*]	Displays the policy maps defined on the switch. Optionally, you can display the named policy only.
running-config ipqos	Displays information about the running configuration for QoS.

Command	Purpose
startup-config ipqos	Displays informationa bout the startup configuration for QoS.

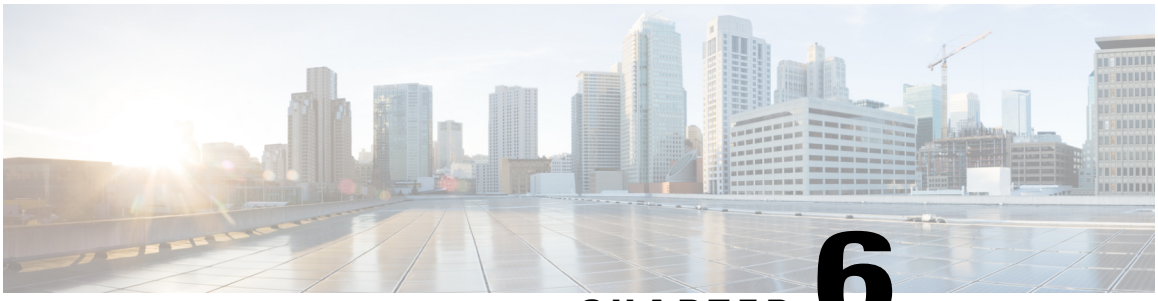

CHAPTER 6

Configuring QoS on the System

This chapter contains the following sections:

- Information About System Classes, page 37
- Configuring System QoS, page 38
- Verifying the System QoS Configuration, page 42

Information About System Classes

System Classes

The system qos is a type of MQC target. You use a service policy to associate a policy map with the system qos target. A system qos policy applies to all interfaces on the switch unless a specific interface has an overriding service-policy configuration. The system qos policies are used to define system classes, the classes of traffic across the entire switch, and their attributes. To ensure QoS consistency (and for ease of configuration), the device distributes the system class parameter values to all its attached network adapters using the Data Center Bridging Exchange (DCBX) protocol.

If service policies are configured at the interface level, the interface-level policy always takes precedence over system class configuration or defaults.

On the Cisco Nexus device, a system class is uniquely identified by a qos-group value. A total of six system classes are supported. Two of the six system classes are defaults and are always present on the device. Up to four additional system classes can be created by the administrator.

Default System Classes

MTU

The Cisco Nexus device is a Layer 2 switch, and it does not support packet fragmentation. A maximum transmission unit (MTU) configuration mismatch between ingress and egress interfaces may result in packets being truncated.

When configuring MTU, follow these guidelines:

- MTU is specified per system class. The system class allows a different MTU for each class of traffic but they must be consistent on all ports across the entire switch. You cannot configure MTU on the interfaces.
- Fibre Channel and FCoE payload MTU is 2158 bytes across the switch. As a result, the rxbufsize for Fibre Channel interfaces is fixed at 2158 bytes. If the Cisco Nexus device receives an rxbufsize from a peer that is different than 2158 bytes, it will fail the exchange of link parameters (ELP) negotiation and not bring the link up.
- Enter the **system jumbomtu** command to define the upper bound of any MTU in the system. The system jumbo MTU has a default value of 9216 bytes. The minimum MTU is 2158 bytes and the maximum MTU is 9216 bytes.
- The system class MTU sets the MTU for all packets in the class. The system class MTU cannot be configured larger than the global jumbo MTU.
- The FCoE system class (for Fibre Channel and FCoE traffic) has a default MTU of 2158 bytes. This value cannot be modified.
- The switch sends the MTU configuration to network adapters that support DCBX.

Note MTU is not supported in Converged Enhanced Ethernet (CEE) mode for DCBX.

Configuring System QoS

Attaching the System Service Policy

The **service-policy** command specifies the system class policy map as the service policy for the system.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **system qos**	Enters system class configuration mode.
Step 3	switch(config-sys-qos)# **service-policy type** {**network-qos** | **qos** | **queuing**} [**input** | **output**] *policy-name*	Specifies the policy map to use as the service policy for the system. There are three policy-map configuration modes: • network-qos—Network-wide (system qos) mode. • qos—Classification mode (system qos input or interface input only). • queuing—Queuing mode (input and output at system qos and interface).

	Command or Action	Purpose
		Note There is no default policy-map configuration mode; you must specify the **type**. The **input** keyword specifies that this policy map should be applied to traffic received on an interface. The **output** keyword specifies that this policy-map should be applied to traffic transmitted from an interface. You can only apply **input** to a qos policy; you can apply both **input** and **output** to a queuing policy.

```
switch(config)# class-map type network-qos ethCoS4
switch(config-cmap-nq)# match qos-group
switch(config-cmap-nq)# exit
switch(config)# policy-map type network-qos ethNoDrop
switch(config-pmap-nq)# class type network-qos ethCoS4
switch(config-pmap-c-nq)# pause no-drop
switch(config-pmap-c-nq)# exit
switch(config-pmap-nq)# exit
switch(config)# system qos
switch(config-sys-qos)# service-policy type network-qos ethNoDrop
```

Restoring the Default System Service Policies

If you have created and attached new policies to the system QoS configuration, enter the **no** form of the command to reapply the default policies.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **system qos**	Enters system class configuration mode.
Step 3	switch(config-sys-qos)# **no service-policy type qos input** *policy-map name*	Resets the classification mode policy map. This policy-map configuration is for system QoS input or interface input only:
Step 4	switch(config-sys-qos)# **no service-policy type network-qos** *policy-map name*	Resets the network-wide policy map.
Step 5	switch(config-sys-qos)# **no service-policy type queuing output** *policy-map name*	Resets the output queuing mode policy map.
Step 6	switch(config-sys-qos)# **no service-policy type queuing input** *policy-map name*	Resets the input queuing mode policy map.

Configuring the Queue Limit for a Specified Fabric Extender

At the Fabric Extender configuration level, you can control the queue limit for a specified Fabric Extender for egress direction (from the network to the host). You can use a lower queue limit value on the Fabric Extender to prevent one blocked receiver from affecting traffic that is sent to other noncongested receivers ("head-of-line blocking"). A higher queue limit provides better burst absorption and less head-of-line blocking protection. You can use the **no** form of this command to allow the Fabric Extender to use all available hardware space.

Note At the system level, you can set the queue limit for Fabric Extenders by using the **fex queue-limit** command. However, configuring the queue limit for a specific Fabric Extender will override the queue limit configuration set at the system level for that Fabric Extender.

You can specify the queue limit for the following Fabric Extenders:

- Cisco Nexus 2148T Fabric Extender (48x1G 4x10G SFP+ Module)
- Cisco Nexus 2224TP Fabric Extender (24x1G 2x10G SFP+ Module)
- Cisco Nexus 2232P Fabric Extender (32x10G SFP+ 8x10G SFP+ Module)
- Cisco Nexus 2248T Fabric Extender (48x1G 4x10G SFP+ Module)
- Cisco Nexus N2248TP-E Fabric Extender (48x1G 4x10G Module)
- Cisco Nexus N2348UPQ Fabric Extender (48x10G SFP+ 6x40G QSFP Module)

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **fex** *fex-id*	Specifies the Fabric Extender and enters the Fabric Extender mode.
Step 3	switch(config-fex)# **hardware** *fex_card_type* **queue-limit** *queue-limit*	Configures the queue limit for the specified Fabric Extender. The queue limit is specified in bytes. The range is from 81920 to 652800 for a Cisco Nexus 2148T Fabric Extender and from 2560 to 652800 for all other supported Fabric Extenders.

This example shows how to restore the default queue limit on a Cisco Nexus 2248T Fabric Extender:

```
switch# configure terminal
switch(config-if)# fex 101
switch(config-fex)# hardware N2248T queue-limit 327680
```

This example shows how to remove the queue limit that is set by default on a Cisco Nexus 2248T Fabric Extender:

```
switch# configure terminal
switch(config)# fex 101
switch(config-fex)# no hardware N2248T queue-limit 327680
```

Enabling the Jumbo MTU

You can enable the jumbo Maximum Transmission Unit (MTU) for the whole switch by setting the MTU to its maximum size (9216 bytes) in the policy map for the default Ethernet system class (class-default).

When you configure jumbo MTU on a port-channel subinterface you must first enable MTU 9216 on the base interface and then configure it again on the subinterface. If you enable the jumbo MTU on the subinterface before you enable it on the base interface then the following error will be displayed on the console:

```
switch(config)# int po 502.4
switch(config-subif)# mtu 9216
ERROR: Incompatible MTU values
```

To use FCoE on switch, add class-fcoe in the custom network-qos policy. If already using FCoE, make sure to add the below lines in the config so that the FCoE does not go down on the switch after enabling the jumbo qos policy.

```
switch# conf t
switch(config)# policy-map type network-qos jumbo
switch(config-pmap-nq)# class type network-qos class-fcoe
switch(config-pmap-nq-c)# end
```

This example shows how to change qos to enable the jumbo MTU:

```
switch# conf t
switch(config)# policy-map type network-qos jumbo
switch(config-pmap-nq)# class type network-qos class-default
switch(config-pmap-c-nq)# mtu 9216
```

Note The **system jumbomtu** command defines the maximum MTU size for the switch. However, jumbo MTU is supported only for system classes that have MTU configured.

Verifying the Jumbo MTU

On the Cisco Nexus device, traffic is classified into one of eight QoS groups. The MTU is configured at the QoS group level. By default, all Ethernet traffic is in QoS group 0. To verify the jumbo MTU for Ethernet traffic, use the **show queueing interface ethernet** *slot/chassis_number* command and find "HW MTU" in the command output to check the MTU for QoS group 0. The value should be 9216.

The **show interface** command always displays 1500 as the MTU. Because the Cisco Nexus device supports different MTUs for different QoS groups, it is not possible to represent the MTU as one value on a per interface level.

This example shows how to display jumbo MTU information for Ethernet 1/19:

```
switch# show queuing interface ethernet1/19
Ethernet1/19 queuing information:
  TX Queuing
    qos-group  sched-type  oper-bandwidth
        0       WRR             50
        1       WRR             50

  RX Queuing
```

```
    qos-group 0
    q-size: 243200, HW MTU: 9280 (9216 configured)
    drop-type: drop, xon: 0, xoff: 1520
    Statistics:
        Pkts received over the port             : 2119963420
        Ucast pkts sent to the cross-bar        : 2115648336
        Mcast pkts sent to the cross-bar        : 4315084
        Ucast pkts received from the cross-bar  : 2592447431
        Pkts sent to the port                   : 2672878113
        Pkts discarded on ingress               : 0
        Per-priority-pause status               : Rx (Inactive), Tx (Inactive)

    qos-group 1
    q-size: 76800, HW MTU: 2240 (2158 configured)
    drop-type: no-drop, xon: 128, xoff: 240
    Statistics:
        Pkts received over the port             : 0
        Ucast pkts sent to the cross-bar        : 0
        Mcast pkts sent to the cross-bar        : 0
        Ucast pkts received from the cross-bar  : 0
        Pkts sent to the port                   : 0
        Pkts discarded on ingress               : 0
        Per-priority-pause status               : Rx (Inactive), Tx (Inactive)

  Total Multicast crossbar statistics:
    Mcast pkts received from the cross-bar      : 80430744
```

Verifying the System QoS Configuration

Use one of the following commands to verify the configuration:

Command	Purpose
show policy-map system	Displays the policy map settings attached to the system QoS.
show policy-map [*name*]	Displays the policy maps defined on the switch. Optionally, you can display the named policy only.
show class-map	Displays the class maps defined on the switch.
running-config ipqos	Displays information about the running configuration for QoS.
startup-config ipqos	Displays information a bout the startup configuration for QoS.

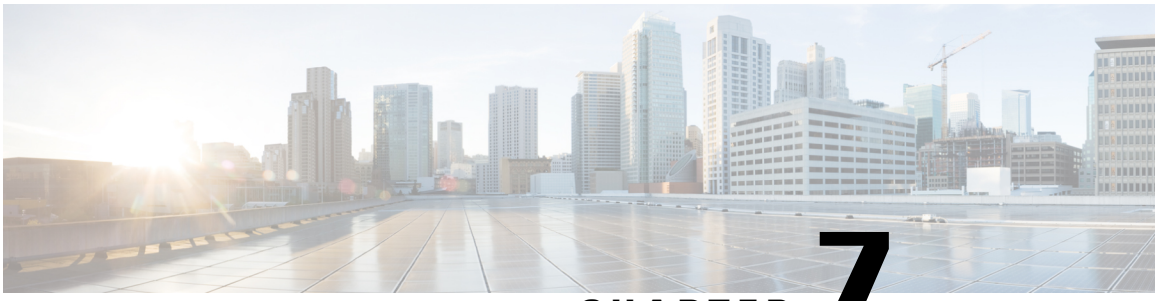

CHAPTER 7

Configuring QoS on Interfaces

This chapter contains the following sections:

- Information About Interface QoS, page 43
- Configuring Interface QoS, page 44
- Verifying the Interface QoS Configuration, page 47

Information About Interface QoS

Trust Boundaries

The trust boundary is enforced by the incoming interface as follows:

- All Fibre Channel and virtual Fibre Channel interfaces are automatically classified into the FCoE system class.
- By default, all Ethernet interfaces are trusted interfaces.The 802.1p CoS and DSCP are preserved unless the marking is configured. There is no default CoS to queue and DSCP to queue mapping. You can define and apply a policy to create these mappings. By default, without a user defined policy, all traffic is assigned to the default queue.
- Any packet that is not tagged with an 802.1p CoS value is classified into the default drop system class. If the untagged packet is sent over a trunk, it is tagged with the default untagged CoS value, which is zero.
- You can override the default untagged CoS value for an Ethernet interface or port channel.
- You can override the default untagged CoS value for an Ethernet interface or a port channel interface using the **untagged cos** *cos-value* command.
- You can override the default untagged Cos value for an Ethernet or a Layer 3 interface or a port channel interface using the **untagged cos** *cos-value* command.

After the system applies the untagged CoS value, QoS functions the same as for a packet that entered the system tagged with the CoS value.

Policy for Fibre Channel Interfaces

The egress queues are not configurable for native Fibre Channel interfaces. Two queues are available as follows:

- A strict priority queue to serve high-priority control traffic.
- A queue to serve all data traffic and low-priority control traffic.

Configuring Interface QoS

Configuring Untagged CoS

Any incoming packet not tagged with an 802.1p CoS value is assigned the default untagged CoS value of zero (which maps to the default Ethernet drop system class). You can override the default untagged CoS value for an Ethernet or EtherChannel interface.

You can configure flow control on a Layer 2 or Layer 3 interface. Use the **no switchport** command to configure a Layer 3 interface

On a Cisco Nexus device, you can configure a type qos policy map and untagged CoS on the same interface.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **interface** {**ethernet** [*chassis*/]*slot*/*port* | **port-channel** *channel-number*}	Enters the configuration mode for the specified interface or port channel. **Note** If this is a 10G breakout port, the *slot*/*port* syntax is *QSFP-module*/*port*.
Step 3	switch(config-if)# **no switchport**	(Optional) Selects a Layer 3 interface.
Step 4	switch(config-if)# **untagged cos** *cos-value*	Configures the untagged CoS value. Values can be from 1 to 7.

The following example shows how to set the CoS value to 4 for untagged frames received on an interface:

```
switch# configure terminal
switch(config)# interface ethernet 1/2
switch(config-if)# untagged cos 4
```

The following example shows how to set the CoS value to 3 for untagged frames received on a Layer 3 interface:

```
switch# configure terminal
switch(config)# interface ethernet 1/5
switch(config-if) no switchport
```

```
switch(config-if)# untagged cos 3
switch(config-if)#
```

Configuring an Interface Service Policy

An input qos policy is a service policy applied to incoming traffic on an Ethernet interface for classification. For type queuing, the output policy is applied to all outgoing traffic that matches the specified class. When you configure an input queuing policy on an interface or EtherChannel, the switch sends the configuration data to the adapter using the DCBX protocol.

Note Type qos policies can be activated only on Cisco Nexus device interfaces and Cisco Nexus Fabric Extender host interfaces. Type qos policies are not supported on Fabric Extender fabric interfaces or Fabric Extender fabric EtherChannel interfaces.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **interface** {**ethernet** [*chassis*/]*slot*/*port* | **port-channel** *channel-number*}	Enters the configuration mode for the specified interface. **Note** The service policy on a port channel applies to all member interfaces. **Note** If this is a 10G breakout port, the *slot*/*port* syntax is *QSFP-module*/*port*.
Step 3	switch(config-if)# **service-policy** [**type** {**qos** | **queuing**}] [**input** | **output**]*policy-name*	Specifies the policy map to use as the service policy for the system. There are two policy-map configuration modes: • qos—Classification mode; this is the default mode. • queuing—Queuing mode. **Note** The **input** keyword specifies that this policy map should be applied to traffic received on an interface. The **output** keyword specifies that this policy map should be applied to traffic transmitted from an interface. You can only apply **input** to a qos policy; you can only apply both **input** and **output** to a queuing policy.
Step 4	switch(config-if)# **service-policy input** *policy-name*	Applies the policy map to the interface. **Note** There is a restriction that system type qos policy cannot be the same as any the type qos policy applied to an interface or EtherChannel.

This example shows how to apply a policy to an Ethernet interface:

```
switch# configure terminal
switch(config)# interface ethernet 1/1
switch(config-if)# service-policy type qos input policy1
```

Configuring a Service Policy for a Layer 3 Interface

You can configure a service policy for a Layer 3 interface.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **interface ethernet** *slot*/*port*	Enters the configuration mode for the specified interface. **Note** If this is a 10G breakout port, the *slot*/*port* syntax is *QSFP-module*/*port*.
Step 3	switch(config-if)# **no switchport**	Selects the Layer 3 interface.

The following example shows how to attach a queuing policy map to a Layer 3 interface:

```
switch# configure terminal
switch(config)# interface ethernet 1/5
switch(config-if)# no switchport
switch(config-if)# service-policy type queuing output my_output_q_policy
switch(config-if)#
```

The following example shows how to attach an input qos policy map to a Layer 3 interface:

```
switch# configure terminal
switch(config)# interface ethernet 1/5
switch(config-if)# no switchport
switch(config-if)# service-policy type qos input my_input_qos_policy
switch(config-if)#
```

Changing the Bandwidth Allocated to Unicast and Multicast Traffic

You can change the bandwidth allocated to unicast and multicast traffic by assigning weighted round-robin (WRR) weights as a percentage of the interface data rate to the egress queues.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **interface ethernet** *slot*/*port*	Enters configuration mode for the specified interface. **Note** If this is a 10G breakout port, the *slot*/*port* syntax is *QSFP-module*/*port*.

	Command or Action	Purpose
Step 3	switch(config-if)# **wrr unicast-bandwidth** percentage-value	Changes the bandwidth allocated to unicast and multicast traffic on traffic congestion. The bandwidth-value percentage ranges from 0 to 100 percent.

This example shows how to attach a queuing policy map to a Layer 3 interface:

```
switch# configure terminal
switch(config)# interface ethernet 1/5
switch(config-if)# wrr unicast-bandwidth 75
switch(config-if)#
```

Verifying the Interface QoS Configuration

Use one of the following commands to verify the configuration:

Command	Purpose
show class-map	Displays the class maps defined on the switch.
show policy-map [*name*]	Displays the policy maps defined on the switch. Optionally, you can display the named policy only.
show policy-map interface [*interface number*]	Displays the policy map settings for an interface or all interfaces.
show queuing interface *[interface slot/\port*]	Displays the queue configuration and statistics. **Note** You need to define the corresponding classes for the QoS groups in the applied network-qos policy. Otherwise, the statistics for different QoS groups are not displayed when you run the **show queuing interface** command. **Note** If this is a 10G breakout port, the *slot*/*port* syntax is *QSFP-module*/*port*.
show interface flowcontrol [**module** *numbef*]	Displays the detailed listing of the flow control settings on all interfaces.
show interface [*interface slot/port*] **priority-flow-control** [**module** *number*]	Displays the priority flow control details for a specified interface. **Note** If this is a 10G breakout port, the *slot*/*port* syntax is *QSFP-module*/*port*.
show interface untagged-cos [**module** *number*]	Displays the untagged CoS values for all interfaces.
running-config ipqos	Displays information about the running configuration for QoS.

Command	Purpose
startup-config ipqos	Displays information about the startup configuration for QoS.

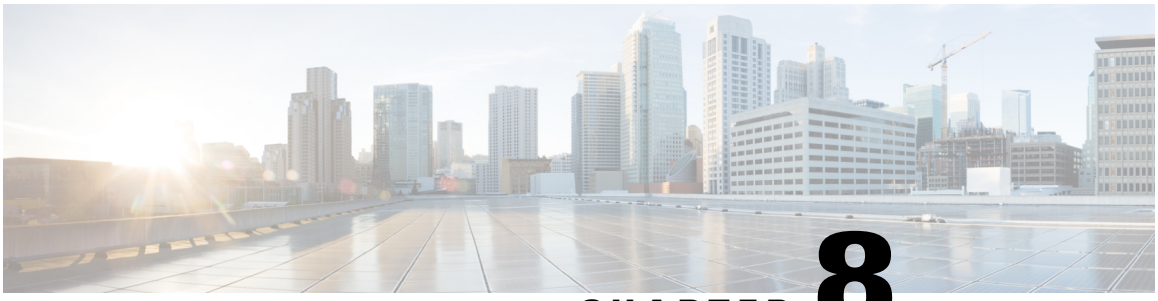

CHAPTER 8

Configuring QoS on VLANs

This chapter contains the following sections:

- Information About VLAN QoS, page 49
- Precedence of QoS Policies, page 49
- Limiting TCAM Entries for VLAN QoS, page 52
- Guidelines and Limitations for VLAN QoS, page 52
- Configuring VLAN QoS, page 53
- Verifying the VLAN QoS Configuration, page 56
- Feature History for VLAN QoS, page 56

Information About VLAN QoS

On Cisco Nexus devices, you can configure quality of service (QoS) policies for classification and marking on VLANs. The policies that you apply to a VLAN are applied to the traffic on the VLAN's Layer 2 and switch virtual interface (SVI) ports.

Precedence of QoS Policies

The marking requirements in a QoS policy determine its precedence. Interface QoS policies take the highest precedence, the VLAN QoS policies are next, and the System QoS policies have the lowest precedence.

However, if a VLAN is assigned both a VLAN QoS policy and a VLAN ACL (VACL), the VACL takes the highest precedence.

Example of Interface, System, and VLAN Policy Precedence

This example shows a configuration where the traffic on interface 1/1 with CoS 5 goes to qos-group 3. Traffic on the other interfaces with VLAN 10 and CoS 5 go to qos-group 4. Traffic on interfaces other than VLAN 10 and CoS 5 go to qos-group 5.

```
class-map type qos match-all cm1
  match cos 5
policy-map type qos pm-ifc
  class cm1
    set qos-group 3
  class class-default
policy-map type qos pm-vlan
  class cm1
    set qos-group 4
  class class-default
policy-map type qos pm-sys
  class cm1
    set qos-group 5
  class class-default

system qos
  service-policy type qos input pm-sys
vlan configuration 10
  service-policy type qos input pm-vlan
interface Ethernet1/1
  service-policy type qos input pm-ifc
```

Example of Interface and System QoS Policy Precedence

This example shows a configuration where the traffic on interface 1/1 with CoS 5 goes to qos-group 3. Traffic on the other interfaces with CoS 5 go to qos-group 5.

```
class-map type qos match-all cm1
  match cos 5
policy-map type qos pm-ifc
  class cm1
    set qos-group 3
  class class-default
policy-map type qos pm-sys
  class cm1
    set qos-group 5
  class class-default

system qos
  service-policy type qos input pm-sys

interface Ethernet1/1
  service-policy type qos input pm-ifc
```

Example of System and VLAN Policy Precedence

This example shows a configuration where the traffic on VLAN 10 with CoS 5 goes to qos-group 4. Traffic on the other VLANs with CoS 5 go to qos-group 5.

```
class-map type qos match-all cm1
  match cos 5
policy-map type qos pm-vlan
  class cm1
    set qos-group 4
```

```
  class class-default
policy-map type qos pm-sys
  class cm1
    set qos-group 5
  class class-default

system qos
  service-policy type qos input pm-sys
vlan configuration 10
  service-policy type qos input pm-vlan
```

Example of VLAN QoS and VACL Policy Precedence

In this example, the packets with source IP address 10.10.10.1 are dropped. However, the other packets with VLAN 10 and CoS 5 go to qos-group 4.

```
ip access-list al1
  10 permit ip 10.10.10.1/24 any
vlan access-map v-am1
  match ip address al1
  action drop
vlan filter v-am1 vlan-list 10

class-map type qos match-all cm1
  match cos 5
policy-map type qos pm-vlan
  class cm1
    set qos-group 4
  class class-default

vlan configuration 10
  service-policy type qos input pm-vlan
```

Limiting TCAM Entries for VLAN QoS

The QoS TCAM region is shared by the interface QoS, system QoS, and VLAN QoS policies. You need to limit the number of TCAM entries for the interface QoS policies in order to define VLAN QoS policies. Use the **hardware profile tcam feature interface-qos limit** *tcam-size* to configure this limit.

Figure 1: QoS TCAM Region

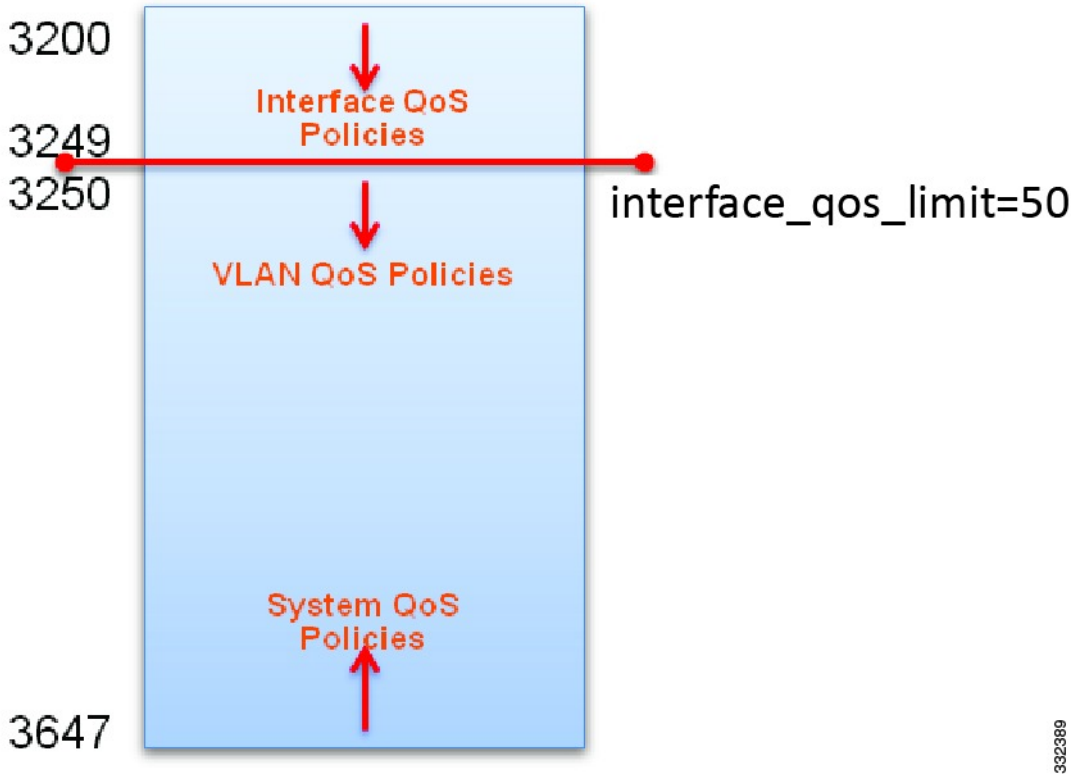

Guidelines and Limitations for VLAN QoS

- A VLAN must have at least one active member port for a service policy to be configured on. If a VLAN does not have at least one active member, and you configure a service policy on it, the configuration is accepted; however, the TCAM is not programmed.
- If a VLAN is removed with the **no vlan** *number* command, the service policy that is configured on that VLAN is still present, but it is not active.
- The TCAM must have enough free entries to configure the service policy on the VLAN.
- A rollback might fail if the interface QoS limit is different in the running configuration than in the rollback configuration.
- If a VLAN with a QoS policy is configured on an interface with no QoS policy, the **show policy-map interface** *number* command does not display the QoS policy configured on the VLAN.

- Remove all interface QoS policies before changing the interface QoS limit.
- Acllogs can only support logging levels of 3 or later.
- We support only logging denials on the ACL, permits will not be logged.
- Only one log message will be displayed until the flow stops and the rest is displayed later.

Configuring VLAN QoS

Configuring or Changing the Interface QoS TCAM Limit

To configure the interface_qos_limit to a specific number, the QoS region of the TCAMs in all of the ASICs cannot have any interfaces policies configured beyond the offset of that number. For example, to configure the interface_qos_limit to 1000, the QoS regions of the TCAMs in all of the ASICs cannot have any interface policies configured beyond offset 1000.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **hardware profile tcam feature interface-qos limit** *tcam-size*	Configures the interface QoS TCAM limit. The *tcam-size* range is from 7 to 446 entries.
Step 3	switch(config)# **show hardware profile tcam feature qos**	Displays the limits of the QoS TCAMs.
Step 4	switch(config)# **copy running-config startup-config**	(Optional) Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

This example shows how to set the interface QoS TCAM limit to 20 entries:

```
switch(config)# configure terminal
switch(config)# hardware profile tcam feature interface-qos limit 20
switch(config)# show hardware profile tcam feature qos
Feature                 Limit (number of tcam entries)
------------------------------------------------------
interface-qos             20
vlan-qos + global-qos     428

switch(config)# copy running-config startup-config
```

Removing the Interface QoS Limit from the TCAM

Before You Begin

- Remove all VLAN QoS policies.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **show hardware profile tcam feature qos**	Displays the limits of the QoS TCAMs.
Step 3	switch(config)# **no hardware profile tcam feature interface-qos limit** *tcam-size*	Configures the interface QoS TCAM limit. The *tcam-size* range is from 7 to 446 entries.
Step 4	switch(config)# **copy running-config startup-config**	(Optional) Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

This example shows how to remove the interface QoS TCAM limit:

```
switch(config)# configure terminal
switch(config)# show hardware profile tcam feature qos
Feature                 Limit (number of tcam entries)
------------------------------------------------------
interface-qos             20
vlan-qos + global-qos     428

switch(config)# no hardware profile tcam feature interface-qos limit 20
switch(config)# copy running-config startup-config
```

Configuring a Service Policy on a VLAN

Before You Begin

- You must configure the interface QoS limit.
- You must configure a policy map.
- The TCAM must have enough free entries to configure the service policy on the VLAN.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **vlan configuration** *vlan-number*	Creates a VLAN and enters VLAN configuration mode. The *vlan-number* range is from 1 to 4094.
Step 3	switch(config-vlan)# **service-policy type qos input** *policy-name*	Assigns a policy map to the VLAN. The *policy-name* is the name assigned to the policy map. The name can be a maximum of 40 alphanumeric characters.
Step 4	switch(config-vlan)# **copy running-config startup-config**	(Optional) Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

This example shows how to create a service policy and assign it to VLAN 10:

```
switch# configure terminal
switch(config)# class-map type qos cm1
switch(config-cmap-qos)# match cos 5
switch(config-cmap-qos)# policy-map type qos pm-vlan
switch(config-pmap-qos)# class cm1
switch(config-pmap-c-qos)# set qos-group 4
switch(config-pmap-c-qos)# exit
switch(config-pmap-qos)# exit
switch(config)# vlan configuration 10
switch(config-vlan-config)# service-policy type qos input pm-vlan
switch(config-vlan-config)#
```

Removing a Service Policy from a VLAN

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **vlan configuration** *vlan-number*	Enters VLAN configuration mode for the specified VLAN. The *vlan-number* range is from 1 to 4094.
Step 3	switch(config-vlan-config)#**no service-policy type qos input** *policy-name*	Removes the policy from the VLAN. The *policy-name* is the name assigned to the policy map. The name can be a maximum of 40 alphanumeric characters.
Step 4	switch(config-vlan-config)# **copy running-config startup-config**	(Optional) Saves the changes persistently through reboots and restarts by copying the running configuration to the startup configuration.

This example shows how to remove the pm-vlan policy map from VLAN 10:

```
swtich# configure terminal
switch(config)# vlan configuration 10
switch(config-vlan-config)# no service-policy type qos input pm-vlan
switch(config-vlan-config)# copy running-config startup-config
```

Verifying the VLAN QoS Configuration

Use one of the following commands to verify the configuration:

Command	Purpose
show policy-map vlan *vlan-number*	Displays the QoS policies configured on the specified VLAN.
show policy-map [*name*]	Displays the policy maps defined on the switch. Optionally, you can display the named policy only.
running-config ipqos	Displays information about the running configuration for QoS.
startup-config ipqos	Displays information about the startup configuration for QoS.

Feature History for VLAN QoS

Table 8: Feature History for VLAN QoS

Feature Name	Release	Feature Information
VLAN QoS	5.1(3)N2(1)	This feature was introduced.

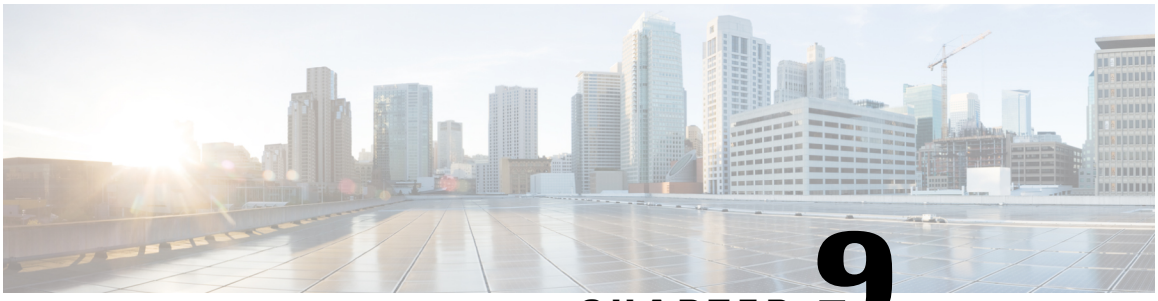

CHAPTER 9

Configuring Queuing and Flow Control

This chapter contains the following sections:

- Information About Queues, page 57
- Information About Flow Control, page 59
- Configuring Queuing, page 60
- Configuring Flow Control, page 63
- Verifying the Queue and Flow Control Configurations, page 65

Information About Queues

Ingress Queuing Policies

You can associate an ingress policy map with an Ethernet interface to guarantee bandwidth for the specified traffic class or to specify a priority queue.

The ingress policy is applied in the adapter to all outgoing traffic that matches the specified CoS value.

When you configure an ingress policy for an interface, the switch sends the configuration data to the adapter. If the adapter does not support the DCBX protocol or the ingress policy type-length-value (TLV), the ingress policy configuration is ignored.

Egress Queuing Policies

You can associate an egress policy map with an Ethernet interface to guarantee the bandwidth for the specified traffic class or to configure the egress queues.

The bandwidth allocation limit applies to all traffic on the interface including any FCoE traffic.

Each Ethernet interface supports up to eight queues, one for each system class. The queues have the following default configuration:

- In addition to these queues, control traffic that is destined for the CPU uses strict priority queues. These queues are not accessible for user configuration.

- FCoE traffic (traffic that maps to the FCoE system class) is assigned a queue. This queue uses weighted round-robin (WRR) scheduling with 50 percent of the bandwidth.
- Standard Ethernet traffic in the default drop system class is assigned a queue. This queue uses WRR scheduling with 100 percent of the bandwidth.

If you add a system class, a queue is assigned to the class. You must reconfigure the bandwidth allocation on all affected interfaces. Bandwidth is not dedicated automatically to user-defined system classes.

You can configure one strict priority queue. This queue is serviced before all other queues except the control traffic queue (which carries control rather than data traffic).

To increase the burst absorption capability run the **debug hard int multicast-port-prune-threshold** command.

Buffering and Queue Limits on the Cisco Nexus 5500 Platform

On the Cisco Nexus device, the packet buffer per port is 640KB. 16MB in ingress across all ports per ASIC. 9MB in egress across all ports per ASIC.

The following default buffer allocations per port exist for the Cisco Nexus device:

Table 9: Cisco Nexus Device Platform Default Buffer Allocations Per Port

Traffic Class	Ingress Buffer (KB)
Class-fcoe at 300M for a 10G Port	161.25
Class-fcoe at 300M for a 40G Port	182.5
Class-fcoe at 3000M for a 10G Port	412.5
Class-fcoe at 3000M for a 40G Port	1300
User-defined no-drop at 300M for a 10G Port	160
User-defined no-drop at 300M for a 40G Port	181.25
User-defined no-drop at 3000M for a 10G Port	411.875
User-defined no-drop at 3000M for a 40G Port	1298.125

The default buffer allocation varies depending on the type of class. For example, if you create a regular tail drop traffic class the default allocation is 22.7KB, unless you specify a larger size using the **queue-limit** command.

To increase the ingress buffer space available to a user-created qos-group, from a network-qos policy-map, use the **queue-limit** command.

In addition to ingress buffer allocated for each user-created qos-group there is an additional 29.76KB buffer required at egress for each qos-group.

With the default QoS configuration, all of the available buffer (470KB) is allocated to the class-default. When you create a new qos-group, the buffer required for the new qos-group will be taken away from class-default.

The amount of buffer that is left for class-default equals 470 minus the ingress buffer used by other qos-groups minus 29.76KB and times the number of qos-groups.

Note Each new class requires an additional 29.76KB, so the exact amount of buffer that is left in the class default equals 470 minus the buffer used by other qos-groups minus 29.76KB times the number of qos-groups.

The default QoS policy for the Cisco Nexus device does not create class-fcoe and does not reserve buffer and qos-group for FCoE traffic.

The **show queuing interface** command can display the amount of ingress buffer allocated for each qos-group

Information About Flow Control

Link-Level Flow Control

IEEE 802.3x link-level flow control allows a congested receiver to communicate a transmitter at the other end of the link to pause its data transmission for a short period of time. The link-level flow control feature applies to all the traffic on the link.

The transmit and receive directions are separately configurable. By default, link-level flow control is disabled for both directions.

On the Cisco Nexus device, Ethernet interfaces do not automatically detect the link-level flow control capability. You must configure the capability explicitly on the Ethernet interfaces.

On each Ethernet interface, the switch can enable either priority flow control or link-level flow control (but not both).

Priority Flow Control

Priority flow control (PFC) allows you to apply pause functionality to specific classes of traffic on a link instead of all the traffic on the link. PFC applies pause functionality based on the IEEE 802.1p CoS value. When the switch enables PFC, it communicates to the adapter which CoS values to apply the pause.

Ethernet interfaces use PFC to provide lossless service to no-drop system classes. PFC implements pause frames on a per-class basis and uses the IEEE 802.1p CoS value to identify the classes that require lossless service.

In the switch, each system class has an associated IEEE 802.1p CoS value that is assigned by default or configured on the system class. If you enable PFC, the switch sends the no-drop CoS values to the adapter, which then applies PFC to these CoS values.

The default CoS value for the FCoE system class is 3. This value is configurable.

By default, the switch negotiates to enable the PFC capability. If the negotiation succeeds, PFC is enabled and link-level flow control remains disabled regardless of its configuration settings. If the PFC negotiation fails, you can either force PFC to be enabled on the interface or you can enable IEEE 802.x link-level flow control.

If you do not enable PFC on an interface, you can enable IEEE 802.3X link-level pause.

Note Ensure that pause no-drop is configured on a class map for link-level pause.

By default, link-level pause is disabled.

Configuring Queuing

Configuring the Queue Limit for a Specified Fabric Extender

At the Fabric Extender configuration level, you can control the queue limit for a specified Fabric Extender for egress direction (from the network to the host). You can use a lower queue limit value on the Fabric Extender to prevent one blocked receiver from affecting traffic that is sent to other noncongested receivers ("head-of-line blocking"). A higher queue limit provides better burst absorption and less head-of-line blocking protection. You can use the **no** form of this command to allow the Fabric Extender to use all available hardware space.

Note At the system level, you can set the queue limit for Fabric Extenders by using the **fex queue-limit** command. However, configuring the queue limit for a specific Fabric Extender will override the queue limit configuration set at the system level for that Fabric Extender.

You can specify the queue limit for the following Fabric Extenders:

- Cisco Nexus 2148T Fabric Extender (48x1G 4x10G SFP+ Module)
- Cisco Nexus 2224TP Fabric Extender (24x1G 2x10G SFP+ Module)
- Cisco Nexus 2232P Fabric Extender (32x10G SFP+ 8x10G SFP+ Module)
- Cisco Nexus 2248T Fabric Extender (48x1G 4x10G SFP+ Module)
- Cisco Nexus N2248TP-E Fabric Extender (48x1G 4x10G Module)
- Cisco Nexus N2348UPQ Fabric Extender (48x10G SFP+ 6x40G QSFP Module)

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **fex** *fex-id*	Specifies the Fabric Extender and enters the Fabric Extender mode.
Step 3	switch(config-fex)# **hardware** *fex_card_type* **queue-limit** *queue-limit*	Configures the queue limit for the specified Fabric Extender. The queue limit is specified in bytes. The range is from 81920 to 652800 for a Cisco Nexus 2148T Fabric Extender and from 2560 to 652800 for all other supported Fabric Extenders.

This example shows how to restore the default queue limit on a Cisco Nexus 2248T Fabric Extender:

```
switch# configure terminal
switch(config-if)# fex 101
switch(config-fex)# hardware N2248T queue-limit 327680
```

This example shows how to remove the queue limit that is set by default on a Cisco Nexus 2248T Fabric Extender:

```
switch# configure terminal
switch(config)# fex 101
switch(config-fex)# no hardware N2248T queue-limit 327680
```

Configuring No-Drop Buffer Thresholds

You can configure the no-drop buffer threshold settings for 3000m lossless Ethernet.

Note To achieve lossless Ethernet for both directions, the devices connected to the device must have the similar capability. The default buffer and threshold value for the no-drop can ensure lossless Ethernet for up to 300 meters.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **policy-map type network-qos** *policy-map name*	Enters policy-map network-qos class mode and identifies the policy map assigned to the type network-qos policy map.
Step 3	switch(config-pmap-nq)# **class type network-qos** *class-map name*	References an existing network QoS class map in a policy map and enters class mode.
Step 4	switch(config-pmap-nq-c)# **pause no-drop buffer-size** *buffer-size* **pause-threshold** *xoff-size* **resume-threshold** *xon-size*	Specifies the buffer threshold settings for pause and resume for 3000m lossless Ethernet: • buffer-size—Buffer size for ingress traffic, in bytes. Valid values are from 10240 to 490880. • pause-threshold—Specifies the buffer limit at which the port pauses the peer. • xoff-size—Buffer limit for pausing, in bytes. Valid values are 0 to 490880. • resume-threshold—Specifies the buffer limit at which the port resumes the peer. • xon-size—Buffer limit at which to resume, in bytes. Valid values are 0 to 490880.

	Command or Action	Purpose
Step 5	switch(config-pmap-nq-c)# **no pause no-drop buffer-size** *buffer-size* **pause-threshold** *xoff-size* **resume-threshold** *xon-size*	(Optional) Removes the buffer threshold settings for pause and resume for 3000m lossless Ethernet.
Step 6	switch(config-pmap-nq-c)# **exit**	Exits class mode.
Step 7	switch(config-pmap-nq)# **exit**	Exits policy-map network-qos mode.

This example shows how to configure the no-drop buffer threshold for 3000 meters.

```
switch(config-pmap-nq)# policy-map type network-qos nqos_policy
switch(config-pmap-nq)# class type network-qos nqos_class
switch(config-pmap-nq-c)# pause no-drop buffer-size 152000 pause-threshold 103360
resume-threshold 83520
switch(config-pmap-nq-c)# exit
switch(config-pmap-nq)# exit
switch(config)# exit
switch#
```

Configuring the Buffer Threshold for the Cisco Nexus 2148T Fabric Extender

In the Fabric Extender configuration mode, you can configure the buffer threshold for the Cisco Nexus 2148T Fabric Extender. The buffer threshold sets the consumption level of input buffers before an indication is sent to the egress queue to start observing the tail drop threshold. If the buffer usage is lower than the configured buffer threshold, the tail drop threshold is ignored.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **fex** *fex-id*	Specifies the Fabric Extender and enters the Fabric Extender mode.
Step 3	switch(config-fex)# **hardware N2148T buffer-threshold** *buffer limit*	Configures the buffer threshold for the Cisco Nexus 2148T Fabric Extender. The buffer threshold is specified in bytes. The range is from 81920 to 316160 for the Cisco Nexus 2148T Fabric Extender.

This example shows how to restore the default buffer threshold on the Cisco Nexus 2148T Fabric Extender:

```
switch# configure terminal
switch(config)# fex 101
switch(config-fex)# hardware N2148T buffer-threshold 163840
```

This example shows how to remove the default buffer threshold on the Cisco Nexus 2148T Fabric Extender:

```
switch# configure terminal
switch(config)# fex 101
switch(config-fex)# no hardware N2148T buffer-threshold
```

Enabling Virtual Output Queuing Limits for Unicast Traffic on the Cisco Nexus Device

You can enable the Virtual Output Queuing (VOQ) limit for unicast traffic. To alleviate congestion and blocking, use VOQ to prevent one blocked receiver from affecting traffic that is sent to other noncongested blocking receivers.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters configuration mode.
Step 2	switch(config)# **hardware unicast voq-limit**	Enables the VOQ limit for unicast traffic. The default is disabled.
Step 3	switch(config)# **no hardware unicast voq-limit**	Disables the VOQ limit for unicast traffic.

This example shows how to enable the VOQ limits for unicast packets on a switch:

```
switch(config)# hardware unicast voq-limit
switch(config)#
```

Configuring Flow Control

Link-Level Flow Control

IEEE 802.3x link-level flow control allows a congested receiver to communicate a transmitter at the other end of the link to pause its data transmission for a short period of time. The link-level flow control feature applies to all the traffic on the link.

The transmit and receive directions are separately configurable. By default, link-level flow control is disabled for both directions.

On the Cisco Nexus device, Ethernet interfaces do not automatically detect the link-level flow control capability. You must configure the capability explicitly on the Ethernet interfaces.

On each Ethernet interface, the switch can enable either priority flow control or link-level flow control (but not both).

Configuring Priority Flow Control

By default, Ethernet interfaces negotiate PFC with the network adapter using the DCBX protocol. When PFC is enabled, PFC is applied to traffic that matches the CoS value configured for the no-drop class.

You can override the negotiation result by forcing the interface to enable PFC.

Beginning in Cisco NX-OS Release 5.0(3)N1(1), you can configure priority flow control on a Layer 2 or Layer 3 interface.

Note Use the **no switchport** command to configure an interface as a Layer 3 interface

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **interface** *type slot*/*port*	Specifies the interface to be changed. **Note** If this is a 10G breakout port, the *slot*/*port* syntax is *QSFP-module*/*port*.
Step 3	switch(config-if)# **no switchport**	(Optional) Selects a Layer 3 interface.
Step 4	switch(config-if)# **priority-flow-control mode** {**auto** | **on**}	Sets PFC mode for the selected interface. Specifies auto to negotiate PFC capability. This is the default. Specifies on to force-enable PFC.
Step 5	switch(config-if)# **no priority-flow-control mode on**	(Optional) Disables the PFC setting for the selected interface.

This example shows how to force-enable PFC on an interface:

```
switch# configure terminal
switch(config)# interface ethernet 1/2
switch(config-if)# priority-flow-control mode on
```

This example shows how to force-enable PFC on a Layer 3 interface:

```
switch# configure terminal
switch(config)# interface ethernet 1/5
switch(config-if)# no switchport
switch(config-if)# priority-flow-control mode on
```

Configuring Link-Level Flow Control

By default, LLC on Ethernet interfaces is disabled. You can enable LLC for the transmit and receive directions.

You can configure flow control on a Layer 2 or Layer 3 interface.

Note Use the **no switchport** command to configure an interface as a Layer 3 interface.

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **interface** *type slot*/*port*	Specifies the interface to be changed. **Note** If this is a 10G breakout port, the *slot*/*port* syntax is *QSFP-module*/*port*.
Step 3	switch(config-if)# **no switchport**	(Optional) Selects a Layer 3 interface.
Step 4	switch(config-if)# **flowcontrol** [**receive** {**on** | **off**}] [**send** {**on** | **off**}]	Enables LLC for the selected interface. Set **receive** and/or **send on** or **off**.
Step 5	switch(config-if)# **no flowcontrol** [**receive** {**on** | **off**}] [**send** {**on** | **off**}]	(Optional) Disables LLC for the selected interface.

This example shows how to enable LLC on an interface:

```
switch# configure terminal
Enter configuration commands, one per line.  End with CNTL/Z.
switch(config)# interface e1/48
switch(config-if)# flowcontrol receive on
switch(config-if)# flowcontrol send on
```

This example shows how to enable LLC on a Layer 3 interface:

```
switch# configure terminal
Enter configuration commands, one per line.  End with CNTL/Z.
switch(config)# interface e1/48
switch(config-if)# no switchport
switch(config-if)# flowcontrol receive on
switch(config-if)# flowcontrol send on
```

Verifying the Queue and Flow Control Configurations

Use one of the following commands to verify the configuration:

Command	Purpose
show queuing interface *[interface slot/\port*]	Displays the queue configuration and statistics. **Note** If this is a 10G breakout port, the *slot*/*port* syntax is *QSFP-module*/*port*.
show interface flowcontrol [**module** *numbef*]	Displays the detailed listing of the flow control settings on all interfaces.
show interface [*interface slot/port*] **priority-flow-control** [**module** *number*]	Displays the priority flow control details for a specified interface. **Note** If this is a 10G breakout port, the *slot*/*port* syntax is *QSFP-module*/*port*.

Command	Purpose
show wrr-queue cos-map [*var*]	
running-config ipqos	Displays information about the running configuration for QoS.
startup-config ipqos	Displays informationa bout the startup configuration for QoS.

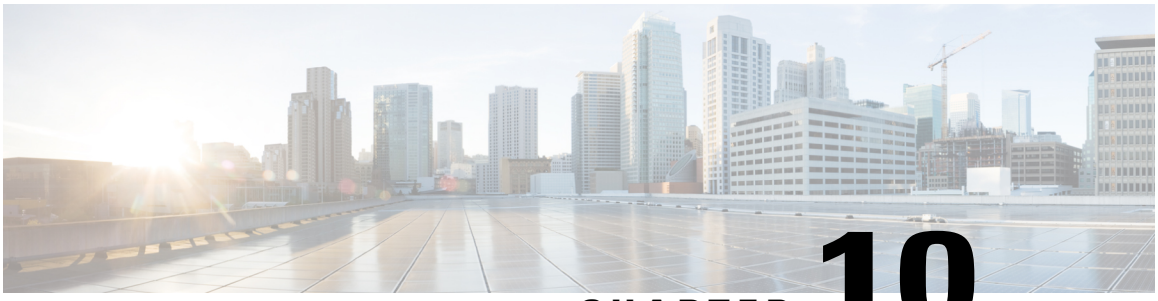

CHAPTER 10

Configuring Ingress Policing

This chapter contains the following sections:

- Information About Ingress Policing, page 67
- Guidelines and Limitations for Ingress Policing, page 68
- Creating a Policy Map Using a Committed Information Rate, page 69
- Creating a Policy Map Using a Percentage of the Interface Rate, page 72
- Verifying Ingress Policing Configuration, page 74
- Configuration Examples for Ingress Policing, page 74

Information About Ingress Policing

Policing allows you to monitor the data rates for a particular class of traffic. When the data rate exceeds user-configured values, the switch drops packets immediately. Because policing does not buffer the traffic; transmission delays are not affected. When traffic exceeds the data rate on a specific class, the switch drops the packets.

You can define single-rate and two-color Ingress Policing.

Single-rate Ingress Policing monitors the committed information rate (CIR) of traffic.

Note The committed information rate (CIR) is a value specified as a bit rate from 1 to 80000000000 or a percentage of the link rate.

In addition, Ingress Policing can monitor associated burst sizes of the packets. Two colors, or conditions, are determined by Ingress Policing for each packet depending on the data rate parameters that you supply.

You can configure only one action for each condition. For example, you might police for traffic in a class to conform to the data rate of 256000 bits per second with up to 200 millisecond bursts.

Color-aware Ingress Policing assumes that traffic has been previously marked with a color.

Table 10: Maximum Supported Hardware Configuration for Policers

	Nexus 5500 Series	Nexus 2232	Nexus 2248TP-E	Nexus 6000 Series
Burst Size	64 MB	32 MB	32 MB	64 MB
Max Rate	96 Gbps	12 Gbps	8 Gbps	8 Gbps
Granularity	732 kbps	732 kbps	488 kbps	122 kbps

Guidelines and Limitations for Ingress Policing

- The configuration for Ingress Policing is a part of the Quality of Service (QoS) policy configuration. You can configure QoS policies with Ingress Policing on the following :
  - Layer 2 switch ports
  - Host interface (HIF) ports
  - Port channels with switch ports
  - Port channels with HIF ports
  - Layer 3 interfaces (but not sub-interfaces or Switched Virtual Interfaces (SVIs))
  - Virtual Port Channel (vPC)
- Statistics are provided with Ingress Policing. Statistics include the drop count and allowed count. You can display the statistics by entering the **show policy-map interface ethernet** command.
- QoS policies that you configure on the attachments are installed in the QoS region of the Ternary Content Addressable Memory (TCAM) and causes the switch to apply Ingress Policing.
- If you configure a QoS policy with Ingress Policing on a HIF port or HIF port channel, Ingress Policing is offloaded to the Fabric Extender (FEX). Policy rewrites occur only in the switch. So QOS policy offload to FEX is required if there is any QOS policy rewrites which affects policer.
- All the match/set criteria that are supported in a QoS policy are supported even with Ingress Policing present in the policy. A Fabric Extender (FEX) supports Layer 3 operations (fragments) and Layer 4 operations (source and destination port ranges) but not the Transmission Control Protocol (TCP) flags and Layer 2 operations.
- You can define match criteria for a QoS policy so that it matches the control protocol traffic. If the type of policy is configured with Ingress Policing on an HIF port, the control traffic also gets policed. Therefore, the match criteria must be specific to the required flow of traffic.
- The **police** command is not supported on the Cisco Nexus device ASICs.
- The switch cannot apply a QoS policy with Ingress Policing to an HIF port that has virtual Ethernet interfaces attached.
- If the switch applies Ingress Policing on the HIF port, the policer is applied to traffic with no Virtual Network Tag (VNTAG).

- A policy with Ingress Policing is allowed only on switch ports, HIF ports, and port channels with switch/HIF ports.
- Ingress Policing with Layer 2 operations and TCP flags in the match criteria is not allowed on FEX interfaces.
- Ingress Policing is not supported on Enhanced VPC (2LayerVPC) ports.
- It is recommended that you apply identical Ingress Policing on Dual-homed (AA) HIF interfaces.
- The **police** command is not supported on system QoS policies.
- The **show policy-map interface** command is recommended to check that the ingress rate limiter is conformed and to display violated statistics. The CLI displays conformed/violated packets and packet per second statistics on HIF interfaces (regular as well as port-channel), whereas on the switchport (regular as well as port-channel) the command displays conformed/violated bytes and bits per second (bps).

Creating a Policy Map Using a Committed Information Rate

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **policy-map** [**type qos**] [*qos-policy-map-name*]	Creates a named object that represents a set of policies that are applied to a set of traffic classes. Policy-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.
Step 3	switch(config-pmap-qos)# **class** [**type qos**] {*class-map-name* | **class-default**}	Associates a class map with the policy map and enters configuration mode for the specified system class. Use the **class-default** keyword to select all traffic that is currently not matched by classes in the policy map. The *class-map-name* argument can be a maximum of 40 characters. The name is case sensitive and can only contain alphanumeric characters, hyphens, and underscores.
Step 4	switch(config-pmap-c-qos)# **police** [**cir**] {*committed-rate* [*data-rate*] | **percent** *cir-link-percent*} [[**bc**] {*committed-burst-rate*}][**conform**{**transmit**} [**violate** {**drop**}]]]	Polices **cir** in bits, kbps, mbps, or gbps. The **conform** action is applied if the data rate is less than or equal to **cir**, otherwise, the **violate** action is applied. The **cir** keyword specifies to use the committed information rate, or desired bandwidth, as a bit rate or a percentage of the link rate. The *committed-rate* value can range from 1 to 80 Gbps. The *data-rate* value can be one of the following: • bps—bits per second

	Command or Action	Purpose
		• kbps—1000 bits per second • mbps—1,000,000 bits per second • Gbps—1,000,000,000 bits per second Values for *committed-burst-rate* are the following: • bytes—bytes • kbytes—1000 bytes • mbytes—1,000,000 bytes • ms—milliseconds • us—microseconds The following are the Ingress Policing actions: • **conform**—The action to take if the traffic data rate is within bounds. The default action is **transmit.** • **transmit**—Transmits the packet. This is available only when the packet conforms to the parameters. • **violate**—The action to take if the traffic data rate violates the configured rate values. The basic and default action is **drop.** • **drop**—Drops the packet. This action is available only when the packet exceeds or violates the parameters.

Step 5	switch(config-pmap-c-qos)# **set** {{**dscp** {*dscp-val* | *dscp-enum*}} | {**precedence** {*prec-val* | *prec-enum*}} |{ **qos-group** *qos-grp-val*}}	(Optional)
		Sets the **dscp**, **precedence**, or **qos-group** actions.
		The arguments are as follows:
		• *dscp-va*l—DSCP value or parameter to assign for this class of traffic. Valid values are from 0 to 63.
		• *dscp-enum*—Valid values are from 0 to 63.
		`af11 AF11 dscp (001010)`
		`af12 AF12 dscp (001100)`
		`af13 AF13 dscp (001110)`
		`af21 AF21 dscp (010010)`
		`af22 AF22 dscp (010100)`
		`af23 AF23 dscp (010110)`
		`af31 AF31 dscp (011010)`
		`af32 AF32 dscp (011100)`
		`af33 AF33 dscp (011110)`
		`af41 AF41 dscp (100010)`
		`af42 AF42 dscp (100100)`

	Command or Action	Purpose
		af43 AF43 dscp (100110) cs1 CS1(precedence 1) dscp (001000) cs2 CS2(precedence 2) dscp (010000) cs3 CS3(precedence 3) dscp (011000) cs4 CS4(precedence 4) dscp (100000) cs5 CS5(precedence 5) dscp (101000) cs6 CS6(precedence 6) dscp (110000) cs7 CS7(precedence 7) dscp (111000) default Default dscp (000000) ef EF dscp (101110) • *prec-val*—IP precedence value to assign for this class of traffic. Valid values are from 0 to 7. • 0—routine • 1—priority • 2—immediate • 3—flash • 4—flash-override • 5—critical • 6—internet • 7—network **Note** You enter only the numeric value. *prec-enum*—Valid values are as follows: • routine • priority • immediate • flash • flash-override • critical • internet • network *qos-grp-val*—QoS group value to assign for this class of traffic, which is other than 0.
Step 6	switch(config-pmap-c-qos)# **exit**	Exits policy-map class configuration mode and enters policy-map mode.

	Command or Action	Purpose
Step 7	switch(config-pmap-qos)# **exit**	Exits policy-map mode and enters configuration mode.
Step 8	switch(config)# **show policy-map** [**type qos**] [*policy-map-name*]	(Optional) Displays information about all configured policy maps or a selected policy map of **type qos**.

This example shows how to create a policy map with Ingress Policing using the committed information rate:

```
switch# configure terminal
switch(config)# policy-map type qos pm1
switch(config-pmap-qos)# class type qos cm1
switch(config-pmap-c-qos)# police cir 10 mbps bc 20 kbytes
switch(config-pmap-c-qos)# set qos-group 4
switch(config-pmap-c-qos)# end
switch# show policy-map type qos pm1

 Type qos policy-maps
  ====================

  policy-map type qos pm1
  class type qos cm1
  set qos-group 4
  police cir 20 mbytes conform transmit violate drop
  set qos-group 4
  class type qos class-default
  set qos-group 1
  switch#
```

Creating a Policy Map Using a Percentage of the Interface Rate

Procedure

	Command or Action	Purpose
Step 1	switch# **configure terminal**	Enters global configuration mode.
Step 2	switch(config)# **policy-map** [**type qos**] [*qos-policy-map-name*]	Creates a named object that represents a set of policies that are applied to a set of traffic classes. Policy-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.
Step 3	switch(config-pmap-qos)# **class** [**type qos**] {*class-map-name* | **class-default**}	Associates a class map with the policy map and enters configuration mode for the specified system class. Use the **class-default** keyword to select all traffic that is currently not matched by classes in the policy map. The *class-map-name* argument can be a maximum of 40 characters. The name is case sensitive and can only contain alphanumeric characters, hyphens, and underscores.

	Command or Action	Purpose
Step 4	switch(config-pmap-c-qos)# **police** [**cir**] {*committed-rate* [*data-rate*] | **percent** *cir-link-percent*} [[**bc**] {*committed-burst-rate*}][**conform**{**transmit**} [**violate** {**drop**}]]]	Polices **cir** in bits, kbps, mbps, or gbps. The **conform** action is applied if the data rate is less than or equal to **cir**, otherwise, the **violate** action is applied. The **cir** keyword specifies to use the committed information rate, or desired bandwidth, as a bit rate or a percentage of the link rate. The *cir-link-percent* value can range from 1 to 100 percent. Values for *committed-burst-rate* are the following: • bytes—bytes • kbytes—1000 bytes • mbytes—1,000,000 bytes The following are the Ingress Policing actions: • **conform**—The action to take if the traffic data rate is within bounds. The default action is **transmit.** • **transmit**—Transmits the packet. This is available only when the packet conforms to the parameters. • **violate**—The action to take if the traffic data rate violates the configured rate values. The basic and default action is **drop.** • **drop**—Drops the packet. This is available only when the packet exceeds or violates the parameters.
Step 5	switch(config-pmap-c-qos)# **set** {{**dscp** {*dscp-val* | *dscp-enum*}} | {**precedence** {*prec-val* | *prec-enum*}} | {**qos-group** *qos-grp-val*}}	(Optional) Sets the **dscp**, **precedence**, or **qos-group** actions. *dscp-val*—DSCP value or parameter to assign for this class of traffic. Valid values are from 0 to 63. *prec-val*—IP precendence value to assign for this class of traffic. Valid values from 0 to 7. *qos-grp-val*—QoS group value to assign for this class of traffic. The range is from 1 to 5.
Step 6	switch(config-pmap-c-qos)# **exit**	Exits policy-map class configuration mode and enters policy-map mode.
Step 7	switch(config-pmap-qos)# **exit**	Exits policy-map mode and enters configuration mode.

	Command or Action	Purpose
Step 8	switch(config)# **show policy-map** [**type qos**] [*policy-map-name* | **qos-dynamic**]	(Optional) Displays information about all configured policy maps or a selected policy map of **type qos**.

This example shows how to create a policy map with Ingress Policing using the percentage of the interface rate:

```
switch# configure terminal
switch(config)# policy-map type qos pm-test1
switch(config-pmap-qos)# class type qos cm-cos4
switch(config-pmap-c-qos)# police cir percent 10 bc 40 kbytes conform transmit violate drop
switch(config-pmap-c-qos)# end
switch# show policy-map type qos pm-test1

Type qos policy-maps
====================

policy-map type qos pm-test1
class type qos cm-cos4
set qos-group 4
police cir percent 10 bc 40 kbytes conform transmit violate drop
class type qos class-default
set qos-group 1
switch#
```

Verifying Ingress Policing Configuration

To verify Ingress Policing configuration information, perform one of the following tasks:

Command	Purpose
switch# **show policy-map interface** [*interface number*]	Displays the policy map settings for an interface or all interfaces.
switch# **show policy-map** [**type qos**] [*policy-map-name*]	Displays information about all configured policy maps or a selected policy map of **type qos**.

Configuration Examples for Ingress Policing

The following example shows the Committed Information Rate (CIR) being specified as a percentage where the Ingress Policing rate is calculated based on the port/port-channel speed:

```
switch(config)# policy-map type qos pm-cos
switch(config-pmap-qos)# class cm-cos
switch(config-pmap-c-qos)# police cir percent 10 bc 20 mbytes conform transmit violate drop

switch(config-pmap-c-qos)#
```

The following example shows the output of the **show policy-map** command with Ingress Policing configured:

```
switch(config-pmap-c-qos)# show policy-map pm-cos
```

```
  Type qos policy-maps
  ====================

  policy-map type qos pm-cos
    class type qos cm-cos
      set qos-group 4
      police cir percent 10 bc 20 mbytes conform transmit violate drop
    class type qos class-default
      set qos-group 1
switch(config-pmap-c-qos)#
```

The following example shows a policy being applied to an interface with the **service-policy** command:

```
switch(config)# interface ethernet 1/1
switch(config-if)# service-policy type qos input pm-cos
```

The following example shows policy statistics being displayed by using the **show policy-map** command:

```
switch(config-if)# show policy-map interface ethernet 1/1
Global statistics status :   disabled

Ethernet1/1

  Service-policy (qos) input:   qos-police
    policy statistics status:   disabled

    Class-map (qos):   qos-police (match-all)
      0 packets
      Match: dscp 10
      police cir percent 100 bc 200 ms
        conformed 0 bytes, 0 bps action: transmit
        violated 0 bytes, 0 bps action: drop
```

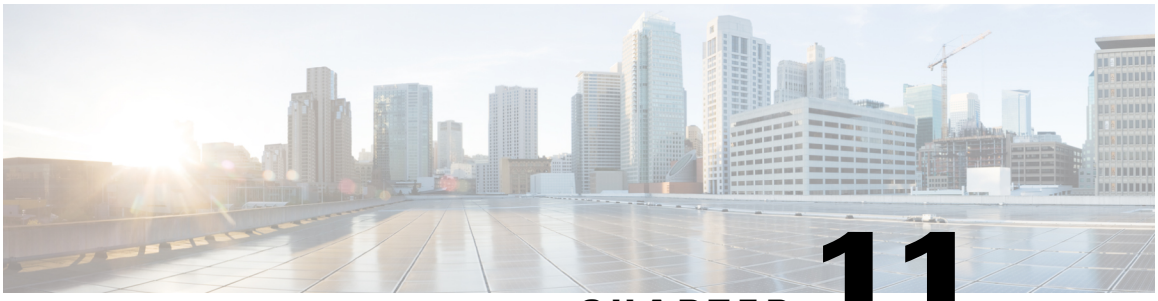

CHAPTER 11

QoS Configuration Examples

This chapter contains the following sections:

- QoS Example 1 , page 77
- QoS Example 2 , page 78
- QoS Example 3 , page 80

QoS Example 1

This example shows how to configure traffic in the entire system matching an access control list to have the frame CoS fields rewritten to the value 5.

Procedure

	Command or Action	Purpose

Step 1	Set up the ingress classification policy (the access control list was defined previously).	`(config)# class-map type qos cmap-qos-acl`
		`(config-cmap-qos)# match access-group ACL-CoS`
		`(config-cmap-qos)# exit`
		`(config)# policy-map type qos pmap-qos-acl`
		`(config-pmap-qos)# class cmap-qos-acl`
		`(config-pmap-c-qos)# set qos-group 4`
		`(config-pmap-c-qos)# exit`
		`(config-pmap-qos)# exit`

Step 2	Attach the classification policy to the system.	`(config)# system qos`
		`(config-sys-qos)# service-policy type qos input pmap-qos-acl`
		`(config-sys-qos)# exit`

Step 3	Set up the system class allocation and rewrite policy. Allocate the system class for qos-group 4 and define the rewrite action.	`(config)# class-map type network-qos cmap-nq-acl`
		`(config-cmap-nq)# match qos-group 4`
		`(config-cmap-nq)# exit`
		`(config)# policy-map type network-qos pmap-nq-acl`
		`(config-pmap-nq)# class type network-qos cmap-nq-acl`
		`(config-pmap-c-nq)# set cos 5`
		`(config-pmap-c-nq)# exit`
		`(config-pmap-nq)# exit`

Step 4	Attach the allocation and rewrite policy to the system.	`(config)# system qos`
		`(config-sys-qos)# service-policy type network-qos pmap-nq-acl`
		`(config-sys-qos)# exit`

QoS Example 2

This example shows how to use an access control list to apply 50% bandwidth to traffic on Ethernet interface 1/3 that matches traffic on Ethernet interface 1/1.

Procedure

	Command or Action	Purpose

Step 1	Set up the ingress classification policy.	`(config)# class-map type qos cmap-qos-bandwidth`
		`(config-cmap-qos)# match access-group ACL-bandwidth`
		`(config-cmap-qos)# exit`
		`(config)# policy-map type qos pmap-qos-eth1-1`
		`(config-pmap-qos)# class cmap-qos-bandwidth`
		`(config-pmap-c-qos)# set qos-group 2`
		`(config-pmap-c-qos)# exit`
		`(config-pmap-qos)# exit`

Step 2	Attach the classification policy to the interface Ethernet 1/1.	`(config)# interface ethernet 1/1`
		`(config-if)# service-policy type qos input pmap-qos-eth1-1`
		`(config-if)# exit`

Step 3	Set up the system-wide definition of the qos-group first.	`(config)# class-map type queuing cmap-que-bandwidth`
		`(config-cmap-que)# match qos-group 2`
		`(config-cmap-que)# exit`

Step 4	Set up the egress bandwidth policy.	**Note** Before you can successfully allocate bandwidth to the user-defined class cmap-que-bandwidth, you must first reduce the default bandwidth configuration on class-default and class-fcoe.
		`(config)# policy-map type queuing pmap-que-eth1-2`
		`(config-pmap-que)# class type queuing class-default`
		`(config-pmap-c-que)# bandwidth percent 10`
		`(config-pmap-c-que)# exit`
		`(config-pmap-que)# class type queuing class-fcoe`
		`(config-pmap-c-que)# bandwidth percent 40`
		`(config-pmap-c-que)# exit`
		`(config-pmap-que)# class type queuing cmap-que-bandwidth`
		`(config-pmap-c-que)# bandwidth percent 50`
		`(config-pmap-c-que)# exit`
		`(config-pmap-que)# exit`

	Command or Action	Purpose

Step 5	Attach the bandwidth policy to the egress interface.	`(config)# interface ethernet 1/3`
		`(config-if)# service-policy type queuing output pmap-que-eth1-2`
		`(config-if)# exit`

Step 6	Allocate the system class for qos-group 2.	`(config)# class-map type network-qos cmap-nq-bandwidth`
		`(config-cmap-nq)# match qos-group 2`
		`(config-cmap-nq)# exit`

Step 7	Set up the network-qos policy.	`(config)# policy-map type network-qos pmap-nq-bandwidth`
		`(config-pmap-nq)# class type network-qos cmap-nq-bandwidth`
		`(config-pmap-c-nq)# exit`
		`(config-pmap-nq)# exit`

Step 8	Attach the network-qos policy to the system.	`(config)# system qos`
		`(config-sys-qos)# service-policy type network-qos pmap-nq-bandwidth`
		`(config-sys-qos)# exit`

QoS Example 3

This example shows how to attach a 802.1p tag with a CoS value of 3 to incoming untagged packets, and force priority-flow-control negotiation on Ethernet interface 1/15.

Procedure

	Command or Action	Purpose

Step 1	Set up the ingress classification policy (the access control list was defined previously).	`(config)# interface Ethernet 1/15`
		`(config-if)# untagged cos 3`
		`(config-if)# priority-flow-control mode on`
		`(config-if)# exit`

INDEX

A

attaching 38
  system service policy 38

B

bandwidth 46
  multicast traffic 46
  unicast traffic 46

C

Cisco Nexus devices 63
  virtual output queuing limits 63
class maps 6
  configuring 6
classification 5, 6
  information about 5
  licensing requirements 6
classification configuration 15
  verifying 15
classification policies 6
  ingress 6
configuration examples 74
  Ingress Policing 74
configuring 20, 29, 31, 45, 61, 63, 64
  DSCP marking 29
  interface service policies 45
  IP precedence marking 31
  link-level flow control 64
  no-drop buffer thresholds 61
  priority flow control 63
  type network QoS policies 20
Configuring type queuing policies 23
configuring untagged CoS 44
CoS marking 32, 33
  configuring 32
  layer 3 33
CPU traffic 4
  QoS 4
creating 69, 72
  policy map using a percentage of the interface rate 72
  policy map using committed information rate 69

D

default system service policies 39
  restoring 39
DSCP classification 10
  configuring 10

E

enabling 41
  jumbo MTU 41

F

feature history 56
  VLAN QoS 56
Fibre Channel interfaces 44
  policy 44
flow control 65
  verifying 65

G

guidelines and limitations 52, 68
  ingress policing 68
  VLAN QoS 52

I

information about 5, 17, 37, 49, 67
  classification 5
  ingress policing 67
  policy types 17
  system classes 37
  VLAN QoS 49
ingress 6
  classification policies 6
interface QoS configuration 47
  verifying 47
interface QoS policies 50
  precedence of 50
interface QoS TCAM limit 53, 54
  changing 53
  configuring 53
  removing 54
IP precedence marking 31
  configuring 31

J

jumbo MTU 41
  verifying 41

L

layer 3 33
  CoS marking 33
licensing requirements 6
  classification 6

M

marking 29
  information about 29
marking configuration 34
  verifying 34
modular QoS CLI 3
MQC 3
MTU 37
multicast traffic 46
  changing bandwidth 46

O

overview 3
  quality of service 3

P

policy 44
  Fibre Channel interfaces 44
policy map configuration 27
  verifying 27
policy maps 19
  creating 19
policy types 17
  information about 17
precedence 50, 51
  interface QoS policies 50
  system QoS policies 50
  VACL and VLAN QoS policies 51
  VLAN QoS and VACL policies 51
  VLAN QoS policies 50
precedence classification 8
  configuring 8

Q

Qos 4
  CPU traffic 4
QoS 8, 10
  DSCP classification 10
    configuring 10
  precedence classification 8
    configuring 8
quality of service 3
  overview 3
Quality of Service, See QoS
queuq configuration 65
  verifying 65

R

restoring 39
  default system service policies 39

S

service policies 55
  removing from a VLAN 55
system classes 37
  information about 37
system QoS configuration 42
  verifying 42
system QoS policies 50
  precedence of 50

system service policy 38
attaching 38

T

TCAM carving 52
VLAN QoS 52
type QoS polices, configuring 22

U

unicast traffic 46, 63
changing bandwidtch 46
virtual output queuing limits 63

V

VACLs 51
precedence of 51
verifying 15, 27, 34, 42, 47, 56, 65, 74
classification configuration 15
flow control 65
Ingress Policing configuration 74
interface QoS configuration 47
marking configuration 34
policy map configuration 27
queue configuration 65
system QoS configuration 42
VLAN QoS configuration 56
virtual output queuing limits 63
unicast traffic 63
VLAN QoS 52, 56
feature history 56
guidelines and limitations 52
TCAM carving 52
VLAN QoS configuration 56
verifying 56
VLAN QoS policies 50, 51
precedence of 50, 51
VLANs 49, 55
QoS 49
removing a service policy from 55