

Installing the Node

This chapter contains the following topics:

- Installation Prerequisites, on page 1
- Compute Node Installation and Removal, on page 4

Installation Prerequisites

To install the Cisco UCS XE150c M8 Compute Node, be aware of the following prerequisites.

Note **For indoor use only.** Connect PoE ports only to PoE networks that are not routed to outside plant. Per IEC TR 62101, PoE is considered Network Environment 0; interconnected ITE circuits may therefore be considered SELV.

General Safety Warnings

Take note of the following general safety warnings.

Warning IMPORTANT SAFETY INSTRUCTIONS

Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. Read the installation instructions before using, installing, or connecting the system to the power source. Use the statement number at the beginning of each warning statement to locate its translation in the translated safety warnings for this device.

SAVE THESE INSTRUCTIONS

Note You are strongly advised to read the safety instruction before using the product.

https://www.cisco.com/web/JP/techdoc/pldoc/pldoc.html

When installing the product, use the provided or designated connection cables/power cables/AC adapters.

〈製品使用における安全上の注意〉

www.cisco.com/web/JP/techdoc/index.html

接続ケーブル、電源コードセット、**AC**アダプタ、バッテリなどの部品は、必ず添付品または指定品をご使用ください。添付品・指定品以外をご使用になると故障や動作不良、火災の原因となります。また、電源コードセットは弊社が指定する製品以外の電気機器には使用できないためご注意ください。

Warning To reduce risk of electric shock or fire, installation of the equipment must comply with local and national electrical codes.

Note An instructed person is someone who has been instructed and trained by a skilled person and takes the necessary precautions when working with equipment.

A skilled person or qualified personnel is someone who has training or experience in the equipment technology and understands potential hazards when working with equipment.

Warning Ultimate disposal of this product should be handled according to all national laws and regulations.

Equipment Installation to Power Warnings

Take note of the following power safety warnings.

Warning To reduce risk of electric shock or personal injury, disconnect DC power before removing or replacing components or performing upgrades.

Warning This unit is intended for installation in restricted access areas. Only skilled, instructed, or qualified personnel can access a restricted access area.

Warning To reduce the risk of electric shock and fire, a readily accessible disconnect device must be incorporated in the fixed wiring.

Warning To reduce risk of electric shock, when installing or replacing the unit, the ground connection must always be made first and disconnected last.

If your unit has modules, secure them with the provided screws.

Ground Connection Warnings

Take note of the following ground connection warnings.

Warning This equipment must be grounded. To reduce the risk of electric shock, never defeat the ground conductor or operate the equipment in the absence of a suitably installed ground conductor. Contact the appropriate electrical inspection authority or an electrician if you are uncertain that suitable grounding is available.

Warning In the Scandinavian countries (Denmark, Finland, Iceland, Norway, and Sweden) the appliance must be connected to a grounded outlet.

Optical Connection Warnings

Take note of the following optical connection warnings.

Warning Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments.

Warning Invisible laser radiation is present. Do not expose to users of telescopic optics. This applies to Class 1/1M laser products.



Warning **Laser Safety:** Ensure all unused ports are capped to maintain eye safety and prevent signal contamination.

General Node and Component Replacement Warnings

Take note of the following component replacement warning.



Warning **Electrostatic Discharge (ESD):** The Cisco UCS XE150c M8 Compute Node contains high-density integrated circuits. Always utilize an ESD-preventive wrist strap during handling to avoid permanent hardware damage.

Additional Information

The Cisco UCS XE150c M8 Compute Node installs into the Cisco UCS XE9305 Chassis. Installation information for the compute node is contained in this installation and service guide. However, to get complete information about the compute node and the chassis that contains it, consult the following documents.

Document	Topics	Link
Cisco Unified Edge XE9305 Chassis Installation and Service Guide	• Safety Warnings • General Installation Guidelines and Restrictions	Cisco Unified Edge XE9305 Chassis Installation and Service Guide
Regulatory Compliance and Safety Information (downloadable PDF)	--	Regulatory Compliance and Safety Information – Cisco UCS XE9305 Modular System

Compute Node Installation and Removal

Installing a Compute Node

Use this procedure to install a Cisco UCS XE150c M8 Compute Node into the chassis.


Before you begin

The Cisco UCS XE150c M8 Compute Node installs into a node slot on the front of the Cisco UCS XE9305 Chassis.

The compute node features a captive thumbscrew that you can manipulate with your fingers or a #2 Phillips screwdriver. If you want to use the screwdriver, gather it now.

Procedure

Step 1 Release the thumb screw from the compute node sled.

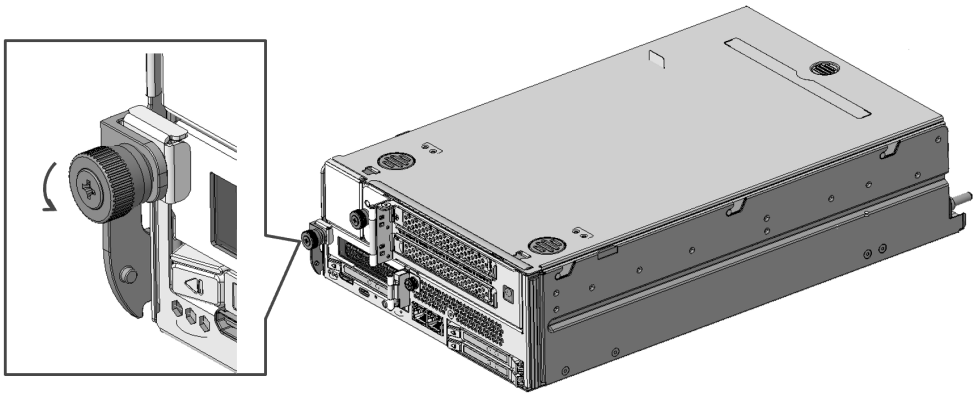


Prepare the compute node for installation:

- If needed, remove any blank (filler panel) that covers the chassis slot, or remove any existing node that is in the slot.
- Ensure the compute node's ejector lever is in the open position (approximately a 45-degree angle).
- Align the compute node with the chassis slot, ensuring the top cover is facing up.

The ejector lever must not be flush with the faceplate prior to inserting the compute node into the chassis.


Step 2 Support the underside of the compute node and slide it into the chassis until it is seated fully.

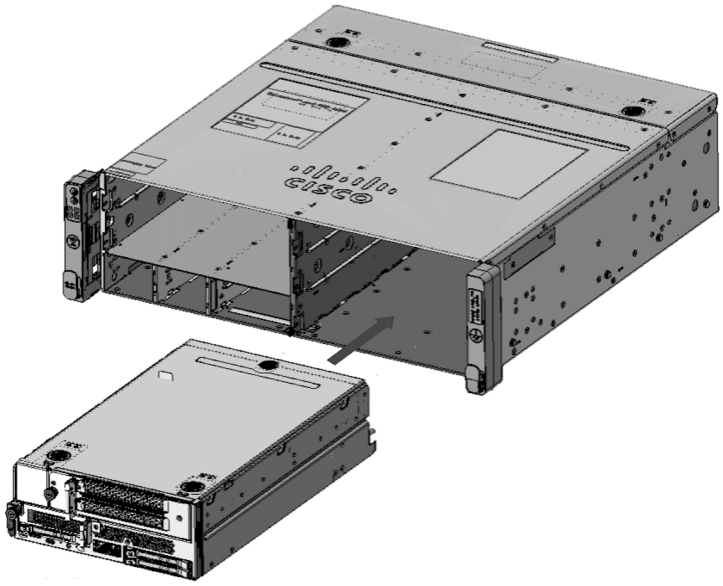

Expect some resistance as the rear connector engages with the chassis socket.

Step 3 Fasten the thumb screw to secure the compute node into the chassis.

Gently swing the ejector lever in an upward arc (to the closed position) until it clicks. Start threading the captive thumbscrew by hand, then use the screwdriver to tighten it to between 4.2 in-lbs and 5.9 in-lbs (5.1 kg-cm to 6.9 kg-cm).

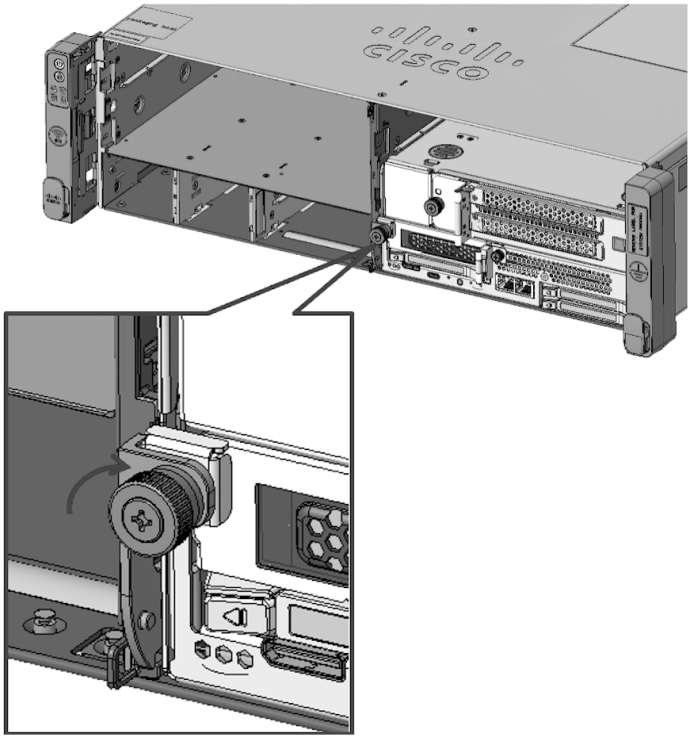

Note Once installed, the compute node will automatically power on after connecting to the power backplane.

Step 4 Complete post-installation tasks:

a) If needed, use a Cisco management tool, such as Cisco IOS, to configure the compute node.

b) Connect, or reconnect, network and management cables as needed.

Note For PoE connections, connect only to PoE networks that are not routed to outside plant.

Removing a Compute Node

Use this procedure to remove a Cisco UCS XE150c M8 Compute Node from the chassis.

Caution Do not operate the Cisco UCS XE9305 Chassis with any uncovered or open node slots. If you remove a compute node, you must insert another node or a node blank.

Before you begin

The Cisco UCS XE150c M8 Compute Node is located in one of the chassis slots on the front of the Cisco UCS XE9305 Chassis.

The compute node features a captive thumbscrew that you can manipulate with your fingers or a #2 Phillips screwdriver. If you want to use the screwdriver, gather it now.

Caution When handling the compute node, make sure to follow all appropriate ESD safety guidelines, such as wearing an ESD wristband and using grounded or rubberized mats.


Procedure

Step 1 Using a Cisco management tool, such as Cisco IOS, gracefully power down the compute node.

Step 2 Disconnect any cables from the compute node.


If you will be reinserting a compute node, you can leave the other end of the cables attached to the peer devices.

Step 3 Using your fingers or a #2 Phillips screwdriver, loosen the captive thumbscrew on the front panel of the compute node.

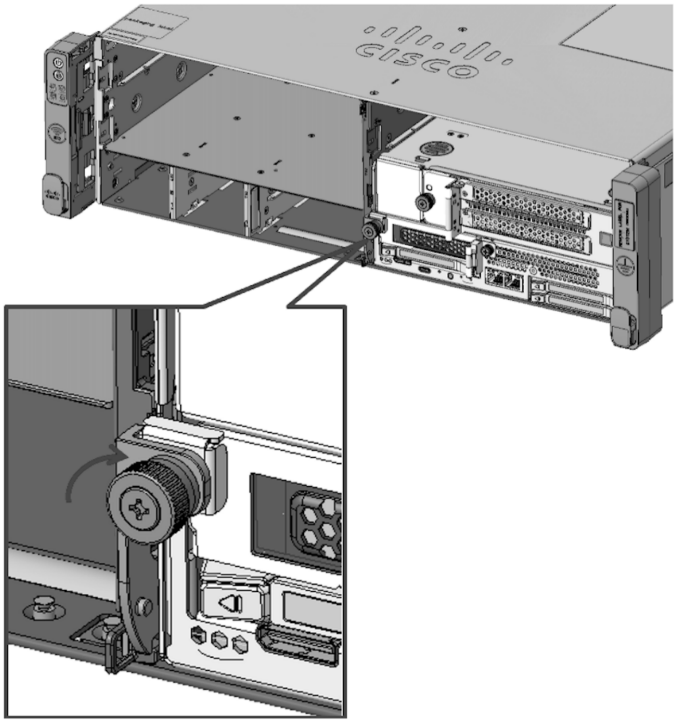

Step 4 Pull the release handle in a downward arc (to the open position) to disengage the node from the backplane, then slide the compute node out of the chassis.

Note Make sure to support the underside of the compute node while you are sliding it out of the chassis.

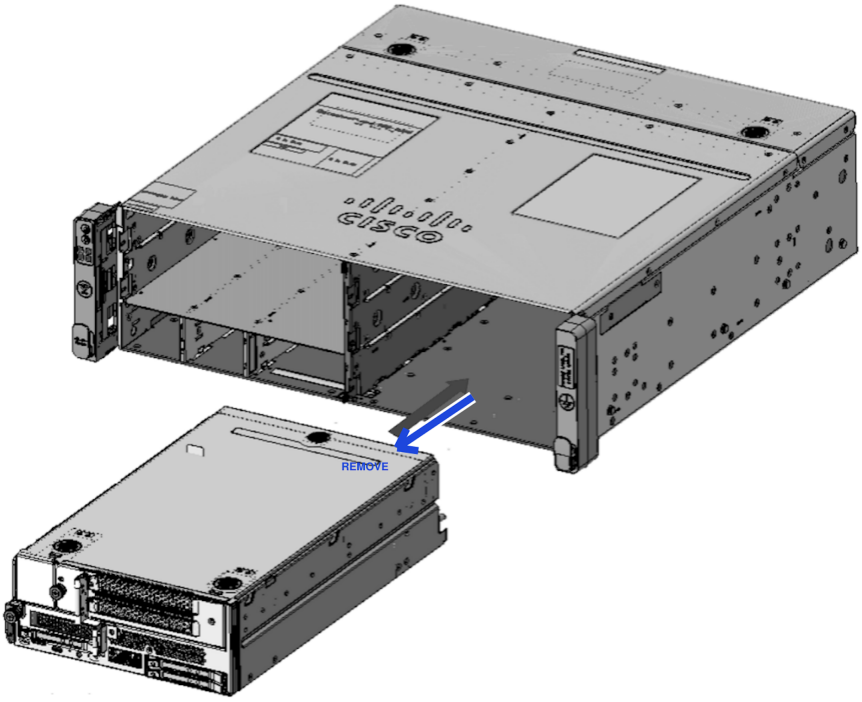

What to do next

Choose the appropriate option:

- If you are reseating the same compute node, or installing a new compute node, go to Installing a Compute Node.
- If you will be servicing the compute node, go to Servicing the Node.
- If you will not be reinstalling any node, cover the empty chassis slot with a blank filler panel.