

# Procedimiento para recuperación de contraseña para el router de los Servicios integrados del Cisco 2900

## Contenido

[Introducción](#)

[prerrequisitos](#)

[Requisitos](#)

[Componentes Utilizados](#)

[Productos Relacionados](#)

[Convenciones](#)

[Procedimiento Paso a Paso](#)

[Ejemplo de Procedimiento de Recuperación de Contraseña](#)

[Información Relacionada](#)

## [Introducción](#)

Este documento describe cómo recuperar la **contraseña de activación** y las **contraseñas de activación secretas**. Estas contraseñas protegen el acceso a los modos de configuración y de EXEC privilegiado. La **contraseña** de activación puede recuperarse, pero la **contraseña de activación secreta** está cifrada y debe ser reemplazada por una nueva contraseña. Utiliza el procedimiento descrito en este documento para substituir la **contraseña de activación secreta**.

## [prerrequisitos](#)

### [Requisitos](#)

No hay requisitos específicos para este documento.

### [Componentes Utilizados](#)

La información que contiene este documento se basa en las siguientes versiones de hardware:

- Router de los Servicios integrados de las Cisco 2900 Series (ISR)

La información que contiene este documento se creó a partir de los dispositivos en un ambiente de laboratorio específico. Todos los dispositivos que se utilizan en este documento se pusieron en funcionamiento con una configuración verificada (predeterminada). Si la red está funcionando, asegúrese de haber comprendido el impacto que puede tener cualquier comando.

### [Productos Relacionados](#)

Consulte [Procedimientos de Recuperación de Contraseña](#) para obtener información sobre cómo recuperar las contraseñas para los productos relacionados.

## [Convenciones](#)


Consulte [Convenciones de Consejos TécnicosCisco](#) para obtener más información sobre las convenciones del documento.

## [Procedimiento Paso a Paso](#)

Realice estos pasos para recuperar su contraseña:

1. Apague o apague al router.
2. Quite el Flash compacta que está en la parte posterior del router. Esta imagen muestra la parte posterior del 2951

Router:

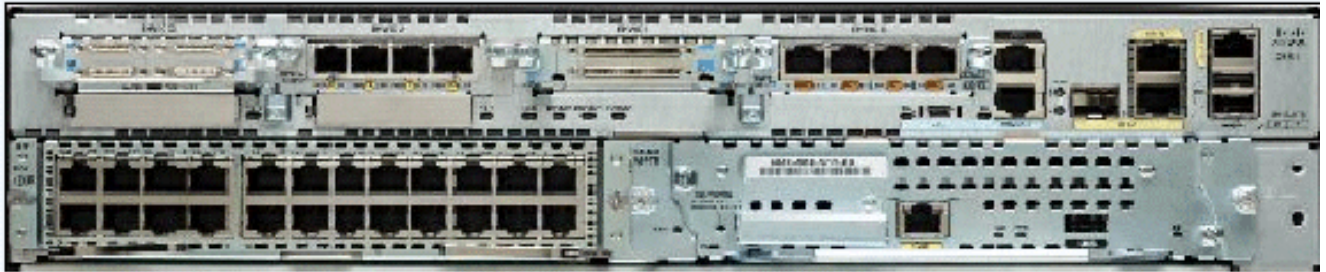

Para más información, refiera a los [slots y a los conectores del panel posterior en los Cisco 2921 y 2951 Router](#).

3. Switch en el router.
4. Una vez que el router está en el modo ROMMON, reinserte el Flash compacta.
5. [Escriba confreg 0x2142 en el prompt rommon 1> para iniciar desde la memoria Flash](#). Este paso omite la configuración de inicio donde se guardan las contraseñas.
6. Escriba **reset** cuando aparezca la indicación rommon 2>. El router se reinicia, pero ignora la configuración guardada.
7. Escriba **no** después de cada pregunta sobre la configuración, o presione **Ctrl-C** para omitir el procedimiento de configuración inicial.
8. Escriba **enable** cuando aparezca la indicación Router>. Usted se encuentra en modo enable y debe ver el prompt del Router#.
9. Escriba **configure memory** o **copy startup-config running-config** para copiar la memoria RAM no volátil (NVRAM) en la memoria. **Advertencia:** No ingrese los lanzamiento-**config de los ejecutar-config de la copia** ni **escriba**. Estos comandos borran su configuración inicial.
10. Publique el [comando show running-config](#). El comando show running-config muestra la configuración del router. En esta configuración, el **comando shutdown** aparece debajo de todas las interfaces, lo que indica que todas las interfaces están apagadas actualmente. Además, las contraseñas (contraseña habilitada, secreto del permiso, vty, y contraseñas de consola) son en cualquier un formato encriptado o no encriptado. Puede reutilizar las contraseñas no cifradas. Debe cambiar las contraseñas cifradas por una nueva contraseña.
11. Escriba **configure terminal**. Aparece el prompt hostname(config)# .
12. Escriba **enable secret <password>** para cambiar la contraseña secreta de habilitación. Por ejemplo:

```
hostname(config)#enable secret cisco
```

13. Emita el comando **no shutdown** en cada interfaz que utilice. [Si emite un comando show ip interface brief, todas las interfaces que desea utilizar deben mostrar up up.](#)
14. [Escriba config-register <configuration register setting>](#). Donde está el valor el `<configuration_register_setting>` usted registró en el paso 2 o `0x2102`. Por ejemplo:  
`hostname(config)#config-register 0x2102`
15. Presione **Ctrl-z** o **end** para salir del modo de configuración. Aparece el prompt `hostname#`.
16. [Escriba write memory o copy running-config startup-config para efectuar los cambios.](#)

## Ejemplo de Procedimiento de Recuperación de Contraseña

Esta sección proporciona un ejemplo del procedimiento de recuperación de contraseña. Este ejemplo fue creado con las Cisco 2900 Series ISR. Incluso si usted no utiliza las Cisco 2900 Series ISR, esta salida proporciona un ejemplo de lo que usted debe experimentar en su producto.

```
Router>
enable
Password:
Password:
Password:
% Bad secrets
```

```
Router>
show version
Cisco IOS Software, C2900 Software (C2900-UNIVERSALK9-M), Version 15.0(1)M1,
  RELEASE SOFTWARE (fc1)
Technical Support: http://www.cisco.com/techsupport
Copyright (c) 1986-2009 by Cisco Systems, Inc.
Compiled Wed 02-Dec-09 15:23 by prod_rel_team
```

```
ROM: System Bootstrap, Version 15.0(1r)M1, RELEASE SOFTWARE (fc1)

c2921-CCP-1-xfr uptime is 2 weeks, 22 hours, 15 minutes
System returned to ROM by reload at 06:06:52 PCTime Mon Apr 2 1900
System restarted at 06:08:03 PCTime Mon Apr 2 1900
System image file is "flash:c2900-universalk9-mz.SPA.150-1.M1.bin"
Last reload reason: Reload Command
```

This product contains cryptographic features and is subject to United States and local country laws governing import, export, transfer and use. Delivery of Cisco cryptographic products does not imply third-party authority to import, export, distribute or use encryption. Importers, exporters, distributors and users are responsible for compliance with U.S. and local country laws. By using this product you agree to comply with applicable laws and regulations. If you are unable to comply with U.S. and local laws, return this product immediately.

A summary of U.S. laws governing Cisco cryptographic products may be found at:  
<http://www.cisco.com/wvl/export/crypto/tool/stqrg.html>

If you require further assistance please contact us by sending email to [export@cisco.com](mailto:export@cisco.com).

Cisco CISC02921/K9 (revision 1.0) with 475136K/49152K bytes of memory.

```

Processor board ID FHH1230P04Y
1 DSL controller
3 Gigabit Ethernet interfaces
9 terminal lines
1 Virtual Private Network (VPN) Module
1 Cable Modem interface
1 cisco Integrated Service Engine-2(s)
  Cisco Foundation 2.2.1 in slot 1
DRAM configuration is 64 bits wide with parity enabled.
255K bytes of non-volatile configuration memory.
248472K bytes of ATA System CompactFlash 0 (Read/Write)
62720K bytes of ATA CompactFlash 1 (Read/Write)

Technology Package License Information for Module:'c2900'

```

```

-----
Technology      Technology-package      Technology-package
                Current        Type                Next reboot
-----
ipbase          ipbasek9              Permanent          ipbasek9
security        securityk9            Permanent          securityk9
uc              uck9                  Permanent          uck9
data            datak9                Permanent          datak9

```

**Configuration register is 0x2102**

Router>

*!--- Execute Steps 1 through 4 from Step-by-Step Procedure.* ! rommon 1 > **confreg 0x2142**

You must reset or power cycle for new config to take effect

rommon 2 > **reset**

```

System Bootstrap, Version 15.0(1r)M1, RELEASE SOFTWARE (fc1)
Copyright (c) 2009 by cisco Systems, Inc.
TAC:Home:SW:IOS:Specials for info
C2900 platform with 524288 Kbytes of main memory

```

program load complete, entry point: 0x80008000, size: 0x6fdb4c

```

Self decompressing the image : #####
#####
#####
#####
##### [OK]

```

Restricted Rights Legend

Use, duplication, or disclosure by the Government is subject to restrictions as set forth in subparagraph (c) of the Commercial Computer Software - Restricted Rights clause at FAR sec. 52.227-19 and subparagraph (c) (1) (ii) of the Rights in Technical Data and Computer Software clause at DFARS sec. 252.227-7013.

```

cisco Systems, Inc.
170 West Tasman Drive
San Jose, California 95134-1706

```

Cisco IOS Software, C2900 Software (C2900-UNIVERSALK9-M), Version 15.0(1)M1,  
RELEASE SOFTWARE (fcl)  
Technical Support: <http://www.cisco.com/techsupport>  
Copyright (c) 1986-2009 by Cisco Systems, Inc.  
Compiled Wed 02-Dec-09 15:23 by prod\_rel\_team

Cisco CISCO2921/K9 (revision 1.0) with 475136K/49152K bytes of memory.  
Processor board ID FHH1230P04Y  
1 DSL controller  
3 Gigabit Ethernet interfaces  
9 terminal lines  
1 Virtual Private Network (VPN) Module  
1 Cable Modem interface  
1 cisco Integrated Service Engine-2(s)  
Cisco Foundation 2.2.1 in slot 1  
DRAM configuration is 64 bits wide with parity enabled.  
255K bytes of non-volatile configuration memory.  
248472K bytes of ATA System CompactFlash 0 (Read/Write)  
62720K bytes of ATA CompactFlash 1 (Read/Write)

--- System Configuration Dialog ---

Would you like to enter the initial configuration dialog? [yes/no]: n

Press RETURN to get started!

00:00:19: %LINK-3-UPDOWN: Interface BRI0/0, changed state to up  
00:00:19: %LINK-3-UPDOWN: Interface Ethernet0/0, changed state to up  
00:00:19: %LINK-3-UPDOWN: Interface Ethernet0/1, changed state to up  
00:00:19: %LINK-3-UPDOWN: Interface Serial0/0, changed state to down  
00:00:19: %LINK-3-UPDOWN: Interface Serial0/1, changed state to down  
00:00:20: %LINEPROTO-5-UPDOWN: Line protocol on Interface BRI0/0,  
changed state to down  
00:00:20: %LINEPROTO-5-UPDOWN: Line protocol on Interface Ethernet0/0,  
changed state to up  
Router>  
00:00:20: %LINEPROTO-5-UPDOWN: Line protocol on Interface Ethernet0/1,  
changed state to up  
00:00:20: %LINEPROTO-5-UPDOWN: Line protocol on Interface Serial0/0,  
changed state to down  
00:00:20: %LINEPROTO-5-UPDOWN: Line protocol on Interface Serial0/1,  
changed state to down  
00:00:50: %SYS-5-RESTART: System restarted --  
Cisco IOS Software, C2900 Software (C2900-UNIVERSALK9-M), Version 15.0(1)M1,  
RELEASE SOFTWARE (fcl)  
Technical Support: <http://www.cisco.com/techsupport>  
Copyright (c) 1986-2009 by Cisco Systems, Inc.  
Compiled Wed 02-Dec-09 15:23 by prod\_rel\_team  
00:00:50: %LINK-5-CHANGED: Interface BRI0/0,  
changed state to administratively down  
00:00:52: %LINK-5-CHANGED: Interface Ethernet0/0,  
changed state to administratively down  
00:00:52: %LINK-5-CHANGED: Interface Serial0/0,  
changed state to administratively down  
00:00:52: %LINK-5-CHANGED: Interface Ethernet0/1,  
changed state to administratively down  
00:00:52: %LINK-5-CHANGED: Interface Serial0/1,  
changed state to administratively down  
00:00:53: %LINEPROTO-5-UPDOWN: Line protocol on Interface Ethernet0/0,  
changed state to down  
00:00:53: %LINEPROTO-5-UPDOWN: Line protocol on Interface Ethernet0/1,  
changed state to down  
Router>

```

Router>enable
Router#copy startup-config running-config
Destination filename [running-config]?
1324 bytes copied in 2.35 secs (662 bytes/sec)
Router#
00:01:24: %LINEPROTO-5-UPDOWN: Line protocol on Interface BRI0/0:1,
changed state to down
00:01:24: %LINEPROTO-5-UPDOWN: Line protocol on Interface BRI0/0:2,
changed state to down
Router#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)#enable secret < password >
Router(config)#^Z
00:01:54: %SYS-5-CONFIG_I: Configured from console by console
Router#show ip interface brief

Interface  IP-Address      OK?  Method      Status          Protocol
Ethernet0/0 10.200.40.37    YES  TFTP        administratively down  down
Serial0/0    unassigned      YES  TFTP        administratively down  down
BRI0/0       193.251.121.157 YES  unset       administratively down  down
BRI0/0:1     unassigned      YES  unset       administratively down  down
BRI0/0:2     unassigned      YES  unset       administratively down  down
Ethernet0/1  unassigned      YES  TFTP        administratively down  down
Serial0/1    unassigned      YES  TFTP        administratively down  down
Loopback0    193.251.121.157 YES  TFTP        up                   up
Router#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)#interface Ethernet0/0
Router(config-if)#no shutdown
Router(config-if)#
00:02:14: %LINK-3-UPDOWN: Interface Ethernet0/0, changed state to up
00:02:15: %LINEPROTO-5-UPDOWN: Line protocol on Interface Ethernet0/0,
changed state to up
Router(config-if)#interface BRI0/0
Router(config-if)#no shutdown
Router(config-if)#
00:02:26: %LINK-3-UPDOWN: Interface BRI0/0:1, changed state to down
00:02:26: %LINK-3-UPDOWN: Interface BRI0/0:2, changed state to down
00:02:26: %LINK-3-UPDOWN: Interface BRI0/0, changed state to up
00:02:115964116991: %ISDN-6-LAYER2UP: Layer 2 for Interface BR0/0,
TEI 68 changed to up
Router(config-if)#^Z
Router#
00:02:35: %SYS-5-CONFIG_I: Configured from console by console
Router#copy running-config startup-config
Destination filename [startup-config]?
Building configuration...
[OK]
Router#show version
Cisco IOS Software, C2900 Software (C2900-UNIVERSALK9-M), Version 15.0(1)M1,
  RELEASE SOFTWARE (fc1)
Technical Support: http://www.cisco.com/techsupport
Copyright (c) 1986-2009 by Cisco Systems, Inc.
Compiled Wed 02-Dec-09 15:23 by prod_rel_team

ROM: System Bootstrap, Version 15.0(1r)M1, RELEASE SOFTWARE (fc1)

c2921-CCP-1-xfr uptime is 2 weeks, 22 hours, 15 minutes
System returned to ROM by reload at 06:06:52 PCTime Mon Apr 2 1900
System restarted at 06:08:03 PCTime Mon Apr 2 1900
System image file is "flash:c2900-universalk9-mz.SPA.150-1.M1.bin"
Last reload reason: Reload Command

Cisco CISCO2921/K9 (revision 1.0) with 475136K/49152K bytes of memory.

```

```
Processor board ID FHH1230P04Y
1 DSL controller
3 Gigabit Ethernet interfaces
9 terminal lines
1 Virtual Private Network (VPN) Module
1 Cable Modem interface
1 cisco Integrated Service Engine-2(s)
  Cisco Foundation 2.2.1 in slot 1
DRAM configuration is 64 bits wide with parity enabled.
255K bytes of non-volatile configuration memory.
248472K bytes of ATA System CompactFlash 0 (Read/Write)
62720K bytes of ATA CompactFlash 1 (Read/Write)
```

```
Configuration register is 0x2102
```

```
Router#configure terminal
```

```
Enter configuration commands, one per line. End with CNTL/Z.
```

```
Router(config)#config-register 0x2102
```

```
Router(config)#^Z
```

```
00:03:20: %SYS-5-CONFIG_I: Configured from console by console
```

```
Router#show version
```

```
Cisco IOS Software, C2900 Software (C2900-UNIVERSALK9-M), Version 15.0(1)M1,
  RELEASE SOFTWARE (fc1)
Technical Support: http://www.cisco.com/techsupport
Copyright (c) 1986-2009 by Cisco Systems, Inc.
Compiled Wed 02-Dec-09 15:23 by prod_rel_team
```

```
ROM: System Bootstrap, Version 15.0(1r)M1, RELEASE SOFTWARE (fc1)
```

```
c2921-CCP-1-xfr uptime is 2 weeks, 22 hours, 15 minutes
System returned to ROM by reload at 06:06:52 PCTime Mon Apr 2 1900
System restarted at 06:08:03 PCTime Mon Apr 2 1900
System image file is "flash:c2900-universalk9-mz.SPA.150-1.M1.bin"
Last reload reason: Reload Command
```

```
Cisco CISCO2921/K9 (revision 1.0) with 475136K/49152K bytes of memory.
Processor board ID FHH1230P04Y
1 DSL controller
3 Gigabit Ethernet interfaces
9 terminal lines
1 Virtual Private Network (VPN) Module
1 Cable Modem interface
1 cisco Integrated Service Engine-2(s)
  Cisco Foundation 2.2.1 in slot 1
DRAM configuration is 64 bits wide with parity enabled.
255K bytes of non-volatile configuration memory.
248472K bytes of ATA System CompactFlash 0 (Read/Write)
62720K bytes of ATA CompactFlash 1 (Read/Write)
```

```
Configuration register is 0x2142 (will be 0x2102 at next reload)
```

```
Router#
```

**Note:** Para recuperar su contraseña cuando se inhabilitan las funciones de la recuperación de contraseña, refiera a [recuperar una](#) sección del [dispositivo de ningún password-recovery del servicio](#).

## [Información Relacionada](#)

- [Procedimientos para Recuperación de Contraseñas](#)

- [Guía del Cableado para Puertos Auxiliares y de la Consola](#)
- [Conexión de un Terminal al Puerto de la Consola en Switches Catalyst](#)
- [Conecte un Terminal a los Catalyst 2948G-L3, 4908G-L3, y 4840G Series Switches](#)
- [Soporte Técnico y Documentación - Cisco Systems](#)