

Configurez et dépannez le proxy de téléphone de Ligne-Side de SIP de CUBE en mode Non-sécurisé

Contenu

[Introduction](#)

[Conditions préalables](#)

[Conditions requises](#)

[Composants utilisés](#)

[Diagramme du réseau](#)

[Problèmes connus avec des déploiements de proxy de téléphone de CUBE](#)

[Configurez](#)

[Configuration commune](#)

[Configurez la version 15.3 de Cisco IOS](#)

[Configuration en cours complète pour la version 15.3 de Cisco IOS](#)

[Configurez la version 15.4 de Cisco IOS](#)

[Configuration en cours complète pour la version 15.4 de Cisco IOS](#)

[Dépannez](#)

[Notes supplémentaires en dépannage](#)

[Modifier le fichier CTL](#)

[Adresse IP 0.0.0.0](#)

[CUCM jette l'erreur 405](#)

[Cisco relatif prennent en charge des discussions de la Communauté](#)

Introduction

Ce document décrit comment configurer le Logiciel Cisco Unified Border Element (CUBE) pendant qu'un proxy de téléphone ainsi le téléphone peut s'enregistrer à Cisco Unified Communications Manager (CUCM) d'un réseau public. La transmission entre le téléphone et le CUBE est sécurisée dans ce déploiement.

Conditions préalables

Conditions requises

Cisco vous recommande de prendre connaissance des rubriques suivantes :

- Gestion de certificat sur CUCM et CUBE


Composants utilisés

- Version 15.3 ou 15.4 courante de Cisco IOS de CUBE

- CUCM
- Téléphone IP dans le réseau public

Les informations contenues dans ce document ont été créées à partir des périphériques d'un environnement de laboratoire spécifique. Tous les périphériques utilisés dans ce document ont démarré avec une configuration effacée (par défaut). Si votre réseau est opérationnel, assurez-vous que vous comprenez l'effet potentiel de toute commande.

Diagramme du réseau

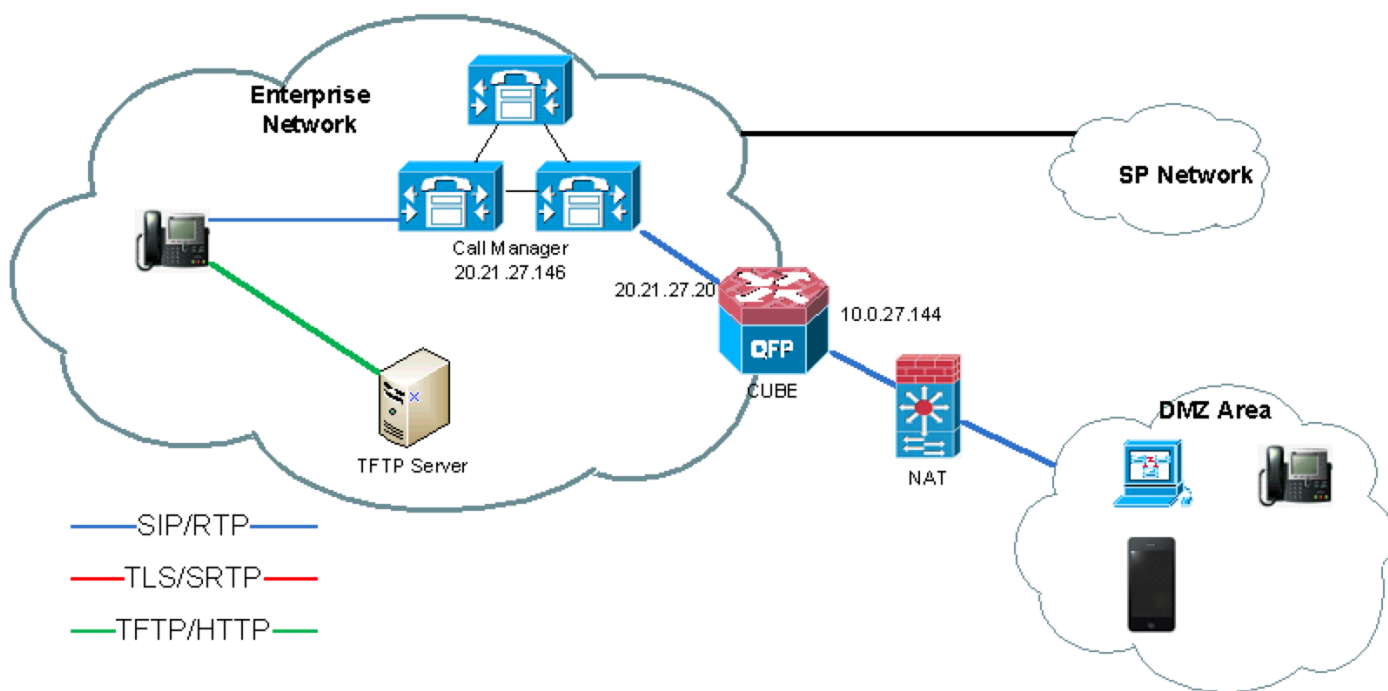

Légende :

CUBE en téléphone -----(DP1) (DP2) ----- CUCM
 ACCESS-CUBE-IP-ADDR CORE-CUBE-IP-ADDR CUCM-IP-ADDR

DP1 - Cadrans-pair 1 qui fait face à l'Internet/au réseau public

DP2 - Cadrans-pair 2 qui fait face au réseau interne, c.-à-d. CUCM

Adresses IP utilisées dans ce document :

ACCESS-CUBE-IP-ADDR - 172.18.110.120 (l'interface que les Téléphones IP distants connecteront à)

CORE-CUBE-IP-ADDR - 10.50.209.100 (les utilisations de CUBE en adresse interne de se connecter à CUCM)

CUCM-IP-ADDR - 10.50.209.215 (adresse IP du serveur CUCM)

Problèmes connus avec des déploiements de proxy de téléphone de CUBE

- [CSCup83118](#) : La composition KPML échoue pour des téléphones SIP CUCM Lineside.

Solution : Ceci est réparé dans des versions 15.3(3)M6 de Cisco IOS, 15.4(3)M1 et 15.4(3)S1.

- [CSCup85001](#) : CUCM Lineside comporte les besoins de prendre en charge des adresses Internet pour la batterie CUCM.

Solution : Ceci est réparé dans des versions 15.4(3)M1 et 15.4(3)S1 de Cisco IOS.

- [CSCun86062](#) : TS:SS:XE3.13 : Le téléphone-proxy de CUBE ne suit pas PKCS1 la signature de la forme CTL

Solution : Ceci est réparé dans des versions 15.3(3)M4 de Cisco IOS, 15.3(3)S4 et 15.4(3)M1.

Remarque: Certains téléphones comme les téléphones 78XX/88XX fonctionnent seulement en mode non-sécurisé (TCP seulement).

Remarque: CUCM ne peut pas avoir un joncteur réseau de SIP indiquant la noyau-adresse sur le CUBE. Des enregistrements seront rejetés avec code d'erreur 405 de CUCM, avec l'avertissement : le joncteur réseau du SIP 399 cucm9 rejette le REGISTRE.

Configurez

Remarque: La configuration diffère entre les versions 15.3 et 15.4 de Cisco IOS. Il y a les sections spécifiques pour chaque version IOS. Cependant, il y a une définition de configuration commune aussi bien pour les deux versions IOS, qui est couverte d'abord.

Configuration commune

1. Créez un certificat selfsigned sur le CUBE.

Remarque: Le proxy de téléphone de CUBE prend en charge seulement le cryptage de 1024 bits. Aucune autre taille de cryptage n'a été testée pour fonctionner.

```
!--- Generate a 1024 rsa key first, add "exportable"
crypto key generate rsa modulus 1024 label selfsign exportable !--- Configure the trustpoint
crypto pki trustpoint selfsign enrollment selfsigned subject-name CN=CUBE, O=CISCO revocation-
check none rsakeypair selfsign !--- Enroll the certificate crypto pki enroll selfsign
```

2. Importez l'identité CUCM au CUBE.

Utilisez le fichier callmanager.pem pour cette étape.

Dans CUCM, naviguez vers la **gestion de SYSTÈME D'EXPLOITATION de Cisco Unified > la Sécurité > la Gestion de Certificate**, copiez et collez le CallManager.pem au Notepad.

Sur le CUBE, ajoutez le point de confiance et importez le certificat à l'aide du terminal.

```
crypto pki trustpoint ccml
enrollment terminal
revocation-check none
```

```
crypto pki authenticate ccml
```

!--- paste the certificate download from CUCM here and say 'yes' to accept the certificate.

Configurez la version 15.3 de Cisco IOS

1. Créez le fichier CTL.

```
voice-ctl-file ctl_file
 record-entry selfsigned trustpoint selfsign
 record-entry cucm-tftp trustpoint ccml
 complete
```

2. Ajoutez la configuration de manipulation de service de cube, d'écoulement d'appel, et de message.

```
voice service voip
 no ip address trusted authenticate
 allow-connections sip to sip
 fax protocol t38 version 0 ls-redundancy 0 hs-redundancy 0 fallback none
 sip
 header-passing
 registrar server
 nat auto
 pass-thru headers unsupp
 pass-thru subscribe-notify-events all
 pass-thru content unsupp
 registration passthrough
```

```
voice class uri 1 sip
 host ipv4:[ACCESS-CUBE-IP-ADDR]
!
voice class uri 2 sip
 host ipv4:[CORE-CUBE-IP-ADDR]
!
voice class uri 3 sip
 host ipv4:[CUCM-IP-ADDR]
!
voice class sip-profiles 11
 request INVITE peer-header sip contact copy ">(;.*)" u01
 request INVITE peer-header sip SIP-Req-URI copy "sip:([^\s]*@)" u02
 response 200 peer-header sip contact copy ">(;.*)" u03
 request CANCEL peer-header sip SIP-Req-URI copy "sip:([^\s]*@)" u04
 request INVITE sip-header Cisco-Guid remove
 request INVITE sip-header Contact modify "(.*)" "\1\u01"
 request INVITE sip-header SIP-Req-URI modify "(.*)" "INVITE sip:\u02[CUCM-IP-ADDR] SIP/2.0"
 response 200 sip-header Contact modify "(.*)" "\1\u03"
 request CANCEL sip-header SIP-Req-URI modify "(.*)" "CANCEL sip:\u04[CUCM-IP-ADDR] SIP/2.0"
!
voice class sip-profiles 10
 request INVITE peer-header sip contact copy ">(;.*)" u01
 request REGISTER peer-header sip contact copy ">(;.*)" u02
 request INVITE sip-header Cisco-Guid remove
 request INVITE sip-header Contact modify "(.*)" "\1\u01"
 request REGISTER sip-header Contact modify "(.*)" "\1\u02"
!
!
voice class sip-hdr-passthru-list 10
 passthru-hdr Remote-Party-ID
 passthru-hdr Call-Info
```

```

passthru-hdr Content-ID
passthru-hdr Allow-Events
passthru-hdr supported
passthru-hdr require
passthru-hdr Referred-By
!
voice class sip-copylist 10
sip-header SIP-Req-URI
sip-header contact
!
voice class sip-copylist 11
sip-header contact

sip-ua
timers connection aging 60
registrar 1 ipv4:14.50.209.215 expires 3600 refresh-ratio 100 tcp

```

3. Créez le proxy de téléphone.

```

voice-phone-proxy phone_proxy
tftp-server address ipv4 [CUCM-IP-ADDR] local-addr ipv4 [CORE-CUBE-IP-ADDR] acc-addr ipv4
[ACCESS-CUBE-IP-ADDR]
ctl-file ctl_file
service-map server-addr ipv4 [CUCM-IP-ADDR] port 8443 acc-addr ipv4 [ACCESS-CUBE-IP-ADDR] port
8443
service-map server-addr ipv4 [CUCM-IP-ADDR] port 8080 acc-addr ipv4 [ACCESS-CUBE-IP-ADDR] port
8080
service-map server-addr ipv4 [CUCM-IP-ADDR] port 3804 acc-addr ipv4 [ACCESS-CUBE-IP-ADDR] port
3804
complete
voice-phone-proxy tftp-address ipv4 [CORE-CUBE-IP-ADDR]
port-range 40000 50000
voice-phone-proxy tftp-address ipv4 [ACCESS-CUBE-IP-ADDR]
port-range 40000 50000
voice-phone-proxy file-buffer size 60

```

4. Créez Access et creusez les dialpeers.

```

dial-peer voice 1 voip
phone-proxy phone_proxy signal-addr ipv4 [ACCESS-CUBE-IP-ADDR] cucm ipv4 [CUCM-IP-ADDR]
description *** Access Dialpeer Facing Outside ***
session protocol sipv2
session target registrar
session transport tcp
destination uri 2
incoming uri request 1
voice-class sip call-route url
voice-class sip profiles 10
voice-class sip registration passthrough registrar-index 1
voice-class sip pass-thru headers 10
voice-class sip copy-list 10
dtmf-relay rtp-nte
codec transparent
!
dial-peer voice 2 voip
description *** Core Dialpeer Facing CUCM ***
session protocol sipv2
session target ipv4:[CUCM-IP-ADDR]
session transport tcp
destination uri 1
incoming uri via 3
voice-class sip call-route url
voice-class sip profiles 11
voice-class sip pass-thru headers 10
voice-class sip copy-list 11

```

```
dtmf-relay rtp-nte
codec transparent
!
```

Configuration en cours complète pour la version 15.3 de Cisco IOS

```
crypto pki trustpoint selfsign
enrollment selfsigned
subject-name CN=CUBE, O=CISCO
revocation-check none
rsakeypair selfsign
!
```

```
crypto pki trustpoint ccml
enrollment terminal
revocation-check none
```

```
crypto pki certificate chain selfsign
certificate self-signed 01
[Certificate data omitted]
```

```
crypto pki certificate chain ccml
certificate ca 55C2FCBFBAC552B7C6CED497D4AD33F8
[Certificate data omitted]
```

```
voice service voip
no ip address trusted authenticate
allow-connections sip to sip
fax protocol t38 version 0 ls-redundancy 0 hs-redundancy 0 fallback none
sip
header-passing
registrar server
nat auto
pass-thru headers unsupp
pass-thru subscribe-notify-events all
pass-thru content unsupp
registration passthrough
```

```
!
!
```

```
voice class uri 1 sip
host ipv4:172.18.110.120
```

```
!
```

```
voice class uri 2 sip
host ipv4:10.50.209.100
```

```
!
```

```
voice class uri 3 sip
host ipv4:10.50.209.215
```

```
!
```

```
voice class sip-profiles 11
request INVITE peer-header sip contact copy ">(;.*)" u01
request INVITE peer-header sip SIP-Req-URI copy "sip:([^\s]*@)" u02
response 200 peer-header sip contact copy ">(;.*)" u03
request CANCEL peer-header sip SIP-Req-URI copy "sip:([^\s]*@)" u04
request INVITE sip-header Cisco-Guid remove
request INVITE sip-header Contact modify "(.*)" "\1\u01"
request INVITE sip-header SIP-Req-URI modify ".*" "INVITE sip:\u0210.50.209.215 SIP/2.0"
response 200 sip-header Contact modify "(.*)" "\1\u03"
request CANCEL sip-header SIP-Req-URI modify ".*" "CANCEL sip:\u0410.50.209.215 SIP/2.0"
```

```
!
```

```
voice class sip-profiles 10
request INVITE peer-header sip contact copy ">(;.*)" u01
```

```

request REGISTER peer-header sip contact copy ">(;.*)" u02
request INVITE sip-header Cisco-Guid remove
request INVITE sip-header Contact modify "(.*)" "\1\u01"
request REGISTER sip-header Contact modify "(.*)" "\1\u02"
!
!
voice class sip-hdr-passthru-list 10
passthru-hdr Remote-Party-ID
passthru-hdr Call-Info
passthru-hdr Content-ID
passthru-hdr Allow-Events
passthru-hdr supported
passthru-hdr require
passthru-hdr Referred-By
!
voice class sip-copy-list 10
sip-header SIP-Req-URI
sip-header contact
!
voice class sip-copy-list 11
sip-header contact
!
!
interface GigabitEthernet0/0
ip address 10.50.209.100 255.255.255.0
duplex auto
speed auto
!
interface GigabitEthernet0/1
ip address 172.18.110.120 255.255.255.0
duplex auto
speed auto

voice-ctl-file ctl_file
record-entry selfsigned trustpoint selfsign
record-entry cucm-tftp trustpoint cmml
complete
voice-phone-proxy phone_proxy
tftp-server address ipv4 10.50.209.215 local-addr ipv4 10.50.209.100 acc-addr ipv4
172.18.110.120
ctl-file ctl_file
service-map server-addr ipv4 10.50.209.215 port 8443 acc-addr ipv4 172.18.110.120 port 8443
service-map server-addr ipv4 10.50.209.215 port 8080 acc-addr ipv4 172.18.110.120 port 8080
service-map server-addr ipv4 10.50.209.215 port 3804 acc-addr ipv4 172.18.110.120 port 3804
complete
voice-phone-proxy tftp-address ipv4 10.50.209.100
port-range 40000 50000
voice-phone-proxy tftp-address ipv4 172.18.110.120
port-range 40000 50000
voice-phone-proxy file-buffer size 60

!
dial-peer voice 1 voip
phone-proxy phone_proxy signal-addr ipv4 172.18.110.120 cucm ipv4 10.50.209.215
description *** Access Dialpeer Facing Outside ***
session protocol sipv2
session target registrar
session transport tcp
destination uri 2
incoming uri request 1
voice-class sip call-route url
voice-class sip profiles 10
voice-class sip registration passthrough registrar-index 1

```

```

voice-class sip pass-thru headers 10
voice-class sip copy-list 10
dtmf-relay rtp-nte
codec transparent
!
dial-peer voice 2 voip
description *** Core Dialpeer Facing CUCM ***
session protocol sipv2
session target ipv4:10.50.209.215
session transport tcp
destination uri 1
incoming uri via 3
voice-class sip call-route url
voice-class sip profiles 11
voice-class sip pass-thru headers 10
voice-class sip copy-list 11
dtmf-relay rtp-nte
codec transparent
!
sip-ua
timers connection aging 60
registrar 1 ipv4:10.50.209.215 expires 3600 refresh-ratio 100 tcp

```

Configurez la version 15.4 de Cisco IOS

Remarque: La configuration est différente selon la version du système d'exploitation d'interconnexion de réseaux (IOS) s'exécutant sur le CUBE. Sur IOS 15.3, les sip-profil doivent être configurés et sur la version IOS 15.4, la commande de **cucm d'extension** doit être entrée. Cette commande établira automatiquement les sip-profil pour le CUBE sans les avoir en configuration en cours.

1. Créez le fichier CTL.

```

voice-ctl-file ctl_file
record-entry selfsigned trustpoint selfsign
record-entry cucm-tftp trustpoint cmml
complete

```

2. Ajoutez la configuration de manipulation de service de cube, d'écoulement d'appel, de dépassement d'en-tête, et de message.

```

voice service voip
no ip address trusted authenticate
allow-connections sip to sip
fax protocol t38 version 0 ls-redundancy 0 hs-redundancy 0 fallback none
sip
header-passing
registrar server
nat auto
pass-thru headers unsupp
pass-thru subscribe-notify-events all
pass-thru content unsupp
registration passthrough
extension cucm

voice class uri 1 sip
host ipv4:[ACCESS-CUBE-IP-ADDR]
!
voice class uri 2 sip

```



```

host ipv4:[CORE-CUBE-IP-ADDR]
!
voice class uri 3 sip
host ipv4:[CUCM-IP-ADDR]

sip-ua
timers connection aging 60
registrar 1 ipv4:14.50.209.215 expires 3600 refresh-ratio 100 tcp

```

3. Créez le proxy de téléphone.

```

voice-phone-proxy phone_proxy
tftp-server address ipv4 [CUCM-IP-ADDR] local-addr ipv4 [CORE-CUBE-IP-ADDR] acc-addr ipv4
[ACCESS-CUBE-IP-ADDR]
ctl-file ctl_file
service-map server-addr ipv4 [CUCM-IP-ADDR] port 8443 acc-addr ipv4 [ACCESS-CUBE-IP-ADDR] port
8443
service-map server-addr ipv4 [CUCM-IP-ADDR] port 8080 acc-addr ipv4 [ACCESS-CUBE-IP-ADDR] port
8080
service-map server-addr ipv4 [CUCM-IP-ADDR] port 3804 acc-addr ipv4 [ACCESS-CUBE-IP-ADDR] port
3804
complete
voice-phone-proxy tftp-address ipv4 [CORE-CUBE-IP-ADDR]
port-range 40000 50000
voice-phone-proxy tftp-address ipv4 [ACCESS-CUBE-IP-ADDR]
port-range 40000 50000
voice-phone-proxy file-buffer size 60

```

4. Créez Access et creusez les dialpeers.

```

dial-peer voice 1 voip
phone-proxy phone_proxy signal-addr ipv4 [ACCESS-CUBE-IP-ADDR] cucm ipv4 [CUCM-IP-ADDR]
description *** Access Dialpeer Facing Outside ***
session protocol sipv2
session target registrar
session transport tcp
destination uri 2
incoming uri request 1
voice-class sip extension cucm
voice-class sip conn-reuse
voice-class sip call-route url
voice-class sip registration passthrough registrar-index 1
dtmf-relay rtp-nte
codec transparent
!
dial-peer voice 2 voip
description *** Core Dialpeer Facing CUCM ***
session protocol sipv2
session target ipv4:[CUCM-IP-ADDR]
session transport tcp
destination uri 1
incoming uri via 3
voice-class sip call-route url
dtmf-relay rtp-nte
codec transparent

```

Configuration en cours complète pour la version 15.4 de Cisco IOS

```

crypto pki trustpoint ccml
enrollment terminal
revocation-check none
!
crypto pki trustpoint selfsignx
enrollment selfsigned

```

```
subject-name cn=3925_pod5
revocation-check none
rsakeypair selfsignx

!
crypto pki certificate chain selfsign
certificate self-signed 01
[Certificate data omitted]

crypto pki certificate chain ccml
certificate ca 55C2FCBFBAC552B7C6CED497D4AD33F8
[Certificate data omitted]

!
voice service voip
no ip address trusted authenticate
allow-connections sip to sip
fax protocol t38 version 0 ls-redundancy 0 hs-redundancy 0 fallback none
sip
session transport tcp
header-passing
registrar server
nat auto
pass-thru headers unsupp
pass-thru subscribe-notify-events all
pass-thru content unsupp
registration passthrough
extension cucm

!
!
voice class uri 1 sip
host ipv4:172.18.110.120
!
voice class uri 2 sip
host ipv4:10.50.209.100
!
voice class uri 3 sip
host ipv4:10.50.209.215
!
!
!
interface GigabitEthernet0/0
ip address 10.50.209.100 255.255.255.0
duplex auto
speed auto
!
interface GigabitEthernet0/1
ip address 172.18.110.120 255.255.255.0
duplex auto
speed auto
!
voice-ctl-file ctl_file
record-entry selfsigned trustpoint selfsignx
record-entry cucm-tftp trustpoint ccml
complete

voice-phone-proxy phone_proxy
tftp-server address ipv4 10.50.209.215 local-addr ipv4 10.50.209.100 acc-addr ipv4
172.18.110.120
ctl-file ctl_file
service-map server-addr ipv4 10.50.209.215 port 8443 acc-addr ipv4 172.18.110.120 port 8443
service-map server-addr ipv4 10.50.209.215 port 8080 acc-addr ipv4 172.18.110.120 port 8080
service-map server-addr ipv4 10.50.209.215 port 3804 acc-addr ipv4 172.18.110.120 port 3804
```

```

complete
voice-phone-proxy tftp-address ipv4 10.50.209.100
port-range 40000 50000
voice-phone-proxy tftp-address ipv4 172.18.110.120
port-range 40000 50000
voice-phone-proxy file-buffer size 60
!
dial-peer voice 1 voip
phone-proxy phone_proxy signal-addr ipv4 172.18.110.120 cucm ipv4 10.50.209.215
description *** Access Dialpeer Facing Outside ***
session protocol sipv2
session target registrar
session transport tcp
destination uri 2
incoming uri request 1
voice-class sip extension cucm
voice-class sip conn-reuse
voice-class sip call-route url
voice-class sip registration passthrough registrar-index 1
dtmf-relay rtp-nte
codec transparent
!
dial-peer voice 2 voip
description *** Core Dialpeer Facing CUCM ***
session protocol sipv2
session target ipv4:10.50.209.215
session transport tcp
destination uri 1
incoming uri via 3
voice-class sip call-route url
dtmf-relay rtp-nte
codec transparent
!
!
sip-ua
timers connection aging 60
registrar 1 ipv4:10.50.209.215 expires 3600 refresh-ratio 100 tcp

```

Dépannez

Debugs requis :

Proxy de téléphone

mettez au point le détail de téléphone-proxy de Voix
mettez au point le téléphone-proxy tout de Voix

SIP

mettez au point le message de ccsip

Commandes show :

affichez l'état de fonction émulation d'enregistrement de sip

Example of a working show passthrough command.

```
3925_pod5#show sip registration passthrough status
```

```
CallId          DirectoryNum peer          mode In-Exp          reg-I Out-Exp survival
```

```

=====
9          5554420      1          p2p  98    /120    1      120    normal
26         5554418      1          p2p  45    /120    1      120    normal
=====

```

Notes supplémentaires en dépannage

Modifier le fichier CTL

Pour apporter des modifications aux fichiers CTL, séparer/d'abord la caractéristique de proxy de téléphone.

```

dial-peer voice 1 voip
no phone-proxy phone_proxy signal-addr ipv4 172.18.110.120 cucm ipv4 10.50.209.215

voice-phone-proxy phone_proxy
no complete
no ctl-file ctl_file

voice-ctl-file ctl_file
no complete

```

Remarque: Toutes les fois que le fichier CTL est modifié, les fichiers CTL précédemment installés sur tous les téléphones doivent être supprimés.

Adresse IP 0.0.0.0

Il est possible que le proxy de téléphone mette au point l'exposition que l'adresse-réécriture ajoute 0.0.0.0. Si ceci se produit, vérifiez la batterie CUCM pour s'assurer qu'elle utilise des adresses IP au lieu des adresses Internet.

Extrait non-travaillant :

```

001952: Jul  9 14:22:05.571: PP: Complete configuration file received from Call Manager TFTP
server, beginning config file modification process.
001953: Jul  9 14:22:05.571: PP: Config Modify: rewriting addr to 10.50.209.215
001954: Jul  9 14:22:05.571: PP: Config Modify: rewriting addr to 0.0.0.0
001955: Jul  9 14:22:05.571: PP: CM Name Config Modify : detected Call Manager Name.
001956: Jul  9 14:22:05.571: PP: Config Modify: rewriting addr to 10.50.209.215
001957: Jul  9 14:22:05.571: PP: Config Modify: rewriting addr to 0.0.0.0  !--- incorrect here
001958: Jul  9 14:22:05.571: PP: CM Name Config Modify : detected Call Manager Name.
001959: Jul  9 14:22:05.571: PP: Config Modify: rewriting port 5060 to 5060
001960: Jul  9 14:22:05.571: PP: Config Modify: rewriting port 5061 to 5061
001961: Jul  9 14:22:05.571: PP: Config Modify: rewriting addr to 10.50.209.215
001962: Jul  9 14:22:05.571: PP: Config Modify: rewriting addr to 0.0.0.0  !--- incorrect here

```

Fonctionner l'extrait :

```

000144: *Jul 22 20:41:07.015: PP: Complete configuration file received from Call Manager TFTP
server, beginning config file modification process.
000145: *Jul 22 20:41:07.015: PP: Config Modify: rewriting addr to 10.50.209.215

```

000146: *Jul 22 20:41:07.015: PP: Config Modify: rewriting addr to 0.0.0.0
000147: *Jul 22 20:41:07.015: PP: CM Name Config Modify : detected Call Manager Name.
000148: *Jul 22 20:41:07.015: PP: Config Modify: rewriting addr to 10.50.209.215
000149: *Jul 22 20:41:07.015: PP: Config Modify: rewriting addr to 172.18.110.120
000150: *Jul 22 20:41:07.015: PP: CM Name Config Modify : detected Call Manager Name.
000151: *Jul 22 20:41:07.015: PP: Config Modify: rewriting port 5060 to 5060
000152: *Jul 22 20:41:07.015: PP: Config Modify: rewriting port 5061 to 5061
000153: *Jul 22 20:41:07.015: PP: Config Modify: rewriting addr to 10.50.209.215
000154: *Jul 22 20:41:07.015: PP: Config Modify: rewriting addr to 172.18.110.120
000155: *Jul 22 20:41:07.015: PP: CM Config Modify : detected Call Manager Node Name.
000156: *Jul 22 20:41:07.015: PP: Config Modify : deviceSecurityMode set to 1 (unencrypted),
modifying deviceSecurityMode to 3 (encrypted).

CUCM jette l'erreur 405

Tout en mettant au point des enregistrements de SIP, CUCM a pu rejeter l'enregistrement du téléphone avec l'erreur suivante :

```
006050: *Jul 18 17:00:34.819: //128/000000000000/SIP/Msg/ccsipDisplayMsg:
Received:
SIP/2.0 405 Method Not Allowed
Via: SIP/2.0/TCP 10.50.209.100:5060;branch=z9hG4bK3C1DDE
From: <sip:5554414@10.50.209.215>;tag=3BB270-125
To: <sip:5554414@10.50.209.215>;tag=279884435
Date: Fri, 18 Jul 2014 17:02:01 GMT
Call-ID: DE60F64D-DD311E4-809886CE-D6EFE1FB
Server: Cisco-CUCM9.1
CSeq: 2 REGISTER
Warning: 399 cucm9 "SIP trunk disallows REGISTER" !--- See this warning here
Allow: INVITE, OPTIONS, INFO, BYE, CANCEL, ACK, PRACK, UPDATE, REFER, SUBSCRIBE, NOTIFY
Content-Length: 0
```

La question est que les enregistrements essaient d'utiliser une adresse IP que CUCM a assignée à un joncteur réseau de SIP. Pour résoudre le problème supprimez le joncteur réseau de SIP dans CUCM ou changez l'adresse IP utilisée dans le routage d'appels de CUBE pour ce joncteur réseau de SIP dans CUCM.