

SPA922 のコール転送の設定

目次

概要

Q. [SPA922 を使用してコールを転送するには、どうしたらよいですか。](#)

関連情報

概要


この記事は、Cisco Small Business 製品 (以前の Linksys Business シリーズ) のセットアップ、トラブルシューティング、およびメンテナンスを支援するドキュメントの 1 つです。

Q. [SPA922 を使用してコールを転送するには、どうしたらよいですか。](#)

A.


ステップ 1 :

SPA922 の Web ベース セットアップ ページにアクセスします。LCD で IP アドレスを確認します。[Menu] ボタンをクリックし、次に 9 を押します。これにより、DHCP IP アドレスが表示されます。ブラウザを開き、[Address] バーにそのアドレスを入力します。

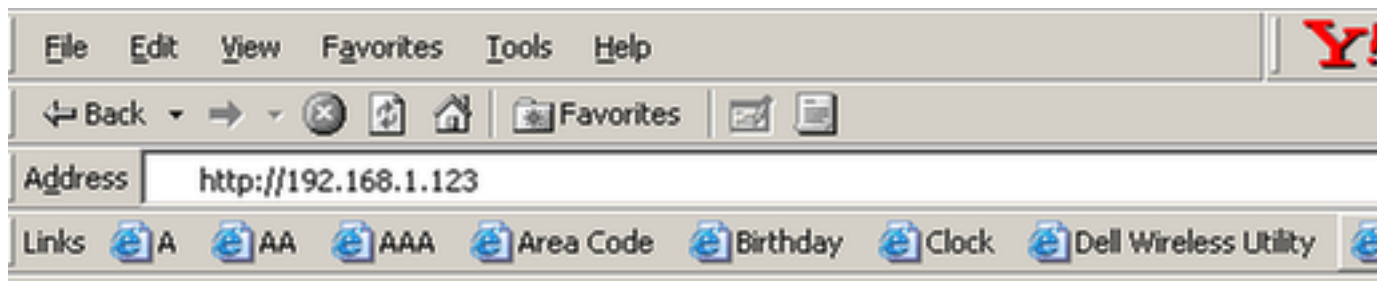

ステップ 2 :

[Admin Login] をクリックし、次に [advanced] をクリックします。

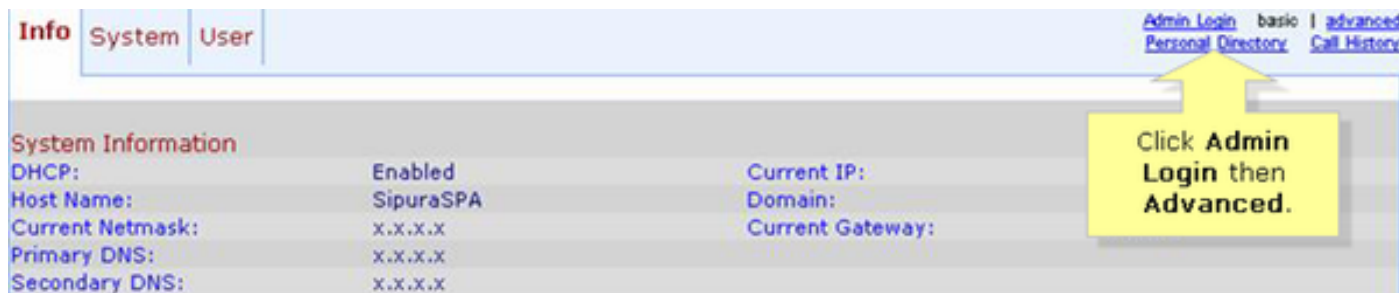

注: SPA922 ではデフォルトではユーザ名とパスワードは設定されていません。ユーザ名とパスワードの入力を求められる場合は、SPA921 がロックされています。これについて、VoIP プロバイダーに確認する必要があります。

ステップ 3 :

[User] タブをクリックし、[Call Forward] オプションの下で電話番号または内線番号を設定します。

Set the phone number.

Provisioning Regional Phone Ext 1 Ext 2 **User** [User Login](#) [basic](#) | [advanced](#)
[Personal Directory](#) [Call History](#)

Call Forward

Cfwd All Dest: Cfwd Busy Dest: 7034833923
Cfwd No Ans Dest: 7034833923 Cfwd No Ans Delay: 20

Speed Dial

Speed Dial 2: Speed Dial 3:
Speed Dial 4: Speed Dial 5:
Speed Dial 6: Speed Dial 7:
Speed Dial 8: Speed Dial 9:

Supplementary Services

CW Setting: Block CID Setting:
Block ANC Setting: DND Setting:
Secure Call Setting: Dial Assistance:
Auto Answer Page: Preferred Audio Device:
Send Audio To Speaker: Time Format:
Date Format: Miss Call Shortcut:
Accept Media Loopback Request: Media Loopback Mode:
Media Loopback Type:

Audio Volume

Ringer Volume: Sp:
Handset Volume: He:
LCD Contrast: Back Light:

Click Submit Changes when done.

Undo All Changes Submit All Changes

関連情報

- [テクニカルサポートとドキュメント - Cisco Systems](#)