

SPA922 のコール転送の設定

目次

概要

Q. [SPA922 を使用してコールを転送するには、どうしたらよいですか。](#)

関連情報

概要


この記事は、Cisco Small Business 製品 (以前の Linksys Business シリーズ) のセットアップ、トラブルシューティング、およびメンテナンスを支援するドキュメントの 1 つです。

Q. [SPA922 を使用してコールを転送するには、どうしたらよいですか。](#)

A.


ステップ 1 :

SPA922 の Web ベース セットアップ ページにアクセスします。LCD で IP アドレスを確認します。[Menu] ボタンをクリックし、次に 9 を押します。これにより、DHCP IP アドレスが表示されます。ブラウザを開き、[Address] バーにそのアドレスを入力します。

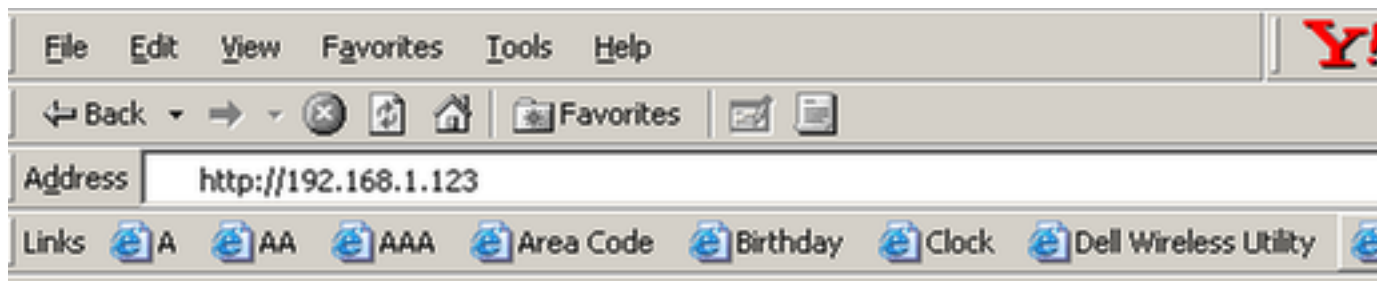

ステップ 2 :

[Admin Login] をクリックし、次に [advanced] をクリックします。

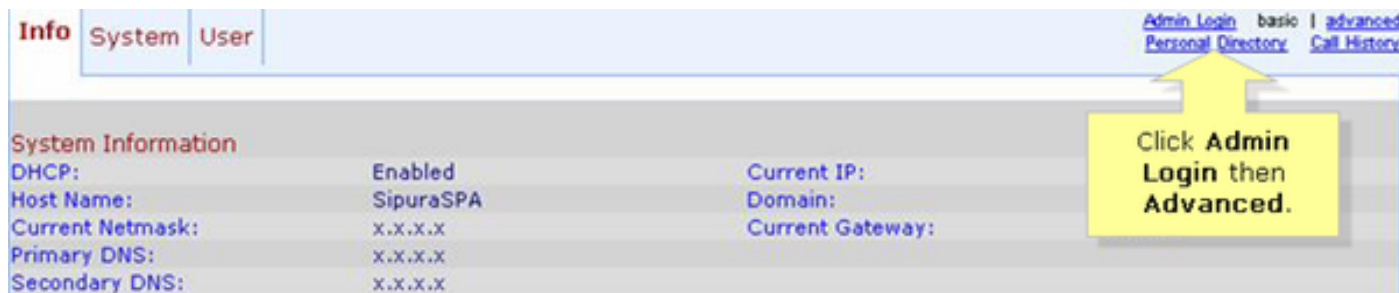

注: SPA922 ではデフォルトではユーザ名とパスワードは設定されていません。ユーザ名とパスワードの入力を求められる場合は、SPA921 がロックされています。これについて、VoIP プロバイダーに確認する必要があります。

ステップ 3 :

[User] タブをクリックし、[Call Forward] オプションの下で電話番号または内線番号を設定します。

Set the phone number.

Provisioning Regional Phone Ext 1 Ext 2 **User** [User Login](#) [basic](#) | [advanced](#)
[Personal Directory](#) [Call History](#)

Call Forward

Cfwd All Dest:	<input type="text"/>	Cfwd Busy Dest:	7034833923
Cfwd No Ans Dest:	7034833923	Cfwd No Ans Delay:	20

Speed Dial

Speed Dial 2:	<input type="text"/>	Speed Dial 3:	<input type="text"/>
Speed Dial 4:	<input type="text"/>	Speed Dial 5:	<input type="text"/>
Speed Dial 6:	<input type="text"/>	Speed Dial 7:	<input type="text"/>
Speed Dial 8:	<input type="text"/>	Speed Dial 9:	<input type="text"/>

Supplementary Services

CW Setting:	<input type="text" value="yes"/>	Block CID Setting:	<input type="text" value="no"/>
Block ANC Setting:	<input type="text" value="no"/>	DND Setting:	<input type="text" value="no"/>
Secure Call Setting:	<input type="text" value="no"/>	Dial Assistance:	<input type="text" value="no"/>
Auto Answer Page:	<input type="text" value="yes"/>	Preferred Audio Device:	<input type="text" value="Speaker"/>
Send Audio To Speaker:	<input type="text" value="no"/>	Time Format:	<input type="text" value="12hr"/>
Date Format:	<input type="text" value="month/day"/>	Miss Call Shortcut:	<input type="text" value="yes"/>
Accept Media Loopback Request:	<input type="text" value="automatic"/>	Media Loopback Mode:	<input type="text" value="source"/>
Media Loopback Type:	<input type="text" value="media"/>		

Audio Volume

Ringer Volume:	<input type="text" value="0"/>	Sp	<input type="text" value="8"/>
Handset Volume:	<input type="text" value="11"/>	He	<input type="text" value="10"/>
LCD Contrast:	<input type="text" value="8"/>	Back Light	<input type="text" value="10 s"/>

Click Submit Changes when done.

関連情報

- [テクニカル サポートとドキュメント - Cisco Systems](#)