

# 目次

## 概要

[どのように SPA-3102 で発信 PSTN コールを作ることができますか。](#)

## 関連情報

## 概要

この記事は、Cisco Small Business 製品のセットアップ、トラブルシューティング、およびメンテナンスを支援する一連のドキュメントの1つです。

### Q. [どのように SPA-3102 で発信 PSTN コールを作ることができますか。](#)


A.

#### ステップ 1

SPA-3102 Webベース セットアップページにアクセスして下さい。手順については[ここ](#)をクリックしてください。

#### ステップ 2

音声を、Admin ログイン クリックして下さい、そして進みました。

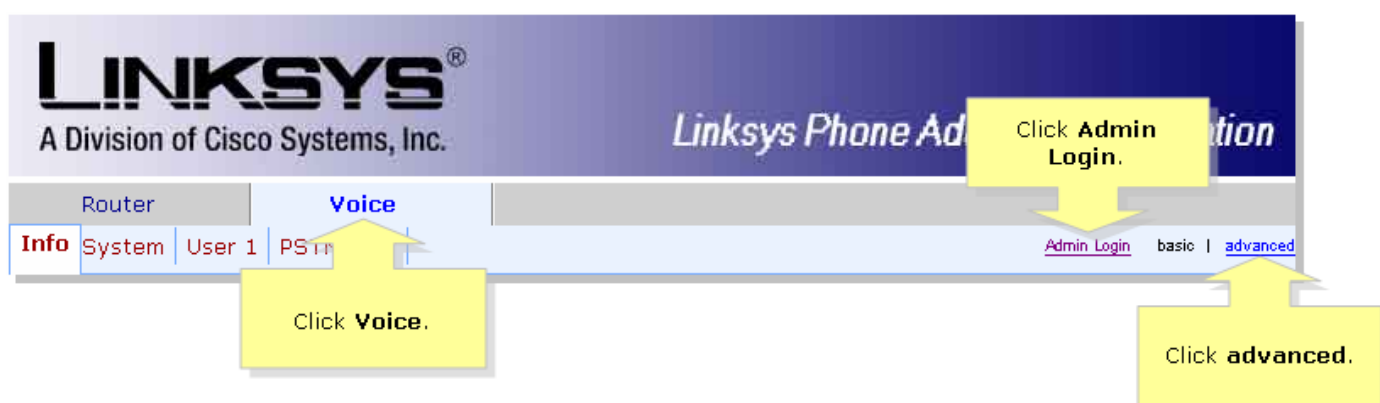

#### ステップ 3 :

プロキシおよび登録を『line 1』 をクリックし、探して下さい。



**ステップ 4 :**

プロキシの下で、提供されるフィールドで VOIP プロキシ 設定を入力して下さい。

**ステップ 5 :**

送信 プロキシの下で、提供されるフィールドで VOIP 送信 プロキシ 設定を入力して下さい。

**ステップ 6 :**

はいへの一定使用 送信 プロキシ。

**ステップ 7 :**

パスワードの下で、提供されるフィールドでサブスクライバ パスワードを入力して下さい。

**ステップ 8 :**

ユーザ ID の下で、提供されるフィールドでユーザ ID を入力して下さい。

The screenshot shows a configuration page with two main sections: "Proxy and Registration" and "Subscriber Information".

- Proxy and Registration:**
  - Proxy: [ ]
  - Outbound Proxy: [ ]
  - Register: yes [v]
  - Register Expires: 3600
  - Use DNS SRV: [ ]
  - Proxy Fallback Intvl: 3
  - Voice Mail Server: [ ]
  - Use Outbound Proxy: yes [v] (Callout: Set Use Outbound Proxy to **yes**.)
  - Use OB Proxy In Dialog: yes [v]
  - Make Call Without Reg: no [v]
  - Make Call Without Reg: no [v]
  - SRV Auto Prefix: no [v]
  - Redundancy Method: Normal [v]
  - Box Subscribe Expires: 2147483647
- Subscriber Information:**
  - Display Name: [ ]
  - Password: [ ] (Callout: Enter the subscriber password here.)
  - Auth ID: [ ]
  - Mini Certificate: [ ]
  - SRTP Private Key: [ ]
  - User ID: [ ] (Callout: Enter User ID on this field.)
  - Use Auth ID: no [v]

Other callouts include: "Enter VOIP Proxy settings here." pointing to the Proxy field, and "Enter VOIP Outbound Proxy settings here." pointing to the Outbound Proxy field.

**ステップ 9 :**

をクリックします。

Submit All Changes

**ステップ 10 :**

PSTN 行をクリックして下さい。

The screenshot shows the "Linksys Phone Adapter Configuration" page. The "Voice" tab is selected. In the navigation menu, the "PSTN Line" link is highlighted with a yellow callout box that says "Click PSTN Line." Other links in the menu include "Info", "System", "SIP", "Provisioning", "Regional", "Line 1", "User Login", "basic", and "advanced".

**ステップ 11 :**

プロキシの下で提供されるフィールドの VOIP プロキシ 設定を入力して下さい。

**ステップ 12 :**

送信 プロキシの下で、提供されるフィールドで VOIP 送信 プロキシ 設定を入力して下さい。

**ステップ 13 :**

はいへの一定使用 送信 プロキシ。

**ステップ 14 :**

パスワードの下で、提供されるフィールドでサブスクリバ パスワードを入力して下さい。

**ステップ 15 :**

ユーザ ID の下で、提供されるフィールドでユーザ ID を入力して下さい。

The screenshot shows a configuration interface with two main sections: "Proxy and Registration" and "Subscriber Information".


- Proxy and Registration:**
  - Proxy: [text input]
  - Outbound Proxy: [text input]
  - Register: yes [dropdown]
  - Register Expires: 3600 [text input]
  - Use DNS SRV: [checkbox]
  - Proxy Fallback Intvl: 3 [text input]
  - Voice Mail Server: [text input]
  - Use Outbound Proxy: yes [dropdown]
  - Use OB Proxy In Dialog: yes [dropdown]
  - Make Call Without Reg: no [dropdown]
  - Call Without Reg: no [dropdown]
  - SRV Auto Prefix: no [dropdown]
  - Redundancy Method: Normal [dropdown]
  - Box Subscribe Expires: 2147483647 [text input]
- Subscriber Information:**
  - Display Name: [text input]
  - Password: [text input]
  - Auth ID: [text input]
  - Mini Certificate: [text input]
  - S RTP Private Key: [text input]
  - User ID: [text input]
  - Use Auth ID: no [dropdown]

Yellow callout boxes with arrows point to the following fields:

- "Enter VOIP Proxy settings here." points to the Proxy field.
- "Set Use Outbound Proxy to yes." points to the Use Outbound Proxy dropdown.
- "Enter VOIP Outbound Proxy settings here." points to the Outbound Proxy field.
- "Enter the subscriber password here." points to the Password field.
- "Enter User ID on this field." points to the User ID field.

**ステップ 16 :**

をクリックします。



**ステップ 17:**

ダイヤル プランを『line 1』 をクリック し、探して下さい。

**ステップ 18:**

VOIP 数および #9 にアウトバウンドコールのための PSTN 数にダイヤルするためにダイヤルするために "(\*xx|[3469]11|0|00|[2-9]xxxxxx|1xxx[2-9]xxxxxxS0|xxxxxxxxxxxx.)" から "(xx.<#9,:>xx.<:@gw0>)" にデフォルト ダイヤル プランを変更して下さい。

Enter  
"xx.|<#9,:>xx.<:@gw0>"  
on the **Dial Plan**.

|   |  |
|---|--|
| <b>Dial Plan</b>  |  |
| Dial Plan:  | <input type="text" value="(xx. &lt;#9,:&gt;xx.&lt;:@gw0&gt;"/> |
| Enable IP Dialing:  | <input type="text" value="no"/>                                |
| Emergency Number:   | <input type="text"/>   |
| <b>FXS Port Polarity Configuration</b>  |  |
| Idle Polarity:  | <input type="text" value="Forward"/>                           |
| Caller Conn Polarity:   | <input type="text" value="Forward"/>                           |
| Callee Conn Polarity:   | <input type="text" value="Forward"/>                           |
| <input type="button" value="Undo All Changes"/> <input type="button" value="Submit All Changes"/> |  |

## 関連情報

- [テクニカルサポートとドキュメント - Cisco Systems](#)