eno6/bd0インターフェイス上のSMF CNDP "network-receive-error"；のトラブルシューティング

内容

はじめに

問題

- アラートの発生源の特定

ノード、ポッド、ポートのステータスの検証

- プライマリVIPからのノードおよびポッドの検証
- K8sプライマリVIPからのポート検証
- SMIクラスタ配置機能からのポート検証

UCSサーバの特定

- SMI Cluster DeployerからのUCSサーバの検証
- プライマリVIPポートとUCSネットワークインターフェイスのマッピング

リーフスイッチの識別

解決方法

はじめに

このドキュメントでは、特定のセッション管理機能(SMF)クラウドネイティブ導入プラットフォーム(CNDP)のコンピューティングスイッチとリーフスイッチを識別する方法、およびCommon Execution Environment(CEE)で報告される「network-receive-error」アラートを解決する方法について説明します。

問題

「network-receive-error」アラートはCEE Opcenter Rack2で報告されます。

```
[lab0200-smf/labceed22] cee# show alerts active summary
NAME UID SEVERITY STARTS AT SOURCE SUMMARY
-------------------------------------------------------------------------------------------------------------
network-receive-error 998c77d6a6a0 major 10-26T00:10:31 lab0200-smf-mas Network interface "bd0" showing
network-receive-error ea4217bf9d9e major 10-26T00:10:31 lab0200-smf-mas Network interface "bd0" showing
network-receive-error 97fad40d2a58 major 10-26T00:10:31 lab0200-smf-mas Network interface "eno6" showin
network-receive-error b79540eb4e78 major 10-26T00:10:31 lab0200-smf-mas Network interface "eno6" showin
network-receive-error e3d163ff4012 major 10-26T00:10:01 lab0200-smf-mas Network interface "bd0" showing
network-receive-error 12a7b5a5c5d5 major 10-26T00:10:01 lab0200-smf-mas Network interface "eno6" showin
```

アラートの説明については、『Ultra Cloud Core Subscriber Microservices Infrastructure Operations Guide』を参照してください。

<#root>

Alert:

network-receive-errors

```
 Annotations:
  Type: Communications Alarm
  Summary: Network interface "{{ $labels.device }}" showing receive errors on hostname {{ $labels.hostn
  Expression:
    |
   rate(node_network_receive_errs_total{device!~"veth.+"}[2m]) > 0
For: 2m
Labels:
 Severity: major
```

アラートの発生源の特定

CEE labceed22にログインし、bd0およびeno6インターフェイスで報告される「network-receive-error」アラートの詳細を確認して、ノードとポッドを特定します。

```
[lab0200-smf/labceed22] cee# show alerts active summary
NAME                   UID           SEVERITY  STARTS AT       SOURCE                SUMMARY
-------------------------------------------------------------------------------------------------------
network-receive-error  3b6a0a7ce1a8  major     10-26T21:17:01  lab0200-smf-mas  Network interface "bd0"
network-receive-error  15abab75c8fc  major     10-26T21:17:01  lab0200-smf-mas  Network interface "eno6
```

show alerts active detail network-receive-error <UID>を実行して、アラートの詳細を取得します。

この例では、両方のアラートのソースはnode lab0200-smf-primary-1 pod node-exporter-47xmmです。

<#root>

[lab0200-smf/labceed22] cee#

show alerts active detail network-receive-error 3b6a0a7ce1a8

```
alerts active detail network-receive-error 3b6a0a7ce1a8
 severity    major
 type        "Communications Alarm"
 startsAt    2021-10-26T21:17:01.913Z
 source      lab0200-smf-primary-1
 summary     "Network interface \"bd0\" showing receive errors on hostname lab0200-smf-primary-1\""
```

```
 labels      [ "alertname: network-receive-errors" "cluster: lab0200-smf_cee-labceed22" "component: nod
```

hostname: lab0200-smf-primary-1

```
" "instance: 10.192.1.42:9100" "job: kubernetes-pods" "monitor: prometheus" "namespace: cee-labceed22"
```

pod: node-exporter-47xmm

```
" "pod_template_generation: 1" "replica: lab0200-smf_cee-labceed22" "severity: major" ]
 annotations [ "summary: Network interface \"bd0\" showing receive errors on hostname lab0200-smf-prima

[lab0200-smf/labceed22] cee#
```

show alerts active detail network-receive-error 15abab75c8fc

```
alerts active detail network-receive-error 15abab75c8fc
 severity    major
 type        "Communications Alarm"
 startsAt    2021-10-26T21:17:01.913Z
 source      lab0200-smf-primary-1
 summary     "Network interface \"eno6\" showing receive errors on hostname lab0200-smf-primary-1\""
 labels      [ "alertname: network-receive-errors" "cluster: lab0200-smf_cee-labceed22" "component: nod
```

hostname: lab0200-smf-primary-1

```
" "instance: 10.192.1.42:9100" "job: kubernetes-pods" "monitor: prometheus" "namespace: cee-labceed22"
```

pod: node-exporter-47xmm

```
" "pod_template_generation: 1" "replica: lab0200-smf_cee-labceed22" "severity: major" ]
 annotations [ "summary: Network interface \"eno6\" showing receive errors on hostname lab0200-smf-prim
```

ノード、ポッド、ポートのステータスの検証

プライマリVIPからのノードおよびポッドの検証

Rack2のK8sプライマリVIPにログインして、送信元ノードとポッドのステータスを検証します。

この例では、両方とも良好な状態です。

<#root>

```
cloud-user@lab0200-smf-primary-1:~$
```

kubectl get nodes

```
NAME                          STATUS   ROLES                  AGE    VERSION
```

lab0200-smf-primary-1

Ready

```
    control-plane          105d   v1.21.0
lab0200-smf-primary-2   Ready    control-plane          105d   v1.21.0
lab0200-smf-primary-3   Ready    control-plane          105d   v1.21.0
```

```
lab0200-smf-worker-1   Ready    <none>                 105d   v1.21.0
lab0200-smf-worker-2   Ready    <none>                 105d   v1.21.0
lab0200-smf-worker-3   Ready    <none>                 105d   v1.21.0
lab0200-smf-worker-4   Ready    <none>                 105d   v1.21.0
lab0200-smf-worker-5   Ready    <none>                 105d   v1.21.0
```

<#root>

```
cloud-user@lab0200-smf-primary-1:~$
```

kubectl get pods -A -o wide

```
 | grep node-exporter--47xmm
cee-labceed22     node-exporter-47xmm                                    1/1
```

Running

```
 0          18d    10.192.1.44       lab0200-smf-primary-1   <none>           <none>
```

K8sプライマリVIPからのポート検証

ip addr | grep eno6およびip addr | grep bd0を使用して、bd0およびeno6インターフェイスがUPであることを検証します。

注:bd0に対してフィルタを適用すると、出力にeno6が表示されます。その理由は、SMI Cluster Deployerで検証できるbd0の下で、eno5とeno6が結合インターフェイスとして設定されているためです。

<#root>

```
cloud-user@lab0200-smf-primary-1:~$
```

ip addr | grep eno6

```
3:
```

eno6

```
: <BROADCAST,MULTICAST,SECONDARY,UP,LOWER_UP> mtu 1500 qdisc mq primary bd0
```

state UP

```
 group default qlen 1000
```

```
cloud-user@lab0200-smf-primary-1:~$
```

ip addr | grep bd0

```
2: eno5: <BROADCAST,MULTICAST,SECONDARY,UP,LOWER_UP> mtu 1500 qdisc mq primary bd0 state UP group defau
3: eno6: <BROADCAST,MULTICAST,SECONDARY,UP,LOWER_UP> mtu 1500 qdisc mq primary bd0 state UP group defau
12:
```

bd0

```
: <BROADCAST,MULTICAST,PRIMARY,UP,LOWER_UP> mtu 1500 qdisc noqueue
```

state UP

```
 group default qlen 1000
13: vlan111@bd0: <BROADCAST,MULTICAST,UP,LOWER_UP> mtu 1500 qdisc noqueue state UP group default qlen 1
14: vlan112@bd0: <BROADCAST,MULTICAST,UP,LOWER_UP> mtu 1500 qdisc noqueue state UP group default qlen 1
182: cali7a166bd093d@if4: <BROADCAST,MULTICAST,UP,LOWER_UP> mtu 1440 qdisc noqueue state UP group defau
```

SMIクラスタ配置機能からのポート検証

Cluster Manager VIPにログインし、Operations(Ops)Center ops-center-smi-cluster-deployerにsshアクセスします。

<#root>

```
cloud-user@lab-deployer-cm-primary:~$
```

kubectl get svc -n smi-cm

```
NAME                                          TYPE        CLUSTER-IP       EXTERNAL-IP     PORT(S)
cluster-files-offline-smi-cluster-deployer    ClusterIP   10.102.53.184    <none>          8080/TCP
iso-host-cluster-files-smi-cluster-deployer   ClusterIP   10.102.38.70     172.16.1.102    80/TCP
iso-host-ops-center-smi-cluster-deployer      ClusterIP   10.102.83.54     172.16.1.102    3001/TCP
netconf-ops-center-smi-cluster-deployer       ClusterIP   10.102.196.125   10.241.206.65   3022/TCP,22/
```

ops-center-smi-cluster-deployer

```
              ClusterIP   10.102.12.170    <none>          8008/TCP,2024/TCP,2022/TCP,7681/TCP,3000/TCP
squid-proxy-node-port                     NodePort    10.102.72.168    <none>          3128:32572/T
```

<#root>

```
cloud-user@lab-deployer-cm-primary:~$
```

ssh -p 2024 admin@10.102.12.170

```
admin@10.102.12.170's password:
      Welcome to the Cisco SMI Cluster Deployer on lab-deployer-cm-primary
      Copyright © 2016-2020, Cisco Systems, Inc.
      All rights reserved.
admin connected from 172.16.1.100 using ssh on ops-center-smi-cluster-deployer-5cdc5f94db-bnxqt
[lab-deployer-cm-primary]
```

SMI Cluster Deployer#

ノードのクラスタ、ノードデフォルト、インターフェイス、およびパラメータモードを確認します。例では、 lab0200-smfにあります。

<#root>

```
[lab-deployer-cm-primary] SMI Cluster Deployer#  show running-config clusters
```

clusters lab0200-smf

```
 environment lab0200-smf-deployer_1
…
 node-defaults initial-boot netplan ethernets eno5
  dhcp4 false
  dhcp6 false
 exit
 node-defaults initial-boot netplan ethernets eno6
  dhcp4 false
  dhcp6 false
 exit
 node-defaults initial-boot netplan ethernets enp216s0f0
  dhcp4 false
  dhcp6 false
 exit
 node-defaults initial-boot netplan ethernets enp216s0f1
  dhcp4 false
  dhcp6 false
 exit
 node-defaults initial-boot netplan ethernets enp94s0f0
  dhcp4 false
  dhcp6 false
 exit
 node-defaults initial-boot netplan ethernets enp94s0f1
  dhcp4 false
  dhcp6 false
 exit
```

node-defaults initial-boot netplan bonds bd0

```
  dhcp4      false
  dhcp6      false
  optional   true
```

interfaces [eno5 eno6]

parameters mode   active-backup

```
  parameters mii-monitor-interval 100
  parameters fail-over-mac-policy active
 exit
```

プライマリVIPで、インターフェイスbd0およびeno6のエラーまたはドロップ、あるいはその両方を検証します。

両方のインターフェイスにドロップがある場合、UCSまたはリーフスイッチのハードウェアにハードウェアの問題がないかどうかを確認する必要があります。

<#root>

```
cloud-user@lab0200-smf-primary-1:~$
```

ifconfig bd0

```
bd0: flags=5187<UP,BROADCAST,RUNNING,PRIMARY,MULTICAST>  mtu 1500
        inet6 fe80::8e94:1fff:fef6:53cd  prefixlen 64  scopeid 0x20<link>
        ether 8c:94:1f:f6:53:cd  txqueuelen 1000  (Ethernet)
        RX packets 47035763777  bytes 19038286946282 (19.0 TB)
        RX errors 49541
```

dropped 845484

```
  overruns 0  frame 49541
        TX packets 53797663096  bytes 32320571418654 (32.3 TB)
        TX errors 0  dropped 0 overruns 0  carrier 0  collisions 0

cloud-user@lab0200-smf-primary-1:~$
```

ifconfig eno6

```
eno6: flags=6211<UP,BROADCAST,RUNNING,SECONDARY,MULTICAST>  mtu 1500
        ether 8c:94:1f:f6:53:cd  txqueuelen 1000  (Ethernet)
        RX packets 47035402290  bytes 19038274391478 (19.0 TB)
        RX errors 49541
```

dropped 845484

```
  overruns 0  frame 49541
        TX packets 53797735337  bytes 32320609021235 (32.3 TB)
        TX errors 0  dropped 0 overruns 0  carrier 0  collisions 0
```

UCSサーバの特定

SMI Cluster DeployerからのUCSサーバの検証

SMI Cluster Deployerでshow running-config clusters <cluster name> nodes <node name>を実行し、UCSサーバのCIMC IPアドレスを検出します。

<#root>

```
[lab-deployer-cm-primary] SMI Cluster Deployer#
```

show running-config clusters lab0200-smf nodes primary-1

```
clusters lab0200-smf

nodes primary-1
```

```
  maintenance  false
  host-profile cp-data-r2-sysctl
  k8s node-type       primary
  k8s ssh-ip          10.192.1.42
  k8s sshd-bind-to-ssh-ip true
  k8s node-ip         10.192.1.42
  k8s node-labels smi.cisco.com/node-type oam
  exit
  k8s node-labels smi.cisco.com/node-type-1 proto
  exit
  ucs-server cimc user admin
...
```

ucs-server cimc ip-address 172.16.1.62

```
...
  exit
```

Active CM経由でCIMC IPアドレス172.16.1.62にSSH接続し、サーバ名を確認します。

この例では、サーバ名はLAB0200-Server8-02です。

<#root>

```
cloud-user@lab-deployer-cm-primary:~$
```

ssh admin@172.16.1.62

```
Warning: Permanently added '172.16.1.62' (RSA) to the list of known hosts.
admin@172.16.1.62's password:
```

LAB0200-Server8-02

```
#
```

注：顧客情報アンケート(CIQ)が利用できる場合は、CIQでサーバの名前を確認します。

プライマリVIPポートとUCSネットワークインターフェイスのマッピング

プライマリVIPで、ls -la /sys/class/netコマンドを使用してeno6の物理インターフェイス名を確認します。 この例では、eno6デバイスの識別にlscpiが使用される場合、eno6の識別にポート1d:00.1を使用する必要があります。

<#root>

```
cloud-user@lab0200-smf-primary-1:~$ ls -la /sys/class/net
total 0
drwxr-xr-x  2 root root    0 Oct 12 06:18 .
drwxr-xr-x 87 root root    0 Oct 12 06:18 ..
```

```
lrwxrwxrwx  1 root root    0 Oct 12 06:18 bd0 -> ../../devices/virtual/net/bd0
lrwxrwxrwx  1 root root    0 Oct 12 06:18 bd1 -> ../../devices/virtual/net/bd1
…
lrwxrwxrwx  1 root root    0 Oct 12 06:18 eno5 -> ../../devices/pci0000:17/0000:17:00.0/0000:18:00.0/00
lrwxrwxrwx  1 root root    0 Oct 12 06:18 eno6 -> ../../devices/pci0000:17/0000:17:00.0/0000:18:00.0/00
```

1d:00.1/net/eno6

注：lspciは、MLOM、SLOM、PCIなど、UCSサーバ上のすべてのデバイスに関する情報を表示します。デバイス情報は、ls -la /sys/class/netコマンド出力のインターフェイス名へのマッピングに使用できます。

この例では、ポート1d:00.1はMLOMおよびeno6インターフェイスに属しています。eno5は1d:00.0 MLOMポートです。

<#root>

```
cloud-user@lab0200-smf-primary-1:~$ lspci
……
1d:00.0 Ethernet controller: Cisco Systems Inc VIC Ethernet NIC (rev a2)
```

1d:00.1

```
 Ethernet controller: Cisco Systems Inc VIC Ethernet NIC (rev a2)
3b:00.0 Ethernet controller: Intel Corporation Ethernet Controller 10G X550T (rev 01)
3b:00.1 Ethernet controller: Intel Corporation Ethernet Controller 10G X550T (rev 01)
5e:00.0 Ethernet controller: Intel Corporation Ethernet Controller XL710 for 40GbE QSFP+ (rev 02)
5e:00.1 Ethernet controller: Intel Corporation Ethernet Controller XL710 for 40GbE QSFP+ (rev 02)
d8:00.0 Ethernet controller: Intel Corporation Ethernet Controller XL710 for 40GbE QSFP+ (rev 02)
d8:00.1 Ethernet controller: Intel Corporation Ethernet Controller XL710 for 40GbE QSFP+ (rev 02)
```

CIMC GUIで、プライマリVIPのifconfig出力に表示されるMLOM MACアドレスに一致させます。

<#root>

```
cloud-user@lab0200-smf-primary-1:~$  ifconfig bd0
bd0: flags=5187<UP,BROADCAST,RUNNING,PRIMARY,MULTICAST>  mtu 1500
        inet6 fe80::8e94:1fff:fef6:53cd  prefixlen 64  scopeid 0x20<link>
        ether
```

8c:94:1f:f6:53:cd

```
  txqueuelen 1000  (Ethernet)
        RX packets 47035763777  bytes 19038286946282 (19.0 TB)
        RX errors 49541  dropped 845484  overruns 0  frame 49541
        TX packets 53797663096  bytes 32320571418654 (32.3 TB)
        TX errors 0  dropped 0 overruns 0  carrier 0  collisions 0
```

```
cloud-user@lab0200-smf-primary-1:~$  ifconfig eno6
eno6: flags=6211<UP,BROADCAST,RUNNING,SECONDARY,MULTICAST>  mtu 1500
        ether
```

8c:94:1f:f6:53:cd

```
  txqueuelen 1000  (Ethernet)
        RX packets 47035402290  bytes 19038274391478 (19.0 TB)
        RX errors 49541  dropped 845484  overruns 0  frame 49541
        TX packets 53797735337  bytes 32320609021235 (32.3 TB)
        TX errors 0  dropped 0 overruns 0  carrier 0  collisions 0
```

リーフスイッチの識別

図に示すように、Cluster Manager(CWM)ネットワークでは、MLOM(eno5/eno6)がリーフ1と2に接続されています。

✎ 注：Validateを使用すると、CIQが使用可能な場合に、CIQにホスト名が残ります。

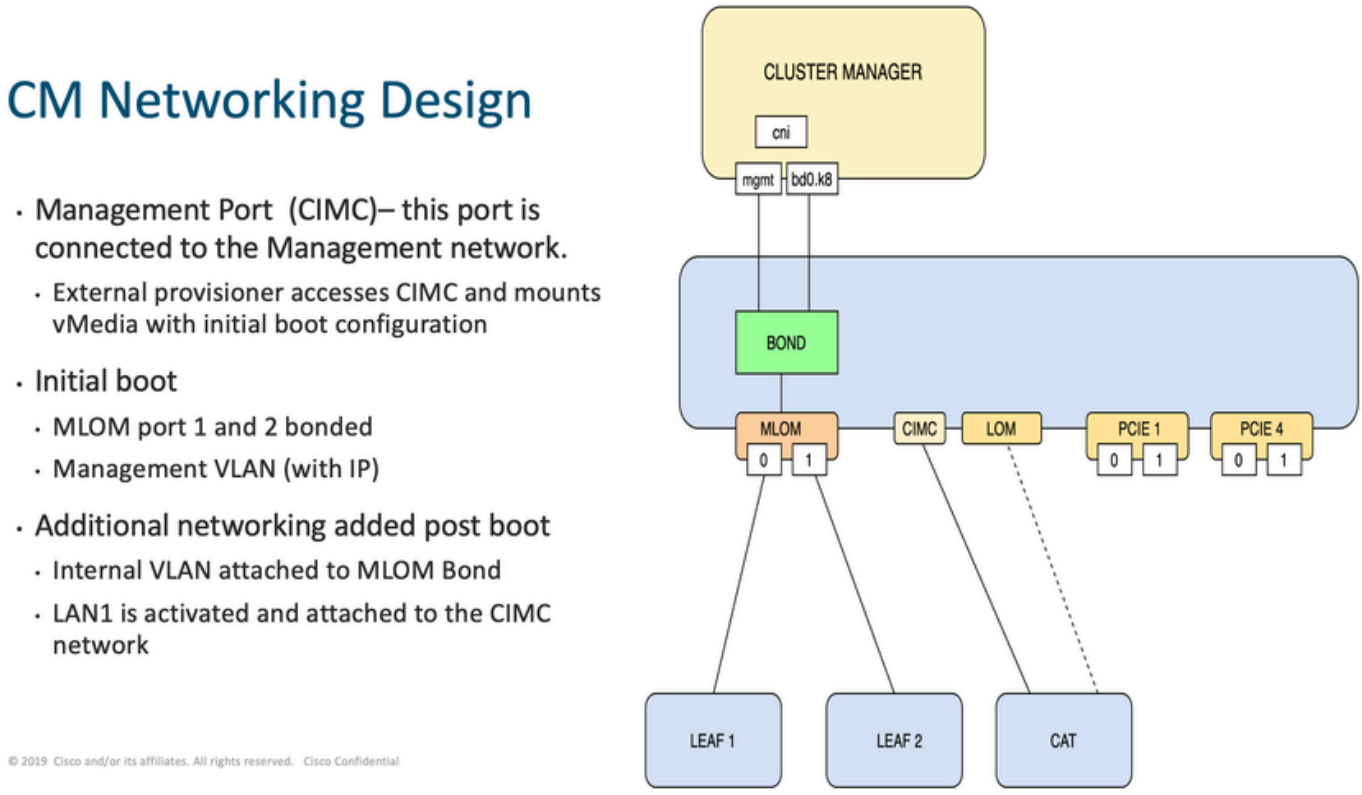

両方のLeavesにログインし、サーバの名前をgrepします。

この例では、LAB0200-Server8-02 MLOMおよびMLOMインターフェイスは、Leaf1およびLeaf2のインターフェイスEth1/49に接続されています。

```
Leaf1# sh int description | inc LAB0200-Server8-02
Eth1/10       eth    40G     PCIE-01-2-LAB0200-Server8-02
Eth1/30       eth    40G     PCIE-02-2-LAB0200-Server8-02

Eth1/49       eth    40G     LAB0200-Server8-02 MLOM-P2
```

```
Leaf2# sh int description | inc LAB0200-Server8-02
Eth1/10       eth    40G     PCIE-01-1-LAB0200-Server8-02
Eth1/30       eth    40G     PCIE-02-1-LAB0200-Server8-02

Eth1/49       eth    40G     LAB0200-Server8-02 MLOM-P1
```

解決方法

⚠ 重要：問題にはすべて独自の分析が必要です。Nexus側でエラーが見つからない場合は、UCSサーバインターフェイスでエラーを確認します。

このシナリオでは、問題はLAB0200-Server8-02 MLOM eno6に接続されているLeaf1 int eth1/49のリンク障害に関連しています。

UCSサーバが検証され、ハードウェアの問題は見つからず、MLOMとポートは良好な状態でした。

Leaf1にTX出力エラーが表示されました。

<#root>

```
Leaf1# sh int Eth1/49
Ethernet1/49 is up
admin state is up, Dedicated Interface
  Hardware: 10000/40000/100000 Ethernet, address: e8eb.3437.48ca (bia e8eb.3437.48ca)
  Description: LAB0200-Server8-02 MLOM-P2
  MTU 9216 bytes, BW 40000000 Kbit , DLY 10 usec
  reliability 255/255, txload 1/255, rxload 1/255
  Encapsulation ARPA, medium is broadcast
  Port mode is trunk
  full-duplex, 40 Gb/s, media type is 40G
  Beacon is turned off
  Auto-Negotiation is turned on  FEC mode is Auto
  Input flow-control is off, output flow-control is off
  Auto-mdix is turned off
  Rate mode is dedicated
  Switchport monitor is off
  EtherType is 0x8100
  EEE (efficient-ethernet) : n/a
    admin fec state is auto, oper fec state is off
  Last link flapped 5week(s) 6day(s)
  Last clearing of "show interface" counters never
  12 interface resets
  Load-Interval #1: 30 seconds
    30 seconds input rate 162942488 bits/sec, 26648 packets/sec
```

```
    30 seconds output rate 35757024 bits/sec, 16477 packets/sec
    input rate 162.94 Mbps, 26.65 Kpps; output rate 35.76 Mbps, 16.48 Kpps
  Load-Interval #2: 5 minute (300 seconds)
    300 seconds input rate 120872496 bits/sec, 22926 packets/sec
    300 seconds output rate 54245920 bits/sec, 17880 packets/sec
    input rate 120.87 Mbps, 22.93 Kpps; output rate 54.24 Mbps, 17.88 Kpps
  RX
    85973263325 unicast packets  6318912 multicast packets  55152 broadcast packets
    85979637389 input packets  50020924423841 bytes
    230406880 jumbo packets  0 storm suppression bytes
    0 runts  0 giants  0 CRC  0 no buffer
    0 input error  0 short frame  0 overrun   0 underrun  0 ignored
    0 watchdog  0 bad etype drop  0 bad proto drop  0 if down drop
    0 input with dribble  0 input discard
    0 Rx pause
  TX


    76542979816 unicast packets  88726302 multicast packets  789768 broadcast packets
    76632574981 output packets  29932747104403 bytes
    3089287610 jumbo packets


79095 output error

 0 collision  0 deferred  0 late collision
    0 lost carrier  0 no carrier  0 babble  0 output discard
    0 Tx pause
```

「network-receive-error」アラートは、int eth1/49 Leaf1上のケーブル交換で解決されました。

最後のインターフェイスリンク障害は、ケーブルを交換する直前に報告されました。

<#root>

```
2021 Nov 17 07:36:48 TPLF0201 %BFD-5-SESSION_STATE_DOWN: BFD session 1090519112 to neighbor 10.22.101.1
Detection Time Expired.
2021 Nov 17 07:37:30 TPLF0201 %BFD-5-SESSION_STATE_DOWN: BFD session 1090519107 to neighbor 10.22.101.2
Detection Time Expired.

2021 Nov 18 05:09:12 TPLF0201 %ETHPORT-5-IF_DOWN_LINK_FAILURE: Interface Ethernet1/48 is down (Link fail
```

アラートは、ケーブル交換後にlabceed22のeno6/bd0でクリアされます。

<#root>

```
[lab0200-smf/labceed22] cee#

show alerts active summary


NAME UID SEVERITY STARTS AT SOURCE SUMMARY
-------------------------------------------------------------------------------------------------------
watchdog a62f5920 1ba8 minor 11-02T05:57:18 System This is an alert meant to ensure that the entire aler
```

翻訳について
シスコは世界中のユーザにそれぞれの言語でサポート コンテンツを提供するために、機械と人による翻訳を組み合わせて、本ドキュメントを翻訳しています。ただし、最高度の機械翻訳であっても、専門家による翻訳のような正確性は確保されません。シスコは、これら翻訳の正確性について法的責任を負いません。原典である英語版（リンクからアクセス可能）もあわせて参照することを推奨します。