

IP Phone 7841에 Phone Locale 설치

목차

[소개](#)

[사전 요구 사항](#)

[요구 사항](#)

[사용되는 구성 요소](#)

[배경 정보](#)

[구성](#)

[설정](#)

[다음을 확인합니다.](#)

[문제 해결](#)

소개

이 문서에서는 Cisco 7841 Series IP 전화기에 전화기 로컬을 설치하는 방법에 대해 설명합니다.

사전 요구 사항

요구 사항

이 문서에 대한 특정 요건이 없습니다.

사용되는 구성 요소

이 문서의 정보는 다음 소프트웨어 및 하드웨어 버전을 기반으로 합니다.

- Cisco Unified Communication Manager 12.x
- Cisco IP phone 7841

이 문서의 정보는 특정 랩 환경의 디바이스를 토대로 작성되었습니다. 이 문서에 사용된 모든 디바이스는 초기화된(기본) 컨피그레이션으로 시작되었습니다. 현재 네트워크가 작동 중인 경우 모든 명령의 잠재적인 영향을 미리 숙지하시기 바랍니다.

배경 정보

Cisco Unified Communications Manager(CUCM)는 영어를 비롯한 12개 언어 및 미국을 비롯한 16개 국가에 대해 시스템 정의 현지화 지원을 제공합니다. 네트워크 로케일은 국가별 신호음과 억양을 지정합니다. 사용자 로케일 텍스트 표시에 사용할 언어를 지정합니다.

구성

설정

다음은 전화기의 출하 시 하드 리셋을 수행하는 절차입니다.

1단계. Cisco 웹 사이트에서 로케일을 다운로드합니다.

Downloads Home / Collaboration Endpoints / IP Phones / IP Phone 7800 Series / IP Phone 7841 / Unified Communications Manager Endpoints Locale Installer- 12.1(1.1000)

IP Phone 7841

Release 12.1(1.1000)

Related Links and Documentation

▲ Notifications - No related links or documentation -

File Information	Release Date	Size	
Cisco Unified Communications Locale Installer 12.1.1.1000 Arabic (United Arab Emirates) for Cisco Unified IP Phones FW 12.1(1) po-locale-ar_AE-k3-12.1.1.1000-1.cop.sgn	27-MAR-2018	2.89 MB	↓ 🛒 📄
Cisco Unified Communications Locale Installer 12.1.1.1000 Arabic (Bahrain) for Cisco Unified IP Phones FW 12.1(1) po-locale-ar_BH-k3-12.1.1.1000-1.cop.sgn	27-MAR-2018	2.88 MB	↓ 🛒 📄
Cisco Unified Communications Locale Installer 12.1.1.1000 Arabic (Algeria) for Cisco Unified IP Phones	27-MAR-2018	2.88 MB	↓ 🛒 📄

2단계. OS Administration(OS 관리) > Software Upgrades(소프트웨어 업그레이드) > Install/Upgrade(설치/업그레이드)로 이동합니다.

Cisco Unified Operating System Administration

For Cisco Unified Communications Solutions

Show ▾ Settings ▾ Security ▾ **Software Upgrades ▾** Services ▾ Help ▾

- Install/Upgrade**
- TFTP File Management
- Install/Upgrade Agent
- Customized Logon Message
- Branding

WARNING: It is recommended to perform a successful backup. Please verify backup configuration.

Cisco Unified Communications Administration

System version: 12.0.0.99834-4

VMware Installation: 2 vCPU Intel(R) Xeon(R) CPU E5-2697A v4 @ 2.60GHz, disk 1: 110Gbytes, 8192Mbytes RAM, **ERROR: UN SUPPORTED: Partitions unaligned**
WARNING: DNS unreachable

User admin last logged in to this cluster on Friday, June 29, 2018 3:39:36 PM IST, to node 10.106.111.182, from 10.196.121.10 using HTTPS
User admin failed to log in 1 times!
Most recent failure Sunday, July 1, 2018 5:26:34 PM IST, to 10.106.111.182, from 10.65.43.63 using HTTPS

Copyright © 1999 - 2017 Cisco Systems, Inc.
All rights reserved.

This product contains cryptographic features and is subject to United States and local country laws governing import, export, transfer and use. Delivery of Cisco cryptographic products does not imply that exporters, distributors and users are responsible for compliance with U.S. and local country laws. By using this product you agree to comply with applicable laws and regulations. If you are unable to comply with applicable laws and regulations, you should not use this product.

A summary of U.S. laws governing Cisco cryptographic products may be found at our [Export Compliance Product Report](#) web site.

For information about Cisco Unified Communications Manager please visit our [Unified Communications System Documentation](#) web site.

For Cisco Technical Support please visit our [Technical Support](#) web site.

3단계. 이미지에 표시된 대로 SFTP 서버의 자격 증명을 입력합니다.

Cisco Unified Operating System Administration
For Cisco Unified Communications Solutions

Show ▾ Settings ▾ Security ▾ Software Upgrades ▾ Services ▾ Help ▾

Software Installation/Upgrade

Cancel Next

Status

Status: Ready

Software Location

Source* Remote Filesystem ▾

Directory* /

Server* 192.168.0.5

User Name* cisco

User Password* •••••

Transfer Protocol* SFTP ▾

SMTP Server

Email Destination

Cancel Next

*- indicates required item.

4단계. 이미지에 표시된 대로 옵션/업그레이드 드롭다운 메뉴에서 로케일을 선택하고 다음을 클릭합니다. 로케일 설치가 시작됩니다.

Cisco Unified Operating System Administration
For Cisco Unified Communications Solutions

Show ▾ Settings ▾ Security ▾ Software Upgrades ▾ Services ▾ Help ▾

Software Installation/Upgrade

Cancel Next

Status

Status: Ready

Software Location

Options/Upgrades* po-locale-ca_ES-k3-12.1.1.1000-1.cop.sgn ▾


Invalid Upgrades

Option Names	
web.xml	Name does not match any filter pattern.
New	Name does not match any filter pattern.


Cancel Next

*- indicates required item.

5. 체크섬 세부사항이 확인된 후 이미지에 표시된 대로 Next(다음)를 클릭합니다.

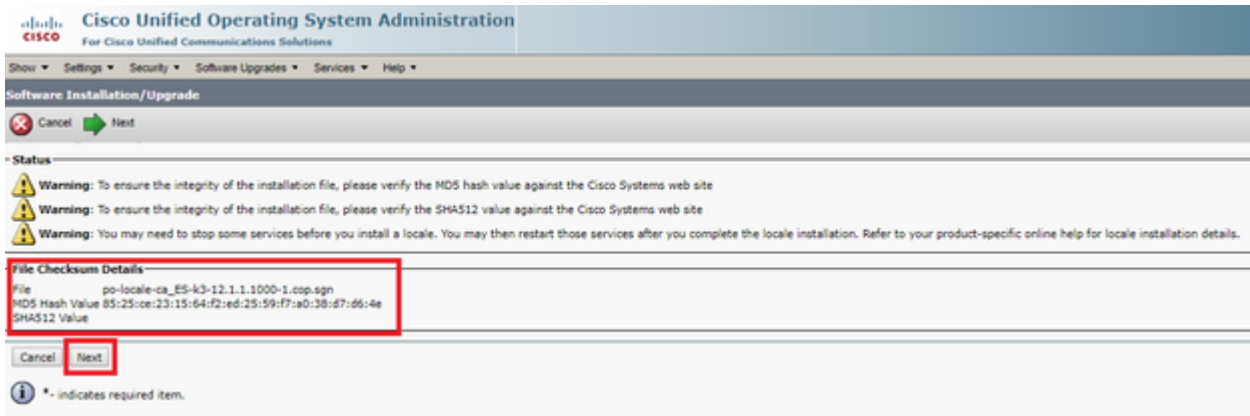

6단계. 로캘을 성공적으로 설치했습니다.

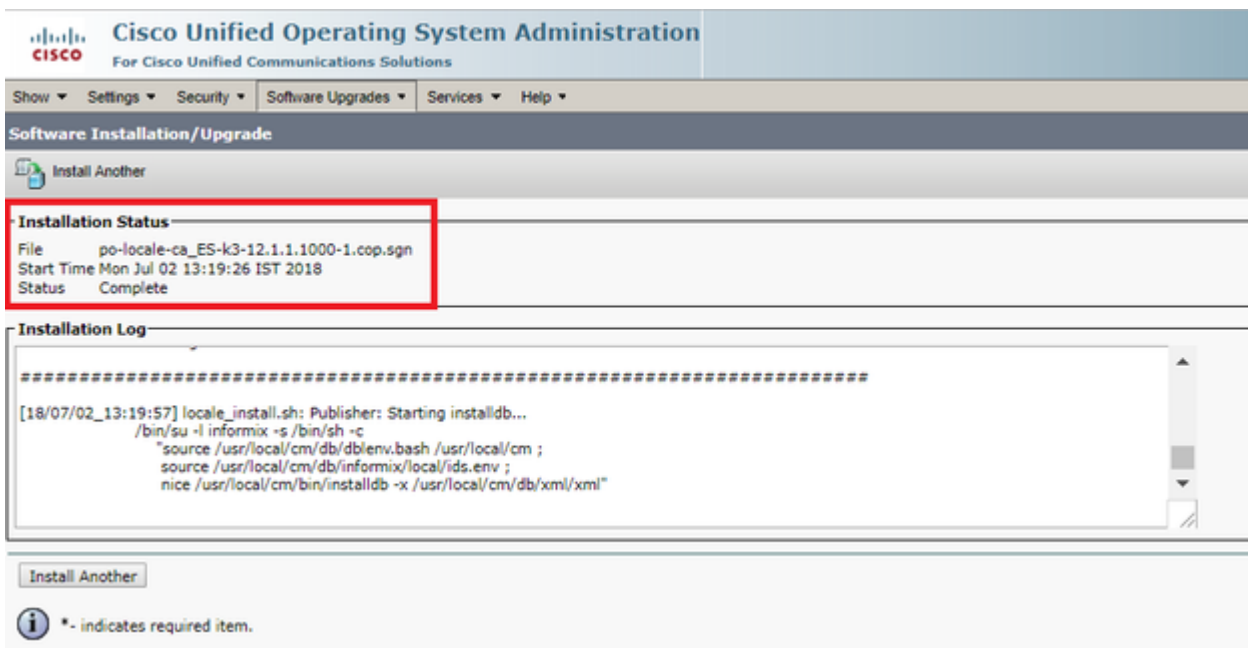

7단계. Servicability Page(서비스 가능성 페이지) > Tools(툴) > Control Center Feature services(제어 센터 기능 서비스)로 이동할 때 이를 실행하는 모든 노드에서 Cisco TFTP 서비스를 재설정합니다. Cisco TFTP service(Cisco TFTP 서비스)를 선택한 다음 이미지에 표시된 대로 restart(재시작)를 클릭합니다.

Cisco Unified Serviceability
For Cisco Unified Communications Solutions

Alarm ▾ Trace ▾ Tools ▾ Snmp ▾ CallHome ▾ Help ▾

Control Center - Feature Services

Start Stop Restart Refresh Page

Status:
Ready

Select Server
Server: 10.106.111.182--CUCM Voice/Video Go

Performance and Monitoring Services

	Service Name	Status:
☐	Cisco Serviceability Reporter	Started
☐	Cisco CallManager SNMP Service	Started

Directory Services

	Service Name	Status:
☐	Cisco DirSync	Started

CM Services

	Service Name	Status:
☐	Cisco CallManager	Started
☐	Cisco Unified Mobile Voice Access Service	Started
☐	Cisco IP Voice Media Streaming App	Started
☐	Cisco CTIManager	Started
☐	Cisco Extension Mobility	Started
☐	Cisco DHCP Monitor Service	Started
☐	Cisco Intercluster Lookup Service	Started
☐	Cisco Location Bandwidth Manager	Started
☐	Cisco Directory Number Alias Sync	Started
☐	Cisco Directory Number Alias Lookup	Started
☐	Cisco Dialed Number Analyzer Server	Started
☐	Cisco Dialed Number Analyzer	Started
☒	Cisco Tftp	Started

8단계. 전화기로 이동합니다.

System ▾ Call Routing ▾ Media Resources ▾ Advanced Features ▾ Device ▾ Application ▾ User Management ▾ Bulk Administration ▾ Help ▾

Find and List Phones Related Links: [Actively Logged In Device Report](#)

+ Add New Select All Clear All Delete Selected Reset Selected Apply Config to Selected

Status
1 records found

Query Information
Searching on a directory number may show the same device name multiple times depending on the number of lines configured per device.

Phone (1 - 1 of 1) Rows per Page 50 ▾

Find Phone where: Directory Number begins with 1006 Find Clear Filter Select item or enter search text

	Device Name(Line)	Description	Device Pool	Extension	Partition	Device Protocol	Status	IPv4 Address	Copy	Super Copy
☒	SEP5C3015458F33(1)	Auto 1006	Default	1006		SIP	Registered with 10.106.113.72	10.106.113.89		


9단계. User Locale(사용자 로케일) 아래에서 방금 다운로드한 로케일을 선택합니다.

MAC Address*	5C5015458F33	
Description	Auto 1006	
Device Pool*	Default	View Details
Common Device Configuration	< None >	View Details
Phone Button Template*	SEP5C5015458F33-SIP-Individual Template	
Softkey Template	< None >	
Common Phone Profile*	Standard Common Phone Profile	View Details
Calling Search Space	< None >	
AAR Calling Search Space	< None >	
Media Resource Group List	< None >	
User Hold MOH Audio Source	< None >	
Network Hold MOH Audio Source	< None >	
Location*	Hub_None	
AAR Group	< None >	
User Locale	< None >	
Network Locale	< None >	
Built In Bridge*	English, United States	
	Català, Reino de España	
Privacy*	English(British), United Kingdom	

10단계. 컨피그레이션을 저장, 적용하고 전화기를 재설정합니다.

다음을 확인합니다.

로케일이 성공적으로 설치된 경우 이미지에 표시된 것처럼 기본 언어로 소프트한 로케일을 볼 수 있습니다.

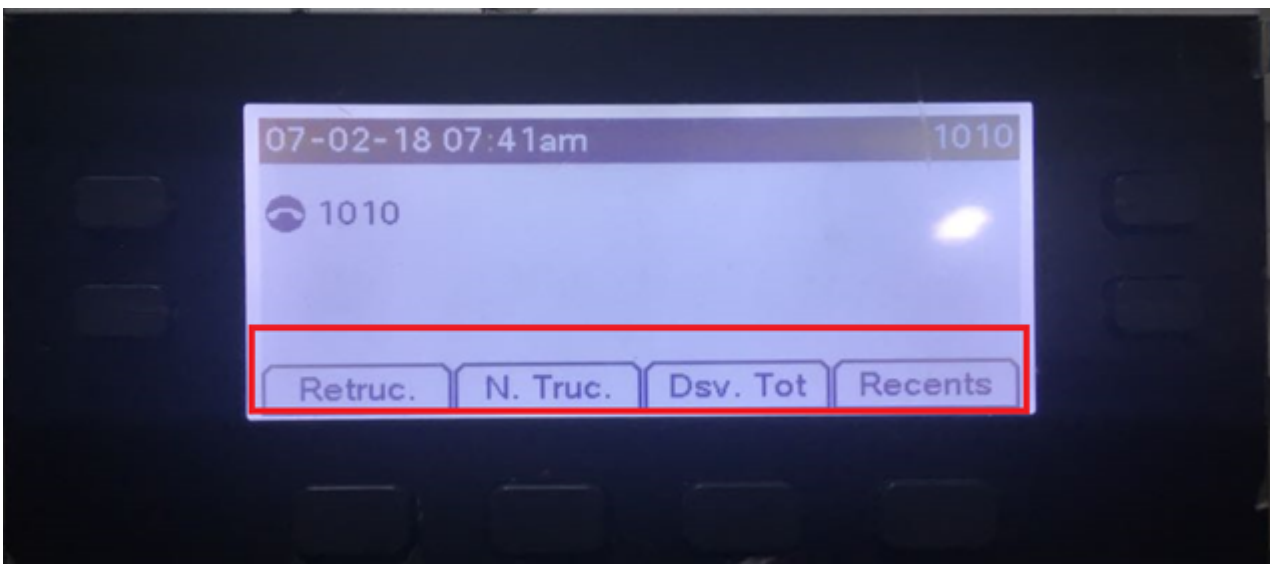

문제 해결

현재 이 설정에 사용할 수 있는 특정 문제 해결 정보가 없습니다.

이 번역에 관하여

Cisco는 전 세계 사용자에게 다양한 언어로 지원 콘텐츠를 제공하기 위해 기계 번역 기술과 수작업 번역을 병행하여 이 문서를 번역했습니다. 아무리 품질이 높은 기계 번역이라도 전문 번역가의 번역 결과물만큼 정확하지는 않습니다. Cisco Systems, Inc.는 이 같은 번역에 대해 어떠한 책임도 지지 않으며 항상 원본 영문 문서(링크 제공됨)를 참조할 것을 권장합니다.