

Configurações de sistema nos switch empilhável do Sx500 Series

Objetivo

A página das *configurações de sistema* é usada para personalizar os resultados do indicador do interruptor. O indicador pode conter um mensagem de banner para permitir o acesso somente aos usuários autenticados. O objetivo deste documento é ajudar a configurar os ajustes da administração do sistema nos switch empilhável do Sx500 Series.

Dispositivos aplicáveis


- Switch empilhável do Sx500 Series

Versão de software

- 1.3.0.62

Procedimento Passo a Passo

Etapa 1. Entre ao utilitário de configuração da Web, e escolha **ajustes de Administration>System**. A página das *configurações de sistema* abre:

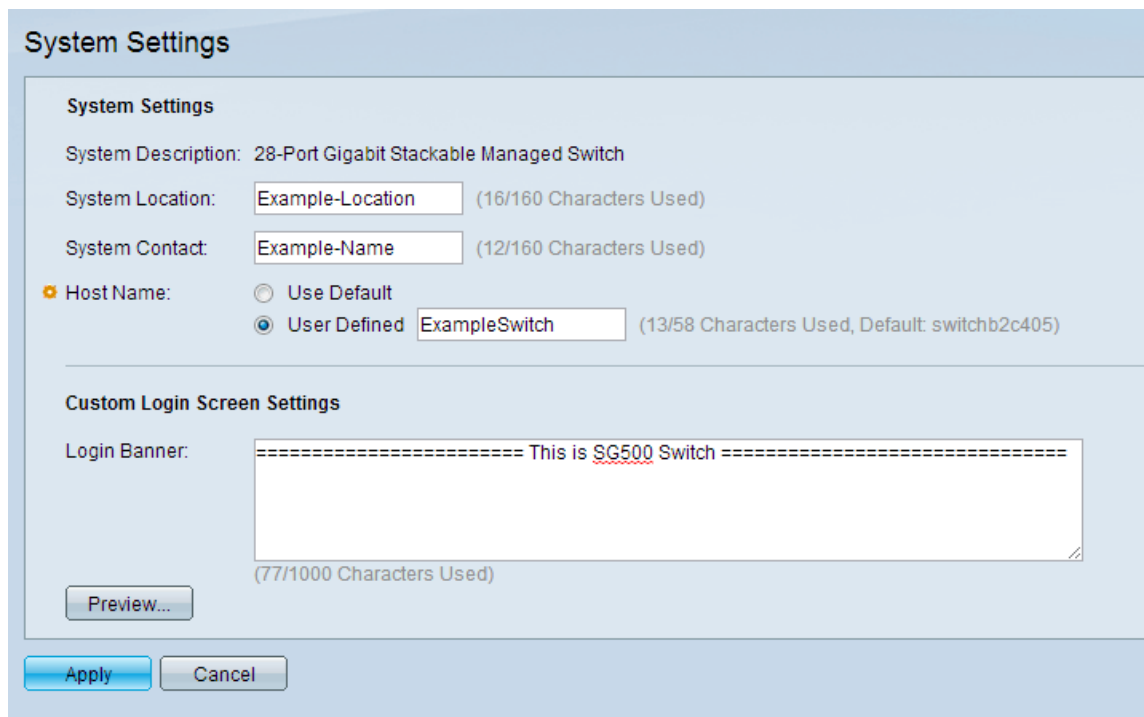

The screenshot shows the 'System Settings' web interface. At the top, it says 'System Settings'. Below that, there are several fields for configuration:

- System Description:** 28-Port Gigabit Stackable Managed Switch
- System Location:** Example-Location (16/160 Characters Used)
- System Contact:** Example-Name (12/160 Characters Used)
- Host Name:** There are two radio buttons: 'Use Default' (which is selected) and 'User Defined'. The 'User Defined' option has a text input field containing 'ExampleSwitch' (13/58 Characters Used, Default: switchb2c405).

Below these fields is a section for 'Custom Login Screen Settings'. It includes a 'Login Banner' field with a text area containing '=====This is SG500 Switch====='. Below the text area, it says '(77/1000 Characters Used)'. There is a 'Preview...' button to the left of the text area.

At the bottom of the form, there are two buttons: 'Apply' and 'Cancel'.


Etapa 2. No campo do local de sistema, incorpore um valor do carácter que corresponda ao local físico do interruptor.

Etapa 3. No campo do contato de sistema, incorpore um valor do carácter que corresponda ao nome da pessoa de contato.

Etapa 4. No campo de nome de host escolha uma destas duas opções:

- Padrão do uso — Permite que você use o nome do switch padrão.
- Definido pelo utilizador — Permite que você dê entrada com um nome no campo para atribuir ao interruptor.

Etapa 5. No campo do banner de login, incorpore o texto que você deseja indicar na *página de login*.

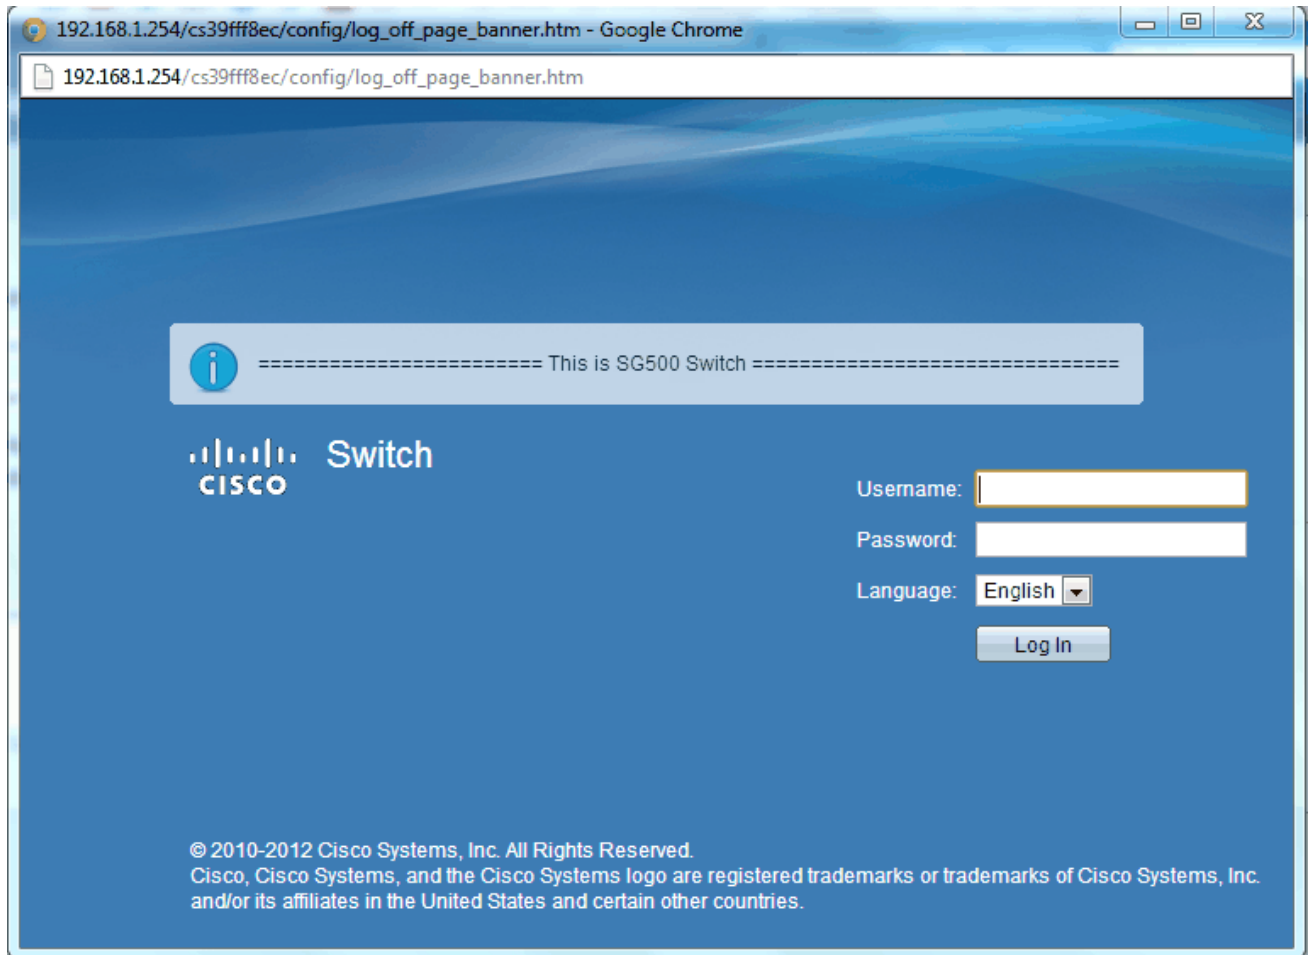

Estreia (opcional) do clique de etapa 6. para ver o texto datilografado. Feche o indicador da estreia.

Etapa 7. O clique **aplica-se na** página das configurações de sistema para salvar a configuração.