

# Настройка переадресации вызовов на SPA922

## Содержание

[Введение](#)

[Вопрос. . Как я перевожу вызов с помощью SPA922?](#)

[Дополнительные сведения](#)

## Введение


Эта статья входит в серию публикаций, которые помогают при установке, устранении проблем и обслуживании продуктов Cisco для малого бизнеса (в прошлом серии Linksys Business).

## Вопрос. . Как я перевожу вызов с помощью SPA922?

О.


Шаг 1:

Обратитесь к веб-странице настройки SPA922. Проверьте IP-адрес через жидкокристаллический дисплей. Щелкните по **Кнопке меню**, тогда нажимают 9. Это должно показать вам IP-адрес DHCP. Откройте браузер и наберите в строке адреса следующее.

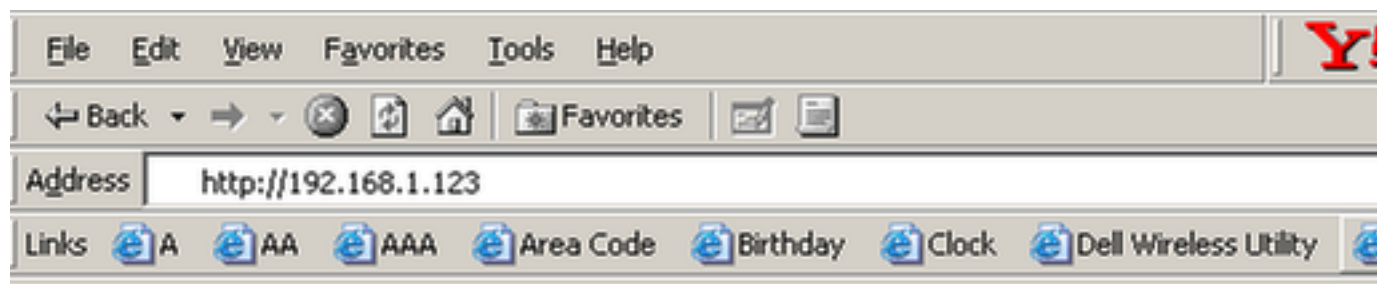

Шаг 2:

Щелкните по **Admin Login** и затем **усовершенствованный**.

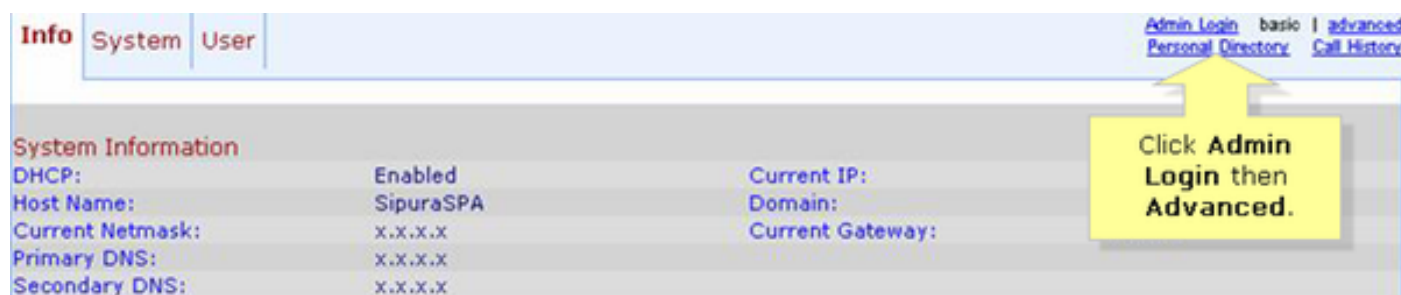

**Примечание:** SPA922 не имеет имени пользователя и пароля по умолчанию. Если вас просят относительно имени пользователя и пароля, это означает, что заблокирован SPA921. Необходимо проверить это с поставщиком VoIP.

### Шаг 3:

Нажмите вкладку User и установите номер телефона или добавочный номер под опцией Call Forward.

The screenshot shows the Cisco User configuration interface. At the top, there are tabs for Provisioning, Regional, Phone, Ext 1, Ext 2, and User. The User tab is selected. A yellow callout box points to the 'Set the phone number' field. Below the tabs, there are sections for Call Forward, Speed Dial, Supplementary Services, and Audio Volume. The Call Forward section includes fields for Cfw All Dest, Cfw No Ans Dest, Cfw Busy Dest, and Cfw No Ans Delay. The Speed Dial section includes fields for Speed Dial 2 through 9. The Supplementary Services section includes various settings like CW Setting, Block ANC Setting, Secure Call Setting, Auto Answer Page, Send Audio To Speaker, Date Format, Accept Media Loopback Request, Media Loopback Type, Block CID Setting, DND Setting, Dial Assistance, Preferred Audio Device, Time Format, Miss Call Shortcut, and Media Loopback Mode. The Audio Volume section includes fields for Ringer Volume, Handset Volume, LCD Contrast, Sp, He, and Back Light. A yellow callout box points to the 'Submit All Changes' button.

Section	Field	Value
Call Forward	Cfw All Dest:	
	Cfw No Ans Dest:	7034833923
	Cfw Busy Dest:	7034833923
	Cfw No Ans Delay:	20
Speed Dial	Speed Dial 2:	
	Speed Dial 4:	
	Speed Dial 6:	
	Speed Dial 8:	
	Speed Dial 3:	
	Speed Dial 5:	
	Speed Dial 7:	
	Speed Dial 9:	
Supplementary Services	CW Setting:	yes
	Block ANC Setting:	no
	Secure Call Setting:	no
	Auto Answer Page:	yes
	Send Audio To Speaker:	no
	Date Format:	month/day
	Accept Media Loopback Request:	automatic
	Media Loopback Type:	media
	Block CID Setting:	no
	DND Setting:	no
	Dial Assistance:	no
	Preferred Audio Device:	Speaker
	Time Format:	12hr
	Miss Call Shortcut:	yes
Media Loopback Mode:	source	
Audio Volume	Ringer Volume:	0
	Handset Volume:	11
	LCD Contrast:	8
	Sp	8
	He	10
	Back Light	10 s

Buttons: Undo All Changes, Submit All Changes

## Дополнительные сведения

- [Cisco Systems – техническая поддержка и документация](#)